



Groundsmaster® 328-D

Model No. 30626 - 250000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Frame Assembly	 4	Rear Axle Assembly	 37
Frame Assembly No. 98-3879	 5	Hydraulic Cylinder Assembly No. 92-7828	 39
Control Panel and Battery Assembly	 6	Crankcase Assembly	 40
Brake Pedal Assembly	 8	Oil Pan Assembly	 41
Traction Pedal Assembly	 9	Cylinder Head Assembly	 42
Power Steering Assembly	 10	Gear Case Assembly	 43
Power Steering Unit Assembly No. 108-6557	 11	Head Cover Assembly	 44
Engine Installation Assembly	 12	Main Bearing Case Assembly	 45
Power-Take-Off and Shaft Assembly	 13	Camshaft and Idle Gear Shaft Assembly	 46
Power-Take-Off Assembly	 14	Piston and Crankshaft Assembly	 47
Valve and Cylinder Assembly	 15	Flywheel Assembly	 48
Hydraulic Cylinder Assembly No. 100-6586 (2-1/2in Bore)	 16	Fuel Camshaft and Governor Shaft Assembly	 49
Hydraulic Cylinder Assembly No. 100-6591 (3in Bore) (Optional)	 17	Idle Apparatus Assembly	 50
Valve Assembly No. 106-8071-01	 18	Injection Pump Assembly	 51
Radiator and Hood Assembly	 19	Injection Pump Assembly No. 98-9643	 52
Transmission Assembly	 21	Governor Assembly	 53
Transmission Assembly No. 92-8947	 22	Speed Control Plate Assembly	 54
Neutral Centering Device Assembly	 24	Nozzle Holder and Glow Plug Assembly	 55
Push Arm and Roll-Over-Protection-System Assembly	 25	Nozzle Holder Assembly	 56
Water and Fuel Filter Assembly	 27	Alternator and Pulley Assembly	 57
Water / Fuel Filter Assembly No. 98-9305	 28	Alternator (Component Part) Assembly	 58
Fuel Tank and Front Axle Assembly	 29	Starter Assembly	 59
Front Axle Assembly No. 86-9600-03	 30	Starter (Component Part) Assembly	 60
Brake Assembly	 32	Water Flange and Thermostat Assembly	 61
Engine and Mounting Component Assembly	 33	Water Pump Assembly	 62
Engine Pulley System Assembly	 35	Valve and Rocker Arm Assembly	 63
Fan Support Assembly No. 106-4399	 36	Inlet Manifold Assembly	 64
		Miscellaneous Parts Assembly	 65
		Gasket Kit Assembly	 66
		Attachments and Accessories List	 67

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR.	as required	HYD.	hydraulic
ASM.	assembly	LH.	left hand
BBC.	blade brake clutch	NI.	nylon insert
CARR.	carriage	NPTF.	national pipe thread fine
DEG.	degrees	PFH.	phillips flat head
EXT.	external	PPH.	phillips pan head
FH.	flat head	PPHTF.	phillips pan head thread forming
GA.	gauge	PRH.	phillips round head
HD.	heavy-duty	PTH.	phillips truss head
HF.	hex flange	PTO.	power-take-off
HH.	hex head	RH.	right hand
HHF.	hex head flange	ROPS.	roll-over protection system
HHFTF.	hex head flange thread forming	SFH.	slotted fillister head
HJ.	hex jam	SHH.	slotted hex head
HLH.	hex lag head	SHWH.	slotted hex washer head
HOC.	height-of-cut	SPH.	slotted pan head
HSBH.	hex socket button head	SQH.	square head
HSFH.	hex socket flat head	SRH.	slotted round head
HSH.	hex socket head	STD.	standard
HWH.	hex washer head	TAP.	self tapping
HWHTF.	hex washer head thread forming	TTH.	torx truss head

 
Footnotes

- ❶

Not illustrated
- ❷


Not serviced separately
- ❸

Optional Equipment

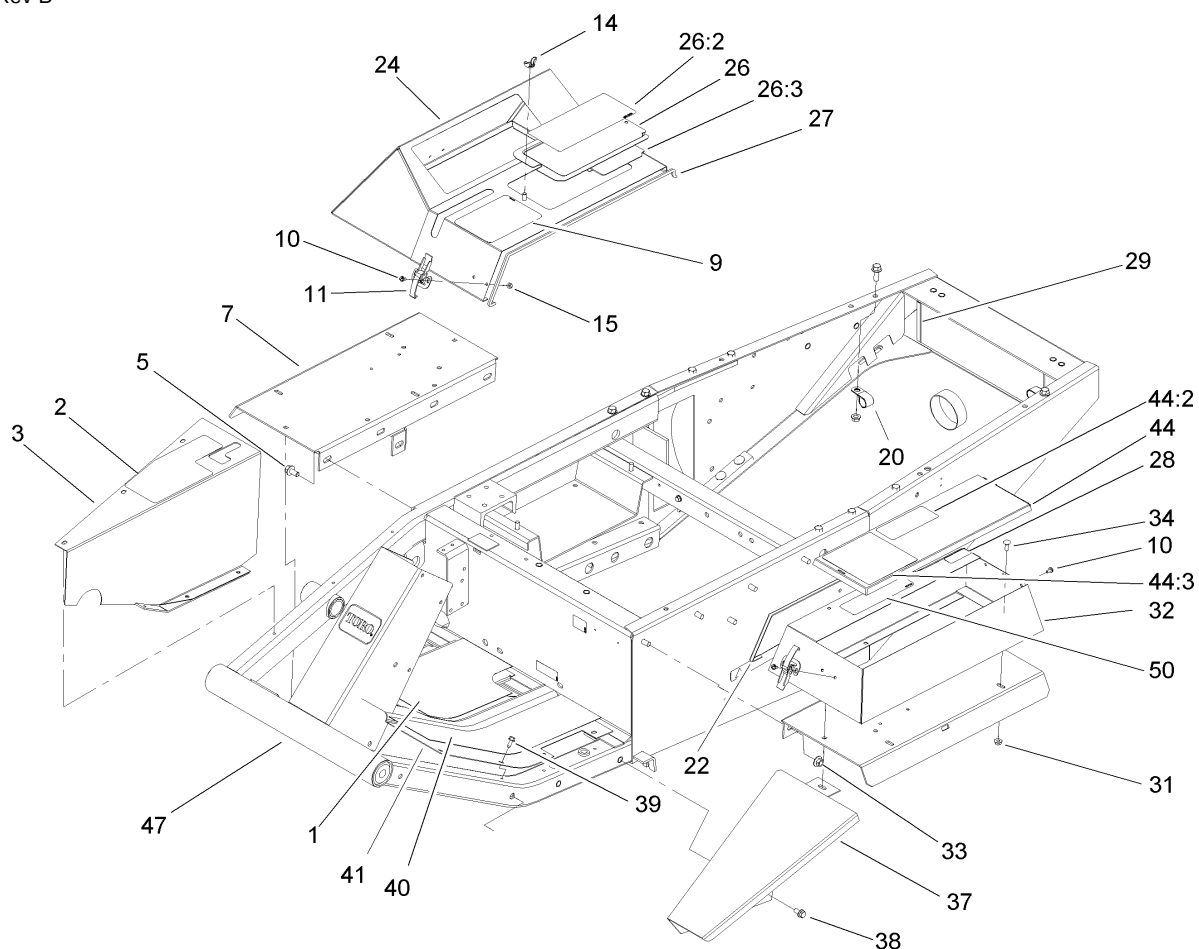


Frame Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	21-2770	1	Pad-Floor Plate, RH	38	3234-14	2	Screw-HHF
2	105-7822	1	Decal-Caution	39	32144-10	11	Screw-HWH
3	21-2660-01	1	Plate-Side	40	21-2760	1	Pad-Plate Floor, LH
5	3234-12	4	Screw-HHF	41	88-0070-01	1	Plate-Floor
7	105-2596-01	2	Fender ASM	44	93-3185	1	Cover ASM
9	27-7290	1	Decal-PTO	44:2	27-7310	1	Decal-Refueling
10	3290-144	9	Screw-SHWH	44:3	72-3700	1	Decal-Danger
11	249-21	3	Clamp-Slotted	47	98-3879	1	Frame ASM
14	32103-2	1	Nut-Wing	50	67-1710	1	Decal-Warning
15	3296-2	9	Nut-Lock				
20	2412-4	2	Clamp				
22	37-9650	1	Trim-Box, Tool				
24	38-4550-03	1	Cover-Instruments				
26	105-2564	1	Battery Cover ASM				
26:2	105-2531	1	Decal-Instructions, Starting				
26:3	92-7801	1	Shield-Cover, Battery				
27	39-8020	1	Trim-Cover, Instrument				
28	52-1321	1	Decal-Fuel, Diesel				
29	43-4300	2	Trim-Frame, Rear				
31	32128-33	5	Nut-HF				
32	93-3182-03	1	Box-Tool				
33	3290-357	6	Nut-HHF, Whiz				
34	3229-1	5	Screw-CARR				
37	68-8610-01	1	Extension-Fender				

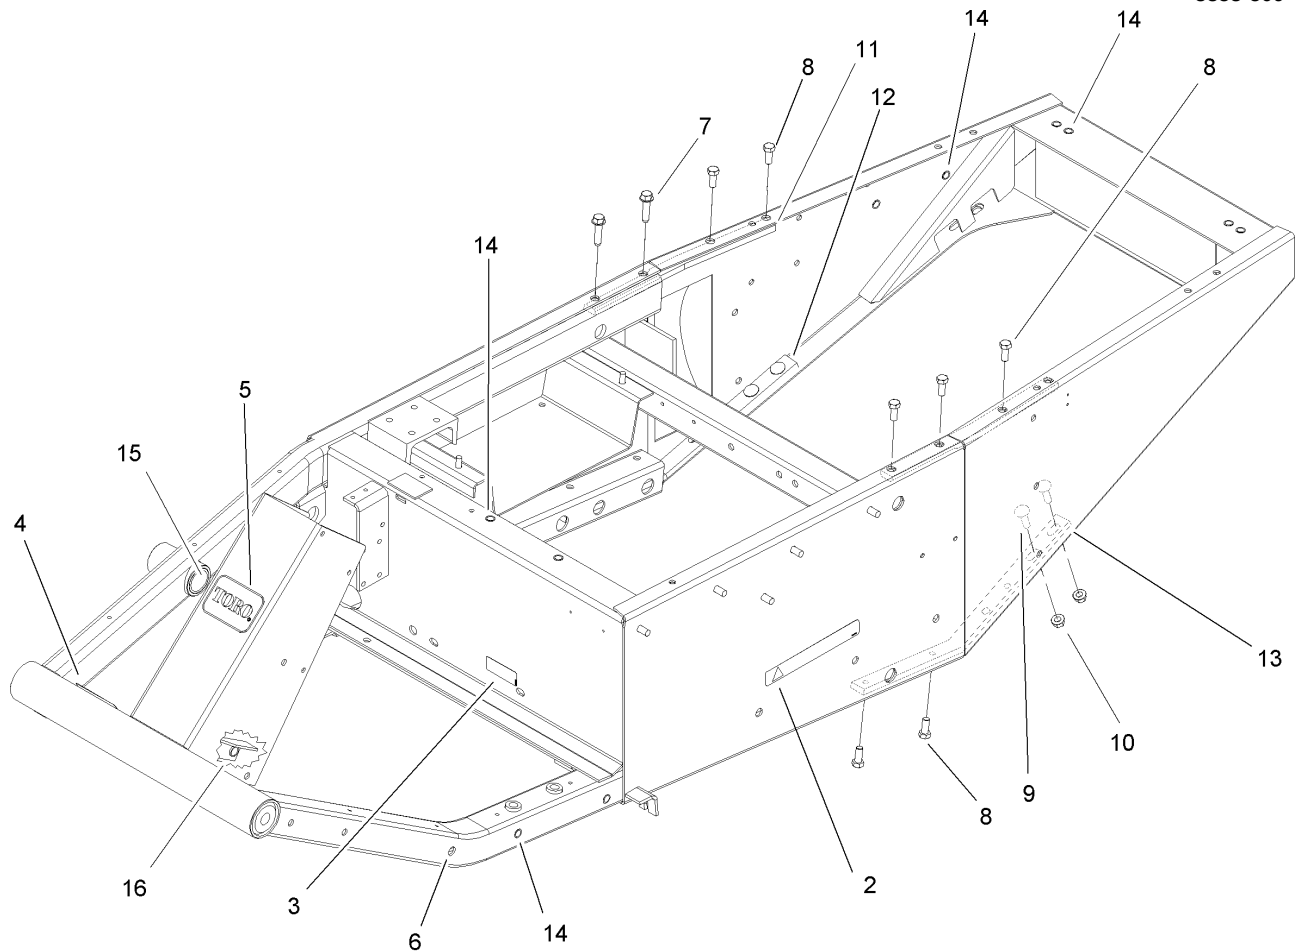 


Frame Assembly No. 98-3879

Ref	Part No.	Qty.	Description				
2	93-7830	2	Decal-Torque				
3	93-6686	1	Decal-Oil, HYD				
4	93-7836	1	Decal-Pedal, Traction				
5	70-2200	1	Decal				
6	32148-9	1	Insert-Nut				
7	11-0590	2	Screw-HWHTF				
8	3234-25	9	Screw-HHF				
9	3231-25	4	Screw-CARR				
10	32128-21	4	Nut-HF				
11	98-3866-01	2	Brace-Upper				
12	98-3865-01	1	Brace-Right, Lower				
13	98-3864-01	1	Brace-Left, Lower				
14	3290-472	10	Insert-Threaded				
15	256-126	2	Bushing				
16	256-156	1	Bushing-Flange				

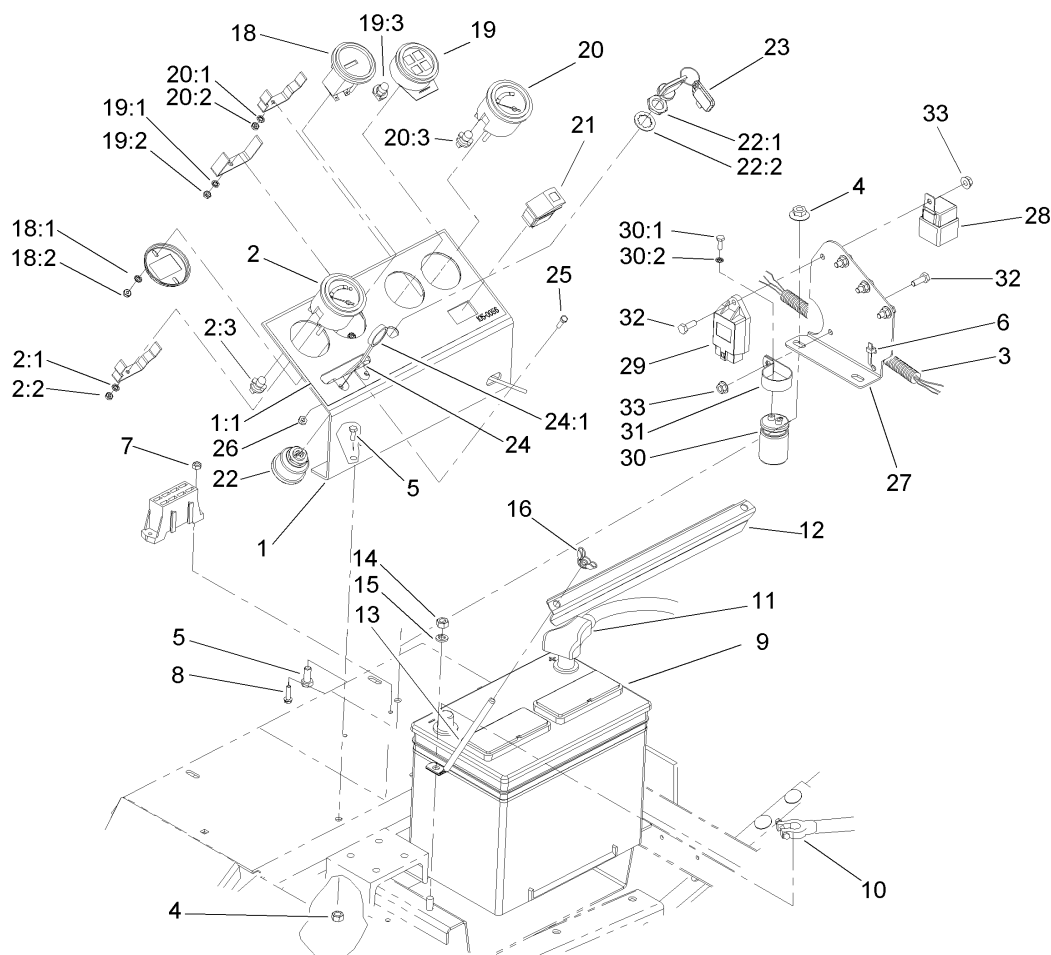 


Control Panel and Battery Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	105-2917	1	Instrument Panel ASM	19:1	3254-1	1	Washer-Lock, Int
1:1	105-0056	1	Decal-Panel, Instrument	19:2	3217-27	1	Nut-Hex
2	98-9339	1	Gauge-Fuel	19:3	105-9264	4	Bulb And Lamp ASM
2:1	3254-1	3	Washer-Lock, Int	20	98-9308	1	Gauge-Temperature
2:2	3217-27	3	Nut-Hex	20:1	3254-1	3	Washer-Lock, Int
2:3	105-9265	1	Bulb And Lamp ASM	20:2	3217-27	3	Nut-Hex
3	104-4065	1	Harness-Wire, Main	20:3	105-9265	1	Bulb And Lamp ASM
4	32128-30	4	Nut	21	100-8072	1	Switch
5	322-3	4	Screw-HH	22	104-2541	1	Switch ASM
6	3290-379	2	Tie-Cable	22:1	218-461	1	Nut-HH
7	3296-2	2	Nut-Lock	22:2	3254-5	1	Washer-Tooth
8	32105-13	2	Screw-HWH	23	63-8360	1	Key-Ignition
9	106-5190	1	Battery	24	43-3990	1	Control-Throttle
10	104-9497	1	Cable-Battery, Negative	24:1	233-35	1	Knob
11	95-8853	1	Cable-Battery, Positive	25	3290-134	2	Screw
12	24-6420-03	1	Holddown-Battery	26	3296-12	2	Nut-Lock
13	24-6390	2	Stud-Holddown, Battery	27	105-0002-01	1	Bracket-Relay
14	3217-6	2	Nut-Hex	28	70-1480	4	Relay
15	3253-4	2	Washer-Lock	29	107-9097	1	Controller-Glow
16	32103-2	2	Nut-Wing	30	37-2690	1	Capacitor
18	66-2950	1	Gauge-Hourmeter	30:1	3252-18	2	Screw
18:1	3255-20	2	Washer-Lock	30:2	3254-1	2	Washer-Lock, Int
18:2	3217-25	2	Nut-Hex	31	2412-74	1	R-Clamp
19	98-9306	1	Light-Warning	32	321-4	5	Screw-HH

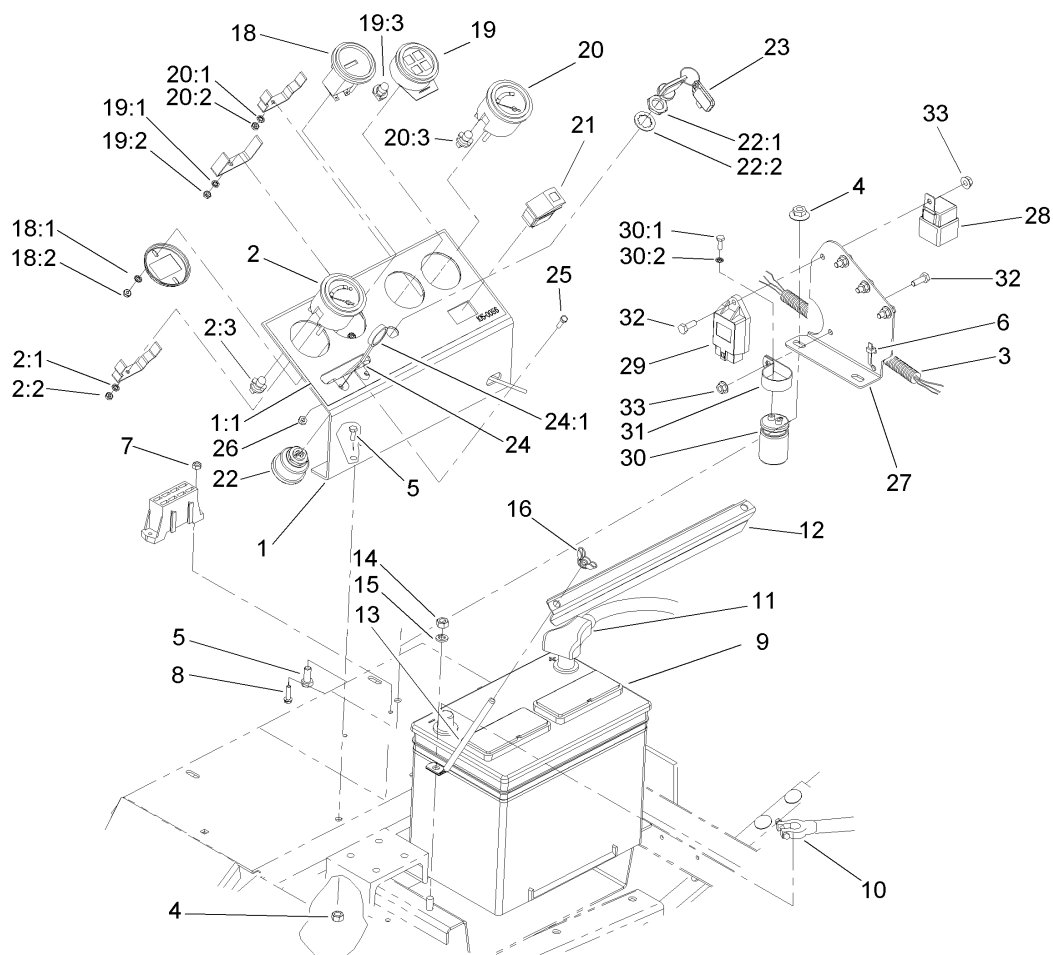 

Control Panel and Battery Assembly (continued)


Ref	Part No.	Qty.	Description
33	32128-33	5	Nut-HF

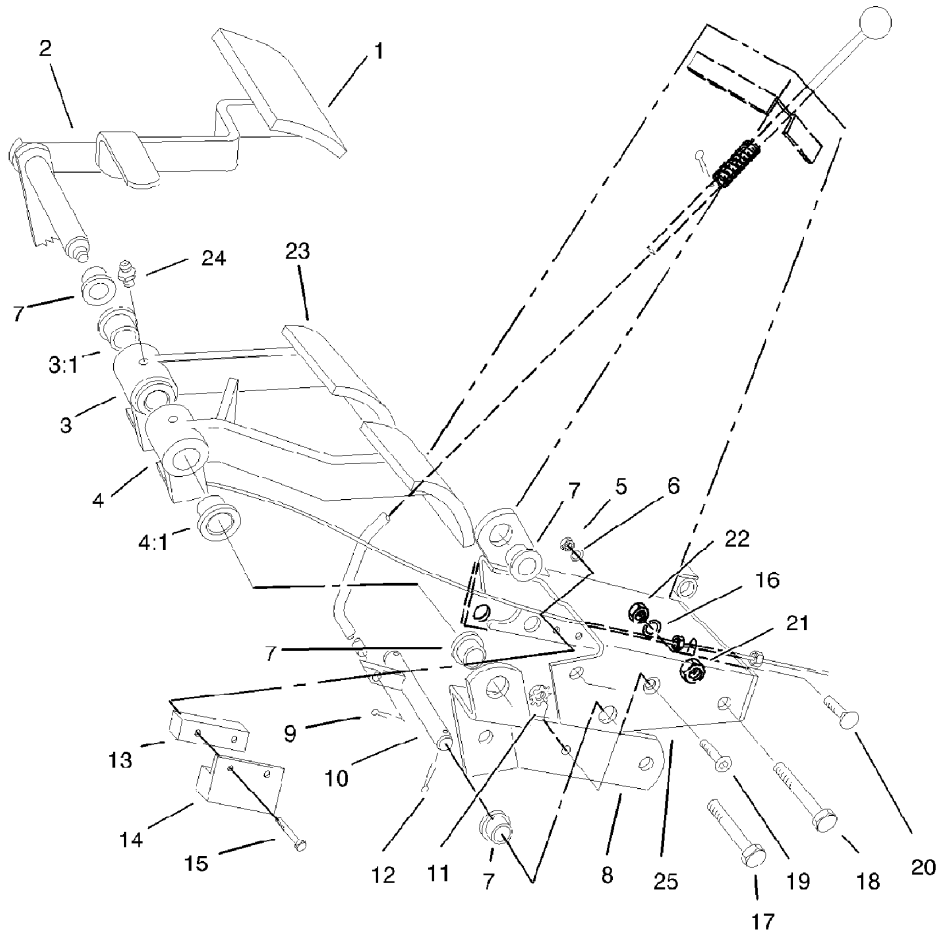 

Brake Pedal Assembly

Ref	Part No.	Qty.	Description
1	93-8742	1	Footpad-Brake
2	27-8550-01	1	Parking Brake Pedal ASM
3	27-7510	1	RH Brake Pedal ASM
3:1	256-10	2	Bushing-Flange
4	27-7490	1	LH Brake Pedal ASM
4:1	256-10	2	Bushing-Flange
5	3296-2	2	Nut-Lock
6	3256-51	4	Washer-Flat
7	256-156	4	Bushing-Flange
8	27-9270-01	1	Pivot Shaft Mount ASM
9	3272-5	2	Pin-Cotter
10	105-0065	1	Parking Brake Shaft ASM
11	32149-2	1	Nut-Keps
12	3272-6	2	Pin-Cotter
13	105-0064	1	Spacer-Switch
14	100-1270	1	Switch-Proximity
15	3290-360	2	Screw-HH
16	3253-21	2	Washer-Lock
17	323-13	1	Screw-HH
18	323-14	1	Screw-HH
19	3274-47	1	Screw-HSFH
20	3231-21	2	Screw-CARR
21	32153-2	2	Nut-Lock, Side
22	3217-7	2	Nut-Hex


Ref	Part No.	Qty.	Description
23	93-8743	2	Footpad-Turn
24	302-5	2	Fitting-Grease
25	105-0066-01	1	Brake Pedal Mount ASM

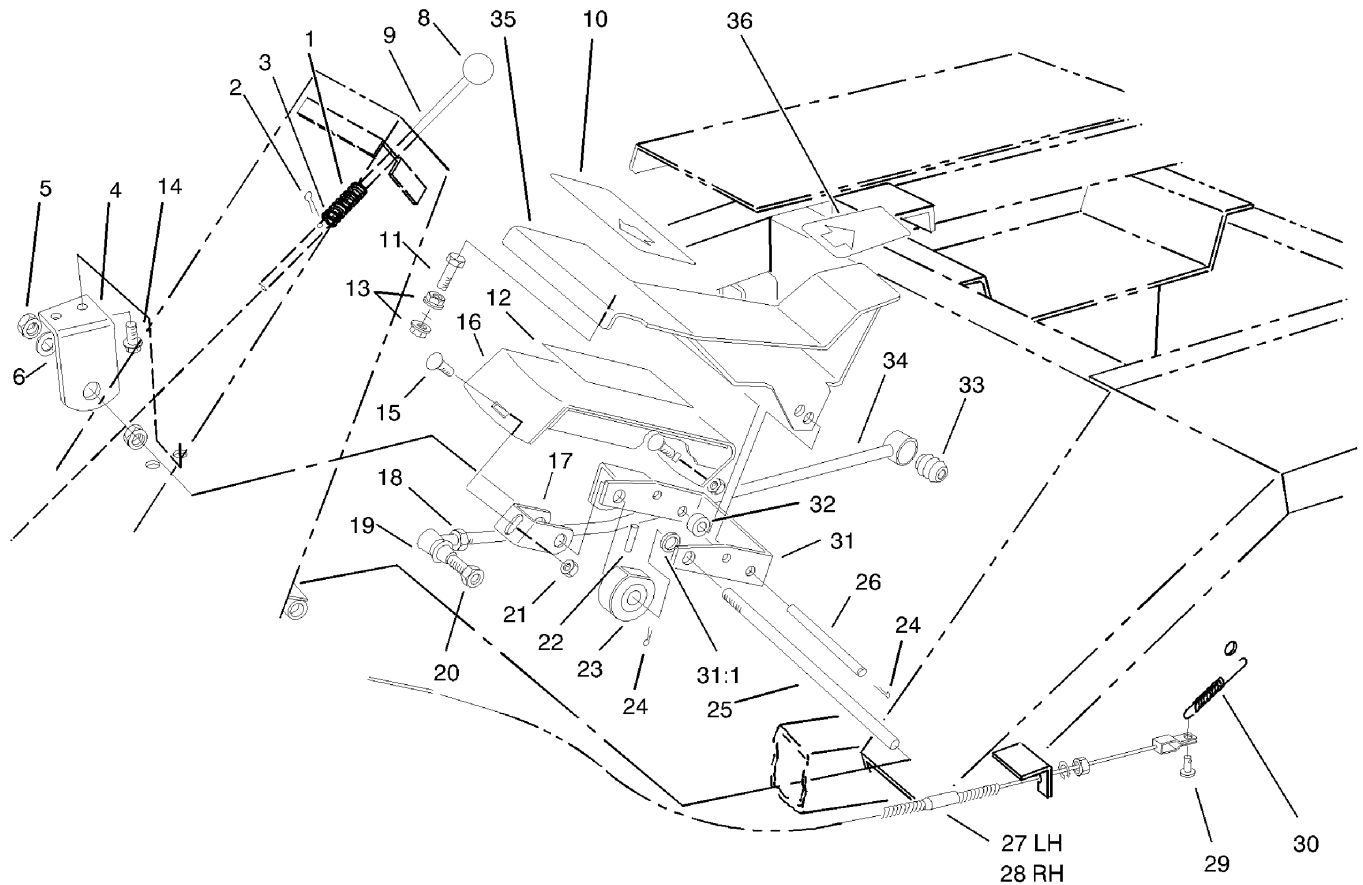 

Traction Pedal Assembly


Ref	Part No.	Qty.	Description
1	95-1821-03	1	Spring-Compression
2	3272-5	1	Pin-Cotter
3	3256-22	1	Washer-Flat
4	21-2850-01	1	Mount-Pedal, RH
5	3218-5	2	Nut-Jam
6	3256-26	1	Washer-Flat
8	233-17	1	Knob
9	82-8670	1	Rod-Latch, Brake
10	94-3307	1	Pad-Pedal, Traction
11	323-15	1	Screw-HH
12	88-1720	1	Pad-Footrest
13	32128-43	2	Nut-Flange
14	11-0590	2	Screw-HWHTF
15	3230-1	2	Bolt-CARR
16	88-1710-01	1	Footrest ASM
17	88-1680-01	1	Bracket-Footrest
18	3220-5	1	Nut-Jam
19	21-0141	1	RH Ball Joint ASM
20	3220-3	2	Nut-HJ
21	32128-20	2	Nut-HF
22	32121-6	1	Pin-Roll, Slotted
23	28-5220	1	Friction Wheel ASM
24	3272-6	4	Pin-Cotter
25	88-1650	1	Shaft-Pedal, Traction

Ref	Part No.	Qty.	Description
26	88-1640	1	Pin-Pedal, Traction
27	108-1380	1	LH Brake Cable ASM
28	108-1379	1	RH Brake Cable ASM
29	283-58	2	Pin-Clevis
30	3-7243	2	Spring-Extension
31	88-1670	1	Pivot Bracket ASM
31:1	256-156	2	Bushing-Flange
32	88-0470	1	Tube-Spacer, Pedal
33	23-2270	1	Bushing-Rubber
34	23-2240-03	1	Pump Control Tube ASM
35	94-3304-01	1	Support-Pedal
36	94-3308	1	Pad-Pedal, Traction

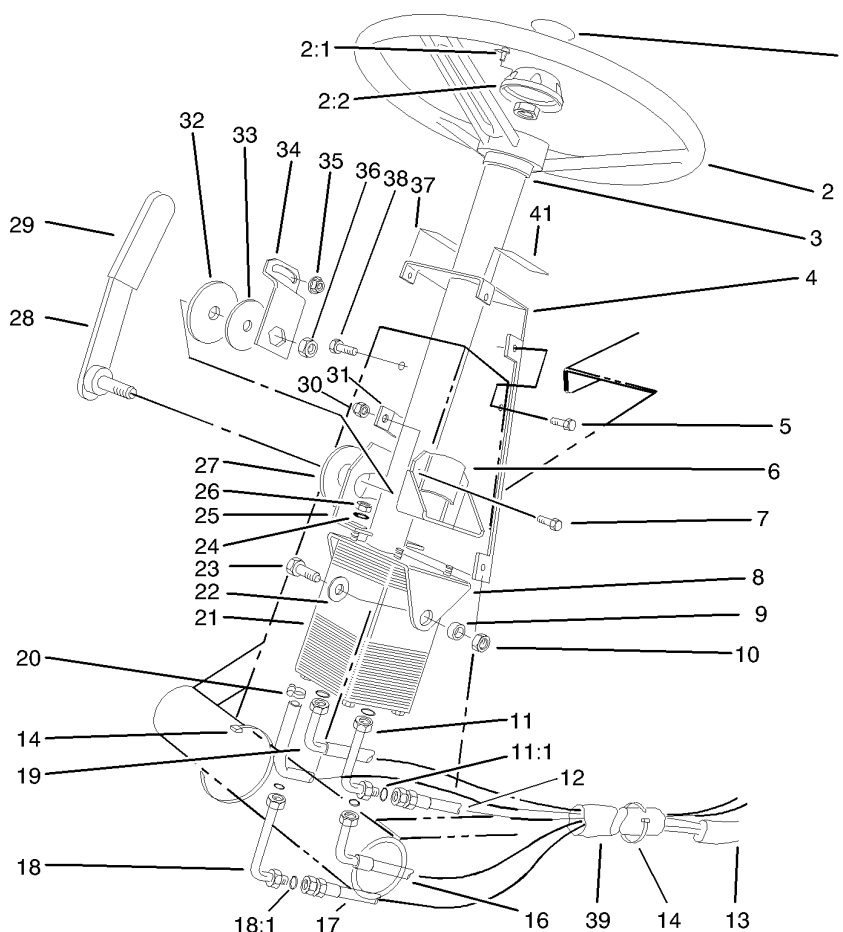 

Power Steering Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	68-5370	1	Decal	22	3256-46	2	Washer-Flat
2	75-0560	1	Wheel-Steering	23	323-6	2	Screw-HH
2:1	32144-21	1	Screw	24	3256-3	4	Washer-Flat
2:2	68-5140	1	Cap-Wheel, Steering	25	80-2940-03	1	Plate-Pivot
3	21-9260	1	Cover-Dust	26	3296-20	4	Nut-Lock, NI
4	82-8660-01	1	Cover-Tower	27	31-0390	1	Disc-Friction
5	32144-10	6	Screw-HWH	28	93-1353-03	1	Lever-Steering, Tilt
6	67-8690-03	1	Support-Column	29	21-1880	2	Grip-Handle
7	322-5	2	Screw-HH	30	3296-29	2	Nut-Lock, NI
8	77-3120-01	1	Bracket-Mounting, Column	31	82-8650	1	Clamp-Column
9	80-2960	2	Spacer-Tower	32	82-9010	1	Disc-Friction
10	3296-39	2	Nut-Lock, NI	33	80-2930	1	Washer-Flat
11	82-8760	1	Elbow-HYD	34	80-2880	1	Bracket-Tilt
11:1	237-30	1	O-Ring	35	32128-20	1	Nut-HF
12	63-8970	1	Hose-HYD	36	3218-7	1	Nut-Jam
13	70-1390	1	Sleeve-Protective	37	82-8940	1	Decal-Steering, Tilt
14	3290-379	4	Tie-Cable	38	322-4	1	Screw-HH
16	68-9730	1	Hose-Steering, HYD	39	70-1380	1	Sleeve-Protective
17	68-9720	1	Hose-Steering, HYD	41	82-8930	1	Decal-Brake, Parking
18	82-8770	1	Elbow-HYD				
18:1	237-22	1	O-Ring				
19	63-8980	1	Hose-HYD				
20	2412-36	1	Clamp-Hose				
21	108-6557	1	Steer Valve And Column ASM				

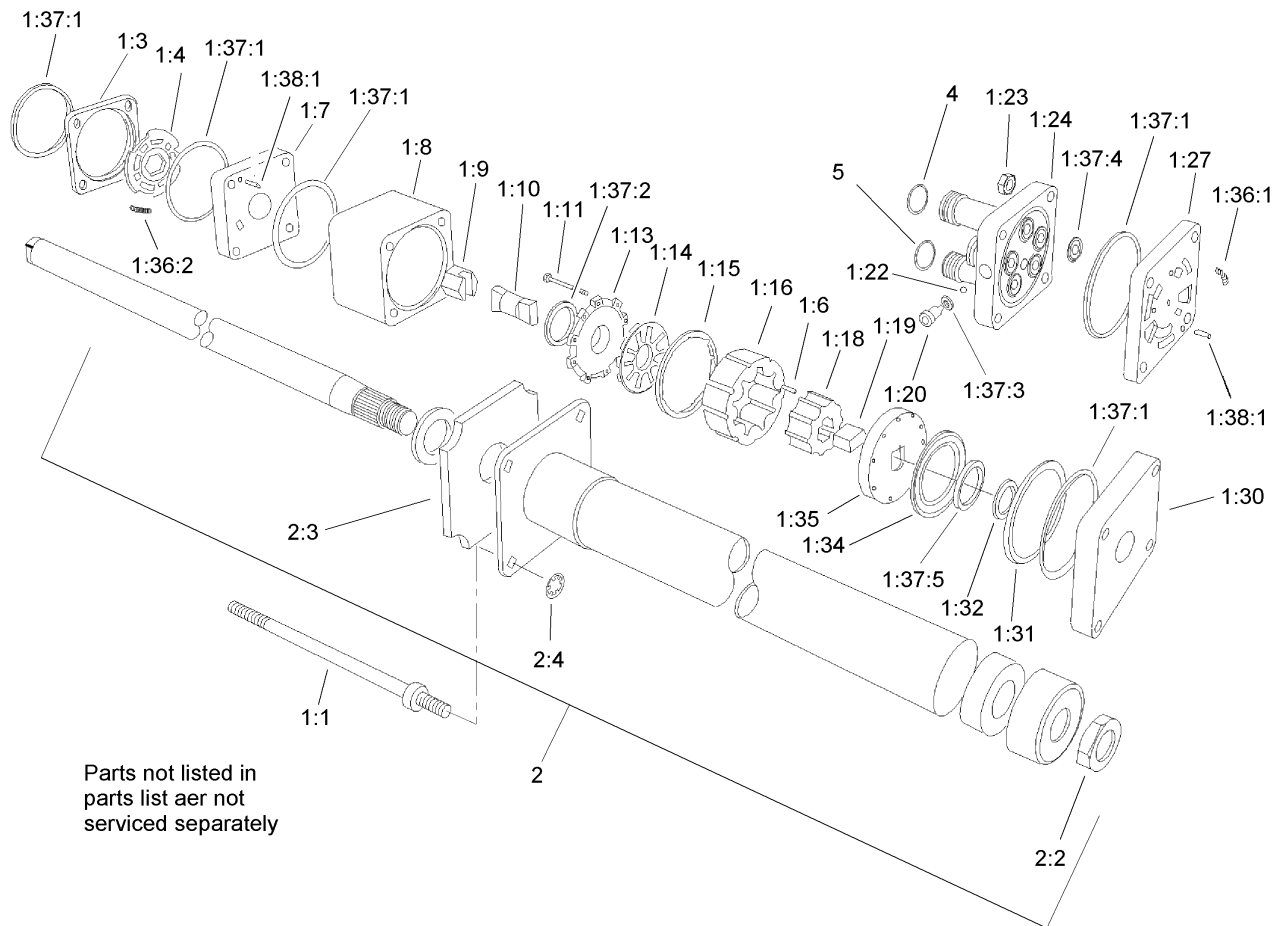

Power Steering Unit Assembly No. 108-6557


Ref	Part No.	Qty.	Description
1:1	92-7310	4	Bolt-Special
②1:3		1	Ring-Valve
②1:4		1	Plate-Valve
②1:6		9	Pin-Alignment
②1:7		1	Manifold-Isolation
②1:8		1	Ring-Metering
②1:9		1	Hex Drive ASM
②1:10		1	Link-Drive
②1:11		11	Screw-HSH
②1:13		1	Cover-Commutator
②1:14		1	Commutator
②1:15		1	Ring-Commutator
②1:16		1	Stator
②1:18		1	Rotor
②1:19		1	Spacer-Link, Drive
②1:20		1	Plug
②1:22		1	Ball
②1:23		4	Nut-Hex
②1:24		1	Cover-Port
②1:27		1	Manifold-Port
②1:30		1	Plate-Cover, Upper
②1:31		1	Spacer-Bearing, Thrust
②1:32		1	Spacer-Seal
②1:34		1	Bearing-Thrust
②1:35		1	Plate-Drive

Ref	Part No.	Qty.	Description
①1:36	66-9970	1	Spring Kit
②1:36:1		3	Spring
②1:36:2		3	Spring
①1:37	66-9980	1	Seal Kit
②1:37:1		5	Ring-Seal
②1:37:2		1	Seal-Commutator
②1:37:3		1	Seal-Dust
②1:37:4		5	Seal-Dust
②1:37:5		1	Seal-Face
①1:38	66-9990	1	Needle Roller Kit
②1:38:1		9	Pin-Alignment
2	108-6560	1	Column ASM
2:2	3220-6	1	Nut-Jam
2:3	92-7317	1	Seal-Foam, Upper Cover
2:4	92-7316	4	Nut-Push On
4	237-30	2	O-Ring
5	237-22	2	O-Ring

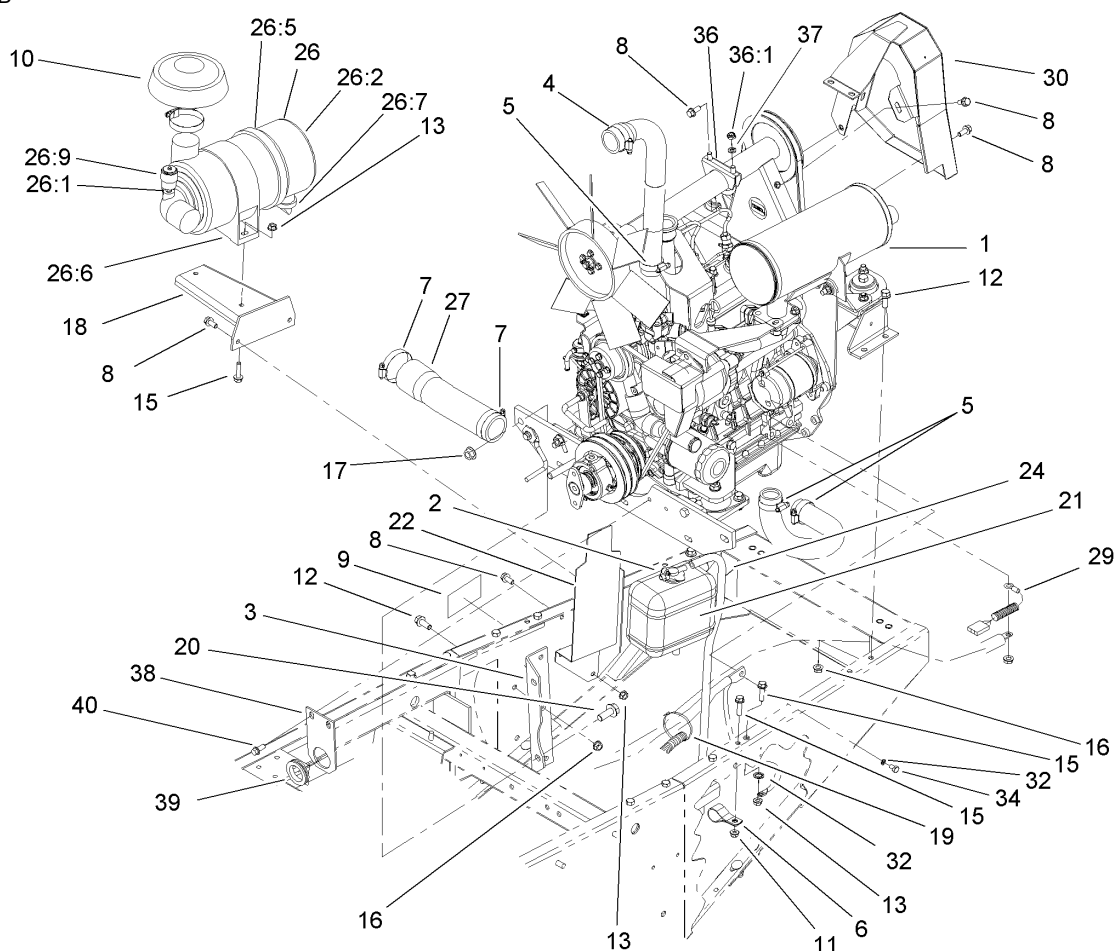 

Engine Installation Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
② 1		1	Engine ASM	26:2	104-0497	1	Cover ASM
2	2412-108	2	Clamp-Worm	26:5	104-4897	1	Gasket
3	67-8190-01	2	Bracket-Support, Engine	26:6	98-4525	1	Bracket-Cleaner, Air
4	2412-3	1	Clamp-Hose	26:7	104-0498	1	Valve-Vacuator
5	2412-111	3	Clamp	① 26:8	108-3810	1	Filter-Air
6	98-3883	1	Clamp-Wire	26:9	93-9164	1	Indicator-Mini
7	2412-130	2	Clamp-Hose	27	104-3434	1	Hose-Inlet, Air
8	3234-5	9	Screw-HHF	29	99-3441	1	Harness-Wire, Fusible Link
9	83-9150	1	Decal-Fluid, Starting	30	105-7807-03	1	Guard-Belt, Fan
10	105-2539	1	Cap ASM	32	3254-6	2	Washer-Lock, Internal
11	104-8300	1	Nut-Flange, NI	34	70-8470	1	Screw-HH
12	3234-11	10	Screw-HHF	36	2112-6	1	Clamp-Muffler
13	32128-20	6	Nut-HF	36:1	3218-2	2	Nut-Jam
15	3234-36	4	Screw-HHF	37	3253-4	2	Washer-Lock
16	3290-357	10	Nut-HHF, Whiz	38	104-3774-03	1	Bracket-Bulkhead
17	32128-23	2	Nut-HF	39	240-7	1	Grommet-Rubber
18	98-4518-03	1	Bracket-Cleaner, Air	40	32144-11	2	Screw-HWHTF
19	3290-378	1	Tie-Cable				
20	3234-32	2	Screw-HHF				
21	104-9318	1	Bottle-Overflow				
22	105-0050-03	1	Reservoir Bracket ASM				
24	63-7630	1	Hose-Fuel				
26	104-3428	1	Air Cleaner ASM				
26:1	105-4292	1	Nipple-Pipe				

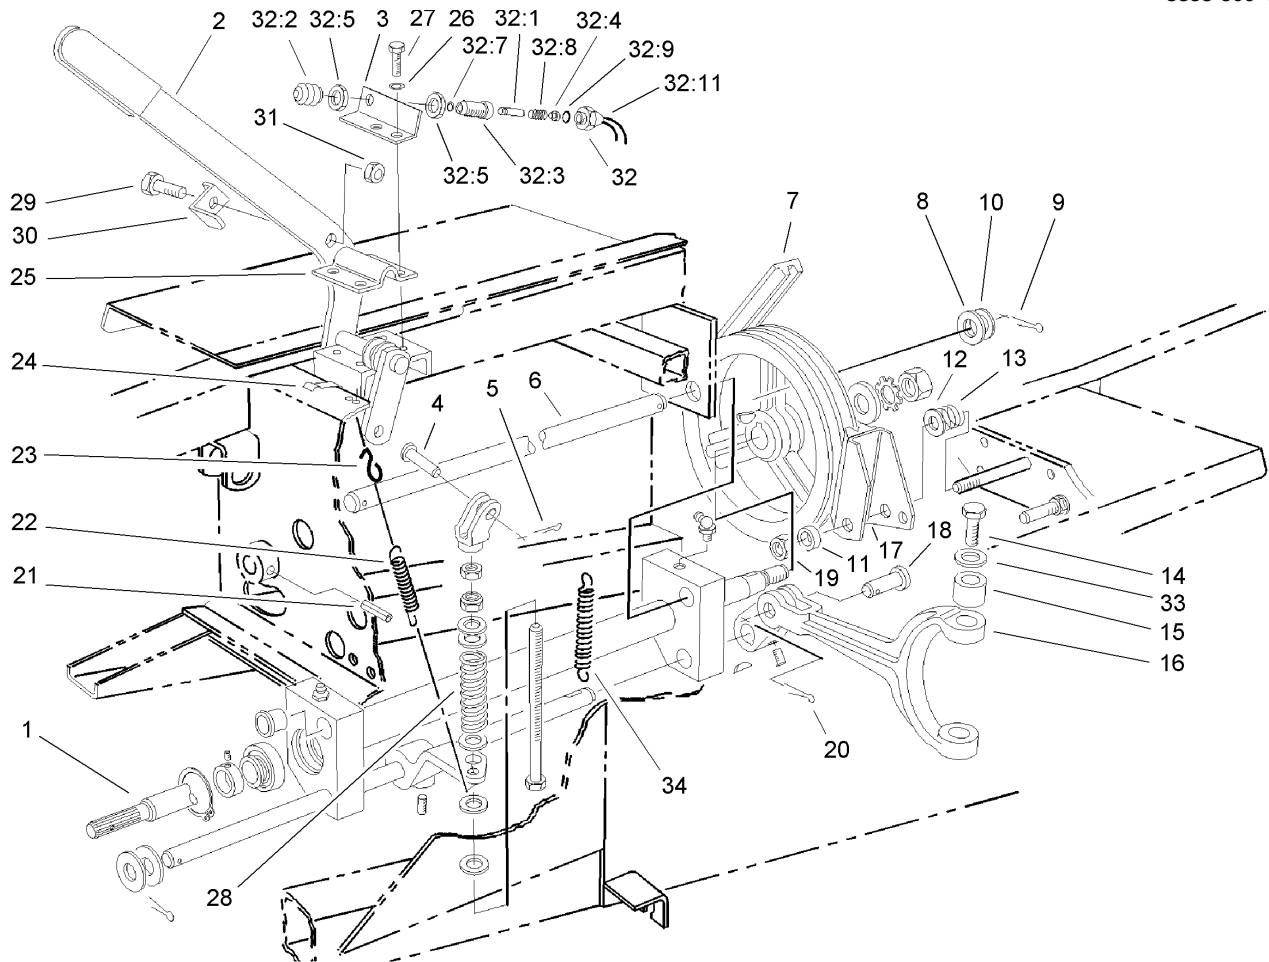 

Power-Take-Off and Shaft Assembly


Ref	Part No.	Qty.	Description
1		1	PTO ASM
2	84-8500-01	1	Lever-PTO
3	84-8520-01	1	Bracket-Switch, PTO
4	283-42	1	Pin-Clevis
5	3272-6	1	Pin-Cotter
6	43-3860	1	Shaft-Pivot, PTO
7	106-4383	1	V-Belt
8	3256-28	1	Washer-Flat
9	3272-22	1	Pin-Cotter
10	3-6498	3	Washer-Thrust
11	3-8812	1	Spacer-Spring, Anchor
12	3256-6	1	Washer-Flat
13	5-1747	1	Spring-Adjustment
14	92-5727	2	Screw-Lock, Patch
15	92-5723	2	Bushing-Fork, PTO
16	92-4060-03	1	Fork-PTO
17	27-7370	1	PTO Brake ASM
18	93-3769	1	Pin-Clevis
19	3296-28	1	Nut-Lock, NI
20	3272-11	1	Pin-Cotter
21	32121-9	1	Pin-Roll, Slotted
22	21-1830	1	Spring-Extension
23	5-0701	1	Anchor
24	212-93	3	Clamp-Casing

Ref	Part No.	Qty.	Description
25	21-1600	1	Clamp-Lever, PTO
26	3253-21	4	Washer-Lock
27	32104-6	4	Screw-HH
28	21-0400-01	1	Spring-Compression
29	321-4	1	Screw-HH
30	86-7050	1	Bracket-Switch, Actuator
31	3296-16	1	Nut-Lock, NI
32	43-9071	1	Limit Switch ASM
32:1	43-8860	1	Plunger-Switch
32:2	43-8870	1	Boot-Switch
32:3	43-8620	1	Pin-Guide, Switch
32:4	43-8610	1	Guide
32:5	218-461	2	Nut-HH
32:7	237-7	1	O-Ring
32:8	43-8600	1	Spring-Compression
32:9	237-30	1	O-Ring
32:11	72-4320	1	Switch-Ball
33	75-9890	2	Washer-Shim
34	108-1368	1	Spring-Extension

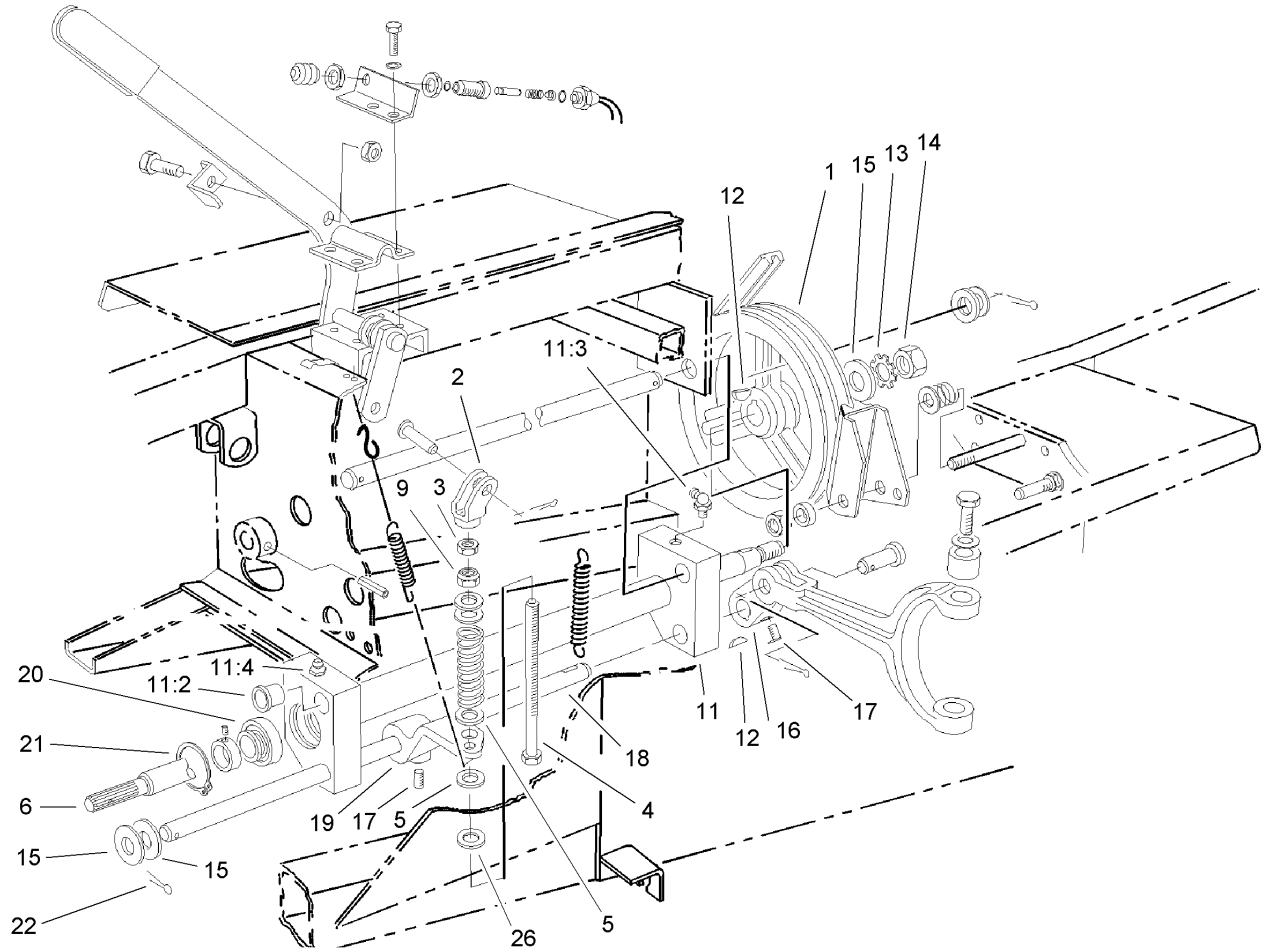 

Power-Take-Off Assembly


Ref	Part No.	Qty.	Description				
1	21-0230	1	Pulley-PTO				
2	43-5630	1	Yoke-PTO				
3	3219-3	1	Nut-Hex				
4	27-7900	1	Screw-Adjusting				
5	3256-41	4	Washer				
6	43-5540	1	Shaft-PTO				
9	3296-6	1	Nut-Lock				
11	100-6599	1	PTO Pivot ASM				
11:2	256-113	4	Bushing-Flange				
11:3	302-10	1	Fitting-Grease				
11:4	302-2	1	Fitting-Grease				
12	3257-5	3	Key-Woodruff				
13	3254-7	1	Washer-Lock, Int				
14	3219-7	1	Nut-Hex				
15	3256-28	3	Washer-Flat				
16	92-4058	1	Arm-PTO				
17	3246-3	4	Screw-HSH				
18	43-5550	1	Shaft-Actuator, PTO				
19	43-5570	1	Arm-Actuator				
20	251-252	2	Bearing				
21	32120-22	2	Ring-Snap, Internal				
22	3272-22	1	Pin-Cotter				
26	5-0652	1	Spacer				

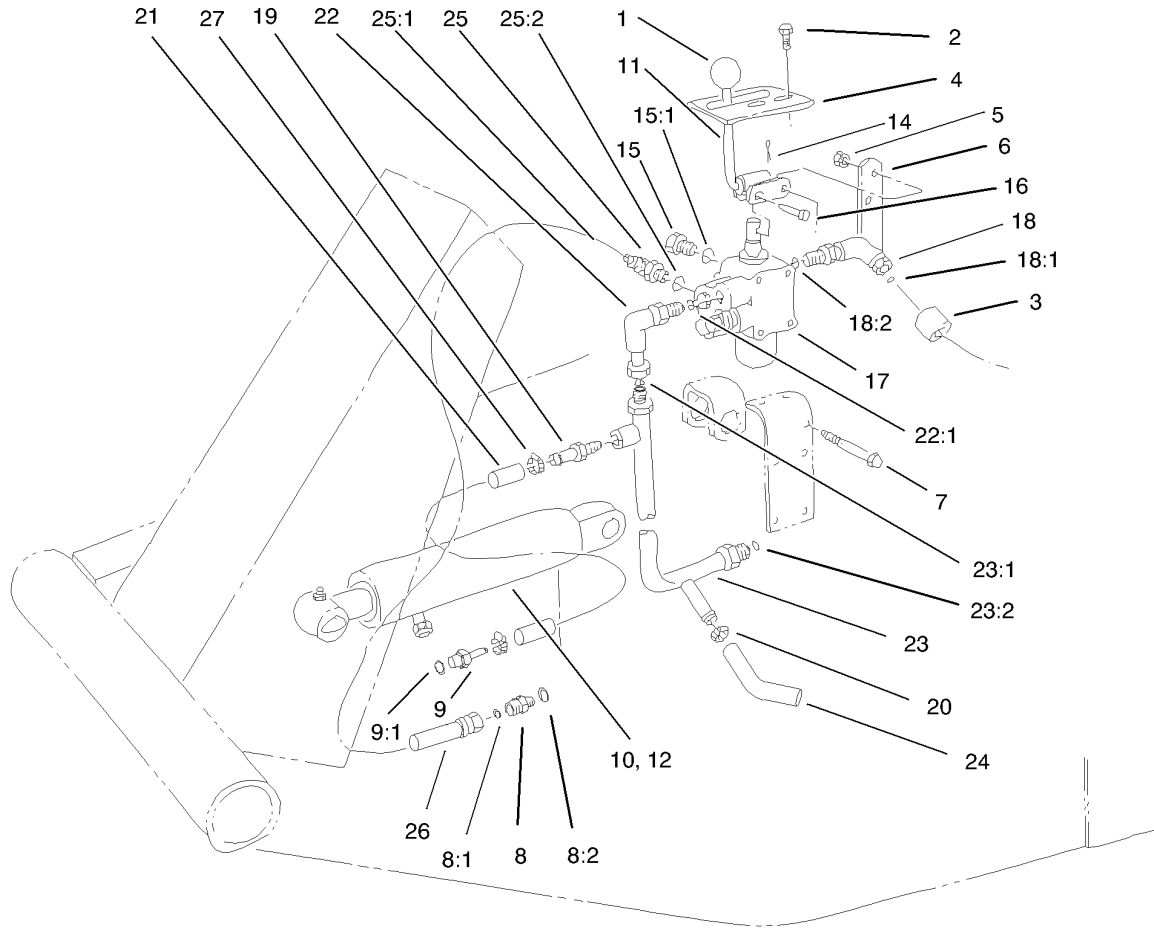

Valve and Cylinder Assembly


Ref	Part No.	Qty.	Description
1	233-21	1	Knob
2	32144-10	2	Screw-HWH
3	38-3400	1	Guard-Rubber
4	105-7806	1	Latch-Lever, Valve
5	3296-42	5	Nut-Lock, NI
6	21-9010	1	Lever-Valve, Pivot Mount
7	321-23	5	Screw-HH
8	340-2	1	Fitting-HYD, Straight
8:1	237-22	1	O-Ring
8:2	237-42	1	O-Ring
9	95-8849	1	Fitting-Straight, HYD
9:1	237-78	1	O-Ring
10	100-6586	1	Cylinder-HYD, 2.5 Inch
11	105-7839-03	1	Valve Lever ASM
12	100-6591	1	Cylinder-HYD, 3 Inch
14	3272-6	1	Pin-Cotter
15	353-512	1	Plug
15:1	237-78	1	O-Ring
16	283-17	1	Pin-Clevis
17	106-8071-01	1	Valve ASM
18	340-99	1	Fitting-HYD, 90 DEG
18:1	237-30	1	O-Ring
18:2	237-42	1	O-Ring
19	304-73	1	Connector-Hose

Ref	Part No.	Qty.	Description
20	2412-36	1	Clamp-Hose
21	92-7834	1	Hose-HYD
22	340-110	1	Fitting-Swivel, 90 DEG
22:1	237-42	1	O-Ring
23	63-9260	1	Manifold Valve ASM
23:1	237-22	1	O-Ring
23:2	237-30	1	O-Ring
24	63-8990	1	Hose-HYD
25	340-97	1	Fitting-HYD, 90 DEG
25:1	237-22	1	O-Ring
25:2	237-78	1	O-Ring
26	92-7833	1	Hose ASM
27	2412-108	2	Clamp-Worm

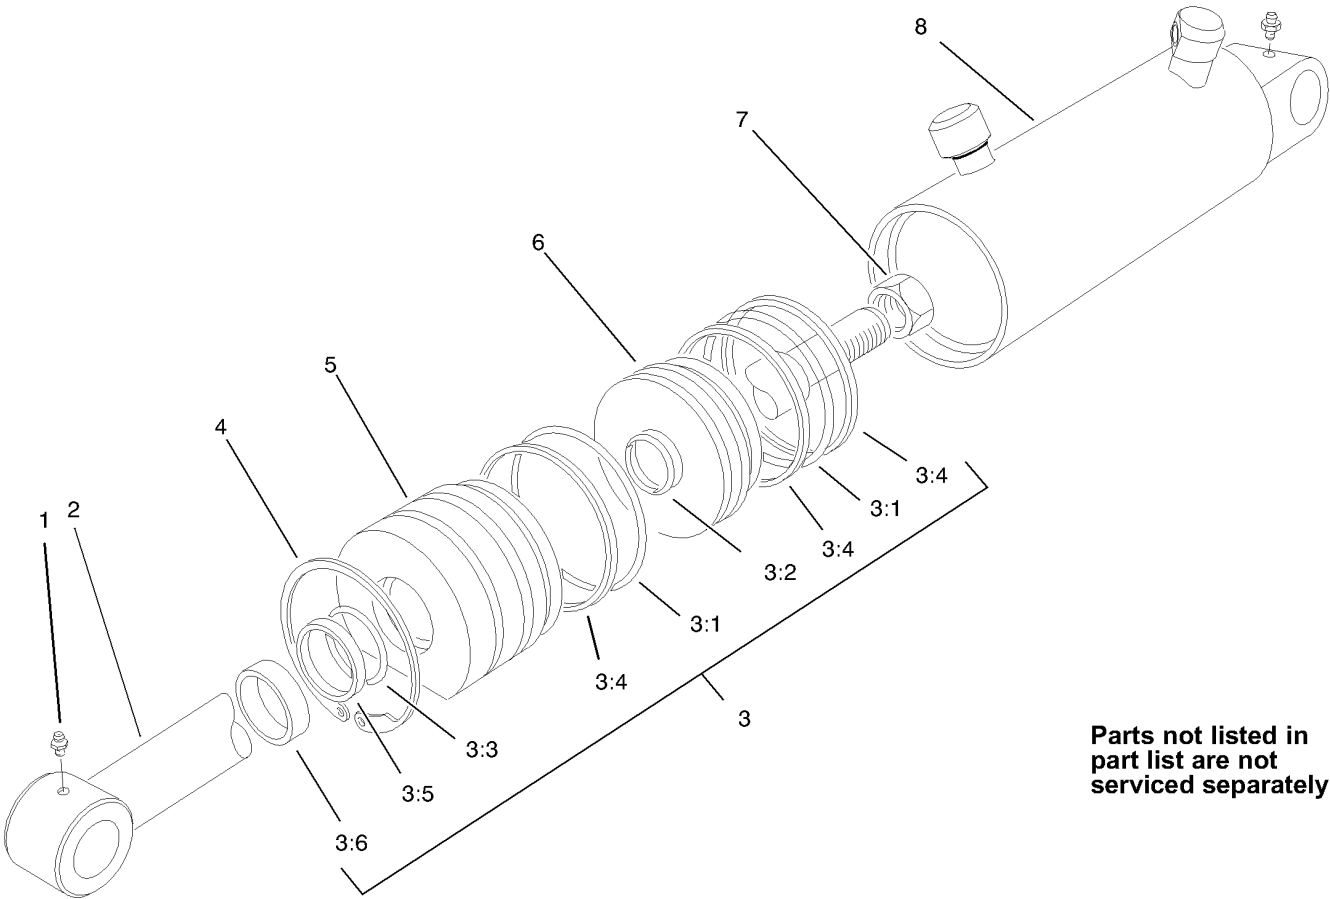 


Hydraulic Cylinder Assembly No. 100-6586 (2-1/2in Bore)

Ref	Part No.	Qty.	Description				
1	302-55	2	Fitting-Grease				
2		1	Shaft				
3	61-4960	1	Seal Kit				
3:1		2	Seal-Dust				
3:2		1	Seal-Dust				
3:3		1	Seal-Dust				
3:4		3	Backup				
3:5		1	Backup				
3:6		1	Seal-Dust				
4	61-4990	1	Ring-Retaining				
5		1	Head				
6		1	Piston				
7		1	Nut				
8		1	Barrel				

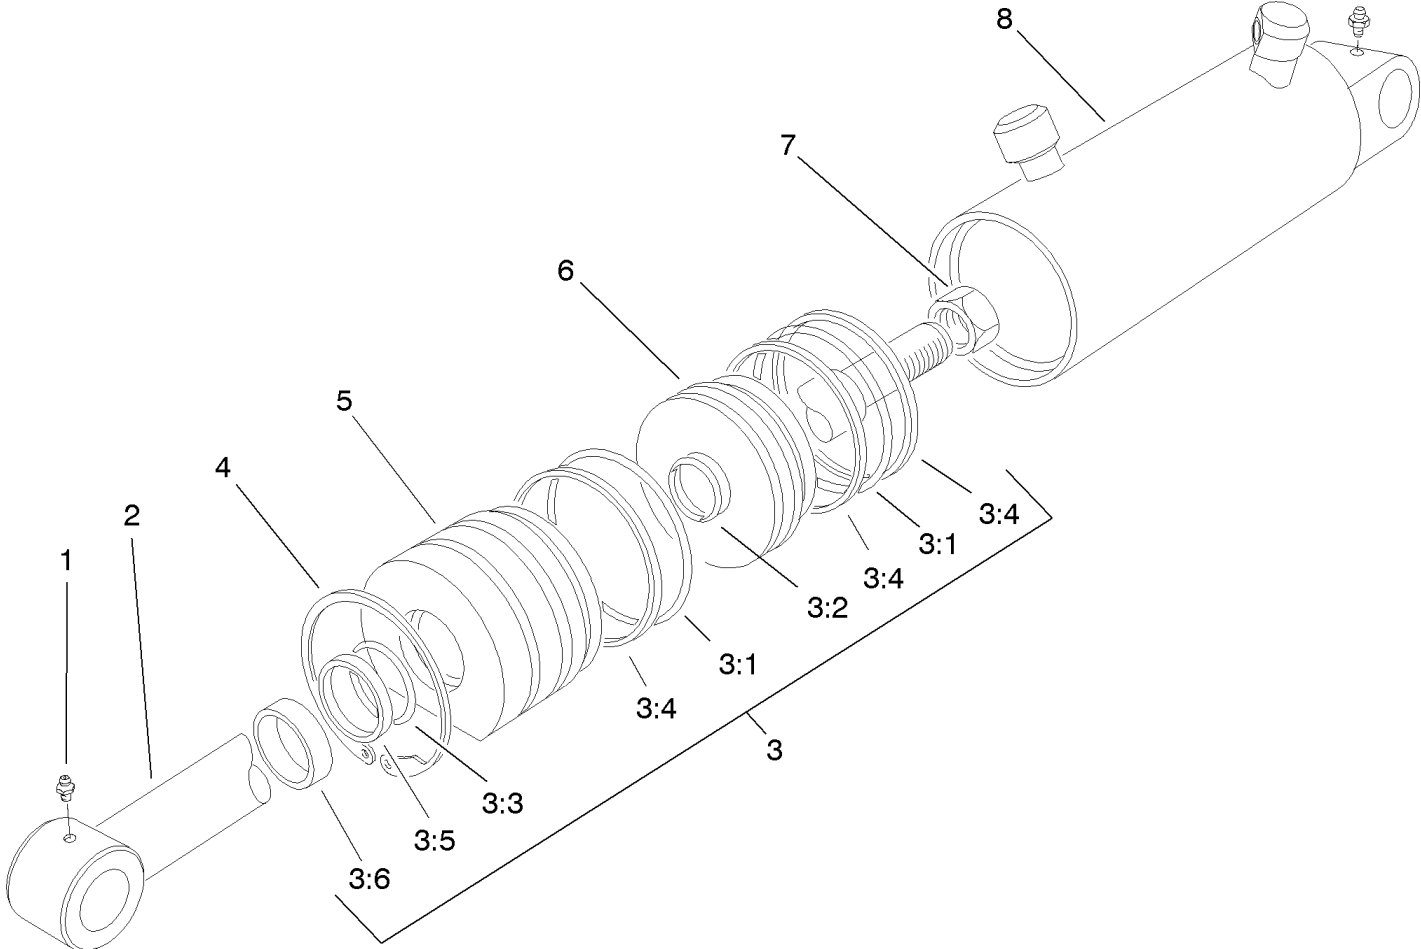 


Hydraulic Cylinder Assembly No. 100-6591 (3in Bore)
(Optional)

Ref	Part No.	Qty.	Description				
1	302-55	2	Fitting-Grease				
2		1	Shaft				
3	67-5500	1	Seal Kit				
3:1		2	Seal-Dust				
3:2		1	Seal-Dust				
3:3		1	Seal-Dust				
3:4		3	Backup				
3:5		1	Backup				
3:6		1	Seal-Dust				
4	67-5470	1	Ring-Snap				
5		1	Head				
6		1	Piston				
7		1	Nut				
8		1	Barrel				

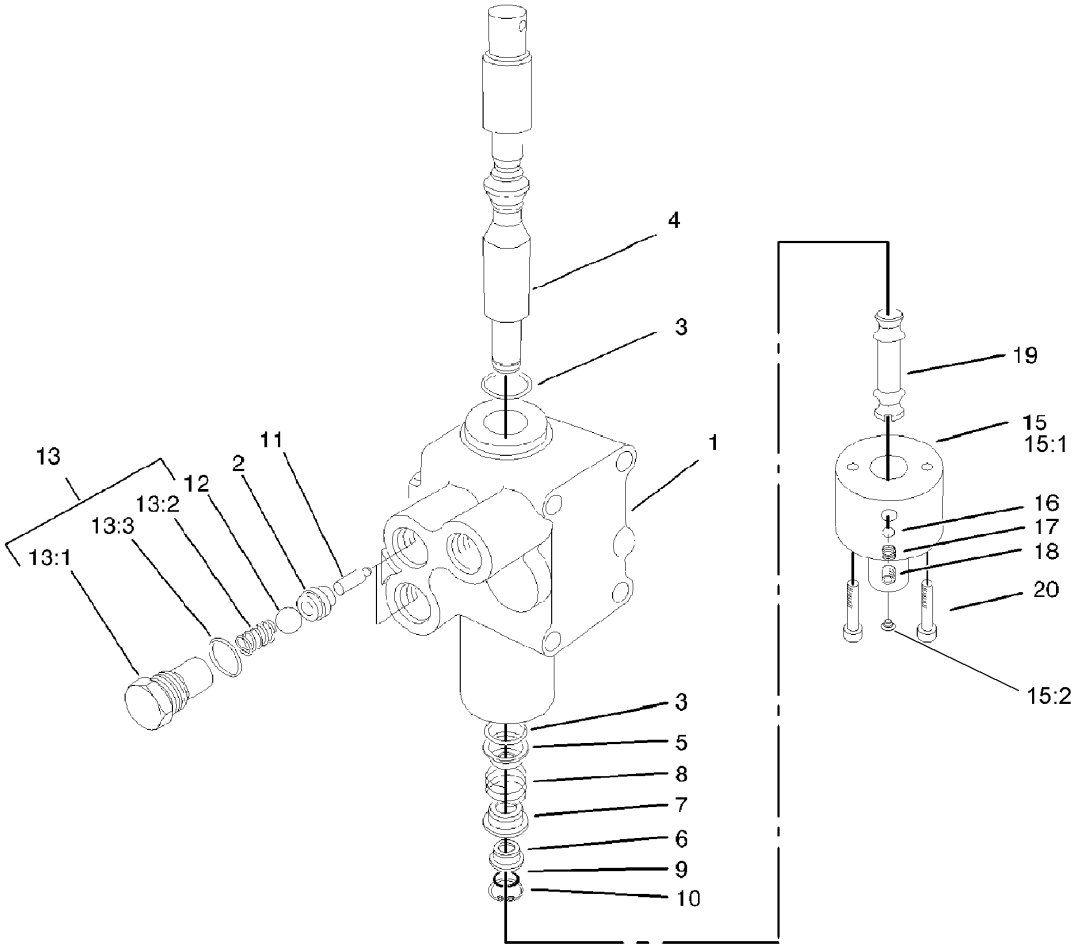 

Valve Assembly No. 106-8071-01


Ref	Part No.	Qty.	Description				
1		1	Body				
2	22-8370	2	Seat-Valve				
3	22-8500	2	O-Ring				
4	105-7826	1	Spool				
5	22-8380	1	Retainer				
6	22-8400	1	Spacer				
7	22-8390	1	Retainer				
8	22-8410	1	Spring				
9	22-8480	1	Ring-Snap				
10	22-8490	1	Ring-Snap				
11	22-8360	2	Pin				
12	22-8350	2	Ball				
13	105-7827	2	Plug ASM				
13:1	22-8330	1	Plug				
13:2	22-8340	1	Spring				
13:3	237-42	1	O-Ring				
15	106-8070	1	Detent Barrel ASM				
15:1		1	Barrel-Detent				
15:2	106-8068	1	Plug-Dust				
16	105-7829	2	Ball-Steel				
17	105-7830	2	Spring				
18	105-7831	2	Screw-Set				
19	105-7832	1	Stud-Detent				
20	105-7833	2	Screw-HSH				

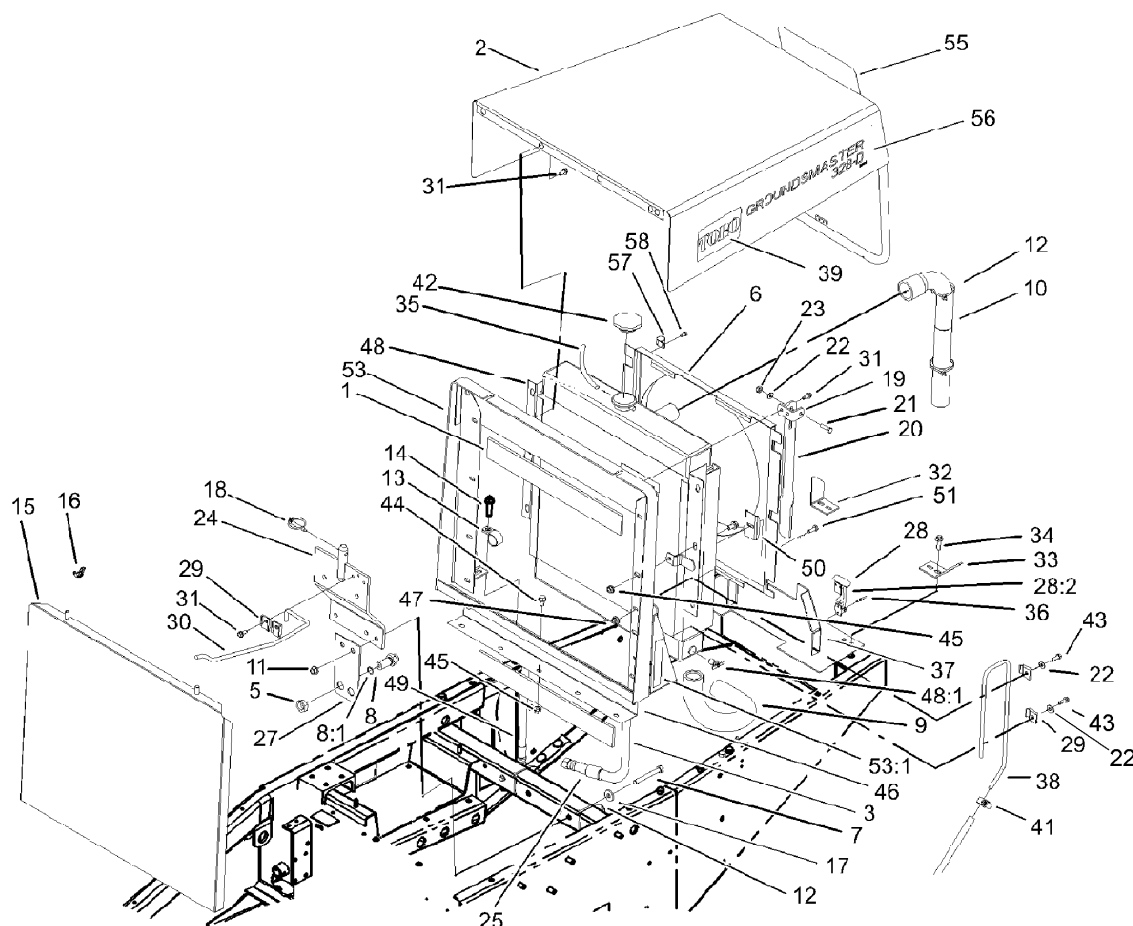 

Radiator and Hood Assembly


Ref	Part No.	Qty.	Description
1	43-3320	2	Foam-Radiator
2	105-2919	1	Hood ASM
3	63-9010	1	Hose-Coolant, Transmission
5	340-70	2	Nut-Lock
6	105-0007-03	1	Fan Shroud ASM
7	323-14	3	Screw-HH
8	340-71	2	Fitting-Straight, Bulkhead
8:1	237-22	2	O-Ring
9	104-3432	1	Hose-Radiator, Bottom
10	104-3433	1	Hose-Radiator, Top
11	32128-21	3	Nut-HF
12	3290-379	6	Tie-Cable
13	2412-4	1	Clamp
14	11-0590	1	Screw-HWHTF
15	67-9030-03	1	Grille ASM
16	32103-2	2	Nut-Wing
17	5-0838	3	Washer
18	283-76	1	Pin-Lynch
19	84-5330	1	Bracket-Prop, Hood
20	84-5380	1	Strap-Prop, Hood
21	321-6	1	Screw-HH
22	3256-22	3	Washer-Flat
23	3296-16	1	Nut-Lock, NI
24	105-2542-01	1	Bracket-Support, Seat

Ref	Part No.	Qty.	Description
25	38-3400	1	Guard-Rubber
27	68-9160	1	Bracket
28	59-9740	1	Flex Draw Latch ASM
28:2	249-40	1	Keeper
29	3-6657	4	Clip-Skid
30	86-7040	1	Rod-Prop, Seat
31	32144-10	7	Screw-HWH
32	62-3010-01	1	Bracket-RH
33	62-3020-01	1	Bracket-LH
34	3234-17	4	Screw-HHF
35	104-0076	1	Hose-Fuel
36	3290-55	4	Rivet-Pop
37	105-4255-01	1	Pulley Guard ASM
38	105-4265	1	Tube-Vent
39	62-7400	2	Decal
41	2412-108	1	Clamp-Worm
42	66-3240	1	Cap-Radiator
43	321-4	2	Screw-HH
44	3234-14	13	Screw-HHF
45	32128-20	13	Nut-HF
46	105-4264-03	1	Grill-Plate, Sealing
47	32128-33	1	Nut-HF
48	108-8699	1	Radiator ASM
48:1	304-46	1	Draincock

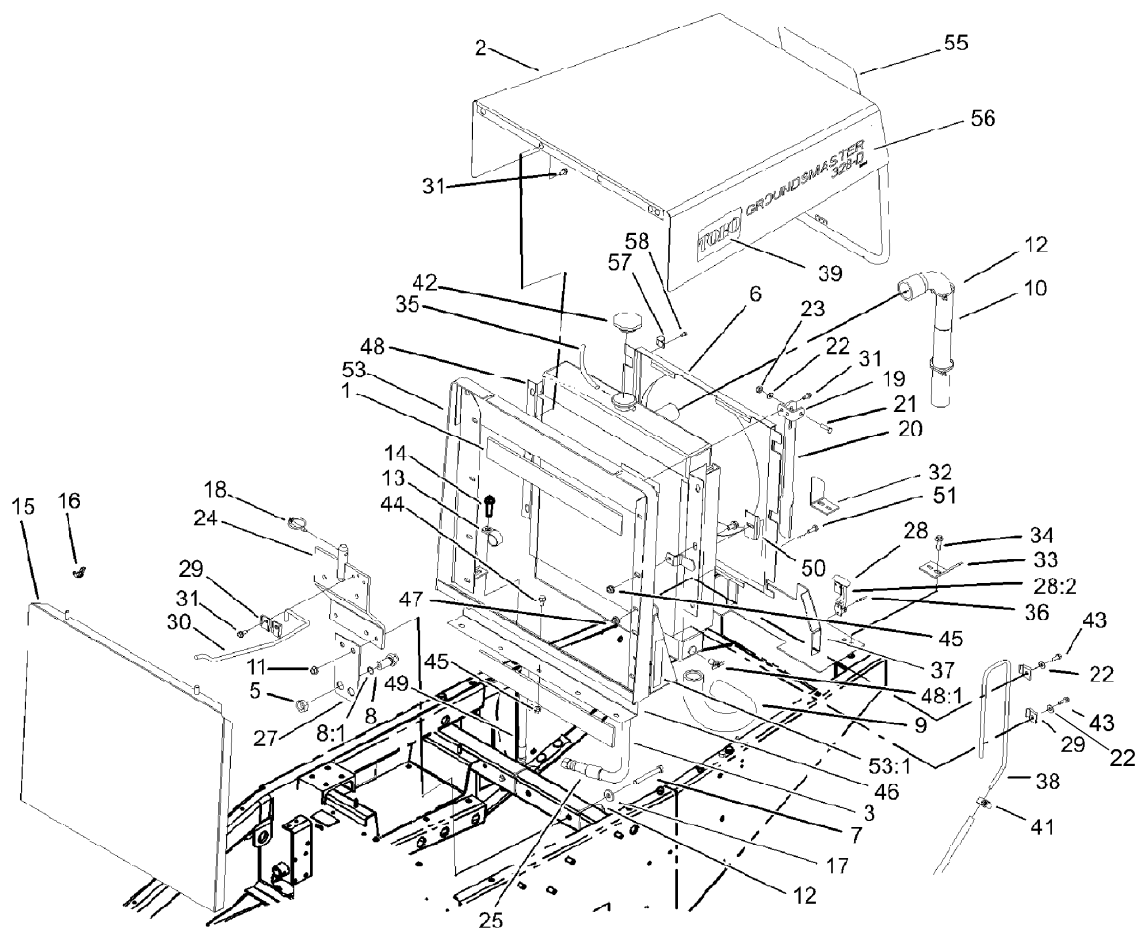 

Radiator and Hood Assembly (continued)


Ref	Part No.	Qty.	Description
49	63-8960	1	Hose
50	105-0012-03	6	Clip-Mounting, Fan Shroud
51	3234-33	6	Screw-HHF
53	105-2918	1	Radiator Support ASM
53:1	77-3100	3	Decal-Warning
55	66-6140	1	Decal
56	106-4396	2	Decal
57	2412-83	1	Clamp-Cable
58	32144-1	1	Screw-Taptite

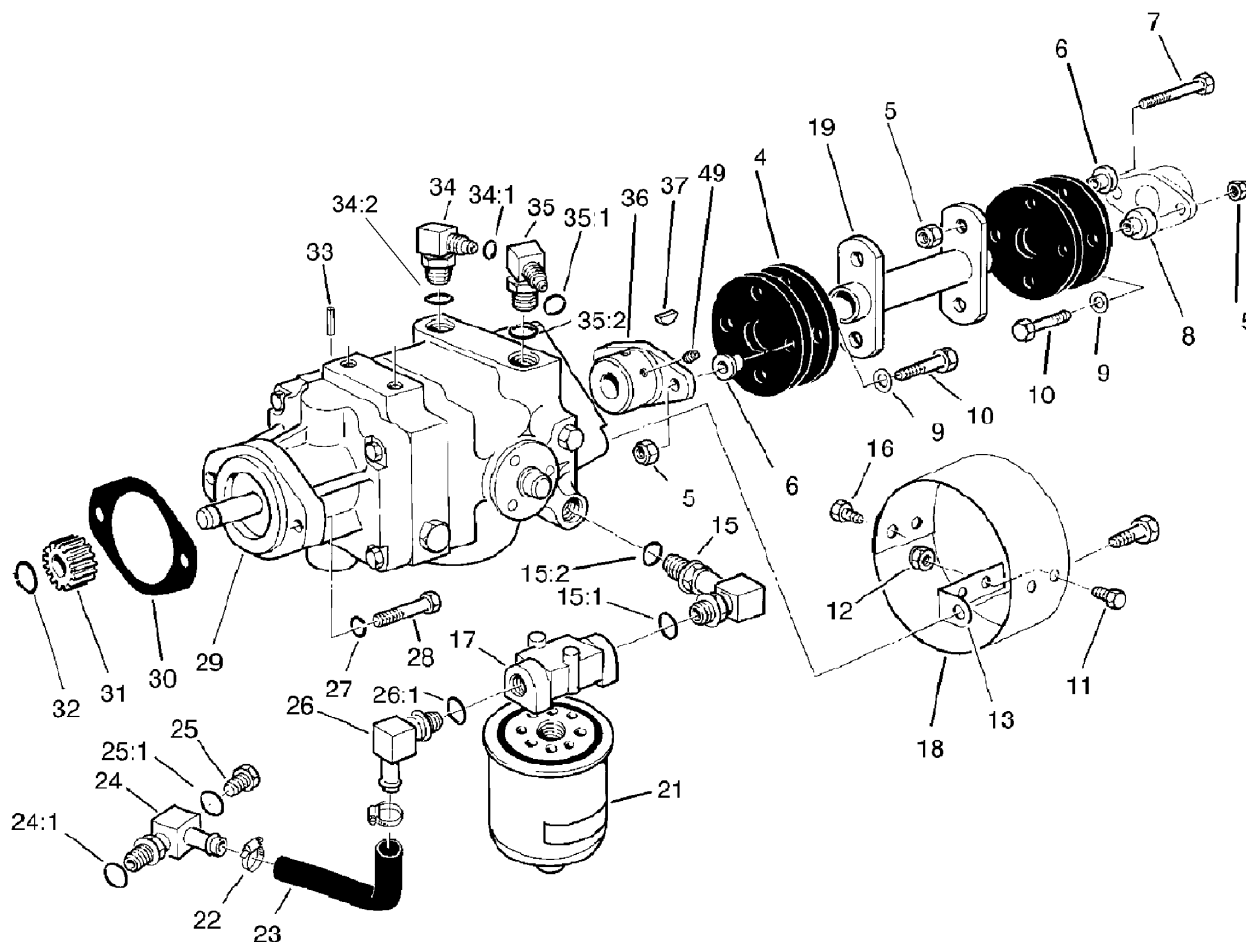 

Transmission Assembly

Ref	Part No.	Qty.	Description
4	44-2230	4	Coupling-Rubber
5	32152-1	8	Nut-Lock, Cone
6	71-4411	4	Spacer
7	322-8	4	Screw-HH
8	71-4410	4	Spacer
9	3256-3	4	Washer-Flat
10	322-10	4	Screw-HH
11	321-2	2	Screw-HH
12	3296-42	4	Nut-Lock, NI
13	54-9290	2	Bracket-Mounting
15	68-8660	1	Fitting-HYD, 90 DEG
15:1	237-80	1	O-Ring
15:2	237-81	1	O-Ring
16	321-4	2	Screw-HH
17	68-8990	1	Filter Head ASM
18	54-9300-03	1	Cover-Shaft, Pump
19	105-0033-03	1	Drive Shaft ASM
21	23-9740	1	Filter-Oil
22	2412-34	2	Clamp-Hose
23	68-9650	1	Hose-Axle
24	70-2620	1	Fitting-HYD, 90 DEG
24:1	237-81	1	O-Ring
25	353-508	1	Plug
25:1	237-42	1	O-Ring


Ref	Part No.	Qty.	Description
26	353-987	1	Fitting-HYD, 90
26:1	237-81	1	O-Ring
27	3253-21	2	Washer-Lock
28	323-7	2	Screw-HH
29	92-8947	1	Transmission ASM
30	41-8760	1	Gasket
31	86-7220	1	Gear-Pinion
32	32120-72	1	Ring-Snap
33	32121-6	1	Pin-Roll, Slotted
34	340-77	1	Fitting-HYD, 90 DEG
34:1	237-22	1	O-Ring
34:2	237-42	1	O-Ring
35	340-99	1	Fitting-HYD, 90 DEG
35:1	237-30	1	O-Ring
35:2	237-42	1	O-Ring
36	33-4380	1	Hub-Pump
37	3257-32	1	Key-Woodruff
49	3241-5	2	Screw-Set

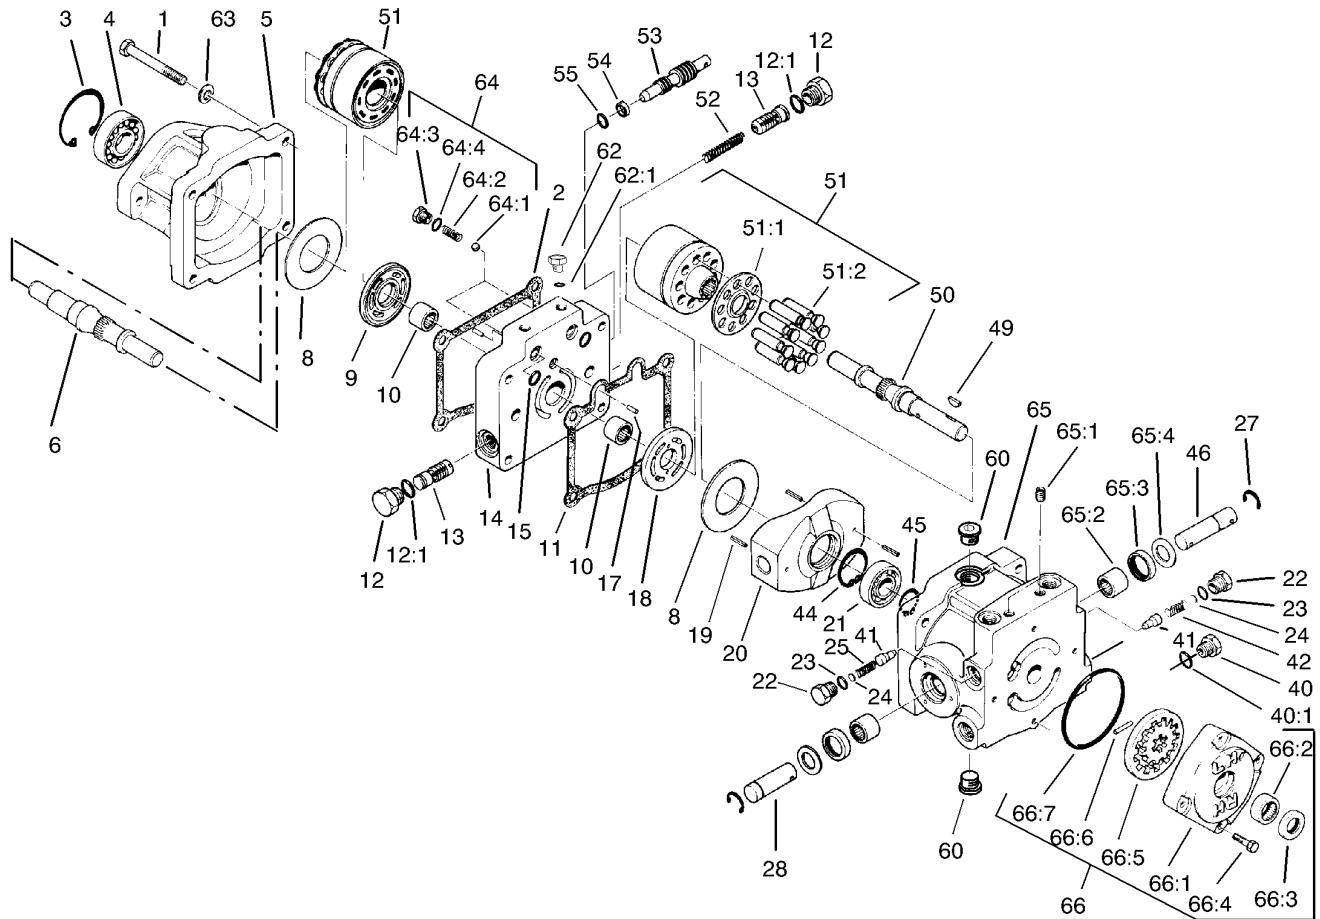 

Transmission Assembly No. 92-8947


Ref	Part No.	Qty.	Description
1	323-56	4	Screw-HH
2	67-9100	1	Gasket
3	32120-8	1	Ring-Snap
4	72-3750	1	Bearing-Roller
5	67-9080	1	Housing-Motor
6	46-8410	1	Shaft-Motor
8	25-2380	2	Plate-Thrust
9	25-2390	1	Plate-Valve, Motor
10	46-8400	2	Bearing-Shaft
11	25-2400	1	Gasket
12	353-550	2	Plug-HYD, HH
12:1	237-79	1	O-Ring
13	25-2410	2	Valve ASM
14	92-8918	1	Section-Center
15	93-4132	2	O-Ring
17	25-2430	2	Pin-Dowel
18	25-2440	1	Plate-Valve, Pump
19	32121-91	3	Pin-Spring
20	25-2450	1	Plate-Swash, Variable
21	251-8	1	Bearing-Ball
22	25-2460	2	Plug-HH
23	237-86	4	O-Ring
24	25-2470	2	Pack-Shim
25	25-2480	1	Spring-Valve

Ref	Part No.	Qty.	Description
27	32151-46	2	Ring-Retaining
28	25-2500	1	Shaft-Trunnion
40	353-551	1	Plug-HH
40:1	237-80	1	O-Ring
41	83-7260	2	Cone-Relief, Charge
42	25-2570	1	Spring-Valve
44	32151-75	1	Ring-Retaining
45	32120-15	1	Ring-Snap, EXT
46	25-2580	1	Shaft-Trunnion
49	3257-32	1	Key-Woodruff
50	67-8020	1	Shaft-Pump
51	48-1800	2	Cylinder Block Kit
51:1		1	Retainer-Slipper
51:2		9	Piston ASM
52	25-2610	1	Spring-Valve
53	88-8220	1	Valve-By Pass
54	25-2630	1	Ring-Back Up
55	237-22	1	O-Ring
60	67-9090	1	Plug ASM
62	92-8776	4	Plug-HSH
62:1	92-8777	1	O-Ring
63	93-0312	4	Washer-Hardened
64	99-5689	1	Check Valve ASM
64:1	25-2490	1	Ball

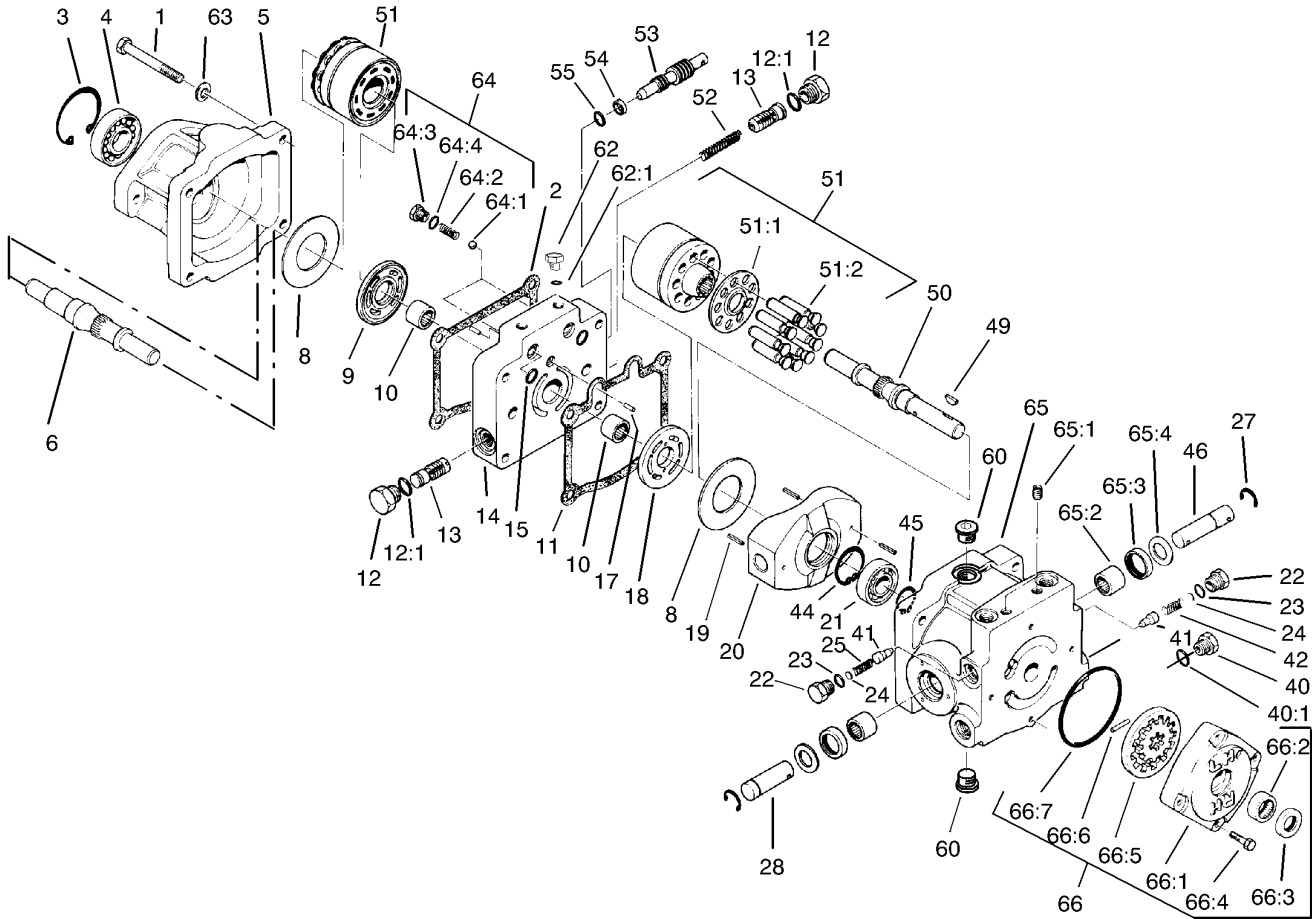 


Transmission Assembly No. 92-8947 (continued)

Ref	Part No.	Qty.	Description				
64:2	25-2640	1	Spring-Valve				
64:3	25-2650	1	Plug-Valve, Check				
64:4	237-86	1	O-Ring				
65	54-7890	1	Housing Kit				
65:1	285-17	2	Plug-Pipe				
65:2	252-82	2	Bearing-Needle				
65:3	25-3210	2	Seal-Lip				
65:4	25-2510	2	Washer-Flat				
66	25-3190	1	Charge Pump Kit				
66:1	25-2550	1	Housing-Pump, Charge				
66:2	67-8050	1	Bearing-Needle				
66:3	93-4133	1	Seal-Lip				
66:4	322-4	4	Screw-HH				
66:5	25-2540	1	Gerotor ASM				
66:6	25-2530	1	Pin-Straight, Headless				
66:7	237-95	1	O-Ring				

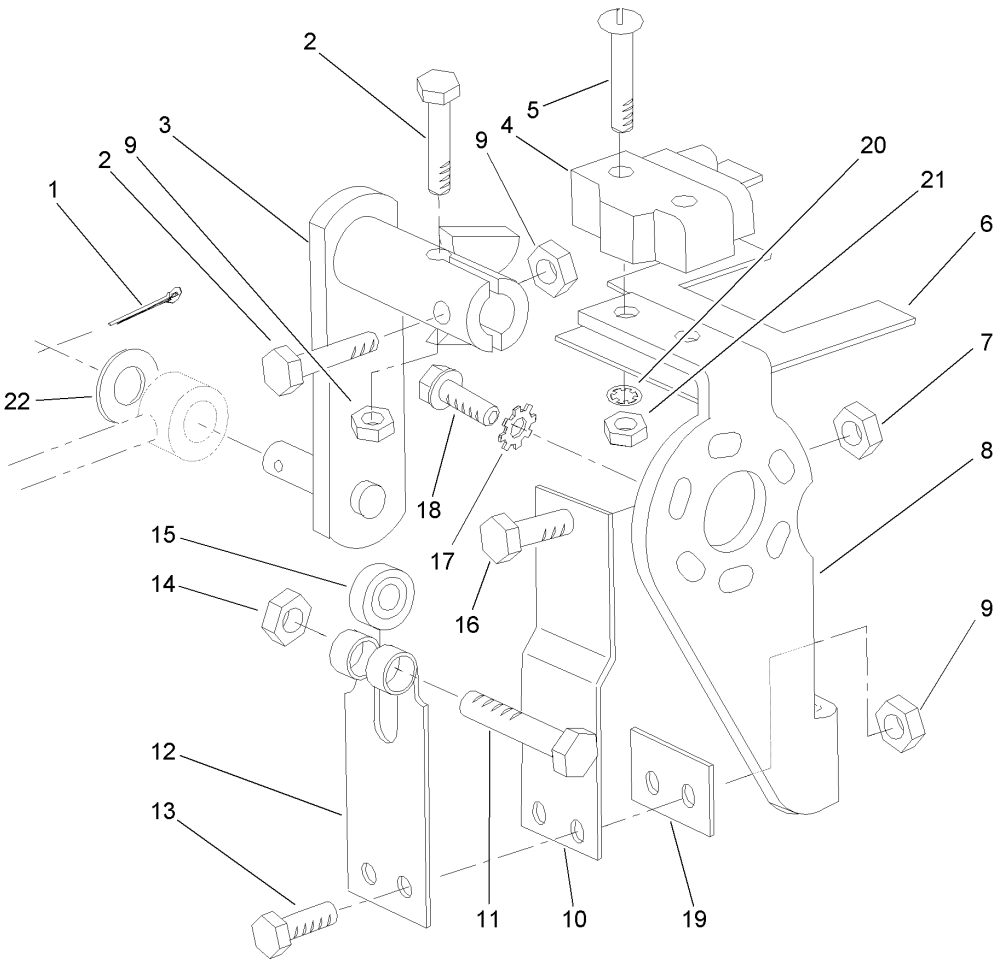 

Neutral Centering Device Assembly


Ref	Part No.	Qty.	Description				
1	3272-10	1	Pin-Cotter				
2	321-9	2	Screw-HH				
3	108-6555-03	1	Pump Lever ASM				
4	29-6163	1	Switch-Micro				
5	3249-11	2	Screw-Machine				
6	46-8810	1	Stop-Spring, Leaf				
7	3219-2	1	Nut-Hex				
8	29-6120-03	1	Pump Plate ASM				
9	3296-42	4	Nut-Lock, NI				
10	29-6170	1	Extended Leaf Spring ASM				
11	322-17	1	Screw-HH				
12	29-6150	1	Spring-Leaf				
13	321-6	2	Screw-HH				
14	3296-29	1	Nut-Lock, NI				
15	251-259	1	Bearing-Ball				
16	3210-7	1	Screw-HH				
17	3255-7	3	Washer-Lock/EXT				
18	49-2040	3	Screw-HWHTF				
19	51-3150	1	Shim-Arm, Spring				
20	3254-9	2	Washer-Lock, Internal				
21	3217-16	2	Nut-Hex				
22	3256-6	1	Washer-Flat				

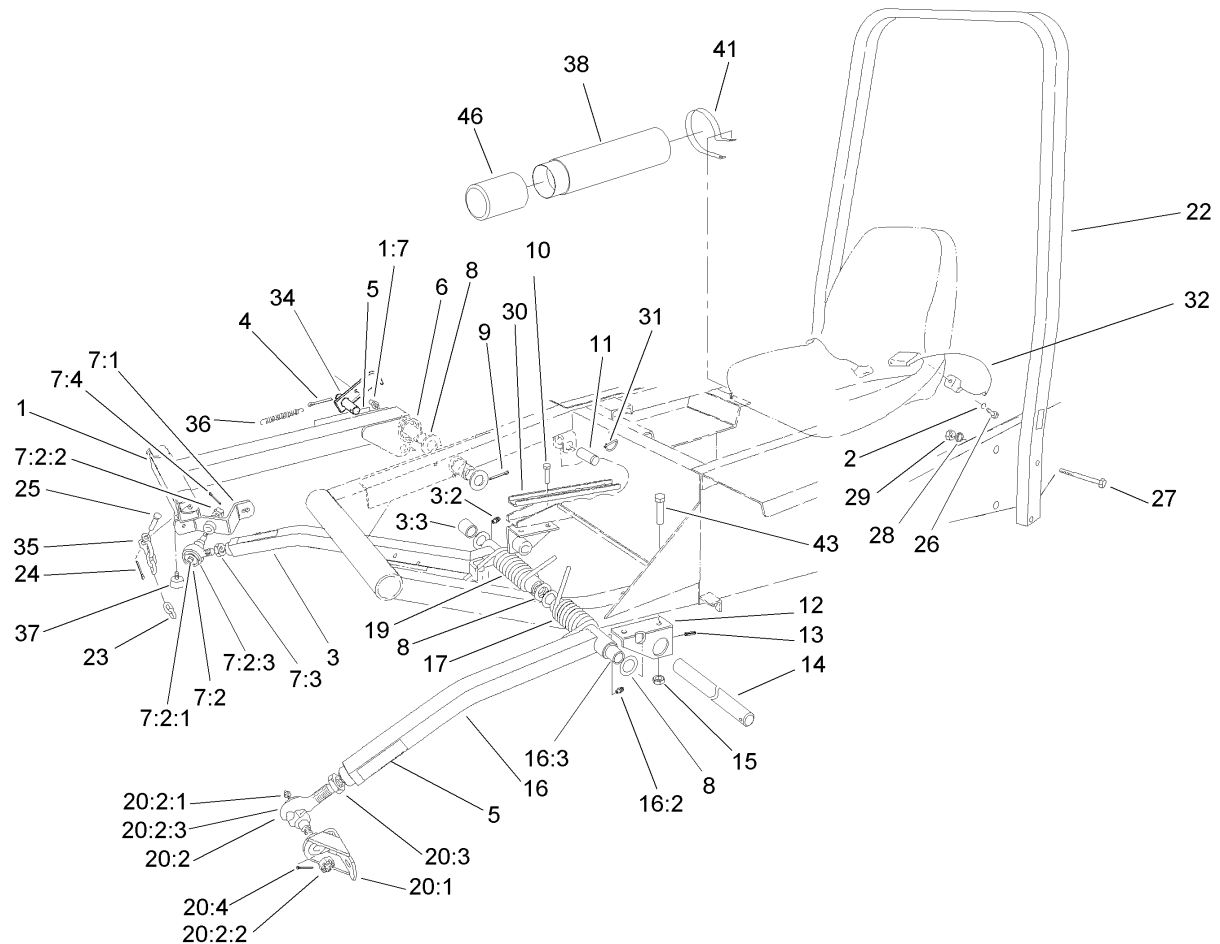 

Push Arm and Roll-Over-Protection-System Assembly


Ref	Part No.	Qty.	Description
1	66-6370	1	Lift Arm ASM
1:7	302-5	1	Fitting-Grease
① 1:8	3290-472	1	Insert-Threaded
2	3253-6	2	Washer-Lock
3	66-7150	1	Arm-Push, RH
3:2	302-33	1	Fitting-Grease
3:3	256-126	2	Bushing
4	3272-24	1	Pin-Cotter
5	55-4300	3	Decal-Warning
6	46-8840-01	1	Spring-Lift Arm
② 7			RH Ball Joint ASM
7:1	21-3020-01	1	Mount-Balljoint, RH
7:2	86-8100-01	1	Ball Joint ASM
7:2:1	302-5	1	Fitting-Grease
7:2:2	32136-2	1	Nut-SHH
7:2:3	105-7835	1	Seal
7:3	21-3000	1	Nut-HJ
7:4	3272-11	1	Pin-Cotter
8	5-1754	6	Washer-Flat
9	3272-33	1	Pin-Cotter
10	324-4	2	Screw-HH
11	3-7292	1	Pin-Clevis
12	21-2860-01	2	Push Arm Bracket ASM
13	32121-84	2	Pin-Spiral

Ref	Part No.	Qty.	Description
14	21-2990	1	Shaft-Pivot
15	32128-42	4	Nut-HF
16	21-2960	1	Arm-Push, LH
16:2	302-33	1	Fitting-Grease
16:3	256-126	2	Bushing
17	21-2900-01	1	Spring-Torsion, LH
17	105-9550-01	1	Spring-Torsion, LH (Light)
19	21-2890-01	1	Spring-Torsion, RH
② 20			LH Ball Joint ASM
20:1	21-3050-01	1	LH Ball Joint Mount ASM
20:2	86-8100-01	1	Ball Joint ASM
20:2:1	302-5	1	Fitting-Grease
20:2:2	32136-2	1	Nut-SHH
20:2:3	105-7835	1	Seal
20:3	21-3000	1	Nut-HJ
20:4	3272-11	1	Pin-Cotter
22	99-1299-03	1	ROPS-2 Post
23	3-1365	3	Chain
24	3272-10	6	Pin-Cotter
25	283-10	6	Pin-Clevis
26	3212-4	2	Screw-HH
27	328-12	4	Screw-HH
28	3253-9	4	Washer-Lock
29	3217-12	4	Nut-Hex

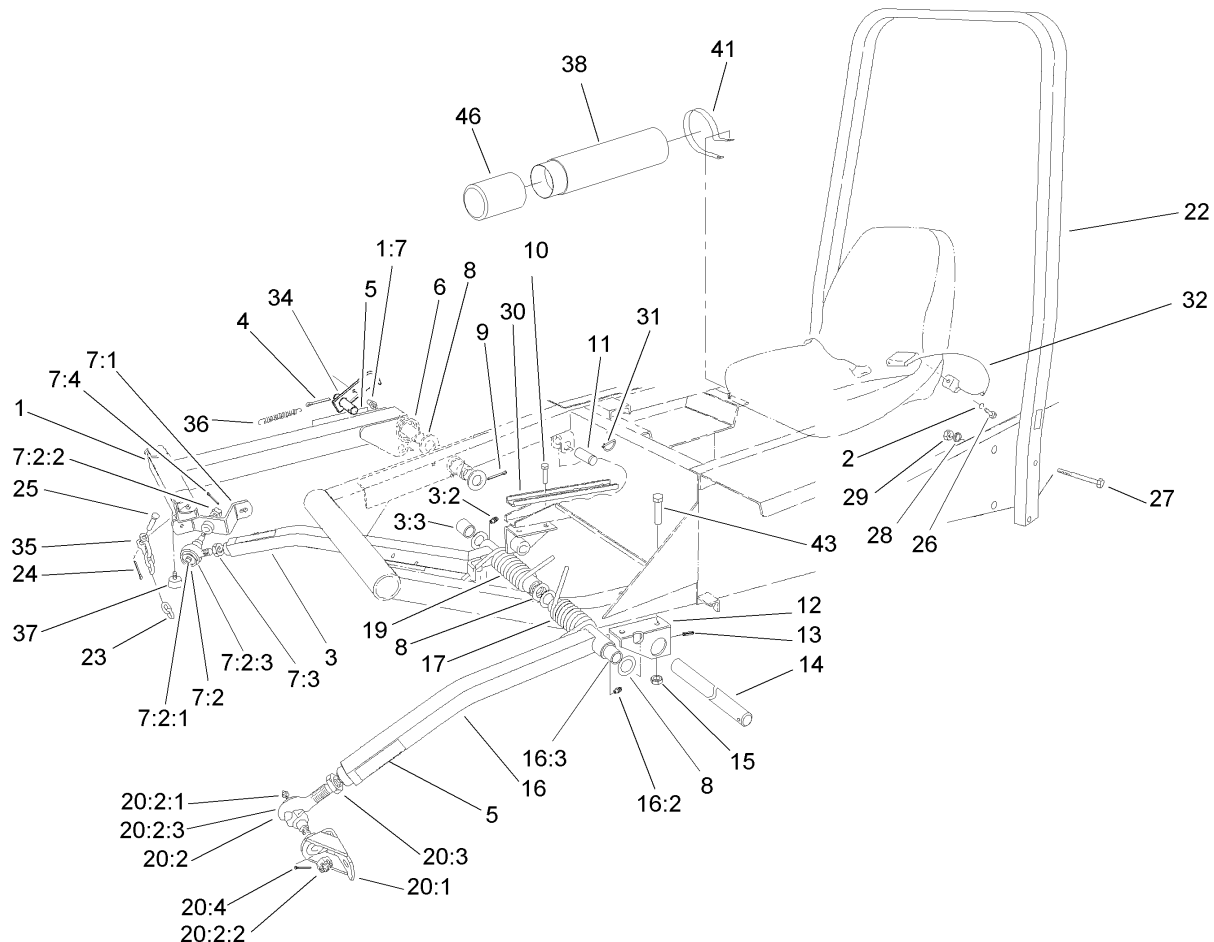 


Push Arm and Roll-Over-Protection-System Assembly (continued)

Ref	Part No.	Qty.	Description
30	23-1950-01	1	Support-Reinforcement
31	5-3126	3	Pin-Lynch
32	72-9390	1	Belt-Seat
34	24-9510	1	Pin
35	5-2942	6	Shackle
36	21-1830	1	Spring-Extension
37	68-3270	1	Bumper-Rubber
38	104-7050	1	Housing-Manual
41	2412-133	2	R-Clamp
43	324-12	2	Screw-HH
46	104-7048	1	Cap-Housing

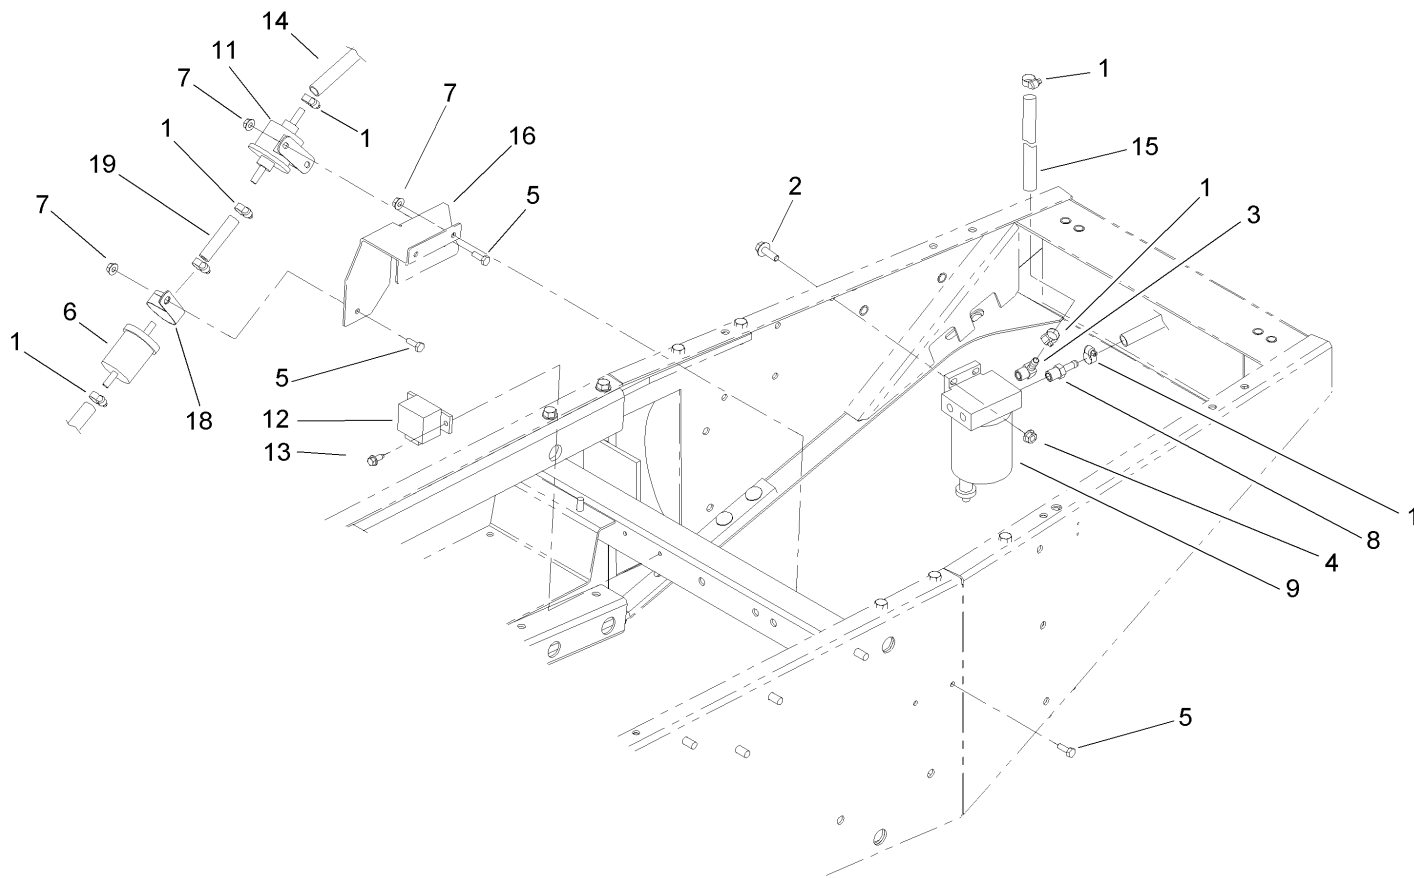 


Water and Fuel Filter Assembly

Ref	Part No.	Qty.	Description				
1	2412-108	7	Clamp-Worm				
2	3234-29	2	Screw-HHF				
3	353-781	1	Fitting-Elbow				
4	32128-20	2	Nut-HF				
5	321-4	5	Screw-HH				
6	98-7612	1	Filter-Fuel				
7	32128-33	5	Nut-HF				
8	353-783	1	Fitting-Straight				
9	98-9305	1	Water / Fuel Filter ASM				
11	104-5215	1	Pump-Fuel, Electric				
12	66-8800	1	Relay				
13	32144-10	2	Screw-HWH				
14	95-4274	1	Hose-Fuel				
15	63-9640	1	Hose				
16	105-2561-03	1	Bracket-Pump, Fuel				
18	2412-147	1	Clamp				
19	105-2599	1	Hose-Fuel				

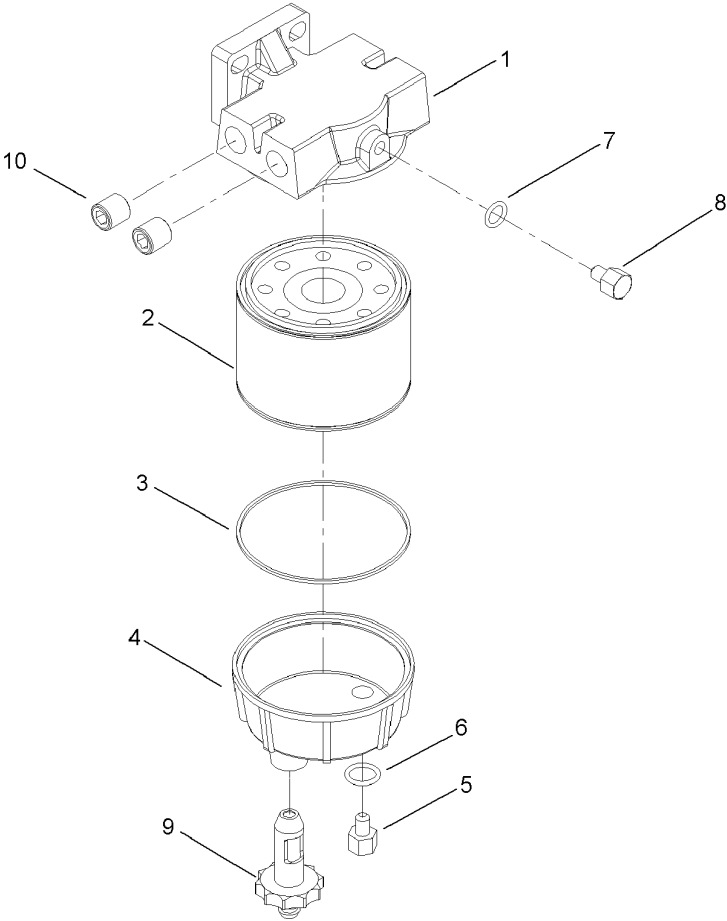

Water / Fuel Filter Assembly No. 98-9305


Ref	Part No.	Qty.	Description				
1	98-9772	1	Head-Filter				
2	98-9764	1	Element				
3	98-9774	1	O-Ring				
4	98-9775	1	Base-Filter				
5	98-9773	1	Plug-Base, Filter				
6	237-42	1	O-Ring				
7	237-78	1	O-Ring				
8	98-9776	1	Plug-Head, Filter				
9	98-9777	1	Drain Valve ASM				
10	285-22	2	Plug-Pipe				

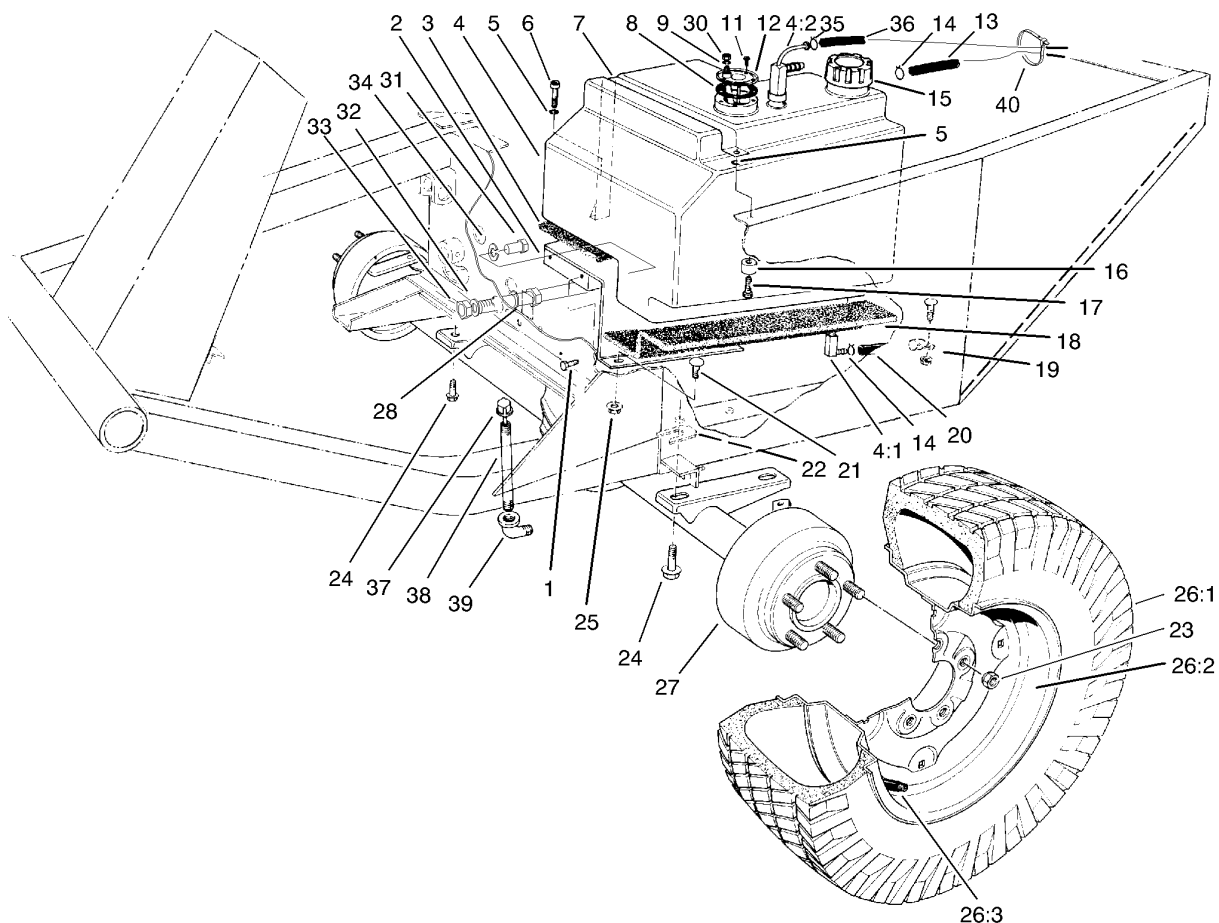 

Fuel Tank and Front Axle Assembly

Ref	Part No.	Qty.	Description
1	3234-11	2	Screw-HHF
2	68-9760	1	Fuel Tank Base ASM
3	21-3600	1	Foam-Support, Tank
4	43-4150	1	Fuel Tank ASM
4:1	43-4190	1	Fitting ASM
4:2	43-4160	1	Fitting-Return And Vent
5	3253-3	2	Washer-Lock
6	32104-96	1	Screw-HH
7	37-9550	1	Strap-Tank, Fuel
8	62-7650	1	Gasket
9	3253-17	1	Washer-Lock
11	32144-53	5	Screw-SHWH
12	105-2563	1	Sender-Fuel
13	104-0076	1	Hose-Fuel
14	2412-6	2	Clamp-Hose
15	55-3572	1	Fuel Cap ASM
16	22-7810	1	Spacer
17	321-6	1	Screw-HH
18	21-3610	1	Foam-Support, Tank
19	2412-4	1	Clamp
20	27-5360	1	Hose-Fuel
21	3230-2	3	Bolt-CARR
22	42-6080	1	Shim-Axle
23	23-7270	10	Nut-Wheel


Ref	Part No.	Qty.	Description
24	32144-67	4	Screw
25	32128-20	3	Nut-HF
26		2	Wheel And Tire ASM
26:1	95-3348	1	Tire
26:2	217-117	1	Wheel
26:3	232-27	1	Stem-Valve
27	86-9600-03	1	Axle ASM
28	24-9830-01	1	Axle Support ASM
30	3219-14	1	Nut-Hex
31	323-6	1	Screw-HH
32	3256-6	2	Washer-Flat
33	3217-9	2	Nut-HH
34	3253-21	1	Washer-Lock
35	2412-79	2	Clamp-Hose
36	43-4230	1	Hose-Return
37	23-5180	1	Dipstick ASM
38	289-37	1	Nipple-Pipe
39	2811-9	1	Fitting-Elbow, Street
40	3290-379	1	Tie-Cable

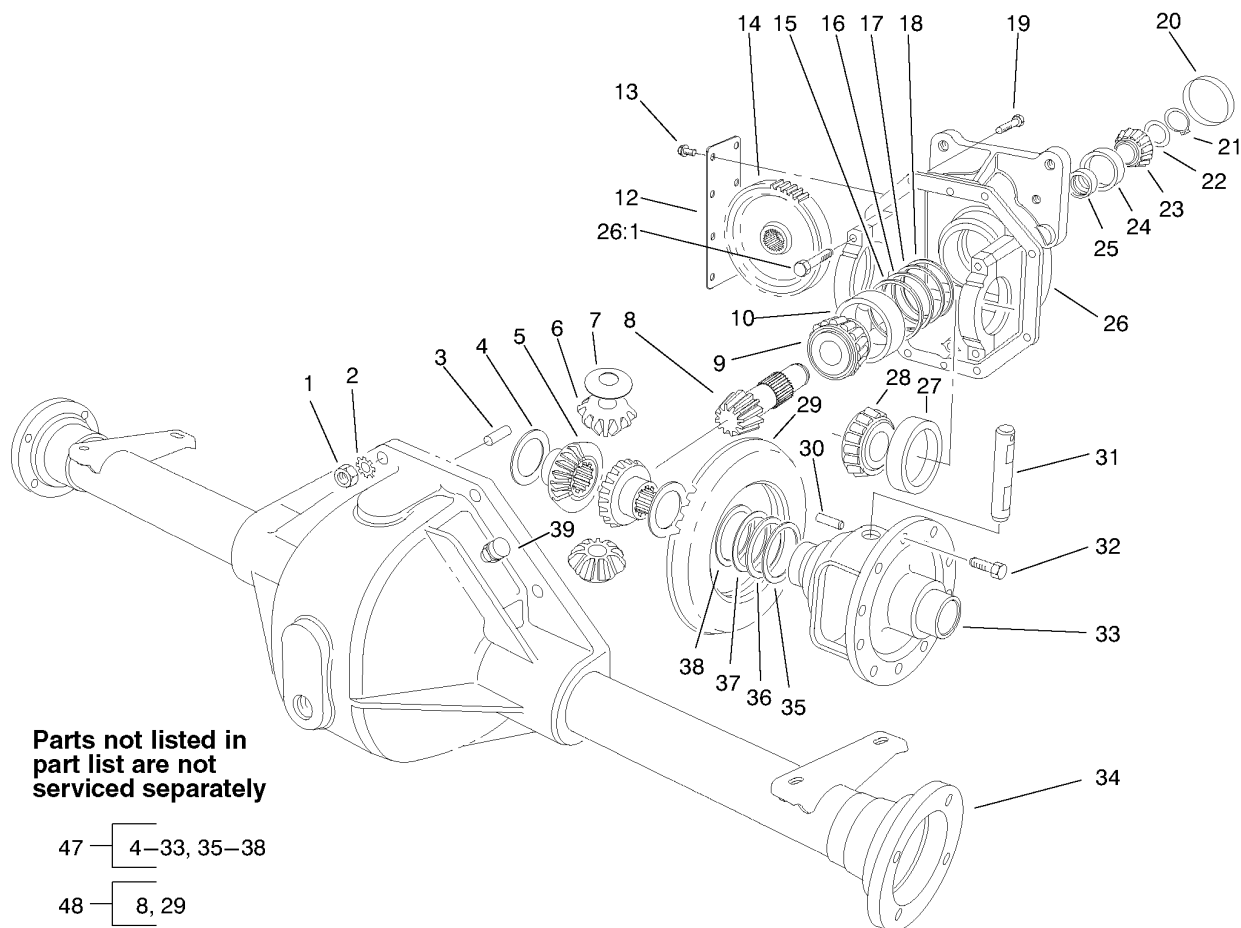 

Front Axle Assembly No. 86-9600-03


Ref	Part No.	Qty.	Description
1	3219-2	8	Nut-Hex
2	3255-8	8	Washer-Lock
3	21-8270	2	Pin-Dowel
4	21-7720	2	Washer-Thrust
5	24-8790	2	Gear-Differential
6	21-7690	2	Pinion-Differential
7	21-7730	2	Washer-Thrust, Pinion
8		1	Pinion-Drive
9	43-6760	1	Bearing-Roller, Cone Taper
10	43-6750	1	Bearing-Taper, Cup
12	21-7830	1	Cover-Gear
13	12-5450	8	Screw
14	86-7230	1	Gear-Input, Transmission
15	43-6710	0	Shim-Pinion (.003)
16	43-6711	0	Shim-Pinion (.005)
17	43-6712	0	Shim-Pinion (.010)
18	43-6713	0	Shim-Pinion (.030)
19	3210-7	8	Screw-HH
20	21-7850	1	Plug-Cup
21	43-6550	1	Ring-Snap
22	46-2210	0	Shim-Bearing, Front
	46-2211	0	Shim-Front Bearing, .033
	46-2212	0	Shim-Front Bearing, .035
	46-2213	0	Shim-Front Bearing, .037

Ref	Part No.	Qty.	Description
	46-2214	0	Shim-Front Bearing, .039
	46-2215	0	Shim-Front Bearing, .041
	46-2216	0	Shim-Front Bearing, .043
	46-2220	0	Shim-Front Bearing, .045
	46-2221	0	Shim-Front Bearing, .047
	46-2222	0	Shim-Front Bearing, .049
	46-2223	0	Shim-Front Bearing, .051
	46-2224	0	Shim-Front Bearing, .053
	46-2225	0	Shim-Front Bearing, .055
	46-2226	0	Shim-Front Bearing, .057
	46-2410	0	Shim-Front Pinion .062
	46-2411	0	Shim-Front Pinion .064
	46-2412	0	Shim-Front Pinion .066
	46-2413	0	Shim-Front Pinion .068
	46-2414	0	Shim-Front Pinion .070
	46-2415	0	Shim-Front Pinion .072
	46-2416	0	Shim-Front Pinion .074
	46-2420	0	Shim-Front Pinion .076
	46-2421	0	Shim-Front Pinion .078
	46-2422	0	Shim-Front Pinion .080
	46-2423	0	Shim-Front Pinion .082
	46-2424	0	Shim-Front Pinion .084
	46-2425	0	Shim-Front Pinion .086
	46-2426	0	Shim-Front Pinion .088

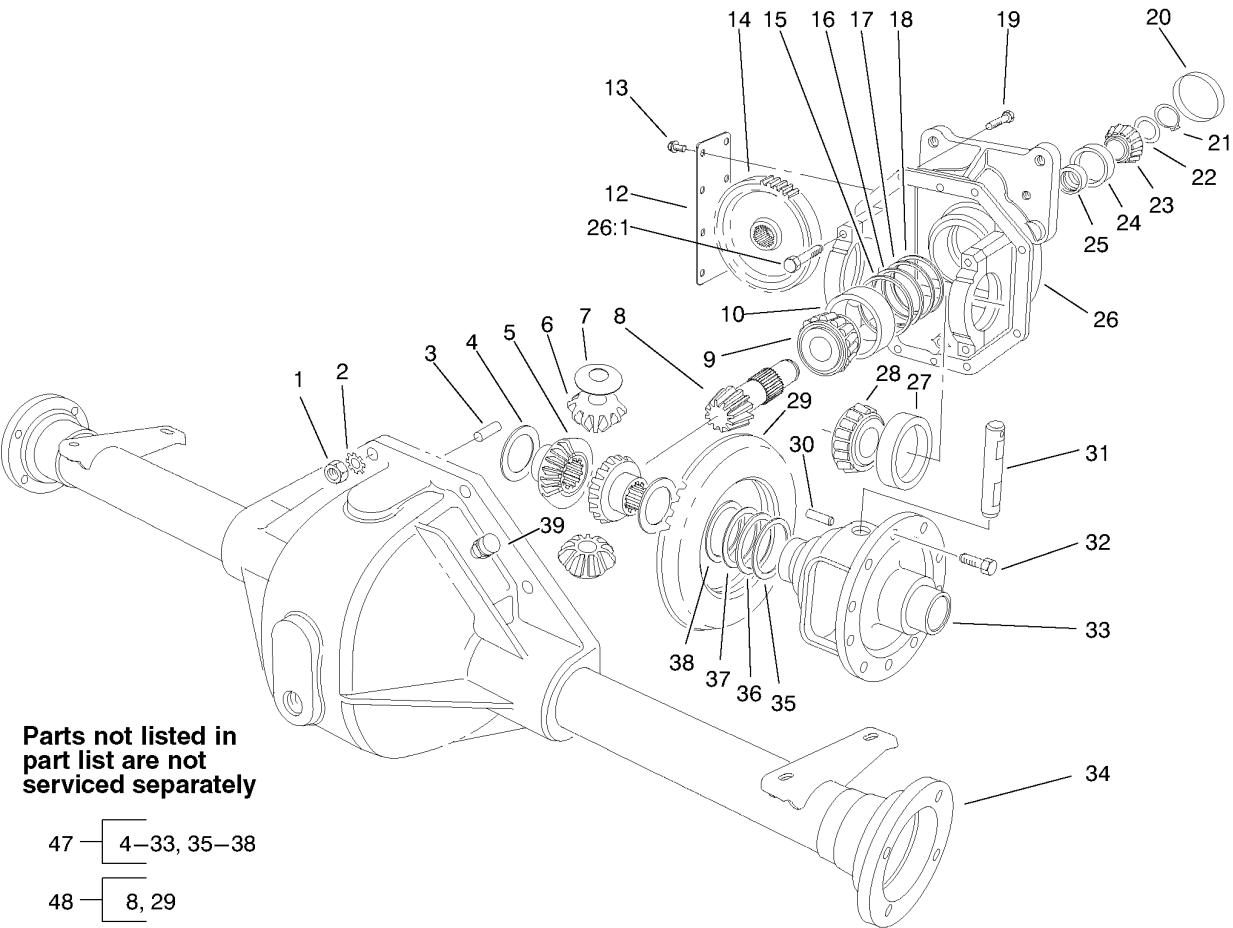 


Front Axle Assembly No. 86-9600-03 (continued)

Ref	Part No.	Qty.	Description				
23	254-91	1	Cone-Bearing				
24	254-90	1	Bearing-Cup				
25	21-8020	1	Spacer-Bearing				
26	86-9580	1	Upper Housing ASM				
26:1	92-1773	4	Screw-HHF				
27	254-66	2	Cup-Bearing, Roller				
28	254-65	2	Cone-Bearing, Roller				
29		1	Gear-Ring				
30	32121-15	1	Pin-Roll				
31	21-7700	1	Shaft-Mate, Pinion				
32	21-7770	5	Screw-Gear, Drive				
33	21-7670	1	Case-Differential				
34	43-6840	1	Housing-Lower				
35	21-8120	0	Shim-Bearing, Differential (.030)				
36	21-8110	0	Shim-Bearing, Differential (.010)				
37	21-8100	0	Shim-Bearing, Differential (.005)				
38	21-8090	0	Shim-Bearing, Differential (.003)				
39	72-9420	1	Vent				
47	92-4903	1	Differential Carrier ASM				
48	92-4848	1	Gear And Pinion ASM				

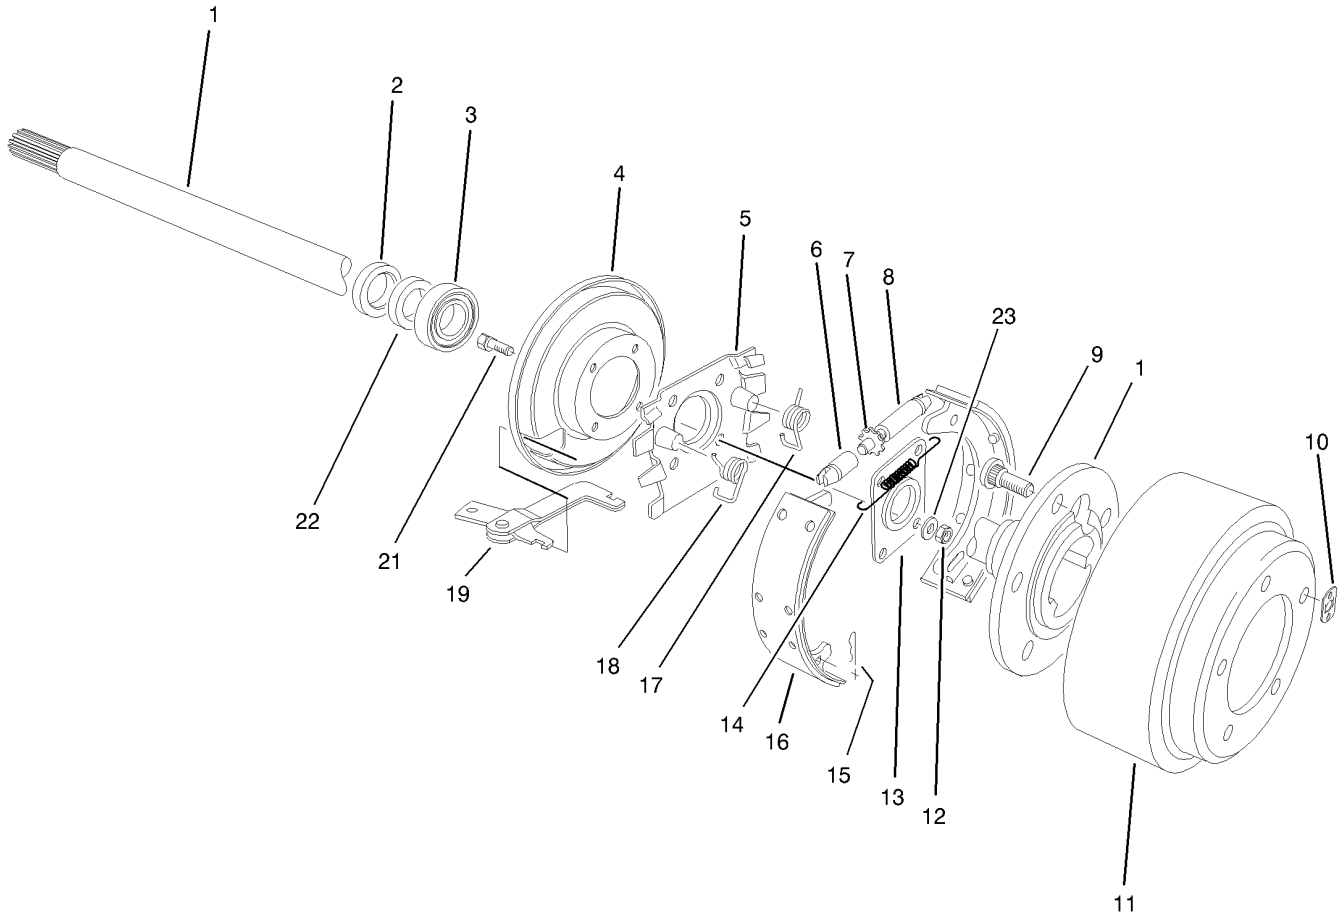 

Brake Assembly


Ref	Part No.	Qty.	Description				
1	28-0650	2	Shaft-Axle, Flanged				
2	92-1774	2	Seal-Oil				
3	21-8180	2	Bearing ASM				
4	21-9450	2	Shield-Dust				
5	43-6810	2	Spider-Torque				
6	21-9390	2	Socket-Screw, Adjusting				
7	21-9370	2	Screw-Adjusting				
8	21-9380	2	Nut-Pivot				
9	242-34	10	Stud-Drive				
10	21-8360	2	Clip-Retaining				
11	28-0680	2	Drum-Brake				
12	94-6935	8	Locknut				
13	28-0670	2	Seal-Grease				
14	21-9440	2	Spring-Screw, Adjusting				
15	21-9460	4	Retainer-Lever, Brake				
16	84-8600	1	Set-Shoes, Lined				
17	21-9430	2	Spring-Return, RH				
18	21-9420	2	Spring-Return, LH				
19	24-9180	2	Strut And Lever ASM				
21	94-6934	8	Screw-HH				
22	24-8840	2	Ring-Retaining, Wheel Bearing				
23	94-6936	8	Washer-Hardened				
24	92-8775	1	Liquid Gasket Kit				

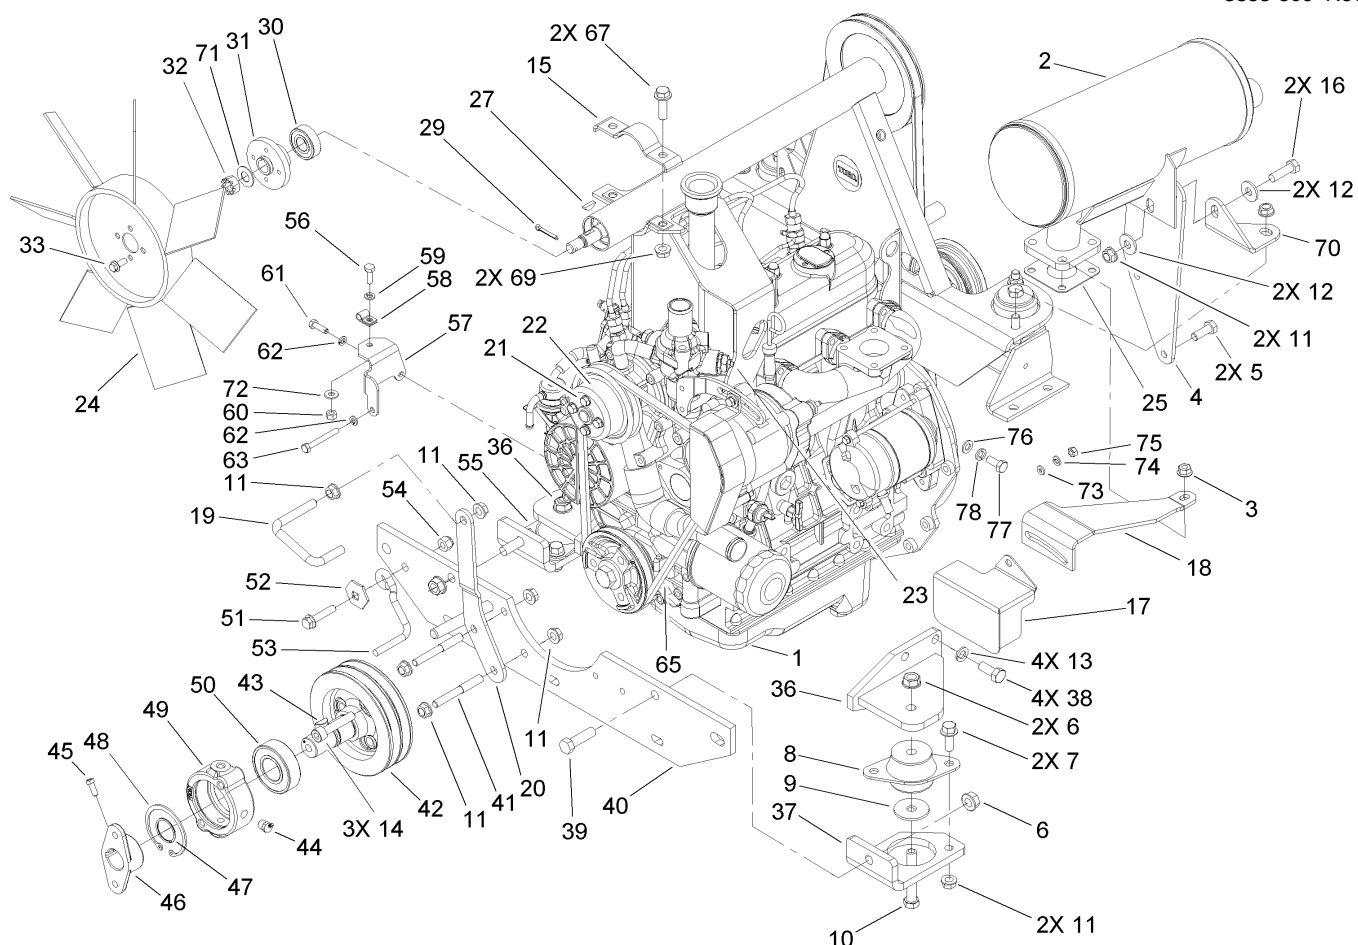 

Engine and Mounting Component Assembly


Ref	Part No.	Qty.	Description
1	108-1361	1	Engine-Kubota
2	106-8069	1	Muffler-Exhaust
3	33004-00	4	Nut-HF
4	105-2523-03	1	Bracket-Muffler
5	33114-016	2	Screw-HH
6	32128-37	4	Nut-HF
7	3234-11	4	Screw-HHF
8	53-9680	2	Mount-Engine
9	53-9480	2	Washer-Snubber
10	324-11	2	Screw-HH
11	3290-357	12	Nut-HHF, Whiz
12	80-6990	4	Washer-Hardened
13	42-9600	8	Washer-Lock, Spring
14	3274-106	3	Screw-HSH
15	105-2519-03	1	Clamp-Craddle
16	323-44	2	Screw-HH
17	105-2557-03	1	Guard-Alternator
18	105-2556-03	1	Brace-Alternator, Upper
19	105-4276	1	Guide-Belt, PTO
20	105-0052-03	1	Bracket-Guide, Belt
21	81-1280	4	Screw-HHF
22	98-9584	1	Pulley-Fan
23	98-9346	1	Sender-Temperature
24	107-9096	1	Fan-Cooling

Ref	Part No.	Qty.	Description
25	98-9611	1	Gasket
27	3257-30	1	Key-Woodruff
29	3272-16	1	Pin-Cotter
30	38-7820	1	Bearing-Ball
31	104-3408-03	1	Hub-Fan
32	32136-3	1	Nut-SHH
33	3234-33	4	Screw-HHF
36	104-3463-03	2	Front Mount ASM
37	104-3464-03	1	Mount-Frame, Front (LH)
38	43-0090	8	Screw-HH
39	324-6	2	Screw-HH
40	75-9900-01	1	Support-Engine, Front
41	105-0057	2	Stud-Retainer, Belt
42	104-3406-03	1	Pulley-Fan
43	3257-33	1	Key-Woodruff
44	302-10	1	Fitting-Grease
45	3241-5	2	Screw-Set
46	27-1960	1	Hub-Engine
47	32120-69	1	Ring-Snap
48	32120-22	1	Ring-Snap, Internal
49	43-3720	1	Collar-Bearing
50	251-252	1	Bearing
51	3234-18	1	Screw-HHF
52	3290-224	1	Lockwasher-Pyramid

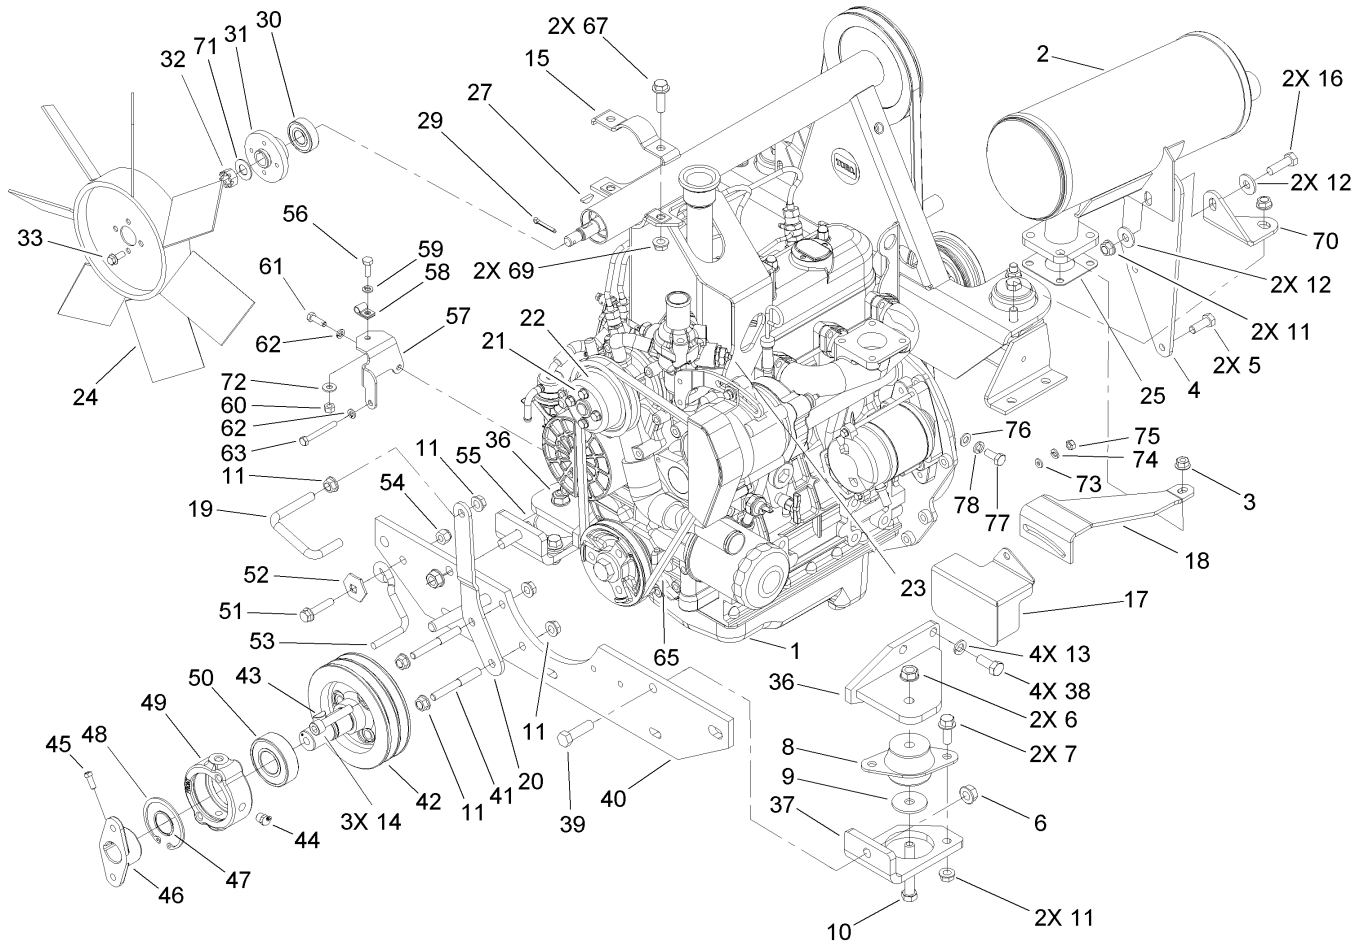 

Engine and Mounting Component Assembly (continued)


Ref	Part No.	Qty.	Description				
53	63-1400	1	Rod-Belt				
54	3296-39	1	Nut-Lock, NI				
55	104-3465-03	1	Mount-Frame, Front (RH)				
56	321-4	1	Screw-HH				
57	104-3421-03	1	Bracket-Throttle				
58	2412-31	1	Clamp-Boden				
59	3253-3	1	Washer-Lock				
60	3217-5	1	Nut-Hex				
61	33113-050	1	Screw-HH				
62	48-8020	2	Washer-Spring				
63	48-7630	1	Screw				
65	98-9676	1	V-Belt				
67	3234-24	2	Screw-HHF				
69	3296-39	2	Nut-Lock, NI				
70	105-2598-03	1	Bracket-Muffler				
71	18-9810	1	Washer-Thrust				
72	3256-22	1	Washer-Flat				
73	3256-78	1	Washer-Flat				
74	43-5930	1	Washer-Spring				
75	48-7890	1	Nut				
76	33094-00	1	Washer-Plain				
77	92-1374	1	Screw-HH				
78	3253-4	1	Washer-Lock				

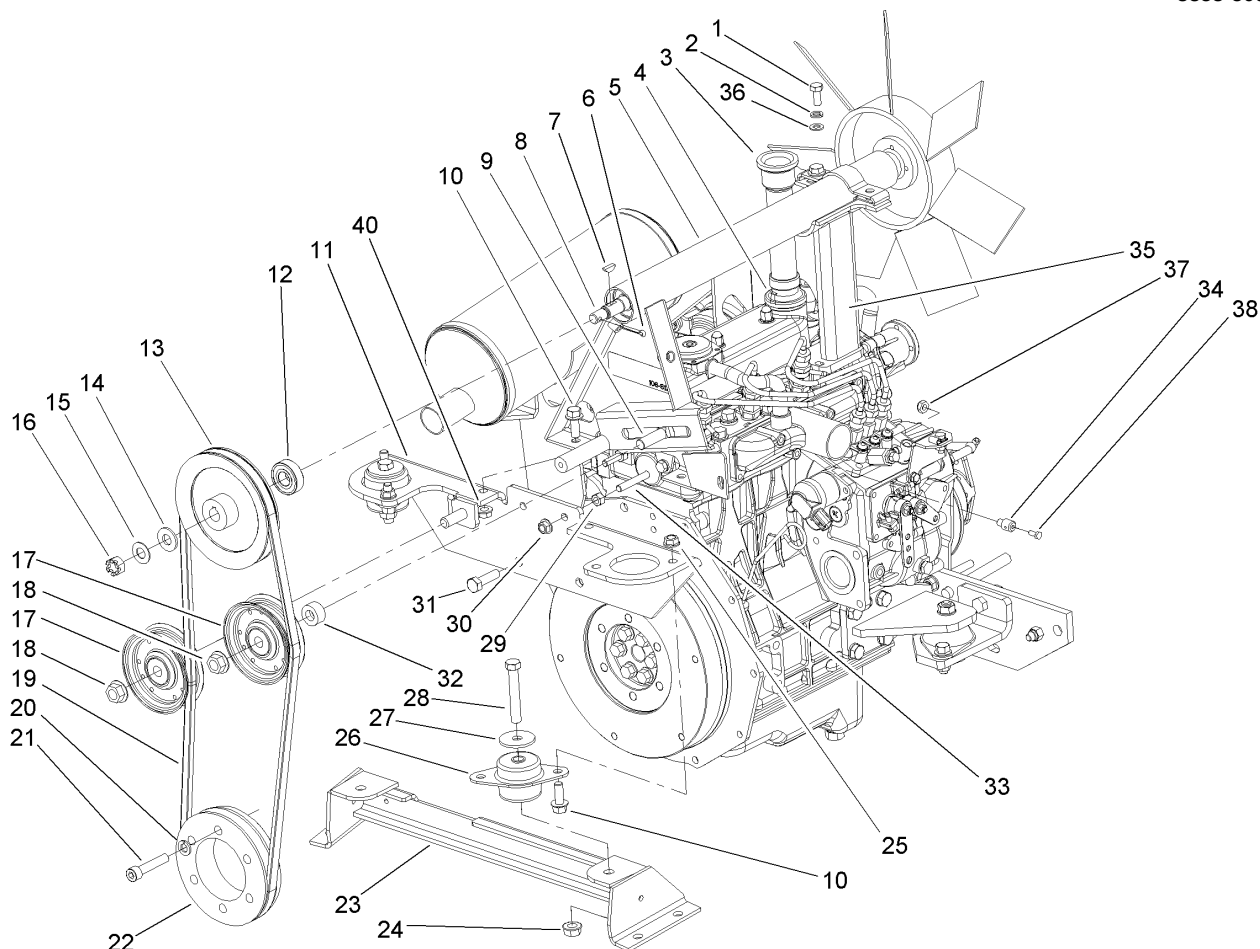 

Engine Pulley System Assembly


Ref	Part No.	Qty.	Description
1	93-7773	2	Screw-HHF
2	3253-4	2	Washer-Lock
3	105-0087	1	Flange-Filler, Oil
4	98-7430	1	O-Ring
5	106-4399	1	Fan-Support ASM
6	3272-16	1	Pin-Cotter
7	3257-30	1	Key-Woodruff
8	43-3690	1	Shaft-Fan
9	3233-14	1	Screw-CARR
10	3234-11	6	Screw-HHF
11	105-2501-03	1	Engine Mount ASM
12	38-7820	1	Bearing-Ball
13	105-2524	1	Pulley
14	3-6803	2	Washer-Adjusting
15	29-8910	1	Washer
16	32136-3	1	Nut-SHH
17	105-3699	2	Pulley-Idler, Flat
18	32128-23	2	Nut-HF
19	105-3693	1	Belt-Fan
20	42-9600	6	Washer-Lock, Spring
21	3274-106	6	Screw-HSH
22	104-3407-03	1	Pulley-Flywheel
23	105-2520-03	1	Engine Mount ASM
24	32128-37	2	Nut-HF

Ref	Part No.	Qty.	Description
25	3290-357	4	Nut-HHF, Whiz
26	53-9680	2	Mount-Engine
27	53-9480	2	Washer-Snubber
28	324-11	2	Screw-HH
29	33014-00	2	Nut-Hex
30	33004-00	2	Nut-HF
31	56-2140	2	Bolt
32	105-0058	1	Spacer-Idler, Fan
33	105-2502	2	Stud
34	105-4263	1	Swivel-Cable, Throttle
35	105-2507-03	1	Cradle-Support, Tube
36	68-0020	2	Spacer-Pivot, Idler
37	3296-20	1	Nut-Lock, NI
38	25-8640	1	Screw-HH,
40	32128-21	2	Nut-HF

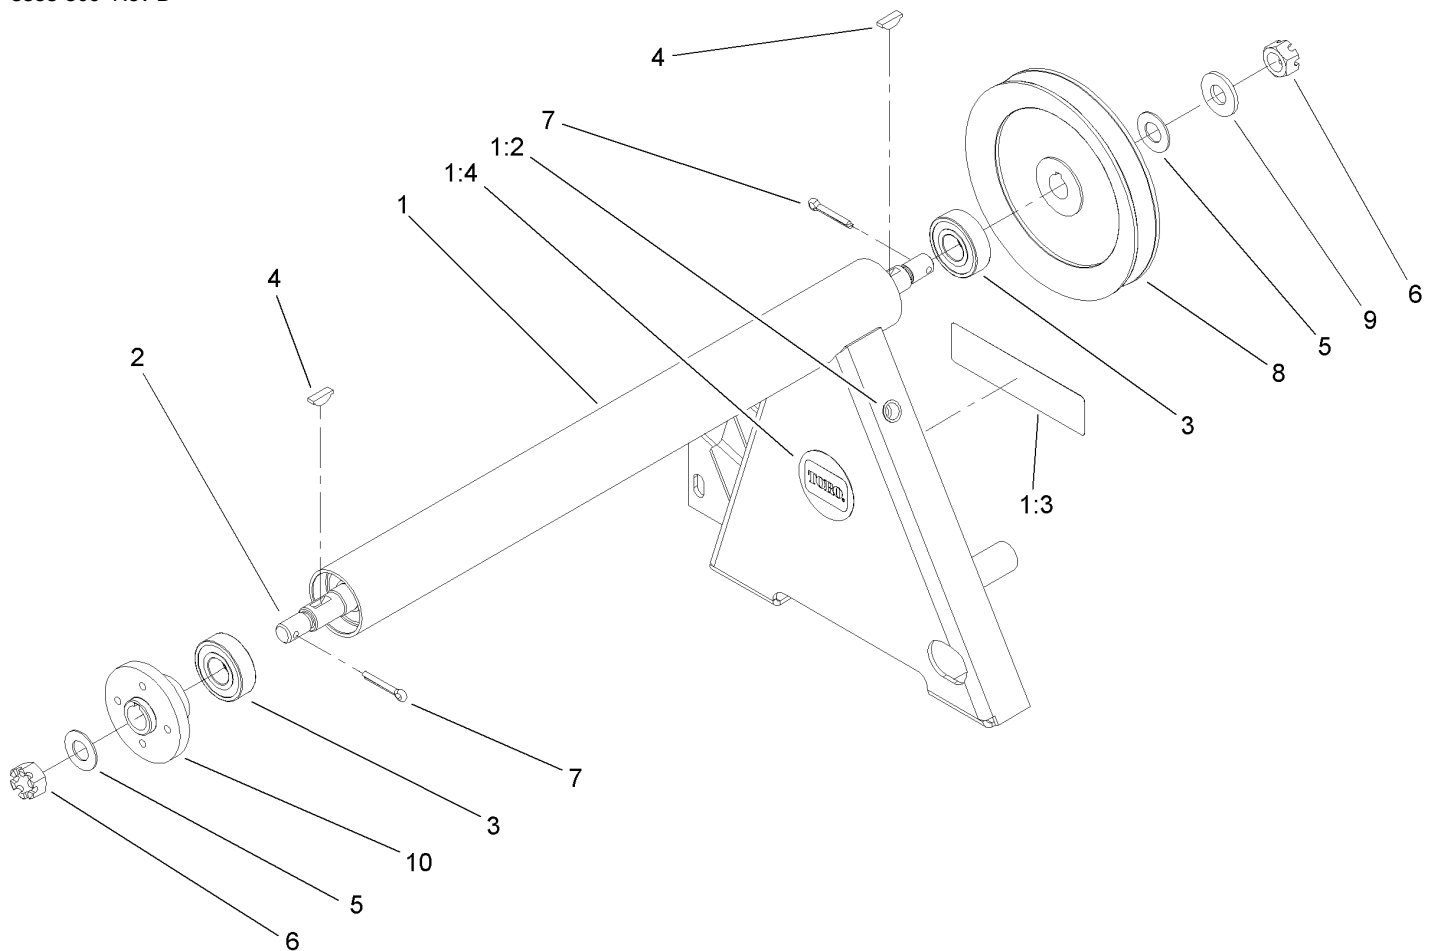 

Fan Support Assembly No. 106-4399


Ref	Part No.	Qty.	Description				
1	105-2592	1	Tube Support ASM				
1:2	3290-472	2	Insert-Threaded				
1:3	106-8120	1	Decal-Danger, Ce				
1:4	68-5370	1	Decal				
2	43-3690	1	Shaft-Fan				
3	38-7820	2	Bearing-Ball				
4	3257-30	2	Key-Woodruff				
5	18-9810	2	Washer-Thrust				
6	32136-3	2	Nut-SHH				
7	3272-16	2	Pin-Cotter				
8	105-2524	1	Pulley				
9	29-8910	1	Washer				
10	104-3408-03	1	Hub-Fan				

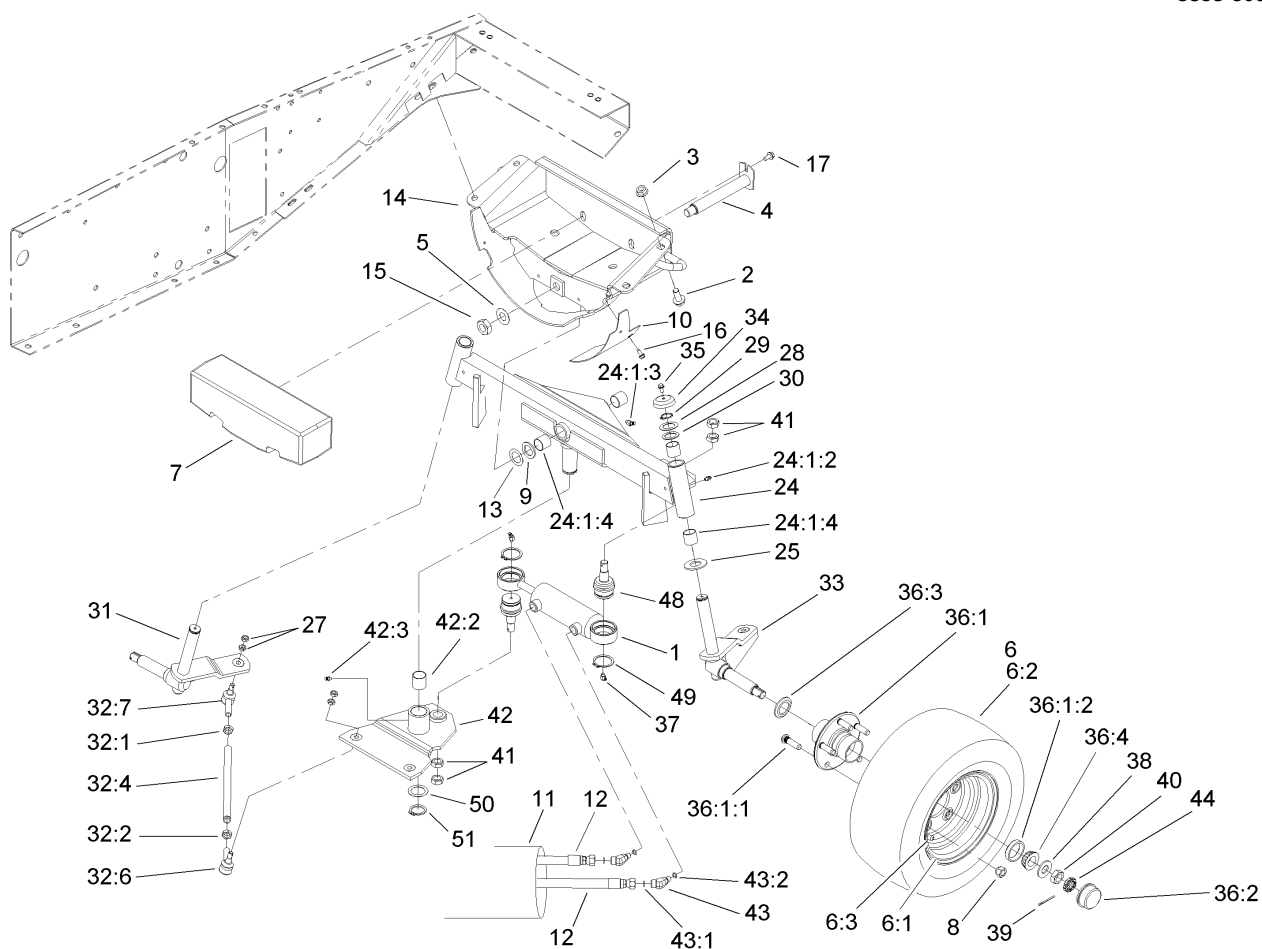 

Rear Axle Assembly


Ref	Part No.	Qty.	Description
1	92-7828	1	Cylinder-HYD
2	3234-32	6	Screw-HHF
3	32128-23	4	Nut-HF
4	92-7807-01	1	Rear Axle Pin ASM
5	71-4540	1	Washer-Thrust
26		2	Wheel And Tire ASM
6:1	217-106	1	Wheel-8 Inch
6:2	231-105	1	Tire-Ribbed
6:3	232-31	1	Stem-Valve
7	98-3869-01	1	Weight-Rear
8	242-50	10	Nut-Lug
9	92-7845	1	Spacer-Hardened
10	99-2413-01	1	Cover-Guard, Flywheel
11	56-7980	1	Sleeve-Protective
12	68-9710	2	Hose-Steering, Rear
13	56-2460	1	Washer-Flat
14	92-7803-01	1	Axle Support ASM
15	32146-20	1	Nut-Jam
16	32144-10	2	Screw-HWH
17	32144-14	1	Screw-HWHTF
24	106-8050-03	1	Rear Axle ASM
24:1:2	302-5	2	Fitting-Grease
24:1:3	302-11	1	Fitting-Lube, 45 DEG
24:1:4	67-1750	6	Bushing

Ref	Part No.	Qty.	Description
25	256-121	2	Washer-Thrust
27	3220-3	8	Nut-HJ
28	5-1226	4	Washer
29	32151-36	2	Ring-Retaining
30	10-8110	2	Washer-Thrust
31	93-3199-03	1	RH Spindle ASM
32		2	Tie Rod-Steering ASM
32:1	3220-12	1	Nut-HJ (LH Thread)
32:2	3220-5-01	1	Nut-HJ
32:4	21-2000	1	Tie Rod-Steering
32:6	21-0151	1	LH Ball Joint ASM
32:7	21-0141-03	1	RH Ball Joint ASM
33	99-1292-03	1	LH Spindle ASM
34	66-2990	2	Cap-Spindle
35	3234-13	2	Screw-HHF
36		2	Hub
36:1	21-2820	1	Hub
36:1:1	10-6830	5	Stud-Type, Drive
36:1:2	254-72	2	Bearing-Cup, Tapered
36:2	241-119	1	Cap-Dust
36:3	253-129	1	Seal
36:4	254-94	2	Bearing-Cone, Tapered
37	302-11	2	Fitting-Lube, 45 DEG
38	93-0309	2	Washer-Tab

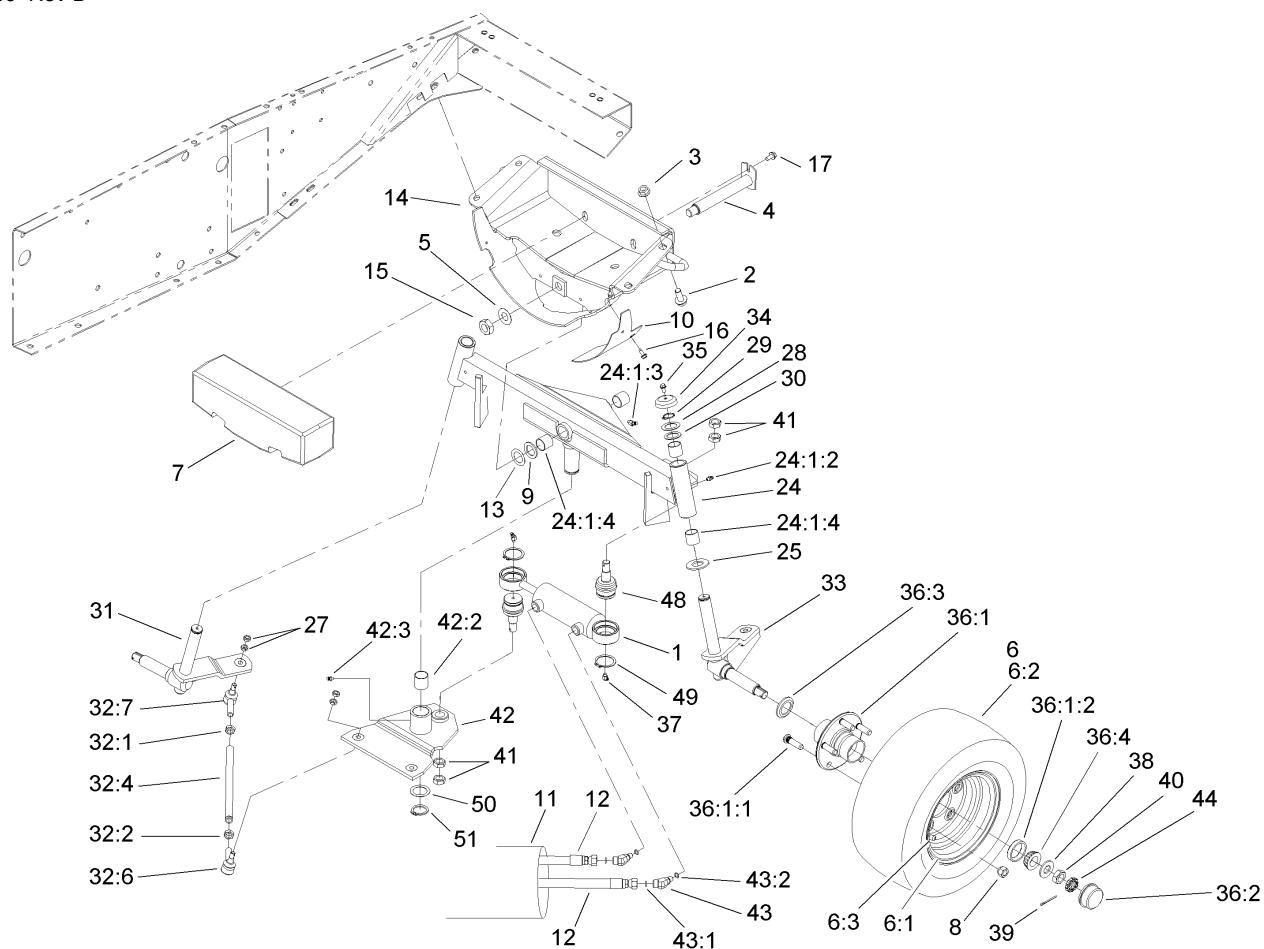 


Rear Axle Assembly (continued)

Ref	Part No.	Qty.	Description
39	3272-13	2	Pin-Cotter
40	3220-7	2	Nut-Jam
41	3220-6	4	Nut-Jam
42	106-8052	1	Steering Pivot ASM
42:2	76-2970	2	Bushing-Straight
42:3	302-5	1	Fitting-Grease
43	340-54	2	Elbow-45 DEG
43:1	237-22	1	O-Ring
43:2	237-78	1	O-Ring
44	93-0307	2	Nut-Lock, Retainer
48	106-6774	2	Joint-Ball
49	32151-104	2	Ring-Retaining, External
50	76-2980	1	Washer-Thrust
51	32151-77	1	Ring-Retaining, EXT

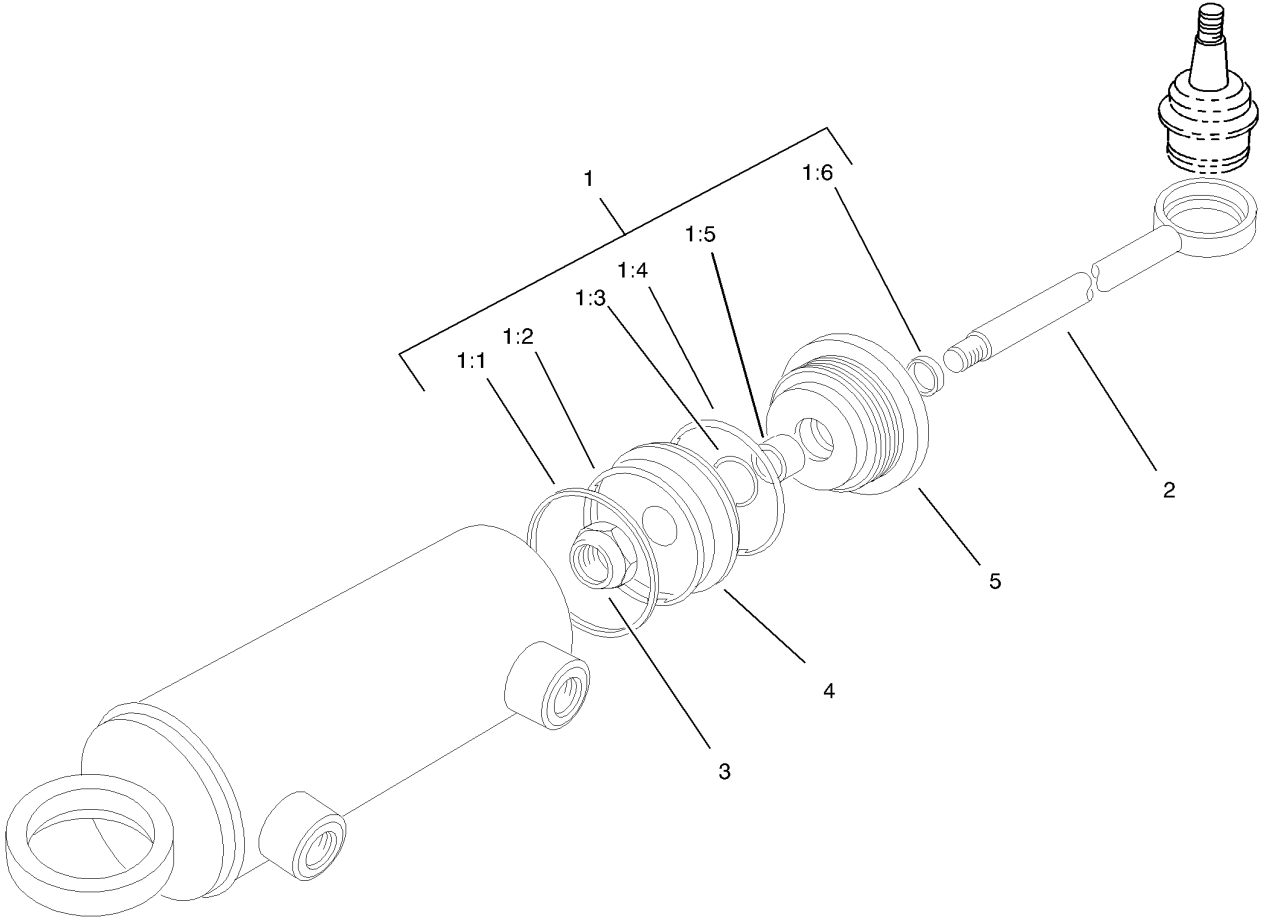 


Hydraulic Cylinder Assembly No. 92-7828

Ref	Part No.	Qty.	Description				
1	92-6593	1	Seal Kit				
1:1		1	Seal ASM				
1:2		1	Seal-Dust				
1:3		1	Seal-Dust				
1:4		1	Seal-Dust				
1:5		1	U-Cup				
1:6		1	Wiper				
2		1	Piston Rod ASM				
3		1	Locknut				
4		1	Piston				
5		1	Gland				

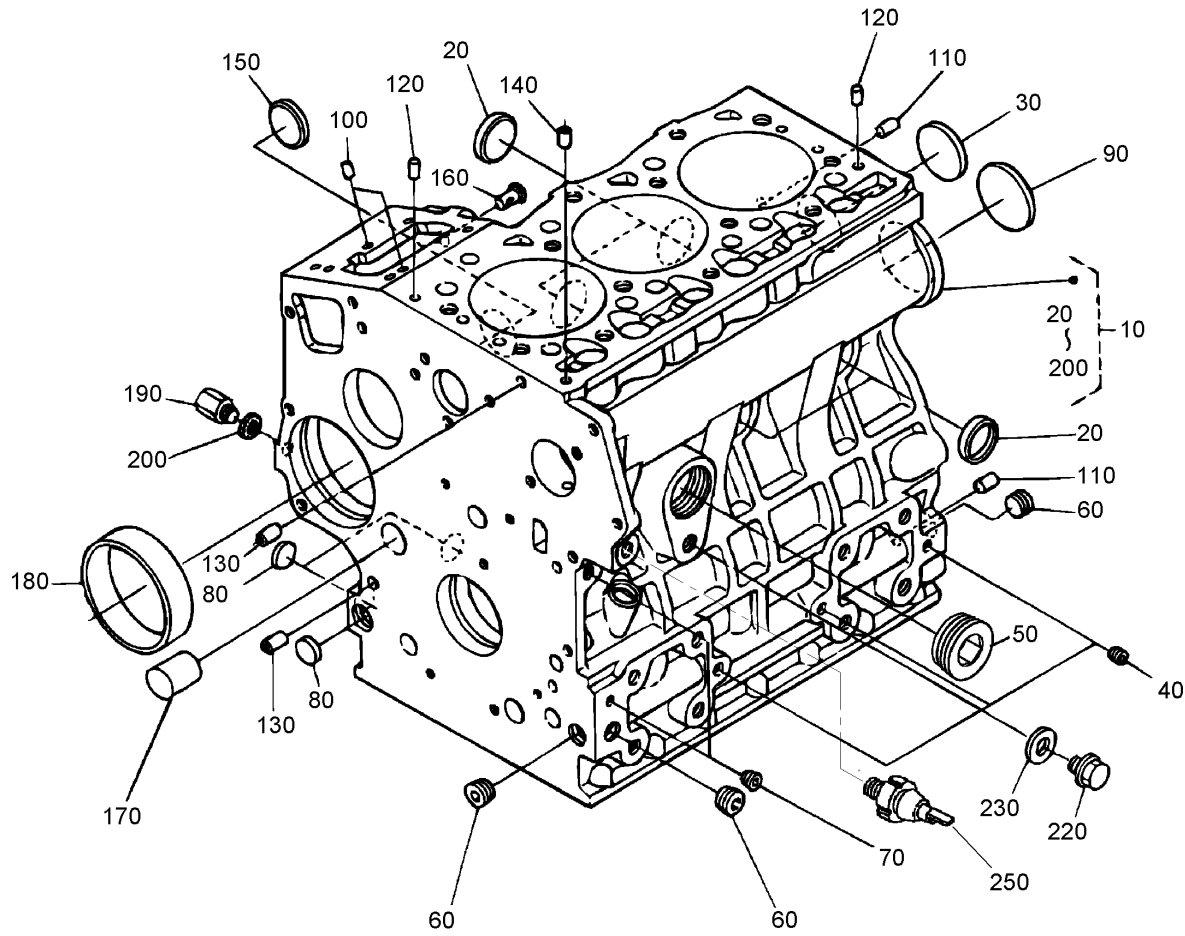 


Crankcase Assembly

Ref	Part No.	Qty.	Description				
10	108-6571	1	Crankcase ASM				
20	98-9398	4	Cap-Sealing				
30	98-7539	1	Cap-Sealing				
40	98-7540	3	Plug				
50	105-3779	1	Plug				
60	98-9597	3	Plug				
70	98-7487	2	Plug				
80	98-7489	3	Plug				
90	98-9668	1	Plug-Expansion				
100	98-9375	2	Pin-Straight				
110	98-9377	2	Pin-Straight				
120	105-3795	2	Pin-Straight				
130	98-9387	2	Pin-Pipe				
140	98-9539	1	Pin-Pipe				
150	98-9599	1	Plug				
160	98-9630	1	Pin-Spring, Start				
170	98-9675	1	Plug				
180	98-9656	1	Bushing-Governor, Gear				
190	98-7507	1	Plug				
200	98-7428	1	Gasket				
220	99-3447	1	Plug				
230	106-7056	1	Gasket				
250	98-9416	1	Switch-Oil				

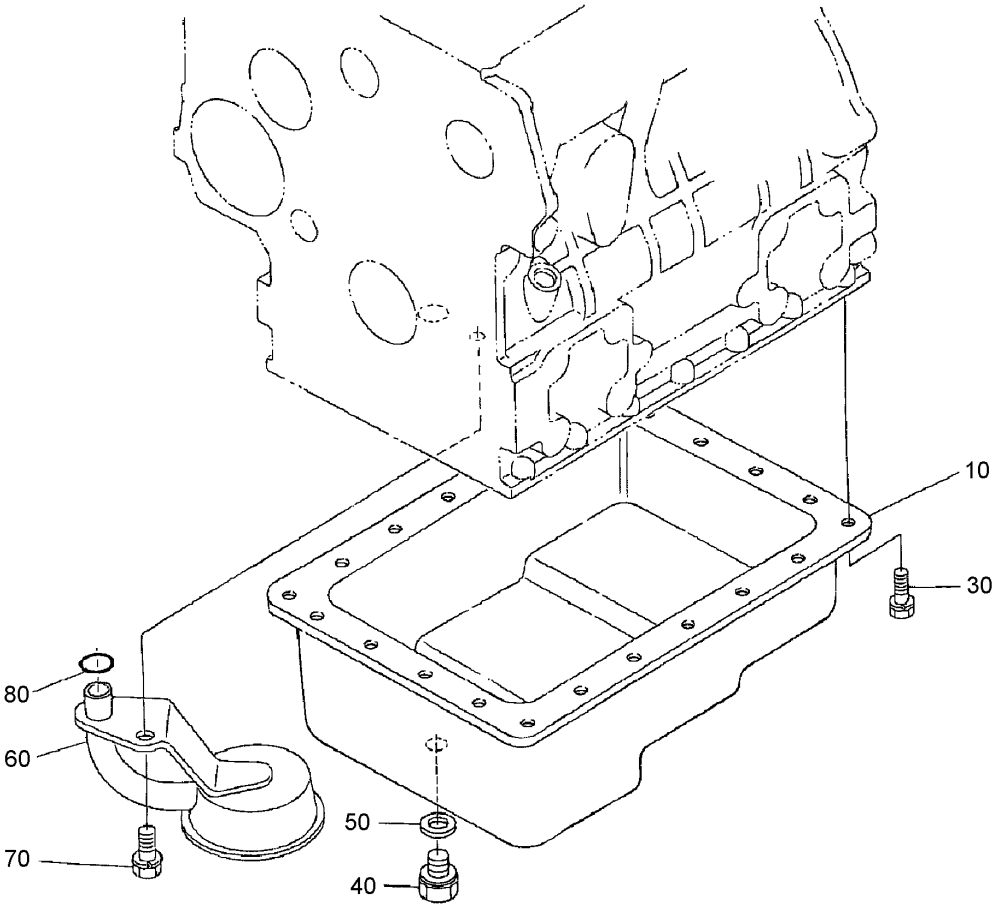 


Oil Pan Assembly

Ref	Part No.	Qty.	Description				
10	104-3495	1	Pan-Oil				
30	107-9065	22	Bolt				
40	108-6572	1	Plug-Drain				
50	98-7524	1	Gasket				
60	104-3496	1	Filter-Pickup, Oil				
70	98-7526	1	Bolt				
80	105-3776	1	O-Ring				

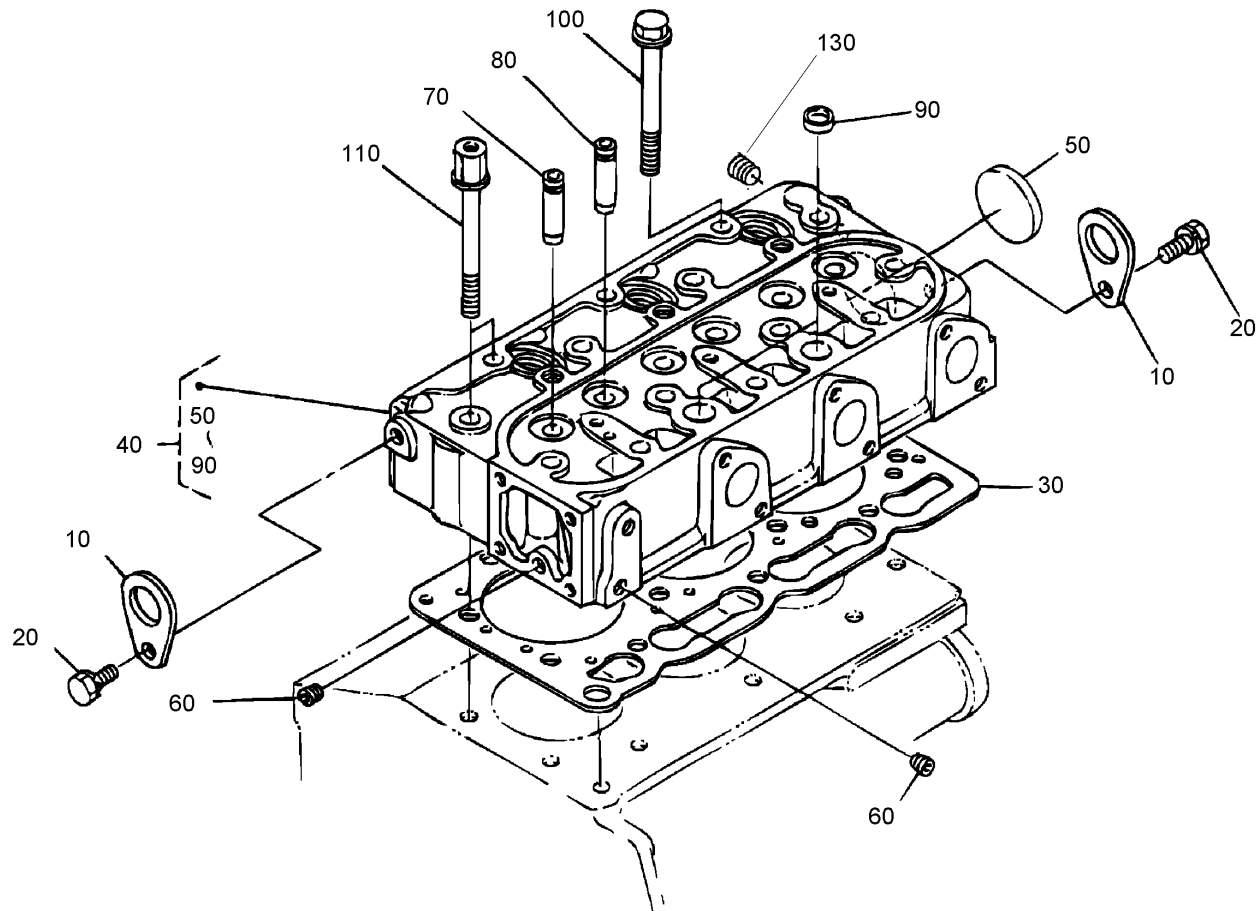 

Cylinder Head Assembly


Ref	Part No.	Qty.	Description				
10	98-7531	2	Hook-Engine				
20	100-9195	2	Bolt				
30	108-6573	1	Gasket-Head, Cylinder				
40	108-6574	1	*obs* Cylinder Head ASM				
50	98-9395	1	Cap-Sealing				
60	98-7540	2	Plug				
70	107-9066	3	Guide-Valve, Inlet				
80	107-9067	3	Guide-Valve, Exhaust				
90	98-9389	2	Cap-Sealing				
100	98-9479	1	Bolt-Head, Cylinder				
110	98-9647	2	Bolt-Head, Cylinder				
130	98-9444	1	Plug				

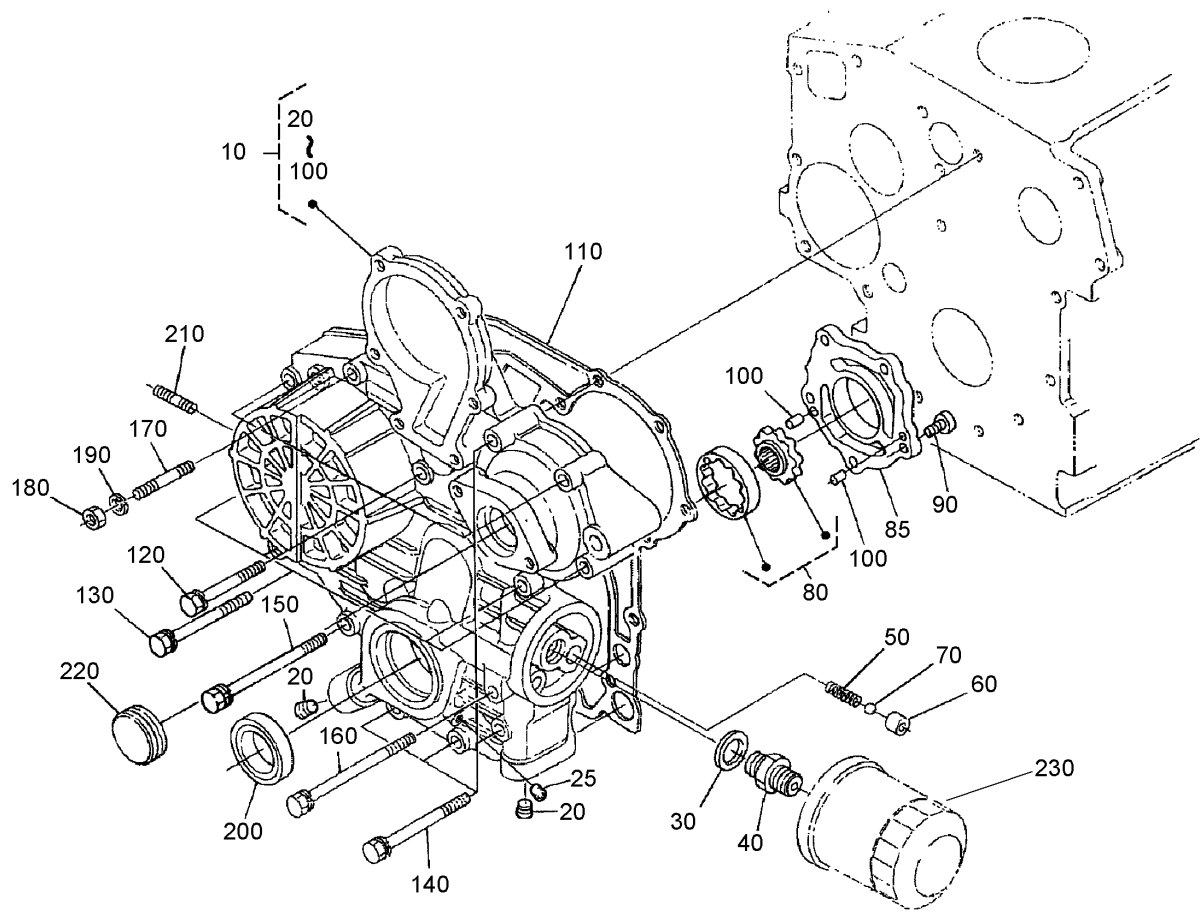 

Gear Case Assembly


Ref	Part No.	Qty.	Description
10	107-9068	1	Gear Case ASM
20	98-9598	2	Plug
25	98-7487	1	Plug
30	98-7562	1	Washer-Plain
40	98-9388	1	Joint-Pipe
50	98-9544	1	Spring
60	98-9543	1	Seat-Valve
70	98-9380	1	Ball
80	98-9540	1	Oil Pump Rotor ASM
85	107-9069	1	Cover-Pump, Oil
90	107-9071	5	Screw
100	107-9072	2	Pin-Straight
110	98-9633	1	Gasket-Case, Gear
120	107-9073	3	Bolt
130	105-3797	4	Bolt
140	98-9356	4	Bolt
150	107-9074	1	Bolt
160	98-9586	1	Bolt
170	105-3709	1	Stud
180	98-7572	1	Nut
190	98-7699	1	Washer-Spring
200	98-9482	1	Seal-Oil
210	105-3710	2	Stud
220	98-9641	1	Cover-Case, Gear

Ref	Part No.	Qty.	Description
230	104-5167	1	Filter-Oil

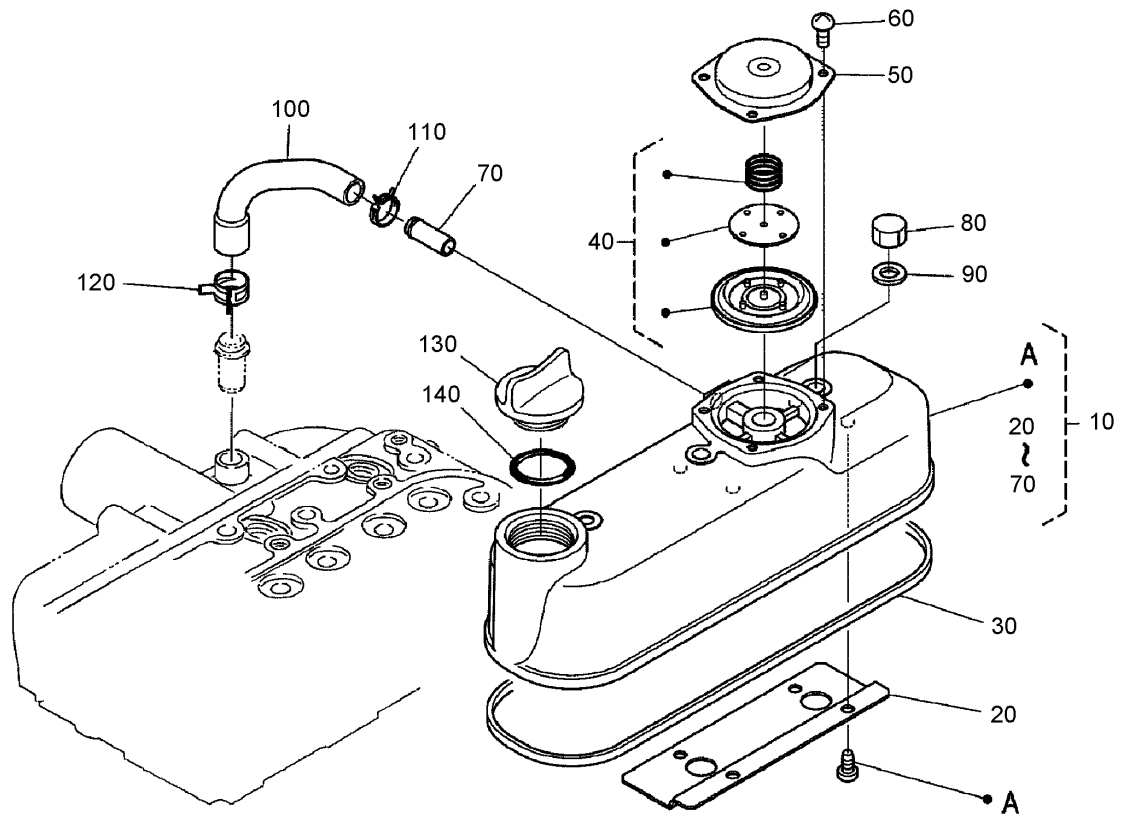 


Head Cover Assembly

Ref	Part No.	Qty.	Description				
10	108-6575	1	Cylinder Head Cover ASM				
20	108-2857	1	Shield-Breather				
30	98-9615	1	Gasket-Cover, Head				
40	108-2861	1	*obs* Breather Valve ASM				
50	108-2862	1	Cover-Breather				
60	108-2863	4	Screw-PPH				
70	98-7766	1	Pipe-Return, Water				
80	98-9455	3	Nut-Cap				
90	98-9454	3	Gasket				
100	108-2858	1	Tube-Breather				
110	108-2859	1	Clamp-Hose				
120	108-2860	1	Clamp-Hose				
130	107-9075	1	Plug-Filler, Oil				
140	99-3446	1	O-Ring				

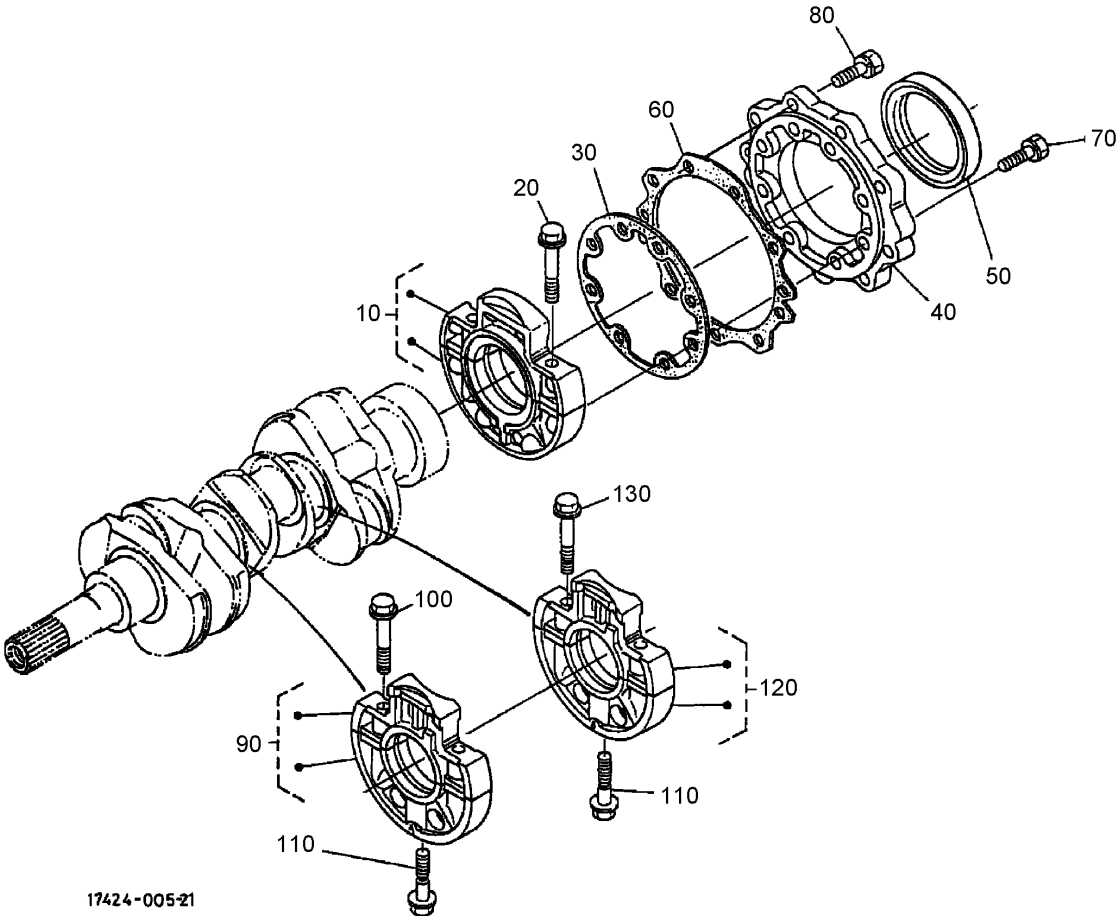 


Main Bearing Case Assembly

Ref	Part No.	Qty.	Description				
10	98-9480	1	Main Bearing Case ASM				
20	98-9484	6	Bolt-Case, Bearing				
30	98-9634	1	Gasket-Case, Bearing				
40	98-9487	1	Cover-Case, Bearing				
50	98-9483	1	Seal-Oil				
60	98-9635	1	Gasket-Cover, Bearing Case				
70	98-9352	8	Bolt				
80	98-7568	9	Bolt				
90	98-9606	1	Main Bearing Case ASM				
100	98-9484	2	Bolt-Case, Bearing				
110	98-9485	2	Bolt-Case, Bearing				
120	98-9607	1	Main Bearing Case ASM				
130	98-9484	2	Bolt-Case, Bearing				

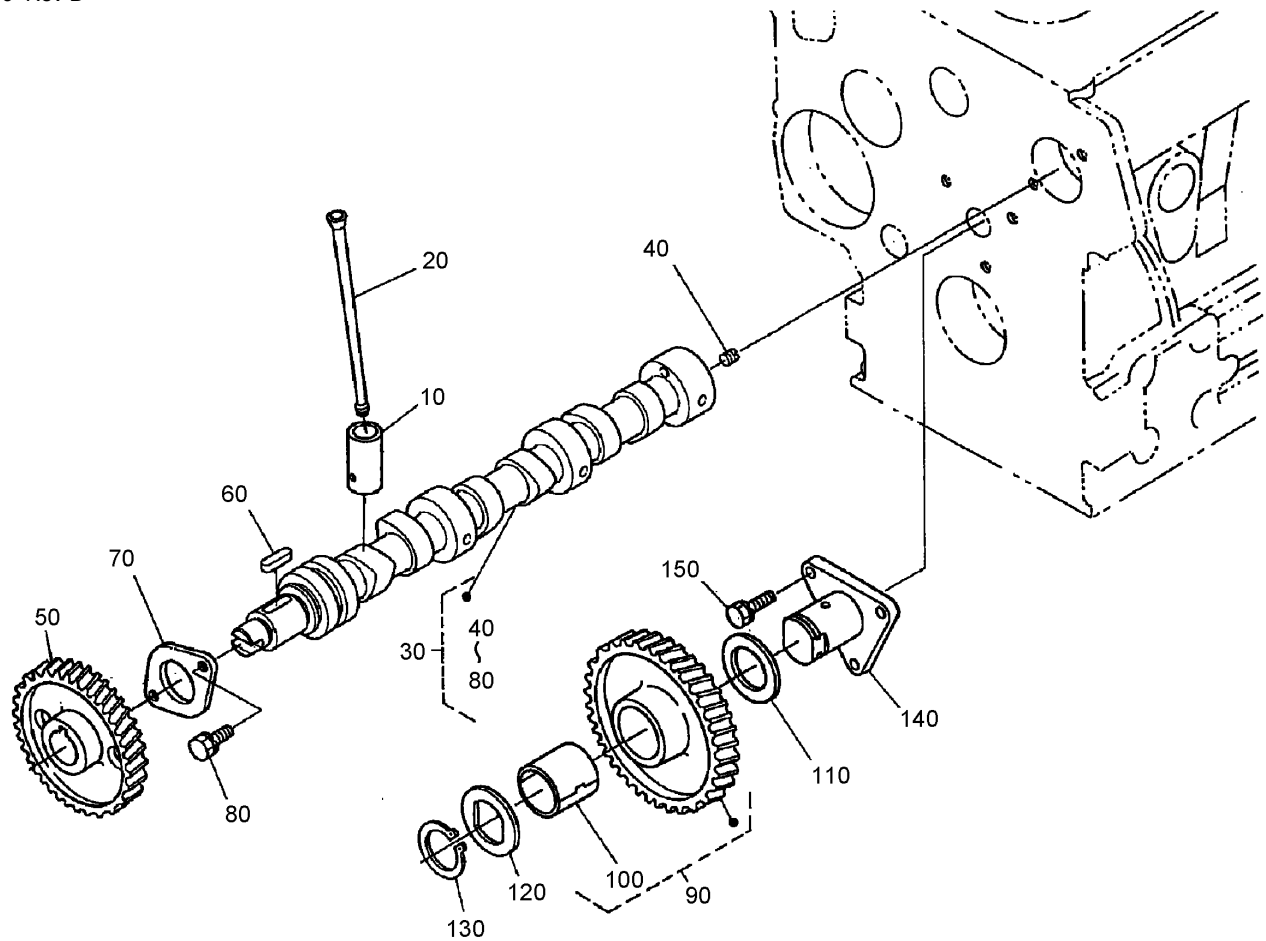 

Camshaft and Idle Gear Shaft Assembly


Ref	Part No.	Qty.	Description				
10	98-9616	6	Tappet				
20	98-9509	6	Rod-Push				
30	108-6576	1	Camshaft ASM				
40	98-7449	1	Screw-Set				
50	98-9512	1	Gear-Cam				
60	98-9378	1	Key-Feather				
70	98-9510	1	Stopper-Camshaft				
80	98-9351	2	Bolt				
90	98-9649	1	Idle Gear ASM				
100	98-9650	1	Bushing-Gear, Idle				
110	98-9535	1	Collar-Gear, Idle				
120	98-9536	1	Collar-Gear, Idle				
130	98-9534	1	Circlip-Gear, Idle				
140	98-9533	1	Shaft-Gear, Idle				
150	98-7692	3	Bolt				

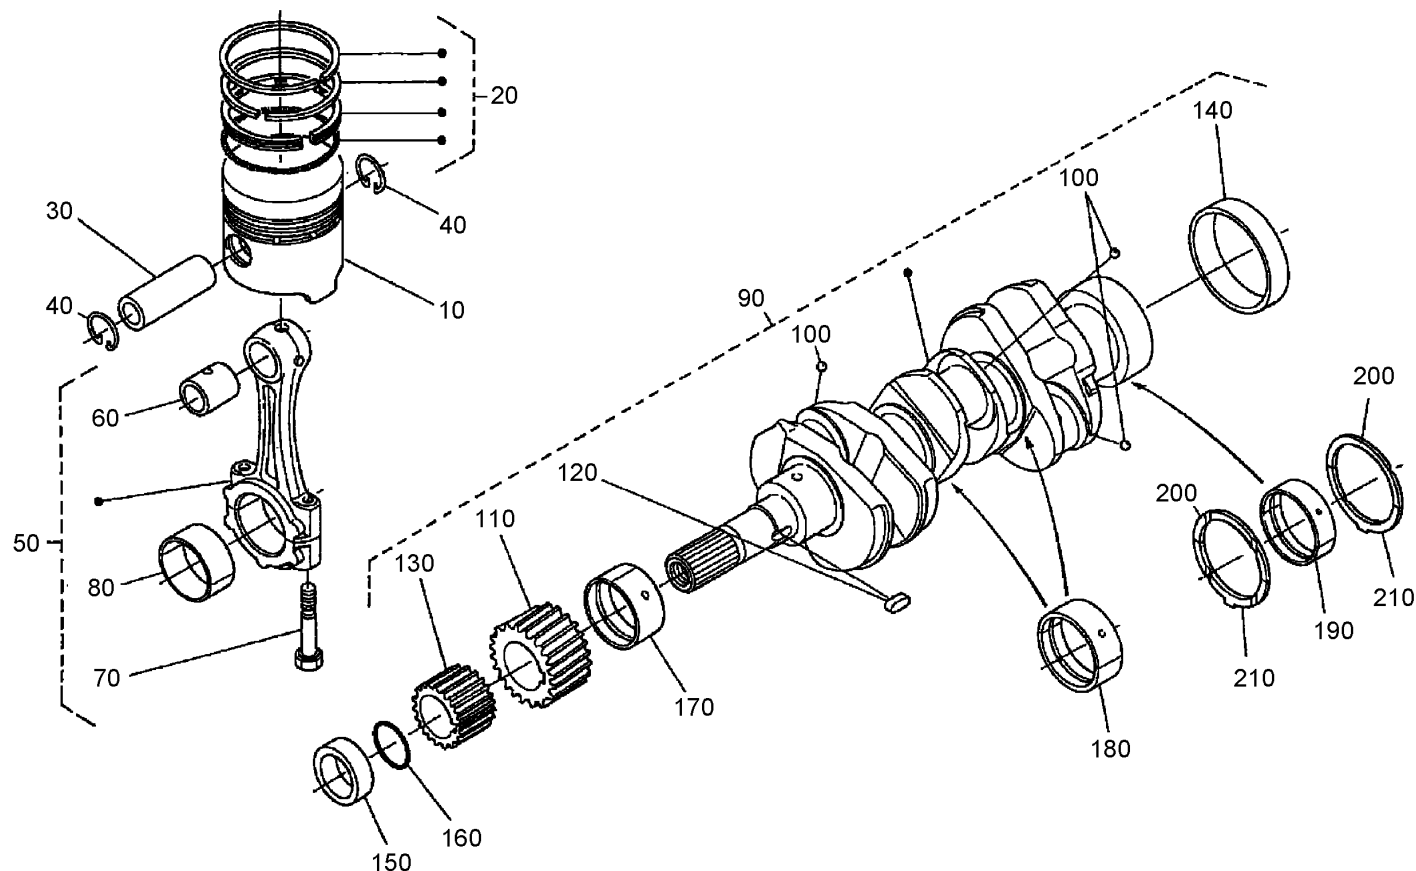 

16221-009-10

Piston and Crankshaft Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
10	98-9470	3	Piston (0.5Mm)	180	98-9530	2	Bearing-Main (0.2Mm)
10	98-9469	3	*obs* Piston (STD)	180	98-9531	2	Bearing-Main (0.4Mm)
20	98-9619	3	Piston Ring ASM (0.5Mm)	190	98-9556	1	Bearing-Main (STD)
20	98-9618	3	Piston Ring ASM (STD)	190	105-3719	1	Metal-Crankshaft (.2Mm)
30	98-9513	3	Pin-Piston	190	105-3720	1	Metal-Crankshaft (.4Mm)
40	98-9514	6	Circlip-Pin, Piston	200	98-9413	2	Bearing-Thrust (STD)
50	98-9516	3	Connecting Rod ASM	200	98-9414	2	Bearing-Thrust (0.2Mm)
60	98-9515	3	Bushing-Pin, Piston	200	98-9415	2	Bearing-Thrust (0.4Mm)
70	98-9517	6	Bolt-Rod, Connecting	210	98-9688	2	Bearing-Thrust (STD)
80	98-9520	3	Bearing-Rod (0.4Mm)	210	98-9689	2	Bearing-Thrust (0.2Mm)
80	98-9519	3	Bearing-Rod (0.2Mm)	210	98-9690	2	Bearing-Thrust (0.4Mm)
80	98-9518	3	Metal-Crankpin (STD)				
90	98-9642	1	Crankshaft ASM				
100	98-7473	3	Ball				
110	98-9532	1	Gear-Crankshaft				
120	98-9666	1	Key				
130	98-9542	1	Gear-Drive, Oil Pump				
140	98-9522	1	Sleeve-Crankshaft				
150	98-9521	1	Collar-Crankshaft				
160	105-3783	1	O-Ring				
170	98-9523	1	Metal Crankshaft (STD)				
170	98-9528	1	Bearing-Main (0.2Mm)				
170	98-9529	1	Bearing-Main (0.4Mm)				
180	98-9524	2	Metal-Crankshaft (STD Set)				

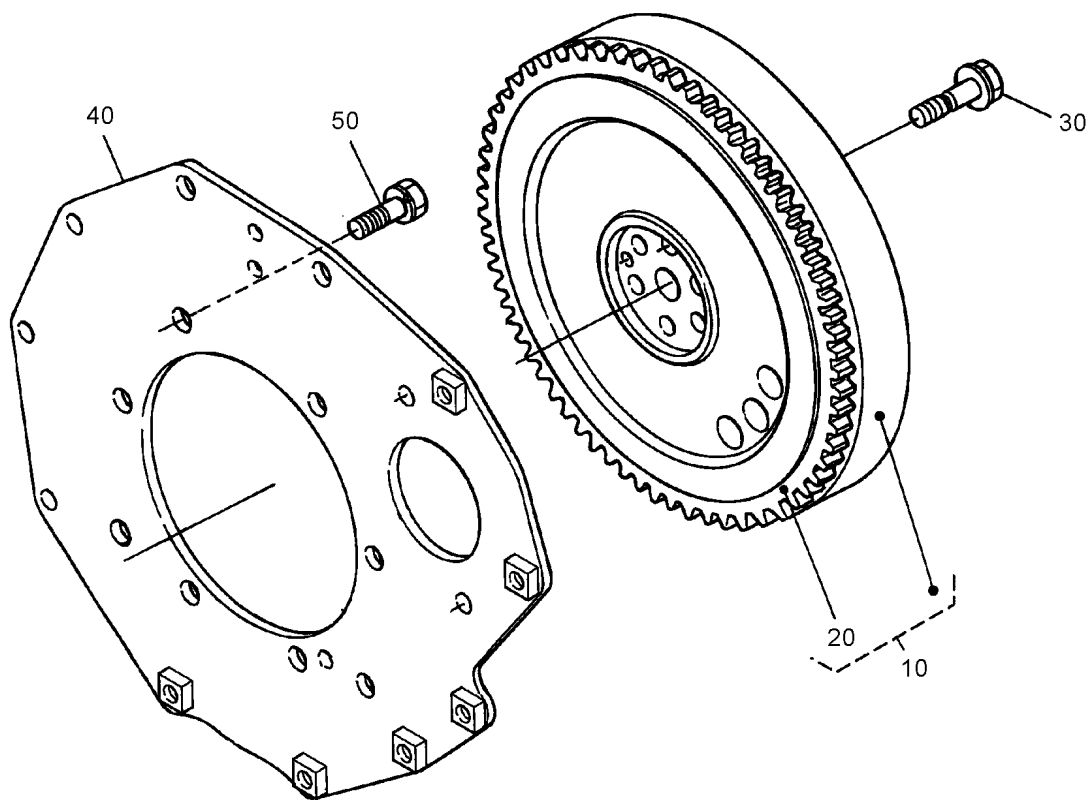 

16615-009-12


Flywheel Assembly

Ref	Part No.	Qty.	Description				
10	105-3784	1	Flywheel ASM				
20	105-3722	1	Gear-Ring				
30	98-9537	6	Bolt-Flywheel				
40	98-9486	1	Plate-End, Rear				
50	98-9392	8	Bolt				

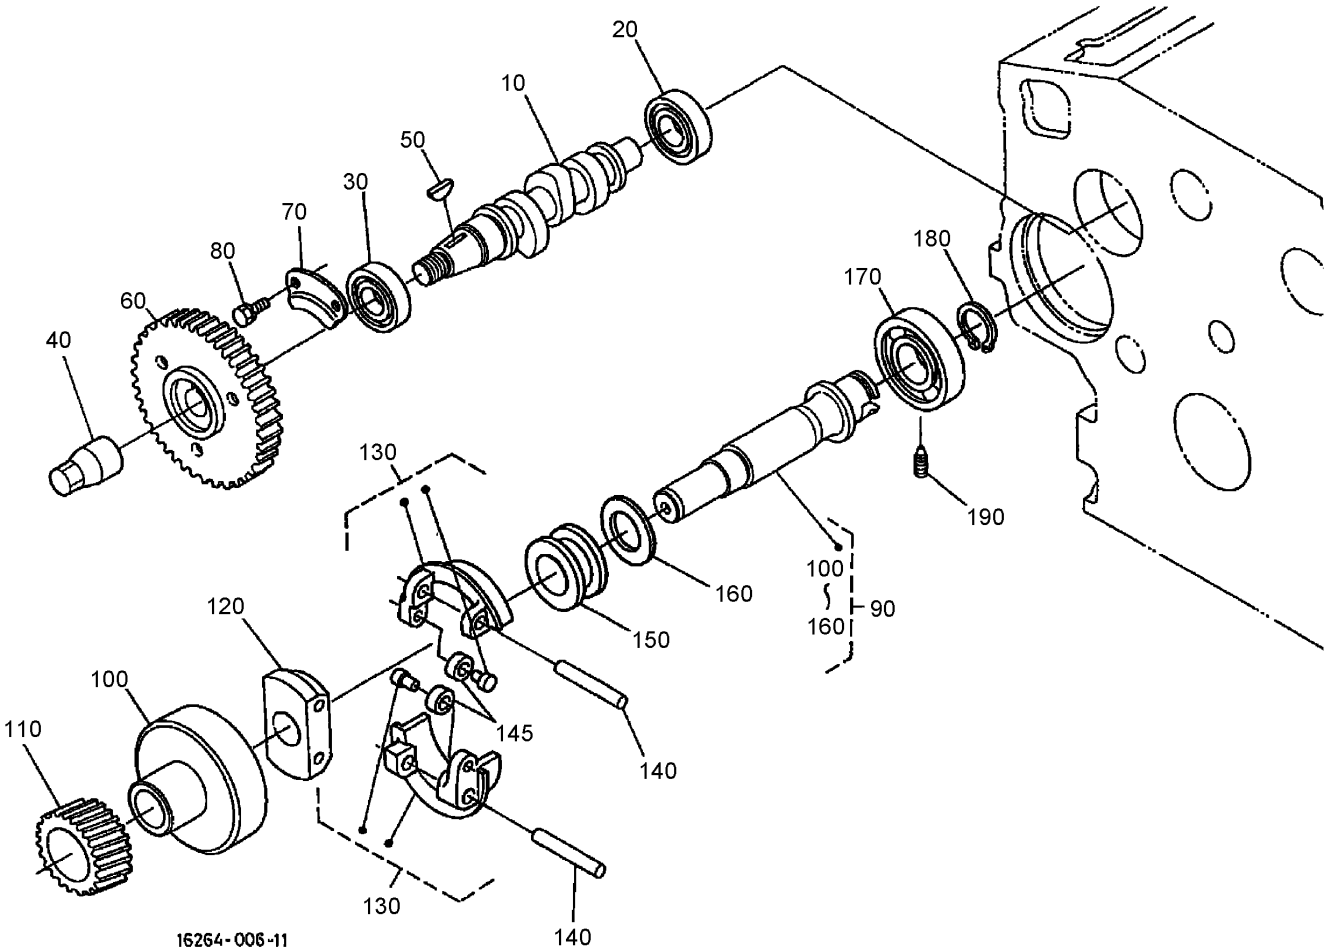 


Fuel Camshaft and Governor Shaft Assembly

Ref	Part No.	Qty.	Description				
10	98-9459	1	Camshaft-Fuel				
20	107-9077	1	Bearing-Ball				
30	107-9078	1	Bearing-Ball				
40	98-9590	1	Nut-Cap				
50	98-9595	1	Key-Woodruff				
60	98-9669	1	Gear-Pump, Injection				
70	98-9511	1	Stopper-Fuel, Camshaft				
80	98-9350	2	Bolt				
90	98-9644	1	Governor Shaft ASM				
100	98-9562	1	Holder-Gear, Governor				
110	98-9673	1	Gear-Governor				
120	98-9561	1	Holder-Weight, Governor				
130	98-9559	2	Governor Weight ASM				
140	98-9560	2	Shaft-Weight, Governor				
145	98-9692	2	Roller				
150	98-9563	1	Sleeve-Governor				
160	98-9564	1	Washer-Thrust				
170	107-9079	1	Bearing-Ball				
180	98-9657	1	Circlip-Shaft, Governor				
190	98-9565	1	Screw-Set				

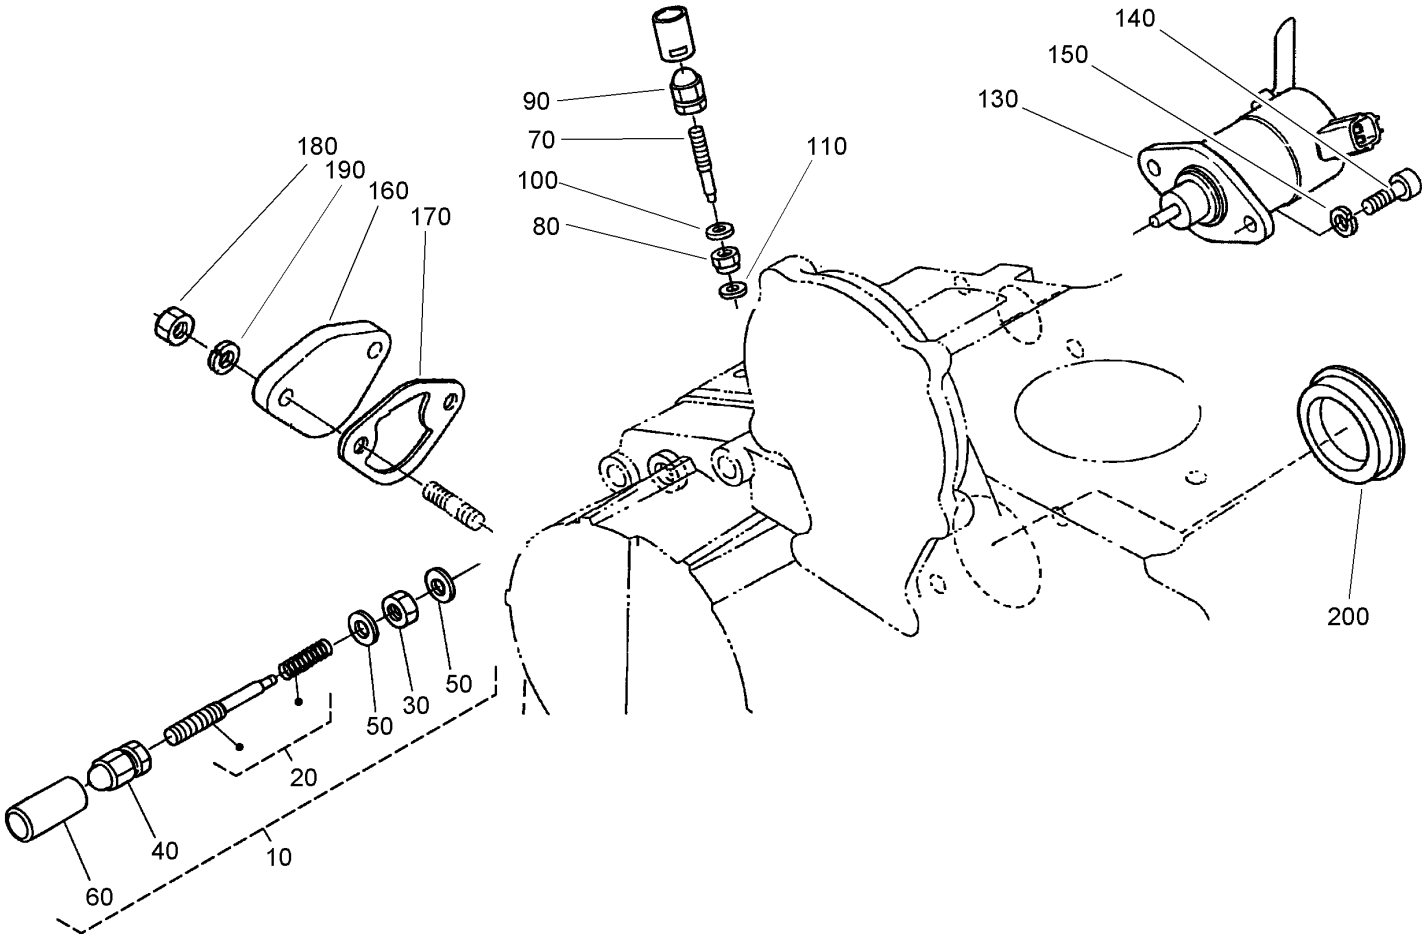 


Idle Apparatus Assembly

Ref	Part No.	Qty.	Description				
10	98-9678	1	Idle Apparatus ASM				
20	98-9679	1	Adjusting Bolt ASM				
30	98-9439	1	Nut				
40	99-8387	1	Nut-Cap				
50	98-7654	2	Gasket				
60	98-7656	1	Cap				
70	98-9557	1	Bolt-Adjusting				
80	99-3512	1	Nut				
90	99-8387	1	Nut-Cap				
100	98-7654	1	Gasket				
110	107-9081	1	Gasket				
130	104-5155	1	Solenoid-Stop				
140	105-3799	2	Bolt-HSH				
150	98-7699	2	Washer-Spring				
160	99-3514	1	Cover				
170	98-9636	1	Gasket-Pump, Fuel				
180	98-7572	2	Nut				
190	98-7699	2	Washer-Spring				
200	98-9640	1	Cover-Pump				

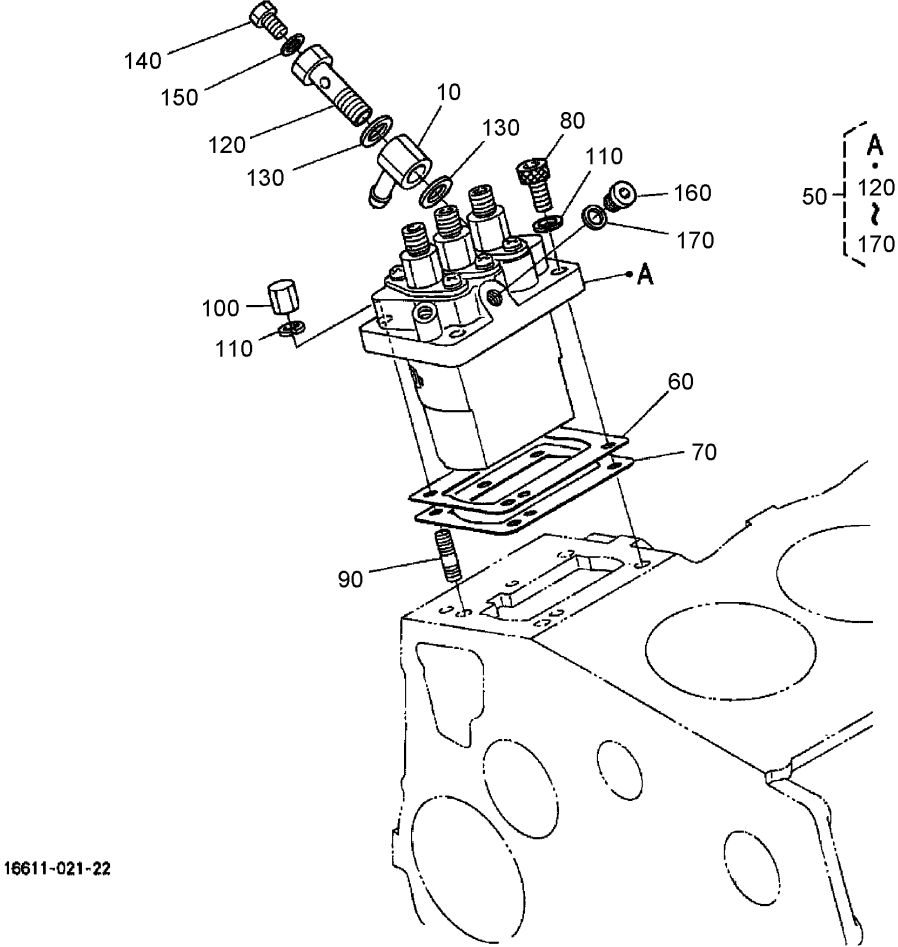 

Injection Pump Assembly


Ref	Part No.	Qty.	Description				
10	98-9596	1	Joint-Eye				
50	98-9643	1	Injection Pump ASM				
60	98-9457	1	Shim-Injection (0.25Mm)				
60	98-9456	1	Shim-Injection (0.20Mm)				
70	98-9458	1	Shim-Injection (0.30Mm)				
80	98-9361	2	Bolt-HSH				
90	98-9438	2	Stud				
100	98-9440	2	Nut-Cap				
110	98-7699	4	Washer-Spring				
120	98-9464	1	Bolt-Joint				
130	98-9445	2	Gasket				
140	98-9430	1	Screw				
150	98-9446	1	Gasket				
160	98-9466	1	Plug				
170	98-9451	1	Gasket				

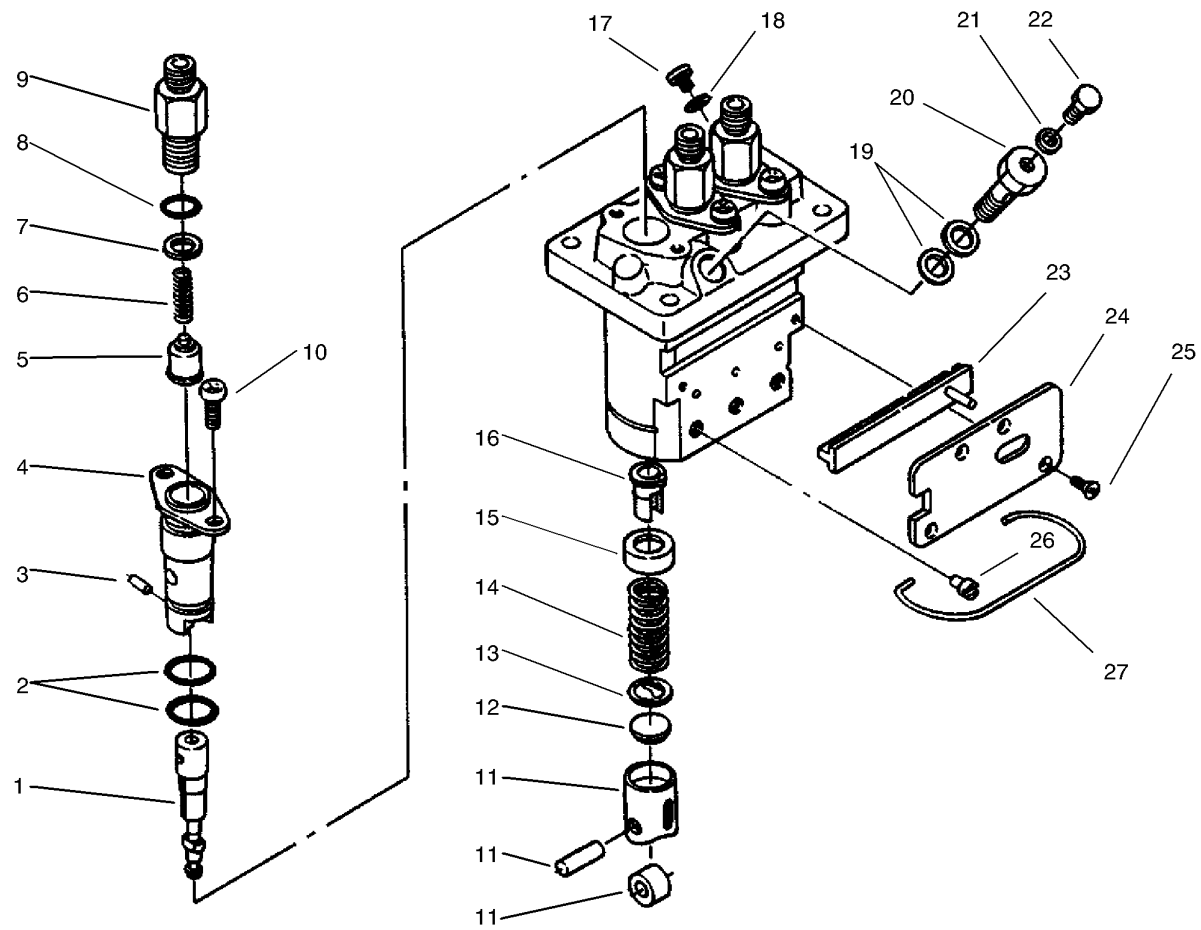 

Injection Pump Assembly No. 98-9643

Ref	Part No.	Qty.	Description
1	98-9462	3	Element-Pump
2	98-9423	6	O-Ring
3	98-9443	3	Pin-Joint
4	98-9434	3	Flange-Sleeve
5	98-9421	3	Valve-Delivery
6	98-9424	3	Spring-Valve, Delivery
7	98-9425	3	Gasket-Valve, Delivery
8	98-9447	3	O-Ring
9	98-9652	3	Holder-Valve, Delivery
10	98-9452	6	Screw
11	98-9422	3	Tappet ASM
12	98-9433	3	Shim
13	98-9429	3	Seat-Spring, Lower
14	98-9428	3	Spring-Plunger
15	98-9427	3	Seat-Spring, Upper
16	98-9432	3	Sleeve-Control
17	98-9466	1	Plug
18	98-9451	1	Gasket
19	98-9445	1	Gasket
20	98-9464	1	Bolt-Joint
21	98-9446	1	Gasket
22	98-9430	1	Screw
23	98-9463	1	Control-Rack
24	98-9465	1	Plate


Ref	Part No.	Qty.	Description
25	98-9442	4	Screw
26	98-9426	3	Pin-Guide, Tappet
27	98-9450	1	Pin-Clamp

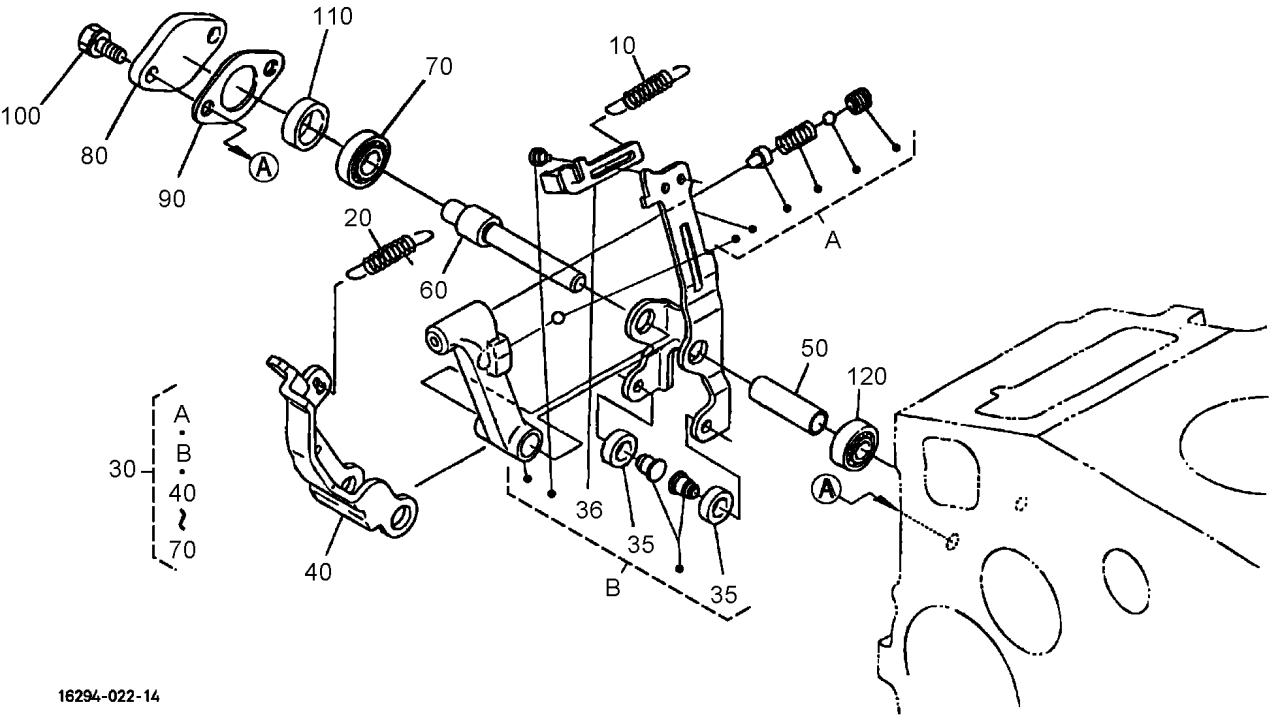

16294-022-14

Governor Assembly


Ref	Part No.	Qty.	Description				
10	105-3786	1	Spring-Start				
20	98-9681	1	Spring-Governor				
30	107-9082	1	Fork Lever ASM				
35	98-9692	2	Roller				
36	107-9083	1	Lever-Thrust				
40	107-9084	1	Lever-Fork				
50	107-9085	1	Shaft-Lever, Fork				
60	107-9086	1	Shaft-Lever, Fork				
70	98-9570	1	Bearing-Miniaturize				
80	98-9569	1	Cover-Shaft, Fork Lever				
90	98-9682	1	Gasket				
100	98-9351	2	Bolt				
110	98-9567	1	Collar				
120	98-9571	1	Bearing-Miniaturize				

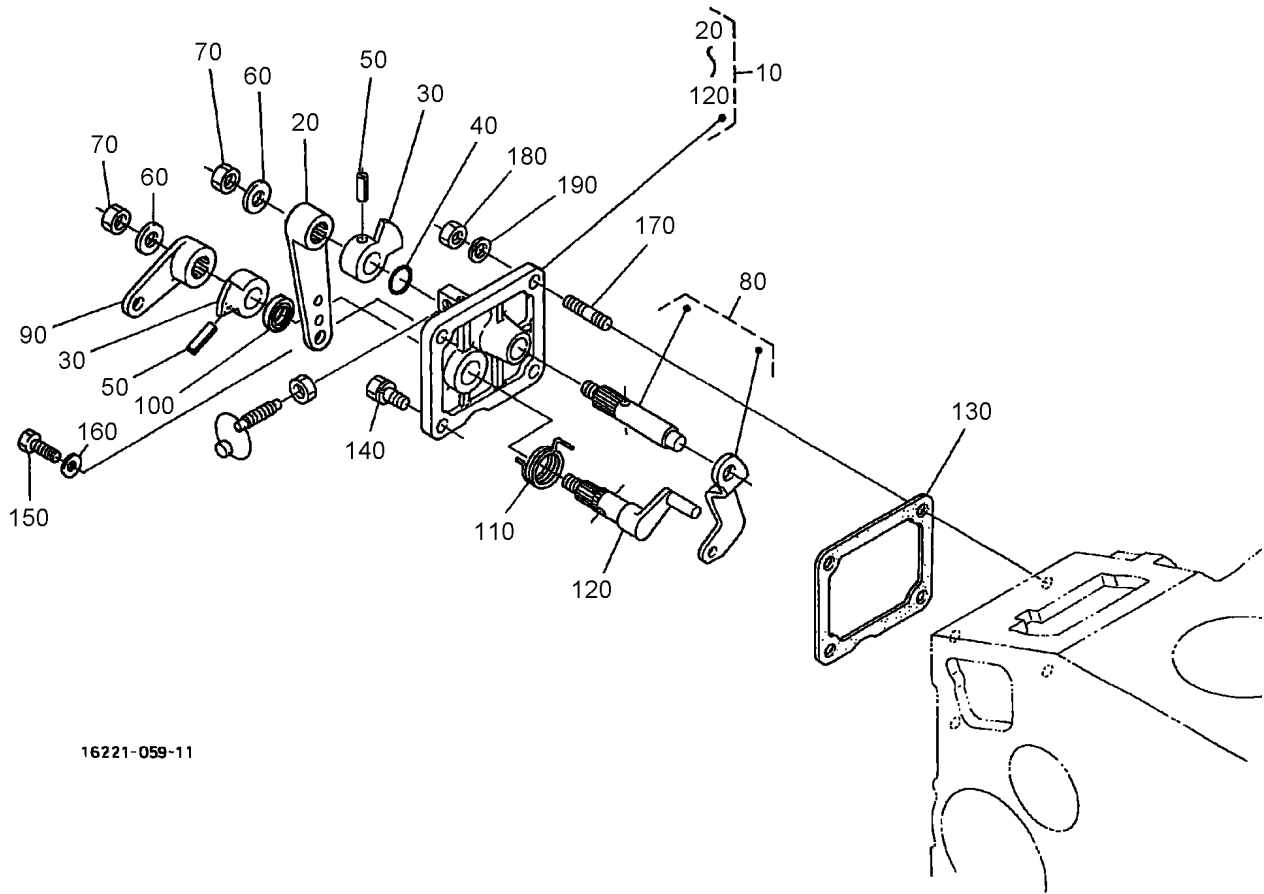 

16221-059-11


Speed Control Plate Assembly

Ref	Part No.	Qty.	Description				
10	105-3735	1	Control Plate ASM				
20	98-9662	1	Lever-Control, Speed				
30	98-9572	2	Lever-Control, Speed				
40	105-3788	1	O-Ring				
50	98-7602	2	Pin-Spring				
60	98-9594	2	Washer-Plain				
70	98-9589	2	Nut				
80	98-9658	1	Governor Lever ASM				
90	98-9663	1	Lever-Stop, Engine				
100	98-7601	1	Seal-Oil				
110	98-9472	1	Spring-Return				
120	98-9664	1	Shaft-Lever, Stop				
130	98-9637	1	Gasket				
140	98-7692	1	Bolt				
150	99-8348	1	Bolt				
160	98-7654	2	Gasket				
170	105-3710	2	Stud				
180	98-7572	2	Nut				
190	98-7699	2	Washer-Spring				

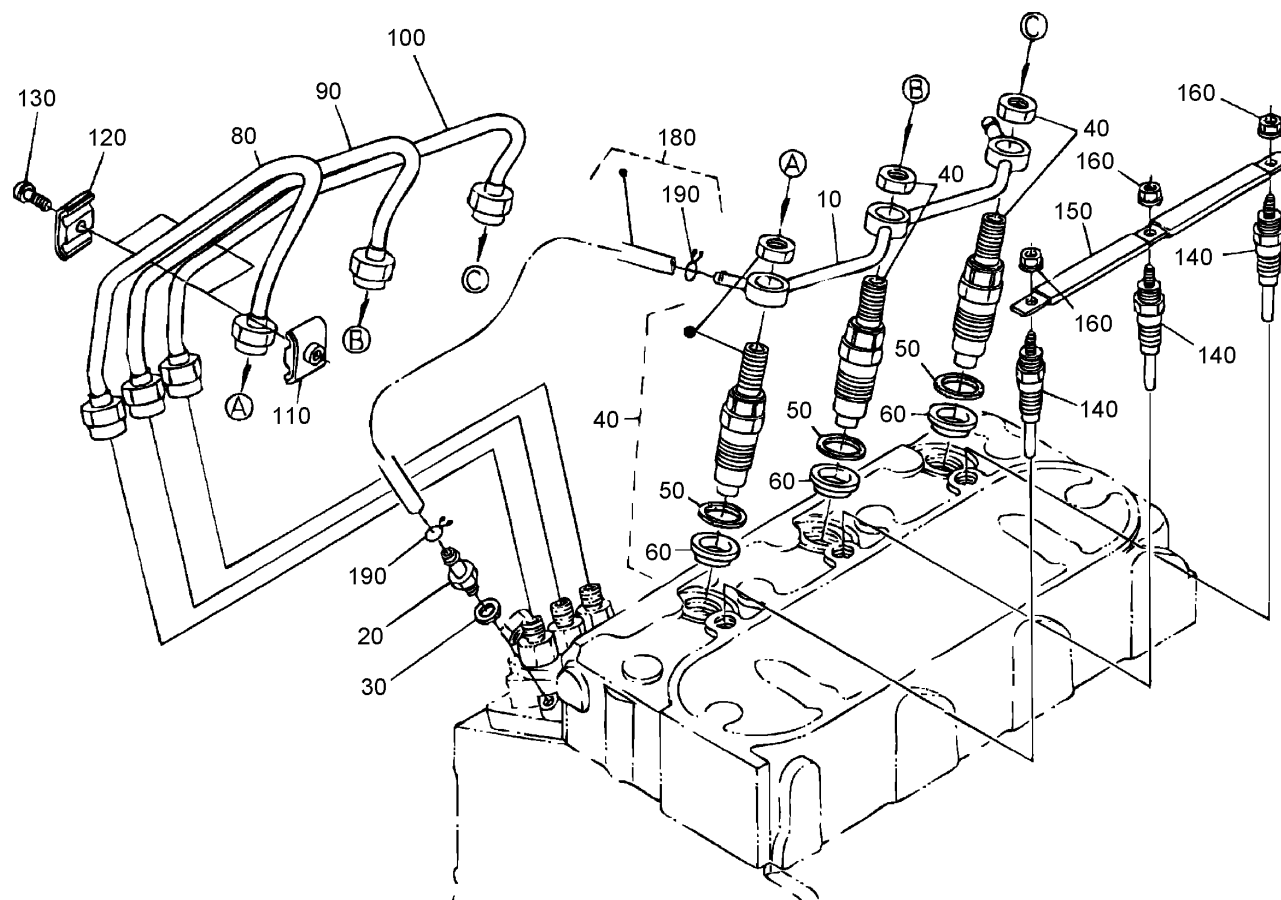 

Nozzle Holder and Glow Plug Assembly


Ref	Part No.	Qty.	Description				
10	98-9620	1	Overflow Pipe ASM				
20	98-9431	1	Screw-Bleeder, Air				
30	98-7654	1	Gasket				
40	108-2866	3	Nozzle Holder Kit				
50	98-7676	3	Gasket				
60	98-7677	3	Seal-Heat				
80	98-9653	1	Pipe-Injection				
90	98-9654	1	Pipe-Injection				
100	98-9655	1	Pipe-Injection				
110	98-7682	2	Clamp-Pipe				
120	98-7683	2	Clamp-Pipe				
130	98-7684	2	Screw (W/Washer)				
140	98-9695	3	Plug-Glow				
150	98-9631	3	Cord-Plug, Glow				
160	99-8377	3	Nut-Flange				
180	98-9420	1	Overflow Pipe ASM				
190	98-7671	2	Clip-Pipe				

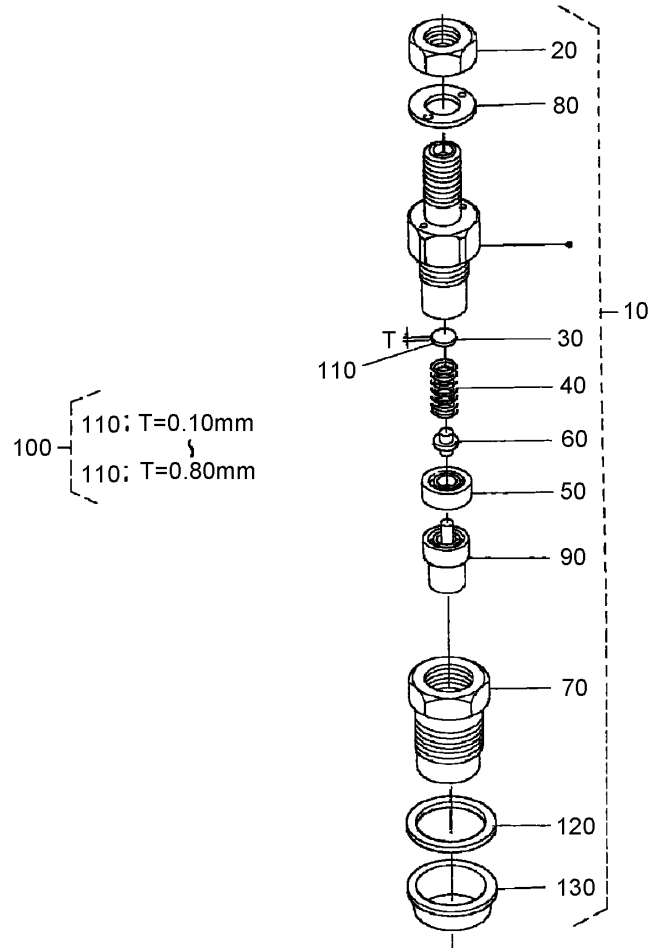 

1G347-015-10


Nozzle Holder Assembly

Ref	Part No.	Qty.	Description				
10	108-2866	3	Nozzle Holder Kit				
20	99-8301	3	Nut				
30	99-8302	3	Washer-Adjusting				
40	99-8303	3	Spring-Nozzle				
50	99-8304	3	Spacer-Distance				
60	99-8305	3	Rod-Push				
70	99-8306	3	Nut-Nozzle				
80	99-8307	3	Washer-Plain				
90	107-7826	3	Piece-Nozzle				
100	99-8309	3	Adjusting Washer ASM				
110	99-8310	3	Washer-Adjust (0.10Mm)				
110	99-8311	3	Washer-Adjust (0.20Mm)				
110	99-8312	3	Washer-Adjust (0.30Mm)				
110	99-8313	3	Washer-Adjust (0.40Mm)				
110	99-8314	3	Washer-Adjust (0.50Mm)				
110	99-8315	3	Washer-Adjust (0.52Mm)				
110	99-8316	3	Washer-Adjust (0.54Mm)				
110	99-8317	3	Washer-Adjust (0.56Mm)				
110	99-8318	3	Washer-Adjust (0.58Mm)				
110	99-8319	3	Washer-Adjust (0.80Mm)				
120	98-7676	3	Gasket				
130	98-7677	3	Seal-Heat				

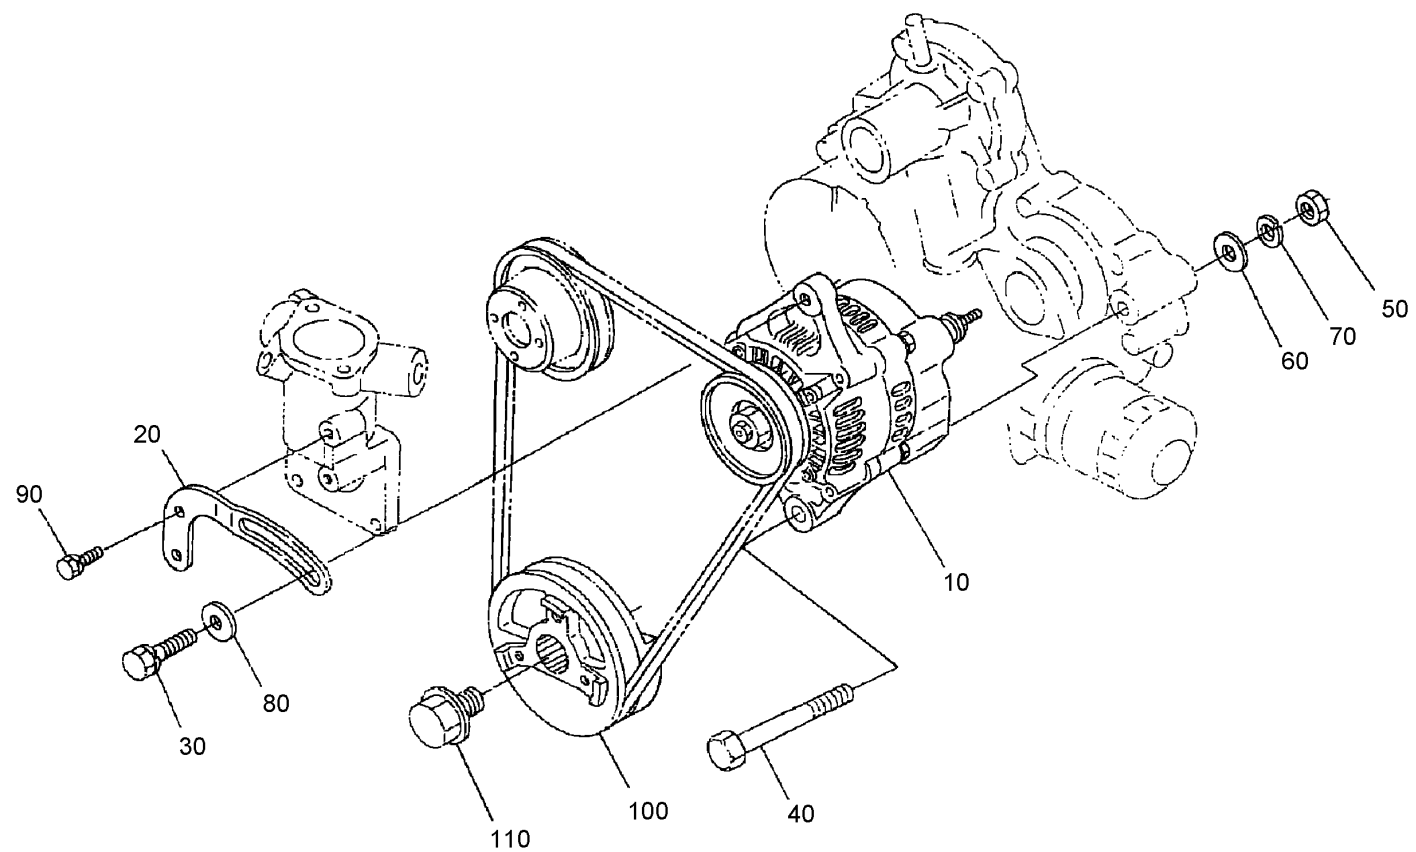 


Alternator and Pulley Assembly

Ref	Part No.	Qty.	Description				
10	98-9474	1	Alternator ASM				
20	98-9573	1	Stay-Dynamo				
30	108-7088	1	Bolt				
40	98-9360	1	Bolt				
50	98-7737	1	Nut				
60	3256-24	1	Washer-Flat				
70	98-7738	1	Washer-Spring				
80	100-9233	1	Washer-Plain				
90	98-7692	1	Bolt				
100	98-9473	1	Pulley-Drive, Fan				
110	98-9585	1	Bolt				

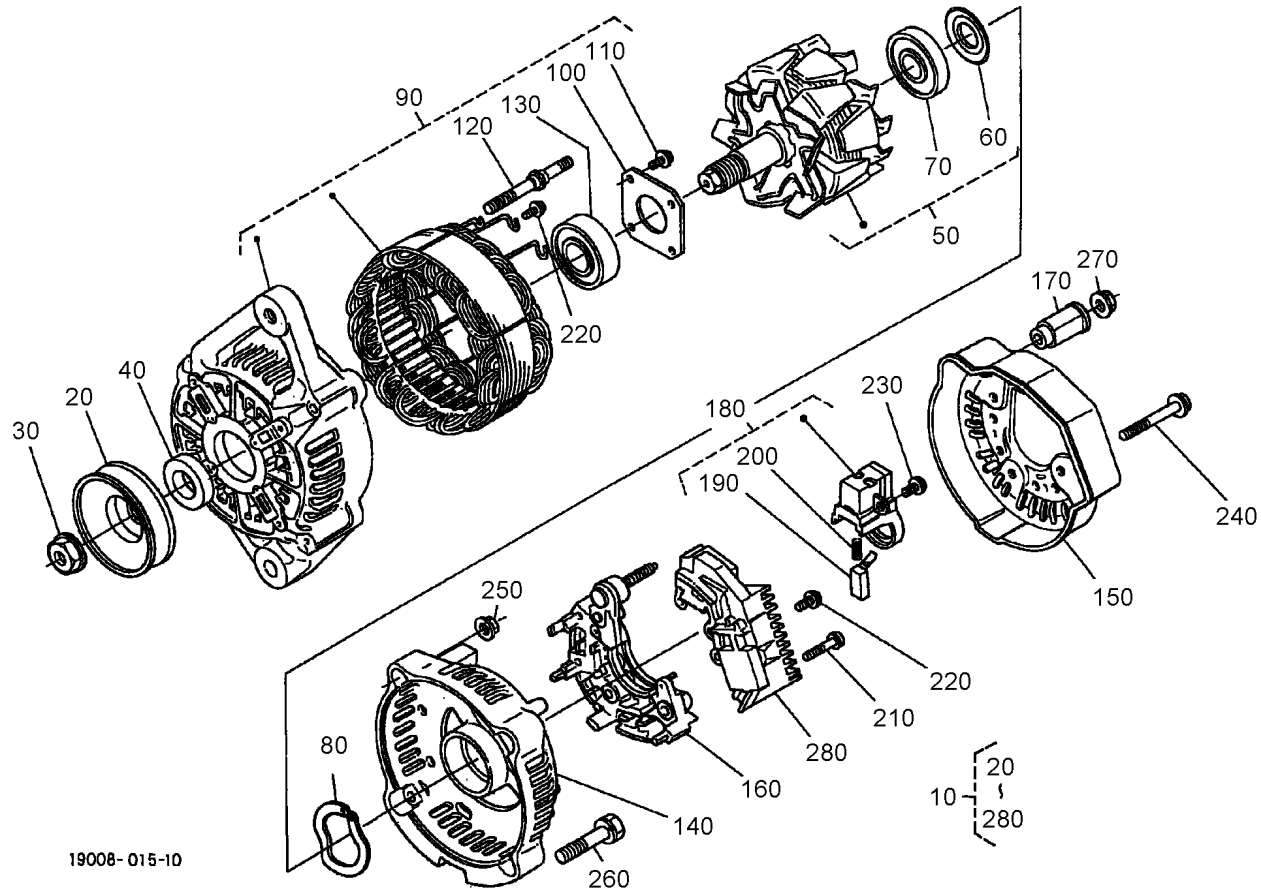 


Alternator (Component Part) Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
10	98-9474	1	Alternator ASM	250	98-7730	2	Nut
20	98-9453	1	Pulley-Dynamo	260	98-7731	2	Bolt
30	98-7708	1	Nut	270	98-7732	1	Nut
40	98-7709	1	Collar	280	107-9088	1	Regulator ASM
50	107-0136	1	Rotor				
60	98-7711	1	Cover-Bearing				
70	107-0138	1	Bearing-Ball				
80	98-7713	1	Washer-Thrust				
90	107-0139	1	Drive End Frame ASM				
100	98-7715	1	Plate-Retainer				
110	98-7716	4	Screw-Head, Round				
120	98-7717	2	Bolt-Through				
130	107-0137	1	Bearing-Ball				
140	107-9087	1	Frame-End				
150	107-0140	1	Cover-End				
160	98-9476	1	Rectifier ASM				
170	98-7722	1	Bushing-Insulation				
180	107-0141	1	Holder-Brush				
190	98-7724	2	Brush				
200	98-7725	2	Spring-Brush				
210	98-7726	2	Screw-Head, Round				
220	98-7727	6	Screw-Head, Round				
230	98-7728	1	Screw-Head, Round				
240	98-7729	3	Bolt				

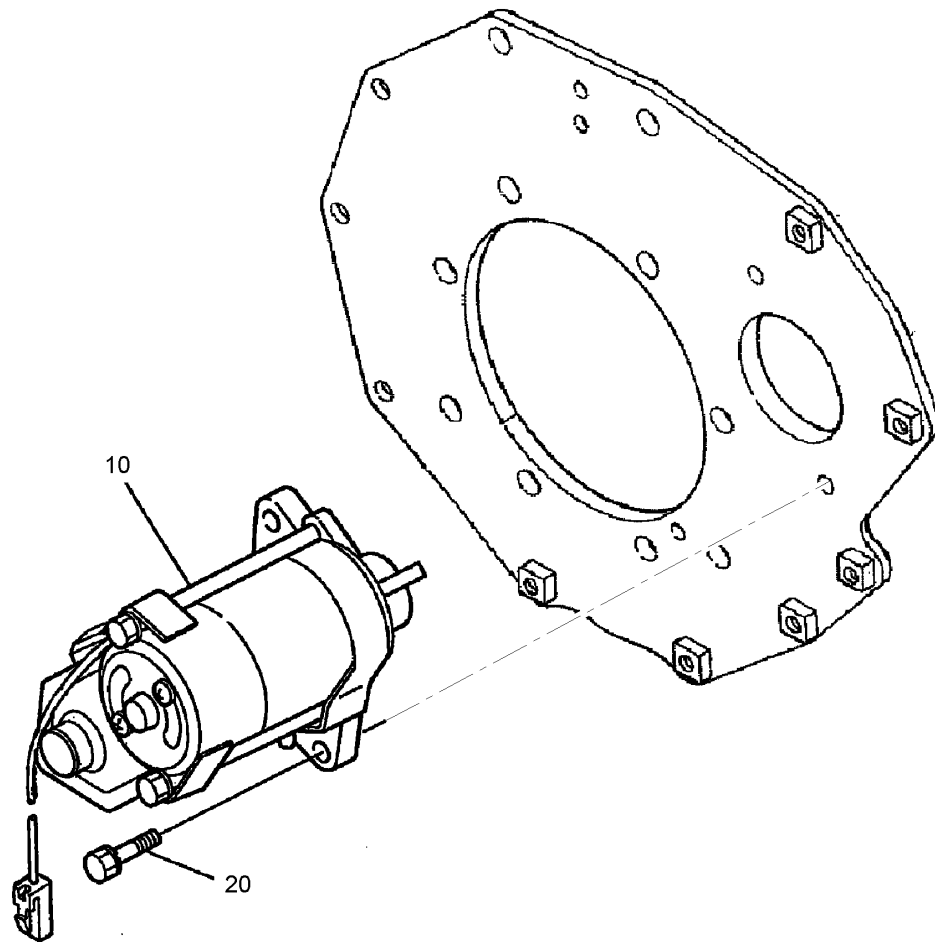 

Starter Assembly


Ref	Part No.	Qty.	Description
10	98-9705	1	Starter ASM
20	98-7697	2	Bolt

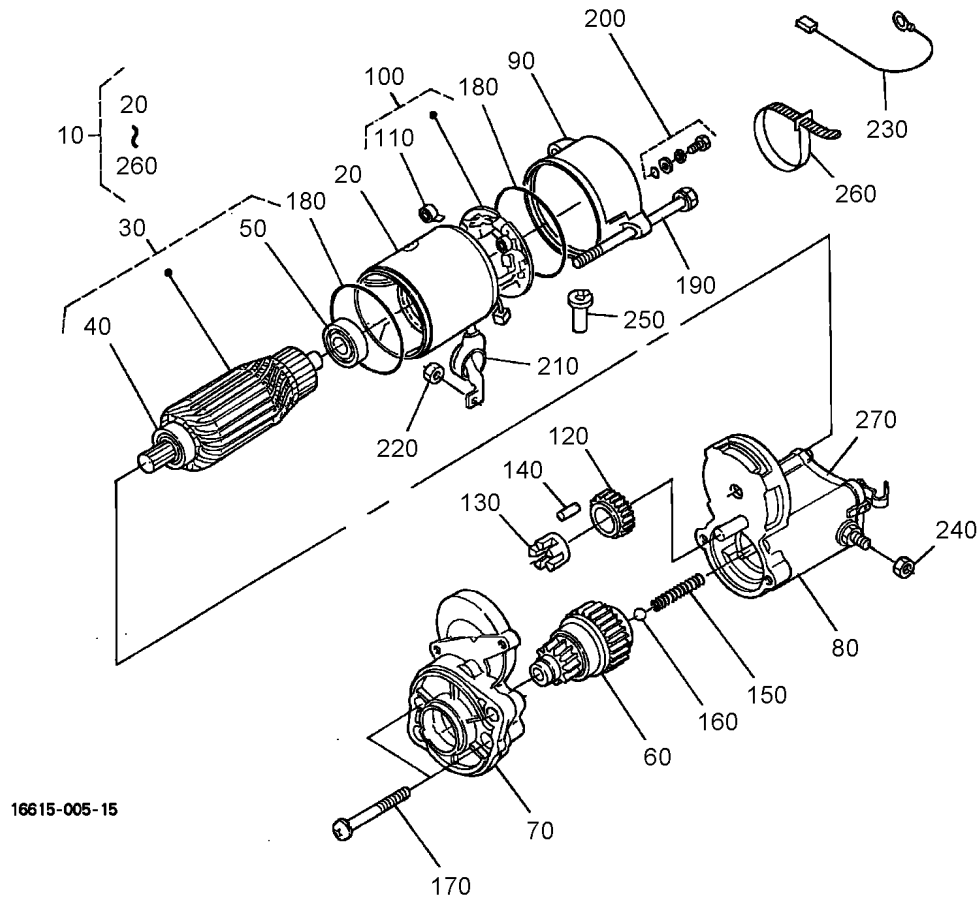 

Starter (Component Part) Assembly


Ref	Part No.	Qty.	Description
10	98-9705	1	Starter ASM
20	104-8608	1	Yoke ASM
30	98-7742	1	Armature ASM
40	98-7744	1	Bearing
50	98-7743	1	Bearing
60	99-8373	1	Clutch-Running, Over
70	99-8374	1	Frame-End, Drive
80	105-3746	1	Magnetic Switch ASM
90	98-7748	1	Frame-End
100	98-7749	1	Brush Holder ASM
110	98-7750	4	Spring-Brush
120	98-7751	1	Gear
130	98-7752	1	Retainer
140	98-7753	5	Roller
150	98-7754	1	Spring
160	98-7755	1	Ball
170	98-7756	2	Bolt
180	98-7757	2	O-Ring
190	100-9240	2	Bolt
200	98-7758	2	Bolt ASM
210	99-8375	1	Cover
220	99-8371	1	Nut-Hex
230	98-9711	1	Cord-Solenoid, Stop
240	99-8376	1	Nut-Hex

Ref	Part No.	Qty.	Description
250	98-7759	1	Pipe-Drain
260	98-9712	1	Band-Cover
270	105-2886	1	Cover ASM

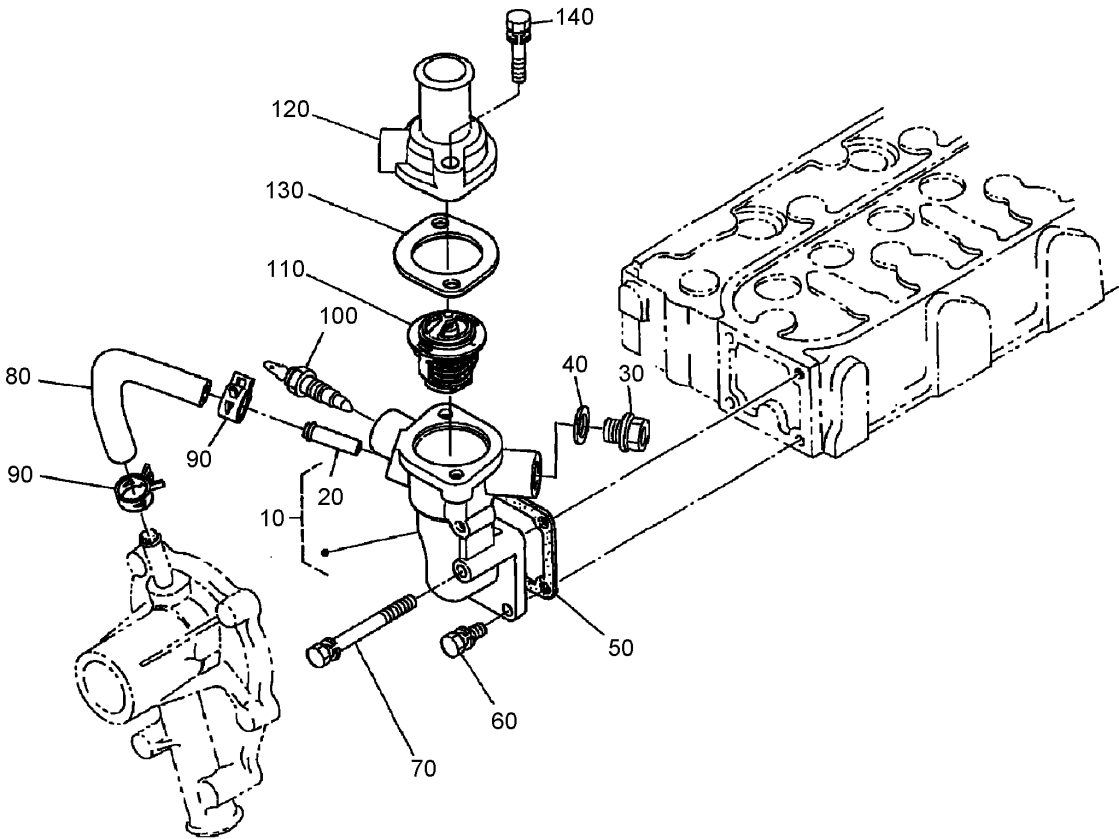


Water Flange and Thermostat Assembly

Ref	Part No.	Qty.	Description				
10	98-9713	1	Water Flange ASM				
20	98-9580	1	Pipe-Return, Water				
30	105-3747	1	Plug				
40	99-3583	1	Packing				
50	98-9638	1	Gasket-Flange, Water				
60	98-7692	3	Bolt				
70	98-9356	1	Bolt				
80	98-9578	1	Pipe-Return, Water				
90	98-9579	2	Band-Pipe				
100	98-9719	1	Thermoswitch				
110	98-7778	1	Thermostat ASM				
120	98-9471	1	Cover-Thermostat				
130	105-3748	1	Gasket-Thermostat				
140	98-7777	2	Bolt				

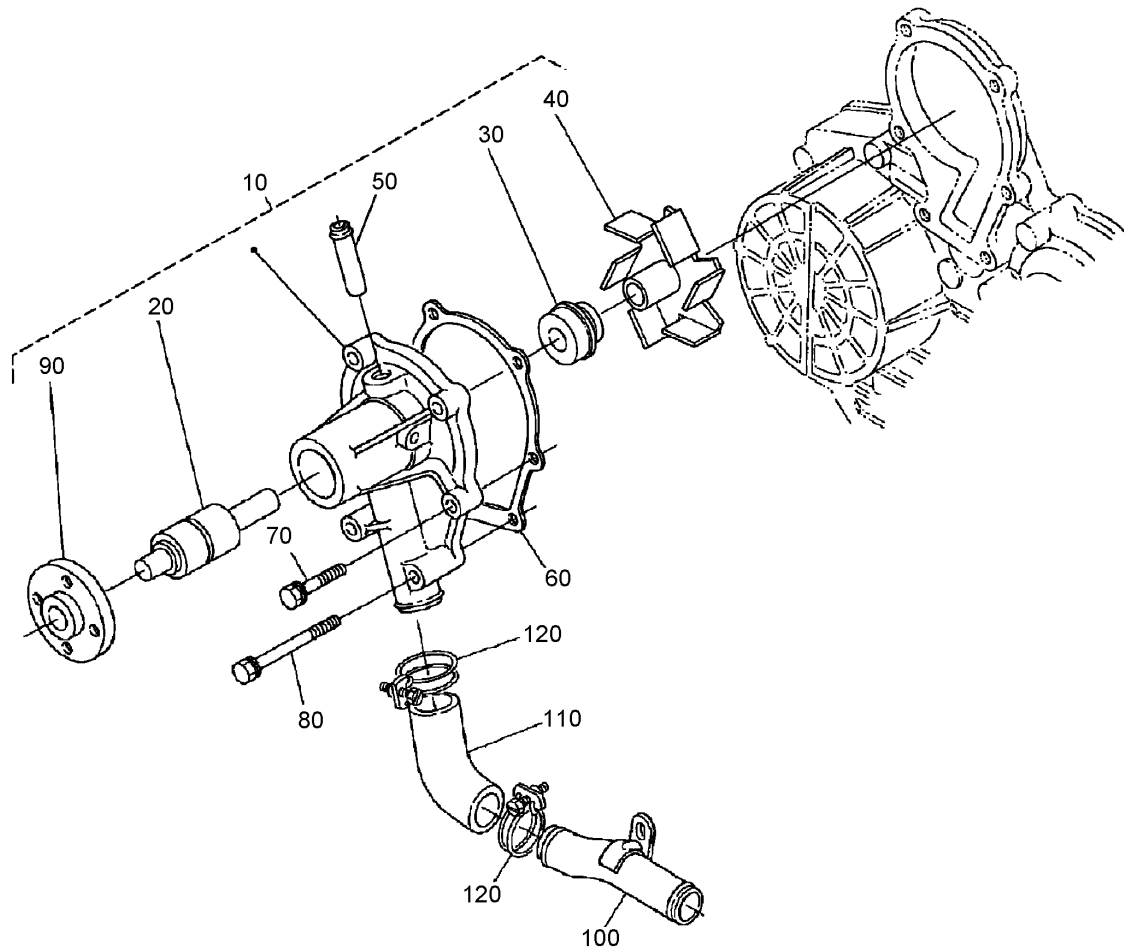 


Water Pump Assembly

Ref	Part No.	Qty.	Description				
10	107-9089	1	Water Pump ASM				
20	99-3517	1	Bearing-Pump, Water				
30	105-3750	1	Mechanical Seal ASM				
40	99-3519	1	Impeller-Pump, Water				
50	98-9577	1	Pipe-Return, Water				
60	99-3454	1	Gasket-Pump, Water				
70	98-9353	4	Bolt				
80	107-9090	2	Bolt				
90	99-3516	4	Flange-Pump, Water				
100	98-9716	1	Pipe-Water				
110	107-9091	1	Pipe-Water				
120	98-9717	2	Clamp				

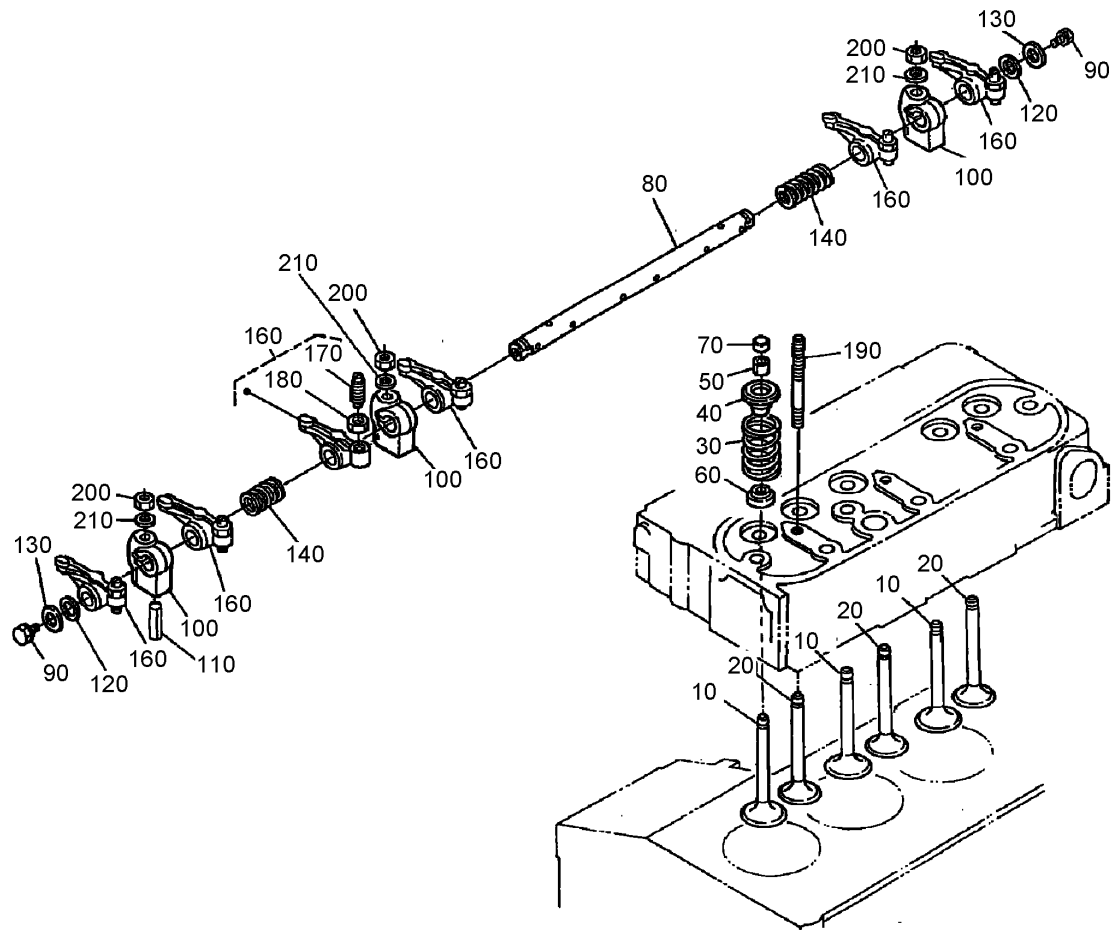 


Valve and Rocker Arm Assembly

Ref	Part No.	Qty.	Description
10	98-9494	3	Valve-Inlet
20	98-9495	3	Valve-Exhaust
30	98-9648	6	Spring-Valve
40	107-9092	6	Retainer-Spring
50	98-9390	6	Collet-Set, Valve Spring
60	99-8385	6	Seat-Stem, Valve
70	98-9497	6	Cap-Valve
80	105-3790	1	R-Arm Shaft ASM
90	100-9265	2	Bolt
100	98-9505	3	Bracket-Arm, Rocker
110	105-3758	1	Pin-Spring
120	98-9507	2	Washer-Shaft, R-Arm
130	3256-1	2	Washer-Flat
140	98-9504	2	Spring-Arm, Rocker
160	98-9501	6	Rocker Arm ASM
170	98-9502	6	Screw-Adjusting
180	98-9503	6	Nut
190	98-9506	3	Stud
200	98-9393	3	Nut
210	98-9385	3	Washer-Flat

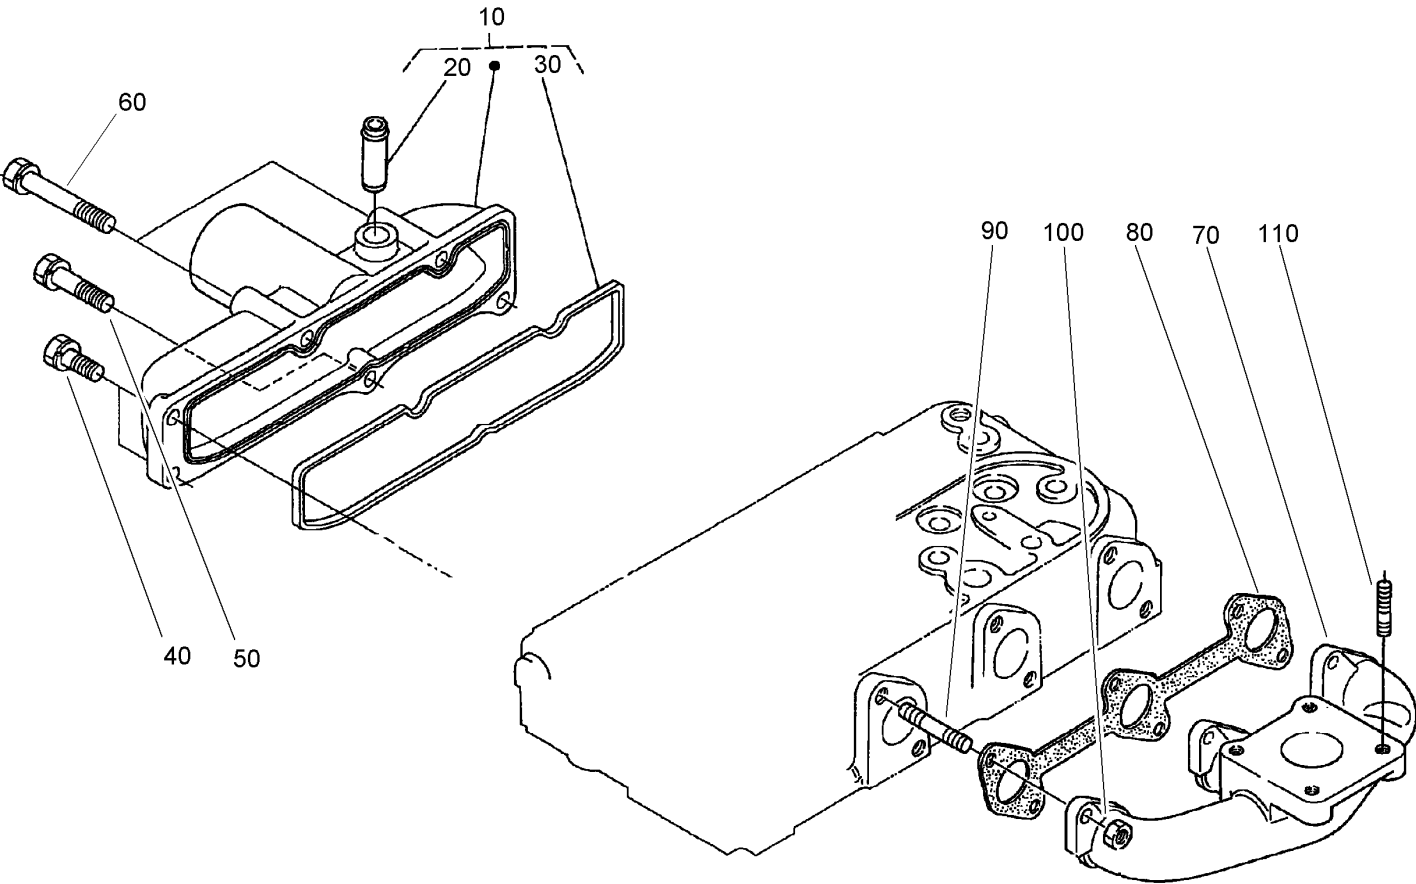


Inlet Manifold Assembly

Ref	Part No.	Qty.	Description				
10	108-6577	1	Inlet Manifold ASM				
20	98-9492	1	Joint-Pipe, Breather				
30	98-9609	1	Gasket				
40	98-7605	3	Bolt				
50	98-9353	1	Bolt				
60	105-3797	2	Bolt				
70	107-9093	1	Manifold-Exhaust				
80	98-9610	1	Gasket				
90	98-9588	6	Stud				
100	98-9665	6	Nut				
110	98-7769	4	Stud				

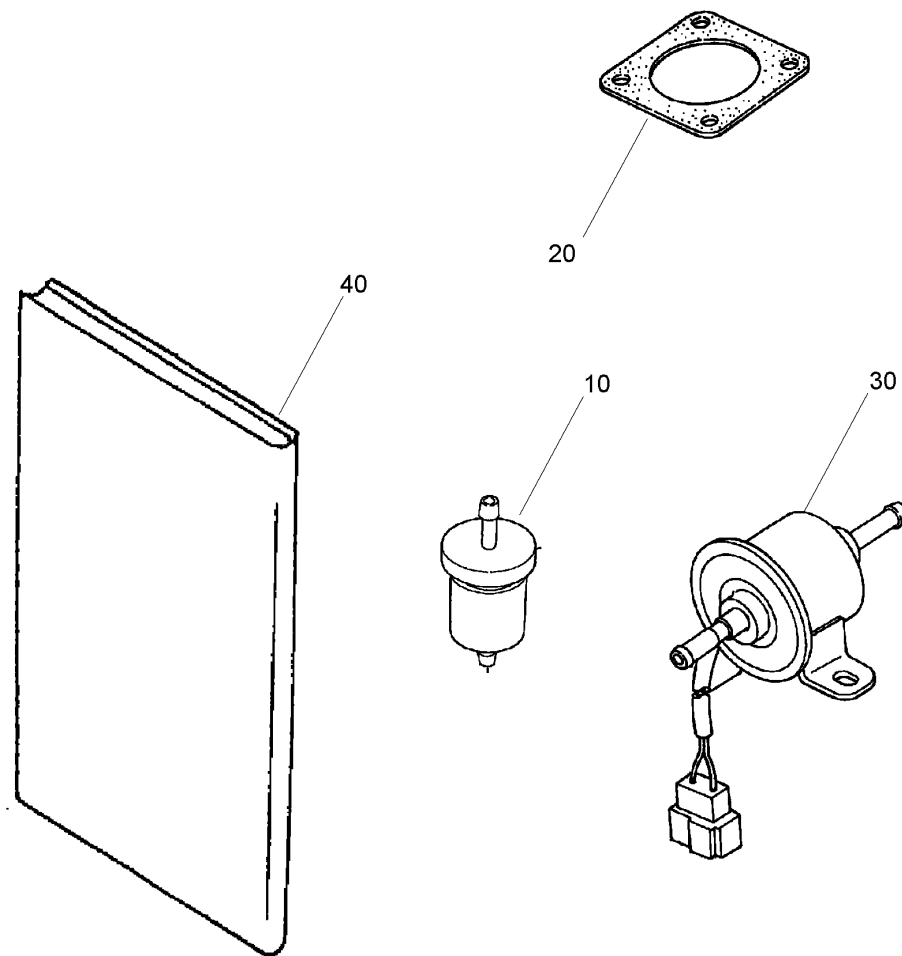 

Miscellaneous Parts Assembly

Ref	Part No.	Qty.	Description
10	98-7612	1	Filter-Fuel
20	99-8343	1	Gasket-Muffler
30	107-0122	1	Pump-Fuel, Electric
40	99-8954	1	Manual-Kubota

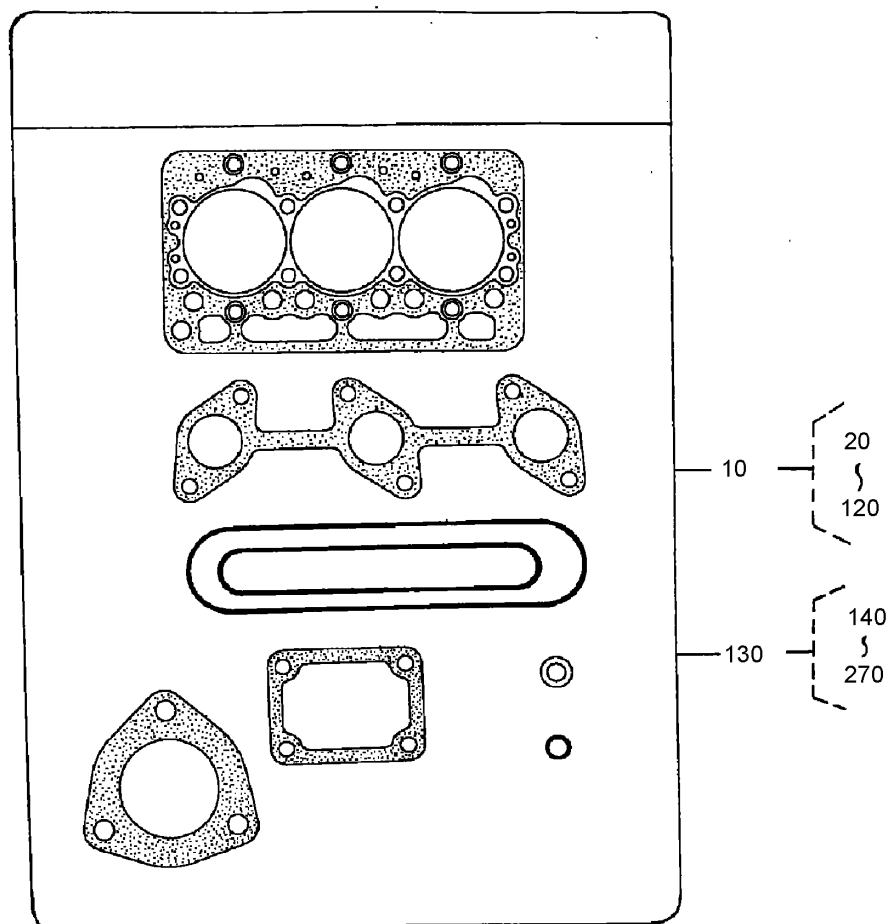 

Gasket Kit Assembly

Ref	Part No.	Qty.	Description
10	107-7848	1	Upper Gasket Kit
130	107-9095	1	Lower Gasket Kit

Attachments and Accessories

For 30626 - Groundsmaster 328-D Traction Unit

Product Name	Model/Part
Jack Pad Kit	106-4386
2-Wheel Drive Rear Axle Kit	106-8060
Tire Chains (23 x 8.50-12)	11-0390
Wheel Weight Kit	11-0440
Tube-Inner (23 x 8.50-12)	231-90
Rear Weight Kit	24-5780
Weight-Rear	24-5790-01
Standard Seat Kit	30623
Deluxe Seat Kit	30625
Seat Adapter Kit	30628
Cruise Control Kit	30677
Arm Rest Kit	30707
72 Inch Rear Discharge Mower	30710
Quick Attach Adapter Kit	30711
72 Inch Guardian Recycler Mower	30716
Mowers and Boom Quick Attach Adapter Kit	30719
72 Inch Side Discharge Mower	30722
Recycler Mower Quick Attach Adapter Kit	30729
Rotary Broom	30743
48 Inch V-Plow	30750
48 Inch V-Plow Mounting Kit	30757
72 Inch Mower Mulching Kit	30799
Debris Blower	30855
Wide Wheel and 4-Ply Tire ASM	62-7020
Wheel and 6-Ply Tire ASM	69-9870
Spark Arrestor Screen	75-6880

