



Super Recycler[®] Lawn Mower

Model No. 20093C - 290000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Deck Housing and Rear Door Assembly	 3	Carburetor Assembly Briggs and Stratton	
Discharge Door Assembly No. 107-3717	 4	126T02-0237-B1	 15
Housing Assembly No. 115-2855	 5	Air Cleaner Assembly Briggs and Stratton	
Front Wheel Assembly	 6	126T02-0237-B1	 16
Rear Wheel and Transmission Assembly	 7	Governor Assembly Briggs and Stratton	
Engine and Blade Assembly	 8	126T02-0237-B1	 17
Handle Assembly	 9	Muffler and Fuel Tank Assembly Briggs and	
Brake Bail and Cable Assembly	 10	Stratton 126T02-0237-B1	 18
Rear Bag Assembly	 11	Blower Housing Assembly Briggs and Stratton	
Cylinder Assembly Briggs and Stratton		126T02-0237-B1	 19
126T02-0237-B1	 12	Starter Assembly Briggs and Stratton 126T02-	
Crankshaft Assembly Briggs and Stratton		0237-B1	 20
126T02-0237-B1	 13	Engine Gasket Set Briggs and Stratton	
Crankcase Assembly Briggs and Stratton		126T02-0237-B1	 21
126T02-0237-B1	 14	Carburetor Overhaul Kit Briggs and Stratton	
		126T02-0237-B1	 22
		Attachments and Accessories List	 23

 
Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHE. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HS. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- | | |
|--|---|
| ❶ Not serviced separately | ❷ Obtain from your local Briggs & Stratton dealer |
| ❸ Included in Carburetor Overhaul Kit (Ref. No. 121) | ❹ Included in Engine Gasket Set (Ref. No. 358) |
| ❺ Included in Carburetor Gasket Set (Ref. No. 977) | |

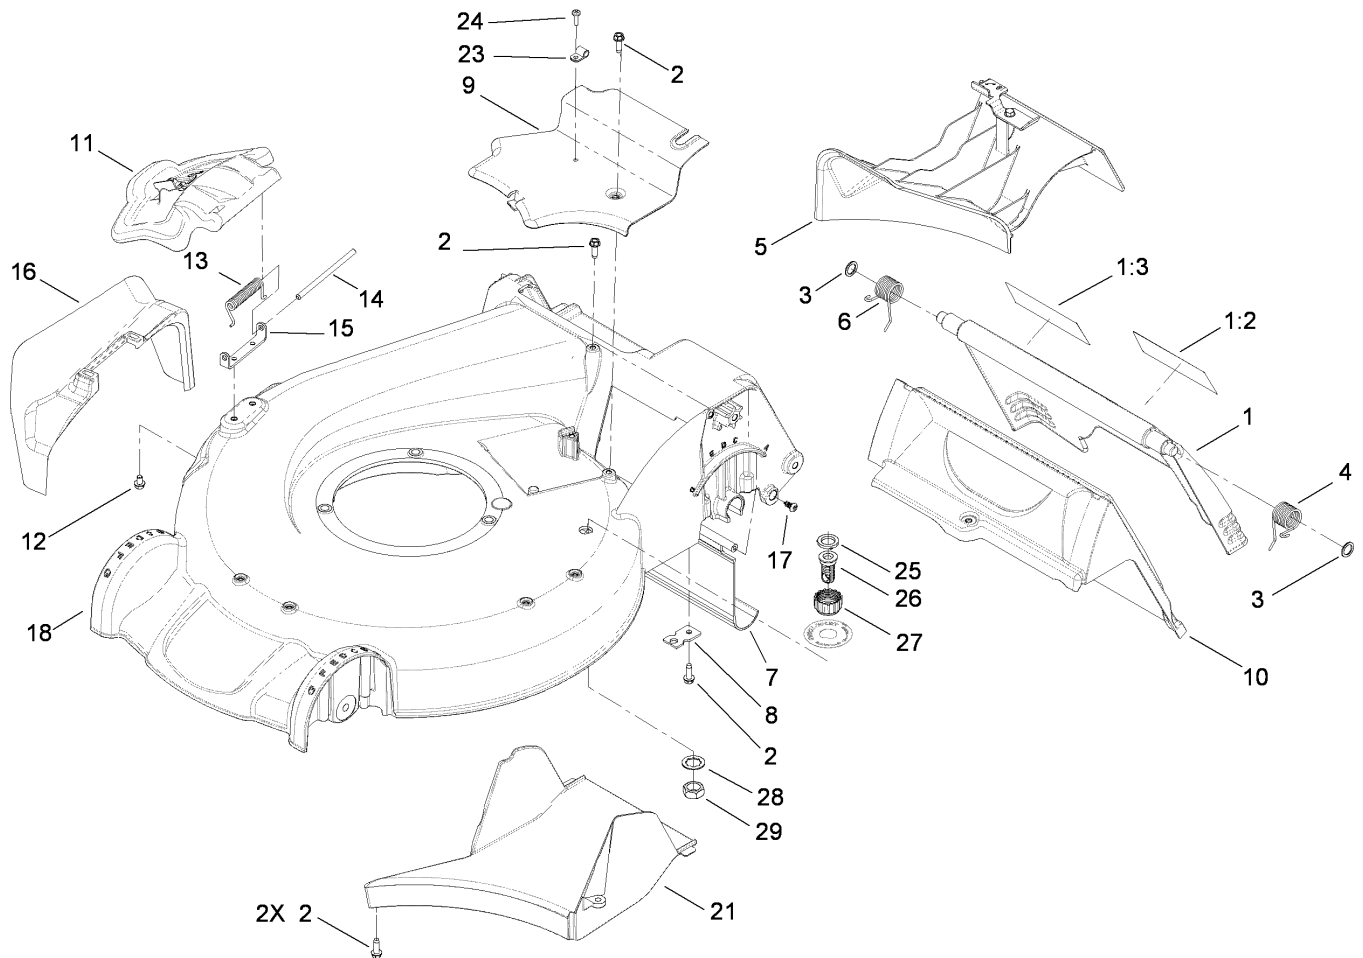

Deck Housing and Rear Door Assembly


Ref	Part No.	Qty.	Description
1	115-2856	1	Rear Door ASM
1:2	114-7982	1	Decal-Warning
1:3	104-7908	1	Decal-Warning
2	49-2040	6	Screw-HWHTF
3	94-8196	2	Washer-Nylon
4	115-2859	1	Spring-Torsion
5	115-8413	1	Mulch Plug ASM
6	114-7924	1	Spring-Torsion
7	114-1586	1	Shield-Trailing
8	107-7497	1	Bracket-Cable, Traction
9	107-7494	1	Cover-Belt
10	114-2668	1	Chute
11	107-3717	1	Discharge Door ASM
12	99-8445	2	Screw-HWH
13	99-5293	1	Spring-Torsion
14	99-5291	1	Rod-Cover
15	112-6416	1	Bracket-Cover
16	108-3753	1	Chute-Discharge, Side
17	117-1092	2	Screw-PPH
18	115-2855	1	Housing ASM
21	107-7495	1	Tunnel-Discharge
23	98-2256	1	Clamp
24	32144-32	1	Screw
25	112-6438	1	Washer-Seal, Washout Port

Ref	Part No.	Qty.	Description
26	112-6400	1	Port-Washout
27	112-6401	1	Coupling-Hose, Washout Port
28	3254-5	1	Washer-Tooth
29	3218-6	1	Nut-Jam

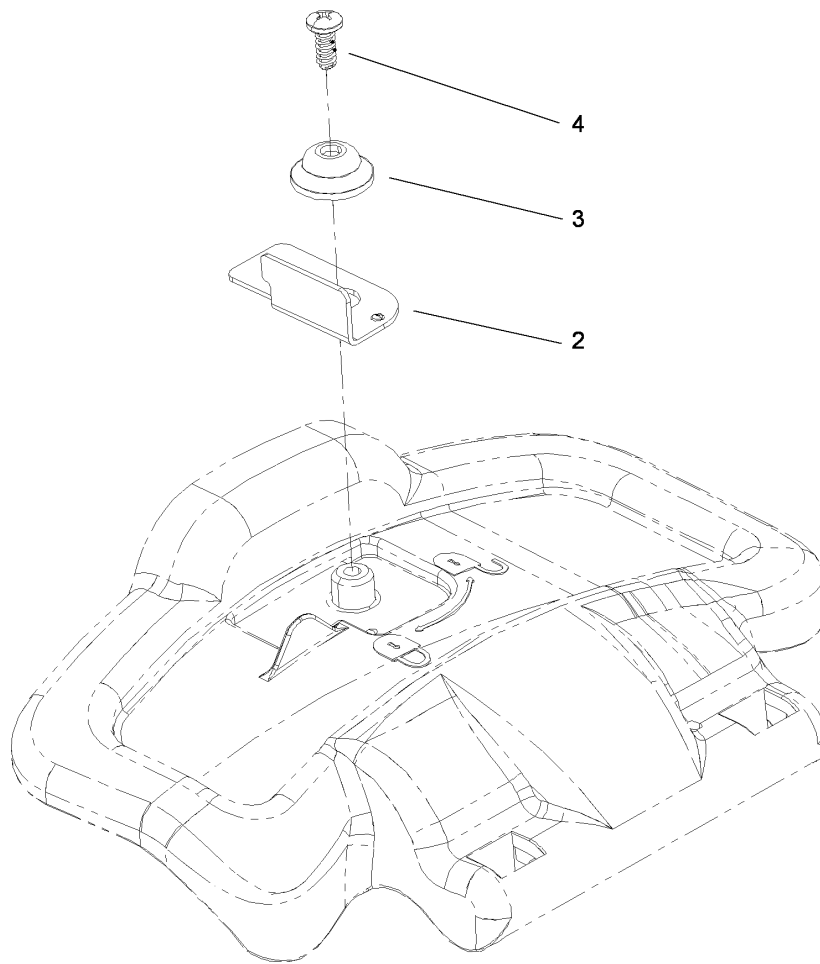 


Discharge Door Assembly No. 107-3717

Ref	Part No.	Qty.	Description
2	107-0795	1	Latch-Door
3	107-7456	1	Cap-Door
4	107-7461	1	Screw-Plastite

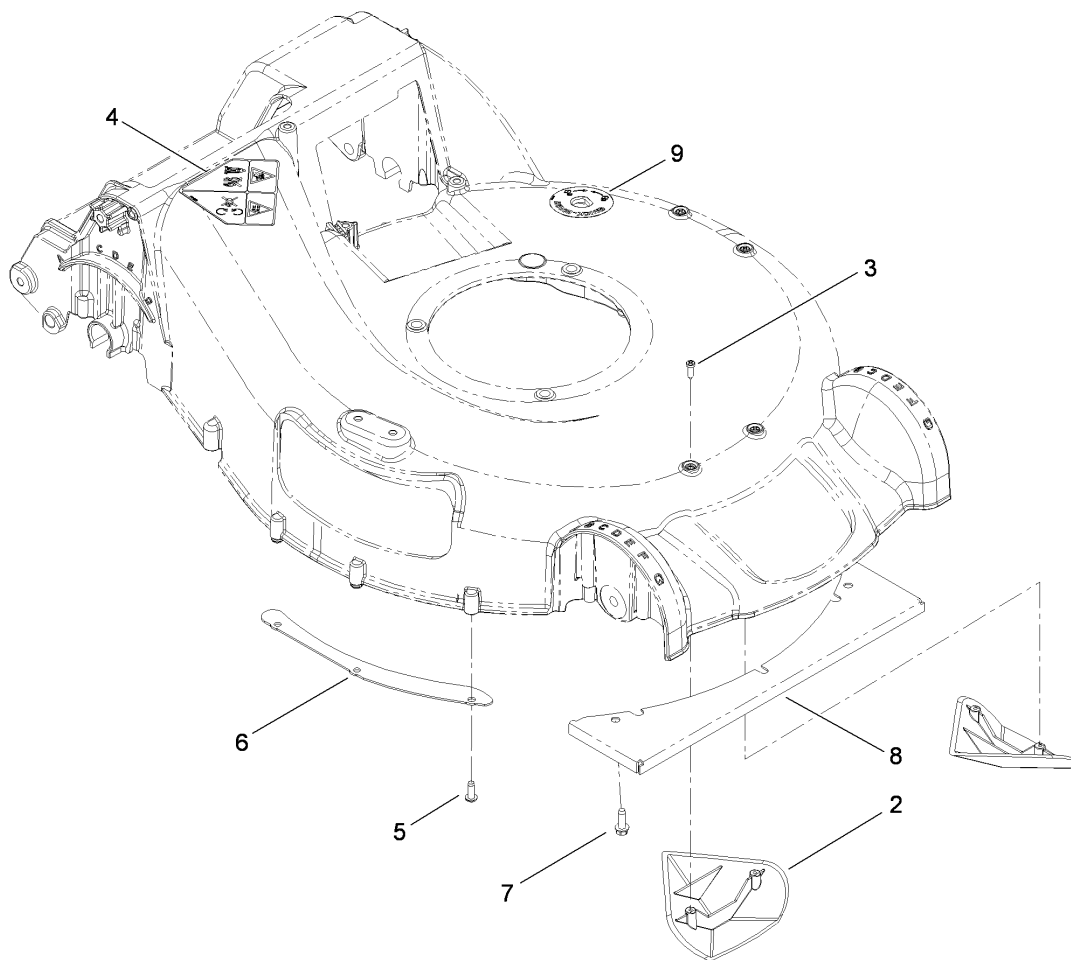 
**Housing Assembly No. 115-2855**

Ref	Part No.	Qty.	Description				
2	108-3798	2	Kicker-Housing				
3	32144-111	4	Screw-PPH				
4	112-8760	1	Decal-Danger				
5	63-8590	3	Screw				
6	105-1316-03	1	Sheet-Lip				
7	49-2040	3	Screw-HWHTF				
8	108-3797-03	1	Plate-Cover, Front				
9	112-8867	1	Decal				

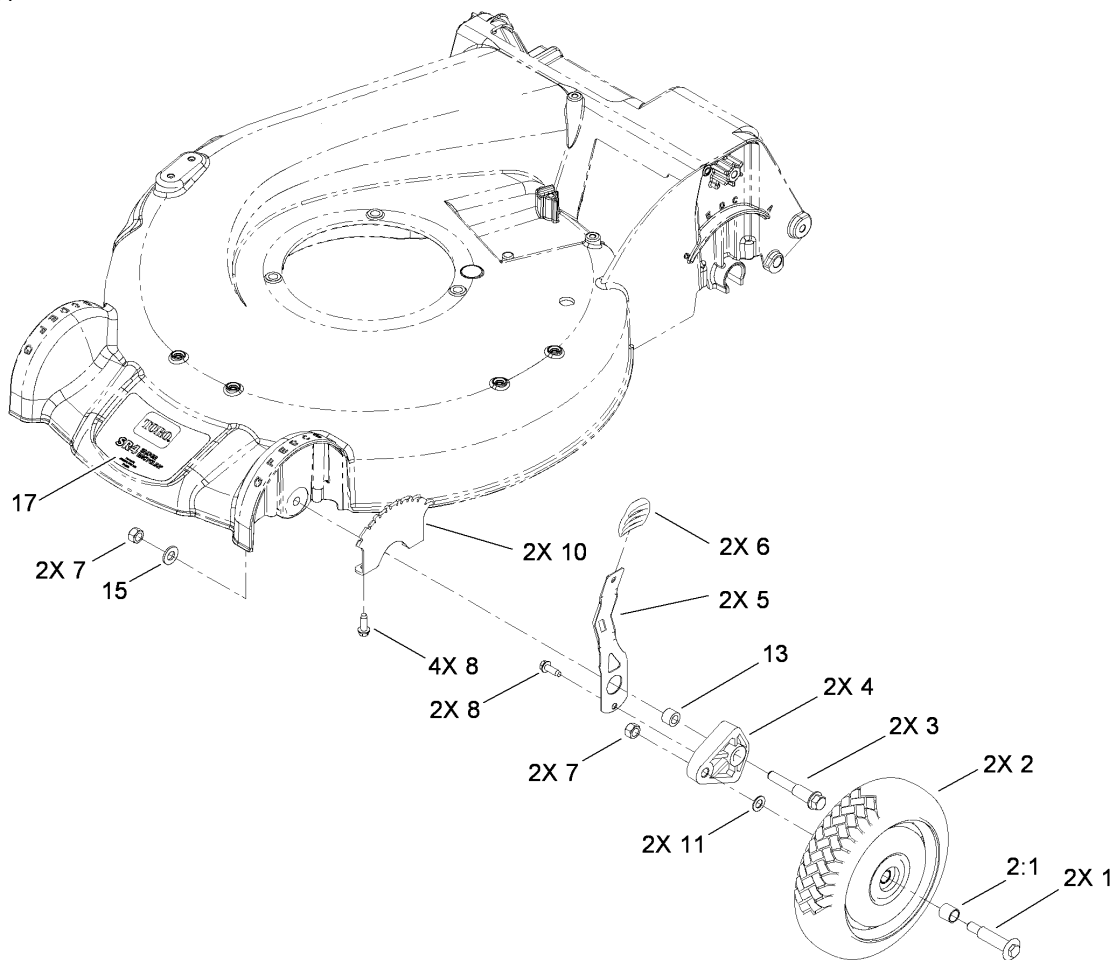 

Front Wheel Assembly


Ref	Part No.	Qty.	Description				
1	92-1057	2	Bolt-Shoulder				
2	14-9989	2	Wheel And Tire ASM				
2:1	27-6250	2	Bushing				
3	114-3467	2	Screw-Shoulder				
4	107-7492	2	Arm-Pivot				
5	107-7491	2	Arm-Spring				
6	105-3042	2	Knob-Lever, HOC				
7	603773	4	Nut				
8	49-2040	10	Screw-HWHTF				
10	107-7478	4	Plate-HOC				
11	40-1940	2	Washer				
13	52-2480	2	Spacer-Wheel				
15	3256-24	2	Washer-Flat				
17	108-8168	1	Decal				

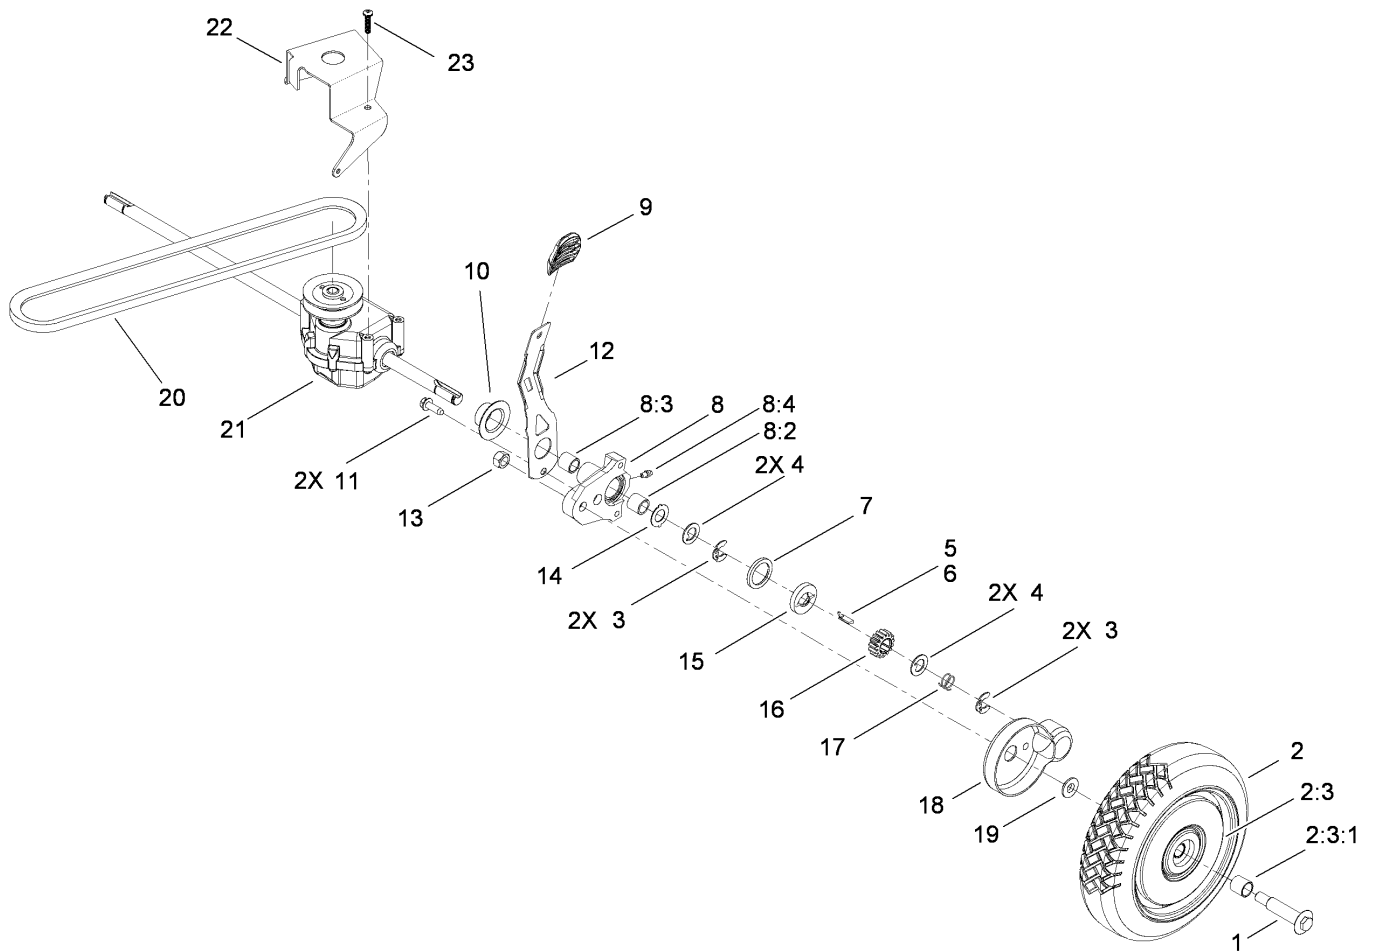 

Rear Wheel and Transmission Assembly

Ref	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	16-0029	2	Wheel And Tire ASM (W/Gear)
1 2:3		1	Wheel ASM
2:3:1	27-6250	2	Bushing
3	65-2720	4	Ring-Clip, Locking
4	65-4740	4	Washer-Thrust, Keyed
5	66-6040	1	Key-Rocking, RH
6	66-6050	1	Key-Rocking, LH
7	65-4710	2	Ring-Friction
8	100-8774	2	Pivot Arm ASM
8:2	47-2900	1	Bushing
8:3	70-9760	1	Bushing
8:4	302-56	1	Fitting-Grease
9	105-3042	2	Knob-Lever, HOC
10	42-3520	2	Cap-End
11	49-2040	2	Screw-HWTF
12	107-7491	2	Arm-Spring
13	603773	2	Nut
14	65-4730	2	Washer-Arm, Pivot
15	65-4760	2	Washer-Clutch
16	65-4750	2	Gear-Pinion
17	65-4720	2	Spring-Compression
18	74-1660	2	Cover-Wheel
19	74-1671	2	Spacer-Cover, Wheel


Ref	Part No.	Qty.	Description
20	92-1043	1	V-Belt
21	115-4560	1	Transmission - Sr4, (6:1)
22	114-7977-03	1	Bracket-Transmission
23	108-7476	3	Screw-Plastite

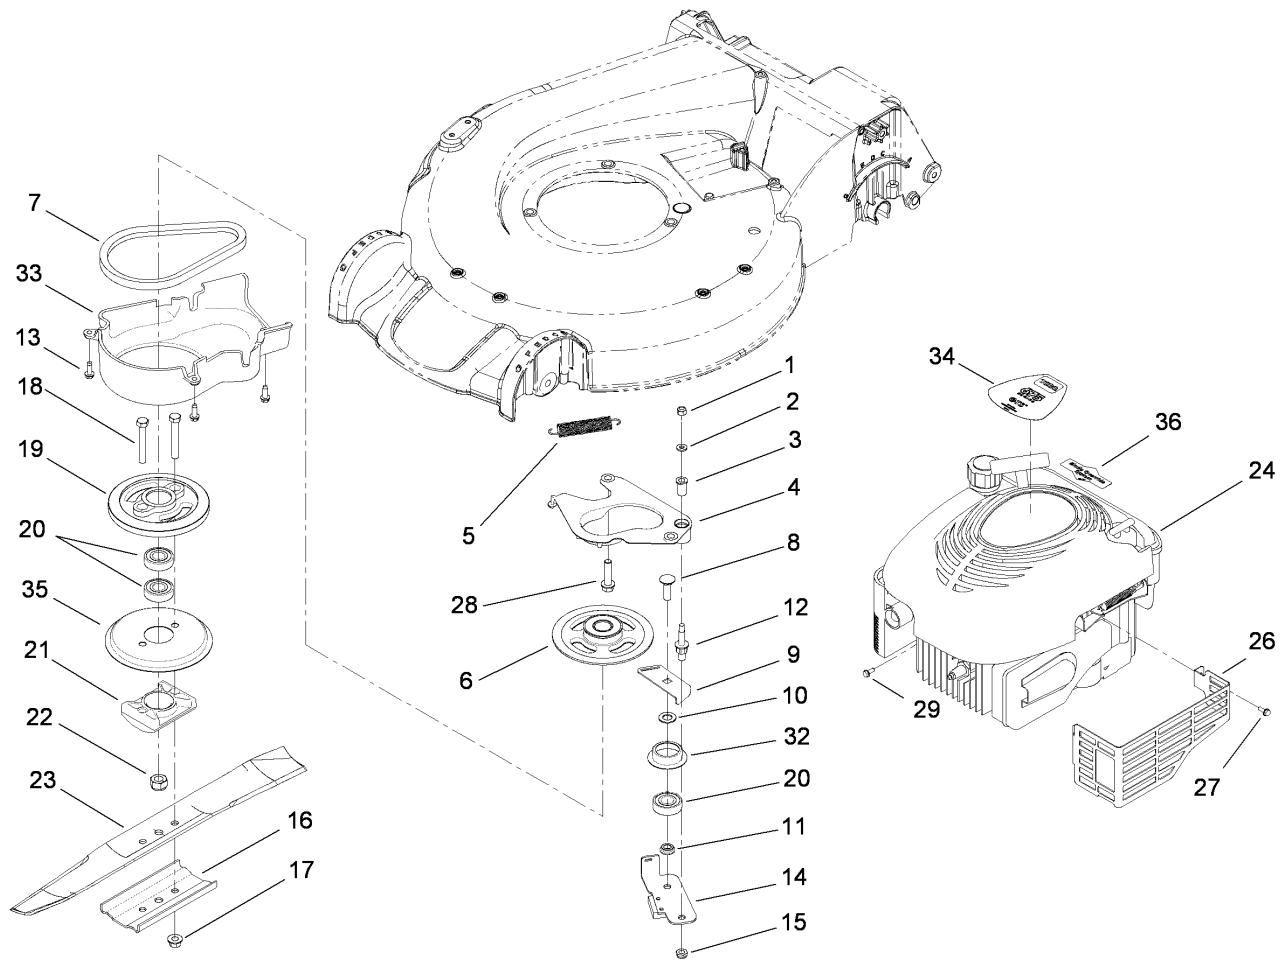 

Engine and Blade Assembly


Ref	Part No.	Qty.	Description
1	3296-42	1	Nut-Lock, NI
2	3256-16	1	Washer-Flat
3	107-0797	1	Bushing
4	107-0761	1	Plate-Anchor
5	108-3792	1	Spring-Tension, Brake
6	110-7456	1	Pulley
7	110-1790	1	Belt-BBC
8	3231-25	1	Screw-CARR
9	107-7471	1	Plate-Guide
10	605256	1	Washer
11	107-0758	1	Spacer-Bearing
12	107-0759	1	Bolt-Shoulder
13	49-2040	3	Screw-HWHTF
14	107-7477	1	Brake Arm ASM
15	603773	2	Nut
16	108-3766-03	1	Support-Blade
17	54-9190	2	Nut-Lock
18	3211-42	2	Screw-HH
19	107-0754	1	Drum
20	100-1048	3	Bearing-Ball
21	107-7487	1	Support-Blade
22	108-9342	1	Nut-Hex
23	108-3762-03	1	Blade-Recycling
24		1	Engine-B&s, 126T02-0190-B1

Ref	Part No.	Qty.	Description
26	104-7577-03	1	Shield-Muffler
27	32144-1	3	Screw-Taptite
28	32144-102	3	Screw-HWH
29	32144-112	1	Screw-HWH
32	108-3790	1	Retainer-Belt
33	107-7488	1	Cover
34	114-0339	1	Decal-Engine
35	108-3787	1	Disc
36	108-8131	1	Decal-Recoil

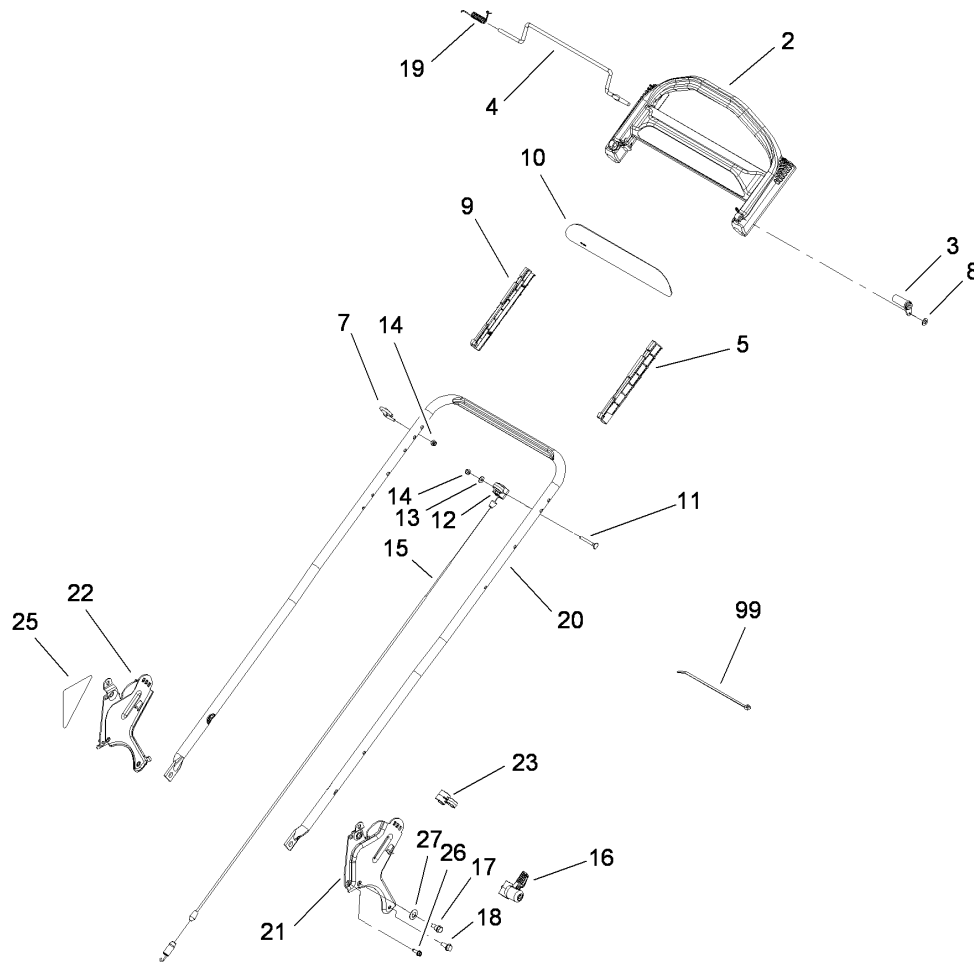 


Handle Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
2	104-8678	1	Handle-Control	99	614249	3	Strap-Tie
3	99-1589	1	Lever-Traction				
4	99-1588	1	Bar-Control, Traction				
5	105-6842	1	Guide-LH				
7	86-9671	1	Guide-Rope				
8	3256-23	1	Washer-Flat				
9	105-6841	1	Guide-RH				
10	108-8134	1	Decal-Handle				
11	321-50	1	Screw-HH				
12	99-5239	1	Anchor-Cable				
13	3256-1	1	Washer-Flat				
14	3296-73	2	Nut-Lock, NI				
15	108-8158	1	Cable-Traction				
16	115-2860	2	Quick Release ASM				
17	115-1958	2	Bolt-Shoulder				
18	32144-11	2	Screw-HWHTF				
19	104-8690	1	Spring-Torsion				
20	115-1300-05	1	Handle				
21	114-2671-03	1	Bracket-Handle, LH				
22	114-2672-03	1	Bracket-Handle, RH				
23	106-6805	1	Guide-Cable				
25	115-2884	1	Decal-Instruction				
26	49-2040	2	Screw-HWHTF				
27	112-9972	2	Washer-Conical, Spring				

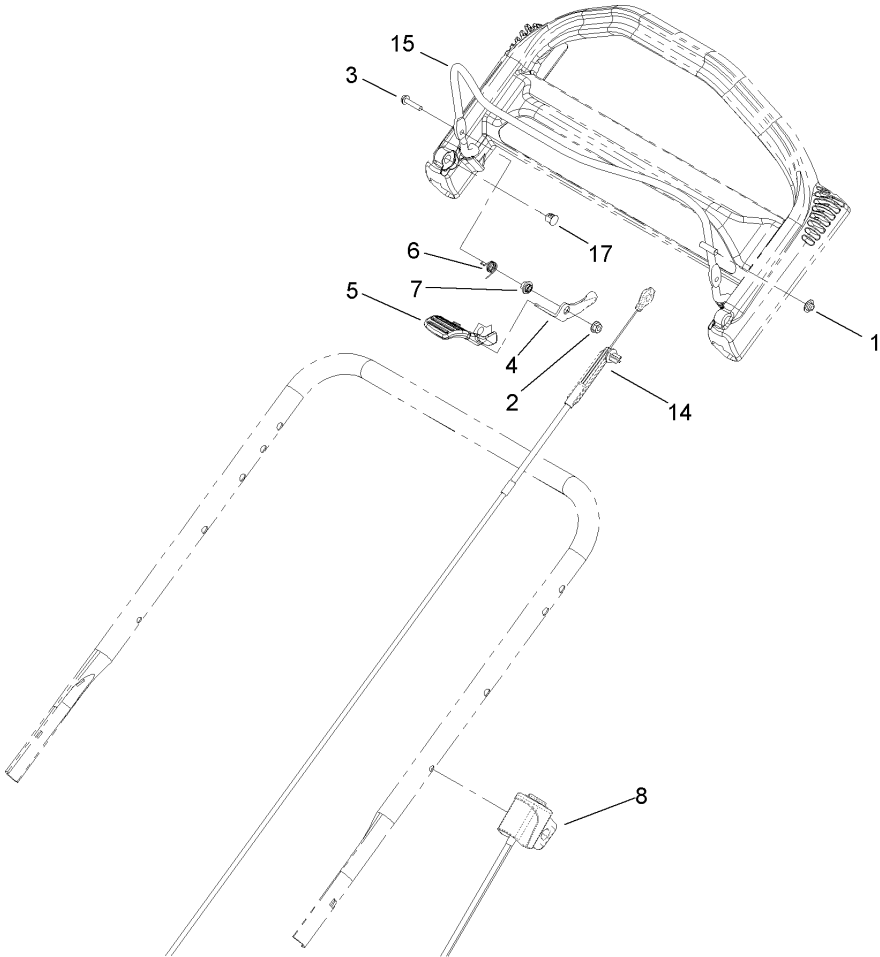 

Brake Bail and Cable Assembly

Ref	Part No.	Qty.	Description				
1	3290-337	1	Nut-Speed				
2	32128-17	1	Nut-Lock, Flange				
3	106-9169	1	Screw				
4	106-6802	1	Lever				
5	112-8884	1	Knob-BBC				
6	107-7462	1	Spring-Torsion				
7	107-7463	1	Spacer				
8	108-8161	1	Switch Housing ASM				
14	108-8155	1	Cable ASM				
15	108-3788-03	1	Bail-Brake				
17	104-9368	1	Plug-Dome				

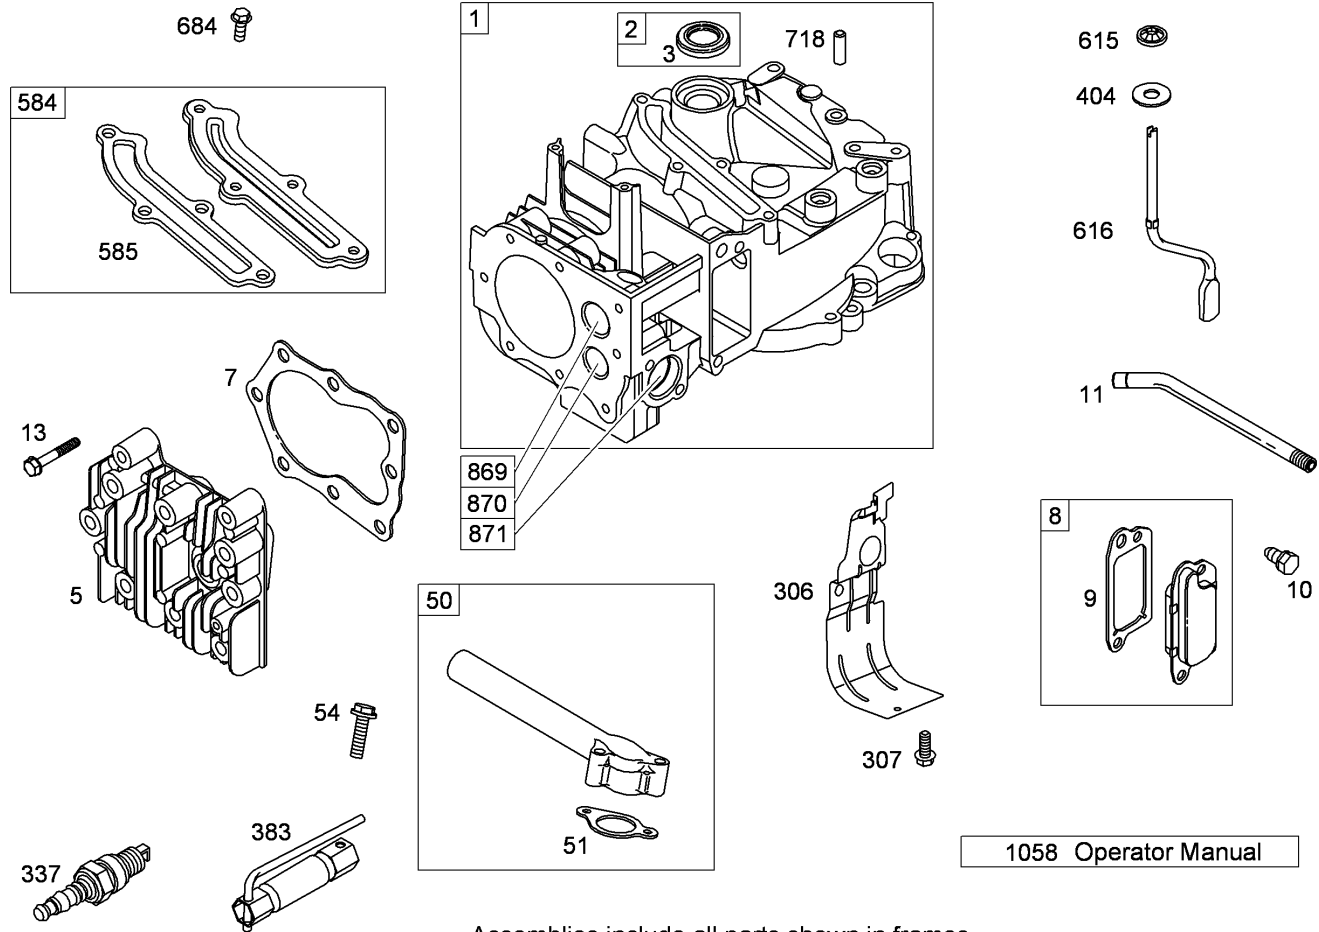 






Assemblies include all parts shown in frames

Cylinder Assembly

Briggs and Stratton 126T02-0237-B1

Ref	Part No.	Qty.	Description
1	697322	1	Cylinder ASM
2	399269	1	Bushing And Seal Kit
3	299819s	1	Seal-Oil (Magneto Side)
4	691160	1	Head-Cylinder
5	692249	1	Gasket-Head, Cylinder
6	695250	1	Breather ASM
7	696125	1	Gasket-Breather
8	691125	1	Screw (Breather ASM)
9	691781	1	Tube-Breather
10	690912	1	Screw (Cylinder Head)
11	794305	1	Manifold-Intake
12	794306	1	Gasket-Intake
13	691650	1	Screw (Intake Manifold)
14	790836	1	Shield-Cylinder
15	690345	1	Screw (Cylinder Shield)
16	802592s	1	Plug-Spark
17	89838s	1	Wrench-Spark Plug
18	690272	1	Washer (Governor Crank)
19	697734	1	Cover-Passage, Breather
20	691879	1	Gasket-Passage, Breather
21	690340	1	Retainer-Shaft, Governor
22	698801	1	Crank-Governor
23	690345	1	Screw (Breather Passage Cover)
24	690959	1	Pin-Locating

Ref	Part No.	Qty.	Description
25	691155	1	Seat-Valve (Intake)
26	690380	1	Seat-Valve (Exhaust)
27	262001	1	Bushing-Guide (Exhaust)
28	63709	1	Bushing-Guide (Intake)
29	277039TRI	1	Operator Manual

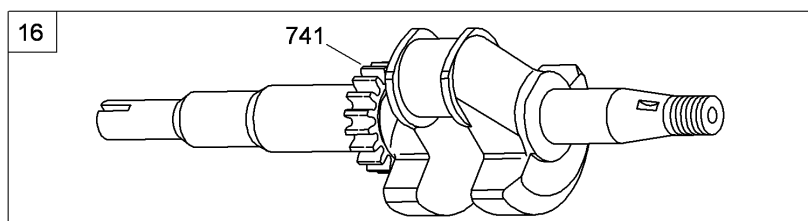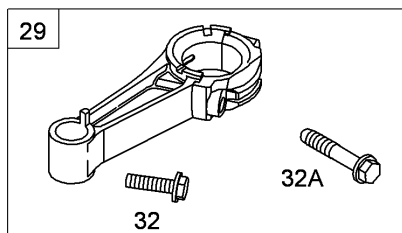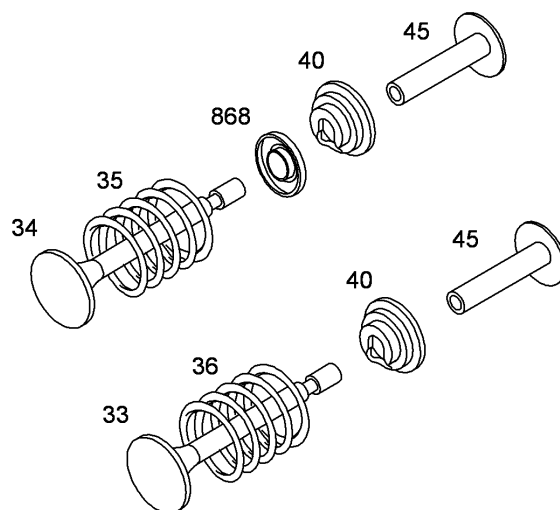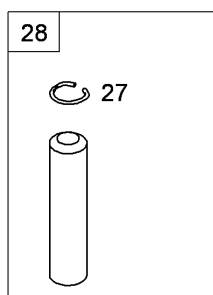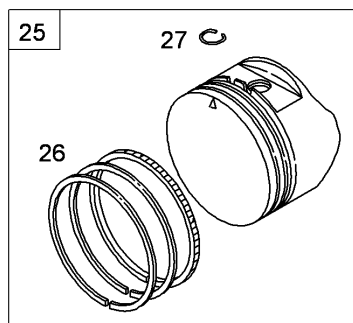     


Assemblies include all parts shown in frames

Crankshaft Assembly

Briggs and Stratton 126T02-0237-B1

Ref	Part No.	Qty.	Description				
216	791061	1	Crankshaft				
224	222698s	1	Key-Flywheel				
225	795429	1	Piston ASM (Standard)				
225	795430	1	Piston ASM (.020 Oversize)				
226	795431	1	Ring Set (Standard)				
226	795432	1	Ring Set (.020 Oversize)				
227	691866	1	Lock-Pin, Piston				
228	499423	1	Pin-Piston				
229	499424	1	Rod-Connecting				
232	691664	1	Screw (Connecting Rod)				
232A	695759	1	Screw (Connecting Rod)				
233	262651s	1	Valve-Exhaust				
234	262652s	1	Valve-Intake				
235	691270	1	Spring-Valve (Intake)				
236	691270	1	Spring-Valve (Exhaust)				
240	692194	1	Retainer-Valve				
245	690548	1	Tappet-Valve				
2741	795755	1	Gear-Timing				
2868	697338	1	Seal-Valve				

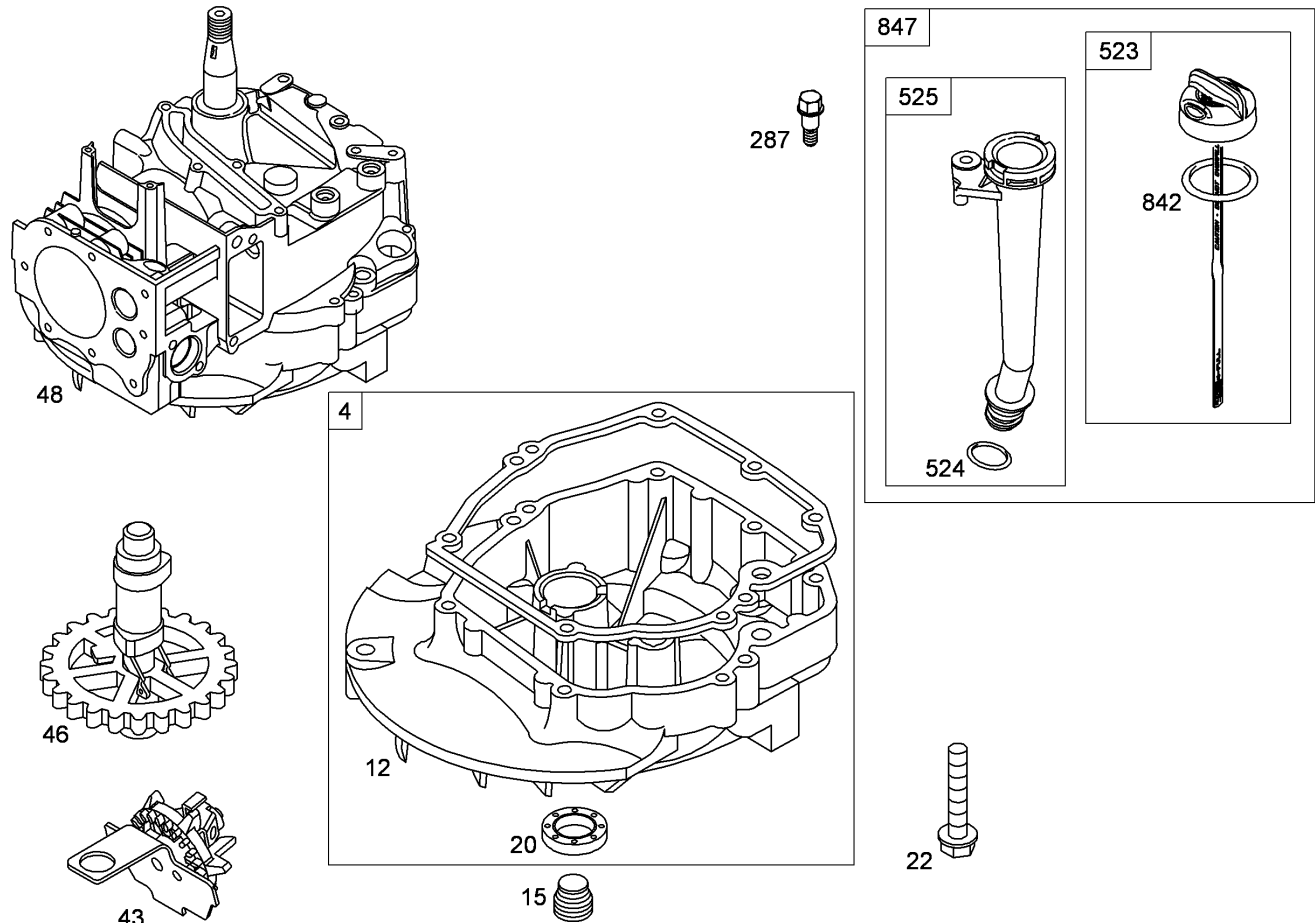 


Assemblies include all parts shown in frames

Crankcase Assembly

Briggs and Stratton 126T02-0237-B1

Ref	Part No.	Qty.	Description				
24	493279	1	Sump-Engine				
2412	692232	1	Gasket-Crankcase (.015 STD)				
215	691680	1	Plug-Drain, Oil				
2420	399781s	1	Seal-Oil				
222	691092	1	Screw (Engine Sump)				
243	691997	1	Slinger-Oil, Governor				
246	691449	1	Camshaft				
248	791772	1	Block-Short				
2287	690940	1	Screw (Dipstick Tube)				
2523	499621	1	Dipstick				
24524	692296	1	O-Ring Seal (Dipstick Tube)				
2525	495265	1	Tube-Dipstick				
24842	691031	1	Seal-O Ring (Dipstick Tube)				
2847	692047	1	Dipstick Tube ASM				


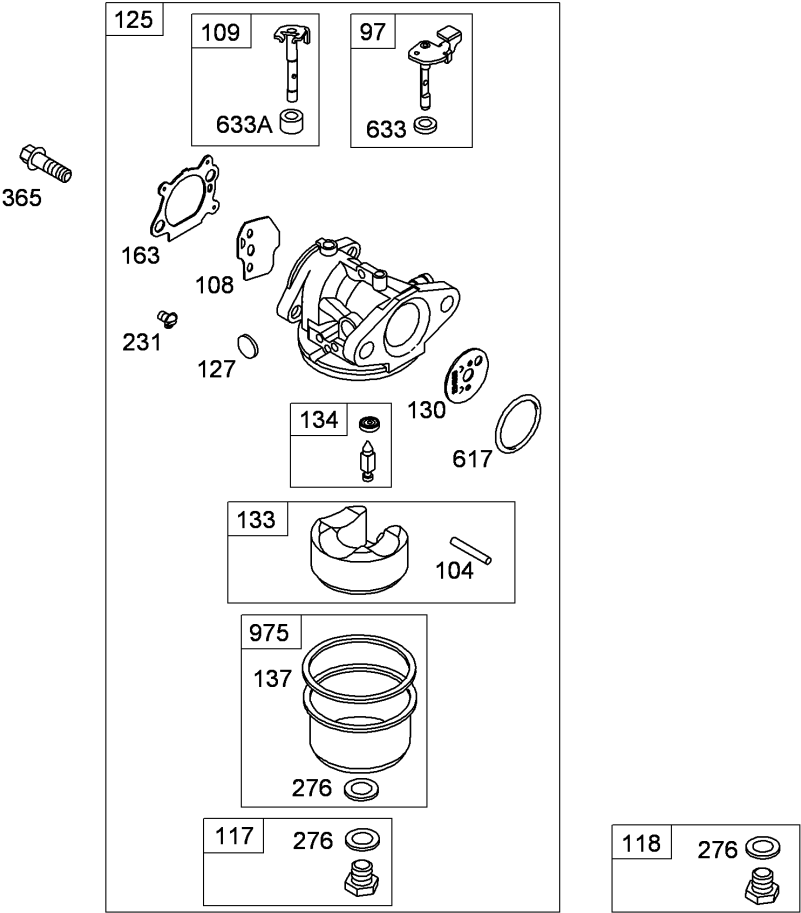 


Assemblies include all parts shown in frames

Carburetor Assembly

Briggs and Stratton 126T02-0237-B1


Ref	Part No.	Qty.	Description				
2 97	696565	1	Shaft-Throttle				
2 3 104	691242	1	Pin-Hinge, Float				
2 108	790844	1	Valve-Choke				
2 109	790843	1	Shaft-Choke				
2 117	691428	1	Jet-Main (Standard)				
2 118	498977	1	Jet-Main (High Altitude)				
2 125	794304	1	Carburetor				
2 3 127	694468	1	Plug-Welch				
2 130	696564	1	Valve-Throttle				
2 133	398187	1	Float-Carburetor				
2 3 134	398188	1	Needle And Seat Kit				
2 137	693981	1	Gasket-Bowl, Float				
2 3 163	272653s	1	Gasket-Cleaner, Air				
4 5							
2 231	691636	1	Screw (Choke Valve)				
2 3 276	271716	1	Washer-Sealing				
5							
2 365	692524	1	Screw (Carburetor)				
2 3 617	270344s	1	Seal-O Ring (Intake Manifold)				
5							
2 3 633	691321	1	Seal-Shaft, Choke Throttle				
5							
2 3 633A	693867	1	Seal-Shaft, Choke Throttle				
5							
2 975	493640	1	Bowl-Float				

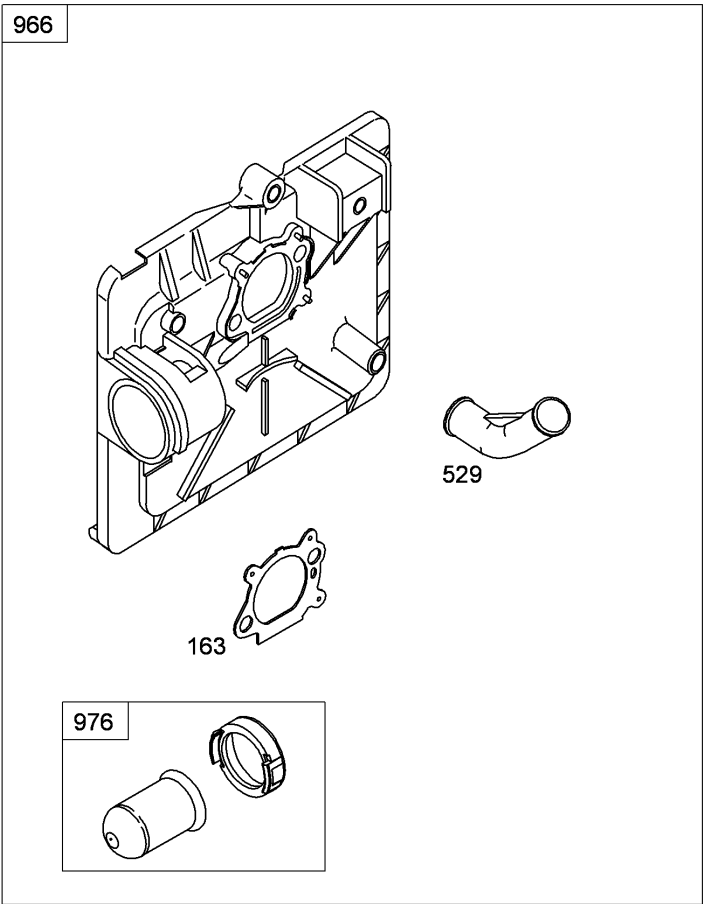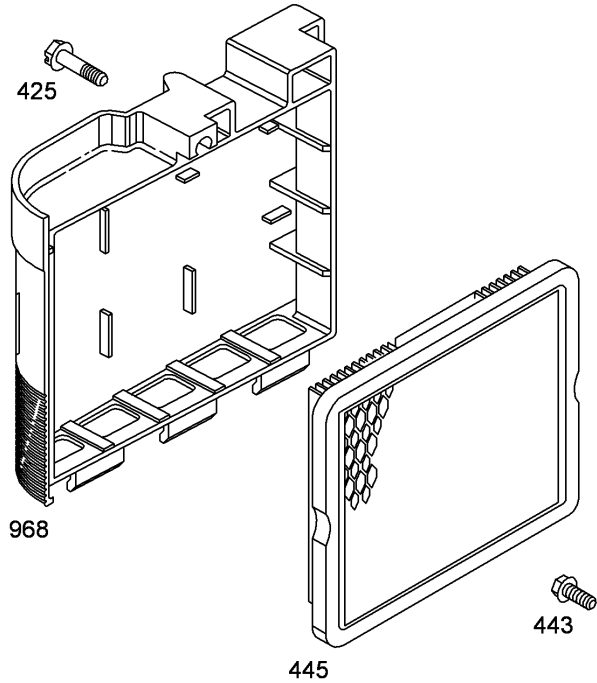  

Assemblies include all parts shown in frames

Air Cleaner Assembly
Briggs and Stratton 126T02-0237-B1








Ref	Part No.	Qty.	Description				
2 3 163 1 5	272653s	1	Gasket-Cleaner, Air				
2 425	690670	1	Screw (Air Cleaner Cover)				
2 443	692523	1	Screw (Air Cleaner Primer Base)				
2 445	491588s	1	Filter-Cartridge, Air Cleaner				
2 529	691923	1	Grommet				
2 966	792040	1	Base-Primer, Air Cleaner				
2 968	692298	1	Cover-Cleaner, Air				
2 976	694395	1	Primer-Carburetor				

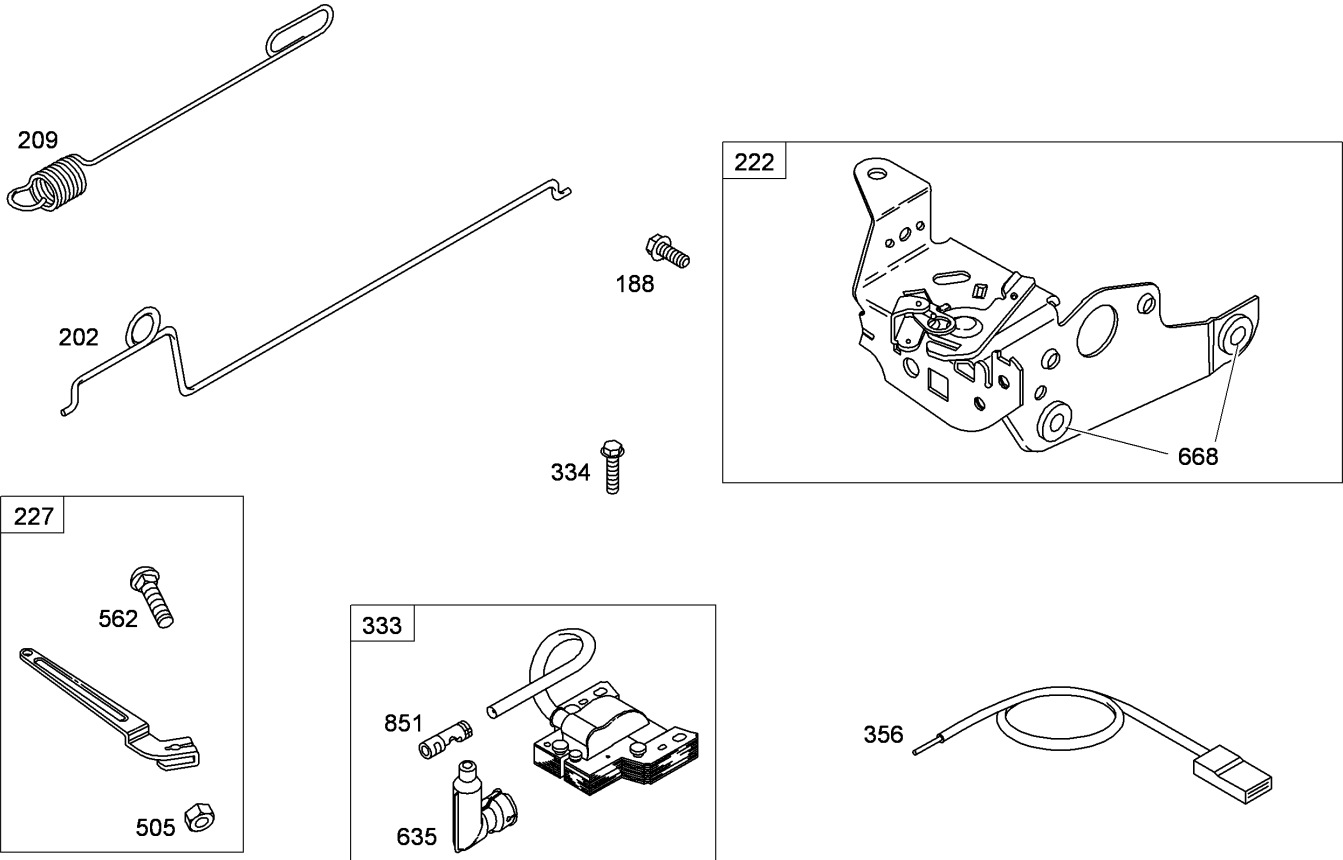 

Assemblies include all parts shown in frames

Governor Assembly
Briggs and Stratton 126T02-0237-B1

Ref	Part No.	Qty.	Description				
2188	693399	1	Screw (Control Bracket)				
2202	691829	1	Link-Governor, Mechanical				
2209	691292	1	Spring-Governor				
2222	793754	1	Bracket-Control				
2227	690783	1	Lever-Control, Governor				
2333	793353	1	Armature-Magneto				
2334	691061	1	Screw (Magneto Armature)				
2356	690791	1	Wire-Stop				
2505	691251	1	Nut (Governor Control Lever)				
2562	691119	1	Bolt (Governor Control Lever)				
2635	793351	1	Boot-Spark Plug				
2668	493823	1	Spacer				
2851	692424	1	Terminal-Spark Plug				

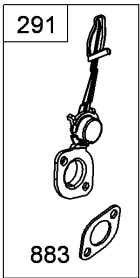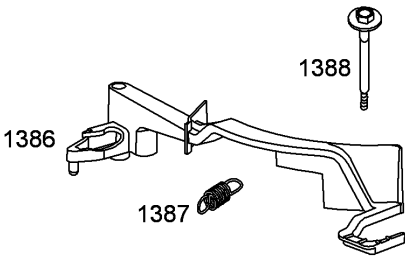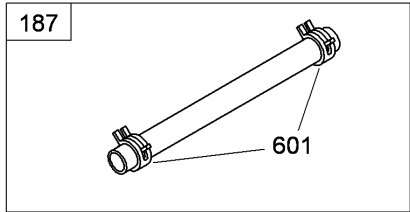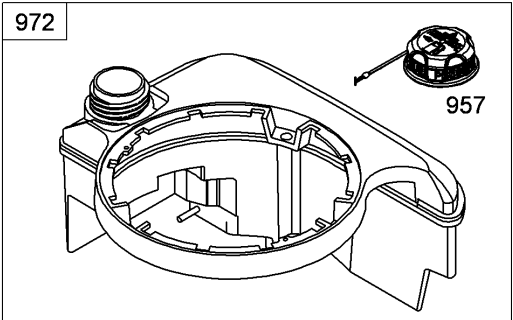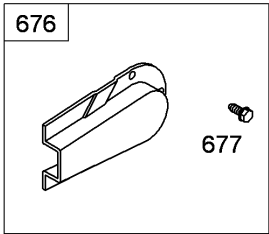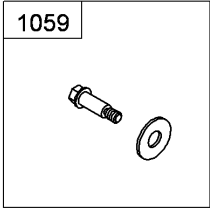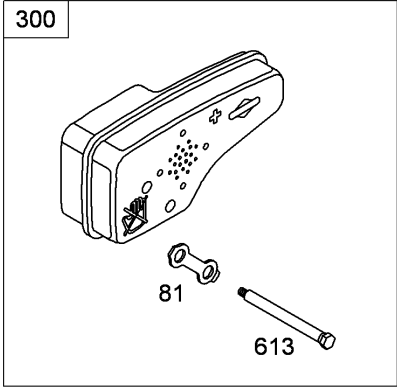       


Assemblies include all parts shown in frames

Muffler and Fuel Tank Assembly

Briggs and Stratton 126T02-0237-B1


Ref	Part No.	Qty.	Description				
281	691740	1	Lock-Screw, Muffler				
2187	791766	1	Line-Fuel (Cut To Required Length)				
2190	690940	1	Screw (Fuel Tank)				
2291	790830	1	Thermostat				
2300	692038	1	Muffler				
2601	791850	1	Clamp-Hose				
2613	691340	1	Screw (Muffler)				
2670	692294	1	Spacer-Tank, Fuel				
2676	493871	1	Deflector-Muffler				
2677	690661	1	Screw (Muffler Deflector)				
2883	691881	1	Gasket-Exhaust				
2957	699985	1	Cap-Tank, Fuel				
2972	699374	1	Tank-Fuel				
21059	692311	1	Screw And Washer Kit				
21386	790848	1	Vane-Air				
21387	790849	1	Spring-Vane, Air				
21388	790850	1	Screw (Air Vane)				

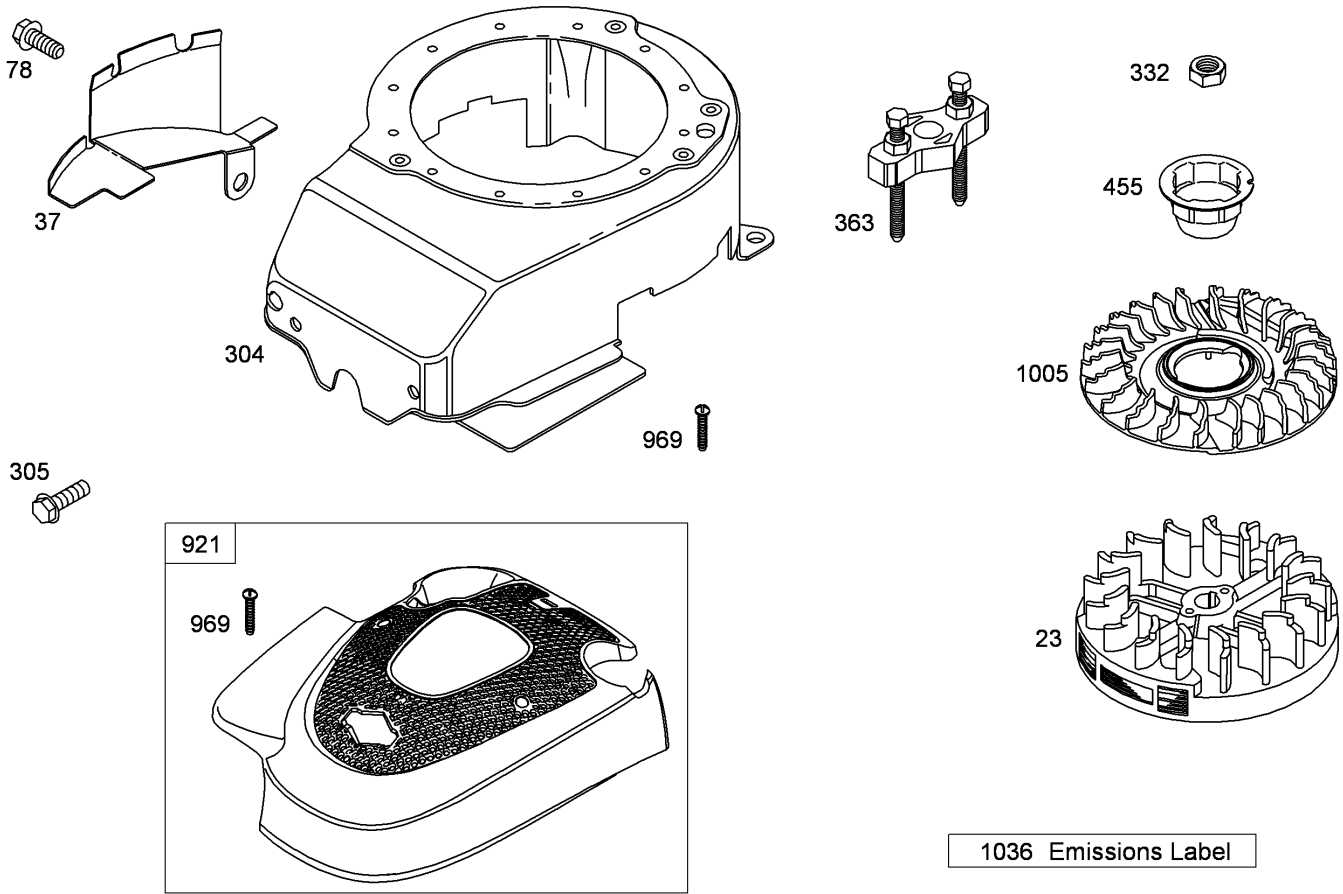 

Assemblies include all parts shown in frames

Blower Housing Assembly
Briggs and Stratton 126T02-0237-B1

Ref	Part No.	Qty.	Description				
223	691992	1	Flywheel				
237	694086	1	Guard-Flywheel				
278	691108	1	Screw (Flywheel Guard)				
2304	791288	1	Housing-Blower				
2305	691108	1	Screw (Blower Housing)				
2332	690662	1	Nut (Flywheel)				
2363	19069	1	Puller-Flywheel				
2455	791760	1	Cup-Flywheel				
2921	790036	1	Cover-Housing, Blower				
2969	691138	1	Screw (Blower Housing Cover)				
21005	691346	1	Fan-Flywheel				
21036		1	Label-Emissions				

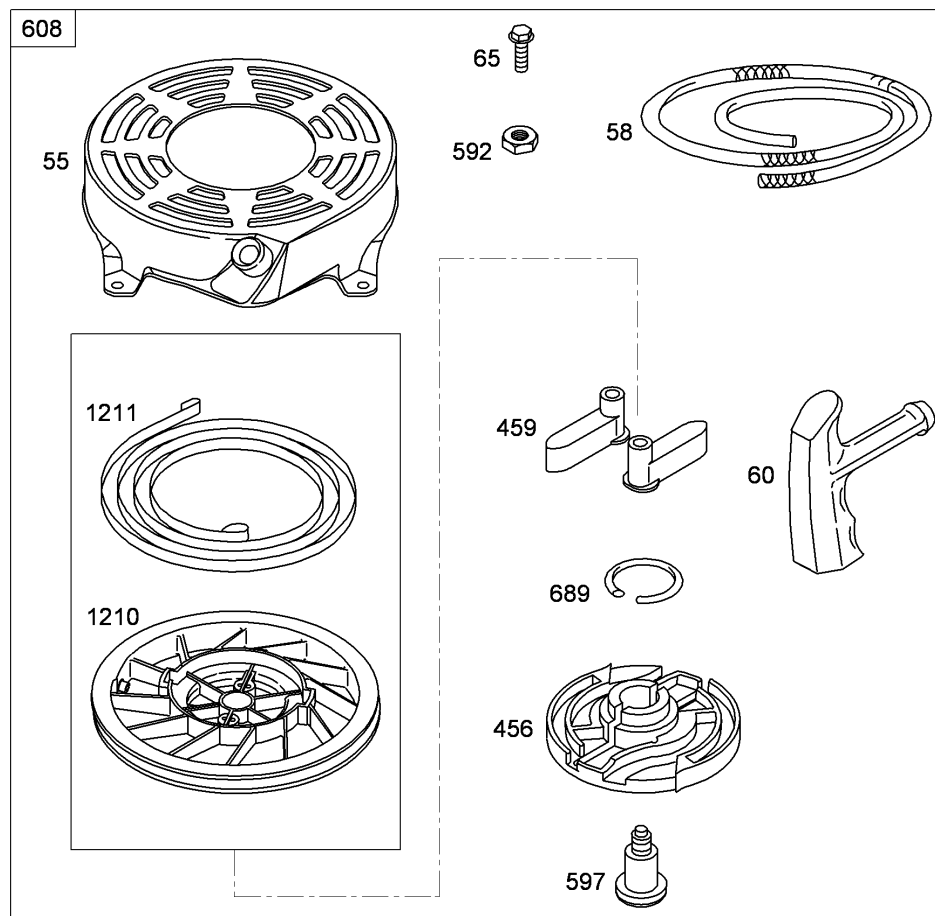 


Assemblies include all parts shown in frames

Starter Assembly

Briggs and Stratton 126T02-0237-B1

Ref	Part No.	Qty.	Description				
255	691421	1	Housing-Starter, Rewind				
258	697316	1	Rope-Starter (Cut To Required Length)				
260	281434s	1	Grip-Rope, Starter				
265	690837	1	Screw (Rewind Starter)				
2456	692299	1	Plate-Friction, Pawl				
2459	281505s	1	Ratchet-Pawl				
2592	690800	1	Nut (Rewind Starter)				
2597	691696	1	Screw (Pawl Friction Plate)				
2608	497680	1	Starter-Rewind				
2689	691855	1	Spring-Friction				
21210	498144	1	Pulley And Spring ASM (Pulley)				
21211	498144	1	Pulley And Spring ASM (Spring)				


 
358 Engine Gasket Set

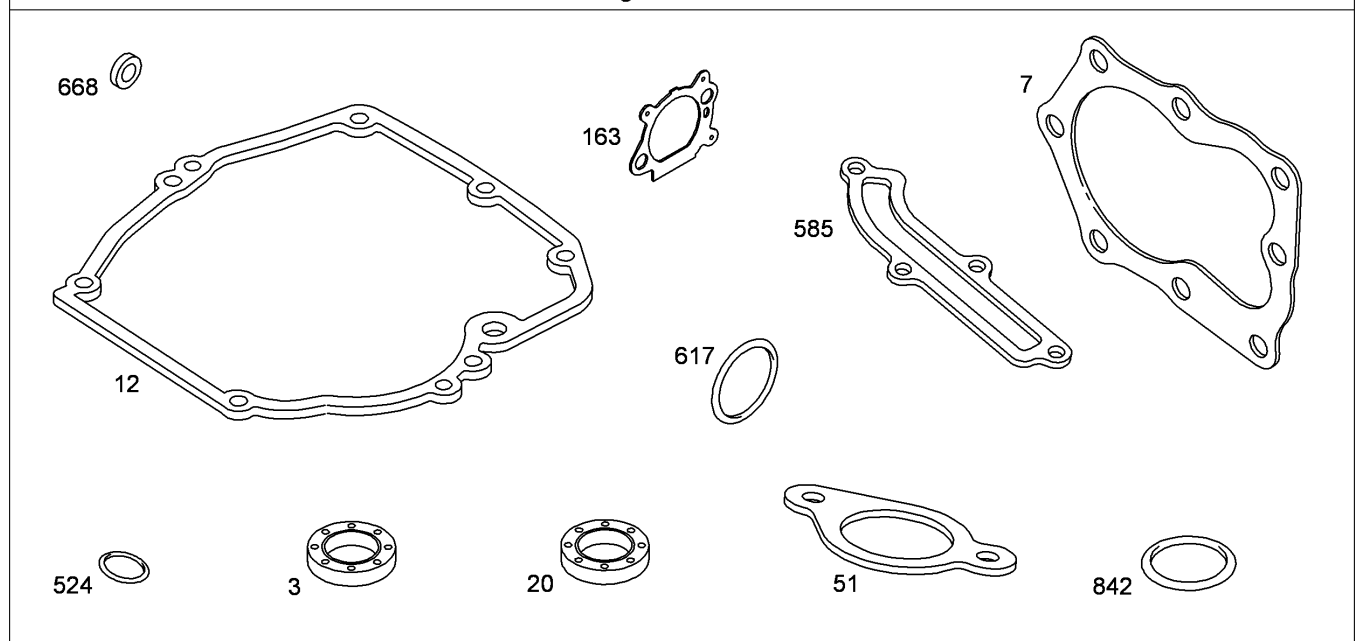

Assemblies include all parts shown in frames

Engine Gasket Set Briggs and Stratton 126T02-0237-B1

Ref	Part No.	Qty.	Description				
243	299819s	1	Seal-Oil (Magnetos Side)				
247	692249	1	Gasket-Head, Cylinder				
2412	692232	1	Gasket-Crankcase (.015 STD)				
2420	399781s	1	Seal-Oil (PTO Side)				
2451	794306	1	Gasket-Intake				
23163	272653s	1	Gasket-Cleaner, Air				
45							
2358	794307	1	Engine Gasket Set				
24524	692296	1	Seal-O Ring (Dipstick Tube)				
24585	691879	1	Gasket-Passage, Breather				
23617	270344s	1	Seal-O Ring (Intake Manifold)				
45							
24668	493823	1	Spacer				
24842	691031	1	Seal-O Ring (Dipstick)				

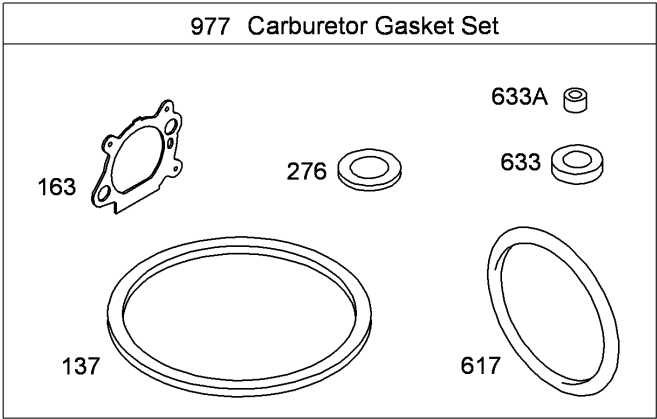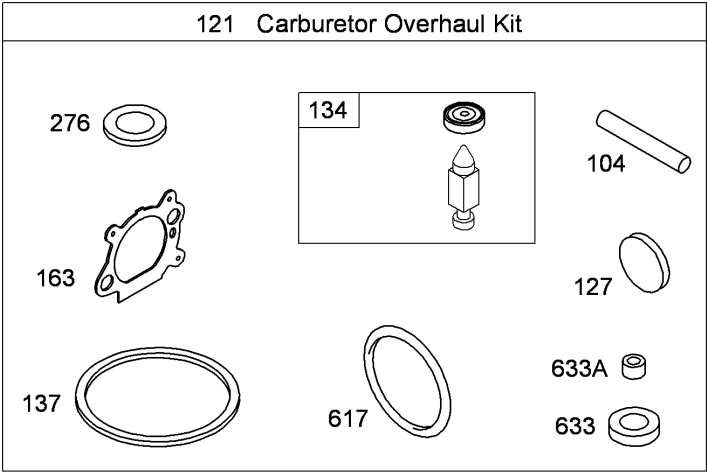  

Assemblies include all parts shown in frames

Carburetor Overhaul Kit
Briggs and Stratton 126T02-0237-B1

Ref	Part No.	Qty.	Description				
2 3 104	691242	1	Pin-Hinge, Float				
2 121	498260	1	Carburetor Overhaul Kit				
2 3 127	694468	1	Plug-Welch				
2 3 134	398188	1	Needle And Seat Kit				
2 3 137	693981	1	Gasket-Bowl, Float				
5							
2 3 163	272653s	1	Gasket-Cleaner, Air				
4 5							
2 3 276	271716	1	Washer-Sealing				
5							
2 3 617	270344s	1	Seal-O Ring (Intake Manifold)				
4 5							
2 3 633	691321	1	Seal-Shaft, Choke Throttle				
5							
2 3 633A	693867	1	Seal-Shaft, Choke Throttle				
5							
2 977	498261	1	Carburetor Gasket Set				

Attachments and Accessories

For 20093C - Super Recycler Lawn Mower

Product Name	Model/Part
Bagging Blade	108-3759-03
Traction Assist Handle Kit	108-8120
Toro Walk Mower Cover	490-7462
Plain Walk Mower Cover	490-7463
Dethatcher Kit	59131

