



## Super Recycler<sup>®</sup> Lawn Mower

Model No. 20093C - 290000001 and up.

### Parts Catalog

#### Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

#### Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

#### Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

#### Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents

| Description                             | Page     | Description                                  | Page     |
|-----------------------------------------|----------|----------------------------------------------|----------|
| Deck Housing and Rear Door Assembly     | ..... 3  | Carburetor Assembly Briggs and Stratton      |          |
| Discharge Door Assembly No. 107-3717    | ..... 4  | 126T02-0237-B1                               | ..... 15 |
| Housing Assembly No. 115-2855           | ..... 5  | Air Cleaner Assembly Briggs and Stratton     |          |
| Front Wheel Assembly                    | ..... 6  | 126T02-0237-B1                               | ..... 16 |
| Rear Wheel and Transmission Assembly    | ..... 7  | Governor Assembly Briggs and Stratton        |          |
| Engine and Blade Assembly               | ..... 8  | 126T02-0237-B1                               | ..... 17 |
| Handle Assembly                         | ..... 9  | Muffler and Fuel Tank Assembly Briggs and    |          |
| Brake Bail and Cable Assembly           | ..... 10 | Stratton 126T02-0237-B1                      | ..... 18 |
| Rear Bag Assembly                       | ..... 11 | Blower Housing Assembly Briggs and Stratton  |          |
| Cylinder Assembly Briggs and Stratton   |          | 126T02-0237-B1                               | ..... 19 |
| 126T02-0237-B1                          | ..... 12 | Starter Assembly Briggs and Stratton 126T02- |          |
| Crankshaft Assembly Briggs and Stratton |          | 0237-B1                                      | ..... 20 |
| 126T02-0237-B1                          | ..... 13 | Engine Gasket Set Briggs and Stratton        |          |
| Crankcase Assembly Briggs and Stratton  |          | 126T02-0237-B1                               | ..... 21 |
| 126T02-0237-B1                          | ..... 14 | Carburetor Overhaul Kit Briggs and Stratton  |          |
|                                         |          | 126T02-0237-B1                               | ..... 22 |
|                                         |          | Attachments and Accessories List             | ..... 23 |

 
## Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

|                                            |                                              |
|--------------------------------------------|----------------------------------------------|
| AR. .... as required                       | HYD. .... hydraulic                          |
| ASM. .... assembly                         | LH. .... left hand                           |
| BBC. .... blade brake clutch               | NI. .... nylon insert                        |
| CARR. .... carriage                        | NPTF. .... national pipe thread fine         |
| DEG. .... degrees                          | PFH. .... phillips flat head                 |
| EXT. .... external                         | PPH. .... phillips pan head                  |
| FH. .... flat head                         | PPHTF. .... phillips pan head thread forming |
| GA. .... gauge                             | PRH. .... phillips round head                |
| HD. .... heavy-duty                        | PTH. .... phillips truss head                |
| HF. .... hex flange                        | PTO. .... power-take-off                     |
| HH. .... hex head                          | RH. .... right hand                          |
| HHE. .... hex head flange                  | ROPS. .... roll-over protection system       |
| HHFTF. .... hex head flange thread forming | SFH. .... slotted fillister head             |
| HJ. .... hex jam                           | SHH. .... slotted hex head                   |
| HLH. .... hex lag head                     | SHWH. .... slotted hex washer head           |
| HOC. .... height-of-cut                    | SPH. .... slotted pan head                   |
| HSBH. .... hex socket button head          | SQH. .... square head                        |
| HSFH. .... hex socket flat head            | SRH. .... slotted round head                 |
| HS. .... hex socket head                   | STD. .... standard                           |
| HWH. .... hex washer head                  | TAP. .... self tapping                       |
| HWHTF. .... hex washer head thread forming | TTH. .... torx truss head                    |

## Footnotes

- |                                                      |                                                   |
|------------------------------------------------------|---------------------------------------------------|
| ❶ Not serviced separately                            | ❷ Obtain from your local Briggs & Stratton dealer |
| ❸ Included in Carburetor Overhaul Kit (Ref. No. 121) | ❹ Included in Engine Gasket Set (Ref. No. 358)    |
| ❺ Included in Carburetor Gasket Set (Ref. No. 977)   |                                                   |

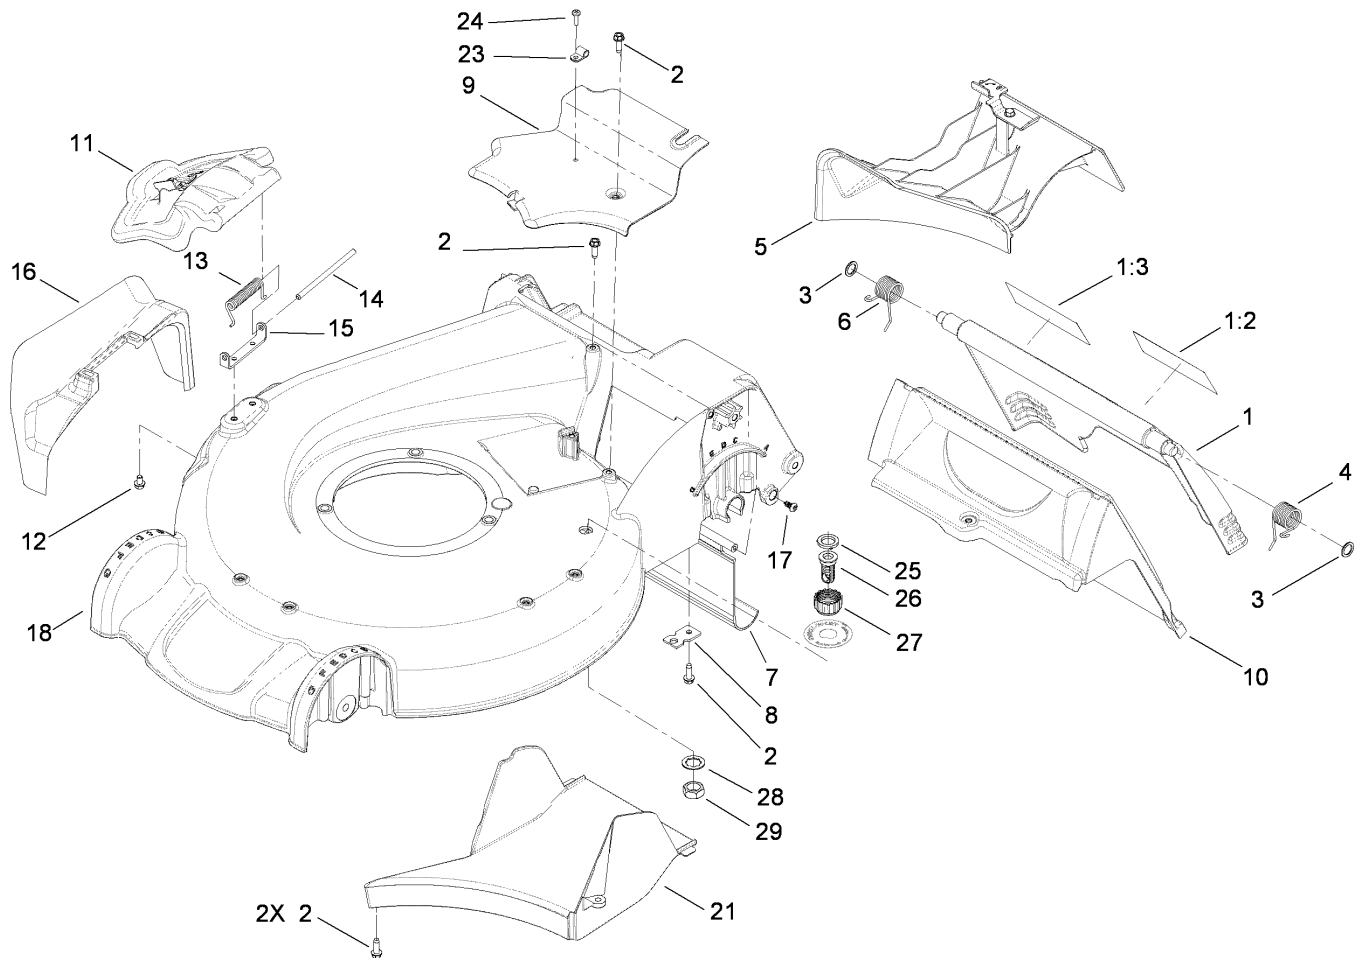


## Deck Housing and Rear Door Assembly


| Ref | Part No. | Qty. | Description               |
|-----|----------|------|---------------------------|
| 1   | 115-2856 | 1    | Rear Door ASM             |
| 1:2 | 114-7982 | 1    | Decal-Warning             |
| 1:3 | 104-7908 | 1    | Decal-Warning             |
| 2   | 49-2040  | 6    | Screw-HWHTF               |
| 3   | 94-8196  | 2    | Washer-Nylon              |
| 4   | 115-2859 | 1    | Spring-Torsion            |
| 5   | 115-8413 | 1    | Mulch Plug ASM            |
| 6   | 114-7924 | 1    | Spring-Torsion            |
| 7   | 114-1586 | 1    | Shield-Trailing           |
| 8   | 107-7497 | 1    | Bracket-Cable, Traction   |
| 9   | 107-7494 | 1    | Cover-Belt                |
| 10  | 114-2668 | 1    | Chute                     |
| 11  | 107-3717 | 1    | Discharge Door ASM        |
| 12  | 99-8445  | 2    | Screw-HWH                 |
| 13  | 99-5293  | 1    | Spring-Torsion            |
| 14  | 99-5291  | 1    | Rod-Cover                 |
| 15  | 112-6416 | 1    | Bracket-Cover             |
| 16  | 108-3753 | 1    | Chute-Discharge, Side     |
| 17  | 117-1092 | 2    | Screw-PPH                 |
| 18  | 115-2855 | 1    | Housing ASM               |
| 21  | 107-7495 | 1    | Tunnel-Discharge          |
| 23  | 98-2256  | 1    | Clamp                     |
| 24  | 32144-32 | 1    | Screw                     |
| 25  | 112-6438 | 1    | Washer-Seal, Washout Port |
 
| Ref | Part No. | Qty. | Description                 |
|-----|----------|------|-----------------------------|
| 26  | 112-6400 | 1    | Port-Washout                |
| 27  | 112-6401 | 1    | Coupling-Hose, Washout Port |
| 28  | 3254-5   | 1    | Washer-Tooth                |
| 29  | 3218-6   | 1    | Nut-Jam                     |

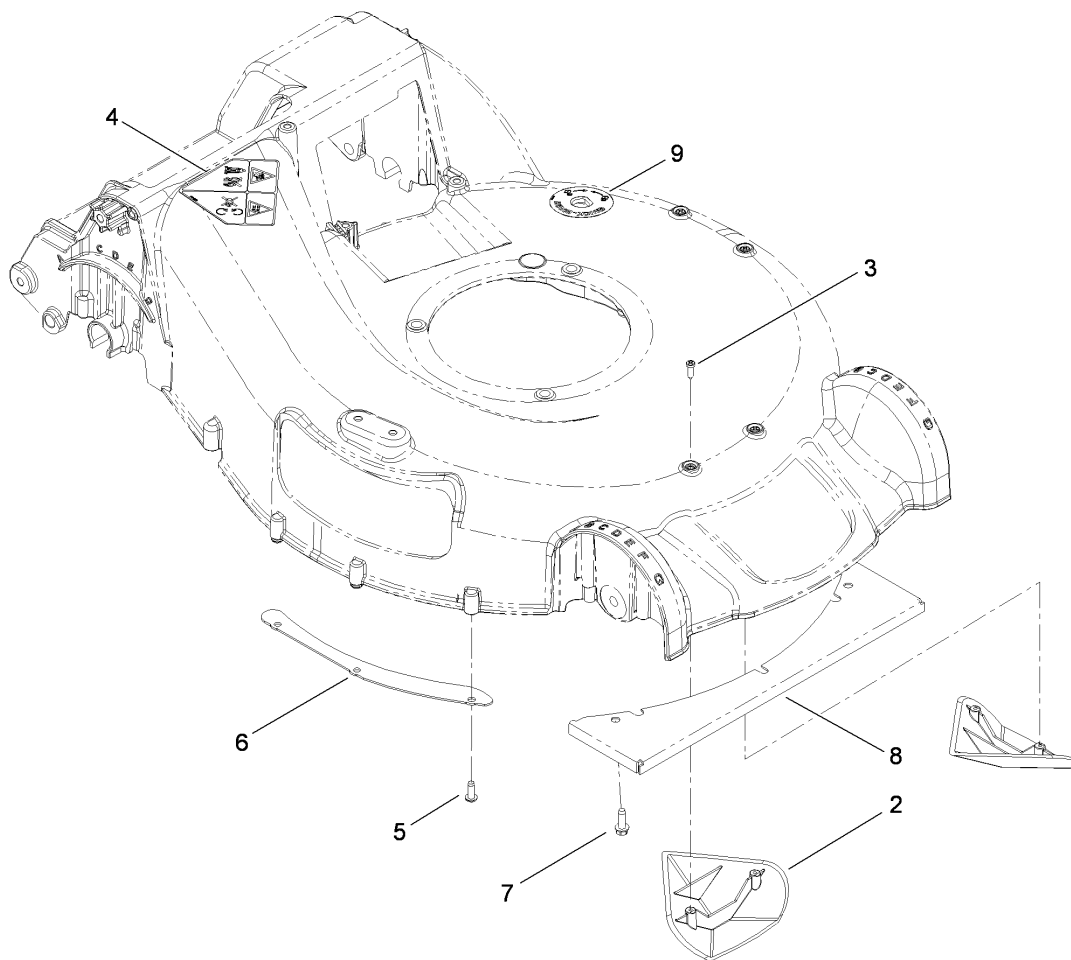


**Housing Assembly No. 115-2855**
 
| Ref | Part No.    | Qty. | Description        |  |  |  |  |
|-----|-------------|------|--------------------|--|--|--|--|
| 2   | 108-3798    | 2    | Kicker-Housing     |  |  |  |  |
| 3   | 32144-111   | 4    | Screw-PPH          |  |  |  |  |
| 4   | 112-8760    | 1    | Decal-Danger       |  |  |  |  |
| 5   | 63-8590     | 3    | Screw              |  |  |  |  |
| 6   | 105-1316-03 | 1    | Sheet-Lip          |  |  |  |  |
| 7   | 49-2040     | 3    | Screw-HWHTF        |  |  |  |  |
| 8   | 108-3797-03 | 1    | Plate-Cover, Front |  |  |  |  |
| 9   | 112-8867    | 1    | Decal              |  |  |  |  |

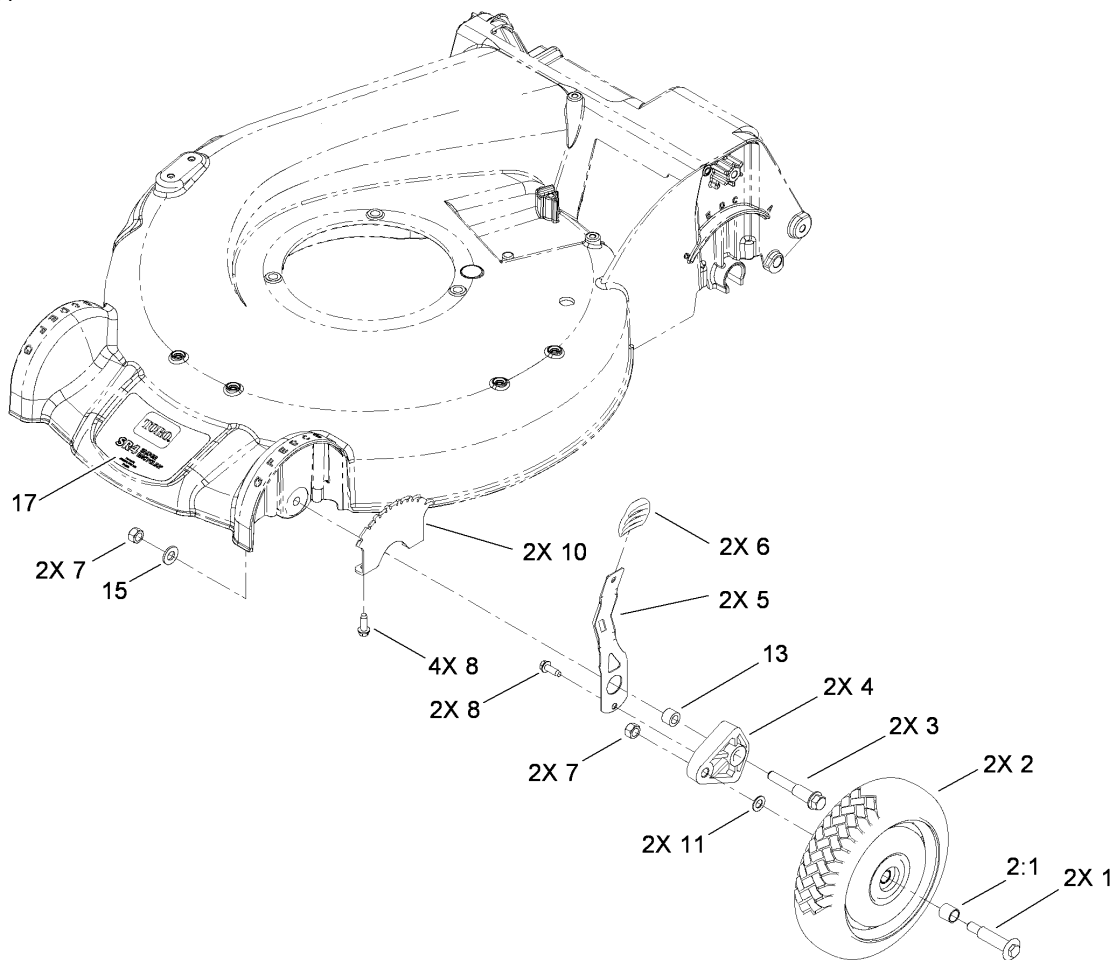

Front Wheel Assembly


| Ref | Part No. | Qty. | Description        |  |  |  |  |
|-----|----------|------|--------------------|--|--|--|--|
| 1   | 92-1057  | 2    | Bolt-Shoulder      |  |  |  |  |
| 2   | 14-9989  | 2    | Wheel And Tire ASM |  |  |  |  |
| 2:1 | 27-6250  | 2    | Bushing            |  |  |  |  |
| 3   | 114-3467 | 2    | Screw-Shoulder     |  |  |  |  |
| 4   | 107-7492 | 2    | Arm-Pivot          |  |  |  |  |
| 5   | 107-7491 | 2    | Arm-Spring         |  |  |  |  |
| 6   | 105-3042 | 2    | Knob-Lever, HOC    |  |  |  |  |
| 7   | 603773   | 4    | Nut                |  |  |  |  |
| 8   | 49-2040  | 10   | Screw-HWHTF        |  |  |  |  |
| 10  | 107-7478 | 4    | Plate-HOC          |  |  |  |  |
| 11  | 40-1940  | 2    | Washer             |  |  |  |  |
| 13  | 52-2480  | 2    | Spacer-Wheel       |  |  |  |  |
| 15  | 3256-24  | 2    | Washer-Flat        |  |  |  |  |
| 17  | 108-8168 | 1    | Decal              |  |  |  |  |

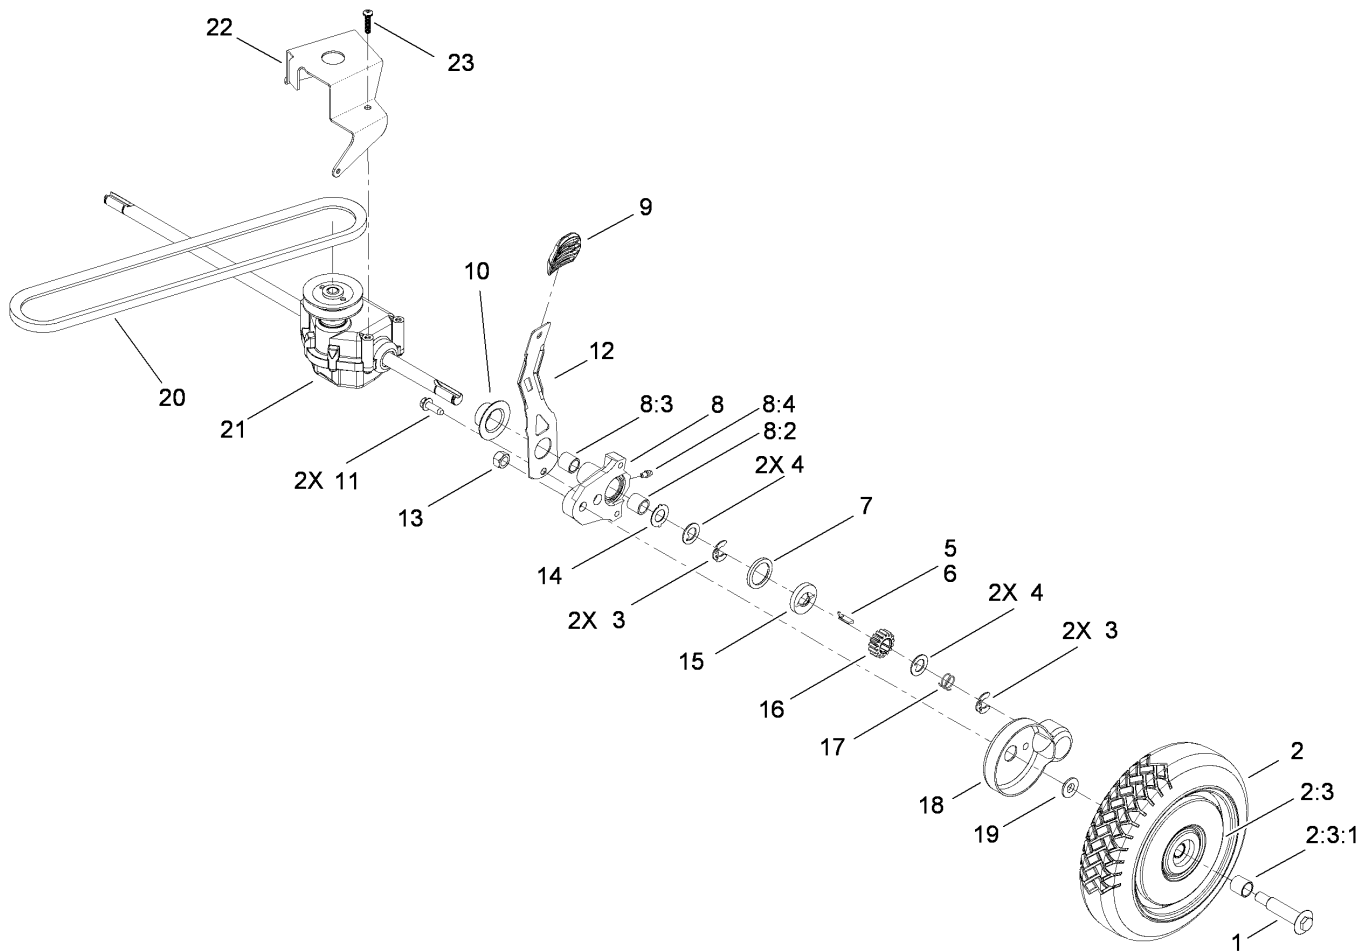 

## Rear Wheel and Transmission Assembly

| Ref   | Part No. | Qty. | Description                 |
|-------|----------|------|-----------------------------|
| 1     | 92-1057  | 2    | Bolt-Shoulder               |
| 2     | 16-0029  | 2    | Wheel And Tire ASM (W/Gear) |
| ① 2:3 |          | 1    | Wheel ASM                   |
| 2:3:1 | 27-6250  | 2    | Bushing                     |
| 3     | 65-2720  | 4    | Ring-Clip, Locking          |
| 4     | 65-4740  | 4    | Washer-Thrust, Keyed        |
| 5     | 66-6040  | 1    | Key-Rocking, RH             |
| 6     | 66-6050  | 1    | Key-Rocking, LH             |
| 7     | 65-4710  | 2    | Ring-Friction               |
| 8     | 100-8774 | 2    | Pivot Arm ASM               |
| 8:2   | 47-2900  | 1    | Bushing                     |
| 8:3   | 70-9760  | 1    | Bushing                     |
| 8:4   | 302-56   | 1    | Fitting-Grease              |
| 9     | 105-3042 | 2    | Knob-Lever, HOC             |
| 10    | 42-3520  | 2    | Cap-End                     |
| 11    | 49-2040  | 2    | Screw-HWTF                  |
| 12    | 107-7491 | 2    | Arm-Spring                  |
| 13    | 603773   | 2    | Nut                         |
| 14    | 65-4730  | 2    | Washer-Arm, Pivot           |
| 15    | 65-4760  | 2    | Washer-Clutch               |
| 16    | 65-4750  | 2    | Gear-Pinion                 |
| 17    | 65-4720  | 2    | Spring-Compression          |
| 18    | 74-1660  | 2    | Cover-Wheel                 |
| 19    | 74-1671  | 2    | Spacer-Cover, Wheel         |
 
| Ref | Part No.    | Qty. | Description               |
|-----|-------------|------|---------------------------|
| 20  | 92-1043     | 1    | V-Belt                    |
| 21  | 115-4560    | 1    | Transmission - Sr4, (6:1) |
| 22  | 114-7977-03 | 1    | Bracket-Transmission      |
| 23  | 108-7476    | 3    | Screw-Plastite            |

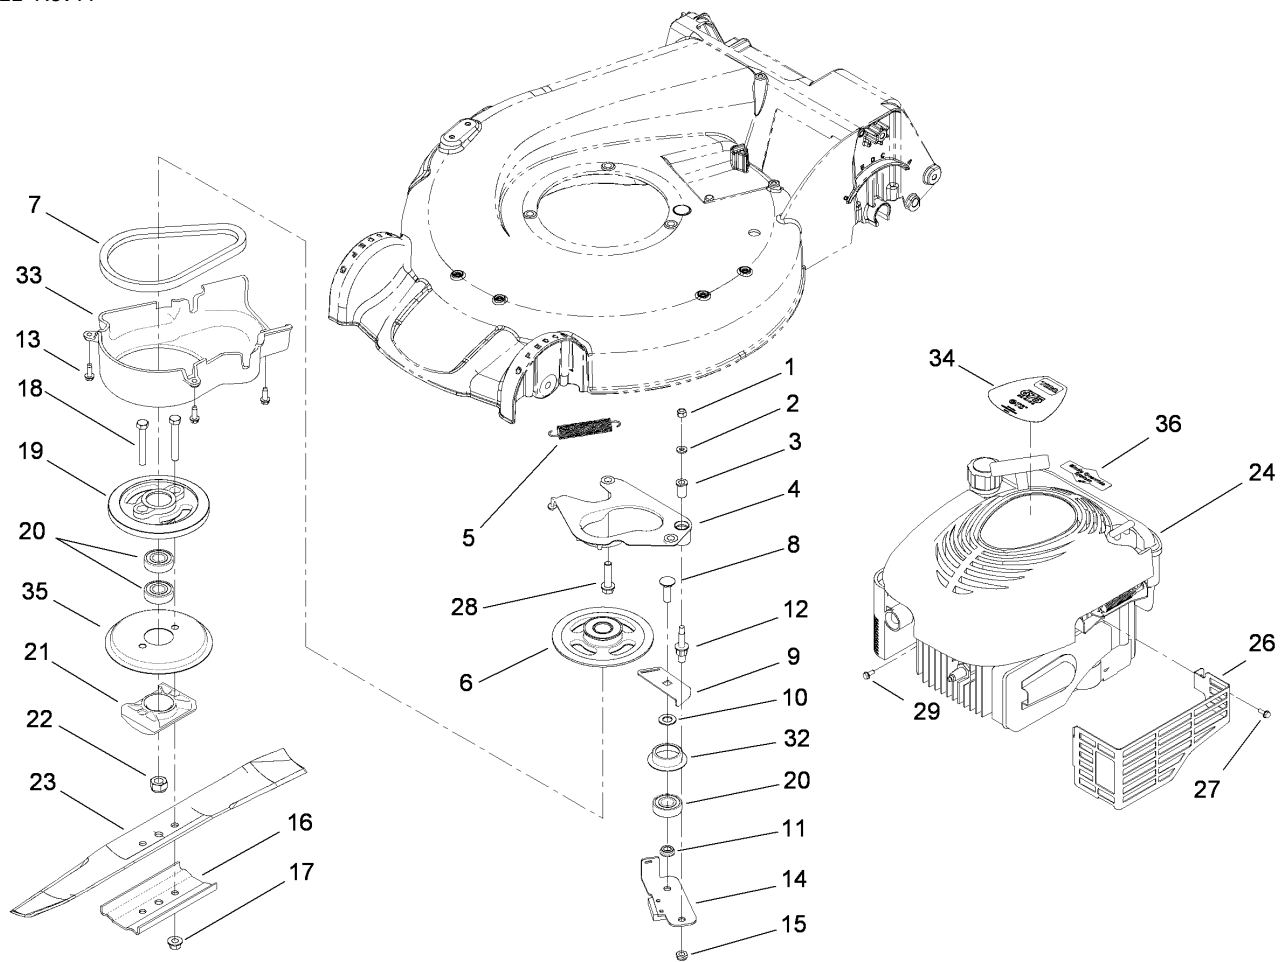


## Engine and Blade Assembly

| Ref | Part No.    | Qty. | Description                |
|-----|-------------|------|----------------------------|
| 1   | 3296-42     | 1    | Nut-Lock, NI               |
| 2   | 3256-16     | 1    | Washer-Flat                |
| 3   | 107-0797    | 1    | Bushing                    |
| 4   | 107-0761    | 1    | Plate-Anchor               |
| 5   | 108-3792    | 1    | Spring-Tension, Brake      |
| 6   | 110-7456    | 1    | Pulley                     |
| 7   | 110-1790    | 1    | Belt-BBC                   |
| 8   | 3231-25     | 1    | Screw-CARR                 |
| 9   | 107-7471    | 1    | Plate-Guide                |
| 10  | 605256      | 1    | Washer                     |
| 11  | 107-0758    | 1    | Spacer-Bearing             |
| 12  | 107-0759    | 1    | Bolt-Shoulder              |
| 13  | 49-2040     | 3    | Screw-HWHTF                |
| 14  | 107-7477    | 1    | Brake Arm ASM              |
| 15  | 603773      | 2    | Nut                        |
| 16  | 108-3766-03 | 1    | Support-Blade              |
| 17  | 54-9190     | 2    | Nut-Lock                   |
| 18  | 3211-42     | 2    | Screw-HH                   |
| 19  | 107-0754    | 1    | Drum                       |
| 20  | 100-1048    | 3    | Bearing-Ball               |
| 21  | 107-7487    | 1    | Support-Blade              |
| 22  | 108-9342    | 1    | Nut-Hex                    |
| 23  | 108-3762-03 | 1    | Blade-Recycling            |
| 24  |             | 1    | Engine-B&s, 126T02-0190-B1 |

 
| Ref | Part No.    | Qty. | Description    |
|-----|-------------|------|----------------|
| 26  | 104-7577-03 | 1    | Shield-Muffler |
| 27  | 32144-1     | 3    | Screw-Taptite  |
| 28  | 32144-102   | 3    | Screw-HWH      |
| 29  | 32144-112   | 1    | Screw-HWH      |
| 32  | 108-3790    | 1    | Retainer-Belt  |
| 33  | 107-7488    | 1    | Cover          |
| 34  | 114-0339    | 1    | Decal-Engine   |
| 35  | 108-3787    | 1    | Disc           |
| 36  | 108-8131    | 1    | Decal-Recoil   |



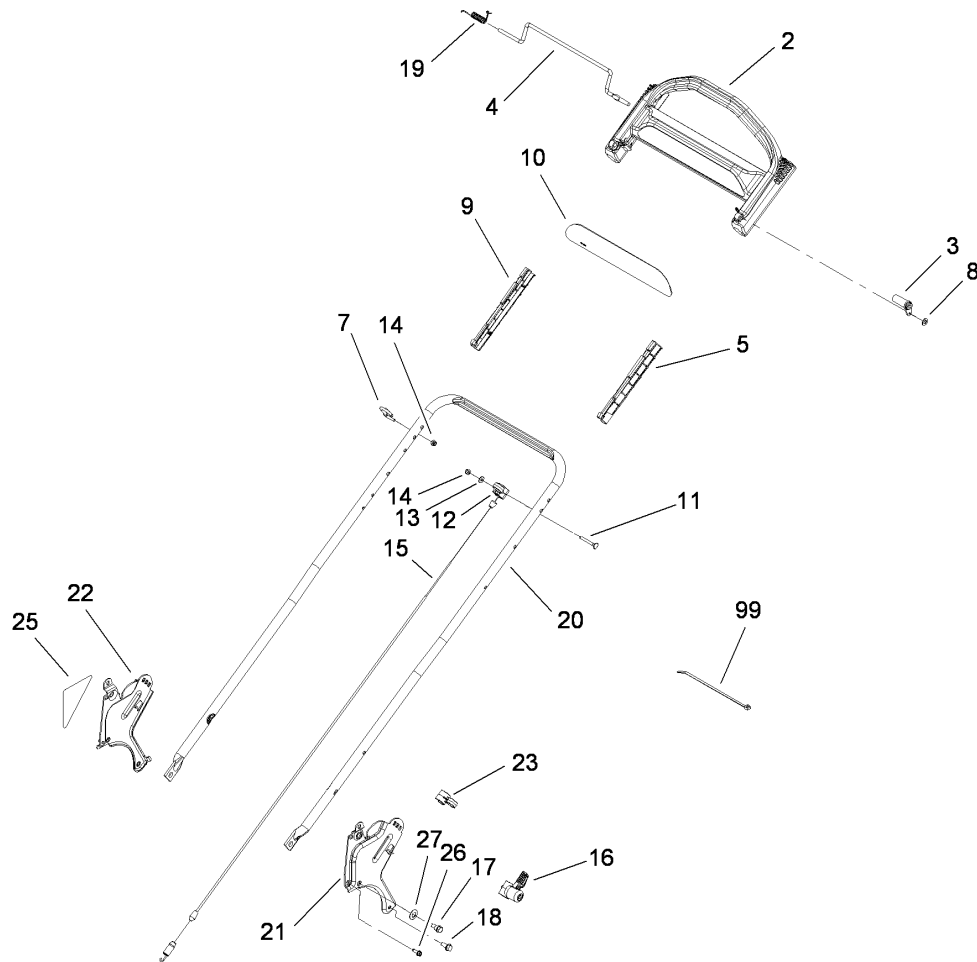

## Handle Assembly

 
| Ref | Part No.    | Qty. | Description            | Ref | Part No. | Qty. | Description |
|-----|-------------|------|------------------------|-----|----------|------|-------------|
| 2   | 104-8678    | 1    | Handle-Control         | 99  | 614249   | 3    | Strap-Tie   |
| 3   | 99-1589     | 1    | Lever-Traction         |     |          |      |             |
| 4   | 99-1588     | 1    | Bar-Control, Traction  |     |          |      |             |
| 5   | 105-6842    | 1    | Guide-LH               |     |          |      |             |
| 7   | 86-9671     | 1    | Guide-Rope             |     |          |      |             |
| 8   | 3256-23     | 1    | Washer-Flat            |     |          |      |             |
| 9   | 105-6841    | 1    | Guide-RH               |     |          |      |             |
| 10  | 108-8134    | 1    | Decal-Handle           |     |          |      |             |
| 11  | 321-50      | 1    | Screw-HH               |     |          |      |             |
| 12  | 99-5239     | 1    | Anchor-Cable           |     |          |      |             |
| 13  | 3256-1      | 1    | Washer-Flat            |     |          |      |             |
| 14  | 3296-73     | 2    | Nut-Lock, NI           |     |          |      |             |
| 15  | 108-8158    | 1    | Cable-Traction         |     |          |      |             |
| 16  | 115-2860    | 2    | Quick Release ASM      |     |          |      |             |
| 17  | 115-1958    | 2    | Bolt-Shoulder          |     |          |      |             |
| 18  | 32144-11    | 2    | Screw-HWHTF            |     |          |      |             |
| 19  | 104-8690    | 1    | Spring-Torsion         |     |          |      |             |
| 20  | 115-1300-05 | 1    | Handle                 |     |          |      |             |
| 21  | 114-2671-03 | 1    | Bracket-Handle, LH     |     |          |      |             |
| 22  | 114-2672-03 | 1    | Bracket-Handle, RH     |     |          |      |             |
| 23  | 106-6805    | 1    | Guide-Cable            |     |          |      |             |
| 25  | 115-2884    | 1    | Decal-Instruction      |     |          |      |             |
| 26  | 49-2040     | 2    | Screw-HWHTF            |     |          |      |             |
| 27  | 112-9972    | 2    | Washer-Conical, Spring |     |          |      |             |

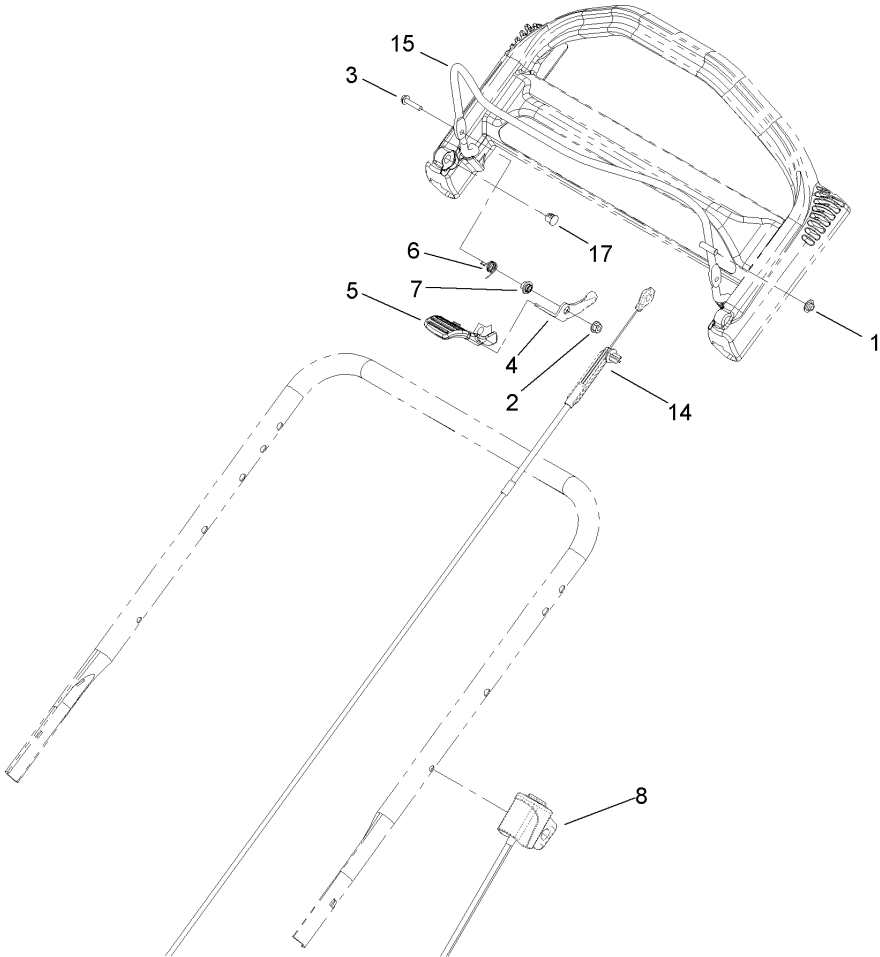

**Brake Bail and Cable Assembly**

| Ref | Part No.    | Qty. | Description        |  |  |  |  |
|-----|-------------|------|--------------------|--|--|--|--|
| 1   | 3290-337    | 1    | Nut-Speed          |  |  |  |  |
| 2   | 32128-17    | 1    | Nut-Lock, Flange   |  |  |  |  |
| 3   | 106-9169    | 1    | Screw              |  |  |  |  |
| 4   | 106-6802    | 1    | Lever              |  |  |  |  |
| 5   | 112-8884    | 1    | Knob-BBC           |  |  |  |  |
| 6   | 107-7462    | 1    | Spring-Torsion     |  |  |  |  |
| 7   | 107-7463    | 1    | Spacer             |  |  |  |  |
| 8   | 108-8161    | 1    | Switch Housing ASM |  |  |  |  |
| 14  | 108-8155    | 1    | Cable ASM          |  |  |  |  |
| 15  | 108-3788-03 | 1    | Bail-Brake         |  |  |  |  |
| 17  | 104-9368    | 1    | Plug-Dome          |  |  |  |  |

 11

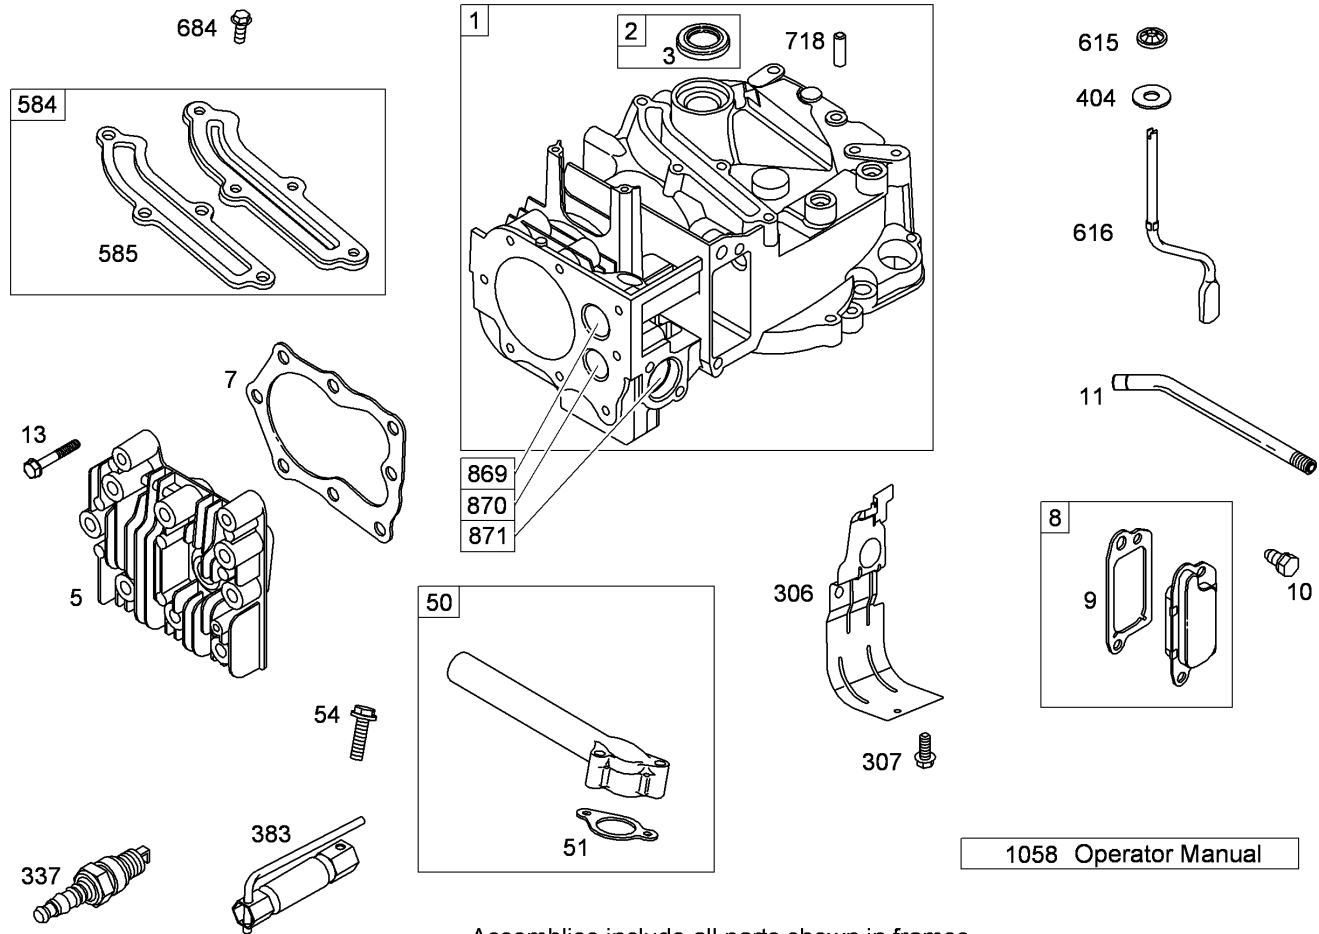






Assemblies include all parts shown in frames

# Cylinder Assembly
     
## Briggs and Stratton 126T02-0237-B1

| Ref | Part No. | Qty. | Description                    |
|-----|----------|------|--------------------------------|
| 1   | 697322   | 1    | Cylinder ASM                   |
| 2   | 399269   | 1    | Bushing And Seal Kit           |
| 3   | 299819s  | 1    | Seal-Oil (Magneto Side)        |
| 4   | 691160   | 1    | Head-Cylinder                  |
| 5   | 692249   | 1    | Gasket-Head, Cylinder          |
| 6   | 695250   | 1    | Breather ASM                   |
| 7   | 696125   | 1    | Gasket-Breather                |
| 8   | 691125   | 1    | Screw (Breather ASM)           |
| 9   | 691781   | 1    | Tube-Breather                  |
| 10  | 690912   | 1    | Screw (Cylinder Head)          |
| 11  | 794305   | 1    | Manifold-Intake                |
| 12  | 794306   | 1    | Gasket-Intake                  |
| 13  | 691650   | 1    | Screw (Intake Manifold)        |
| 14  | 790836   | 1    | Shield-Cylinder                |
| 15  | 690345   | 1    | Screw (Cylinder Shield)        |
| 16  | 802592s  | 1    | Plug-Spark                     |
| 17  | 89838s   | 1    | Wrench-Spark Plug              |
| 18  | 690272   | 1    | Washer (Governor Crank)        |
| 19  | 697734   | 1    | Cover-Passage, Breather        |
| 20  | 691879   | 1    | Gasket-Passage, Breather       |
| 21  | 690340   | 1    | Retainer-Shaft, Governor       |
| 22  | 698801   | 1    | Crank-Governor                 |
| 23  | 690345   | 1    | Screw (Breather Passage Cover) |
| 24  | 690959   | 1    | Pin-Locating                   |

| Ref | Part No.  | Qty. | Description             |
|-----|-----------|------|-------------------------|
| 25  | 691155    | 1    | Seat-Valve (Intake)     |
| 26  | 690380    | 1    | Seat-Valve (Exhaust)    |
| 27  | 262001    | 1    | Bushing-Guide (Exhaust) |
| 28  | 63709     | 1    | Bushing-Guide (Intake)  |
| 29  | 277039TRI | 1    | Operator Manual         |

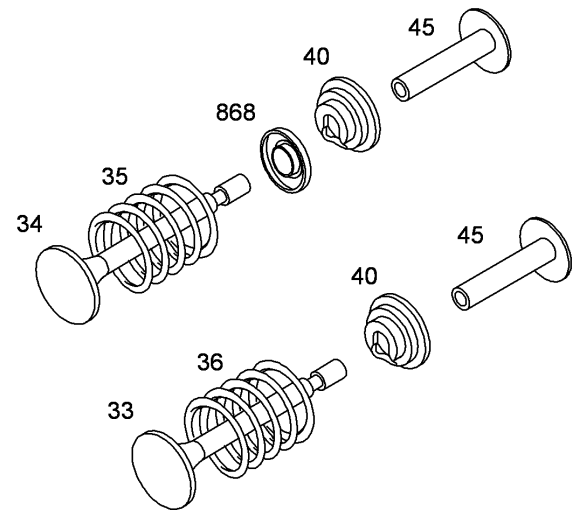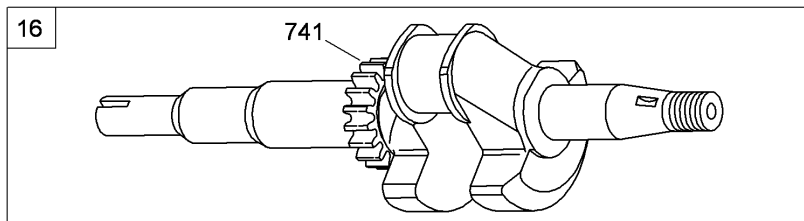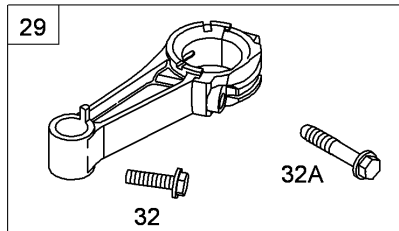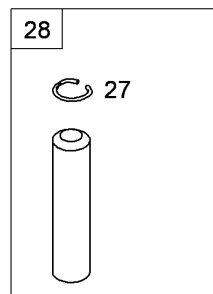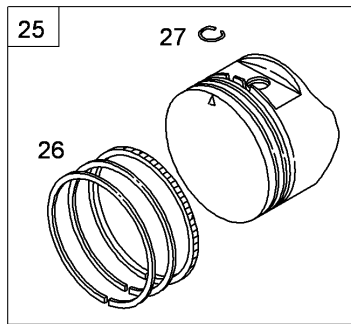


Assemblies include all parts shown in frames

# Crankshaft Assembly
 
## Briggs and Stratton 126T02-0237-B1


| Ref  | Part No. | Qty. | Description                |  |  |  |  |
|------|----------|------|----------------------------|--|--|--|--|
| 216  | 791061   | 1    | Crankshaft                 |  |  |  |  |
| 224  | 222698s  | 1    | Key-Flywheel               |  |  |  |  |
| 225  | 795429   | 1    | Piston ASM (Standard)      |  |  |  |  |
| 225  | 795430   | 1    | Piston ASM (.020 Oversize) |  |  |  |  |
| 226  | 795431   | 1    | Ring Set (Standard)        |  |  |  |  |
| 226  | 795432   | 1    | Ring Set (.020 Oversize)   |  |  |  |  |
| 227  | 691866   | 1    | Lock-Pin, Piston           |  |  |  |  |
| 228  | 499423   | 1    | Pin-Piston                 |  |  |  |  |
| 229  | 499424   | 1    | Rod-Connecting             |  |  |  |  |
| 232  | 691664   | 1    | Screw (Connecting Rod)     |  |  |  |  |
| 232A | 695759   | 1    | Screw (Connecting Rod)     |  |  |  |  |
| 233  | 262651s  | 1    | Valve-Exhaust              |  |  |  |  |
| 234  | 262652s  | 1    | Valve-Intake               |  |  |  |  |
| 235  | 691270   | 1    | Spring-Valve (Intake)      |  |  |  |  |
| 236  | 691270   | 1    | Spring-Valve (Exhaust)     |  |  |  |  |
| 240  | 692194   | 1    | Retainer-Valve             |  |  |  |  |
| 245  | 690548   | 1    | Tappet-Valve               |  |  |  |  |
| 2741 | 795755   | 1    | Gear-Timing                |  |  |  |  |
| 2868 | 697338   | 1    | Seal-Valve                 |  |  |  |  |

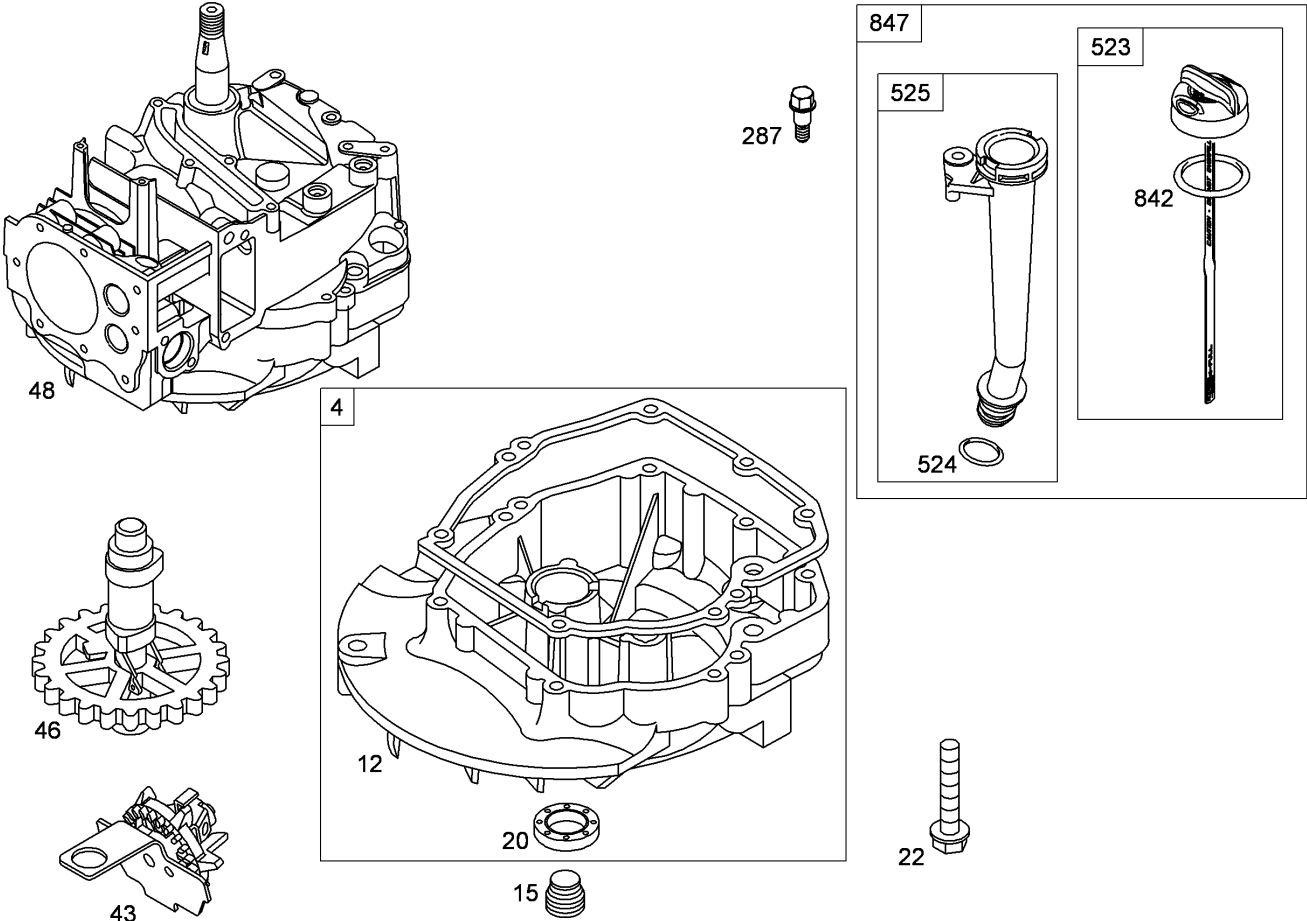

Assemblies include all parts shown in frames

**Crankcase Assembly**  
**Briggs and Stratton 126T02-0237-B1**

| Ref   | Part No. | Qty. | Description                 |  |  |  |  |
|-------|----------|------|-----------------------------|--|--|--|--|
| 24    | 493279   | 1    | Sump-Engine                 |  |  |  |  |
| 2412  | 692232   | 1    | Gasket-Crankcase (.015 STD) |  |  |  |  |
| 215   | 691680   | 1    | Plug-Drain, Oil             |  |  |  |  |
| 2420  | 399781s  | 1    | Seal-Oil                    |  |  |  |  |
| 222   | 691092   | 1    | Screw (Engine Sump)         |  |  |  |  |
| 243   | 691997   | 1    | Slinger-Oil, Governor       |  |  |  |  |
| 246   | 691449   | 1    | Camshaft                    |  |  |  |  |
| 248   | 791772   | 1    | Block-Short                 |  |  |  |  |
| 2287  | 690940   | 1    | Screw (Dipstick Tube)       |  |  |  |  |
| 2523  | 499621   | 1    | Dipstick                    |  |  |  |  |
| 24524 | 692296   | 1    | O-Ring Seal (Dipstick Tube) |  |  |  |  |
| 2525  | 495265   | 1    | Tube-Dipstick               |  |  |  |  |
| 24842 | 691031   | 1    | Seal-O Ring (Dipstick Tube) |  |  |  |  |
| 2847  | 692047   | 1    | Dipstick Tube ASM           |  |  |  |  |


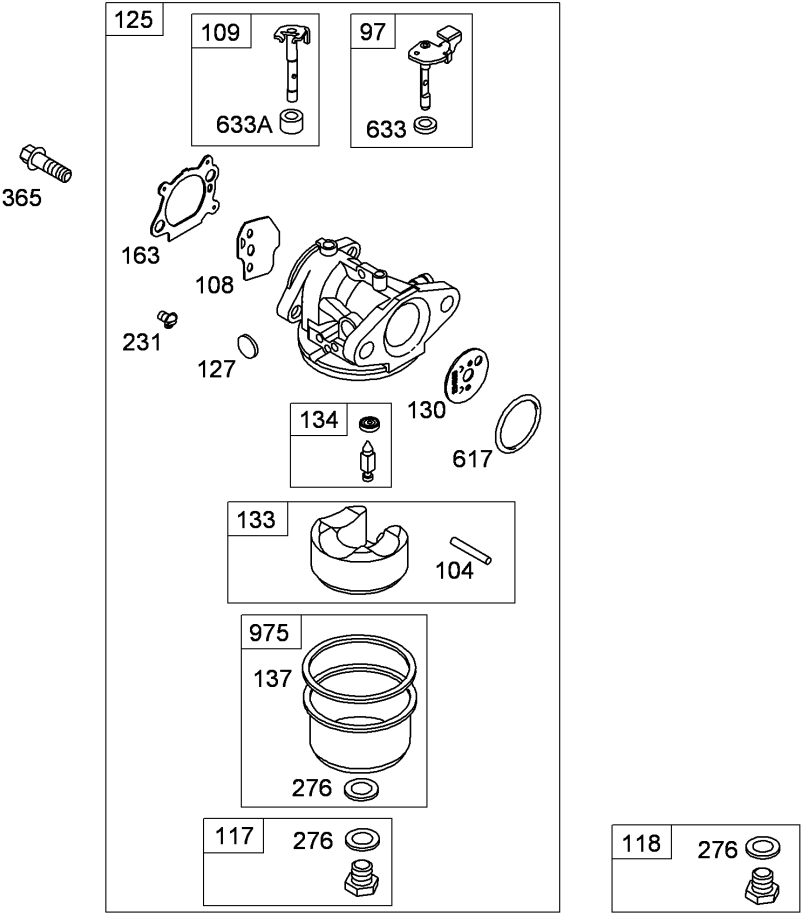 


Assemblies include all parts shown in frames

# Carburetor Assembly
  
## Briggs and Stratton 126T02-0237-B1

| Ref      | Part No. | Qty. | Description                   |  |  |  |  |
|----------|----------|------|-------------------------------|--|--|--|--|
| 2 97     | 696565   | 1    | Shaft-Throttle                |  |  |  |  |
| 2 3 104  | 691242   | 1    | Pin-Hinge, Float              |  |  |  |  |
| 2 108    | 790844   | 1    | Valve-Choke                   |  |  |  |  |
| 2 109    | 790843   | 1    | Shaft-Choke                   |  |  |  |  |
| 2 117    | 691428   | 1    | Jet-Main (Standard)           |  |  |  |  |
| 2 118    | 498977   | 1    | Jet-Main (High Altitude)      |  |  |  |  |
| 2 125    | 794304   | 1    | Carburetor                    |  |  |  |  |
| 2 3 127  | 694468   | 1    | Plug-Welch                    |  |  |  |  |
| 2 130    | 696564   | 1    | Valve-Throttle                |  |  |  |  |
| 2 133    | 398187   | 1    | Float-Carburetor              |  |  |  |  |
| 2 3 134  | 398188   | 1    | Needle And Seat Kit           |  |  |  |  |
| 2 137    | 693981   | 1    | Gasket-Bowl, Float            |  |  |  |  |
| 2 3 163  | 272653s  | 1    | Gasket-Cleaner, Air           |  |  |  |  |
| 4 5      |          |      |                               |  |  |  |  |
| 2 231    | 691636   | 1    | Screw (Choke Valve)           |  |  |  |  |
| 2 3 276  | 271716   | 1    | Washer-Sealing                |  |  |  |  |
| 5        |          |      |                               |  |  |  |  |
| 2 365    | 692524   | 1    | Screw (Carburetor)            |  |  |  |  |
| 2 3 617  | 270344s  | 1    | Seal-O Ring (Intake Manifold) |  |  |  |  |
| 5        |          |      |                               |  |  |  |  |
| 2 3 633  | 691321   | 1    | Seal-Shaft, Choke Throttle    |  |  |  |  |
| 5        |          |      |                               |  |  |  |  |
| 2 3 633A | 693867   | 1    | Seal-Shaft, Choke Throttle    |  |  |  |  |
| 5        |          |      |                               |  |  |  |  |
| 2 975    | 493640   | 1    | Bowl-Float                    |  |  |  |  |

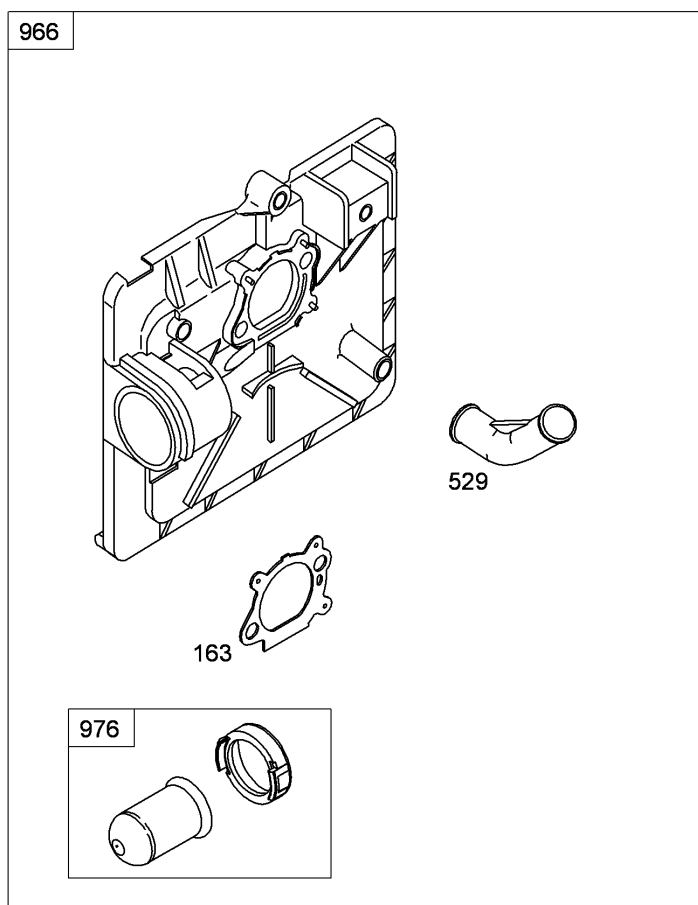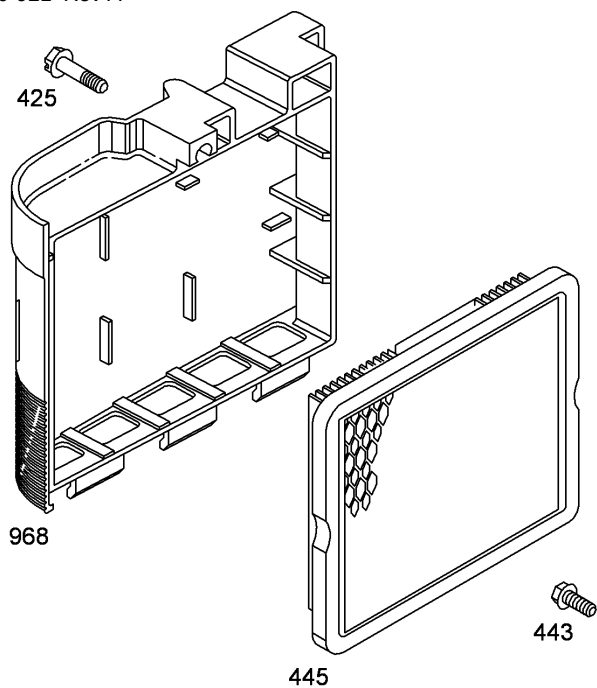

Assemblies include all parts shown in frames


## Air Cleaner Assembly
 
### Briggs and Stratton 126T02-0237-B1

| Ref                   | Part No. | Qty. | Description                     |
|-----------------------|----------|------|---------------------------------|
| <b>2</b> <b>3</b> 163 | 272653s  | 1    | Gasket-Cleaner, Air             |
| <b>4</b> <b>5</b>     |          |      |                                 |
| <b>2</b> 425          | 690670   | 1    | Screw (Air Cleaner Cover)       |
| <b>2</b> 443          | 692523   | 1    | Screw (Air Cleaner Primer Base) |
| <b>2</b> 445          | 491588s  | 1    | Filter-Cartridge, Air Cleaner   |
| <b>2</b> 529          | 691923   | 1    | Grommet                         |
| <b>2</b> 966          | 792040   | 1    | Base-Primer, Air Cleaner        |
| <b>2</b> 968          | 692298   | 1    | Cover-Cleaner, Air              |
| <b>2</b> 976          | 694395   | 1    | Primer-Carburetor               |

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |










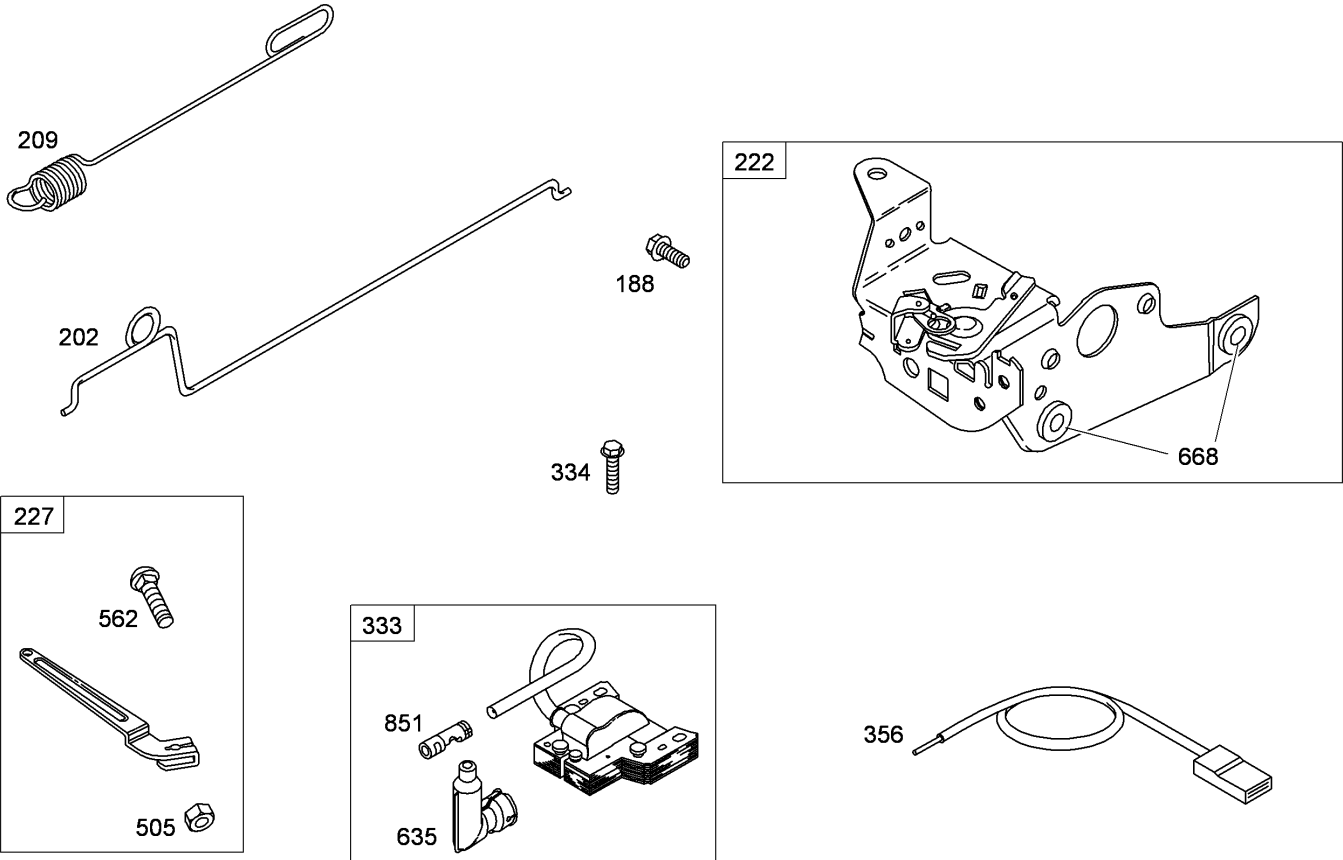

Assemblies include all parts shown in frames

**Governor Assembly**  
**Briggs and Stratton 126T02-0237-B1**

| Ref  | Part No. | Qty. | Description                   |  |  |  |  |
|------|----------|------|-------------------------------|--|--|--|--|
| 2188 | 693399   | 1    | Screw (Control Bracket)       |  |  |  |  |
| 2202 | 691829   | 1    | Link-Governor, Mechanical     |  |  |  |  |
| 2209 | 691292   | 1    | Spring-Governor               |  |  |  |  |
| 2222 | 793754   | 1    | Bracket-Control               |  |  |  |  |
| 2227 | 690783   | 1    | Lever-Control, Governor       |  |  |  |  |
| 2333 | 793353   | 1    | Armature-Magneto              |  |  |  |  |
| 2334 | 691061   | 1    | Screw (Magneto Armature)      |  |  |  |  |
| 2356 | 690791   | 1    | Wire-Stop                     |  |  |  |  |
| 2505 | 691251   | 1    | Nut (Governor Control Lever)  |  |  |  |  |
| 2562 | 691119   | 1    | Bolt (Governor Control Lever) |  |  |  |  |
| 2635 | 793351   | 1    | Boot-Spark Plug               |  |  |  |  |
| 2668 | 493823   | 1    | Spacer                        |  |  |  |  |
| 2851 | 692424   | 1    | Terminal-Spark Plug           |  |  |  |  |

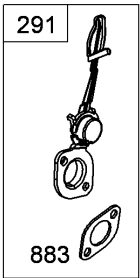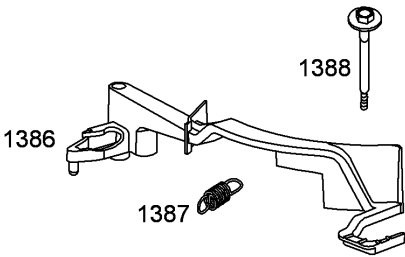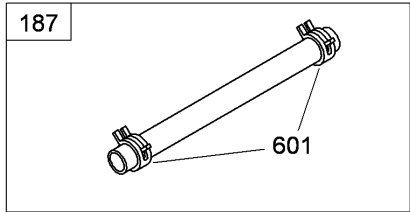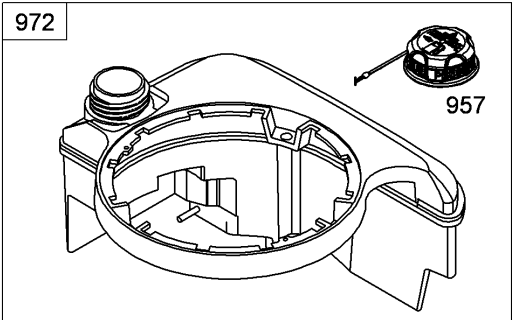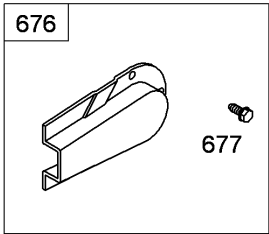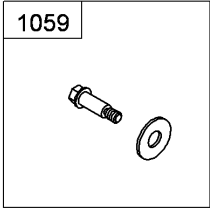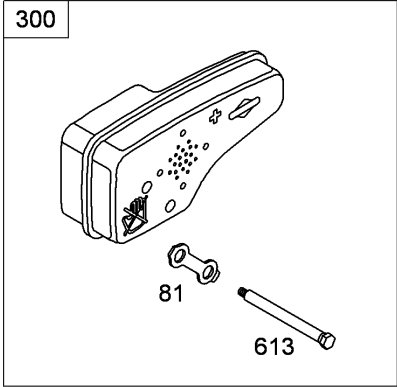       


Assemblies include all parts shown in frames

# Muffler and Fuel Tank Assembly
 
## Briggs and Stratton 126T02-0237-B1


| Ref   | Part No. | Qty. | Description                        |  |  |  |  |
|-------|----------|------|------------------------------------|--|--|--|--|
| 281   | 691740   | 1    | Lock-Screw, Muffler                |  |  |  |  |
| 2187  | 791766   | 1    | Line-Fuel (Cut To Required Length) |  |  |  |  |
| 2190  | 690940   | 1    | Screw (Fuel Tank)                  |  |  |  |  |
| 2291  | 790830   | 1    | Thermostat                         |  |  |  |  |
| 2300  | 692038   | 1    | Muffler                            |  |  |  |  |
| 2601  | 791850   | 1    | Clamp-Hose                         |  |  |  |  |
| 2613  | 691340   | 1    | Screw (Muffler)                    |  |  |  |  |
| 2670  | 692294   | 1    | Spacer-Tank, Fuel                  |  |  |  |  |
| 2676  | 493871   | 1    | Deflector-Muffler                  |  |  |  |  |
| 2677  | 690661   | 1    | Screw (Muffler Deflector)          |  |  |  |  |
| 2883  | 691881   | 1    | Gasket-Exhaust                     |  |  |  |  |
| 2957  | 699985   | 1    | Cap-Tank, Fuel                     |  |  |  |  |
| 2972  | 699374   | 1    | Tank-Fuel                          |  |  |  |  |
| 21059 | 692311   | 1    | Screw And Washer Kit               |  |  |  |  |
| 21386 | 790848   | 1    | Vane-Air                           |  |  |  |  |
| 21387 | 790849   | 1    | Spring-Vane, Air                   |  |  |  |  |
| 21388 | 790850   | 1    | Screw (Air Vane)                   |  |  |  |  |

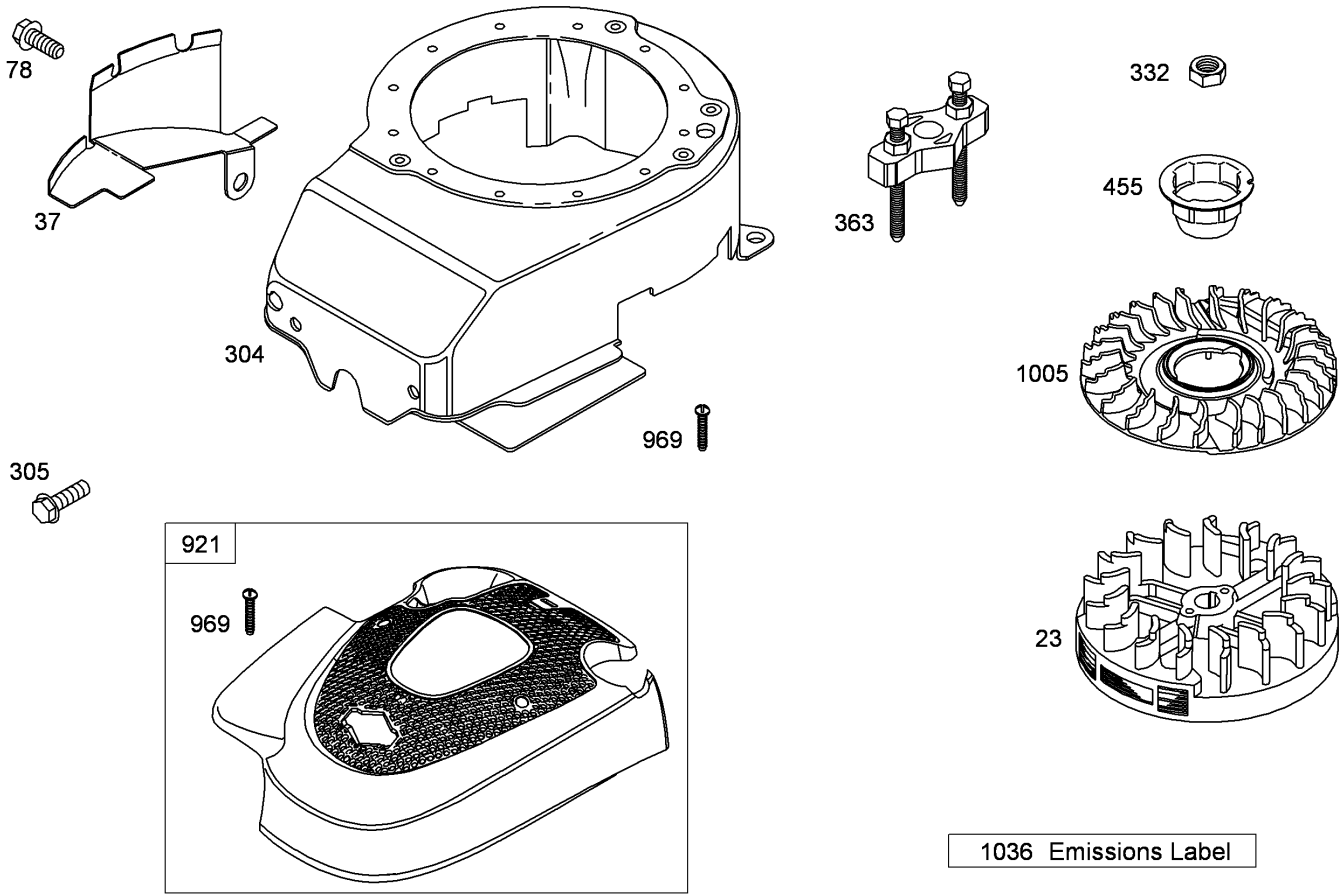

Assemblies include all parts shown in frames

**Blower Housing Assembly**  
**Briggs and Stratton 126T02-0237-B1**

| Ref  | Part No. | Qty. | Description                  |  |  |  |  |
|------|----------|------|------------------------------|--|--|--|--|
| 23   | 691992   | 1    | Flywheel                     |  |  |  |  |
| 37   | 694086   | 1    | Guard-Flywheel               |  |  |  |  |
| 78   | 691108   | 1    | Screw (Flywheel Guard)       |  |  |  |  |
| 304  | 791288   | 1    | Housing-Blower               |  |  |  |  |
| 305  | 691108   | 1    | Screw (Blower Housing)       |  |  |  |  |
| 332  | 690662   | 1    | Nut (Flywheel)               |  |  |  |  |
| 363  | 19069    | 1    | Puller-Flywheel              |  |  |  |  |
| 455  | 791760   | 1    | Cup-Flywheel                 |  |  |  |  |
| 921  | 790036   | 1    | Cover-Housing, Blower        |  |  |  |  |
| 969  | 691138   | 1    | Screw (Blower Housing Cover) |  |  |  |  |
| 1005 | 691346   | 1    | Fan-Flywheel                 |  |  |  |  |
| 1036 |          | 1    | Label-Emissions              |  |  |  |  |

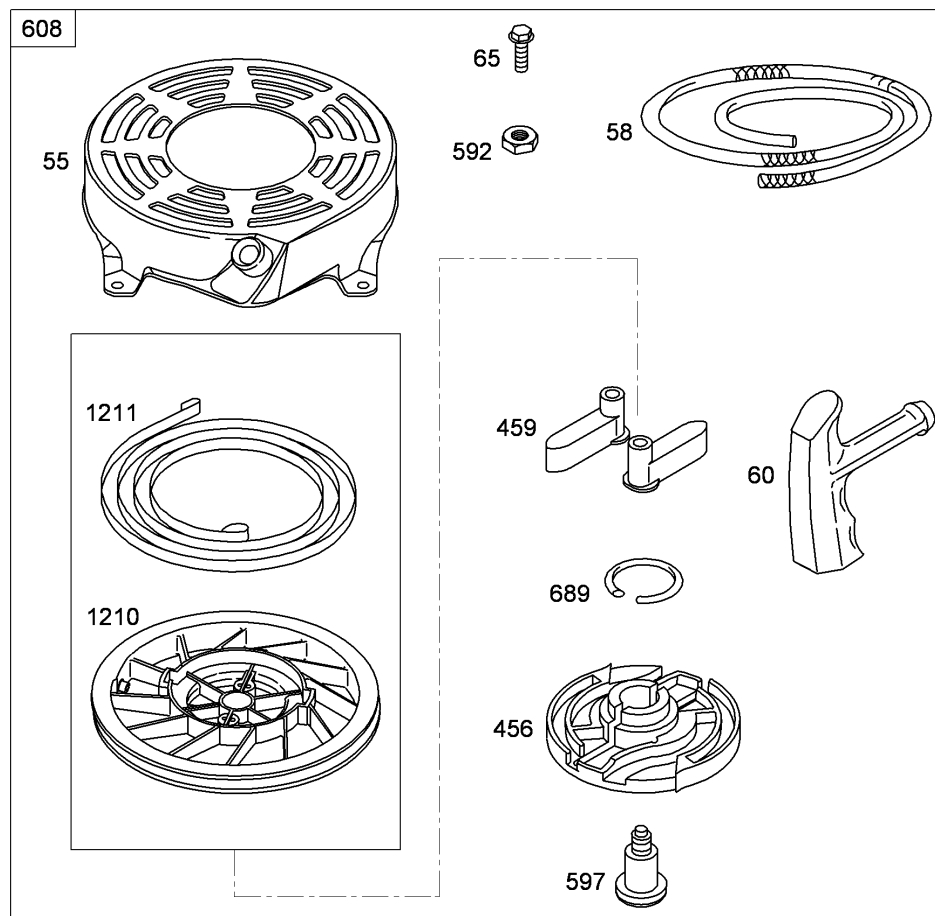 


Assemblies include all parts shown in frames

# Starter Assembly
 
## Briggs and Stratton 126T02-0237-B1



| Ref   | Part No. | Qty. | Description                           |  |  |  |  |
|-------|----------|------|---------------------------------------|--|--|--|--|
| 255   | 691421   | 1    | Housing-Starter, Rewind               |  |  |  |  |
| 258   | 697316   | 1    | Rope-Starter (Cut To Required Length) |  |  |  |  |
| 260   | 281434s  | 1    | Grip-Rope, Starter                    |  |  |  |  |
| 265   | 690837   | 1    | Screw (Rewind Starter)                |  |  |  |  |
| 2456  | 692299   | 1    | Plate-Friction, Pawl                  |  |  |  |  |
| 2459  | 281505s  | 1    | Ratchet-Pawl                          |  |  |  |  |
| 2592  | 690800   | 1    | Nut (Rewind Starter)                  |  |  |  |  |
| 2597  | 691696   | 1    | Screw (Pawl Friction Plate)           |  |  |  |  |
| 2608  | 497680   | 1    | Starter-Rewind                        |  |  |  |  |
| 2689  | 691855   | 1    | Spring-Friction                       |  |  |  |  |
| 21210 | 498144   | 1    | Pulley And Spring ASM (Pulley)        |  |  |  |  |
| 21211 | 498144   | 1    | Pulley And Spring ASM (Spring)        |  |  |  |  |

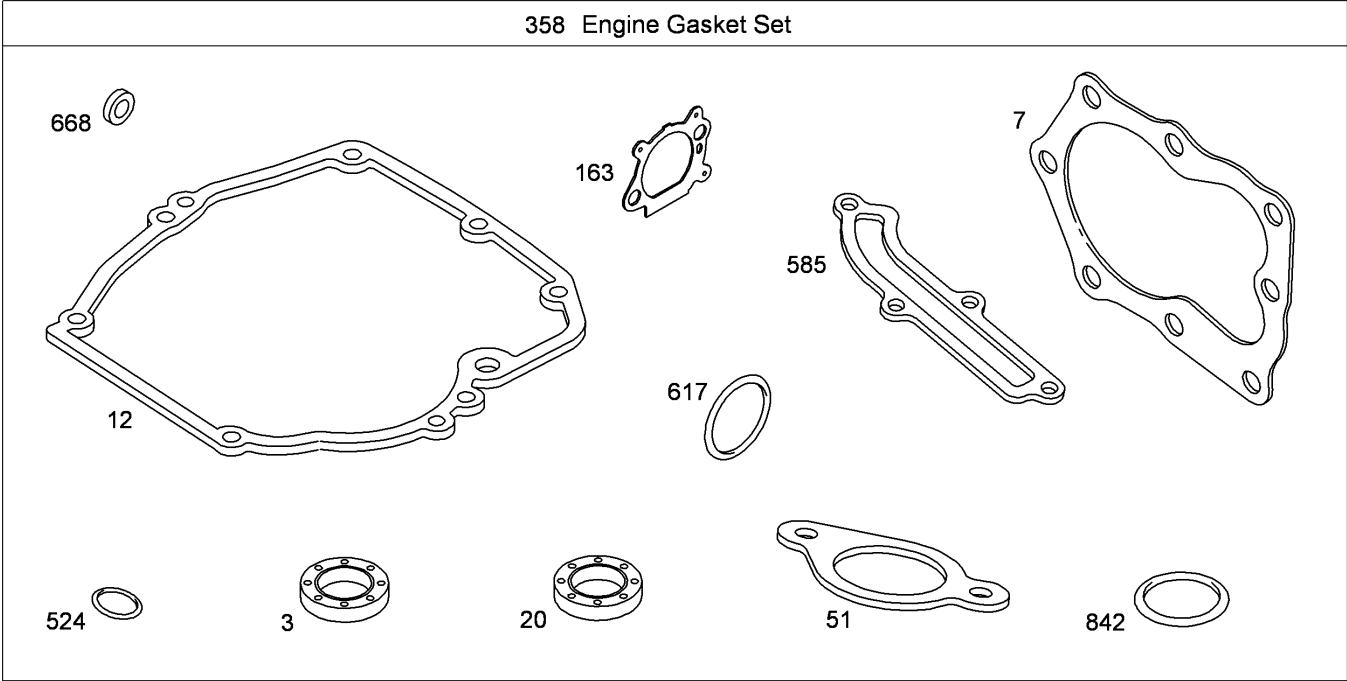

Assemblies include all parts shown in frames

**Engine Gasket Set**  
**Briggs and Stratton 126T02-0237-B1**

| Ref   | Part No. | Qty. | Description                   |  |  |  |  |
|-------|----------|------|-------------------------------|--|--|--|--|
| 243   | 299819s  | 1    | Seal-Oil (Magneto Side)       |  |  |  |  |
| 247   | 692249   | 1    | Gasket-Head, Cylinder         |  |  |  |  |
| 2412  | 692232   | 1    | Gasket-Crankcase (.015 STD)   |  |  |  |  |
| 2420  | 399781s  | 1    | Seal-Oil (PTO Side)           |  |  |  |  |
| 2451  | 794306   | 1    | Gasket-Intake                 |  |  |  |  |
| 25163 | 272653s  | 1    | Gasket-Cleaner, Air           |  |  |  |  |
| 45    |          |      |                               |  |  |  |  |
| 2358  | 794307   | 1    | Engine Gasket Set             |  |  |  |  |
| 24524 | 692296   | 1    | Seal-O Ring (Dipstick Tube)   |  |  |  |  |
| 24585 | 691879   | 1    | Gasket-Passage, Breather      |  |  |  |  |
| 25617 | 270344s  | 1    | Seal-O Ring (Intake Manifold) |  |  |  |  |
| 45    |          |      |                               |  |  |  |  |
| 24668 | 493823   | 1    | Spacer                        |  |  |  |  |
| 24842 | 691031   | 1    | Seal-O Ring (Dipstick)        |  |  |  |  |

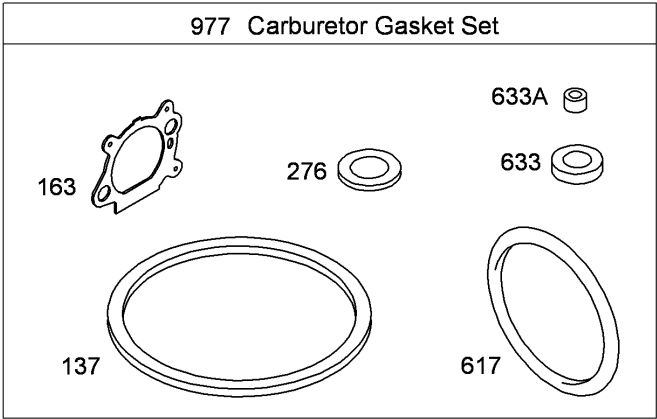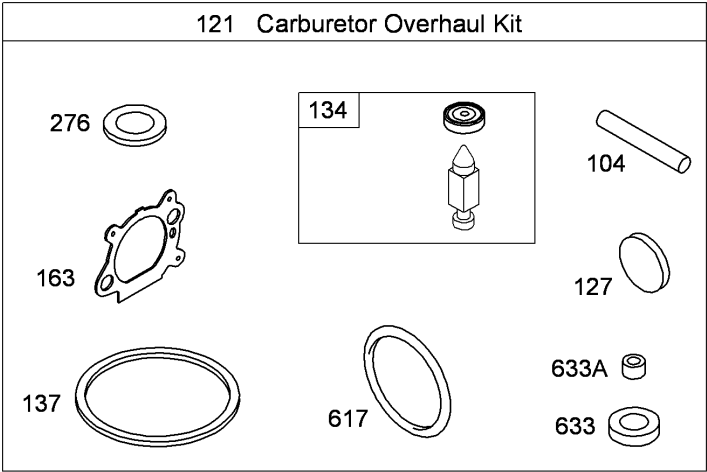  

Assemblies include all parts shown in frames

# Carburetor Overhaul Kit

## Briggs and Stratton 126T02-0237-B1

| Ref      | Part No. | Qty. | Description                   |  |  |  |  |
|----------|----------|------|-------------------------------|--|--|--|--|
| 2 3 104  | 691242   | 1    | Pin-Hinge, Float              |  |  |  |  |
| 2 121    | 498260   | 1    | Carburetor Overhaul Kit       |  |  |  |  |
| 2 3 127  | 694468   | 1    | Plug-Welch                    |  |  |  |  |
| 2 3 134  | 398188   | 1    | Needle And Seat Kit           |  |  |  |  |
| 2 3 137  | 693981   | 1    | Gasket-Bowl, Float            |  |  |  |  |
| 5        |          |      |                               |  |  |  |  |
| 2 3 163  | 272653s  | 1    | Gasket-Cleaner, Air           |  |  |  |  |
| 4 5      |          |      |                               |  |  |  |  |
| 2 3 276  | 271716   | 1    | Washer-Sealing                |  |  |  |  |
| 5        |          |      |                               |  |  |  |  |
| 2 3 617  | 270344s  | 1    | Seal-O Ring (Intake Manifold) |  |  |  |  |
| 4 5      |          |      |                               |  |  |  |  |
| 2 3 633  | 691321   | 1    | Seal-Shaft, Choke Throttle    |  |  |  |  |
| 5        |          |      |                               |  |  |  |  |
| 2 3 633A | 693867   | 1    | Seal-Shaft, Choke Throttle    |  |  |  |  |
| 5        |          |      |                               |  |  |  |  |
| 2 977    | 498261   | 1    | Carburetor Gasket Set         |  |  |  |  |

# Attachments and Accessories

## For 20093C - Super Recycler Lawn Mower

| Product Name                     | Model/Part  |
|----------------------------------|-------------|
| Bagging Blade .....              | 108-3759-03 |
| Traction Assist Handle Kit ..... | 108-8120    |
| Toro Walk Mower Cover .....      | 490-7462    |
| Plain Walk Mower Cover .....     | 490-7463    |
| Dethatcher Kit .....             | 59131       |

