



## Multicycler 48cm Lawn Mower

Model No. 20638 - 280L00001 and up.

### Parts Catalog

#### Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

#### Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

#### Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

#### Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

## Contents

| Description                                            | Page     | Description                                                       | Page     |
|--------------------------------------------------------|----------|-------------------------------------------------------------------|----------|
| Deck Assembly                                          | ..... 3  | Air Cleaner Assembly Briggs and Stratton 126T05-1840-B1           | ..... 14 |
| Drive Assembly                                         | ..... 4  | Governor Assembly Briggs and Stratton 126T05-1840-B1              | ..... 15 |
| Height-of-Cut and Front Wheel Assembly                 | ..... 5  | Muffler and Fuel Tank Assembly Briggs and Stratton 126T05-1840-B1 | ..... 16 |
| Engine Assembly                                        | ..... 6  | Blower Housing Assembly Briggs and Stratton 126T05-1840-B1        | ..... 17 |
| Lower Handle Assembly                                  | ..... 7  | Starter Assembly Briggs and Stratton 126T05-1840-B1               | ..... 18 |
| Upper Handle Assembly                                  | ..... 8  | Electric Starter Assembly Briggs and Stratton 126T05-1840-B1      | ..... 19 |
| Grass Bag Assembly                                     | ..... 9  | Engine Gasket Set Briggs and Stratton 126T05-1840-B1              | ..... 20 |
| Cylinder Assembly Briggs and Stratton 126T05-1840-B1   | ..... 10 | Carburetor Overhaul Kit Briggs and Stratton 126T05-1840-B1        | ..... 21 |
| Crankshaft Assembly Briggs and Stratton 126T05-1840-B1 | ..... 11 | Attachments and Accessories List                                  | ..... 22 |
| Crankcase Assembly Briggs and Stratton 126T05-1840-B1  | ..... 12 |                                                                   |          |
| Carburetor Assembly Briggs and Stratton 126T05-1840-B1 | ..... 13 |                                                                   |          |

 
## Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

|                                            |                                              |
|--------------------------------------------|----------------------------------------------|
| AR. .... as required                       | HYD. .... hydraulic                          |
| ASM. .... assembly                         | LH. .... left hand                           |
| BBC. .... blade brake clutch               | NI. .... nylon insert                        |
| CARR. .... carriage                        | NPTF. .... national pipe thread fine         |
| DEG. .... degrees                          | PFH. .... phillips flat head                 |
| EXT. .... external                         | PPH. .... phillips pan head                  |
| FH. .... flat head                         | PPHTF. .... phillips pan head thread forming |
| GA. .... gauge                             | PRH. .... phillips round head                |
| HD. .... heavy-duty                        | PTH. .... phillips truss head                |
| HF. .... hex flange                        | PTO. .... power-take-off                     |
| HH. .... hex head                          | RH. .... right hand                          |
| HHF. .... hex head flange                  | ROPS. .... roll-over protection system       |
| HHFTF. .... hex head flange thread forming | SFH. .... slotted fillister head             |
| HJ. .... hex jam                           | SHH. .... slotted hex head                   |
| HLH. .... hex lag head                     | SHWH. .... slotted hex washer head           |
| HOC. .... height-of-cut                    | SPH. .... slotted pan head                   |
| HSBH. .... hex socket button head          | SQH. .... square head                        |
| HSFH. .... hex socket flat head            | SRH. .... slotted round head                 |
| HS. .... hex socket head                   | STD. .... standard                           |
| HWH. .... hex washer head                  | TAP. .... self tapping                       |
| HWHTF. .... hex washer head thread forming | TTH. .... torx truss head                    |


## Footnotes

- |                                                      |                                                   |
|------------------------------------------------------|---------------------------------------------------|
| ❶ Not serviced separately                            | ❷ Obtain from your local Briggs & Stratton dealer |
| ❸ Included in Carburetor Overhaul Kit (Ref. No. 121) | ❹ Included in Engine Gasket Set (Ref. No. 358)    |
| ❺ Included in Carburetor Gasket Set (Ref. No. 977)   |                                                   |

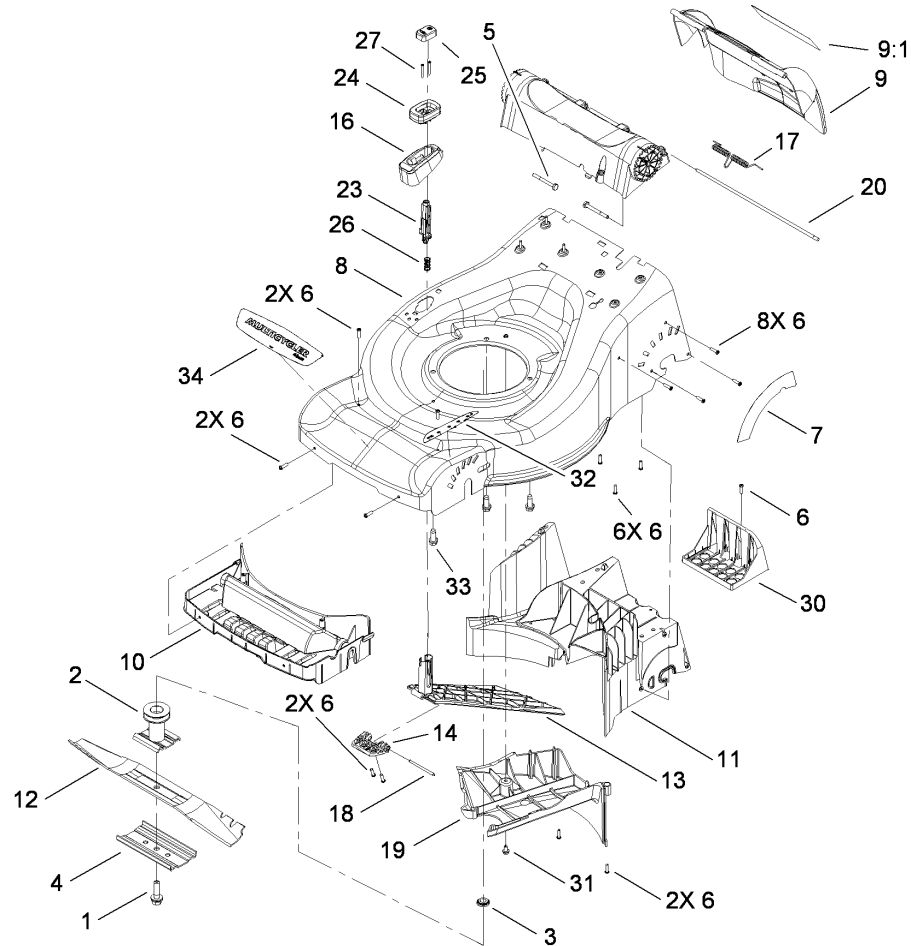

## Deck Assembly

 
| Ref | Part No. | Qty. | Description          | Ref | Part No. | Qty. | Description          |
|-----|----------|------|----------------------|-----|----------|------|----------------------|
| 1   | 105-8579 | 1    | Bolt-Blade           | 27  | 110-7143 | 2    | Screw-Torx, Pan Head |
| 2   | 106-3987 | 1    | Blade Driver ASM     | 30  | 110-7154 | 1    | Tray-Battery         |
| 3   | 106-3999 | 1    | Spacer-Driver        | 31  | 110-7170 | 1    | Screw-HH             |
| 4   | 108-3766 | 1    | Support-Blade        | 32  | 110-7178 | 1    | Decal                |
| 5   | 110-7110 | 2    | Screw-HH             | 33  | 110-7182 | 3    | Screw-Taptite, HWH   |
| 6   | 110-1271 | 23   | Screw-Torx, Pan Head | 34  | 114-2607 | 1    | Decal                |
| 7   | 110-7058 | 1    | Decal                |     |          |      |                      |
| 8   | 115-3132 | 1    | Deck ASM             |     |          |      |                      |
| 9   | 114-5373 | 1    | Rear Door ASM        |     |          |      |                      |
| 9:1 | 110-7126 | 1    | Decal-Warning        |     |          |      |                      |
| 10  | 110-7066 | 1    | Baffle-Front         |     |          |      |                      |
| 11  | 114-5380 | 1    | Baffle-Rear          |     |          |      |                      |
| 12  | 110-7080 | 1    | Blade                |     |          |      |                      |
| 13  | 110-7094 | 1    | Door-Recycle         |     |          |      |                      |
| 14  | 110-7095 | 1    | Hinge-Door, Recycle  |     |          |      |                      |
| 16  | 110-7097 | 1    | Cover-Door, Recycle  |     |          |      |                      |
| 17  | 110-7107 | 1    | Spring-Torsion       |     |          |      |                      |
| 18  | 110-7108 | 1    | Pin-Hinge            |     |          |      |                      |
| 19  | 110-7109 | 1    | Cover-Belt           |     |          |      |                      |
| 20  | 110-7119 | 1    | Bar-Pivot, Rear Door |     |          |      |                      |
| 23  | 110-7129 | 1    | Latch-Recycle        |     |          |      |                      |
| 24  | 110-7136 | 1    | Housing-Knob         |     |          |      |                      |
| 25  | 110-7138 | 1    | Knob                 |     |          |      |                      |
| 26  | 110-7141 | 1    | Spring-Compression   |     |          |      |                      |

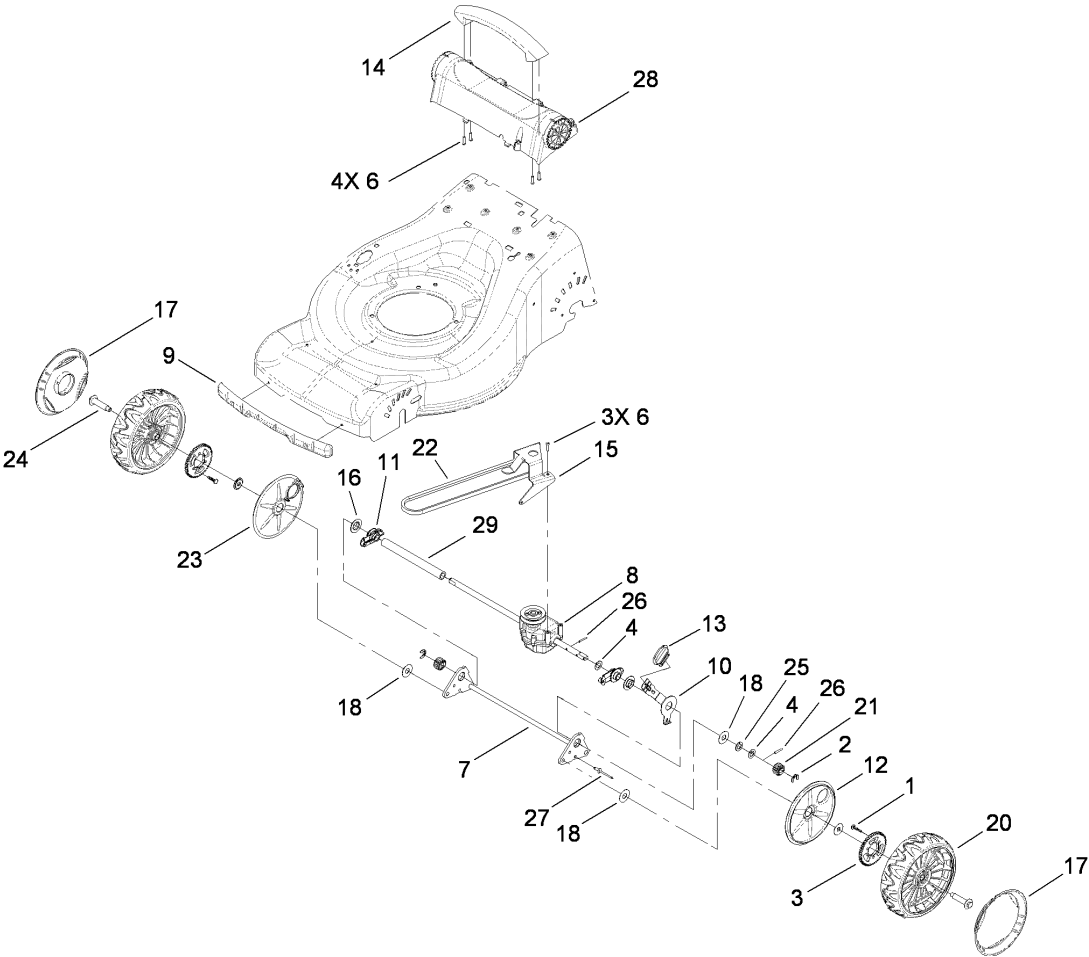

Drive Assembly


| Ref | Part No. | Qty. | Description          | Ref | Part No. | Qty. | Description  |
|-----|----------|------|----------------------|-----|----------|------|--------------|
| 1   | 27-6260  | 6    | Screw-Drive          | 27  | 110-7193 | 1    | Rivet-Pop    |
| 2   | 65-2720  | 2    | Ring-Clip, Locking   | 28  | 114-5372 | 1    | Mount-Handle |
| 3   | 105-3035 | 2    | Gear-Wheel, 52T      | 29  | 115-3850 | 1    | Spacer       |
| 4   | 112-3911 | 2    | Washer-Thrust, Keyed |     |          |      |              |
| 6   | 110-1271 | 7    | Screw-Torx, Pan Head |     |          |      |              |
| 7   | 110-7016 | 1    | Pivot Bar ASM        |     |          |      |              |
| 8   | 110-7042 | 1    | Gearbox ASM          |     |          |      |              |
| 9   | 110-7067 | 1    | Bumper-Front         |     |          |      |              |
| 10  | 110-7073 | 1    | Lever-HOC, Rear      |     |          |      |              |
| 11  | 110-7112 | 2    | Bushing-Camlock      |     |          |      |              |
| 12  | 110-7114 | 2    | Cover-Wheel          |     |          |      |              |
| 13  | 110-7125 | 1    | Knob-HOC             |     |          |      |              |
| 14  | 110-7155 | 1    | Handle-Rear          |     |          |      |              |
| 15  | 110-7158 | 1    | Bracket-Gear Case    |     |          |      |              |
| 16  | 110-7171 | 2    | Spacer-Flange        |     |          |      |              |
| 17  | 110-7174 | 2    | Cover-Wheel, Rear    |     |          |      |              |
| 18  | 110-7179 | 3    | Washer               |     |          |      |              |
| 20  | 110-7254 | 2    | Rear Wheel ASM       |     |          |      |              |
| 21  | 110-9417 | 2    | Pinion               |     |          |      |              |
| 22  | 110-9429 | 1    | V-Belt               |     |          |      |              |
| 23  | 614426   | 2    | Washer-Stepped       |     |          |      |              |
| 24  | 614650   | 2    | Bolt-Shoulder        |     |          |      |              |
| 25  | 110-7191 | 1    | Washer-Thrust        |     |          |      |              |
| 26  | 110-7192 | 2    | Pin-Roll             |     |          |      |              |



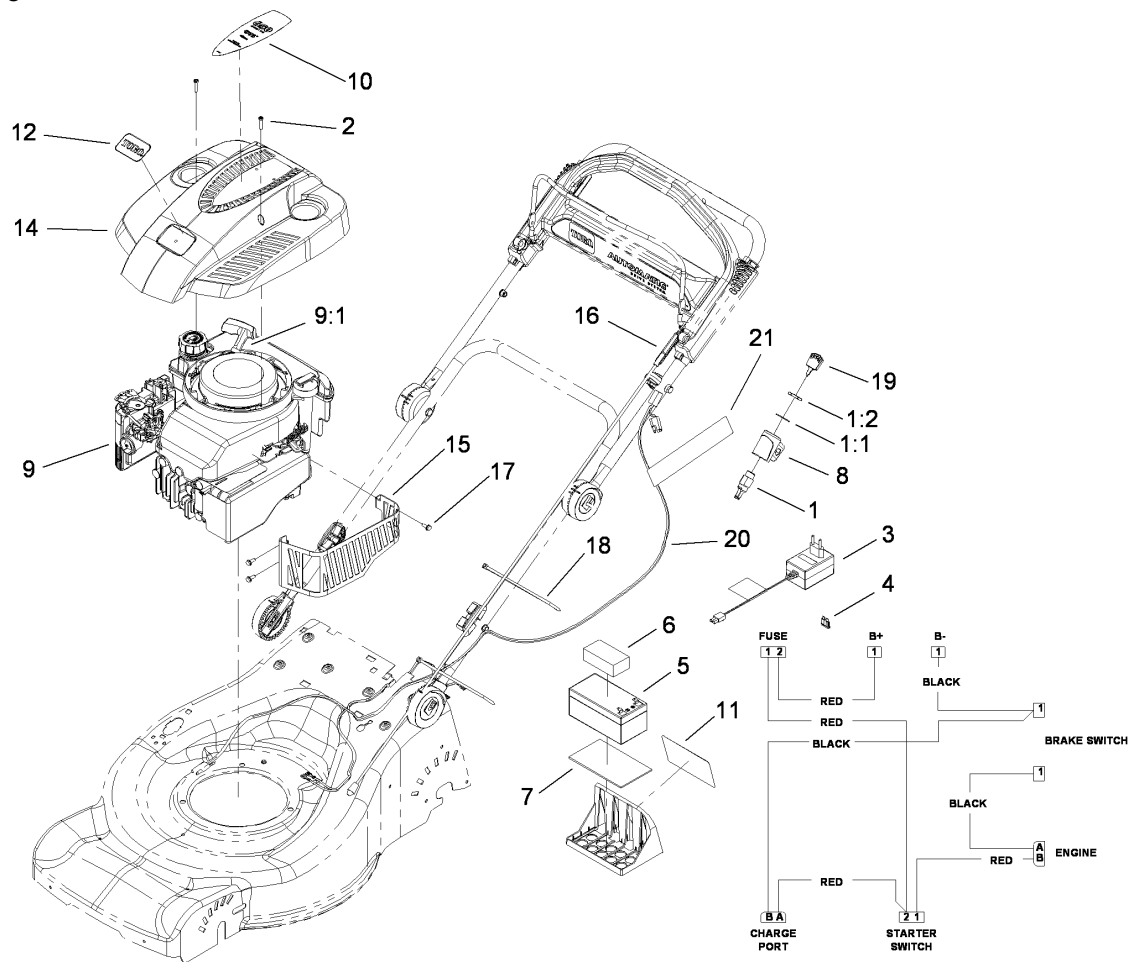 


Engine Assembly

| Ref | Part No. | Qty. | Description                                |  |  |  |  |
|-----|----------|------|--------------------------------------------|--|--|--|--|
| 1   | 46-5780  | 1    | Switch-Starter                             |  |  |  |  |
| 1:1 | 3254-5   | 1    | Washer-Tooth                               |  |  |  |  |
| 1:2 | 218-461  | 1    | Nut-HH                                     |  |  |  |  |
| 2   | 93-0231  | 2    | Screw-PPH                                  |  |  |  |  |
| 3   | 98-2391  | 1    | Charger-European, 12V Dc                   |  |  |  |  |
| 4   | 99-6124  | 2    | Fuse-40 Amp                                |  |  |  |  |
| 5   | 106-8397 | 1    | Battery-12 Volt                            |  |  |  |  |
| 6   | 107-3774 | 1    | Foam-Battery, Top                          |  |  |  |  |
| 7   | 108-0987 | 1    | Foam-Battery                               |  |  |  |  |
| 8   | 108-9760 | 1    | Mount-Switch                               |  |  |  |  |
| 9   |          | 1    | Engine-Briggs And Stratton, 126T05-1840-B1 |  |  |  |  |
| 9:1 | 2210-316 | 1    | Stop-Rope                                  |  |  |  |  |
| 10  | 115-3857 | 1    | Decal-Engine, 48Cm                         |  |  |  |  |
| 11  | 110-7059 | 1    | Decal-Fuse                                 |  |  |  |  |
| 12  | 110-7135 | 1    | Decal-Toro                                 |  |  |  |  |
| 14  | 110-9156 | 1    | Shroud-Engine                              |  |  |  |  |
| 15  | 110-9158 | 1    | Shield-Muffler                             |  |  |  |  |
| 16  | 110-9163 | 1    | Cable-Brake                                |  |  |  |  |
| 17  | 32144-1  | 3    | Screw-Taptite                              |  |  |  |  |
| 18  | 614249   | 2    | Strap-Tie                                  |  |  |  |  |
| 19  | 700918   | 1    | Key                                        |  |  |  |  |
| 20  | 110-9165 | 1    | Harness-Wiring                             |  |  |  |  |
| 21  | 104-7953 | 1    | Decal-Harness                              |  |  |  |  |

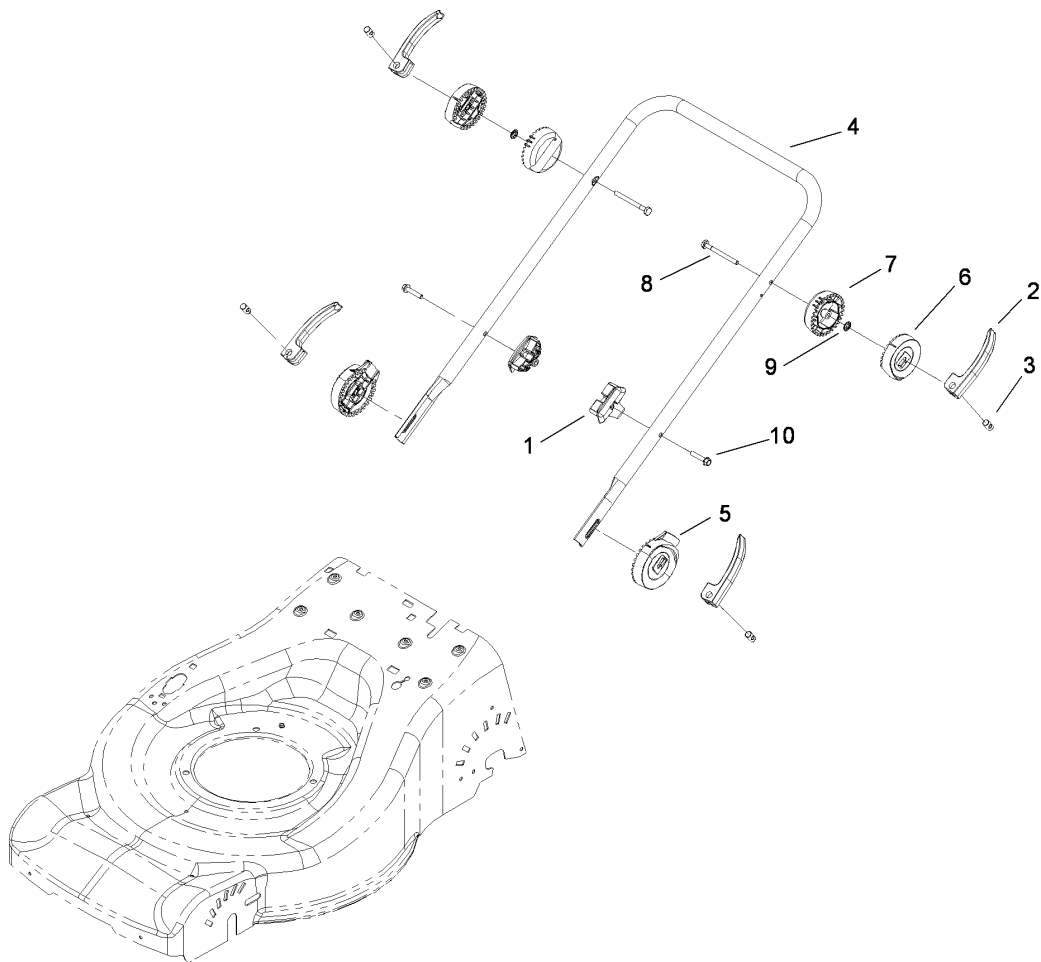 

Lower Handle Assembly

| Ref | Part No.  | Qty. | Description               |  |  |  |  |
|-----|-----------|------|---------------------------|--|--|--|--|
| 1   | 112-3928  | 2    | Anchor-Bag                |  |  |  |  |
| 2   | 112-3924  | 4    | Lever-Locking, Handle     |  |  |  |  |
| 3   | 110-1180  | 4    | Pivot-Pin, Threaded       |  |  |  |  |
| 4   | 110-7083  | 1    | Handle-Hoop, Lower        |  |  |  |  |
| 5   | 114-5381  | 2    | Adapter-Ratchet, Lower    |  |  |  |  |
| 6   | 110-7156  | 2    | Adapter-Ratchet, Midpoint |  |  |  |  |
| 7   | 110-7157  | 2    | Adapter-Clamp, Midpoint   |  |  |  |  |
| 8   | 110-7161  | 2    | Screw-HH                  |  |  |  |  |
| 9   | 110-7188  | 2    | Washer-Starlock, Push     |  |  |  |  |
| 10  | 32144-110 | 2    | Screw-HWH                 |  |  |  |  |

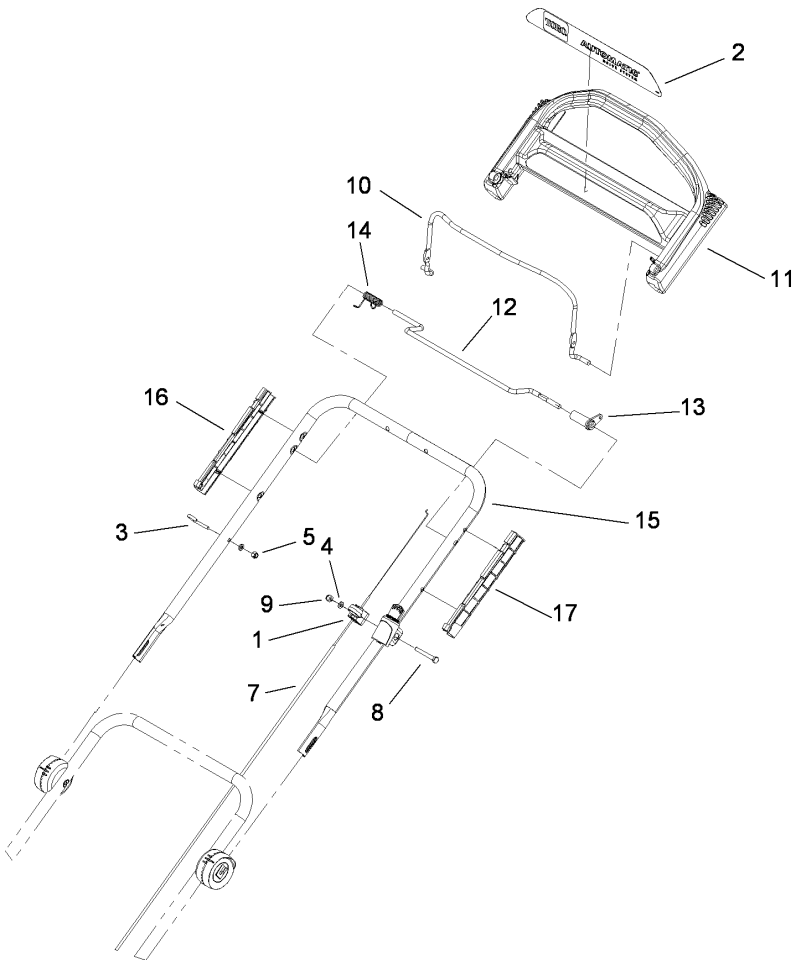 


Upper Handle Assembly

| Ref | Part No.    | Qty. | Description           |  |  |  |  |
|-----|-------------|------|-----------------------|--|--|--|--|
| 1   | 99-5239     | 1    | Anchor-Cable          |  |  |  |  |
| 2   | 110-7056    | 1    | Decal-Ads, Handle     |  |  |  |  |
| 3   | 110-7186    | 1    | Guide-Cord            |  |  |  |  |
| 4   | 110-8450    | 2    | Washer                |  |  |  |  |
| 5   | 110-8451    | 1    | Nut-Hex, Nyloc        |  |  |  |  |
| 7   | 110-9162    | 1    | Cable-Traction        |  |  |  |  |
| 8   | 321-50      | 1    | Screw-HH              |  |  |  |  |
| 9   | 3296-73     | 1    | Nut-Lock, NI          |  |  |  |  |
| 10  | 104-8679-03 | 1    | Bail-Brake            |  |  |  |  |
| 11  | 104-8678    | 1    | Handle-Control        |  |  |  |  |
| 12  | 99-1588     | 1    | Bar-Control, Traction |  |  |  |  |
| 13  | 99-1589     | 1    | Lever-Traction        |  |  |  |  |
| 14  | 104-8690    | 1    | Spring-Torsion        |  |  |  |  |
| 15  | 114-5369    | 1    | Handle-Upper          |  |  |  |  |
| 16  | 105-6841    | 1    | Guide-RH              |  |  |  |  |
| 17  | 105-6842    | 1    | Guide-LH              |  |  |  |  |





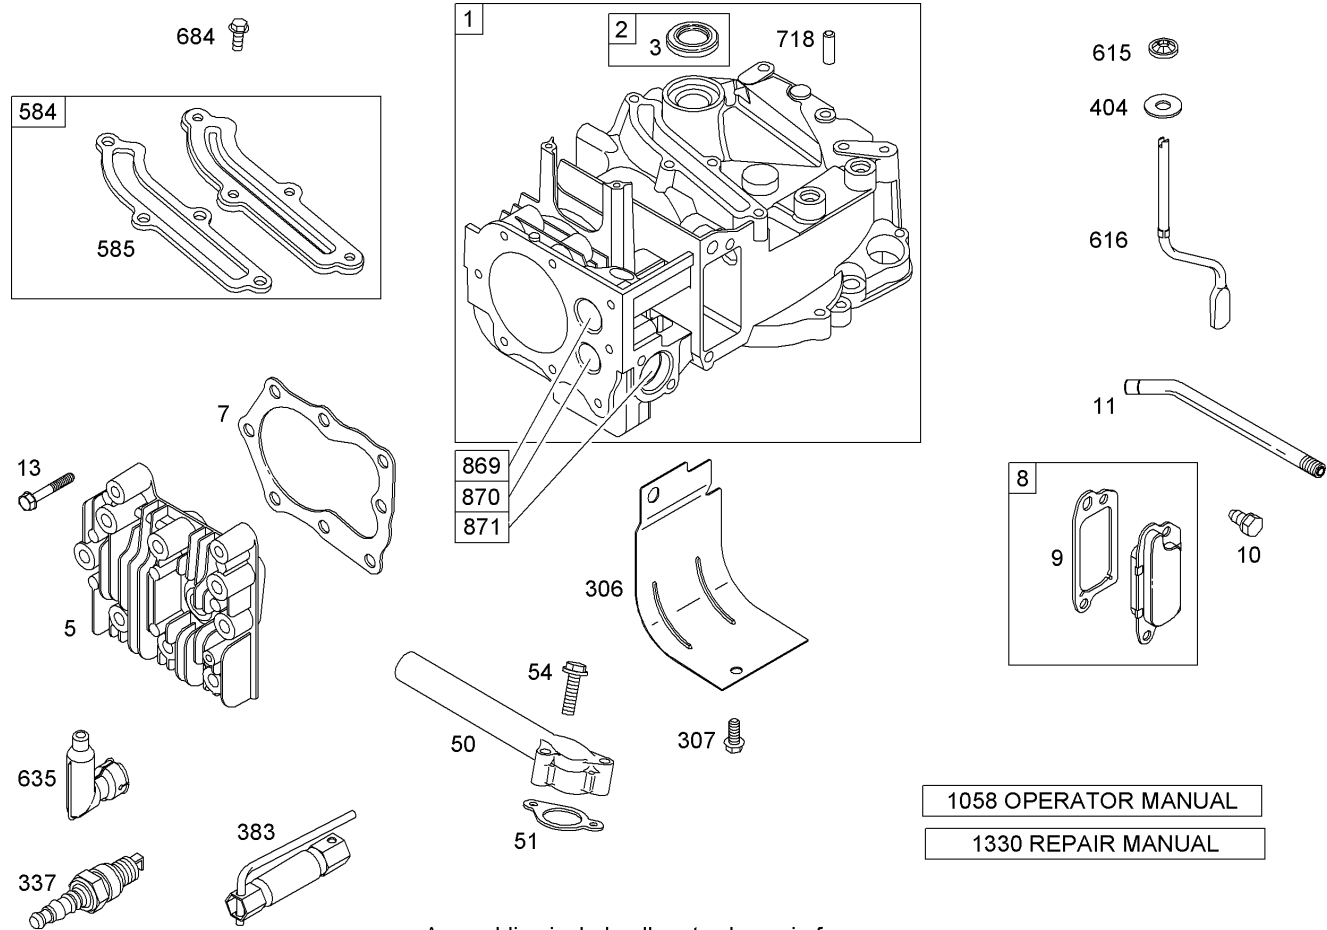 






Assemblies include all parts shown in frames

# Cylinder Assembly
     
## Briggs and Stratton 126T05-1840-B1

| Ref | Part No. | Qty. | Description                    |
|-----|----------|------|--------------------------------|
| 1   | 697322   | 1    | Cylinder ASM                   |
| 2   | 399269   | 1    | Bushing And Seal Kit           |
| 3   | 299819s  | 1    | Seal-Oil (Magneto Side)        |
| 5   | 691160   | 1    | Head-Cylinder                  |
| 7   | 692249   | 1    | Gasket-Head, Cylinder          |
| 8   | 695250   | 1    | Breather ASM                   |
| 9   | 696125   | 1    | Gasket-Breather                |
| 10  | 691125   | 1    | Screw (Breather ASM)           |
| 11  | 691781   | 1    | Tube-Breather                  |
| 13  | 690912   | 1    | Screw (Cylinder Head)          |
| 50  | 497465   | 1    | Manifold-Intake                |
| 51  | 272199s  | 1    | Gasket-Intake                  |
| 54  | 691650   | 1    | Screw (Intake Manifold)        |
| 306 | 690450   | 1    | Shield-Cylinder                |
| 307 | 690345   | 1    | Screw (Cylinder Shield)        |
| 337 | 802592s  | 1    | Plug-Spark                     |
| 383 | 89838s   | 1    | Wrench-Spark Plug              |
| 404 | 690272   | 1    | Washer (Governor Crank)        |
| 584 | 697734   | 1    | Cover-Passage, Breather        |
| 585 | 691879   | 1    | Gasket-Passage, Breather       |
| 615 | 690340   | 1    | Retainer-Shaft, Governor       |
| 616 | 698801   | 1    | Crank-Governor                 |
| 635 | 793351   | 1    | Boot-Spark Plug                |
| 684 | 690345   | 1    | Screw (Breather Passage Cover) |

| Ref  | Part No. | Qty. | Description             |
|------|----------|------|-------------------------|
| 718  | 690959   | 1    | Pin-Locating            |
| 869  | 691155   | 1    | Seat-Valve (Intake)     |
| 870  | 690380   | 1    | Seat-Valve (Exhaust)    |
| 871  | 262001   | 1    | Bushing-Guide (Exhaust) |
| 871  | 63709    | 1    | Bushing-Guide (Intake)  |
| 1058 | MS3262   | 1    | Operator Manual (West)  |
| 1058 | MS3786   | 1    | Operator Manual (East)  |
| 1330 | 270962   | 1    | Repair Manual           |

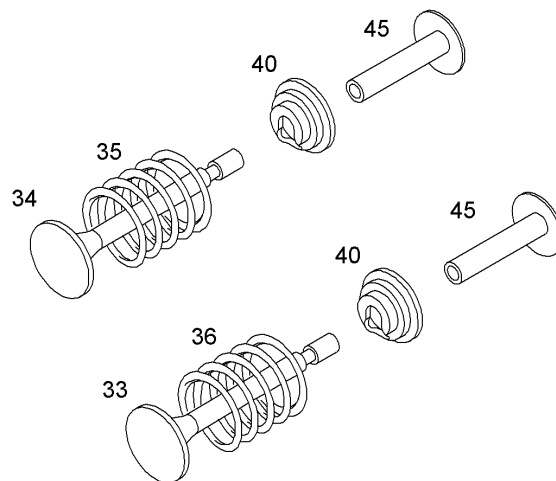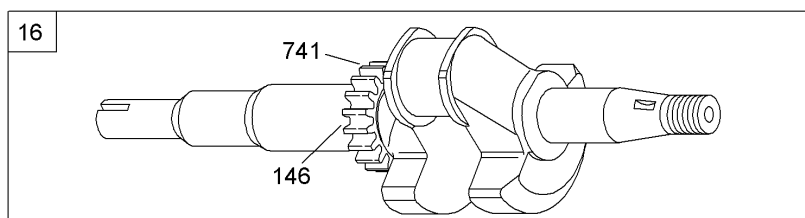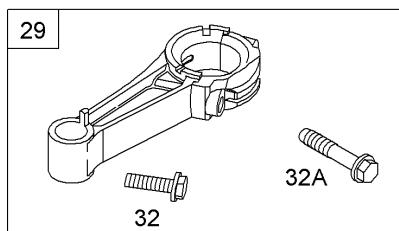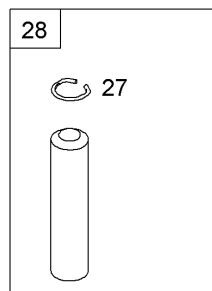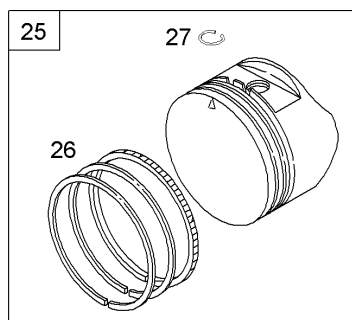


Assemblies include all parts shown in frames


# Crankshaft Assembly
 
## Briggs and Stratton 126T05-1840-B1


| Ref  | Part No. | Qty. | Description            |  |  |  |  |
|------|----------|------|------------------------|--|--|--|--|
| 216  | 696009   | 1    | Crankshaft             |  |  |  |  |
| 224  | 222698s  | 1    | Key-Flywheel           |  |  |  |  |
| 225  | 791097   | 1    | Piston ASM (STD)       |  |  |  |  |
| 225  | 791326   | 1    | Piston ASM (.020 O S)  |  |  |  |  |
| 226  | 791098   | 1    | Ring Set (STD)         |  |  |  |  |
| 226  | 791324   | 1    | Ring Set (.020 O S)    |  |  |  |  |
| 227  | 691866   | 1    | Lock-Pin, Piston       |  |  |  |  |
| 228  | 499423   | 1    | Pin-Piston (STD)       |  |  |  |  |
| 229  | 499424   | 1    | Rod-Connecting (STD)   |  |  |  |  |
| 232  | 691664   | 1    | Screw (Connecting Rod) |  |  |  |  |
| 232A | 695759   | 1    | Screw (Connecting Rod) |  |  |  |  |
| 233  | 262651s  | 1    | Valve-Exhaust          |  |  |  |  |
| 234  | 262652s  | 1    | Valve-Intake           |  |  |  |  |
| 235  | 691270   | 1    | Spring-Valve (Intake)  |  |  |  |  |
| 236  | 691270   | 1    | Spring-Valve (Exhaust) |  |  |  |  |
| 240  | 692194   | 1    | Retainer-Valve         |  |  |  |  |
| 245  | 690548   | 1    | Tappet-Valve           |  |  |  |  |
| 2146 | 690979   | 1    | Key-Timing             |  |  |  |  |
| 2741 | 691830   | 1    | Gear-Timing            |  |  |  |  |

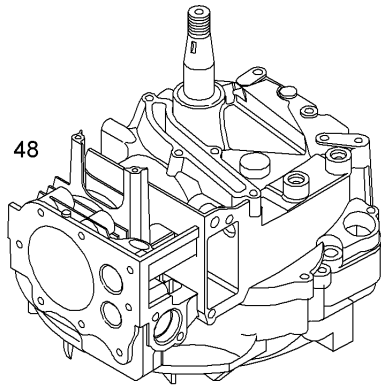


48

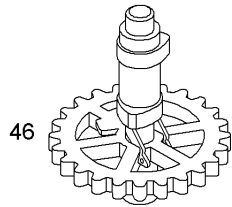 

46

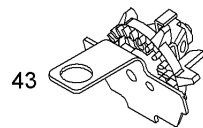 

43

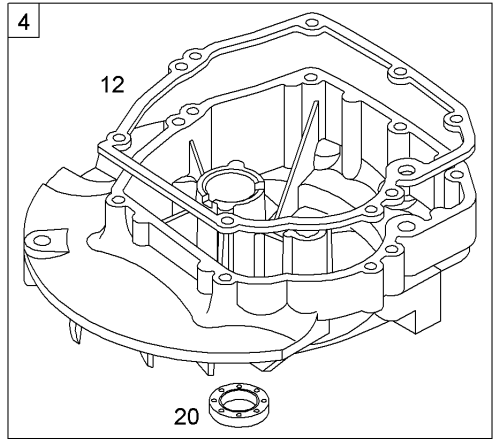 

4

 
12

20

15



287

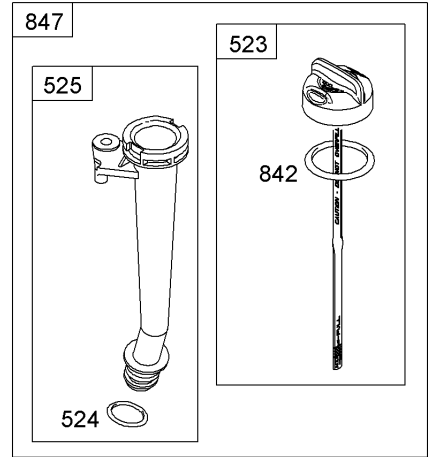

847

525

524

523


842

Assemblies include all parts shown in frames

## Crankcase Assembly
 
### Briggs and Stratton 126T05-1840-B1

| Ref   | Part No. | Qty. | Description                  |  |  |  |  |
|-------|----------|------|------------------------------|--|--|--|--|
| 24    | 493279   | 1    | Sump-Engine                  |  |  |  |  |
| 2412  | 692232   | 1    | Gasket-Crankcase (.015 STD)  |  |  |  |  |
| 215   | 691680   | 1    | Plug-Drain, Oil              |  |  |  |  |
| 2420  | 399781s  | 1    | Seal-Oil                     |  |  |  |  |
| 222   | 691092   | 1    | Screw (Engine Sump)          |  |  |  |  |
| 243   | 691997   | 1    | Slinger-Oil, Governor        |  |  |  |  |
| 246   | 691449   | 1    | Camshaft                     |  |  |  |  |
| 248   | 792742   | 1    | Block-Short                  |  |  |  |  |
| 2287  | 690940   | 1    | Screw (Dipstick Tube)        |  |  |  |  |
| 2523  | 499621   | 1    | Dipstick                     |  |  |  |  |
| 24524 | 692296   | 1    | Seal, O-Ring (Dipstick Tube) |  |  |  |  |
| 2525  | 495265   | 1    | Tube-Dipstick                |  |  |  |  |
| 24842 | 691031   | 1    | Seal, O-Ring (Dipstick Tube) |  |  |  |  |
| 2847  | 692047   | 1    | Dipstick Tube ASM            |  |  |  |  |


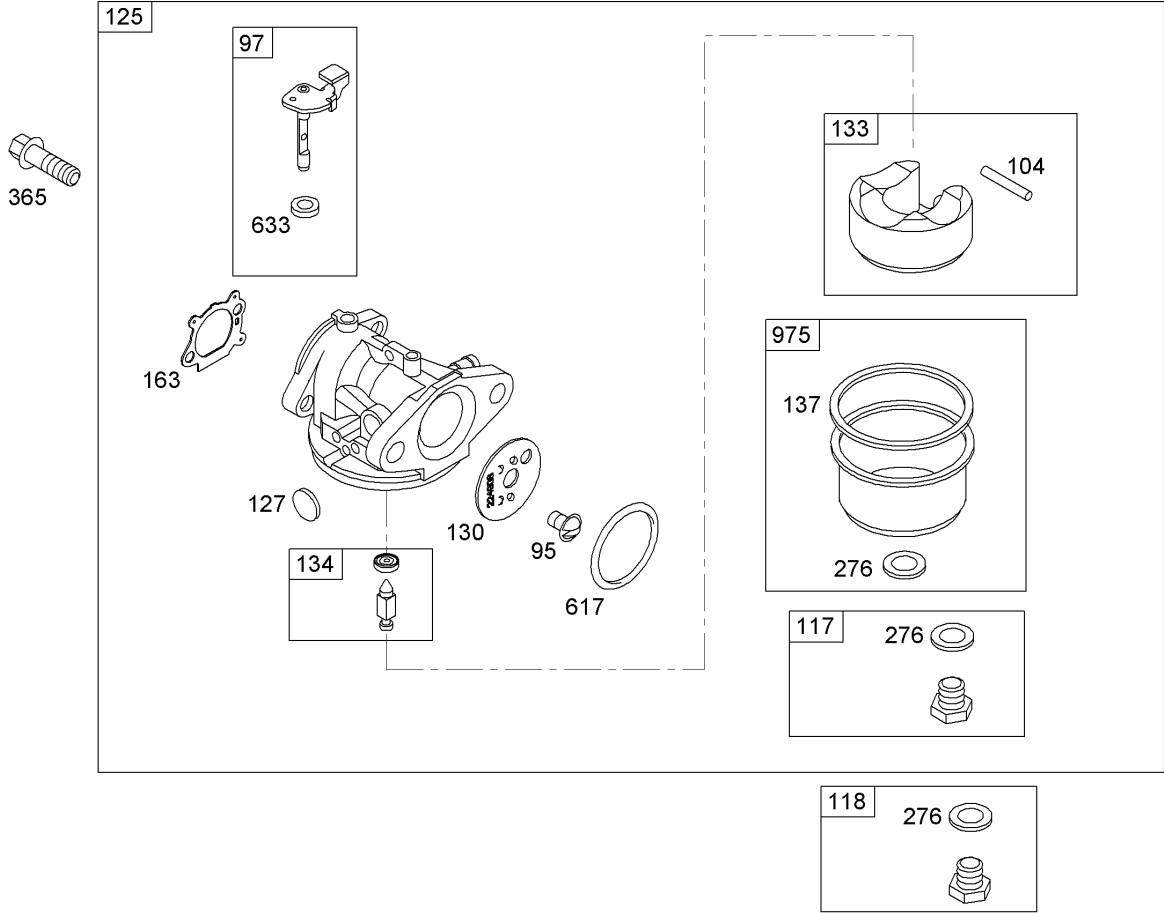


Assemblies include all parts shown in frames

# Carburetor Assembly
  
## Briggs and Stratton 126T05-1840-B1


| Ref     | Part No. | Qty. | Description                    |  |  |  |  |
|---------|----------|------|--------------------------------|--|--|--|--|
| 2 95    | 691636   | 1    | Screw (Throttle Valve)         |  |  |  |  |
| 2 97    | 696565   | 1    | Shaft-Throttle                 |  |  |  |  |
| 2 3 104 | 691242   | 1    | Pin-Hinge, Float               |  |  |  |  |
| 2 117   | 498978   | 1    | Jet-Main (STD)                 |  |  |  |  |
| 2 118   | 494870   | 1    | Jet-Main (High Altitude)       |  |  |  |  |
| 2 125   | 498170   | 1    | Carburetor                     |  |  |  |  |
| 2 3 127 | 694468   | 1    | Plug-Welch                     |  |  |  |  |
| 2 130   | 696564   | 1    | Valve-Throttle                 |  |  |  |  |
| 2 133   | 398187   | 1    | Float-Carburetor               |  |  |  |  |
| 2 3 134 | 398188   | 1    | Needle And Seat Kit            |  |  |  |  |
| 2 3 137 | 693981   | 1    | Gasket-Bowl, Float             |  |  |  |  |
| 5       |          |      |                                |  |  |  |  |
| 2 3 163 | 272653   | 1    | Gasket-Cleaner, Air            |  |  |  |  |
| 4 5     |          |      |                                |  |  |  |  |
| 2 3 276 | 271716   | 1    | Washer-Sealing                 |  |  |  |  |
| 5       |          |      |                                |  |  |  |  |
| 2 365   | 692524   | 1    | Screw (Carburetor)             |  |  |  |  |
| 2 3 617 | 270344s  | 1    | Seal, O-Ring (Intake Manifold) |  |  |  |  |
| 5       |          |      |                                |  |  |  |  |
| 2 3 633 | 691321   | 1    | Seal-Shaft, Choke Throttle     |  |  |  |  |
| 5       |          |      |                                |  |  |  |  |
| 2 975   | 493640   | 1    | Bowl-Float                     |  |  |  |  |

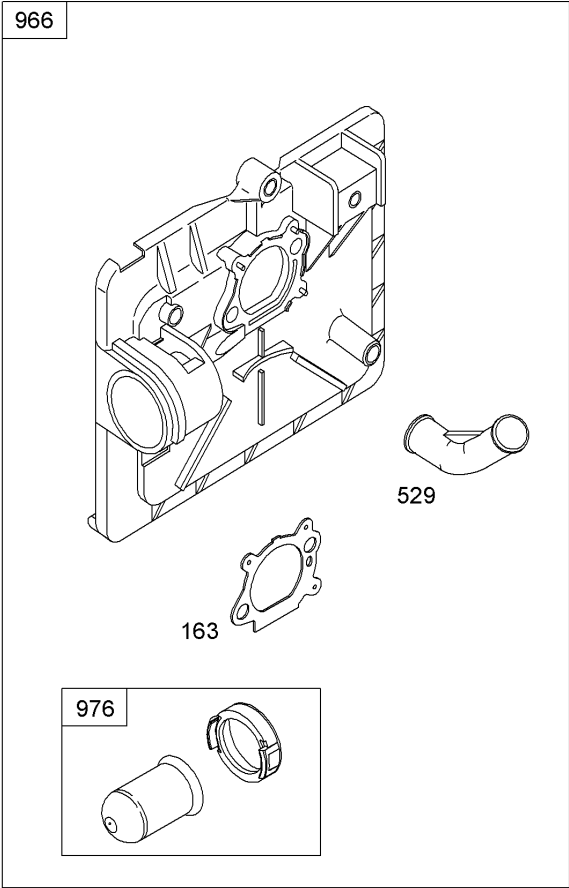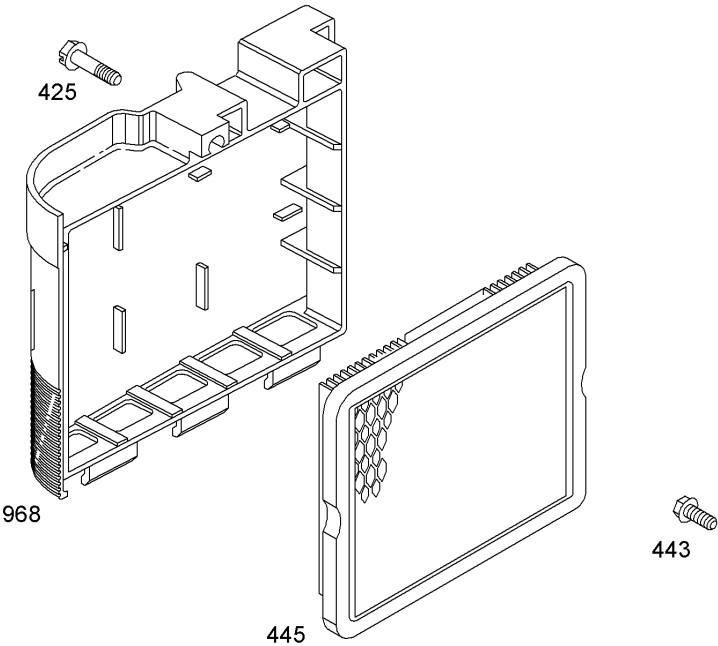

Assemblies include all parts shown in frames

**Air Cleaner Assembly**  
**Briggs and Stratton 126T05-1840-B1**

| Ref            | Part No. | Qty. | Description                     |  |  |  |  |
|----------------|----------|------|---------------------------------|--|--|--|--|
| 2 3 163<br>1 5 | 272653s  | 1    | Gasket-Cleaner, Air             |  |  |  |  |
| 2 425          | 690670   | 1    | Screw (Air Cleaner Cover)       |  |  |  |  |
| 2 443          | 692523   | 1    | Screw (Air Cleaner Primer Base) |  |  |  |  |
| 2 445          | 491588s  | 1    | Filter-Cartridge, Air Cleaner   |  |  |  |  |
| 2 529          | 691923   | 1    | Grommet                         |  |  |  |  |
| 2 966          | 792040   | 1    | Base-Primer, Air Cleaner        |  |  |  |  |
| 2 968          | 692298   | 1    | Cover-Cleaner, Air              |  |  |  |  |
| 2 976          | 694395   | 1    | Primer-Carburetor               |  |  |  |  |

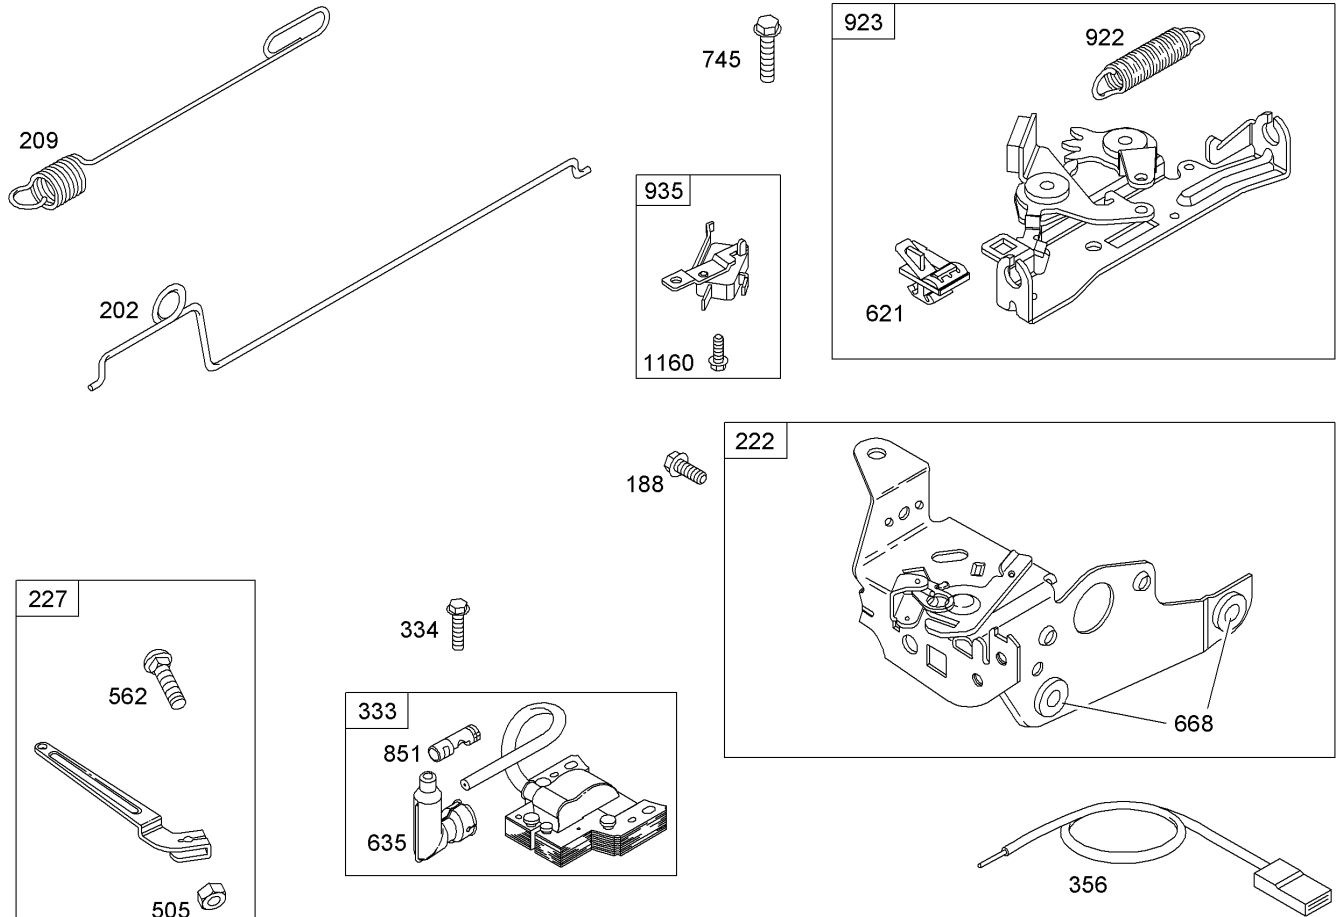 


Assemblies include all parts shown in frames

# Governor Assembly
 
## Briggs and Stratton 126T05-1840-B1

| Ref   | Part No. | Qty. | Description                   |  |  |  |  |
|-------|----------|------|-------------------------------|--|--|--|--|
| 2188  | 690877   | 1    | Screw (Control Bracket)       |  |  |  |  |
| 2202  | 691829   | 1    | Link-Governor, Mechanical     |  |  |  |  |
| 2209  | 691852   | 1    | Spring-Governor               |  |  |  |  |
| 2222  | 793754   | 1    | Bracket-Control               |  |  |  |  |
| 2227  | 690783   | 1    | Lever-Control, Governor       |  |  |  |  |
| 2333  | 793353   | 1    | Armature-Magneto              |  |  |  |  |
| 2334  | 691061   | 1    | Screw (Magneto Armature)      |  |  |  |  |
| 2356  | 692390   | 1    | Wire-Stop                     |  |  |  |  |
| 2505  | 691251   | 1    | Nut (Governor Control Lever)  |  |  |  |  |
| 2562  | 691119   | 1    | Bolt (Governor Control Lever) |  |  |  |  |
| 2621  | 692310   | 1    | Switch-Stop                   |  |  |  |  |
| 2635  | 793351   | 1    | Boot-Spark Plug               |  |  |  |  |
| 2668  | 493823   | 1    | Spacer                        |  |  |  |  |
| 2745  | 691648   | 1    | Screw (Brake)                 |  |  |  |  |
| 2851  | 692424   | 1    | Terminal-Spark Plug           |  |  |  |  |
| 2922  | 691831   | 1    | Spring-Brake                  |  |  |  |  |
| 2923  | 691994   | 1    | Brake ASM                     |  |  |  |  |
| 2935  | 499421   | 1    | Switch-Interlock              |  |  |  |  |
| 21160 | 691627   | 1    | Screw (Interlock Switch)      |  |  |  |  |

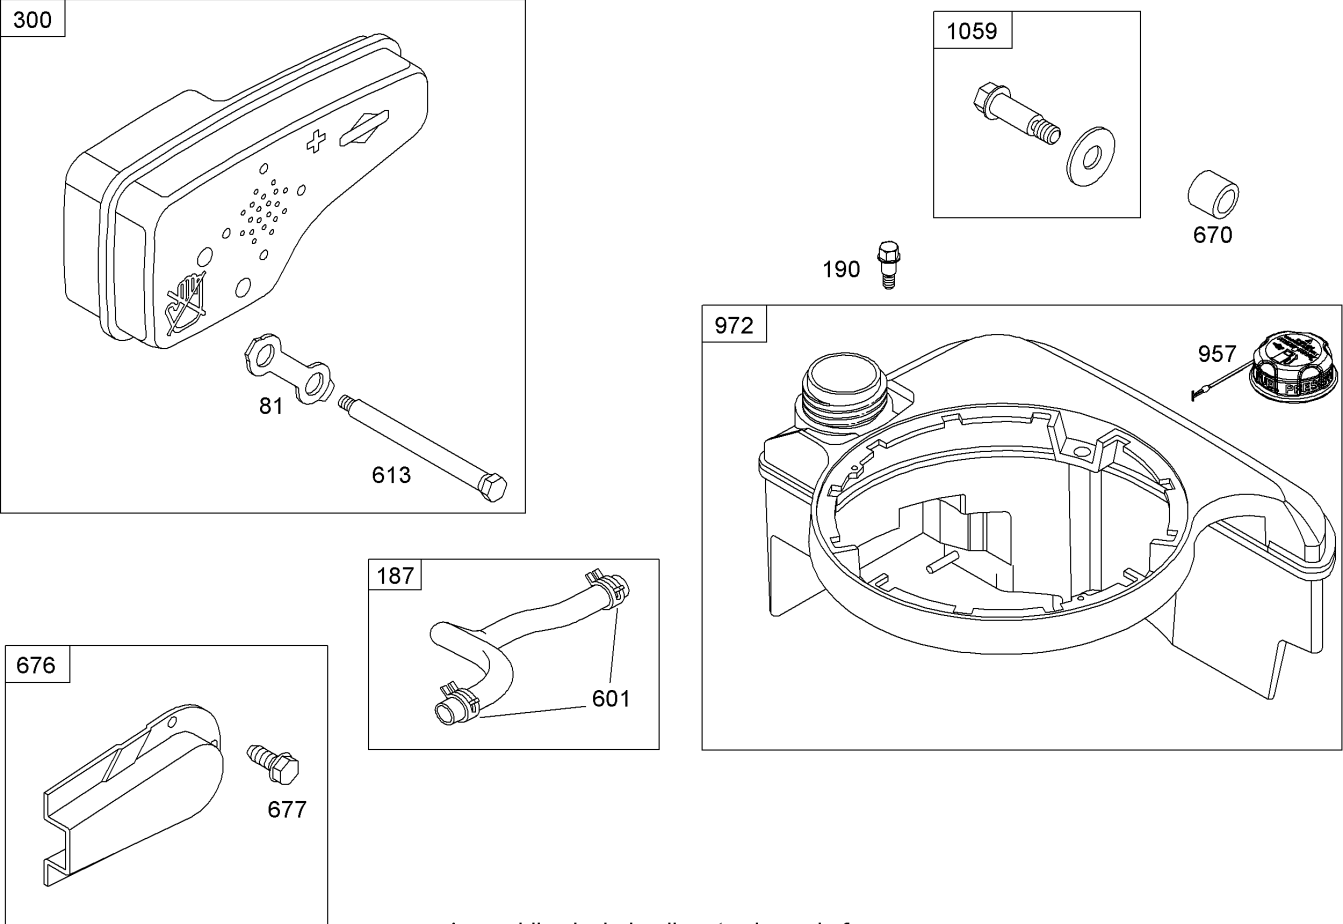


Muffler and Fuel Tank Assembly

Briggs and Stratton 126T05-1840-B1

| Ref   | Part No. | Qty. | Description               |  |  |  |  |
|-------|----------|------|---------------------------|--|--|--|--|
| 281   | 691740   | 1    | Lock-Screw, Muffler       |  |  |  |  |
| 2187  | 791873   | 1    | Line-Fuel (Molded)        |  |  |  |  |
| 2190  | 690940   | 1    | Screw (Fuel Tank)         |  |  |  |  |
| 2300  | 692038   | 1    | Muffler                   |  |  |  |  |
| 2601  | 791850   | 1    | Clamp-Hose                |  |  |  |  |
| 2613  | 691340   | 1    | Screw (Muffler)           |  |  |  |  |
| 2670  | 692294   | 1    | Spacer-Tank, Fuel         |  |  |  |  |
| 2676  | 493871   | 1    | Deflector-Muffler         |  |  |  |  |
| 2677  | 690661   | 1    | Screw (Muffler Deflector) |  |  |  |  |
| 2957  | 699985   | 1    | Cap-Tank, Fuel            |  |  |  |  |
| 2972  | 699374   | 1    | Tank-Fuel                 |  |  |  |  |
| 21059 | 692311   | 1    | Screw And Washer Kit      |  |  |  |  |




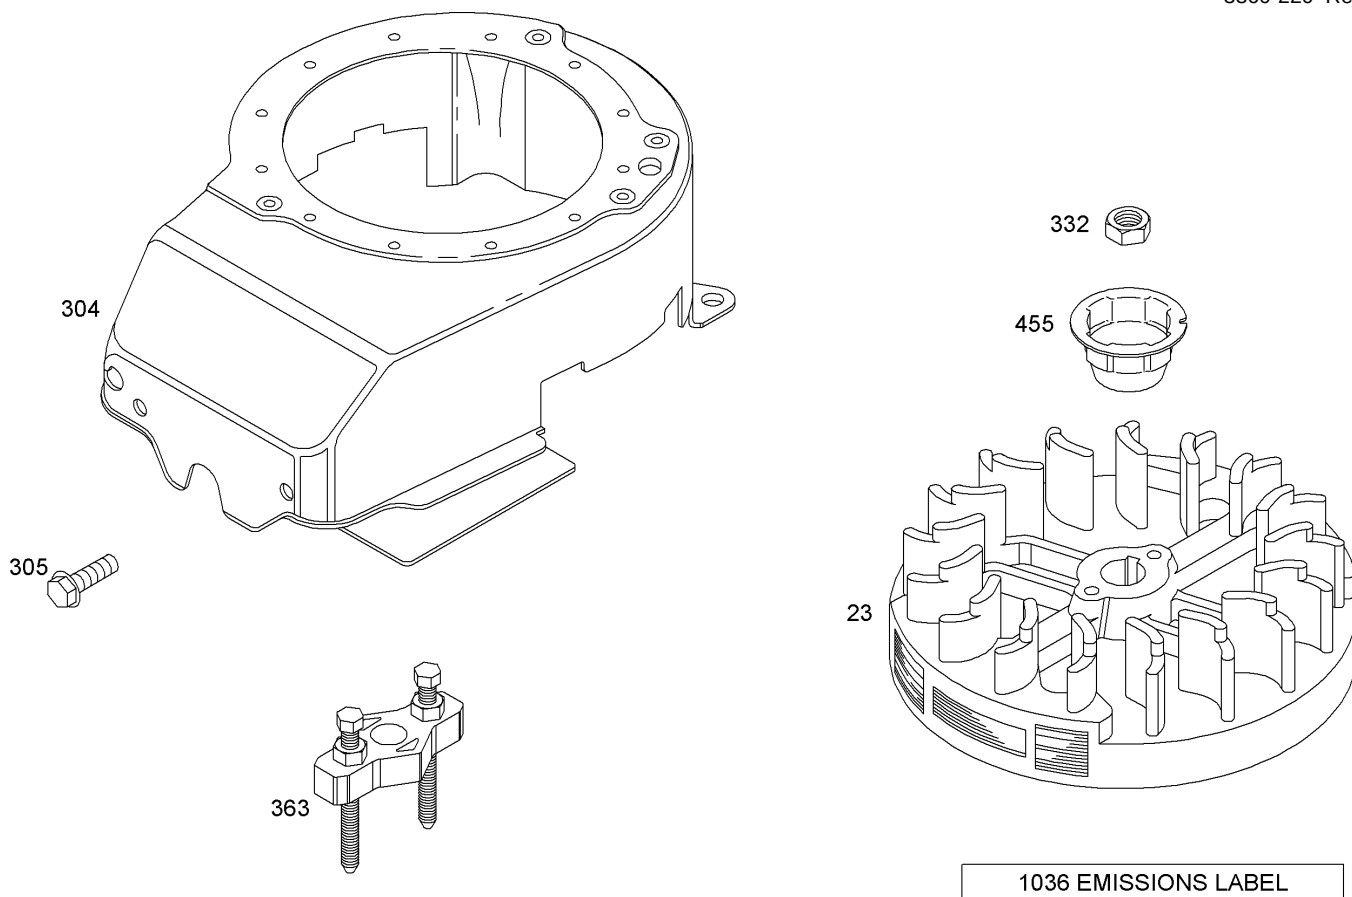 

Assemblies include all parts shown in frames

# Blower Housing Assembly Briggs and Stratton 126T05-1840-B1
 
| Ref   | Part No. | Qty. | Description            |  |  |  |  |
|-------|----------|------|------------------------|--|--|--|--|
| 223   | 691987   | 1    | Flywheel               |  |  |  |  |
| 2304  | 493293   | 1    | Housing-Blower         |  |  |  |  |
| 2305  | 691108   | 1    | Screw (Blower Housing) |  |  |  |  |
| 2332  | 690662   | 1    | Nut (Flywheel)         |  |  |  |  |
| 2363  | 19069    | 1    | Puller-Flywheel        |  |  |  |  |
| 2455  | 791960   | 1    | Cup-Flywheel           |  |  |  |  |
| 21036 |          | 1    | Label-Emissions        |  |  |  |  |

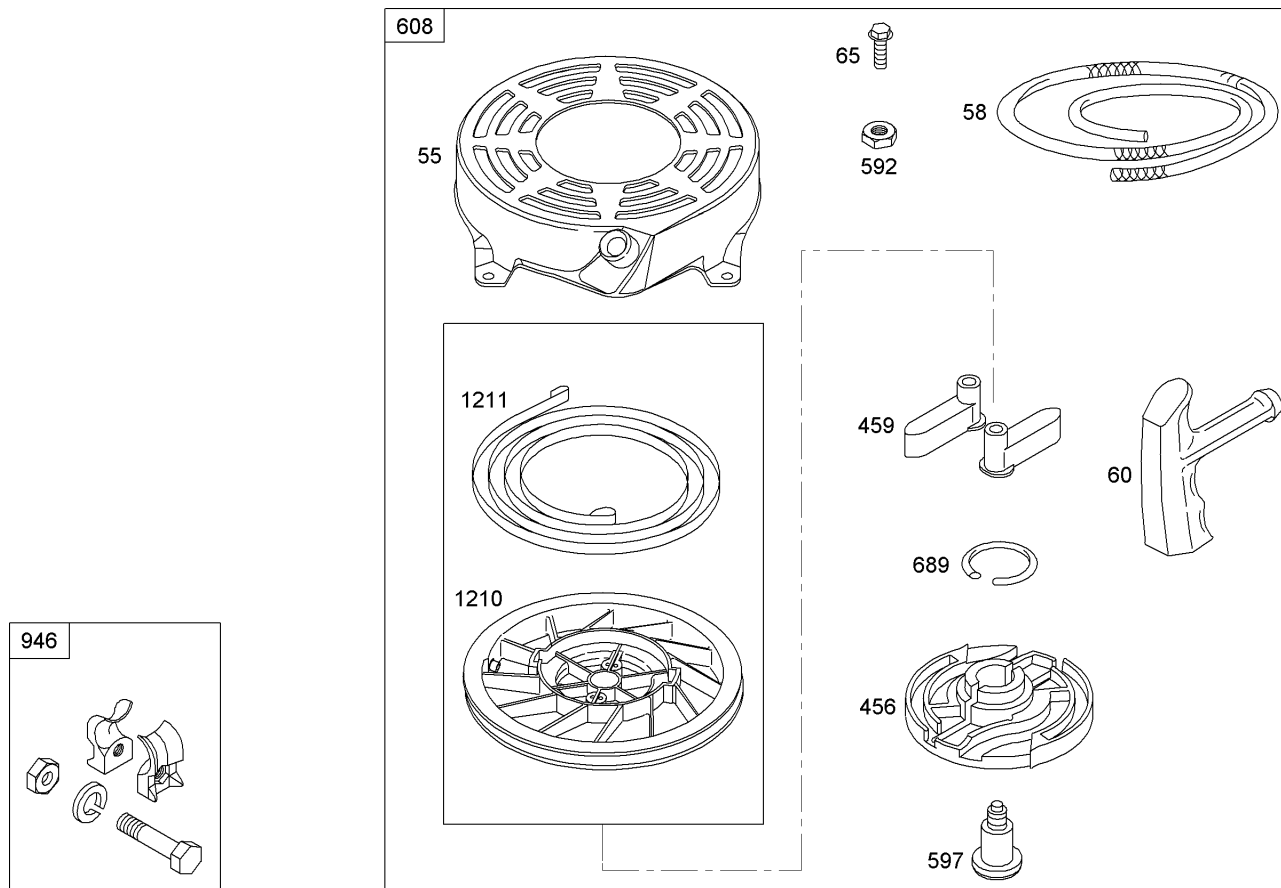


Assemblies include all parts shown in frames

# Starter Assembly
 
## Briggs and Stratton 126T05-1840-B1

| Ref   | Part No. | Qty. | Description                           |  |  |  |  |
|-------|----------|------|---------------------------------------|--|--|--|--|
| 255   | 691421   | 1    | Housing-Starter, Rewind               |  |  |  |  |
| 258   | 697316   | 1    | Rope-Starter (Cut To Required Length) |  |  |  |  |
| 260   | 281434s  | 1    | Grip-Rope, Starter                    |  |  |  |  |
| 265   | 690837   | 1    | Screw (Rewind Starter)                |  |  |  |  |
| 2456  | 692299   | 1    | Plate-Friction, Pawl                  |  |  |  |  |
| 2459  | 281505s  | 1    | Ratchet-Pawl                          |  |  |  |  |
| 2592  | 690800   | 1    | Nut (Rewind Starter)                  |  |  |  |  |
| 2597  | 691696   | 1    | Screw (Pawl Friction Plate)           |  |  |  |  |
| 2608  | 497680   | 1    | Starter-Rewind                        |  |  |  |  |
| 2689  | 691855   | 1    | Spring-Friction                       |  |  |  |  |
| 2946  | 691738   | 1    | Stop-Rope                             |  |  |  |  |
| 21210 | 498144   | 1    | Pulley And Spring ASM (Pulley)        |  |  |  |  |
| 21211 | 498144   | 1    | Pulley And Spring ASM (Spring)        |  |  |  |  |

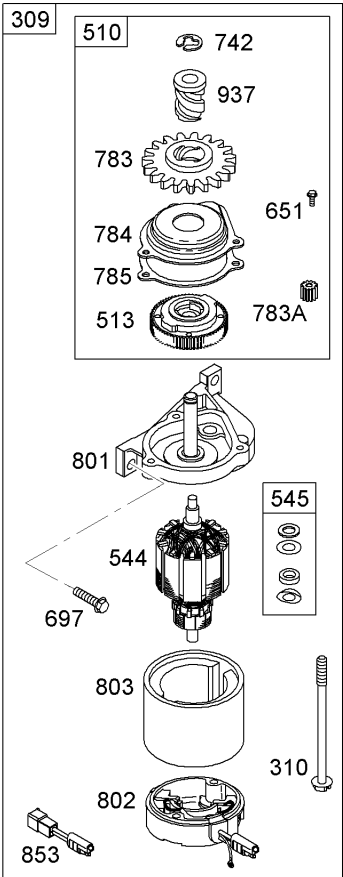


Assemblies include all parts shown in frames

**Electric Starter Assembly**  
**Briggs and Stratton 126T05-1840-B1**

| Ref   | Part No. | Qty. | Description                |  |  |  |  |
|-------|----------|------|----------------------------|--|--|--|--|
| 2309  | 695550   | 1    | Motor-Starter              |  |  |  |  |
| 2310  | 692327   | 1    | Bolt (Starter Motor)       |  |  |  |  |
| 2510  | 494147   | 1    | Drive-Starter              |  |  |  |  |
| 2513  | 692358   | 1    | Clutch-Drive               |  |  |  |  |
| 2544  | 690786   | 1    | Armature-Starter           |  |  |  |  |
| 2545  | 492919   | 1    | Washer Set                 |  |  |  |  |
| 2651  | 690345   | 1    | Screw (Starter Gear Cover) |  |  |  |  |
| 2697  | 691127   | 1    | Screw (Drive Cap)          |  |  |  |  |
| 2742  | 93941    | 1    | Retainer-E Ring            |  |  |  |  |
| 2783  | 691918   | 1    | Gear-Pinion                |  |  |  |  |
| 2783A | 691269   | 1    | Gear-Pinion                |  |  |  |  |
| 2784  | 692341   | 1    | Cover-Gear, Starter        |  |  |  |  |
| 2785  | 692352   | 1    | Gasket-Cover, Starter      |  |  |  |  |
| 2801  | 690782   | 1    | Cap-Drive                  |  |  |  |  |
| 2802  | 695267   | 1    | Cap-End                    |  |  |  |  |
| 2803  | 695266   | 1    | Housing-Starter            |  |  |  |  |
| 2853  | 695268   | 1    | Adapter-Wire               |  |  |  |  |
| 2937  | 691325   | 1    | Spline-Starter             |  |  |  |  |


## 358 ENGINE GASKET SET

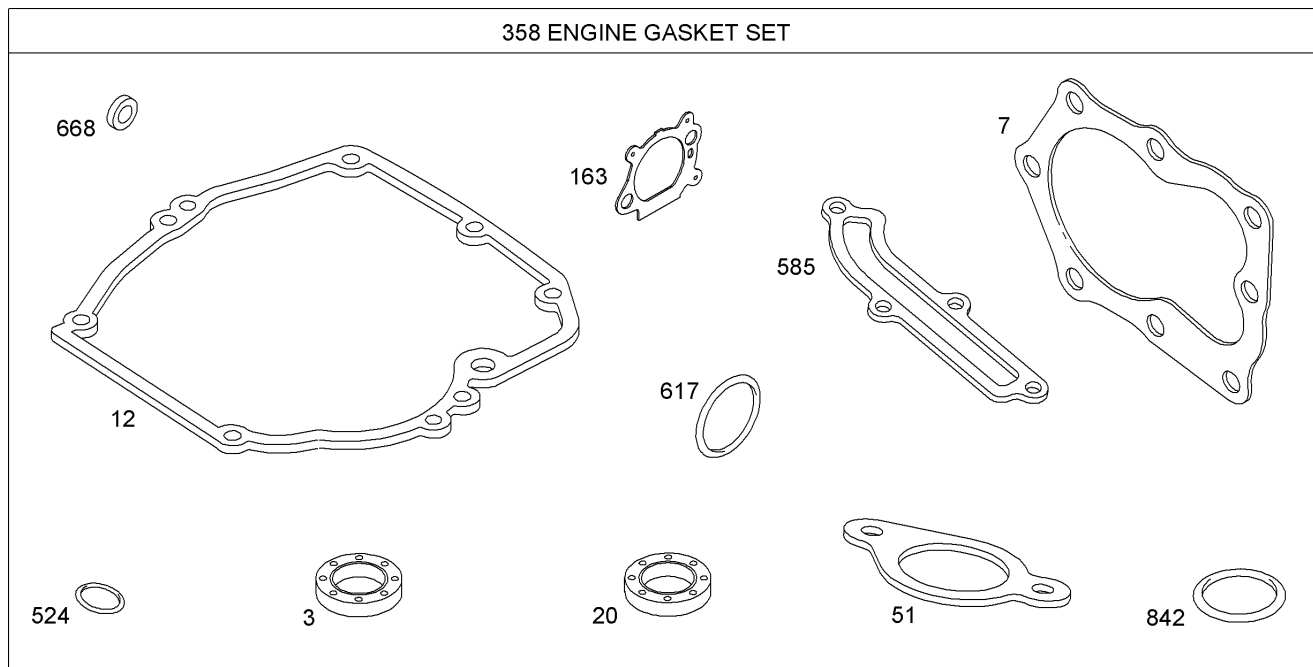 

Assemblies include all parts shown in frames

# Engine Gasket Set Briggs and Stratton 126T05-1840-B1
 
| Ref          | Part No. | Qty. | Description                   |  |  |  |  |
|--------------|----------|------|-------------------------------|--|--|--|--|
| <b>243</b>   | 299819s  | 1    | Seal-Oil (Magneto Side)       |  |  |  |  |
| <b>247</b>   | 692249   | 1    | Gasket-Head, Cylinder         |  |  |  |  |
| <b>2412</b>  | 692232   | 1    | Gasket-Crankcase (.015 STD)   |  |  |  |  |
| <b>2420</b>  | 399781s  | 1    | Seal-Oil (PTO Side)           |  |  |  |  |
| <b>2451</b>  | 272199s  | 1    | Gasket-Intake                 |  |  |  |  |
| <b>23163</b> | 272653s  | 1    | Gasket-Cleaner, Air           |  |  |  |  |
| <b>45</b>    |          |      |                               |  |  |  |  |
| <b>2358</b>  | 497316   | 1    | Engine Gasket Set             |  |  |  |  |
| <b>24524</b> | 692296   | 1    | Seal-O Ring (Dipstick Tube)   |  |  |  |  |
| <b>24585</b> | 691879   | 1    | Gasket-Passage, Breather      |  |  |  |  |
| <b>23617</b> | 270344s  | 1    | Seal-O Ring (Intake Manifold) |  |  |  |  |
| <b>45</b>    |          |      |                               |  |  |  |  |
| <b>24668</b> | 493823   | 1    | Spacer                        |  |  |  |  |
| <b>24842</b> | 691031   | 1    | Seal, O-Ring (Dipstick)       |  |  |  |  |

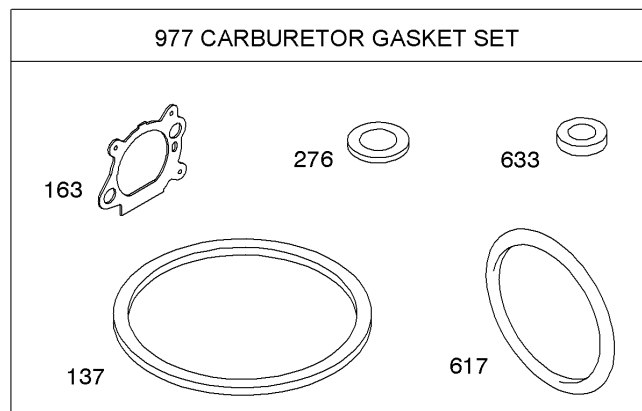

Assemblies include all parts shown in frames

# Carburetor Overhaul Kit

## Briggs and Stratton 126T05-1840-B1

| Ref   | Part No. | Qty. | Description                    |  |  |  |  |
|-------|----------|------|--------------------------------|--|--|--|--|
| 23104 | 691242   | 1    | Pin-Hinge, Float               |  |  |  |  |
| 2121  | 498260   | 1    | Carburetor Overhaul Kit        |  |  |  |  |
| 23127 | 694468   | 1    | Plug-Welch                     |  |  |  |  |
| 23134 | 398188   | 1    | Needle And Seat Kit            |  |  |  |  |
| 23137 | 693981   | 1    | Gasket-Bowl, Float             |  |  |  |  |
| 5     |          |      |                                |  |  |  |  |
| 23163 | 272653s  | 1    | Gasket-Cleaner, Air            |  |  |  |  |
| 45    |          |      |                                |  |  |  |  |
| 23276 | 271716   | 1    | Washer-Sealing                 |  |  |  |  |
| 5     |          |      |                                |  |  |  |  |
| 23617 | 270344s  | 1    | Seal, O-Ring (Intake Manifold) |  |  |  |  |
| 45    |          |      |                                |  |  |  |  |
| 23633 | 691321   | 1    | Seal-Shaft, Choke Throttle     |  |  |  |  |
| 5     |          |      |                                |  |  |  |  |
| 2977  | 498261   | 1    | Carburetor Gasket Set          |  |  |  |  |

**Attachments and Accessories**

**For 20638 - Multicycler 48cm Lawn Mower**

| Product Name            | Model/Part |
|-------------------------|------------|
| Assist Handle Kit ..... | 99-6384    |

## NOTES

