




MODEL NO. 07200-40001 & UP

PARTS
CATALOG

WORKMAN 3200

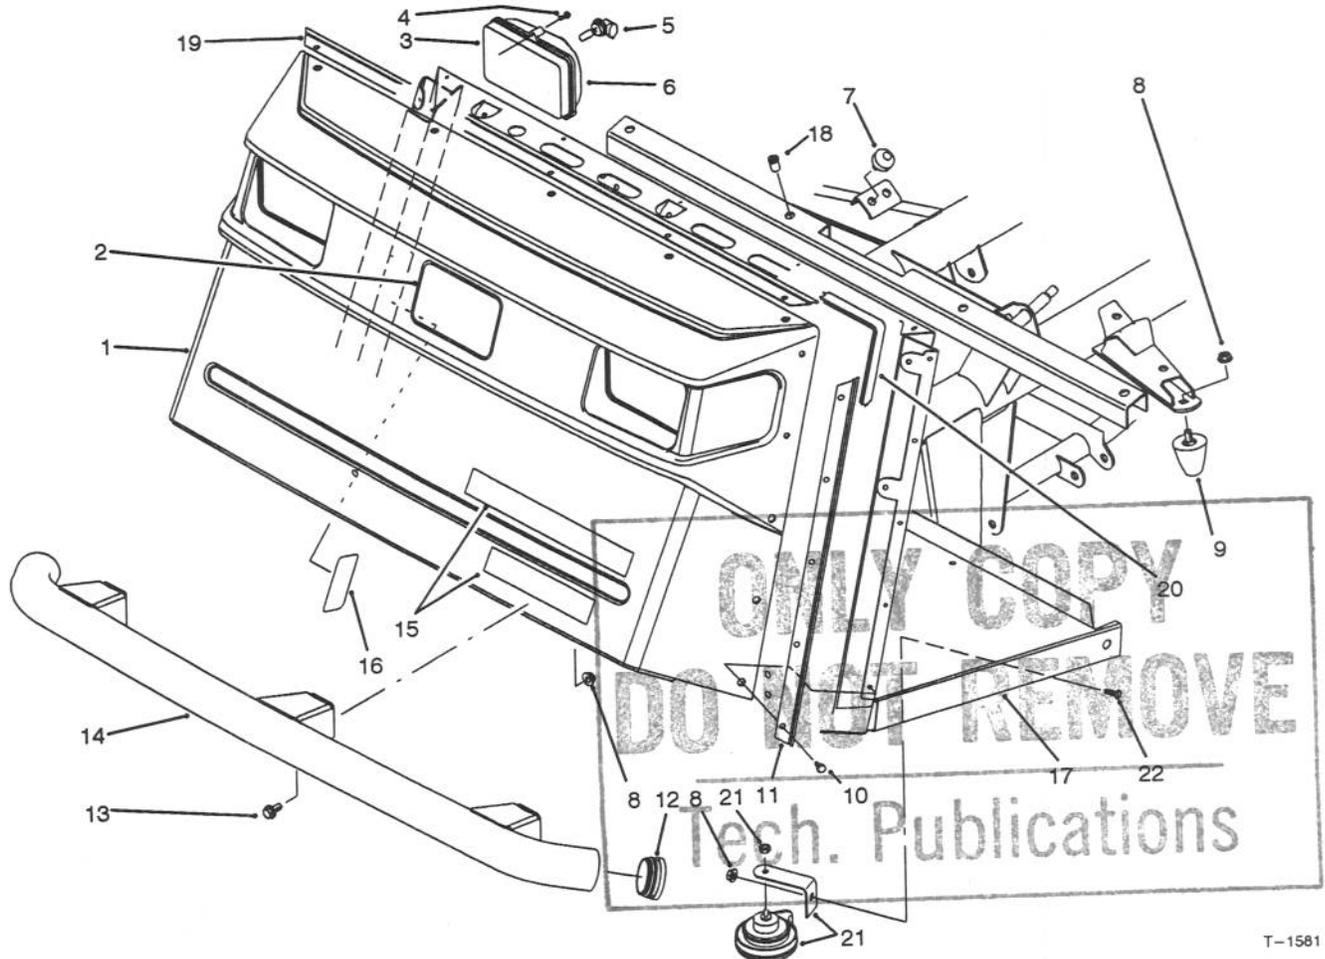


T-1581

FRONT BUMPER & HOOD ASSEMBLY

| Ref. No. | Part No. | Description | No. Used | Ref. No. | Part No. | Description | No. Used |
|----------|----------|---|----------|----------|----------|--|----------|
| 1 | 87-0710 | Hood | 1 | 12 | 2410-42 | Cap - Front Bumper | 2 |
| 2 | 62-5550 | Decal - TORO | 1 | 13 | 3234-1 | Screw - Hex. Flange Hd. | 6 |
| 3 | 87-2120 | Headlight Assembly (Incl. Ref. #5-6) | 2 | 14 | 87-4070 | Bumper - Front | 1 |
| 4 | 32104-88 | Screw | 6 | 15 | 87-6700 | Decal - Workman 3200 | 1 |
| 5 | 87-6320 | Bulb - Headlight | 2 | †16 | 87-6050 | Decal - Load Rating | 1 |
| 6 | 87-6330 | Lens - Headlight | 2 | 17 | 87-7130 | Operators Platform Assy. (Incl. Ref. #18) | 1 |
| 7 | 87-2440 | Bumper | 2 | 18 | 32148-7 | Nut - Clinch | 8 |
| 8 | 3290-357 | Nut - Flange Lock | 9 | 19 | 87-8130 | Bracket - Trim Top | 1 |
| 9 | 26-0071 | Bumper | 2 | 20 | 87-8160 | Trim | 1 |
| 10 | 87-6620 | Screw | 15 | 21 | 116749 | Horn Assembly | 1 |
| 11 | 87-8120 | Bracket - Trim Side | 2 | 22 | 323-4 | Screw - Cap Hex. Hd. | 1 |

†For different language versions of this part, see International Decal Cross Reference.


TPS

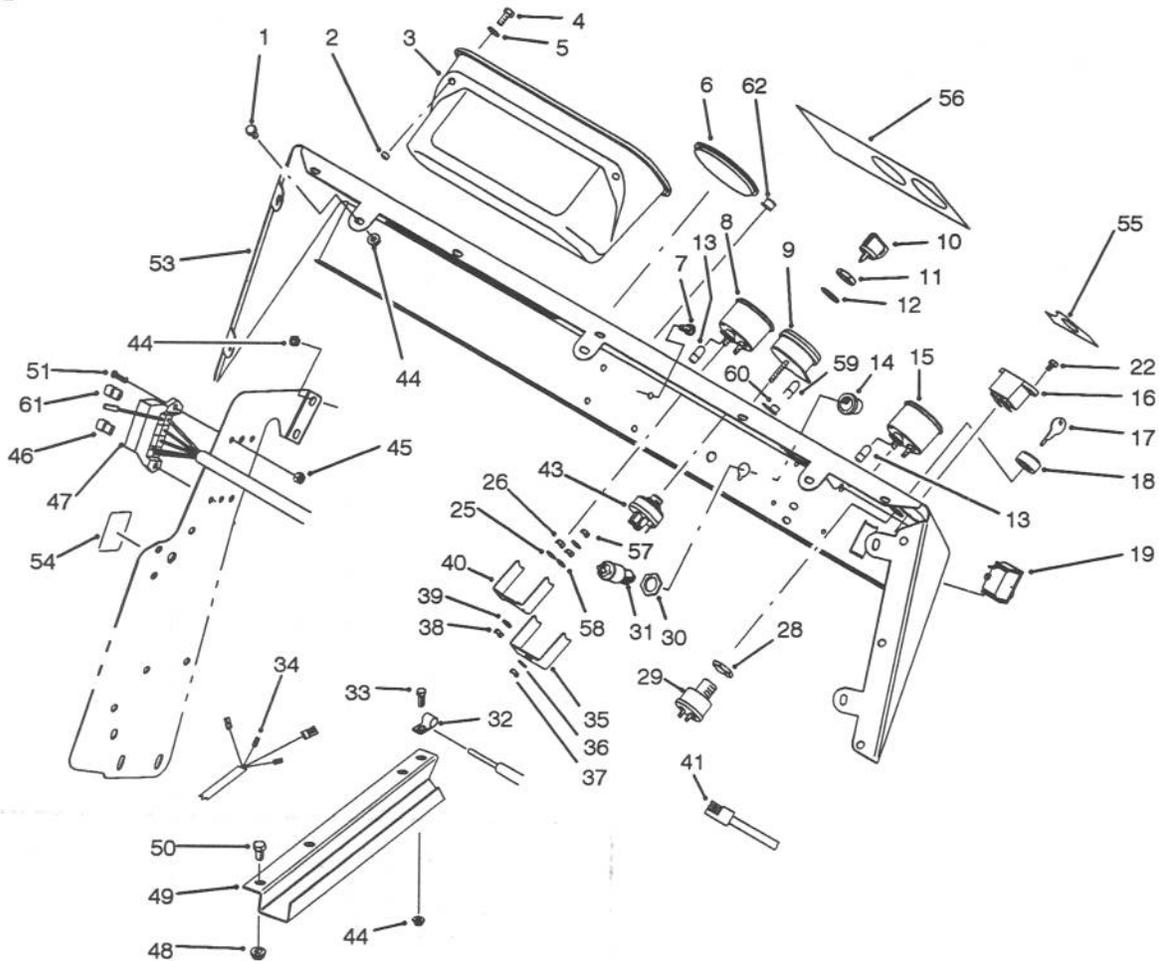

T-1706

CONTROL PANEL ASSEMBLY

| Ref. No. | Part No. | Description | No. Used | Ref. No. | Part No. | Description | No. Used |
|----------|----------|---|----------|----------|----------|--|----------|
| 1 | 321-2 | Screw - Cap Hex. Hd. | 7 | 29 | 87-4030 | Supervisor Switch Assy. (Incl. Ref. #17, 18 & 28) | 1 |
| 2 | 32148-6 | Insert - Threaded | 2 | 30 | | Nut - Hex. | 1 |
| 3 | 87-3780 | Box - Glove | 1 | 31 | 18-2830 | Horn Switch Assembly (Incl. Ref. #14 & 30) | 1 |
| 4 | 321-3 | Screw - Cap Hex. Hd. | 2 | 32 | 2412-89 | Clamp - R | 1 |
| 5 | 3256-22 | Washer - Flat | 2 | 33 | 321-4 | Screw - Cap Hex. Hd. | 1 |
| 6 | 2410-35 | Plug - Hole | 1 | 34 | 87-4240 | Harness - Wire Rear | 1 |
| 7 | 87-6620 | Screw - Torx Pan Hd. | 4 | 35 | | Clamp - Light | 1 |
| 8 | 87-5590 | Temperature Gauge Assy. (Incl. Ref. #38-40, 57 & 58) | 1 | 36 | 3254-1 | Washer - Lock | 1 |
| 9 | 87-4140 | Warning Light Assembly (Incl. Ref. #35-37, 59 & 60) | 1 | 37 | 3217-26 | Nut - Hex. | 1 |
| 10 | 63-8360 | Key - Ignition | 1 | 38 | 3217-25 | Nut - Hex. | 2 |
| 11 | 218-446 | Nut - Hex. | 1 | 39 | 3253-15 | Washer - Lock | 2 |
| 12 | 218-447 | Washer - Lock | 1 | 40 | | Clamp - Temp. Gauge | 1 |
| 13 | 218-600 | Bulb | 2 | 41 | 87-4230 | Harness - Wire Front LH | 1 |
| 14 | | Button - Horn | 1 | 43 | 27-2360 | Ignition Switch Assembly (Incl. Ref. #11 & 12) | 1 |
| 15 | 87-5580 | Fuel Gauge Assembly (Incl. Ref. #38-40, 57 & 58) | 1 | 44 | 32128-33 | Nut - Flange | 12 |
| 16 | 75-6820 | Hourmeter | 1 | 45 | 3296-2 | Nut - Lock | 2 |
| 17 | 87-0740 | Key - Supervisor Switch | 1 | 46 | 218-574 | Fuse 7.5 Amp. | 2 |
| 18 | 87-1720 | Nut - Supervisor Switch | 1 | 47 | 87-8500 | Front Wire Harness Assy. (Incl. Ref. #13) | 1 |
| 19 | 87-3790 | Switch - Light | 1 | 48 | 32128-20 | Nut - Flange | 3 |
| 20 | 32144-18 | Screw - Cap Hex. Hd. | 2 | 49 | 87-3320 | Cover - Wire Harness | 1 |
| 21 | 2410-64 | Plug - Hole | 1 | 50 | 322-2 | Screw - Cap Hex. Hd. | 3 |
| 22 | 32144-18 | Screw - Cap Hex. Hd. | 2 | 51 | 3250-13 | Screw | 2 |
| 28 | | Nut - Hex. | 1 | | | | |

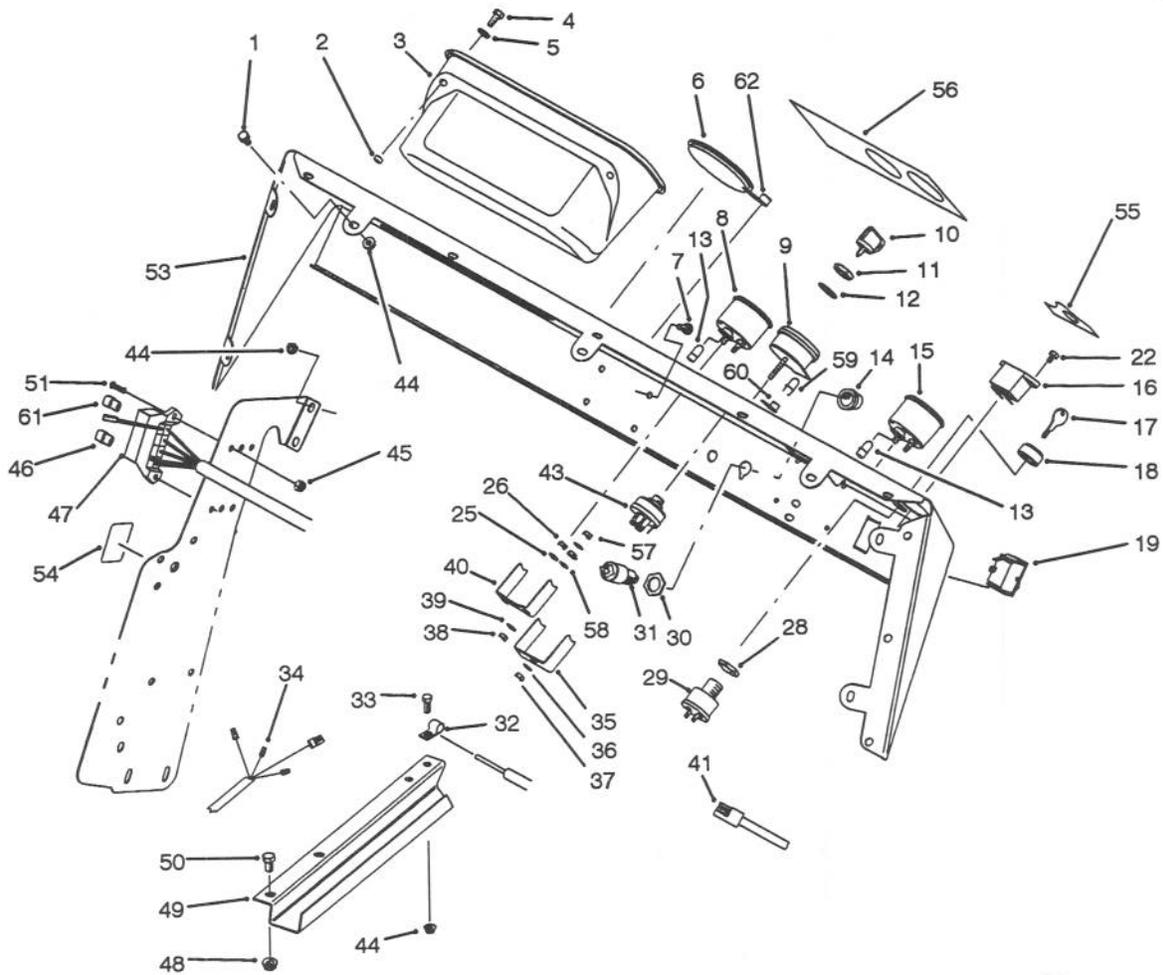


T-1706


CONTROL PANEL ASSEMBLY (Continued)

| Ref. No. | Part No. | Description | No. Used | Ref. No. | Part No. | Description | No. Used |
|----------|----------|---|----------|----------|----------|--|----------|
| 53 | 87-8550 | Control Panel Assembly (Incl. Ref. #55-56) | 1 | 58 | 3217-29 | Nut - Jam | 3 |
| ‡54 | 87-6670 | Decal - Fuse Block | 1 | 59 | 219-17 | Bulb - Warning Light | 4 |
| ‡55 | 87-5910 | Decal - Supervisor | 1 | 60 | 87-6270 | Socket & Bulb Assembly (Incl. Ref. #59) | 4 |
| ‡56 | 87-8520 | Decal - Dash | 1 | 61 | 218-578 | Fuse 10 Amp. | 1 |
| 57 | 3253-19 | Washer - Lock | 3 | 62 | 2410-64 | Plug - Hole | 1 |

‡For different language versions of this part, see International Decal Cross Reference.

ELECTRICAL SCHEMATIC

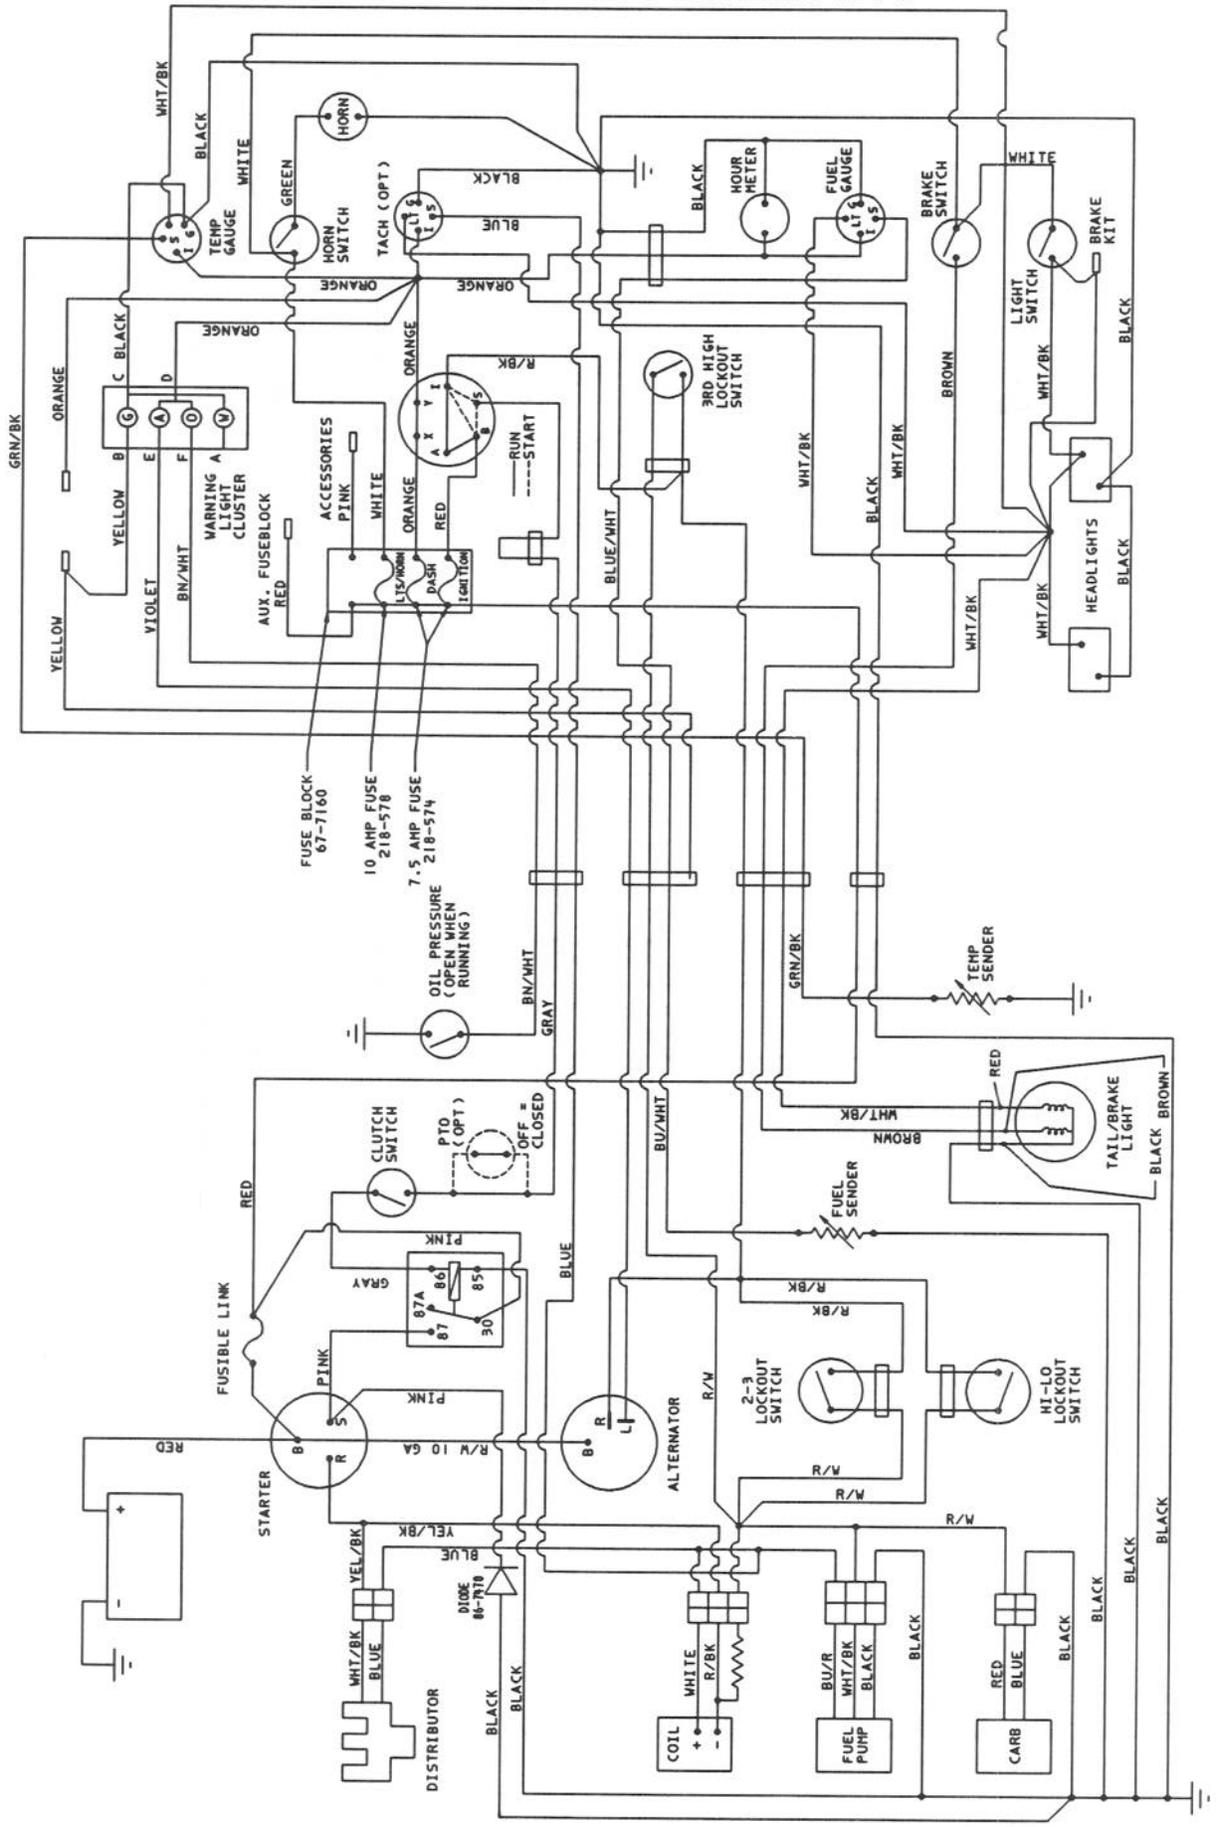

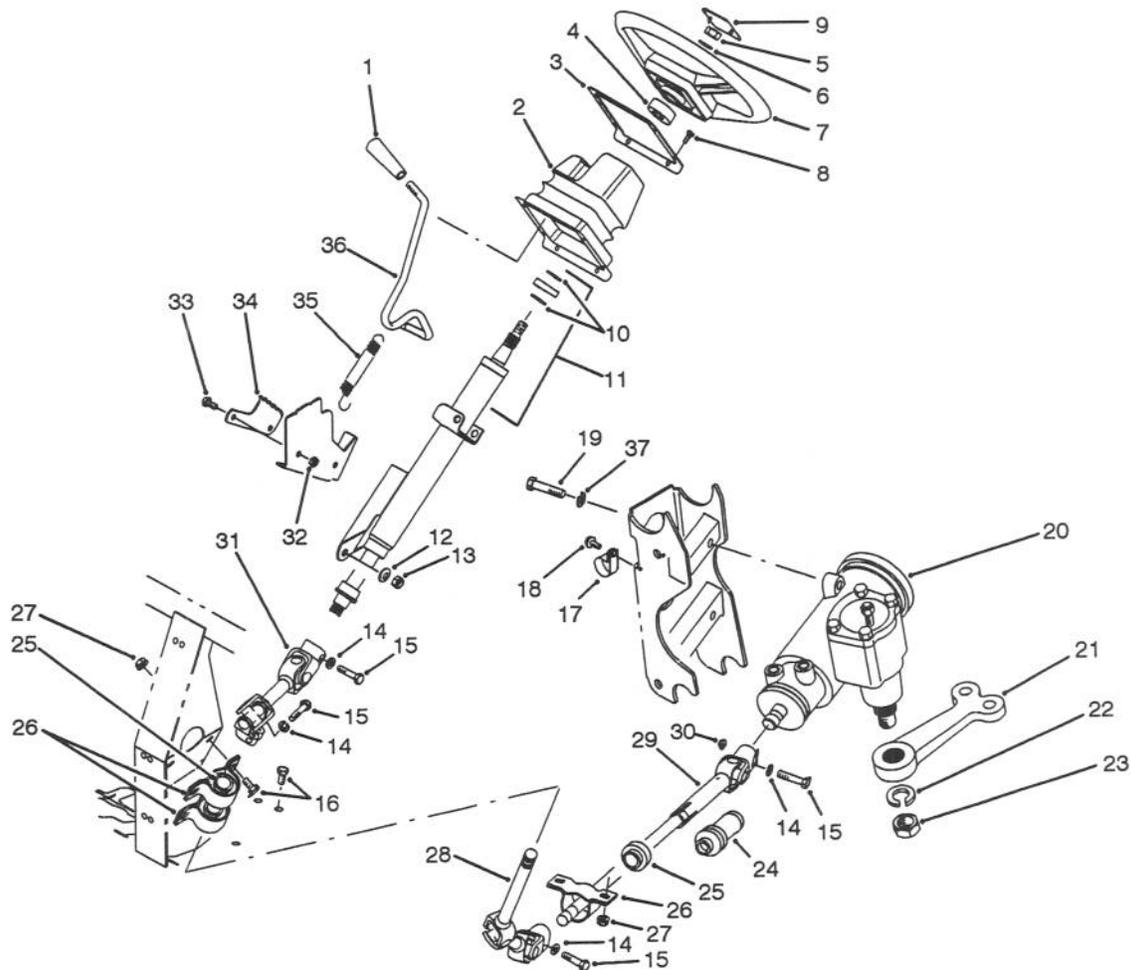


T-1584

STEERING LINKAGE ASSEMBLY

| Ref. No. | Part No. | Description | No. Used | Ref. No. | Part No. | Description | No. Used |
|----------|-----------|---|----------|----------|----------|--|----------|
| 1 | 233-39 | Knob | 1 | 21 | 87-0370 | Arm - Pitman | 1 |
| 2 | 87-3460 | Boot - Tilt Steering | 1 | 22 | 39-7420 | Washer - Lock | 1 |
| 3 | 87-4720 | Plate - Steering Boot | 1 | 23 | 39-7440 | Nut - Lock | 1 |
| 4 | 21-9260 | Spacer | 1 | 24 | 92-4157 | Boot - Steering Shaft | 1 |
| 5 | 3277-1 | Nut - Hex. | 1 | 25 | 87-2280 | Bearing | 3 |
| 6 | 48-8070 | Washer - Flat | 1 | 26 | 87-3250 | Mount - Bearing | 3 |
| 7 | 87-3820 | Wheel - Steering | 1 | 27 | 32128-20 | Nut - Flange | 6 |
| 8 | 32144-116 | Screw - Pan Head | 8 | 28 | 92-4155 | Upper Slip Joint Assembly | 1 |
| 9 | 87-3750 | Cover - Steering Wheel | 1 | 29 | 92-4156 | Lower Slip Joint Assembly (Incl. Ref. #24 & 30) | 1 |
| 10 | 43-6550 | Ring - Retaining | 2 | 30 | 302-5 | Fitting - Grease | 1 |
| 11 | 92-4153 | Steering Column Assembly (Incl. Ref. #10) | 1 | 31 | 92-4154 | Universal Joint Assembly | 1 |
| 12 | 3290-455 | Washer | 1 | 32 | 3296-42 | Nut - Lock | 2 |
| 13 | 3296-59 | Nut - Lock | 1 | 33 | 321-3 | Screw - Cap Hex. Hd. | 2 |
| 14 | 3253-4 | Washer - Lock | 4 | 34 | 87-3610 | Bracket - Detent | 1 |
| 15 | 48-7740 | Screw - Cap Hex. Hd. | 4 | 35 | 65-5360 | Spring - Extension | 1 |
| 16 | 322-2 | Screw - Cap Hex. Hd. | 6 | 36 | 87-3130 | Lever - Tilt Steering | 1 |
| 17 | 2412-105 | Clamp - R | 2 | 37 | 3253-22 | Washer - Lock | 3 |
| 18 | 32144-10 | Screw - Self Tapping | 2 | * | 87-3100 | Lower Shaft Assembly (Incl. Ref. #24 & 28-30) | 1 |
| 19 | 324-8 | Screw - Cap Hex. Hd. | 3 | * | 87-3120 | Steering Column & Shaft (Incl. Ref. #10, 11 & 31) | 1 |
| 20 | 87-1500 | Steering Gear Assembly (Incl. Ref. #22 & 23) | 1 | | | | |

*Not Illustrated

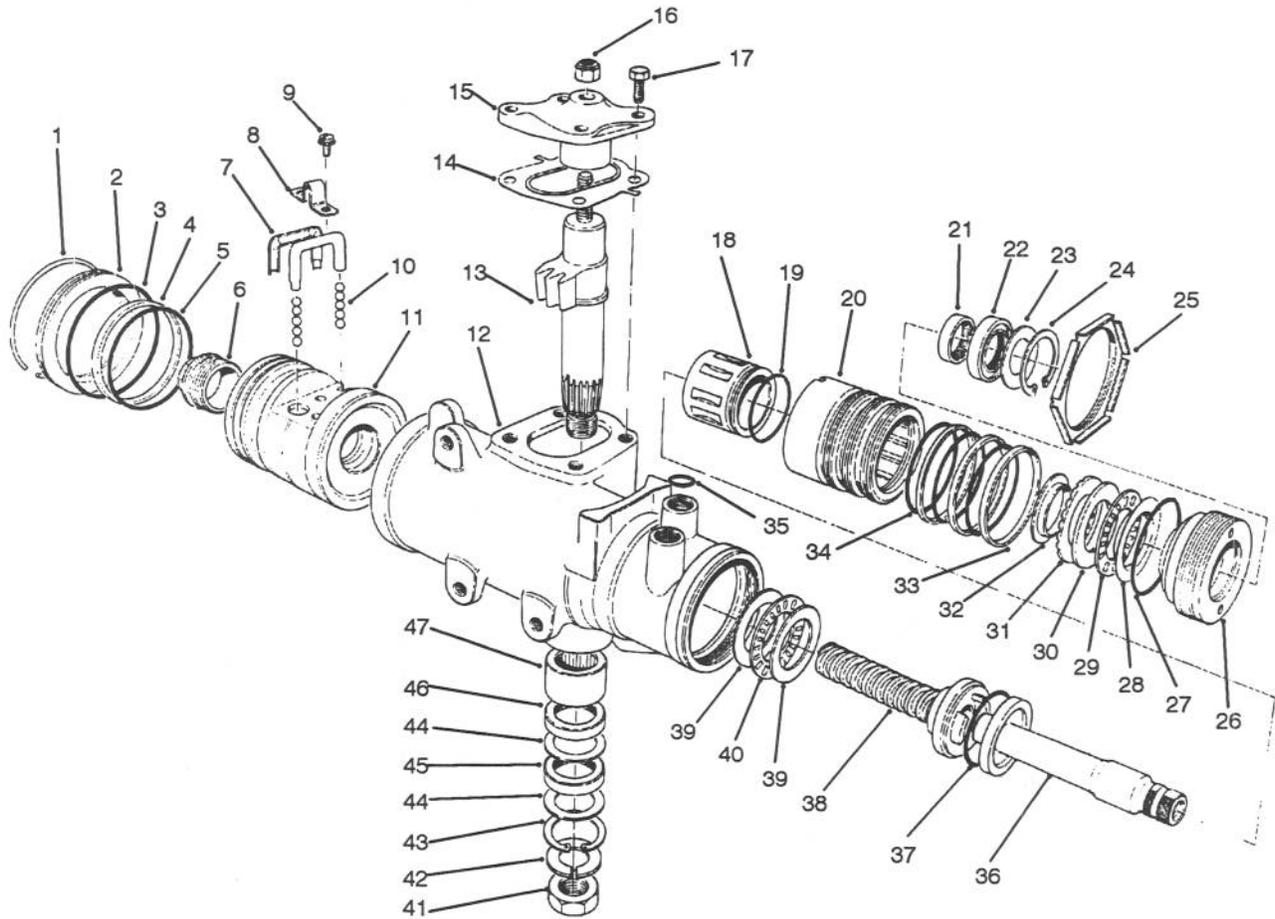


T-1580

STEERING GEAR ASSEMBLY NO. 87-1500

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|---|----------|
| 1 | | Ring - Retaining | 1 |
| 2 | 92-4165 | Plug - Housing End | 1 |
| 3 | | Seal - Housing End Plug | 1 |
| 4 | | Ring - Rack Piston | 1 |
| 5 | | O-Ring, Rack Piston | 1 |
| 6 | 18-4340 | Plug - Rack Piston End | 1 |
| 7 | 92-4168 | Return - Guide Ball | 2 |
| 8 | 18-4270 | Clamp - Ball Return Guide | 1 |
| 9 | 18-4260 | Screw/Lockwasher Assy. | 2 |
| 10 | 18-5190 | Ball - Chrome Alloy | 11 |
| 11 | | Nut - Rack Piston | 1 |
| 12 | | Housing - Steering Gear | 1 |
| 13 | | Gear - Pitman Shaft | 1 |
| 14 | 28-8280 | Seal Kit - Side Cover (Incl. Ref. #17) | 1 |
| 15 | | Cover - Housing Side | 1 |
| 16 | 28-8220 | Nut - Lash Adjuster | 1 |
| 17 | 28-8210 | Bolt - Flange Hex. Hd. | 4 |
| 18 | | Spool Valve | 1 |
| 19 | | O-Ring, Spool Valve | 1 |
| 20 | | Valve Body | 1 |
| 21 | 92-4169 | Bearing - Needle | 1 |
| 22 | | Seal - Stub Shaft | 1 |
| 23 | | Seal - Stub Shaft Dust | 1 |
| 24 | | Ring - Retaining | 1 |
| 25 | 92-4159 | Nut - Adjuster Plug Lock | 1 |

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|---|----------|
| 26 | | Plug - Adjuster | 1 |
| 27 | 28-8200 | O-Ring | 1 |
| 28 | | Race - Upper Bearing | 1 |
| 29 | | Bearing - Roller, Thrust | 1 |
| 30 | | Race - Thrust Bearing | 1 |
| 31 | | Spacer - Thrust Bearing | 1 |
| 32 | | Retainer - Bearing | 1 |
| 33 | | Ring - Valve Body | 3 |
| 34 | | O-Ring | 3 |
| 35 | 39-7310 | O-Ring | 3 |
| 36 | | Shaft - Stub | 1 |
| 37 | | O-Ring | 1 |
| 38 | | Worm - Steering | 1 |
| 39 | | Race - Thrust Bearing | 2 |
| 40 | | Bearing - Roller, Thrust | 1 |
| 41 | 39-7440 | Nut - Pitman Arm | 1 |
| 42 | 39-7420 | Washer - Lock | 1 |
| 43 | | Ring - Retaining | 1 |
| 44 | | Washer - Seal, Backup | 2 |
| 45 | | Seal - Pitman Shaft | 1 |
| 46 | | Seal - Pitman Shaft | 1 |
| 47 | 92-4170 | Bearing - Pitman Shaft | 1 |
| * | 92-4161 | Service Cover Assembly Housing Side (Incl. Ref. #14-17) | 1 |

*Not Illustrated

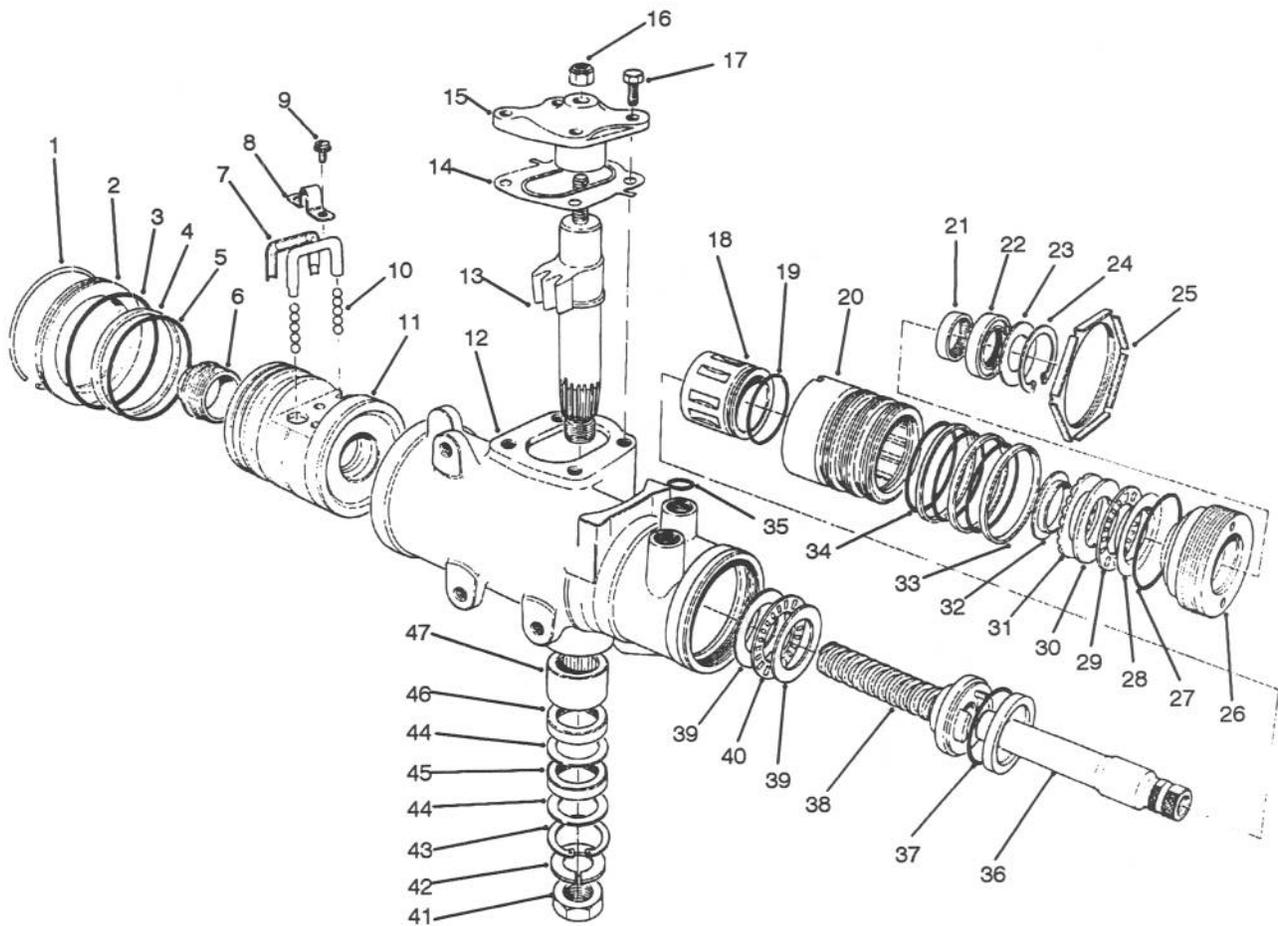


T-1580

STEERING GEAR ASSEMBLY NO. 87-1500

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|--|----------|
| * | 28-8270 | Seal Service Kit - End Plug (Incl. Ref. #1 & 3) | 1 |
| * | 28-8290 | Seal Service Kit Rack/Piston (Incl. Ref. #4 & 5) | 1 |
| * | 18-5180 | Bearing Kit - Lower Thrust (Incl. Ref. #39-40) | 1 |
| * | 18-5160 | Seal Kit - Pitman Shaft (Incl. Ref. #43-46) | 1 |
| * | 18-5170 | Seal Kit - Valve Ring (Incl. Ref. #19, 33, 34 & 37) | 1 |
| * | 92-4163 | Steering Housing Assembly (Incl. Ref. #12 & 43-47) | 1 |
| * | 92-4167 | Service Plug Assembly (Incl. Ref. #22-24 & 27) | 1 |

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|--|----------|
| * | 92-4162 | Pitman Shaft - Gear Service (Incl. Ref. #13-15 & 17) | 1 |
| * | 92-4158 | Valve Assy. - Hyd. Gear (Incl. Ref. #18-20, 33, 34, 36 & 37) | 1 |
| * | 92-4160 | Bearing Service Kit - Upper (Incl. Ref. #28-32) | 1 |
| * | 92-4166 | Rack/Piston/Nut Assembly (Incl. Ref. #1-11 & 38) | 1 |
| * | 92-4164 | Plug Assy. - Service Adjust. (Incl. Ref. #21-24 & 26-32) | 1 |
| * | 87-1500 | Steering Gear (Complete) | 1 |

*Not Illustrated

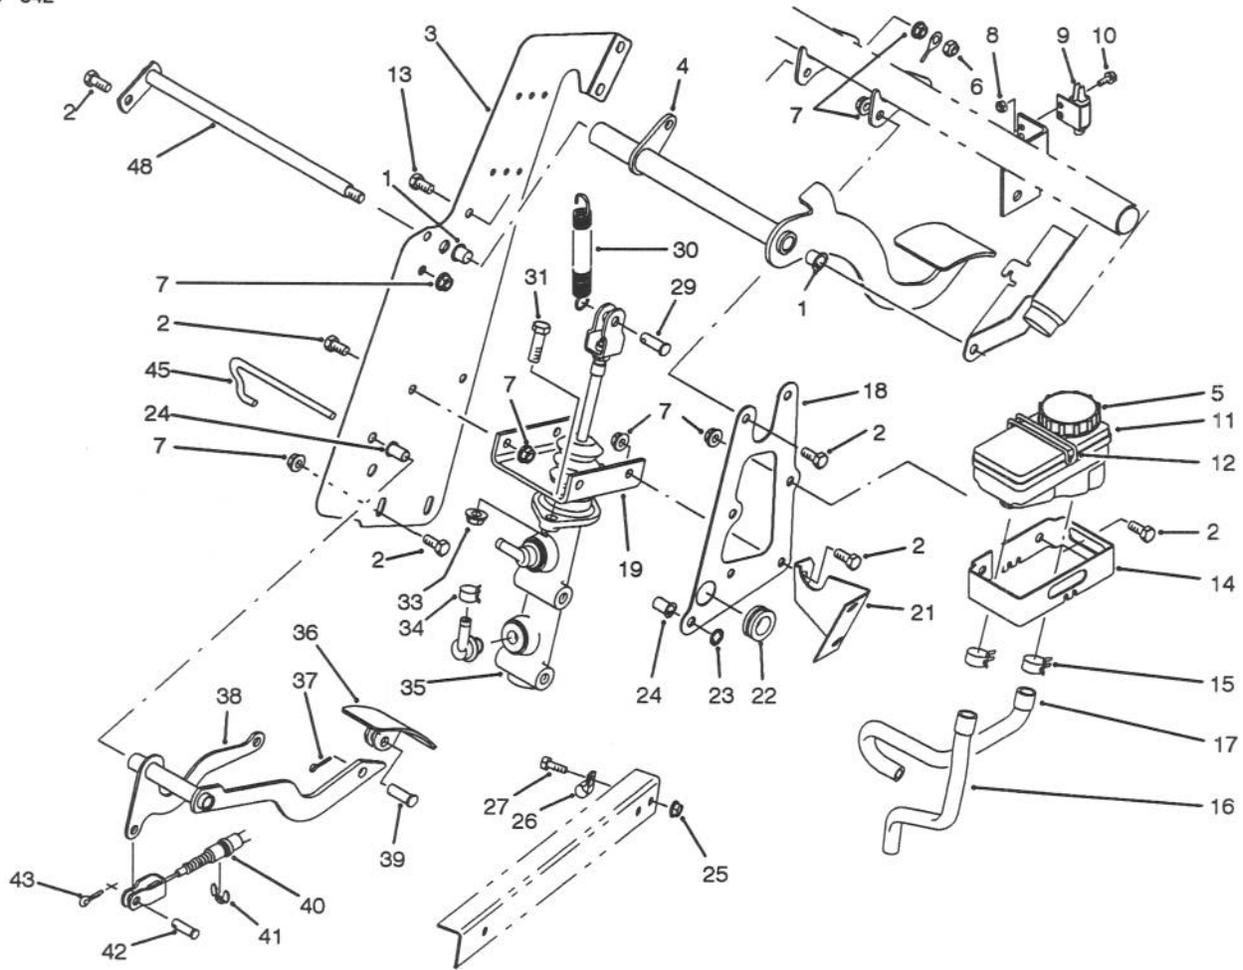


T-1585

BRAKE & ACCELERATOR PEDAL ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|---|----------|
| 1 | 256-257 | Bushing - Flange | 2 |
| 2 | 322-2 | Screw - Cap Hex. Hd. | 12 |
| 3 | 87-2910 | Support - Pedal RH | 1 |
| 4 | 87-2540 | Pedal - Brake | 1 |
| 5 | 92-4112 | Cap Assembly | 1 |
| 6 | 3296-29 | Nut - Lock | 1 |
| 7 | 32128-20 | Nut - Flange Lock | 13 |
| 8 | 3296-2 | Nut - Lock | 2 |
| 9 | 55-7120 | Switch - Brake Light | 1 |
| 10 | 3290-321 | Screw - Hex. Flange Hd. | 2 |
| 11 | 87-3040 | Brake Fluid Reservoir Assy. (Incl. Ref. #5) | 1 |
| 12 | 87-7570 | Retainer - Reservoir | 1 |
| 13 | 322-5 | Screw - Cap Hex. Hd. | 1 |
| 14 | 87-2890 | Cradle - Reservoir | 1 |
| 15 | 2412-143 | Clamp - Hose | 2 |
| 16 | 87-0670 | Hose - Reservoir Front | 1 |
| 17 | 87-0660 | Hose - Reservoir Rear | 1 |
| 18 | 87-2660 | Support - Pedal LH | 1 |
| 19 | 87-2640 | Support - Master Cylinder | 1 |
| 21 | 87-2650 | Gusset | 1 |
| 22 | 240-6 | Grommet | 1 |

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|---------------------------|----------|
| 23 | 32151-56 | Ring - Push-On | 1 |
| 24 | 52-2890 | Bushing - Flange | 2 |
| 25 | 32128-33 | Nut - Flange Lock | 1 |
| 26 | 2412-89 | Clamp - R | 1 |
| 27 | 321-4 | Screw - Cap Hex. Hd. | 1 |
| 29 | 283-2 | Pin - Clevis | 1 |
| 30 | 21-1830 | Spring - Extension | 1 |
| 31 | 323-7 | Screw - Cap Hex. Hd. | 2 |
| 33 | 3290-357 | Nut - Flange Lock | 2 |
| 34 | 2412-144 | Clamp - Hose | 2 |
| 35 | 87-3030 | Master Cylinder Assembly | 1 |
| 36 | 87-2670 | Pedal - Accelerator | 1 |
| 37 | 3272-6 | Pin - Cotter | 1 |
| 38 | 87-4790 | Arm - Accelerator Pedal | 1 |
| 39 | 283-85 | Pin - Clevis | 1 |
| 40 | 87-7520 | Cable - Accelerator | 1 |
| 41 | 32120-47 | Ring - E | 1 |
| 42 | 283-30 | Pin - Clevis | 1 |
| 43 | 3272-10 | Pin - Cotter | 1 |
| 45 | 87-2880 | Shaft - Accelerator Pedal | 1 |
| 48 | 87-2590 | Shaft - Brake Pedal | 1 |

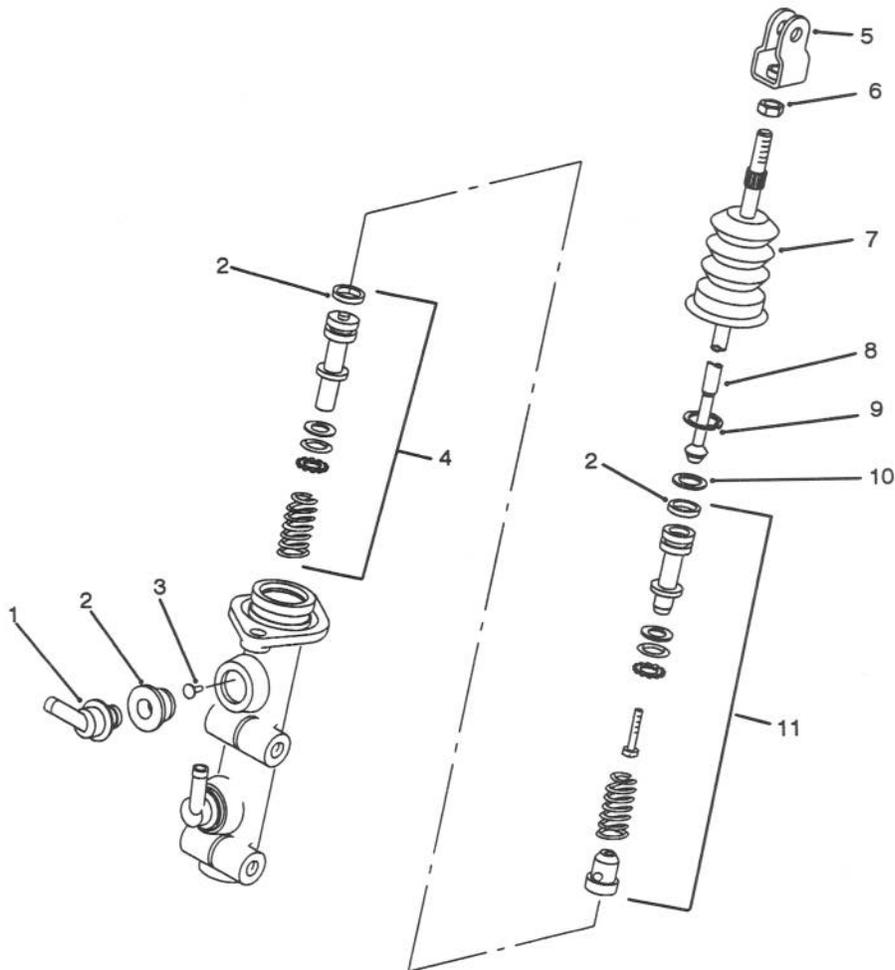


T-1586

MASTER BRAKE CYLINDER NO. 87-3030

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|---------------------------|----------|
| 1 | 92-4104 | Adaptor - Pipe Fitting | 2 |
| 2 | 92-4105 | Seal Kits | 1 |
| 3 | 92-4103 | Pin - Stop | 1 |
| 4 | 92-4102 | Secondary Piston Assembly | 1 |
| 5 | 92-4110 | Clevis | 1 |
| 6 | 21-0360 | Nut | 1 |

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|-------------------------|----------|
| 7 | 92-4107 | Dust Cover | 1 |
| 8 | 92-4106 | Rod - Push | 1 |
| 9 | 92-4109 | Circlip | 1 |
| 10 | 92-4108 | Washer - Retainer | 1 |
| 11 | 92-4101 | Primary Piston Assembly | 1 |

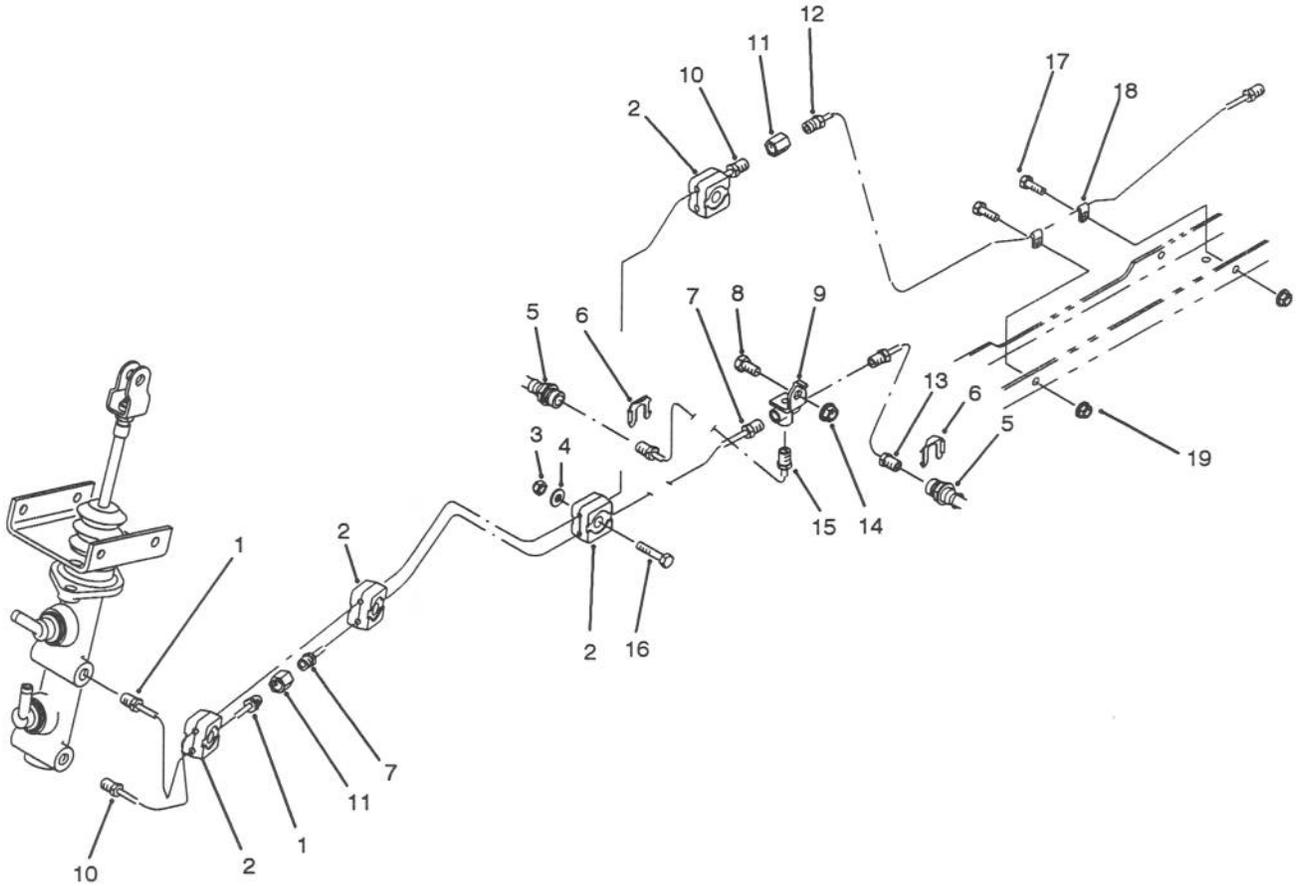


T-1587


HYDRAULIC BRAKE LINE ROUTING ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|-----------------------|----------|
| 1 | 87-2830 | Tube - Brake | 1 |
| 2 | 87-7660 | Clamp - Brake Line | 8 |
| 3 | 3296-42 | Nut - Lock | 4 |
| 4 | 3256-22 | Washer - Flat | 4 |
| 5 | 87-2780 | Hose - Brake Front | 2 |
| 6 | 87-3580 | Retainer - Brake Hose | 2 |
| 7 | 87-2840 | Tube - Brake | 1 |
| 8 | 322-2 | Screw - Cap Hex. Hd. | 1 |
| 9 | 87-3560 | Tee - Brake Line | 1 |
| 10 | 87-2810 | Tube - Brake | 1 |

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|----------------------|----------|
| 11 | 87-3570 | Fitting - Union | 2 |
| 12 | 87-3260 | Tube - Brake | 1 |
| 13 | 87-2850 | Tube - Brake | 1 |
| 14 | 32128-20 | Nut - Flange | 1 |
| 15 | 87-2860 | Tube - Brake | 1 |
| 16 | 321-9 | Screw - Cap Hex. Hd. | 4 |
| 17 | 321-4 | Screw - Cap Hex. Hd. | 2 |
| 18 | 2412-149 | R-Clamp | 2 |
| 19 | 32128-33 | Nut - Flange Head | 2 |

HYDRAULIC SCHEMATIC

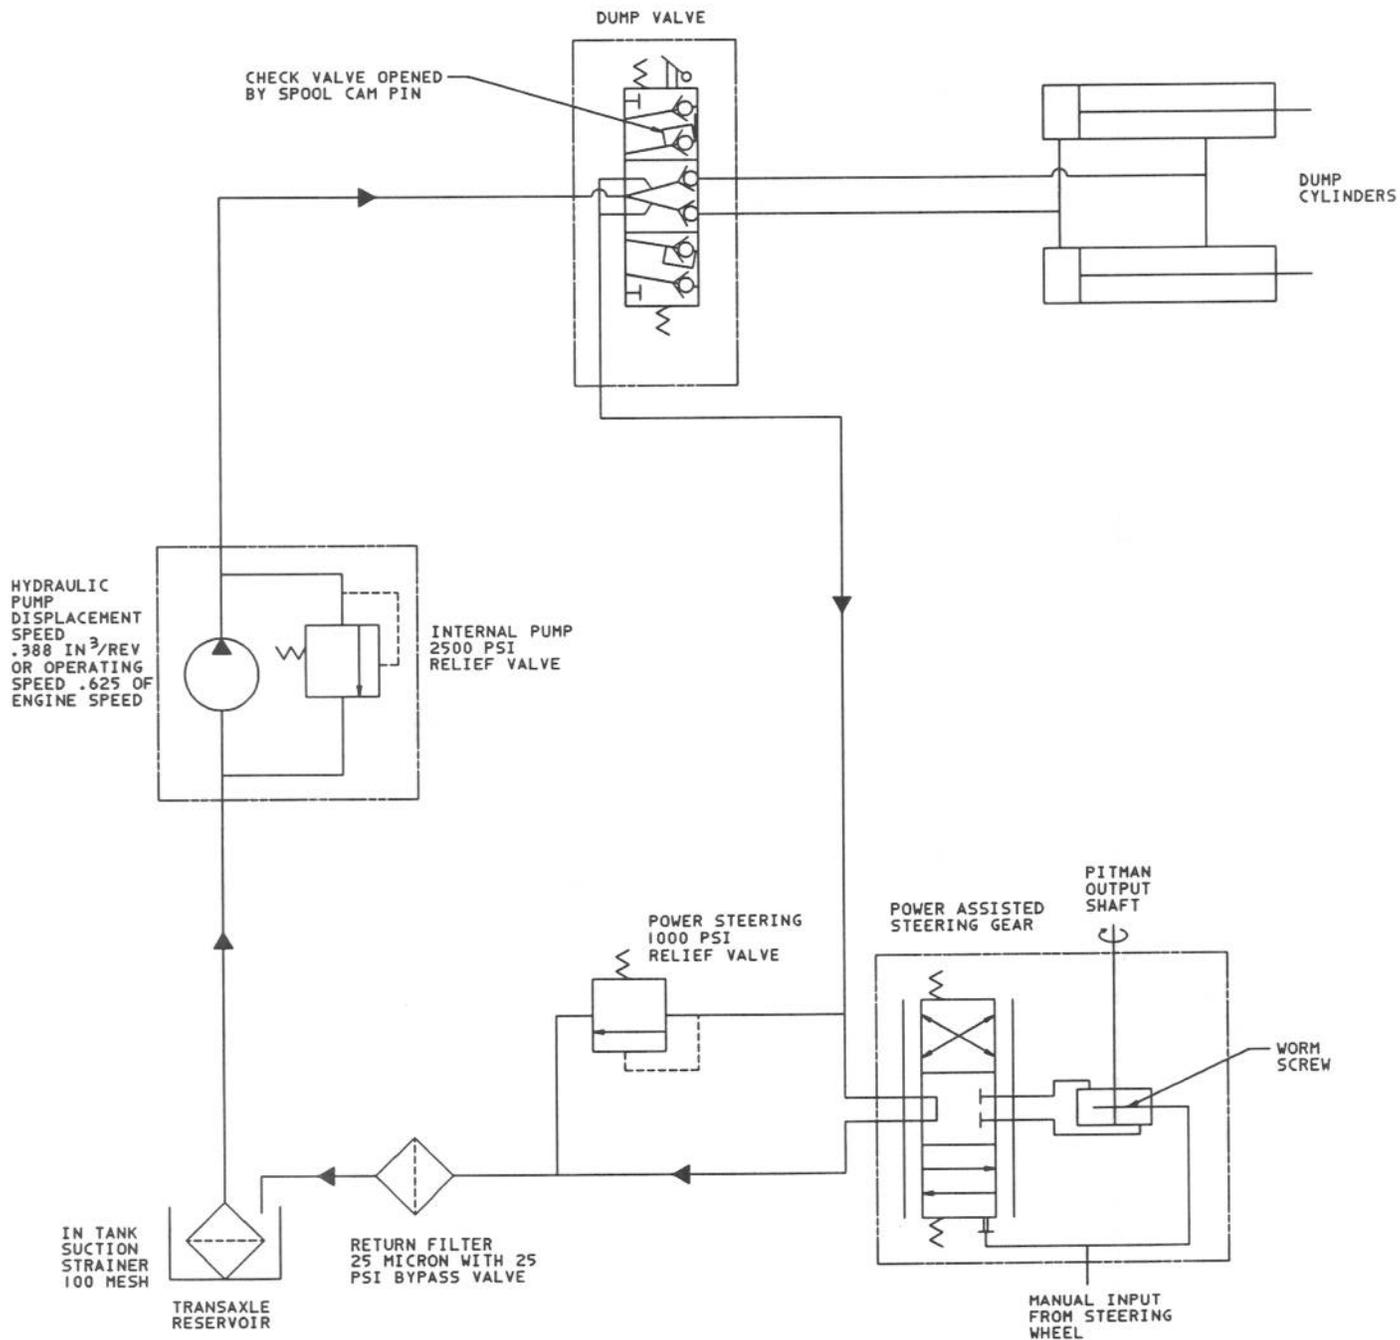

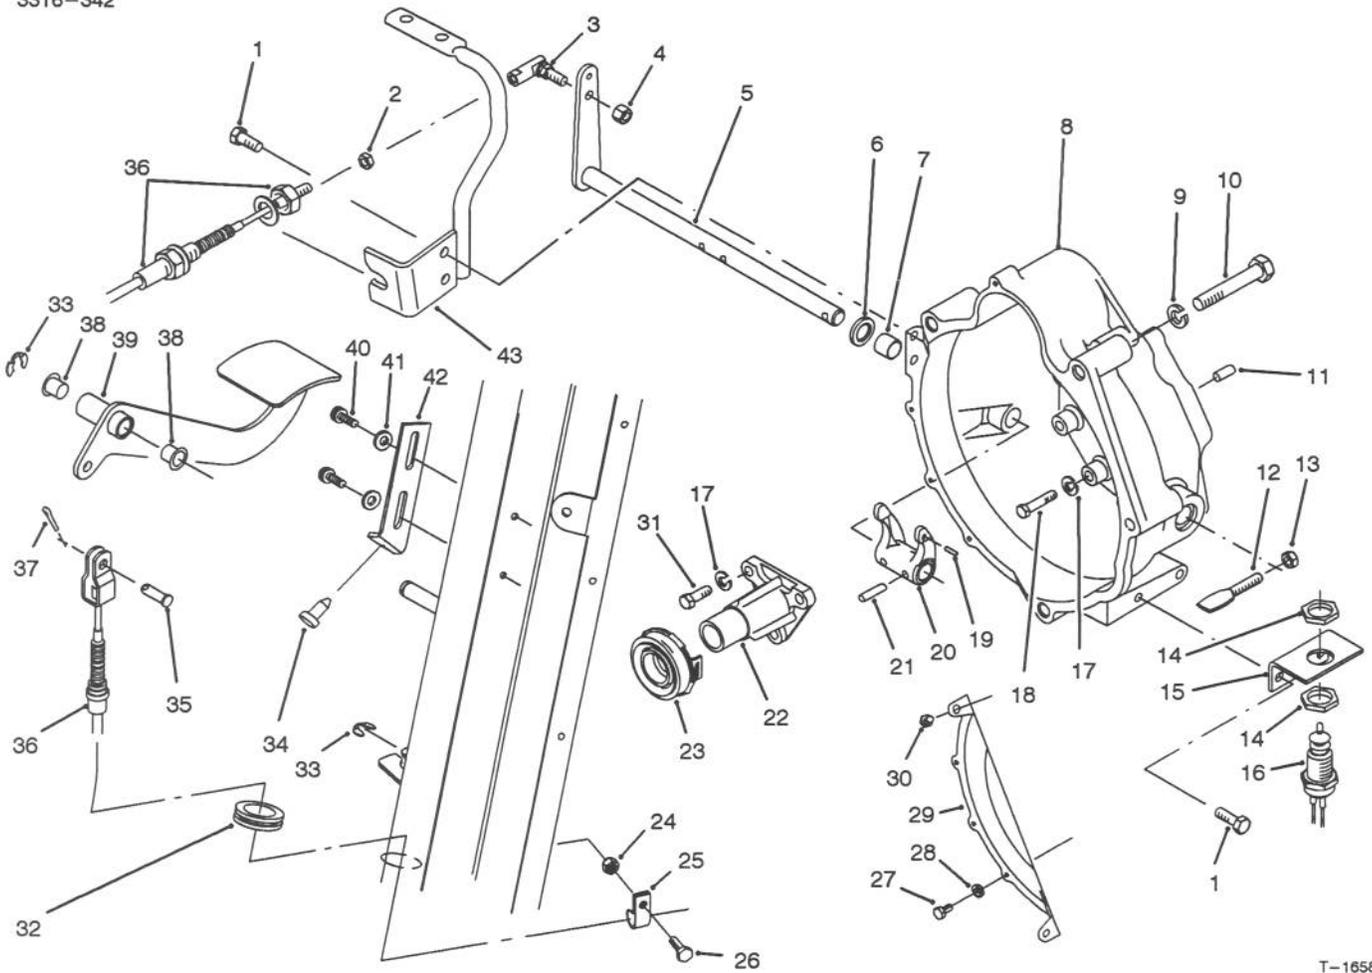


T-1658

CLUTCH LINKAGE ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|----------------------|----------|
| 1 | 66-3160 | Screw - Cap Hex. Hd. | 4 |
| 2 | 3220-2 | Nut - Jam | 1 |
| 3 | 2411-33 | Joint - Ball | 1 |
| 4 | 3296-4 | Nut - Lock | 1 |
| 5 | 87-5290 | Shaft - Release | 1 |
| 6 | 87-1920 | Seal - Shaft | 2 |
| 7 | 87-3770 | Bushing - Sleeve | 2 |
| 8 | 87-1900 | Housing - Bell | 1 |
| 9 | 3253-22 | Washer - Lock | 4 |
| 10 | 56-2150 | Screw - Cap Hex. Hd. | 4 |
| 11 | 87-1910 | Pin - Alignment | 2 |
| 12 | 87-5360 | Lever | 1 |
| 13 | 3296-29 | Nut - Lock | 1 |
| 14 | 3218-20 | Nut - Jam | 2 |
| 15 | 87-5350 | Bracket - Switch | 1 |
| 16 | 87-5490 | Switch - Neutral | 1 |
| 17 | 42-9850 | Washer - Lock | 12 |
| 18 | 42-9530 | Screw - Cap Hex. Hd. | 9 |
| 19 | 32121-7 | Pin - Roll | 1 |
| 20 | 87-5300 | Fork - Clutch | 1 |
| 21 | 32121-24 | Pin - Roll | 2 |
| 22 | 87-5320 | Guide - Release | 1 |

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|--|----------|
| 23 | 87-2100 | Bearing - Release | 1 |
| 24 | 32128-33 | Nut - Flange Lock | 1 |
| 25 | 2412-89 | Clamp - R | 1 |
| 26 | 321-4 | Screw - Cap Hex. Hd. | 1 |
| 27 | 48-7610 | Screw - Cap Hex. Hd. | 4 |
| 28 | 3253-3 | Washer - Lock | 4 |
| 29 | 92-1938 | Cover - Bell Housing | 1 |
| 30 | 92-2129 | Screw - Cap Hex. Hd. | 2 |
| 31 | 57-6380 | Screw - Cap Hex. Hd. | 3 |
| 32 | 240-5 | Grommet | 1 |
| 33 | 32120-47 | Ring - E | 2 |
| 34 | 87-8460 | Bumper | 1 |
| 35 | 283-30 | Pin - Clevis | 1 |
| 36 | 87-8590 | Clutch Cable Assembly (Incl. Ref. #2) | 1 |
| 37 | 3272-10 | Pin - Cotter | 1 |
| 38 | 256-257 | Bushing - Flange | 2 |
| 39 | 87-2610 | Pedal - Clutch | 1 |
| 40 | 87-6620 | Screw - Torx Pan Hd. | 2 |
| 41 | 3256-22 | Washer - Flat | 2 |
| 42 | 87-8710 | Tab - Clutch | 1 |
| 43 | 87-8480 | Bracket - Clutch | 1 |

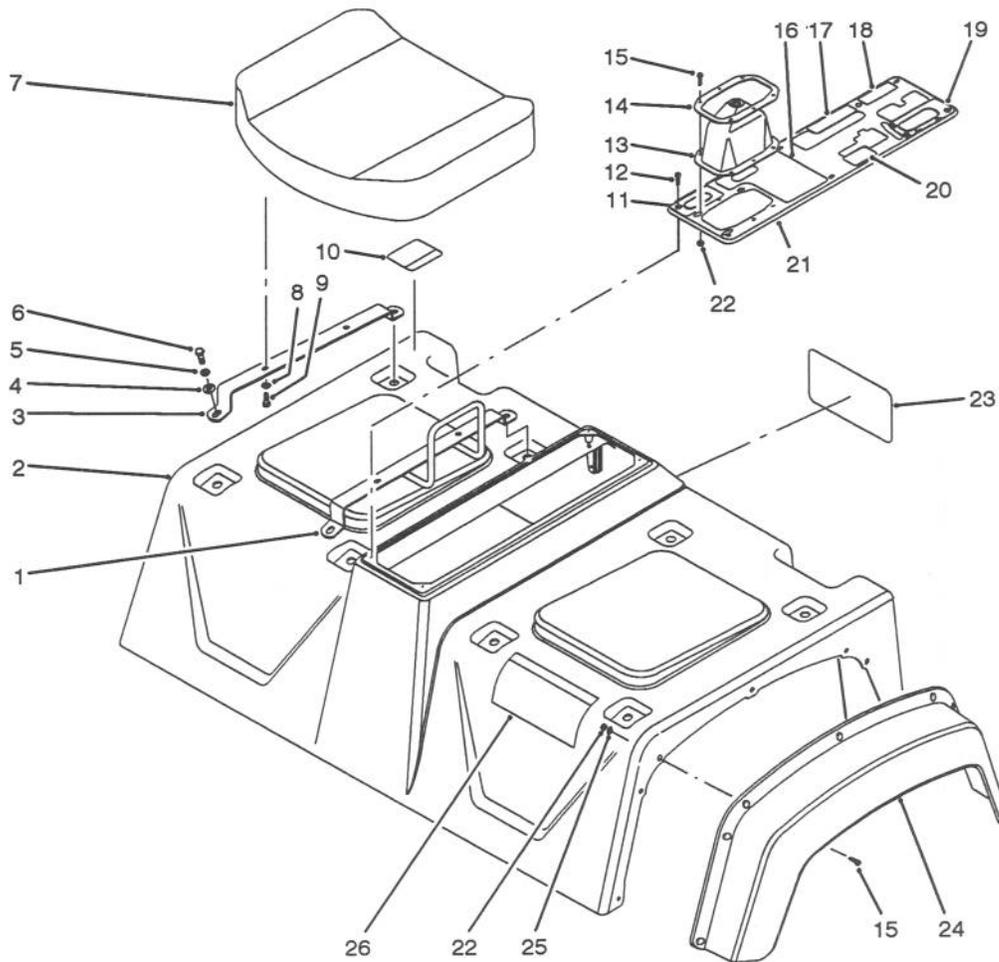


T-1589

SEAT BASE ASSEMBLY

| Ref. No. | Part No. | Description | No. Used | Ref. No. | Part No. | Description | No. Used |
|----------|----------|---|----------|----------|----------|--|----------|
| 1 | 87-6890 | Hold - Hand | 1 | 14 | 87-3760 | Plate - Shift Boot | 1 |
| 2 | 87-7070 | Skirt Assembly (Incl. Ref. #10 & 26) | 1 | 15 | 3250-13 | Screw - Hex. Hd. | 20 |
| 3 | 87-3800 | Bracket - Seat Bottom | 3 | ‡16 | 87-5970 | Decal - PTO | 1 |
| 4 | 3253-23 | Washer - Flat | 8 | ‡17 | 87-6000 | Decal - Differential Lock | 1 |
| 5 | 3253-4 | Washer - Lock | 8 | ‡18 | 92-2609 | Decal - Remote Hydraulics | 1 |
| 6 | 322-5 | Screw - Cap Hex. Hd. | 8 | ‡19 | 87-6010 | Decal - Dump Hydraulics | 1 |
| 7 | 87-5060 | Cushion - Seat Bottom | 2 | ‡20 | 87-6020 | Decal - Parking Brake | 1 |
| 8 | 3256-22 | Washer - Flat | 8 | 21 | 87-8080 | Console Plate Assembly (Incl. Ref. #11 & 16-20) | 1 |
| 9 | 321-4 | Screw - Cap Hex. Hd. | 8 | 22 | 3296-2 | Nut - Lock | 20 |
| ‡10 | 87-5930 | Decal - Caution | 1 | ‡23 | 87-5950 | Decal - Quick Reference | 1 |
| ‡11 | 87-5960 | Decal - Axle Range | 1 | 24 | 87-2150 | Fender - Front | 2 |
| 12 | 32144-52 | Screw - Hex. Hd. | 6 | 25 | 3256-61 | Washer - Flat | 14 |
| 13 | 87-8620 | Boot - Shift | 1 | ‡26 | 87-5920 | Decal - Danger | 1 |

‡For different language versions of this part, see International Decal Cross Reference.

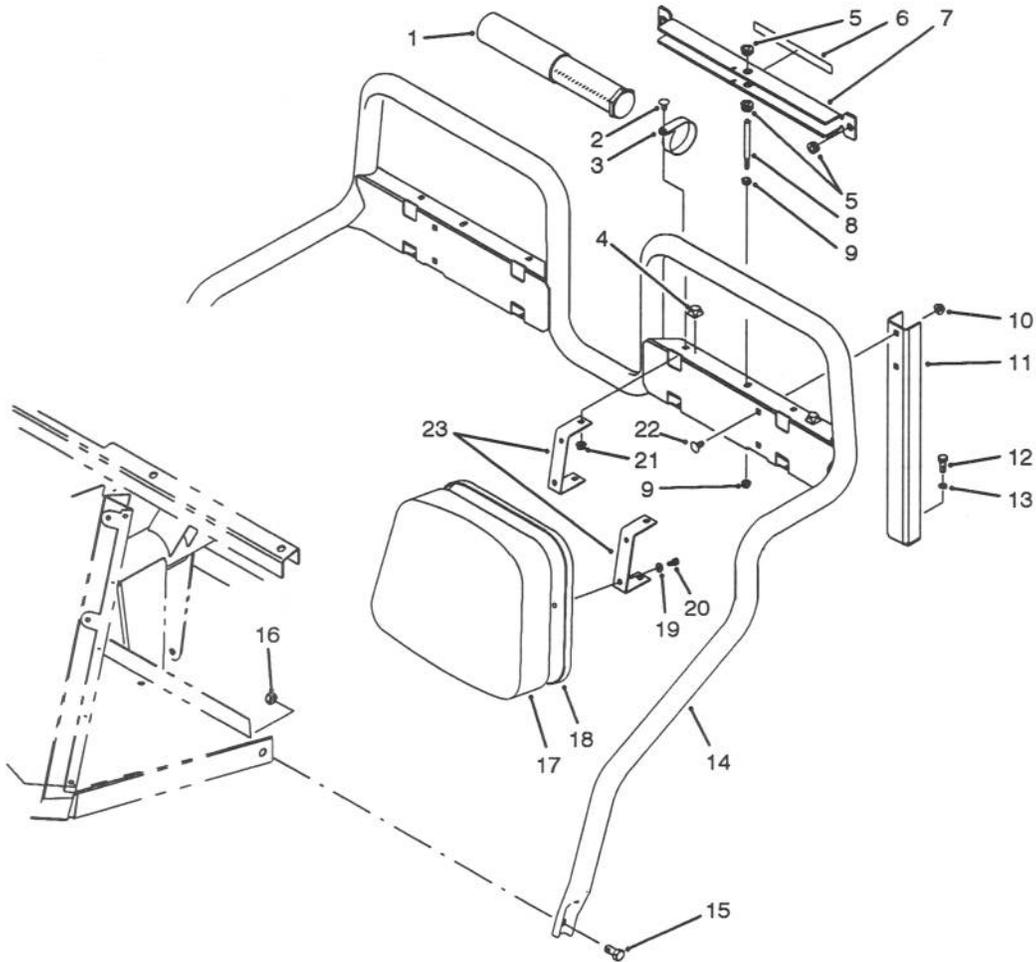


T-1779

SEAT BACK ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|---|----------|
| 1 | 74-0720 | Tube - Manual | 1 |
| 2 | 3230-18 | Bolt - Carriage | 2 |
| 3 | 2412-133 | R-Clamp | 2 |
| 4 | 111071 | Bumper | 2 |
| 5 | 92-5972 | Grommet | 4 |
| ‡6 | 87-7930 | Decal - Danger | 1 |
| 7 | 87-7950 | Bed Support Assembly (Incl. Ref. #5 & 8) | 1 |
| 8 | 87-7940 | Stud | 1 |
| 9 | 32128-44 | Nut - Flange Lock | 2 |
| 10 | 3290-357 | Nut - Flange Lock | 4 |
| 11 | 87-2510 | Bracket - Seat Frame | 2 |

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|----------------------|----------|
| 12 | 323-6 | Screw - Cap Hex. Hd. | 2 |
| 13 | 3253-21 | Washer - Lock | 2 |
| 14 | 87-6170 | Frame - Seat | 1 |
| 15 | 325-4 | Screw - Cap Hex. Hd. | 2 |
| 16 | 3296-23 | Nut - Lock | 2 |
| 17 | 87-6290 | Cushion - Seat Back | 2 |
| 18 | 87-6280 | Plate - Seat Back | 2 |
| 19 | 3256-22 | Washer - Flat | 8 |
| 20 | 321-4 | Screw - Cap Hex. Hd. | 8 |
| 21 | 32128-20 | Nut - Flange Lock | 8 |
| 22 | 3231-21 | Bolt - Carriage | 4 |
| 23 | 87-6240 | Bracket - Seat Back | 4 |

‡For different language versions of this part, see International Decal Cross Reference.

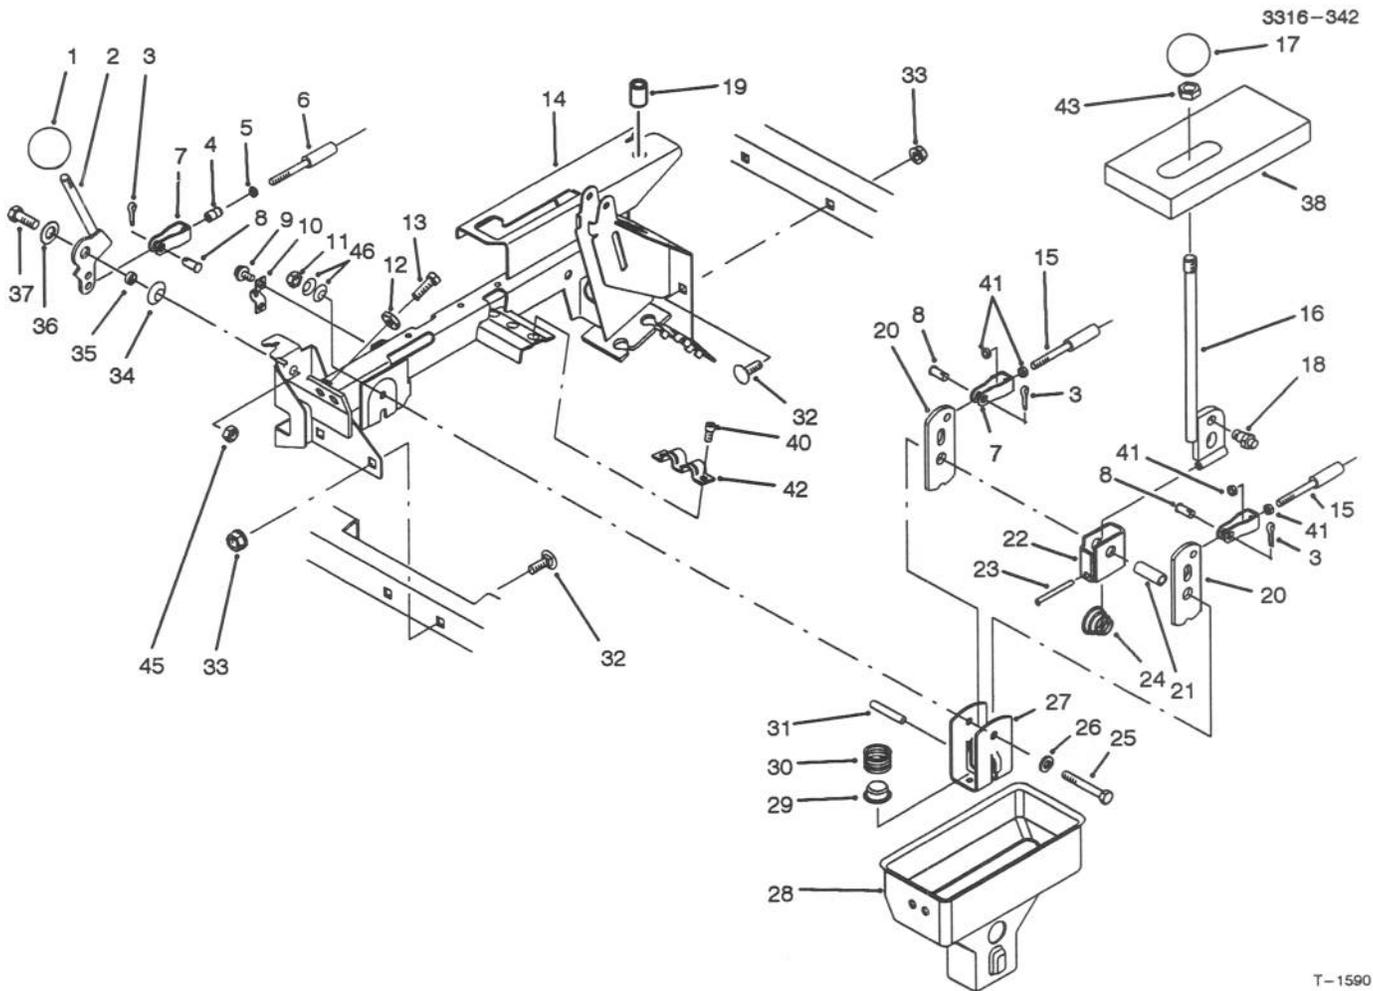


HI-LO & SHIFT LEVER ASSEMBLIES

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|--|----------|
| 1 | 233-37 | Knob | 1 |
| 2 | 87-4350 | Lever - Hi-Lo | 1 |
| 3 | 3272-6 | Pin - Cotter | 3 |
| 4 | 32148-15 | Insert - Threaded | 1 |
| 5 | 3219-14 | Nut | 1 |
| 6 | 87-4420 | Hi-Lo Cable Assembly (Incl. Ref. #5) | 1 |
| 7 | 87-7160 | Cable Clevis Assembly (Incl. Ref. #4) | 3 |
| 8 | 283-62 | Pin - Clevis | 3 |
| 9 | 32144-4 | Screw - Hex. Washer Hd. | 2 |
| 10 | 87-4340 | Clamp - Cable | 1 |
| 11 | 3296-58 | Nut - Lock | 2 |
| 12 | 3220-3 | Nut - Jam | 2 |
| 13 | 3211-8 | Screw - Cap Hex. Hd. | 2 |
| 14 | 87-8110 | Lever Support Assembly (Incl. Ref. #19) | 1 |
| 15 | 87-4260 | Cable Assembly (Incl. Ref. #41) | 2 |
| 16 | 87-2040 | Lever - Shift | 1 |
| 17 | 87-6720 | Knob | 1 |
| 18 | 87-3650 | Pin - Shift | 1 |
| 19 | 32148-7 | Nut - Clinch | 2 |
| 20 | 87-3540 | Link - Shift | 2 |

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|-------------------------|----------|
| 21 | 87-2520 | Tube - Pivot | 1 |
| 22 | 87-6040 | Bracket - Shifter | 1 |
| 23 | 32121-48 | Pin - Roll | 1 |
| 24 | 87-2900 | Spring - Compression | 1 |
| 25 | 322-12 | Screw - Cap Hex. Hd. | 1 |
| 26 | 87-8640 | Washer - Flat | 1 |
| 27 | 87-3520 | Clevis | 1 |
| 28 | 87-2260 | Boot - Shift Lower | 1 |
| 29 | 87-3530 | Button - Shifter | 1 |
| 30 | 87-3660 | Spring - Compression | 1 |
| 31 | 3290-507 | Pin - Dowel | 1 |
| 32 | 3231-21 | Bolt - Carriage | 4 |
| 33 | 3290-357 | Nut - Flange Lock | 4 |
| 34 | 3290-221 | Washer - Spring | 1 |
| 35 | 76-9100 | Spacer - Hi-Lo Lever | 1 |
| 36 | 49-9150 | Washer - Flat | 1 |
| 37 | 323-6 | Screw - Cap Hex. Hd. | 1 |
| 38 | 87-6570 | Foam - Seal | 1 |
| 40 | 65-5220 | Screw - Hex. Socket Hd. | 3 |
| 41 | 3220-1 | Nut - Jam | 4 |
| 42 | 87-4960 | Clamp - Cable | 1 |
| 43 | 3218-18 | Nut - Jam | 1 |
| 45 | 3296-39 | Nut - Lock | 1 |
| 46 | 3290-456 | Washer - Belleville | 2 |

T-1590

3316-342

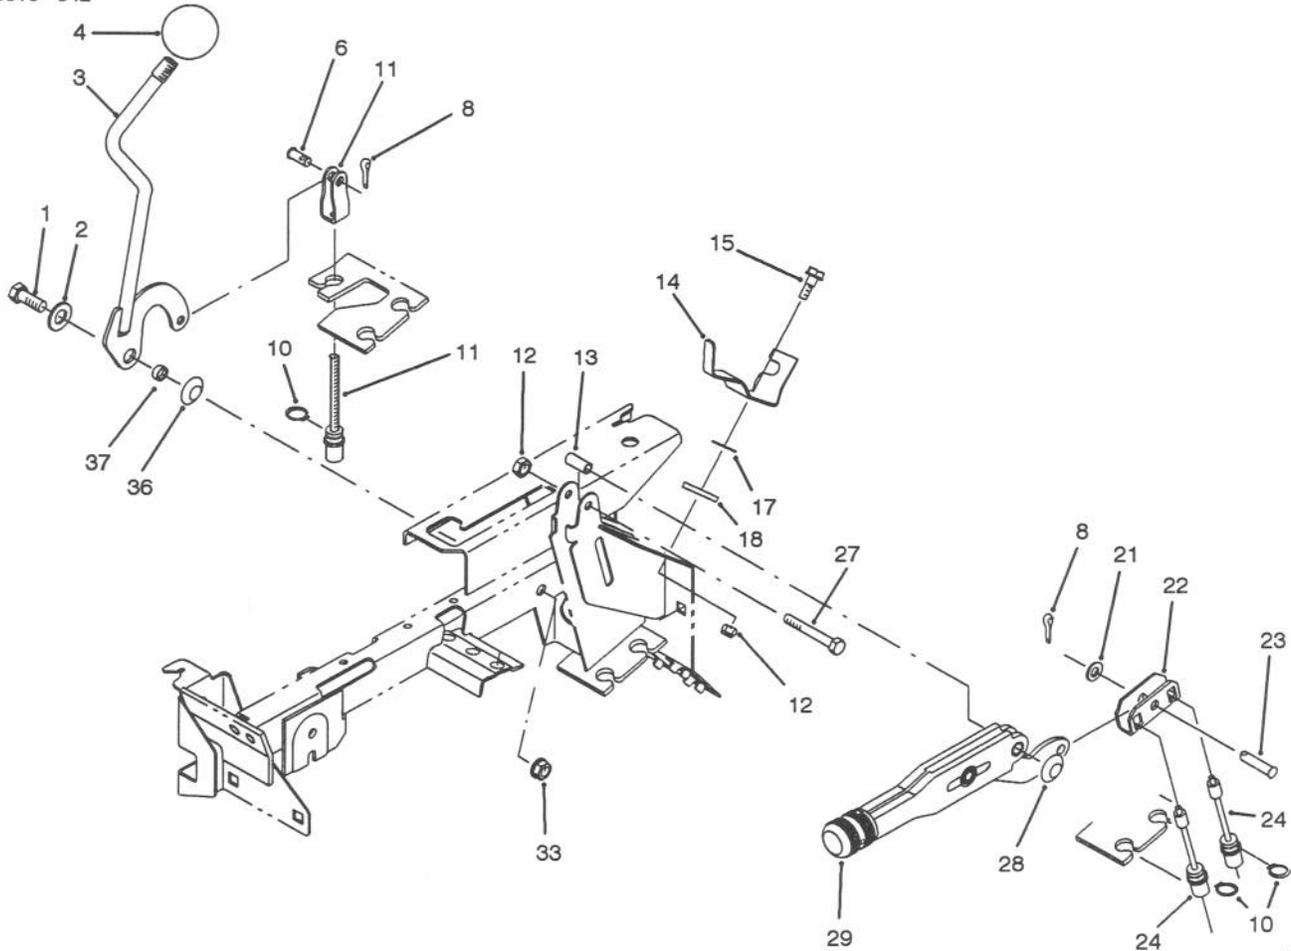


T-1591

DIFFERENTIAL LOCK & PARKING BRAKE ASSEMBLIES

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|---------------------------|----------|
| 1 | 323-6 | Screw - Cap Hex. Hd. | 1 |
| 2 | 49-9150 | Washer - Flat | 1 |
| 3 | 87-5030 | Lever - Differential Lock | 1 |
| 4 | 233-48 | Knob | 1 |
| 6 | 283-62 | Pin - Clevis | 1 |
| 8 | 3272-10 | Pin - Cotter | 2 |
| 10 | 32120-47 | Ring - Retaining | 3 |
| 11 | 87-4460 | Differential Lock Cable | 1 |
| 12 | 3296-42 | Nut - Lock | 2 |
| 13 | 87-4710 | Spacer - Parking Brake | 1 |
| 14 | 87-6640 | Lever - Dump Stop | 1 |
| 15 | 42-3560 | Screw - Shoulder | 1 |

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|-------------------------|----------|
| 17 | 3290-478 | Washer - Belleville | 1 |
| 18 | 71-5320 | Washer - Flat | 1 |
| 21 | 3256-23 | Washer - Flat | 1 |
| 22 | 87-3480 | Plate - Brake Equalizer | 1 |
| 23 | 283-14 | Pin - Clevis | 1 |
| 24 | 87-8450 | Cable - Parking Brake | 2 |
| 27 | 321-9 | Screw - Cap Hex. Hd. | 1 |
| 28 | 3290-477 | Washer - Curved | 1 |
| 29 | 87-2710 | Lever - Parking Brake | 1 |
| 33 | 3296-39 | Nut - Lock | 1 |
| 36 | 3290-221 | Washer - Spring | 2 |
| 37 | 76-2290 | Spacer | 1 |

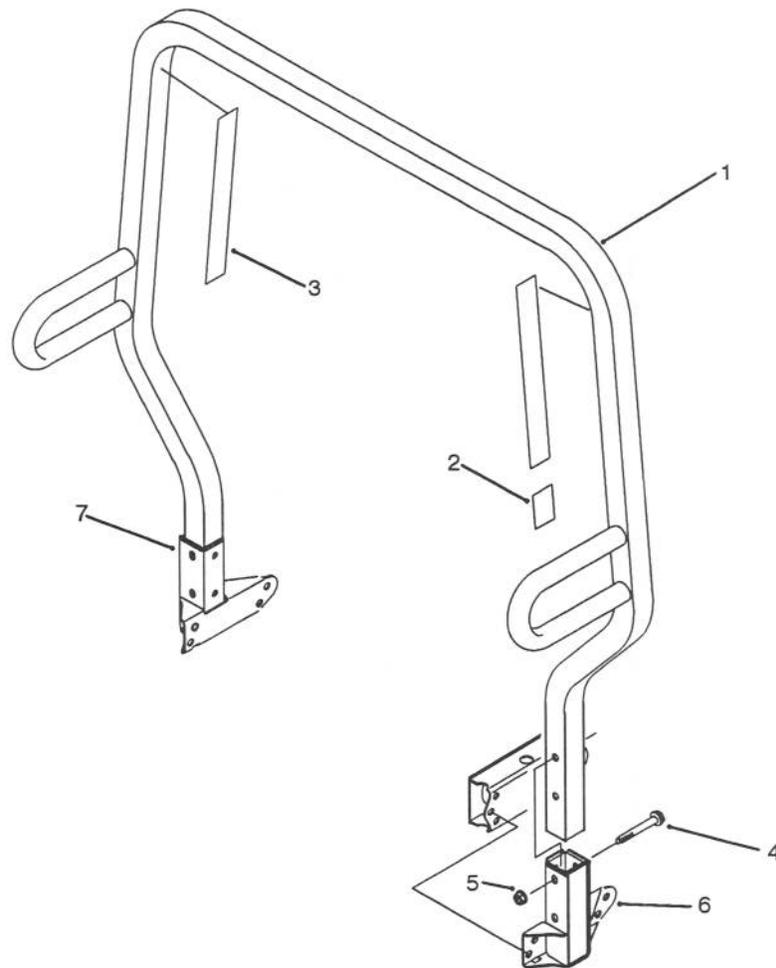


T-1592

R.O.P.S. ASSEMBLY

| Ref. No. | Part No. | Description | No. Used | Ref. No. | Part No. | Description | No. Used |
|----------|----------|--|----------|----------|----------|-------------------------|----------|
| 1 | 87-7090 | R.O.P.S. Frame Assembly (Incl. Ref. #2 & 3) | 1 | 4 | 3234-40 | Screw - Hex. Flange Hd. | 4 |
| ‡2 | 87-5940 | Decal - Rollover | 1 | 5 | 32128-23 | Nut - Flange Lock | 4 |
| ‡3 | 87-5980 | Decal - ROPS | 2 | 6 | 87-6950 | Receiver - LH | 1 |
| | | | | 7 | 87-6960 | Receiver - RH | 1 |

‡For different language versions of this part, see International Decal Cross Reference.

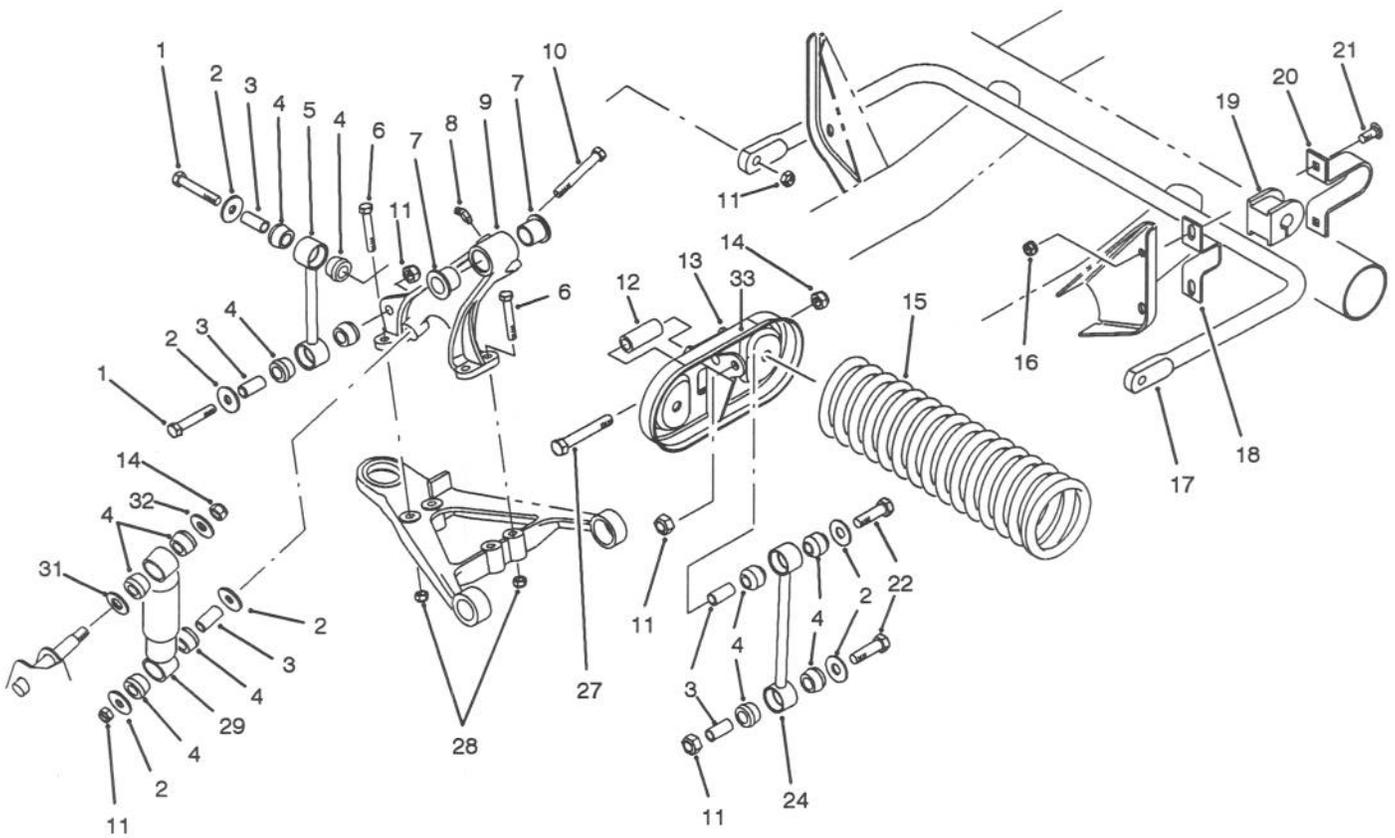


T-1593

FRONT SUSPENSION ASSEMBLY

| Ref. No. | Part No. | Description | No. Used | Ref. No. | Part No. | Description | No. Used |
|----------|----------|--|----------|----------|----------|-------------------------|----------|
| 1 | 324-10 | Screw - Cap Hex. Hd. | 4 | 15 | 87-0690 | Spring - Compression | 2 |
| 2 | 87-5330 | Washer | 12 | 16 | 3290-357 | Nut - Flange Lock | 4 |
| 3 | 87-3600 | Spacer | 10 | 17 | 87-3850 | Bar - Anti-Sway | 1 |
| 4 | 87-3920 | Bushing - Rubber | 24 | 18 | 87-3890 | Bracket - Anti-Sway Bar | 2 |
| 5 | 87-3860 | Link - Anti-Sway Bar | 2 | 19 | 87-3910 | Bushing - Anti-Sway Bar | 2 |
| 6 | 323-12 | Screw - Cap Hex. Hd. | 8 | 20 | 87-4010 | Clamp - Anti-Sway Bar | 2 |
| 7 | 33-3090 | Bushing - Flange | 4 | 21 | 3231-3 | Bolt - Carriage | 4 |
| 8 | 302-11 | Fitting - Grease | 2 | 22 | 324-9 | Screw - Cap Hex. Hd. | 4 |
| 9 | 87-0150 | Tower - Control Arm RH | 1 | 24 | 87-2480 | Link - Stabilizer | 2 |
| * | 87-0160 | Tower - Control Arm LH | 1 | 27 | 325-13 | Screw - Cap Hex. Hd. | 4 |
| 10 | 324-13 | Screw - Cap Hex. Hd. | 2 | 28 | 3296-39 | Nut - Lock | 8 |
| 11 | 3296-48 | Nut - Lock | 10 | 29 | 87-3110 | Absorber - Shock | 2 |
| 12 | 87-2500 | Sleeve - Spring Pivot | 2 | 31 | 3256-27 | Washer - Flat | 2 |
| 13 | 87-7150 | Spring Cradle Assembly (Incl. Ref. #33) | 2 | 32 | 3256-6 | Washer - Flat | 2 |
| 14 | 3296-23 | Nut - Lock | 4 | ‡33 | 44-0760 | Decal - Warning | 2 |

*Not Illustrated

‡For different language versions of this part, see International Decal Cross Reference.

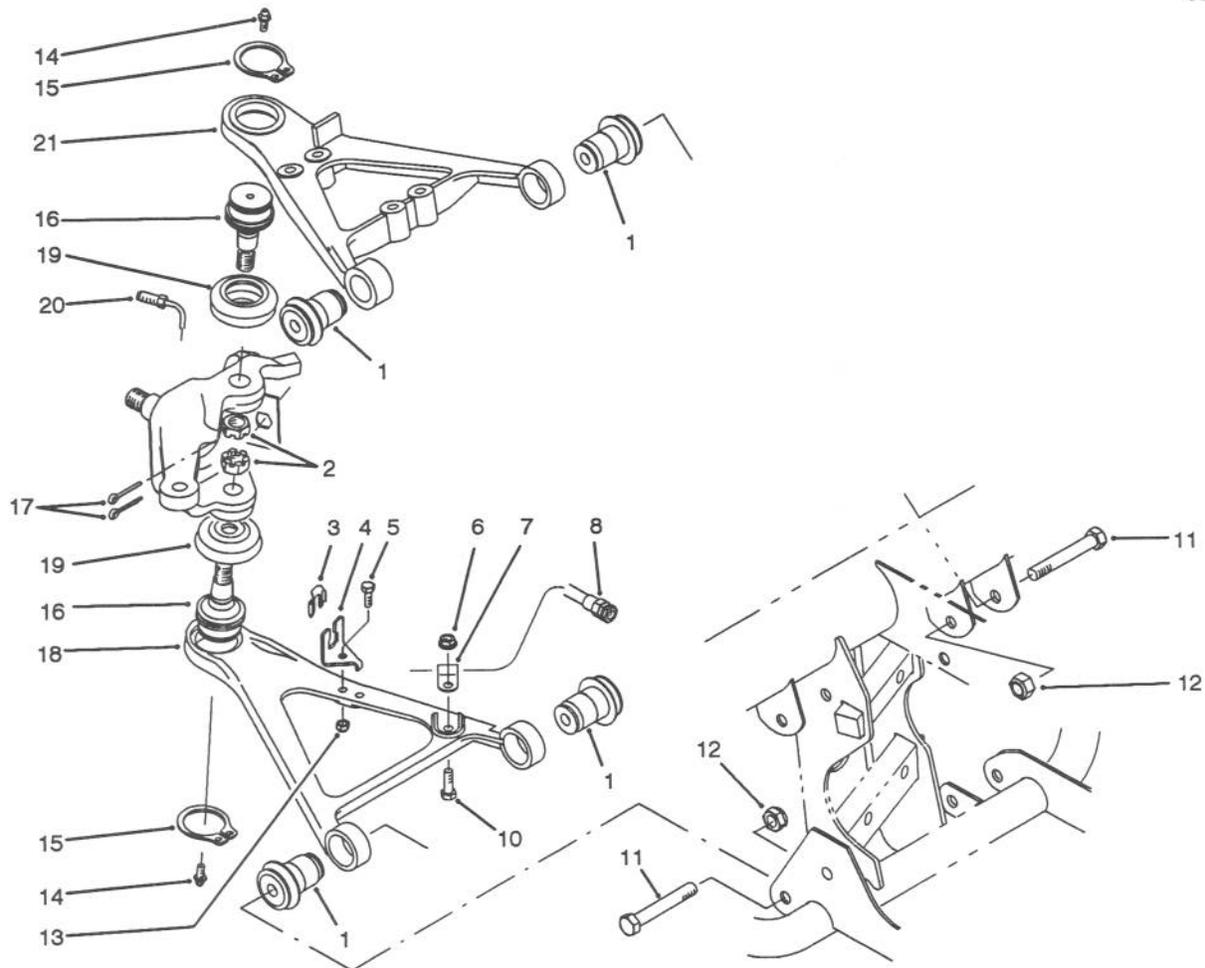


T-1594

FRONT SUSPENSION CONTROL ARM ASSEMBLY

| Ref. No. | Part No. | Description | No. Used | Ref. No. | Part No. | Description | No. Used |
|----------|----------|-----------------------|----------|----------|-----------|------------------------|----------|
| 1 | 87-1450 | Bushing - Rubber | 8 | 14 | 302-5 | Fitting - Grease | 4 |
| 2 | 32136-2 | Nut - Slotted | 4 | 15 | 32151-104 | Ring - Snap | 4 |
| 3 | 87-3580 | Retainer - Brake Hose | 2 | 16 | 87-1430 | Joint - Ball | 4 |
| 4 | 87-2870 | Bracket - Brake Hose | 2 | 17 | 3272-12 | Pin - Cotter | 4 |
| 5 | 321-6 | Screw - Cap Hex. Hd. | 2 | 18 | 87-0210 | Arm - Control Lower RH | 1 |
| 6 | 32128-20 | Nut - Flange Lock | 2 | * | 87-0220 | Arm - Control Lower LH | 1 |
| 7 | 2412-10 | Clamp - R | 2 | 19 | 87-2420 | Boot | 4 |
| 8 | 87-2780 | Hose - Brake Front | 2 | 20 | 87-2800 | Tube - Brake RH | 1 |
| 10 | 322-5 | Screw - Cap Hex. Hd. | 2 | * | 87-2790 | Tube - Brake LH | 1 |
| 11 | 325-13 | Screw - Cap Hex. Hd | 8 | 21 | 87-0170 | Arm - Control Upper RH | 1 |
| 12 | 3296-23 | Nut - Flange Lock | 8 | * | 87-0180 | Arm - Control Upper LH | 1 |
| 13 | 3296-42 | Nut - Lock | 2 | | | | |

*Not Illustrated

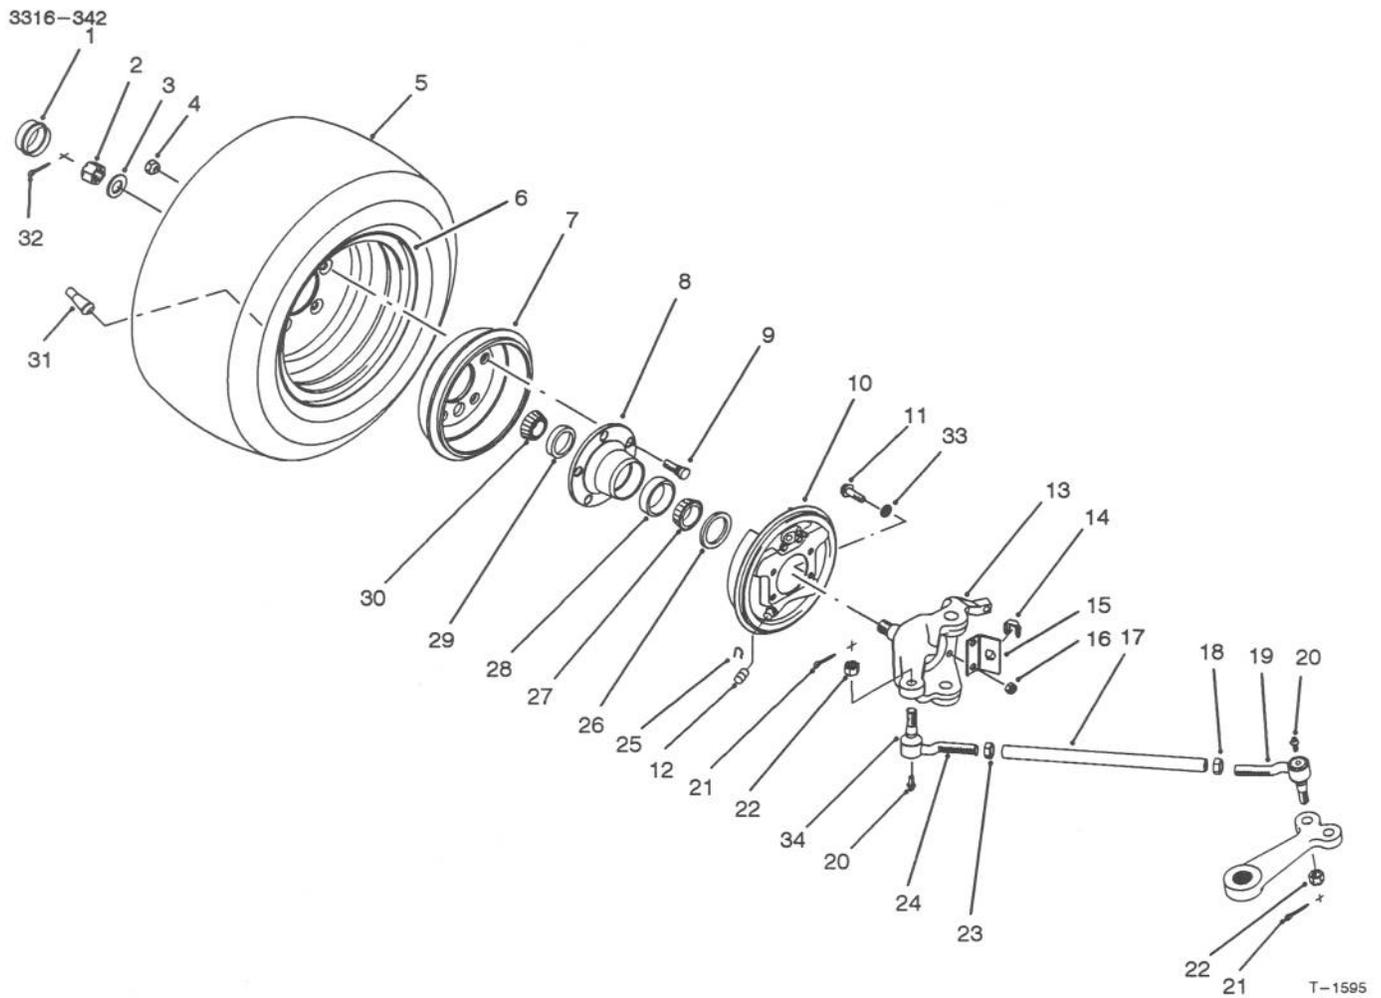


T-1595

FRONT WHEEL ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|-------------------------|----------|
| 1 | 241-119 | Cap Dust | 2 |
| 2 | 32136-5 | Nut Slotted | 2 |
| 3 | 3256-28 | Washer - Flat | 2 |
| 4 | 23-7270 | Nut - Lug | 10 |
| 5 | 87-3300 | Tire | 2 |
| 6 | 87-5720 | Rim | 2 |
| 7 | 87-0270 | Drum - Brake | 2 |
| 8 | 87-5560 | Hub - Wheel | 2 |
| 9 | 87-5510 | Stud - Drive | 10 |
| 10 | 87-3010 | Brake Assembly - RH | 1 |
| * | 87-3020 | Brake Assembly - LH | 1 |
| 11 | 323-8 | Screw - Hex. Flange Hd. | 8 |
| 12 | 87-3450 | Plug | 2 |
| 13 | 87-5520 | Spindle - RH | 1 |
| * | 87-5540 | Spindle - LH | 1 |
| 14 | 87-3580 | Retainer | 2 |
| 15 | 87-2820 | Bracket - Hose | 2 |
| 16 | 3296-39 | Nut - Lock | 8 |
| 17 | 87-2410 | Rod - Tie | 2 |
| 18 | 3218-21 | Nut - Jam | 2 |

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|--|----------|
| 19 | 87-1470 | Rod End Assy. - LH Thread (Incl. Ref. # 20-22 & 34) | 2 |
| 20 | 302-5 | Fitting - Grease | 4 |
| 21 | 3272-12 | Pin - Cotter | 4 |
| 22 | 32136-3 | Nut - Slotted | 4 |
| 23 | 3220-11 | Nut - Jam | 2 |
| 24 | 87-1480 | Rod End Assy. - RH Thread (Incl. Ref. #20-22 & 34) | 2 |
| 25 | 87-3310 | Clip - Brake Cable | 2 |
| 26 | 87-3590 | Seal - Bearing | 2 |
| 27 | 254-106 | Cone - Bearing | 2 |
| 28 | 254-107 | Cup - Bearing | 2 |
| 29 | 254-72 | Cup - Bearing | 2 |
| 30 | 254-94 | Cone - Bearing | 2 |
| 31 | 232-27 | Stem - Valve | 2 |
| 32 | 3272-12 | Pin - Cotter | 2 |
| 33 | 3253-21 | Washer - Lock | 8 |
| 34 | | Seal - Rod End | 4 |
| * | 87-5340 | Seal Kit - Tie Rod End (Incl. Ref. #20-22 & 34) | 4 |

*Not Illustrated

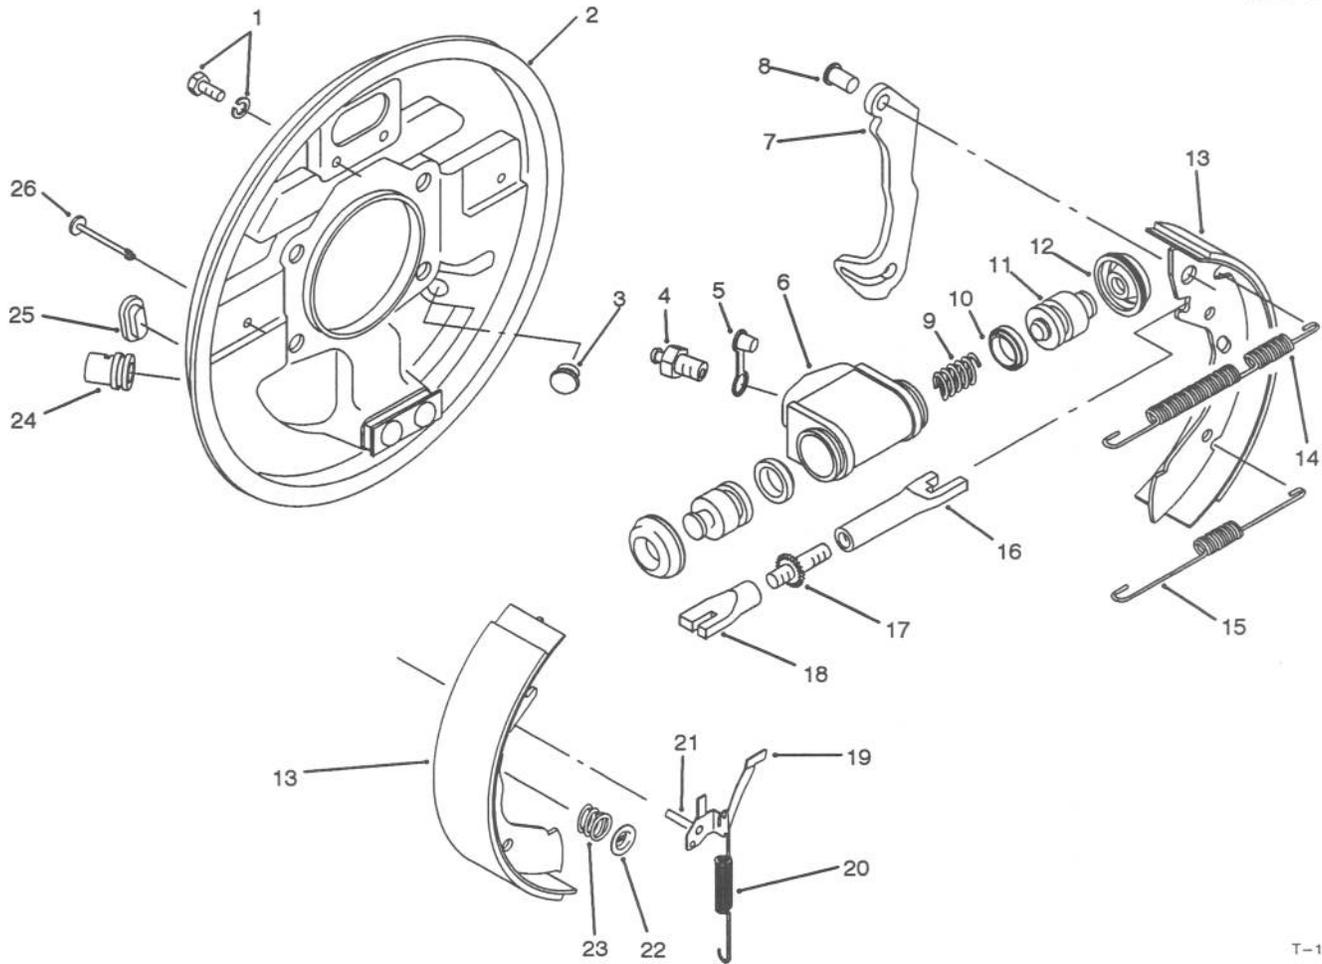


T-1596

FRONT BRAKE ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|---|----------|
| 1 | 92-4135 | Set Bolt | 2 |
| 2 | 92-4115 | Backplate Assembly LH (Incl. Ref. #24) | 1 |
| * | 92-4116 | Backplate Assembly RH (Incl. Ref. #24) | 1 |
| 3 | 92-4125 | Plug | 1 |
| 4 | 92-4113 | Screw - Bleed | 1 |
| 5 | 92-4114 | Cap - Bleed Screw | 1 |
| 6 | | Body | 1 |
| 7 | | Lever - Operating LH/RH | 1 |
| 8 | | Pin | 1 |
| 9 | | Spring | 1 |
| 10 | | Seal - 'L' Type | 2 |
| 11 | | Piston | 2 |
| 12 | | Cover - Dust | 2 |
| 13 | 92-4120 | Shoe & Lining Set (4 Shoes) (Incl. Ref. #7 & 8) | 1 |
| 14 | 92-4126 | Spring - Shoe, Upper LH | 1 |
| * | 92-4127 | Spring - Shoe, Upper RH | 1 |
| 15 | 92-4128 | Spring - Shoe, Lower | 1 |
| 16 | | Pushrod - Female LH | 1 |
| * | | Pushrod - Female RH | 1 |
| 17 | | Bolt - Adjuster | 1 |
| 18 | | Sleeve - Adjuster | 1 |

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|---|----------|
| 19 | 92-4123 | Pawl Assembly - LH (Incl. Ref. #21) | 1 |
| * | 92-4124 | Pawl Assembly - RH (Incl. Ref. #21) | 1 |
| 20 | 92-4129 | Spring - Adjuster, LH | 1 |
| * | 92-4130 | Spring - Adjuster, RH | 1 |
| 21 | | Pin - Pawl | 1 |
| 22 | 92-4131 | Washer - Hold Down | 2 |
| 23 | 92-4132 | Spring - Hold Down | 2 |
| 24 | | Guide - Pipe | 1 |
| 25 | 92-4134 | Plug - Inspection | 1 |
| 26 | 92-4133 | Pin - Hold Down | 2 |
| * | 92-4121 | Adjuster Assembly - LH (Incl. Ref. #16-18) | 1 |
| * | 92-4122 | Adjuster Assembly - RH (Incl. Ref. #16-18) | 1 |
| * | 92-4117 | Wheel Cylinder Assy. - LH (Incl. Ref. #4-6 & 9-12) | 1 |
| * | 92-4118 | Wheel Cylinder Assy. - RH (Incl. Ref. #4-6 & 9-12) | 1 |
| * | 92-4119 | Kit - Seal (Incl. Ref. #10 & 12) | 1 |
| * | 87-3010 | Front Brake Assembly - RH (Complete) | 1 |
| * | 87-3020 | Front Brake Assembly - LH (Complete) | 1 |

*Not Illustrated

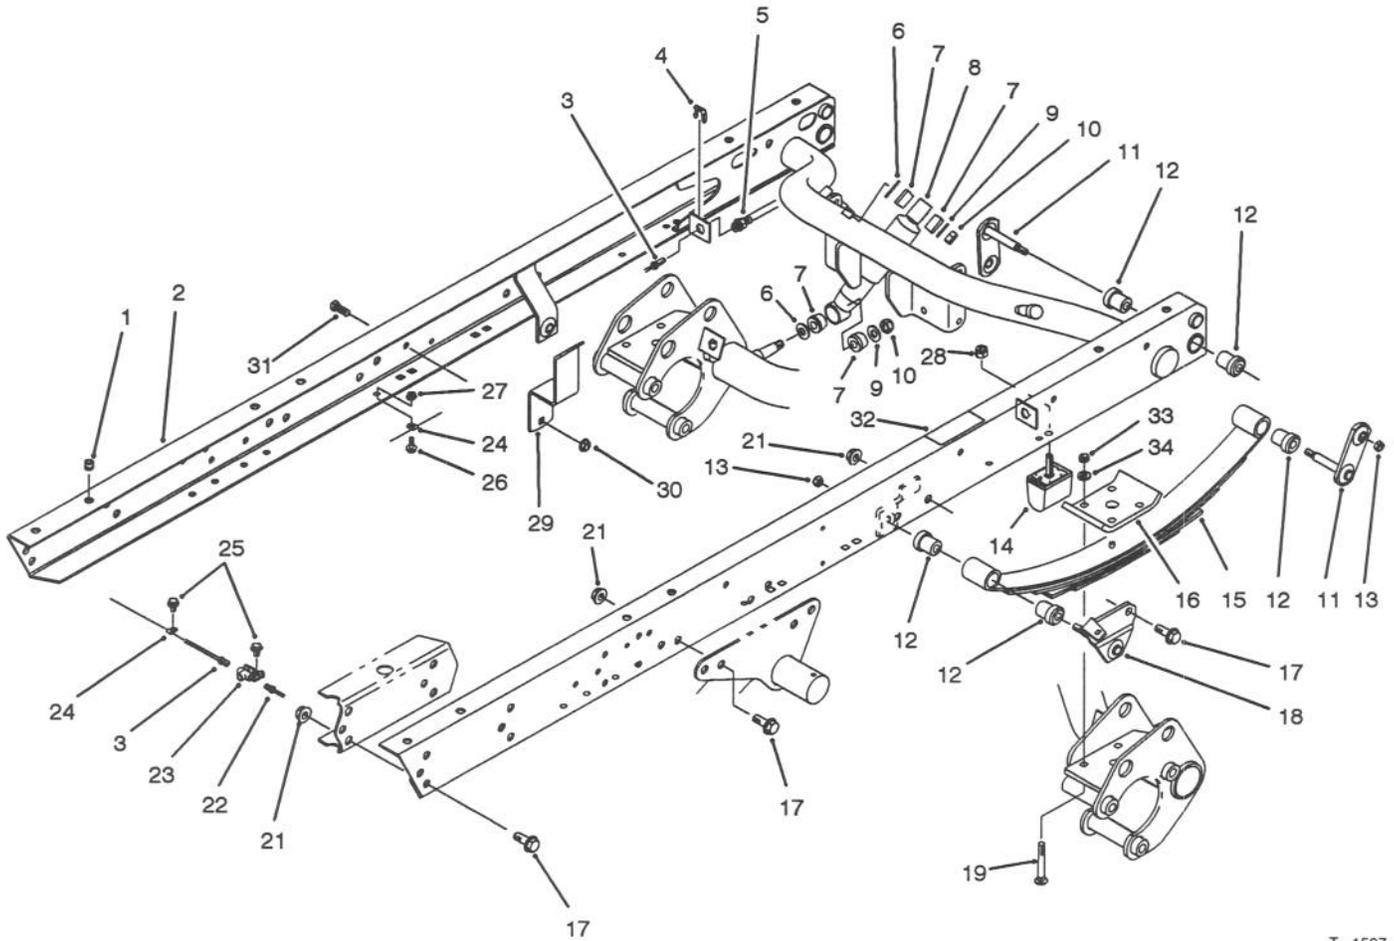

T-1597


REAR FRAME ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|--------------------------------------|----------|
| 1 | 32148-10 | Insert - Threaded | 8 |
| 2 | 87-8440 | Rear Frame Assembly (Incl. Ref. #32) | 1 |
| 3 | 87-3270 | Tube - Brake RH | 1 |
| 4 | 87-3580 | Retainer | 2 |
| 5 | 87-4100 | Hose - Brake | 2 |
| 6 | 3256-27 | Washer - Flat | 8 |
| 7 | 87-3920 | Bushing - Rubber | 8 |
| 8 | 87-3110 | Shock Absorber | 2 |
| 9 | 3256-6 | Washer - Flat | 4 |
| 10 | 3296-23 | Nut - Lock | 4 |
| 11 | 87-3980 | Shackle - Spring | 4 |
| 12 | 87-4760 | Bushing | 12 |
| 13 | 3296-39 | Nut - Lock | 6 |
| 14 | 87-3470 | Bumper - Spring | 2 |
| 15 | 87-1490 | Spring - Leaf | 2 |
| 16 | 87-7470 | Plate - Clamp | 2 |
| 17 | 3234-38 | Screw - Hex. Flange Hd. | 22 |

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|---------------------------|----------|
| 18 | 87-3960 | Mount - Spring LH | 1 |
| * | 87-3940 | Mount - Spring RH | 1 |
| 19 | 3232-17 | Bolt - Carriage | 8 |
| 21 | 32128-23 | Nut - Flange Lock | 22 |
| 22 | 87-3280 | Tube - Brake LH | 1 |
| 23 | 87-3560 | Tee - Brake Tube | 1 |
| 24 | 2412-149 | Clamp - Tube | 5 |
| 25 | 32104-82 | Screw - Hex. Flange Hd. | 2 |
| 26 | 3234-4 | Screw - Hex. Flange Hd. | 4 |
| 27 | 32128-33 | Nut - Flange Lock | 4 |
| 28 | 48-9520 | Nut - Lock | 2 |
| 29 | 87-6690 | Guard - Induction Chamber | 1 |
| 30 | 3290-357 | Nut - Flange Lock | 2 |
| 31 | 323-6 | Screw - Cap Hex. Hd. | 2 |
| ‡32 | 66-6840 | Decal - Caution | 1 |
| 33 | 3296-76 | Nut - Lock | 8 |
| 34 | 87-7480 | Washer - Flat | 8 |

*Not Illustrated

‡For different language versions of this part, see International Decal Cross Reference.

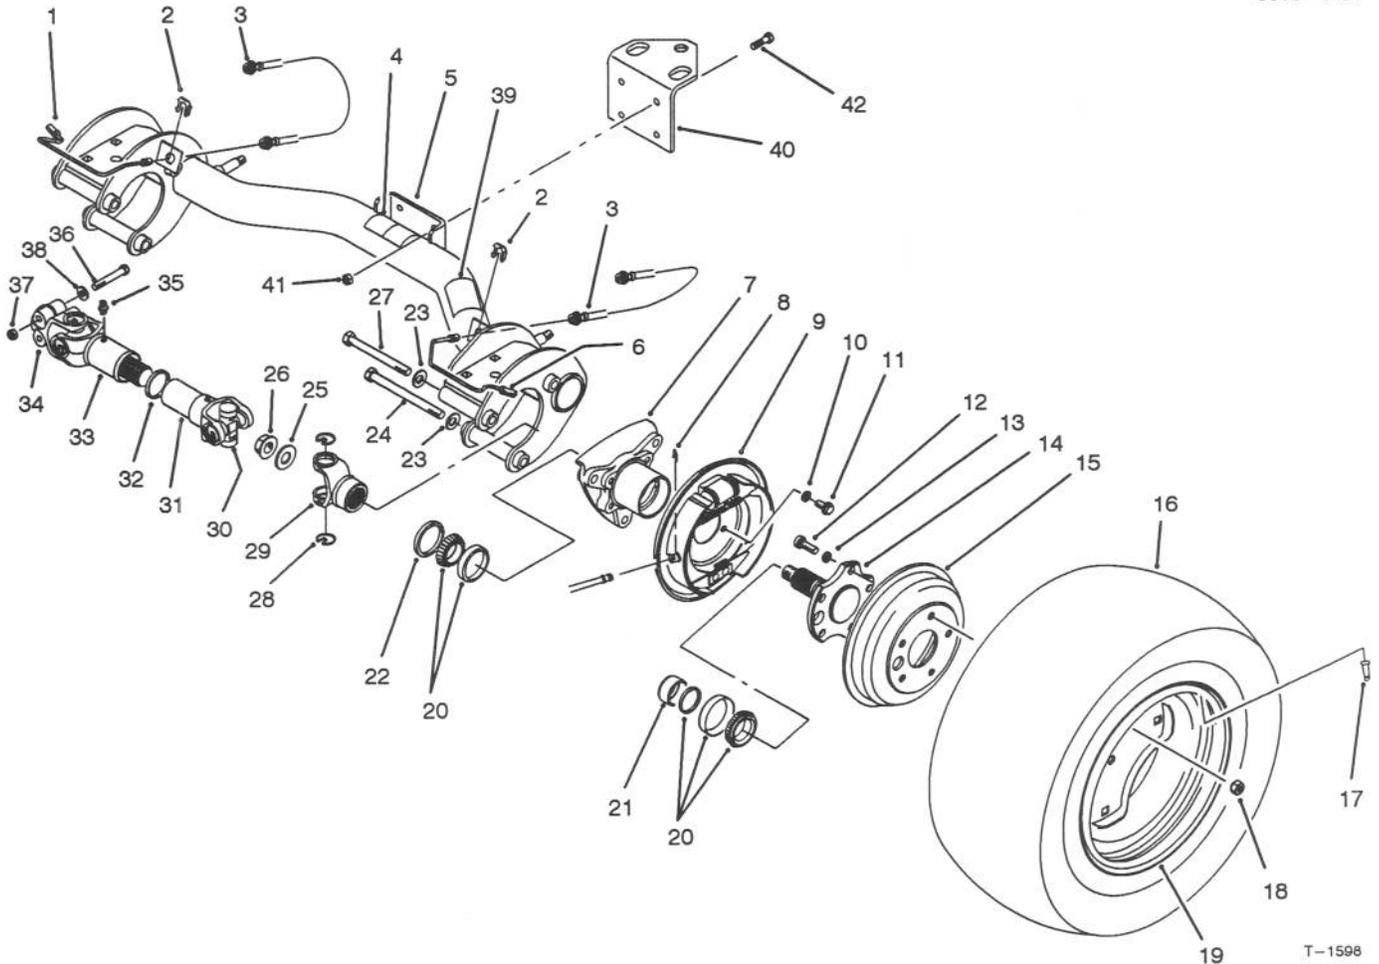

T-1598


REAR AXLE ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|---------------------------------------|----------|
| 1 | 87-4090 | Tube - Brake RH | 1 |
| 2 | 87-3580 | Retainer - Brake Hose | 2 |
| 3 | 87-4100 | Hose - Brake | 2 |
| ‡4 | 87-6060 | Decal - ATF | 1 |
| 5 | 87-7110 | Rear Axle Assembly (Incl. Ref. #4) | 1 |
| 6 | 87-4080 | Tube - Brake LH | 1 |
| 7 | 87-2240 | Housing - Axle | 2 |
| 8 | 87-3310 | Clip - Brake Cable | 2 |
| 9 | 87-3840 | Brake Assembly LH | 1 |
| * | 87-3830 | Brake Assembly RH | 1 |
| 10 | 3253-21 | Washer - Lock | 8 |
| 11 | 323-6 | Screw - Cap Hex. Hd. | 8 |
| 12 | 87-2080 | Bolt - Hex. Hd. | 10 |
| 13 | 3253-6 | Washer - Lock | 10 |
| 14 | 87-8380 | Stub - Axle | 2 |
| 15 | 87-1840 | Drum - Brake | 2 |
| 16 | 87-6740 | Tire - Rear 24" | 2 |
| * | 87-3290 | Tire - Rear 23" (Optional) | 2 |
| 17 | 232-27 | Valve - Stem | 2 |
| 18 | 23-7270 | Nut - Lug | 10 |
| 19 | 87-6750 | Rim - Rear 24" | |
| * | 87-3000 | Rim - Rear 23" (Optional) | 2 |
| 20 | 87-1970 | Bearing Matched Set | 2 |
| 21 | 87-4060 | Spacer - Bearing | 2 |
| 22 | 87-3590 | Seal - Bearing | 2 |

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|--|----------|
| 23 | 87-7270 | Washer - Flat | 6 |
| 24 | 325-20 | Screw - Cap Hex. Hd. | 5 |
| 25 | 87-3060 | Washer - Flat | 2 |
| 26 | 32128-53 | Nut - Flange Lock | 2 |
| 27 | 325-19 | Screw - Cap Hex. Hd. | 1 |
| 28 | 92-4184 | Ring - Snap | 16 |
| 29 | 92-4183 | Yoke - End | 2 |
| 30 | 92-4178 | Cross & Bearing Kit | 4 |
| 31 | 92-4182 | Yoke & Hub Assembly (Incl. Ref. #28) | 2 |
| 32 | 92-4180 | Seal | 2 |
| 33 | 92-4179 | Yoke, Shaft & Seal | 2 |
| 34 | 92-4177 | Yoke - Double Clamp | 2 |
| 35 | 302-5 | Fitting - Grease | 2 |
| 36 | 87-8700 | Screw - Cap Hex. Hd. | 4 |
| 37 | 32128-36 | Nut - Lock | 4 |
| 38 | 80-6990 | Washer | 4 |
| ‡39 | 87-5990 | Decal - PTO | 1 |
| 40 | 92-5951 | Angle - Hitch | 1 |
| 41 | 3296-39 | Nut - Lock | 4 |
| 42 | 323-7 | Screw - Cap Hex. Hd. | 4 |
| * | 87-7500 | Driveshaft Assembly (Incl. Ref. #28-35) | 2 |
| * | 87-5370 | Rear Tire & Wheel Assembly (24") | 2 |
| * | 87-6370 | Rear Tire & Wheel Assembly (23") | 2 |

*Not Illustrated

‡For different language versions of this part, see International Decal Cross Reference.

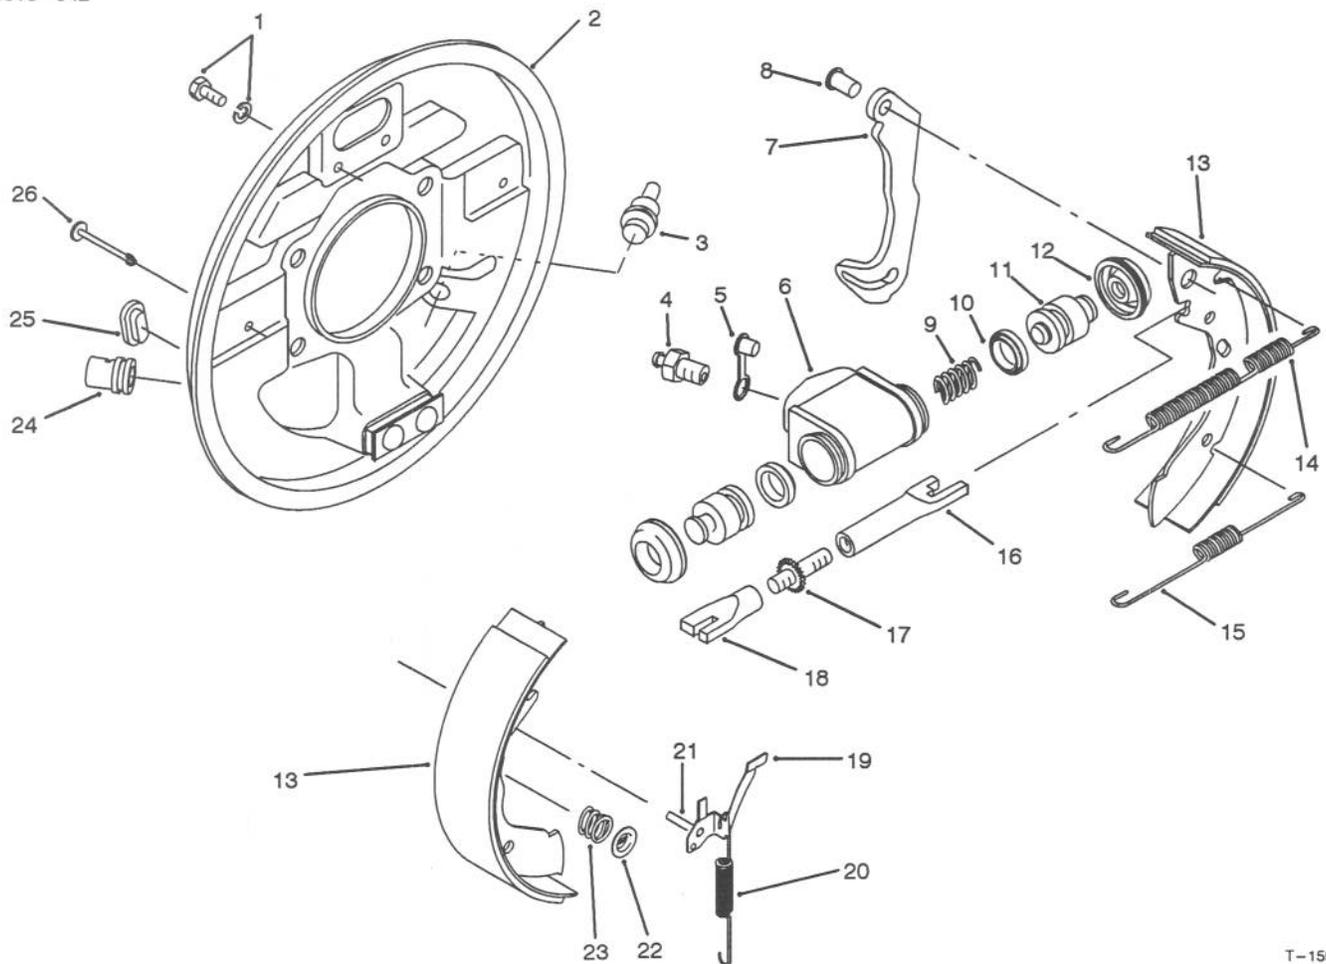


T-1599

REAR BRAKE ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|---|----------|
| 1 | 92-4135 | Set Bolt | 2 |
| 2 | 92-4138 | Backplate Assembly LH (Incl. Ref. #24) | 1 |
| * | 92-4139 | Backplate Assembly RH (Incl. Ref. #24) | 1 |
| 3 | 92-4146 | Plug | 1 |
| 4 | 92-4137 | Screw - Bleed | 1 |
| 5 | 92-4114 | Cap - Bleed Screw | 1 |
| 6 | | Body | 1 |
| 7 | | Lever - Operating LH/RH | 1 |
| 8 | | Pin | 1 |
| 9 | | Spring | 1 |
| 10 | | Seal - 'L' Type | 2 |
| 11 | | Piston | 2 |
| 12 | | Cover - Dust | 2 |
| 13 | 92-4143 | Shoe & Lining Set (4 Shoes) (Incl. Ref. #7 & 8) | 1 |
| 14 | 92-4147 | Spring - Shoe, Upper LH | 1 |
| * | 92-4148 | Spring - Shoe, Upper RH | 1 |
| 15 | 92-4149 | Spring - Shoe, Lower | 1 |
| 16 | | Pushrod - Female LH | 1 |
| * | | Pushrod - Female RH | 1 |
| 17 | | Bolt - Adjuster | 1 |
| 18 | | Sleeve - Adjuster | 1 |

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|---|----------|
| 19 | 92-4123 | Pawl Assembly - LH (Incl. Ref. #21) | 1 |
| * | 92-4124 | Pawl Assembly - RH (Incl. Ref. #21) | 1 |
| 20 | 92-4150 | Spring - Adjuster, LH | 1 |
| * | 92-4151 | Spring - Adjuster, RH | 1 |
| 21 | | Pin - Pawl | 1 |
| 22 | 92-4131 | Washer - Hold Down | 2 |
| 23 | 92-4152 | Spring - Hold Down | 2 |
| 24 | | Guide - Pipe | 1 |
| 25 | 92-4134 | Plug - Inspection | 1 |
| 26 | 92-4133 | Pin - Hold Down | 2 |
| * | 92-4144 | Adjuster Assembly - LH (Incl. Ref. #16-18) | 1 |
| * | 92-4145 | Adjuster Assembly - RH (Incl. Ref. #16-18) | 1 |
| * | 92-4140 | Wheel Cylinder Assy. - LH (Incl. Ref. #4-6 & 9-12) | 1 |
| * | 92-4141 | Wheel Cylinder Assy. - RH (Incl. Ref. #4-6 & 9-12) | 1 |
| * | 92-4142 | Seal Kit (Incl. Ref. #10 & 12) | 1 |
| * | 87-3830 | Rear Brake Assembly - RH (Complete) | 1 |
| * | 87-3840 | Rear Brake Assembly - LH (Complete) | 1 |

*Not Illustrated

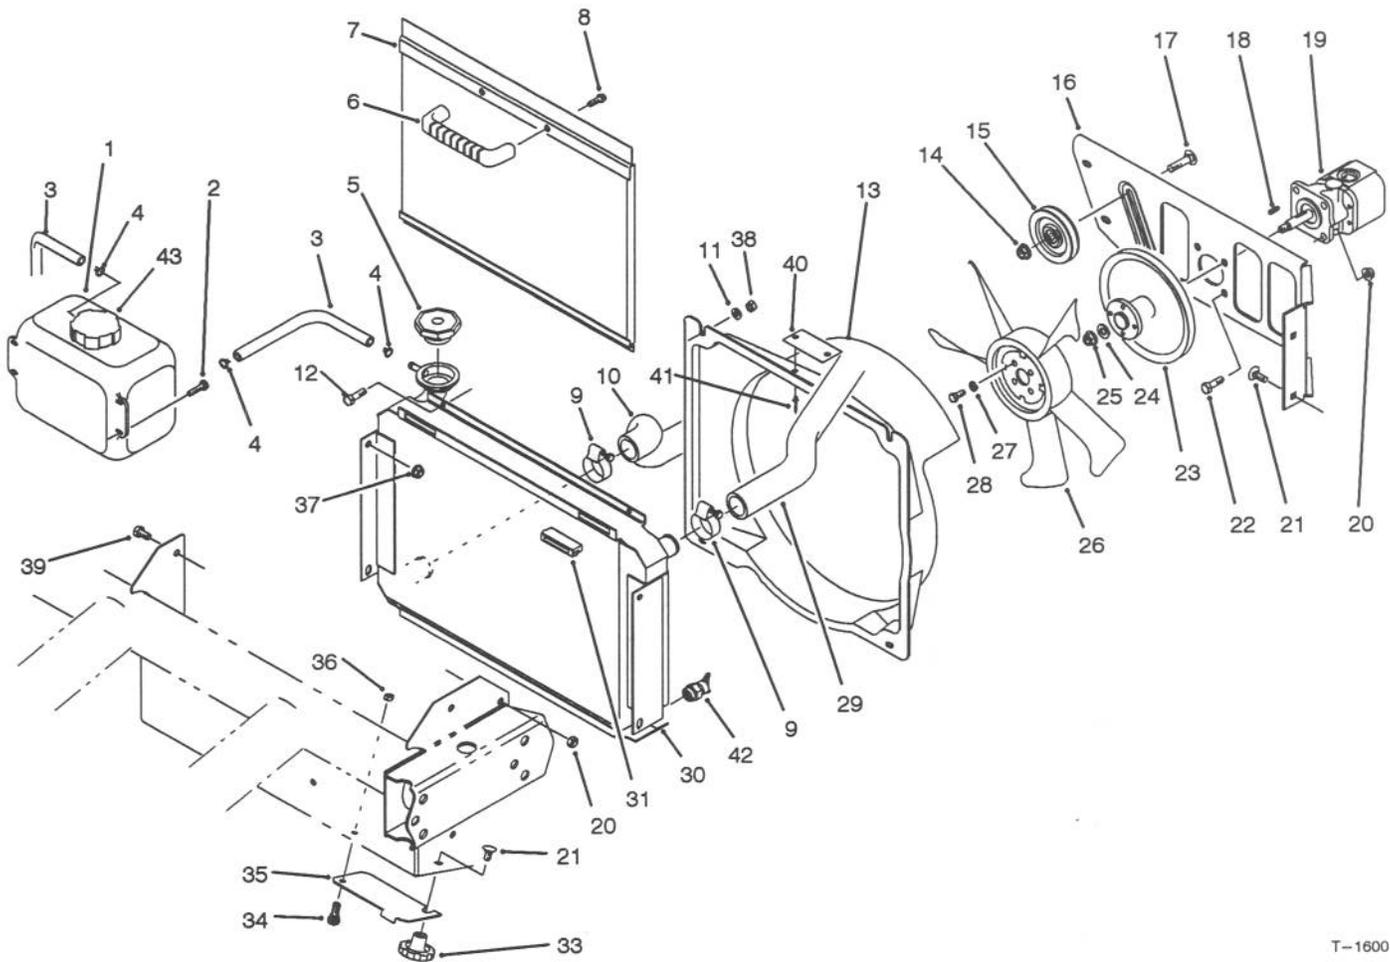


T-1600

RADIATOR & HYDRAULIC PUMP ASSEMBLY

| Ref. No. | Part No. | Description | No. Used | Ref. No. | Part No. | Description | No. Used |
|----------|----------|---|----------|----------|----------|---------------------------------------|----------|
| 1 | 87-3710 | Overflow Reservoir Assembly (Incl. Ref. #43) | 1 | 21 | 3230-23 | Bolt - Carriage | 5 |
| 2 | 3250-20 | Screw - Round Hd. | 4 | 22 | 322-5 | Screw - Cap Hex. Hd. | 4 |
| 3 | 71-3381 | Tube - Overflow | 2 | 23 | 87-3390 | Pulley | 1 |
| 4 | 92-2379 | Clamp - Hose | 3 | 24 | 3256-45 | Washer - Flat | 1 |
| 5 | 66-3240 | Cap - Radiator | 1 | 25 | 3296-5 | Nut - Flange Lock | 1 |
| 6 | 65-5100 | Handle | 1 | 26 | 43-1911 | Fan | 1 |
| 7 | 87-2000 | Screen - Radiator | 1 | 27 | 3253-3 | Washer - Lock | 4 |
| 8 | 46-8091 | Screw - Hex. Flange Hd. | 2 | 28 | 321-3 | Screw - Cap Hex. Hd. | 4 |
| 9 | 2412-34 | Clamp - Hose | 2 | 29 | 87-3430 | Hose - Radiator Upper | 1 |
| 10 | 87-5050 | Hose - Radiator Lower | 1 | 30 | 87-3050 | Radiator Assembly (Incl. Ref. #42) | 1 |
| 11 | 3256-22 | Washer - Flat | 4 | 31 | 58-4250 | Magnet | 2 |
| 12 | 321-4 | Screw - Cap Hex. Hd. | 4 | 33 | 19-4050 | Knob | 1 |
| 13 | 87-7120 | Assembly - Shroud, Fan (Incl. Ref. #40-41) | 1 | 34 | 3-7166 | Bolt - Shoulder | 1 |
| 14 | 3290-357 | Nut - Flange Lock | 1 | 35 | 87-4040 | Plate | 1 |
| 15 | 63-8140 | Pulley | 1 | 36 | 3296-3 | Nut - Lock | 1 |
| 16 | 87-8230 | Support - Fan | 1 | 37 | 32128-20 | Nut - Lock | 4 |
| 17 | 3231-28 | Bolt - Carriage | 1 | 38 | 3296-42 | Nut - Lock | 4 |
| 18 | 92-2179 | Key - Square | 1 | 39 | 322-2 | Screw - Cap Hex. Hd. | 4 |
| 19 | 87-5700 | Hydraulic Pump Assembly (Incl. Ref #18) | 1 | ‡40 | 76-8750 | Plate - Warning | 1 |
| 20 | 3296-29 | Nut - Flange Lock | 8 | 41 | 3290-271 | Rivet - Pop | 2 |
| | | | | 42 | 92-4111 | Petcock - Radiator | 1 |
| | | | | 43 | 87-7050 | Cap - Reservoir | 1 |

‡For different language versions of this part, see International Decal Cross Reference.

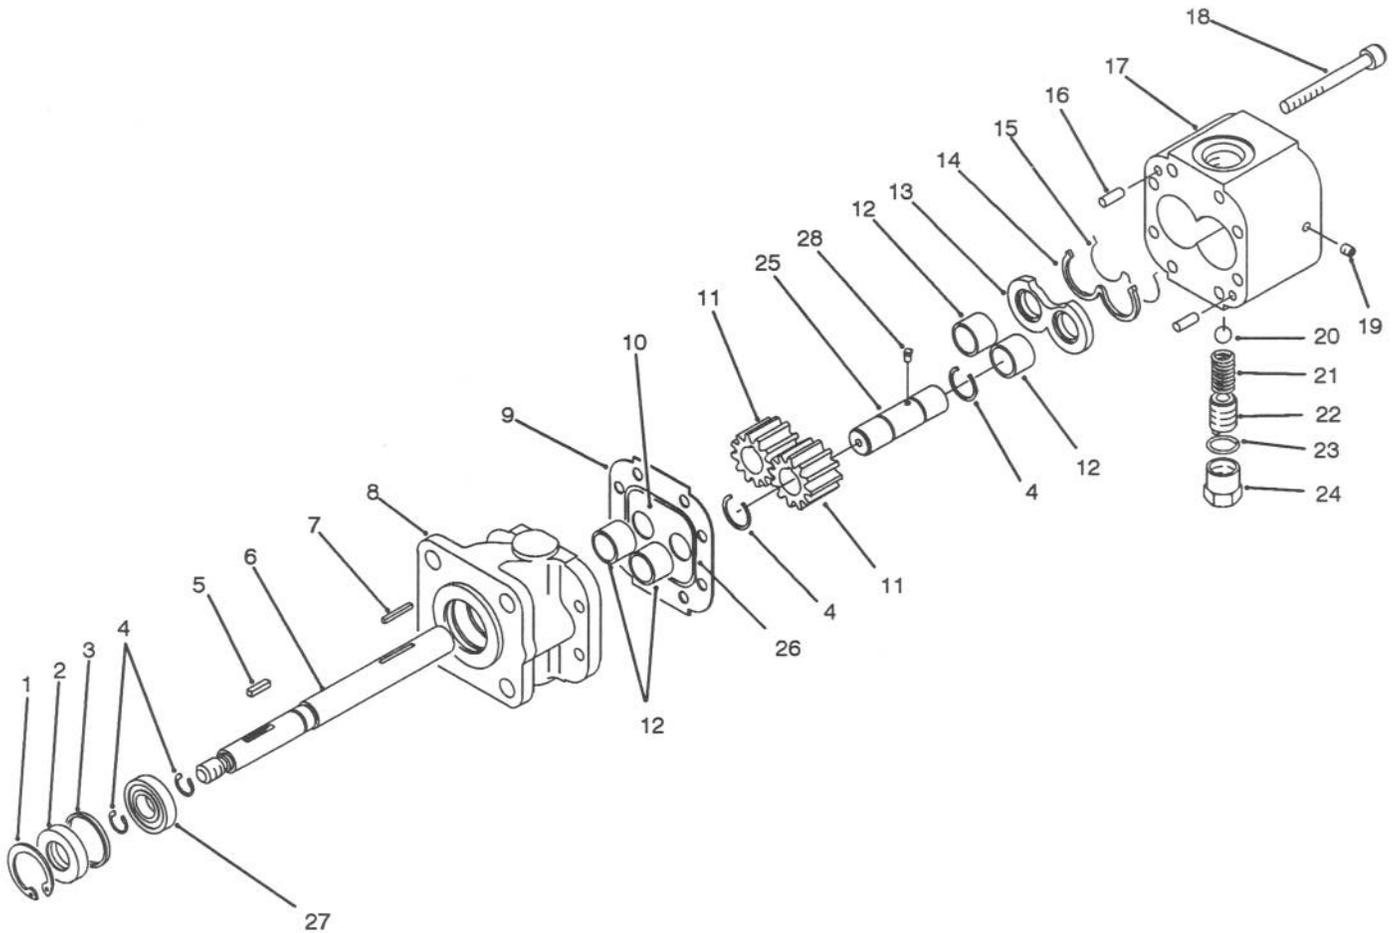


T-1601

HYDRAULIC PUMP ASSEMBLY NO. 87-5700

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|------------------|----------|
| 1 | 32151-41 | Ring - Retaining | 1 |
| 2 | 92-2195 | Seal - Oil | 1 |
| 3 | 92-2186 | Spacer | 1 |
| 4 | 92-2178 | Ring - Crescent | 4 |
| 5 | 92-2179 | Key - Square | 1 |
| 6 | 92-2189 | Shaft - Drive | 1 |
| 7 | 92-2177 | Pin - Shear | 1 |
| 8 | 92-2188 | Stator | 1 |
| 9 | 92-2182 | Plate - Seal | 1 |
| 10 | 92-2183 | Plate - Wear | 1 |
| 11 | 92-2175 | Gear | 2 |
| 12 | 92-2192 | Bearing | 4 |
| 13 | 92-2181 | Plate - Pressure | 1 |
| 14 | 92-2197 | Seal - Back Up | 1 |

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|-------------------------|----------|
| 15 | 92-2196 | Seal - Pressure Plate | 1 |
| 16 | 92-2176 | Pin - Dowel | 2 |
| 17 | 92-2187 | Housing - Gear, End | 1 |
| 18 | 92-2173 | Screw - Cap Socket Head | 8 |
| 19 | 92-2185 | Plug | 1 |
| 20 | 92-2193 | Ball | 1 |
| 21 | 92-2194 | Spring | 1 |
| 22 | 92-2174 | Screw - Adjusting | 1 |
| 23 | 92-2180 | Gasket - Copper | 1 |
| 24 | 92-2184 | Cap - Relief Valve | 1 |
| 25 | 92-2190 | Shaft - Idler | 1 |
| 26 | 92-2198 | Seal | 1 |
| 27 | 92-2191 | Bearing | 1 |
| 28 | 92-2199 | Key - Ball | 1 |

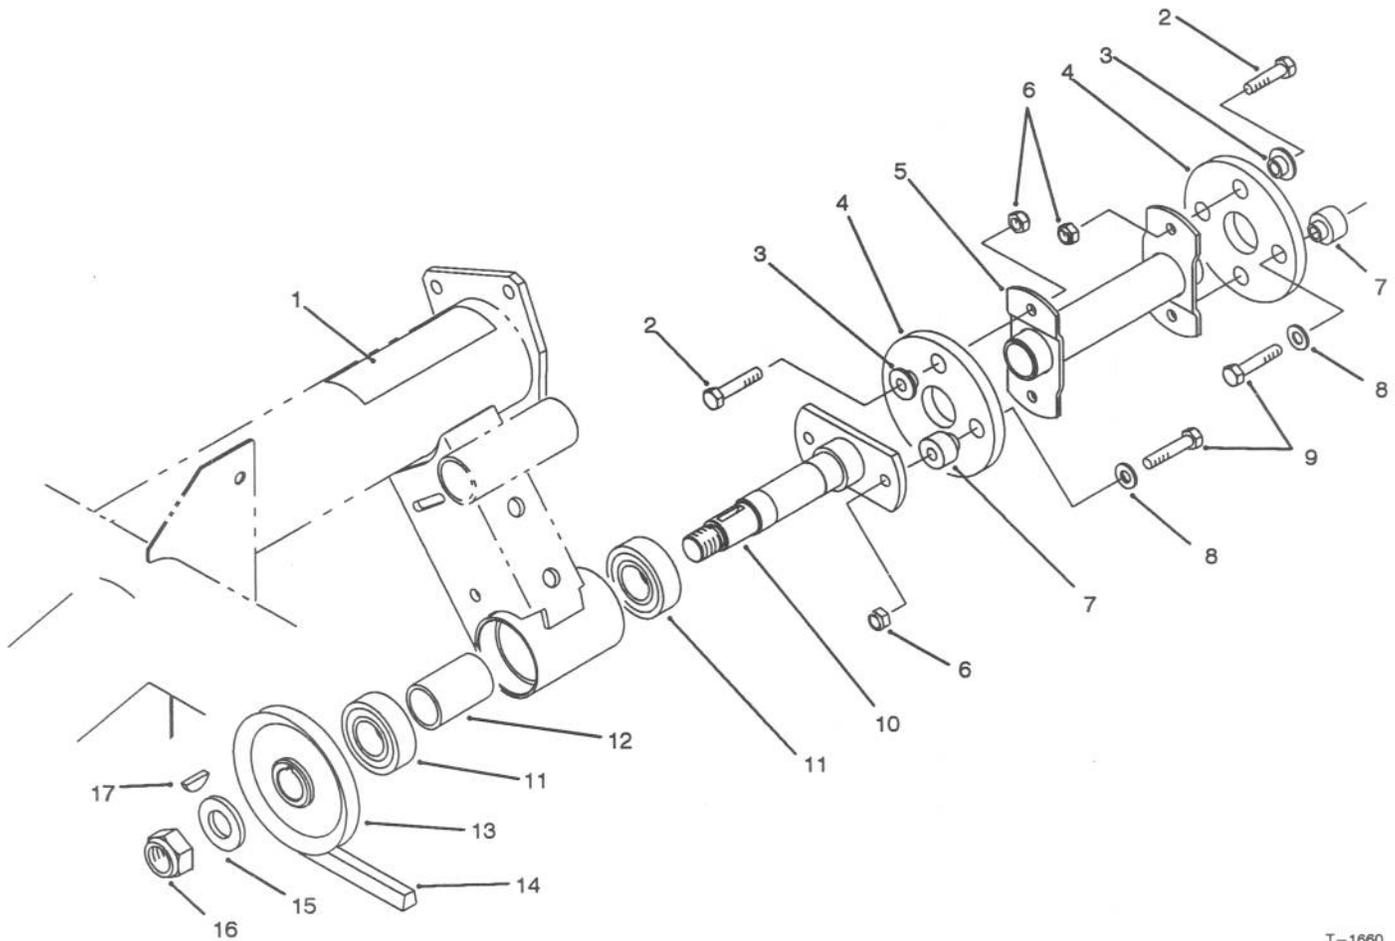


T-1660

HYDRAULIC PUMP DRIVE ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|----------------------|----------|
| ‡1 | 80-8040 | Decal - Caution | 1 |
| 2 | 322-5 | Screw - Cap Hex. Hd. | 4 |
| 3 | 27-6600 | Spacer - Thin | 4 |
| 4 | 44-2230 | Disc - Rubber | 2 |
| 5 | 87-4440 | Driveshaft | 1 |
| 6 | 3296-29 | Nut - Lock | 6 |
| 7 | 27-6590 | Spacer - Thick | 4 |
| 8 | 3256-3 | Washer - Flat | 4 |
| 9 | 322-7 | Screw - Cap Hex. Hd. | 4 |

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|------------------|----------|
| 10 | 87-2720 | Driveshaft | 1 |
| 11 | 251-82 | Bearing - Ball | 2 |
| 12 | 87-2750 | Spacer - Bearing | 1 |
| 13 | 87-3370 | Pulley | 1 |
| 14 | 87-3210 | Belt - V | 1 |
| 15 | 3256-28 | Washer - Flat | 1 |
| 16 | 3296-15 | Nut - Lock | 1 |
| 17 | 3257-7 | Key - Woodruff | 1 |

‡For different language versions of this part, see International Decal Cross Reference.

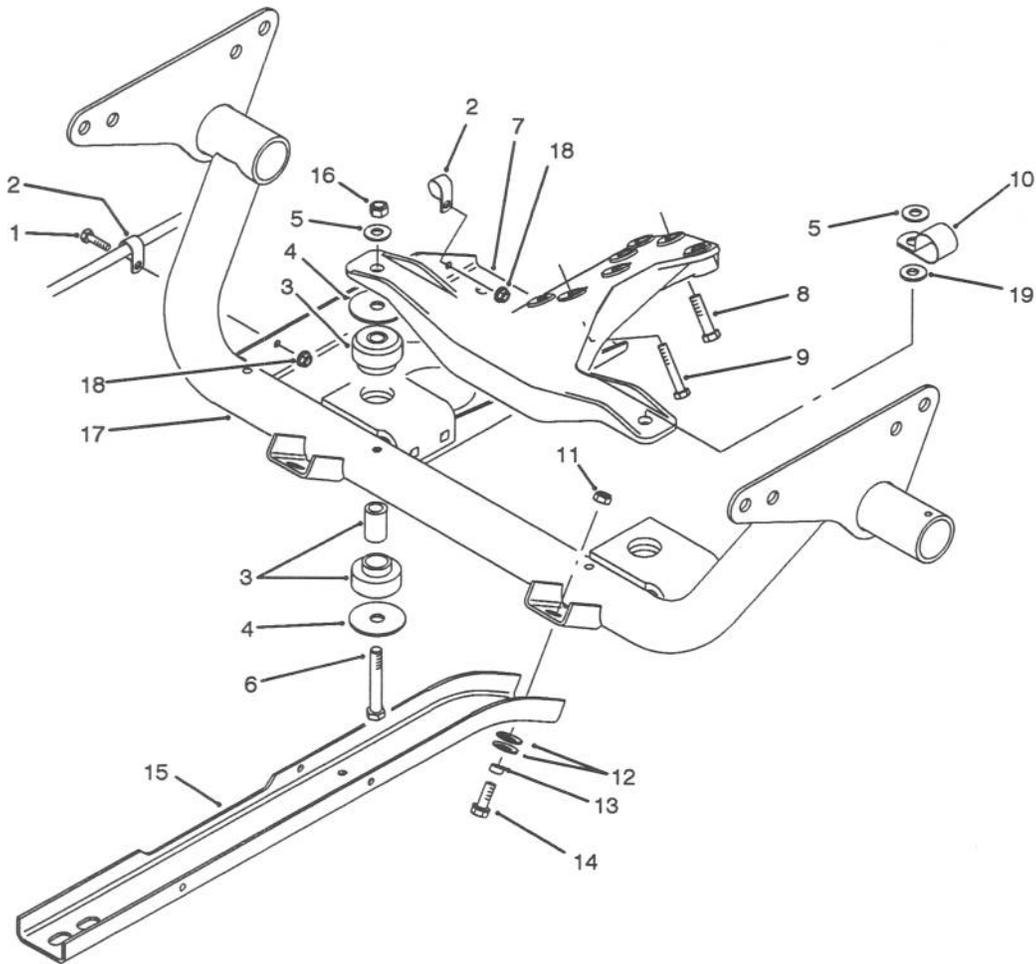


T-1603

ENGINE FRAME ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|-----------------------|----------|
| 1 | 321-4 | Screw - Cap Hex. Hd. | 2 |
| 2 | 2412-89 | Clamp - R | 2 |
| 3 | 87-4970 | Engine Mount Assembly | 2 |
| 4 | 87-5100 | Washer - Flat | 4 |
| 5 | 3256-25 | Washer - Flat | 2 |
| 6 | 324-19 | Screw - Cap Hex. Hd. | 2 |
| 7 | 87-0330 | Mount - Engine | 1 |
| 8 | 87-3700 | Screw - Cap Hex. Hd. | 4 |
| 9 | 48-7560 | Screw - Cap Hex. Hd. | 3 |
| 10 | 2412-82 | Clamp - R | 1 |

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|----------------------|----------|
| 11 | 3296-39 | Nut - Lock | 6 |
| 12 | 3290-413 | Washer - Belleville | 12 |
| 13 | 76-9100 | Spacer | 6 |
| 14 | 3234-11 | Screw - Cap Hex. Hd. | 6 |
| 15 | 87-4730 | Guard - Belly | 2 |
| 16 | 3296-48 | Nut - Lock | 2 |
| 17 | 87-0720 | Frame - Engine | 1 |
| 18 | 32128-33 | Nut - Flange | 2 |
| 19 | 59-2290 | Spacer | 1 |

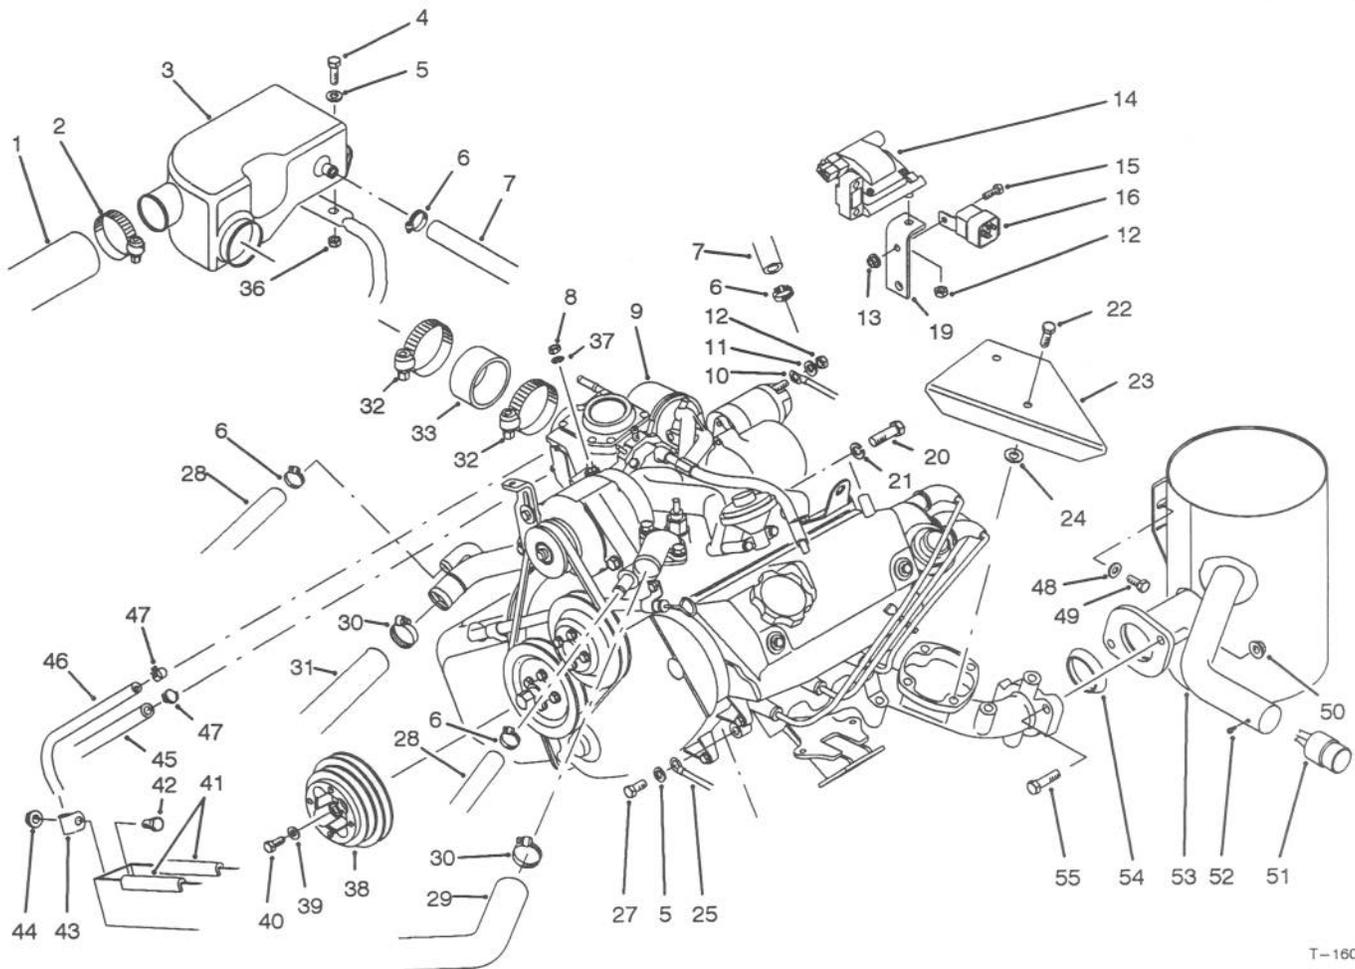


T-1604

ENGINE INSTALLATION ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|--|----------|
| 1 | 87-3420 | Hose - Air Cleaner | 1 |
| 2 | 2412-92 | Clamp - Hose | 1 |
| 3 | 87-1680 | Chamber - Air | 1 |
| 4 | 322-6 | Screw - Cap Hex. Hd. | 2 |
| 5 | 3256-23 | Washer - Flat | 3 |
| 6 | 2412-119 | Clamp - Hose | 4 |
| 7 | 87-3740 | Hose - Breather | 1 |
| 8 | 48-7890 | Nut - Hex. | 1 |
| 9 | 87-1960 | Engine Assembly (Incl. Ref. #11, 12 & 14) | 1 |
| 10 | 87-3070 | Cable - Positive | 1 |
| 11 | 3254-2 | Washer - Lock | 1 |
| 12 | 42-9580 | Nut - Hex. | 2 |
| 13 | 32128-33 | Nut - Flange | 1 |
| 14 | 92-2027 | Coil - Ignition | 1 |
| 15 | 321-4 | Screw - Cap Hex. Hd. | 1 |
| 16 | 63-7590 | Relay | 1 |
| 19 | 87-2760 | Bracket - Ignition Coil | 1 |
| 20 | 48-9480 | Screw - Cap Hex. Hd. | 2 |
| 21 | 3253-6 | Washer - Lock | 2 |
| 22 | 57-6380 | Screw - Cap Hex. Hd. | 2 |
| 23 | 87-3620 | Shield - Heat | 1 |
| 24 | 52-2480 | Spacer | 2 |
| 25 | 87-3080 | Wire - Ground | 1 |
| 27 | 66-3160 | Screw - Cap Hex. Hd. | 1 |
| 28 | 87-3730 | Hose - Coolant | 2 |
| 29 | 87-3430 | Hose - Radiator Upper | 1 |

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|---|----------|
| 30 | 2412-34 | Clamp - Hose | 2 |
| 31 | 87-5050 | Hose - Radiator Lower | 1 |
| 32 | 2412-130 | Clamp - Hose | 2 |
| 33 | 87-3500 | Hose - Air Cleaner | 1 |
| 36 | 3296-29 | Nut - Lock | 2 |
| 37 | 3253-3 | Washer - Lock | 1 |
| 38 | 87-5070 | Pulley - Crankshaft | 1 |
| 39 | 65-5390 | Washer - Flat | 4 |
| 40 | 66-3160 | Screw - Cap Hex. Hd. | 4 |
| 41 | 43-4300 | Trim | 2 |
| 42 | 322-2 | Screw - Cap Hex. Hd. | 1 |
| 43 | 2412-10 | Clamp - R | 1 |
| 44 | 32128-20 | Nut - Flange Lock | 1 |
| 45 | 63-6940 | Hose - Fuel | 1 |
| 46 | 75-4701 | Hose - Fuel | 1 |
| 47 | 2412-108 | Clamp - Hose | 2 |
| 48 | 87-8640 | Washer - Flat | 1 |
| 49 | 66-3160 | Screw - Cap Hex. Hd. | 1 |
| 50 | 3290-357 | Nut - Flange Lock | 2 |
| 51 | 75-6880 | Spark Arrestor (Optional) (Incl. Ref. #52) | 1 |
| 52 | 32144-42 | Screw - Spark Arrestor (Optional) | 1 |
| 53 | 87-1510 | Muffler & Tailpipe | 1 |
| 54 | 92-2044 | Gasket - Exhaust | 1 |
| 55 | 323-29 | Screw - Cap Hex. Hd. | 2 |

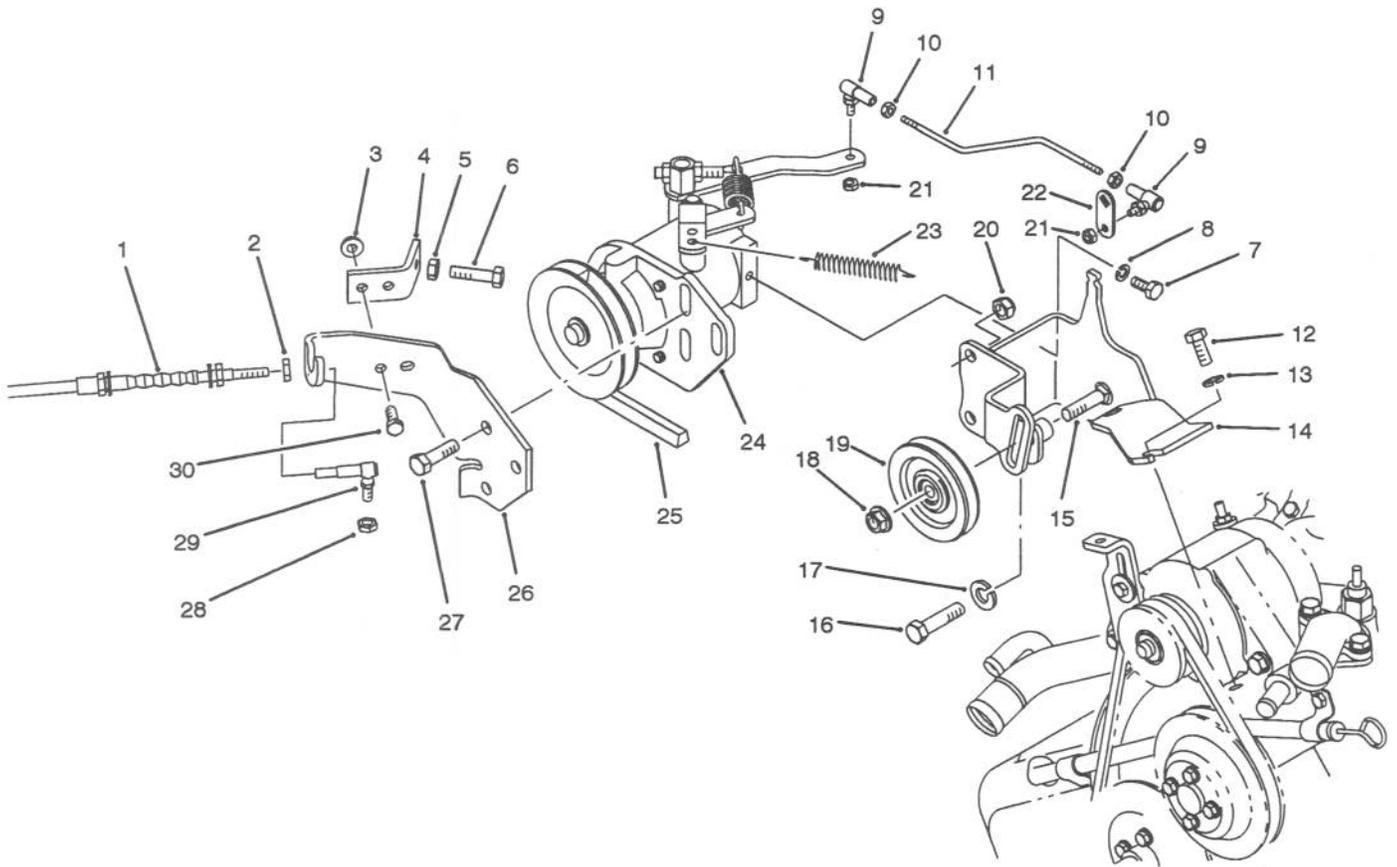


T-1605

GOVERNOR ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|--|----------|
| 1 | 87-7520 | Accelerator Cable Assembly (Incl. Ref. #2) | 1 |
| 2 | 3220-1 | Nut - Jam | 1 |
| 3 | 32128-33 | Nut - Flange | 2 |
| 4 | 87-4770 | Bracket - High Idle Stop | 1 |
| 5 | 3220-2 | Nut - Jam | 1 |
| 6 | 3210-9 | Screw - Cap Hex. Hd. | 1 |
| 7 | 321-3 | Screw - Cap Hex. Hd. | 1 |
| 8 | 3253-3 | Washer - Lock | 1 |
| 9 | 21-5640 | Joint - Ball | 2 |
| 10 | 3219-14 | Nut - Jam | 2 |
| 11 | 87-4210 | Rod - Linkage | 1 |
| 12 | 66-3160 | Screw - Cap Hex. Hd. | 2 |
| 13 | 3253-4 | Washer - Lock | 2 |
| 14 | 87-4750 | Bracket - Governor | 1 |
| 15 | 3231-26 | Bolt - Carriage | 1 |


| Ref. No. | Part No. | Description | No. Used |
|----------|----------|----------------------|----------|
| 16 | 87-3700 | Screw - Cap Hex. Hd. | 1 |
| 17 | 3253-22 | Washer - Lock | 1 |
| 18 | 3290-357 | Nut - Flange | 1 |
| 19 | 63-8140 | Pulley | 1 |
| 20 | 3296-39 | Nut - Lock | 3 |
| 21 | 3296-27 | Nut - Lock | 2 |
| 22 | 87-2400 | Lever - Throttle | 1 |
| 23 | 87-4020 | Spring - Extension | 1 |
| 24 | 87-0910 | Governor Assembly | 1 |
| 25 | 87-3200 | Belt - V | 1 |
| 26 | 87-3900 | Bracket - Cable | 1 |
| 27 | 323-7 | Screw - Cap Hex. Hd. | 3 |
| 28 | 3296-3 | Nut - Lock | 1 |
| 29 | 18-1720 | Joint - Ball | 1 |
| 30 | 321-4 | Screw - Cap Hex. Hd. | 2 |

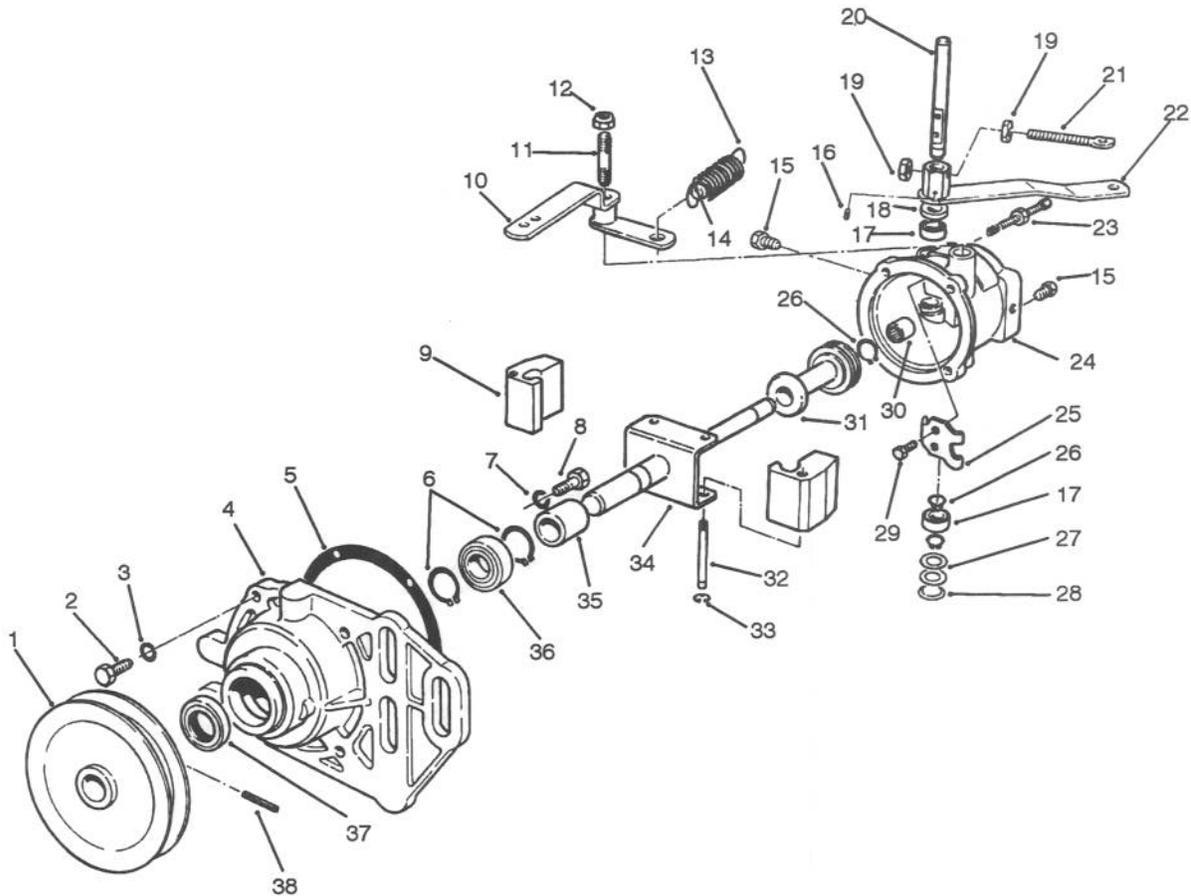

T-1606

GOVERNOR

| Ref. No. | Part No. | Description | No. Used | Ref. No. | Part No. | Description | No. Used |
|----------|----------|--------------------------|----------|----------|-----------|------------------------------------|----------|
| 1 | 87-6500 | Pulley | 1 | 21 | 87-6540 | Bolt - Eye | 1 |
| 2 | 18-5620 | Screw | 4 | 22 | 87-6530 | Assembly - Throttle Lever | 1 |
| 3 | 18-5630 | Washer - Lock | 4 | 23 | 72-5910 | Assembly - Bumper Screw | 1 |
| 4 | 87-6560 | Cover | 1 | 24 | 87-6520 | Body | 1 |
| 5 | 18-5790 | Gasket | 1 | 25 | 18-5520 | Lever - Rocker | 1 |
| 6 | 18-5640 | Ring - Retaining | 2 | 26 | 18-5540 | Retainer - Sleeve Stop | 3 |
| 7 | 18-5770 | Washer - Lock | 2 | 27 | 18-5440 | Spacer | 2 |
| 8 | 32113-14 | Screw | 2 | 28 | 18-5430 | Plug - Expansion | 1 |
| 9 | 70-2150 | Flyweight | 2 | 29 | 18-5530 | Screw & Lockwasher | 2 |
| 10 | 87-6590 | Assy. Lever & Fitting | 1 | 30 | 72-5940 | Bearing - Needle | 1 |
| 11 | 87-6580 | Stud - Lever Pivot | 1 | 31 | 70-2100 | Assembly - Thrust Sleeve & Bearing | 1 |
| 12 | 3296-5 | Nut - Lock | 1 | 32 | 18-5660 | Pin - Pivot, Flyweight | 2 |
| 13 | 87-6490 | Spring | 1 | 33 | 18-5670 | Retainer - Pivot Pin | 2 |
| 14 | 87-6550 | Pin - Forced Idle | 1 | 34 | 87-6510 | Assembly - Shaft & Yoke | 1 |
| 15 | 285-17 | Plug - Pipe | 2 | 35 | 70-2120 | Spacer | 1 |
| 16 | 18-5750 | Pin | 1 | 36 | 70-2140 | Bearing - Front | 1 |
| 17 | 18-5450 | Bearing | 2 | 37 | 18-5580 | Seal - Oil, Front | 1 |
| 18 | 71-4780 | Seal - Oil, Rocker Shaft | 1 | 38 | 32121-128 | Pin - Pulley to Shaft | 1 |
| 19 | 3219-2 | Nut | 2 | | | | |
| 20 | 72-5890 | Shaft - Rocker | 1 | | | | |

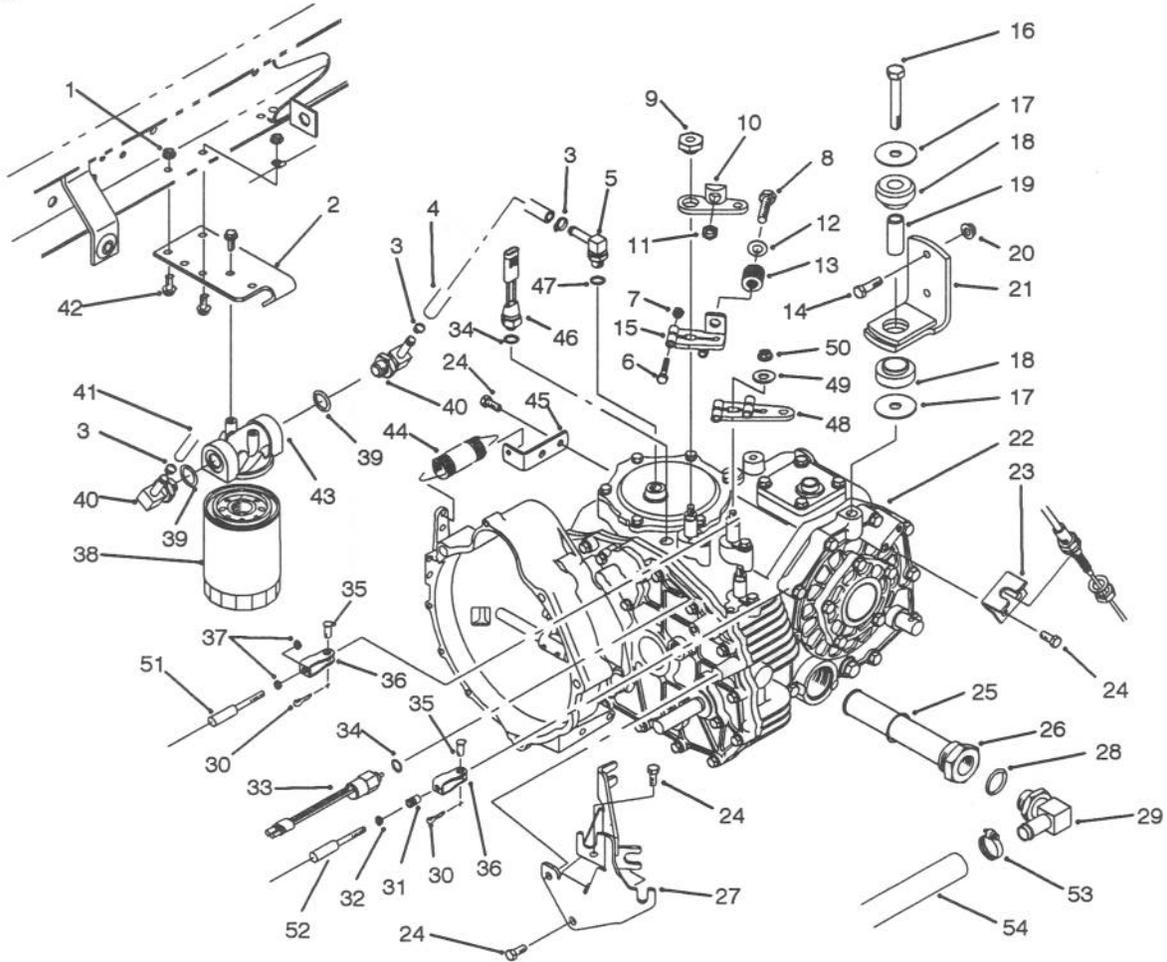


T-1607

TRANSAXLE INSTALLATION ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|--|----------|
| 1 | 32128-33 | Nut - Flange Lock | 1 |
| 2 | 87-7040 | Bracket - Oil Filter | 1 |
| 3 | 2412-36 | Clamp - Hose | 3 |
| 4 | 87-5730 | Hose - Hydraulic | 1 |
| 5 | 354-135 | Fitting - Hydraulic 90° (Incl. Ref. #47) | 1 |
| 6 | 3274-62 | Screw - Hex. Socket Hd. | 6 |
| 7 | 3296-56 | Nut - Lock | 6 |
| 8 | 323-10 | Screw - Cap Hex. Hd. | 1 |
| 9 | 87-6820 | Nut - Special | 1 |
| 10 | 87-6860 | Lever - Shift Limiter | 1 |
| 11 | 32128-21 | Nut - Lock | 1 |
| 12 | 3256-4 | Washer - Flat | 1 |
| 13 | 87-6910 | Spring - Compression | 1 |
| 14 | 323-7 | Screw - Cap Hex. Hd. | 4 |
| 15 | 87-6850 | Arm - Shift | 1 |
| 16 | 3215-1 | Screw - Cap Hex. Hd. | 2 |
| 17 | 87-5100 | Washer | 4 |
| 18 | 87-4970 | Transaxle Mount Assembly (Incl. Ref. #19) | 4 |
| 19 | | Spacer - Mount | 2 |
| 20 | 3296-39 | Nut - Flange Lock | 4 |
| 21 | 87-5800 | Bracket - Mount | 2 |
| 22 | 87-1950 | Transaxle Assembly | 1 |
| 23 | 87-4470 | Bracket | 1 |
| 24 | 66-3160 | Screw - Cap Hex. Hd. | 7 |


| Ref. No. | Part No. | Description | No. Used |
|----------|----------|---|----------|
| 25 | 237-123 | Seal - O-Ring | 1 |
| 26 | 87-3990 | Oil Strainer Assembly (Incl. Ref. #25) | 1 |
| 27 | 87-4820 | Bracket - Cable | 1 |
| 28 | 237-81 | Seal - O-Ring | 1 |
| 29 | 353-987 | Fitting - Hydraulic 90° (Incl. Ref. #28) | 1 |
| 30 | 3272-6 | Pin - Cotter | 3 |
| 31 | 32148-15 | Nut - Clinch | 1 |
| 32 | 3219-14 | Nut - Hex. | 1 |
| 33 | 87-6710 | Switch - Supervisor | 1 |
| 34 | 237-30 | O-Ring | 2 |
| 35 | 283-62 | Pin - Clevis | 3 |
| 36 | 87-2310 | Clevis - Cable | 3 |
| 37 | 3220-1 | Nut - Jam | 4 |
| 38 | 54-0110 | Element - Oil Filter | 1 |
| 39 | 237-79 | Seal - O-Ring | 2 |
| 40 | 354-134 | Fitting - Hydraulic 90° (Incl. Ref. #39) | 2 |
| 41 | 87-4920 | Hose - Hydraulic | 1 |
| 42 | 3234-4 | Screw - Hex. Flange Hd. | 4 |
| 43 | 87-5240 | Head - Oil Filter | 1 |
| 44 | 68-9950 | Spring - Extension | 1 |
| 45 | 87-7170 | Bracket - Clutch Spring | 1 |
| 46 | 72-4310 | Switch - Ball N.C. | 1 |
| 47 | 237-42 | Seal - O-Ring | 1 |

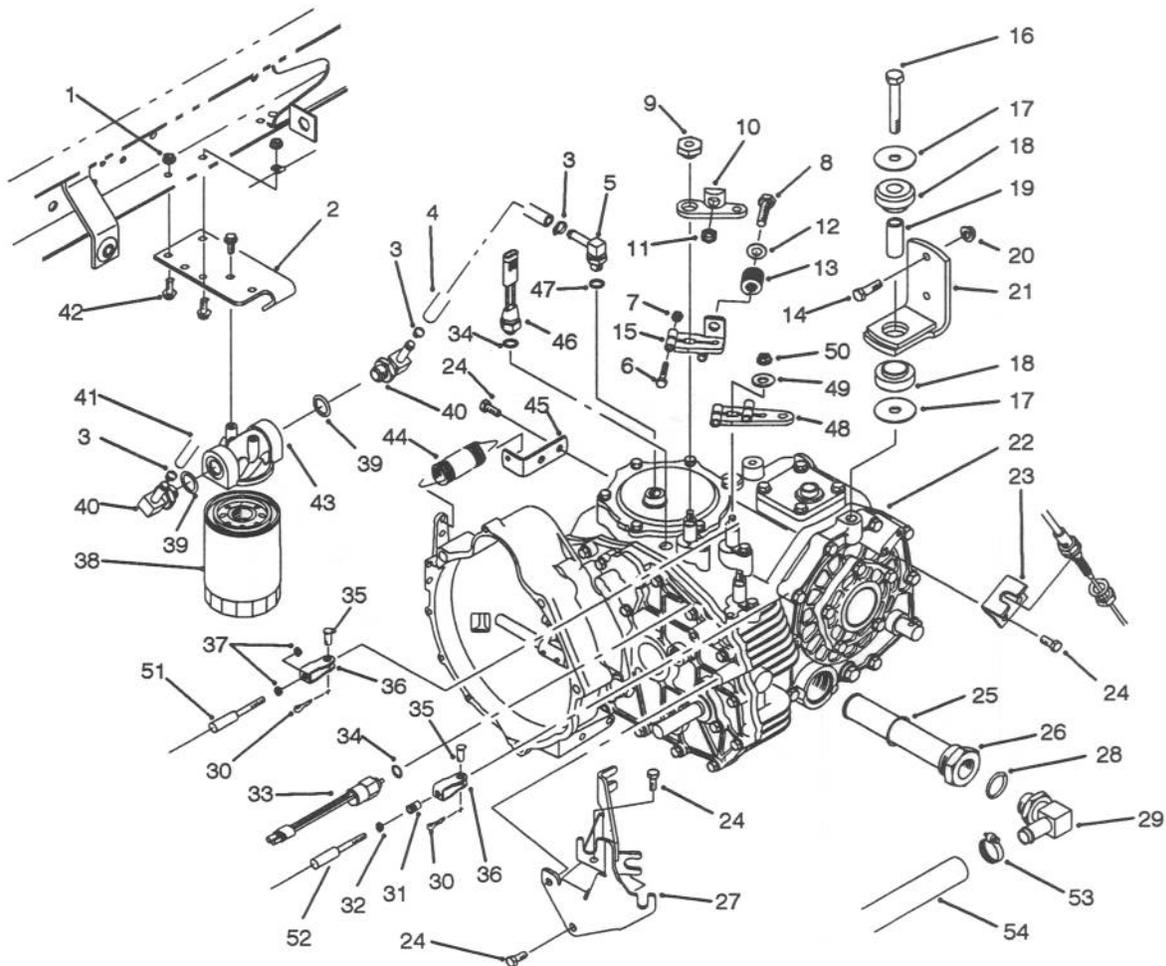

T-1607

TRANSAXLE INSTALLATION ASSEMBLY (Continued)


| Ref. No. | Part No. | Description | No. Used | Ref. No. | Part No. | Description | No. Used |
|----------|----------|--|----------|----------|----------|--|----------|
| 48 | 87-7230 | Clamp - Shift Arm | 2 | 52 | 87-4420 | Hi-Lo Cable Assembly (Incl. Ref. #32) | 1 |
| 49 | 87-8640 | Washer - Flat | 2 | 53 | 2412-34 | Clamp - Hose | 1 |
| 50 | 48-9510 | Nut - Lock | 2 | 54 | 87-3670 | Hose - Hydraulic | 1 |
| 51 | 87-4260 | Shift Cable Assembly (Incl. Ref. #37) | 2 | | | | |

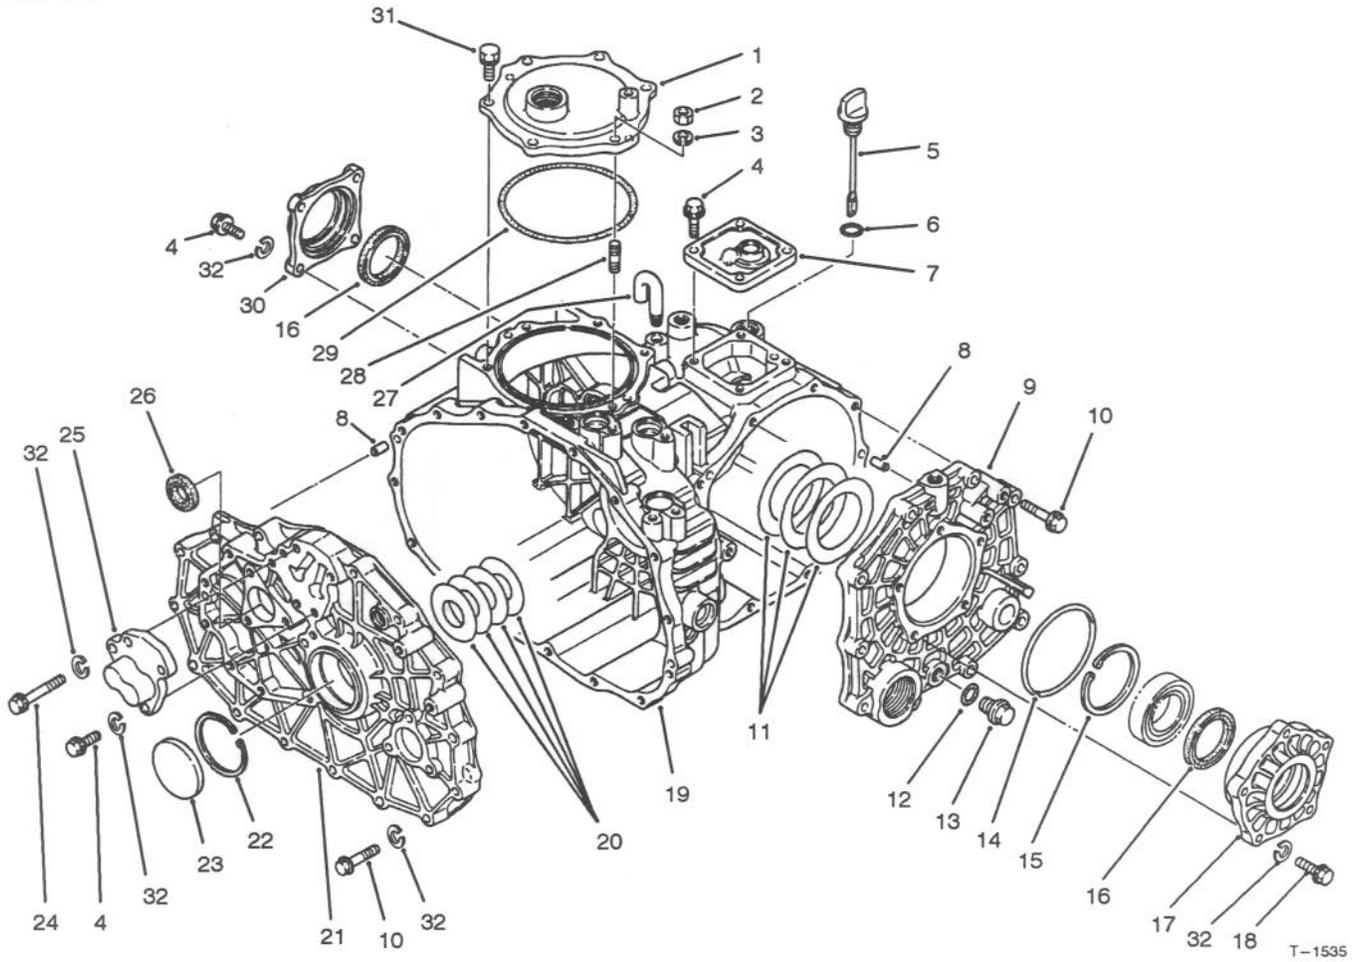

TRANSAXLE CASE ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|---|----------|
| 1 | 92-0656 | Cover - P.T.O. | 1 |
| 2 | 48-7930 | Nut - Hex. | 1 |
| 3 | 92-0762 | Washer - Lock | 1 |
| 4 | 60-6750 | Screw - Cap Hex. Hd. | 11 |
| 5 | 92-0662 | Cap - Oil | 1 |
| 6 | 92-0788 | O-Ring | 1 |
| 7 | 92-0652 | Cover - Upper | 1 |
| 8 | 92-0765 | Pin - Alignment | 4 |
| 9 | 92-0653 | Cover - Side | 1 |
| 10 | 42-9530 | Screw - Cap Hex. Hd. | 25 |
| 11 | 92-0809 | Shim Set | 1 |
| 12 | | O-Ring | 1 |
| 13 | 92-0773 | Drain Plug Assembly (Incl. Ref. #12) | 1 |
| 14 | 92-0789 | O-Ring | 1 |
| 15 | 92-0760 | Ring - Retaining | 1 |
| 16 | 92-0793 | Seal - Oil | 2 |

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|------------------------|----------|
| 17 | 92-0654 | Carrier - Differential | 1 |
| 18 | 48-7730 | Screw - Cap Hex. Hd. | 5 |
| 19 | 92-0651 | Case - Transaxle | 1 |
| 20 | 92-0808 | Shim Set | 1 |
| 21 | 92-0657 | Plate - Center | 1 |
| 22 | 92-0759 | Ring - Retaining | 1 |
| 23 | 92-0807 | Cap - Sealing | 1 |
| 24 | 48-7560 | Screw - Cap Hex. Hd. | 1 |
| 25 | 92-0706 | Cap - Fork Shaft | 1 |
| 26 | 92-0791 | Seal - Oil | 1 |
| 27 | 92-0743 | Breather - Air | 1 |
| 28 | 92-0804 | Stud | 1 |
| 29 | 92-0790 | O-Ring | 1 |
| 30 | 92-0655 | Cover - Seal | 1 |
| 31 | 92-0796 | Screw - Cap Hex. Hd. | 5 |
| 32 | 42-9850 | Washer - Lock | 42 |

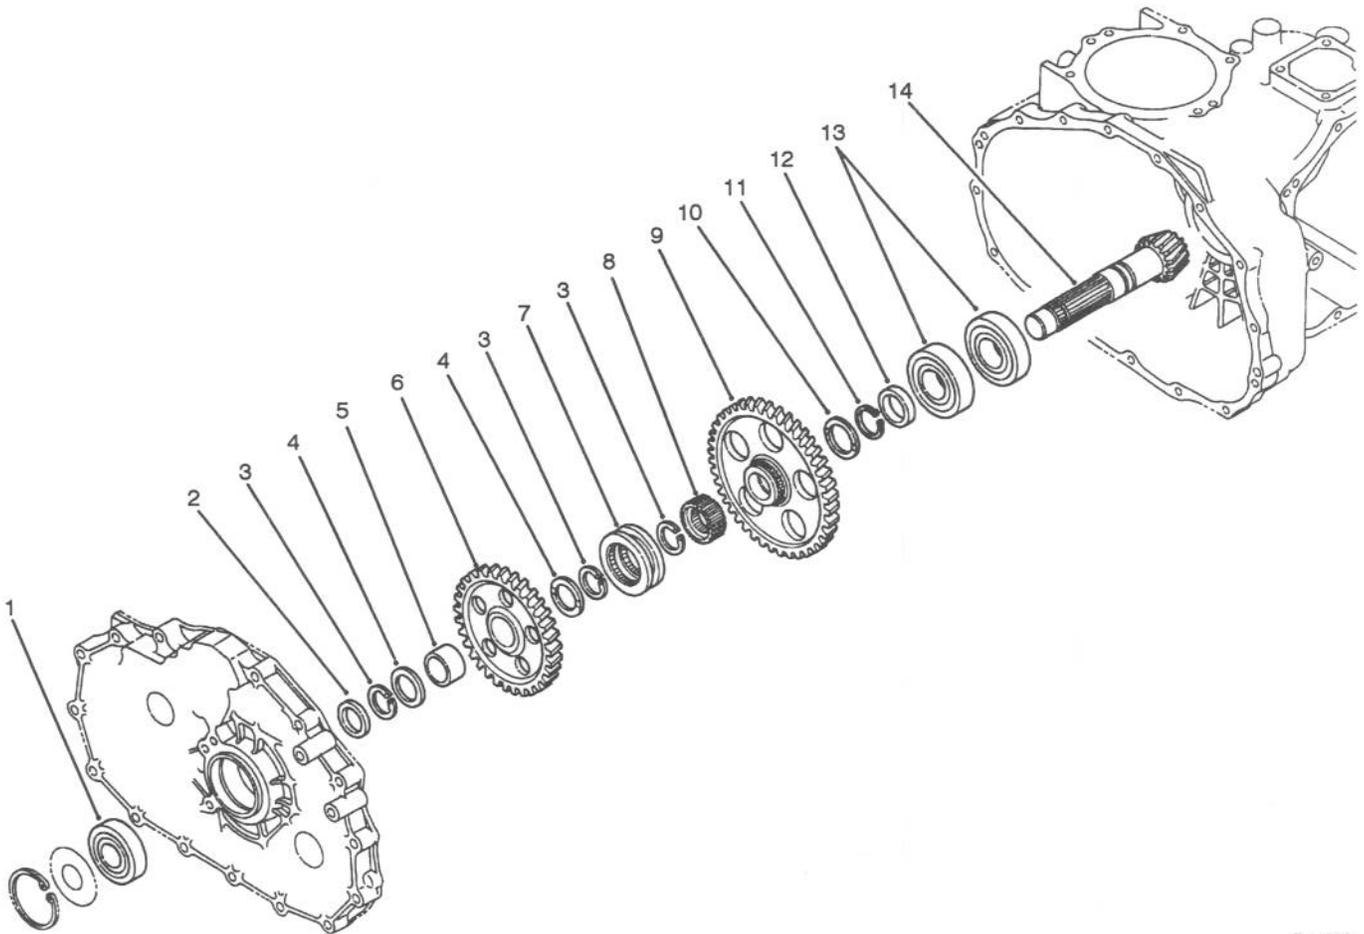


T-1536

COUNTERSHAFT ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|------------------|----------|
| 1 | 92-0712 | Bearing - Ball | 1 |
| 2 | 92-0716 | Collar | 1 |
| 3 | 92-0764 | Ring - Retaining | 3 |
| 4 | 92-0711 | Washer - Thrust | 2 |
| 5 | 92-0783 | Sleeve - Inner | 1 |
| 6 | 92-0715 | Gear - 49T | 1 |
| 7 | 92-0718 | Shifter - Hi-Lo | 1 |
| 8 | 92-0719 | Collar - Spline | 1 |

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|---|----------|
| 9 | 92-0717 | Gear - 71T | 1 |
| 10 | 92-0741 | Washer - Thrust | 1 |
| 11 | 92-0755 | Ring - Retaining | 1 |
| 12 | 92-0713 | Collar | 1 |
| 13 | 92-0714 | Bearing - Ball | 2 |
| 14 | 92-0710 | Counter Shaft Assembly (Incl. Ring Gear) | 1 |

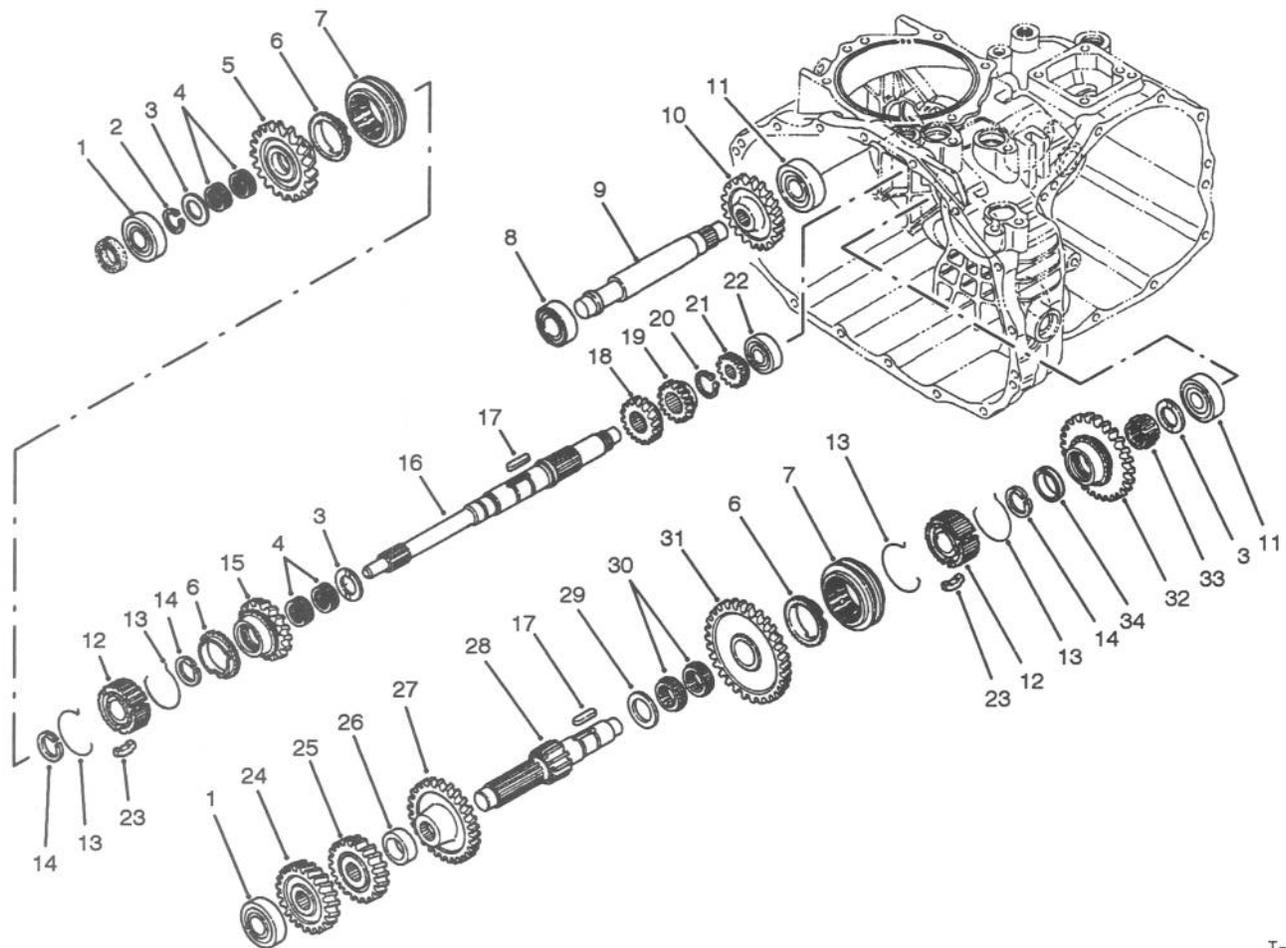


T-1533

TRANSAXLE GEAR SHAFTS ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|-----------------------|----------|
| 1 | 251-8 | Bearing - Ball | 2 |
| 2 | 92-0753 | Ring - Retaining | 1 |
| 3 | 92-0740 | Washer - Thrust | 3 |
| 4 | 92-0781 | Bearing - Needle | 4 |
| 5 | 92-0670 | Gear - 29T | 1 |
| 6 | 92-0667 | Ring - Synchro | 3 |
| 7 | 92-0668 | Shifter - Synchro | 2 |
| 8 | 251-346 | Bearing - Ball | 1 |
| 9 | 92-0683 | Shaft - Reverse Idler | 1 |
| 10 | 92-0684 | Gear - 33T | 1 |
| 11 | 92-0778 | Bearing - Ball | 2 |
| 12 | 92-0664 | Hub - Synchro | 2 |
| 13 | 92-0666 | Spring - Synchro | 4 |
| 14 | 92-0763 | Ring - Retaining | 3 |
| 15 | 92-0671 | Gear - 22T | 1 |
| 16 | 92-0663 | Shaft - Main | 1 |
| 17 | 92-0772 | Key | 2 |

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|-------------------|----------|
| 18 | 92-0687 | Gear - 16T | 1 |
| 19 | 92-0672 | Gear - 18T | 1 |
| 20 | 92-0754 | Ring - Retaining | 1 |
| 21 | 92-0673 | Gear - 14T | 1 |
| 22 | 92-0650 | Bearing - Ball | 1 |
| 23 | 92-0665 | Key - Synchro | 6 |
| 24 | 92-0675 | Gear - 25T | 1 |
| 25 | 92-0679 | Gear - 23T | 1 |
| 26 | 92-0680 | Collar | 1 |
| 27 | 92-0676 | Gear - 32T | 1 |
| 28 | 92-0674 | Shaft - Reduction | 1 |
| 29 | 92-0682 | Washer - Thrust | 1 |
| 30 | 92-0681 | Bearing - Needle | 2 |
| 31 | 92-0677 | Gear - 49T | 1 |
| 32 | 92-0678 | Gear - 40T | 1 |
| 33 | 92-0782 | Bearing - Needle | 1 |
| 34 | 92-0815 | Collar | 1 |

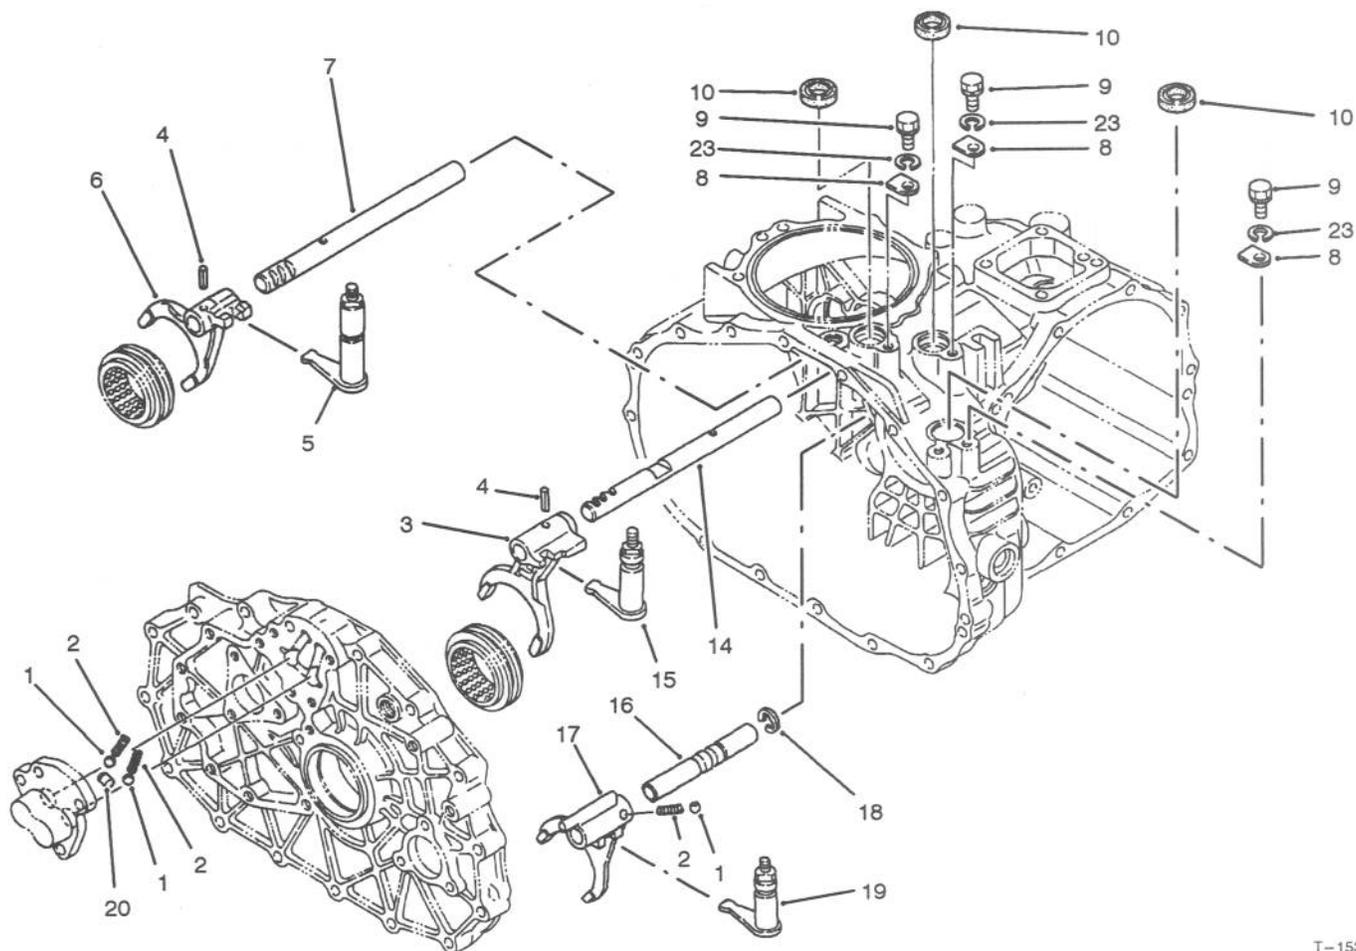


T-1530

SHIFT FORK ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|----------------------|----------|
| 1 | 92-0785 | Ball | 3 |
| 2 | 92-0731 | Spring - Compression | 3 |
| 3 | 92-0700 | Fork - Shift R-1 | 1 |
| 4 | 92-0769 | Pin - Spring | 2 |
| 5 | 92-0703 | Arm - Shift Fork 2-3 | 1 |
| 6 | 92-0701 | Fork - Shift 2-3 | 1 |
| 7 | 92-0699 | Shaft - Fork 2-3 | 1 |
| 8 | 92-0732 | Plate - Keeper | 3 |
| 9 | 48-7700 | Screw - Cap Hex. Hd. | 3 |


| Ref. No. | Part No. | Description | No. Used |
|----------|----------|------------------------|----------|
| 10 | 92-0729 | Seal - Oil | 3 |
| 14 | 92-0698 | Shaft - Fork R-1 | 1 |
| 15 | 92-0702 | Arm - Shift Fork R-1 | 1 |
| 16 | 92-0708 | Shaft - Fork Hi-Lo | 1 |
| 17 | 92-0709 | Fork - Shift Hi-Lo | 1 |
| 18 | 92-0761 | Ring - Retaining | 1 |
| 19 | 92-0704 | Arm - Shift Fork Hi-Lo | 1 |
| 20 | 92-0705 | Lock - Spindle | 1 |
| 23 | 42-9850 | Washer - Lock | 3 |

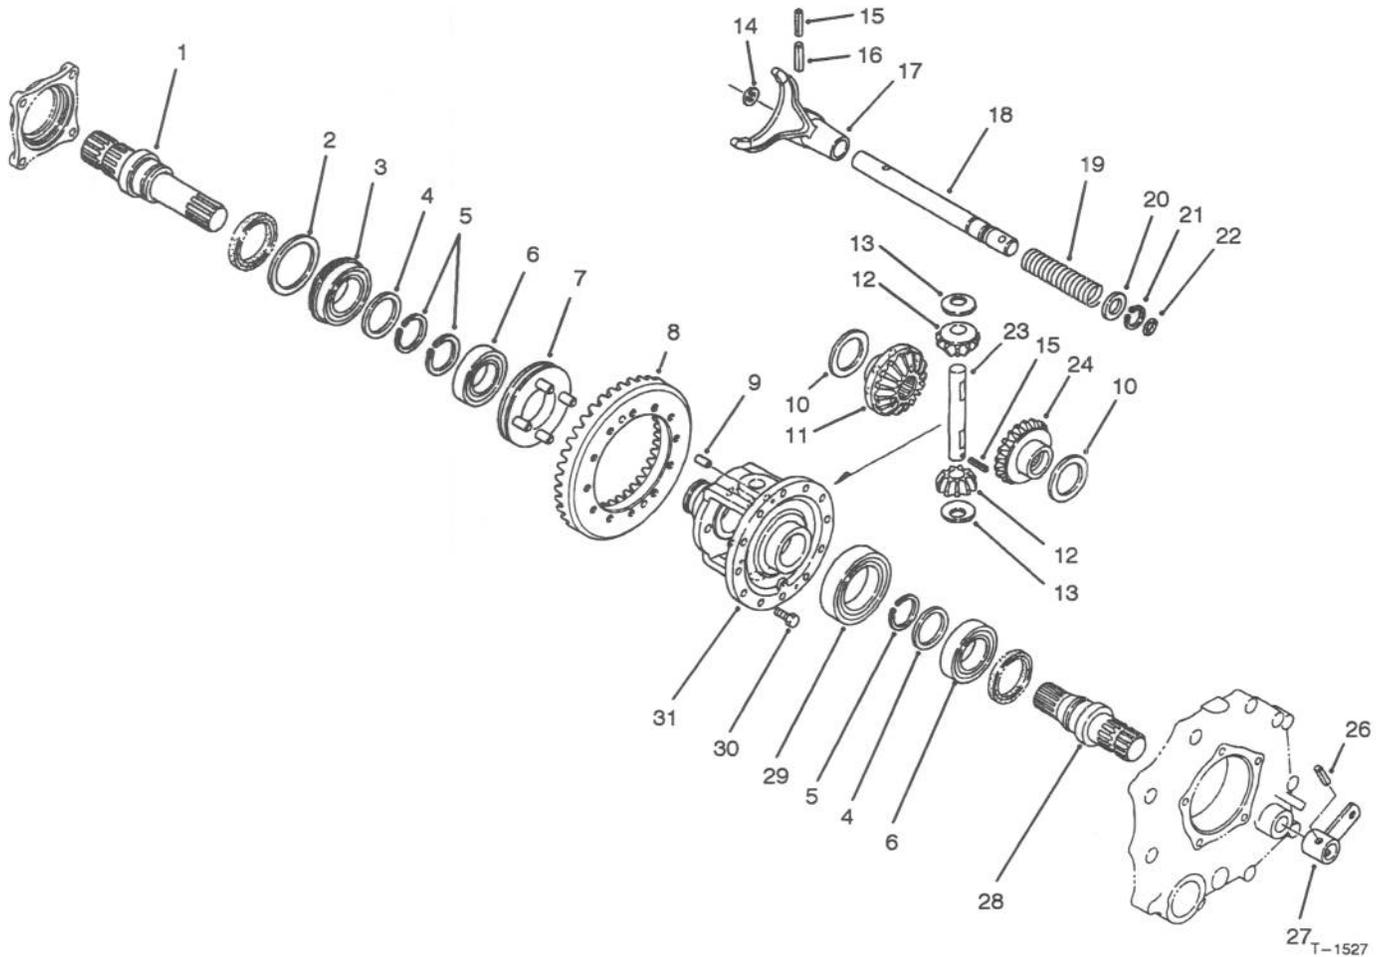

DIFFERENTIAL GEAR ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|---|----------|
| 1 | 92-0726 | Shaft - Axle R.H. | 1 |
| 2 | 92-0728 | Washer | 1 |
| 3 | 92-0780 | Bearing - Ball | 1 |
| 4 | 92-0727 | Washer | 2 |
| 5 | 92-0756 | Ring - Retaining | 3 |
| 6 | 92-0775 | Bearing - Ball | 2 |
| 7 | 92-0730 | Slider - Differential Lock | 1 |
| 8 | 92-0710 | Ring Gear Assembly (Incl. Counter Shaft) | 1 |
| 9 | 92-0765 | Pin - Alignment | 2 |
| 10 | 92-0747 | Washer - Thrust | 2 |
| 11 | 92-0746 | Gear - Side R.H. | 1 |
| 12 | 92-0748 | Gear - Pinion | 2 |
| 13 | 92-0750 | Washer | 2 |
| 14 | 92-0744 | Washer | 1 |
| 15 | 92-0768 | Pin - Spring | 2 |

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|--------------------------|----------|
| 16 | 92-0771 | Pin - Spring | 1 |
| 17 | 92-0721 | Fork - Differential Lock | 1 |
| 18 | 92-0722 | Shaft - Lock Fork | 1 |
| 19 | 92-0723 | Spring - Compression | 1 |
| 20 | 92-0733 | Washer | 1 |
| 21 | 92-0753 | Ring - Retaining | 1 |
| 22 | 92-0787 | O-Ring | 1 |
| 23 | 92-0749 | Shaft - Pinion | 1 |
| 24 | 92-0745 | Gear - Side L.H. | 1 |
| 26 | 92-0770 | Pin - Spring | 1 |
| 27 | 92-0724 | Arm - Differential Lock | 1 |
| 28 | 92-0725 | Shaft - Axle L.H. | 1 |
| 29 | 92-0776 | Bearing - Ball | 1 |
| 30 | 92-0803 | Screw - Hex. Flange Hd. | 12 |
| 31 | 92-0720 | Case - Differential | 1 |

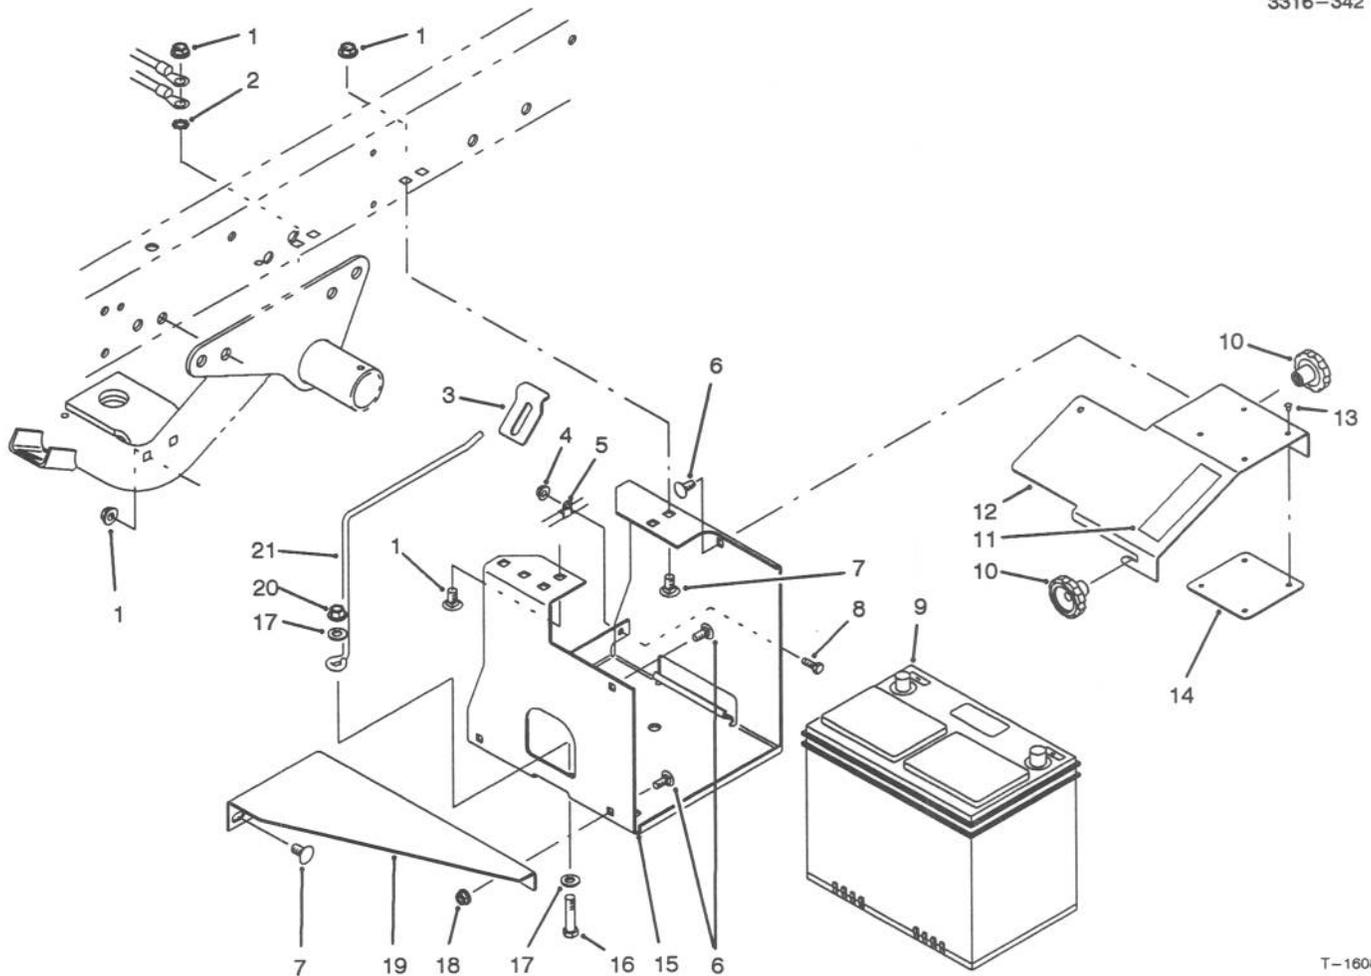


T-1608

BATTERY MOUNT ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|-----------------------|----------|
| 1 | 3290-357 | Nut - Flange Lock | 6 |
| 2 | 3255-9 | Washer - Lock ETLW | 1 |
| 3 | 87-7610 | Tab - Battery Support | 1 |
| 4 | 32128-33 | Nut - Flange Lock | 1 |
| 5 | 2412-89 | Clamp - R | 1 |
| 6 | 3230-23 | Bolt - Carriage | 4 |
| 7 | 3231-21 | Bolt - Carriage | 6 |
| 8 | 321-4 | Screw - Cap Hex. Hd. | 1 |
| 9 | 55-7290 | Battery | 1 |
| 10 | 19-4050 | Knob | 2 |
| 11 | 36-3400 | Decal - No Step | 1 |

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|------------------------|----------|
| 12 | 87-5130 | Cover - Battery Base | 1 |
| 13 | 3269-27 | Rivet - Plastic | 4 |
| 14 | 87-7620 | Shield - Plastic | 1 |
| 15 | 87-5120 | Bracket - Battery Base | 1 |
| 16 | 323-9 | Screw - Cap Hex. Hd. | 1 |
| 17 | 3256-24 | Washer - Flat | 2 |
| 18 | 32128-20 | Nut - Flange Lock | 2 |
| 19 | 87-5110 | Support - Lower | 1 |
| 20 | 3296-39 | Nut - Flange Lock | 1 |
| 21 | 87-7600 | Rod - Battery Support | 1 |

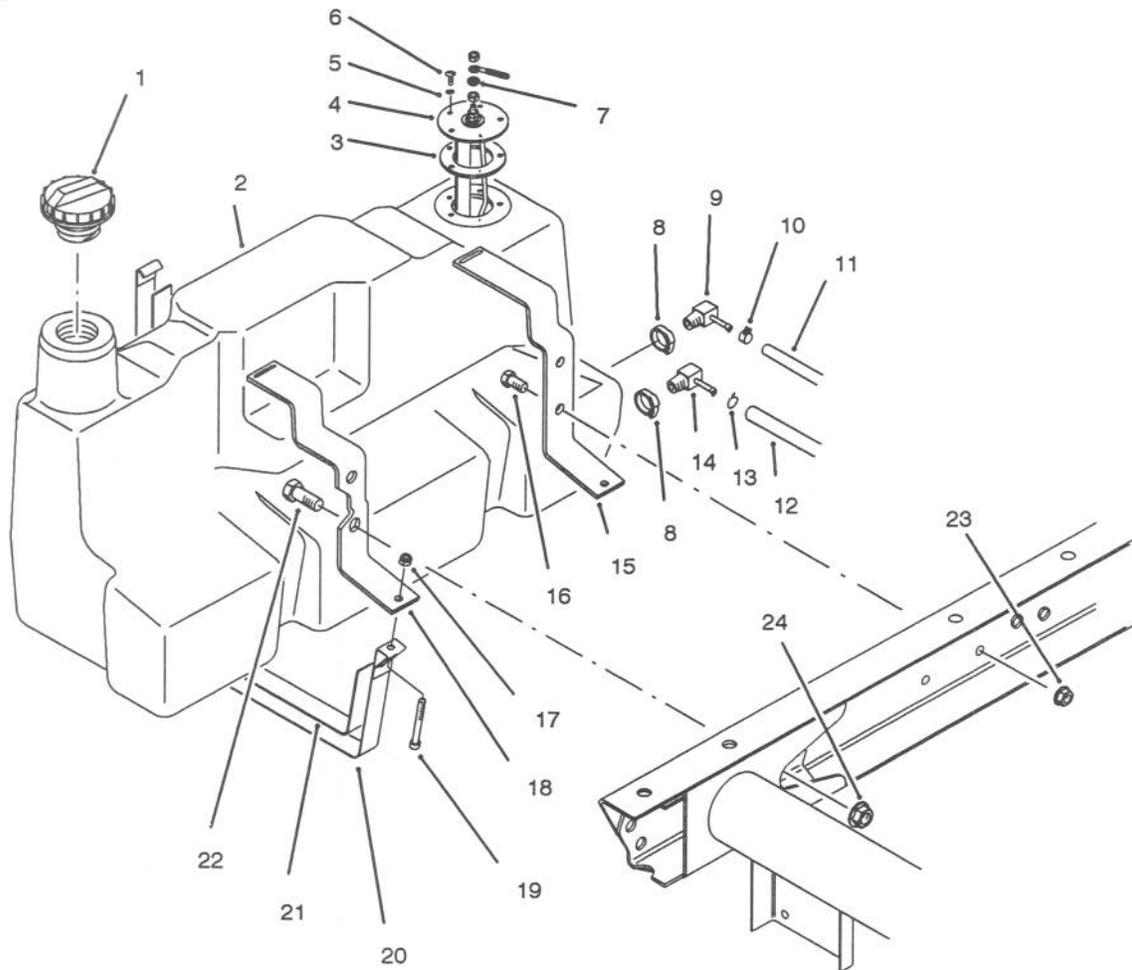


T-1609

FUEL TANK ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|---|----------|
| 1 | 70-8631 | Cap - Fuel | 1 |
| 2 | 87-0650 | Fuel Tank Assembly (Incl. Ref. #8, 9 & 14) | 1 |
| 3 | 62-7650 | Gasket - Sending Unit | 1 |
| 4 | 63-7640 | Unit - Sending | 1 |
| 5 | 3253-15 | Washer - Lock | 5 |
| 6 | 32122-24 | Screw - Round Hd | 5 |
| 7 | 5-3637 | Washer - Flat | 1 |
| 8 | 2412-36 | Clamp | 2 |
| 9 | 76-4430 | Fitting - Fuel 90° | 1 |
| 10 | 2412-108 | Clamp - Hose | 1 |
| 11 | 75-4701 | Hose - Fuel | 1 |
| 12 | 63-9640 | Hose - Fuel | 2 |

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|--------------------------|----------|
| 13 | 92-2379 | Clamp - Hose | 1 |
| 14 | 353-781 | Fitting - Fuel 90° | 1 |
| 15 | 87-3140 | Support - Rear | 1 |
| 16 | 323-4 | Screw - Cap Hex. Hd. | 2 |
| 17 | 3296-42 | Nut - Lock | 2 |
| 18 | 87-3150 | Support - Front | 1 |
| 19 | 3274-54 | Screw - Hex. Socket Hd. | 2 |
| 20 | 87-3160 | Strap - Tank Support | 2 |
| 21 | 87-3170 | Pad - Tank Support Strap | 2 |
| 22 | 3234-38 | Screw - Cap Hex. Hd. | 2 |
| 23 | 3290-357 | Nut - Flange | 2 |
| 24 | 32128-23 | Nut - Flange | 2 |

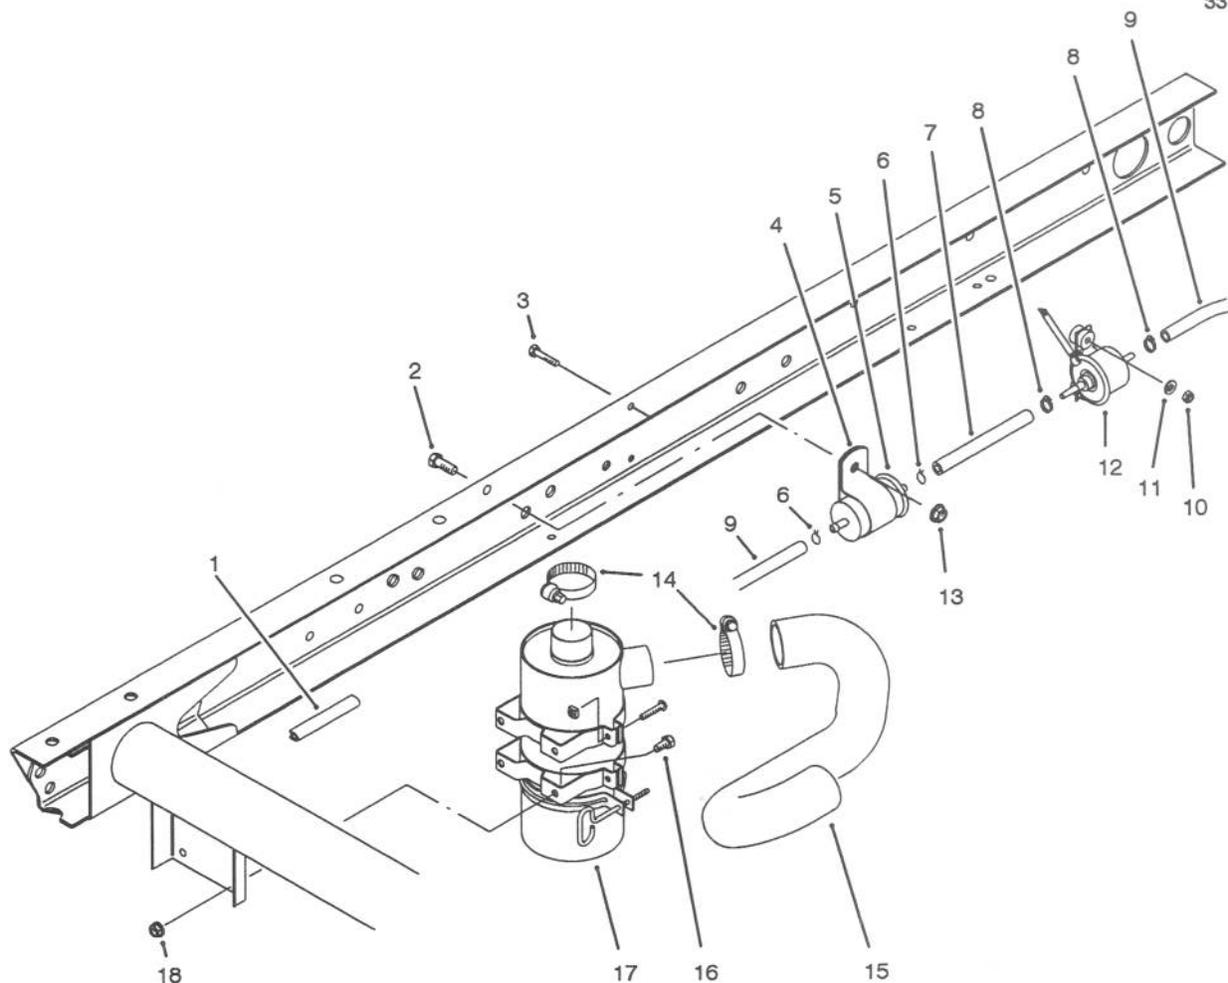


T-1738

AIR CLEANER & FUEL SUPPLY ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|----------------------|----------|
| 1 | 43-4300 | Trim | 1 |
| 2 | 323-6 | Screw - Cap Hex. Hd. | 1 |
| 3 | 48-7650 | Screw - Cap Hex. Hd. | 2 |
| 4 | 2412-96 | Clamp - R | 1 |
| 5 | 18-1520 | Filter - Fuel | 1 |
| 6 | 92-2379 | Clamp - Hose | 2 |
| 7 | 71-2690 | Hose - Fuel | 1 |
| 8 | 2412-108 | Clamp - Hose | 2 |
| 9 | 47-2964 | Hose - Fuel | 1 |

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|----------------------|----------|
| 10 | 49-7810 | Nut - Lock | 2 |
| 11 | 3256-67 | Washer - Flat | 2 |
| 12 | 92-2007 | Pump - Fuel | 1 |
| 13 | 3290-357 | Nut - Flange | 1 |
| 14 | 2412-92 | Clamp - Hose | 2 |
| 15 | 87-3350 | Hose - Air Cleaner | 1 |
| 16 | 322-2 | Screw - Cap Hex. Hd. | 4 |
| 17 | 87-8300 | Air Cleaner Assembly | 1 |
| 18 | 32128-20 | Nut - Flange | 4 |

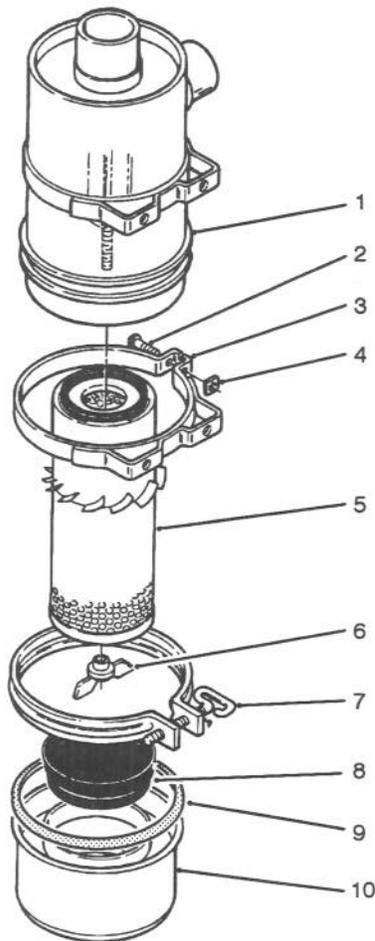


T-1349

AIR CLEANER ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|--------------------------------------|----------|
| 1 | | Body | 1 |
| 2 | 3258-19 | Screw - Round Head | 2 |
| 3 | 33-1350 | Band Assembly (Incl. Ref. #2 & 4) | 2 |
| 4 | 32107-11 | Nut - Square | 2 |
| 5 | 33-1300 | Assembly - Element | 1 |
| 6 | 33-1330 | Assembly - Nut | 1 |

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|---|----------|
| 7 | 33-1340 | Clamp Assembly | 1 |
| 8 | 33-1310 | Baffle | 1 |
| 9 | 87-7560 | Seal - Air Cleaner | 1 |
| 10 | 33-1320 | Cup | 1 |
| * | 87-8300 | Air Cleaner (Complete) (Incl. Ref. #1, 5-10) | 1 |

*Not Illustrated

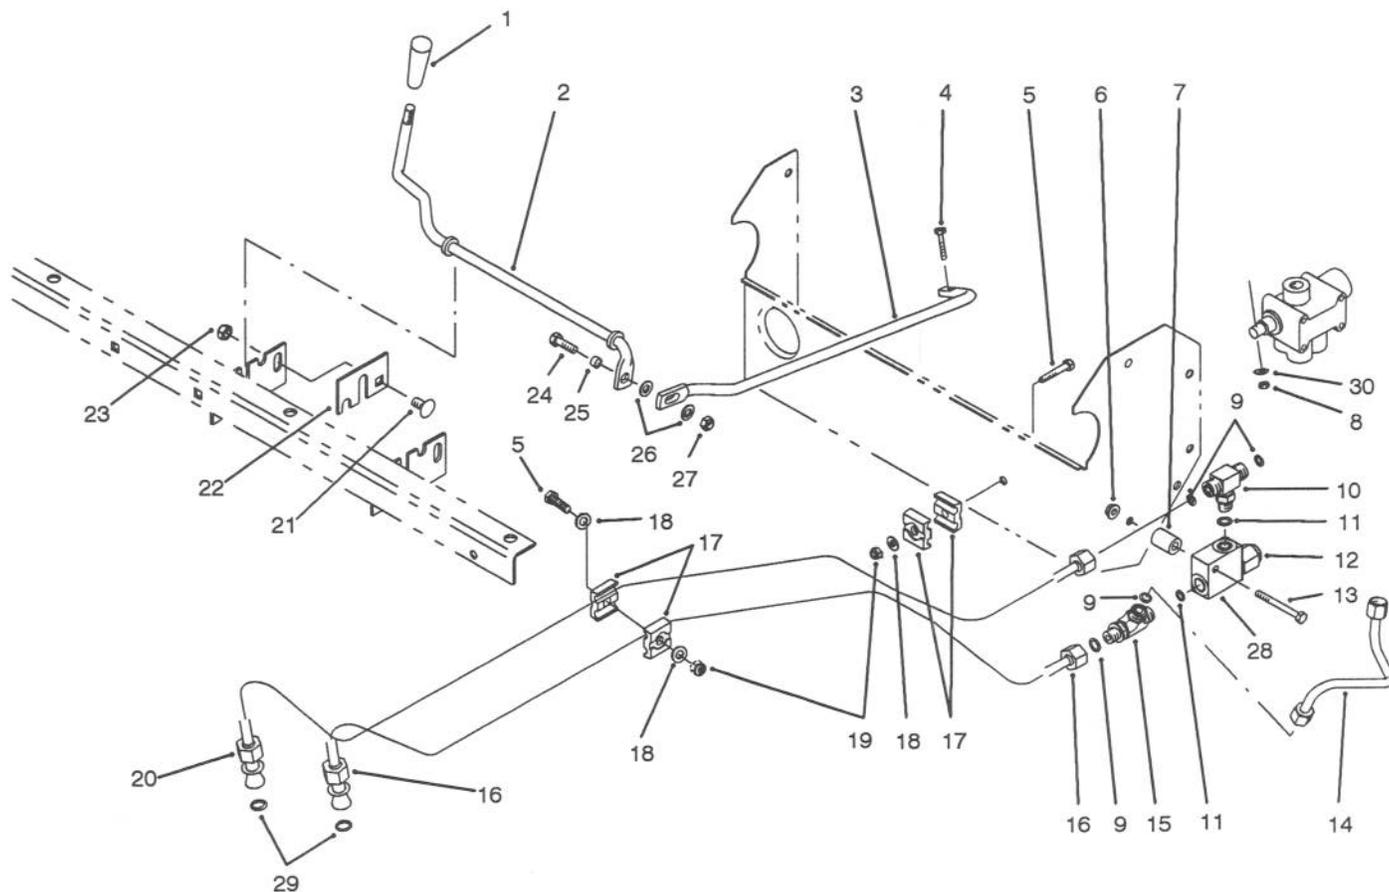


T-1610

LIFT VALVE LINKAGE ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|---|----------|
| 1 | 233-39 | Knob | 1 |
| 2 | 87-4500 | Rod - Pivot | 1 |
| 3 | 87-4510 | Rod - Connecting | 1 |
| 4 | 87-5150 | Screw - Cap Hex. Hd. | 1 |
| 5 | 321-9 | Screw - Cap Hex. Hd. | 2 |
| 6 | 32128-33 | Nut - Flange Lock | 1 |
| 7 | 75-9610 | Spacer | 1 |
| 8 | 87-5140 | Nut - Lock | 1 |
| 9 | 237-22 | Seal - O-Ring | 4 |
| 10 | 340-94 | Fitting - Hydraulic Tee (Incl. Ref. #9 & 11) | 1 |
| 11 | 237-42 | Seal - O-Ring | 2 |
| 12 | 92-2160 | Cartridge - Relief Valve | 1 |
| 13 | 321-15 | Screw - Cap Hex. Hd. | 1 |
| 14 | 87-4560 | Tube - Hydraulic | 1 |
| 15 | 340-86 | Fitting - Hydraulic Tee (Incl. Ref. #9 & 11) | 1 |
| 16 | 87-4550 | Hydraulic Tube Assembly (Incl. Ref. #29) | 1 |

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|--|----------|
| 17 | 56-7973 | Clamp - Hydraulic Tube | 4 |
| 18 | 3256-22 | Washer - Flat | 3 |
| 19 | 3296-42 | Nut - Lock | 2 |
| 20 | 87-4540 | Hydraulic Tube Assembly (Incl. Ref. #29) | 1 |
| 21 | 3231-21 | Bolt - Carriage | 2 |
| 22 | 87-4490 | Bracket - Hold-Down | 2 |
| 23 | 3296-39 | Nut - Lock | 2 |
| 24 | 322-5 | Screw - Cap Hex. Hd. | 1 |
| 25 | 87-5080 | Spacer - Connecting | 1 |
| 26 | 3256-23 | Washer - Flat | 2 |
| 27 | 3296-29 | Nut - Lock | 1 |
| 28 | 92-2161 | Body - Relief Valve | 1 |
| 29 | 39-7310 | Seal - O-Ring | 2 |
| 30 | 3256-14 | Washer - Flat | 1 |
| * | 87-3680 | Relief Valve Assembly (Incl. Ref. #12 & 28) | 1 |

*Not Illustrated

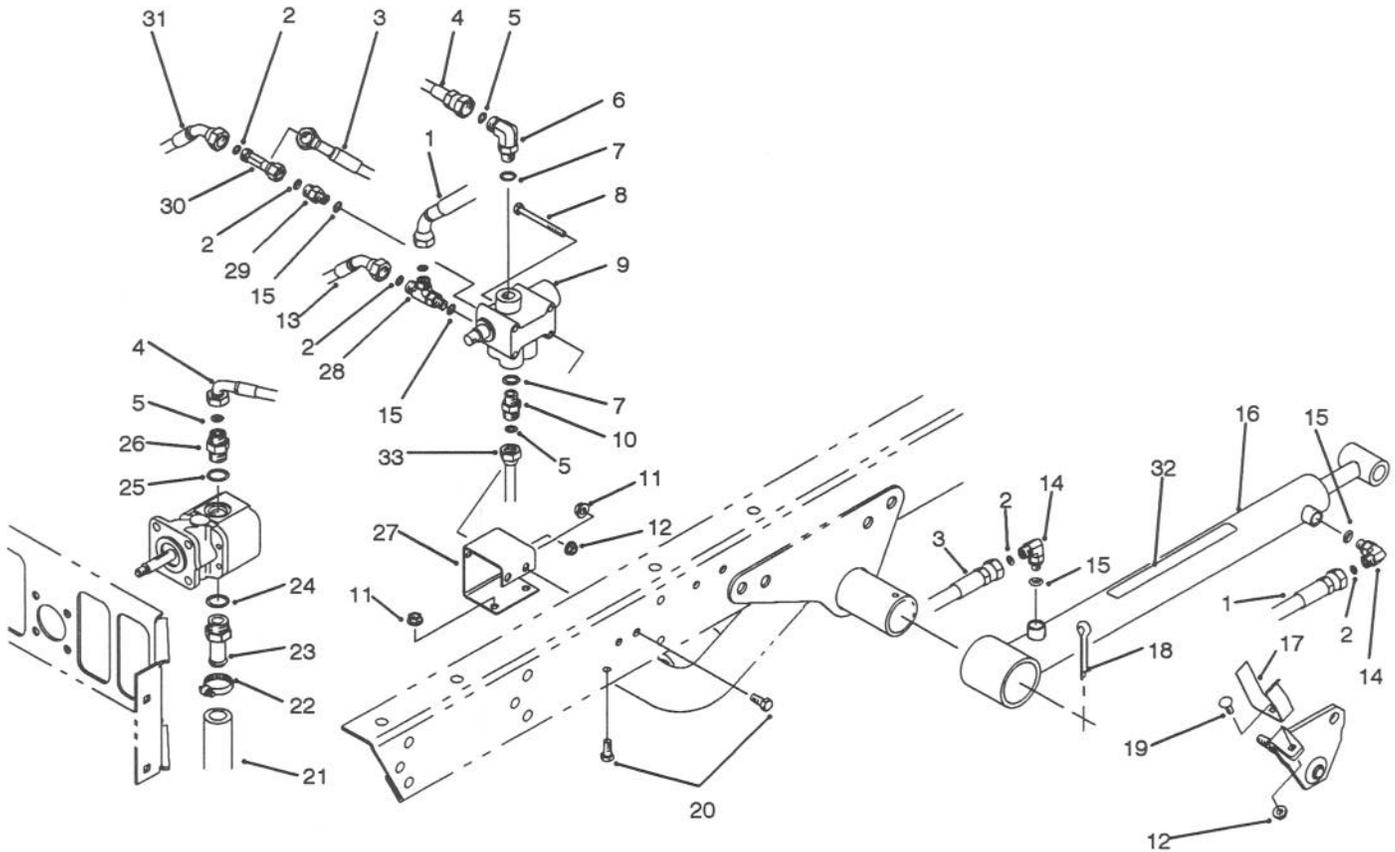


T-1611

LIFT VALVE & CYLINDER ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|---|----------|
| 1 | 92-2697 | Hose - Hydraulic | 1 |
| 2 | 237-21 | Seal - O-Ring | 6 |
| 3 | 87-4880 | Hose - Hydraulic | 1 |
| 4 | 87-4870 | Hose - Hydraulic | 1 |
| 5 | 237-22 | Seal - O-Ring | 3 |
| 6 | 340-77 | Fitting - Hydraulic 90° (Incl. Ref. #5 & 7) | 1 |
| 7 | 237-42 | Seal - O-Ring | 2 |
| 8 | 321-14 | Screw - Cap Hex. Hd. | 2 |
| 9 | 43-1950 | Valve | 1 |
| 10 | 340-2 | Fitting - Straight | 1 |
| 11 | 32128-20 | Nut - Flange Head | 4 |
| 12 | 32128-33 | Nut - Flange Head | 4 |
| 13 | 87-4910 | Hose - Hydraulic | 1 |
| 14 | 340-132 | Fitting - Hydraulic 90° (Incl. Ref. #2 & 15) | 4 |
| 15 | 237-78 | Seal - O-Ring | 4 |
| 16 | 87-7990 | Hydraulic Cylinder Assy. (Incl. Ref. #32) | 2 |
| 17 | 87-3720 | Retainer - Cylinder | 2 |
| 18 | 3272-37 | Pin - Cotter | 2 |

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|--|----------|
| 19 | 3229-25 | Screw - Carriage | 2 |
| 20 | 322-3 | Screw - Cap Hex. Hd. | 4 |
| 21 | 87-3670 | Hose - Hydraulic | 1 |
| 22 | 2412-34 | Clamp | 1 |
| 23 | 354-136 | Fitting - Hydraulic Straight (Incl. Ref. #24) | 1 |
| 24 | 237-80 | Seal - O-Ring | 1 |
| 25 | 237-79 | Seal - O-Ring | 1 |
| 26 | 340-3 | Fitting - Hydraulic Straight (Incl. Ref. #5 & 25) | 1 |
| 27 | 87-4520 | Bracket - Dump Valve | 1 |
| 28 | 340-140 | Fitting - Hydraulic Tee (Incl. Ref. #2 & 15) | 1 |
| 29 | 340-92 | Fitting - Hydraulic Straight (Incl. Ref. #2 & 15) | 1 |
| 30 | 340-151 | Fitting - Hydraulic Tee (Incl. Ref. #2) | 1 |
| 31 | 87-4900 | Hose - Hydraulic | 1 |
| ‡32 | 87-7930 | Decal - Warning | 2 |
| 33 | 87-4560 | Hose - Hydraulic | 1 |

‡For different language versions of this part, see International Decal Cross Reference.

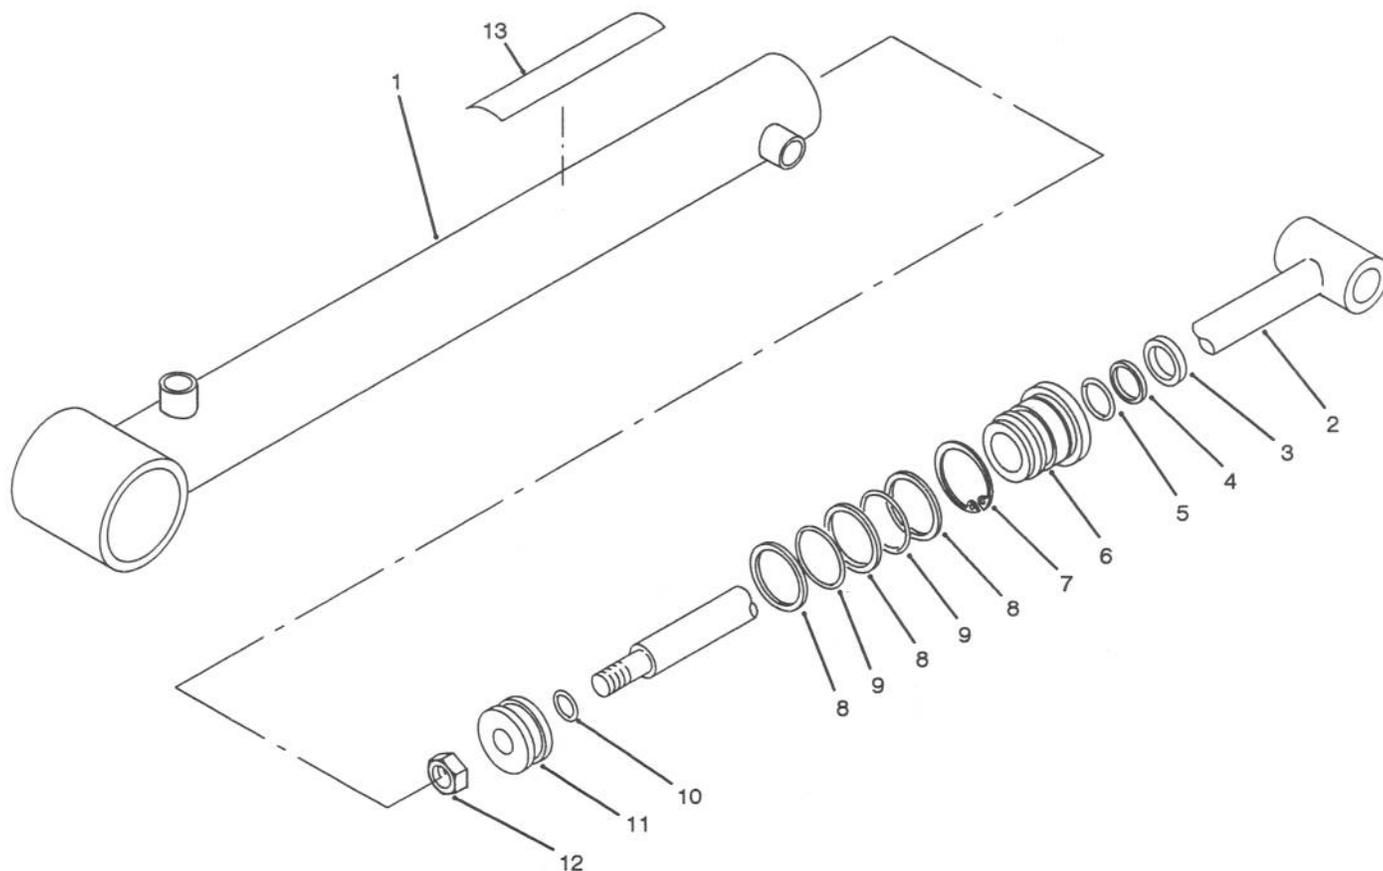


T-1612

LIFT CYLINDER 87-7990

| Ref. No. | Part No. | Description | No. Used | Ref. No. | Part No. | Description | No. Used |
|----------|----------|------------------|----------|----------|----------|--|----------|
| 1 | | Barrel Assembly | 1 | 9 | | Seal - O-Ring | 2 |
| 2 | 92-2163 | Shaft | 1 | 10 | | Seal - O-Ring | 1 |
| 3 | | Seal - Dust | 1 | 11 | 43-5150 | Piston | 1 |
| 4 | | Backup | 1 | 12 | 32152-10 | Nut | 1 |
| 5 | | Seal - O-Ring | 1 | ‡13 | 87-7930 | Decal - Warning | 1 |
| 6 | 92-2162 | Head | 1 | * | 92-2165 | Kit - Repair (Incl. Ref. #3-5 & 8-10) | 1 |
| 7 | 84-1680 | Ring - Retaining | 1 | | | | |
| 8 | | Backup | 3 | | | | |

*Not Illustrated

‡For different language versions of this part, see International Decal Cross Reference.

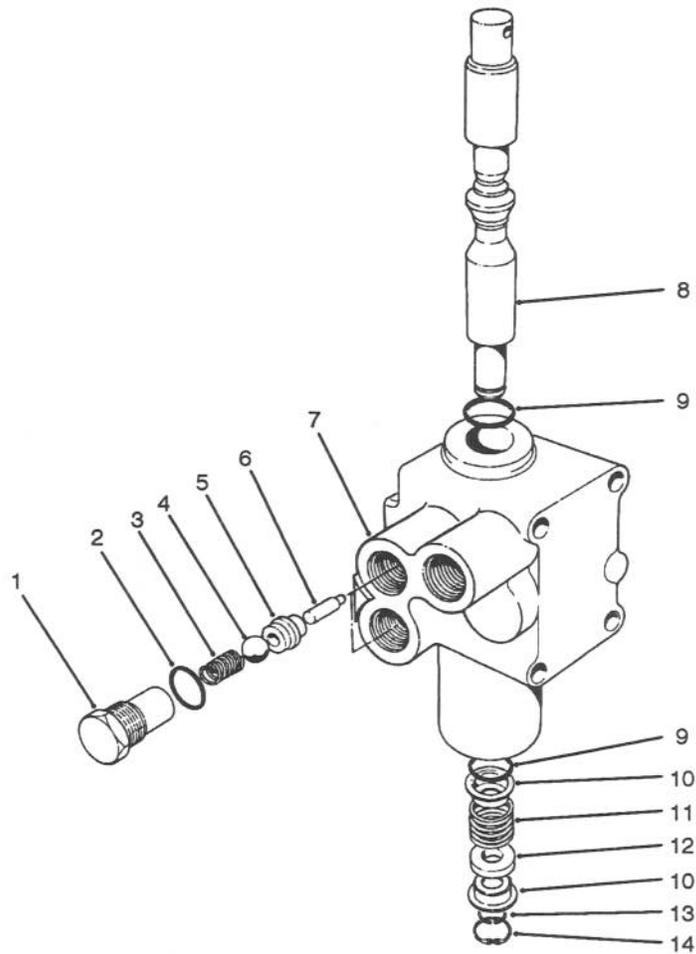


T-0280

CONTROL VALVE ASSEMBLY NO. 43-1950

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|------------------|----------|
| 1 | 22-8330 | Plug | 2 |
| 2 | 237-42 | O-Ring | 2 |
| 3 | 22-8340 | Spring | 2 |
| 4 | 22-8350 | Ball | 2 |
| 5 | 22-8370 | Seat-Check Valve | 2 |
| 6 | 22-8360 | Pin - Cam | 2 |
| 7 | | Body | 1 |

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|-------------------------|----------|
| 8 | 22-8420 | Spool | 1 |
| 9 | 22-8500 | O-Ring | 2 |
| 10 | 22-8380 | Retainer - Spring | 2 |
| 11 | 22-8410 | Spring | 1 |
| 12 | 23-3030 | Spacer | 1 |
| 13 | 22-8480 | Ring - Retaining, Spool | 1 |
| 14 | 22-8490 | Ring - Retaining | 1 |



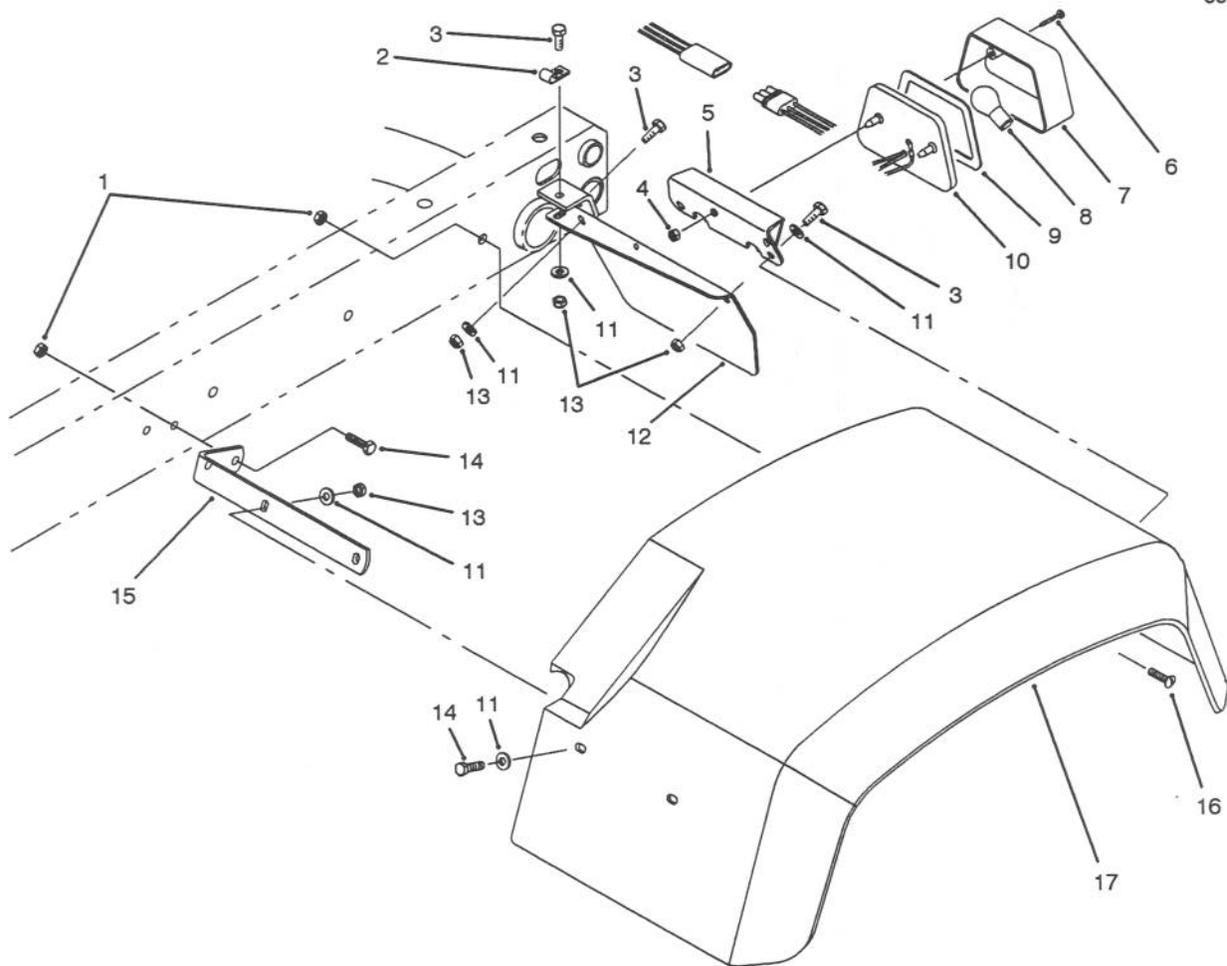


T-1613

REAR FENDER & TAIL LIGHT ASSEMBLY

| Ref. No. | Part No. | Description | No. Used | Ref. No. | Part No. | Description | No. Used |
|----------|----------|------------------------------|----------|----------|----------|--|----------|
| 1 | 3296-39 | Nut - Lock | 6 | 10 | 87-2110 | Tail Light Assembly (Incl. Ref. #6-9) | 1 |
| 2 | 2412-89 | Clamp - R | 1 | 11 | 3256-22 | Washer - Flat | 16 |
| 3 | 321-4 | Screw - Cap Hex. Hd. | 4 | 12 | 87-5750 | Plate - Tail Light LH | 1 |
| 4 | 3290-506 | Palnut | 2 | * | 87-6250 | Plate - Tail Light RH | 1 |
| 5 | 87-5770 | U-Bracket - Tail Light | 1 | 13 | 3296-42 | Nut - Lock | 16 |
| 6 | 32144-93 | Screw - Self Tapping | 2 | 14 | 321-6 | Screw - Cap Hex. Hd. | 12 |
| 7 | 87-6300 | Lens | 1 | 15 | 87-6870 | Bracket - Front | 2 |
| 8 | | Bulb (#1157 Std. 12 Volt) | 1 | 16 | 32122-16 | Screw - Truss Hd. | 6 |
| 9 | 87-6310 | Gasket | 1 | 17 | 87-6660 | Fender - Rear 24" | 2 |

*Not Illustrated

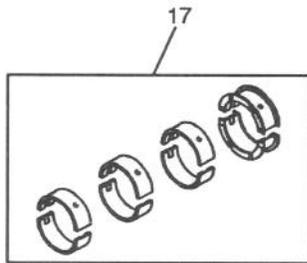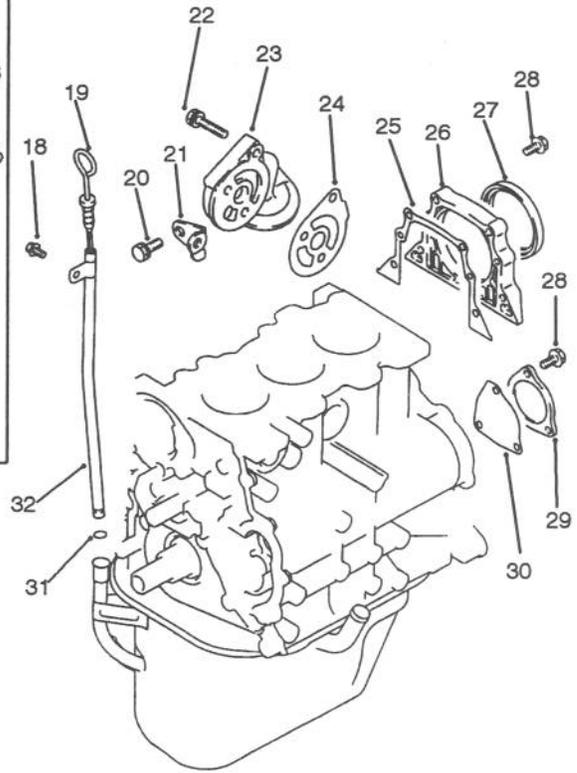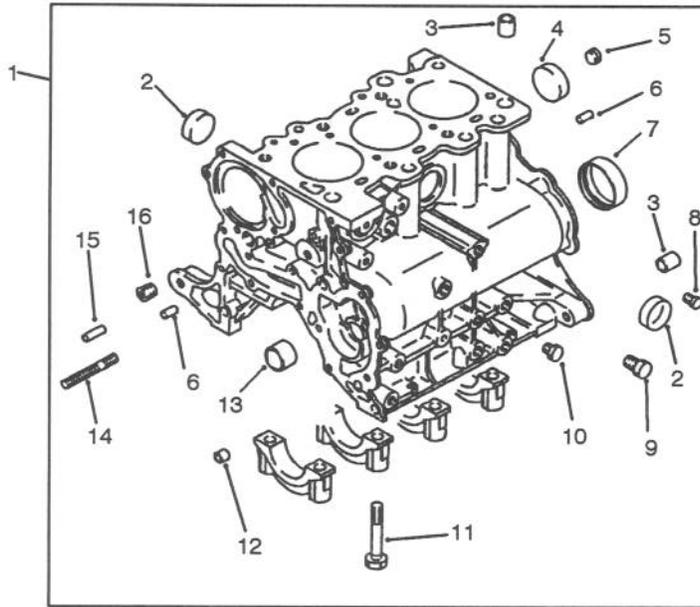


T-1631

CYLINDER BLOCK ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|--|----------|
| 1 | 92-2006 | Assembly - Crankcase (Incl. Ref. #2-16) | 1 |
| 2 | 92-2151 | Cap - Sealing | 3 |
| 3 | 92-2152 | Bushing | 4 |
| 4 | 92-1994 | Cap - Sealing | 1 |
| 5 | 92-1935 | Plug - Taper | 1 |
| 6 | 92-2148 | Pin - Dowel | 1 |
| 7 | 92-1982 | Bearing - Rear | 1 |
| 8 | 92-1902 | Plug - Taper | 1 |
| 9 | 56-0100 | Plug - Taper | 1 |
| 10 | 92-1910 | Plug - Taper | 1 |
| 11 | 67-2250 | Bolt | 8 |
| 12 | 67-2360 | Bushing | 4 |
| 13 | 92-1981 | Bearing - Front | 1 |
| 14 | 92-5107 | Stud | 1 |
| 15 | 92-1958 | Pin - Dowel | 1 |
| 16 | 67-2390 | Plug - Taper | 1 |

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|-------------------------|----------|
| 17 | 92-1956 | Bearing - Set, Main | 1 |
| 18 | 92-5112 | Bolt - Flange Head | 1 |
| 19 | 92-5110 | Gauge - Oil Level | 1 |
| 20 | 92-2144 | Bolt | 2 |
| 21 | 92-5109 | Stay - Oil Filter | 1 |
| 22 | 92-2143 | Bolt | 3 |
| 23 | 92-2012 | Bracket - Oil Filter | 1 |
| 24 | 92-5108 | Gasket - Bracket | 1 |
| 25 | 92-1987 | Gasket | 1 |
| 26 | 92-2045 | Housing - Seal, Oil | 1 |
| 27 | 92-1952 | Seal - Oil | 1 |
| 28 | 92-2131 | Bolt - Flange Head | 7 |
| 29 | 92-1945 | Cover - Rear | 1 |
| 30 | 92-1991 | Gasket | 1 |
| 31 | 92-1925 | O-Ring | 1 |
| 32 | 92-5111 | Guide - Oil Level Gauge | 1 |

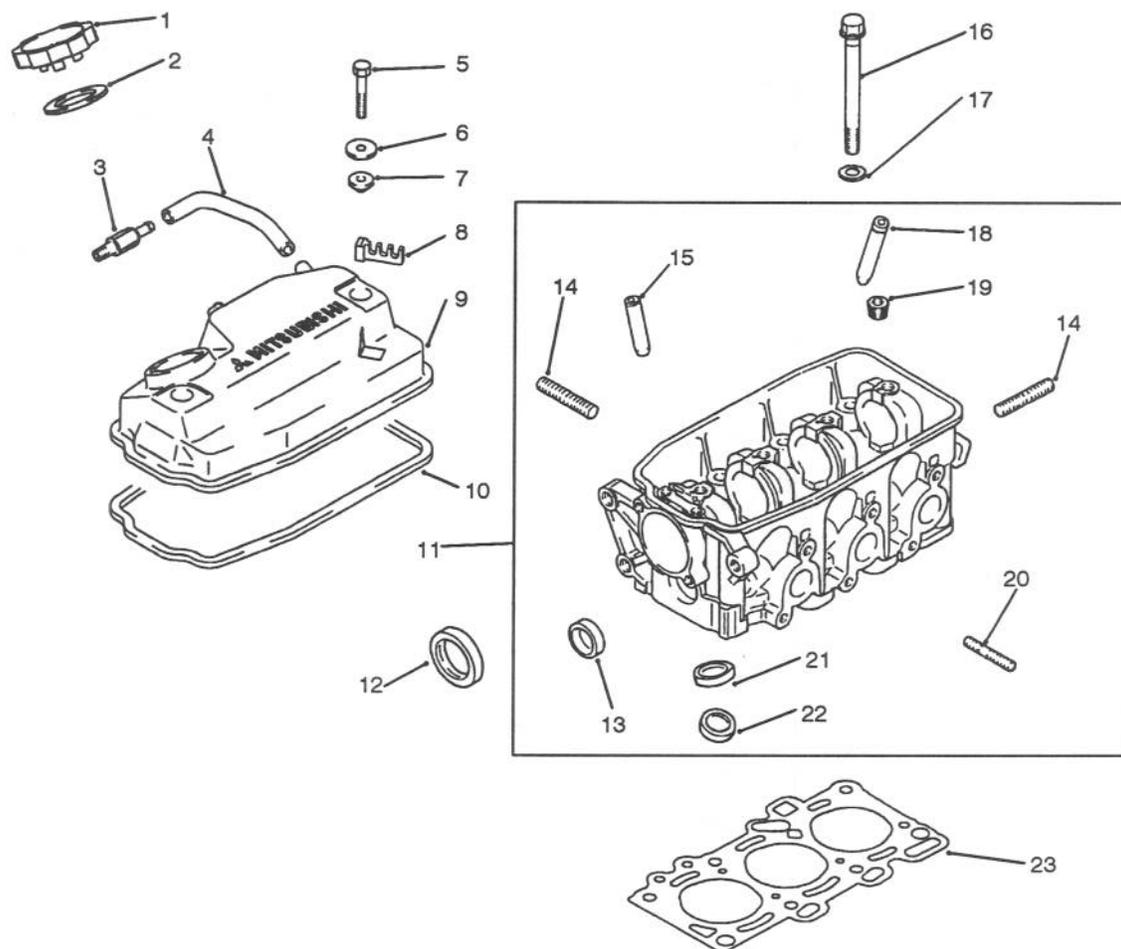


T-1630

ROCKER COVER & CYLINDER HEAD ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|---|----------|
| 1 | 92-1975 | Cap - Oil (Incl. Ref. #2) | 1 |
| 2 | 92-1943 | Packing | 1 |
| 3 | 92-2050 | PCV Valve | 1 |
| 4 | 92-2026 | Hose - PCV Valve | 1 |
| 5 | 92-2128 | Bolt - Cover | 2 |
| 6 | 92-2063 | Washer | 2 |
| 7 | 92-1929 | Seal - Oil | 2 |
| 8 | 92-1915 | Clamp - Cable | 1 |
| 9 | 92-2020 | Assembly - Cover (Incl. Ref. #8 & 10) | 1 |
| 10 | 92-1944 | Gasket - Cover, Rocker | 1 |
| 11 | 92-2034 | Head - Cylinder (Incl. Ref. #13-15 & 18-22) | 1 |
| 12 | 92-2021 | Seal - Oil | 1 |
| 13 | 92-2151 | Cap - Sealing | 1 |
| 14 | 42-9560 | Stud | 3 |
| 15 | 92-1926 | Guide - Intake Valve (.05 mm OS) | 3 |
| * | 92-5103 | Guide - Intake Valve (.25 mm OS) | 3 |
| * | 92-5104 | Guide - Intake Valve (.50 mm OS) | 3 |

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|--------------------------------------|----------|
| 16 | 92-1971 | Bolt | 8 |
| 17 | 92-1903 | Washer | 8 |
| 18 | 92-1911 | Guide - Exhaust Valve (.05 mm OS) | 1 |
| * | 92-5105 | Guide - Exhaust Valve (.25 mm OS) | 1 |
| * | 92-5106 | Guide - Exhaust Valve (.50 mm OS) | 1 |
| 19 | 92-1916 | Plug - Taper | 1 |
| 20 | 92-1905 | Stud | 6 |
| 21 | 92-1959 | Seat - Intake Valve (.30 mm OS) | 3 |
| * | 92-5102 | Seat - Intake Valve (.60 mm OS) | 3 |
| 22 | 92-1976 | Seat - Exhaust Valve (.30 mm OS) | 3 |
| * | 92-5101 | Seat - Exhaust Valve (.60 mm OS) | 3 |
| 23 | 92-1997 | Gasket - Cylinder | 1 |

*Not Illustrated

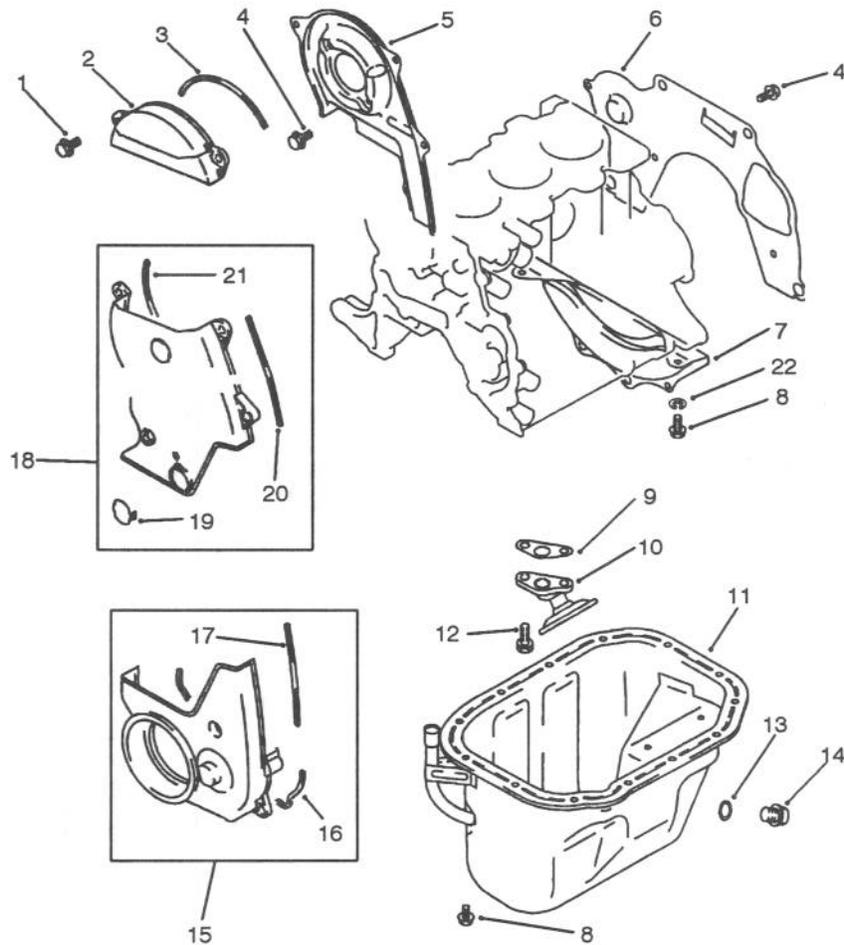


T-1632

COVERS & OIL PAN ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|--|----------|
| 1 | 92-5113 | Bolt - Flange Head | 3 |
| 2 | 92-1965 | Assembly - Cover (Incl. Ref.#3) | 1 |
| 3 | 92-1962 | Gasket | 1 |
| 4 | 92-2131 | Bolt - Flange Head | 3 |
| 5 | 92-2035 | Cover - Front | 1 |
| 6 | 92-1937 | Plate - Rear | 1 |
| 7 | 92-1938 | Cover - Bell Housing | 1 |
| 8 | 48-7610 | Bolt - Hex. Head | 2 |
| 9 | 92-1988 | Gasket - Oil | 1 |
| 10 | 92-2019 | Strainer - Oil | 1 |
| 11 | 92-2053 | Assembly - Oil Pan (Incl. Ref.#13-14) | 1 |

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|---|----------|
| 12 | 92-2137 | Bolt/washer | 2 |
| 13 | 92-1921 | Gasket - Oil | 1 |
| 14 | 92-1920 | Plug - Oil | 1 |
| 15 | 92-1967 | Assembly - Cover (Incl. Ref. #16-17) | 1 |
| 16 | 92-1939 | Gasket | 1 |
| 17 | 92-1940 | Gasket | 1 |
| 18 | 92-1996 | Assembly - Cover, Front (Incl. Ref.#19-21) | 1 |
| 19 | 92-1907 | Cover - Access | 1 |
| 20 | 92-1962 | Gasket | 1 |
| 21 | 92-1966 | Gasket | 1 |
| 22 | 3253-3 | Washer - Lock | 2 |

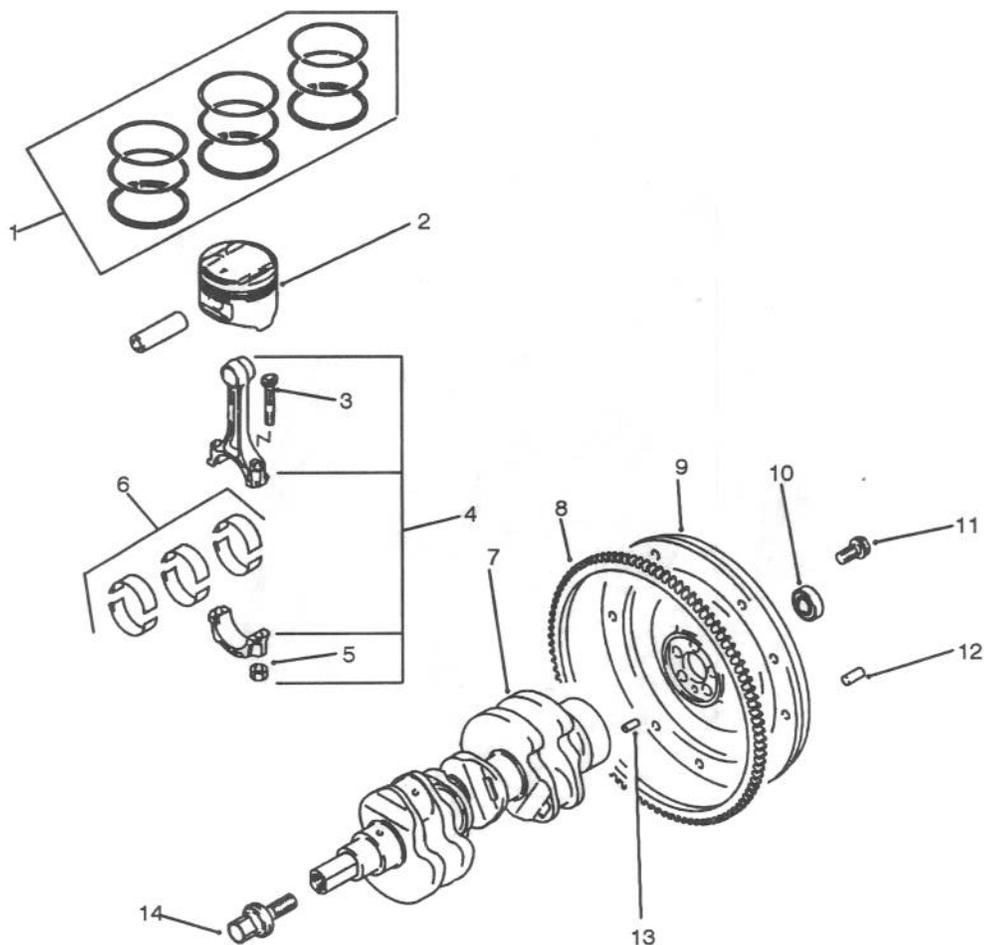


T-1633

PISTON & CRANKSHAFT ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|------------------------------|----------|
| 1 | 92-2014 | Piston Ring Set (Std.) | 1 |
| * | 92-5118 | Piston Ring Set (.25 mm OS) | 1 |
| * | 92-2015 | Piston Ring Set (.50 mm OS) | 1 |
| * | 92-5120 | Piston Ring Set (.75 mm OS) | 1 |
| * | 92-5121 | Piston Ring Set (1.00 mm OS) | 1 |
| 2 | 92-2005 | Piston & Pin (Std.) | 3 |
| * | 92-5114 | Piston & Pin (.25 mm OS) | 3 |
| * | 92-2013 | Piston & Pin (.50 mm OS) | 3 |
| * | 92-5116 | Piston & Pin (.75 mm OS) | 3 |
| * | 92-5117 | Piston & Pin (1.00 mm OS) | 3 |

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|--------------------------------------|----------|
| 3 | 92-2003 | Bolt - Connecting Rod | 6 |
| 4 | 92-1999 | Rod - Connecting (Incl. Ref. #3 & 5) | 3 |
| 5 | 92-1923 | Nut | 6 |
| 6 | 92-1957 | Rod Bearing Set | 1 |
| 7 | 92-1995 | Assembly - Crankshaft | 1 |
| 8 | 92-1942 | Gear - Ring | 1 |
| 9 | 92-1980 | Flywheel | 1 |
| 10 | 92-1914 | Bearing - Ball | 1 |
| 11 | 92-1934 | Bolt - Flywheel | 5 |
| 12 | 42-7160 | Pin - Dowel | 3 |
| 13 | 92-2148 | Pin - Dowel | 1 |
| 14 | 92-2057 | Bolt - Crankshaft PTO | 1 |

*Not Illustrated

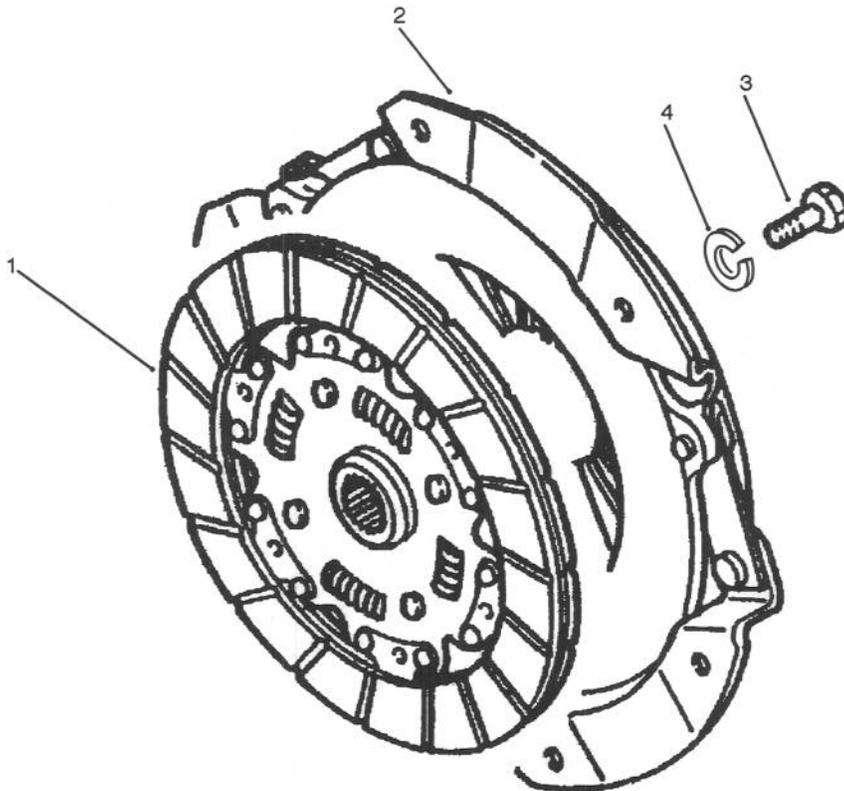


T-1644

CLUTCH & CLUTCH RELEASE ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|----------------|----------|
| 1 | 87-3190 | Disc - Clutch | 1 |
| 2 | 87-3180 | Cover - Clutch | 1 |


| Ref. No. | Part No. | Description | No. Used |
|----------|----------|---------------|----------|
| 3 | 48-7700 | Bolt | 6 |
| 4 | 3253-4 | Washer - Lock | 6 |

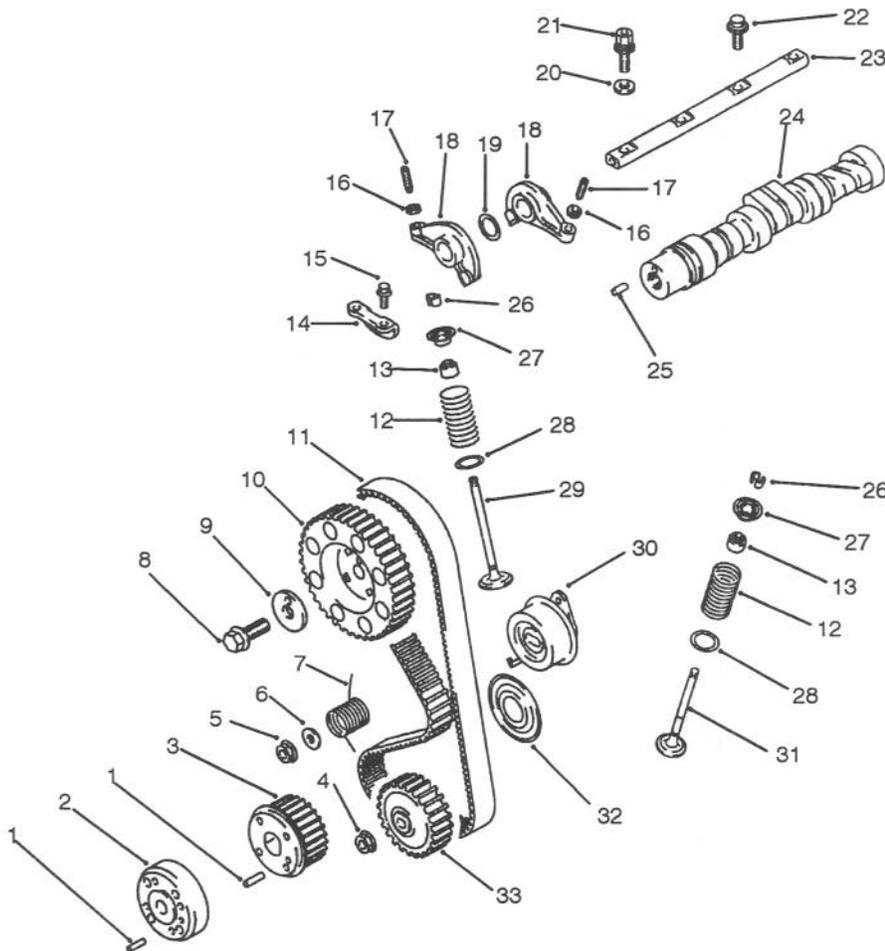

T-1634

CAMSHAFT & VALVES ASSEMBLY

| Ref. No. | Part No. | Description | No. Used | Ref. No. | Part No. | Description | No. Used |
|----------|----------|---|----------|----------|----------|--|----------|
| 1 | 92-2149 | Pin | 2 | 17 | 92-1953 | Screw - Adjusting | 6 |
| 2 | 92-2062 | Assembly - PTO Adapter (Incl. Ref.#1) | 1 | 18 | 92-1947 | Arm - Rocker | 6 |
| 3 | 92-2061 | Assembly - PTO Sprocket (Incl. Ref.#1) | 1 | 19 | 92-1930 | Washer - Wave | 2 |
| 4 | 92-5122 | Nut - Timing Belt | 1 | 20 | 92-1972 | Washer | 2 |
| 5 | 92-2145 | Nut - Flange | 1 | 21 | 92-2017 | Bolt - Rocker Shaft | 2 |
| 6 | 92-2147 | Washer | 1 | 22 | 92-2018 | Bolt - Rocker Shaft | 2 |
| 7 | 92-2001 | Spring | 1 | 23 | 92-1973 | Shaft - Rocker Arm | 1 |
| 8 | 92-2135 | Bolt - Flange Head | 1 | 24 | 92-2049 | Assembly - Camshaft (Incl. Ref.#25) | 1 |
| 9 | 92-1922 | Washer | 1 | 25 | 92-2010 | Pin - Dowel | 1 |
| 10 | 92-2000 | Sprocket | 1 | 26 | 42-7860 | Lock - Valve | 12 |
| 11 | 92-2059 | Belt - Timing | 1 | 27 | 92-1931 | Retainer | 6 |
| 12 | 92-1977 | Spring - Valve | 6 | 28 | 92-1936 | Seal - Valve | 6 |
| 13 | 92-1961 | Seal - Valve | 6 | 29 | 92-1954 | Valve - Inlet | 3 |
| 14 | 92-1964 | Plate - Cam | 1 | 30 | 92-1968 | Tensioner - Belt | 1 |
| 15 | 92-2130 | Bolt - Flange Head | 2 | 31 | 92-1955 | Valve - Exhaust | 3 |
| 16 | 92-1909 | Nut | 6 | 32 | 92-2056 | Flange - PTO | 1 |
| | | | | 33 | 92-2042 | Sprocket - Oil | 1 |

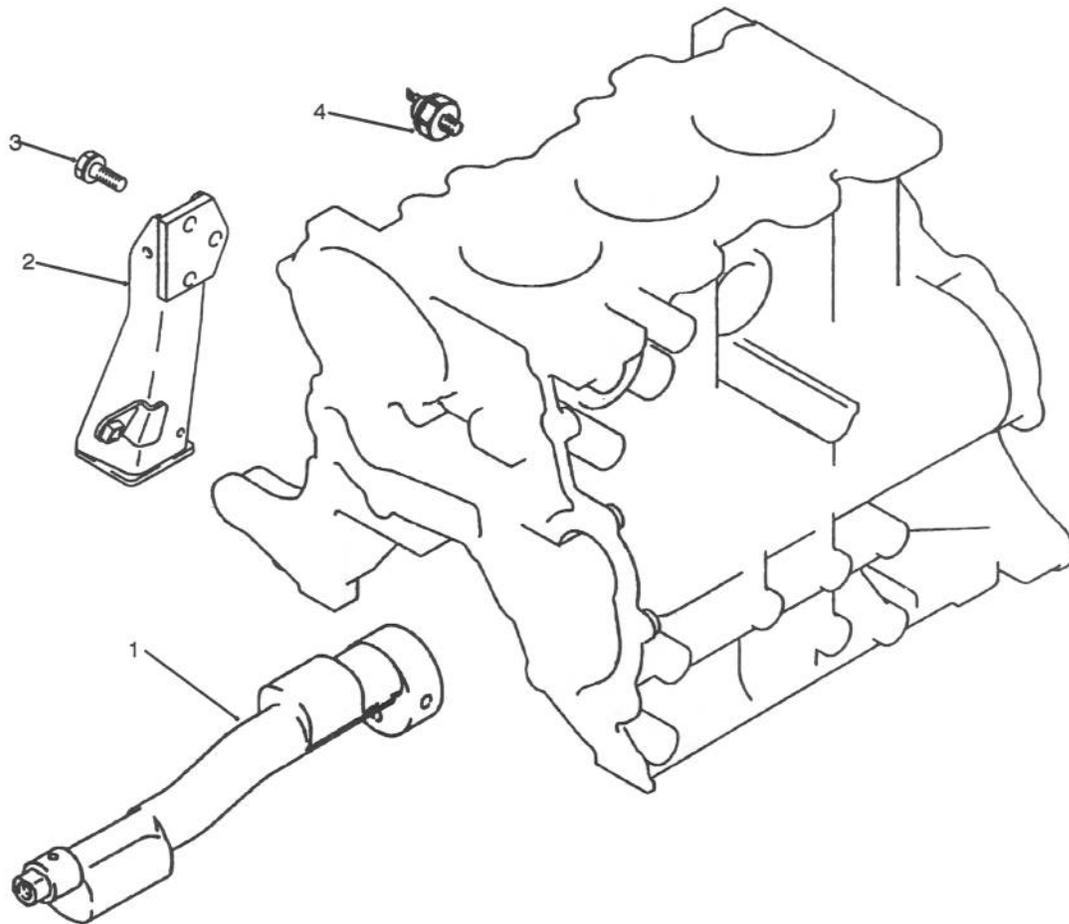


T-1635

BALANCER & OIL PRESSURE SWITCH & ENGINE MOUNT

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|------------------|----------|
| 1 | 92-1998 | Shaft - Balancer | 1 |
| 2 | 92-2022 | Mount - Engine | 1 |


| Ref. No. | Part No. | Description | No. Used |
|----------|----------|-----------------------|----------|
| 3 | 92-5123 | Bolt - Engine Mount | 3 |
| 4 | 92-1978 | Switch - Oil Pressure | 1 |

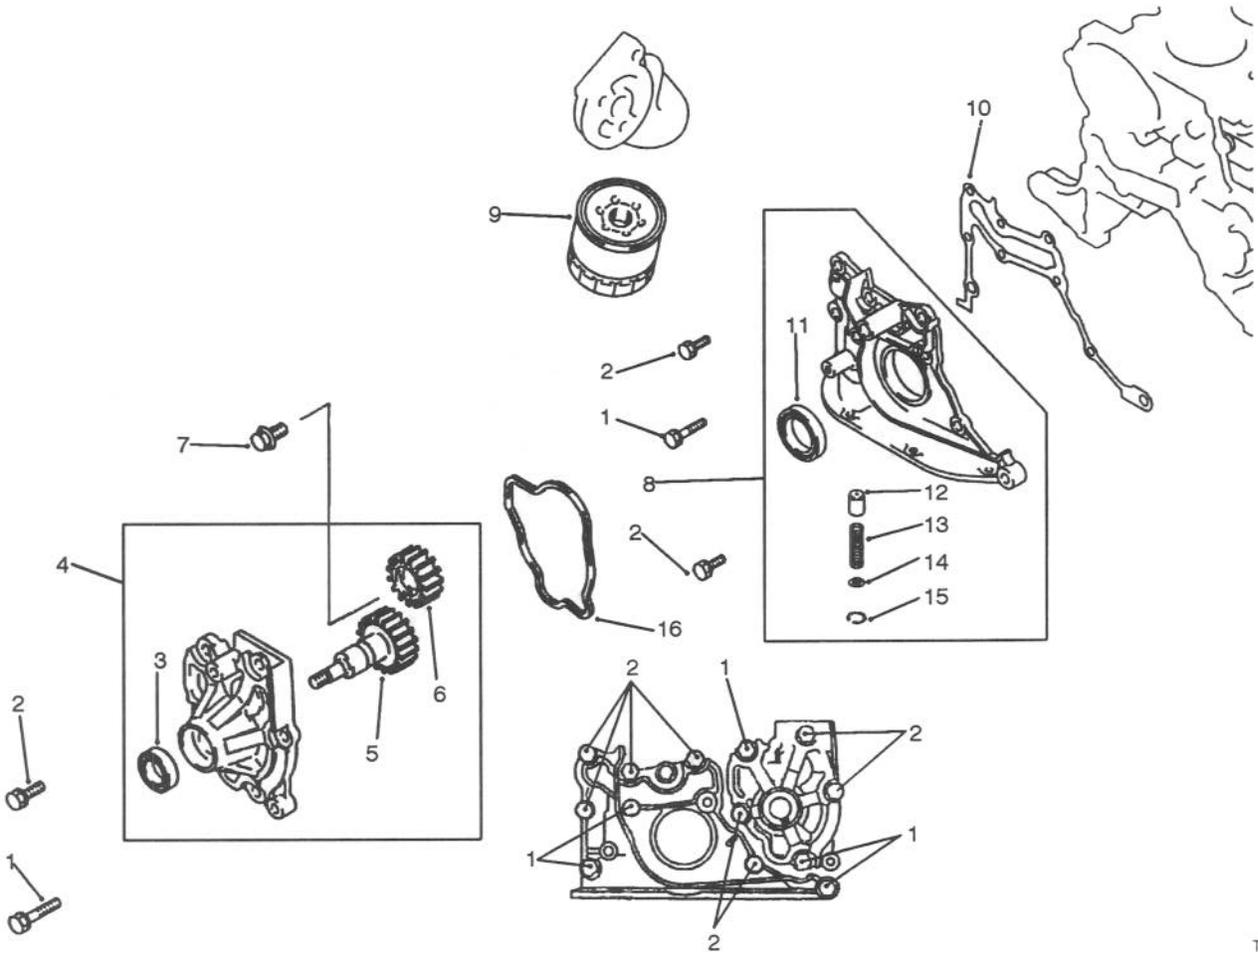

T-1636

OIL PUMP & FILTER ASSEMBLY

| Ref. No. | Part No. | Description | No. Used | Ref. No. | Part No. | Description | No. Used |
|----------|----------|--|----------|----------|----------|------------------|----------|
| 1 | 67-2560 | Bolt/washer | 5 | 9 | 42-9030 | Filter - Oil | 1 |
| 2 | 42-9400 | Bolt/washer | 8 | 10 | 92-1946 | Gasket - Front | 1 |
| 3 | 92-2032 | Seal - Oil | 1 | 11 | 92-1960 | Seal - Oil | 1 |
| 4 | 92-2046 | Assembly - Oil Pump (Incl. Ref.#3, 5 & 6) | 1 | 12 | 92-1927 | Plunger - Relief | 1 |
| 5 | 92-1948 | Gear - Oil Pump | 1 | 13 | 92-1928 | Spring - Relief | 1 |
| 6 | 92-1949 | Gear - Oil Pump | 1 | 14 | 92-1983 | Retainer | 1 |
| 7 | 92-1918 | Bolt - Flange Head | 1 | 15 | 92-2150 | Ring - Snap | 1 |
| 8 | 92-1974 | Assembly - Case (Incl. Ref.#11-15) | 1 | 16 | 92-1941 | Gasket - Oil | 1 |

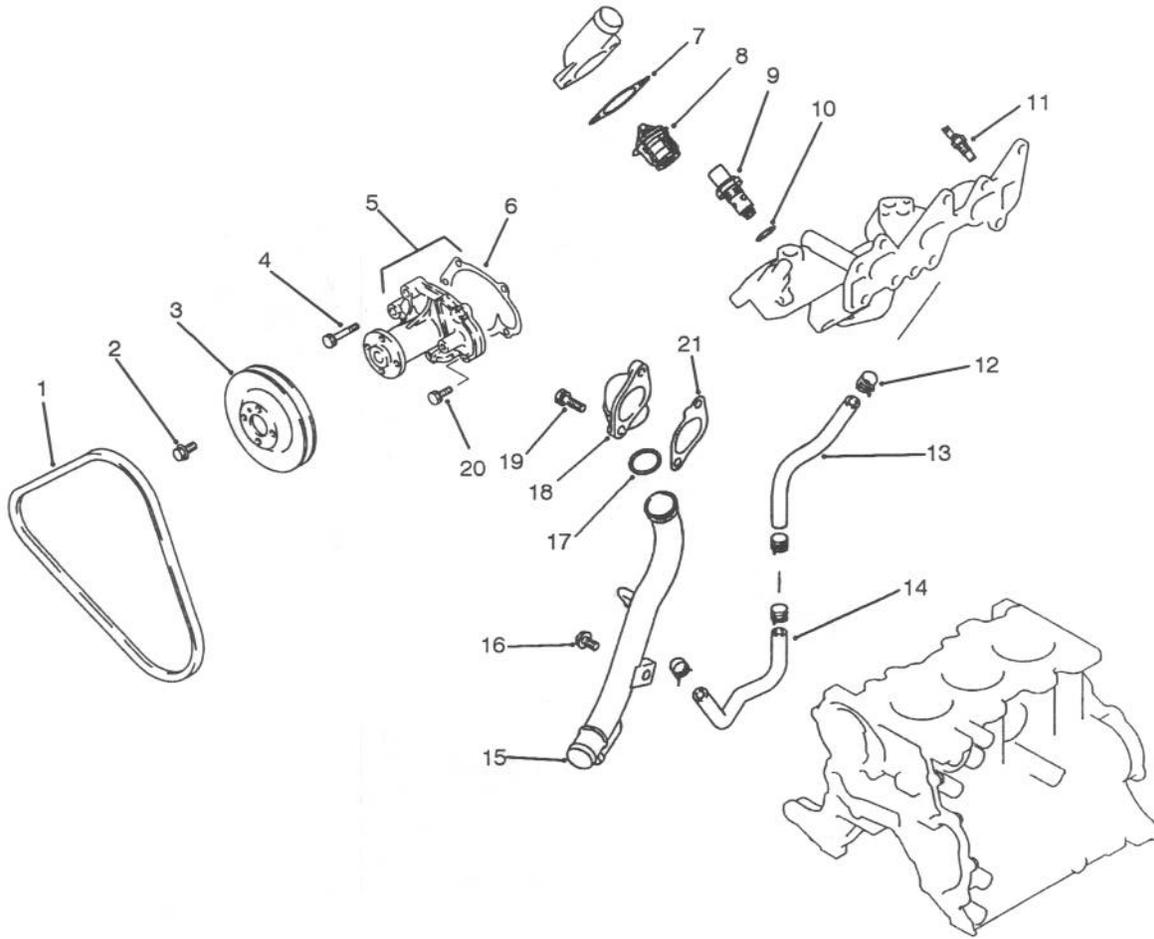


T-1639

WATER PUMP & THERMOSTAT ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|---|----------|
| 1 | 92-2041 | V-Belt | 1 |
| 2 | 92-5112 | Bolt - Flange Head | 4 |
| 3 | 92-2040 | Pulley | 1 |
| 4 | 92-2142 | Bolt/washer | 3 |
| 5 | 92-2060 | Assembly - Water Pump (Incl. Ref.#6) | 1 |
| 6 | 92-1989 | Gasket | 1 |
| 7 | 92-1950 | Gasket | 1 |
| 8 | 92-2039 | Kit - Thermostat (Incl. Ref.#7) | 1 |
| 9 | 92-5160 | Valve - Thermostat | 1 |
| 10 | 92-5161 | Gasket | 1 |

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|---------------------------|----------|
| 11 | 92-1933 | Gauge - Water Temperature | 1 |
| 12 | 54-1400 | Clip | 4 |
| 13 | 92-1924 | Hose - Water By-Pass | 1 |
| 14 | 92-2009 | Hose - By-Pass | 1 |
| 15 | 92-2024 | Pipe - Water | 1 |
| 16 | 92-2132 | Bolt | 1 |
| 17 | 92-1908 | O-Ring | 1 |
| 18 | 92-2008 | Cover | 1 |
| 19 | 92-2138 | Bolt | 2 |
| 20 | 42-9400 | Bolt | 2 |
| 21 | 92-2155 | Gasket - Water Inlet | 1 |

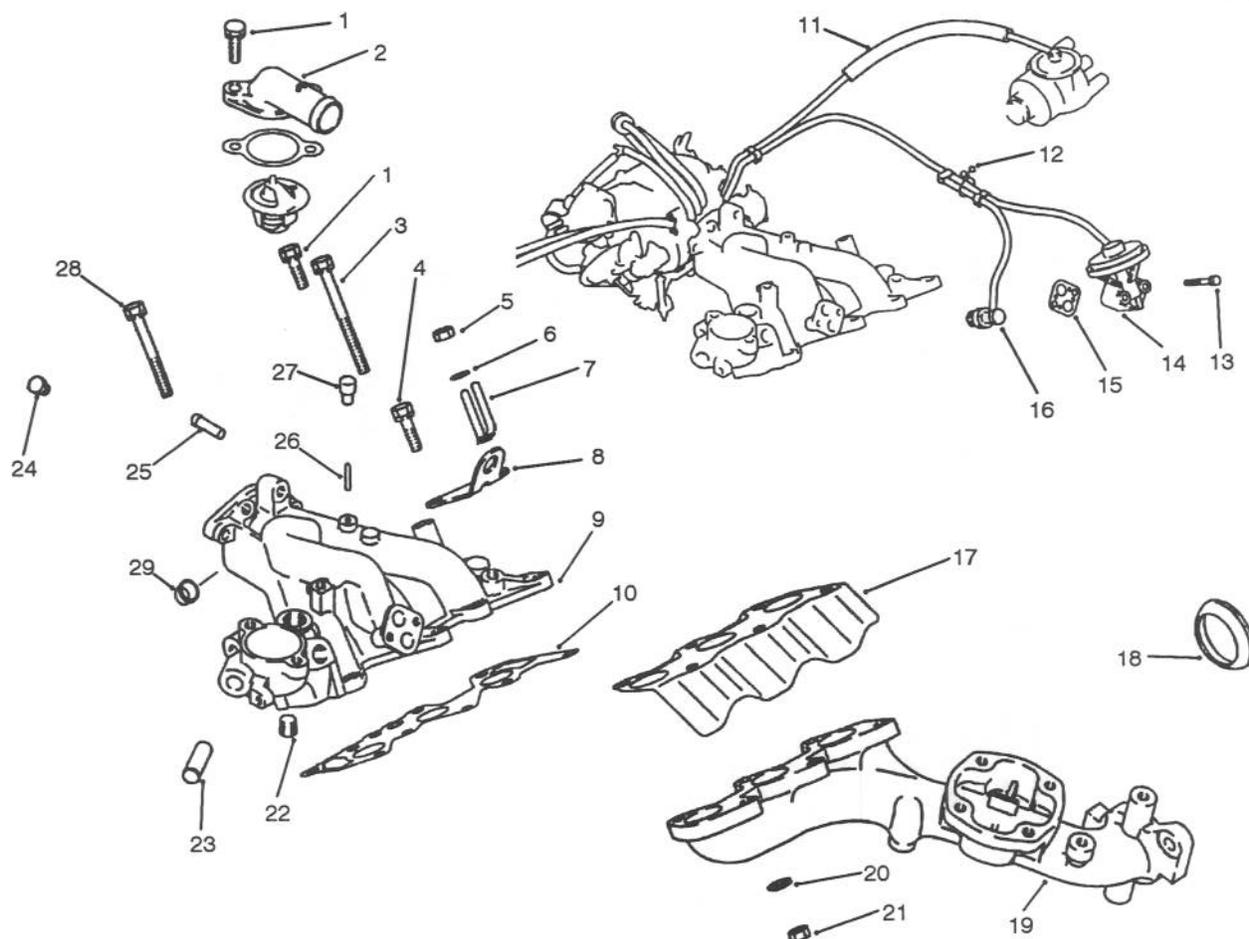


T-1640

EXHAUST & INTAKE MANIFOLD ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|---|----------|
| 1 | 92-2138 | Bolt | 3 |
| 2 | 92-1985 | Outlet - Water | 1 |
| 3 | 92-2141 | Bolt | 2 |
| 4 | 92-2139 | Bolt | 1 |
| 5 | 67-4670 | Nut | 2 |
| 6 | 67-3260 | Washer | 2 |
| 7 | 92-1901 | Clip | 1 |
| 8 | 92-1963 | Mount - Engine | 1 |
| 9 | 92-2054 | Manifold - Intake (Incl. Ref.#22, 23, 25 & 26) | 1 |
| 10 | 92-1993 | Gasket - Intake | 1 |
| 11 | 92-5164 | Assembly - Hose | 1 |
| 12 | 92-5165 | Clip | 1 |
| 13 | 92-5166 | Bolt | 2 |
| 14 | 92-2016 | Valve - EGR | 1 |

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|--------------------------|----------|
| 15 | 92-5163 | Gasket - EGR Valve | 1 |
| 16 | 92-1906 | Assembly - Valve | 1 |
| 17 | 92-2036 | Cover - Exhaust Manifold | 1 |
| 18 | 92-2044 | Gasket - Exhaust Ring | 1 |
| 19 | 92-2023 | Manifold - Exhaust | 1 |
| 20 | 48-8030 | Washer | 6 |
| 21 | 48-7930 | Nut | 6 |
| 22 | 67-2390 | Plug - Taper | 1 |
| 23 | 92-1912 | Pipe - Manifold | 1 |
| 24 | 92-5162 | Plug - Inlet | 1 |
| 25 | 92-1917 | Nipple | 1 |
| 26 | 92-1951 | Nipple | 1 |
| 27 | 92-2002 | Cap Inlet | 1 |
| 28 | 92-2140 | Bolt | 1 |
| 29 | 92-2151 | Cap - Plug | 1 |

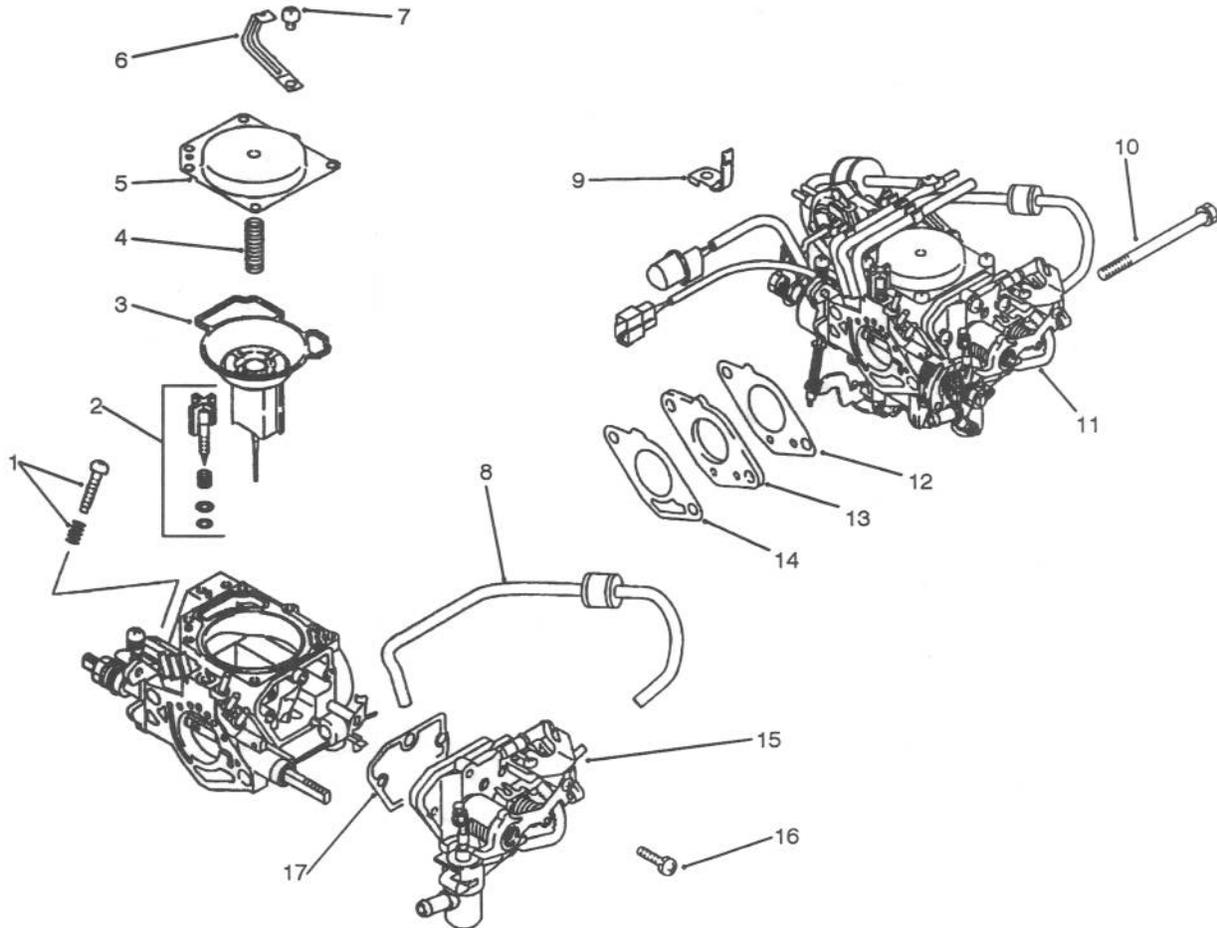


T-1637

CARBURETOR INSTALLATION ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|---------------------------|----------|
| 1 | 92-5136 | Kit - Adjusting Screw | 1 |
| 2 | 92-2111 | Kit - Mixing Screw | 1 |
| 3 | 92-5142 | Valve - Carburetor Piston | 1 |
| 4 | 92-5137 | Spring | 1 |
| 5 | 92-5126 | Cover - Carburetor Top | 1 |
| 6 | 92-5156 | Clamp - Carburetor INR | 1 |
| 7 | 92-5145 | Screw | 6 |
| 8 | 92-5134 | Orifice - Choke | 1 |
| 9 | 92-5155 | Clamp - Carburetor | 1 |


| Ref. No. | Part No. | Description | No. Used |
|----------|----------|------------------------|----------|
| 10 | 92-5157 | Bolt | 2 |
| 11 | 92-2058 | Carburetor | 1 |
| 12 | 92-2038 | Kit - Gasket | 1 |
| 13 | 92-5128 | Insulator - Carburetor | 1 |
| 14 | 92-2037 | Kit - Gasket | 1 |
| 15 | 92-5124 | Body - Choke, Auto | 1 |
| 16 | 92-5149 | Screw | 1 |
| 17 | 92-5143 | Gasket - Choke, Auto | 1 |

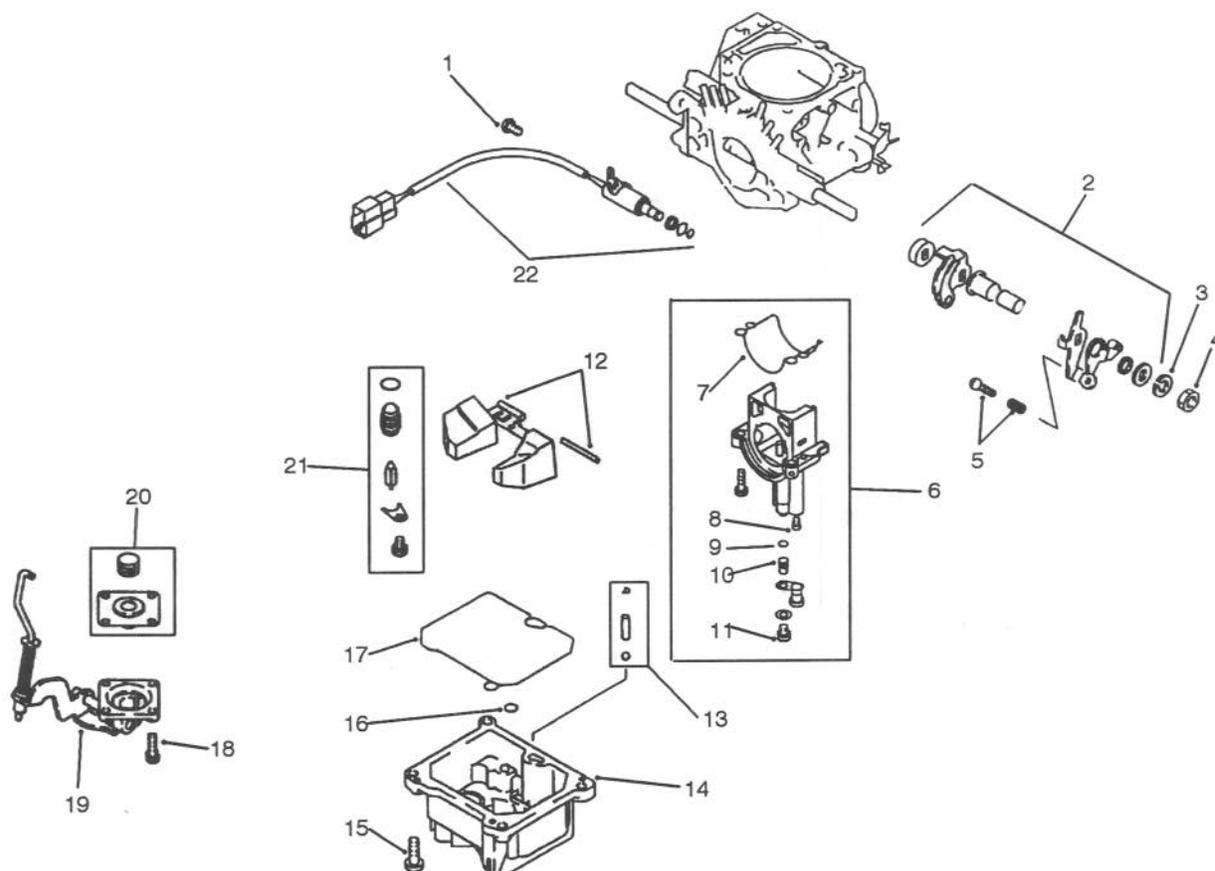

T-1638

CARBURETOR ASSEMBLY

| Ref. No. | Part No. | Description | No. Used | Ref. No. | Part No. | Description | No. Used |
|----------|----------|---|----------|----------|----------|-----------------------|----------|
| 1 | 92-5148 | Screw | 1 | 11 | 92-5131 | Jet - Power | 1 |
| 2 | 92-5133 | Kit - Lever, Throttle | 1 | 12 | 92-5127 | Kit - Float & Pin | 1 |
| 3 | 67-3260 | Washer | 1 | 13 | 92-5125 | Kit - Check Valve | 1 |
| 4 | 92-5154 | Nut - Carburetor, INR | 1 | 14 | 92-5144 | Cover - Float Chamber | 1 |
| 5 | 92-5135 | Kit - Screw Adjusting, Idle | 1 | 15 | 92-5147 | Screw | 4 |
| 6 | 92-5132 | Kit - Holder, Main Jet (Incl. Ref.#7-11) | 1 | 16 | 92-5151 | O-Ring | 1 |
| 7 | 92-5152 | O-Ring | 1 | 17 | 92-5153 | O-Ring | 1 |
| 8 | 92-5129 | Jet - Pilot | 1 | 18 | 92-5146 | Screw | 4 |
| 9 | 92-5150 | O-Ring | 1 | 19 | 92-2110 | Cover - Acc. Pump | 1 |
| 10 | 92-5130 | Jet - Main | 1 | 20 | 92-2154 | Kit - Diaphragm | 1 |
| | | | | 21 | 92-5140 | Kit - Needle Valve | 1 |
| | | | | 22 | 92-5141 | Valve - Fuel Cut-Off | 1 |

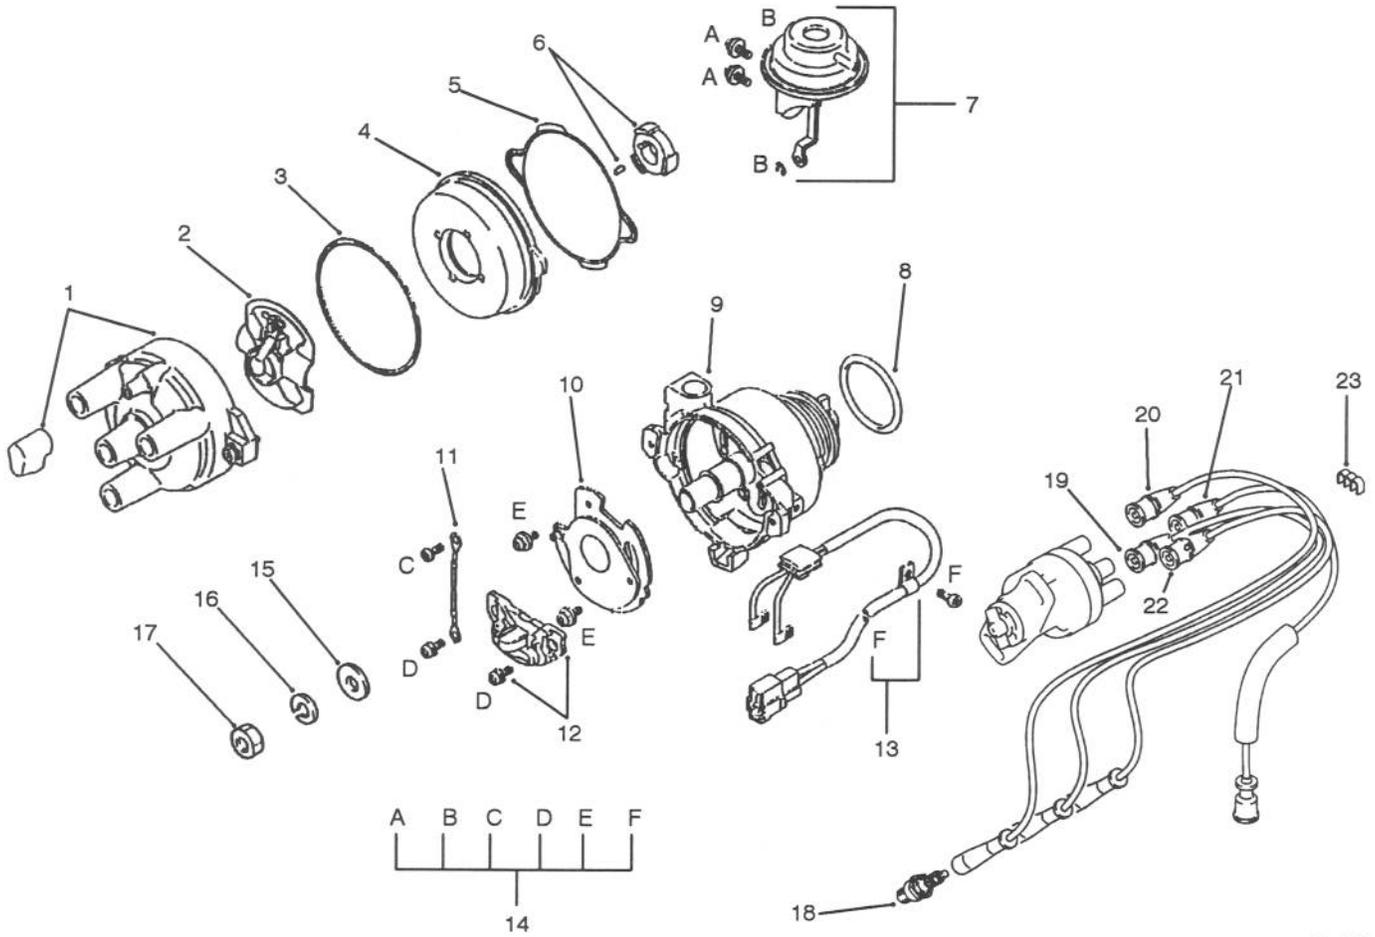


T-1643

DISTRIBUTOR ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|-------------------------|----------|
| 1 | 92-2114 | Assembly - Cap | 1 |
| 2 | 92-2113 | Rotor | 1 |
| 3 | 92-2120 | Gasket | 1 |
| 4 | 92-5170 | Cover | 1 |
| 5 | 92-5171 | Gasket - Cover | 1 |
| 6 | 92-2116 | Assembly - Signal Rotor | 1 |
| 7 | 92-2117 | Chamber - Vacuum | 1 |
| 8 | 92-2109 | O-Ring | 1 |
| 9 | 92-2122 | Housing | 1 |
| 10 | 92-2118 | Plate | 1 |
| 11 | 92-2119 | Wire - Lead | 1 |
| 12 | 92-2108 | Igniter Set | 1 |
| 13 | 92-2121 | Wire Assembly - Lead | 1 |
| 14 | 92-2115 | Screw Set | 1 |

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|---|----------|
| 15 | 92-2146 | Washer | 1 |
| 16 | 67-3260 | Washer | 1 |
| 17 | 67-4670 | Nut | 1 |
| 18 | 92-2153 | Plug - Spark | 3 |
| 19 | 92-2030 | Wire - Spark Plug, #2 | 1 |
| 20 | 92-2029 | Wire - Spark Plug, #1 | 1 |
| 21 | 92-2028 | Wire - High Tension | 1 |
| 22 | 92-2031 | Wire - Spark Plug, #3 | 1 |
| 23 | 92-5172 | Clamp | 1 |
| * | 92-2043 | Assembly - Distributor (Incl. Ref.#1-14) | 1 |
| * | 92-2125 | Assy. - Spark Plug Wire Set (Incl. Ref.#19-22) | 1 |

*Not Illustrated

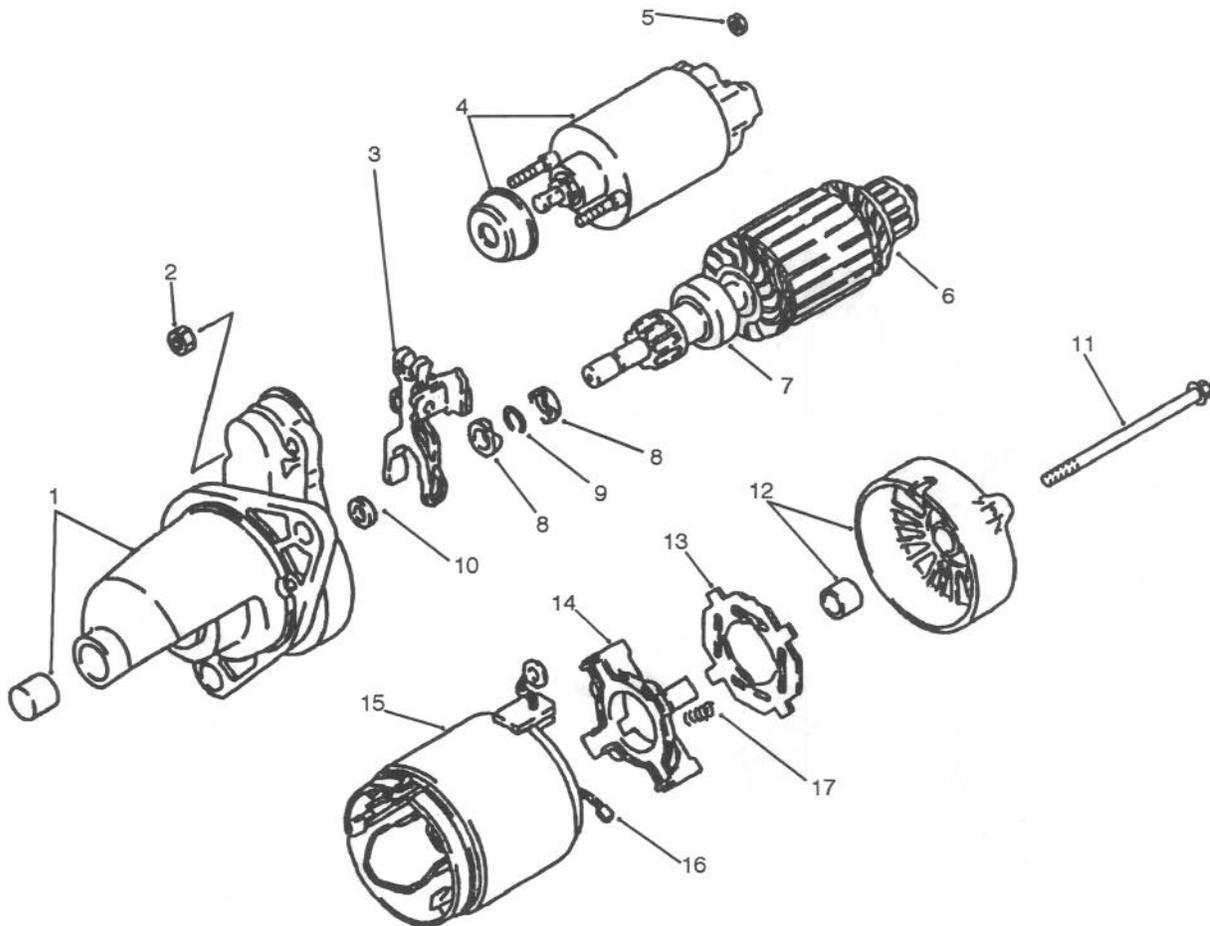


T-1641

STARTER ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|-----------------|----------|
| 1 | 92-5167 | Bracket - Front | 1 |
| 2 | 92-2106 | Nut | 2 |
| 3 | 92-2102 | Lever - Clutch | 1 |
| 4 | 92-2095 | Kit - Switch | 1 |
| 5 | 92-2107 | Nut | 1 |
| 6 | 92-2093 | Armature | 1 |
| 7 | 92-2094 | Clutch | 1 |
| 8 | 92-2097 | Nut | 2 |
| 9 | 92-2096 | Ring - Snap | 1 |
| 10 | 92-2098 | Washer | 1 |

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|---|----------|
| 11 | 92-2099 | Bolt | 2 |
| 12 | 92-5168 | Bracket - Rear | 1 |
| 13 | 92-2092 | Insulator | 1 |
| 14 | 92-2091 | Assembly - Holder | 1 |
| 15 | 92-2088 | Yoke (Incl. Ref.#16) | 1 |
| 16 | 92-2089 | Brush | 4 |
| 17 | 92-2090 | Spring | 4 |
| * | 92-2055 | Assembly - Starter (Incl. Ref.#1-17) | 1 |

*Not Illustrated

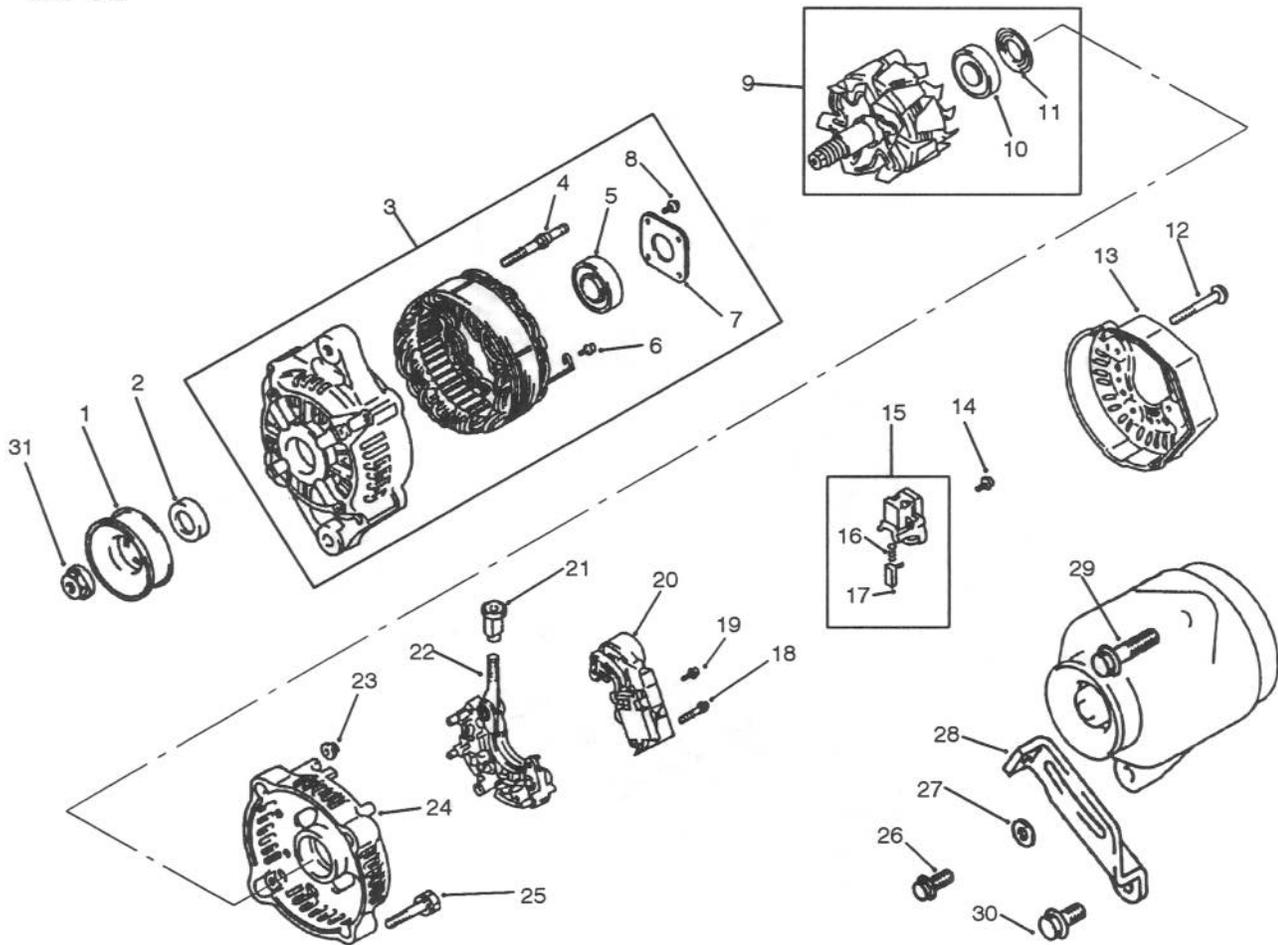


T-1642

ALTERNATOR ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|---|----------|
| 1 | 92-5169 | Pulley | 1 |
| 2 | 92-2079 | Collar | 1 |
| 3 | 92-2103 | Assembly - Bracket, Front (Incl. Ref.#4-8) | 1 |
| 4 | 92-2078 | Bolt | 2 |
| 5 | 92-2065 | Bearing | 1 |
| 6 | 92-2085 | Screw W/washer | 6 |
| 7 | 92-2076 | Plate | 1 |
| 8 | 92-2077 | Screw | 4 |
| 9 | 92-2075 | Assembly - Rotor (Incl. Ref.#10-11) | 1 |
| 10 | 92-2070 | Bearing | 1 |
| 11 | 92-2069 | Cover - Bearing | 1 |
| 12 | 92-2087 | Bolt W/washer | 3 |
| 13 | 92-2081 | Cover - End | 1 |
| 14 | 92-2085 | Screw W/washer | 6 |
| 15 | 92-2073 | Assembly - Holder (Incl. Ref.#16-17) | 1 |

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|--|----------|
| 16 | 92-2067 | Spring - Brush | 2 |
| 17 | 92-2068 | Brush | 2 |
| 18 | 92-2071 | Screw | 2 |
| 19 | 92-2086 | Screw W/washer | 1 |
| 20 | 92-2084 | Regulator | 1 |
| 21 | 92-2083 | Bushing | 1 |
| 22 | 92-2082 | Rectifier | 1 |
| 23 | 92-2066 | Nut | 2 |
| 24 | 92-2080 | Frame - End | 1 |
| 25 | 92-2100 | Bolt | 2 |
| 26 | 92-2133 | Bolt - Flange Head | 1 |
| 27 | 92-1984 | Washer | 1 |
| 28 | 92-2011 | Brace | 1 |
| 29 | 92-1932 | Bolt | 1 |
| 30 | 92-2134 | Bolt - Flange Head | 1 |
| 31 | 92-2156 | Nut - Alternator | 1 |
| * | 92-2025 | Assembly - Alternator (Incl. Ref.#1-25) | 1 |

*Not Illustrated

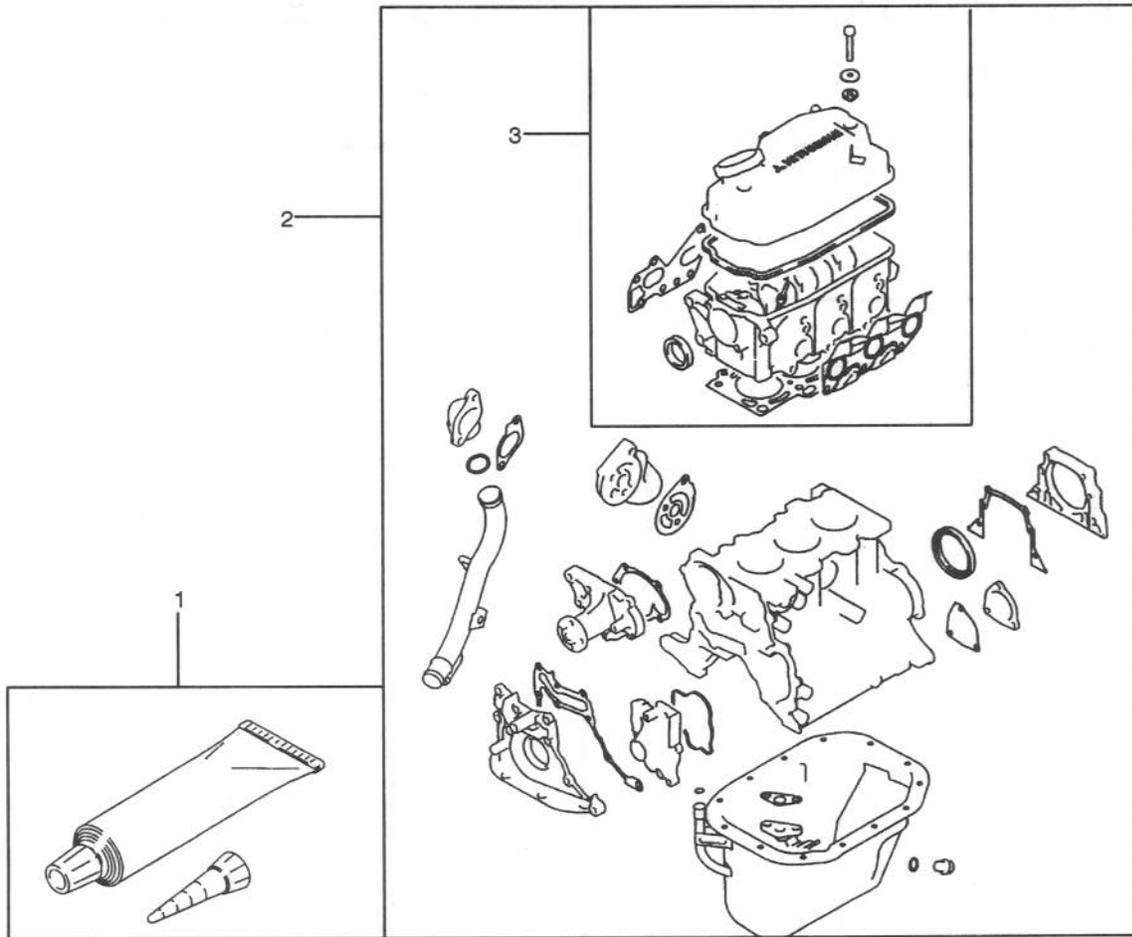

T-1629

GASKET KIT

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|-----------------------|----------|
| 1 | 92-5100 | Gasket - Liquid | 1 |
| 2 | 92-2127 | Kit - Overhaul Gasket | 1 |

| Ref. No. | Part No. | Description | No. Used |
|----------|----------|---------------------|----------|
| 3 | 92-2126 | Kit - Gasket, Upper | 1 |

INTERNATIONAL DECAL CROSS REFERENCE

DUTCH DECAL KIT NO. 92-7226

| DESCRIPTION | LOCATION | PART NUMBER | |
|-------------------------------|--------------------------------|-------------|---------|
| | | ENGLISH | DUTCH |
| DECAL LOAD RATING | UNDER RIGHT SIDE OF DASH | 87-6050 | 92-5391 |
| DECAL SUPERVISOR | ON DASH | 87-5910 | 92-5328 |
| DECAL ATF | ON REAR AXLE TUBE | 87-6060 | 92-5469 |
| DECAL FUEL | ON SKIRT | 87-5930 | 92-5321 |
| DECAL DANGER | ON REAR AXLE TUBE | 87-5990 | 92-5363 |
| DECAL AXLE RANGE | ON CONSOLE | 87-5960 | 92-5314 |
| DECAL DUMP HYDRAULICS | ON CONSOLE | 87-6010 | 92-5349 |
| DECAL PARKING BRAKE | ON CONSOLE | 87-6020 | 92-5300 |
| DECAL ROLL OVER | ON ROPS | 87-5940 | 92-5384 |
| DECAL DIFFERENTIAL LOCK | ON CONSOLE | 87-6000 | 92-5307 |
| DECAL REMOTE HYDRAULICS | ON CONSOLE | 92-2609 | 92-5342 |
| DECAL FUSE BLOCK | UNDER RIGHT SIDE OF DASH | 87-6670 | 92-5370 |

| DESCRIPTION | LOCATION | PART NUMBER | |
|--|--|-------------|---------|
| | | ENGLISH | DUTCH |
| DECAL WARNING BED SUPPORT | ON LIFT CYLINDERS AND BED SUPPORT | 87-7930 | 92-6411 |
| DECAL ROPS | ON ROPS | 87-5980 | 92-5377 |
| DECAL DASH (GAS) | ON DASH | 87-5890 | 92-6418 |
| DECAL PTO | ON CONSOLE | 87-5970 | 92-5356 |
| DECAL DANGER | ON SKIRT | 87-5920 | 92-6404 |
| DECAL WARNING SPRING LOADED | ON SPRING CRADLE | 44-0760 | 92-6489 |
| DECAL WARNING HOT SURFACE | ON LEFT FRAME RAIL | 66-6840 | 92-6475 |
| DECAL WARNING ROTATING MEMBER | ON FAN SUPPORT | 80-8040 | 83-6439 |
| DECAL QUICK REFERENCE (GAS) | ON REAR OF SKIRT | 87-5950 | 92-5490 |
| DECAL NO STEP | ON BATTERY COVER | 36-3400 | 84-2760 |
| PLATE WARNING | ON FAN SHROUD | 76-8750 | 92-7236 |

INTERNATIONAL DECAL CROSS REFERENCE

FRENCH DECAL KIT NO. 92-7227

| DESCRIPTION | LOCATION | PART NUMBER | |
|-------------------------------|--------------------------------|-------------|---------|
| | | ENGLISH | FRENCH |
| DECAL LOAD RATING | UNDER RIGHT SIDE OF DASH | 87-6050 | 92-5392 |
| DECAL SUPERVISOR | ON DASH | 87-5910 | 92-5329 |
| DECAL ATF | ON REAR AXLE TUBE | 87-6060 | 92-5470 |
| DECAL FUEL | ON SKIRT | 87-5930 | 92-5322 |
| DECAL DANGER | ON REAR AXLE TUBE | 87-5990 | 92-5364 |
| DECAL AXLE RANGE | ON CONSOLE | 87-5960 | 92-5315 |
| DECAL DUMP HYDRAULICS | ON CONSOLE | 87-6010 | 92-5350 |
| DECAL PARKING BRAKE | ON CONSOLE | 87-6020 | 92-5301 |
| DECAL ROLL OVER | ON ROPS | 87-5940 | 92-5385 |
| DECAL DIFFERENTIAL LOCK | ON CONSOLE | 87-6000 | 92-5308 |
| DECAL REMOTE HYDRAULICS | ON CONSOLE | 92-2609 | 92-5343 |
| DECAL FUSE BLOCK | UNDER RIGHT SIDE OF DASH | 87-6670 | 92-5371 |

| DESCRIPTION | LOCATION | PART NUMBER | |
|--|--|-------------|---------|
| | | ENGLISH | FRENCH |
| DECAL WARNING BED SUPPORT | ON LIFT CYLINDERS AND BED SUPPORT | 87-7930 | 92-6412 |
| DECAL ROPS | ON ROPS | 87-5980 | 92-5378 |
| DECAL DASH (GAS) | ON DASH | 87-5890 | 92-6419 |
| DECAL PTO | ON CONSOLE | 87-5970 | 92-5357 |
| DECAL DANGER | ON SKIRT | 87-5920 | 92-6405 |
| DECAL WARNING SPRING LOADED | ON SPRING CRADLE | 44-0760 | 92-6490 |
| DECAL WARNING HOT SURFACE | ON LEFT FRAME RAIL | 66-6840 | 92-6476 |
| DECAL WARNING ROTATING MEMBER | ON FAN SUPPORT | 80-8040 | 83-6210 |
| DECAL QUICK REFERENCE (GAS) | ON REAR OF SKIRT | 87-5950 | 92-5491 |
| DECAL NO STEP | ON BATTERY COVER | 36-3400 | 84-2720 |
| PLATE WARNING | ON FAN SHROUD | 76-8750 | 92-7237 |

INTERNATIONAL DECAL CROSS REFERENCE

GERMAN DECAL KIT NO. 92-7228

| DESCRIPTION | LOCATION | PART NUMBER | |
|-------------------------------|--------------------------------|-------------|---------|
| | | ENGLISH | GERMAN |
| DECAL LOAD RATING | UNDER RIGHT SIDE OF DASH | 87-6050 | 92-5393 |
| DECAL SUPERVISOR | ON DASH | 87-5910 | 92-5330 |
| DECAL ATF | ON REAR AXLE TUBE | 87-6060 | 92-5471 |
| DECAL FUEL | ON SKIRT | 87-5930 | 92-5323 |
| DECAL DANGER | ON REAR AXLE TUBE | 87-5990 | 92-5365 |
| DECAL AXLE RANGE | ON CONSOLE | 87-5960 | 92-5316 |
| DECAL DUMP HYDRAULICS | ON CONSOLE | 87-6010 | 92-5351 |
| DECAL PARKING BRAKE | ON CONSOLE | 87-6020 | 92-5302 |
| DECAL ROLL OVER | ON ROPS | 87-5940 | 92-5386 |
| DECAL DIFFERENTIAL LOCK | ON CONSOLE | 87-6000 | 92-5309 |
| DECAL REMOTE HYDRAULICS | ON CONSOLE | 92-2609 | 92-5344 |
| DECAL FUSE BLOCK | UNDER RIGHT SIDE OF DASH | 87-6670 | 92-5372 |

| DESCRIPTION | LOCATION | PART NUMBER | |
|--|--|-------------|---------|
| | | ENGLISH | GERMAN |
| DECAL WARNING BED SUPPORT | ON LIFT CYLINDERS AND BED SUPPORT | 87-7930 | 92-6413 |
| DECAL ROPS | ON ROPS | 87-5980 | 92-5379 |
| DECAL DASH (GAS) | ON DASH | 87-5890 | 92-6420 |
| DECAL PTO | ON CONSOLE | 87-5970 | 92-5358 |
| DECAL DANGER | ON SKIRT | 87-5920 | 92-6406 |
| DECAL WARNING SPRING LOADED | ON SPRING CRADLE | 44-0760 | 92-6491 |
| DECAL WARNING HOT SURFACE | ON LEFT FRAME RAIL | 66-6840 | 92-6477 |
| DECAL WARNING ROTATING MEMBER | ON FAN SUPPORT | 80-8040 | 83-5730 |
| DECAL QUICK REFERENCE (GAS) | ON REAR OF SKIRT | 87-5950 | 92-5492 |
| DECAL NO STEP | ON BATTERY COVER | 36-3400 | 84-2730 |
| PLATE WARNING | ON FAN SHROUD | 76-8750 | 92-7238 |

INTERNATIONAL DECAL CROSS REFERENCE

ITALIAN DECAL KIT NO. 92-7229

| DESCRIPTION | LOCATION | PART NUMBER | |
|-------------------------------|--------------------------------|-------------|---------|
| | | ENGLISH | ITALIAN |
| DECAL LOAD RATING | UNDER RIGHT SIDE OF DASH | 87-6050 | 92-5394 |
| DECAL SUPERVISOR | ON DASH | 87-5910 | 92-5331 |
| DECAL ATF | ON REAR AXLE TUBE | 87-6060 | 92-5472 |
| DECAL FUEL | ON SKIRT | 87-5930 | 92-5324 |
| DECAL DANGER | ON REAR AXLE TUBE | 87-5990 | 92-5366 |
| DECAL AXLE RANGE | ON CONSOLE | 87-5960 | 92-5317 |
| DECAL DUMP HYDRAULICS | ON CONSOLE | 87-6010 | 92-5352 |
| DECAL PARKING BRAKE | ON CONSOLE | 87-6020 | 92-5303 |
| DECAL ROLL OVER | ON ROPS | 87-5940 | 92-5387 |
| DECAL DIFFERENTIAL LOCK | ON CONSOLE | 87-6000 | 92-5310 |
| DECAL REMOTE HYDRAULICS | ON CONSOLE | 92-2609 | 92-5345 |
| DECAL FUSE BLOCK | UNDER RIGHT SIDE OF DASH | 87-6670 | 92-5373 |

| DESCRIPTION | LOCATION | PART NUMBER | |
|--|--|-------------|---------|
| | | ENGLISH | ITALIAN |
| DECAL WARNING BED SUPPORT | ON LIFT CYLINDERS AND BED SUPPORT | 87-7930 | 92-6414 |
| DECAL ROPS | ON ROPS | 87-5980 | 92-5380 |
| DECAL DASH (GAS) | ON DASH | 87-5890 | 92-6421 |
| DECAL PTO | ON CONSOLE | 87-5970 | 92-5359 |
| DECAL DANGER | ON SKIRT | 87-5920 | 92-6407 |
| DECAL WARNING SPRING LOADED | ON SPRING CRADLE | 44-0760 | 92-6492 |
| DECAL WARNING HOT SURFACE | ON LEFT FRAME RAIL | 66-6840 | 92-6478 |
| DECAL WARNING ROTATING MEMBER | ON FAN SUPPORT | 80-8040 | 83-5600 |
| DECAL QUICK REFERENCE (GAS) | ON REAR OF SKIRT | 87-5950 | 92-5493 |
| DECAL NO STEP | ON BATTERY COVER | 36-3400 | 84-2750 |
| PLATE WARNING | ON FAN SHROUD | 76-8750 | 92-7239 |

INTERNATIONAL DECAL CROSS REFERENCE

JAPANESE DECAL KIT NO. 92-7230

| DESCRIPTION | LOCATION | PART NUMBER | |
|-------------------------------|--------------------------------|-------------|----------|
| | | ENGLISH | JAPANESE |
| DECAL LOAD RATING | UNDER RIGHT SIDE OF DASH | 87-6050 | 92-5395 |
| DECAL SUPERVISOR | ON DASH | 87-5910 | 92-5332 |
| DECAL ATF | ON REAR AXLE TUBE | 87-6060 | 92-5473 |
| DECAL FUEL | ON SKIRT | 87-5930 | 92-5325 |
| DECAL DANGER | ON REAR AXLE TUBE | 87-5990 | 92-5367 |
| DECAL AXLE RANGE | ON CONSOLE | 87-5960 | 92-5318 |
| DECAL DUMP HYDRAULICS | ON CONSOLE | 87-6010 | 92-5353 |
| DECAL PARKING BRAKE | ON CONSOLE | 87-6020 | 92-5304 |
| DECAL ROLL OVER | ON ROPS | 87-5940 | 92-5388 |
| DECAL DIFFERENTIAL LOCK | ON CONSOLE | 87-6000 | 92-5311 |
| DECAL REMOTE HYDRAULICS | ON CONSOLE | 92-2609 | 92-5346 |
| DECAL FUSE BLOCK | UNDER RIGHT SIDE OF DASH | 87-6670 | 92-5374 |

| DESCRIPTION | LOCATION | PART NUMBER | |
|--|--|-------------|----------|
| | | ENGLISH | JAPANESE |
| DECAL WARNING BED SUPPORT | ON LIFT CYLINDERS AND BED SUPPORT | 87-7930 | 92-6415 |
| DECAL ROPS | ON ROPS | 87-5980 | 92-5381 |
| DECAL DASH (GAS) | ON DASH | 87-5890 | 92-6422 |
| DECAL PTO | ON CONSOLE | 87-5970 | 92-5360 |
| DECAL DANGER | ON SKIRT | 87-5920 | 92-6408 |
| DECAL WARNING SPRING LOADED | ON SPRING CRADLE | 44-0760 | 92-6493 |
| DECAL WARNING HOT SURFACE | ON LEFT FRAME RAIL | 66-6840 | 92-6479 |
| DECAL WARNING ROTATING MEMBER | ON FAN SUPPORT | 80-8040 | 83-6030 |
| DECAL QUICK REFERENCE (GAS) | ON REAR OF SKIRT | 87-5950 | 92-5494 |
| DECAL NO STEP | ON BATTERY COVER | 36-3400 | 84-2780 |
| PLATE WARNING | ON FAN SHROUD | 76-8750 | 92-7240 |

INTERNATIONAL DECAL CROSS REFERENCE

SPANISH DECAL KIT NO. 92-7231

| DESCRIPTION | LOCATION | PART NUMBER | |
|-------------------------------|--------------------------------|-------------|---------|
| | | ENGLISH | SPANISH |
| DECAL LOAD RATING | UNDER RIGHT SIDE OF DASH | 87-6050 | 92-5396 |
| DECAL SUPERVISOR | ON DASH | 87-5910 | 92-5333 |
| DECAL ATF | ON REAR AXLE TUBE | 87-6060 | 92-5474 |
| DECAL FUEL | ON SKIRT | 87-5930 | 92-5326 |
| DECAL DANGER | ON REAR AXLE TUBE | 87-5990 | 92-5368 |
| DECAL AXLE RANGE | ON CONSOLE | 87-5960 | 92-5319 |
| DECAL DUMP HYDRAULICS | ON CONSOLE | 87-6010 | 92-5354 |
| DECAL PARKING BRAKE | ON CONSOLE | 87-6020 | 92-5305 |
| DECAL ROLL OVER | ON ROPS | 87-5940 | 92-5389 |
| DECAL DIFFERENTIAL LOCK | ON CONSOLE | 87-6000 | 92-5312 |
| DECAL REMOTE HYDRAULICS | ON CONSOLE | 92-2609 | 92-5347 |
| DECAL FUSE BLOCK | UNDER RIGHT SIDE OF DASH | 87-6670 | 92-5375 |

| DESCRIPTION | LOCATION | PART NUMBER | |
|--|--|-------------|---------|
| | | ENGLISH | SPANISH |
| DECAL WARNING BED SUPPORT | ON LIFT CYLINDERS AND BED SUPPORT | 87-7930 | 92-6416 |
| DECAL ROPS | ON ROPS | 87-5980 | 92-5382 |
| DECAL DASH (GAS) | ON DASH | 87-5890 | 92-6423 |
| DECAL PTO | ON CONSOLE | 87-5970 | 92-5361 |
| DECAL DANGER | ON SKIRT | 87-5920 | 92-6409 |
| DECAL WARNING SPRING LOADED | ON SPRING CRADLE | 44-0760 | 92-6494 |
| DECAL WARNING HOT SURFACE | ON LEFT FRAME RAIL | 66-6840 | 92-6480 |
| DECAL WARNING ROTATING MEMBER | ON FAN SUPPORT | 80-8040 | 83-5890 |
| DECAL QUICK REFERENCE (GAS) | ON REAR OF SKIRT | 87-5950 | 92-5495 |
| DECAL NO STEP | ON BATTERY COVER | 36-3400 | 84-2740 |
| PLATE WARNING | ON FAN SHROUD | 76-8750 | 92-7241 |

INTERNATIONAL DECAL CROSS REFERENCE

SWEDISH DECAL KIT NO. 92-7232

| DESCRIPTION | LOCATION | PART NUMBER | |
|-------------------------------|--------------------------------|-------------|---------|
| | | ENGLISH | SWEDISH |
| DECAL LOAD RATING | UNDER RIGHT SIDE OF DASH | 87-6050 | 92-5397 |
| DECAL SUPERVISOR | ON DASH | 87-5910 | 92-5334 |
| DECAL ATF | ON REAR AXLE TUBE | 87-6060 | 92-5475 |
| DECAL FUEL | ON SKIRT | 87-5930 | 92-5327 |
| DECAL DANGER | ON REAR AXLE TUBE | 87-5990 | 92-5369 |
| DECAL AXLE RANGE | ON CONSOLE | 87-5960 | 92-5320 |
| DECAL DUMP HYDRAULICS | ON CONSOLE | 87-6010 | 92-5355 |
| DECAL PARKING BRAKE | ON CONSOLE | 87-6020 | 92-5306 |
| DECAL ROLL OVER | ON ROPS | 87-5940 | 92-5390 |
| DECAL DIFFERENTIAL LOCK | ON CONSOLE | 87-6000 | 92-5313 |
| DECAL REMOTE HYDRAULICS | ON CONSOLE | 92-2609 | 92-5348 |
| DECAL FUSE BLOCK | UNDER RIGHT SIDE OF DASH | 87-6670 | 92-5376 |

| DESCRIPTION | LOCATION | PART NUMBER | |
|--|--|-------------|---------|
| | | ENGLISH | SWEDISH |
| DECAL WARNING BED SUPPORT | ON LIFT CYLINDERS AND BED SUPPORT | 87-7930 | 92-6417 |
| DECAL ROPS | ON ROPS | 87-5980 | 92-5383 |
| DECAL DASH (GAS) | ON DASH | 87-5890 | 92-6424 |
| DECAL PTO | ON CONSOLE | 87-5970 | 92-5362 |
| DECAL DANGER | ON SKIRT | 87-5920 | 92-6410 |
| DECAL WARNING SPRING LOADED | ON SPRING CRADLE | 44-0760 | 92-6495 |
| DECAL WARNING HOT SURFACE | ON LEFT FRAME RAIL | 66-6840 | 92-6481 |
| DECAL WARNING ROTATING MEMBER | ON FAN SUPPORT | 80-8040 | 83-5450 |
| DECAL QUICK REFERENCE (GAS) | ON REAR OF SKIRT | 87-5950 | 92-5496 |
| DECAL NO STEP | ON BATTERY COVER | 36-3400 | 84-2710 |
| PLATE WARNING | ON FAN SHROUD | 76-8750 | 92-7242 |

TORO PART NUMBER INDEX

3316-342

| Part No. | Description | Pg. No. | Ref. No. | Qty. | Part No. | Description | Pg. No. | Ref. No. | Qty. |
|----------|-----------------------------|---------|----------|------|----------|-------------------------|---------|----------|------|
| 111071 | Bumper | 14 | 4 | 2 | 39-7420 | Washer - Lock | 5 | 22 | 1 |
| 116749 | Horn Assembly | 1 | 21 | 1 | 39-7420 | Washer - Lock | 6 | 42 | 1 |
| 3-7166 | Bolt - Shoulder | 25 | 34 | 1 | 39-7440 | Nut - Lock | 5 | 23 | 1 |
| 5-3637 | Washer - Flat | 40 | 7 | 1 | 39-7440 | Nut - Pitman Arm | 6 | 41 | 1 |
| 18-1520 | Filter - Fuel | 41 | 5 | 1 | 42-3560 | Screw - Shoulder | 16 | 15 | 1 |
| 18-1720 | Joint - Ball | 30 | 29 | 1 | 42-7160 | Pin - Dowel | 51 | 12 | 3 |
| 18-2830 | Horn Switch Assembly | 2 | 31 | 1 | 42-7860 | Lock - Valve | 53 | 26 | 12 |
| 18-4260 | Screw/Lockwasher Assy. | 6 | 9 | 2 | 42-9030 | Filter - Oil | 55 | 9 | 1 |
| 18-4270 | Clamp - Ball Return Guide | 6 | 8 | 1 | 42-9400 | Bolt | 56 | 20 | 2 |
| 18-4340 | Plug - Rack Piston End | 6 | 6 | 1 | 42-9400 | Bolt/washer | 55 | 2 | 8 |
| 18-5160 | Seal Kit - Pitman Shaft | 7 | * | 1 | 42-9530 | Screw - Cap Hex. Hd. | 34 | 10 | 25 |
| 18-5170 | Seal Kit - Valve Ring | 7 | * | 1 | 42-9530 | Screw - Cap Hex. Hd. | 12 | 18 | 9 |
| 18-5180 | Bearing Kit - Lower Thrust | 7 | * | 1 | 42-9560 | Stud | 49 | 14 | 3 |
| 18-5190 | Ball - Chrome Alloy | 6 | 10 | 11 | 42-9580 | Nut - Hex. | 29 | 12 | 2 |
| 18-5430 | Plug - Expansion | 31 | 28 | 1 | 42-9850 | Washer - Lock | 12 | 17 | 12 |
| 18-5440 | Spacer | 31 | 27 | 2 | 42-9850 | Washer - Lock | 37 | 23 | 3 |
| 18-5450 | Bearing | 31 | 17 | 2 | 42-9850 | Washer - Lock | 34 | 32 | 42 |
| 18-5520 | Lever - Rocker | 31 | 25 | 1 | 43-1911 | Fan | 25 | 26 | 1 |
| 18-5530 | Screw & Lockwasher | 31 | 29 | 2 | 43-1950 | Valve | 44 | 9 | 1 |
| 18-5540 | Retainer - Sleeve Stop | 31 | 26 | 3 | 43-4300 | Trim | 41 | 1 | 1 |
| 18-5580 | Seal - Oil, Front | 31 | 37 | 1 | 43-4300 | Trim | 29 | 41 | 2 |
| 18-5620 | Screw | 31 | 2 | 4 | 43-5150 | Piston | 45 | 11 | 1 |
| 18-5630 | Washer - Lock | 31 | 3 | 4 | 43-6550 | Ring - Retaining | 5 | 10 | 2 |
| 18-5640 | Ring - Retaining | 31 | 6 | 2 | 44-0760 | Decal - Warning | 18 | 33 | 2 |
| 18-5660 | Pin - Pivot, Flyweight | 31 | 32 | 2 | 44-2230 | Disc - Rubber | 27 | 4 | 2 |
| 18-5670 | Retainer - Pivot Pin | 31 | 33 | 2 | 46-8091 | Screw - Hex. Flange Hd. | 25 | 8 | 2 |
| 18-5750 | Pin | 31 | 16 | 1 | 47-2964 | Hose - Fuel | 41 | 9 | 1 |
| 18-5770 | Washer - Lock | 31 | 7 | 2 | 48-7560 | Screw - Cap Hex. Hd. | 28 | 9 | 3 |
| 18-5790 | Gasket | 31 | 5 | 1 | 48-7560 | Screw - Cap Hex. Hd. | 34 | 24 | 1 |
| 19-4050 | Knob | 39 | 10 | 2 | 48-7610 | Bolt - Hex. Head | 50 | 8 | 2 |
| 19-4050 | Knob | 25 | 33 | 1 | 48-7610 | Screw - Cap Hex. Hd. | 12 | 27 | 4 |
| 21-0360 | Nut | 9 | 6 | 1 | 48-7650 | Screw - Cap Hex. Hd. | 41 | 3 | 2 |
| 21-1830 | Spring - Extension | 8 | 30 | 1 | 48-7700 | Bolt | 52 | 3 | 6 |
| 21-5640 | Joint - Ball | 30 | 9 | 2 | 48-7700 | Screw - Cap Hex. Hd. | 37 | 9 | 3 |
| 21-9260 | Spacer | 5 | 4 | 1 | 48-7730 | Screw - Cap Hex. Hd. | 34 | 18 | 5 |
| 22-8330 | Plug | 46 | 1 | 2 | 48-7740 | Screw - Cap Hex. Hd. | 5 | 15 | 4 |
| 22-8340 | Spring | 46 | 3 | 2 | 48-7890 | Nut - Hex. | 29 | 8 | 1 |
| 22-8350 | Ball | 46 | 4 | 2 | 48-7930 | Nut | 57 | 21 | 6 |
| 22-8360 | Pin - Cam | 46 | 6 | 2 | 48-7930 | Nut - Hex. | 34 | 2 | 1 |
| 22-8370 | Seat-Check Valve | 46 | 5 | 2 | 48-8030 | Washer | 57 | 20 | 6 |
| 22-8380 | Retainer - Spring | 46 | 10 | 2 | 48-8070 | Washer - Flat | 5 | 6 | 1 |
| 22-8410 | Spring | 46 | 11 | 1 | 48-9480 | Screw - Cap Hex. Hd. | 29 | 20 | 2 |
| 22-8420 | Spool | 46 | 8 | 1 | 48-9510 | Nut - Lock | 33 | 50 | 2 |
| 22-8480 | Ring - Retaining, Spool | 46 | 13 | 1 | 48-9520 | Nut - Lock | 22 | 28 | 2 |
| 22-8490 | Ring - Retaining | 46 | 14 | 1 | 49-7810 | Nut - Lock | 41 | 10 | 2 |
| 22-8500 | O-Ring | 46 | 9 | 2 | 49-9150 | Washer - Flat | 16 | 2 | 1 |
| 23-3030 | Spacer | 46 | 12 | 1 | 49-9150 | Washer - Flat | 15 | 36 | 1 |
| 23-7270 | Nut - Lug | 20 | 4 | 10 | 52-2480 | Spacer | 29 | 24 | 2 |
| 23-7270 | Nut - Lug | 23 | 18 | 10 | 52-2890 | Bushing - Flange | 8 | 24 | 2 |
| 26-0071 | Bumper | 1 | 9 | 2 | 54-0110 | Element - Oil Filter | 32 | 38 | 1 |
| 27-2360 | Ignition Switch Assembly | 2 | 43 | 1 | 54-1400 | Clip | 56 | 12 | 4 |
| 27-6590 | Spacer - Thick | 27 | 7 | 4 | 55-7120 | Switch - Brake Light | 8 | 9 | 1 |
| 27-6600 | Spacer - Thin | 27 | 3 | 4 | 55-7290 | Battery | 39 | 9 | 1 |
| 28-8200 | O-Ring | 6 | 27 | 1 | 56-0100 | Plug - Taper | 48 | 9 | 1 |
| 28-8210 | Bolt - Flange Hex. Hd. | 6 | 17 | 4 | 56-2150 | Screw - Cap Hex. Hd. | 12 | 10 | 4 |
| 28-8220 | Nut - Lash Adjuster | 6 | 16 | 1 | 56-7973 | Clamp - Hydraulic Tube | 43 | 17 | 4 |
| 28-8270 | Seal Service Kit - End Plug | 7 | * | 1 | 57-6380 | Screw - Cap Hex. Hd. | 29 | 22 | 2 |
| 28-8280 | Seal Kit - Side Cover | 6 | 14 | 1 | 57-6380 | Screw - Cap Hex. Hd. | 12 | 31 | 3 |
| 28-8290 | Seal Service Kit | 7 | * | 1 | 58-4250 | Magnet | 25 | 31 | 2 |
| 33-1300 | Assembly - Element | 42 | 5 | 1 | 59-2290 | Spacer | 28 | 19 | 1 |
| 33-1310 | Baffle | 42 | 8 | 1 | 60-6750 | Screw - Cap Hex. Hd. | 34 | 4 | 11 |
| 33-1320 | Cup | 42 | 10 | 1 | 62-5550 | Decal - TORO | 1 | 2 | 1 |
| 33-1330 | Assembly - Nut | 42 | 6 | 1 | 62-7650 | Gasket - Sending Unit | 40 | 3 | 1 |
| 33-1340 | Clamp Assembly | 42 | 7 | 1 | 63-6940 | Hose - Fuel | 29 | 45 | 1 |
| 33-1350 | Band Assembly | 42 | 3 | 2 | 63-7590 | Relay | 29 | 16 | 1 |
| 33-3090 | Bushing - Flange | 18 | 7 | 4 | 63-7640 | Unit - Sending | 40 | 4 | 1 |
| 36-3400 | Decal - No Step | 39 | 11 | 1 | 63-8140 | Pulley | 25 | 15 | 1 |
| 39-7310 | O-Ring | 6 | 35 | 3 | 63-8140 | Pulley | 30 | 19 | 1 |
| 39-7310 | Seal - O-Ring | 43 | 29 | 2 | 63-8360 | Key - Ignition | 2 | 10 | 1 |

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

| Part No. | Description | Pg. Ref. | | Part No. | Description | Pg. Ref. | | | |
|----------|----------------------------|----------|------|----------|-------------|-----------------------------|------|----|----|
| | | No. | Qty. | | | No. | Qty. | | |
| 63-9640 | Hose - Fuel | 40 | 12 | 2 | 87-1450 | Bushing - Rubber | 19 | 1 | 8 |
| 65-5100 | Handle | 25 | 6 | 1 | 87-1470 | Rod End Assy. - LH Thread | 20 | 19 | 2 |
| 65-5220 | Screw - Hex. Socket Hd. | 15 | 40 | 3 | 87-1480 | Rod End Assy. - RH Thread | 20 | 24 | 2 |
| 65-5360 | Spring - Extension | 5 | 35 | 1 | 87-1490 | Spring - Leaf | 22 | 15 | 2 |
| 65-5390 | Washer - Flat | 29 | 39 | 4 | 87-1500 | Steering Gear (Complete) | 7 | * | 1 |
| 66-3160 | Screw - Cap Hex. Hd. | 12 | 1 | 4 | 87-1500 | Steering Gear Assembly | 5 | 20 | 1 |
| 66-3160 | Screw - Cap Hex. Hd. | 30 | 12 | 2 | 87-1510 | Muffler & Tailpipe | 29 | 53 | 1 |
| 66-3160 | Screw - Cap Hex. Hd. | 32 | 24 | 7 | 87-1680 | Chamber - Air | 29 | 3 | 1 |
| 66-3160 | Screw - Cap Hex. Hd. | 29 | 27 | 1 | 87-1720 | Nut - Supervisor Switch | 2 | 18 | 1 |
| 66-3160 | Screw - Cap Hex. Hd. | 29 | 40 | 4 | 87-1840 | Drum - Brake | 23 | 15 | 2 |
| 66-3160 | Screw - Cap Hex. Hd. | 29 | 49 | 1 | 87-1900 | Housing - Bell | 12 | 8 | 1 |
| 66-3240 | Cap - Radiator | 25 | 5 | 1 | 87-1910 | Pin - Alignment | 12 | 11 | 2 |
| 66-6840 | Decal - Caution | 22 | 32 | 1 | 87-1920 | Seal - Shaft | 12 | 6 | 2 |
| 67-2250 | Bolt | 48 | 11 | 8 | 87-1950 | Transaxle Assembly | 32 | 22 | 1 |
| 67-2360 | Bushing | 48 | 12 | 4 | 87-1960 | Engine Assembly | 29 | 9 | 1 |
| 67-2390 | Plug - Taper | 48 | 16 | 1 | 87-1970 | Bearing Matched Set | 23 | 20 | 2 |
| 67-2390 | Plug - Taper | 57 | 22 | 1 | 87-2000 | Screen - Radiator | 25 | 7 | 1 |
| 67-2560 | Bolt/washer | 55 | 1 | 5 | 87-2040 | Lever - Shift | 15 | 16 | 1 |
| 67-3260 | Washer | 59 | 3 | 1 | 87-2080 | Bolt - Hex. Hd. | 23 | 12 | 10 |
| 67-3260 | Washer | 57 | 6 | 2 | 87-2100 | Bearing - Release | 12 | 23 | 1 |
| 67-3260 | Washer | 60 | 16 | 1 | 87-2110 | Tail Light Assembly | 47 | 10 | 1 |
| 67-4670 | Nut | 57 | 5 | 2 | 87-2120 | Headlight Assembly | 1 | 3 | 2 |
| 67-4670 | Nut | 60 | 17 | 1 | 87-2150 | Fender - Front | 13 | 24 | 2 |
| 68-9950 | Spring - Extension | 32 | 44 | 1 | 87-2240 | Housing - Axle | 23 | 7 | 2 |
| 70-2100 | Assembly - Thrust Sleeve & | 31 | 31 | 1 | 87-2260 | Boot - Shift Lower | 15 | 28 | 1 |
| 70-2120 | Spacer | 31 | 35 | 1 | 87-2280 | Bearing | 5 | 25 | 3 |
| 70-2140 | Bearing - Front | 31 | 36 | 1 | 87-2310 | Clevis - Cable | 32 | 36 | 3 |
| 70-2150 | Flyweight | 31 | 9 | 2 | 87-2400 | Lever - Throttle | 30 | 22 | 1 |
| 70-8631 | Cap - Fuel | 40 | 1 | 1 | 87-2410 | Rod - Tie | 20 | 17 | 2 |
| 71-2690 | Hose - Fuel | 41 | 7 | 1 | 87-2420 | Boot | 19 | 19 | 4 |
| 71-3381 | Tube - Overflow | 25 | 3 | 2 | 87-2440 | Bumper | 1 | 7 | 2 |
| 71-4780 | Seal - Oil, Rocker Shaft | 31 | 18 | 1 | 87-2480 | Link - Stabilizer | 18 | 24 | 2 |
| 71-5320 | Washer - Flat | 16 | 18 | 1 | 87-2500 | Sleeve - Spring Pivot | 18 | 12 | 2 |
| 72-4310 | Switch - Ball N.C. | 32 | 46 | 1 | 87-2510 | Bracket - Seat Frame | 14 | 11 | 2 |
| 72-5890 | Shaft - Rocker | 31 | 20 | 1 | 87-2520 | Tube - Pivot | 15 | 21 | 1 |
| 72-5910 | Assembly - Bumper Screw | 31 | 23 | 1 | 87-2540 | Pedal - Brake | 8 | 4 | 1 |
| 72-5940 | Bearing - Needle | 31 | 30 | 1 | 87-2590 | Shaft - Brake Pedal | 8 | 48 | 1 |
| 74-0720 | Tube - Manual | 14 | 1 | 1 | 87-2610 | Pedal - Clutch | 12 | 39 | 1 |
| 75-4701 | Hose - Fuel | 40 | 11 | 1 | 87-2640 | Support - Master Cylinder | 8 | 19 | 1 |
| 75-4701 | Hose - Fuel | 29 | 46 | 1 | 87-2650 | Gusset | 8 | 21 | 1 |
| 75-6820 | Hourmeter | 2 | 16 | 1 | 87-2660 | Support - Pedal LH | 8 | 18 | 1 |
| 75-6880 | Spark Arrestor (Optional) | 29 | 51 | 1 | 87-2670 | Pedal - Accelerator | 8 | 36 | 1 |
| 75-9610 | Spacer | 43 | 7 | 1 | 87-2710 | Lever - Parking Brake | 16 | 29 | 1 |
| 76-2290 | Spacer | 16 | 37 | 1 | 87-2720 | Driveshaft | 27 | 10 | 1 |
| 76-4430 | Fitting - Fuel 90° | 40 | 9 | 1 | 87-2750 | Spacer - Bearing | 27 | 12 | 1 |
| 76-8750 | Plate - Warning | 25 | 40 | 1 | 87-2760 | Bracket - Ignition Coil | 29 | 19 | 1 |
| 76-9100 | Spacer | 28 | 13 | 6 | 87-2780 | Hose - Brake Front | 10 | 5 | 2 |
| 76-9100 | Spacer - Hi-Lo Lever | 15 | 35 | 1 | 87-2780 | Hose - Brake Front | 19 | 8 | 2 |
| 80-6990 | Washer | 23 | 38 | 4 | 87-2790 | Tube - Brake LH | 19 | * | 1 |
| 80-8040 | Decal - Caution | 27 | 1 | 1 | 87-2800 | Tube - Brake RH | 19 | 20 | 1 |
| 84-1680 | Ring - Retaining | 45 | 7 | 1 | 87-2810 | Tube - Brake | 10 | 10 | 1 |
| 87-0150 | Tower - Control Arm RH | 18 | 9 | 1 | 87-2820 | Bracket - Hose | 20 | 15 | 2 |
| 87-0160 | Tower - Control Arm LH | 18 | * | 1 | 87-2830 | Tube - Brake | 10 | 1 | 1 |
| 87-0170 | Arm - Control Upper RH | 19 | 21 | 1 | 87-2840 | Tube - Brake | 10 | 7 | 1 |
| 87-0180 | Arm - Control Upper LH | 19 | * | 1 | 87-2850 | Tube - Brake | 10 | 13 | 1 |
| 87-0210 | Arm - Control Lower RH | 19 | 18 | 1 | 87-2860 | Tube - Brake | 10 | 15 | 1 |
| 87-0220 | Arm - Control Lower LH | 19 | * | 1 | 87-2870 | Bracket - Brake Hose | 19 | 4 | 2 |
| 87-0270 | Drum - Brake | 20 | 7 | 2 | 87-2880 | Shaft - Accelerator Pedal | 8 | 45 | 1 |
| 87-0330 | Mount - Engine | 28 | 7 | 1 | 87-2890 | Cradle - Reservoir | 8 | 14 | 1 |
| 87-0370 | Arm - Pitman | 5 | 21 | 1 | 87-2900 | Spring - Compression | 15 | 24 | 1 |
| 87-0650 | Fuel Tank Assembly | 40 | 2 | 1 | 87-2910 | Support - Pedal RH | 8 | 3 | 1 |
| 87-0660 | Hose - Reservoir Rear | 8 | 17 | 1 | 87-3000 | Rim - Rear 23 | 23 | * | 2 |
| 87-0670 | Hose - Reservoir Front | 8 | 16 | 1 | 87-3010 | Brake Assembly - RH | 20 | 10 | 1 |
| 87-0690 | Spring - Compression | 18 | 15 | 2 | 87-3010 | Front Brake Assembly - RH | 21 | * | 1 |
| 87-0710 | Hood | 1 | 1 | 1 | 87-3020 | Brake Assembly - LH | 20 | * | 1 |
| 87-0720 | Frame - Engine | 28 | 17 | 1 | 87-3020 | Front Brake Assembly - LH | 21 | * | 1 |
| 87-0740 | Key - Supervisor Switch | 2 | 17 | 1 | 87-3030 | Master Cylinder Assembly | 8 | 35 | 1 |
| 87-0910 | Governor Assembly | 30 | 24 | 1 | 87-3040 | Brake Fluid Reservoir Assy. | 8 | 11 | 1 |
| 87-1430 | Joint - Ball | 19 | 16 | 4 | 87-3050 | Radiator Assembly | 25 | 30 | 1 |

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

| Part No. | Description | Pg. No. | Ref. No. | Qty. | Part No. | Description | Pg. No. | Ref. No. | Qty. |
|----------|-----------------------------|---------|----------|------|----------|---------------------------|---------|----------|------|
| 87-3060 | Washer - Flat | 23 | 25 | 2 | 87-3820 | Wheel - Steering | 5 | 7 | 1 |
| 87-3070 | Cable - Positive | 29 | 10 | 1 | 87-3830 | Brake Assembly RH | 23 | * | 1 |
| 87-3080 | Wire - Ground | 29 | 25 | 1 | 87-3830 | Rear Brake Assembly - RH | 24 | * | 1 |
| 87-3100 | Lower Shaft Assembly | 5 | * | 1 | 87-3840 | Brake Assembly LH | 23 | 9 | 1 |
| 87-3110 | Absorber - Shock | 18 | 29 | 2 | 87-3840 | Rear Brake Assembly - LH | 24 | * | 1 |
| 87-3110 | Shock Absorber | 22 | 8 | 2 | 87-3850 | Bar - Anti-Sway | 18 | 17 | 1 |
| 87-3120 | Steering Column & Shaft | 5 | * | 1 | 87-3860 | Link - Anti-Sway Bar | 18 | 5 | 2 |
| 87-3130 | Lever - Tilt Steering | 5 | 36 | 1 | 87-3890 | Bracket - Anti-Sway Bar | 18 | 18 | 2 |
| 87-3140 | Support - Rear | 40 | 15 | 1 | 87-3900 | Bracket - Cable | 30 | 26 | 1 |
| 87-3150 | Support - Front | 40 | 18 | 1 | 87-3910 | Bushing - Anti-Sway Bar | 18 | 19 | 2 |
| 87-3160 | Strap - Tank Support | 40 | 20 | 2 | 87-3920 | Bushing - Rubber | 18 | 4 | 24 |
| 87-3170 | Pad - Tank Support Strap | 40 | 21 | 2 | 87-3920 | Bushing - Rubber | 22 | 7 | 8 |
| 87-3180 | Cover - Clutch | 52 | 2 | 1 | 87-3940 | Mount - Spring RH | 22 | * | 1 |
| 87-3190 | Disc - Clutch | 52 | 1 | 1 | 87-3960 | Mount - Spring LH | 22 | 18 | 1 |
| 87-3200 | Belt - V | 30 | 25 | 1 | 87-3980 | Shackle - Spring | 22 | 11 | 4 |
| 87-3210 | Belt - V | 27 | 14 | 1 | 87-3990 | Oil Strainer Assembly | 32 | 26 | 1 |
| 87-3250 | Mount - Bearing | 5 | 26 | 3 | 87-4010 | Clamp - Anti-Sway Bar | 18 | 20 | 2 |
| 87-3260 | Tube - Brake | 10 | 12 | 1 | 87-4020 | Spring - Extension | 30 | 23 | 1 |
| 87-3270 | Tube - Brake RH | 22 | 3 | 1 | 87-4030 | Supervisor Switch Assy. | 2 | 29 | 1 |
| 87-3280 | Tube - Brake LH | 22 | 22 | 1 | 87-4040 | Plate | 25 | 35 | 1 |
| 87-3290 | Tire - Rear 23 | 23 | * | 2 | 87-4060 | Spacer - Bearing | 23 | 21 | 2 |
| 87-3300 | Tire | 20 | 5 | 2 | 87-4070 | Bumper - Front | 1 | 14 | 1 |
| 87-3310 | Clip - Brake Cable | 23 | 8 | 2 | 87-4080 | Tube - Brake LH | 23 | 6 | 1 |
| 87-3310 | Clip - Brake Cable | 20 | 25 | 2 | 87-4090 | Tube - Brake RH | 23 | 1 | 1 |
| 87-3320 | Cover - Wire Harness | 2 | 49 | 1 | 87-4100 | Hose - Brake | 23 | 3 | 2 |
| 87-3350 | Hose - Air Cleaner | 41 | 15 | 1 | 87-4100 | Hose - Brake | 22 | 5 | 2 |
| 87-3370 | Pulley | 27 | 13 | 1 | 87-4140 | Warning Light Assembly | 2 | 9 | 1 |
| 87-3390 | Pulley | 25 | 23 | 1 | 87-4210 | Rod - Linkage | 30 | 11 | 1 |
| 87-3420 | Hose - Air Cleaner | 29 | 1 | 1 | 87-4230 | Harness - Wire Front LH | 2 | 41 | 1 |
| 87-3430 | Hose - Radiator Upper | 25 | 29 | 1 | 87-4240 | Harness - Wire Rear | 2 | 34 | 1 |
| 87-3430 | Hose - Radiator Upper | 29 | 29 | 1 | 87-4260 | Cable Assembly | 15 | 15 | 2 |
| 87-3450 | Plug | 20 | 12 | 2 | 87-4260 | Shift Cable Assembly | 33 | 51 | 2 |
| 87-3460 | Boot - Tilt Steering | 5 | 2 | 1 | 87-4340 | Clamp - Cable | 15 | 10 | 1 |
| 87-3470 | Bumper - Spring | 22 | 14 | 2 | 87-4350 | Lever - Hi-Lo | 15 | 2 | 1 |
| 87-3480 | Plate - Brake Equalizer | 16 | 22 | 1 | 87-4420 | Hi-Lo Cable Assembly | 15 | 6 | 1 |
| 87-3500 | Hose - Air Cleaner | 29 | 33 | 1 | 87-4420 | Hi-Lo Cable Assembly | 33 | 52 | 1 |
| 87-3520 | Clevis | 15 | 27 | 1 | 87-4440 | Driveshaft | 27 | 5 | 1 |
| 87-3530 | Button - Shifter | 15 | 29 | 1 | 87-4460 | Differential Lock Cable | 16 | 11 | 1 |
| 87-3540 | Link - Shift | 15 | 20 | 2 | 87-4470 | Bracket | 32 | 23 | 1 |
| 87-3560 | Tee - Brake Line | 10 | 9 | 1 | 87-4490 | Bracket - Hold-Down | 43 | 22 | 2 |
| 87-3560 | Tee - Brake Tube | 22 | 23 | 1 | 87-4500 | Rod - Pivot | 43 | 2 | 1 |
| 87-3570 | Fitting - Union | 10 | 11 | 2 | 87-4510 | Rod - Connecting | 43 | 3 | 1 |
| 87-3580 | Retainer | 22 | 4 | 2 | 87-4520 | Bracket - Dump Valve | 44 | 27 | 1 |
| 87-3580 | Retainer | 20 | 14 | 2 | 87-4540 | Hydraulic Tube Assembly | 43 | 20 | 1 |
| 87-3580 | Retainer - Brake Hose | 23 | 2 | 2 | 87-4550 | Hydraulic Tube Assembly | 43 | 16 | 1 |
| 87-3580 | Retainer - Brake Hose | 19 | 3 | 2 | 87-4560 | Hose - Hydraulic | 44 | 33 | 1 |
| 87-3580 | Retainer - Brake Hose | 10 | 6 | 2 | 87-4560 | Tube - Hydraulic | 43 | 14 | 1 |
| 87-3590 | Seal - Bearing | 23 | 22 | 2 | 87-4710 | Spacer - Parking Brake | 16 | 13 | 1 |
| 87-3590 | Seal - Bearing | 20 | 26 | 2 | 87-4720 | Plate - Steering Boot | 5 | 3 | 1 |
| 87-3600 | Spacer | 18 | 3 | 10 | 87-4730 | Guard - Belly | 28 | 15 | 2 |
| 87-3610 | Bracket - Detent | 5 | 34 | 1 | 87-4750 | Bracket - Governor | 30 | 14 | 1 |
| 87-3620 | Shield - Heat | 29 | 23 | 1 | 87-4760 | Bushing | 22 | 12 | 12 |
| 87-3650 | Pin - Shift | 15 | 18 | 1 | 87-4770 | Bracket - High Idle Stop | 30 | 4 | 1 |
| 87-3660 | Spring - Compression | 15 | 30 | 1 | 87-4790 | Arm - Accelerator Pedal | 8 | 38 | 1 |
| 87-3670 | Hose - Hydraulic | 44 | 21 | 1 | 87-4820 | Bracket - Cable | 32 | 27 | 1 |
| 87-3670 | Hose - Hydraulic | 33 | 54 | 1 | 87-4870 | Hose - Hydraulic | 44 | 4 | 1 |
| 87-3680 | Relief Valve Assembly | 43 | * | 1 | 87-4880 | Hose - Hydraulic | 44 | 3 | 1 |
| 87-3700 | Screw - Cap Hex. Hd. | 28 | 8 | 4 | 87-4900 | Hose - Hydraulic | 44 | 31 | 1 |
| 87-3700 | Screw - Cap Hex. Hd. | 30 | 16 | 1 | 87-4910 | Hose - Hydraulic | 44 | 13 | 1 |
| 87-3710 | Overflow Reservoir Assembly | 25 | 1 | 1 | 87-4920 | Hose - Hydraulic | 32 | 41 | 1 |
| 87-3720 | Retainer - Cylinder | 44 | 17 | 2 | 87-4960 | Clamp - Cable | 15 | 42 | 1 |
| 87-3730 | Hose - Coolant | 29 | 28 | 2 | 87-4970 | Engine Mount Assembly | 28 | 3 | 2 |
| 87-3740 | Hose - Breather | 29 | 7 | 1 | 87-4970 | Transaxle Mount Assembly | 32 | 18 | 4 |
| 87-3750 | Cover - Steering Wheel | 5 | 9 | 1 | 87-5030 | Lever - Differential Lock | 16 | 3 | 1 |
| 87-3760 | Plate - Shift Boot | 13 | 14 | 1 | 87-5050 | Hose - Radiator Lower | 25 | 10 | 1 |
| 87-3770 | Bushing - Sleeve | 12 | 7 | 2 | 87-5050 | Hose - Radiator Lower | 29 | 31 | 1 |
| 87-3780 | Box - Glove | 2 | 3 | 1 | 87-5060 | Cushion - Seat Bottom | 13 | 7 | 2 |
| 87-3790 | Switch - Light | 2 | 19 | 1 | 87-5070 | Pulley - Crankshaft | 29 | 38 | 1 |
| 87-3800 | Bracket - Seat Bottom | 13 | 3 | 3 | 87-5080 | Spacer - Connecting | 43 | 25 | 1 |

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

| Part No. | Description | Pg. Ref. | | | Part No. | Description | Pg. Ref. | | |
|----------|----------------------------|----------|-----|------|----------|----------------------------|----------|-----|------|
| | | No. | No. | Qty. | | | No. | No. | Qty. |
| 87-5100 | Washer | 32 | 17 | 4 | 87-6640 | Lever - Dump Stop | 16 | 14 | 1 |
| 87-5100 | Washer - Flat | 28 | 4 | 4 | 87-6660 | Fender - Rear 24 | 47 | 17 | 2 |
| 87-5110 | Support - Lower | 39 | 19 | 1 | 87-6670 | Decal - Fuse Block | 3 | 54 | 1 |
| 87-5120 | Bracket - Battery Base | 39 | 15 | 1 | 87-6690 | Guard - Induction Chamber | 22 | 29 | 1 |
| 87-5130 | Cover - Battery Base | 39 | 12 | 1 | 87-6700 | Decal - Workman 3200 | 1 | 15 | 1 |
| 87-5140 | Nut - Lock | 43 | 8 | 1 | 87-6710 | Switch - Supervisor | 32 | 33 | 1 |
| 87-5150 | Screw - Cap Hex. Hd. | 43 | 4 | 1 | 87-6720 | Knob | 15 | 17 | 1 |
| 87-5240 | Head - Oil Filter | 32 | 43 | 1 | 87-6740 | Tire - Rear 24 | 23 | 16 | 2 |
| 87-5290 | Shaft - Release | 12 | 5 | 1 | 87-6750 | Rim - Rear 24 | 23 | 19 | |
| 87-5300 | Fork - Clutch | 12 | 20 | 1 | 87-6820 | Nut - Special | 32 | 9 | 1 |
| 87-5320 | Guide - Release | 12 | 22 | 1 | 87-6850 | Arm - Shift | 32 | 15 | 1 |
| 87-5330 | Washer | 18 | 2 | 12 | 87-6860 | Lever - Shift Limiter | 32 | 10 | 1 |
| 87-5340 | Seal Kit - Tie Rod End | 20 | * | 4 | 87-6870 | Bracket - Front | 47 | 15 | 2 |
| 87-5350 | Bracket - Switch | 12 | 15 | 1 | 87-6890 | Hold - Hand | 13 | 1 | 1 |
| 87-5360 | Lever | 12 | 12 | 1 | 87-6910 | Spring - Compression | 32 | 13 | 1 |
| 87-5370 | Rear Tire & Wheel Assembly | 23 | * | 2 | 87-6950 | Receiver - LH | 17 | 6 | 1 |
| 87-5490 | Switch - Neutral | 12 | 16 | 1 | 87-6960 | Receiver - RH | 17 | 7 | 1 |
| 87-5510 | Stud - Drive | 20 | 9 | 10 | 87-7040 | Bracket - Oil Filter | 32 | 2 | 1 |
| 87-5520 | Spindle - RH | 20 | 13 | 1 | 87-7050 | Cap - Reservoir | 25 | 43 | 1 |
| 87-5540 | Spindle - LH | 20 | * | 1 | 87-7070 | Skirt Assembly | 13 | 2 | 1 |
| 87-5560 | Hub - Wheel | 20 | 8 | 2 | 87-7090 | R.O.P.S. Frame Assembly | 17 | 1 | 1 |
| 87-5580 | Fuel Gauge Assembly | 2 | 15 | 1 | 87-7110 | Rear Axle Assembly | 23 | 5 | 1 |
| 87-5590 | Temperature Gauge Assy. | 2 | 8 | 1 | 87-7120 | Assembly - Shroud, Fan | 25 | 13 | 1 |
| 87-5700 | Hydraulic Pump Assembly | 25 | 19 | 1 | 87-7130 | Operators Platform Assy. | 1 | 17 | 1 |
| 87-5720 | Rim | 20 | 6 | 2 | 87-7150 | Spring Cradle Assembly | 18 | 13 | 2 |
| 87-5730 | Hose - Hydraulic | 32 | 4 | 1 | 87-7160 | Cable Clevis Assembly | 15 | 7 | 3 |
| 87-5750 | Plate - Tail Light LH | 47 | 12 | 1 | 87-7170 | Bracket - Clutch Spring | 32 | 45 | 1 |
| 87-5770 | U-Bracket - Tail Light | 47 | 5 | 1 | 87-7230 | Clamp - Shift Arm | 33 | 48 | 2 |
| 87-5800 | Bracket - Mount | 32 | 21 | 2 | 87-7270 | Washer - Flat | 23 | 23 | 6 |
| 87-5910 | Decal - Supervisor | 3 | 55 | 1 | 87-7470 | Plate - Clamp | 22 | 16 | 2 |
| 87-5920 | Decal - Danger | 13 | 26 | 1 | 87-7480 | Washer - Flat | 22 | 34 | 8 |
| 87-5930 | Decal - Caution | 13 | 10 | 1 | 87-7500 | Driveshaft Assembly | 23 | * | 2 |
| 87-5940 | Decal - Rollover | 17 | 2 | 1 | 87-7520 | Accelerator Cable Assembly | 30 | 1 | 1 |
| 87-5950 | Decal - Quick Reference | 13 | 23 | 1 | 87-7520 | Cable - Accelerator | 8 | 40 | 1 |
| 87-5960 | Decal - Axle Range | 13 | 11 | 1 | 87-7560 | Seal - Air Cleaner | 42 | 9 | 1 |
| 87-5970 | Decal - PTO | 13 | 16 | 1 | 87-7570 | Retainer - Reservoir | 8 | 12 | 1 |
| 87-5980 | Decal - ROPS | 17 | 3 | 2 | 87-7600 | Rod - Battery Support | 39 | 21 | 1 |
| 87-5990 | Decal - PTO | 23 | 39 | 1 | 87-7610 | Tab - Battery Support | 39 | 3 | 1 |
| 87-6000 | Decal - Differential Lock | 13 | 17 | 1 | 87-7620 | Shield - Plastic | 39 | 14 | 1 |
| 87-6010 | Decal - Dump Hydraulics | 13 | 19 | 1 | 87-7660 | Clamp - Brake Line | 10 | 2 | 8 |
| 87-6020 | Decal - Parking Brake | 13 | 20 | 1 | 87-7930 | Decal - Danger | 14 | 6 | 1 |
| 87-6040 | Bracket - Shifter | 15 | 22 | 1 | 87-7930 | Decal - Warning | 44 | 32 | 2 |
| 87-6050 | Decal - Load Rating | 1 | 16 | 1 | 87-7930 | Decal - Warning | 45 | 13 | 1 |
| 87-6060 | Decal - ATF | 23 | 4 | 1 | 87-7940 | Stud | 14 | 8 | 1 |
| 87-6170 | Frame - Seat | 14 | 14 | 1 | 87-7950 | Bed Support Assembly | 14 | 7 | 1 |
| 87-6240 | Bracket - Seat Back | 14 | 23 | 4 | 87-7990 | Hydraulic Cylinder Assy. | 44 | 16 | 2 |
| 87-6250 | Plate - Tail Light RH | 47 | * | 1 | 87-8080 | Console Plate Assembly | 13 | 21 | 1 |
| 87-6270 | Socket & Bulb Assembly | 3 | 60 | 4 | 87-8110 | Lever Support Assembly | 15 | 14 | 1 |
| 87-6280 | Plate - Seat Back | 14 | 18 | 2 | 87-8120 | Bracket - Trim Side | 1 | 11 | 2 |
| 87-6290 | Cushion - Seat Back | 14 | 17 | 2 | 87-8130 | Bracket - Trim Top | 1 | 19 | 1 |
| 87-6300 | Lens | 47 | 7 | 1 | 87-8160 | Trim | 1 | 20 | 1 |
| 87-6310 | Gasket | 47 | 9 | 1 | 87-8230 | Support - Fan | 25 | 16 | 1 |
| 87-6320 | Bulb - Headlight | 1 | 5 | 2 | 87-8300 | Air Cleaner (Complete) | 42 | * | 1 |
| 87-6330 | Lens - Headlight | 1 | 6 | 2 | 87-8300 | Air Cleaner Assembly | 41 | 17 | 1 |
| 87-6370 | Rear Tire & Wheel Assembly | 23 | * | 2 | 87-8380 | Stub - Axle | 23 | 14 | 2 |
| 87-6490 | Spring | 31 | 13 | 1 | 87-8440 | Rear Frame Assembly | 22 | 2 | 1 |
| 87-6500 | Pulley | 31 | 1 | 1 | 87-8450 | Cable - Parking Brake | 16 | 24 | 2 |
| 87-6510 | Assembly - Shaft & Yoke | 31 | 34 | 1 | 87-8460 | Bumper | 12 | 34 | 1 |
| 87-6520 | Body | 31 | 24 | 1 | 87-8480 | Bracket - Clutch | 12 | 43 | 1 |
| 87-6530 | Assembly - Throttle Lever | 31 | 22 | 1 | 87-8500 | Front Wire Harness Assy. | 2 | 47 | 1 |
| 87-6540 | Bolt - Eye | 31 | 21 | 1 | 87-8520 | Decal - Dash | 3 | 56 | 1 |
| 87-6550 | Pin - Forced Idle | 31 | 14 | 1 | 87-8550 | Control Panel Assembly | 3 | 53 | 1 |
| 87-6560 | Cover | 31 | 4 | 1 | 87-8590 | Clutch Cable Assembly | 12 | 36 | 1 |
| 87-6570 | Foam - Seal | 15 | 38 | 1 | 87-8620 | Boot - Shift | 13 | 13 | 1 |
| 87-6580 | Stud - Lever Pivot | 31 | 11 | 1 | 87-8640 | Washer - Flat | 15 | 26 | 1 |
| 87-6590 | Assy. Lever & Fitting | 31 | 10 | 1 | 87-8640 | Washer - Flat | 29 | 48 | 1 |
| 87-6620 | Screw | 1 | 10 | 15 | 87-8640 | Washer - Flat | 33 | 49 | 2 |
| 87-6620 | Screw - Torx Pan Hd. | 2 | 7 | 4 | 87-8700 | Screw - Cap Hex. Hd. | 23 | 36 | 4 |
| 87-6620 | Screw - Torx Pan Hd. | 12 | 40 | 2 | 87-8710 | Tab - Clutch | 12 | 42 | 1 |

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

| Part No. | Description | Pg. No. | Ref. No. | Qty. | Part No. | Description | Pg. No. | Ref. No. | Qty. |
|----------|----------------------------|---------|----------|------|----------|-------------------------|---------|----------|------|
| 92-0650 | Bearing - Ball | 36 | 22 | 1 | 92-0743 | Breather - Air | 34 | 27 | 1 |
| 92-0651 | Case - Transaxle | 34 | 19 | 1 | 92-0744 | Washer | 38 | 14 | 1 |
| 92-0652 | Cover - Upper | 34 | 7 | 1 | 92-0745 | Gear - Side L.H. | 38 | 24 | 1 |
| 92-0653 | Cover - Side | 34 | 9 | 1 | 92-0746 | Gear - Side R.H. | 38 | 11 | 1 |
| 92-0654 | Carrier - Differential | 34 | 17 | 1 | 92-0747 | Washer - Thrust | 38 | 10 | 2 |
| 92-0655 | Cover - Seal | 34 | 30 | 1 | 92-0748 | Gear - Pinion | 38 | 12 | 2 |
| 92-0656 | Cover - P.T.O. | 34 | 1 | 1 | 92-0749 | Shaft - Pinion | 38 | 23 | 1 |
| 92-0657 | Plate - Center | 34 | 21 | 1 | 92-0750 | Washer | 38 | 13 | 2 |
| 92-0662 | Cap - Oil | 34 | 5 | 1 | 92-0753 | Ring - Retaining | 36 | 2 | 1 |
| 92-0663 | Shaft - Main | 36 | 16 | 1 | 92-0753 | Ring - Retaining | 38 | 21 | 1 |
| 92-0664 | Hub - Synchro | 36 | 12 | 2 | 92-0754 | Ring - Retaining | 36 | 20 | 1 |
| 92-0665 | Key - Synchro | 36 | 23 | 6 | 92-0755 | Ring - Retaining | 35 | 11 | 1 |
| 92-0666 | Spring - Synchro | 36 | 13 | 4 | 92-0756 | Ring - Retaining | 38 | 5 | 3 |
| 92-0667 | Ring - Synchro | 36 | 6 | 3 | 92-0759 | Ring - Retaining | 34 | 22 | 1 |
| 92-0668 | Shifter - Synchro | 36 | 7 | 2 | 92-0760 | Ring - Retaining | 34 | 15 | 1 |
| 92-0670 | Gear - 29T | 36 | 5 | 1 | 92-0761 | Ring - Retaining | 37 | 18 | 1 |
| 92-0671 | Gear - 22T | 36 | 15 | 1 | 92-0762 | Washer - Lock | 34 | 3 | 1 |
| 92-0672 | Gear - 18T | 36 | 19 | 1 | 92-0763 | Ring - Retaining | 36 | 14 | 3 |
| 92-0673 | Gear - 14T | 36 | 21 | 1 | 92-0764 | Ring - Retaining | 35 | 3 | 3 |
| 92-0674 | Shaft - Reduction | 36 | 28 | 1 | 92-0765 | Pin - Alignment | 34 | 8 | 4 |
| 92-0675 | Gear - 25T | 36 | 24 | 1 | 92-0765 | Pin - Alignment | 38 | 9 | 2 |
| 92-0676 | Gear - 32T | 36 | 27 | 1 | 92-0768 | Pin - Spring | 38 | 15 | 2 |
| 92-0677 | Gear - 49T | 36 | 31 | 1 | 92-0769 | Pin - Spring | 37 | 4 | 2 |
| 92-0678 | Gear - 40T | 36 | 32 | 1 | 92-0770 | Pin - Spring | 38 | 26 | 1 |
| 92-0679 | Gear - 23T | 36 | 25 | 1 | 92-0771 | Pin - Spring | 38 | 16 | 1 |
| 92-0680 | Collar | 36 | 26 | 1 | 92-0772 | Key | 36 | 17 | 2 |
| 92-0681 | Bearing - Needle | 36 | 30 | 2 | 92-0773 | Drain Plug Assembly | 34 | 13 | 1 |
| 92-0682 | Washer - Thrust | 36 | 29 | 1 | 92-0775 | Bearing - Ball | 38 | 6 | 2 |
| 92-0683 | Shaft - Reverse Idler | 36 | 9 | 1 | 92-0776 | Bearing - Ball | 38 | 29 | 1 |
| 92-0684 | Gear - 33T | 36 | 10 | 1 | 92-0778 | Bearing - Ball | 36 | 11 | 2 |
| 92-0687 | Gear - 16T | 36 | 18 | 1 | 92-0780 | Bearing - Ball | 38 | 3 | 1 |
| 92-0698 | Shaft - Fork R-1 | 37 | 14 | 1 | 92-0781 | Bearing - Needle | 36 | 4 | 4 |
| 92-0699 | Shaft - Fork 2-3 | 37 | 7 | 1 | 92-0782 | Bearing - Needle | 36 | 33 | 1 |
| 92-0700 | Fork - Shift R-1 | 37 | 3 | 1 | 92-0783 | Sleeve - Inner | 35 | 5 | 1 |
| 92-0701 | Fork - Shift 2-3 | 37 | 6 | 1 | 92-0785 | Ball | 37 | 1 | 3 |
| 92-0702 | Arm - Shift Fork R-1 | 37 | 15 | 1 | 92-0787 | O-Ring | 38 | 22 | 1 |
| 92-0703 | Arm - Shift Fork 2-3 | 37 | 5 | 1 | 92-0788 | O-Ring | 34 | 6 | 1 |
| 92-0704 | Arm - Shift Fork Hi-Lo | 37 | 19 | 1 | 92-0789 | O-Ring | 34 | 14 | 1 |
| 92-0705 | Lock - Spindle | 37 | 20 | 1 | 92-0790 | O-Ring | 34 | 29 | 1 |
| 92-0706 | Cap - Fork Shaft | 34 | 25 | 1 | 92-0791 | Seal - Oil | 34 | 26 | 1 |
| 92-0708 | Shaft - Fork Hi-Lo | 37 | 16 | 1 | 92-0793 | Seal - Oil | 34 | 16 | 2 |
| 92-0709 | Fork - Shift Hi-Lo | 37 | 17 | 1 | 92-0796 | Screw - Cap Hex. Hd. | 34 | 31 | 5 |
| 92-0710 | Counter Shaft Assembly | 35 | 14 | 1 | 92-0803 | Screw - Hex. Flange Hd. | 38 | 30 | 12 |
| 92-0710 | Ring Gear Assembly | 38 | 8 | 1 | 92-0804 | Stud | 34 | 28 | 1 |
| 92-0711 | Washer - Thrust | 35 | 4 | 2 | 92-0807 | Cap - Sealing | 34 | 23 | 1 |
| 92-0712 | Bearing - Ball | 35 | 1 | 1 | 92-0808 | Shim Set | 34 | 20 | 1 |
| 92-0713 | Collar | 35 | 12 | 1 | 92-0809 | Shim Set | 34 | 11 | 1 |
| 92-0714 | Bearing - Ball | 35 | 13 | 2 | 92-0815 | Collar | 36 | 34 | 1 |
| 92-0715 | Gear - 49T | 35 | 6 | 1 | 92-1901 | Clip | 57 | 7 | 1 |
| 92-0716 | Collar | 35 | 2 | 1 | 92-1902 | Plug - Taper | 48 | 8 | 1 |
| 92-0717 | Gear - 71T | 35 | 9 | 1 | 92-1903 | Washer | 49 | 17 | 8 |
| 92-0718 | Shifter - Hi-Lo | 35 | 7 | 1 | 92-1905 | Stud | 49 | 20 | 6 |
| 92-0719 | Collar - Spline | 35 | 8 | 1 | 92-1906 | Assembly - Valve | 57 | 16 | 1 |
| 92-0720 | Case - Differential | 38 | 31 | 1 | 92-1907 | Cover - Access | 50 | 19 | 1 |
| 92-0721 | Fork - Differential Lock | 38 | 17 | 1 | 92-1908 | O-Ring | 56 | 17 | 1 |
| 92-0722 | Shaft - Lock Fork | 38 | 18 | 1 | 92-1909 | Nut | 53 | 16 | 6 |
| 92-0723 | Spring - Compression | 38 | 19 | 1 | 92-1910 | Plug - Taper | 48 | 10 | 1 |
| 92-0724 | Arm - Differential Lock | 38 | 27 | 1 | 92-1911 | Guide - Exhaust Valve | 49 | 18 | 1 |
| 92-0725 | Shaft - Axle L.H. | 38 | 28 | 1 | 92-1912 | Pipe - Manifold | 57 | 23 | 1 |
| 92-0726 | Shaft - Axle R.H. | 38 | 1 | 1 | 92-1914 | Bearing - Ball | 51 | 10 | 1 |
| 92-0727 | Washer | 38 | 4 | 2 | 92-1915 | Clamp - Cable | 49 | 8 | 1 |
| 92-0728 | Washer | 38 | 2 | 1 | 92-1916 | Plug - Taper | 49 | 19 | 1 |
| 92-0729 | Seal - Oil | 37 | 10 | 3 | 92-1917 | Nipple | 57 | 25 | 1 |
| 92-0730 | Slider - Differential Lock | 38 | 7 | 1 | 92-1918 | Bolt - Flange Head | 55 | 7 | 1 |
| 92-0731 | Spring - Compression | 37 | 2 | 3 | 92-1920 | Plug - Oil | 50 | 14 | 1 |
| 92-0732 | Plate - Keeper | 37 | 8 | 3 | 92-1921 | Gasket - Oil | 50 | 13 | 1 |
| 92-0733 | Washer | 38 | 20 | 1 | 92-1922 | Washer | 53 | 9 | 1 |
| 92-0740 | Washer - Thrust | 36 | 3 | 3 | 92-1923 | Nut | 51 | 5 | 6 |
| 92-0741 | Washer - Thrust | 35 | 10 | 1 | 92-1924 | Hose - Water By-Pass | 56 | 13 | 1 |

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

| Part No. | Description | Pg. No. | Ref. No. | Qty. | Part No. | Description | Pg. No. | Ref. No. | Qty. |
|----------|---------------------------|-----------|----------|----------|----------|--------------------------|---------|----------|------|
| 92-1925 | O-Ring | 48 | 31 | 1 | 92-1998 | Shaft - Balancer | 54 | 1 | 1 |
| 92-1926 | Guide - Intake Valve | 49 | 15 | 3 | 92-1999 | Rod - Connecting | 51 | 4 | 3 |
| 92-1927 | Plunger - Relief | 55 | 12 | 1 | 92-2000 | Sprocket | 53 | 10 | 1 |
| 92-1928 | Spring - Relief | 55 | 13 | 1 | 92-2001 | Spring | 53 | 7 | 1 |
| 92-1929 | Seal - Oil | 49 | 7 | 2 | 92-2002 | Cap Inlet | 57 | 27 | 1 |
| 92-1930 | Washer - Wave | 53 | 19 | 2 | 92-2003 | Bolt - Connecting Rod | 51 | 3 | 6 |
| 92-1931 | Retainer | 53 | 27 | 6 | 92-2005 | Piston & Pin (Std.) | 51 | 2 | 3 |
| 92-1932 | Bolt | 62 | 29 | 1 | 92-2006 | Assembly - Crankcase | 48 | 1 | 1 |
| 92-1933 | Gauge - Water Temperature | 56 | 11 | 1 | 92-2007 | Pump - Fuel | 41 | 12 | 1 |
| 92-1934 | Bolt - Flywheel | 51 | 11 | 5 | 92-2008 | Cover | 56 | 18 | 1 |
| 92-1935 | Plug - Taper | 48 | 5 | 1 | 92-2009 | Hose - By-Pass | 56 | 14 | 1 |
| 92-1936 | Seal - Valve | 53 | 28 | 6 | 92-2010 | Pin - Dowel | 53 | 25 | 1 |
| 92-1937 | Plate - Rear | 50 | 6 | 1 | 92-2011 | Brace | 62 | 28 | 1 |
| 92-1938 | Cover - Bell Housing | 50 | 7 | 1 | 92-2012 | Bracket - Oil Filter | 48 | 23 | 1 |
| 92-1938 | Cover - Bell Housing | 12 | 29 | 1 | 92-2013 | Piston & Pin | 51 | * | 3 |
| 92-1939 | Gasket | 50 | 16 | 1 | 92-2014 | Piston Ring Set (Std.) | 51 | 1 | 1 |
| 92-1940 | Gasket | 50 | 17 | 1 | 92-2015 | Piston Ring Set | 51 | * | 1 |
| 92-1941 | Gasket - Oil | 55 | 16 | 1 | 92-2016 | Valve - EGR | 57 | 14 | 1 |
| 92-1942 | Gear - Ring | 51 | 8 | 1 | 92-2017 | Bolt - Rocker Shaft | 53 | 21 | 2 |
| 92-1943 | Packing | 49 | 2 | 1 | 92-2018 | Bolt - Rocker Shaft | 53 | 22 | 2 |
| 92-1944 | Gasket - Cover, Rocker | 49 | 10 | 1 | 92-2019 | Strainer - Oil | 50 | 10 | 1 |
| 92-1945 | Cover - Rear | 48 | 29 | 1 | 92-2020 | Assembly - Cover | 49 | 9 | 1 |
| 92-1946 | Gasket - Front | 55 | 10 | 1 | 92-2021 | Seal - Oil | 49 | 12 | 1 |
| 92-1947 | Arm - Rocker | 53 | 18 | 6 | 92-2022 | Mount - Engine | 54 | 2 | 1 |
| 92-1948 | Gear - Oil Pump | 55 | 5 | 1 | 92-2023 | Manifold - Exhaust | 57 | 19 | 1 |
| 92-1949 | Gear - Oil Pump | 55 | 6 | 1 | 92-2024 | Pipe - Water | 56 | 15 | 1 |
| 92-1950 | Gasket | 56 | 7 | 1 | 92-2025 | Assembly - Alternator | 62 | * | 1 |
| 92-1951 | Nipple | 57 | 26 | 1 | 92-2026 | Hose - PCV Valve | 49 | 4 | 1 |
| 92-1952 | Seal - Oil | 48 | 27 | 1 | 92-2027 | Coil - Ignition | 29 | 14 | 1 |
| 92-1953 | Screw - Adjusting | 53 | 17 | 6 | 92-2028 | Wire - High Tension | 60 | 21 | 1 |
| 92-1954 | Valve - Inlet | 53 | 29 | 3 | 92-2029 | Wire - Spark Plug, #1 | 60 | 20 | 1 |
| 92-1955 | Valve - Exhaust | 53 | 31 | 3 | 92-2030 | Wire - Spark Plug, #2 | 60 | 19 | 1 |
| 92-1956 | Bearing - Set, Main | 48 | 17 | 1 | 92-2031 | Wire - Spark Plug, #3 | 60 | 22 | 1 |
| 92-1957 | Rod Bearing Set | 51 | 6 | 1 | 92-2032 | Seal - Oil | 55 | 3 | 1 |
| 92-1958 | Pin - Dowel | 48 | 15 | 1 | 92-2034 | Head - Cylinder | 49 | 11 | 1 |
| 92-1959 | Seat - Intake Valve | 49 | 21 | 3 | 92-2035 | Cover - Front | 50 | 5 | 1 |
| 92-1960 | Seal - Oil | 55 | 11 | 1 | 92-2036 | Cover - Exhaust Manifold | 57 | 17 | 1 |
| 92-1961 | Seal - Valve | 53 | 13 | 6 | 92-2037 | Kit - Gasket | 58 | 14 | 1 |
| 92-1962 | Gasket | 50 | 3 | 1 | 92-2038 | Kit - Gasket | 58 | 12 | 1 |
| 92-1962 | Gasket | 50 | 20 | 1 | 92-2039 | Kit - Thermostat | 56 | 8 | 1 |
| 92-1963 | Mount - Engine | 57 | 8 | 1 | 92-2040 | Pulley | 56 | 3 | 1 |
| 92-1964 | Plate - Cam | 53 | 14 | 1 | 92-2041 | V-Belt | 56 | 1 | 1 |
| 92-1965 | Assembly - Cover | 50 | 2 | 1 | 92-2042 | Sprocket - Oil | 53 | 33 | 1 |
| 92-1966 | Gasket | 50 | 21 | 1 | 92-2043 | Assembly - Distributor | 60 | * | 1 |
| 92-1967 | Assembly - Cover | 50 | 15 | 1 | 92-2044 | Gasket - Exhaust | 29 | 54 | 1 |
| 92-1968 | Tensioner - Belt | 53 | 30 | 1 | 92-2044 | Gasket - Exhaust Ring | 57 | 18 | 1 |
| 92-1971 | Bolt | 49 | 16 | 8 | 92-2045 | Housing - Seal, Oil | 48 | 26 | 1 |
| 92-1972 | Washer | 53 | 20 | 2 | 92-2046 | Assembly - Oil Pump | 55 | 4 | 1 |
| 92-1973 | Shaft - Rocker Arm | 53 | 23 | 1 | 92-2049 | Assembly - Camshaft | 53 | 24 | 1 |
| 92-1974 | Assembly - Case | 55 | 8 | 1 | 92-2050 | PCV Valve | 49 | 3 | 1 |
| 92-1975 | Cap - Oil | 49 | 1 | 1 | 92-2053 | Assembly - Oil Pan | 50 | 11 | 1 |
| 92-1976 | Seat - Exhaust Valve | 49 | 22 | 3 | 92-2054 | Manifold - Intake | 57 | 9 | 1 |
| 92-1977 | Spring - Valve | 53 | 12 | 6 | 92-2055 | Assembly - Starter | 61 | * | 1 |
| 92-1978 | Switch - Oil Pressure | 54 | 4 | 1 | 92-2056 | Flange - PTO | 53 | 32 | 1 |
| 92-1980 | Flywheel | 51 | 9 | 1 | 92-2057 | Bolt - Crankshaft PTO | 51 | 14 | 1 |
| 92-1981 | Bearing - Front | 48 | 13 | 1 | 92-2058 | Carburetor | 58 | 11 | 1 |
| 92-1982 | Bearing - Rear | 48 | 7 | 1 | 92-2059 | Belt - Timing | 53 | 11 | 1 |
| 92-1983 | Retainer | 55 | 14 | 1 | 92-2060 | Assembly - Water Pump | 56 | 5 | 1 |
| 92-1984 | Washer | 62 | 27 | 1 | 92-2061 | Assembly - PTO Sprocket | 53 | 3 | 1 |
| 92-1985 | Outlet - Water | 57 | 2 | 1 | 92-2062 | Assembly - PTO Adapter | 53 | 2 | 1 |
| 92-1987 | Gasket | 48 | 25 | 1 | 92-2063 | Washer | 49 | 6 | 2 |
| 92-1988 | Gasket - Oil | 50 | 9 | 1 | 92-2065 | Bearing | 62 | 5 | 1 |
| 92-1989 | Gasket | 56 | 6 | 1 | 92-2066 | Nut | 62 | 23 | 2 |
| 92-1991 | Gasket | 48 | 30 | 1 | 92-2067 | Spring - Brush | 62 | 16 | 2 |
| 92-1993 | Gasket - Intake | 57 | 10 | 1 | 92-2068 | Brush | 62 | 17 | 2 |
| 92-1994 | Cap - Sealing | 48 | 4 | 1 | 92-2069 | Cover - Bearing | 62 | 11 | 1 |
| 92-1995 | Assembly - Crankshaft | 51 | 7 | 1 | 92-2070 | Bearing | 62 | 10 | 1 |
| 92-1996 | Assembly - Cover, Front | 50 | 18 | 1 | 92-2071 | Screw | 62 | 18 | 2 |
| 92-1997 | Gasket - Cylinder | 49 | 23 | 1 | 92-2073 | Assembly - Holder | 62 | 15 | 1 |

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

| Part No. | Description | Pg. No. | Ref. No. | Qty. | Part No. | Description | Pg. No. | Ref. No. | Qty. |
|----------|-----------------------------|---------|----------|------|----------|---------------------------|---------|----------|------|
| 92-2075 | Assembly - Rotor | 62 | 9 | 1 | 92-2148 | Pin - Dowel | 48 | 6 | 1 |
| 92-2076 | Plate | 62 | 7 | 1 | 92-2148 | Pin - Dowel | 51 | 13 | 1 |
| 92-2077 | Screw | 62 | 8 | 4 | 92-2149 | Pin | 53 | 1 | 2 |
| 92-2078 | Bolt | 62 | 4 | 2 | 92-2150 | Ring - Snap | 55 | 15 | 1 |
| 92-2079 | Collar | 62 | 2 | 1 | 92-2151 | Cap - Plug | 57 | 29 | 1 |
| 92-2080 | Frame - End | 62 | 24 | 1 | 92-2151 | Cap - Sealing | 48 | 2 | 3 |
| 92-2081 | Cover - End | 62 | 13 | 1 | 92-2151 | Cap - Sealing | 49 | 13 | 1 |
| 92-2082 | Rectifier | 62 | 22 | 1 | 92-2152 | Bushing | 48 | 3 | 4 |
| 92-2083 | Bushing | 62 | 21 | 1 | 92-2153 | Plug - Spark | 60 | 18 | 3 |
| 92-2084 | Regulator | 62 | 20 | 1 | 92-2154 | Kit - Diaphragm | 59 | 20 | 1 |
| 92-2085 | Screw W/washer | 62 | 6 | 6 | 92-2155 | Gasket - Water Inlet | 56 | 21 | 1 |
| 92-2085 | Screw W/washer | 62 | 14 | 6 | 92-2156 | Nut - Alternator | 62 | 31 | 1 |
| 92-2086 | Screw W/washer | 62 | 19 | 1 | 92-2160 | Cartridge - Relief Valve | 43 | 12 | 1 |
| 92-2087 | Bolt W/washer | 62 | 12 | 3 | 92-2161 | Body - Relief Valve | 43 | 28 | 1 |
| 92-2088 | Yoke | 61 | 15 | 1 | 92-2162 | Head | 45 | 6 | 1 |
| 92-2089 | Brush | 61 | 16 | 4 | 92-2163 | Shaft | 45 | 2 | 1 |
| 92-2090 | Spring | 61 | 17 | 4 | 92-2165 | Kit - Repair | 45 | * | 1 |
| 92-2091 | Assembly - Holder | 61 | 14 | 1 | 92-2173 | Screw - Cap Socket Head | 26 | 18 | 8 |
| 92-2092 | Insulator | 61 | 13 | 1 | 92-2174 | Screw - Adjusting | 26 | 22 | 1 |
| 92-2093 | Armature | 61 | 6 | 1 | 92-2175 | Gear | 26 | 11 | 2 |
| 92-2094 | Clutch | 61 | 7 | 1 | 92-2176 | Pin - Dowel | 26 | 16 | 2 |
| 92-2095 | Kit - Switch | 61 | 4 | 1 | 92-2177 | Pin - Shear | 26 | 7 | 1 |
| 92-2096 | Ring - Snap | 61 | 9 | 1 | 92-2178 | Ring - Crescent | 26 | 4 | 4 |
| 92-2097 | Nut | 61 | 8 | 2 | 92-2179 | Key - Square | 26 | 5 | 1 |
| 92-2098 | Washer | 61 | 10 | 1 | 92-2179 | Key - Square | 25 | 18 | 1 |
| 92-2099 | Bolt | 61 | 11 | 2 | 92-2180 | Gasket - Copper | 26 | 23 | 1 |
| 92-2100 | Bolt | 62 | 25 | 2 | 92-2181 | Plate - Pressure | 26 | 13 | 1 |
| 92-2102 | Lever - Clutch | 61 | 3 | 1 | 92-2182 | Plate - Seal | 26 | 9 | 1 |
| 92-2103 | Assembly - Bracket, Front | 62 | 3 | 1 | 92-2183 | Plate - Wear | 26 | 10 | 1 |
| 92-2106 | Nut | 61 | 2 | 2 | 92-2184 | Cap - Relief Valve | 26 | 24 | 1 |
| 92-2107 | Nut | 61 | 5 | 1 | 92-2185 | Plug | 26 | 19 | 1 |
| 92-2108 | Igniter Set | 60 | 12 | 1 | 92-2186 | Spacer | 26 | 3 | 1 |
| 92-2109 | O-Ring | 60 | 8 | 1 | 92-2187 | Housing - Gear, End | 26 | 17 | 1 |
| 92-2110 | Cover - Acc. Pump | 59 | 19 | 1 | 92-2188 | Stator | 26 | 8 | 1 |
| 92-2111 | Kit - Mixing Screw | 58 | 2 | 1 | 92-2189 | Shaft - Drive | 26 | 6 | 1 |
| 92-2113 | Rotor | 60 | 2 | 1 | 92-2190 | Shaft - Idler | 26 | 25 | 1 |
| 92-2114 | Assembly - Cap | 60 | 1 | 1 | 92-2191 | Bearing | 26 | 27 | 1 |
| 92-2115 | Screw Set | 60 | 14 | 1 | 92-2192 | Bearing | 26 | 12 | 4 |
| 92-2116 | Assembly - Signal Rotor | 60 | 6 | 1 | 92-2193 | Ball | 26 | 20 | 1 |
| 92-2117 | Chamber - Vacuum | 60 | 7 | 1 | 92-2194 | Spring | 26 | 21 | 1 |
| 92-2118 | Plate | 60 | 10 | 1 | 92-2195 | Seal - Oil | 26 | 2 | 1 |
| 92-2119 | Wire - Lead | 60 | 11 | 1 | 92-2196 | Seal - Pressure Plate | 26 | 15 | 1 |
| 92-2120 | Gasket | 60 | 3 | 1 | 92-2197 | Seal - Back Up | 26 | 14 | 1 |
| 92-2121 | Wire Assembly - Lead | 60 | 13 | 1 | 92-2198 | Seal | 26 | 26 | 1 |
| 92-2122 | Housing | 60 | 9 | 1 | 92-2199 | Key - Ball | 26 | 28 | 1 |
| 92-2125 | Assy. - Spark Plug Wire Set | 60 | * | 1 | 92-2379 | Clamp - Hose | 25 | 4 | 3 |
| 92-2126 | Kit - Gasket, Upper | 63 | 3 | 1 | 92-2379 | Clamp - Hose | 41 | 6 | 2 |
| 92-2127 | Kit - Overhaul Gasket | 63 | 2 | 1 | 92-2379 | Clamp - Hose | 40 | 13 | 1 |
| 92-2128 | Bolt - Cover | 49 | 5 | 2 | 92-2609 | Decal - Remote Hydraulics | 13 | 18 | 1 |
| 92-2129 | Screw - Cap Hex. Hd. | 12 | 30 | 2 | 92-2697 | Hose - Hydraulic | 44 | 1 | 1 |
| 92-2130 | Bolt - Flange Head | 53 | 15 | 2 | 92-4101 | Primary Piston Assembly | 9 | 11 | 1 |
| 92-2131 | Bolt - Flange Head | 50 | 4 | 3 | 92-4102 | Secondary Piston Assembly | 9 | 4 | 1 |
| 92-2131 | Bolt - Flange Head | 48 | 28 | 7 | 92-4103 | Pin - Stop | 9 | 3 | 1 |
| 92-2132 | Bolt | 56 | 16 | 1 | 92-4104 | Adaptor - Pipe Fitting | 9 | 1 | 2 |
| 92-2133 | Bolt - Flange Head | 62 | 26 | 1 | 92-4105 | Seal Kits | 9 | 2 | 1 |
| 92-2134 | Bolt - Flange Head | 62 | 30 | 1 | 92-4106 | Rod - Push | 9 | 8 | 1 |
| 92-2135 | Bolt - Flange Head | 53 | 8 | 1 | 92-4107 | Dust Cover | 9 | 7 | 1 |
| 92-2137 | Bolt/washer | 50 | 12 | 2 | 92-4108 | Washer - Retainer | 9 | 10 | 1 |
| 92-2138 | Bolt | 57 | 1 | 3 | 92-4109 | Circlip | 9 | 9 | 1 |
| 92-2138 | Bolt | 56 | 19 | 2 | 92-4110 | Clevis | 9 | 5 | 1 |
| 92-2139 | Bolt | 57 | 4 | 1 | 92-4111 | Petcock - Radiator | 25 | 42 | 1 |
| 92-2140 | Bolt | 57 | 28 | 1 | 92-4112 | Cap Assembly | 8 | 5 | 1 |
| 92-2141 | Bolt | 57 | 3 | 2 | 92-4113 | Screw - Bleed | 21 | 4 | 1 |
| 92-2142 | Bolt/washer | 56 | 4 | 3 | 92-4114 | Cap - Bleed Screw | 21 | 5 | 1 |
| 92-2143 | Bolt | 48 | 22 | 3 | 92-4114 | Cap - Bleed Screw | 24 | 5 | 1 |
| 92-2144 | Bolt | 48 | 20 | 2 | 92-4115 | Backplate Assembly LH | 21 | 2 | 1 |
| 92-2145 | Nut - Flange | 53 | 5 | 1 | 92-4116 | Backplate Assembly RH | 21 | * | 1 |
| 92-2146 | Washer | 60 | 15 | 1 | 92-4117 | Wheel Cylinder Assy. - LH | 21 | * | 1 |
| 92-2147 | Washer | 53 | 6 | 1 | 92-4118 | Wheel Cylinder Assy. - RH | 21 | * | 1 |

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

| Part No. | Description | Pg. Ref. No. No. Qty. | Part No. | Description | Pg. Ref. No. No. Qty. |
|----------|------------------------------|--------------------------|----------|---------------------------|--------------------------|
| 92-4119 | Kit - Seal | 21 * 1 | 92-5105 | Guide - Exhaust Valve | 49 * 1 |
| 92-4120 | Shoe & Lining Set | 21 13 1 | 92-5106 | Guide - Exhaust Valve | 49 * 1 |
| 92-4121 | Adjuster Assembly - LH | 21 * 1 | 92-5107 | Stud | 48 14 1 |
| 92-4122 | Adjuster Assembly - RH | 21 * 1 | 92-5108 | Gasket - Bracket | 48 24 1 |
| 92-4123 | Pawl Assembly - LH | 21 19 1 | 92-5109 | Stay - Oil Filter | 48 21 1 |
| 92-4123 | Pawl Assembly - LH | 24 19 1 | 92-5110 | Gauge - Oil Level | 48 19 1 |
| 92-4124 | Pawl Assembly - RH | 21 * 1 | 92-5111 | Guide - Oil Level Gauge | 48 32 1 |
| 92-4124 | Pawl Assembly - RH | 24 * 1 | 92-5112 | Bolt - Flange Head | 48 18 1 |
| 92-4125 | Plug | 21 3 1 | 92-5112 | Bolt - Flange Head | 56 2 4 |
| 92-4126 | Spring - Shoe, Upper LH | 21 14 1 | 92-5113 | Bolt - Flange Head | 50 1 3 |
| 92-4127 | Spring - Shoe, Upper RH | 21 * 1 | 92-5114 | Piston & Pin | 51 * 3 |
| 92-4128 | Spring - Shoe, Lower | 21 15 1 | 92-5116 | Piston & Pin | 51 * 3 |
| 92-4129 | Spring - Adjuster, LH | 21 20 1 | 92-5117 | Piston & Pin | 51 * 3 |
| 92-4130 | Spring - Adjuster, RH | 21 * 1 | 92-5118 | Piston Ring Set | 51 * 1 |
| 92-4131 | Washer - Hold Down | 21 22 2 | 92-5120 | Piston Ring Set | 51 * 1 |
| 92-4131 | Washer - Hold Down | 24 22 2 | 92-5121 | Piston Ring Set | 51 * 1 |
| 92-4132 | Spring - Hold Down | 21 23 2 | 92-5122 | Nut - Timing Belt | 53 4 1 |
| 92-4133 | Pin - Hold Down | 21 26 2 | 92-5123 | Bolt - Engine Mount | 54 3 3 |
| 92-4133 | Pin - Hold Down | 24 26 2 | 92-5124 | Body - Choke, Auto | 58 15 1 |
| 92-4134 | Plug - Inspection | 21 25 1 | 92-5125 | Kit - Check Valve | 59 13 1 |
| 92-4134 | Plug - Inspection | 24 25 1 | 92-5126 | Cover - Carburetor Top | 58 5 1 |
| 92-4135 | Set Bolt | 21 1 2 | 92-5127 | Kit - Float & Pin | 59 12 1 |
| 92-4135 | Set Bolt | 24 1 2 | 92-5128 | Insulator - Carburetor | 58 13 1 |
| 92-4137 | Screw - Bleed | 24 4 1 | 92-5129 | Jet - Pilot | 59 8 1 |
| 92-4138 | Backplate Assembly LH | 24 2 1 | 92-5130 | Jet - Main | 59 10 1 |
| 92-4139 | Backplate Assembly RH | 24 * 1 | 92-5131 | Jet - Power | 59 11 1 |
| 92-4140 | Wheel Cylinder Assy. - LH | 24 * 1 | 92-5132 | Kit - Holder, Main Jet | 59 6 1 |
| 92-4141 | Wheel Cylinder Assy. - RH | 24 * 1 | 92-5133 | Kit - Lever, Throttle | 59 2 1 |
| 92-4142 | Seal Kit | 24 * 1 | 92-5134 | Orifice - Choke | 58 8 1 |
| 92-4143 | Shoe & Lining Set | 24 13 1 | 92-5135 | Kit - Screw | 59 5 1 |
| 92-4144 | Adjuster Assembly - LH | 24 * 1 | 92-5136 | Kit - Adjusting Screw | 58 1 1 |
| 92-4145 | Adjuster Assembly - RH | 24 * 1 | 92-5137 | Spring | 58 4 1 |
| 92-4146 | Plug | 24 3 1 | 92-5140 | Kit - Needle Valve | 59 21 1 |
| 92-4147 | Spring - Shoe, Upper LH | 24 14 1 | 92-5141 | Valve - Fuel Cut-Off | 59 22 1 |
| 92-4148 | Spring - Shoe, Upper RH | 24 * 1 | 92-5142 | Valve - Carburetor Piston | 58 3 1 |
| 92-4149 | Spring - Shoe, Lower | 24 15 1 | 92-5143 | Gasket - Choke, Auto | 58 17 1 |
| 92-4150 | Spring - Adjuster, LH | 24 20 1 | 92-5144 | Cover - Float Chamber | 59 14 1 |
| 92-4151 | Spring - Adjuster, RH | 24 * 1 | 92-5145 | Screw | 58 7 6 |
| 92-4152 | Spring - Hold Down | 24 23 2 | 92-5146 | Screw | 59 18 4 |
| 92-4153 | Steering Column Assembly | 5 11 1 | 92-5147 | Screw | 59 15 4 |
| 92-4154 | Universal Joint Assembly | 5 31 1 | 92-5148 | Screw | 59 1 1 |
| 92-4155 | Upper Slip Joint Assembly | 5 28 1 | 92-5149 | Screw | 58 16 1 |
| 92-4156 | Lower Slip Joint Assembly | 5 29 1 | 92-5150 | O-Ring | 59 9 1 |
| 92-4157 | Boot - Steering Shaft | 5 24 1 | 92-5151 | O-Ring | 59 16 1 |
| 92-4158 | Valve Assy. - Hyd. Gear | 7 * 1 | 92-5152 | O-Ring | 59 7 1 |
| 92-4159 | Nut - Adjuster Plug Lock | 6 25 1 | 92-5153 | O-Ring | 59 17 1 |
| 92-4160 | Bearing Service Kit - Upper | 7 * 1 | 92-5154 | Nut - Carburetor, INR | 59 4 1 |
| 92-4161 | Service Cover Assembly | 6 * 1 | 92-5155 | Clamp - Carburetor | 58 9 1 |
| 92-4162 | Pitman Shaft - Gear Service | 7 * 1 | 92-5156 | Clamp - Carburetor INR | 58 6 1 |
| 92-4163 | Steering Housing Assembly | 7 * 1 | 92-5157 | Bolt | 58 10 2 |
| 92-4164 | Plug Assy. - Service Adjust. | 7 * 1 | 92-5160 | Valve - Thermostat | 56 9 1 |
| 92-4165 | Plug - Housing End | 6 2 1 | 92-5161 | Gasket | 56 10 1 |
| 92-4166 | Rack/Piston/Nut Assembly | 7 * 1 | 92-5162 | Plug - Inlet | 57 24 1 |
| 92-4167 | Service Plug Assembly | 7 * 1 | 92-5163 | Gasket - EGR Valve | 57 15 1 |
| 92-4168 | Return - Guide Ball | 6 7 2 | 92-5164 | Assembly - Hose | 57 11 1 |
| 92-4169 | Bearing - Needle | 6 21 1 | 92-5165 | Clip | 57 12 1 |
| 92-4170 | Bearing - Pitman Shaft | 6 47 1 | 92-5166 | Bolt | 57 13 2 |
| 92-4177 | Yoke - Double Clamp | 23 34 2 | 92-5167 | Bracket - Front | 61 1 1 |
| 92-4178 | Cross & Bearing Kit | 23 30 4 | 92-5168 | Bracket - Rear | 61 12 1 |
| 92-4179 | Yoke, Shaft & Seal | 23 33 2 | 92-5169 | Pulley | 62 1 1 |
| 92-4180 | Seal | 23 32 2 | 92-5170 | Cover | 60 4 1 |
| 92-4182 | Yoke & Hub Assembly | 23 31 2 | 92-5171 | Gasket - Cover | 60 5 1 |
| 92-4183 | Yoke - End | 23 29 2 | 92-5172 | Clamp | 60 23 1 |
| 92-4184 | Ring - Snap | 23 28 16 | 92-5951 | Angle - Hitch | 23 40 1 |
| 92-5100 | Gasket - Liquid | 63 1 1 | 92-5972 | Grommet | 14 5 4 |
| 92-5101 | Seat - Exhaust Valve | 49 * 3 | 218-446 | Nut - Hex. | 2 11 1 |
| 92-5102 | Seat - Intake Valve | 49 * 3 | 218-447 | Washer - Lock | 2 12 1 |
| 92-5103 | Guide - Intake Valve | 49 * 3 | 218-574 | Fuse 7.5 Amp. | 2 46 2 |
| 92-5104 | Guide - Intake Valve | 49 * 3 | 218-578 | Fuse 10 Amp. | 3 61 1 |

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

| Part No. | Description | Pg. No. | Ref. No. | Qty. | Part No. | Description | Pg. No. | Ref. No. | Qty. |
|----------|----------------------|---------|----------|------|----------|-------------------------|---------|----------|------|
| 218-600 | Bulb | 2 | 13 | 2 | 283-14 | Pin - Clevis | 16 | 23 | 1 |
| 219-17 | Bulb - Warning Light | 3 | 59 | 4 | 283-30 | Pin - Clevis | 12 | 35 | 1 |
| 232-27 | Stem - Valve | 20 | 31 | 2 | 283-30 | Pin - Clevis | 8 | 42 | 1 |
| 232-27 | Valve - Stem | 23 | 17 | 2 | 283-62 | Pin - Clevis | 16 | 6 | 1 |
| 233-37 | Knob | 15 | 1 | 1 | 283-62 | Pin - Clevis | 15 | 8 | 3 |
| 233-39 | Knob | 43 | 1 | 1 | 283-62 | Pin - Clevis | 32 | 35 | 3 |
| 233-39 | Knob | 5 | 1 | 1 | 283-85 | Pin - Clevis | 8 | 39 | 1 |
| 233-48 | Knob | 16 | 4 | 1 | 285-17 | Plug - Pipe | 31 | 15 | 2 |
| 237-21 | Seal - O-Ring | 44 | 2 | 6 | 302-5 | Fitting - Grease | 19 | 14 | 4 |
| 237-22 | Seal - O-Ring | 44 | 5 | 3 | 302-5 | Fitting - Grease | 20 | 20 | 4 |
| 237-22 | Seal - O-Ring | 43 | 9 | 4 | 302-5 | Fitting - Grease | 5 | 30 | 1 |
| 237-30 | O-Ring | 32 | 34 | 2 | 302-5 | Fitting - Grease | 23 | 35 | 2 |
| 237-42 | O-Ring | 46 | 2 | 2 | 302-11 | Fitting - Grease | 18 | 8 | 2 |
| 237-42 | Seal - O-Ring | 44 | 7 | 2 | 321-2 | Screw - Cap Hex. Hd. | 2 | 1 | 7 |
| 237-42 | Seal - O-Ring | 43 | 11 | 2 | 321-3 | Screw - Cap Hex. Hd. | 2 | 4 | 2 |
| 237-42 | Seal - O-Ring | 32 | 47 | 1 | 321-3 | Screw - Cap Hex. Hd. | 30 | 7 | 1 |
| 237-78 | Seal - O-Ring | 44 | 15 | 4 | 321-3 | Screw - Cap Hex. Hd. | 25 | 28 | 4 |
| 237-79 | Seal - O-Ring | 44 | 25 | 1 | 321-3 | Screw - Cap Hex. Hd. | 5 | 33 | 2 |
| 237-79 | Seal - O-Ring | 32 | 39 | 2 | 321-4 | Screw - Cap Hex. Hd. | 28 | 1 | 2 |
| 237-80 | Seal - O-Ring | 44 | 24 | 1 | 321-4 | Screw - Cap Hex. Hd. | 47 | 3 | 4 |
| 237-81 | Seal - O-Ring | 32 | 28 | 1 | 321-4 | Screw - Cap Hex. Hd. | 39 | 8 | 1 |
| 237-123 | Seal - O-Ring | 32 | 25 | 1 | 321-4 | Screw - Cap Hex. Hd. | 13 | 9 | 8 |
| 240-5 | Grommet | 12 | 32 | 1 | 321-4 | Screw - Cap Hex. Hd. | 25 | 12 | 4 |
| 240-6 | Grommet | 8 | 22 | 1 | 321-4 | Screw - Cap Hex. Hd. | 29 | 15 | 1 |
| 241-119 | Cap Dust | 20 | 1 | 2 | 321-4 | Screw - Cap Hex. Hd. | 10 | 17 | 2 |
| 2410-35 | Plug - Hole | 2 | 6 | 1 | 321-4 | Screw - Cap Hex. Hd. | 14 | 20 | 8 |
| 2410-42 | Cap - Front Bumper | 1 | 12 | 2 | 321-4 | Screw - Cap Hex. Hd. | 12 | 26 | 1 |
| 2410-64 | Plug - Hole | 2 | 21 | 1 | 321-4 | Screw - Cap Hex. Hd. | 8 | 27 | 1 |
| 2410-64 | Plug - Hole | 3 | 62 | 1 | 321-4 | Screw - Cap Hex. Hd. | 2 | 33 | 1 |
| 2411-33 | Joint - Ball | 12 | 3 | 1 | 321-4 | Screw - Cap Hex. Hd. | 30 | 30 | 2 |
| 2412-10 | Clamp - R | 19 | 7 | 2 | 321-6 | Screw - Cap Hex. Hd. | 19 | 5 | 2 |
| 2412-10 | Clamp - R | 29 | 43 | 1 | 321-6 | Screw - Cap Hex. Hd. | 47 | 14 | 12 |
| 2412-34 | Clamp | 44 | 22 | 1 | 321-9 | Screw - Cap Hex. Hd. | 43 | 5 | 2 |
| 2412-34 | Clamp - Hose | 25 | 9 | 2 | 321-9 | Screw - Cap Hex. Hd. | 10 | 16 | 4 |
| 2412-34 | Clamp - Hose | 29 | 30 | 2 | 321-9 | Screw - Cap Hex. Hd. | 16 | 27 | 1 |
| 2412-34 | Clamp - Hose | 33 | 53 | 1 | 321-14 | Screw - Cap Hex. Hd. | 44 | 8 | 2 |
| 2412-36 | Clamp | 40 | 8 | 2 | 321-15 | Screw - Cap Hex. Hd. | 43 | 13 | 1 |
| 2412-36 | Clamp - Hose | 32 | 3 | 3 | 322-2 | Screw - Cap Hex. Hd. | 8 | 2 | 12 |
| 2412-82 | Clamp - R | 28 | 10 | 1 | 322-2 | Screw - Cap Hex. Hd. | 10 | 8 | 1 |
| 2412-89 | Clamp - R | 28 | 2 | 2 | 322-2 | Screw - Cap Hex. Hd. | 41 | 16 | 4 |
| 2412-89 | Clamp - R | 47 | 2 | 1 | 322-2 | Screw - Cap Hex. Hd. | 5 | 16 | 6 |
| 2412-89 | Clamp - R | 39 | 5 | 1 | 322-2 | Screw - Cap Hex. Hd. | 25 | 39 | 4 |
| 2412-89 | Clamp - R | 12 | 25 | 1 | 322-2 | Screw - Cap Hex. Hd. | 29 | 42 | 1 |
| 2412-89 | Clamp - R | 8 | 26 | 1 | 322-2 | Screw - Cap Hex. Hd. | 2 | 50 | 3 |
| 2412-89 | Clamp - R | 2 | 32 | 1 | 322-3 | Screw - Cap Hex. Hd. | 44 | 20 | 4 |
| 2412-92 | Clamp - Hose | 29 | 2 | 1 | 322-5 | Screw - Cap Hex. Hd. | 27 | 2 | 4 |
| 2412-92 | Clamp - Hose | 41 | 14 | 2 | 322-5 | Screw - Cap Hex. Hd. | 13 | 6 | 8 |
| 2412-96 | Clamp - R | 41 | 4 | 1 | 322-5 | Screw - Cap Hex. Hd. | 19 | 10 | 2 |
| 2412-105 | Clamp - R | 5 | 17 | 2 | 322-5 | Screw - Cap Hex. Hd. | 8 | 13 | 1 |
| 2412-108 | Clamp - Hose | 41 | 8 | 2 | 322-5 | Screw - Cap Hex. Hd. | 25 | 22 | 4 |
| 2412-108 | Clamp - Hose | 40 | 10 | 1 | 322-5 | Screw - Cap Hex. Hd. | 43 | 24 | 1 |
| 2412-108 | Clamp - Hose | 29 | 47 | 2 | 322-6 | Screw - Cap Hex. Hd. | 29 | 4 | 2 |
| 2412-119 | Clamp - Hose | 29 | 6 | 4 | 322-7 | Screw - Cap Hex. Hd. | 27 | 9 | 4 |
| 2412-130 | Clamp - Hose | 29 | 32 | 2 | 322-12 | Screw - Cap Hex. Hd. | 15 | 25 | 1 |
| 2412-133 | R-Clamp | 14 | 3 | 2 | 323-4 | Screw - Cap Hex. Hd. | 40 | 16 | 2 |
| 2412-143 | Clamp - Hose | 8 | 15 | 2 | 323-4 | Screw - Cap Hex. Hd. | 1 | 22 | 1 |
| 2412-144 | Clamp - Hose | 8 | 34 | 2 | 323-6 | Screw - Cap Hex. Hd. | 16 | 1 | 1 |
| 2412-149 | Clamp - Tube | 22 | 24 | 5 | 323-6 | Screw - Cap Hex. Hd. | 41 | 2 | 1 |
| 2412-149 | R-Clamp | 10 | 18 | 2 | 323-6 | Screw - Cap Hex. Hd. | 23 | 11 | 8 |
| 251-8 | Bearing - Ball | 36 | 1 | 2 | 323-6 | Screw - Cap Hex. Hd. | 14 | 12 | 2 |
| 251-82 | Bearing - Ball | 27 | 11 | 2 | 323-6 | Screw - Cap Hex. Hd. | 22 | 31 | 2 |
| 251-346 | Bearing - Ball | 36 | 8 | 1 | 323-6 | Screw - Cap Hex. Hd. | 15 | 37 | 1 |
| 254-72 | Cup - Bearing | 20 | 29 | 2 | 323-7 | Screw - Cap Hex. Hd. | 32 | 14 | 4 |
| 254-94 | Cone - Bearing | 20 | 30 | 2 | 323-7 | Screw - Cap Hex. Hd. | 30 | 27 | 3 |
| 254-106 | Cone - Bearing | 20 | 27 | 2 | 323-7 | Screw - Cap Hex. Hd. | 8 | 31 | 2 |
| 254-107 | Cup - Bearing | 20 | 28 | 2 | 323-7 | Screw - Cap Hex. Hd. | 23 | 42 | 4 |
| 256-257 | Bushing - Flange | 8 | 1 | 2 | 323-8 | Screw - Hex. Flange Hd. | 20 | 11 | 8 |
| 256-257 | Bushing - Flange | 12 | 38 | 2 | 323-9 | Screw - Cap Hex. Hd. | 39 | 16 | 1 |
| 283-2 | Pin - Clevis | 8 | 29 | 1 | 323-10 | Screw - Cap Hex. Hd. | 32 | 8 | 1 |

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

| Part No. | Description | Pg. No. | Ref. No. | Qty. | Part No. | Description | Pg. No. | Ref. No. | Qty. |
|----------|-------------------------|---------|----------|------|----------|-------------------------|---------|----------|------|
| 323-12 | Screw - Cap Hex. Hd. | 18 | 6 | 8 | 3253-21 | Washer - Lock | 14 | 13 | 2 |
| 323-29 | Screw - Cap Hex. Hd. | 29 | 55 | 2 | 3253-21 | Washer - Lock | 20 | 33 | 8 |
| 324-8 | Screw - Cap Hex. Hd. | 5 | 19 | 3 | 3253-22 | Washer - Lock | 12 | 9 | 4 |
| 324-9 | Screw - Cap Hex. Hd. | 18 | 22 | 4 | 3253-22 | Washer - Lock | 30 | 17 | 1 |
| 324-10 | Screw - Cap Hex. Hd. | 18 | 1 | 4 | 3253-22 | Washer - Lock | 5 | 37 | 3 |
| 324-13 | Screw - Cap Hex. Hd. | 18 | 10 | 2 | 3253-23 | Washer - Flat | 13 | 4 | 8 |
| 324-19 | Screw - Cap Hex. Hd. | 28 | 6 | 2 | 3254-1 | Washer - Lock | 2 | 36 | 1 |
| 325-4 | Screw - Cap Hex. Hd. | 14 | 15 | 2 | 3254-2 | Washer - Lock | 29 | 11 | 1 |
| 325-13 | Screw - Cap Hex. Hd. | 19 | 11 | 8 | 3255-9 | Washer - Lock ETLW | 39 | 2 | 1 |
| 325-13 | Screw - Cap Hex. Hd. | 18 | 27 | 4 | 3256-3 | Washer - Flat | 27 | 8 | 4 |
| 325-19 | Screw - Cap Hex. Hd. | 23 | 27 | 1 | 3256-4 | Washer - Flat | 32 | 12 | 1 |
| 325-20 | Screw - Cap Hex. Hd. | 23 | 24 | 5 | 3256-6 | Washer - Flat | 22 | 9 | 4 |
| 3210-9 | Screw - Cap Hex. Hd. | 30 | 6 | 1 | 3256-6 | Washer - Flat | 18 | 32 | 2 |
| 3211-8 | Screw - Cap Hex. Hd. | 15 | 13 | 2 | 3256-14 | Washer - Flat | 43 | 30 | 1 |
| 3215-1 | Screw - Cap Hex. Hd. | 32 | 16 | 2 | 3256-22 | Washer - Flat | 10 | 4 | 4 |
| 3217-25 | Nut - Hex. | 2 | 38 | 2 | 3256-22 | Washer - Flat | 2 | 5 | 2 |
| 3217-26 | Nut - Hex. | 2 | 37 | 1 | 3256-22 | Washer - Flat | 13 | 8 | 8 |
| 3217-29 | Nut - Jam | 3 | 58 | 3 | 3256-22 | Washer - Flat | 25 | 11 | 4 |
| 3218-18 | Nut - Jam | 15 | 43 | 1 | 3256-22 | Washer - Flat | 47 | 11 | 16 |
| 3218-20 | Nut - Jam | 12 | 14 | 2 | 3256-22 | Washer - Flat | 43 | 18 | 3 |
| 3218-21 | Nut - Jam | 20 | 18 | 2 | 3256-22 | Washer - Flat | 14 | 19 | 8 |
| 3219-2 | Nut | 31 | 19 | 2 | 3256-22 | Washer - Flat | 12 | 41 | 2 |
| 3219-14 | Nut | 15 | 5 | 1 | 3256-23 | Washer - Flat | 29 | 5 | 3 |
| 3219-14 | Nut - Hex. | 32 | 32 | 1 | 3256-23 | Washer - Flat | 16 | 21 | 1 |
| 3219-14 | Nut - Jam | 30 | 10 | 2 | 3256-23 | Washer - Flat | 43 | 26 | 2 |
| 3220-1 | Nut - Jam | 30 | 2 | 1 | 3256-24 | Washer - Flat | 39 | 17 | 2 |
| 3220-1 | Nut - Jam | 32 | 37 | 4 | 3256-25 | Washer - Flat | 28 | 5 | 2 |
| 3220-1 | Nut - Jam | 15 | 41 | 4 | 3256-27 | Washer - Flat | 22 | 6 | 8 |
| 3220-2 | Nut - Jam | 12 | 2 | 1 | 3256-27 | Washer - Flat | 18 | 31 | 2 |
| 3220-2 | Nut - Jam | 30 | 5 | 1 | 3256-28 | Washer - Flat | 20 | 3 | 2 |
| 3220-3 | Nut - Jam | 15 | 12 | 2 | 3256-28 | Washer - Flat | 27 | 15 | 1 |
| 3220-11 | Nut - Jam | 20 | 23 | 2 | 3256-45 | Washer - Flat | 25 | 24 | 1 |
| 3229-25 | Screw - Carriage | 44 | 19 | 2 | 3256-61 | Washer - Flat | 13 | 25 | 14 |
| 3230-18 | Bolt - Carriage | 14 | 2 | 2 | 3256-67 | Washer - Flat | 41 | 11 | 2 |
| 3230-23 | Bolt - Carriage | 39 | 6 | 4 | 3257-7 | Key - Woodruff | 27 | 17 | 1 |
| 3230-23 | Bolt - Carriage | 25 | 21 | 5 | 3258-19 | Screw - Round Head | 42 | 2 | 2 |
| 3231-3 | Bolt - Carriage | 18 | 21 | 4 | 3269-27 | Rivet - Plastic | 39 | 13 | 4 |
| 3231-21 | Bolt - Carriage | 39 | 7 | 6 | 3272-6 | Pin - Cotter | 15 | 3 | 3 |
| 3231-21 | Bolt - Carriage | 43 | 21 | 2 | 3272-6 | Pin - Cotter | 32 | 30 | 3 |
| 3231-21 | Bolt - Carriage | 14 | 22 | 4 | 3272-6 | Pin - Cotter | 8 | 37 | 1 |
| 3231-21 | Bolt - Carriage | 15 | 32 | 4 | 3272-10 | Pin - Cotter | 16 | 8 | 2 |
| 3231-26 | Bolt - Carriage | 30 | 15 | 1 | 3272-10 | Pin - Cotter | 12 | 37 | 1 |
| 3231-28 | Bolt - Carriage | 25 | 17 | 1 | 3272-10 | Pin - Cotter | 8 | 43 | 1 |
| 3232-17 | Bolt - Carriage | 22 | 19 | 8 | 3272-12 | Pin - Cotter | 19 | 17 | 4 |
| 3234-1 | Screw - Hex. Flange Hd. | 1 | 13 | 6 | 3272-12 | Pin - Cotter | 20 | 21 | 4 |
| 3234-4 | Screw - Hex. Flange Hd. | 22 | 26 | 4 | 3272-12 | Pin - Cotter | 20 | 32 | 2 |
| 3234-4 | Screw - Hex. Flange Hd. | 32 | 42 | 4 | 3272-37 | Pin - Cotter | 44 | 18 | 2 |
| 3234-11 | Screw - Cap Hex. Hd. | 28 | 14 | 6 | 3274-54 | Screw - Hex. Socket Hd. | 40 | 19 | 2 |
| 3234-38 | Screw - Cap Hex. Hd. | 40 | 22 | 2 | 3274-62 | Screw - Hex. Socket Hd. | 32 | 6 | 6 |
| 3234-38 | Screw - Hex. Flange Hd. | 22 | 17 | 22 | 3277-1 | Nut - Hex. | 5 | 5 | 1 |
| 3234-40 | Screw - Hex. Flange Hd. | 17 | 4 | 4 | 3290-221 | Washer - Spring | 15 | 34 | 1 |
| 3250-13 | Screw | 2 | 51 | 2 | 3290-221 | Washer - Spring | 16 | 36 | 2 |
| 3250-13 | Screw - Hex. Hd. | 13 | 15 | 20 | 3290-271 | Rivet - Pop | 25 | 41 | 2 |
| 3250-20 | Screw - Round Hd. | 25 | 2 | 4 | 3290-321 | Screw - Hex. Flange Hd. | 8 | 10 | 2 |
| 3253-3 | Washer - Lock | 30 | 8 | 1 | 3290-357 | Nut - Flange | 41 | 13 | 1 |
| 3253-3 | Washer - Lock | 50 | 22 | 2 | 3290-357 | Nut - Flange | 30 | 18 | 1 |
| 3253-3 | Washer - Lock | 25 | 27 | 4 | 3290-357 | Nut - Flange | 40 | 23 | 2 |
| 3253-3 | Washer - Lock | 12 | 28 | 4 | 3290-357 | Nut - Flange Lock | 39 | 1 | 6 |
| 3253-3 | Washer - Lock | 29 | 37 | 1 | 3290-357 | Nut - Flange Lock | 1 | 8 | 9 |
| 3253-4 | Washer - Lock | 52 | 4 | 6 | 3290-357 | Nut - Flange Lock | 14 | 10 | 4 |
| 3253-4 | Washer - Lock | 13 | 5 | 8 | 3290-357 | Nut - Flange Lock | 25 | 14 | 1 |
| 3253-4 | Washer - Lock | 30 | 13 | 2 | 3290-357 | Nut - Flange Lock | 18 | 16 | 4 |
| 3253-4 | Washer - Lock | 5 | 14 | 4 | 3290-357 | Nut - Flange Lock | 22 | 30 | 2 |
| 3253-6 | Washer - Lock | 23 | 13 | 10 | 3290-357 | Nut - Flange Lock | 15 | 33 | 4 |
| 3253-6 | Washer - Lock | 29 | 21 | 2 | 3290-357 | Nut - Flange Lock | 8 | 33 | 2 |
| 3253-15 | Washer - Lock | 40 | 5 | 5 | 3290-357 | Nut - Flange Lock | 29 | 50 | 2 |
| 3253-15 | Washer - Lock | 2 | 39 | 2 | 3290-413 | Washer - Belleville | 28 | 12 | 12 |
| 3253-19 | Washer - Lock | 3 | 57 | 3 | 3290-455 | Washer | 5 | 12 | 1 |
| 3253-21 | Washer - Lock | 23 | 10 | 8 | 3290-456 | Washer - Belleville | 15 | 46 | 2 |

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

| Part No. | Description | Pg. Ref. | | | Part No. | Description | Pg. Ref. | | |
|-----------|-------------------------|----------|-----|------|-----------|------------------------------|----------|-----|------|
| | | No. | No. | Qty. | | | No. | No. | Qty. |
| 3290-477 | Washer - Curved | 16 | 28 | 1 | 32128-20 | Nut - Flange | 41 | 18 | 4 |
| 3290-478 | Washer - Belleville | 16 | 17 | 1 | 32128-20 | Nut - Flange | 5 | 27 | 6 |
| 3290-506 | Palnut | 47 | 4 | 2 | 32128-20 | Nut - Flange | 2 | 48 | 3 |
| 3290-507 | Pin - Dowel | 15 | 31 | 1 | 32128-20 | Nut - Flange Head | 44 | 11 | 4 |
| 3296-2 | Nut - Lock | 8 | 8 | 2 | 32128-20 | Nut - Flange Lock | 19 | 6 | 2 |
| 3296-2 | Nut - Lock | 13 | 22 | 20 | 32128-20 | Nut - Flange Lock | 8 | 7 | 13 |
| 3296-2 | Nut - Lock | 2 | 45 | 2 | 32128-20 | Nut - Flange Lock | 39 | 18 | 2 |
| 3296-3 | Nut - Lock | 30 | 28 | 1 | 32128-20 | Nut - Flange Lock | 14 | 21 | 8 |
| 3296-3 | Nut - Lock | 25 | 36 | 1 | 32128-20 | Nut - Flange Lock | 29 | 44 | 1 |
| 3296-4 | Nut - Lock | 12 | 4 | 1 | 32128-20 | Nut - Lock | 25 | 37 | 4 |
| 3296-5 | Nut - Flange Lock | 25 | 25 | 1 | 32128-21 | Nut - Lock | 32 | 11 | 1 |
| 3296-5 | Nut - Lock | 31 | 12 | 1 | 32128-23 | Nut - Flange | 40 | 24 | 2 |
| 3296-15 | Nut - Lock | 27 | 16 | 1 | 32128-23 | Nut - Flange Lock | 17 | 5 | 4 |
| 3296-23 | Nut - Flange Lock | 19 | 12 | 8 | 32128-23 | Nut - Flange Lock | 22 | 21 | 22 |
| 3296-23 | Nut - Lock | 22 | 10 | 4 | 32128-33 | Nut - Flange | 30 | 3 | 2 |
| 3296-23 | Nut - Lock | 18 | 14 | 4 | 32128-33 | Nut - Flange | 29 | 13 | 1 |
| 3296-23 | Nut - Lock | 14 | 16 | 2 | 32128-33 | Nut - Flange | 28 | 18 | 2 |
| 3296-27 | Nut - Lock | 30 | 21 | 2 | 32128-33 | Nut - Flange | 2 | 44 | 12 |
| 3296-29 | Nut - Flange Lock | 25 | 20 | 8 | 32128-33 | Nut - Flange Head | 44 | 12 | 4 |
| 3296-29 | Nut - Lock | 27 | 6 | 6 | 32128-33 | Nut - Flange Head | 10 | 19 | 2 |
| 3296-29 | Nut - Lock | 8 | 6 | 1 | 32128-33 | Nut - Flange Lock | 32 | 1 | 1 |
| 3296-29 | Nut - Lock | 12 | 13 | 1 | 32128-33 | Nut - Flange Lock | 39 | 4 | 1 |
| 3296-29 | Nut - Lock | 43 | 27 | 1 | 32128-33 | Nut - Flange Lock | 43 | 6 | 1 |
| 3296-29 | Nut - Lock | 29 | 36 | 2 | 32128-33 | Nut - Flange Lock | 12 | 24 | 1 |
| 3296-39 | Nut - Flange Lock | 32 | 20 | 4 | 32128-33 | Nut - Flange Lock | 8 | 25 | 1 |
| 3296-39 | Nut - Flange Lock | 39 | 20 | 1 | 32128-33 | Nut - Flange Lock | 22 | 27 | 4 |
| 3296-39 | Nut - Lock | 47 | 1 | 6 | 32128-36 | Nut - Lock | 23 | 37 | 4 |
| 3296-39 | Nut - Lock | 28 | 11 | 6 | 32128-44 | Nut - Flange Lock | 14 | 9 | 2 |
| 3296-39 | Nut - Lock | 22 | 13 | 6 | 32128-53 | Nut - Flange Lock | 23 | 26 | 2 |
| 3296-39 | Nut - Lock | 20 | 16 | 8 | 32136-2 | Nut - Slotted | 19 | 2 | 4 |
| 3296-39 | Nut - Lock | 30 | 20 | 3 | 32136-3 | Nut - Slotted | 20 | 22 | 4 |
| 3296-39 | Nut - Lock | 43 | 23 | 2 | 32136-5 | Nut Slotted | 20 | 2 | 2 |
| 3296-39 | Nut - Lock | 18 | 28 | 8 | 32144-4 | Screw - Hex. Washer Hd. | 15 | 9 | 2 |
| 3296-39 | Nut - Lock | 16 | 33 | 1 | 32144-10 | Screw - Self Tapping | 5 | 18 | 2 |
| 3296-39 | Nut - Lock | 23 | 41 | 4 | 32144-18 | Screw - Cap Hex. Hd. | 2 | 20 | 2 |
| 3296-39 | Nut - Lock | 15 | 45 | 1 | 32144-18 | Screw - Cap Hex. Hd. | 2 | 22 | 2 |
| 3296-42 | Nut - Lock | 10 | 3 | 4 | 32144-42 | Screw - Spark Arrestor | 29 | 52 | 1 |
| 3296-42 | Nut - Lock | 16 | 12 | 2 | 32144-52 | Screw - Hex. Hd. | 13 | 12 | 6 |
| 3296-42 | Nut - Lock | 19 | 13 | 2 | 32144-93 | Screw - Self Tapping | 47 | 6 | 2 |
| 3296-42 | Nut - Lock | 47 | 13 | 16 | 32144-116 | Screw - Pan Head | 5 | 8 | 8 |
| 3296-42 | Nut - Lock | 40 | 17 | 2 | 32148-6 | Insert - Threaded | 2 | 2 | 2 |
| 3296-42 | Nut - Lock | 43 | 19 | 2 | 32148-7 | Nut - Clinch | 1 | 18 | 8 |
| 3296-42 | Nut - Lock | 5 | 32 | 2 | 32148-7 | Nut - Clinch | 15 | 19 | 2 |
| 3296-42 | Nut - Lock | 25 | 38 | 4 | 32148-10 | Insert - Threaded | 22 | 1 | 8 |
| 3296-48 | Nut - Lock | 18 | 11 | 10 | 32148-15 | Insert - Threaded | 15 | 4 | 1 |
| 3296-48 | Nut - Lock | 28 | 16 | 2 | 32148-15 | Nut - Clinch | 32 | 31 | 1 |
| 3296-56 | Nut - Lock | 32 | 7 | 6 | 32151-41 | Ring - Retaining | 26 | 1 | 1 |
| 3296-58 | Nut - Lock | 15 | 11 | 2 | 32151-56 | Ring - Push-On | 8 | 23 | 1 |
| 3296-59 | Nut - Lock | 5 | 13 | 1 | 32151-104 | Ring - Snap | 19 | 15 | 4 |
| 3296-76 | Nut - Lock | 22 | 33 | 8 | 32152-10 | Nut | 45 | 12 | 1 |
| 32104-82 | Screw - Hex. Flange Hd. | 22 | 25 | 2 | 340-2 | Fitting - Straight | 44 | 10 | 1 |
| 32104-88 | Screw | 1 | 4 | 6 | 340-3 | Fitting - Hydraulic Straight | 44 | 26 | 1 |
| 32107-11 | Nut - Square | 42 | 4 | 2 | 340-77 | Fitting - Hydraulic 90° | 44 | 6 | 1 |
| 32113-14 | Screw | 31 | 8 | 2 | 340-86 | Fitting - Hydraulic Tee | 43 | 15 | 1 |
| 32120-47 | Ring - E | 12 | 33 | 2 | 340-92 | Fitting - Hydraulic Straight | 44 | 29 | 1 |
| 32120-47 | Ring - E | 8 | 41 | 1 | 340-94 | Fitting - Hydraulic Tee | 43 | 10 | 1 |
| 32120-47 | Ring - Retaining | 16 | 10 | 3 | 340-132 | Fitting - Hydraulic 90° | 44 | 14 | 4 |
| 32121-7 | Pin - Roll | 12 | 19 | 1 | 340-140 | Fitting - Hydraulic Tee | 44 | 28 | 1 |
| 32121-24 | Pin - Roll | 12 | 21 | 2 | 340-151 | Fitting - Hydraulic Tee | 44 | 30 | 1 |
| 32121-48 | Pin - Roll | 15 | 23 | 1 | 353-781 | Fitting - Fuel 90° | 40 | 14 | 1 |
| 32121-128 | Pin - Pulley to Shaft | 31 | 38 | 1 | 353-987 | Fitting - Hydraulic 90° | 32 | 29 | 1 |
| 32122-16 | Screw - Truss Hd. | 47 | 16 | 6 | 354-134 | Fitting - Hydraulic 90° | 32 | 40 | 2 |
| 32122-24 | Screw - Round Hd | 40 | 6 | 5 | 354-135 | Fitting - Hydraulic 90° | 32 | 5 | 1 |
| 32128-20 | Nut - Flange | 10 | 14 | 1 | 354-136 | Fitting - Hydraulic Straight | 44 | 23 | 1 |

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Workman 3200 has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame. In any correspondence concerning the Workman 3200, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the Workman 3200.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

| Description | Page | Description | Page |
|---|-------|---|-------|
| Front Bumper & Hood Assembly | 1 | Countershaft Assembly | 35 |
| Control Panel Assembly | 2-3 | Transaxle Gear Shafts Assembly | 36 |
| Electrical Schematic | 4 | Shift Fork Assembly | 37 |
| Steering Linkage Assembly | 5 | Differential Gear Assembly | 38 |
| Steering Gear Assembly No. 87-1500 | 6-7 | Battery Mount Assembly | 39 |
| Brake & Accelerator Pedal Assembly | 8 | Fuel Tank Assembly | 40 |
| Master Brake Cylinder No. 87-3030 | 9 | Air Cleaner & Fuel Supply Assembly | 41 |
| Hydraulic Brake Line Routing Assembly | 10 | Air Cleaner Assembly | 42 |
| Hydraulic Schematic | 11 | Lift Valve Linkage Assembly | 43 |
| Clutch Linkage Assembly | 12 | Lift Valve & Cylinder Assembly | 44 |
| Seat Base Assembly | 13 | Lift Cylinder No.87-7990 | 45 |
| Seat Back Assembly | 14 | Control Valve Assembly No. 43-1950 | 46 |
| Hi-Lo Shift Levers Assemblies | 15 | Rear Fender & Tail Light Assembly | 47 |
| Differential Lock & Parking Brake Assemblies | 16 | Cylinder Block Assembly | 48 |
| R.O.P.S. Assembly | 17 | Rocker Cover & Cylinder Head Assembly | 49 |
| Front Suspension Assembly | 18 | Covers & Oil Pan Assembly | 50 |
| Front Suspension Control Arm Assembly | 19 | Piston & Crankshaft Assembly | 51 |
| Front Wheel Assembly | 20 | Clutch & Clutch Release Assembly | 52 |
| Front Brake Assembly | 21 | Camshaft & Valves Assembly | 53 |
| Rear Frame Assembly | 22 | Balancer & Oil Pressure Switch & Engine Mount . | 54 |
| Rear Axle Assembly | 23 | Oil Pump & Filter Assembly | 55 |
| Rear Brake Assembly | 24 | Water Pump & Thermostat Assembly | 56 |
| Radiator & Hydraulic Pump Assembly | 25 | Exhaust & Intake Manifold Assembly | 57 |
| Hydraulic Pump Assembly No. 87-5700 | 26 | Carburetor Installation Assembly | 58 |
| Hydraulic Pump Drive Assembly | 27 | Carburetor Assembly | 59 |
| Engine Frame Assembly | 28 | Distributor Assembly | 60 |
| Engine Installation Assembly | 29 | Starter Assembly | 61 |
| Governor Assembly | 30 | Alternator Assembly | 62 |
| Governor | 31 | Gasket Kit | 63 |
| Transaxle Installation Assembly | 32-33 | International Decal Cross Reference | 64-70 |
| Transaxle Case Assembly | 34 | TORO Part Number Index | 71-81 |

