



Workman® 2110 Utility Vehicle

Model No. 07277 - 280000550 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Hood and Fender Assembly	 3	Hydraulic Brake Assembly	 25
Pedal Assembly	 4	Master Cylinder Assembly No. 104-6782	 26
Shifter Assembly	 5	Cylinder Assembly Briggs and Stratton 295440-0158-G1	 27
Frame Assembly	 6	Cylinder Head Assembly Briggs and Stratton 295440-0158-G1	 28
Seat Base Assembly	 7	Crankshaft and Piston/Ring Assembly Briggs and Stratton 295440-0158-G1	 29
Front Tire and Steering Assembly	 8	Crankcase Cover/Sump Assembly Briggs and Stratton 295440-0158-G1	 30
Engine and Clutch Assembly	 9	Carburetor and Fuel Pump Assembly Briggs and Stratton 295440-0158-G1	 31
Drive Clutch Assembly No. 108-7013	 11	Governor Control Assembly Briggs and Stratton 295440-0158-G1	 32
Starter Generator Assembly No. 99-7108	 12	Blower Housing, Flywheel and Air Guide Assembly Briggs and Stratton 295440-0158-G1	 33
Rear Tire and Transaxle Assembly	 13	Intake Manifold Assembly Briggs and Stratton 295440-0158-G1	 34
Transaxle Assembly No. 107-0360	 14	Engine, Valve Gasket and Carburetor Overhaul Kits Briggs and Stratton 295440-0158-G1	 35
Driven Clutch Assembly No. 99-7104	 16	Attachments and Accessories List	 36
Left Hand Brake Assembly No. 104-6807	 17		
Right Hand Brake Assembly No. 104-6806	 18		
Drivetrain Mounting, Battery and Air Cleaner Assembly	 19		
Air Cleaner Assembly No. 99-7120	 20		
Upper Steering Assembly	 21		
Steering Gearbox Assembly No. 99-7660	 22		
Box and Tailgate Installation Assembly	 23		
Box and Tailgate Assembly	 24		


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- | | |
|---|--|
| ❶ Not illustrated | ❷ Not serviced separately |
| ❸ Obtain from your local Briggs & Stratton dealer | ❹ Included in Carburetor Overhaul Kit (Ref. No. 121) |
| ❺ Included in Engine Gasket Set (Ref. No. 358) | ❻ Included in Valve Gasket Set (Ref. No. 1095) |

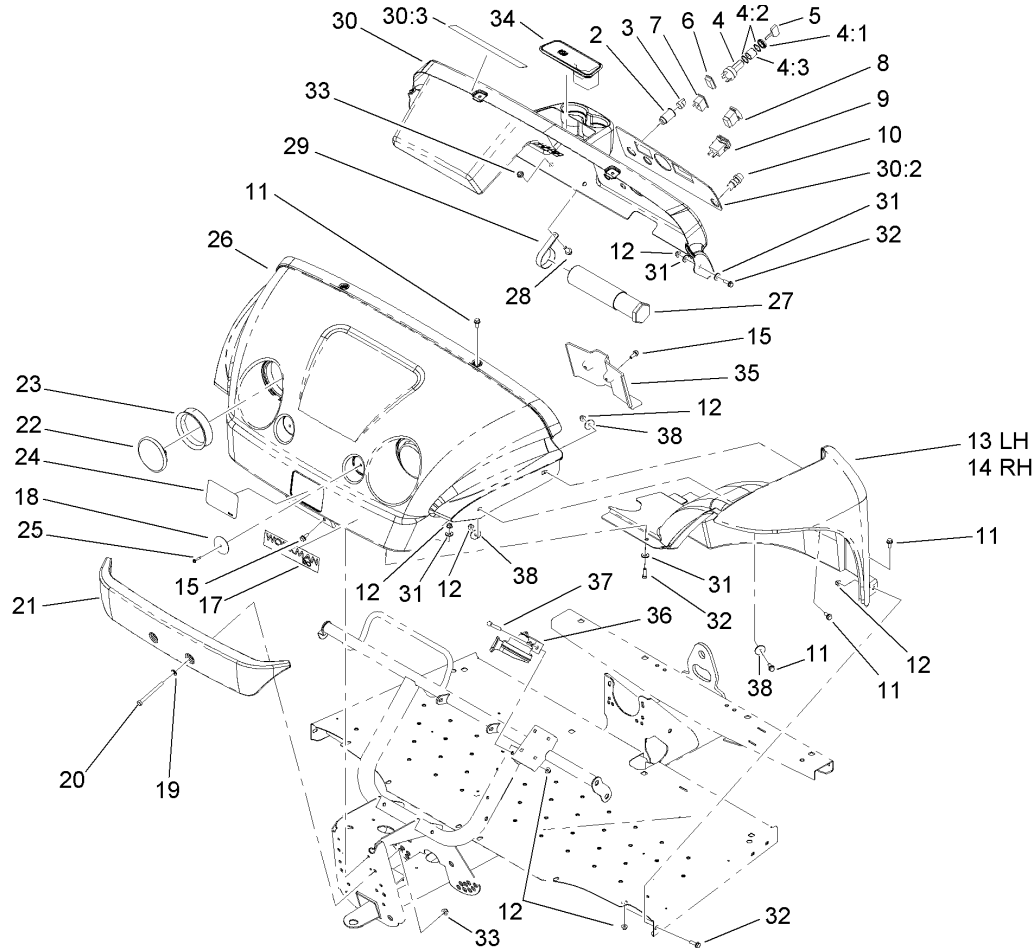

Hood and Fender Assembly


Ref	Part No.	Qty.	Description
2	99-7411	1	Point-Power
3	99-7416	1	Cap
4	104-6929	1	Switch-Ignition
4:1	104-7042	1	Nut-Switch, Plastic
4:2	104-7019	2	Washer-Lock, Internal
4:3	104-7021	1	Spacer-Switch
5	99-7418	2	Key-Ignition
6	99-7420	1	Plug-Hole
7	99-7410	1	Indicator-Light, Low-Oil Pressure
8	95-8999	1	Switch
9	94-4208	1	Hourmeter
10	18-2830	1	Button-Horn
11	3234-5	14	Screw-HHF
12	104-8300	15	Nut-Flange, NI
13	104-7076	1	LH Fender ASM
14	104-7077	1	RH Fender ASM
15	104-7206	4	Screw-HHF
17	104-7267	1	Decal
18	99-7312	2	Reflector
19	3256-24	2	Washer-Flat
20	323-42	2	Screw-HH
21	99-7733	1	Bumper-Plastic
22	99-7310	2	Headlight
23	99-7311	2	Mount-Headlight

Ref	Part No.	Qty.	Description
24	99-7339	1	Decal
25	32144-89	2	Screw-Forming, Thread
26	104-7003	1	Hood
27	74-0720	1	Tube-Manual
28	3234-11	2	Screw-HHF
29	2412-133	2	R-Clamp
30	107-0700	1	Dash ASM
30:2	107-0699	1	Decal-Panel, Control
30:3	104-6581	1	Decal-Danger
31	3256-3	8	Washer-Flat
32	3234-17	4	Screw-HHF
33	104-8301	4	Nut-Flange, NI
34	104-6930	1	Plug-Rubber
35	104-7075	1	Cover-Channel
36	116749	1	Horn
37	322-11	1	Screw-HH
38	3256-57	6	Washer-Flat

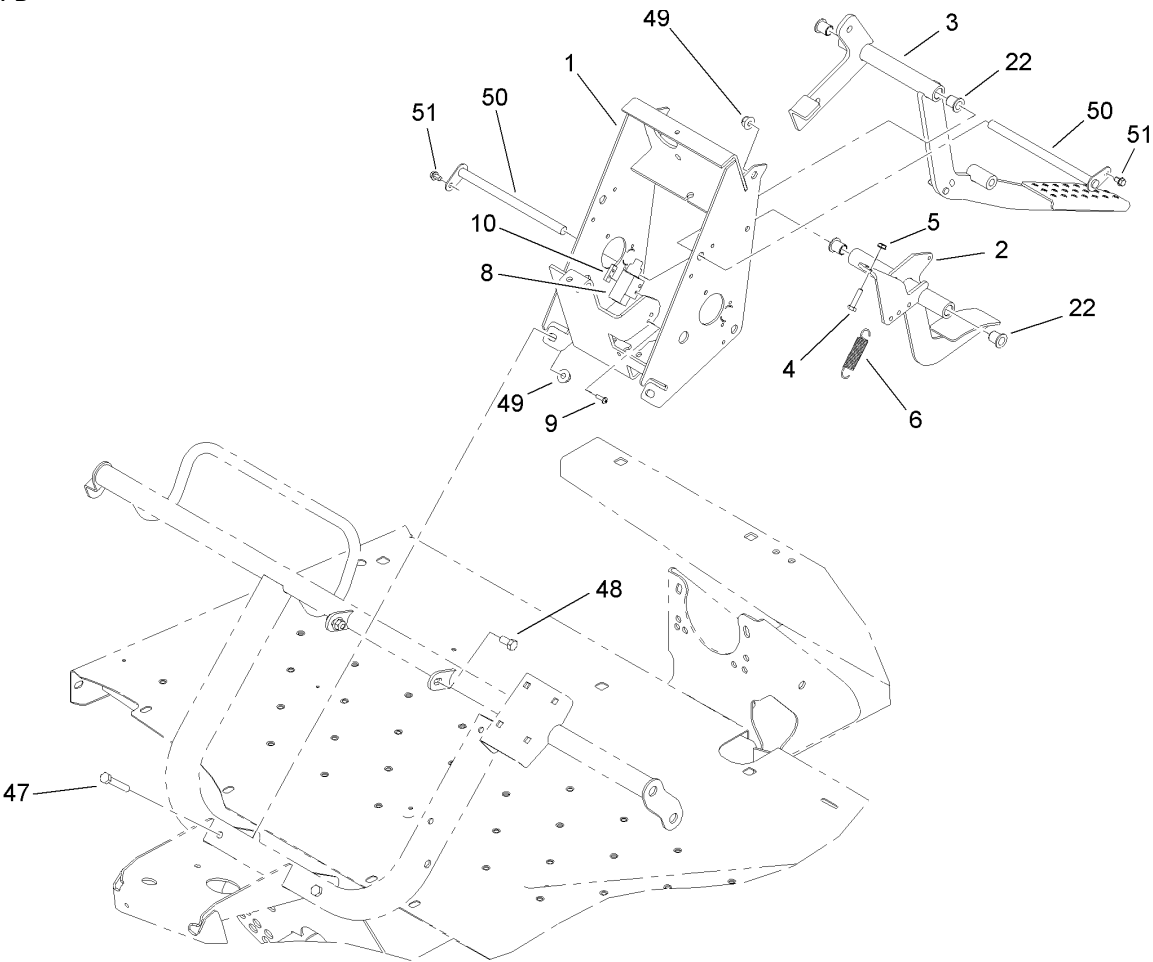


Pedal Assembly

Ref	Part No.	Qty.	Description				
1	112-3048-03	1	Pedal Support Frame ASM				
2	110-2607-03	1	Pedal-Throttle				
3	104-7170-03	1	Pedal-Brake				
4	321-7	2	Screw-HH				
5	32149-2	2	Nut-Keps				
6	104-6415	1	Spring-Return, Pedal				
8	99-7407	1	Switch				
9	104-7221	2	Screw-PPH				
10	1-633181	1	Plate-Tapped				
22	256-155	4	Bushing-Flange				
47	323-11	2	Screw-HH				
48	323-4	2	Screw-HH				
49	104-8301	4	Nut-Flange, NI				
50	104-7164	2	Pivot-Pedal				
51	12-3270	2	Screw				

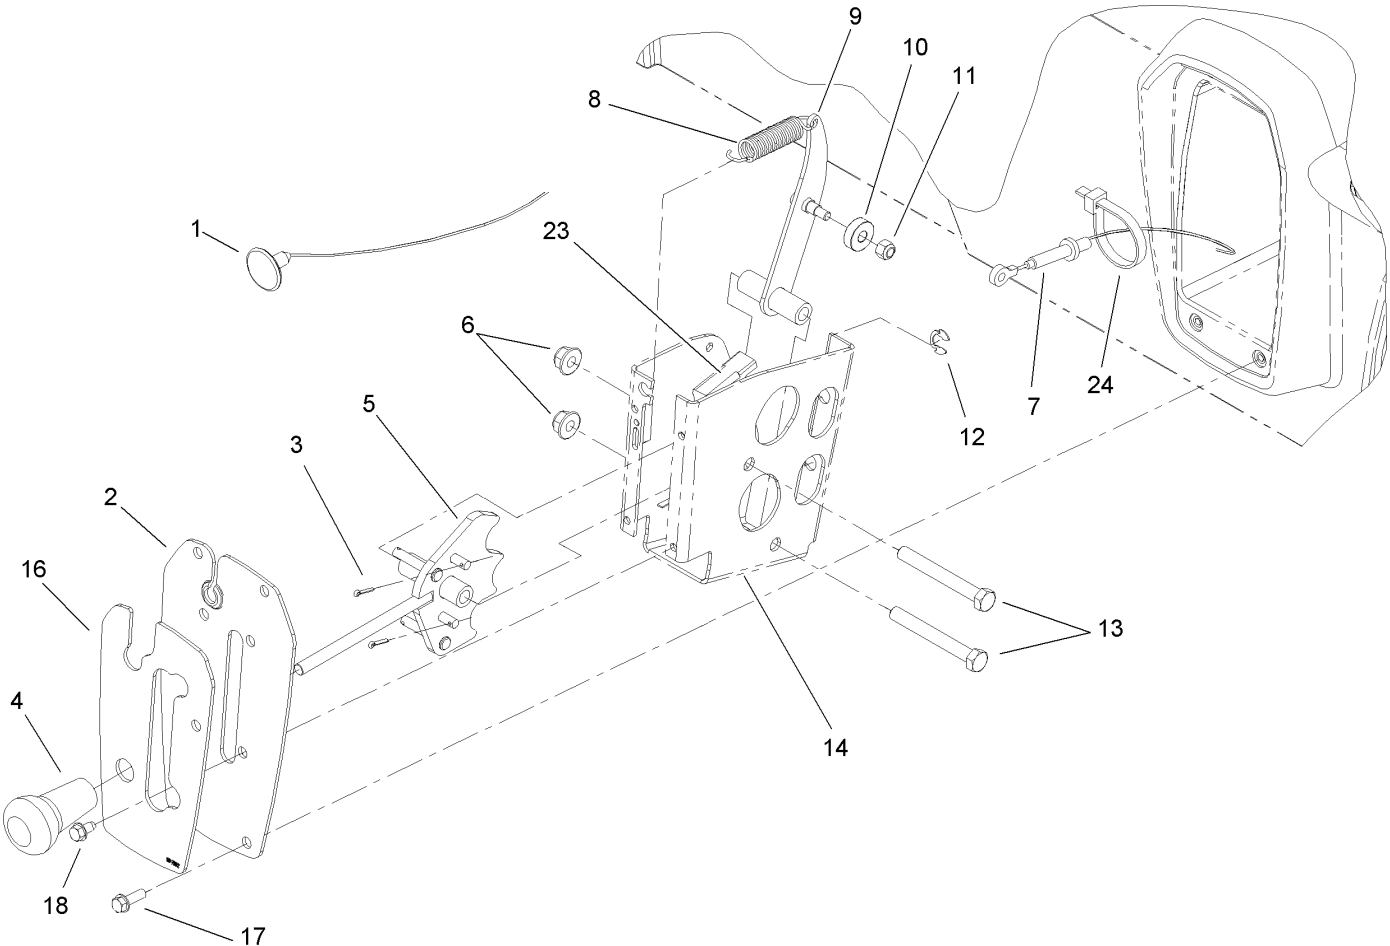


Shifter Assembly

Ref	Part No.	Qty.	Description				
1	99-7111	1	Cable-Choke				
2	99-7887-03	1	Plate-Shifter				
3	3272-5	2	Pin-Cotter				
4	99-7981	1	Knob-Grip, Soft				
5	108-3139	1	Lever-Shift				
6	104-8301	2	Nut-Flange, NI				
7	104-6896	2	Cable-Shift				
8	104-6415	1	Spring-Return, Pedal				
9	108-3138	1	Arm-Detent				
10	251-307	1	Bearing-Ball				
11	3296-42	1	Nut-Lock, NI				
12	32151-101	2	E-Ring				
13	323-14	2	Screw-HH				
14	108-3141-03	1	Bracket-Shift				
16	99-7952	1	Decal-Shifter				
17	32105-15	4	Screw				
18	12-3270	4	Screw				
23	99-7408	1	Switch-Reverse				
24	3290-378	1	Tie-Cable				

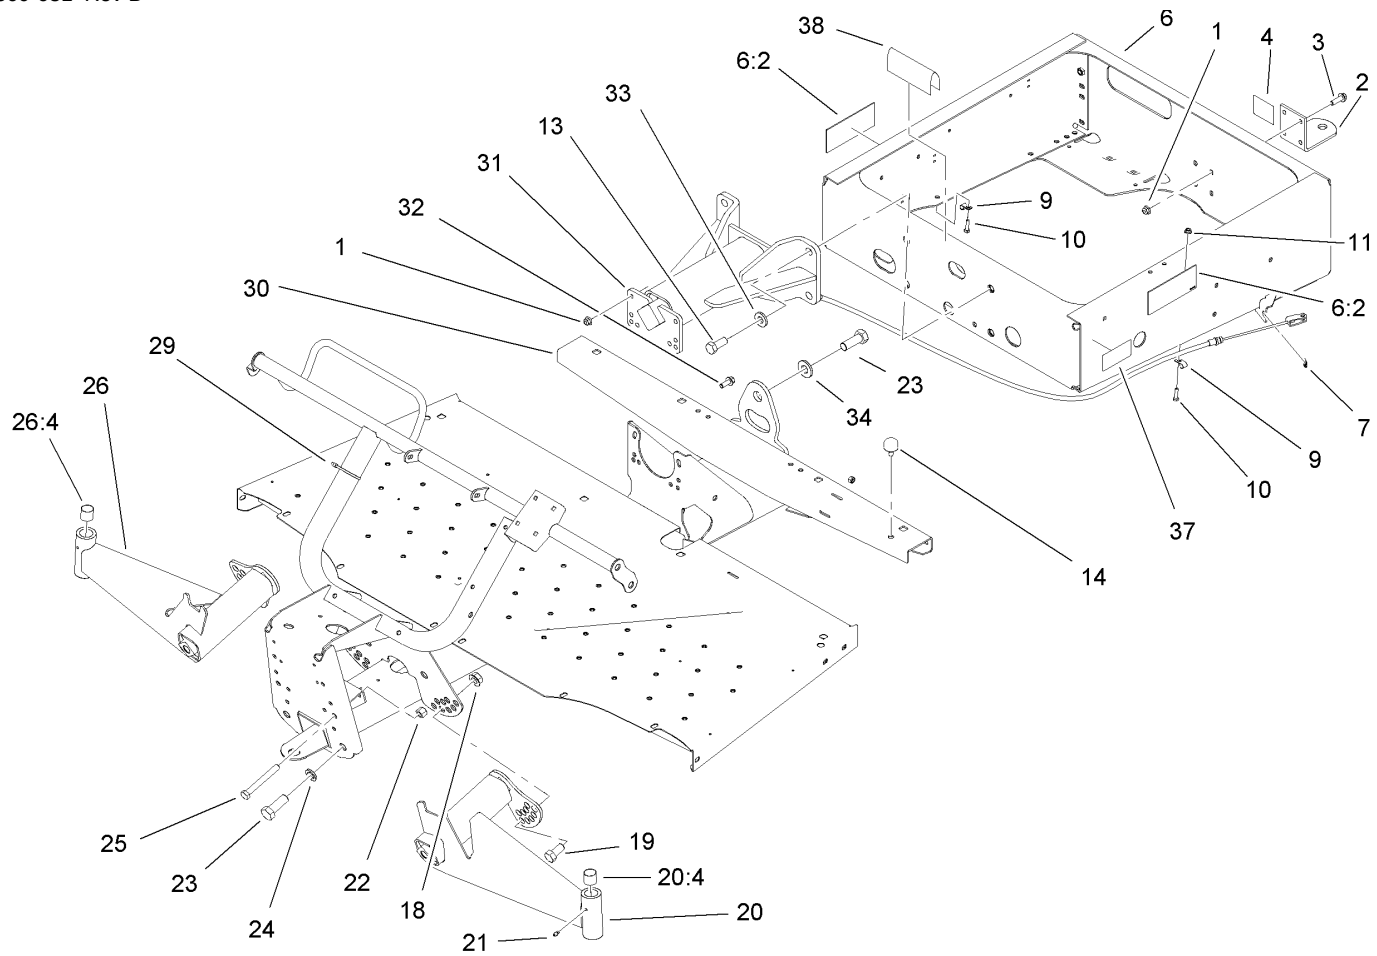

Frame Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	104-8301	8	Nut-Flange, NI	30	104-7197-03	1	Front Frame ASM
2	99-7654-03	1	Hitch-Duty, Light	31	99-7700	1	Pivot Yoke ASM
3	3234-24	4	Screw-HHF	32	3234-11	4	Screw-HHF
4	99-7350	1	Decal-Rating, Hitch (Light Duty)	33	99-7667	4	Washer-Flat
6	108-3137	1	Rear Frame ASM	34	87-3060	1	Washer-Hardened
6:2	99-7345	2	Decal-Warning	37	104-6591	1	Decal-Capacity
7	32120-47	2	Ring-Retaining, External	38	95-5686	1	Trim
9	2412-89	2	Clamp				
10	321-6	2	Screw-HH				
11	32128-33	2	Nut-HF				
13	327-4	4	Screw-HH				
14	87-2440	1	Bumper-Rubber				
18	32128-54	2	Nut-HF				
19	3214-2	2	Screw-HH				
20	99-7685	1	LH A-Arm ASM				
20:4	3-0348	2	Bushing				
21	302-5	2	Fitting-Grease				
22	3296-23	2	Nut-Lock, NI				
23	328-24	5	Screw-HH				
24	3254-7	4	Washer-Lock, Int				
25	325-17	2	Screw-HH				
26	99-7684	1	RH A-Arm ASM				
26:4	3-0348	2	Bushing				
29	3290-379	12	Tie-Cable				

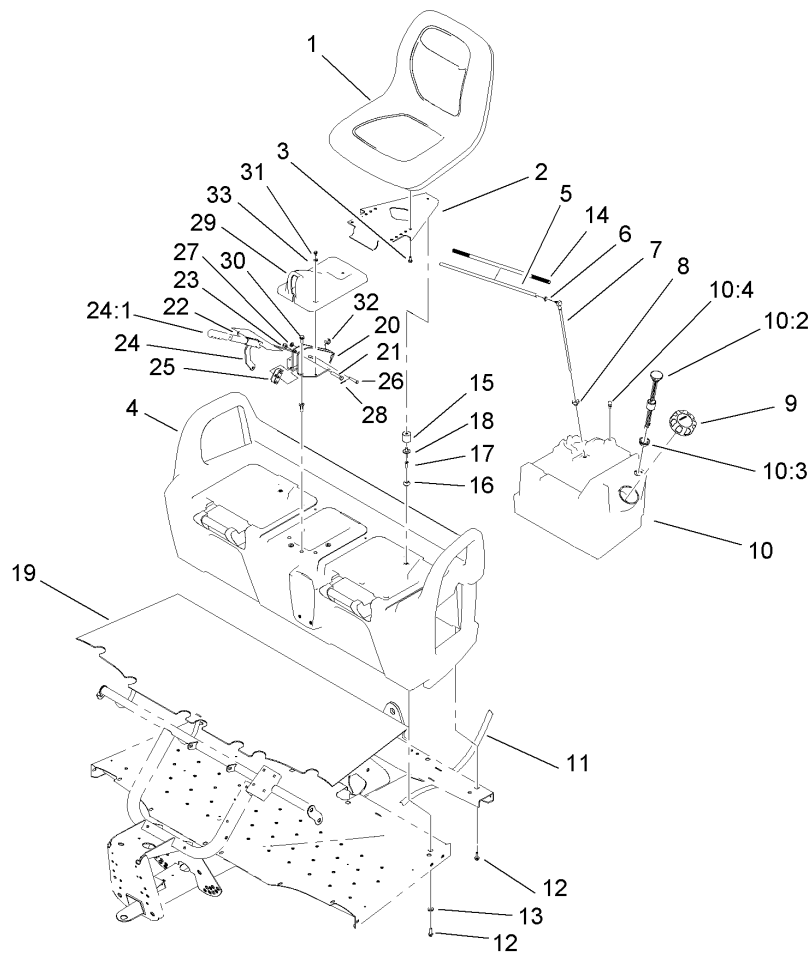

Seat Base Assembly

Ref	Part No.	Qty.	Description
1	112-2923	2	Seat ASM
2	99-7829	2	Bracket-Seat
3	33114-016	8	Screw-HH
4	104-6847	1	Seat Base ASM
5	108-4582	1	Hose-Fuel
6	2412-98	1	Clamp
7	99-7264	1	Pipe-Stand
8	46-6560	1	Bushing
9	95-4192	1	Unleaded Gas Cap ASM
10	99-7323	1	Fuel Tank ASM
10:2	99-7262	1	Gauge-Fuel
10:3	95-8972	1	Grommet
10:4	99-7267	1	Vent-Air
11	3339-175	1	Strapping-Web, 48 Inch
12	3234-17	8	Screw-HHF
13	88-7200	8	Washer-Flat
14	99-7129	1	Conduit-Line, Fuel
15	99-7830	2	Rubber Receptical ASM
16	99-7833	2	Post-Holding
17	32108-5	2	Screw-FH
18	3290-412	2	Rivet
19	104-6590	1	Mat-Floor
20	104-6844-03	1	Support-Brake, Park
21	323-10	1	Screw-HH


Ref	Part No.	Qty.	Description
22	3290-477	1	Washer-Curved
23	3296-39	1	Nut-Lock, NI
24	104-6842	1	Lever-Brake, Park
24:1	106-7972	1	Grip-Handle
25	87-3480	1	Bracket-Equalizer, Cable
26	94-3829	1	Pin-Clevis
27	3256-23	1	Washer-Flat
28	3272-6	1	Pin-Cotter
29	104-7014	1	Cover-Brake, Parking
30	3234-17	4	Screw-HHF
31	12-3270	2	Screw
32	32120-47	2	Ring-Retaining, External
33	3256-1	2	Washer-Flat

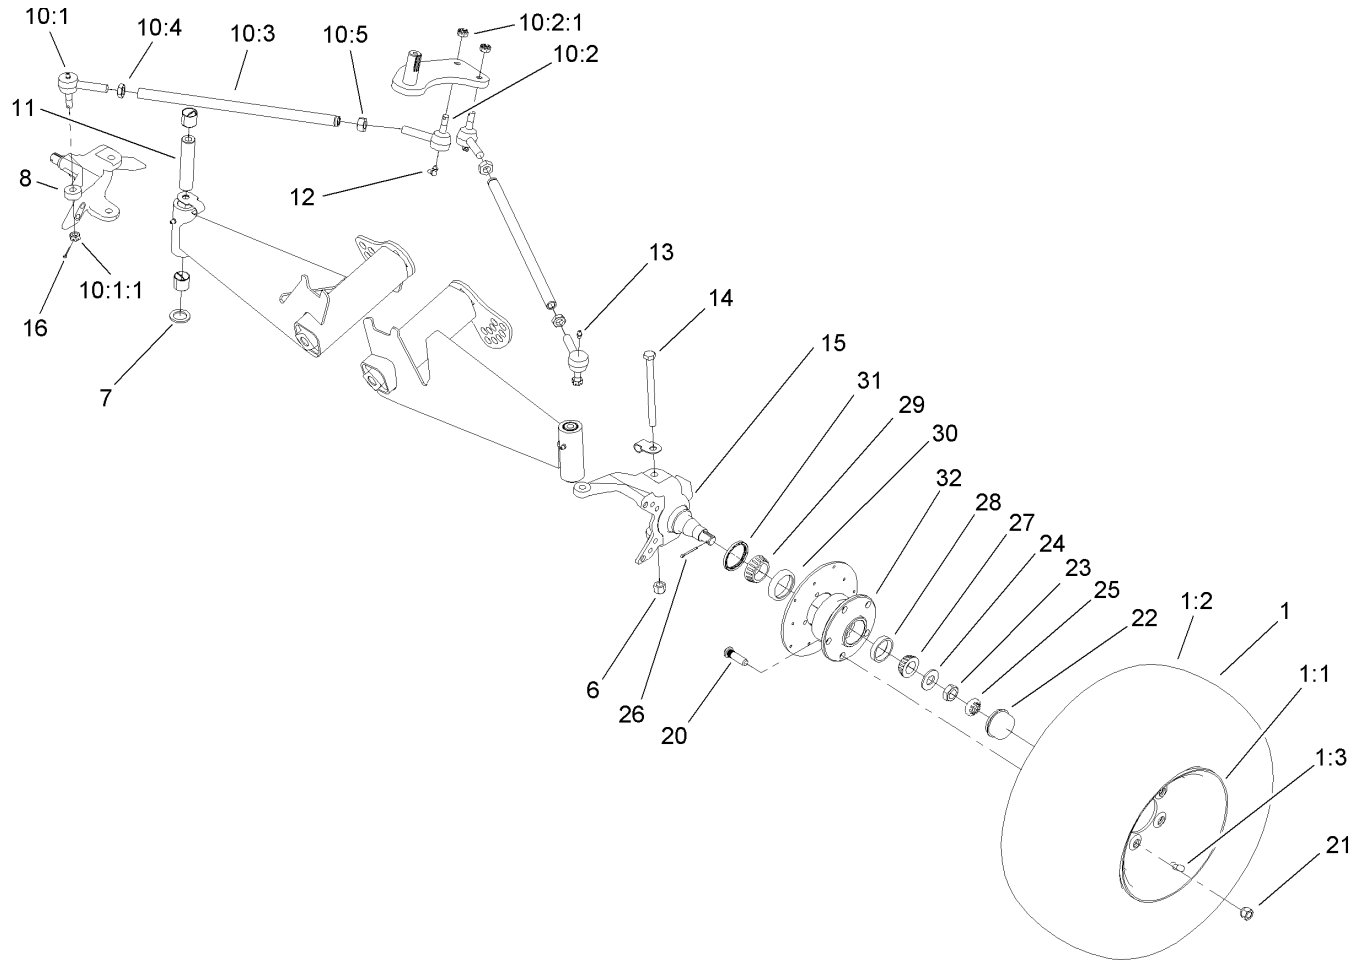

Front Tire and Steering Assembly

Ref	Part No.	Qty.	Description
1	104-7290	2	Tire And Wheel ASM
1:1	104-7288	1	Wheel
1:2	104-7289	1	Tire
1:3	232-27	1	Stem-Valve
6	3296-23	2	Nut-Lock, NI
7	256-115	2	Washer-Thrust
8	104-6877	1	Spindle-Disc, RH
10		2	Rod-Tie
10:1	112772	1	Joint-Ball, RH
10:1:1	915031	1	Nut
10:2	112771	1	Joint-Ball, LH
10:2:1	915031	1	Nut
10:3	99-7600-03	1	Rod-Tie
10:4	3220-11	1	Nut-Jam
10:5	3218-21	1	Nut-Jam
11	99-7499	2	Sleeve-Kingpin
12	302-60	2	Fitting-Grease, 90 DEG
13	302-5	2	Fitting-Grease
14	325-20	2	Screw-HH
15	104-6876	1	Spindle-Disc, LH
16	3272-7	4	Pin-Cotter
20	10-6830	10	Stud-Type, Drive
21	242-50	10	Nut-Lug
22	241-119	2	Cap-Dust


Ref	Part No.	Qty.	Description
23	3220-7	2	Nut-Jam
24	93-0309	2	Washer-Tab
25	93-0307	2	Nut-Lock, Retainer
26	3272-12	2	Pin-Cotter
27	254-94	2	Bearing-Cone, Tapered
28	254-72	2	Bearing-Cup, Tapered
29	254-106	2	Cone-Bearing, Tapered
30	254-107	2	Cup-Bearing, Tapered
31	108-7019	2	Seal-Shaft
32	104-6809	2	Hub

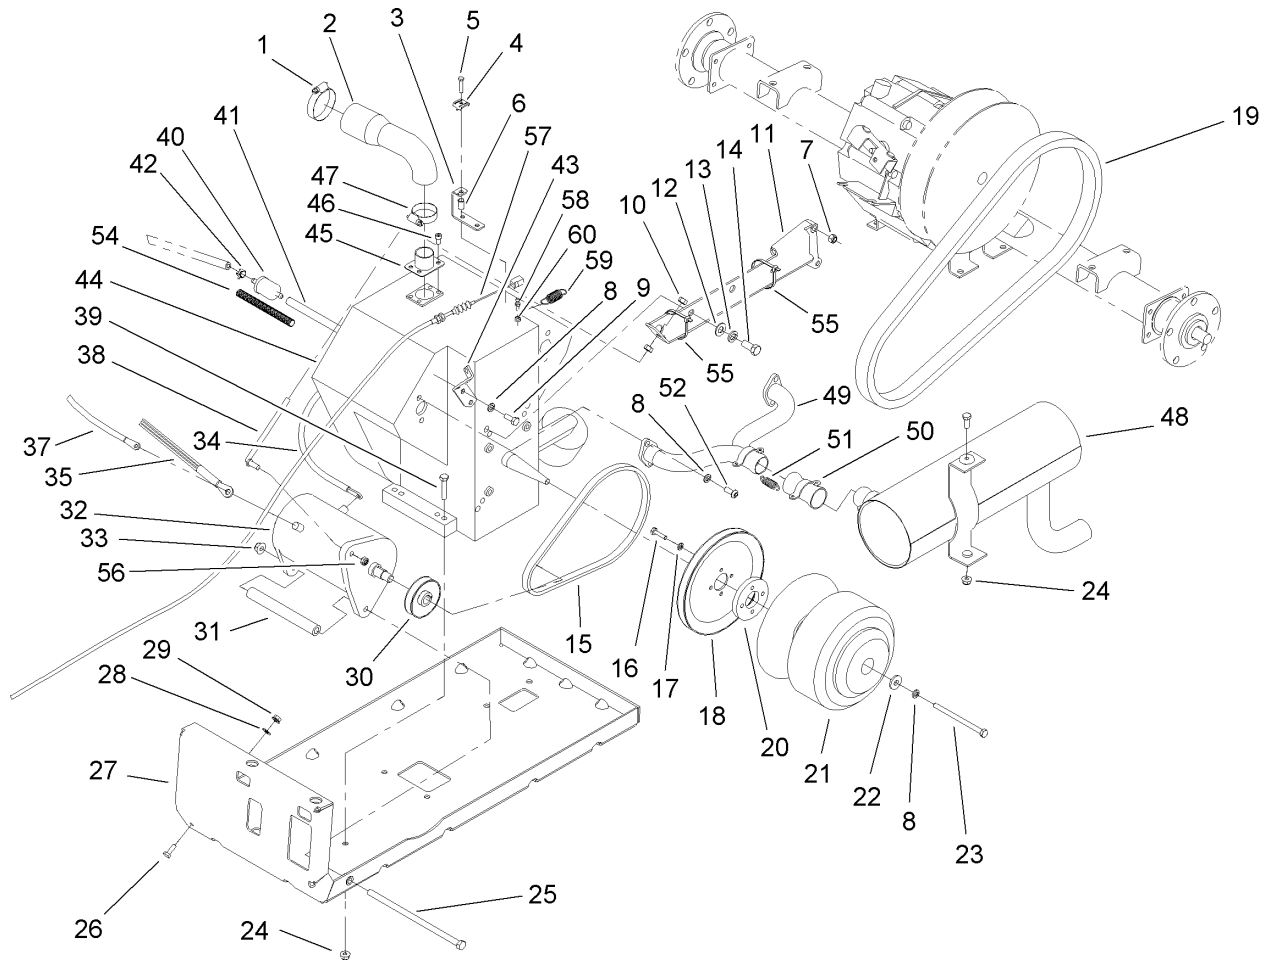

Engine and Clutch Assembly


Ref	Part No.	Qty.	Description
1	2412-130	1	Clamp-Hose
2	99-7106	1	Hose-Intake
3	107-0319	1	Bracket-Cable
4	81-1690	1	Clamp-Cable
5	3290-432	1	Screw-HH
6	32148-14	1	Insert-Threaded
7	33024-00	2	Nut-Lock
8	3253-4	6	Washer-Lock
9	66-3160	2	Screw-Cap
10	3217-6	2	Nut-Hex
11	104-6631-03	1	Torque Arm ASM
12	3256-25	2	Washer-Flat
13	3253-6	2	Washer-Lock
14	324-4	2	Screw-HH
15	99-7133	1	V-Belt-Starter
16	321-6	4	Screw-HH
17	3253-3	4	Washer-Lock
18	99-7131	1	Pulley-Engine
19	99-7144	1	Belt-Drive
20	99-7064	1	Spacer-Starter
21	108-7013	1	Clutch-Drive
22	5-0838	1	Washer
23	99-7201	1	Screw-HH
24	104-8300	5	Nut-Flange, NI

Ref	Part No.	Qty.	Description
25	99-7203	1	Screw
26	321-4	1	Screw-HH
27	104-6433-03	1	Mount-Engine
28	3255-8	1	Washer-Lock
29	32128-32	1	Nut-HHF
30	99-7130	1	Pulley-Starter
31	99-7053	1	Pivot-Starter
32	99-7108	1	Generator-Starter
33	104-8301	2	Nut-Flange, NI
34	99-7403	1	Cable-Negative
35	99-7437	1	Harness-Wire, Engine
37	104-6926	1	Cable-Positive
38	104-6629	1	Rod-Starter
39	322-8	4	Screw-HH
40	94-2690	1	Filter-Fuel
41	109-0678	1	Hose-Fuel
42	2412-98	3	Clamp
43	104-7152	1	Bracket-Cable, Throttle
44	115-7821	1	Engine-Briggs & Stratton, 295440-0158-G1
45	99-7083	1	Bracket-Intake
46	99-7202	4	Screw-HSH
47	2412-3	1	Clamp-Hose
48	104-6475	1	Muffler-Engine

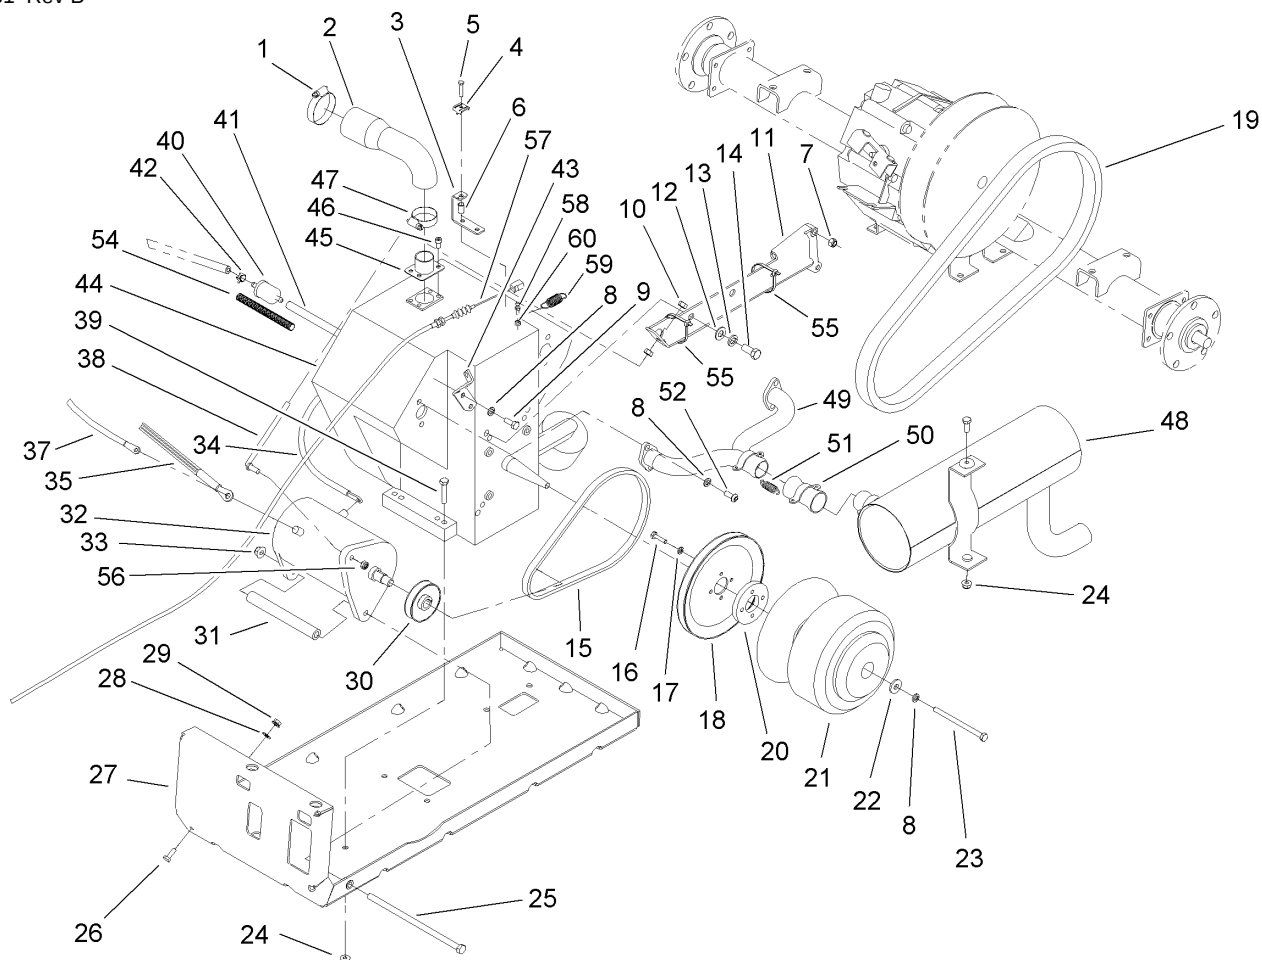


Engine and Clutch Assembly (continued)

Ref	Part No.	Qty.	Description
49	104-6476	1	Manifold-Engine
50	104-6477	1	Coupler-Exhaust
51	104-6478	4	Spring-Coupler, Exhaust
52	3274-96	4	Screw-HSBH
54	99-7377	1	Conduit-Line, Fuel
55	3290-379	2	Tie-Cable
56	3296-20	1	Nut-Lock, NI
57	108-7017	1	Cable-Accelerator
58	99-7847	1	Ball-Stud
59	71-5470	1	Spring-Brake
60	110-2619	1	Keeper-Spring

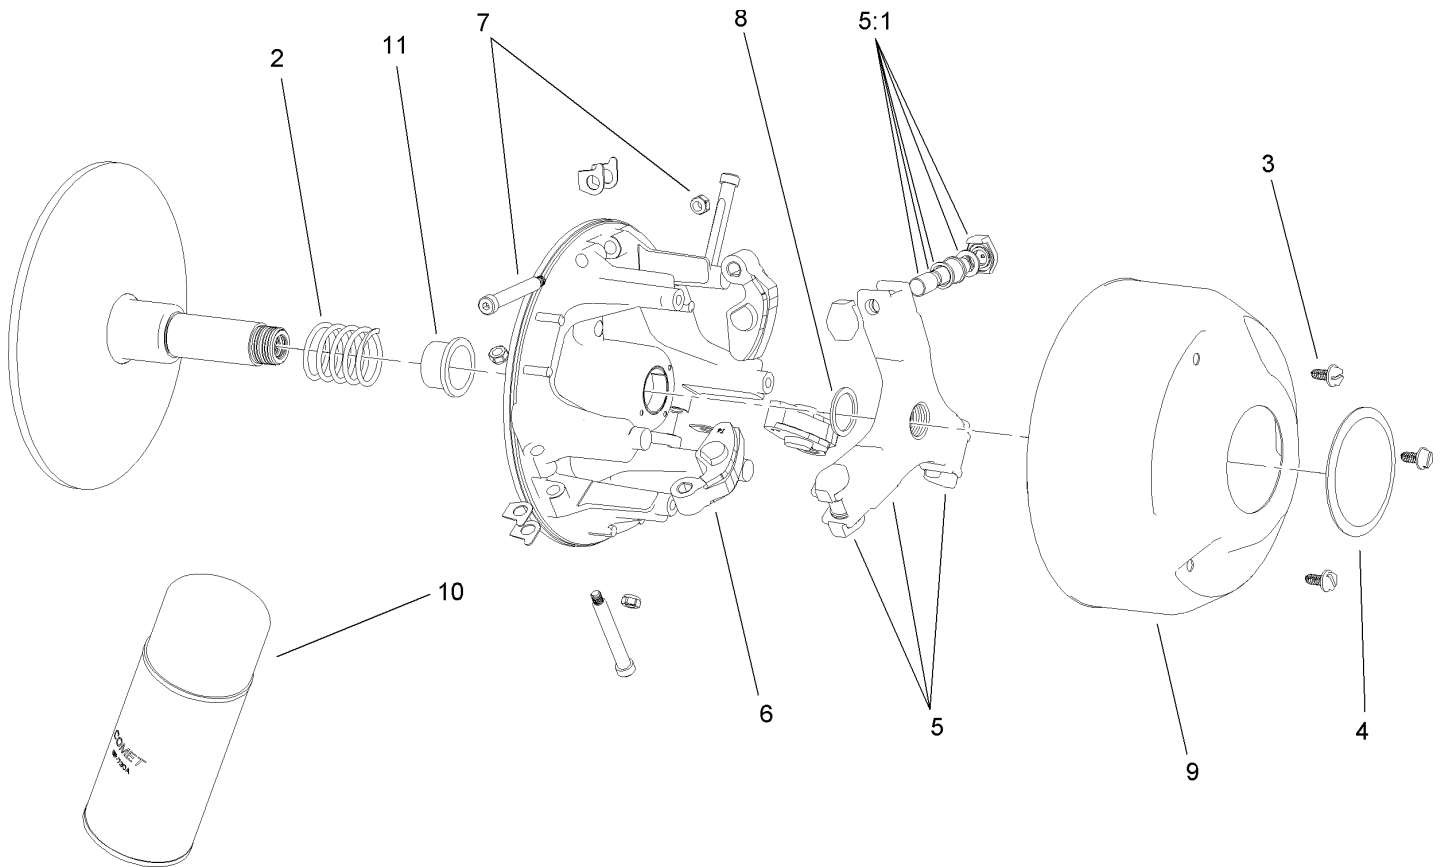

Drive Clutch Assembly No. 108-7013


Ref	Part No.	Qty.	Description				
2	104-1686	1	Spring				
3	3234-26	3	Screw				
4	104-1690	1	Cap				
5	108-3047	1	Spider ASM				
5:1	110-2642	1	Spider Replacement Parts Kit				
6	108-7008	1	Arm-Cam (Set Of 3)				
7	104-4256	1	Pivot Bolt And Nut Kit				
8	104-1687	1	Spacer				
9	104-1691	1	Cover				
10	104-7011	1	Lubricant-Dry				
11	108-3048	1	Spacer-Clutch				

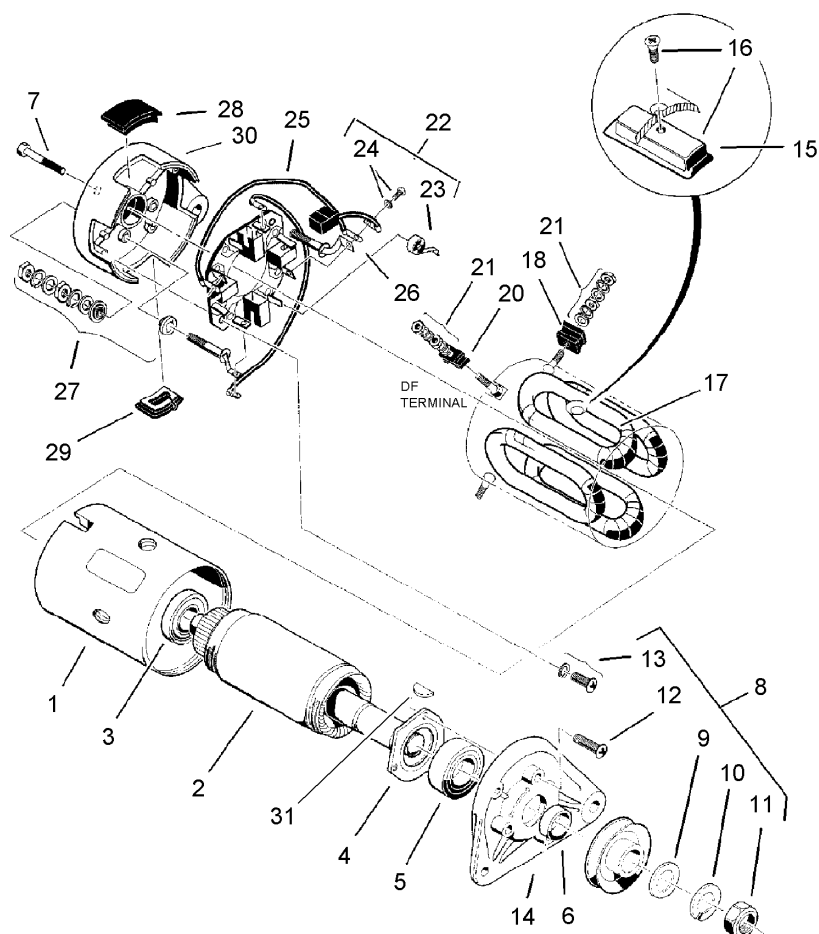

Starter Generator Assembly No. 99-7108

Ref	Part No.	Qty.	Description
21		1	Yoke
2	104-1210	1	Armature Kit
3	104-1211	1	Bearing-Ball, Rear
4	104-1212	1	Retainer
5	104-1213	1	Bearing-Ball, Front
6	104-1214	1	Spacer
7	104-1215	2	Bolt
28		1	Nut And Screw Set
9	104-1216	1	Washer-Plain
10	104-1217	1	Washer-Spring
11	104-1218	1	Nut-Hex
212		3	Screw-Flange
13	104-1219	2	Set-Screw
14	104-1220	1	Bracket-Front
215		4	Pole
16	104-1221	1	Set-Pole And Screw
17	104-1222	1	Field Stator Coil ASM
218		2	F Mold
220		1	Df Mold
21	104-1224	1	Nut And Washer Set
22	104-1225	1	Brush Holder Kit
23	104-1226	4	Spring-Brush
24	104-1227	1	Brush And Screw Set
225		2	Brush Connector ASM


Transaxle Assembly No. 107-0360

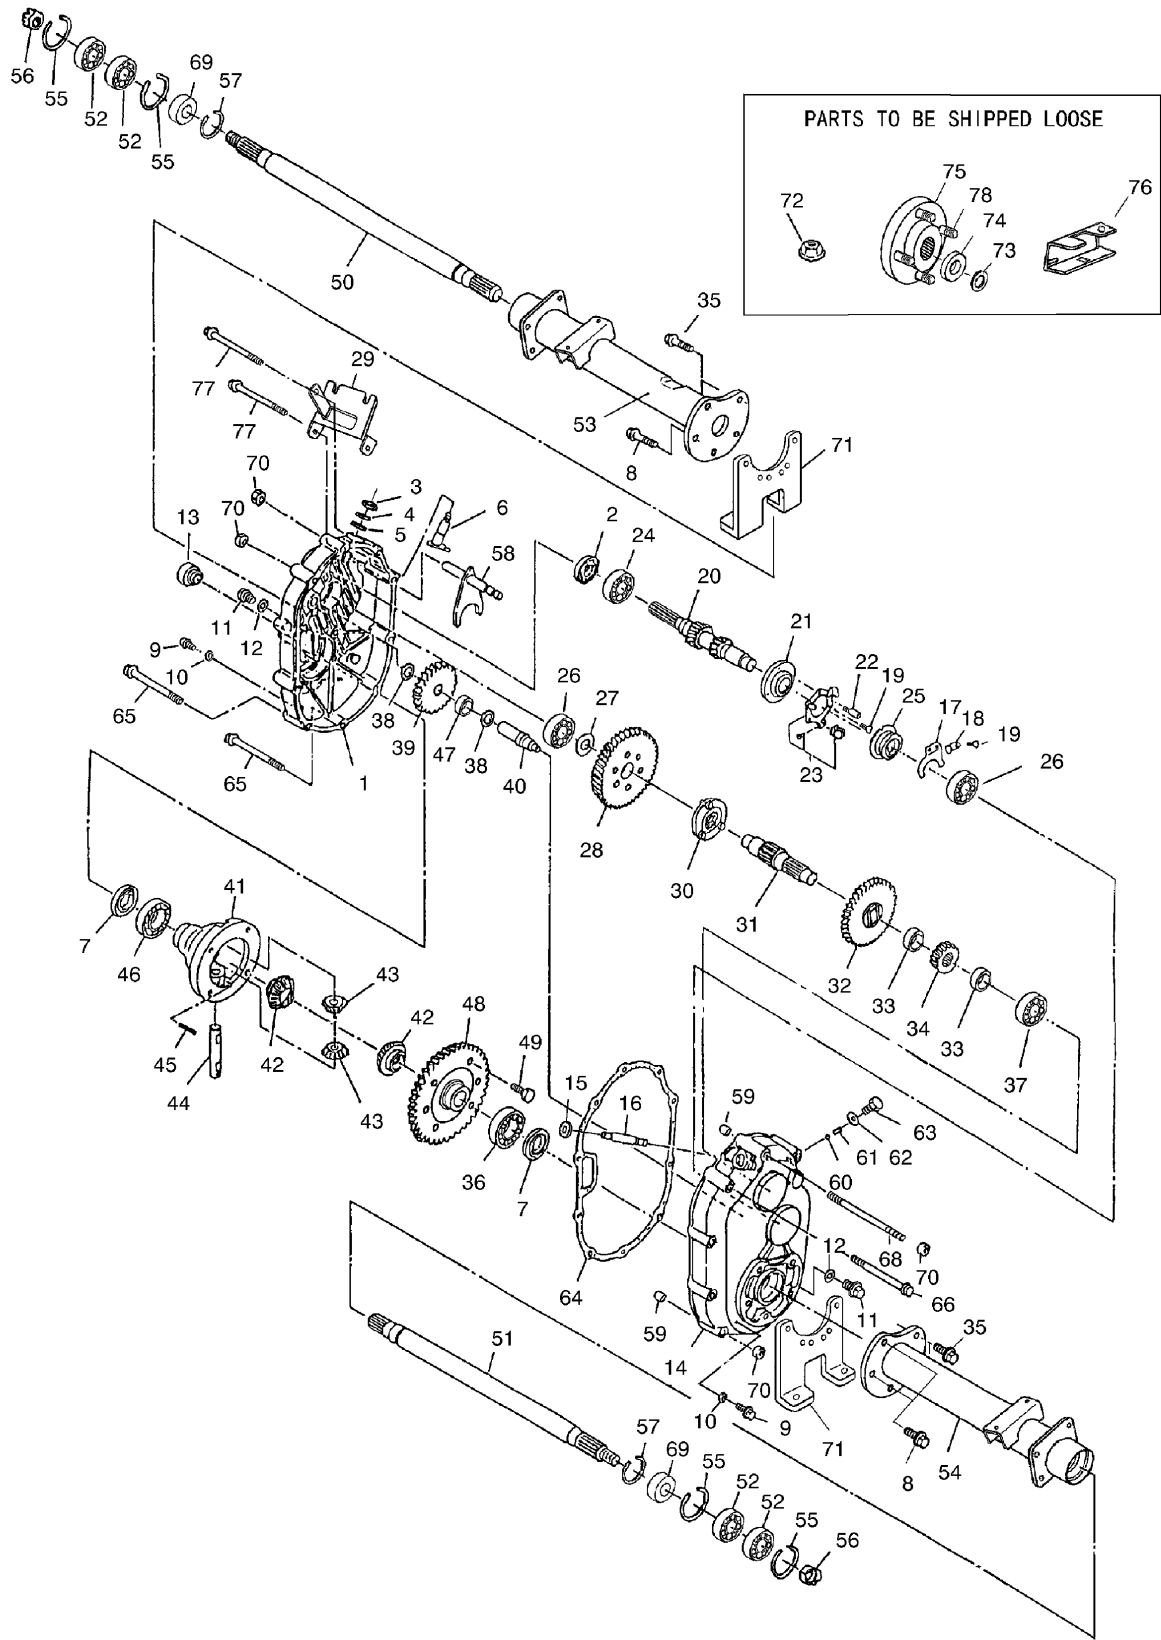

Transaxle Assembly No. 107-0360


Ref	Part No.	Qty.	Description
1	104-1601	1	Case-LH, Complete
2	104-1602	1	Seal-Oil
3	104-1603	1	Seal-Oil
4	104-1604	1	Ring-Snap
5	104-1605	1	Spacer
6	104-1606	1	Shaft-Selector
7	104-1607	2	Seal-Oil
8	104-1608	4	Bolt-Flange
9	104-1609	2	Plug-Check, Oil
10	104-1610	2	Gasket
11	104-1611	2	Plug-Drain, Oil
12	104-1612	2	Gasket
13	104-1613	1	Plug-Filler, Oil
14	104-1614	1	Case-Complete, RH
15	104-1615	1	Seal-Oil
16	104-1616	1	Shaft-Governor
17	104-1617	1	Fork-Governor
18	104-1618	1	Stopper
19	104-1619	4	Screw And Washer ASM
20	104-7002	1	Shaft-Input, Complete
21	104-1621	1	Base-Governor
22	104-1622	1	Pin-Lock
23	104-1623	1	Unit-Plate, Governor
24	104-1624	1	Bearing-Ball
25	104-1625	1	Sleeve-Governor
26	104-1626	2	Bearing-Ball
27	104-1627	1	Spacer
28	104-1628	1	Gear
29	104-1629	1	Bracket-Wire, Change
30	104-1630	1	Clutch-Pin
31	104-1631	1	Shaft-Center
32	104-1632	1	Gear
33	104-1633	2	Collar
34	104-1634	1	Gear
35	104-1635	6	Bolt-Flange
36	104-1636	1	Bearing-Ball
37	104-1637	1	Bearing-Ball
38	104-1638	2	Spacer
39	104-1639	1	Gear
40	104-1640	1	Shaft-Counter
41	104-1641	1	Case-Differential
42	104-1642	2	Gear-Side, Differential
43	104-1643	2	Pinion-Differential
44	104-1644	1	Shaft-Differential
45	104-1645	1	Pin
46	104-1646	1	Bearing-Ball
47	104-1647	1	Bearing-Needle
48	104-1648	1	Gear
49	104-1649	6	Bolt
50	104-1650	1	Shaft-Axle, LH
51	104-1651	1	Shaft-Axle, RH
52	104-1652	4	Bearing-Ball

Ref	Part No.	Qty.	Description
53	104-1653	1	Case-Axle, LH
54	104-1654	1	Case-Axle, RH
55	104-1655	4	Ring-Snap
56	104-1656	2	Nut-Castle
60	104-1660	1	Ball-Steel
57	104-1657	2	Ring-Snap
58	104-6870	1	Shaft-Shift, Complete
59	104-1659	2	Knock-Pipe
60	104-1660	1	Ball-Steel
61	104-1661	1	Spring
62	104-1662	1	Gasket
63	104-1663	1	Bolt
64	104-1664	1	Gasket
65	104-1665	6	Bolt-Flange
66	104-1666	1	Bolt-Flange
68	104-6866	1	Bolt
69	104-6867	2	Collar
70	33004-00	11	Nut-HF
71	104-1671	2	Bracket-Axle
72	104-1672	1	Nut-Lock
73	104-1673	2	Washer-Spring
74	104-1674	2	Washer
75	104-1675	2	Hub
76	104-6860	1	Lever-Select
77	104-6869	2	Bolt-Flange
78	104-8649	10	Stud

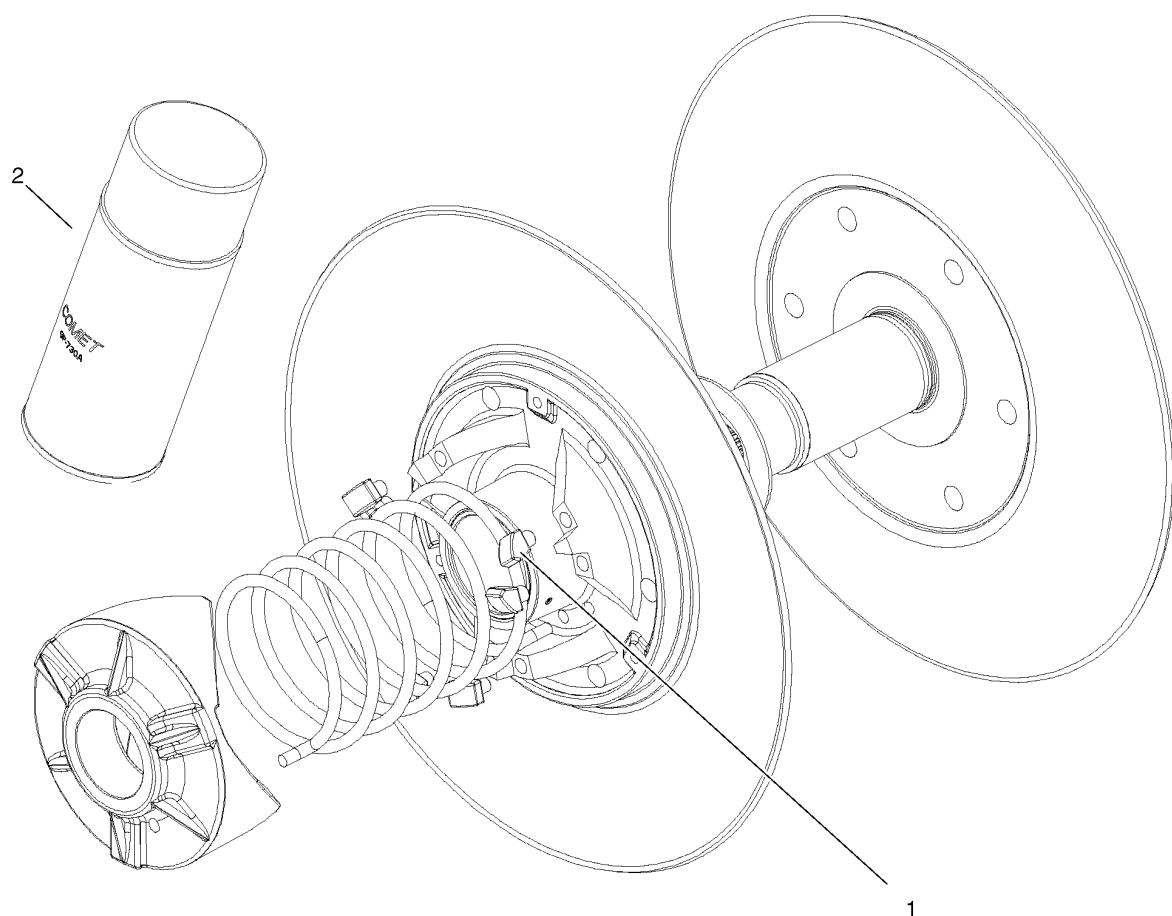


Driven Clutch Assembly No. 99-7104

Ref	Part No.	Qty.	Description
1	104-4257	1	Button Kit
2	104-7011	1	Lubricant-Dry

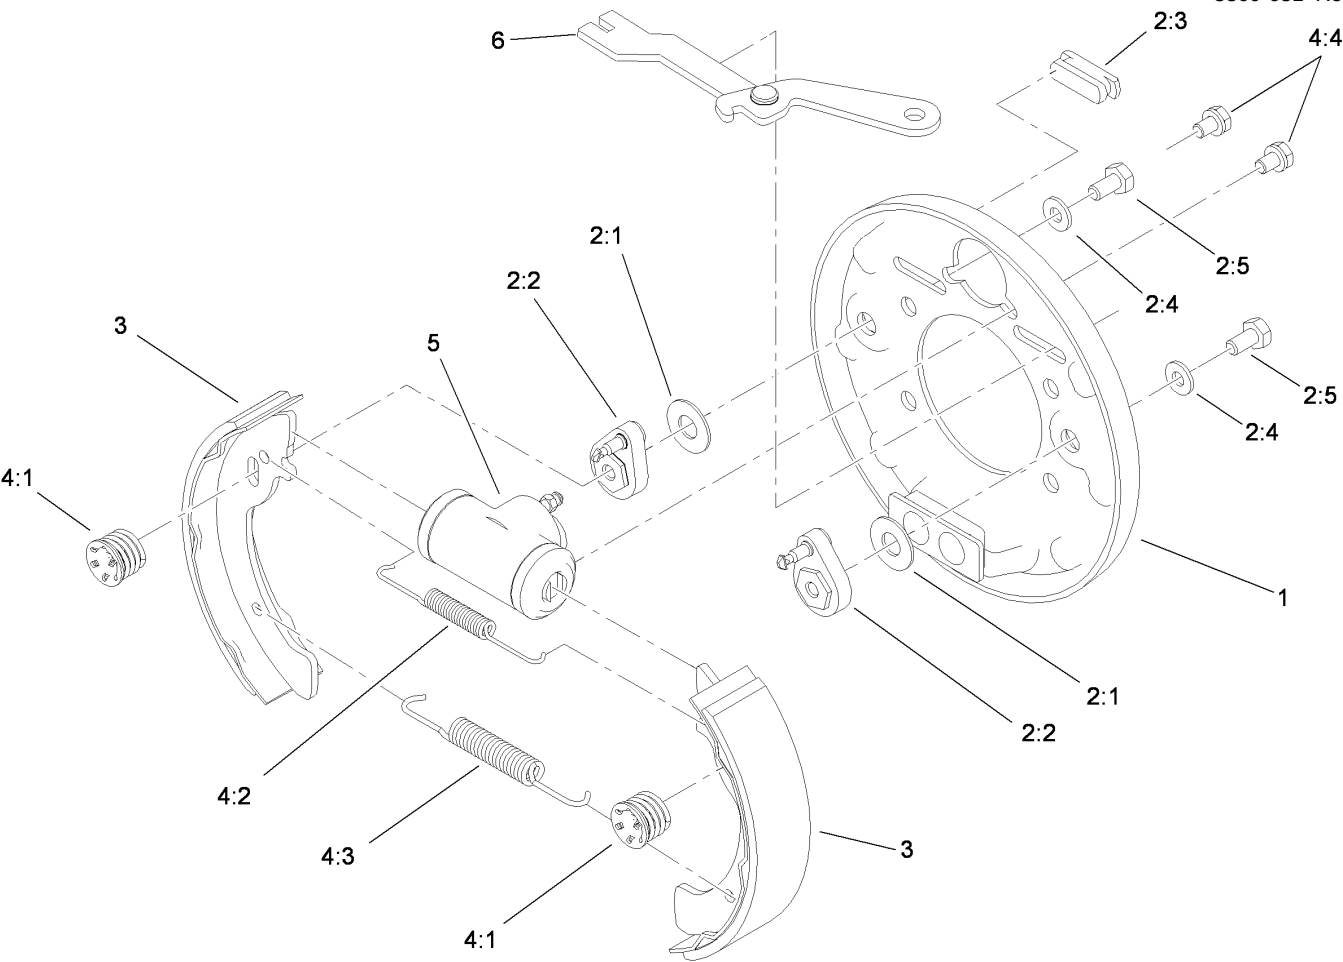


Left Hand Brake Assembly No. 104-6807

Ref	Part No.	Qty.	Description				
1	100-8586	1	Backing Plate ASM				
2	104-6820	1	Adjuster Kit				
2:1	100-8585	2	Washer-Bellville				
2:2	100-8588	2	Adjuster Lever ASM				
2:3	100-8584	2	Cover-Dust				
2:4		2	Washer				
2:5		2	Bolt				
3	104-6818	4	Shoe And Lining Kit				
4	104-6819	1	Hardware Kit				
4:1	100-8583	2	Shoe Hold Down Spring ASM				
4:2	100-8581	2	Spring-Upper				
4:3	100-8582	2	Spring-Lower				
4:4		2	Bolt And Washer				
5	104-6824	1	Wheel Cylinder ASM				
6	104-6825	1	LH Park Brake Lever ASM				

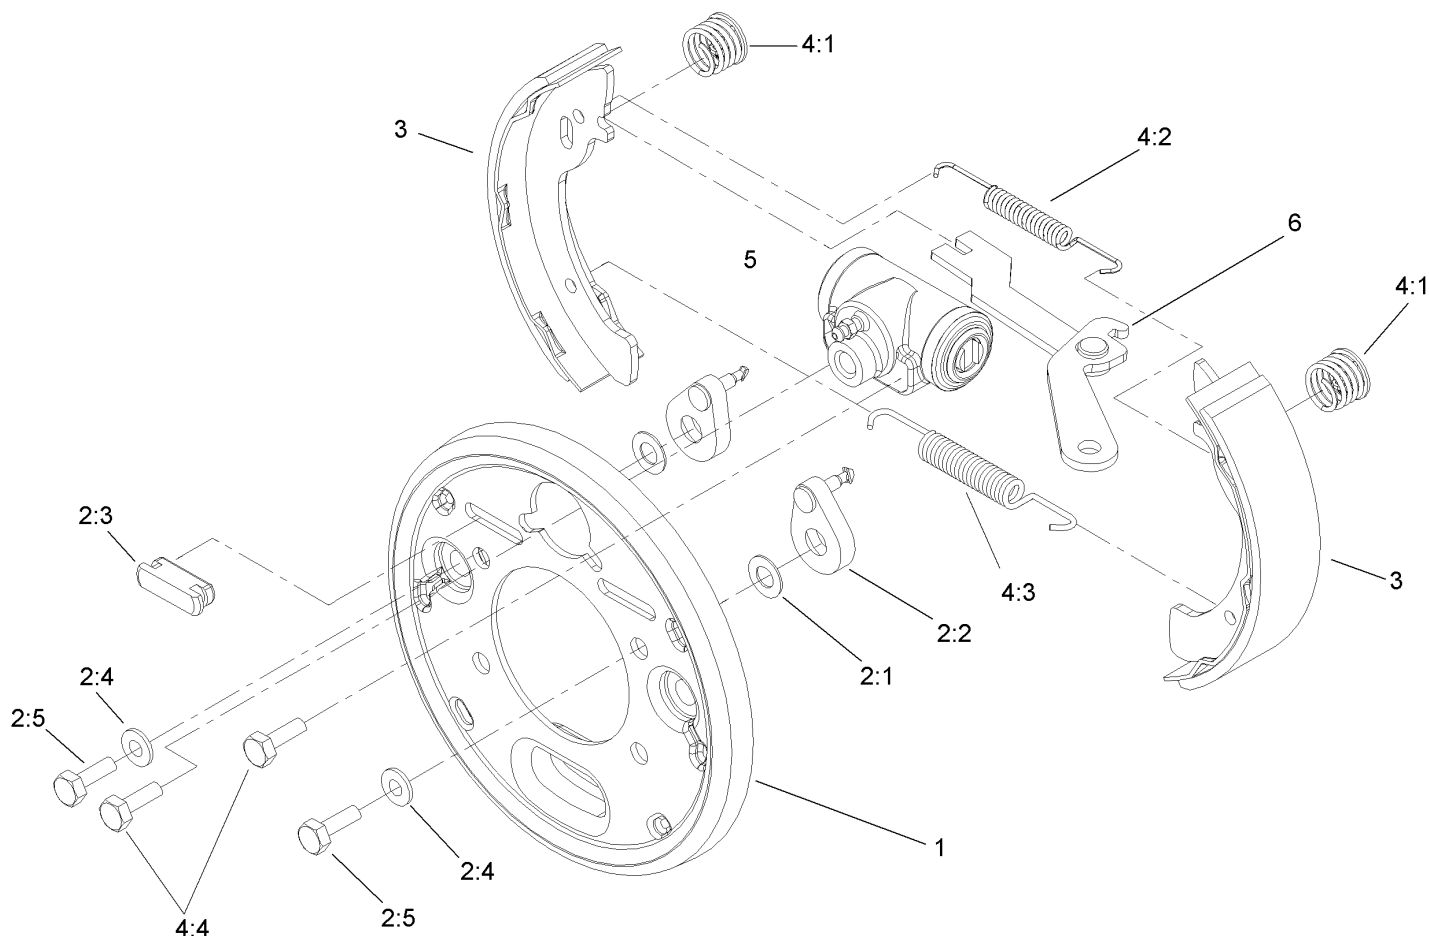

Right Hand Brake Assembly No. 104-6806


Ref	Part No.	Qty.	Description				
1	100-8586	1	Backing Plate ASM				
2	104-6820	1	Adjuster Kit				
2:1	100-8585	2	Washer-Bellville				
2:2	100-8588	2	Adjuster Lever ASM				
2:3	100-8584	2	Cover-Dust				
2:4		2	Washer				
2:5		2	Bolt				
3	104-6818	4	Shoe And Lining Kit				
4	104-6819	1	Hardware Kit				
4:1	100-8583	2	Shoe Hold Down Spring ASM				
4:2	100-8581	2	Spring-Upper				
4:3	100-8582	2	Spring-Lower				
4:4		2	Bolt And Washer				
5	104-6824	1	Wheel Cylinder ASM				
6	104-6826	1	RH Park Brake Lever ASM				

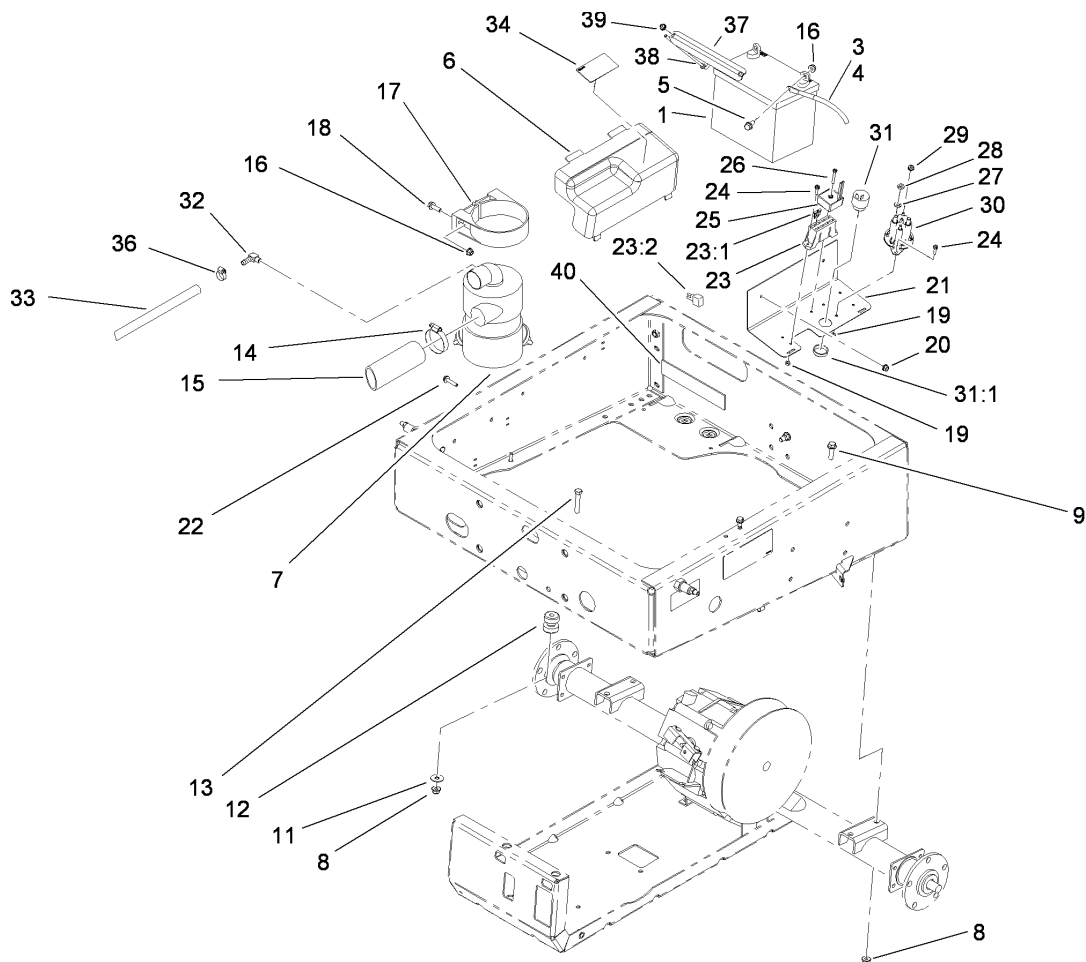

Drivetrain Mounting, Battery and Air Cleaner Assembly


Ref	Part No.	Qty.	Description
1	104-8162	1	Battery
3	99-7415	1	Cable-Negative
4	99-7404	1	Cable-Positive
5	3234-5	2	Screw-HHF
6	99-7325	1	Cover-Electrical
7	99-7120	1	Air Cleaner ASM
8	104-8301	6	Nut-Flange, NI
9	3234-24	4	Screw-HHF
11	3256-35	2	Washer-Flat
12	95-2596	2	Mount-Iso
13	323-10	2	Screw-HH
14	2412-130	1	Clamp-Hose
15	104-6528	1	Hose-Intake
16	104-8300	4	Nut-Flange, NI
17	95-5806	1	Bracket-Mounting
18	3234-17	2	Screw-HHF
19	3296-2	5	Nut-Lock
20	32128-32	2	Nut-HHF
21	99-7051-03	1	Mount-Component
22	3234-21	2	Screw-HHF
23	107-0669	1	Harness-Wire, Main
23:1	218-578	3	Fuse-10 Amp
23:2	100-4918	1	Diode
24	32105-13	4	Screw-HWH

Ref	Part No.	Qty.	Description
25	104-6927	1	Regulator
26	32105-1	1	Screw-SHH
27	3255-8	2	Washer-Lock
28	3220-2	2	Nut-Jam
29	32149-8	2	Nut-Keps
30	114-3315	1	Solenoid-12 Vdc
31	80-9330	1	Alarm-Audio
31:1	104-5107	1	Nut-Plastic, Knurled
32	99-7230	1	Fitting-90 DEG
33	99-7842	1	Hose-Breather
34	99-7352	1	Decal-Information
36	2412-36	2	Clamp-Hose
37	92-5018-03	1	Clamp-Battery
38	95-4042	2	Hook-Retain, Battery
39	104-7201	2	Nut-HF
40	104-7102	1	Pad-Battery

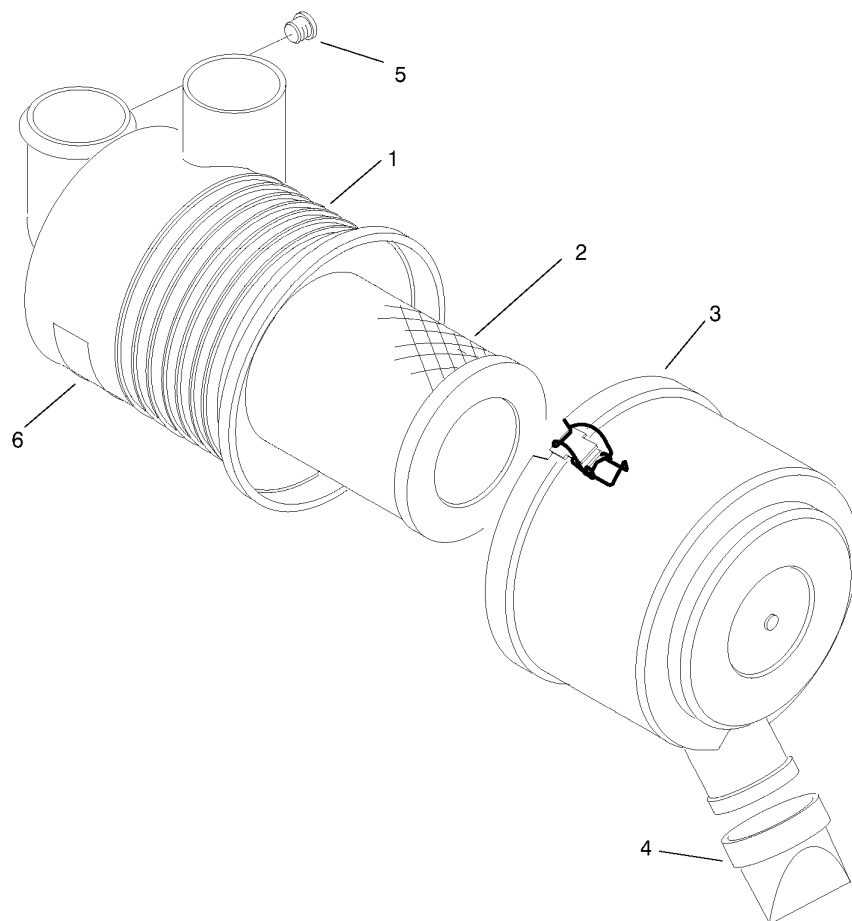


Air Cleaner Assembly No. 99-7120

Ref	Part No.	Qty.	Description
1		1	Body
2	108-3811	1	Filter-Air
3	94-3652	1	Cover ASM
4	87-9400	1	Valve-Vacuator
5		1	Plug
6		1	Marking

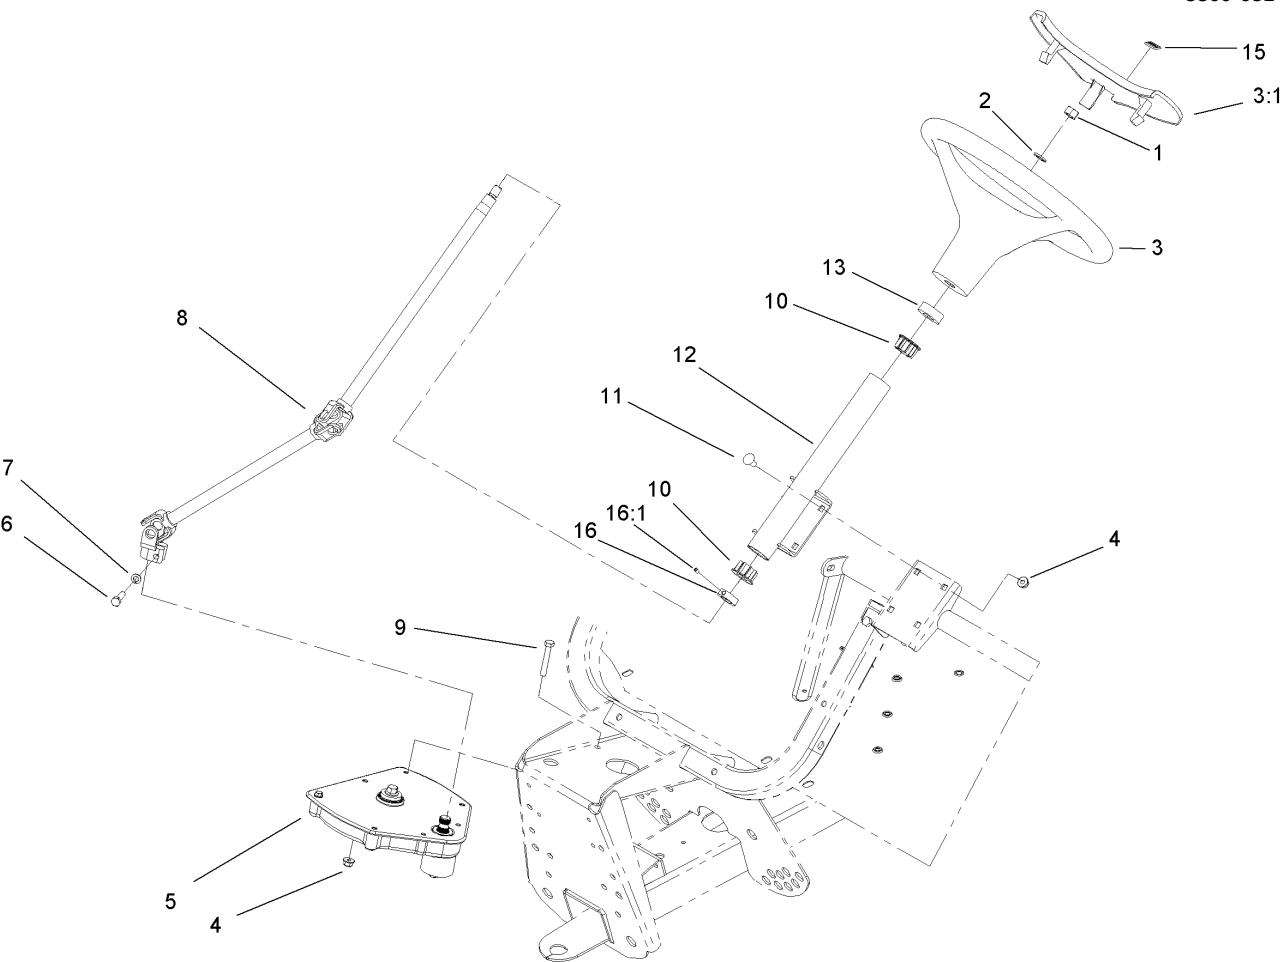


Upper Steering Assembly

Ref	Part No.	Qty.	Description				
1	110-8815	1	Nut-Hex				
2	3256-26	1	Washer-Flat				
3	98-1471	1	Wheel-Steering				
3:1	98-1468	1	Cover-Wheel, Steering				
4	104-8300	7	Nut-Flange, NI				
5	99-7660	1	Steering Gearbox ASM				
6	48-7730	1	Screw-HH				
7	3253-4	1	Washer-Lock				
8	99-7653	1	Shaft-Steering				
9	322-10	3	Screw-HH				
10	93-1146	2	Bushing-Steering, Upper				
11	3230-1	4	Bolt-CARR				
12	99-7651-03	1	Column-Steering				
13	21-9260	1	Cover-Dust				
15	98-1459	1	Decal				
16	111383	1	Collar				
16:1	3245-32	1	Screw-HSH				

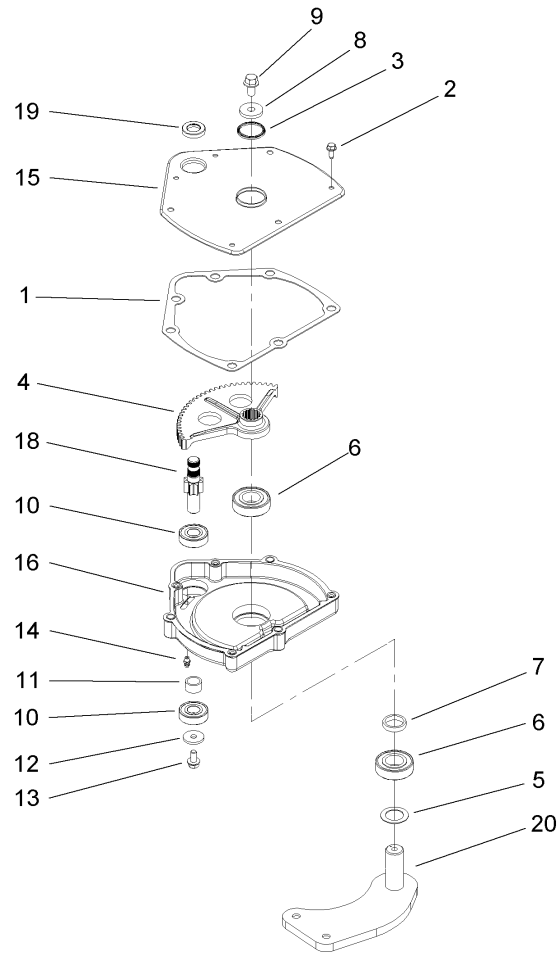


Steering Gearbox Assembly No. 99-7660

Ref	Part No.	Qty.	Description				
1	94-2135	1	Gasket				
2	32144-10	4	Screw-HWH				
3	103118	1	Seal				
4	99-7843	1	Sector-Gear				
5	3256-42	1	Washer-Flat				
6	251-82	2	Bearing-Ball				
7	94-2218	1	Spacer-Shaft, Output				
8	104-6563	1	Washer-Stepped				
9	104-7156	1	Screw-HHF				
10	38-7820	2	Bearing-Ball				
11	94-2217	1	Spacer-Shaft, Input				
12	1-613235	1	Washer				
13	98-3498	1	Screw-HH				
14	302-5	1	Fitting-Grease				
15	99-7656-03	1	Cover-Housing, Steering				
16	99-7658	1	Housing-Steering				
18	99-7650	1	Gear-Pinion				
19	99-7657	1	Seal-Oil				
20	99-7601-03	1	Arm-Pitman				

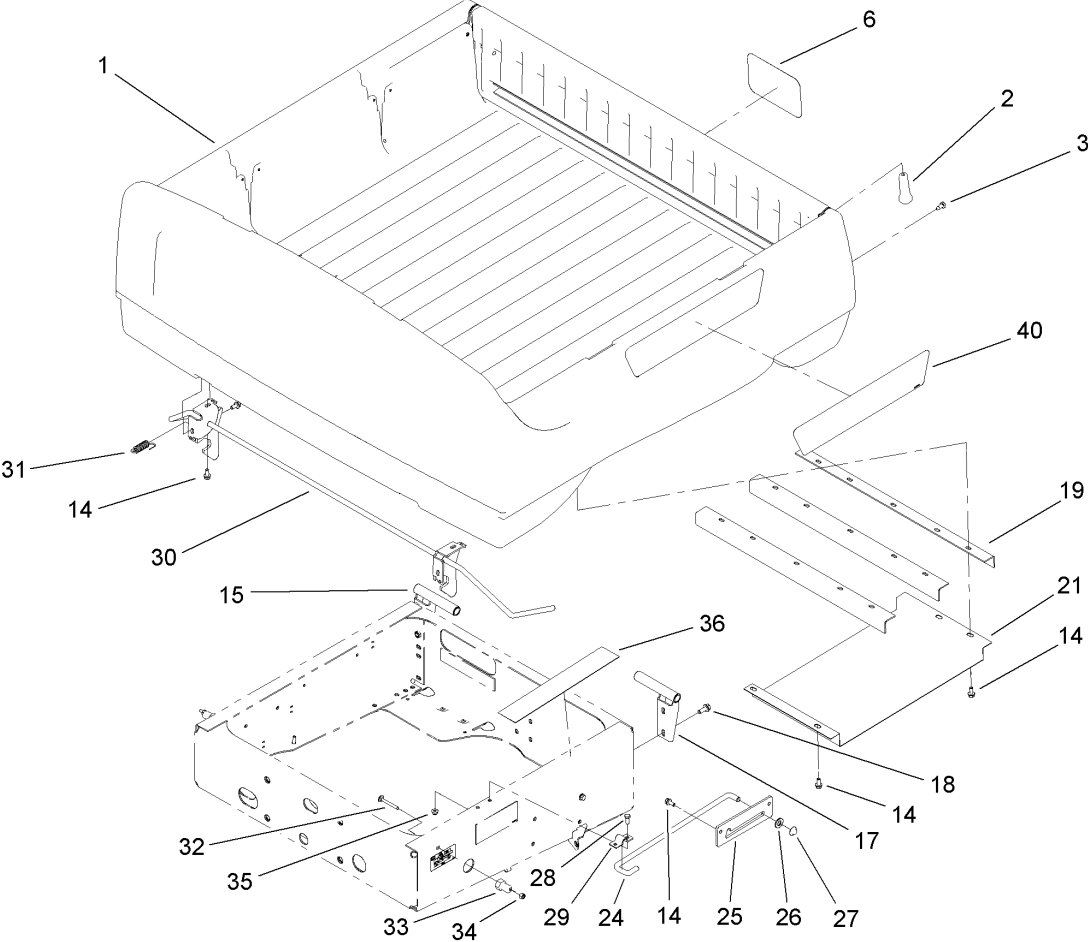


Box and Tailgate Installation Assembly

Ref	Part No.	Qty.	Description				
1		1	Box And Tailgate ASM				
2	99-7984	2	Knob-Soft Grip, Push-On				
3	87-8460	2	Bumper-Rubber				
6	104-7213	1	Decal				
14	3234-5	18	Screw-HHF				
15	99-7309-03	1	RH Pivot Bracket ASM				
17	99-7308-03	1	LH Pivot Bracket ASM				
18	3234-11	4	Screw-HHF				
19	99-7864-03	3	Brace-Box				
21	99-7870	1	Shield-Heat				
24	99-7895	1	Rod-Prop				
25	99-7894	1	Bracket-Rod, Prop				
26	3256-26	1	Washer-Flat				
27	32112-14	1	Nut-Push				
28	3234-17	2	Screw-HHF				
29	99-7896	1	Bracket-U, Prop Rod				
30	104-7244	1	Rod-Latch				
31	5-7290	2	Spring-Tension				
32	3230-7	2	Screw-CARR				
33	104-7248	2	Pin-Latch				
34	3296-29	2	Nut-Lock, NI				
35	104-8300	1	Nut-Flange, NI				
36	104-6859	1	Shield-Heat				
40	104-7265	2	Decal				

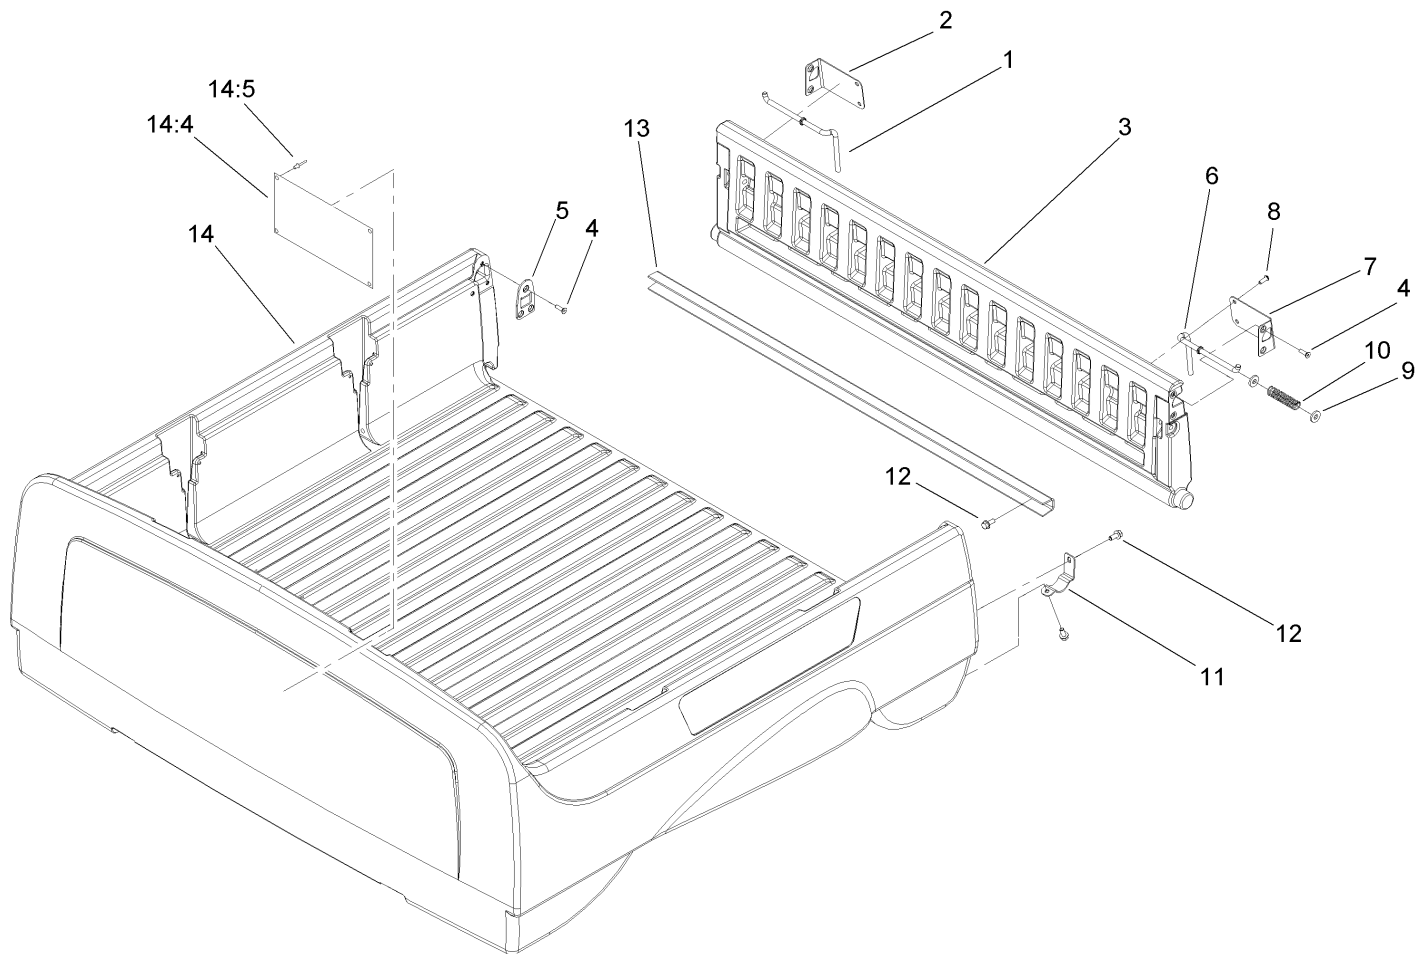

Box and Tailgate Assembly


Ref	Part No.	Qty.	Description				
1	99-7860	1	Rod-Latch, Right				
2	99-7858	1	Bracket-Tailgate Latch, Right				
3	99-7893	1	Tailgate ASM				
4	99-7334	10	Screw				
5	99-7852	2	Plate-Striker				
6	99-7859	1	Rod-Latch, Left				
7	99-7857	1	Bracket-Tailgate Latch, Left				
8	99-7335	4	Screw				
9	99-7861	4	Washer-Latch				
10	61-8880	2	Spring				
11	99-7286	2	Bracket-Pivot, Tailgate				
12	3234-5	10	Screw-HHF				
13	99-7867	1	Channel-Tailgate				
14	104-7203	1	Box ASM				
14:4	99-7954	1	Decal-No Riders				
14:5	3290-415	4	Rivet				

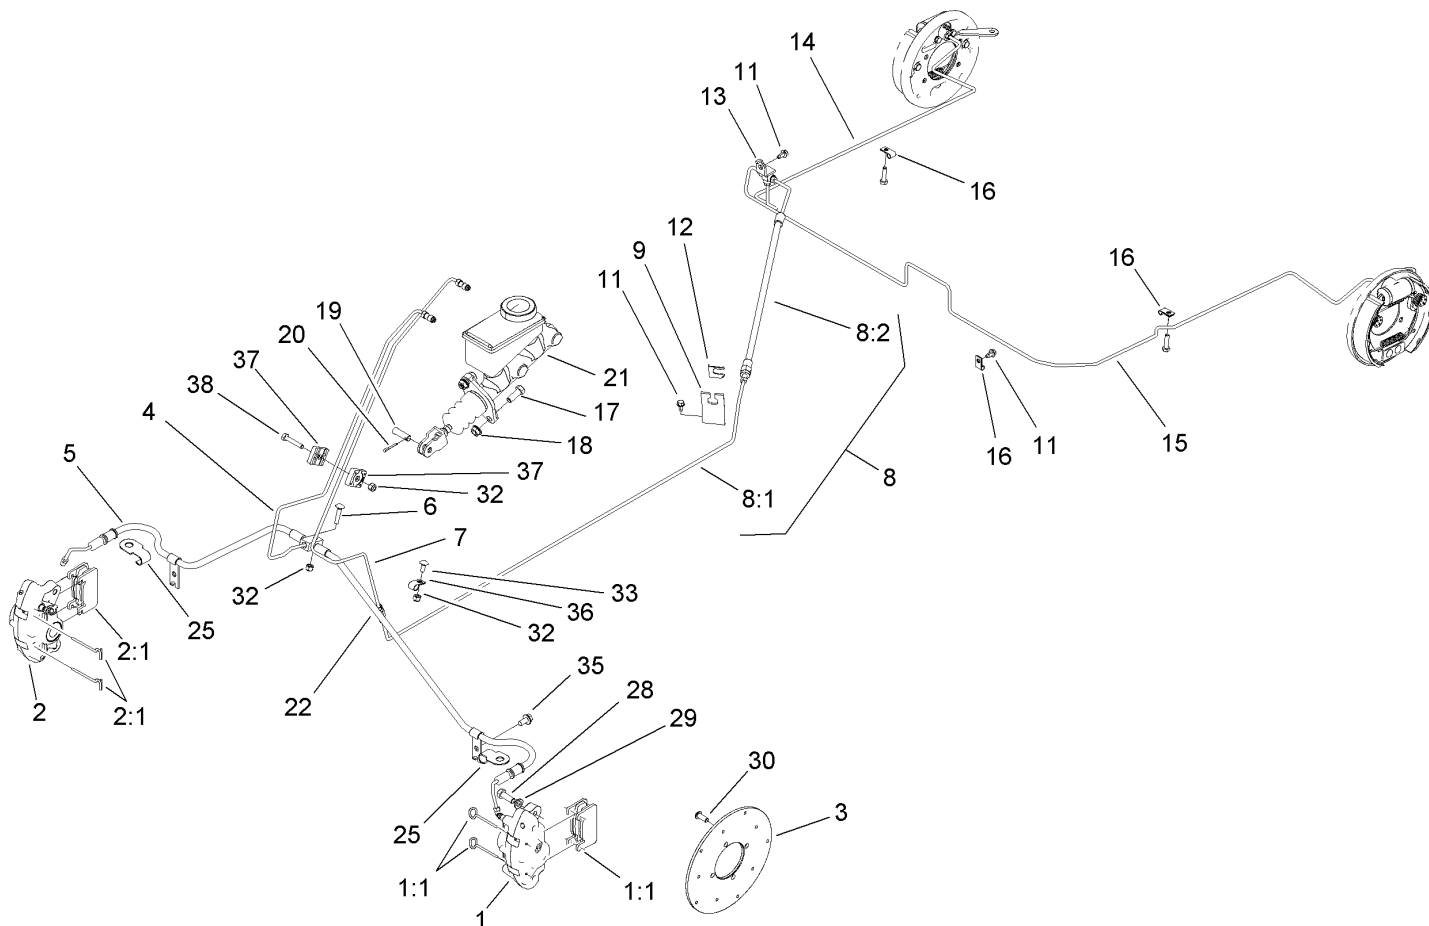

Hydraulic Brake Assembly


Ref	Part No.	Qty.	Description
1	107-0361	1	Caliper-LH
1:1	107-0708	1	Friction Pad And Pin Kit
2	107-0362	1	Caliper-RH
2:1	107-0708	1	Friction Pad And Pin Kit
3	104-6891	2	Rotor
4	104-6798	1	Tube-Brake, Front
5	104-7256	1	Front Hose ASM
6	3229-3	1	Screw-CARR
7	104-6793	1	Tube-Brake, Rear
28		1	Rear Brake Hose ASM
8:1	104-6794	1	Tube-Brake, Rear
8:2	104-6795	1	Hose-Brake, Rear
9	104-6799	1	Bracket-Hose, Brake
11	12-3270	3	Screw
12	104-7092	1	Clip
13	87-3560	1	Tee
14	104-6796	1	Tube-Brake, Rear (RH)
15	110-2604	1	Tube-Brake, Rear (LH)
16	2412-72	3	Clip-Closed, Insulated
17	323-6	2	Screw-HH
18	3290-357	2	Nut-HHF, Whiz
19	283-2	1	Pin-Clevis
20	3272-10	1	Pin-Cotter
21	104-6782	1	Cylinder-Master

Ref	Part No.	Qty.	Description
22	87-3570	1	Union
25	104-7073	2	Bracket-Hose
28	323-6	4	Screw-HH
29	3253-21	4	Washer-Lock
30	3274-55	8	Screw-HSBH
32	3296-42	3	Nut-Lock, NI
33	3229-11	1	Screw-CARR
35	32144-14	2	Screw-HWHTF
36	2412-89	1	Clamp
37	87-7660	2	Clamp-Tube
38	321-9	1	Screw-HH

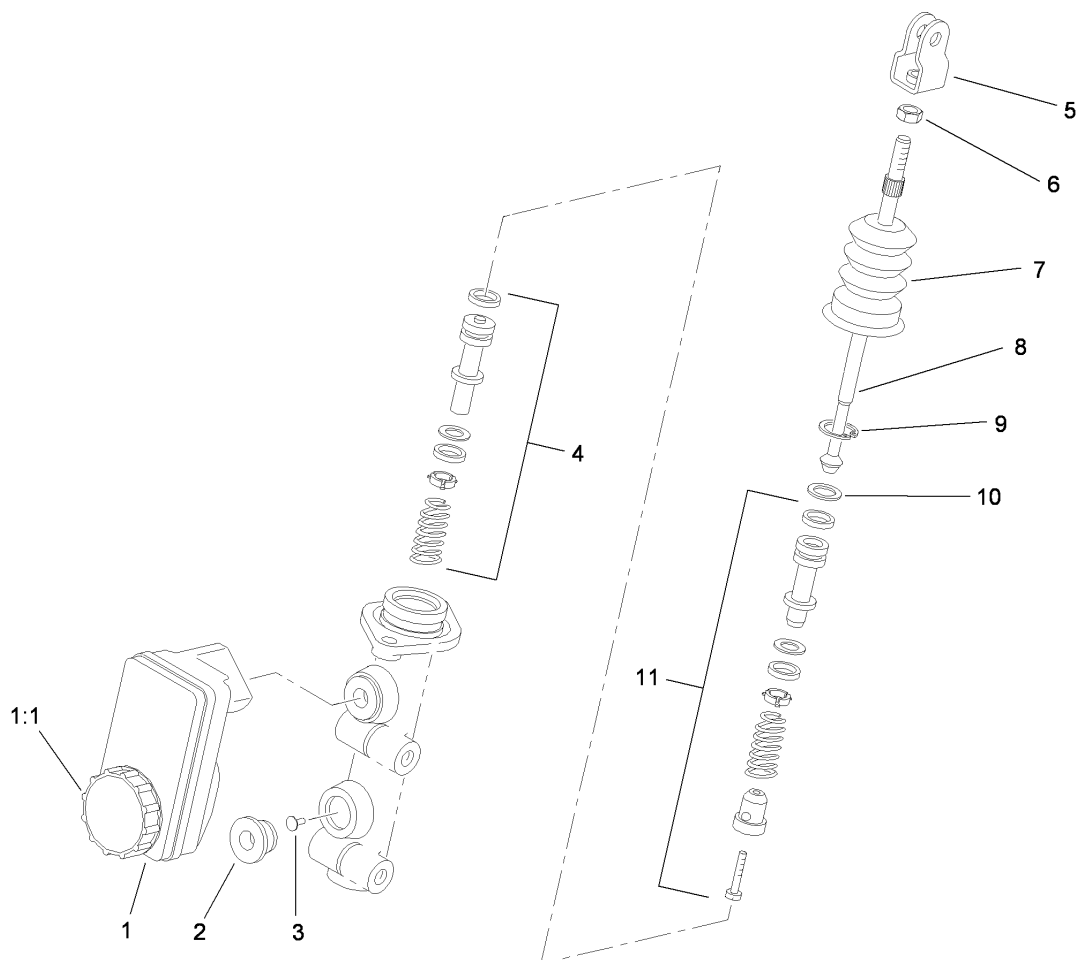

Master Cylinder Assembly No. 104-6782







Ref	Part No.	Qty.	Description
1	104-6845	1	Reservoir ASM
1:1	92-4112	1	Cap ASM
2	93-8971	2	Seal-Port, Flange
3	92-4103	1	Pin-Stop
4	92-4102	1	Secondary Piston ASM
5	92-4110	1	Clevis
6	21-0360	1	Nut-Hex
7	94-5209	1	Cover-Dust
8	94-5210	1	Rod-Push
9	92-4109	1	Ring-Snap
10	92-4108	1	Retainer-Washer
11	92-4101	1	Primary Piston ASM

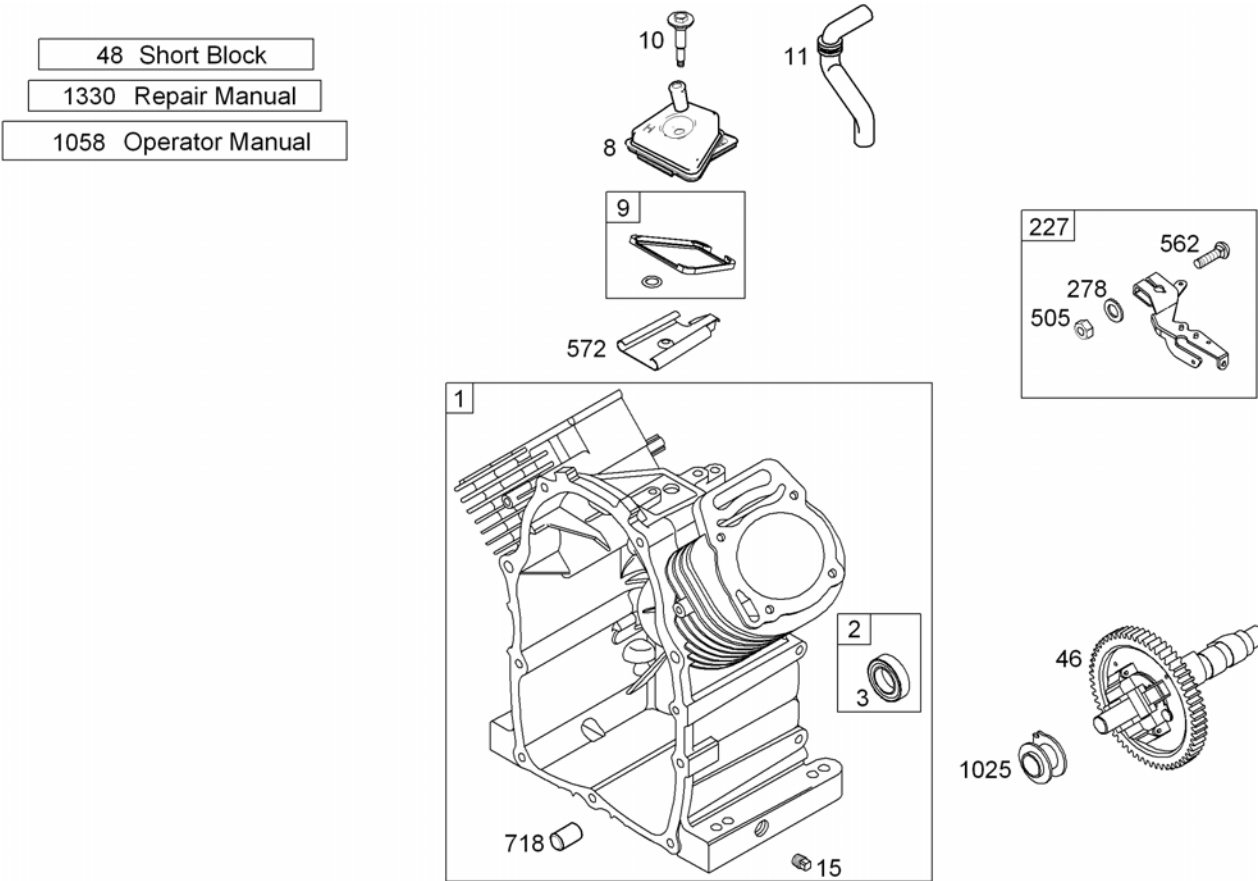

Assemblies include all parts shown in frames

Cylinder Assembly
Briggs and Stratton 295440-0158-G1

Ref	Part No.	Qty.	Description				
❶1	692178	1	Cylinder ASM				
❷2	808534	1	Bushing And Seal ASM (Magneto Side)				
❸❸3	805101S	1	Seal-Oil (Magneto Side)				
❹8	808984	1	Breather ASM				
❺❹9	809094	1	Gasket-Breather				
❻10	690751	1	Screw (Breather ASM)				
❼11	806038s	1	Tube-Breather				
❽15	690946	1	Plug-Drain, Oil (Cylinder)				
❾46	691557	1	Camshaft				
❿48	494055	1	Block-Short				
⓫227	690236	1	Lever-Control, Governor				
⓫278	842122	1	Washer (Governor Control Lever)				
⓫505	690238	1	Nut (Governor Control Lever)				
⓫562	690239	1	Bolt (Governor Control Lever)				
⓫572	690686	1	Baffle-Breather				
⓫718	806469	1	Pin-Locating				
⓫1025	690689	1	Spool-Governor				
⓫1058	277106	1	Manual-Operator				
⓫1330	272144	1	Manual-Repair				

 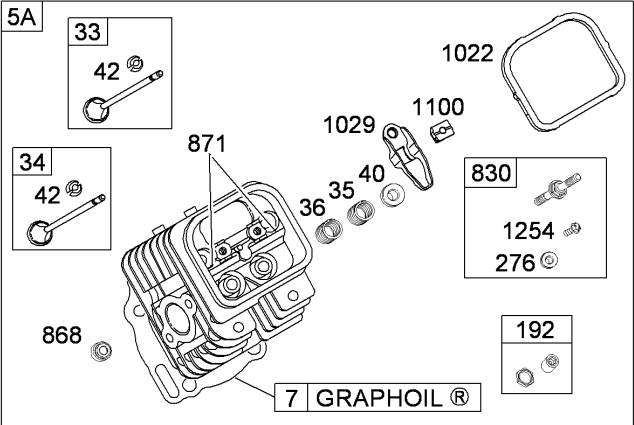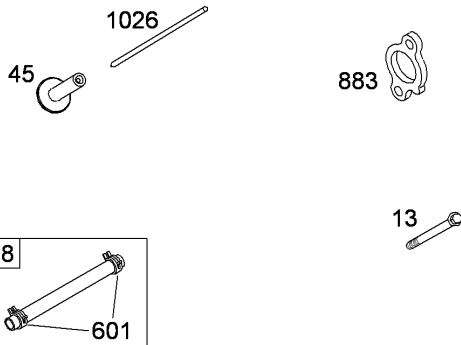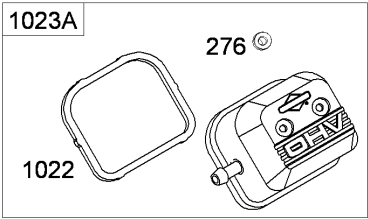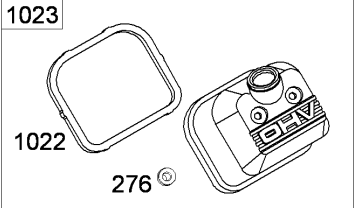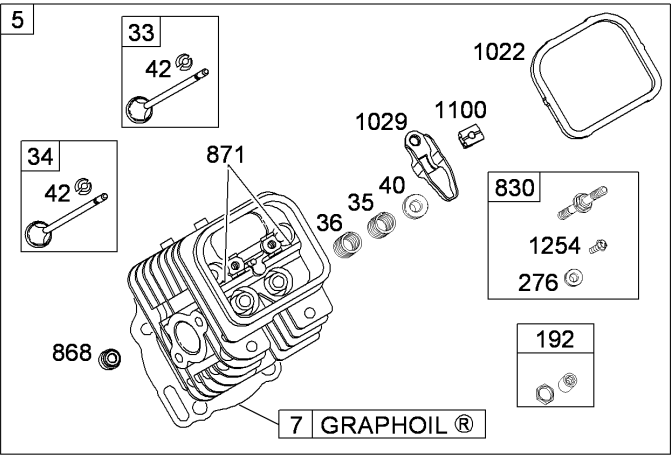


Assemblies include all parts shown in frames

Cylinder Head Assembly

Briggs and Stratton 295440-0158-G1

Ref	Part No.	Qty.	Description
5	809200	1	Head-Cylinder (Cylinder 1)
5A	809201	1	Head-Cylinder (Cylinder 2)
57	806085S	1	Gasket-Head, Cylinder
6			
13	692059	1	Screw (Cylinder Head)
21	809500	1	Cap-Fill, Oil
33	807681	1	Valve-Exhaust
34	807680	1	Valve-Intake
35	692084	1	Spring-Valve (Exhaust)
36	692084	1	Spring-Valve (Exhaust)
40	692058	1	Retainer-Valve
42	807683	1	Keeper-Valve
45	843379	1	Tappet-Valve
192	807623	1	Adjuster-Arm, Rocker
276	807085	1	Washer-Sealing (Rocker Cover)
580	691312	1	Seal-O Ring (Oil Fill Cap)
601	691038	1	Clamp-Hose
830	809157	1	Stud-Arm, Rocker
868	691963	1	Seal-Valve
6			
871	692057	1	Bushing-Guide, Valve
883	691613	1	Gasket-Exhaust
6			
918	791880	1	Hose-Vacuum

Ref	Part No.	Qty.	Description
551022	806039S	1	Gasket-Cover, Rocker
6			
1023	843749	1	Cover-Rocker
1023A	691558	1	Cover-Rocker (Cylinder 1)
1026	691836	1	Rod-Push (Intake)
1026	691758	1	Rod-Push (Exhaust)
1029	807323	1	Arm-Rocker
1100	791959	1	Pivot-Arm, Rocker
1254	807084	1	Screw (Rocker Cover Stud)

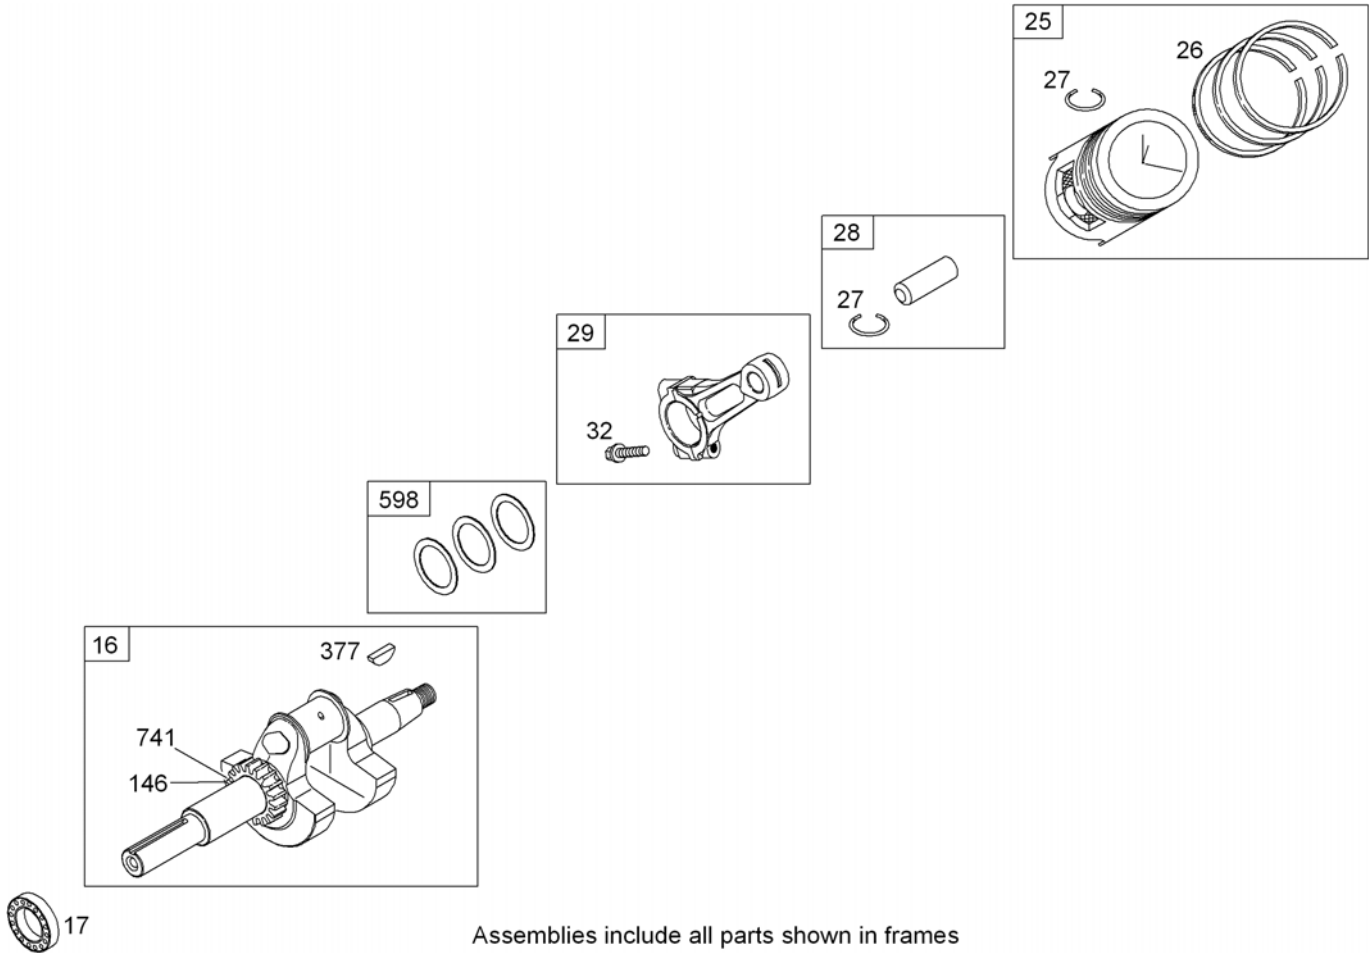


Assemblies include all parts shown in frames

Crankshaft and Piston/Ring Assembly

Briggs and Stratton 295440-0158-G1

Ref	Part No.	Qty.	Description				
16	692163	1	Crankshaft				
17	690752	1	Bearing-Ball				
25	843952	1	Piston ASM (Standard)				
25	843956	1	Piston ASM (.020 Oversize)				
26	843953	1	Ring Set (Standard)				
26	843957	1	Ring Set (.020 Oversize)				
27	690683	1	Lock-Pin, Piston				
28	690229	1	Pin-Piston (STD)				
29	807900S	1	Rod-Connecting				
32	690698	1	Screw (Connecting Rod)				
146	691639	1	Key-Timing				
377	808095	1	Key-Woodruff				
598	807625	1	Shim-Play, End (Crankshaft Or Camshaft Bearing)				
741	691530	1	Gear-Timing				

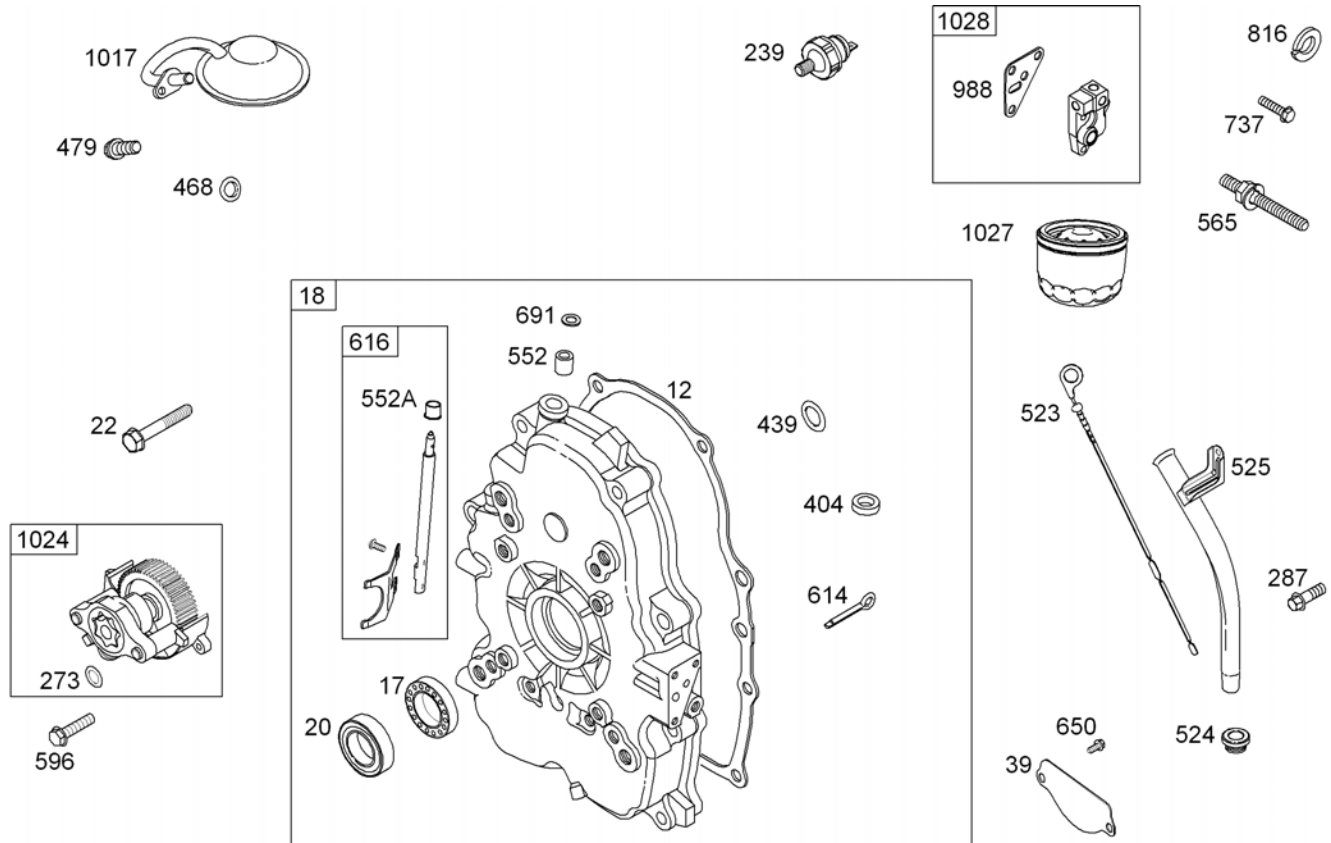


Assemblies include all parts shown in frames

Crankcase Cover/Sump Assembly Briggs and Stratton 295440-0158-G1

Ref	Part No.	Qty.	Description
③ 12	6843970	1	Gasket-Crankcase
③ 17	690752	1	Bearing-Ball
③ 18	808847	1	Cover-Crankcase
③ 20	805049S	1	Seal-Oil (PTO Side)
③ 22	807362	1	Screw (Crankcase/Cover/Sump)
③ 39	690745	1	Deflector-Oil
③ 239	690233	1	Switch-Pressure, Oil
③ 273	690681	1	Seal-Oil (Oil Pump)
③ 287	692062	1	Screw (Dipstick Tube)
③ 404	690704	1	Washer (Governor Crank)
③ 439	692154	1	Seal-O Ring (Crankcase/Cover/Sump)
③ 468	690690	1	Seal-O Ring (Oil Pump Screen)
③ 479	807084	1	Screw (Oil Pump Screen)
③ 523	693175	1	Dipstick
③ 524	693172	1	Seal-Tube, Dipstick
③ 525	693174	1	Tube-Dipstick
③ 552	690701	1	Bushing-Crank, Governor
③ 552A	806686	1	Bushing-Crank, Governor
③ 565	690682	1	Stud (Oil Filter Adapter)
③ 596	691492	1	Screw (Oil Pump)
③ 614	691550	1	Retainer-Shaft, Governor
③ 616	806685	1	Crank-Governor
③ 650	841233	1	Screw (Oil Deflector)


Ref	Part No.	Qty.	Description
③ 691	690680	1	Seal-Shaft, Governor
③ 737	690679	1	Screw (Oil Filter Adapter)
③ 816	690706	1	Washer (Oil Filter Adapter)
③ 988	692063	1	Gasket-Adapter, Oil Filter
③ 1017	690900	1	Screen-Pump, Oil
③ 1024	693185	1	Pump-Oil
③ 1027	842921	1	Filter-Oil
③ 1028	492687	1	Adapter-Filter, Oil

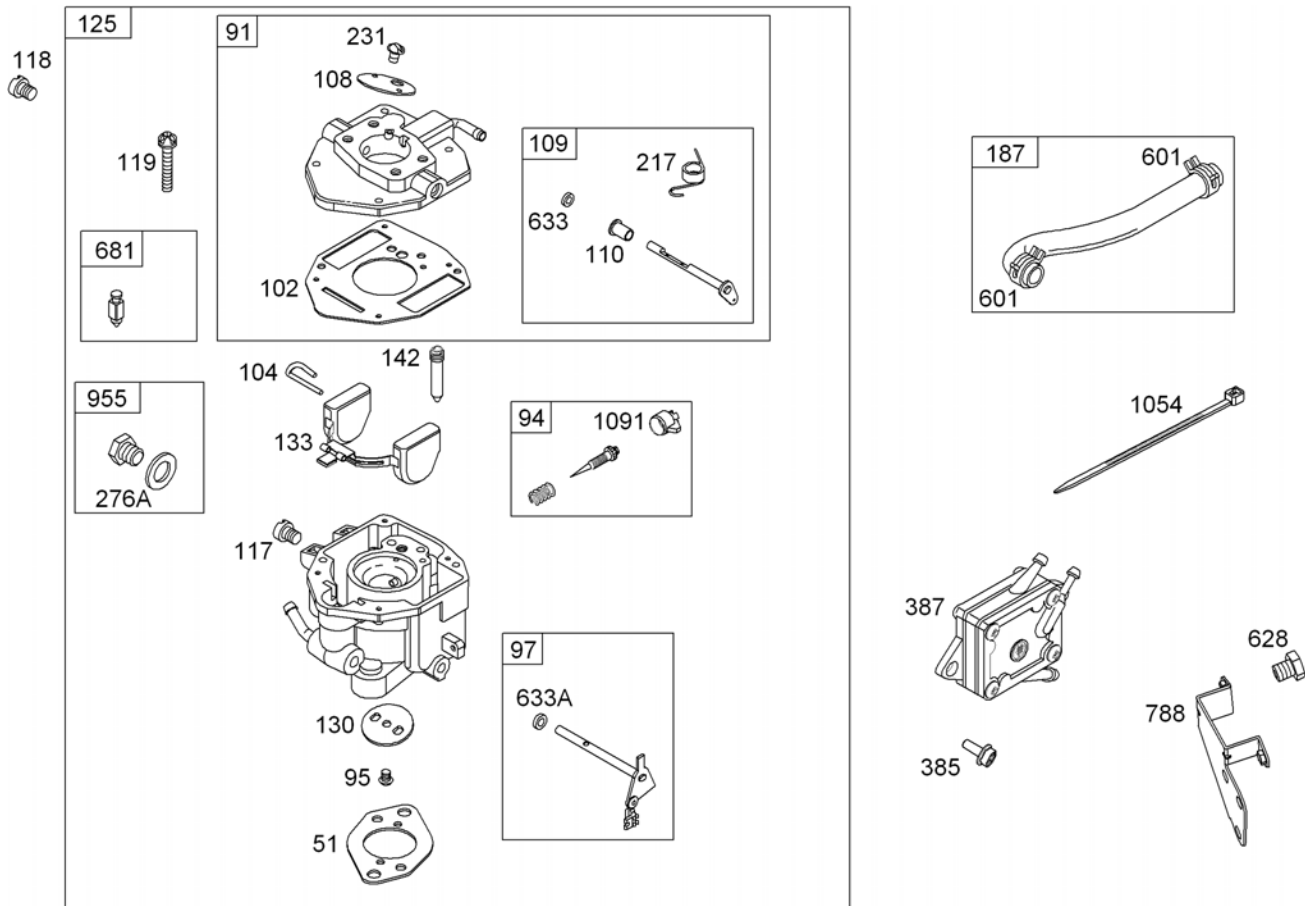

Assemblies include all parts shown in frames


Carburetor and Fuel Pump Assembly Briggs and Stratton 295440-0158-G1

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
③⑤51	691694	1	Gasket-Intake	③387	808969	1	Pump-Fuel
③91	843532	1	Body-Carburetor, Upper	③601	691038	1	Clamp-Hose
③④94	842870	1	Idle Mixture Kit	③628	806660	1	Screw (Fuel Pump Bracket)
③95	690718	1	Screw (Throttle Valve)	③④633	690722	1	Seal-Shaft, Choke Throttle
③97	841498	1	Shaft-Throttle	③633A	806131	1	Seal-Shaft, Choke Throttle
③④102	692077	1	Gasket-Body, Carburetor	③④681	808798	1	Valve-Needle, Float
③④104	690723	1	Pin-Hinge, Float	③788	691559	1	Bracket-Pump, Fuel
③108	690719	1	Valve-Choke	③955	807723	1	Plug-Carburetor
③109	808962	1	Shaft-Choke	③1054	280275	1	Tie-Cable
③④110	806861	1	Washer (Choke Shaft)	③④1091	691516	1	Cap-Limiter
③117	842318	1	Jet-Main (Standard)				
③118	842836	1	Jet-Main (High Altitude)				
③119	842791	1	Screw (Upper To Lower Carburetor Body)				
③125	843130	1	Carburetor				
③130	690726	1	Valve-Throttle				
③133	806961	1	Float-Carburetor				
③④142	842319	1	Nozzle-Carburetor				
③187	791801	1	Line-Fuel				
③217	806862	1	Spring-Return, Choke				
③231	690718	1	Screw (Choke Valve)				
③④276A	693497	1	Washer-Sealing				
③⑥							
③385	693169	1	Screw (Fuel Pump)				

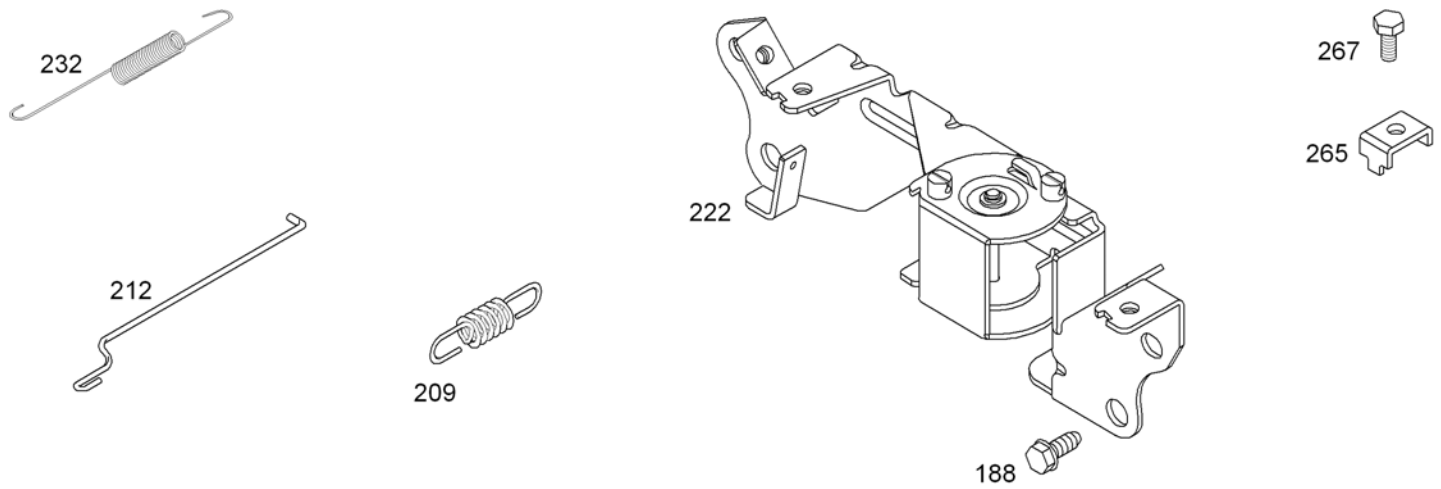

**Governor Control Assembly
Briggs and Stratton 295440-0158-G1**


Ref	Part No.	Qty.	Description				
③188	692056	1	Screw (Control Bracket)				
③209	691507	1	Spring-Governor (Brown)				
③212	690712	1	Link-Throttle				
③222	691570	1	Bracket-Control				
③232	692073	1	Spring-Link, Governor				
③265	691024	1	Clamp-Casing				
③267	841552	1	Screw (Casing Clamp)				

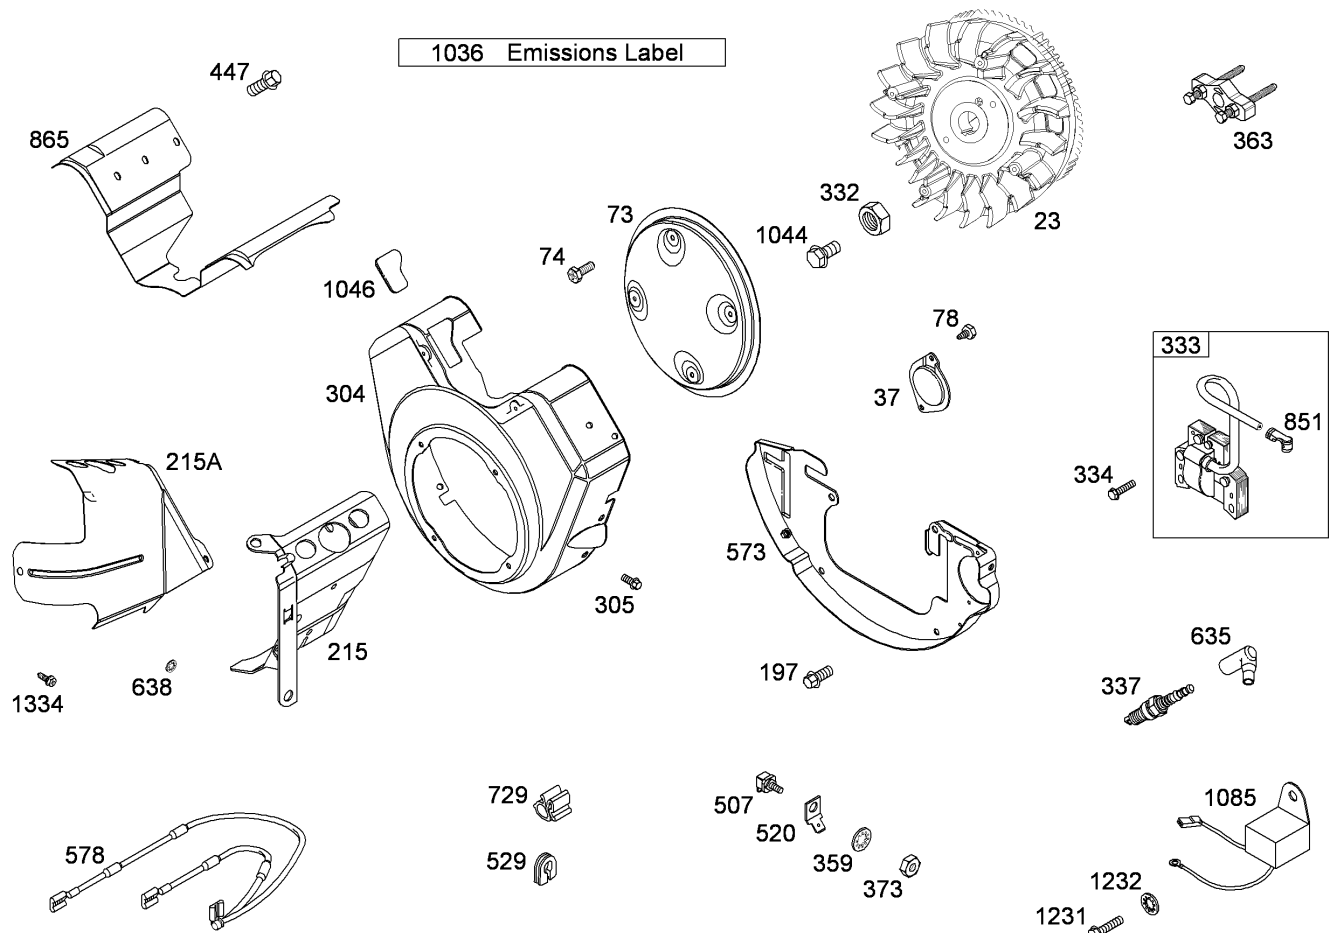

Blower Housing, Flywheel and Air Guide Assembly Briggs and Stratton 295440-0158-G1




Ref	Part No.	Qty.	Description
23	842683	1	Flywheel
37	841309	1	Guard-Flywheel
73	841440	1	Screen-Rotating
74	841441	1	Screw (Rotating Screen)
78	690688	1	Screw (Flywheel Guard)
197	807163	1	Screw (Back Plate)
215	841183	1	Guide-Air (Cylinder 1)
215A	841182	1	Guide-Air (Cylinder 2)
304	842681	1	Housing-Blower
305	841233	1	Screw (Cylinder Head Cover)
332	690887	1	Nut (Flywheel)
333	492341	1	Armature-Magneto
334	692066	1	Screw (Magneto Armature)
337	496018S	1	Spark Plug
359	691077	1	Washer (Ignition Module)
363	19203	1	Puller-Flywheel
373	691612	1	Nut (Ground Terminal)
447	841233	1	Screw (Cylinder Head Cover)
507	691972	1	Insulator
520	691084	1	Terminal-Ground
529	690744	1	Grommet (Ignition)
573	841310	1	Plate-Back
578	692319	1	Wire ASM
635	692076	1	Boot-Spark Plug

Ref	Part No.	Qty.	Description
638	691551	1	Washer (Cylinder Head Cover)
729	690586	1	Clip-Wire
851	493880s	1	Terminal-Spark Plug
865	843768	1	Cover-Guide, Air
1036		1	Label-Emissions
1044	692056	1	Screw (Flywheel)
1046	843068	1	Plug-Housing, Blower
1085	809093	1	Module-Ignition
1231	692067	1	Screw (Ignition Module)
1232	691077	1	Washer (Ignition Module)
1334	841233	1	Screw (Cylinder Head Cover)

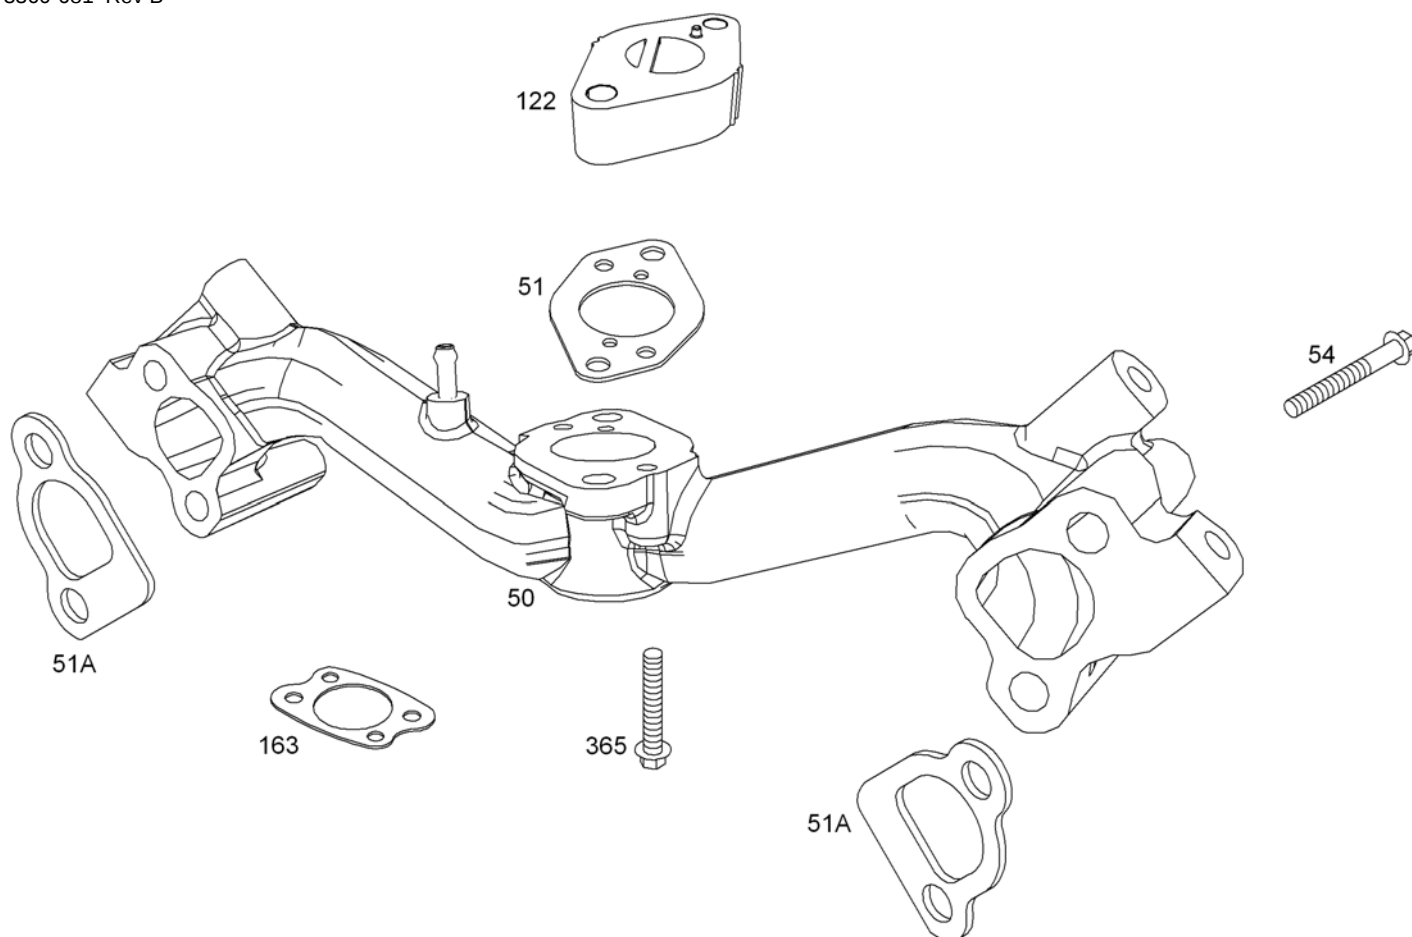

Intake Manifold Assembly Briggs and Stratton 295440-0158-G1

Ref	Part No.	Qty.	Description				
350	844034	1	Manifold-Intake				
3551	691694	1	Gasket-Intake (Manifold To Carburetor)				
3551A	692035	1	Gasket-Intake				
6							
354	690676	1	Screw (Intake Manifold)				
3122	690691	1	Spacer-Carburetor				
34163	692081	1	Gasket-Cleaner, Air				
3365	690711	1	Screw (Carburetor)				

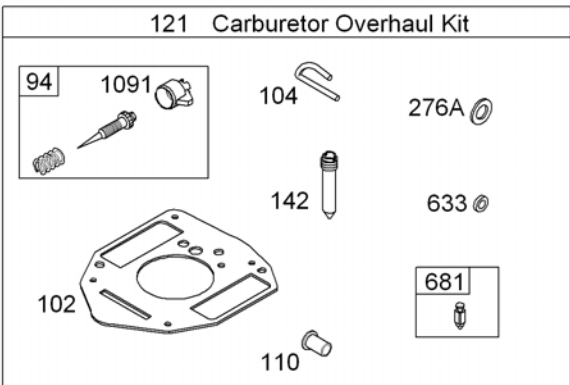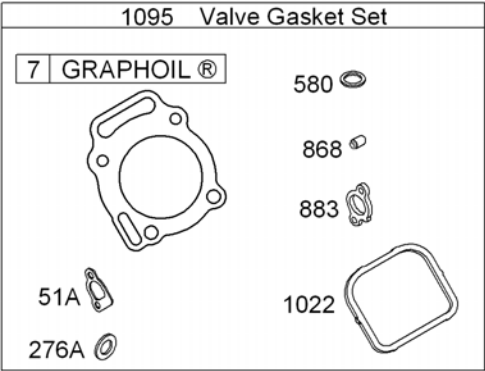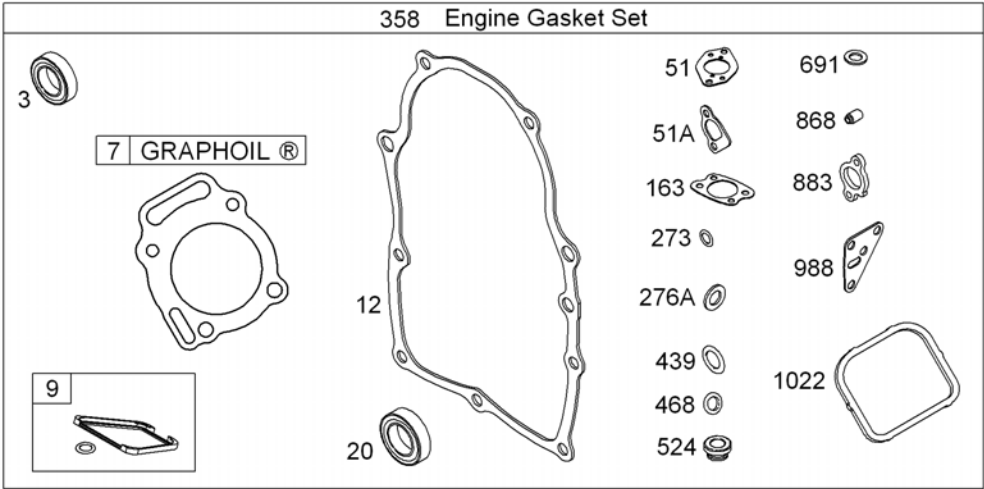

Assemblies include all parts shown in frames

Engine, Valve Gasket and Carburetor Overhaul Kits

Briggs and Stratton 295440-0158-G1

Ref	Part No.	Qty.	Description
353	805101S	1	Seal-Oil (Magneto Side)
357	806085S	1	Gasket-Head, Cylinder
6			
359	809094	1	Gasket-Breather
3512	843970	1	Gasket-Crankcase
3520	805049S	1	Seal-Oil (PTO Side)
3551	691694	1	Gasket-Intake (Manifold To Carburetor)
3551A	692035	1	Gasket-Intake
6			
3494	842870	1	Idle Mixture Kit
34102	692077	1	Gasket-Body, Carburetor
34104	690723	1	Pin-Hinge, Float
34110	806861	1	Washer (Choke Shaft)
3121	842877	1	Carburetor Overhaul Kit
34142	842319	1	Nozzle-Carburetor
34163	692081	1	Gasket-Cleaner, Air
35273	690681	1	Seal-O Ring (Oil Pump)
34276A	693497	1	Washer-Sealing
6			
3358	842722	1	Engine Gasket Set
35439	692154	1	Seal-O Ring (Crankcase/Cover/Sump)
35468	690690	1	Seal-O Ring (Oil Pump Screen)
35524	693172	1	Seal-Tube, Dipstick

Ref	Part No.	Qty.	Description
35580	691312	1	Seal-O Ring (Oil Fill Cap)
34633	690722	1	Seal-Shaft, Choke Throttle
34681	808798	1	Valve-Needle, Float
35691	690680	1	Seal-Shaft, Governor
35868	691963	1	Seal-Valve
6			
35883	691613	1	Gasket-Exhaust
6			
35988	692063	1	Gasket-Adapter, Oil Filter
351022	806039S	1	Gasket-Cover, Rocker
6			
341091	691516	1	Cap-Limiter
31095	842723	1	Valve Gasket Set

Attachments and Accessories

For 07277 - Workman 2110 Utility Vehicle

Product Name	Model/Part
Stand Alone Windshield Kit	07221
Electric Bed Lift Kit	07262
Rear Lift Kit	07274
Roll-Over Protection System	07276
Receiver Hitch Kit	07278
Heavy-Duty Bumper Kit	07282
Stake Side Kit	07290
Cab	07291
Snow Plow-Mid Duty	07292
Folding Windshield Kit	07293
Windshield Kit	07294
Heavy-Duty Brushguard and Bumper Kit	07296
Canopy Kit	07297
Portable Refreshment Center	07298
Clutch Guard ASM	104-6408-03
Horn Kit	104-6663
Brake and Taillights (Rear lights, side reflectors)	104-6697
Signal Lights (Front marker lights / turn signal control)	104-6953
Key Start Kit	107-0330
Vinyl Enclosure	79979
Spark Arrestor (Meets USDA Forest Service Standard 5100-1A)	98-9099
Electric Harness Kit	99-7924

NOTES

NOTES

NOTES

