



DH 220 Lawn Tractor

Model No. 74592 - 290000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Frame Assembly	 3	Range Shift Assembly Transmission Assembly No. 114-3155	 19
Front Axle Assembly	 5	Center Case Assembly Transmission Assembly No. 114-3155	 20
Steering Assembly	 6	Pump Shaft Assembly Transmission Assembly No. 114-3155	 21
Hood Assembly	 7	Motor Shaft Assembly Transmission Assembly No. 114-3155	 22
Engine Assembly	 8	Transaxle Case Assembly Transmission Assembly No. 114-3155	 23
Operation - Brake and Bypass Assembly	 9	Grass Collector Assembly	 24
Operation - Travel Pedal Assembly	 10	Tunnel Assembly	 25
Transmission Assembly	 11	Deck Housing Assembly	 26
Control Shaft Assembly Transmission Assembly No. 114-3155	 13	Cutting Pan and Bag on Demand Assembly	 27
Differential Gear Assembly Transmission Assembly No. 114-3155	 14	Belt Cover and Drive System Assembly	 28
Final Pinion Assembly Transmission Assembly No. 114-3155	 15	Mower Lift Assembly	 30
Axle Shaft Assembly Transmission Assembly No. 114-3155	 16	Harness Assembly	 31
Brake Assembly Transmission Assembly No. 114-3155	 17	Electrical Starter Assembly	 32
Fan Pulley Assembly Transmission Assembly No. 114-3155	 18	Electrical Switch Assembly No. 2	 33
		Electrical Switch Assembly No. 3	 34
		Attachments and Accessories List	 35

 
Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- ❶ Not illustrated
- ❷ Not serviced separately
- ❸ Obtain from your local Briggs & Stratton dealer

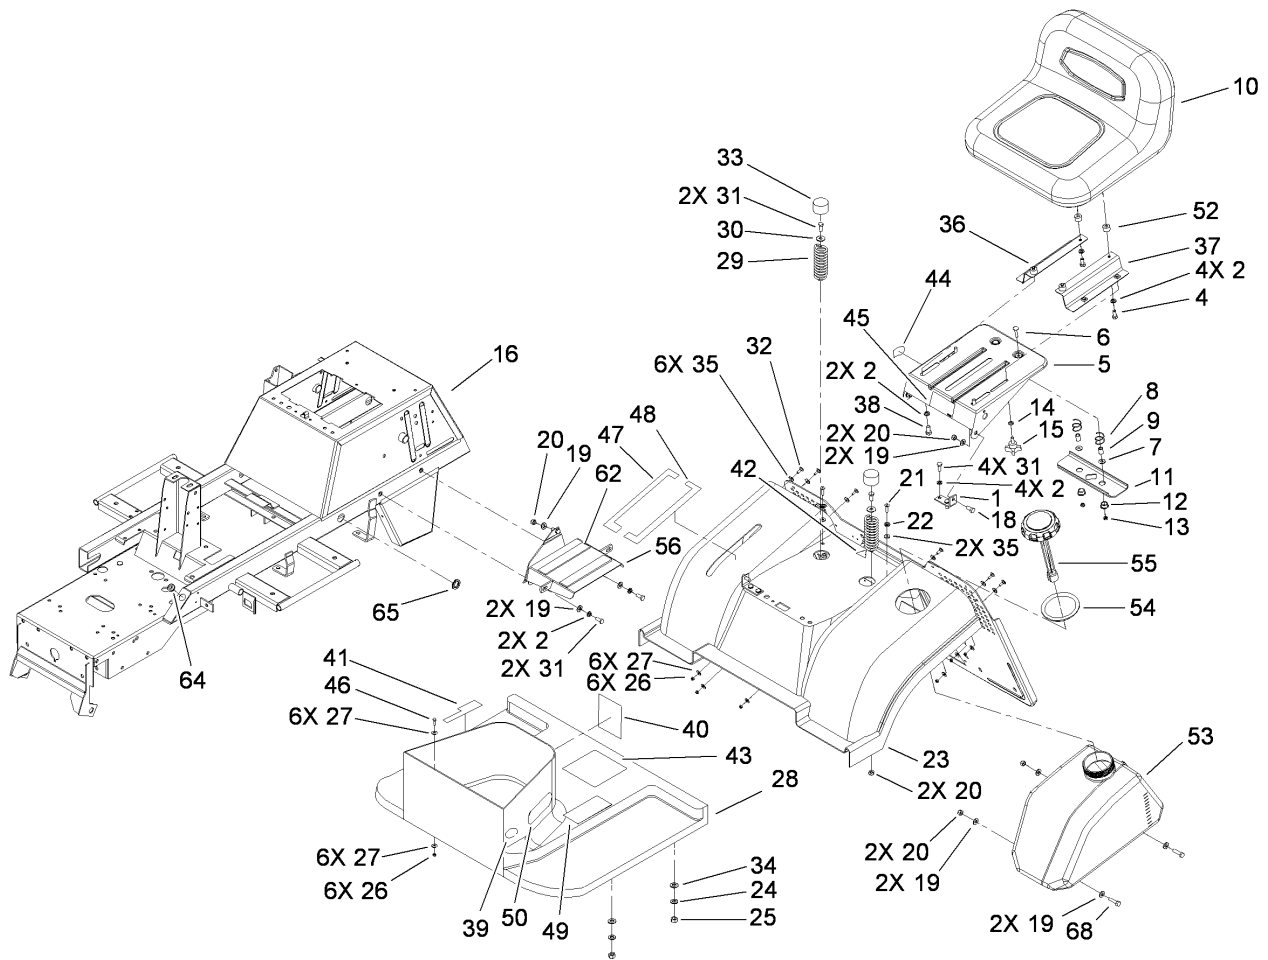

Frame Assembly


Ref	Part No.	Qty.	Description
1	104-2926	2	Bracket-Support, Seat
2	42-9850	12	Washer-Lock, Spring
4	322-3	4	Screw-HH
5	104-2929	1	Support-Seat
6	104-2930	2	Bolt-Carriage
7	104-2931	2	Washer-Flat
8	104-2932	2	Spring-Seat
9	104-2933	2	Spacer-Split
10	107-2213	1	Seat ASM
11	104-2934	1	Bracket
12	104-2935	2	Bushing
13	33023-00	2	Nut-Lock
14	104-2936	2	Washer-Spring
15	104-2937	2	Knob-Adj.
16	107-8948	1	Chassis-Frame
18	104-2939	2	Screw-Support, Seat
19	33094-00	9	Washer-Plain
20	33024-00	7	Nut-Lock
21	104-2940	2	Screw-HSFH
22	104-2941	2	Washer-Finish
23	114-3247	1	Fender-Body, Rear
24	33095-00	4	Washer-Flat
25	33025-00	4	Nut-Lock
26	87-5140	12	Nut-Lock

Ref	Part No.	Qty.	Description
27	104-2943	18	Washer-Flat
28	104-2944	1	Footrest ASM
29	104-2945	2	Spring-Seat
30	104-2946	2	Washer-Plain
31	33114-020	8	Screw-HH
32	104-2948	6	Bolt-Carriage
33	104-2857	2	Cap-Hub
34	104-2951	4	Washer-Rubber
35	104-2952	8	Washer-Rubber
36	107-8915	1	Bracket-Seat, RH
37	107-8916	1	Bracket-Seat, LH
38	104-3195	2	Screw
39	104-3237	1	Decal-Brake, Parking
40	104-3238	1	Decal-Starting
41	104-3241	1	Decal-Operation, Hydro
42	104-3242	1	Decal-Bag To Frame
43	104-2903	1	Decal-Instruction
44	99-5340	1	Decal-Switch
45	93-7276	1	Decal-Danger
46	60-6910	6	Screw
47	104-3239	1	Decal-HOC, LH
48	104-3240	1	Decal-HOC, RH
49	106-8552	1	Decal-Operation
50	107-8976	2	Decal-Tower

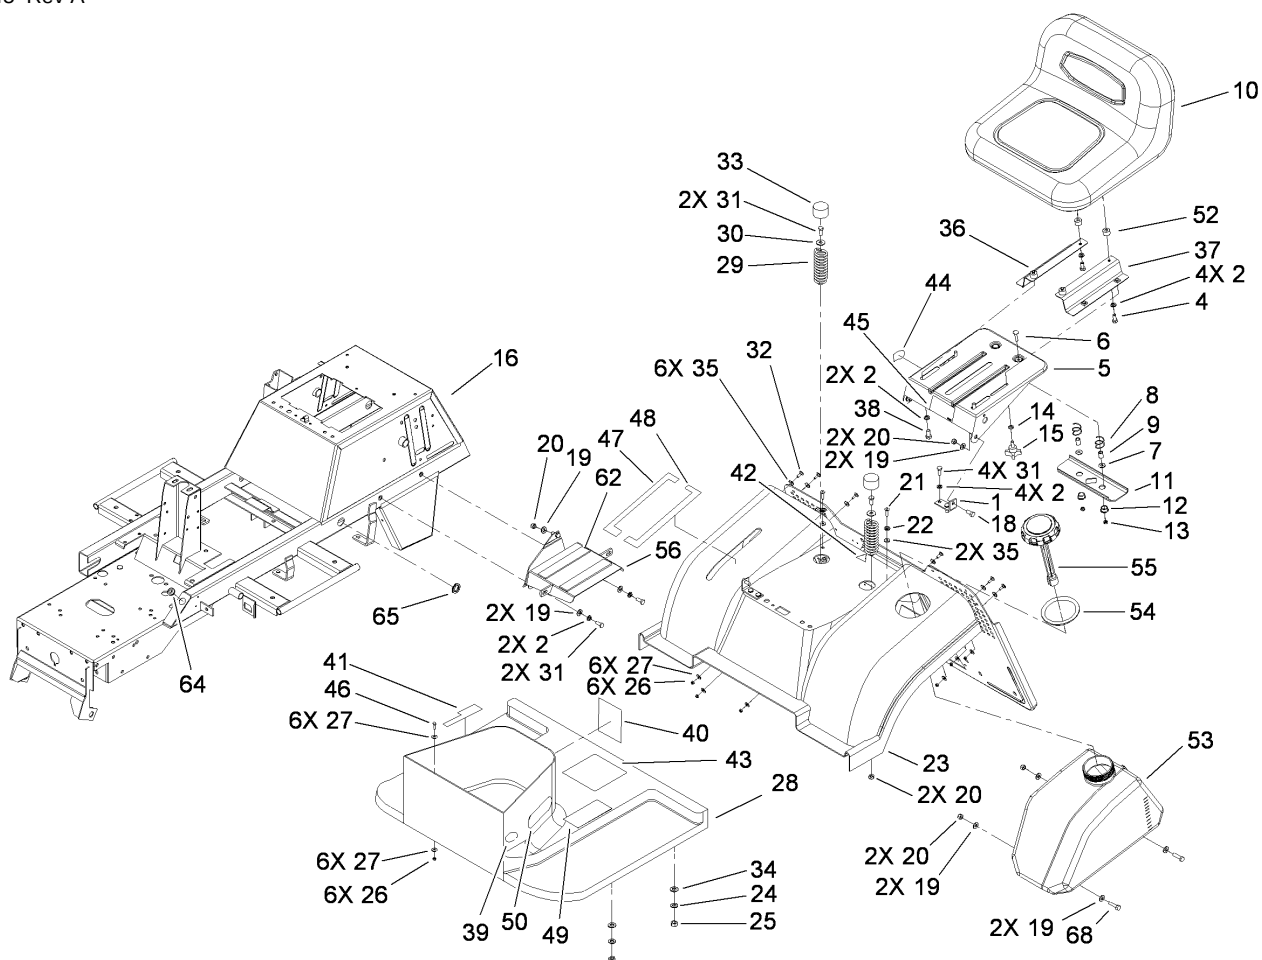 

Frame Assembly (continued)


Ref	Part No.	Qty.	Description
52	107-8924	2	Shim-Seat
53	110-8689	1	Tank-Fuel
54	110-8691	1	Protector-Neck, Filler
55	110-8697	1	Cap-Fuel
56	110-8684	1	Bracket-Fuel, Tank
62	110-8690	2	Strip-Rubber, Fuel Tank
64	107-8950	1	Grommet
65	110-8683	1	Grommet
68	33114-030	2	Screw-HH

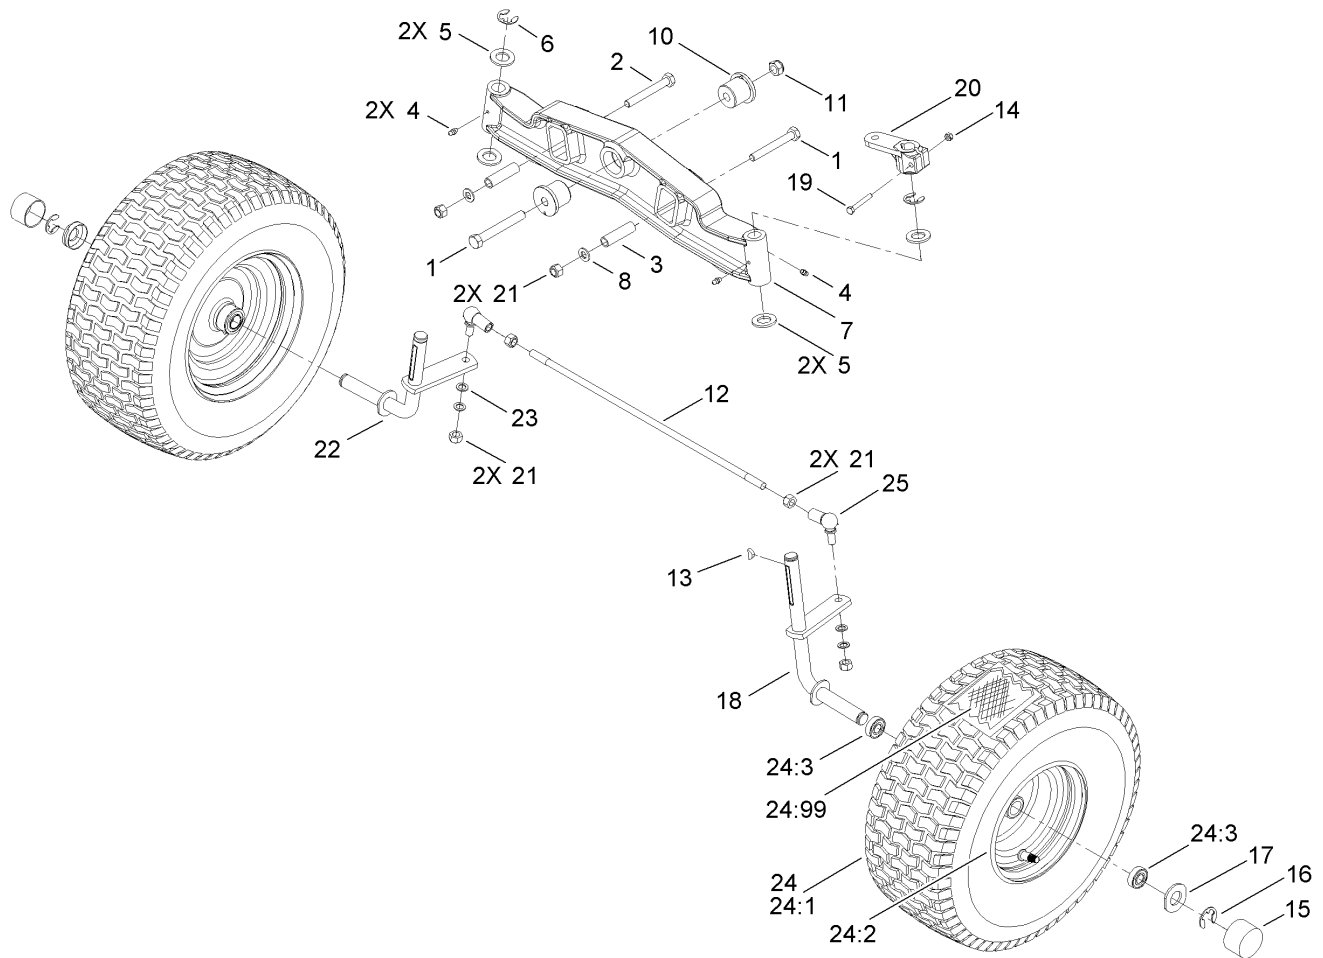 

Front Axle Assembly


Ref	Part No.	Qty.	Description
1	33116-090	1	Screw-HH
2	33115-080	2	Screw-HH
3	104-2851	2	Spacer
4	104-2904	3	Fitting-Grease
5	104-2905	4	Washer-Flat
6	104-2891	2	Clip-Spring
7	104-2852	1	Axle-Front
8	104-2906	2	Washer-Flat
10	104-2890	2	Bushing-Axle, Front
11	104-2907	1	Nut-Locking, Self
12	104-2855	1	Rod-Tie, Front Axle
13	104-2856	1	Key-Woodruff
14	33023-00	1	Nut-Lock
15	104-2857	2	Cap-Hub
16	104-2891	2	Clip-Spring
17	107-8998	2	Retainer-Cap, Hub
18	114-3241	1	Spindle-Front, Left
19	33113-045	1	Screw-HH
20	104-2862	1	Lever-Spindle, Steering
21	33025-00	6	Nut-Lock
22	114-3242	1	Spindle-Front, Right
23	106-5757	4	Washer
24		2	Wheel ASM
24:1	99-2336	1	Tire

Ref	Part No.	Qty.	Description
24:2	114-3243	1	Rim-Front
24:3	110513	2	Bearing-Wheel
24:99	112819	1	Tube-Inner
25	104-2876	2	Joint-Ball, Angle

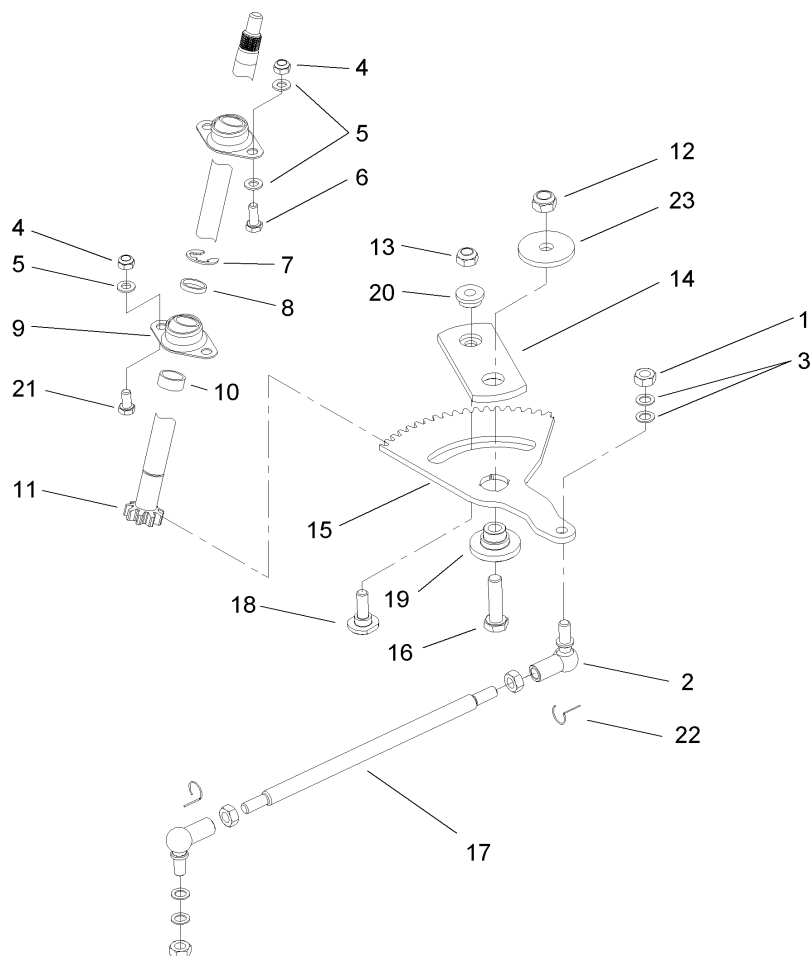 

Steering Assembly


Ref	Part No.	Qty.	Description				
1	33025-00	4	Nut-Lock				
2	104-2876	2	Joint-Ball, Angle				
3	106-5757	4	Washer				
4	33024-00	4	Nut-Lock				
5	33094-00	6	Washer-Plain				
6	33114-020	2	Screw-HH				
7	104-2891	1	Clip-Spring				
8	104-2877	1	Spacer-Upper				
9	104-2878	2	Bearing-Spherical				
10	104-2879	1	Spacer-Lower				
11	106-5773	1	Shaft-Steering				
12	33026-00	1	Nut-Lock				
13	33025-00	1	Nut-Lock				
14	105-1238	1	Plate-Steering				
15	104-2883	1	Gear-Sector				
16	104-2910	1	Screw-Hex				
17	104-2886	1	Link-Drag				
18	105-1239	1	Bolt-Shoulder				
19	105-1240	1	Pivot-Steering				
20	105-1241	1	Bushing				
21	33114-016	2	Screw-HH				
22	104-2865	2	Stirrups-Locking				
23	108-8892	1	Washer				

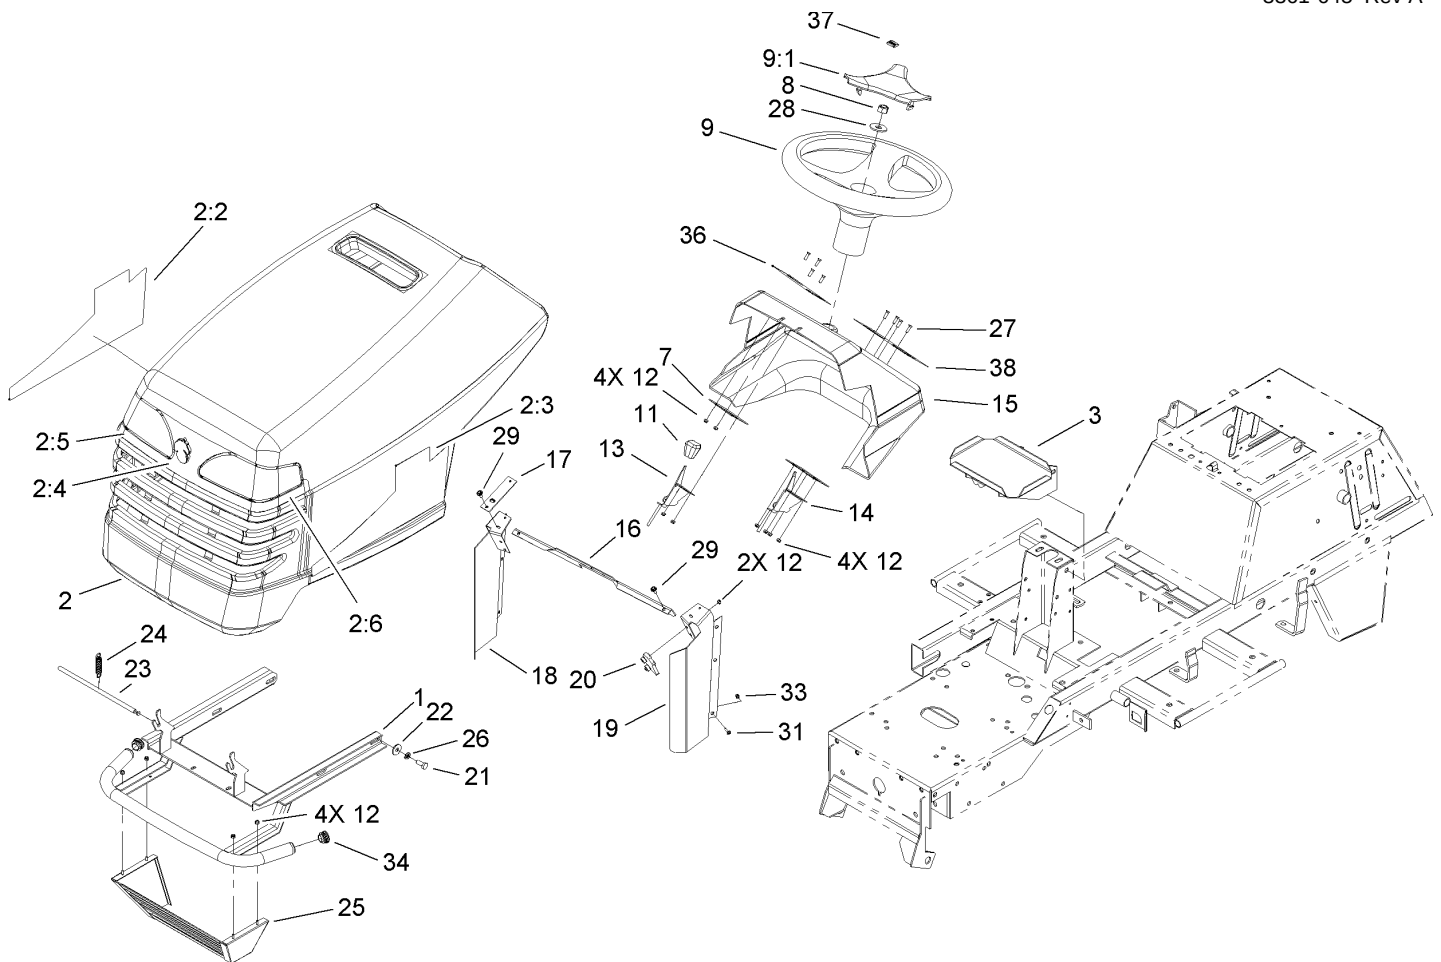 

Hood Assembly


Ref	Part No.	Qty.	Description
1	107-2216	1	Support-Bumper
2	107-8990	1	Hood ASM
2:2	107-8913	1	Decal-Hood, RH
2:3	107-8902	1	Decal-Hood, LH
2:4	95-4248	1	Decal
2:5	107-8983	1	Lens-Headlamp, RH
2:6	107-8984	1	Lens-Headlamp, LH
3	110-8679	1	Tray-Battery
7	104-2962	2	Brace
8	33026-00	1	Nut-Lock
9	98-1472	1	Wheel-Steering
9:1	98-1468	1	Cover-Wheel, Steering
11	66-0120	2	Knob
12	87-5140	14	Nut-Lock
13	92-6784	1	Control-Throttle (Twin)
14	92-6783	1	Control-Choke (Twin)
15	104-2968	1	Panel-Dash
16	114-3132	1	Brace
17	104-2971	1	Bracket
18	104-2972	1	Panel-Right
19	104-2973	1	Panel-Left
20	92-6960	2	Latch-Hood
21	33114-020	4	Screw-HH
22	104-2946	4	Washer-Plain

Ref	Part No.	Qty.	Description
23	104-2974	1	Bar-Safety
24	104-2975	1	Spring-Hood
25	107-2218	1	Guard-Muffler
26	42-9850	4	Washer-Lock, Spring
27	106-5759	8	Screw
28	106-5758	1	Washer
29	104-2980	2	Screw
31	107-8918	6	Screw
33	104-2985	6	Nut-Hex
34	107-8943	2	Plug-End, Tube
36	104-3234	1	Decal
37	98-1459	1	Decal
38	104-3233	1	Decal-Choke/PTO

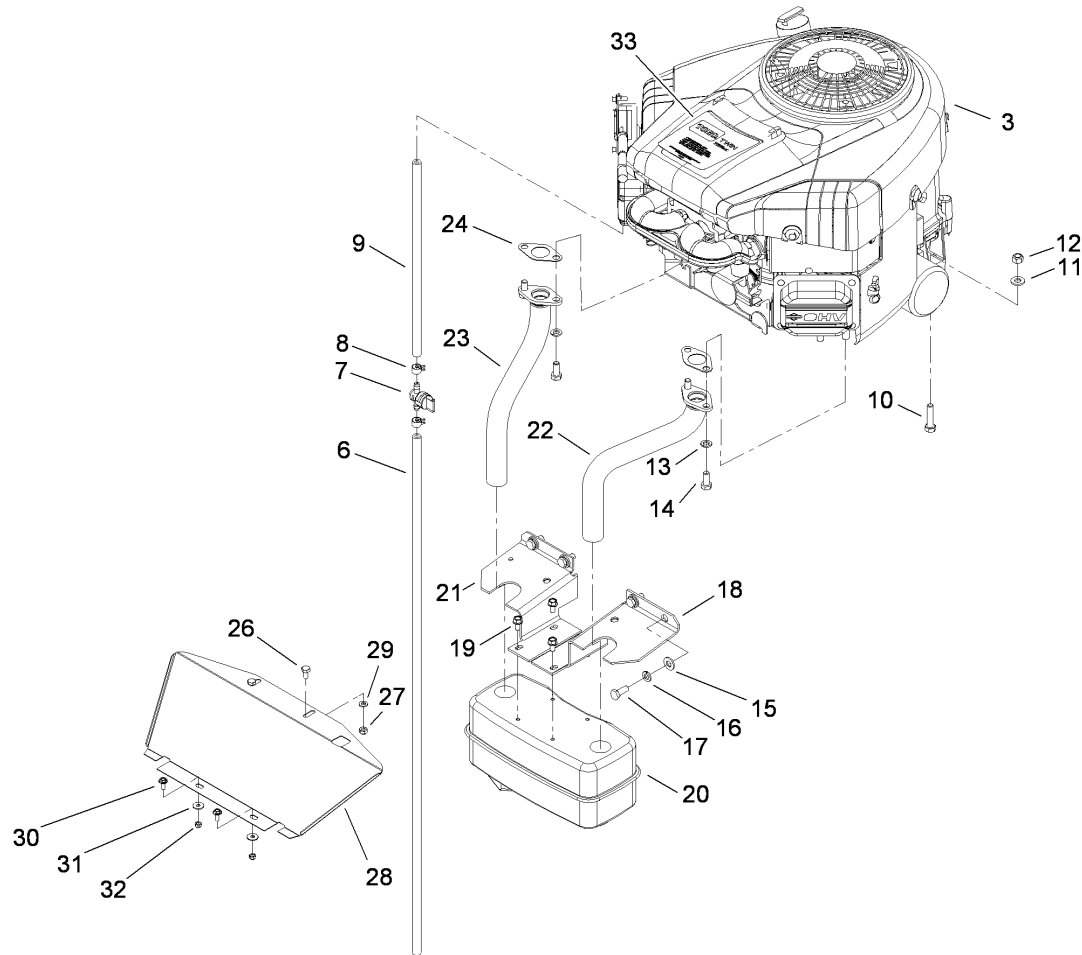 

Engine Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
3		1	Engine-B & S, 4416770136B1	30	104-2980	2	Screw
6	110-8692	1	Line-Fuel	31	104-2943	2	Washer-Flat
7	104-3224	1	Valve-Tank, Fuel	32	87-5140	2	Nut-Lock
8	104-3212	4	Clamp-Line, Fuel	33	110-6627	1	Decal-Engine
9	110-8696	1	Line-Fuel				
10	33114-035	4	Screw-HH				
11	33094-00	4	Washer-Plain				
12	33024-00	4	Nut-Lock				
13	104-2927	4	Washer-Spring				
14	322-3	4	Screw-HH				
15	33094-00	4	Washer-Plain				
16	104-2927	4	Washer-Spring				
17	33114-020	4	Screw-HH				
18	104-3214	1	Guard-Muffler, LH				
19	106-5763	4	Screw				
20	104-3225	1	Muffler				
21	104-3215	1	Guard-Muffler, RH				
22	104-3216	1	Tube-Exhaust, LH				
23	104-3217	1	Tube-Exhaust, RH				
24	104-3226	2	Gasket-Exhaust				
26	33113-012	2	Screw-HH				
27	33023-00	2	Nut-Lock				
28	104-3219	1	Shield-Heat				
29	33093-00	2	Washer-Flat				

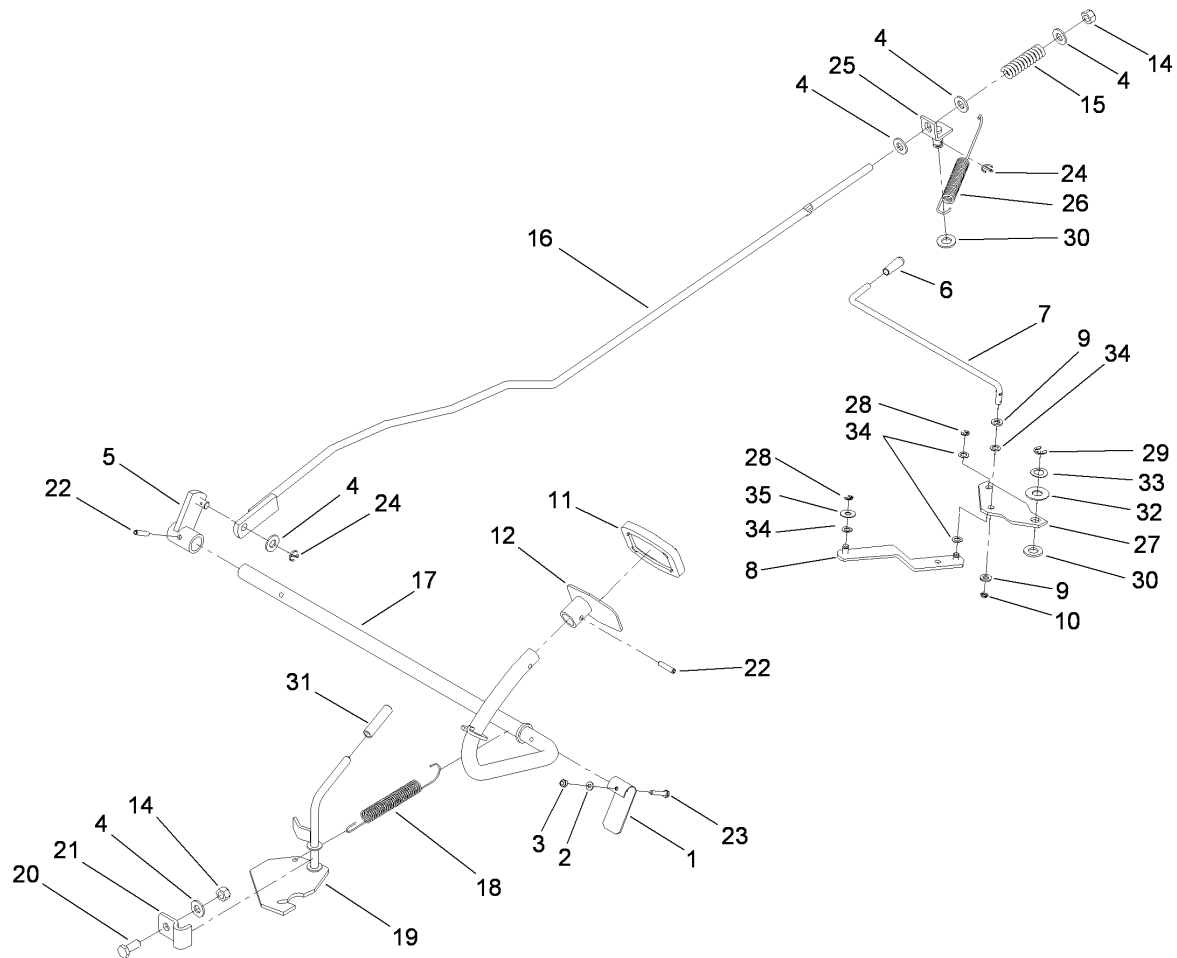 

Operation - Brake and Bypass Assembly


Ref	Part No.	Qty.	Description
1	104-2992	1	Lever-Spring
2	104-2984	1	Washer
3	104-2985	1	Nut-Hex
4	33094-00	5	Washer-Plain
5	104-2993	1	Bracket-Rod, Brake
6	108-8708	1	Cap-Bypass Lever, Hydro
7	104-2995	1	Rod-Lever, Bypass
8	104-3324	1	Lever-Bypass
9	104-3193	2	Washer
10	104-2997	1	Pin-Cotter
11	104-3018	1	Pad-Pedal
12	114-3246	1	Pedal-Brake
14	33024-00	2	Nut-Lock
15	104-3002	1	Spring-Brake
16	104-3003	1	Rod-Connecting, Brake
17	104-3246	1	Shaft-Brake
18	104-3005	1	Spring-Brake, Hand
19	104-3006	1	Lever-Brake, Hand
20	33114-020	1	Screw-HH
21	104-3007	1	Clamp-Lever, Parking Brake
22	104-3008	2	Pin-Spring
23	104-3009	1	Screw-Hex
24	104-3016	2	Pin-Cotter
25	104-3011	1	Bracket-Rod, Brake

Ref	Part No.	Qty.	Description
26	104-3012	1	Spring
27	104-3323	1	Plate-Bypass
28	104-3014	2	Stirrup
29	104-3015	1	Stirrup
30	33095-00	2	Washer-Flat
31	104-3247	1	Cap
32	106-5768	1	Washer
33	106-5769	1	Washer
34	106-5770	4	Washer
35	106-5771	1	Washer

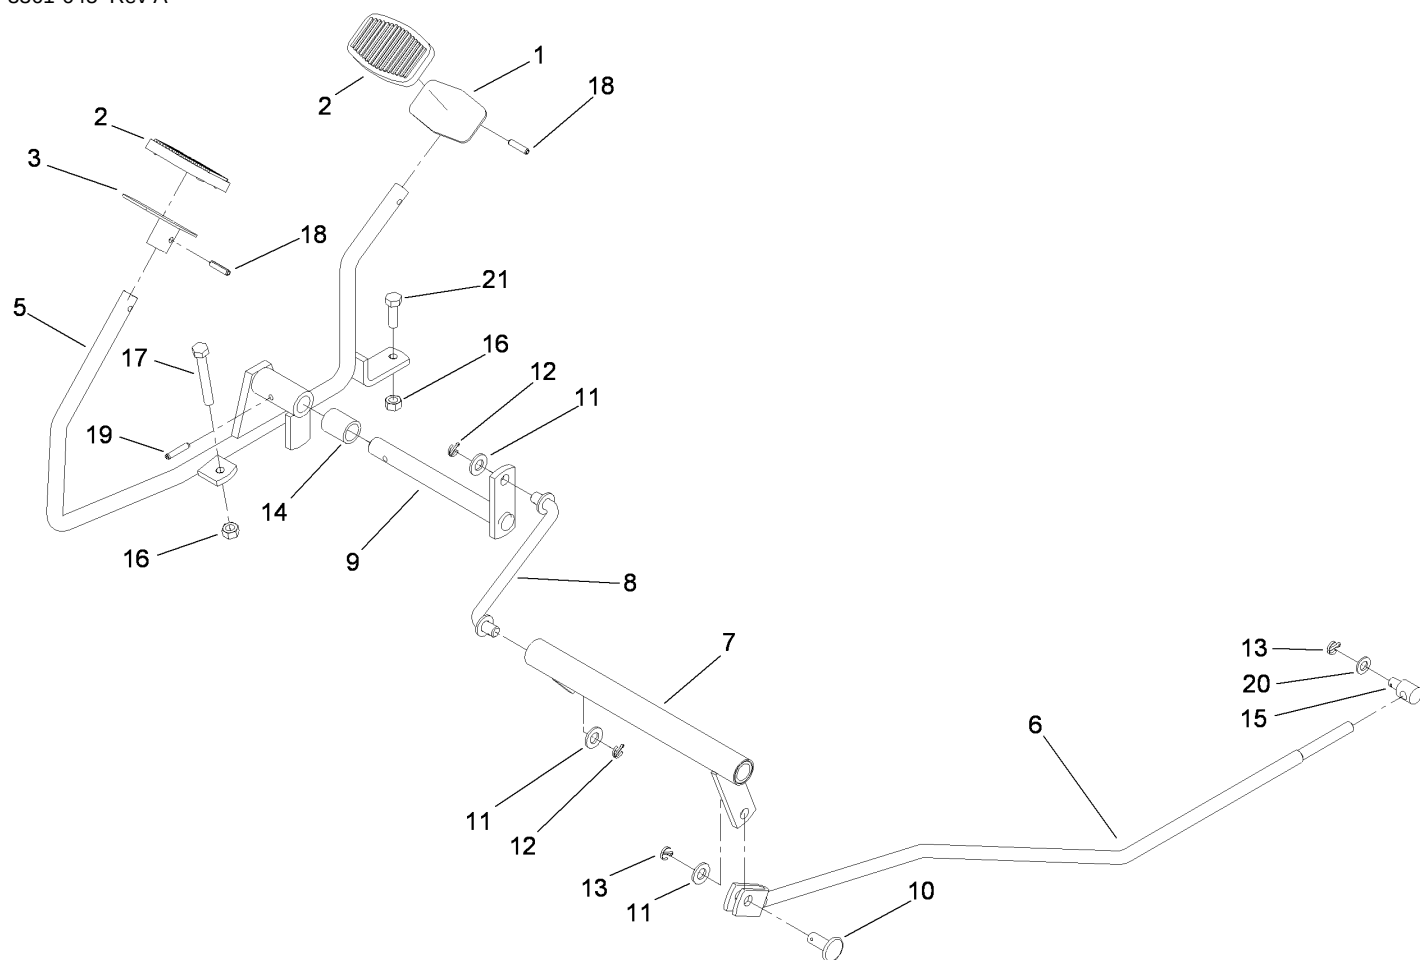 

Operation - Travel Pedal Assembly


Ref	Part No.	Qty.	Description
1	104-3017	1	Pedal-Rear, Travel
2	104-3018	2	Pad-Pedal
3	114-3248	1	Pedal-Travel, Forward
5	104-3021	1	Pad-Travel
6	104-3022	1	Rod-Tie
7	104-3023	1	Shaft-Diagonal
8	104-3024	1	Link-Formed
9	104-3025	1	Shaft-Diagonal
10	104-3026	1	Pin
11	33095-00	3	Washer-Flat
12	104-3016	2	Pin-Cotter
13	104-3027	2	Pin-Cotter
14	104-3028	1	Spacer
15	104-3029	1	Pin
16	33014-00	2	Nut-Hex
17	33114-060	1	Screw-HH
18	104-3008	2	Pin-Spring
19	104-3030	1	Pin-Spring
20	104-3031	1	Washer
21	33114-025	1	Screw-HH

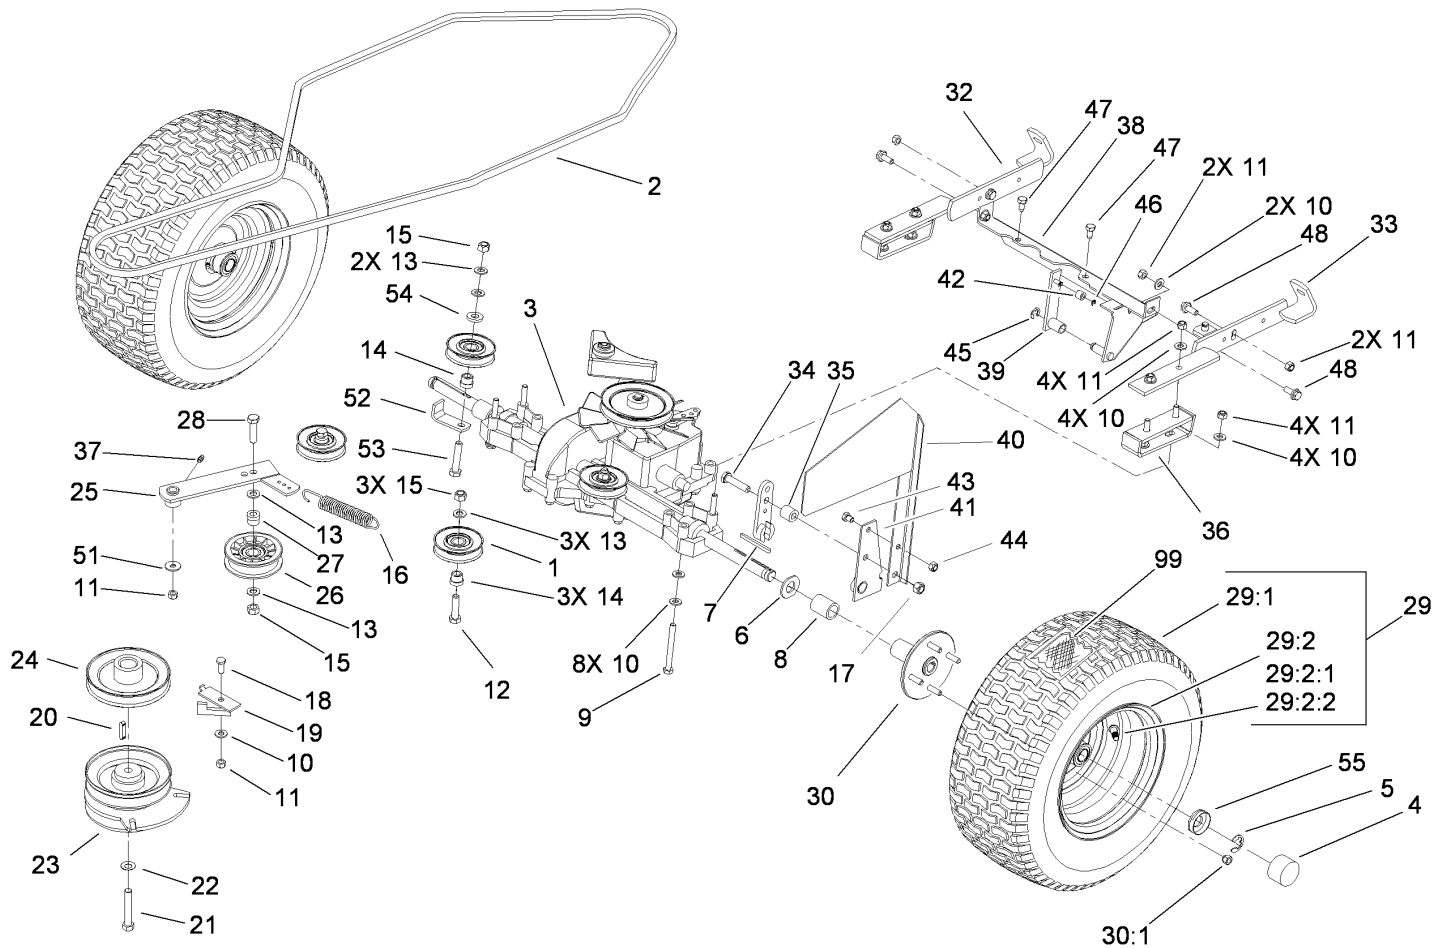 

Transmission Assembly


Ref	Part No.	Qty.	Description
1	104-2887	4	Pully-Idler
2	104-2888	1	V-Belt-Traction
3	114-3155	1	Transmission
4	104-2857	2	Cap-Hub
5	104-2891	2	Clip-Spring
6	104-3206	2	Washer
7	104-2892	2	Key-Square
8	104-2895	2	Spacer-Axle
9	33114-080	4	Screw-HH
10	33094-00	19	Washer-Plain
11	33024-00	14	Nut-Lock
12	33115-040	3	Screw-HH
13	33095-00	7	Washer-Flat
14	104-2896	4	Bushing-Idler
15	33025-00	5	Nut-Lock
16	104-2897	1	Spring
17	33025-00	1	Nut-Lock
18	33114-020	1	Screw-HH
19	104-2898	1	Retainer
20	104-2899	1	Key-Square
21	3212-10	1	Screw-HH
22	93-9043	1	Washer-Spring, Belleville
23	104-3334	1	Clutch-Electric
24	104-2911	1	Pulley-Engine

Ref	Part No.	Qty.	Description
25	104-2912	1	Arm-Idler
26	104-2913	1	Pulley-Idler
27	104-2896	1	Bushing-Idler
28	33115-040	1	Screw-HH
29	107-8929	2	Tire And Wheel ASM
29:1	99-2994	1	Tire
29:2	107-8932	1	Wheel ASM
29:2:1		1	Rim
29:2:2	106-8596	1	Valve-Tire
30	108-8718	2	Hub-Wheel
30:1	108-8717	4	Nut-Lug
32	106-8594	1	Bracket-Right
33	106-8593	1	Bracket-Left
34	33115-045	1	Screw-HH
35	104-2925	1	Sleeve
36	104-3343	2	Plate-Reinforcing
37	104-2904	1	Fitting-Grease
38	104-3327	1	Bar ASM
39	104-3328	1	Arm-Switch
40	104-3325	1	Arm-Control, Cruise
41	104-3326	1	Tenon
42	104-3329	1	Roller
43	33114-010	1	Screw-HH
44	33024-00	1	Nut-Lock

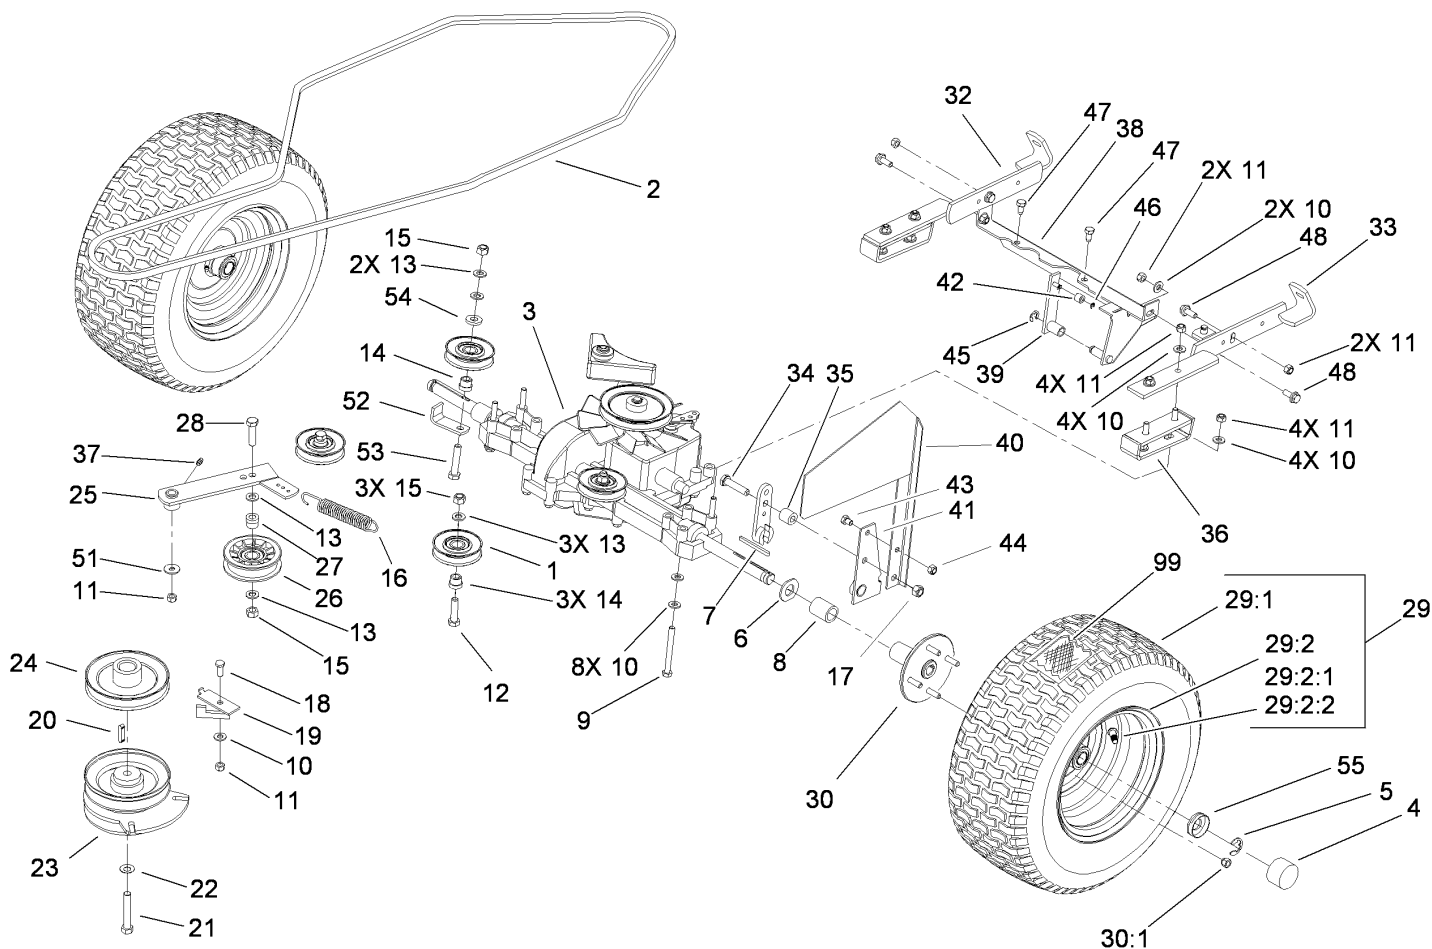 


Transmission Assembly (continued)

Ref	Part No.	Qty.	Description
45	104-3341	1	Stirrup
46	104-3014	1	Stirrup
47	104-3344	2	Screw-Thread Forming
48	104-3065	4	Screw-Hex
51	104-2946	2	Washer-Plain
52	108-8732	1	Retainer-Belt
53	33115-050	1	Screw-HH
54	108-8709	1	Washer-Flat
55	107-8998	2	Retainer-Cap, Hub
99	232-37	1	Tube

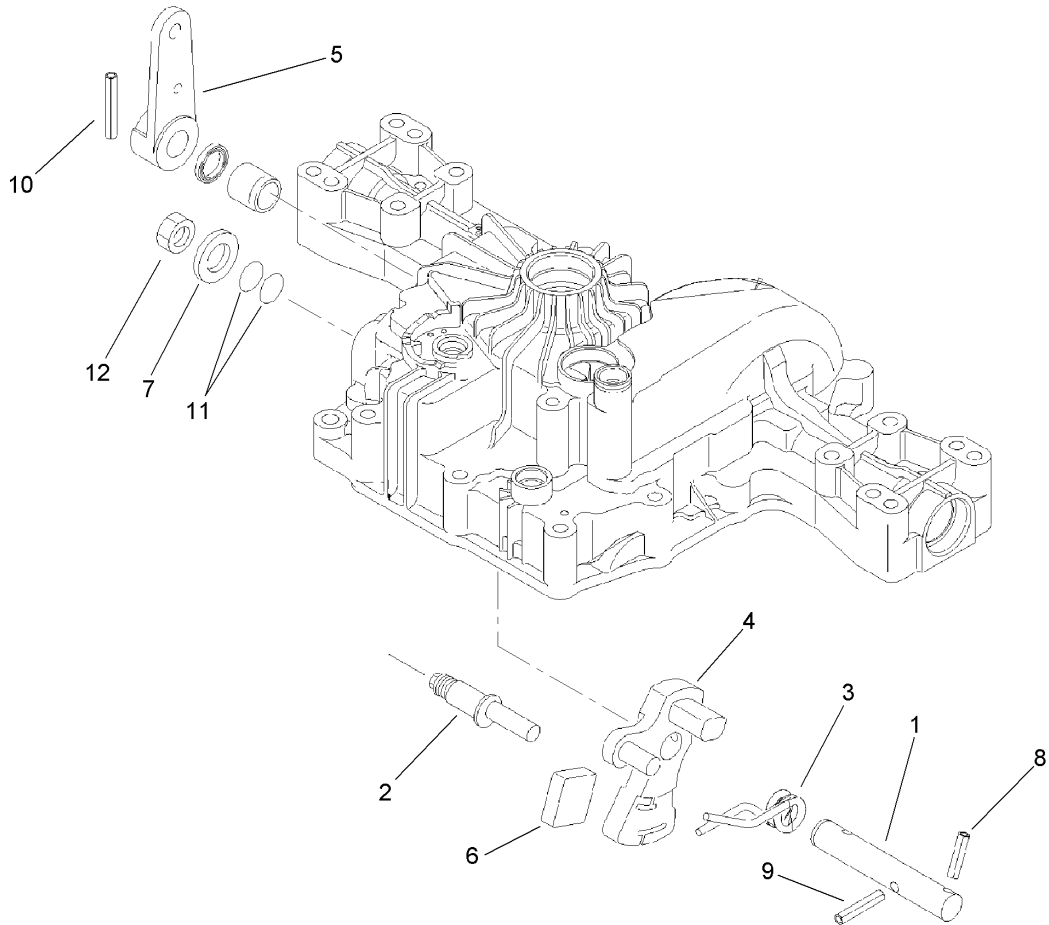 

Control Shaft Assembly
Transmission Assembly No. 114-3155

Ref	Part No.	Qty.	Description				
1	114-3181	1	Shaft-Control				
2	104-3292	1	Fulcrum-Eccentricity				
3	114-3217	1	Spring-Torsion				
4	114-3180	1	Arm-Control				
5	104-3342	1	Arm-Transaxle				
6	104-3296	1	Plate-Jerky				
7	93-0417	1	Washer				
8	114-3182	1	Pin-Cotter				
9	104-3297	1	Pin				
10	93-0411	1	Pin-Roll				
11	104-3298	2	Packing				
12	93-0420	1	Nut				

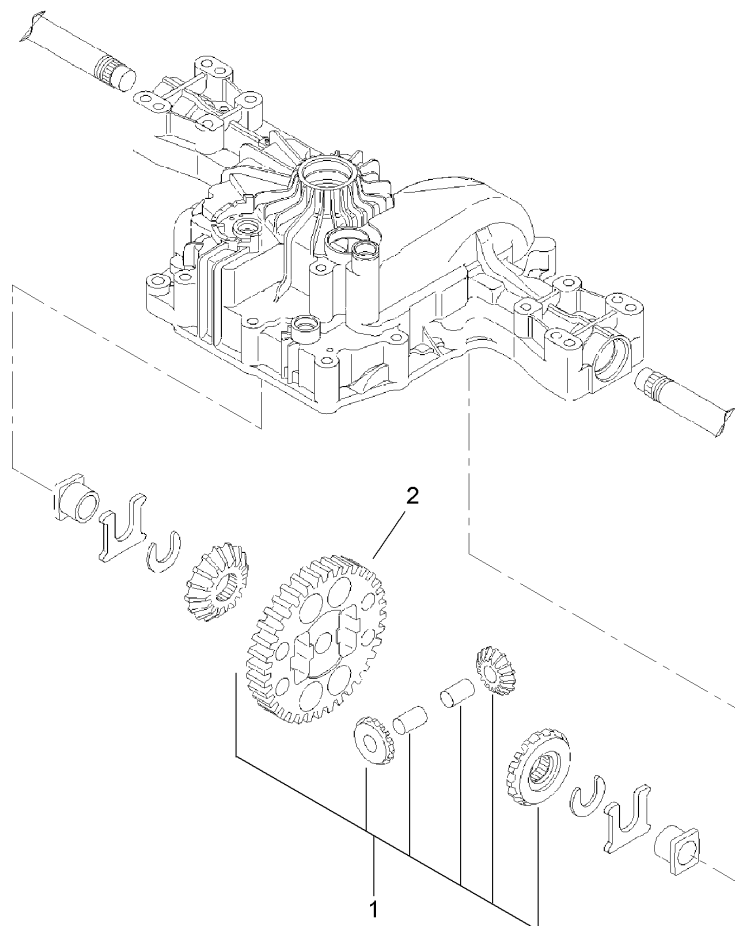 


Differential Gear Assembly

Transmission Assembly No. 114-3155

Ref	Part No.	Qty.	Description
1	104-3299	1	Differential Gear Kit
2	104-3301	1	Gear-Final

 
15

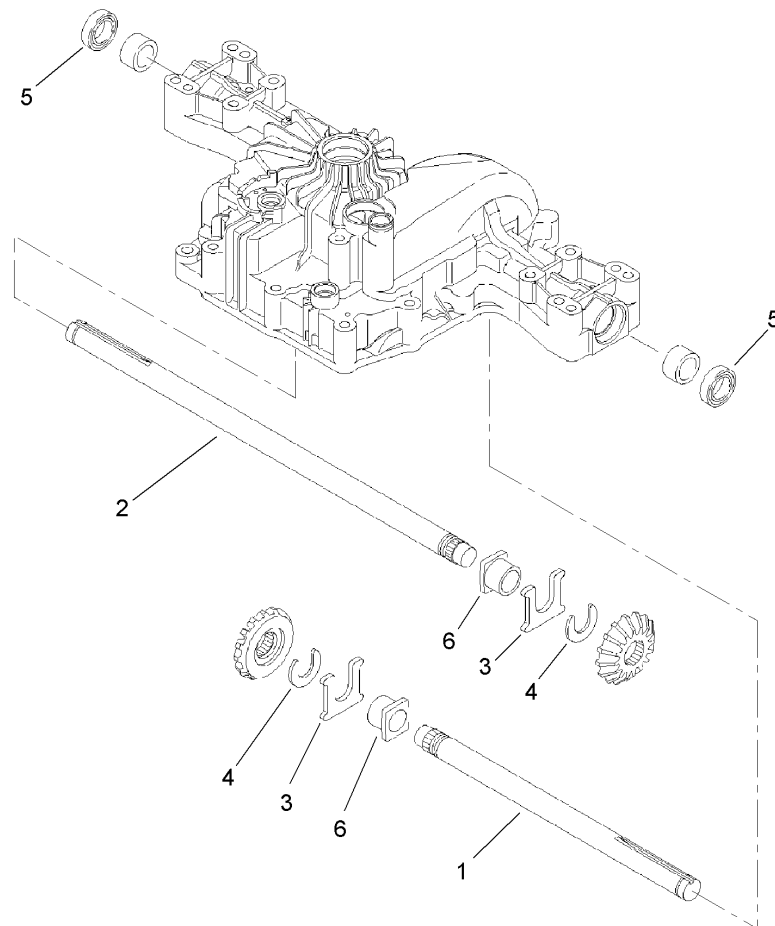


Axle Shaft Assembly

Transmission Assembly No. 114-3155

Ref	Part No.	Qty.	Description				
1	104-3307	1	Shaft-Axle, LH				
2	104-3308	1	Shaft-Axle, RH				
3	104-3309	2	Washer-Thrust				
4	104-3310	2	Ring				
5	104-3311	2	Seal				
6	104-3312	2	Bushing				

 17

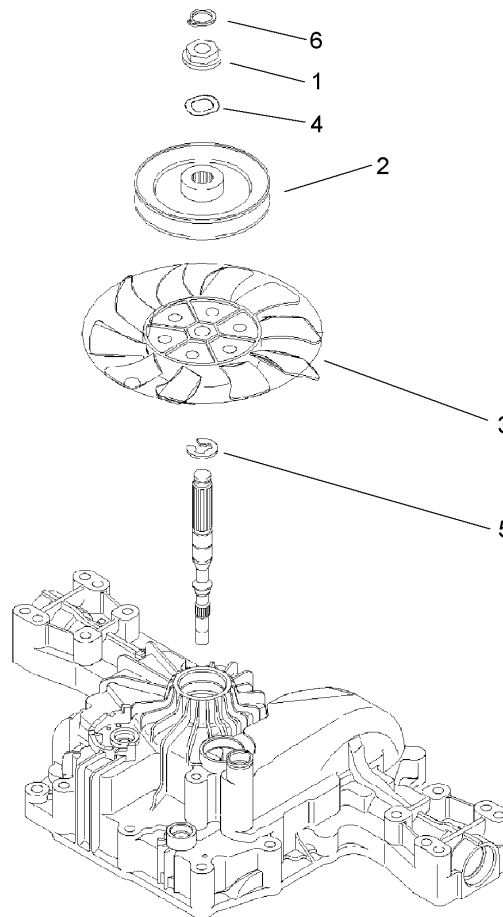 


Fan Pulley Assembly

Transmission Assembly No. 114-3155


Ref	Part No.	Qty.	Description				
1	104-3320	1	Collar-Spline				
2	104-3197	1	Pulley-Transmission				
3	104-3199	1	Fan- Transmission				
4	104-3321	1	Washer-Lock				
5	93-0387	1	E-Ring				
6	104-3198	1	E-Ring				

 
19

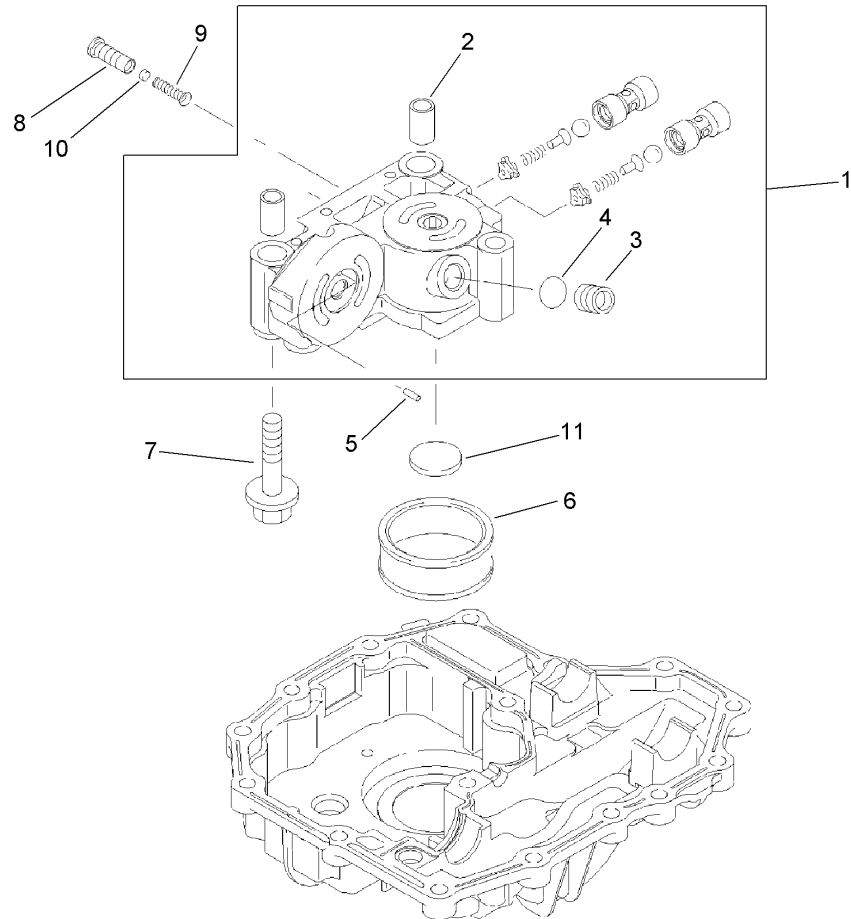

Center Case Assembly
Transmission Assembly No. 114-3155


Ref	Part No.	Qty.	Description				
1	104-3267	1	Case-Center				
2	104-3268	2	Pin-Knock				
3	104-3269	1	Plug				
4	93-0419	1	Packing				
5	104-3270	1	Pin				
6	104-3271	1	Filter				
7	104-3272	3	Bolt				
8	104-3273	2	Valve				
9	104-3274	2	Spring				
10	104-3275	2	Filter				
11	104-3257	1	Magnet				

 21

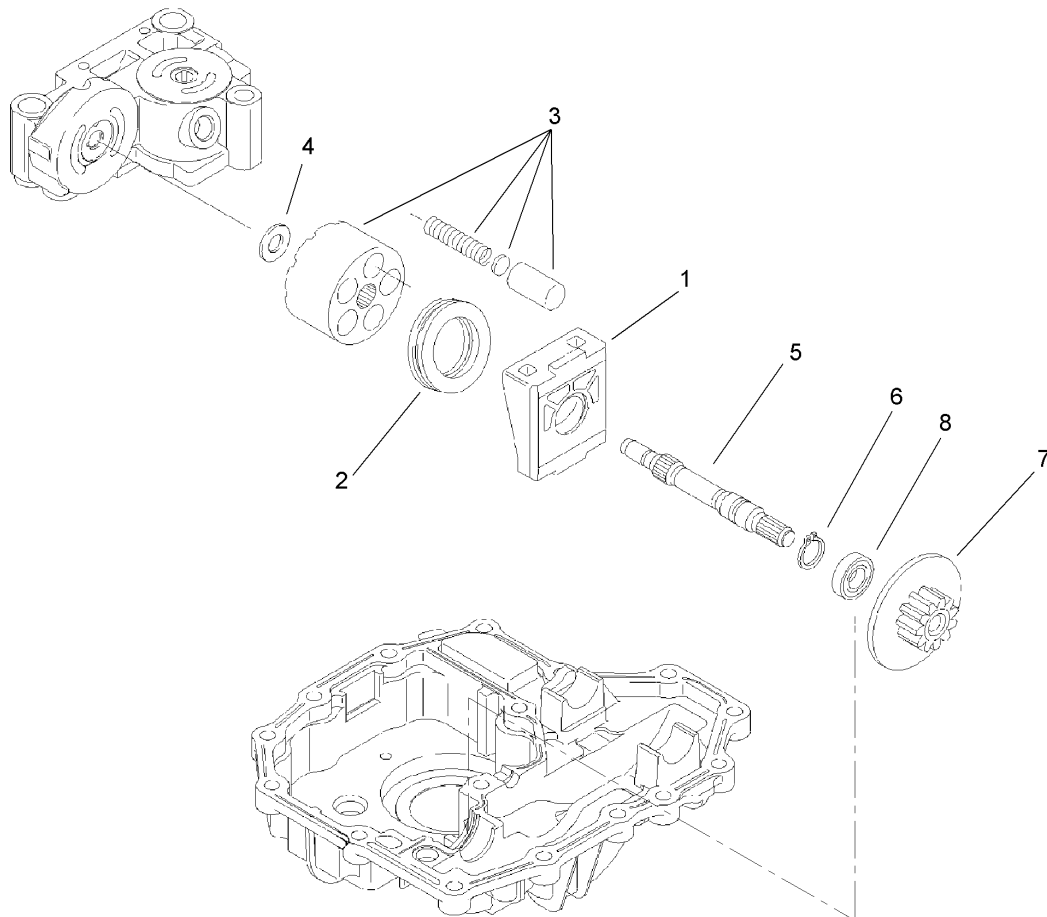 


Motor Shaft Assembly
Transmission Assembly No. 114-3155

Ref	Part No.	Qty.	Description				
1	104-3279	1	Housing				
2	104-3280	1	Bearing				
3	104-3281	1	Block-Cylinder				
4	104-3282	1	Washer				
5	104-3283	1	Shaft-Motor				
6	93-0373	1	Ring-Snap				
7	104-3284	1	Motor-Gear				
8	104-3285	1	Bearing				

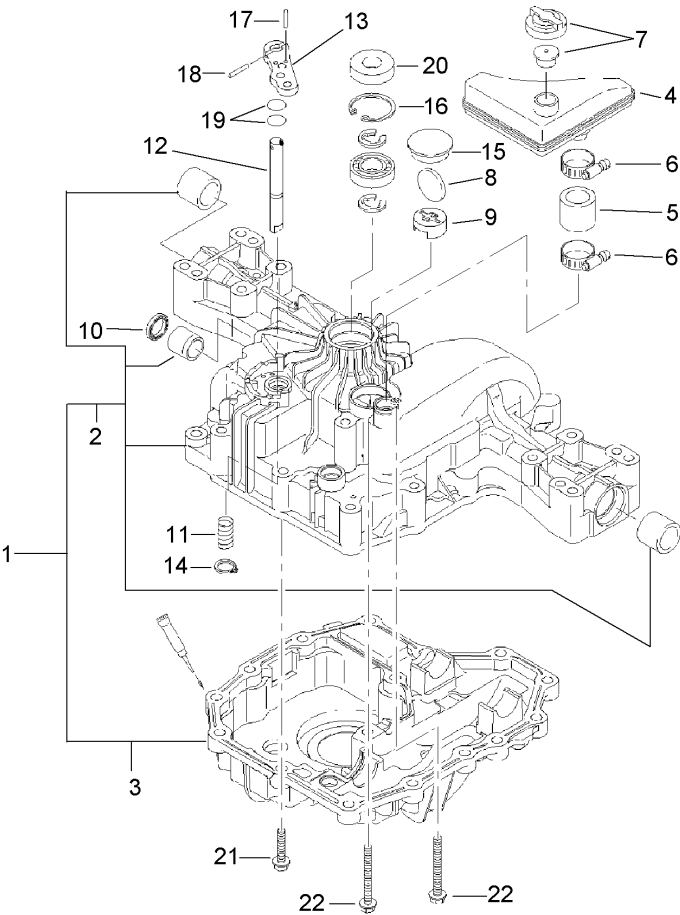 

Transaxle Case Assembly
Transmission Assembly No. 114-3155


Ref	Part No.	Qty.	Description				
1	104-3251	1	Transaxle Case Set				
2	104-3252	1	Housing-Upper				
3	104-3253	1	Housing-Lower				
4	104-2914	1	Tank-Reservoir, With Cap				
5	104-3254	1	Tube				
6	104-3255	2	Clamp-Miniature				
7	104-3256	1	Valve-Vent, 15				
8	104-3257	1	Magnet				
9	104-3258	1	Holder-Magnet				
10	104-3259	1	Seal-Oil				
11	93-0396	1	Spring				
12	104-3260	1	Shaft-Bypass				
13	104-3261	1	Lever-Bypass				
14	104-3262	1	Ring				
15	104-3263	1	Plug-Bore				
16	93-0360	1	Ring				
17	104-3264	1	Pin				
18	104-3265	1	Pin				
19	93-0419	2	Packing				
20	93-0361	1	Seal				
21	93-0363	14	Screw-TAP				
22	104-3266	2	Screw-TAP				

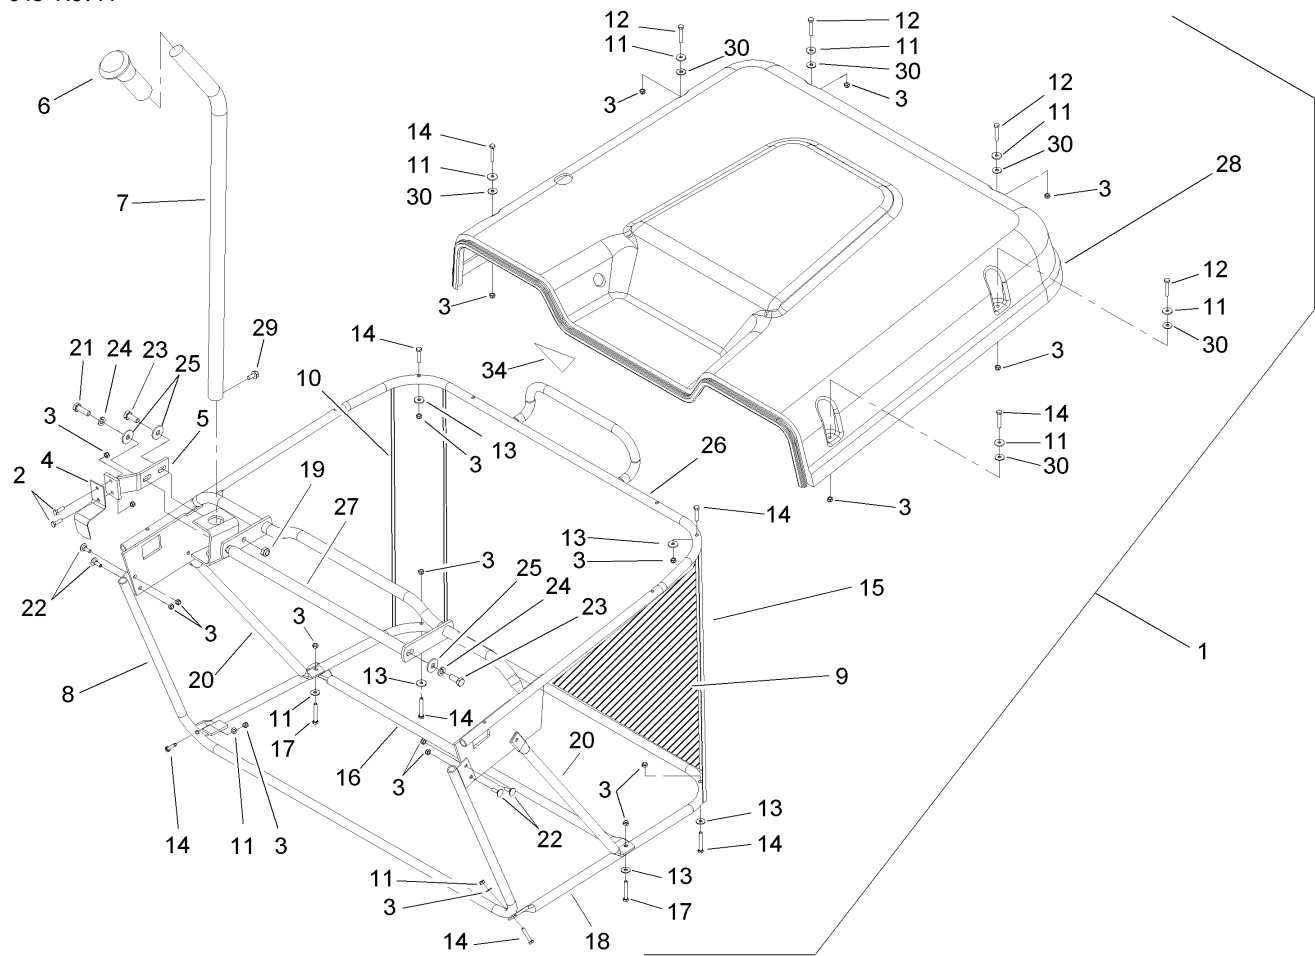 

Grass Collector Assembly

Ref	Part No.	Qty.	Description
❶ 1	106-5760	1	Collector ASM
2	60-6910	2	Screw
3	87-5140	22	Nut-Lock
4	104-3033	1	Spring-Coll, Interlock Switch
5	106-5761	1	Bracket-Spring
6	104-3035	1	Grip-Handle
7	107-8917	1	Lever-Dump
8	104-3037	1	Front Frame ASM
9	104-3038	1	Bag-Grass
10	104-3039	1	Support-Corner, Right
11	104-2943	8	Washer-Flat
12	87-5150	4	Bolt
13	52-6430	14	Washer
14	104-3041	10	Screw-Hex
15	104-3042	1	Support-Corner, Left
16	104-3043	1	Brace-Connecting
17	104-3044	2	Screw-Hex
18	104-3045	1	Bottom Frame ASM
19	33024-00	1	Nut-Lock
20	104-3046	2	Brace
21	33114-025	1	Screw-HH
22	104-2948	4	Bolt-Carriage
23	33114-020	2	Screw-HH
24	42-9850	2	Washer-Lock, Spring


Ref	Part No.	Qty.	Description
25	104-2946	4	Washer-Plain
26	104-3047	1	Top Frame ASM
27	104-3048	1	Handle-Lift
28	106-5762	1	Cover-Collector
29	106-5763	1	Screw
30	104-2952	6	Washer-Rubber
34	104-3242	1	Decal-Bag To Frame

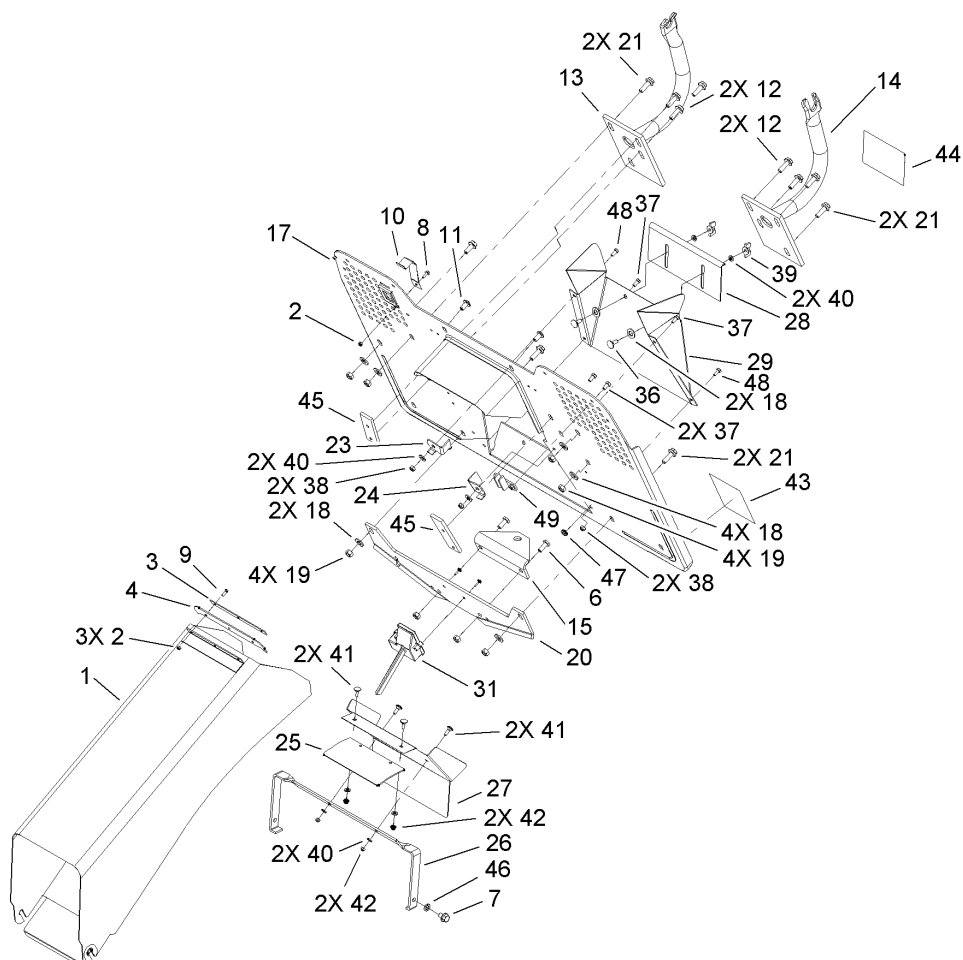 

Tunnel Assembly


Ref	Part No.	Qty.	Description
1	106-8562	1	Tunnel
2	104-2985	4	Nut-Hex
3	104-3055	1	Plate-Support
4	104-3056	1	Seal-Rubber
6	33114-020	2	Screw-HH
7	68-9410	2	Screw-Flange
8	104-2983	1	Screw
9	104-3058	3	Screw-SFH
10	104-3059	1	Cover-Switch
11	104-3060	2	Bolt-Carriage
12	104-3061	4	Screw
13	104-3062	1	Support-Collector, Right
14	104-3063	1	Support-Collector, Left
15	104-3064	1	Hitch-Tow
17	104-3066	1	Collector Plate ASM
18	33095-00	8	Washer-Flat
19	33024-00	8	Nut-Lock
20	104-3067	1	Support-Hitch, Tow
21	104-3068	6	Screw-Hex
23	106-8597	1	Support-Tunnel, Left
24	106-8598	1	Support-Tunnel, Right
25	106-8599	1	Shield-Rubber
26	104-3069	1	Bracket-Shield, Protective
27	104-3070	1	Shield-Protective

Ref	Part No.	Qty.	Description
28	104-3336	1	Shield-Adjustable
29	104-3335	1	Hopper-Receiving
31	104-3074	1	Overload Switch ASM
36	104-2961	2	Screw
37	33113-012	4	Screw-HH
38	33023-00	4	Nut-Lock
39	32103-28	2	Nut-Wing
40	33093-00	6	Washer-Flat
41	104-2948	4	Bolt-Carriage
42	87-5140	4	Nut-Lock
43	104-3243	1	Decal-Bypass, Hydro
44	104-2853	1	Decal-Position, Bagging
45	104-3347	2	Plate-Reinforcing
46	104-3348	2	Washer-Spring
47	106-5772	1	Bushing
48	106-8575	2	Screw-HH
49	110-8688	1	Bracket-Support, Fuel Tank

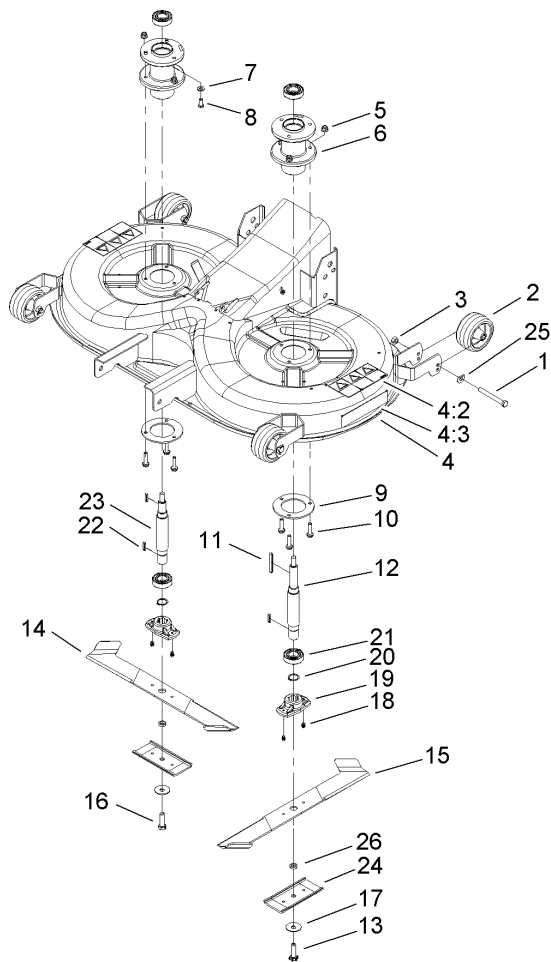 

Deck Housing Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	33115-090	4	Screw-HH	23	106-8566	1	Shaft-Blade, Right
2	104-3080	4	Wheel-Gauge	24	106-6533	2	Stiffener-Blade
3	33025-00	4	Nut-Lock	25	106-5767	4	Washer
4	110-9071	1	Deck ASM	26	106-6530	2	Spacer
4:2	93-7824	2	Decal-Danger				
4:3	106-8563	1	Decal-Recycler				
5	104-3082	6	Nut-Lock, HF				
6	107-8992	2	Housing-Spindle				
7	33094-00	6	Washer-Plain				
8	33114-020	6	Screw-HH				
9	104-3084	2	Support-Ring				
10	104-3085	6	Bolt-HHF				
11	104-3086	1	Key				
12	106-8565	1	Shaft-Blade, Left				
13	106-5797	1	Bolt-HH, Blade				
14	106-8557	1	Blade-RH				
15	106-8558	1	Blade-LH				
16	106-5798	1	Bolt-Blade, HH				
17	106-6532	2	Washer-Blade				
18	104-3093	4	Pin-Shear, Grooved				
19	106-4185	2	Adapter-Blade				
20	104-3095	2	Ring-Locking				
21	104-6325	4	Bearing-Ball				
22	104-3097	3	Key-Square				

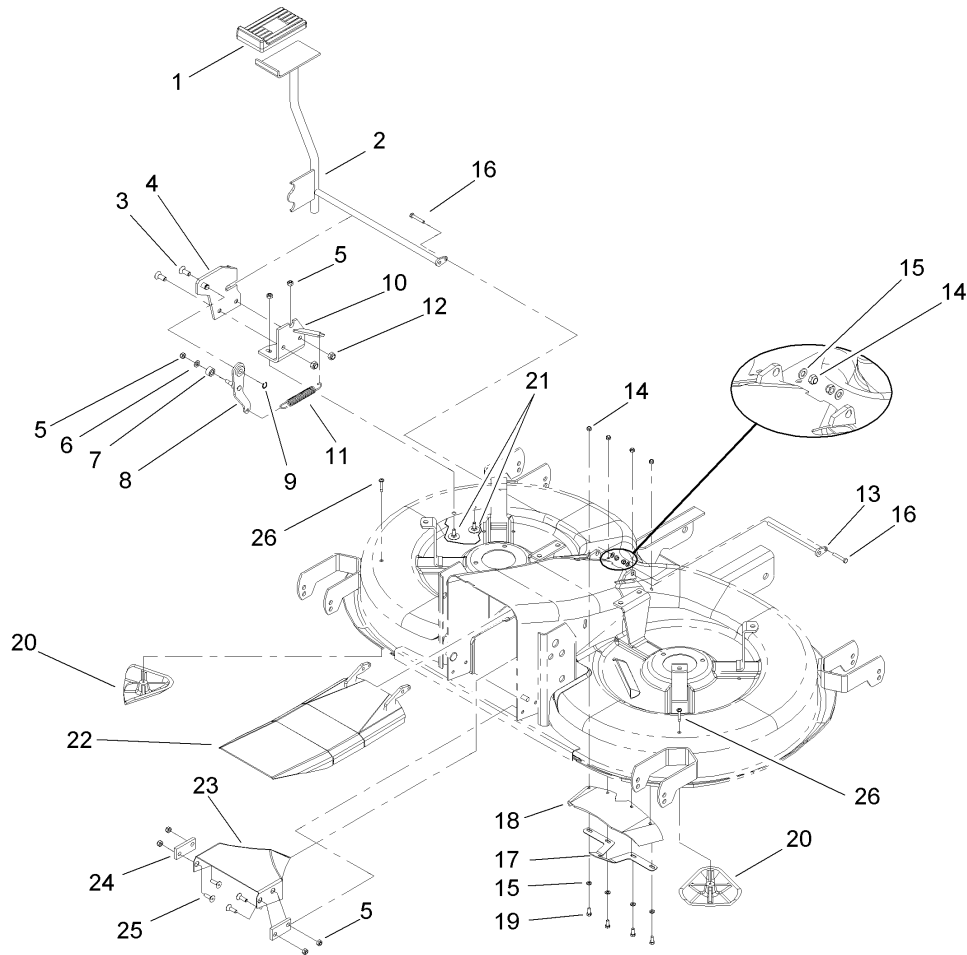 

Cutting Pan and Bag on Demand Assembly

Ref	Part No.	Qty.	Description
1	106-8583	1	Cover-Lever, Foot
2	106-8582	1	Lever-Foot
3	100-8159	2	Screw-HSFH
4	106-8578	1	Plate-Stop
5	33023-00	7	Nut-Lock
6	33093-00	1	Washer-Flat
7	106-8581	1	Roller
8	106-8579	1	Lever-Spring
9	106-8592	1	Ring-Locking
10	106-8577	1	Bracket-Mounting
11	106-8580	1	Spring
12	48-9510	2	Nut
13	106-8585	1	Rod-Door, Mulch
14	87-5140	6	Nut-Lock
15	52-6430	6	Washer
16	87-5150	2	Bolt
17	106-8567	2	Guide
18	106-8586	1	Gasket-Door, Mulch
19	106-8575	4	Screw-HH
20	106-8587	2	Kicker
21	33123-016	2	Screw-CARR
22	107-8968	1	Door-Mulch
23	106-8573	1	Baffle-Center
24	106-8572	2	Plate-Baffel, Center


Ref	Part No.	Qty.	Description
25	106-8574	4	Screw
26	104-1451	2	Screw-TAP, PPH

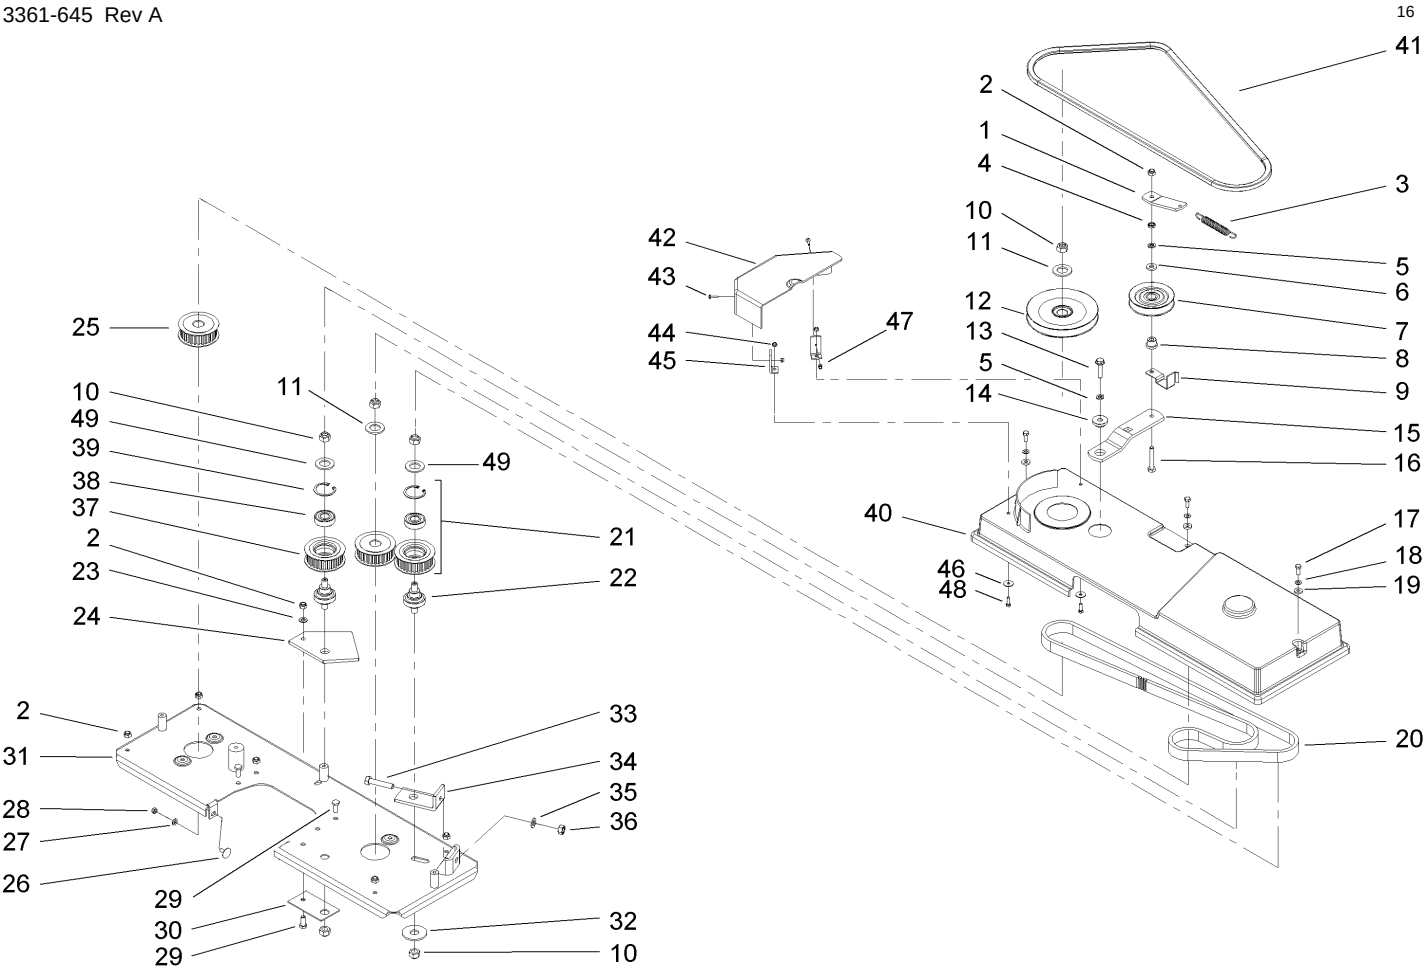 

Belt Cover and Drive System Assembly

Ref	Part No.	Qty.	Description
1	104-3099	1	Lever-Engagement
2	48-9510	8	Nut
3	104-3101	1	Spring
4	57-6390	1	Nut-Jam
5	42-9850	1	Washer-Lock, Spring
6	106-8588	1	Washer-Flat
7	104-3103	1	Pulley-Idler
8	104-3104	1	Bushing
9	104-3105	1	Retainer-Belt
10	48-9540	6	Nut-Lock, Hex NI
11	33099-00	4	Washer-Flat
12	104-3107	1	Pulley-Drive
13	33105-025	1	Screw-HHF
14	107-8995	1	Shim-Arm, Idler
15	104-3109	1	Arm-Idler
16	33114-050	1	Screw-HH
17	33113-016	3	Screw-HH
18	106-8568	3	Washer-Flat
19	83-7420	3	Washer-Rubber
20	106-8591	1	Belt-Cog
21	104-3113	2	Cog Pulley ASM
22	104-3114	2	Pin-Pulley, Cog
23	33094-00	1	Washer-Plain
24	104-3115	1	Support-Pulley


Ref	Part No.	Qty.	Description
25	104-3116	2	Pulley-Cog, Drive
26	33123-016	2	Screw-CARR
27	33093-00	2	Washer-Flat
28	33023-00	2	Nut-Lock
29	33114-025	3	Screw-HH
30	104-3117	1	Plate-Anchor
31	107-8996	1	Plate-Drive, Blade
32	104-2909	1	Washer
33	33115-050	1	Screw-HH
34	104-3120	1	Bracket-Idler
35	108-8709	1	Washer-Flat
36	48-9520	1	Nut
37	104-3121	1	Pulley-Cog
38	100-1048	1	Bearing-Ball
39	104-3123	1	Ring-Locking
40	106-8589	1	Belt-Cover
41	104-3126	1	V-Belt
42	107-8941	1	Guard-Belt
43	60-6910	2	Screw
44	87-5140	2	Nut-Lock
45	107-8940	2	Bracket
46	3256-61	4	Washer-Flat
47	46-0430	2	Nut-Lock
48	107-8918	2	Screw

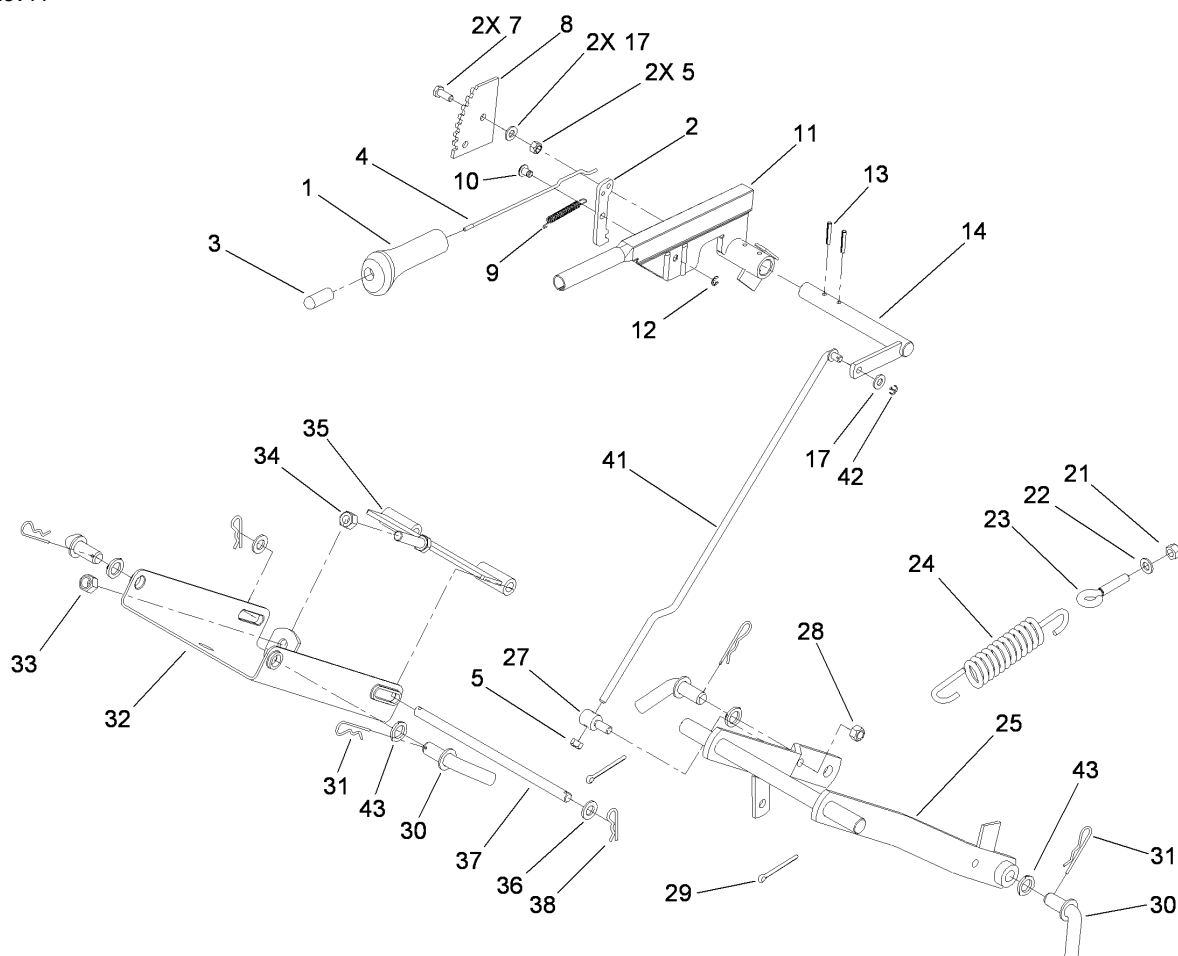 

Mower Lift Assembly


Ref	Part No.	Qty.	Description
1	104-3129	1	Grip-Handle
2	104-3130	1	Ratchet-Plate, Pivot
3	104-3131	1	Button-Plunger
4	104-3132	1	Rod-Connection
5	33024-00	3	Nut-Lock
7	33114-020	2	Screw-HH
8	114-3244	1	Gear-Segment, Deck Lift
9	104-3134	1	Spring
10	104-3135	1	Pin-Arm Lever
11	104-3136	1	Lever-Arm, Height Adj.
12	104-3137	1	Clip-Pin
13	104-2994	2	Pin-Spring
14	114-3245	1	Shaft-Lift, Deck
17	33094-00	3	Washer-Plain
21	33025-00	1	Nut-Lock
22	33095-00	1	Washer-Flat
23	104-3139	1	Bolt-Eye
24	104-3140	1	Spring-Lift
25	104-3141	1	Pivot Arm ASM
27	104-3142	1	Pin-Lifting
28	33025-00	1	Nut-Lock
29	104-3016	2	Pin-Cotter
30	104-3143	4	Pin-Bent
31	104-3144	4	Pin-Hair

Ref	Part No.	Qty.	Description
32	104-3145	1	Suspension-Mower Deck, Front
33	33026-00	1	Nut-Lock
34	33016-00	1	Nut-Hex
35	104-3146	1	Holder-Front
36	104-3124	2	Washer-Flat
37	104-3147	1	Pin
38	104-3148	2	Pin-Hair
41	104-3149	1	Rod-Height, Adj.
42	104-3151	1	Pin-Cotter
43	34-9270	4	Washer-Hose

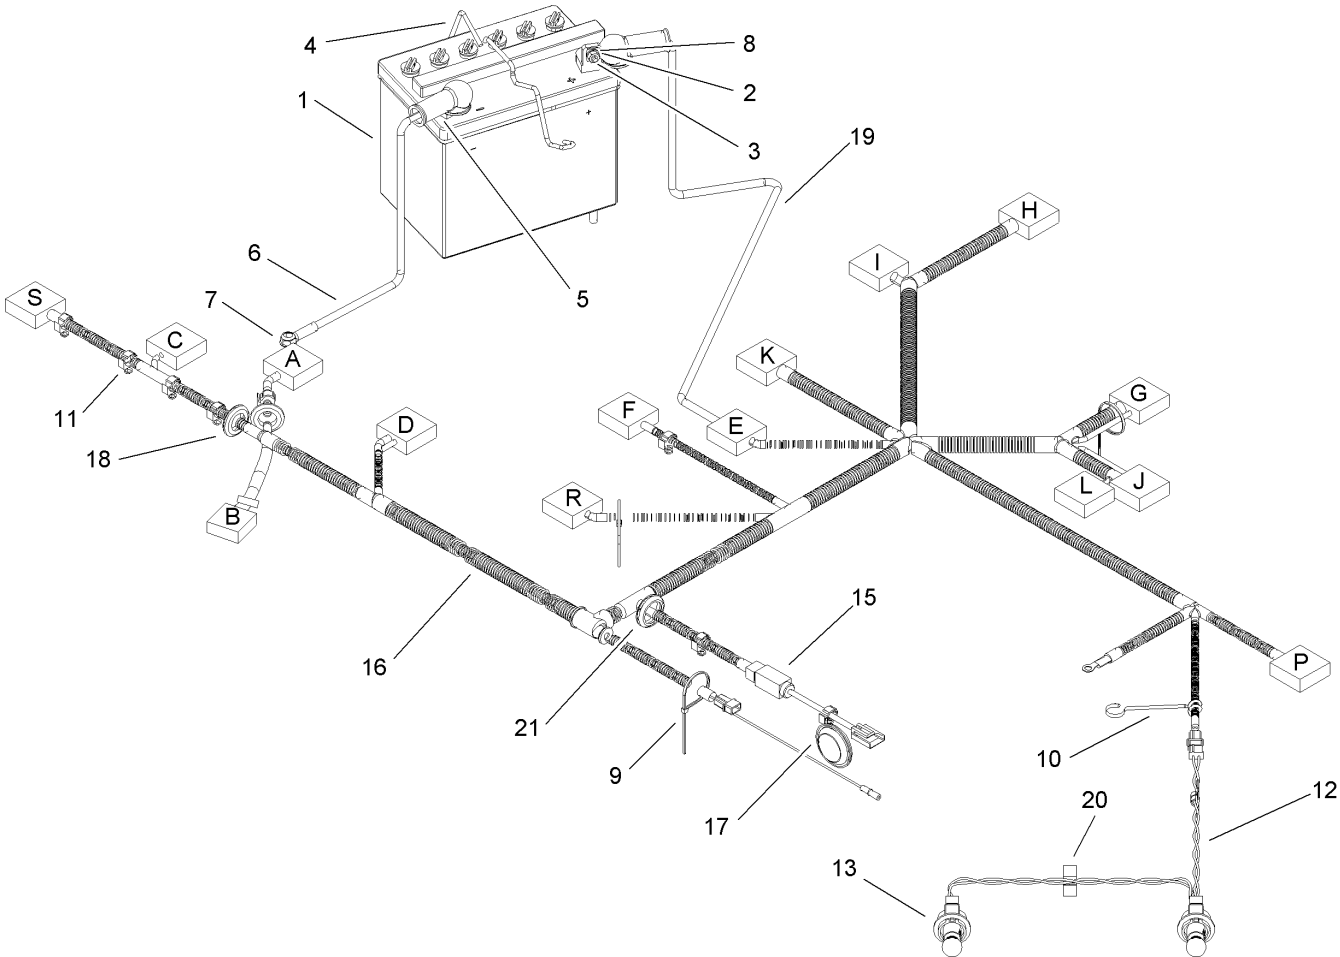 



Harness Assembly

Ref	Part No.	Qty.	Description				
1	104-2491	1	Battery				
2	33013-00	2	Nut-Hex				
3	33113-016	2	Screw-HH				
4	114-3131	1	Clamp-Battery				
5	104-3154	2	Boot-Rubber				
6	110-8678	1	Cable-Battery, Negative				
7	33024-00	1	Nut-Lock				
8	33093-00	2	Washer-Flat				
9	3334-945	3	Tie-Cable				
10	104-3156	1	Holder-Harness, Wiring				
11	104-3157	10	Clip-Snap				
12	114-3128	1	Harness-Wire, Light				
13	114-3129	2	Bulb-Light				
15	104-3160	1	Harness-Clutch				
16	108-8750	1	Harness-Wiring				
17	104-3163	1	Cap				
18	104-3165	2	Bushing				
19	110-8677	1	Cable-Battery, Positive				
20	104-3167	2	Clip-Nylon				
21	104-3168	1	Bushing				

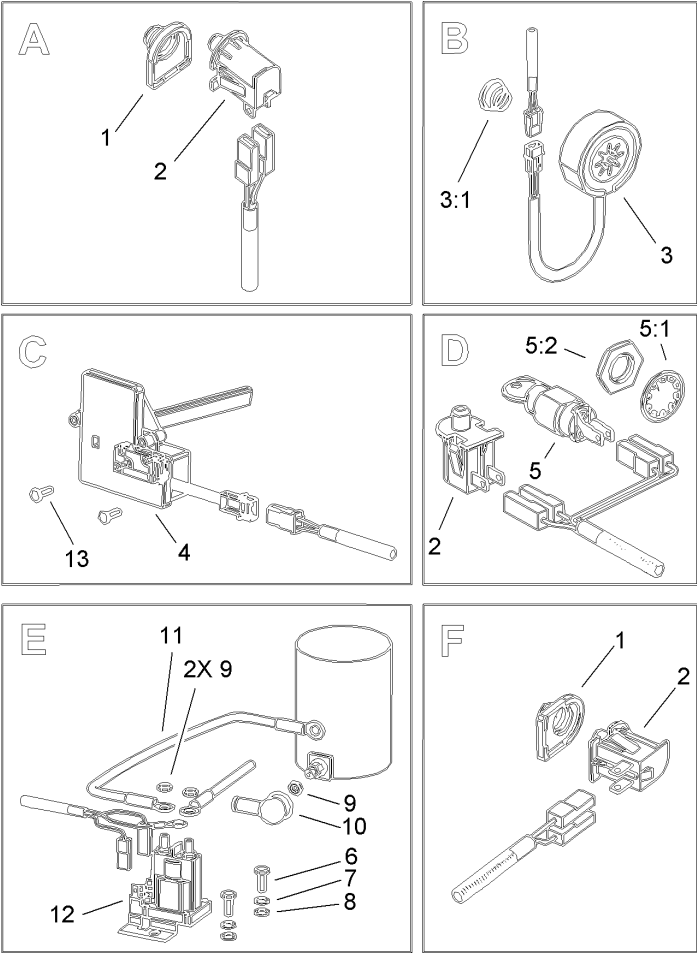 


Electrical Starter Assembly

Ref	Part No.	Qty.	Description				
1	104-3178	2	Cover-Protective				
2	104-3179	3	Switch-Delta				
3	99-8090	1	Magnet ASM				
3:1	93-6601	1	Spring-Compression				
4	104-3185	1	Switch-Omron				
5	46-5780	1	Starter Switch ASM				
5:1	3254-5	1	Washer-Tooth				
5:2	218-461	1	Nut-HH				
6	33113-012	2	Screw-HH				
7	104-3186	2	Washer-Spring				
8	33093-00	2	Washer-Flat				
9	32128-32	3	Nut-HHF				
10	104-3187	1	Boot-Rubber				
11	104-3188	1	Lead-Starter, Electric				
12	104-3189	1	Solenoid				
13	104-3349	2	Screw				

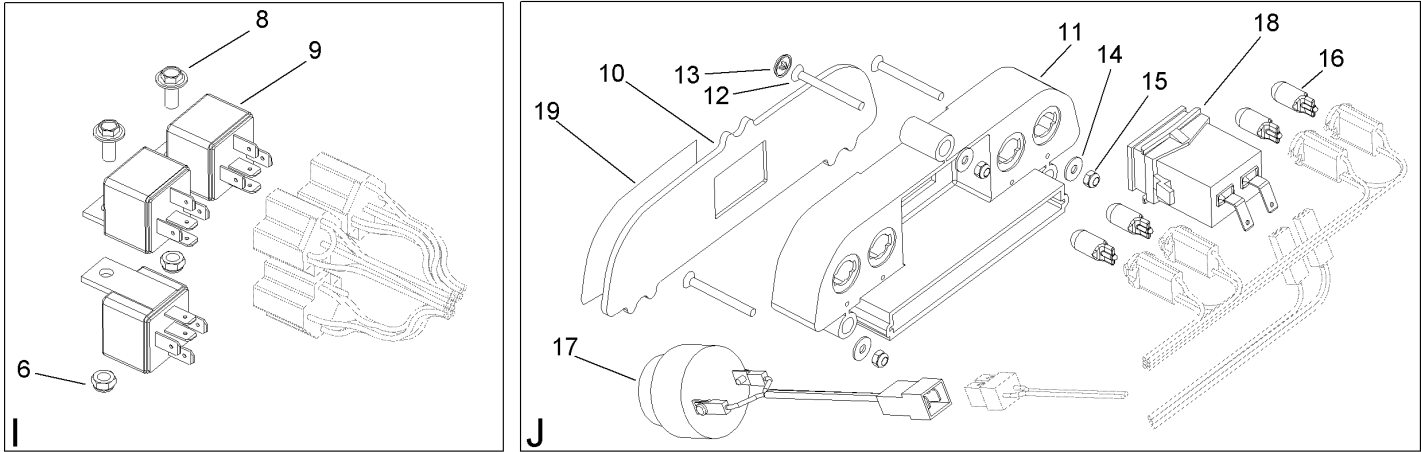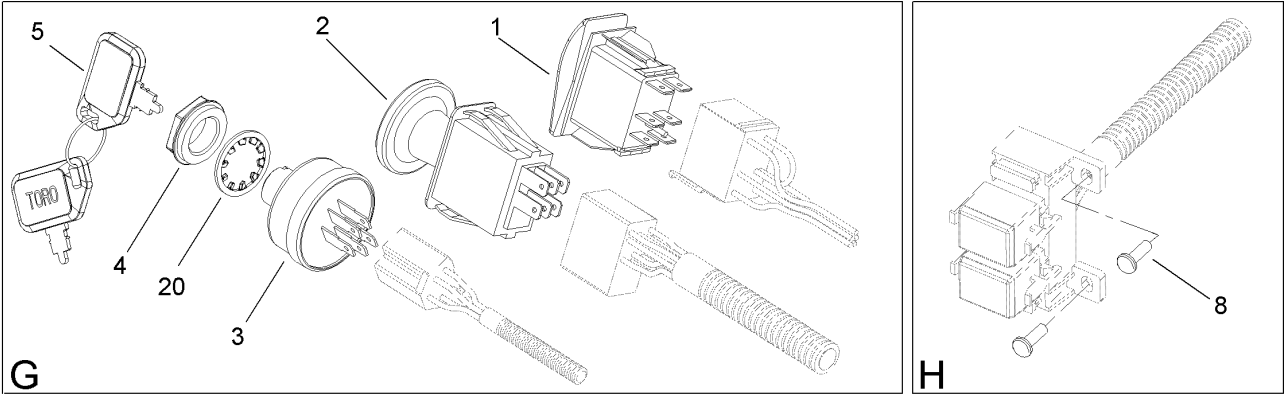  

Electrical Switch Assembly No. 2

Ref	Part No.	Qty.	Description				
1	93-0527	1	Switch-Cruise				
2	93-9998	1	Switch-PTO				
3	92-6785	1	Switch-Ignition				
4	218-461	1	Nut-HH				
5	62-7770	2	Key-Ignition				
6	87-5140	2	Nut-Lock				
8	104-2978	4	Screw-Hex				
9	104-3173	3	Relay				
10	92-6705	1	Lens-Dash				
11	92-6732	1	Housing-Light, Indicator				
12	104-3191	3	Screw				
13	104-3174	3	Screw-Cap				
14	104-3175	3	Washer				
15	104-2985	3	Nut-Hex				
16	104-3176	4	Bulb				
17	104-3177	1	Buzzer				
18	94-4208	1	Hourmeter				
19	104-2854	1	Decal-Dash				
20	3254-5	1	Washer-Tooth				

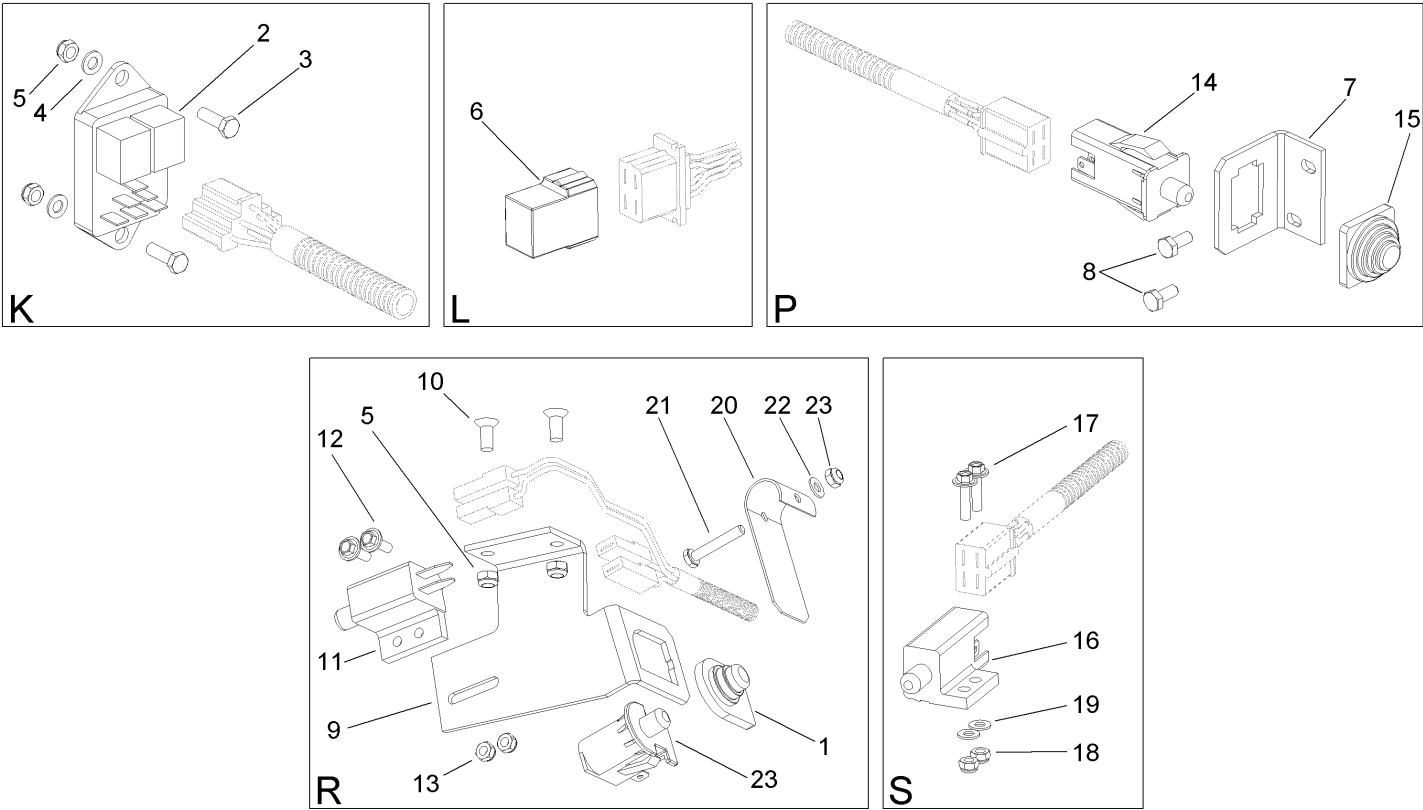 

Electrical Switch Assembly No. 3

Ref	Part No.	Qty.	Description				
1	104-3178	1	Cover-Protective				
2	99-3701	1	Module-Clutch				
3	60-6910	2	Screw				
4	52-6430	2	Washer				
5	87-5140	4	Nut-Lock				
6	104-3169	1	Circuit-Memory				
7	104-3333	1	Holder-Switch				
8	104-3190	2	Screw				
9	104-3332	1	Holder-Switch				
10	104-2980	2	Screw				
11	95-1653	1	Switch-Pole, Single				
12	104-2983	2	Screw				
13	104-2985	3	Nut-Hex				
14	104-3338	1	Switch-Delta				
15	104-3339	1	Cover-Switch				
16	104-3330	1	Switch-Delta				
17	104-3331	2	Bolt				
18	46-0430	2	Nut-Lock				
19	52-6430	2	Washer				
20	106-5765	1	Lever-Spring				
21	104-3009	1	Screw-Hex				
22	106-5766	1	Washer				
23	104-3180	1	Switch-Delta				

Attachments and Accessories

For 74592 - DH 220 Lawn Tractor

Product Name	Model/Part
Rear Discharge Kit	79471

