




MODEL NO. 08881-40360 & UP

PARTS CATALOG

SAND PRO® 5000

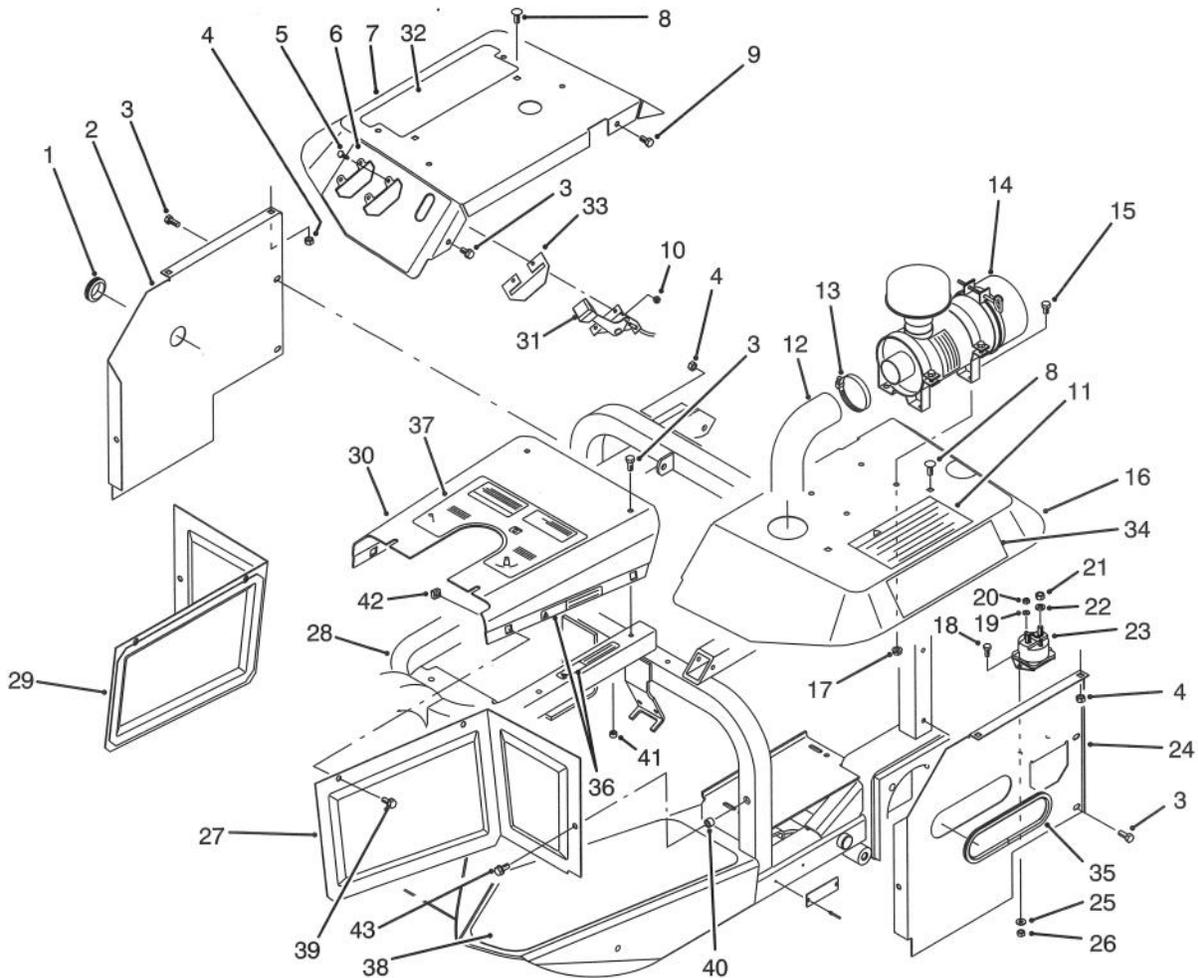

T-1472A


BODY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	240-3	Grommet	1
2	85-9050	Panel - R.H. Rear	1
3	32144-11	Screw - Cap Hex. Hd.	8
4	3296-29	Nut - Lock	6
5	32105-13	Screw - Cap Hex. Hd.	4
‡6	85-8820	Decal - Control (English)	1
7	85-9530	Fender - R.H.	1
8	3230-18	Bolt - Carriage	4
9	322-2	Screw - Cap Hex. Hd.	2
10	3296-2	Nut - Lock	4
‡11	85-8840	Decal - Warning (English)	1
12	85-9500	Hose - Air Cleaner	1
13	2412-92	Clamp - Hose	2
14	46-6890	Air Cleaner Assembly	1

Ref. No.	Part No.	Description	No. Used
15	322-1	Screw - Cap Hex. Hd.	4
16	14-7509	Fender Assembly L.H. (Incl. Ref. #11)	1
17	32128-20	Nut - Flange Lock	4
18	321-3	Screw - Cap Hex. Hd.	2
19	3254-1	Washer - Lock	2
20	3219-14	Nut - Hex.	2
21	3218-13	Nut - Hex.	2
22	3254-2	Washer - Lock	2
23	28-4210	Solenoid - Starter	1
24	85-9040	Panel - Rear L.H.	1
25	3256-22	Washer - Flat	2
26	3296-8	Nut - Lock	2
27	85-9680	Panel - Front L.H.	1
28	85-7600	Frame Assembly (Incl. Ref. #41)	1

‡For different language versions of this part, see International Decal Cross Reference.


TPS

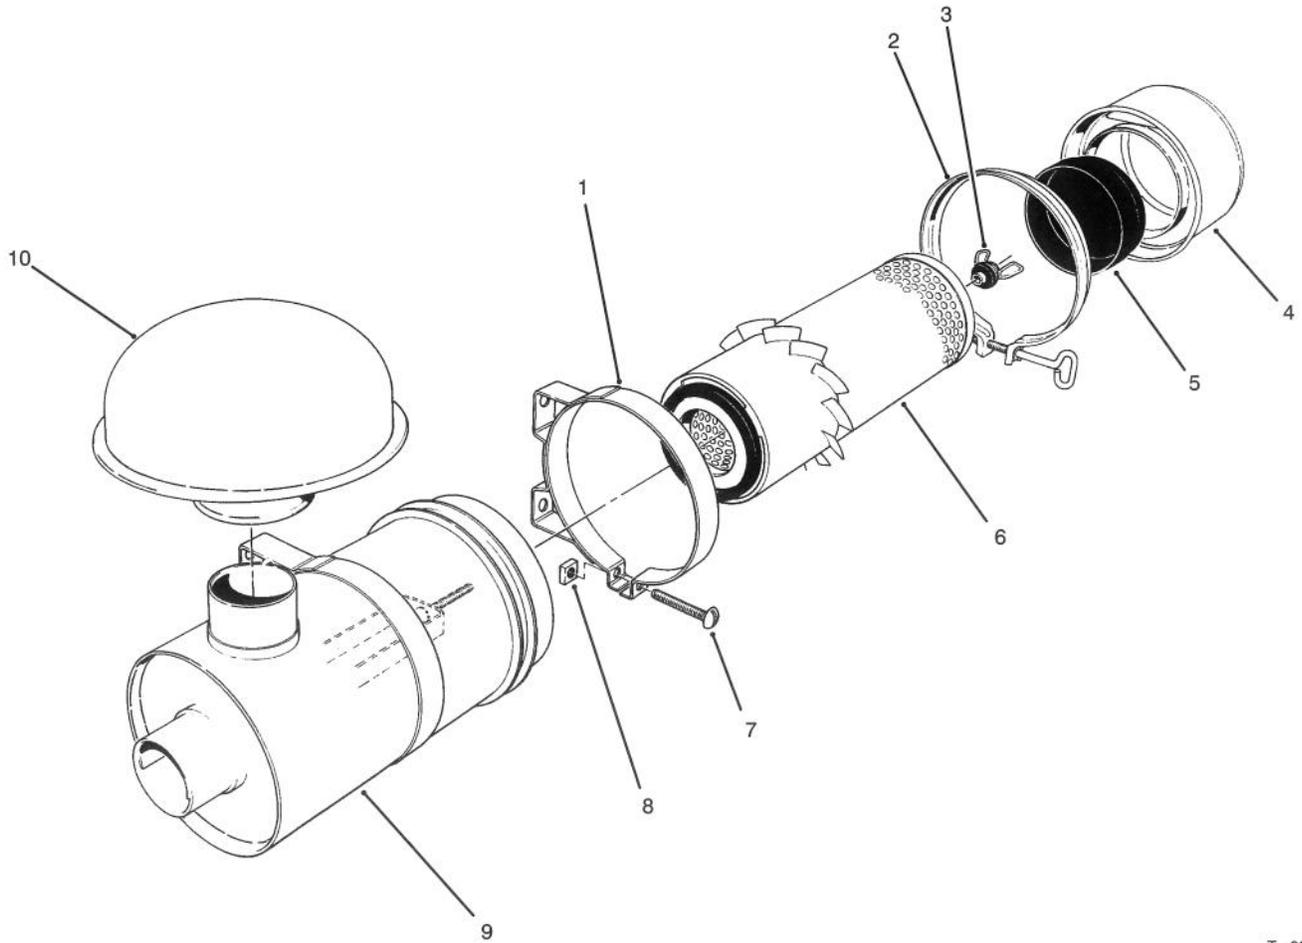

T-0248

AIR CLEANER ASSEMBLY NO. 46-6890

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	33-1350	Band Assembly (Incl. Ref. #7 & 8)	2	6	33-1300	Element Assembly	1
2	33-1340	Clamp Assembly	1	7	3258-19	Screw - Round Hd.	2
3	33-1330	Nut Assembly	1	8	32107-11	Nut - Square	2
4	33-1320	Cup	1	9		Body Assembly	1
5	33-1310	Baffle	1	10	46-7510	Hood - Intake	1

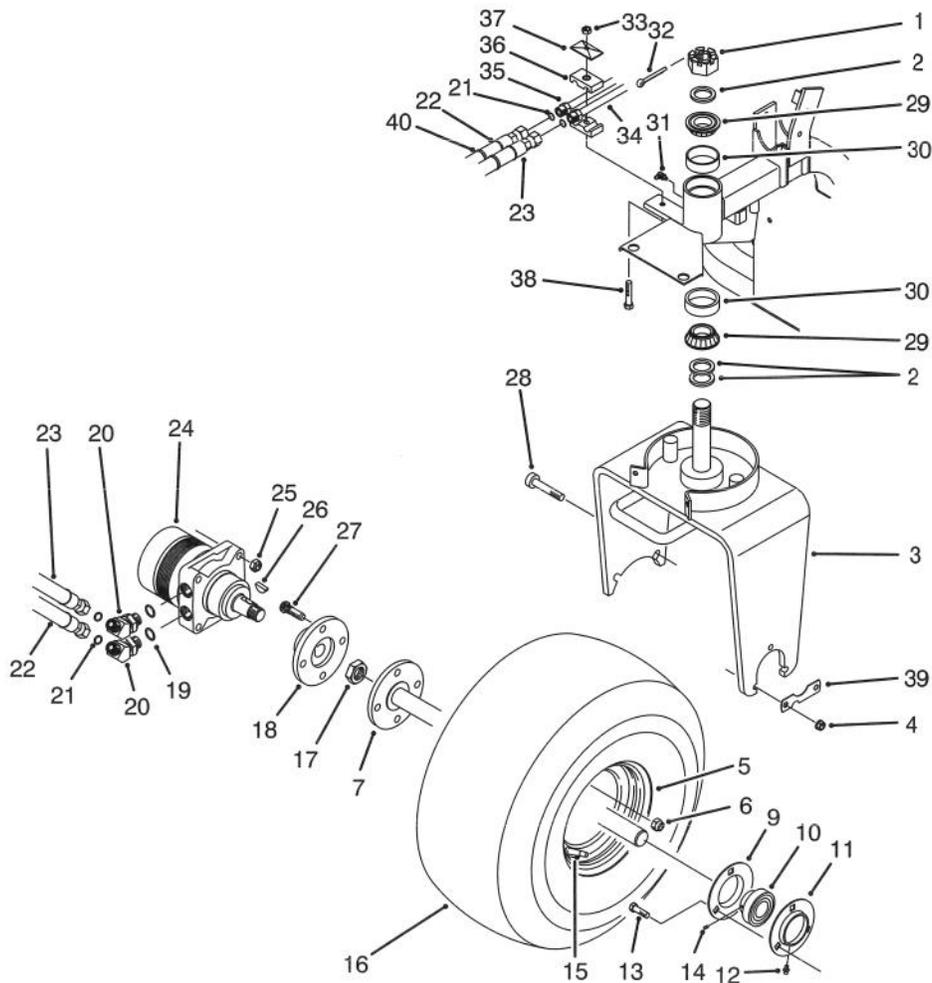


T-1468

FRONT WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32136-9	Nut - Slotted	1
2	18-6320	Washer	3
3	85-8060	Fork - Steering	1
4	3296-39	Nut - Lock	3
5	46-4810	Rim	1
6	242-50	Nut - Lug	4
7	18-6290	Shaft - Axle	1
9	85-8950	Flange - Bearing	1
10	251-352	Bearing Assembly (Incl. Ref. #14)	1
11	85-8940	Flange - Bearing Lube (Incl. Ref. #12)	1
12	302-5	Fitting - Grease	1
13	323-29	Screw - Cap Hex. Hd.	3
14	251-352	Screw - Set	2
15	232-35	Valve - Stem	1
16	85-8290	Tire	1
17	26-3790	Nut - Lock	1
18	17-4710	Hub	1
19	237-80	Seal - O-Ring	2
20	340-89	Fitting - Hydraulic 45° (Incl. Ref. #19 & 21)	2
21	237-30	Seal - O-Ring	4

Ref. No.	Part No.	Description	No. Used
22	85-9640	Hose - Hydraulic	1
23	85-9630	Hose - Hydraulic	1
24	75-9830	Hydraulic Motor Assembly (Incl. Ref. #26)	1
25	3296-23	Nut - Lock	2
26	3257-42	Key - Woodruff	1
27	10-6830	Stud - Drive	4
28	3274-93	Screw - Hex. Socket Hd.	2
29	254-70	Cone - Bearing	2
30	254-61	Cup - Bearing	2
31	302-60	Fitting - Grease	1
32	3272-37	Pin - Cotter	1
33	3296-8	Nut - Lock	1
34	85-9360	Tube - Hydraulic (Incl. Ref. #21)	1
35	85-9370	Tube - Hydraulic (Incl. Ref. #21)	1
36	56-7976	Clamp - Tube	1
37	69-9760	Plate - Cover	1
38	321-10	Screw - Cap Hex. Hd.	1
39	88-8350	Tab - Bearing	1
40	3290-378	Tie - Cable	2

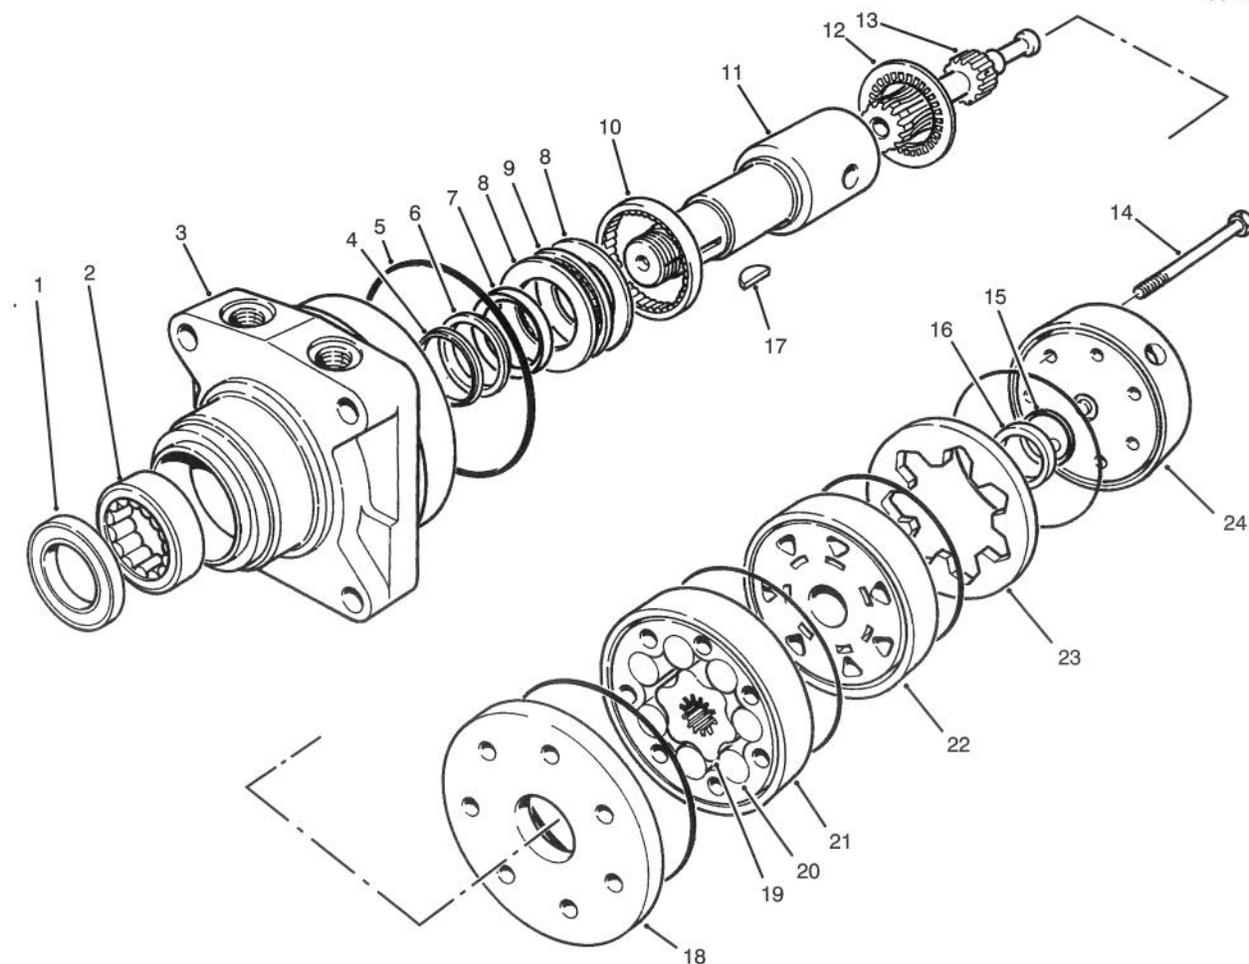


T-0983

FRONT HYDRAULIC DRIVE MOTOR NO. 75-9830

Ref. No.	Part No.	Description	No. Used
1		Seal - Dirt & Water	1
2		Bearing	1
3		Housing	1
4		Washer - Backup	1
5		Seal - Rings	5
6		Washer - Backup	1
7		Seal - Inner	1
8		Washer - Thrust	2
9		Bearing - Thrust	1
10		Bearing	1
11	76-0860	Shaft - Coupling	1
12	76-0850	Bearing - Thrust	1
13	76-0930	Link - Drive	7
14	76-1030	Screw - Cap, Hex. Hd.	1
15		Seal - Commutator	1
16		Commutator	1

Ref. No.	Part No.	Description	No. Used
17	3257-42	Key - Woodruff	1
18	76-0870	Plate - Wear	1
19		Rotor	1
20		Vane	7
21		Stator	1
22	76-0840	Manifold	1
23		Ring - Commutator	1
24	76-0940	Assembly - Cover, End	1
*	76-0950	Rotor Set (Incl. Ref. #19-21)	1
*	76-0880	Assembly - Commutator (Incl. Ref. #15, 16 & 23)	1
*	76-0800	Kit - Seal (Incl. Ref. #1, 4-7 & 15)	1
*	76-0810	Assembly - Housing (Incl. Ref. #2, 3 & 8-10)	1

*Not Illustrated

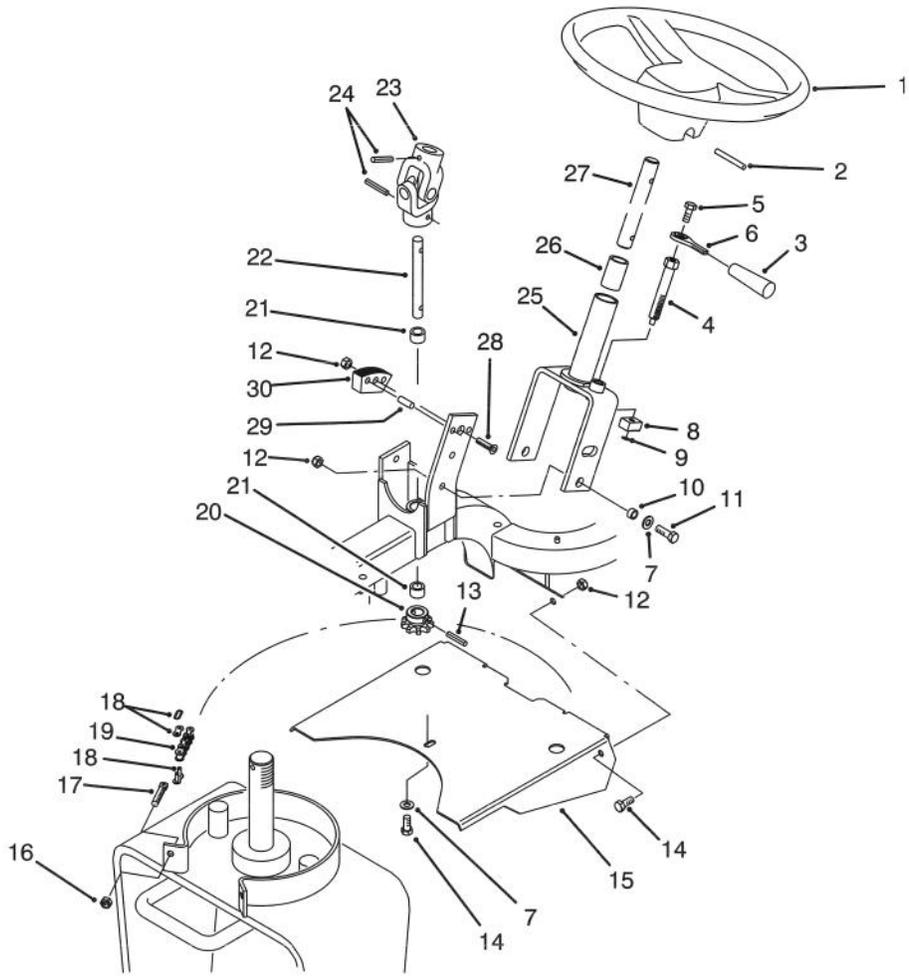


T-1471

STEERING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-1420	Wheel - Steering	1
2	32121-111	Pin - Roll	1
3	233-39	Handle	1
4	88-8240	Pin - Tilt Lock	1
5	322-43	Screw - Cap Hex. Hd.	1
6	88-8280	Lever - Steering Adjust	1
7	3256-23	Washer - Flat	4
8	88-8530	Block - Lock Upper	1
9	32151-105	Ring - Retaining	1
10	85-9120	Spacer	3
11	322-5	Screw - Cap Hex. Hd.	3
12	3296-29	Nut - Lock	6
13	32121-112	Pin - Roll	1
14	322-3	Screw - Cap Hex. Hd.	3
15	85-8970	Shield - Chain	1
16	3296-4	Nut - Lock	2

Ref. No.	Part No.	Description	No. Used
17	18-6380	Bolt - Adjustment	2
18	2710-11	Link - Connecting	2
19	85-8030	Chain	1
20	85-9180	Sprocket	1
21	256-287	Bushing - Sleeve	2
22	85-9210	Shaft - Steering Lower	1
23	85-9200	Joint - Universal	1
24	32121-15	Pin - Roll	2
25	88-8290	Steering Column Assembly (Incl. Ref. #26)	1
26	256-185	Bushing - Sleeve	1
27	85-9220	Shaft - Steering Upper	1
28	3289-24	Screw - Socket Flat Hd.	1
29	88-8510	Dowel	2
30	88-8520	Block - Lock Lower	1

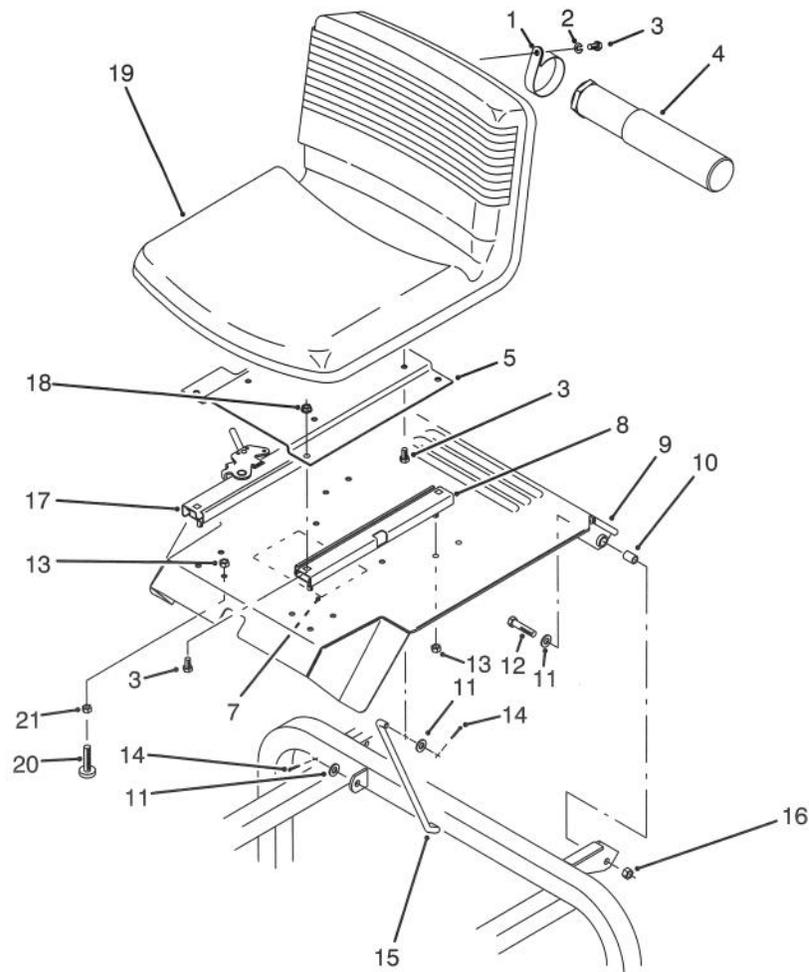


T-1470A

SEAT ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	2412-133	Clamp - R	2	12	323-9	Screw - Cap Hex. Hd.	2
2	3253-4	Washer - Lock	2	13	3296-29	Nut - Lock	6
3	322-2	Screw - Cap Hex. Hd.	10	14	3274-4	Pin - Cotter	2
4	74-0720	Tube - Manual	1	15	85-9320	Rod - Seat Prop	1
5	85-9660	Plate - Seat	1	16	3296-39	Nut - Lock	2
‡7	85-8850	Decal - Service (English)	1	17	51-0790	Slide - Seat Adjust	1
8	51-0780	Slide - Seat Adjust	1	18	32128-20	Nut - Flange Lock	4
9	85-9230	Support - Seat	1	19	76-1401	Seat	1
10	85-0290	Spacer - Seat Support	2	20	32141-36	Screw - Leveling	2
11	3256-24	Washer - Flat	4	21	3218-2	Nut - Jam	2

‡For different language versions of this part, see International Decal Cross Reference.

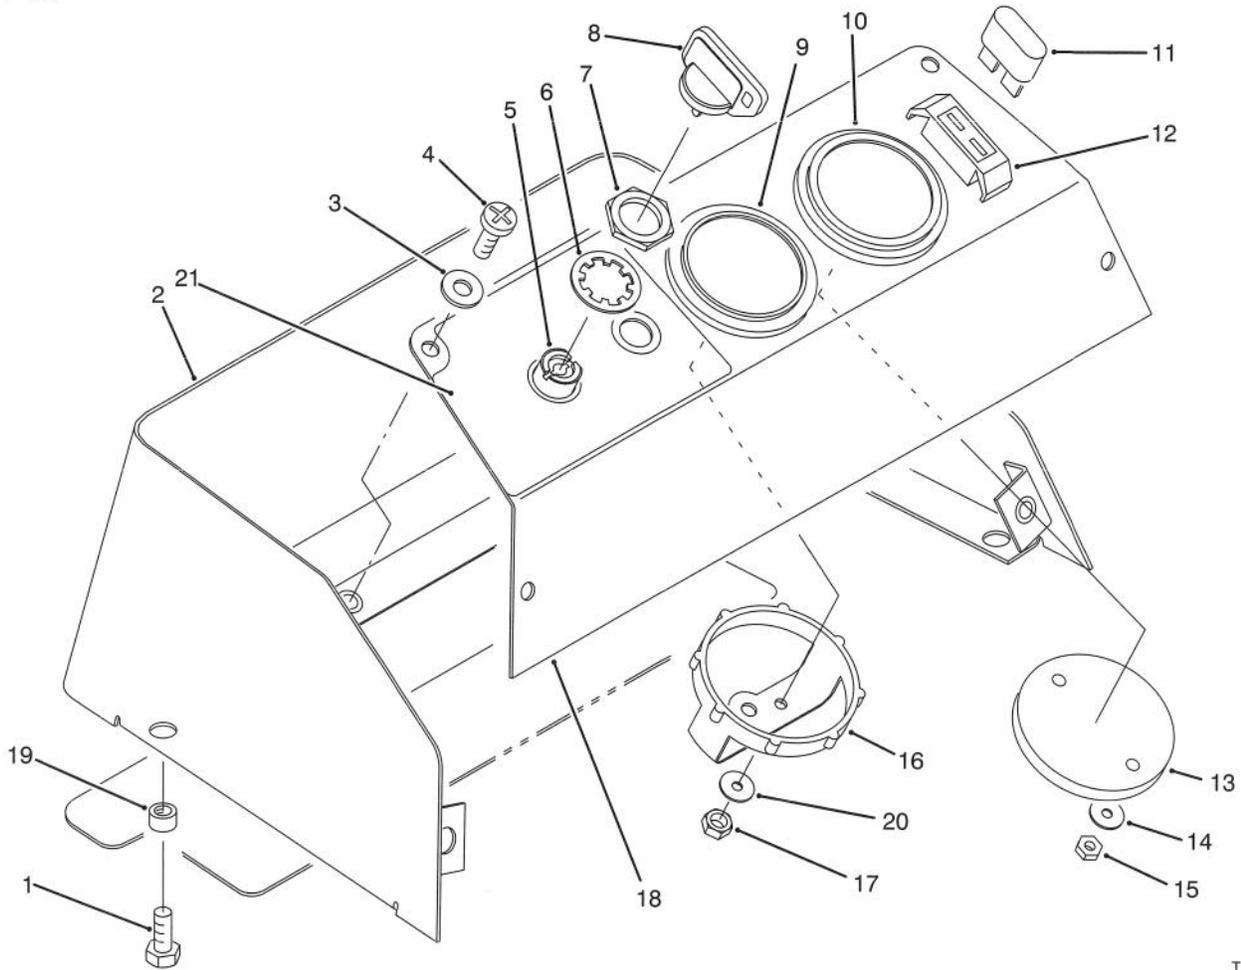


T-1479

CONTROL PANEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	321-3	Screw - Cap Hex. Hd.	4
2	85-9070	Console Assembly (Incl. Ref. #19)	1
3	3256-1	Washer - Flat	4
4	3258-166	Screw - Phillips Hd.	4
5	83-0020	Ignition Switch Assembly (Incl. Ref. #6-8)	1
6	3254-5	Washer - Lock	1
7	218-461	Nut - Lock	1
8	63-8360	Key - Ignition	1
9	83-0820	Ammeter Assembly (Incl. Ref. #16-17 & 20)	1
10	66-2950	Hour Meter Assembly (Incl. Ref. #13-15)	1
11	218-594	Fuse - 20 Amp	2
12	80-2120	Wire Harness Assembly (Incl. Ref. #11)	1

Ref. No.	Part No.	Description	No. Used
13		Clamp - Hour Meter	1
14	3255-20	Washer - E.T.L.W.	2
15	3217-25	Nut - Hex	2
16	39-9600	Clamp - Ammeter	1
17	3219-14	Nut - Hex.	2
18	85-8890	Panel - Console	1
19	32148-6	Nut - Clinch	8
20		Washer - Flat	1
‡21	85-8830	Decal - Console (English)	1
*	3290-378	Tie - Cable (For Wire Harness)	3
*	3290-509	Mount - Tie (For Wire Harness)	3
*	3274-31	Screw - Hex. Socket Hd. (For Wire Harness)	3

‡For different language versions of this part, see International Decal Cross Reference.

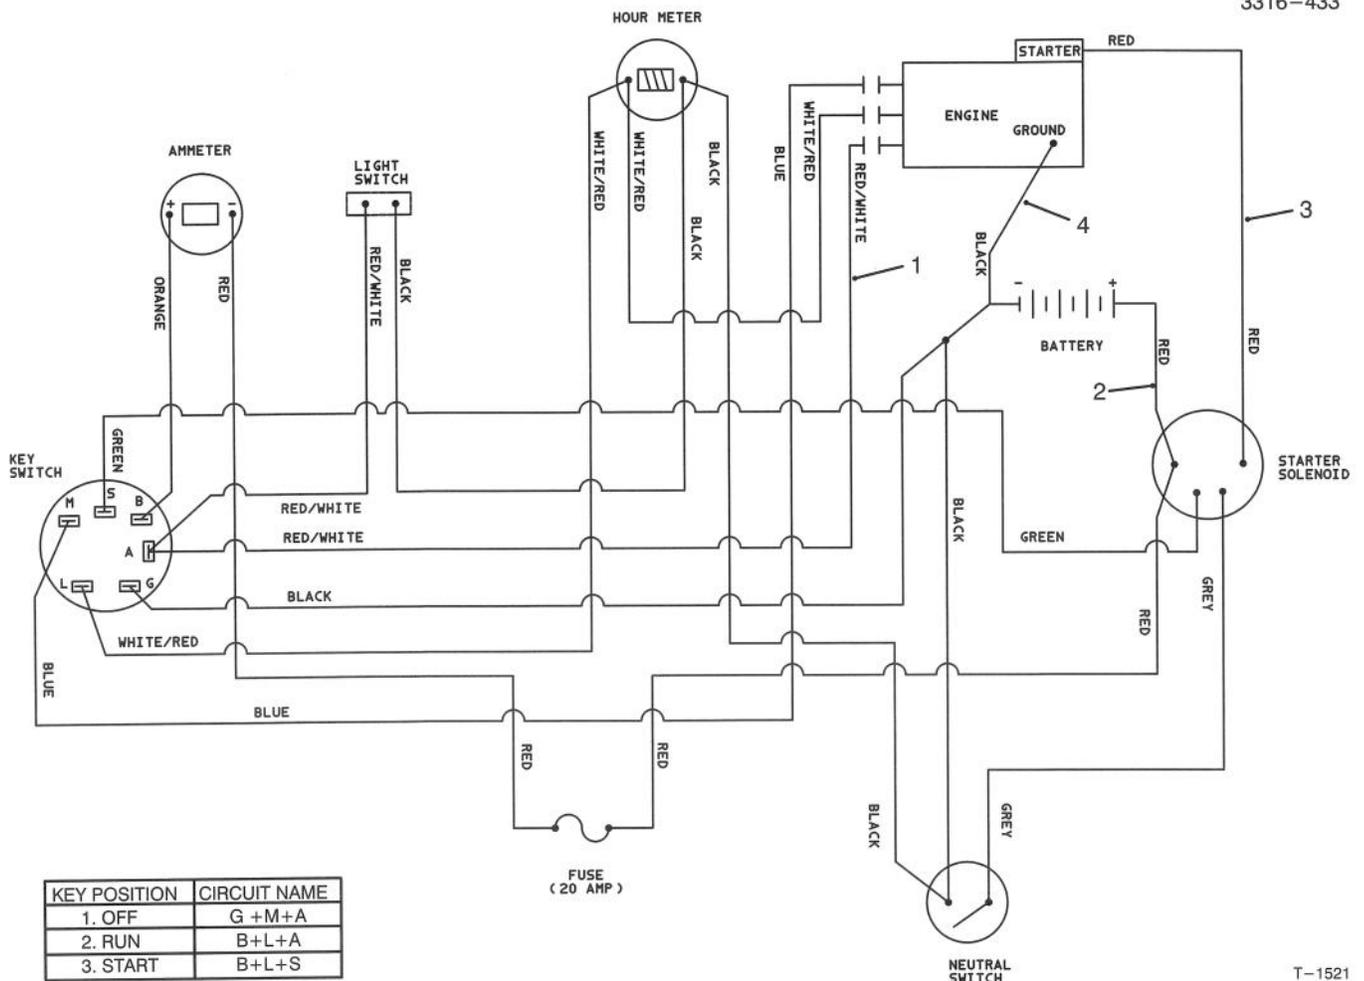


T-1521

ELECTRICAL SCHEMATIC

Ref. No.	Part No.	Description	No. Used
1	80-2120	Wire Harness - Main	1
2	80-2110	Cable - Solenoid-Starter	1

Ref. No.	Part No.	Description	No. Used
3	83-2420	Cable - Positive	1
4	88-8330	Cable - Engine Ground	1

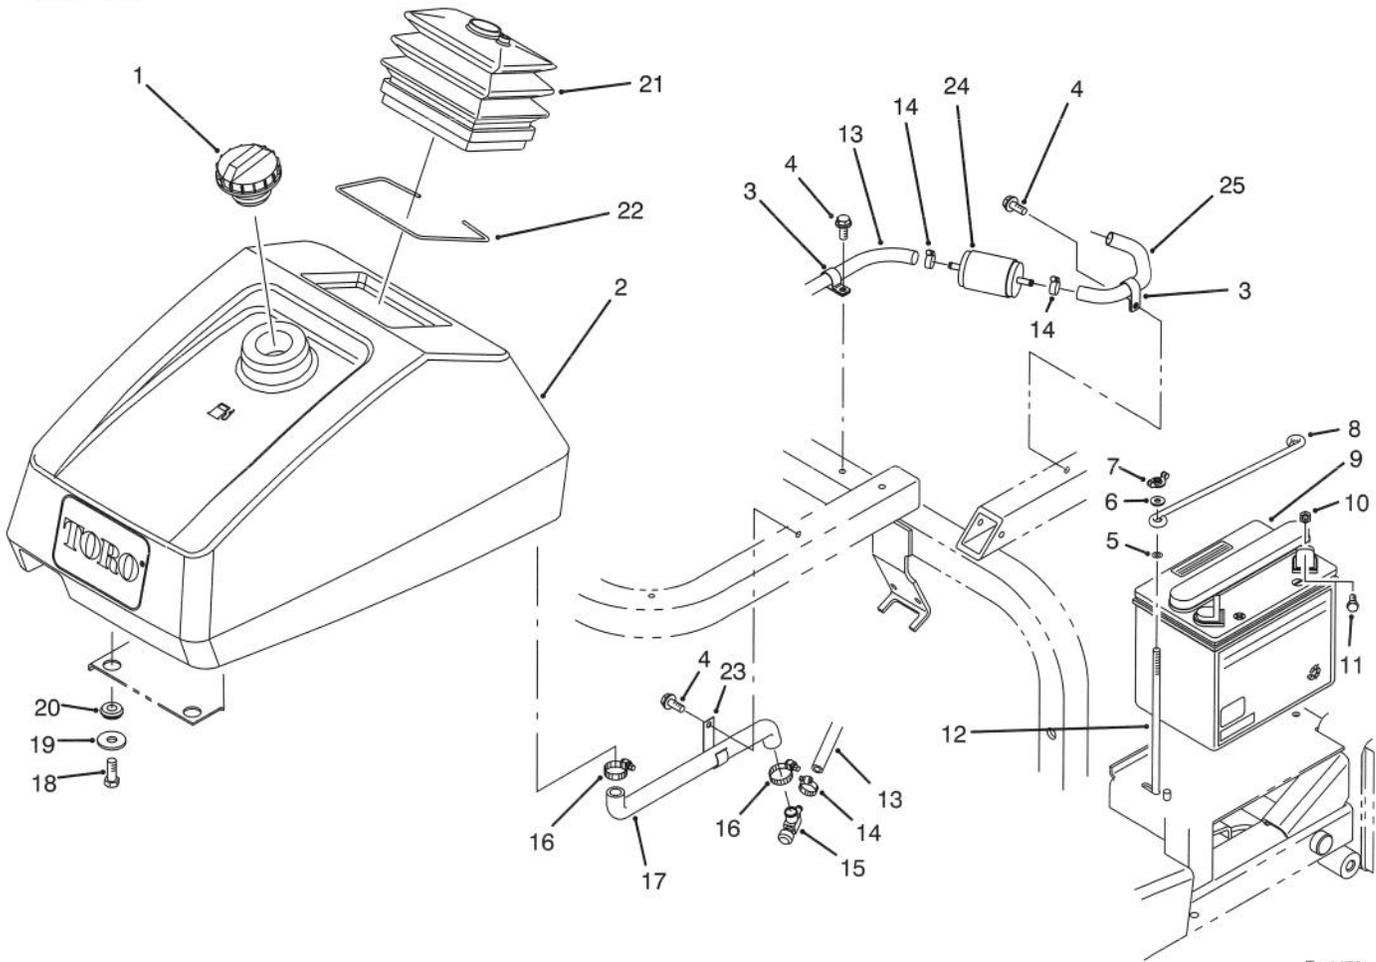


T-1478

FUEL TANK & BATTERY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	70-8631	Cap - Fuel	1
2	92-8958	Tank - Fuel	1
3	2412-93	Clamp - R	2
4	32144-11	Screw - Self Tapping	3
5	237-143	Grommet	2
6	3256-22	Washer - Flat	2
7	32103-12	Nut - Wing	2
8	72-4790	Hold-Down - Battery	1
9	92-1678	Battery	1
10	3217-5	Nut - Hex.	2
11	321-3	Screw - Cap Hex. Hd.	2
12	56-7720	Rod - Battery Hold-Down	2
13	21-2480	Hose - Fuel	1

Ref. No.	Part No.	Description	No. Used
14	2412-108	Clamp - Hose	3
15	83-1390	Fitting - Fuel Shut-Off	1
16	2412-36	Clamp - Hose	2
17	85-9140	Hose - Fuel	1
18	323-5	Screw - Cap Hex. Hd.	4
19	63-8410	Washer - Flat	4
20	240-11	Grommet	4
21	85-9010	Boot - Steering	1
22	85-8930	Retainer - Boot	1
23	2412-109	Clip - J	1
24	83-1320	Filter - Fuel	1
25	47-2964	Hose - Fuel	1

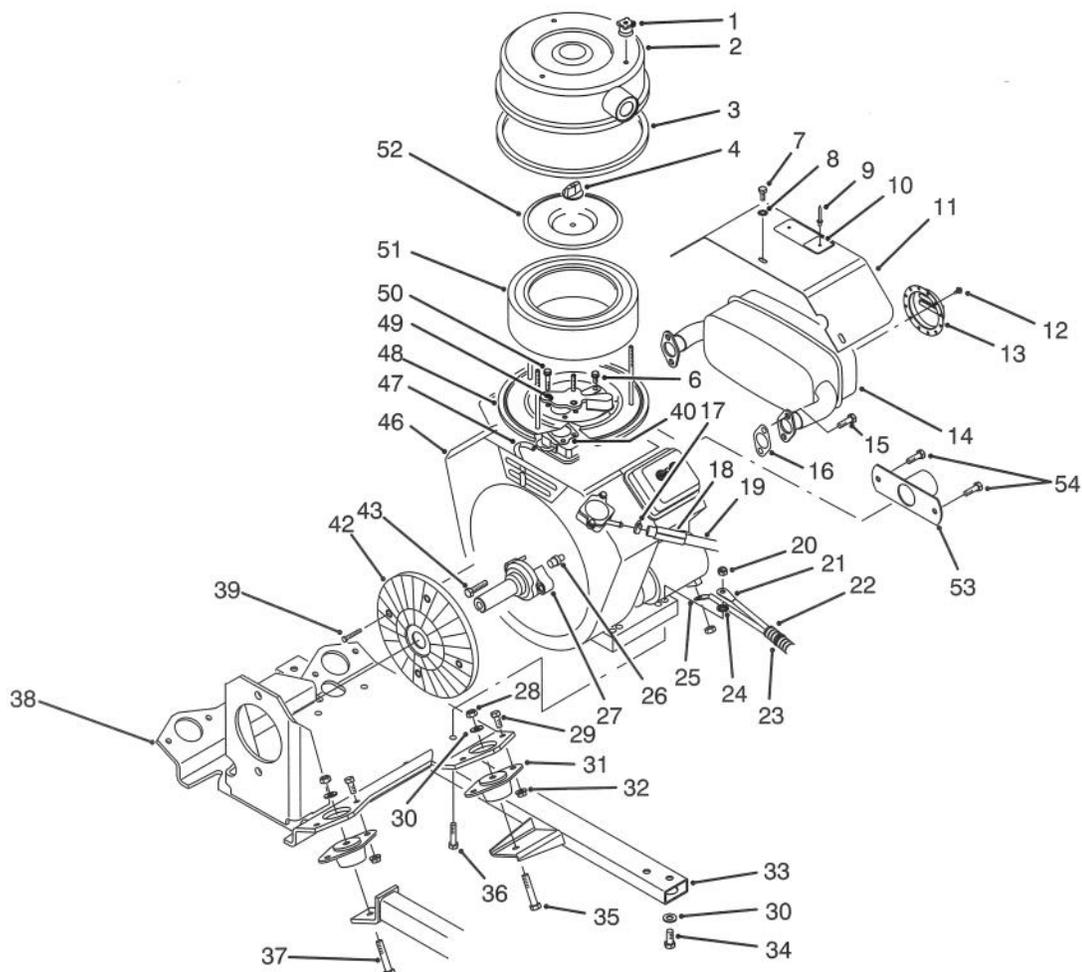

T-1474A


ENGINE & MUFFLER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
†1	281051	Knob – Air Cleaner	3	†27	262680	Shaft – Stub	12
2	85-8370	Cover – Air Cleaner	1	28	3296-39	Nut – Lock	4
3	85-8360	Seal – Cover	1	29	322-4	Screw – Cap Hex. Hd.	8
†4	491875	Knob – Air Cleaner	1	30	3256-24	Washer – Flat	8
†6	805406	Screw – Hex. Flange Hd.	3	31	83-1031	Mount – Engine	4
7	48-7620	Screw – Cap Hex. Hd.	3	32	3296-29	Nut – Lock	8
8	3255-7	Washer – ETLW	3	33	85-8600	Support – Engine	1
9	3269-32	Rivet – Pop	2	34	323-33	Screw – Cap Hex. Hd.	4
†10	80-8290	Plate – Hot Surface (English)	1	35	323-10	Screw – Cap Hex. Hd.	2
11	88-8380	Muffler Shield Assembly (Incl. Ref. #9 & 10)	1	36	322-9	Screw – Cap Hex. Hd.	4
12	83-2230	Screw	4	37	323-11	Screw – Cap Hex. Hd.	2
13	83-2220	Deflector – Exhaust	1	38	85-8640	Base – Engine	1
14	80-2060	Muffler	1	†39	805447	Screw – Cap Hex. Hd.	4
†15	805158	Screw	4	†40	805655	Gasket – Carburetor	1
†16	805023	Gasket – Exhaust	2	†42	808034	Screen – Rotating	1
17	2412-108	Clamp – Hose	1	†43	093847	Screw – Cap Hex. Hd.	2
18	38-3400	Guard – Rubber	1	46	85-8000	Engine Assembly	1
19	47-2964	Hose – Fuel	1	47	75-4705	Hose – Fuel	1
20	3296-29	Nut – Lock	4	48	85-8430	Base – Air Cleaner	1
21	88-8330	Cable – Negative	1	†49	807797	Shield – Carburetor Inlet	1
22	88-8390	Cover – Cable	1	†50	805057	Screw – Cap Hex. Hd.	2
23	3290-378	Tie – Cable	2	†51	394018	Element – Air Cleaner	1
24	3254-2	Washer – ITLW	1	†52	805631	Plate – Element	1
25	83-2420	Cable – Positive	1	53	92-2340	Cover	1
†26	805613	Pin – Pilot	1	54	3210-2	Screw – Cap Hex. Hd.	2
				*	83-2240	Arrester – Spark (Optional)	1

*Not Illustrated

†Contact your local Briggs & Stratton Dealer for part replacement.

‡For different language versions of this part, see International Decal Cross Reference.

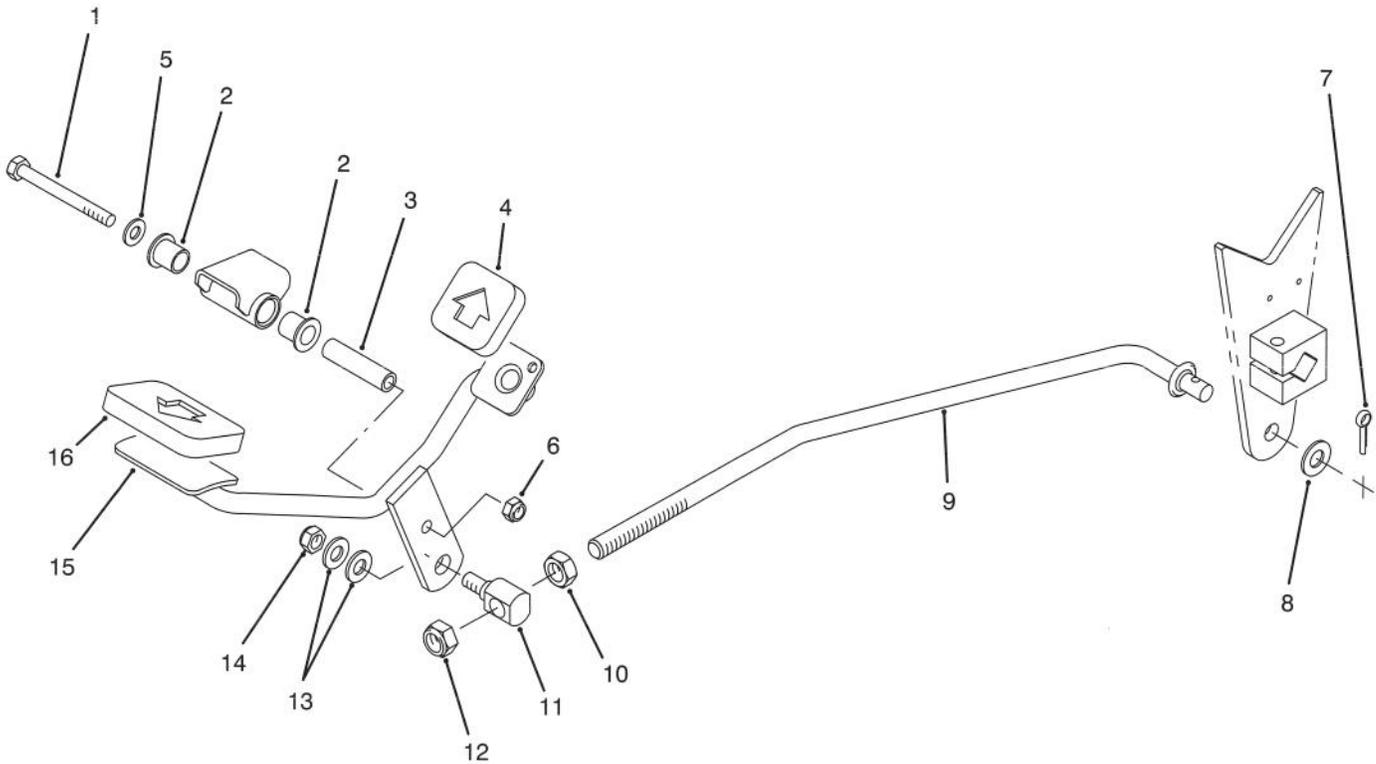


T-1476

TRACTION PEDAL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	322-14	Screw - Cap Hex. Hd.	1
2	256-219	Bushing - Flange	2
3	85-8960	Spacer	1
4	74-9110	Pad - Reverse	1
5	3256-23	Washer - Flat	1
6	3296-29	Nut - Lock	1
7	3272-16	Pin - Cotter	1
8	3256-26	Washer - Flat	1

Ref. No.	Part No.	Description	No. Used
9	85-8450	Rod - Control	1
10	3218-5	Nut - Jam	1
11	92-2344	Trunnion	1
12	3296-23	Nut - Lock	1
13	3256-24	Washer - Flat	2
14	3296-39	Nut - Lock	1
15	92-2343	Pedal Assembly	1
16	74-9100	Pad - Forward	1

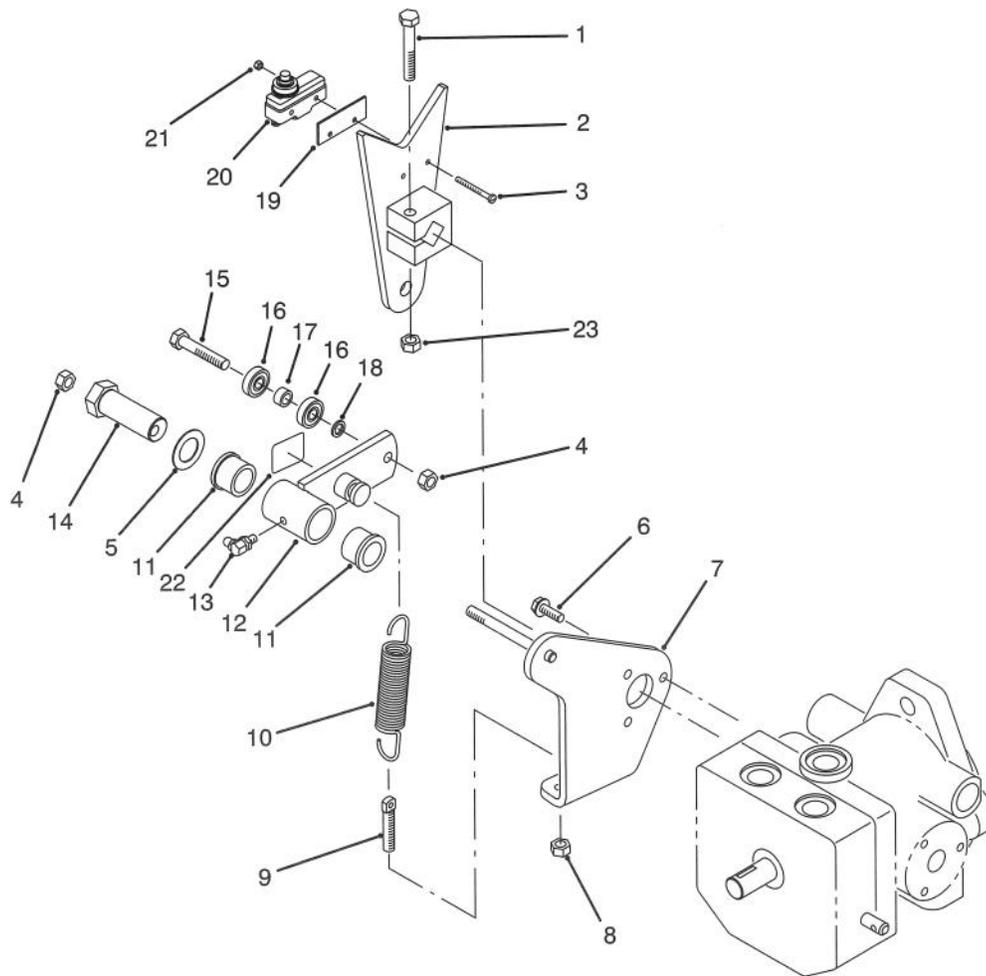


T-1480

PUMP CONTROL LEVER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	323-10	Screw - Cap Hex. Hd.	1	13	302-60	Fitting - Grease	1
2	85-8300	Lever - Pump	1	14	76-8640	Stud - Traction	1
3	32105-21	Screw - Machine	2	15	322-8	Screw - Cap Hex. Hd.	1
4	3296-29	Nut - Lock	2	16	251-259	Bearing	2
5	3-6498	Washer - Thrust	1	17	85-9120	Spacer	1
6	49-2040	Screw - Hex. Flange Hd.	3	18	75-5470	Spacer	1
7	85-8320	Plate - Pump	1	19	85-9150	Plate - Switch	1
8	3296-4	Nut - Lock	1	20	29-6163	Switch - Neutral	1
9	18-6380	Pin - Adjusting	1	21	3296-9	Nut - Lock	2
10	85-9030	Spring - Extension	1	‡22	85-8860	Decal - Eccentric Bolt (English)	1
11	256-113	Bushing - Flange	2	23	3296-39	Nut - Lock	1
12	85-8460	Switch Arm Assembly (Incl. Ref. #11 & 13)	1				

‡For different language versions of this part, see International Decal Cross Reference.

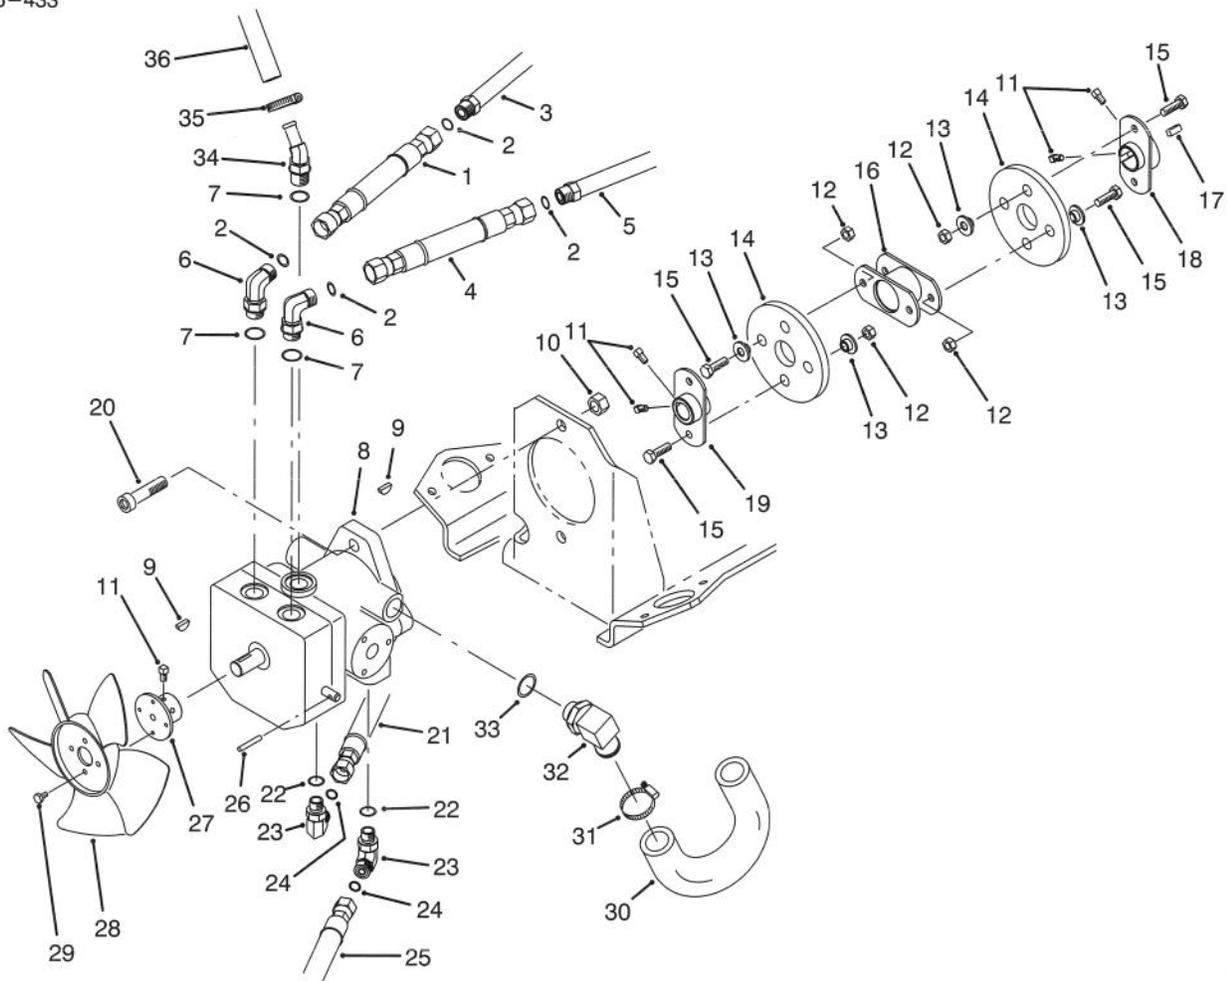


T-1475

HYDRAULIC PUMP INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	85-9620	Hose - Hydraulic	1
2	237-30	Seal - O-Ring	4
3	92-2348	Hydraulic Tube Assembly (Incl. Ref. #2)	1
4	85-9610	Hose - Hydraulic	1
5	85-9420	Hydraulic Tube Assembly (Incl. Ref. #2)	1
6	340-98	Fitting - Hydraulic 90° (Incl. Ref. #2 & 7)	2
7	237-79	Seal - O-Ring	3
8	92-9156	Hydraulic Pump Assembly (Incl. Ref. #9)	1
9	3257-32	Key - Woodruff	2
10	3296-23	Nut - Lock	2
11	3241-5	Screw - Set Sq. Hd.	6
12	3296-29	Nut - Hex.	8
13	27-6600	Spacer - Coupler	8
14	80-8650	Coupler - Rubber	2
15	322-4	Screw - Cap Hex. Hd.	8
16	85-8770	Coupling	1
17	85-9020	Key - Square	1
18	85-8730	Hub - Engine	1


Ref. No.	Part No.	Description	No. Used
19	85-8700	Hub - Pump	1
20	3274-5	Screw - Hex. Socket Hd.	2
21	85-9600	Hose - Hydraulic	1
22	237-42	Seal - O-Ring	2
23	340-77	Fitting - Hydraulic 90° (Incl. Ref. #22 & 24)	2
24	237-22	Seal - O-Ring	2
25	85-9590	Hose - Hydraulic	1
26	32121-6	Pin - Roll	1
27	85-8670	Hub - Fan	1
28	85-9560	Fan	1
29	32144-73	Screw - Cap Hex. Hd.	4
30	85-7680	Hose - Hydraulic	1
31	2412-34	Clamp - Hose	1
32	61-2710	Fitting - Hydraulic 90° (Incl. Ref. #33)	1
33	237-80	Seal - O-Ring	1
34	354-126	Fitting - Hydraulic 45° (Incl. Ref. #7)	1
35	2412-36	Clamp - Hose	1
36	85-9450	Hose - Hydraulic	1

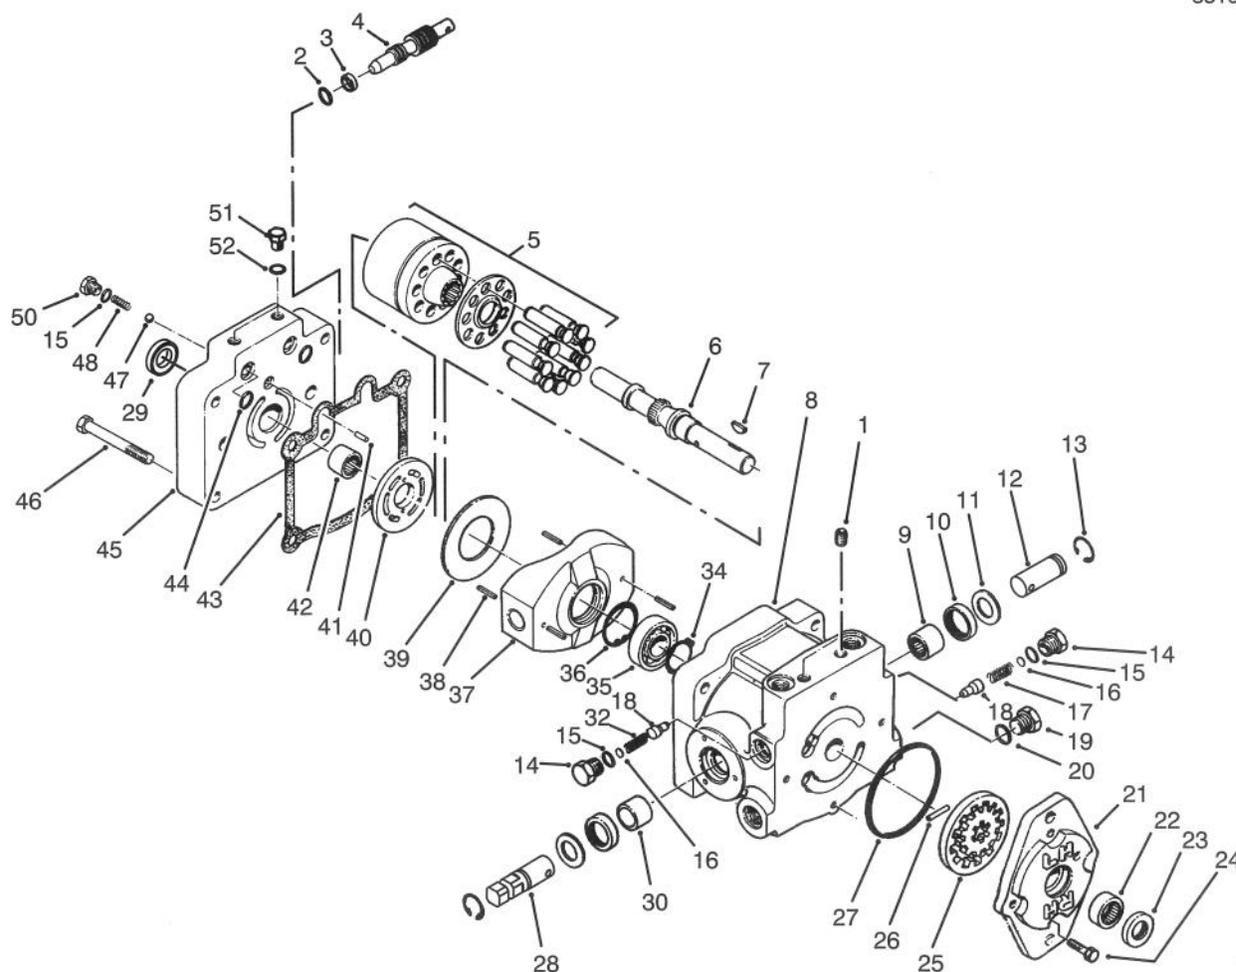

T-1853

HYDRAULIC PUMP ASSEMBLY NO. 92-9156

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	285-17	Plug - Pipe	2	25	25-2680	Gerotor Assembly	1
2	237-22	O-Ring	1	26	25-2530	Pin - Straight	1
3	25-2630	Ring	1	27	237-95	O-Ring	1
4	88-8220	Valve - By-Pass	1	28	88-8180	Shaft - Trunion	1
5	25-2600	Cylinder Block Kit	1	29	88-8230	Seal - Lip	1
6	88-8140	Shaft - Pump	1	30	88-8190	Bearing - Journal	1
7	3257-32	Key - Woodruff	1	32	25-2480	Spring - Charge Relief	1
8	88-8170	Kit - Housing	1	34	32120-15	Ring - Retaining	1
9	252-82	Bearing - Needle	1	35	251-8	Bearing - Ball	1
10	25-3210	Seal - Lip	2	36	32120-11	Ring - Retaining	1
11	25-2510	Washer	2	37	25-2450	Swashplate	1
12	88-8200	Shaft - Trunion	1	38	32121-91	Pin - Coiled Spring	3
13	32151-46	Ring - Retaining	2	39	25-2380	Plate - Thrust	1
14	25-2460	Plug	2	40	88-8160	Plate - Valve	1
15	237-86	O-Ring	4	41	25-2430	Pin - Straight	1
16	25-2470	Kit - Shim Pack	2	42	46-8400	Bearing - Needle	1
17	25-2570	Spring - Relief Valve	1	43	25-2400	Gasket	1
18	83-7260	Cone - Relief	2	44	237-30	O-Ring	2
19	88-8210	Plug Assembly (Incl. Ref. #20)	1	45	92-9074	Cap - Pump End	1
20	237-80	O-Ring	1	46	323-11	Screw - Cap Hex. Hd.	4
21	25-2690	Housing - Charge Pump	1	47	25-2490	Ball - Check Valve	2
22	67-8050	Bearing - Needle	1	48	25-2640	Spring - Check Valve	2
23	67-8060	Seal - Lip	1	50	25-2650	Plug - Check Valve	2
24	322-4	Screw - Cap Hex. Hd.	4	51	92-8776	Plug Assembly (Incl. Ref. #52)	2

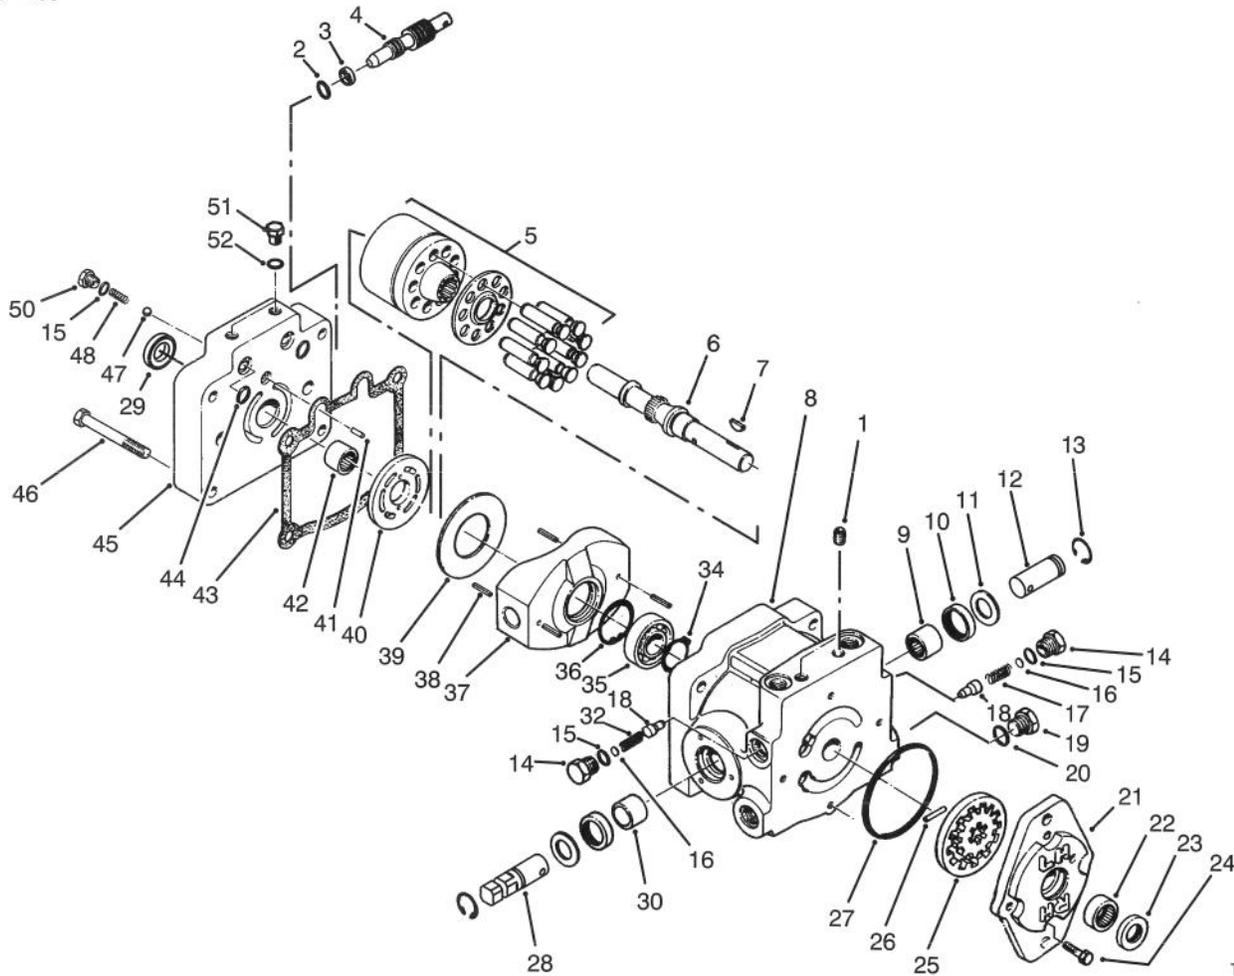


T-1853

HYDRAULIC PUMP ASSEMBLY NO. 92-9156 (Continued)

Ref. No.	Part No.	Description	No. Used
52	92-8777	Seal - O-Ring	2
*	25-3180	Kit - Check Valve (Incl. Ref. #15, 47, 48 & 50)	1

Ref. No.	Part No.	Description	No. Used
*	49-8520	Kit - Implement Relief (Incl. Ref. #14-18)	1
*	49-8510	Kit - Charge Relief (Incl. Ref. #14-16, 18 & 32)	1

*Not Illustrated

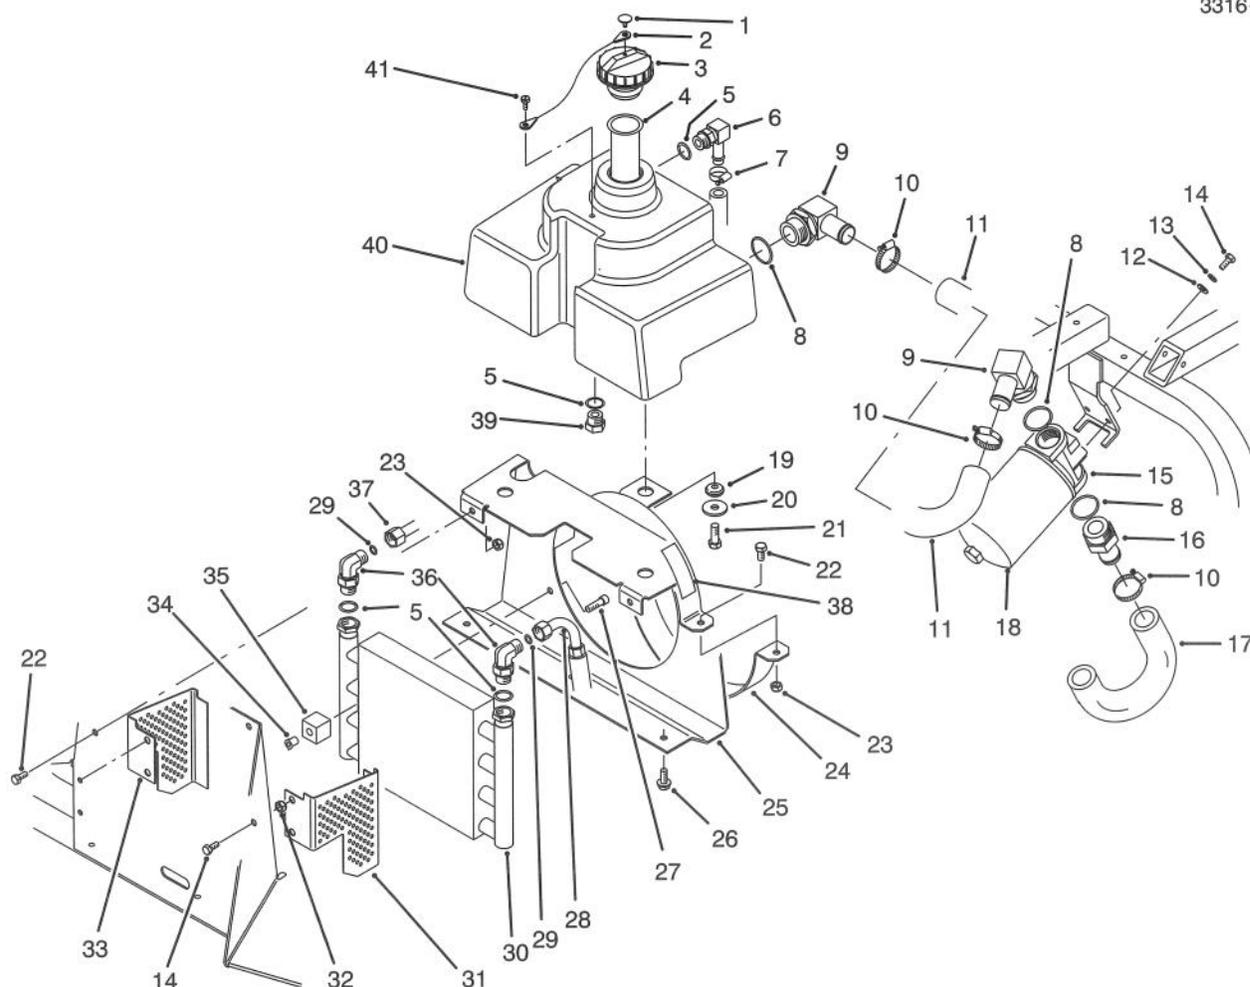


T-1473

HYDRAULIC RESERVOIR ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	2410-73	Retainer - Teather	1	23	3296-29	Nut - Lock	4
2	75-0540	Teather	1	24	85-8570	Shroud - Lower	1
3	86-4870	Reservoir Cap Assembly (Incl. Ref. #1 & 2)	1	25	14-7579	Cooler Mount Assembly (Incl. Ref. #38)	1
4	85-9510	Screen - Filler	1	26	32144-11	Screw - Thread Forming	3
5	237-79	Seal - O-Ring	4	27	3274-86	Screw - Hex. Socket Hd.	2
6	354-120	Fitting - Hydraulic 90° (Incl. Ref. #5)	1	28	85-9590	Hose - Hydraulic	1
7	2412-36	Clamp - Hose	1	29	237-22	Seal - O-Ring	2
8	237-146	Seal - O-Ring	3	30	85-9460	Cooler - Oil	1
9	23-8910	Fitting - Hydraulic 90° (Incl. Ref. #8)	2	31	88-8120	Screen Assembly L.H. (Incl. Ref. #32)	1
10	2412-34	Clamp - Hose	3	32	32148-6	Nut - Clinch	4
11	85-7610	Hose - Hydraulic	1	33	88-8110	Screen Assembly R.H. (Incl. Ref. #32)	1
12	3256-22	Washer - Flat	2	34	85-9670	Nut - T	2
13	3253-3	Washer - Lock	2	35	85-9550	Clamp - Rubber	2
14	321-3	Screw - Cap Hex. Hd.	6	36	340-18	Fitting - Hydraulic 90° (Incl. Ref. #5 & 29)	2
15	61-3770	Hydraulic Filter Head Assy.	1	37	92-2349	Tube - Hydraulic	1
16	354-78	Fitting - Hydraulic Straight (Incl. Ref. #8)	1	38	77-3100	Decal - Danger (English)	2
17	85-7680	Hose - Hydraulic	1	39	353-550	Plug - Hydraulic (Incl. Ref. #5)	1
18	23-9740	Element - Hydraulic Filter	1	40	92-8959	Reservoir - Hydraulic	1
19	240-11	Grommet	3	41	32105-13	Screw - Hex. Flange Hd.	1
20	63-8410	Washer - Flat	3				
21	323-5	Screw - Cap Hex. Hd.	3				
22	322-2	Screw - Cap Hex. Hd.	4				

‡For different language versions of this part, see International Decal Cross Reference.

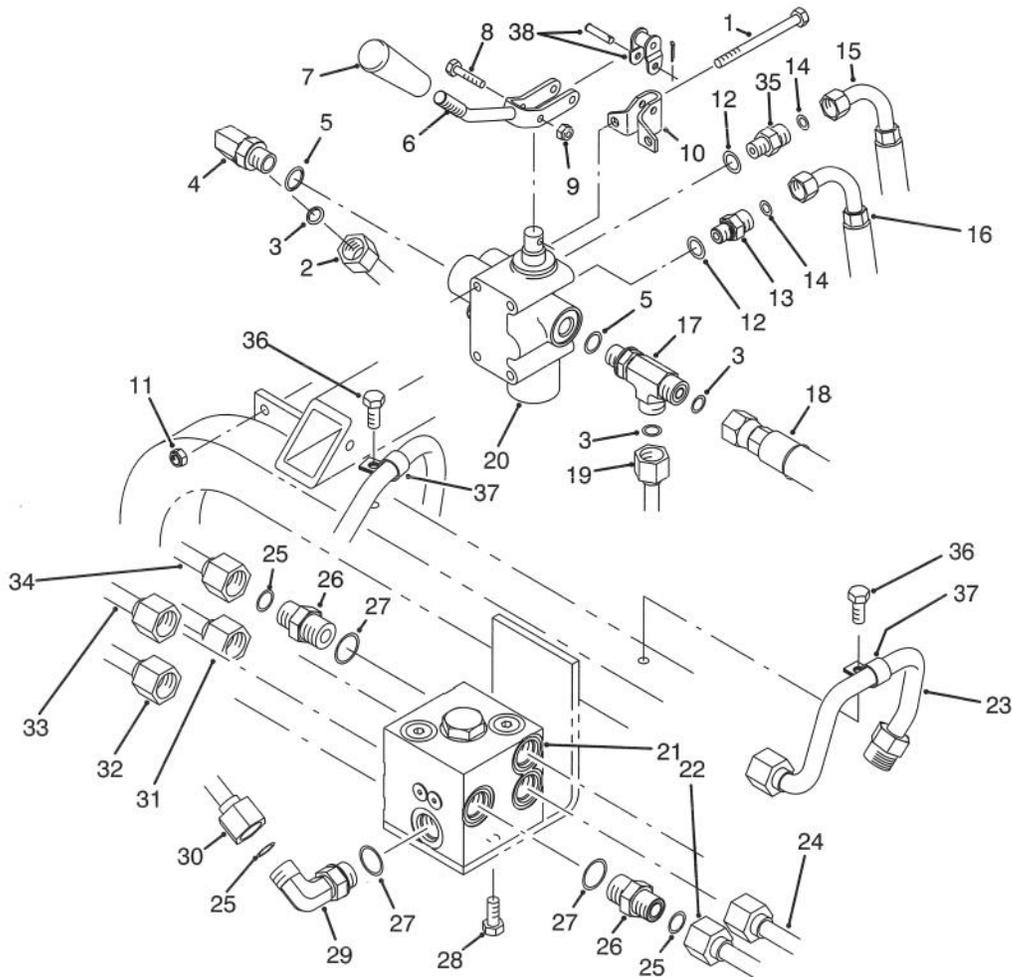


T-1477

HYDRAULIC MANIFOLD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	321-23	Screw - Cap Hex. Hd.	3
2	92-2349	Tube - Hydraulic	1
3	237-22	Seal-O-Ring	3
4	340-77	Fitting - Hydraulic 90° (Incl. Ref. # 3 & 5)	1
5	237-42	Seal-O-Ring	2
6	85-8900	Lever - Lift Valve	1
7	233-39	Handle	1
8	3290-360	Screw - Cap Hex. Hd.	2
9	3296-2	Nut - Lock	2
10	88-8480	Bracket - Pivot	1
11	3296-8	Nut - Lock	3
12	237-78	Seal-O-Ring	2
13	340-92	Fitting - Hydraulic Straight (Incl. Ref. #12 & 14)	1
14	237-21	Seal-O-Ring	2
15	85-9580	Hose - Hydraulic	1
16	85-9570	Hose - Hydraulic	1
17	340-86	Fitting - Hydraulic Tee (Incl. Ref. #3 & 5)	1
18	85-9600	Hose - Hydraulic	1
19	85-0380	Tube - Hydraulic	1

Ref. No.	Part No.	Description	No. Used
20	43-1950	Lift Valve Assembly	1
21	85-9470	Hydraulic Manifold Assembly	1
22	85-7760	Tube - Hydraulic	1
23	85-9420	Tube - Hydraulic	1
24	85-9390	Tube - Hydraulic	1
25	237-79	Seal-O-Ring	8
26	340-4	Fitting - Hydraulic Straight (Incl. Ref. #25 & 27)	7
27	237-30	Seal-O-Ring	8
28	322-3	Screw - Cap Hex. Hd.	2
29	340-98	Fitting - Hydraulic 90° (Incl. Ref. #25 & 27)	1
30	85-9360	Tube - Hydraulic	1
31	85-9410	Tube - Hydraulic	1
32	85-9400	Tube - Hydraulic	1
33	92-2348	Tube - Hydraulic	1
34	85-9370	Tube - Hydraulic	1
35	85-9720	Fitting - Hydraulic Orificed (Incl. Ref. #12 & 14)	1
36	32144-11	Screw - Thread Forming	2
37	2412-138	Clamp - R	2
38	2710-20	Link - Offset	1

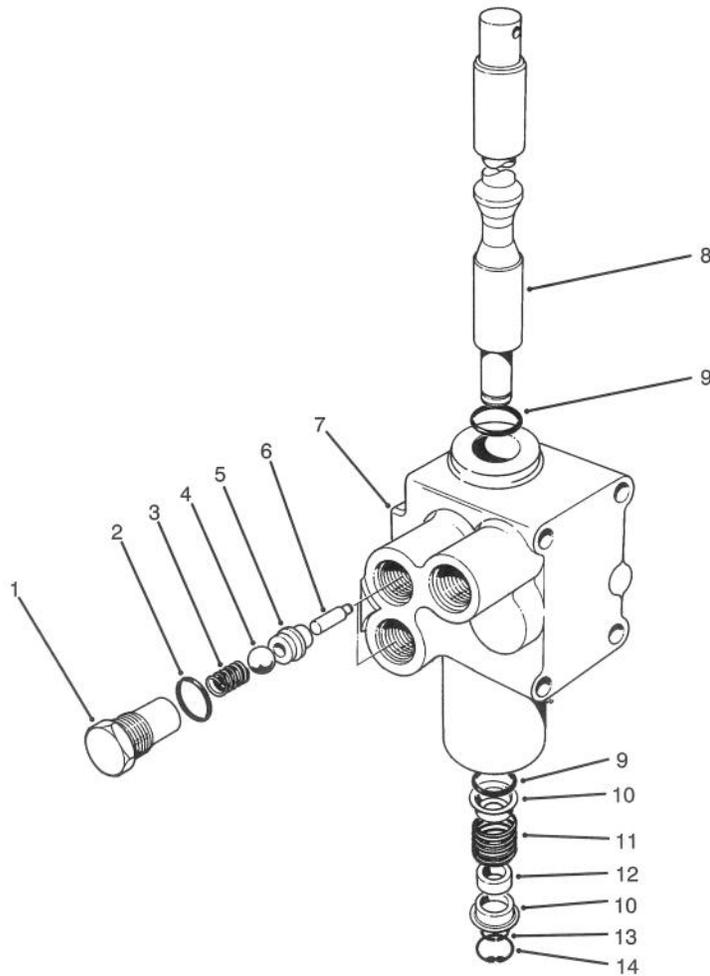



T-0236

CONTROL VALVE ASSEMBLY NO. 43-1950

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	22-8330	Plug	2	8	22-8420	Spool	1
2	237-42	O-Ring	2	9	22-8500	O-Ring	2
3	22-8340	Spring	2	10	22-8380	Retainer - Spring	2
4	22-8350	Ball	2	11	22-8410	Spring	1
5	22-8370	Seat - Check Valve	2	12	23-3030	Spacer	1
6	22-8360	Pin - Cam	2	13	22-8480	Ring - Retaining, Spool	1
7		Body	1	14	22-8490	Ring - Retaining	1

HYDRAULIC SCHEMATIC

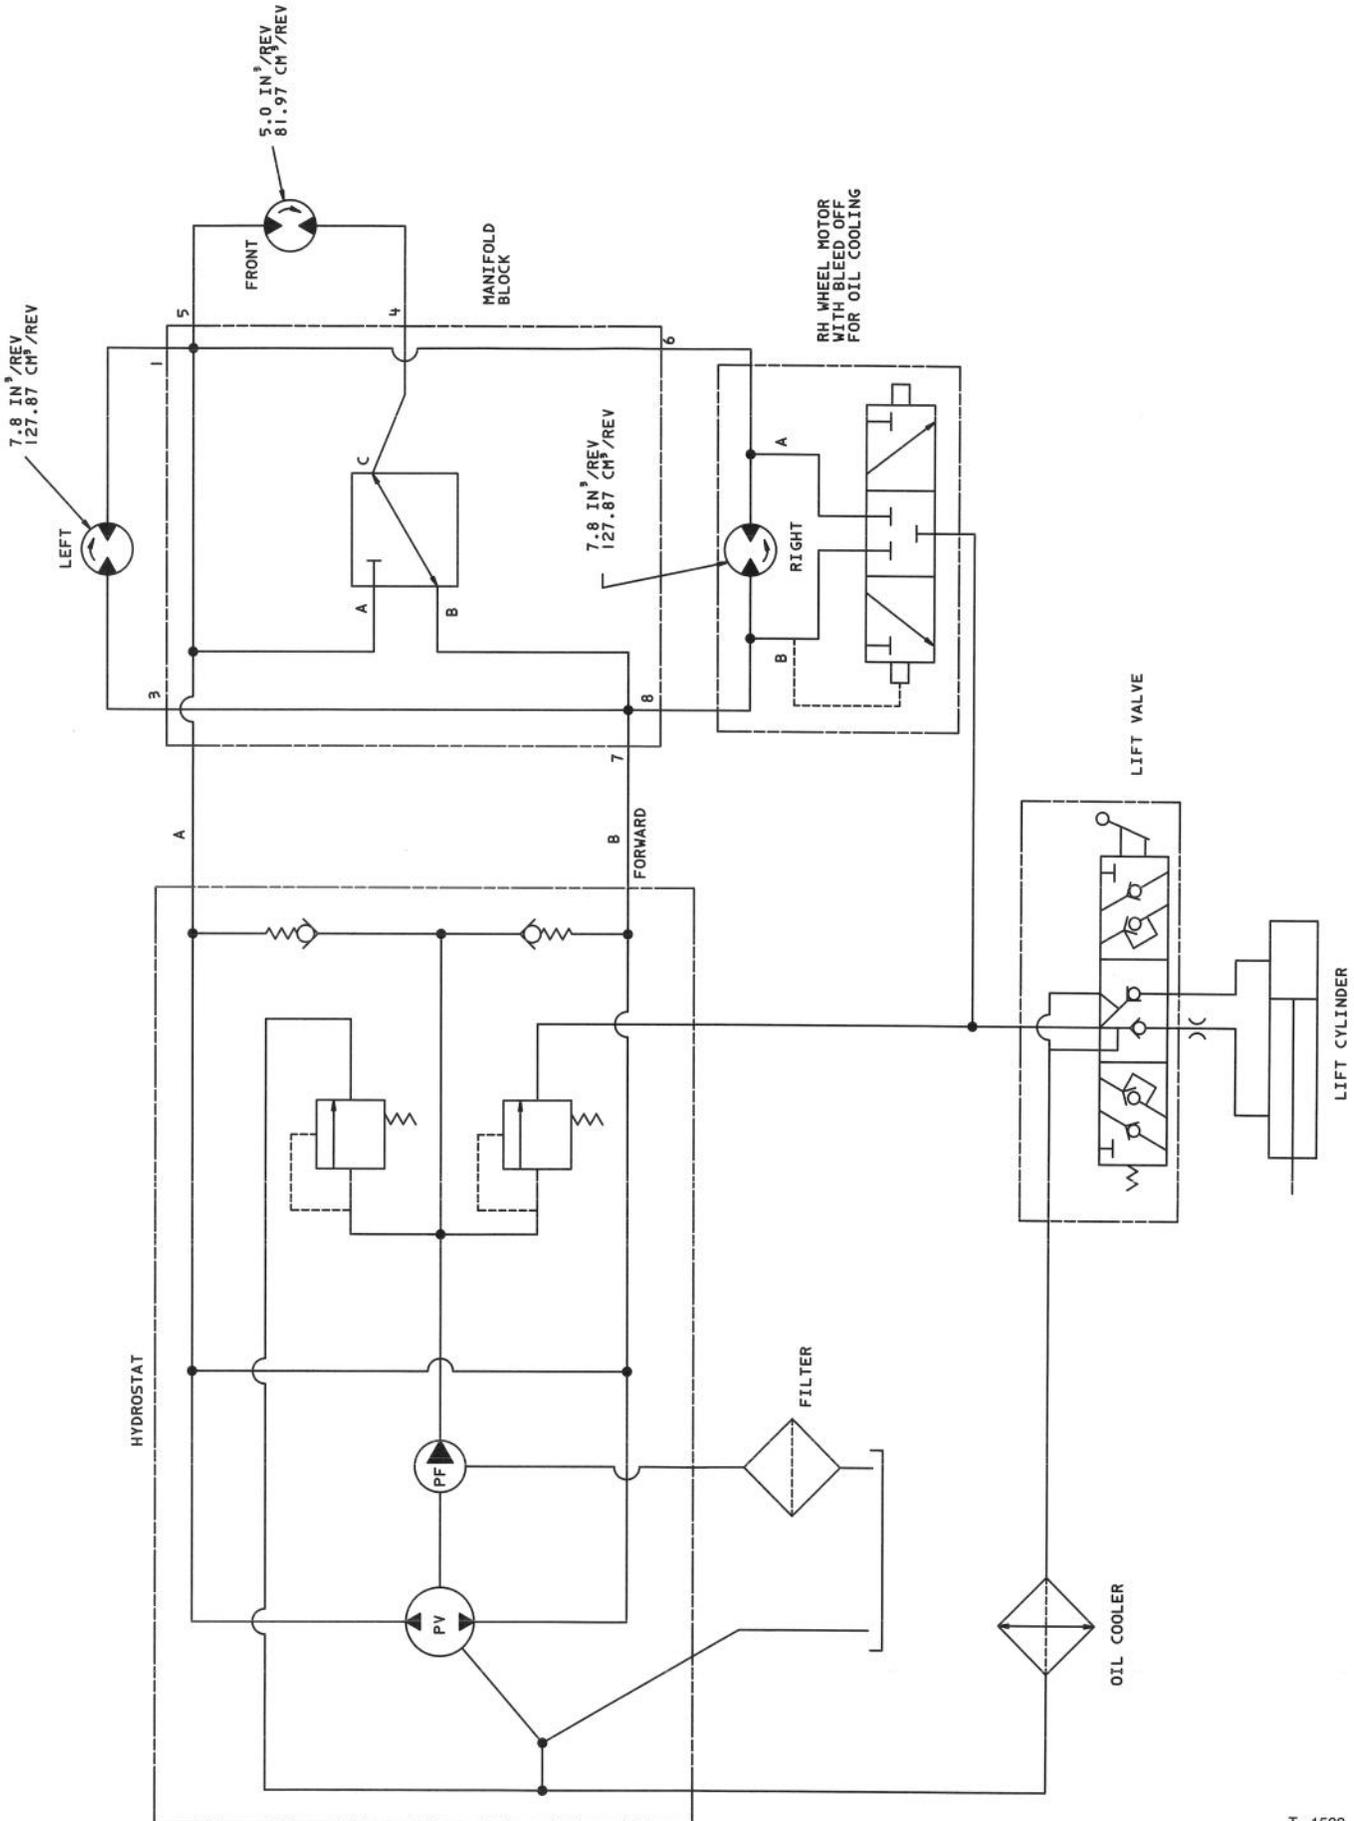

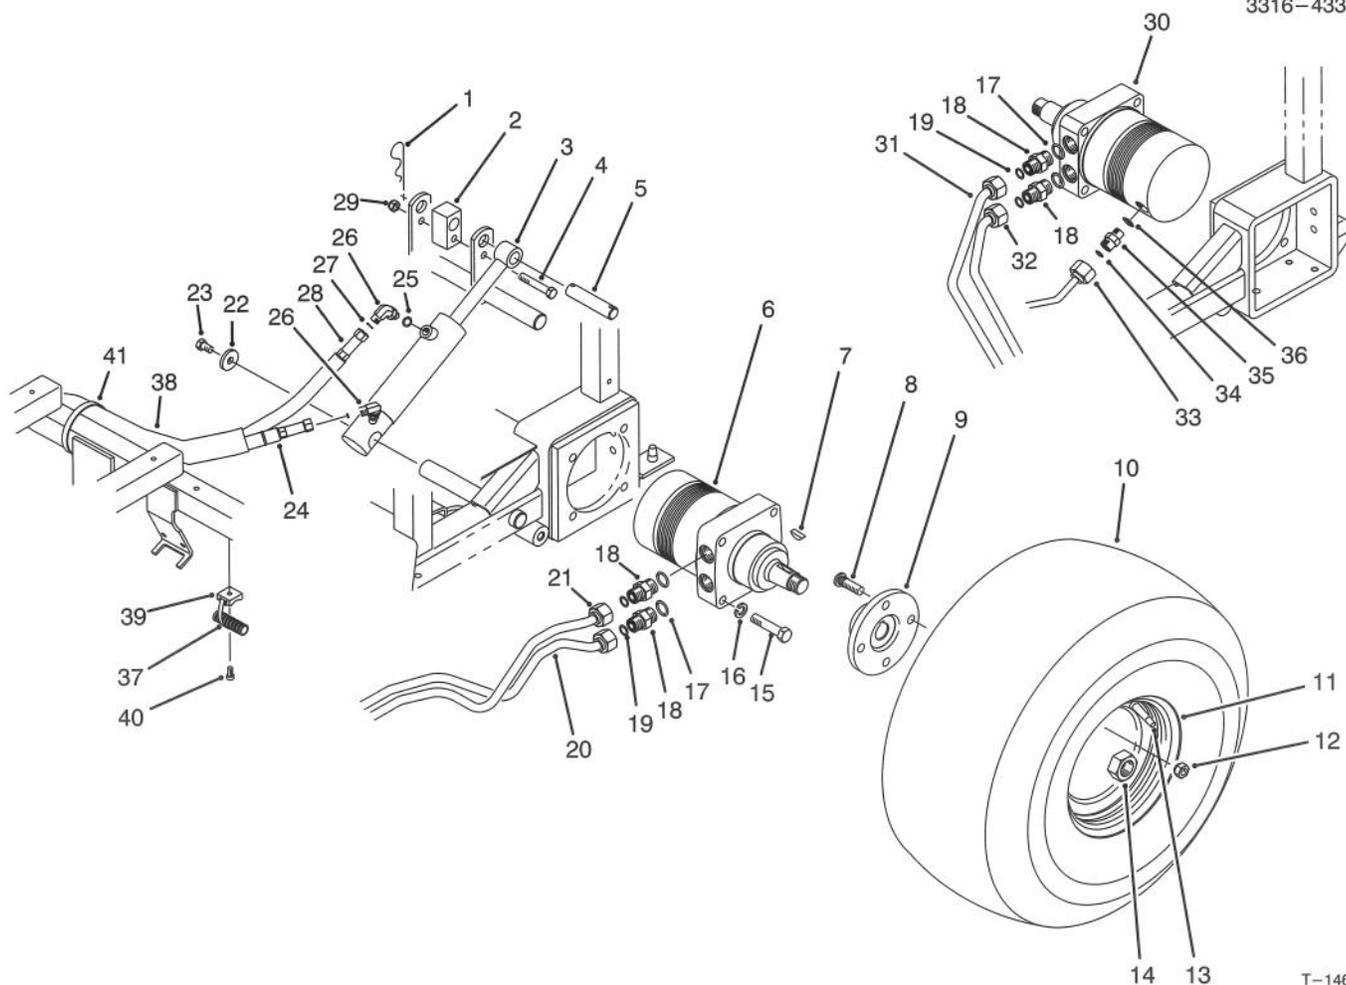


REAR WHEEL & LIFT ASSEMBLY

T-1469

Ref. No.	Part No.	Description	No. Used
1	3290-256	Pin - Hair	2
2	85-9160	Spacer	1
3	83-7000	Cylinder Assembly	1
4	323-11	Screw - Cap Hex. Hd.	1
5	85-9170	Pin - Cylinder	1
6	75-9831	Hydraulic Motor Assy. L.H. (Incl. Ref. #7)	1
7	3257-42	Key - Woodruff	2
8	10-6830	Stud - Drive	8
9	17-4710	Hub - Wheel	2
10	85-8290	Tire	2
11	46-4810	Rim	2
12	242-50	Nut - Lock	8
13	232-35	Valve - Stem	2
14	26-3790	Nut - Lock	2
15	325-9	Screw - Cap Hex. Hd.	8
16	3253-7	Washer - Lock	8
17	237-80	Seal - O-Ring	4
18	340-6	Fitting - Hydraulic Straight (Incl. Ref. #17 & 19)	4
19	237-30	Seal - O-Ring	4
20	85-9390	Tube - Hydraulic	1
21	85-7760	Tube - Hydraulic	1

Ref. No.	Part No.	Description	No. Used
22	53-6380	Washer	1
23	323-34	Screw - Cap Hex. Hd.	1
24	85-9580	Hose - Hydraulic	1
25	237-78	Seal - O-Ring	2
26	340-132	Fitting - Hydraulic 90° (Incl. Ref. #25 & 27)	2
27	237-21	Seal - O-Ring	2
28	85-9570	Hose - Hydraulic	1
29	3296-39	Nut - Lock	1
30	75-9840	Hydraulic Motor Assy. R.H. (Incl. Ref. #7)	1
31	85-9400	Tube - Hydraulic	1
32	85-9410	Tube - Hydraulic	1
33	85-0380	Tube - Hydraulic	1
34	237-22	Seal - O-Ring	1
35	340-2	Fitting - Hydraulic Straight (Incl. Ref. #34 & 36)	1
36	237-42	Seal - O-Ring	1
37	3290-378	Tie - Cable	3
38	56-7981	Sleeve - Protective	1
39	3290-509	Mount - Tie	3
40	3274-31	Screw - Hex. Socket Hd.	3
41	3334-945	Tie - Cable	1

*Not Illustrated

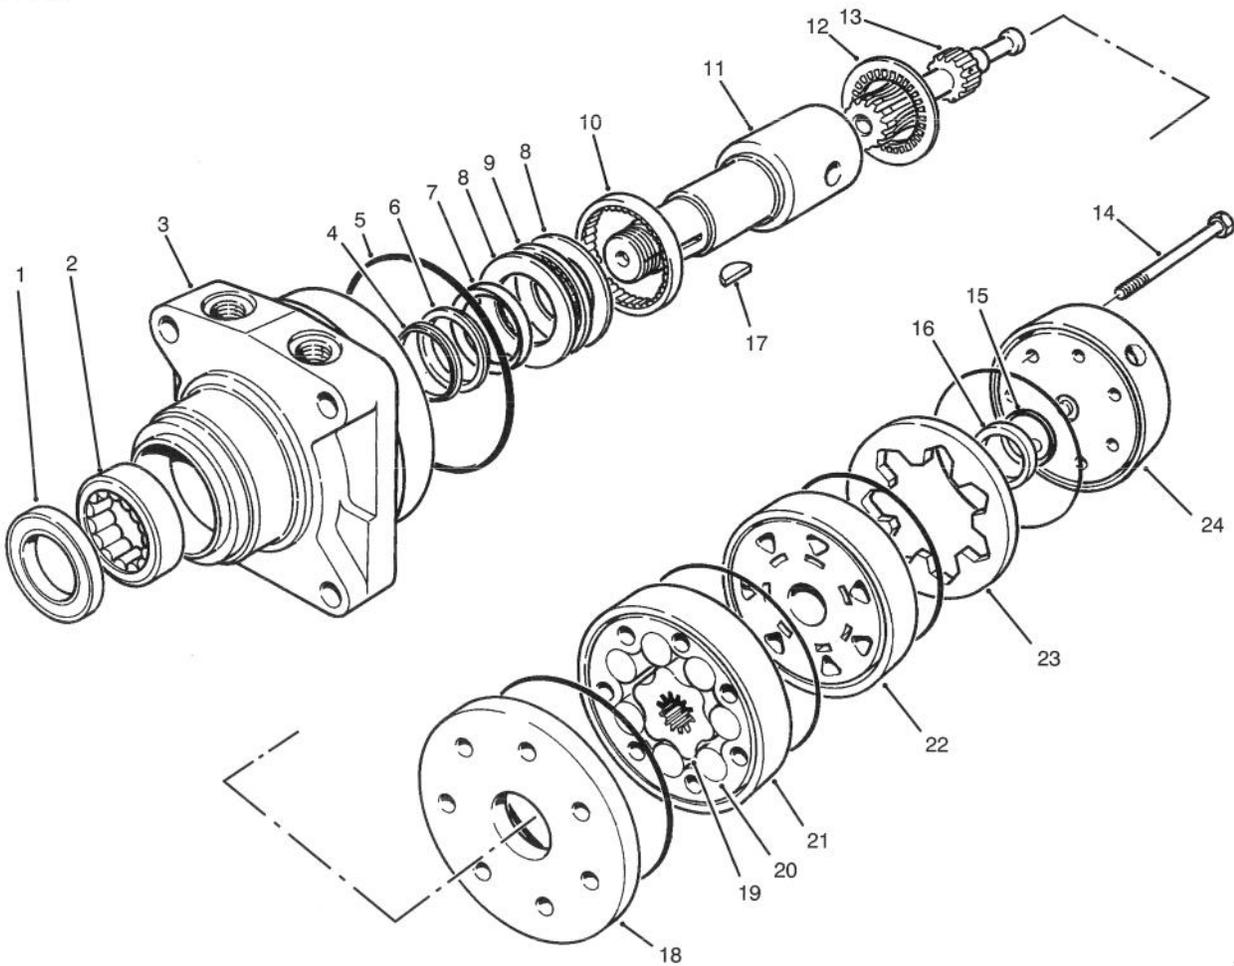


T-0983

LEFT REAR HYDRAULIC MOTOR ASSEMBLY NO. 75-9831

Ref. No.	Part No.	Description	No. Used
1		Seal - Dirt & Water	1
2		Bearing	1
3		Housing	1
4		Washer - Backup	1
5		Seal - Rings	5
6		Washer - Backup	1
7		Seal - Inner	1
8		Washer - Thrust	2
9		Bearing - Thrust	1
10		Bearing	1
11	76-0860	Shaft - Coupling	1
12	76-0850	Bearing - Thrust	1
13	76-0820	Link - Drive	7
14	76-1020	Screw - Cap, Hex. Hd.	1
15		Seal - Commutator	1
16		Commutator	1

Ref. No.	Part No.	Description	No. Used
17	3257-42	Key - Woodruff	1
18	76-0870	Plate - Wear	1
19		Rotor	1
20		Vane	7
21		Stator	1
22	76-0840	Manifold	1
23		Ring - Commutator	1
24	76-0940	Assembly - Cover, End	1
*	76-0830	Rotor Set (Incl. Ref. #19-21)	1
*	76-0880	Assembly - Commutator (Incl. Ref. #15, 16 & 23)	1
*	76-0800	Kit - Seal (Incl. Ref. #1, 4-7 & 15)	1
*	76-0810	Assembly - Housing (Incl. Ref. #2, 3 & 8-10)	1

*Not Illustrated

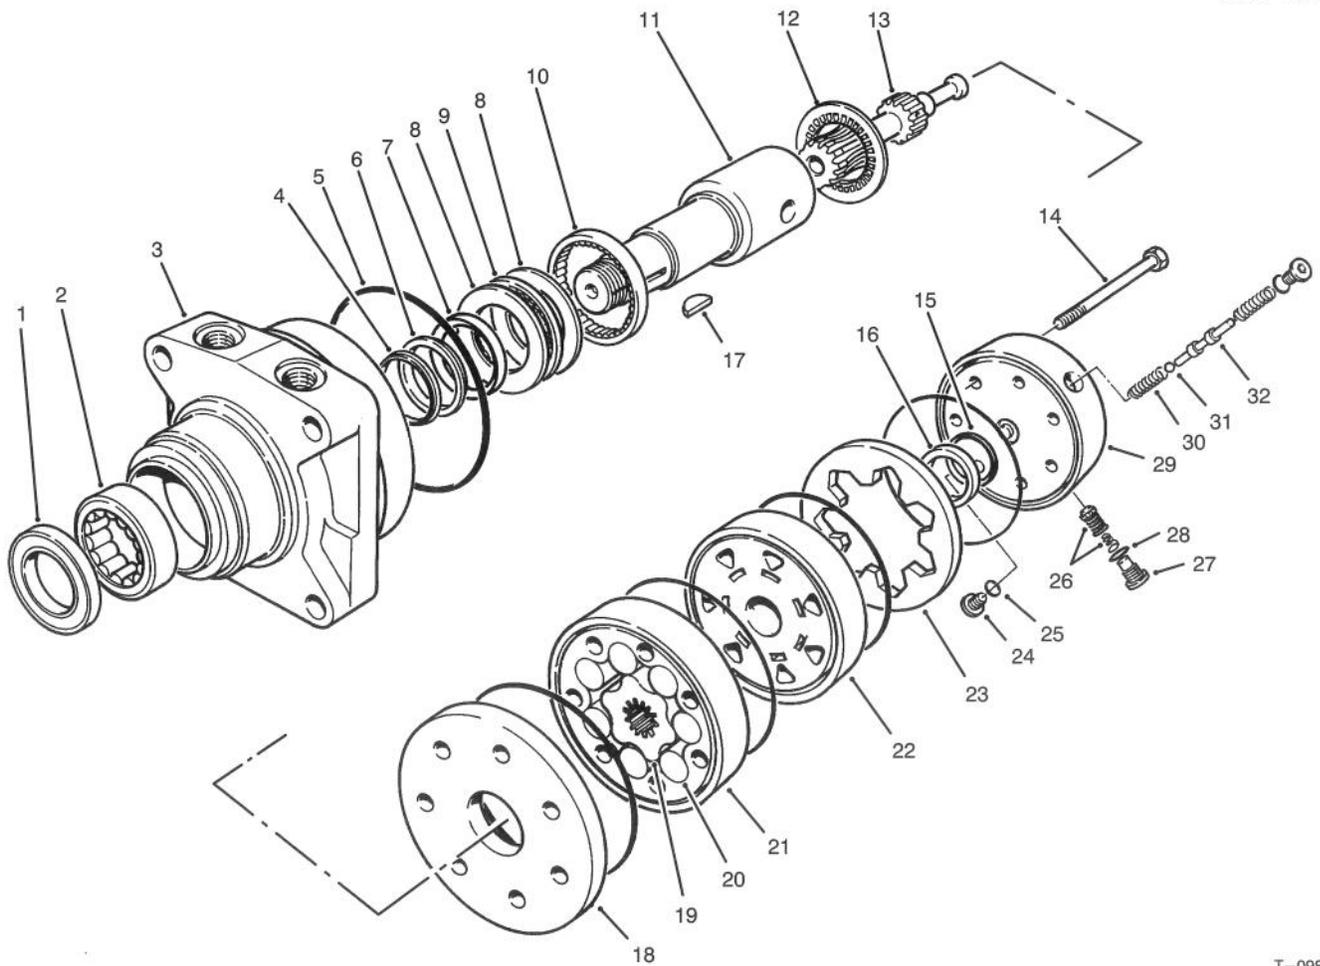


RIGHT REAR HYDRAULIC MOTOR ASSEMBLY NO. 75-9840

T-0982

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1		Seal - Dirt & Water	1	22	76-0840	Manifold	1
2		Bearing	1	23		Ring - Commutator	1
3		Housing	1	24		Plug	2
4		Washer - Backup	1	25		O-Ring	2
5		Seal - Rings	5	26		Valve - Relief	1
6		Washer - Backup	1	27		Plug	1
7		Seal - Inner	1	28		O-Ring	1
8		Washer - Thrust	2	29	76-0890	Assembly	
9		Bearing - Thrust	1			(Incl. Ref. #24-25 & 30-32)	1
10		Bearing	1	30		Spring	2
11	76-0860	Shaft - Coupling	1	31		Ball	1
12	76-0850	Bearing - Thrust	1	32		Valve - Shuttle	1
13	76-0820	Link - Drive	1	*	76-0830	Rotor Set	
14	76-1040	Screw - Cap, Hex. Hd.	7			(Incl. Ref. #19-21)	1
15		Seal - Commutator	1	*	76-0880	Assembly - Commutator	
16		Commutator	1			(Incl. Ref. #15, 16 & 23)	1
17	3257-42	Key - Woodruff	1	*	76-0800	Kit - Seal	
18	76-0870	Plate - Wear	1			(Incl. Ref. #1, 4-7 & 15)	1
19		Rotor	1	*	76-0810	Assembly - Housing	
20		Vane	7			(Incl. Ref. #2, 3 & 8-10)	1
21		Stator	1				

*Not Illustrated

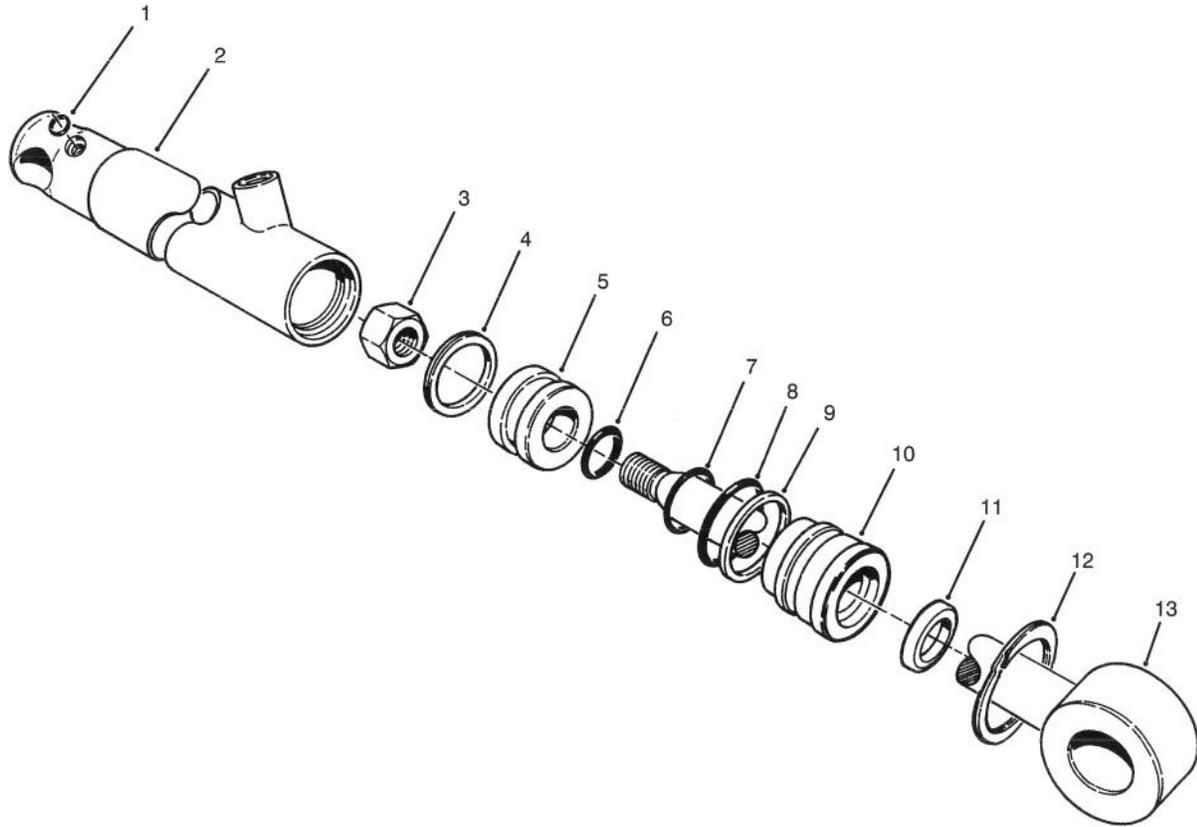


T-0217

HYDRAULIC LIFT CYLINDER ASSEMBLY NO. 83-7000

Ref. No.	Part No.	Description	No. Used
1	237-78	O-Ring	2
2	43-5260	Barrel w/Clevis & Ports	1
3	32152-10	Nut	1
4		Uniring - Grooved	1
5	70-2780	Piston	1
6		O-Ring	1
7		Poly-Pack	1
8		O-Ring	1

Ref. No.	Part No.	Description	No. Used
9		Back-Up	1
10	70-2770	Head	1
11		Seal - Dust	1
12	43-5220	Ring - Retaining	1
13	43-5230	Shaft with Clevis	1
14	83-7250	Seal Repair Kit (Incl. Ref. #4, 6-9 & 11)	1

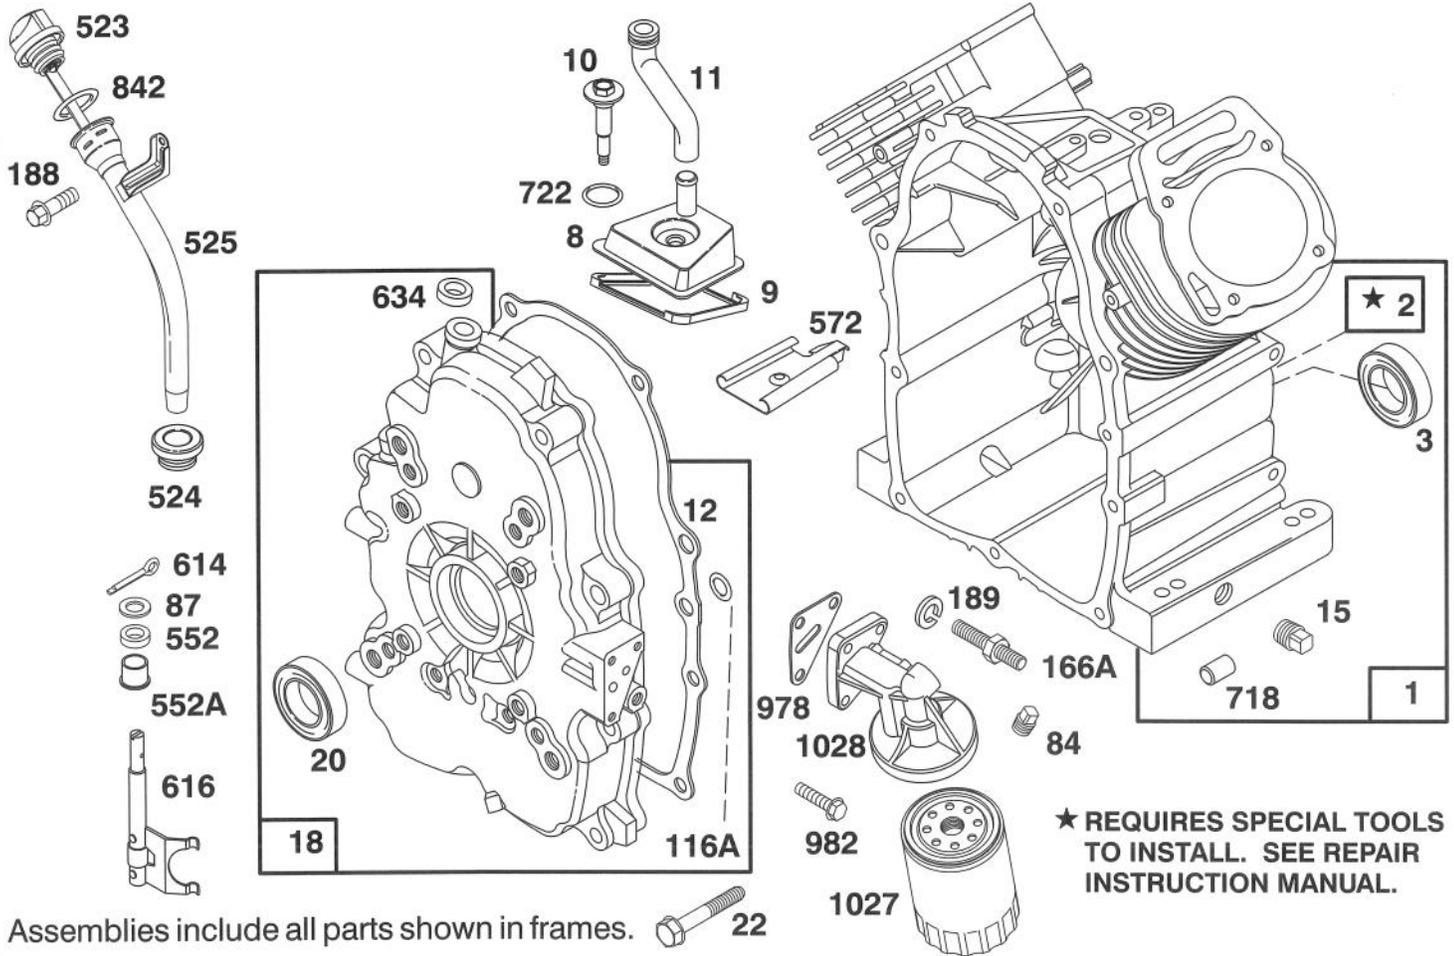


Assemblies include all parts shown in frames. 22

ENGINE BRIGGS & STRATTON MODEL 303447-0480-01

Ref. No.	Part No.	Description	No. Used
1	807521	Cylinder Assembly	
2	805107	Bearing - Cylinder	
*3	805101	Seal - Oil	
8	807795	Breather Assembly	
*9	805379	Gasket - Breather	
10	805751	Screw - Hex. Washer Head	
11	805362	Tube - Breather	
*12	805112	Gasket - Crankcase Cover	
15	805048	Plug - Oil Drain	
18	807628	Cover Assembly - Crankcase	
*20	805049	Seal - Oil	
22	805696	Screw - Crankcase Cover	
84	91488	Plug - Pipe	
*87	805054	Seal - Governor Shaft	
*116A	805198	O-Ring (Crankcase Cover)	
166A	805073	Stud - Oil Filter Adapter	
188	805247	Screw - Hex. Head	

Ref. No.	Part No.	Description	No. Used
189	805449	Lockwasher	
523	807977	Dipstick	
*524	805259	Seal - Filler Tube	
525	807584	Tube - Oil Filler	
552	805412	Bushing - Governor Shaft	
552A	805413	Bushing - Governor Shaft	
572	805197	Baffle - Breather	
614	805417	Pin - Cotter	
616	807596	Fork - Governor	
634	805416	Washer - Governor Shaft	
718	805103	Dowel - Crankcase	
*722	805483	Seal - Breather Screw	
*842	805386	O-Ring	
*978	805250	Gasket - Oil Filter Adapter	
982	805030	Screw	
1027	492932	Filter - Oil	
1028	805292	Adapter - Oil Filter	

*Included in Gasket Set - Part No. 807989.

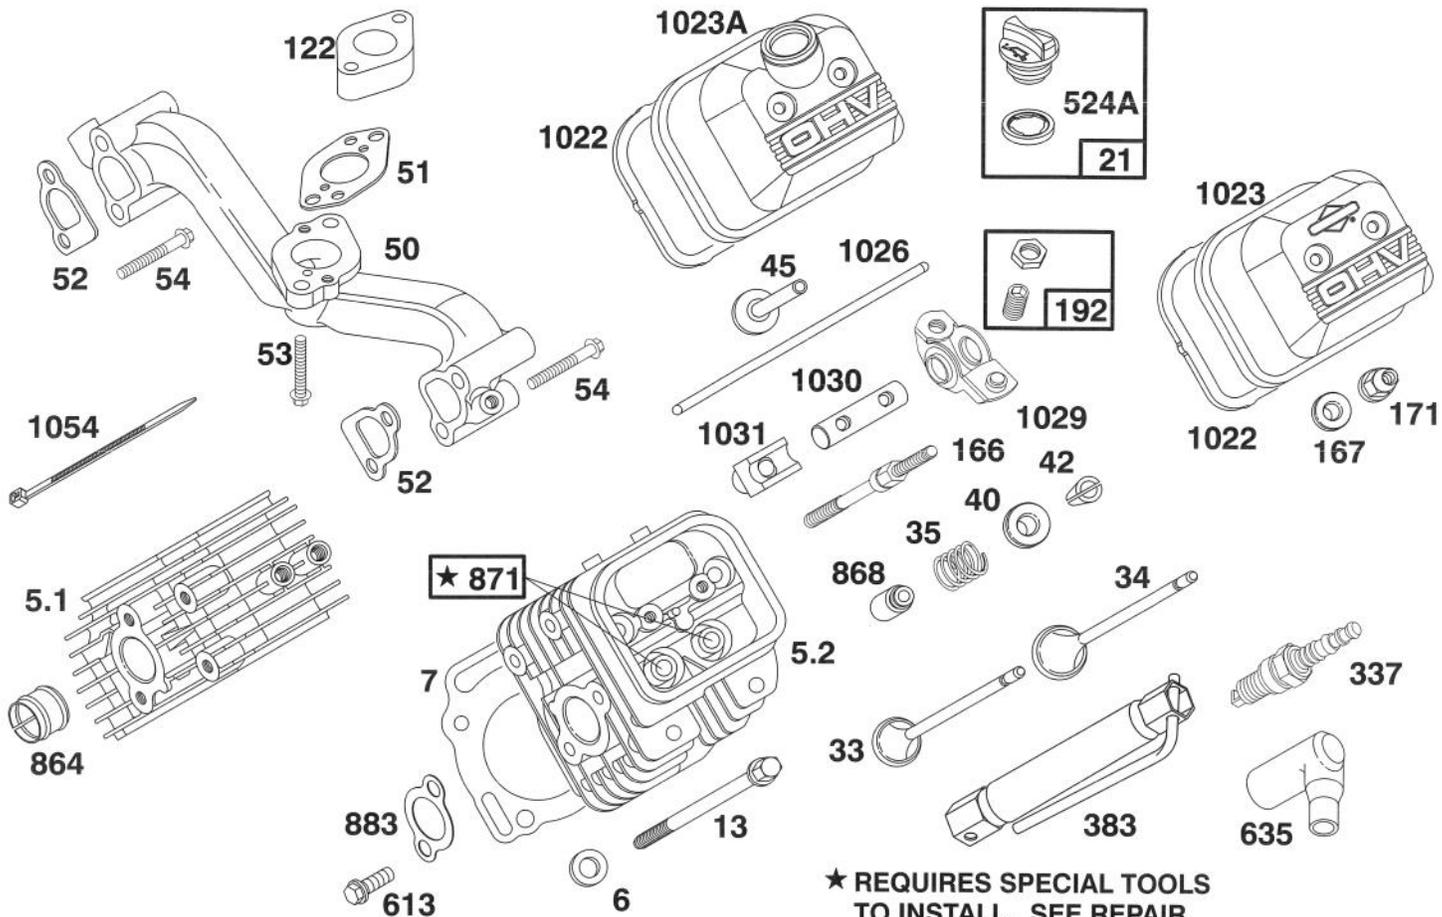

Assemblies include all parts shown in frames.

★ REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.


ENGINE BRIGGS & STRATTON MODEL 303447-0480-01

Ref. No.	Part No.	Description	No. Used
5.1	807987	Head - Cylinder (Cyl. #1)	
5.2	807988	Head - Cylinder (Cyl. #2)	
‡6	805193	Washer - Cylinder Head	
*‡7	807986	Gasket - Cylinder Head	
13	805097	Screw - Cylinder Head	
21	491832	Plug - Oil Filler	
33	805089	Valve - Exhaust	
34	805090	Valve - Intake	
35	805078	Spring - Valve	
40	805092	Retainer - Valve Spring	
42	805161	Retainer - Valve	
45	805354	Tappet - Valve	
50	805772	Manifold - Intake	
*51	805700	Gasket - Carburetor Mtg.	
*‡52	805023	Gasket - Intake Manifold	
53	805466	Screw	
54	805006	Screw	
122	805328	Spacer - Carburetor	
166	805343	Stud - Rocker Arm	
*‡167	805420	Washer - Valve Cover	
‡171	805019	Nut - Nylock	
192	807623	Screw - Valve Adjustment	

Ref. No.	Part No.	Description	No. Used
		(Incl. Jam Nut)	
337	496018	Plug - Spark	
383	19374	Wrench - Spark Plug	
*‡524A	271983	Seal - Filler Plug	
613	805158	Screw	
635	805529	Elbow - Spark Plug	
864	805083	Liner - Exhaust Port	
868	805094	Seal - Valve Guide	
871	805084	Guide - Valve	
*‡883	805024	Gasket - Exhaust Manifold	
*‡1022	805028	Gasket - Valve Cover	
1023	805100	Cover - Valve	
1023A	808032	Cover - Valve	
		Used on Cyl. #	
1026	805352	Rod - Push	
		Note: 805617 Rod - Push	
		Used on Exhaust Side Only.	
1029	807557	Arm - Rocker	
1030	805342	Shaft - Rocker Arm	
1031	805341	Support - Rocker Arm	
1054	280275	Tie - Cable	

*Included in Gasket Set - Part No. 807989.

‡Included in Valve Overhaul Kit - Part No. 807990.

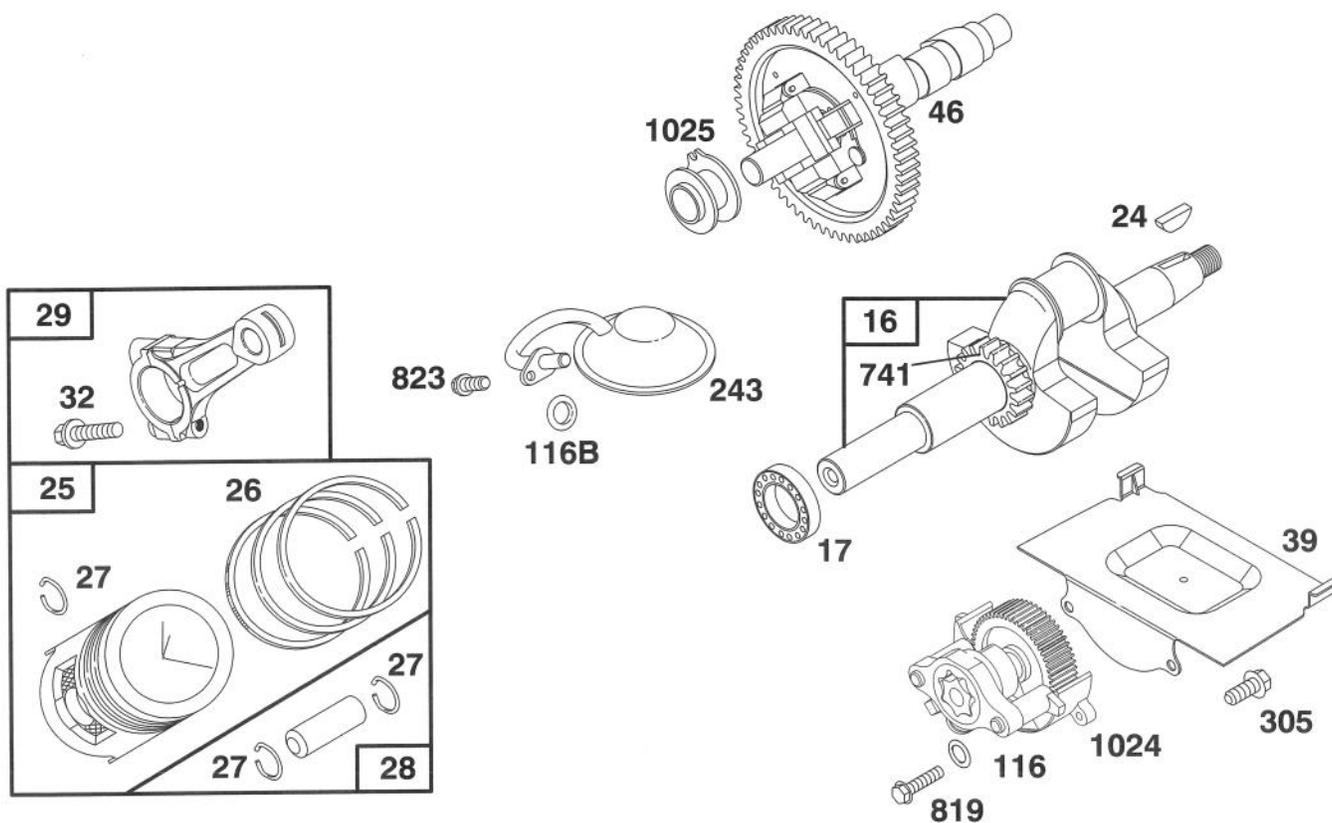





Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 303447-0480-01

Ref. No.	Part No.	Description	No. Used
16	808056	Crankshaft Note: To Replace Crankshaft Timing Gear Key Order Part No. 94196.	
		807625 Washers – Thrust	
17	805754	Bearing – Ball	
24	805016	Key – Flywheel	
25	807619	Piston Assembly (Standard)	
	807807	Piston Assembly .010 O.S.	
	807809	Piston Assembly .020 O.S.	
	807811	Piston Assembly .030 O.S.	
26	807620	Ring Set – Piston (Standard)	
	807808	Ring Set – Piston .010 O.S.	
	807810	Ring Set – Piston .020 O.S.	
	807812	Ring Set – Piston .030 O.S.	

Ref. No.	Part No.	Description	No. Used
27	805099	Lock – Piston Pin	
28	807621	Piston Pin Assembly	
29	807900	Connecting Rod Assembly	
32	805395	Screw – Connecting Rod	
39	805654	Deflector – Oil	
46	807542	Gear – Cam	
*116	805058	O-Ring (Oil Pump)	
*116B	805316	O-Ring (Pick – Up Tube)	
243	807598	Screen – Oil Pump Pick-Up	
305	805406	Screw	
741	805675	Gear – Timing	
819	805057	Screw	
823	805317	Screw – Mounting	
1024	807644	Oil Pump Assembly	
1025	805313	Slider – Governor	

*Included in Gasket Set – Part No. 807989.

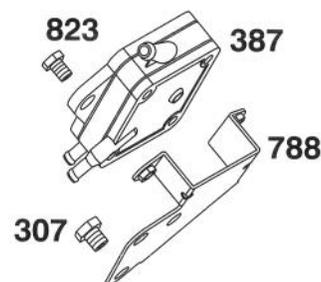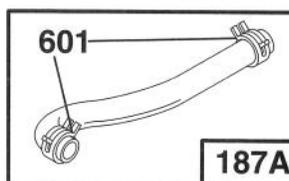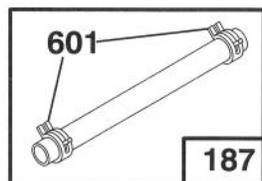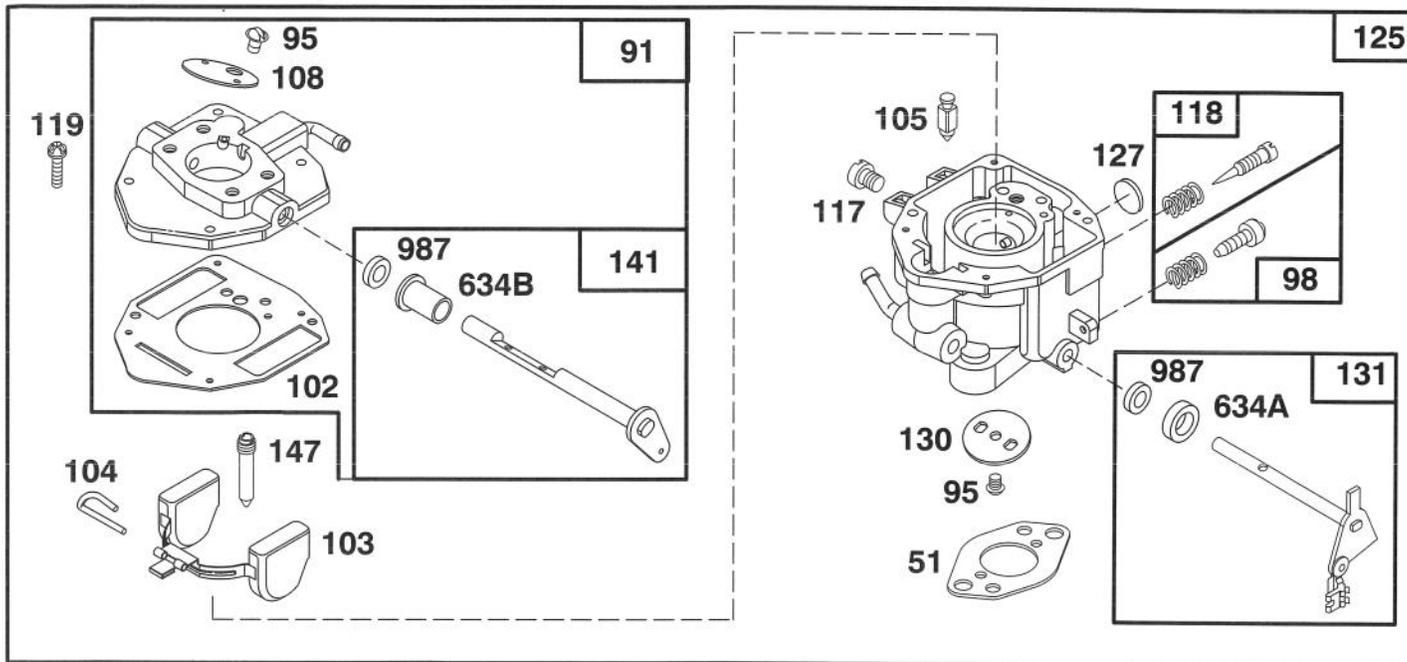


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 303447-0480-01

Ref. No.	Part No.	Description	No. Used
*51	805700	Gasket - Carburetor Mtg.	
91	807919	Body - Upper Carburetor	
95	805538	Screw - Valve Mtg.	
98	807718	Screw - Throttle Adj.	
†102	805541	Gasket - Intake Elbow	
103	805546	Float Assembly	
†104	805545	Pin - Float Hinge	
†105	805547	Valve - Fuel Inlet	
108	805539	Valve - Choke	
†117	805853	Jet - Main	
†118	807719	Valve - Idle Adjust Needle	
119	805540	Screw - Upper Body Mtg.	
125	807918	Carburetor Assembly	
†127	805559	Plug - Welch	
130	805554	Valve - Throttle	

Ref. No.	Part No.	Description	No. Used
131	807720	Shaft - Throttle	
141	807722	Shaft - Choke	
†147	805553	Jet - Slow Speed	
187	393815	Hose - Fuel (Cut to Suit)	
187A	398367	Hose - Fuel	
307	805025	Screw	
387	491922	Pump - Fuel	
601	93053	Clamp - Hose	
†634A	805557	Collar - Throttle	
634B	805543	Collar - Choke	
788	807685	Bracket - Fuel Pump	
823	805317	Screw - Mounting	
947	807664	Solenoid	
†987	805544	Seal - Shaft	

†Included in Carburetor Kit - Part No. 807726.

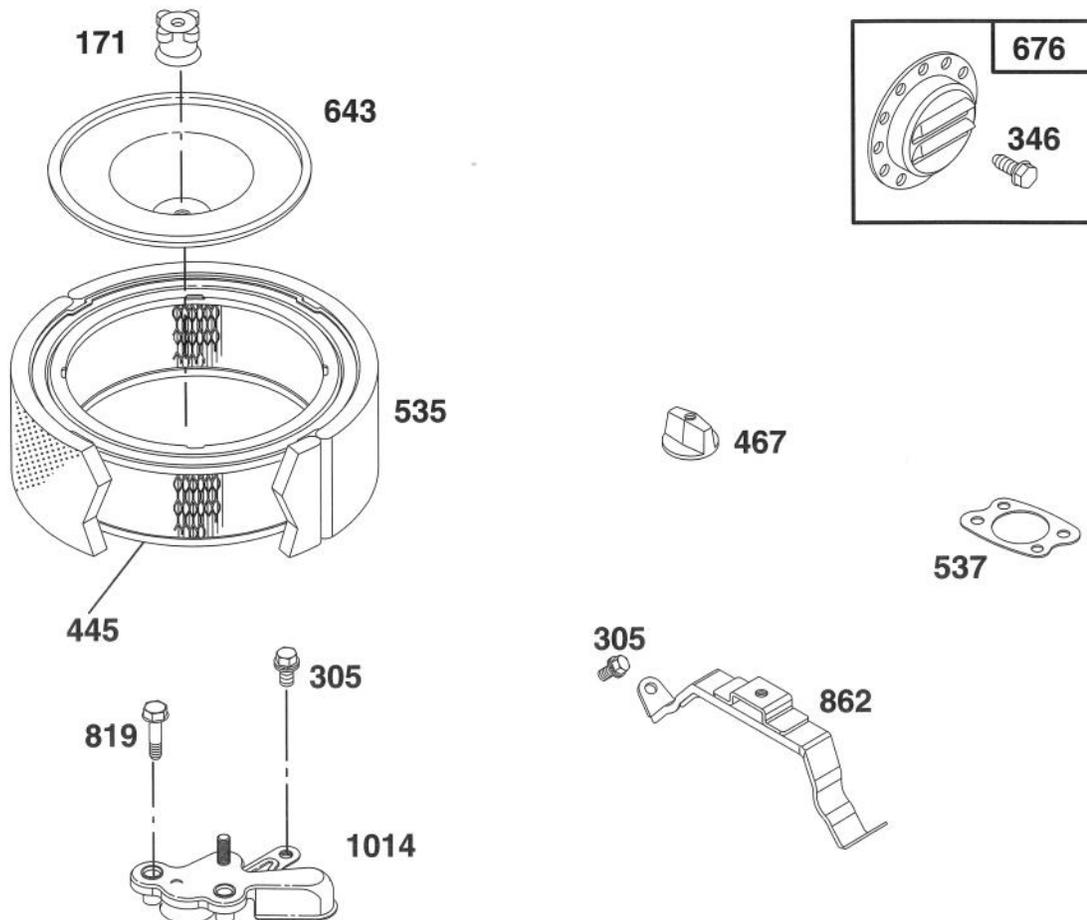


ENGINE BRIGGS & STRATTON MODEL 303447-0480-01

Ref. No.	Part No.	Description	No. Used
171	281051	Nut – Air Cleaner	
305	805406	Screw – Sem	
346	93705	Screw – Hex. Hd.	
445	394018	Cartridge – Air Cleaner	
467	491875	Knob – Air Cleaner	
*537	805655	Gasket – Air Cleaner	

Ref. No.	Part No.	Description	No. Used
643	805631	Plate – Air Cleaner	
676	397630	Deflector – Exhaust	
819	805057	Screw – Hex. Hd.	
862	807796	Bracket – Air Cleaner	
1014	807797	Shield – Assy.	


*Included in Gasket Set – Part No. 807989.

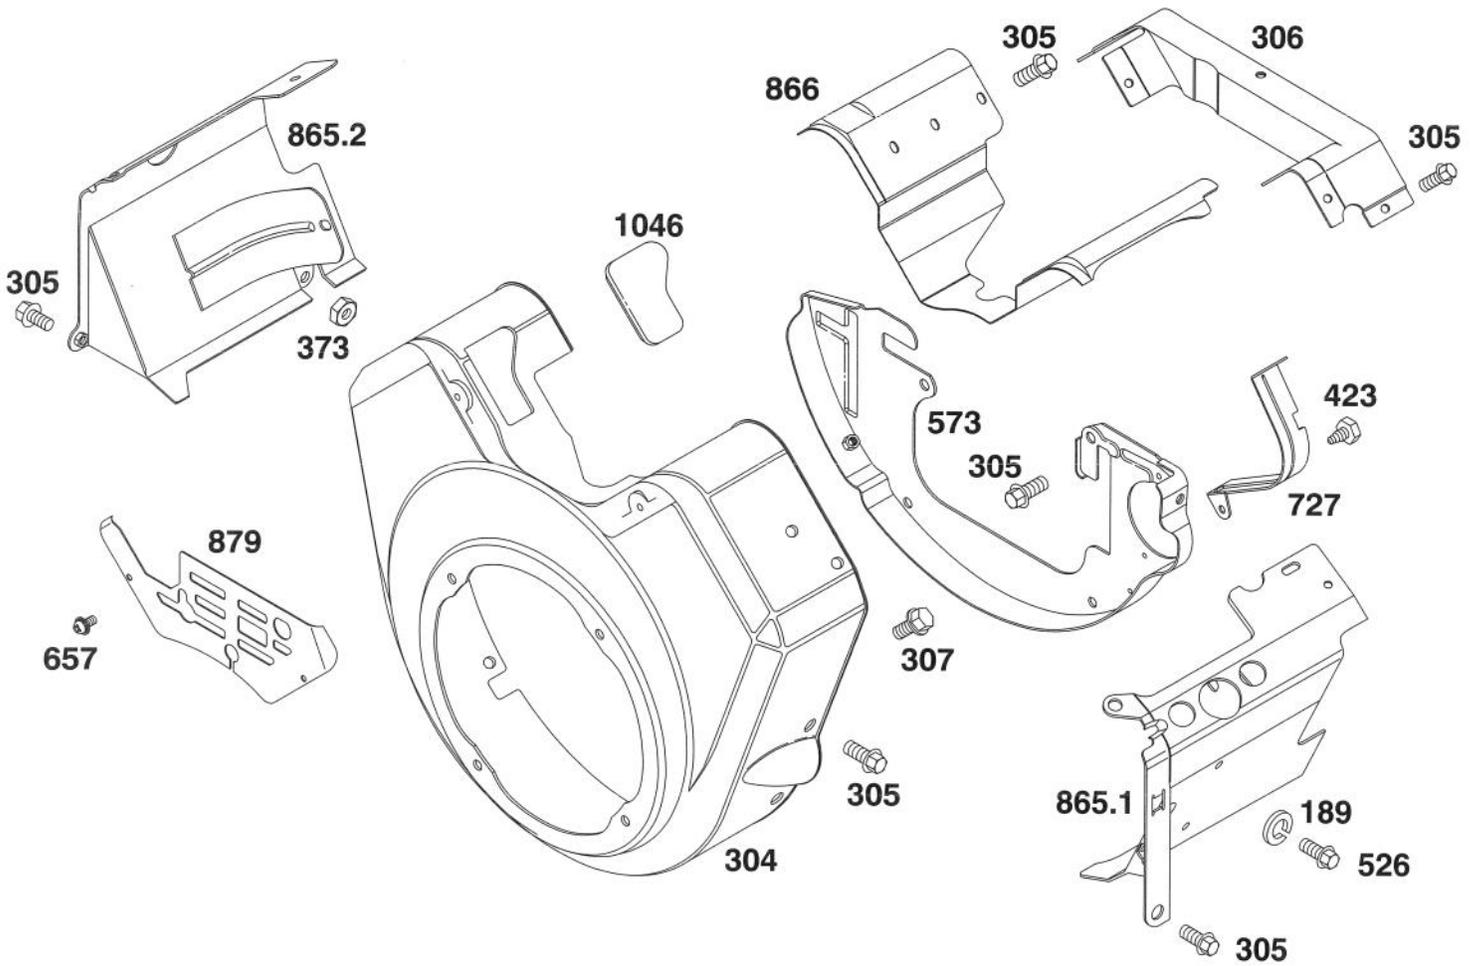

ENGINE BRIGGS & STRATTON MODEL 303447-0480-01

Ref. No.	Part No.	Description	No. Used
189	805449	Washer – Lock	
304	807898	Housing – Blower	
305	805406	Screw – Sem	
306	807661	Cover – Valley Extension	
307	805025	Screw	
373	805383	Nut – Hex	
423	805260	Screw	
526	805448	Screw – Mounting	
573	807663	Back Plate Assembly	


Ref. No.	Part No.	Description	No. Used
657	805009	Screw	
727	805505	Shield – Starter	
865.1	807870	Cover – Air Guide (Cyl. #1)	
865.2	807871	Cover – Air Guide (Cyl. #2)	
866	805738	Valley Cover – Air Guide	
879	805841	Cover – Carburetor	
1046	805753	Plug – Blower Housing	

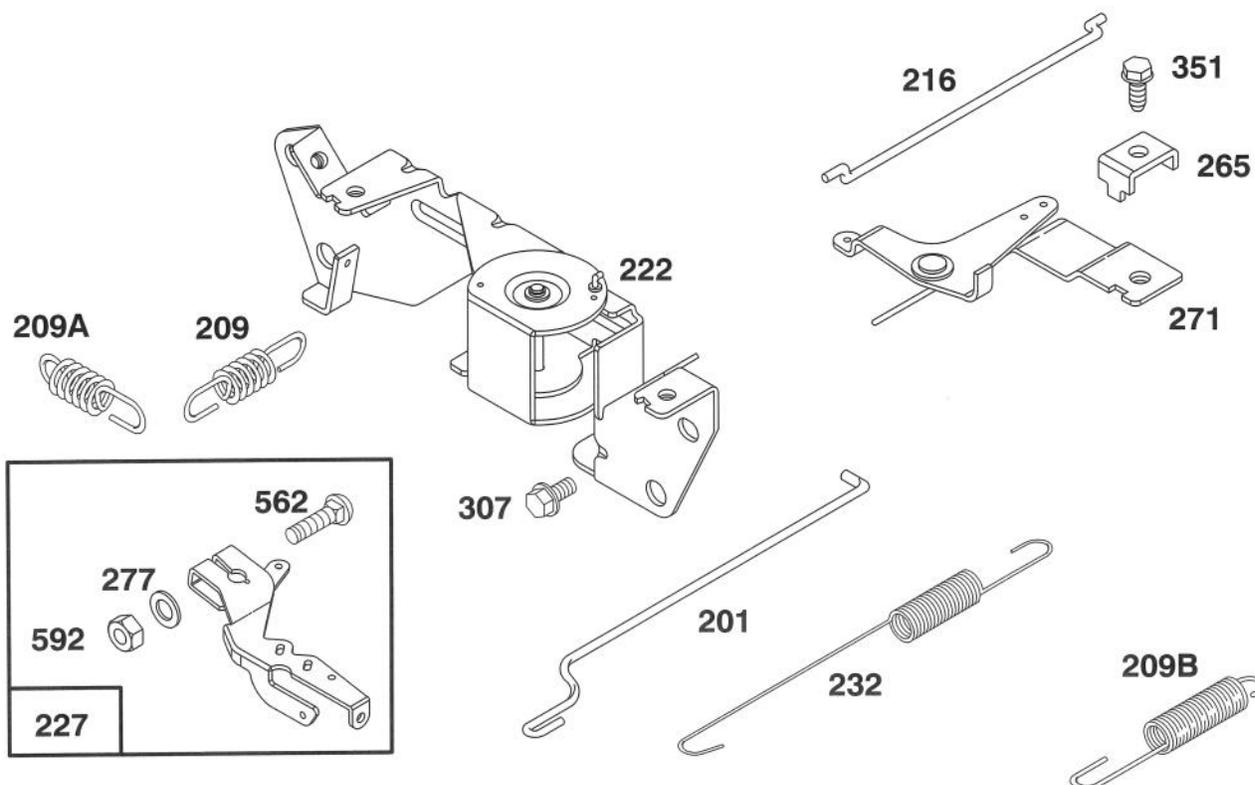

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 303447-0480-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
201	805480	Link - Governor		265	221535	Clamp - Casing	
209	805463	Spring - Governor		271	807609	Bracket - Choke Control	
209A	805453	Spring - Governed Idle		277	805018	Washer	
209B	805450	Spring - Governor		307	805025	Screw	
216	805439	Link - Choke		351	805169	Screw - Hex. Head	
222	807610	Bracket - Governor Control		562	805381	Bolt	
227	807528	Lever Assembly - Governor		592	805383	Nut - Hex.	
232	805465	Spring - Governor Link					

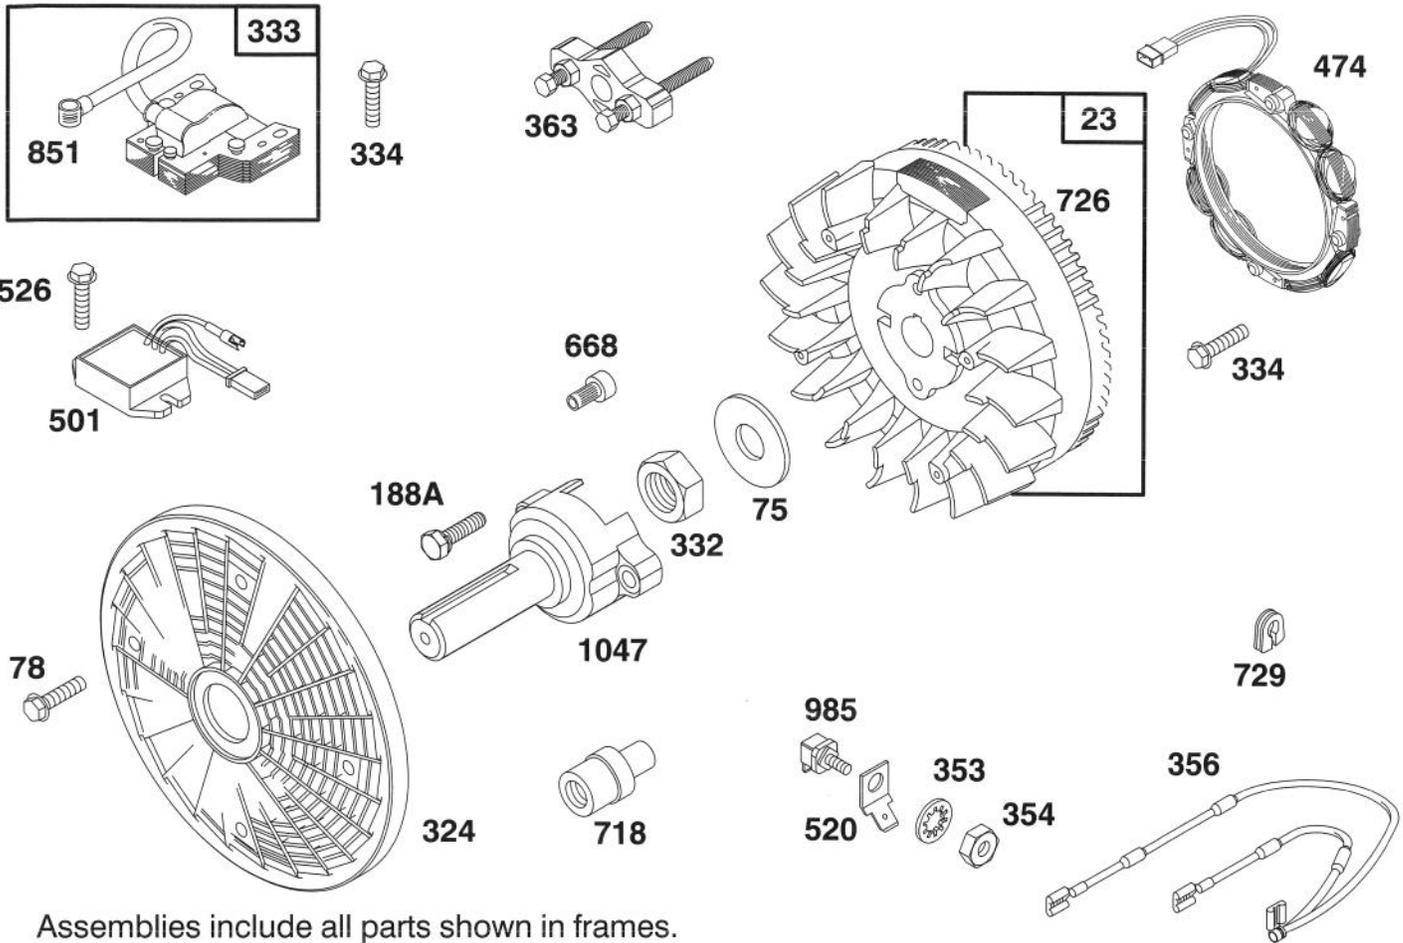


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 303447-0480-01

Ref. No.	Part No.	Description	No. Used
23	808128	Flywheel - Magneto	
75	805007	Washer - Spring	
78	805447	Screw	
188A	93847	Screw - Hex. Hd.	
324	805723	Screen - Rotating	
332	805021	Nut - Hex.	
333	492341	Armature - Magneto	
334	805407	Screw - Mounting	
353	92791	Washer - Lock (Internal Tooth)	
354	90576	Nut - Hex.	
356	493792	Wire - Assy.	
363	19203	Puller - Flywheel	

Ref. No.	Part No.	Description	No. Used
474	393295	Stator - Alternator	
501	394890	Regulator - Alternator	
520	93722	Terminal - Spade	
526	805448	Screw - Mtg.	
668	805402	Spacer	
718	805613	Pin - Pilot	
726	808162	Gear - Flywheel Ring Includes Mounting Hardware.	
729	805641	Grommet	
851	221798	Terminal - Ignition Cable	
985	398525	Insulator	
1047	262949	Shaft - Stub	

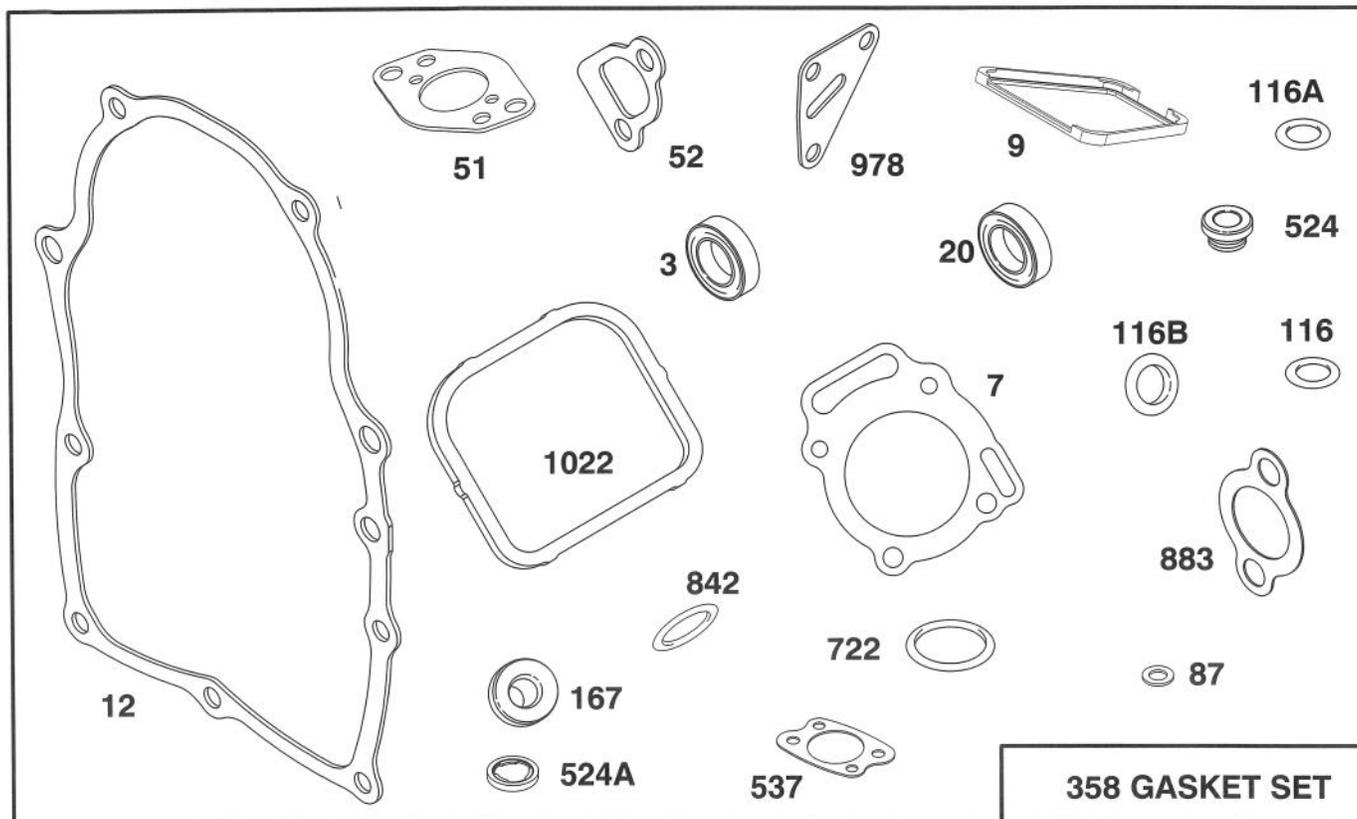

Assemblies include all parts shown in frames.



ENGINE BRIGGS & STRATTON MODEL 303447-0480-01

Ref. No.	Part No.	Description	No. Used
*3	805101	Seal - Oil	
*‡7	807986	Gasket - Cylinder Head	
*9	805379	Gasket - Breather	
*12	805112	Gasket - Crankcase Cover	
*20	805049	Seal - Oil	
*51	805700	Gasket - Carburetor Mtg.	
*52	805023	Gasket - Intake Manifold	
*87	805054	Seal - Governor Shaft	
*116	805058	O-Ring (Oil Pump)	
*116A	805198	O-Ring (Crankcase Cover)	
*116B	805316	O-Ring (Pick - Up Tube)	

Ref. No.	Part No.	Description	No. Used
*‡167	805420	Washer - Valve Cover	
358	807989	Gasket Set	
*524	805259	Seal - Filler Tube	
*‡524A	271983	Seal - Filler Plug	
*537	805655	Gasket - Air Cleaner	
*722	805483	Seal - Breather Screw	
*842	805386	O-Ring	
*883	805024	Gasket - Exhaust Manifold	
*978	805250	Gasket - Oil Filter Adapter	
*‡1022	805028	Gasket - Valve Cover	

*Included in Gasket Set - Part No. 807989.

‡Included in Valve Overhaul Kit - Part No 807990.

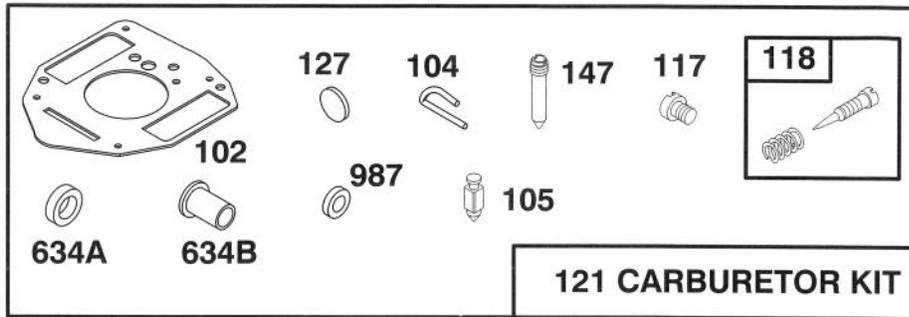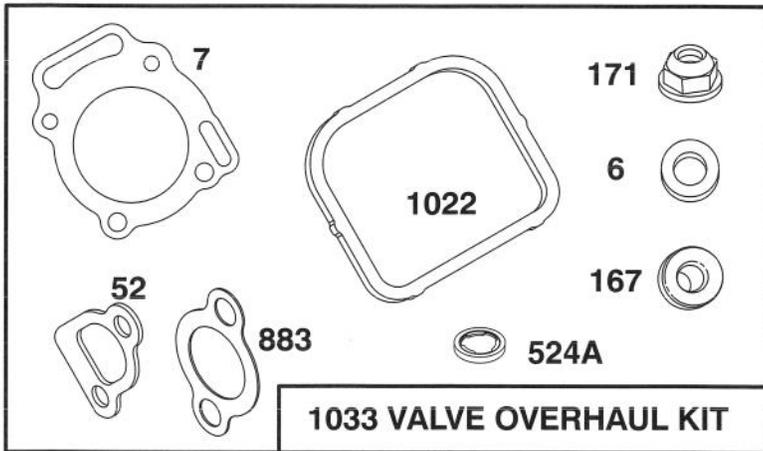

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 303447-0480-01


Ref. No.	Part No.	Description	No. Used
‡6	805193	Washer – Cylinder Head	
*‡7	807986	Gasket – Cylinder Head	
*9	805379	Gasket – Breather	
*‡52	805023	Gasket – Intake Manifold	
†102	805541	Gasket – Intake Elbow	
†104	805545	Pin – Float Hinge	
†105	805547	Valve – Fuel Inlet	
†117	805853	Jet – Main	
†118	807719	Valve – Idle Adjusting	
121	807726	Carburetor Kit	
†127	805559	Plug – Welch	
†147	805553	Jet – Slow Speed	

Ref. No.	Part No.	Description	No. Used
*‡167	805420	Washer – Valve Cover	
‡171	805019	Nut – Nylock	
*‡524A	271983	Seal – Filler Plug	
†634A	805557	Collar – Throttle	
†634B	805543	Collar – Choke	
*722	805483	Seal – Breather Screw	
*‡883	805024	Gasket – Exhaust Manifold	
†987	805544	Seal – Shaft	
*‡1022	805028	Gasket – Valve Cover	
1033	807990	Overhaul Kit – Valve	
1036	807688	Gasket Set – Breather	

*Included in Gasket Set – Part No. 807989.

†Included in Carburetor Kit – Part No. 807726.

‡Included in Valve Overhaul Kit – Part No. 807990.

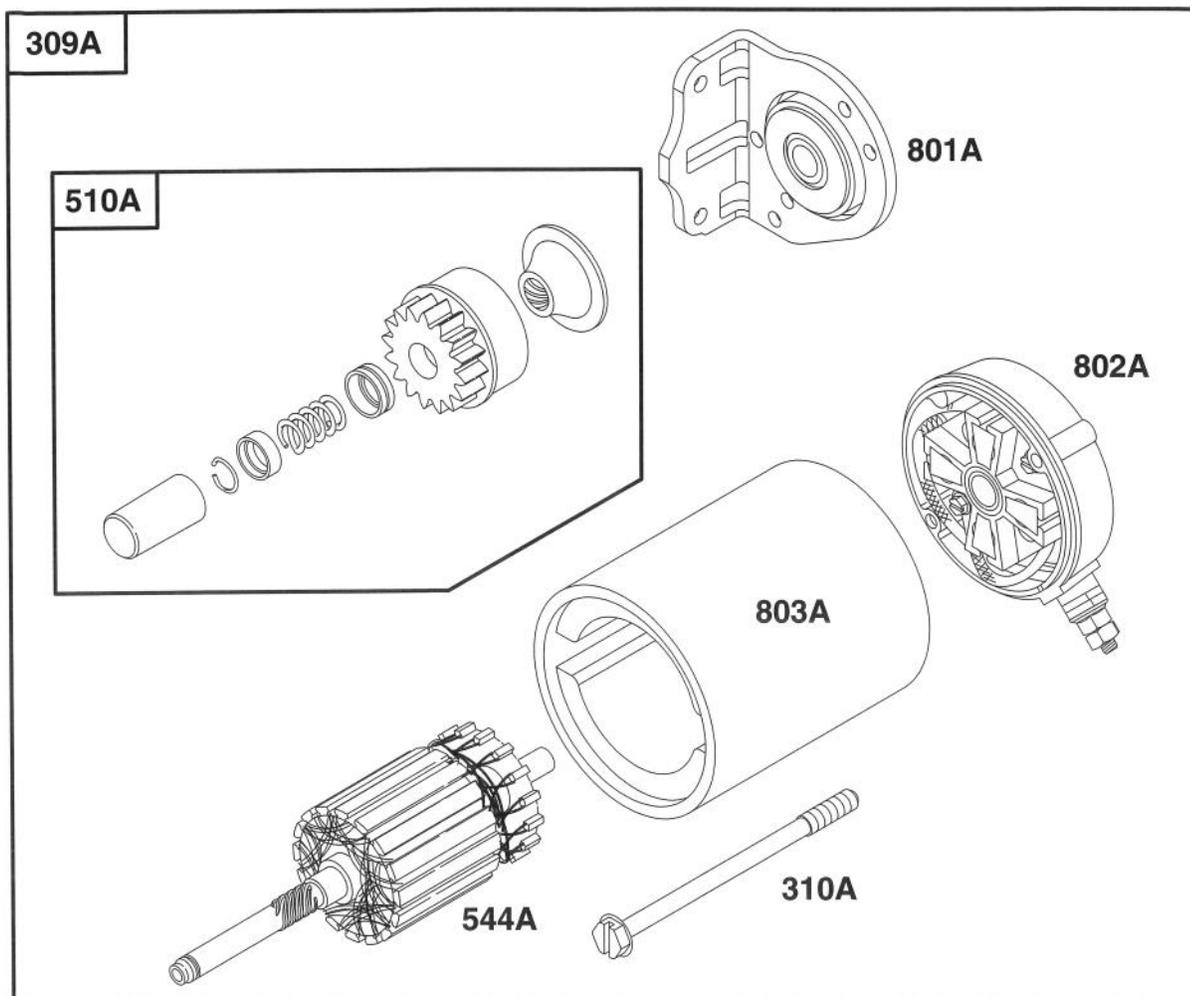

ENGINE BRIGGS & STRATTON MODEL 303447-0480-01

Ref. No.	Part No.	Description	No. Used
188	805247	Screw-Hex. Head	
309A	808106	Motor-Starter	
310A	N/A	Bolt-Thru	
510A	N/A	Drive-Starter	

Ref. No.	Part No.	Description	No. Used
544A	496816	Armature-Starter	
801A	496814	Cap-Drive	
802A	496813	Cap-End	
803A	496815	Housing-Starter	

INTERNATIONAL DECAL CROSS REFERENCE

JAPANESE DECAL KIT NO. 88-8550

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	JAPANESE
Decal Operating Instructions	Top Panel Assembly	85-8810	92-1850
Decal Controls	Right Fender Assembly	85-8820	92-1855
Decal Console	Console Panel	85-8830	92-1860
Decal Warning	Left Fender Assembly	85-8840	92-1865
Decal Service	Under Seat Support	85-8850	92-1870
Decal Shields Missing	Top Panel Assembly & Main Frame	85-8880	92-1875
Decal Eccentric Bolt	Switch Arm Assembly	85-8860	92-1880
Decal Fan Warning	Cooler Mounting Assembly	77-3100	84-6760
Plate Hot Surface	Muffler Shield	80-8290	83-6140
Manual Engine	In Product Carton	N/A	83-2470

SWEDISH DECAL KIT NO. 88-8590

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	SWEDISH
Decal Operating Instructions	Top Panel Assembly	85-8810	92-1854
Decal Controls	Right Fender Assembly	85-8820	92-1859
Decal Console	Console Panel	85-8830	92-1864
Decal Warning	Left Fender Assembly	85-8840	92-1869
Decal Service	Under Seat Support	85-8850	92-1874
Decal Shields Missing	Top Panel Assembly & Main Frame	85-8880	92-1879
Decal Eccentric Bolt	Switch Arm Assembly	85-8860	92-1884
Decal Fan Warning	Cooler Mounting Assembly	77-3100	84-6790
Plate Hot Surface	Muffler Shield	80-8290	83-5470
Manual Engine	In Product Carton	N/A	83-2660

INTERNATIONAL DECAL CROSS REFERENCE (Cont.)**GERMAN DECAL KIT NO. 88-8580**

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	GERMAN
Decal Operating Instructions	Top Panel Assembly	85-8810	92-1853
Decal Controls	Right Fender Assembly	85-8820	92-1858
Decal Console	Console Panel	85-8830	92-1863
Decal Warning	Left Fender Assembly	85-8840	92-1868
Decal Service	Under Seat Support	85-8850	92-1873
Decal Shields Missing	Top Panel Assembly & Main Frame	85-8880	92-1878
Decal Eccentric Bolt	Switch Arm Assembly	85-8860	92-1883
Decal Fan Warning	Cooler Mounting Assembly	77-3100	84-6740
Plate Hot Surface	Muffler Shield	80-8290	83-5760
Manual Engine	In Product Carton	N/A	83-2660

SPANISH DECAL KIT NO. 88-8570

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	SPANISH
Decal Operating Instructions	Top Panel Assembly	85-8810	92-1852
Decal Controls	Right Fender Assembly	85-8820	92-1857
Decal Console	Console Panel	85-8830	92-1862
Decal Warning	Left Fender Assembly	85-8840	92-1867
Decal Service	Under Seat Support	85-8850	92-1872
Decal Shields Missing	Top Panel Assembly & Main Frame	85-8880	92-1877
Decal Eccentric Bolt	Switch Arm Assembly	85-8860	92-1882
Decal Fan Warning	Cooler Mounting Assembly	77-3100	84-6780
Plate Hot Surface	Muffler Shield	80-8290	83-5940
Manual Engine	In Product Carton	N/A	83-2670

INTERNATIONAL DECAL CROSS REFERENCE (Cont.)**FRENCH DECAL KIT NO. 88-8560**

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	FRENCH
Decal Operating Instructions	Top Panel Assembly	85-8810	92-1851
Decal Controls	Right Fender Assembly	85-8820	92-1856
Decal Console	Console Panel	85-8830	92-1861
Decal Warning	Left Fender Assembly	85-8840	92-1866
Decal Service	Under Seat Support	85-8850	92-1871
Decal Shields Missing	Top Panel Assembly & Main Frame	85-8880	92-1876
Decal Eccentric Bolt	Switch Arm Assembly	85-8860	92-1881
Decal Fan Warning	Cooler Mounting Assembly	77-3100	84-6730
Plate Hot Surface	Muffler Shield	80-8290	83-6240
Manual Engine	In Product Carton	N/A	83-2660

TORO PART NUMBER INDEX

3316-433

Part No.	Description	Pg. Ref.			Part No.	Description	Pg. Ref.		
		No.	No.	Qty.			No.	No.	Qty.
3-6498	Washer - Thrust	13	5	1	47-2964	Hose - Fuel	11	19	1
10-6830	Stud - Drive	21	8	8	47-2964	Hose - Fuel	10	25	1
10-6830	Stud - Drive	4	27	4	48-7620	Screw - Cap Hex. Hd.	11	7	3
14-7509	Fender Assembly L.H.	1	16	1	49-2040	Screw - Hex. Flange Hd.	13	6	3
14-7579	Cooler Mount Assembly	17	25	1	49-8510	Kit - Implement Relief	16	*	1
17-4710	Hub	4	18	1	49-8520	Kit - Charge Relief	16	*	1
17-4710	Hub - Wheel	21	9	2	51-0780	Slide - Seat Adjust	7	8	1
18-6290	Shaft - Axle	4	7	1	51-0790	Slide - Seat Adjust	7	17	1
18-6320	Washer	4	2	3	53-6380	Washer	21	22	1
18-6380	Bolt - Adjustment	6	17	2	56-7720	Rod - Battery Hold-Down	10	12	2
18-6380	Pin - Adjusting	13	9	1	56-7976	Clamp - Tube	4	36	1
21-2480	Hose - Fuel	10	13	1	56-7981	Sleeve - Protective	21	38	1
22-8330	Plug	19	1	2	61-2710	Fitting - Hydraulic 90°	14	32	1
22-8340	Spring	19	3	2	61-3770	Hydraulic Filter Head Assy.	17	15	1
22-8350	Ball	19	4	2	63-8360	Key - Ignition	8	8	1
22-8360	Pin - Cam	19	6	2	63-8410	Washer - Flat	10	19	4
22-8370	Seat-Check Valve	19	5	2	63-8410	Washer - Flat	17	20	3
22-8380	Retainer - Spring	19	10	2	66-2950	Hour Meter Assembly	8	10	1
22-8410	Spring	19	11	1	67-8050	Bearing - Needle	15	22	1
22-8420	Spool	19	8	1	67-8060	Seal - Lip	15	23	1
22-8480	Ring - Retaining, Spool	19	13	1	69-9760	Plate - Cover	4	37	1
22-8490	Ring - Retaining	19	14	1	70-2770	Head	24	10	1
22-8500	O-Ring	19	9	2	70-2780	Piston	24	5	1
23-3030	Spacer	19	12	1	70-8631	Cap - Fuel	10	1	1
23-8910	Fitting - Hydraulic 90°	17	9	2	72-4790	Hold-Down - Battery	10	8	1
23-9740	Element - Hydraulic Filter	17	18	1	74-0720	Tube - Manual	7	4	1
25-2380	Plate - Thrust	15	39	1	74-9100	Pad - Forward	12	16	1
25-2400	Gasket	15	43	1	74-9110	Pad - Reverse	12	4	1
25-2430	Pin - Straight	15	41	1	75-0540	Teather	17	2	1
25-2450	Swashplate	15	37	1	75-4705	Hose - Fuel	11	47	1
25-2460	Plug	15	14	2	75-5470	Spacer	13	18	1
25-2470	Kit - Shim Pack	15	16	2	75-9830	Hydraulic Motor Assembly	4	24	1
25-2480	Spring - Charge Relief	15	32	1	75-9831	Hydraulic Motor Assy. L.H.	21	6	1
25-2490	Ball - Check Valve	15	47	2	75-9840	Hydraulic Motor Assy. R.H.	21	30	1
25-2510	Washer	15	11	2	76-0800	Kit - Seal	22	*	1
25-2530	Pin - Straight	15	26	1	76-0800	Kit - Seal	23	*	1
25-2570	Spring - Relief Valve	15	17	1	76-0800	Kit - Seal	5	*	1
25-2600	Cylinder Block Kit	15	5	1	76-0810	Assembly - Housing	22	*	1
25-2630	Ring	15	3	1	76-0810	Assembly - Housing	23	*	1
25-2640	Spring - Check Valve	15	48	2	76-0810	Assembly - Housing	5	*	1
25-2650	Plug - Check Valve	15	50	2	76-0820	Link - Drive	22	13	7
25-2680	Gerotor Assembly	15	25	1	76-0820	Link - Drive	23	13	1
25-2690	Housing - Charge Pump	15	21	1	76-0830	Rotor Set	22	*	1
25-3180	Kit - Check Valve	16	*	1	76-0830	Rotor Set	23	*	1
25-3210	Seal - Lip	15	10	2	76-0840	Manifold	22	22	1
26-3790	Nut - Lock	21	14	2	76-0840	Manifold	23	22	1
26-3790	Nut - Lock	4	17	1	76-0840	Manifold	5	22	1
27-6600	Spacer - Coupler	14	13	8	76-0850	Bearing - Thrust	22	12	1
28-4210	Solenoid - Starter	1	23	1	76-0850	Bearing - Thrust	23	12	1
29-6163	Switch - Neutral	13	20	1	76-0850	Bearing - Thrust	5	12	1
33-1300	Element Assembly	3	6	1	76-0860	Shaft - Coupling	22	11	1
33-1310	Baffle	3	5	1	76-0860	Shaft - Coupling	23	11	1
33-1320	Cup	3	4	1	76-0860	Shaft - Coupling	5	11	1
33-1330	Nut Assembly	3	3	1	76-0870	Plate - Wear	22	18	1
33-1340	Clamp Assembly	3	2	1	76-0870	Plate - Wear	23	18	1
33-1350	Band Assembly	3	1	2	76-0870	Plate - Wear	5	18	1
38-3400	Guard - Rubber	11	18	1	76-0880	Assembly - Commutator	22	*	1
39-9600	Clamp - Ammeter	8	16	1	76-0880	Assembly - Commutator	23	*	1
43-1950	Lift Valve Assembly	18	20	1	76-0880	Assembly - Commutator	5	*	1
43-5220	Ring - Retaining	24	12	1	76-0890	Assembly	23	29	1
43-5230	Shaft with Clevis	24	13	1	76-0930	Link - Drive	5	13	7
43-5260	Barrel w/Clevis & Ports	24	2	1	76-0940	Assembly - Cover, End	22	24	1
46-4810	Rim	4	5	1	76-0940	Assembly - Cover, End	5	24	1
46-4810	Rim	21	11	2	76-0950	Rotor Set	5	*	1
46-6890	Air Cleaner Assembly	1	14	1	76-1020	Screw - Cap, Hex. Hd.	22	14	1
46-7510	Hood - Intake	3	10	1	76-1030	Screw - Cap, Hex. Hd.	5	14	1
46-8400	Bearing - Needle	15	42	1	76-1040	Screw - Cap, Hex. Hd.	23	14	7

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
76-1401	Seat	7 19 1	85-8950	Flange - Bearing	4 9 1
76-1420	Wheel - Steering	6 1 1	85-8960	Spacer	12 3 1
76-8640	Stud - Traction	13 14 1	85-8970	Shield - Chain	6 15 1
77-3100	Decal - Danger	17 38 2	85-9010	Boot - Steering	10 21 1
80-2060	Muffler	11 14 1	85-9020	Key - Square	14 17 1
80-2110	Cable - Solenoid-Starter	9 2 1	85-9030	Spring - Extension	13 10 1
80-2120	Wire Harness - Main	9 1 1	85-9040	Panel - Rear L.H.	1 24 1
80-2120	Wire Harness Assembly	8 12 1	85-9050	Panel - R.H. Rear	1 2 1
80-2150	Pad - Litterbox	2 32 1	85-9070	Console Assembly	8 2 1
80-8290	Plate - Hot Surface	11 10 1	85-9120	Spacer	6 10 3
80-8650	Coupler - Rubber	14 14 2	85-9120	Spacer	13 17 1
83-0020	Ignition Switch Assembly	8 5 1	85-9140	Hose - Fuel	10 17 1
83-0820	Ammeter Assembly	8 9 1	85-9150	Plate - Switch	13 19 1
83-1031	Mount - Engine	11 31 4	85-9160	Spacer	21 2 1
83-1320	Filter - Fuel	10 24 1	85-9170	Pin - Cylinder	21 5 1
83-1390	Fitting - Fuel Shut-Off	10 15 1	85-9180	Sprocket	6 20 1
83-2220	Deflector - Exhaust	11 13 1	85-9190	Plate - Control	2 33 1
83-2230	Screw	11 12 4	85-9200	Joint - Universal	6 23 1
83-2240	Arrester - Spark	11 * 1	85-9210	Shaft - Steering Lower	6 22 1
83-2420	Cable - Positive	9 3 1	85-9220	Shaft - Steering Upper	6 27 1
83-2420	Cable - Positive	11 25 1	85-9230	Support - Seat	7 9 1
83-7000	Cylinder Assembly	21 3 1	85-9310	Control - Throttle & Choke	2 31 2
83-7250	Seal Repair Kit	24 14 1	85-9320	Rod - Seat Prop	7 15 1
83-7260	Cone - Relief	15 18 2	85-9360	Tube - Hydraulic	18 30 1
85-0290	Spacer - Seat Support	7 10 2	85-9360	Tube - Hydraulic	4 34 1
85-0380	Tube - Hydraulic	18 19 1	85-9370	Tube - Hydraulic	18 34 1
85-0380	Tube - Hydraulic	21 33 1	85-9370	Tube - Hydraulic	4 35 1
85-7600	Frame Assembly	1 28 1	85-9390	Tube - Hydraulic	21 20 1
85-7610	Hose - Hydraulic	17 11 1	85-9390	Tube - Hydraulic	18 24 1
85-7680	Hose - Hydraulic	17 17 1	85-9400	Tube - Hydraulic	21 31 1
85-7680	Hose - Hydraulic	14 30 1	85-9400	Tube - Hydraulic	18 32 1
85-7760	Tube - Hydraulic	21 21 1	85-9410	Tube - Hydraulic	18 31 1
85-7760	Tube - Hydraulic	18 22 1	85-9410	Tube - Hydraulic	21 32 1
85-8000	Engine Assembly	11 46 1	85-9420	Hydraulic Tube Assembly	14 5 1
85-8030	Chain	6 19 1	85-9420	Tube - Hydraulic	18 23 1
85-8060	Fork - Steering	4 3 1	85-9450	Hose - Hydraulic	14 36 1
85-8290	Tire	21 10 2	85-9460	Cooler - Oil	17 30 1
85-8290	Tire	4 16 1	85-9470	Hydraulic Manifold Assembly	18 21 1
85-8300	Lever - Pump	13 2 1	85-9500	Hose - Air Cleaner	1 12 1
85-8320	Plate - Pump	13 7 1	85-9510	Screen - Filler	17 4 1
85-8360	Seal - Cover	11 3 1	85-9530	Fender - R.H.	1 7 1
85-8370	Cover - Air Cleaner	11 2 1	85-9550	Clamp - Rubber	17 35 2
85-8430	Base - Air Cleaner	11 48 1	85-9560	Fan	14 28 1
85-8450	Rod - Control	12 9 1	85-9570	Hose - Hydraulic	18 16 1
85-8460	Switch Arm Assembly	13 12 1	85-9570	Hose - Hydraulic	21 28 1
85-8490	Panel - Front R.H.	2 29 1	85-9580	Hose - Hydraulic	18 15 1
85-8570	Shroud - Lower	17 24 1	85-9580	Hose - Hydraulic	21 24 1
85-8600	Support - Engine	11 33 1	85-9590	Hose - Hydraulic	14 25 1
85-8640	Base - Engine	11 38 1	85-9590	Hose - Hydraulic	17 28 1
85-8670	Hub - Fan	14 27 1	85-9600	Hose - Hydraulic	18 18 1
85-8700	Hub - Pump	14 19 1	85-9600	Hose - Hydraulic	14 21 1
85-8730	Hub - Engine	14 18 1	85-9610	Hose - Hydraulic	14 4 1
85-8770	Coupling	14 16 1	85-9620	Hose - Hydraulic	14 1 1
85-8780	Tread - Floor R.H.	2 * 1	85-9630	Hose - Hydraulic	4 23 1
85-8790	Tread - Floor L.H.	2 38 1	85-9640	Hose - Hydraulic	4 22 1
85-8800	Decal - Sand Pro 5000	2 34 2	85-9660	Plate - Seat	7 5 1
85-8810	Decal - Operating	2 37 1	85-9670	Nut - T	17 34 2
85-8820	Decal - Control	1 6 1	85-9680	Panel - Front L.H.	1 27 1
85-8830	Decal - Console	8 21 1	85-9720	Fitting - Hydraulic Orificed	18 35 1
85-8840	Decal - Warning	1 11 1	86-4870	Reservoir Cap Assembly	17 3 1
85-8850	Decal - Service	7 7 1	88-8110	Screen Assembly R.H.	17 33 1
85-8860	Decal - Eccentric Bolt	13 22 1	88-8120	Screen Assembly L.H.	17 31 1
85-8880	Decal - Shield Missing	2 36 3	88-8130	Top Panel Assembly	2 30 1
85-8890	Panel - Console	8 18 1	88-8140	Shaft - Pump	15 6 1
85-8900	Lever - Lift Valve	18 6 1	88-8160	Plate - Valve	15 40 1
85-8930	Retainer - Boot	10 22 1	88-8170	Kit - Housing	15 8 1
85-8940	Flange - Bearing Lube	4 11 1	88-8180	Shaft - Trunion	15 28 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3316-433

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
88-8190	Bearing - Journal	15 30 1	237-143	Grommet	10 5 2
88-8200	Shaft - Trunion	15 12 1	237-146	Seal - O-Ring	17 8 3
88-8210	Plug Assembly	15 19 1	240-3	Grommet	1 1 1
88-8220	Valve - By-Pass	15 4 1	240-11	Grommet	17 19 3
88-8230	Seal - Lip	15 29 1	240-11	Grommet	10 20 4
88-8240	Pin - Tilt Lock	6 4 1	242-50	Nut - Lock	21 12 8
88-8280	Lever - Steering Adjust	6 6 1	242-50	Nut - Lug	4 6 4
88-8290	Steering Column Assembly	6 25 1	2410-73	Retainer - Teather	17 1 1
88-8330	Cable - Engine Ground	9 4 1	2412-34	Clamp - Hose	17 10 3
88-8330	Cable - Negative	11 21 1	2412-34	Clamp - Hose	14 31 1
88-8340	Trim - Panel	2 35 1	2412-36	Clamp - Hose	17 7 1
88-8350	Tab - Bearing	4 39 1	2412-36	Clamp - Hose	10 16 2
88-8380	Muffler Shield Assembly	11 11 1	2412-36	Clamp - Hose	14 35 1
88-8390	Cover - Cable	11 22 1	2412-92	Clamp - Hose	1 13 2
88-8480	Bracket - Pivot	18 10 1	2412-93	Clamp - R	10 3 2
88-8490	Decal - Infield Pro 5000	2 * 2	2412-108	Clamp - Hose	10 14 3
88-8510	Dowel	6 29 2	2412-108	Clamp - Hose	11 17 1
88-8520	Block - Lock Lower	6 30 1	2412-109	Clip - J	10 23 1
88-8530	Block - Lock Upper	6 8 1	2412-133	Clamp - R	7 1 2
92-1678	Battery	10 9 1	2412-138	Clamp - R	18 37 2
92-2340	Cover	11 53 1	251-8	Bearing - Ball	15 35 1
92-2343	Pedal Assembly	12 15 1	251-259	Bearing	13 16 2
92-2344	Trunion	12 11 1	251-352	Bearing Assembly	4 10 1
92-2348	Hydraulic Tube Assembly	14 3 1	251-352	Screw - Set	4 14 2
92-2348	Tube - Hydraulic	18 33 1	252-82	Bearing - Needle	15 9 1
92-2349	Tube - Hydraulic	18 2 1	254-61	Cup - Bearing	4 30 2
92-2349	Tube - Hydraulic	17 37 1	254-70	Cone - Bearing	4 29 2
92-8776	Plug Assembly	15 51	256-113	Bushing - Flange	13 11 2
92-8777	Seal - O-Ring	16 52 2	256-185	Bushing - Sleeve	6 26 1
92-8958	Tank - Fuel	10 2 1	256-219	Bushing - Flange	12 2 2
92-8959	Reservoir - Hydraulic	17 40 1	256-287	Bushing - Sleeve	6 21 2
92-9074	Cap - Pump End	15 45 1	2710-11	Link - Connecting	6 18 2
92-9156	Hydraulic Pump Assembly	14 8 1	2710-20	Link - Offset	18 38 1
218-461	Nut - Lock	8 7 1	285-17	Plug - Pipe	15 1 2
218-594	Fuse - 20 Amp	8 11 2	302-5	Fitting - Grease	4 12 1
232-35	Valve - Stem	21 13 2	302-60	Fitting - Grease	13 13 1
232-35	Valve - Stem	4 15 1	302-60	Fitting - Grease	4 31 1
233-39	Handle	6 3 1	321-3	Screw - Cap Hex. Hd.	8 1 4
233-39	Handle	18 7 1	321-3	Screw - Cap Hex. Hd.	10 11 2
237-21	Seal-O-Ring	18 14 2	321-3	Screw - Cap Hex. Hd.	17 14 6
237-21	Seal-O-Ring	21 27 2	321-3	Screw - Cap Hex. Hd.	1 18 2
237-22	O-Ring	15 2 1	321-10	Screw - Cap Hex. Hd.	4 38 1
237-22	Seal - O-Ring	14 24 2	321-23	Screw - Cap Hex. Hd.	18 1 3
237-22	Seal - O-Ring	17 29 2	322-1	Screw - Cap Hex. Hd.	1 15 4
237-22	Seal - O-Ring	21 34 1	322-2	Screw - Cap Hex. Hd.	7 3 10
237-22	Seal-O-Ring	18 3 3	322-2	Screw - Cap Hex. Hd.	1 9 2
237-30	O-Ring	15 44 2	322-2	Screw - Cap Hex. Hd.	17 22 4
237-30	Seal - O-Ring	14 2 4	322-3	Screw - Cap Hex. Hd.	6 14 3
237-30	Seal - O-Ring	4 21 4	322-3	Screw - Cap Hex. Hd.	18 28 2
237-30	Seal-O-Ring	21 19 4	322-4	Screw - Cap Hex. Hd.	14 15 8
237-30	Seal-O-Ring	18 27 8	322-4	Screw - Cap Hex. Hd.	15 24 4
237-42	O-Ring	19 2 2	322-4	Screw - Cap Hex. Hd.	11 29 8
237-42	Seal - O-Ring	14 22 2	322-5	Screw - Cap Hex. Hd.	6 11 3
237-42	Seal - O-Ring	21 36 1	322-8	Screw - Cap Hex. Hd.	13 15 1
237-42	Seal-O-Ring	18 5 2	322-9	Screw - Cap Hex. Hd.	11 36 4
237-78	O-Ring	24 1 2	322-14	Screw - Cap Hex. Hd.	12 1 1
237-78	Seal-O-Ring	18 12 2	322-43	Screw - Cap Hex. Hd.	6 5 1
237-78	Seal-O-Ring	21 25 2	323-5	Screw - Cap Hex. Hd.	10 18 4
237-79	Seal - O-Ring	17 5 4	323-5	Screw - Cap Hex. Hd.	17 21 3
237-79	Seal - O-Ring	14 7 3	323-9	Screw - Cap Hex. Hd.	7 12 2
237-79	Seal-O-Ring	18 25 8	323-10	Screw - Cap Hex. Hd.	13 1 1
237-80	O-Ring	15 20 1	323-10	Screw - Cap Hex. Hd.	11 35 2
237-80	Seal - O-Ring	4 19 2	323-11	Screw - Cap Hex. Hd.	21 4 1
237-80	Seal - O-Ring	14 33 1	323-11	Screw - Cap Hex. Hd.	11 37 2
237-80	Seal-O-Ring	21 17 4	323-11	Screw - Cap Hex. Hd.	15 46 4
237-86	O-Ring	15 15 4	323-29	Screw - Cap Hex. Hd.	4 13 3
237-95	O-Ring	15 27 1	323-33	Screw - Cap Hex. Hd.	11 34 4

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
323-34	Screw - Cap Hex. Hd.	21	23	1	3296-8	Nut - Lock	1	26	2
325-9	Screw - Cap Hex. Hd.	21	15	8	3296-8	Nut - Lock	4	33	1
3210-2	Screw - Cap Hex. Hd.	11	54	2	3296-9	Nut - Lock	13	21	2
3217-5	Nut - Hex.	10	10	2	3296-23	Nut - Lock	14	10	2
3217-25	Nut - Hex.	8	15	2	3296-23	Nut - Lock	12	12	1
3218-2	Nut - Jam	7	21	2	3296-23	Nut - Lock	4	25	2
3218-5	Nut - Jam	12	10	1	3296-29	Nut - Hex.	14	12	8
3218-13	Nut - Hex.	1	21	2	3296-29	Nut - Lock	1	4	6
3219-14	Nut - Hex.	8	17	2	3296-29	Nut - Lock	13	4	2
3219-14	Nut - Hex.	1	20	2	3296-29	Nut - Lock	12	6	1
3230-18	Bolt - Carriage	1	8	4	3296-29	Nut - Lock	6	12	6
3234-7	Screw - Hex. Flange Hd.	2	39	4	3296-29	Nut - Lock	7	13	6
3234-29	Screw - Hex. Flange Hd.	2	43	2	3296-29	Nut - Lock	17	23	4
3241-5	Screw - Set Sq. Hd.	14	11	6	3296-29	Nut - Lock	11	32	8
3253-3	Washer - Lock	17	13	2	3296-29	Nut - Lock	11	20	4
3253-4	Washer - Lock	7	2	2	3296-39	Nut - Lock	4	4	3
3253-7	Washer - Lock	21	16	8	3296-39	Nut - Lock	12	14	1
3254-1	Washer - Lock	1	19	2	3296-39	Nut - Lock	7	16	2
3254-2	Washer - ITLW	11	24	1	3296-39	Nut - Lock	13	23	1
3254-2	Washer - Lock	1	22	2	3296-39	Nut - Lock	11	28	4
3254-5	Washer - Lock	8	6	1	3296-39	Nut - Lock	21	29	1
3255-7	Washer - ETLW	11	8	3	32103-12	Nut - Wing	10	7	2
3255-20	Washer - E.T.L.W.	8	14	2	32105-13	Screw - Cap Hex. Hd.	1	5	4
3256-1	Washer - Flat	8	3	4	32105-13	Screw - Hex. Flange Hd.	17	41	1
3256-22	Washer - Flat	10	6	2	32105-21	Screw - Machine	13	3	2
3256-22	Washer - Flat	17	12	2	32107-11	Nut - Square	3	8	2
3256-22	Washer - Flat	1	25	2	32120-11	Ring - Retaining	15	36	1
3256-23	Washer - Flat	12	5	1	32120-15	Ring - Retaining	15	34	1
3256-23	Washer - Flat	6	7	4	32121-6	Pin - Roll	14	26	1
3256-24	Washer - Flat	7	11	4	32121-15	Pin - Roll	6	24	2
3256-24	Washer - Flat	12	13	2	32121-91	Pin - Coiled Spring	15	38	3
3256-24	Washer - Flat	11	30	8	32121-111	Pin - Roll	6	2	1
3256-26	Washer - Flat	12	8	1	32121-112	Pin - Roll	6	13	1
3257-32	Key - Woodruff	15	7	1	32128-20	Nut - Flange Lock	1	17	4
3257-32	Key - Woodruff	14	9	2	32128-20	Nut - Flange Lock	7	18	4
3257-42	Key - Woodruff	21	7	2	32136-9	Nut - Slotted	4	1	1
3257-42	Key - Woodruff	22	17	1	32141-36	Screw - Leveling	7	20	2
3257-42	Key - Woodruff	5	17	1	32144-11	Screw - Cap Hex. Hd.	1	3	8
3257-42	Key - Woodruff	4	26	1	32144-11	Screw - Self Tapping	10	4	3
3257-42	Key - Woodruff	23	17	1	32144-11	Screw - Thread Forming	17	26	3
3258-19	Screw - Round Hd.	3	7	2	32144-11	Screw - Thread Forming	18	36	2
3258-166	Screw - Phillips Hd.	8	4	4	32144-73	Screw - Cap Hex. Hd.	14	29	4
3269-32	Rivet - Pop	11	9	2	32148-6	Nut - Clinch	8	19	8
3272-16	Pin - Cotter	12	7	1	32148-6	Nut - Clinch	17	32	4
3272-37	Pin - Cotter	4	32	1	32148-8	Nut - Clinch	2	40	2
3274-4	Pin - Cotter	7	14	2	32148-11	Nut - Clinch	2	41	3
3274-5	Screw - Hex. Socket Hd.	14	20	2	32151-46	Ring - Retaining	15	13	2
3274-31	Screw - Hex. Socket Hd.	8	*	3	32151-105	Ring - Retaining	6	9	1
3274-31	Screw - Hex. Socket Hd.	21	40	3	32152-10	Nut	24	3	1
3274-86	Screw - Hex. Socket Hd.	17	27	2	3334-945	Tie - Cable	21	41	1
3274-93	Screw - Hex. Socket Hd.	4	28	2	340-2	Fitting - Hydraulic Straight	21	35	1
3289-24	Screw - Socket Flat Hd.	6	28	1	340-4	Fitting - Hydraulic Straight	18	26	7
3290-256	Pin - Hair	21	1	2	340-6	Fitting - Hydraulic Straight	21	18	4
3290-360	Screw - Cap Hex. Hd.	18	8	2	340-18	Fitting - Hydraulic 90°	17	36	2
3290-378	Tie - Cable	8	*	3	340-77	Fitting - Hydraulic 90°	18	4	1
3290-378	Tie - Cable	11	23	2	340-77	Fitting - Hydraulic 90°	14	23	2
3290-378	Tie - Cable	21	37	3	340-86	Fitting - Hydraulic Tee	18	17	1
3290-378	Tie - Cable	4	40	2	340-89	Fitting - Hydraulic 45°	4	20	2
3290-496	Nut - Retaining	2	42	4	340-92	Fitting - Hydraulic Straight	18	13	1
3290-509	Mount - Tie	8	*	3	340-98	Fitting - Hydraulic 90°	14	6	2
3290-509	Mount - Tie	21	39	3	340-98	Fitting - Hydraulic 90°	18	29	1
3296-2	Nut - Lock	18	9	2	340-132	Fitting - Hydraulic 90°	21	26	2
3296-2	Nut - Lock	1	10	4	353-550	Plug - Hydraulic	17	39	1
3296-4	Nut - Lock	13	8	1	354-78	Fitting - Hydraulic Straight	17	16	1
3296-4	Nut - Lock	6	16	2	354-120	Fitting - Hydraulic 90°	17	6	1
3296-8	Nut - Lock	18	11	3	354-126	Fitting - Hydraulic 45°	14	34	1

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Sand Pro 5000 has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame. In any correspondence concerning the Sand Pro 5000, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the Sand Pro 5000.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Body Assembly	1-2	Hydraulic Reservoir Assembly	17
Air Cleaner Assembly No. 46-6890	3	Hydraulic Manifold Assembly	18
Front Wheel Assembly	4	Control Valve Assembly No. 43-1950	19
Front Hydraulic Drive Motor No. 75-9830	5	Hydraulic Schematic	20
Steering Assembly	6	Rear Wheel & Lift Assembly	21
Seat Assembly	7	Left Rear Hydraulic Motor Assembly	
Control Panel Assembly	8	No. 75-9831	22
Electrical Schematic	9	Right Rear Hydraulic Motor Assembly	
Fuel Tank & Battery Assembly	10	No. 75-9840	23
Engine & Muffler Assembly	11	Hydraulic Lift Cylinder Assembly No. 83-7000 ...	24
Traction Pedal Assembly	12	Engine Briggs & Stratton	
Pump Control Lever Assembly	13	Model 303447-0480-01	25-35
Hydraulic Pump Installation Assembly	14	International Decal Cross Reference	36-38
Hydraulic Pump Assembly No. 92-9156	15-16	TORO Part Number Index	39-42

