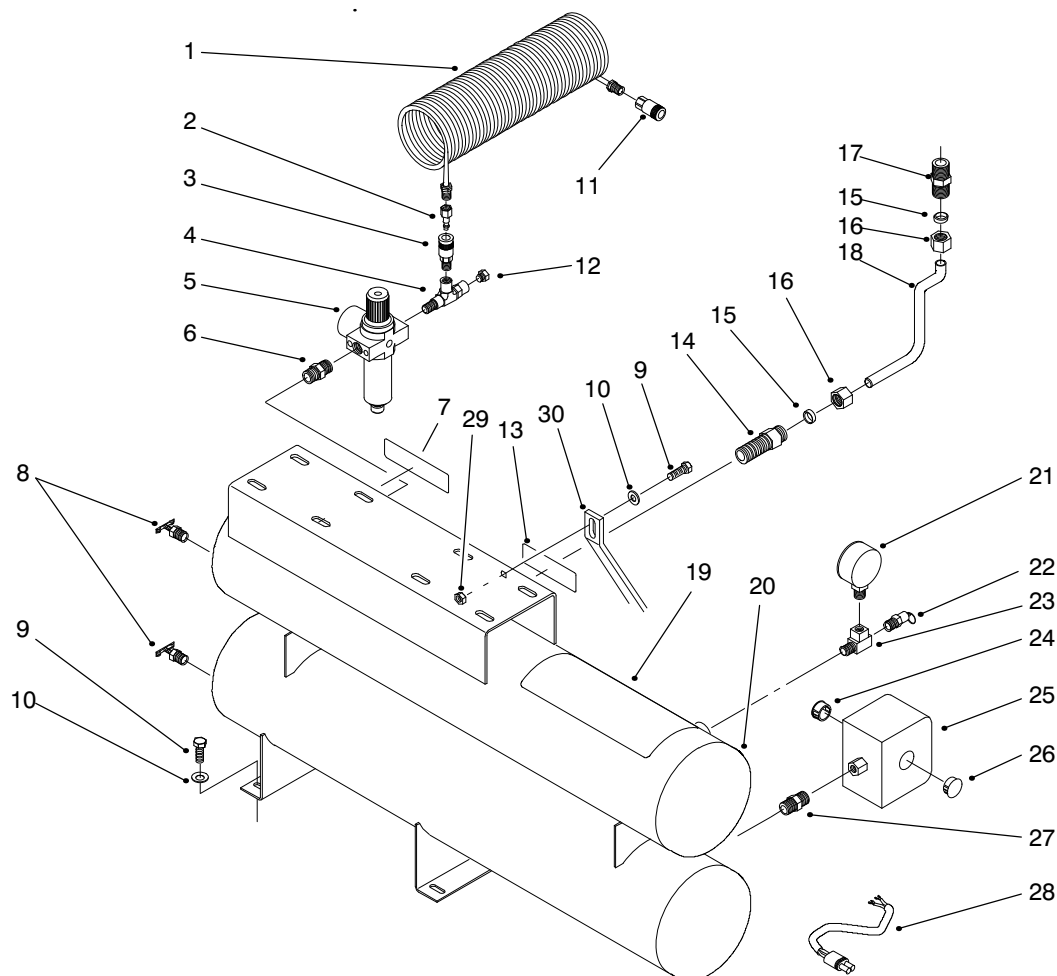



TORO®**MODEL NO. 07348-40001 & UP****PARTS
CATALOG****AIR COMPRESSOR**
For Workman 3000 Series Vehicles

T-1796

TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-9069	Hose	1
2	92-9068	Fitting - Male	1
3	92-9067	Fitting - Female	1
4	92-9064	Tee - Street	1
5	92-9070	Filter - Regulator	1
6	92-9063	Nipple	1
7	67-5360	Decal - Danger	1
8	92-9058	Drain Cock	2
9	322-5	Screw - Hex Head	5
10	3256-23	Washer - Flat	5
11	92-9066	Fitting - Female	1
12	92-9065	Plug	1
13	83-6620	Decal - Instruction	1
14	92-9053	Valve - Check	1
15	92-9057	Sleeve - Compression	2
16	92-9056	Nut - Compression	2

Ref. No.	Part No.	Description	No. Used
17	92-9055	Fitting - Straight	1
18	92-9071	Tube - Inlet	1
19	92-2784	Decal - Features	1
20	92-2793	Air Tank Assembly (Incl. Ref. #7 & 13)	1
21	92-9059	Gauge	1
22	92-9054	Valve - Relief	1
23	92-9061	Tee - Street	1
24	92-2789	Grommet	1
25	92-9060	Switch	1
26	92-2790	Grommet	1
27	92-9062	Nipple	1
28	92-9047	Harness - Wire	1
29	3296-29	Nut - Lock	1
30	92-2798	Brace - Tank	1

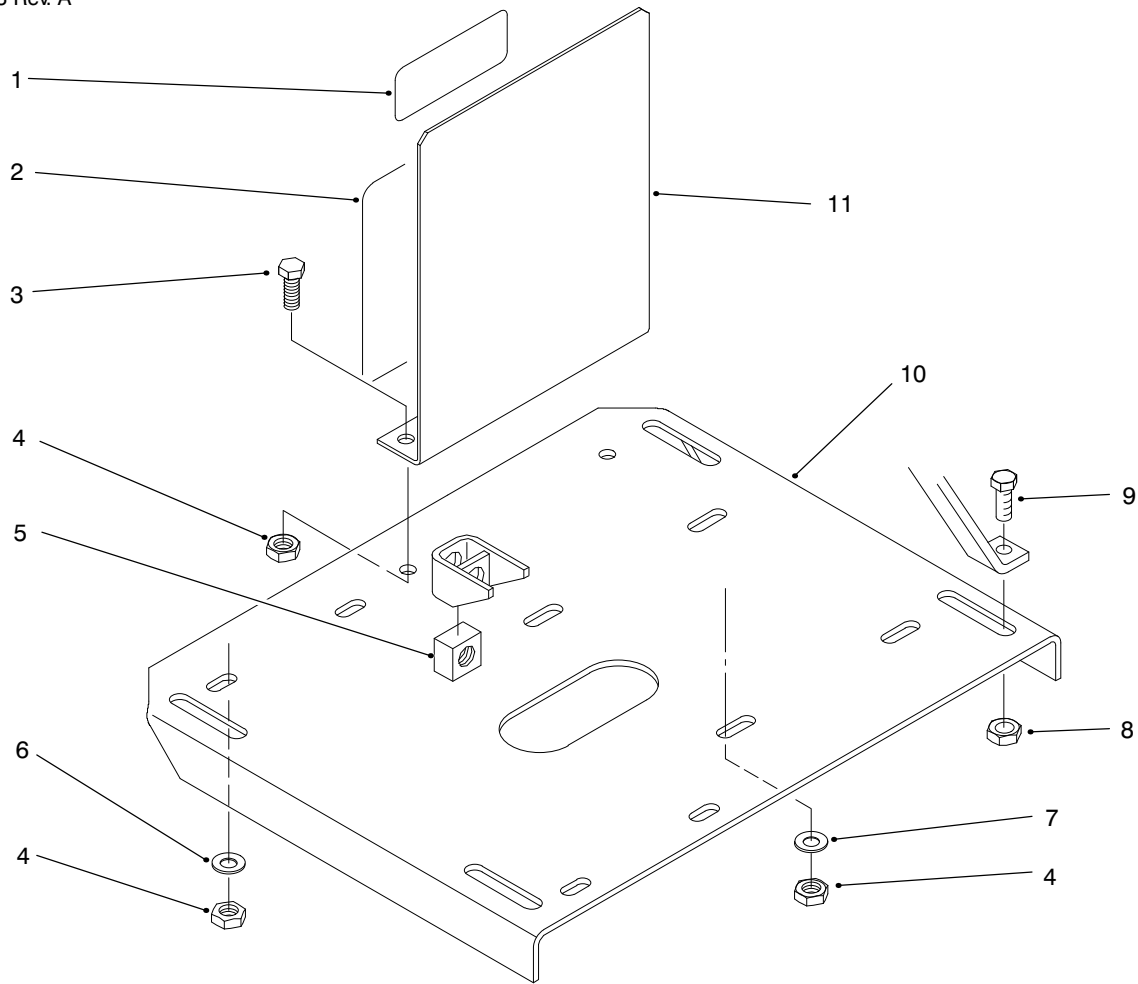


T-1797

HEAT SHIELD MOUNTING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	66-6840	Decal - Hot Surface	1
2	92-2788	Decal - Important	1
3	323-6	Screw - Hex Head	2
4	32153-2	Nut - Lock	4
5	32107-10	Nut - Square	1
6	3256-23	Washer - Flat	4

Ref. No.	Part No.	Description	No. Used
7	3256-24	Washer - Flat	6
8	3296-29	Nut - Lock	1
9	322-5	Screw - Cap Hex. Hd.	1
10	92-9042	Mount - Compressor	1
11	92-2795	Heat Shield Assembly (Incl. Ref. #1 & 2)	1

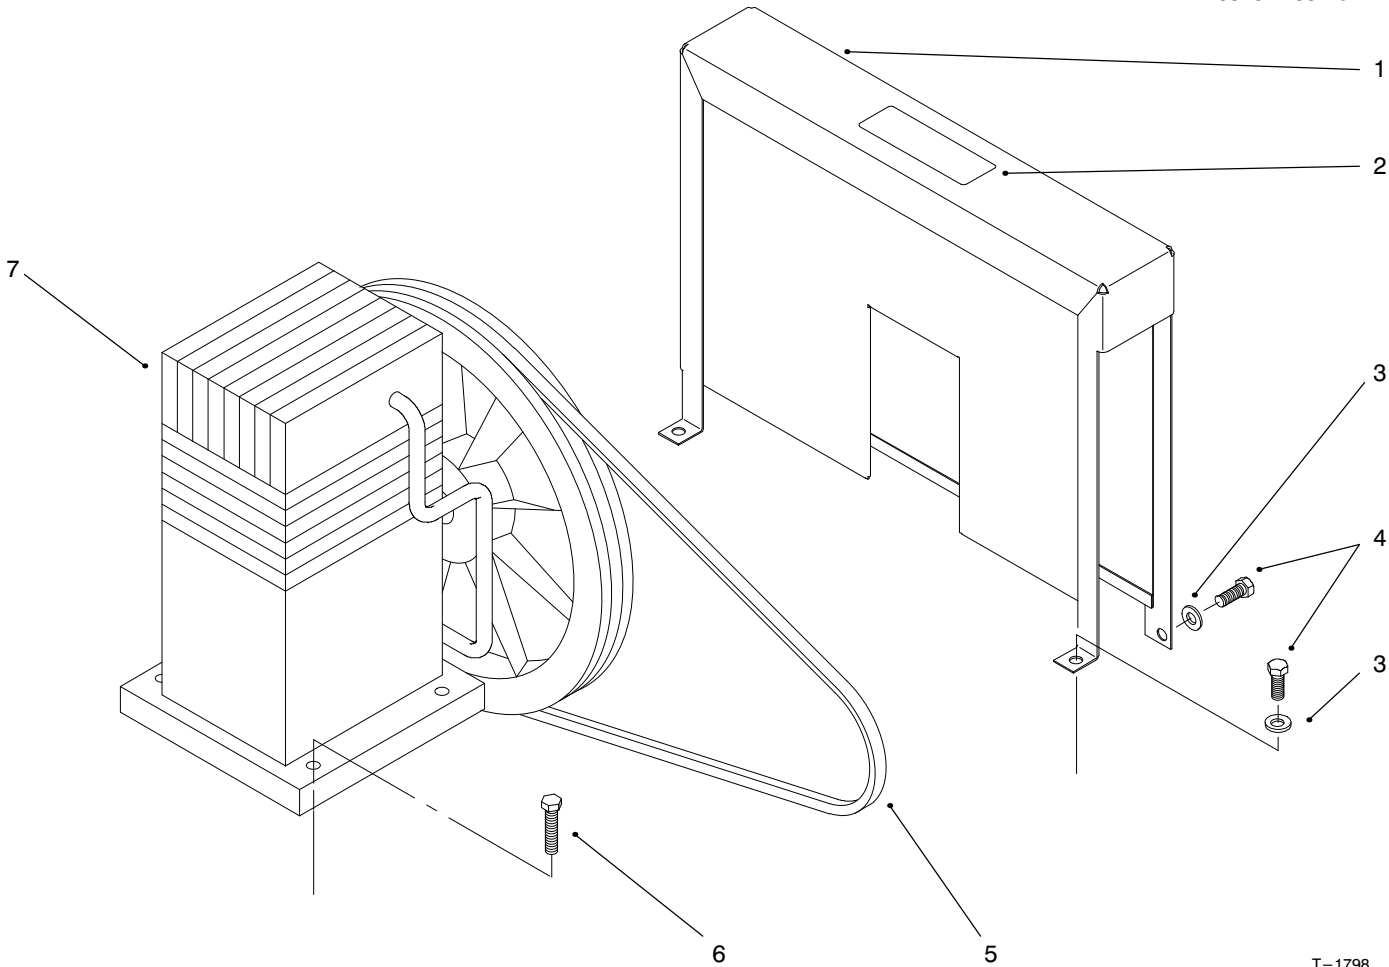


T-1798

COMPRESSOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-2794	Shield Assembly (Incl Ref. #2)	1
2	80-8040	Decal - Caution	1
3	323-6	Screw - Hex Head	4

Ref. No.	Part No.	Description	No. Used
4	3256-24	Washer - Flat	4
5	52-9950	Belt - V	1
6	323-10	Screw - Hex Head	4
7	92-9037	Pump - Compressor	

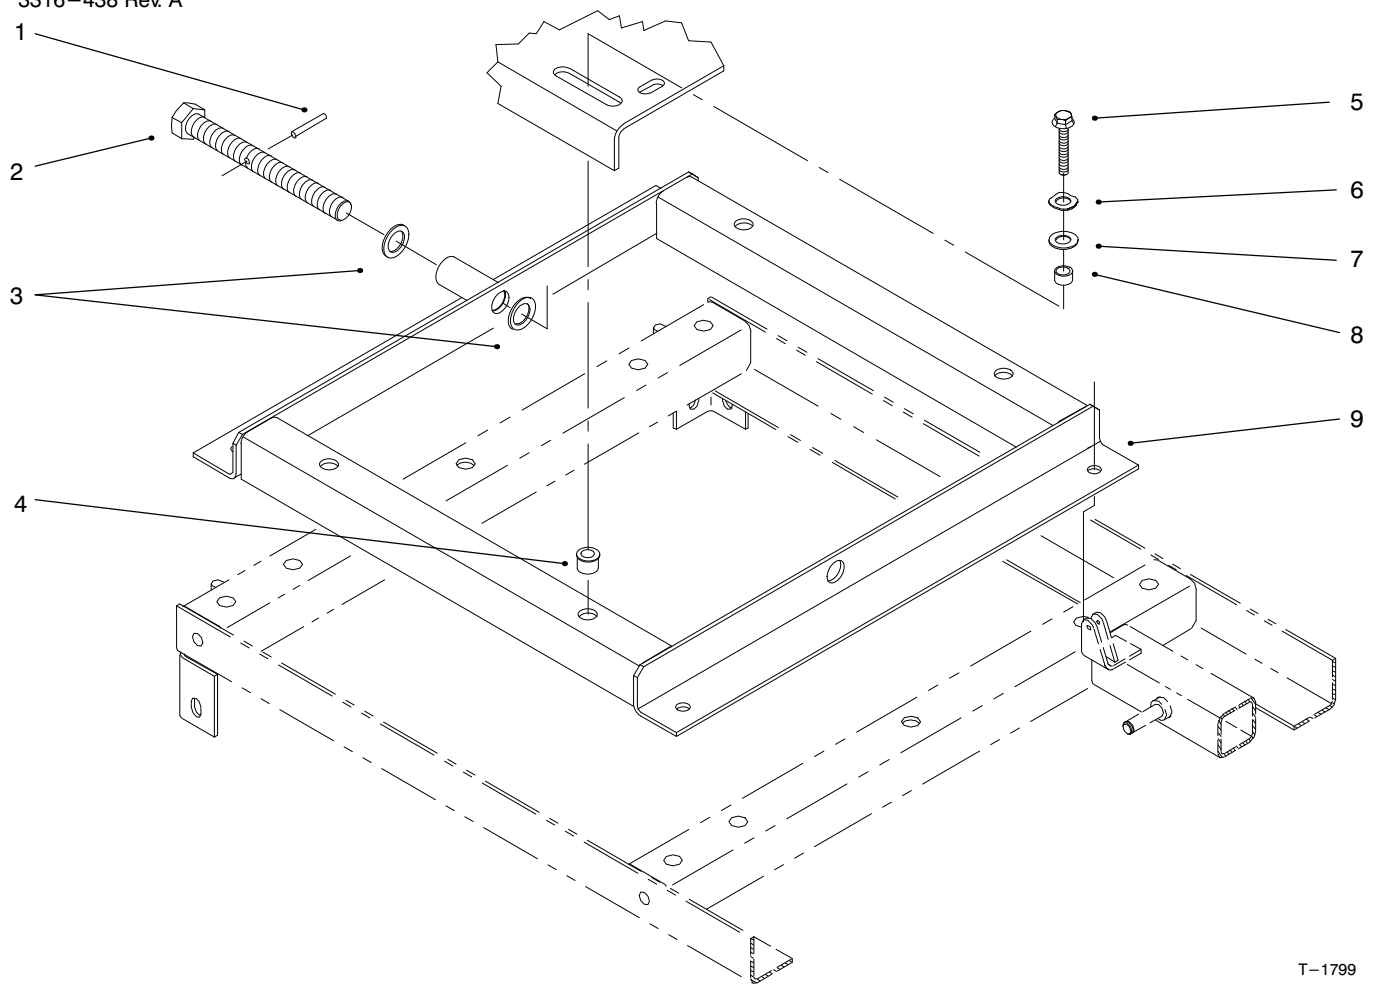


T-1799

FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32121-79	Pin - Roll	1
2	92-9046	Bolt - Draw	1
3	65-9090	Washer	2
4	32148-9	Insert - Thread	4
5	3235-22	Screw	4


Ref. No.	Part No.	Description	No. Used
6	3290-414	Washer - Belleville	4
7	3256-26	Washer - Flat	4
8	92-9048	Spacer	4
9	92-2787	Compressor Frame Assy. (Incl. Ref. #4)	1

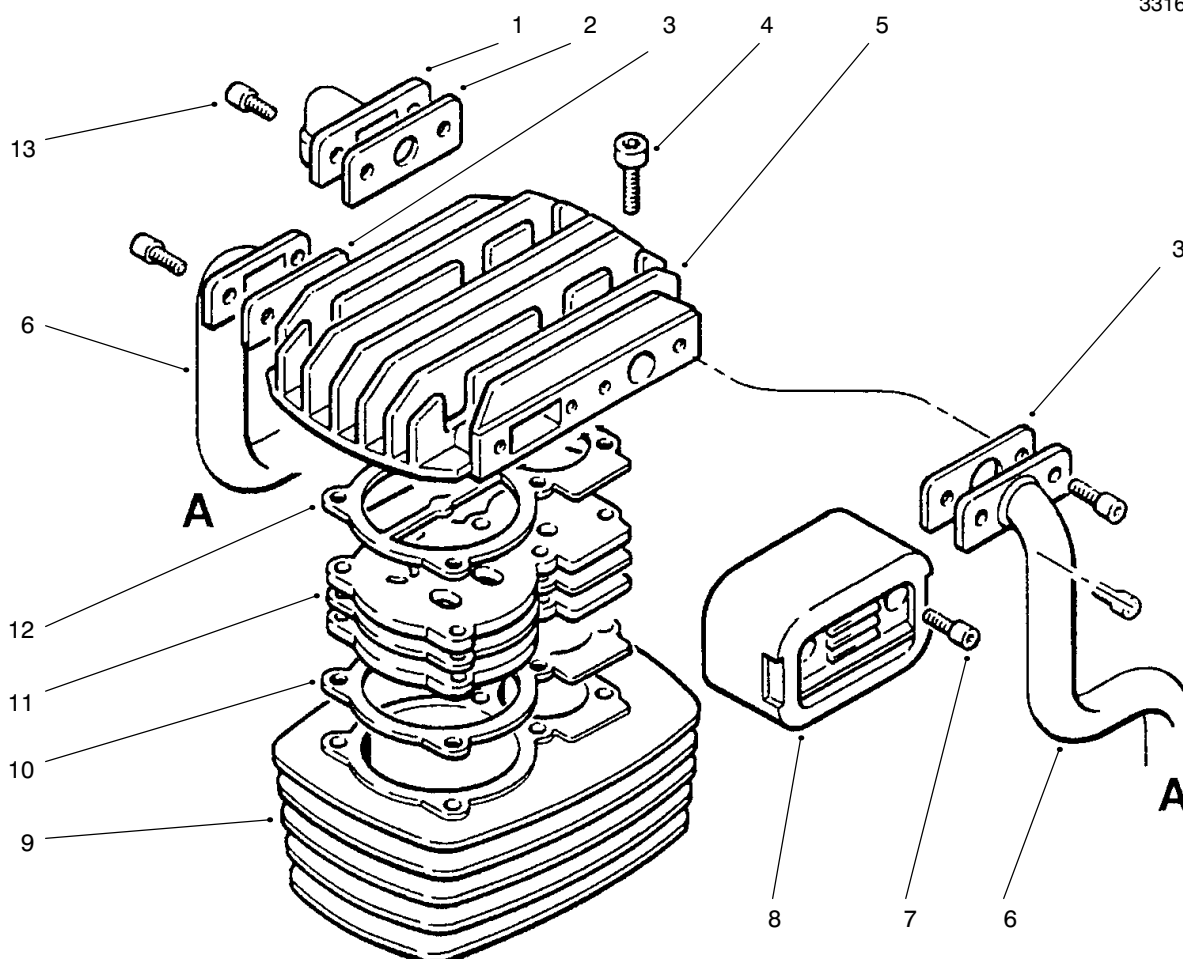

T-1803

CYLINDER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-9636	Adaptor - Outlet	1	9	92-9600	Cylinder	1
2	92-9633	Gasket - Outlet Adaptor	1	10	92-9623	Head Gasket	1
3	92-9628	Gasket - Intercooler	2	11	92-9640	Gasket - Valve Plate (Middle)	1
4	92-9627	Bolt	6	12	92-9625	Gasket - Valve Plate (Upper)	1
5	92-9626	Cylinder Head	1	13	92-9631	Bolt	4
6	92-9635	Intercooler	1				
7	92-9629	Bolt	2				
8	92-9638	Filter Assembly (Incl. Part #92-9637 - Filter Element)	1				

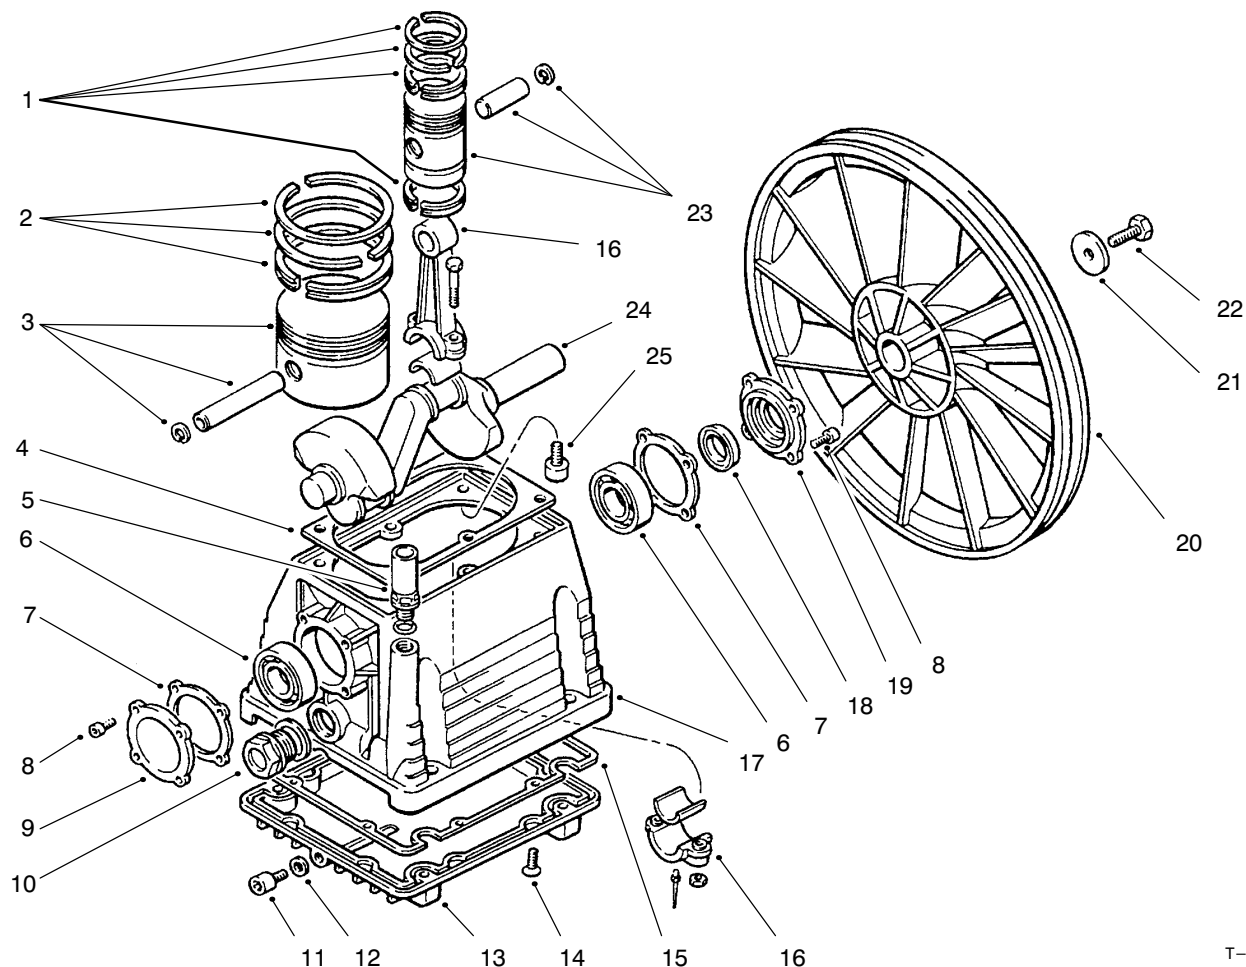

T-1804

CRANKCASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-9601	Ring Set (High Pressure)	1
2	92-9622	Ring Set (Low Pressure)	1
3	92-9621	Piston Assembly (Low Pressure)	1
4	92-9620	Gasket - Cylinder	1
5	92-9606	Cap - Oil	1
6	92-9607	Bearing - Crankshaft	2
7	92-9608	Gasket - Bearing Cover	2
8	92-9611	Bolt	8
9	92-9619	Cover - Bearing Closed	1
10	92-9618	Oil Sight Glass w/Gasket	1
11	92-9617	Bolt	1
12	92-9616	Washer	1
13	92-9615	Pan - Crankcase	1

Ref. No.	Part No.	Description	No. Used
14	92-9614	Bolt	8
15	92-9613	Gasket - Crankcase Pan	1
16	92-9603	Rod - Connecting	2
17	92-9612	Crankcase	1
18	92-9609	Seal - Oil	1
19	92-9610	Cover - Bearing Open	1
20	92-9639	Flywheel	1
21	92-9630	Washer	1
22	92-9632	Bolt	1
23	92-9602	Arm - Piston (High Pressure)	1
24	92-9604	Crankshaft	1
25	92-9605	Bolt - Socket Head	6

TORO PART NUMBER INDEX

3316-438 Rev. A

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
52-9950	Belt - V	3 5 1	92-9609	Seal - Oil	6 18 1
65-9090	Washer	4 3 2	92-9610	Cover - Bearing Open	6 19 1
66-6840	Decal - Hot Surface	2 1 1	92-9611	Bolt	6 8 8
67-5360	Decal - Danger	1 7 1	92-9612	Crankcase	6 17 1
80-8040	Decal - Caution	3 2 1	92-9613	Gasket - Crankcase Pan	6 15 1
83-6620	Decal - Instruction	1 13 1	92-9614	Bolt	6 14 8
92-2784	Decal - Features	1 19 1	92-9615	Pan - Crankcase	6 13 1
92-2787	Compressor Frame Assy.	4 9 1	92-9616	Washer	6 12 1
92-2788	Decal - Important	2 2 1	92-9617	Bolt	6 11 1
92-2789	Grommet	1 24 1	92-9618	Oil Sight Glass w/Gasket	6 10 1
92-2790	Grommet	1 26 1	92-9619	Cover - Bearing Closed	6 9 1
92-2793	Air Tank Assembly	1 20 1	92-9620	Gasket - Cylinder	6 4 1
92-2794	Shield Assembly	3 1 1	92-9621	Piston Assembly	6 3 1
92-2795	Heat Shield Assembly	2 11 1	92-9622	Ring Set (Low Pressure)	6 2 1
92-2798	Brace - Tank	1 30 1	92-9623	Head Gasket	5 10 1
92-9037	Pump - Compressor	3 7	92-9625	Gasket - Valve Plate	5 12 1
92-9042	Mount - Compressor	2 10 1	92-9626	Cylinder Head	5 5 1
92-9046	Bolt - Draw	4 2 1	92-9627	Bolt	5 4 6
92-9047	Harness - Wire	1 28 1	92-9628	Gasket - Intercooler	5 3 2
92-9048	Spacer	4 8 4	92-9629	Bolt	5 7 2
92-9053	Valve - Check	1 14 1	92-9630	Washer	6 21 1
92-9054	Valve - Relief	1 22 1	92-9631	Bolt	5 13 4
92-9055	Fitting - Straight	1 17 1	92-9632	Bolt	6 22 1
92-9056	Nut - Compression	1 16 2	92-9633	Gasket - Outlet Adaptor	5 2 1
92-9057	Sleeve - Compression	1 15 2	92-9635	Intercooler	5 6 1
92-9058	Drain Cock	1 8 2	92-9636	Adaptor - Outlet	5 1 1
92-9059	Gauge	1 21 1	92-9638	Filter Assembly	5 8 1
92-9060	Switch	1 25 1	92-9639	Flywheel	6 20 1
92-9061	Tee - Street	1 23 1	92-9640	Gasket - Valve Plate	5 11 1
92-9062	Nipple	1 27 1	322-5	Screw - Cap Hex. Hd.	2 9 1
92-9063	Nipple	1 6 1	322-5	Screw - Hex Head	1 9 5
92-9064	Tee - Street	1 4 1	323-6	Screw - Hex Head	2 3 2
92-9065	Plug	1 12 1	323-6	Screw - Hex Head	3 3 4
92-9066	Fitting - Female	1 11 1	323-10	Screw - Hex Head	3 6 4
92-9067	Fitting - Female	1 3 1	3235-22	Screw	4 5 4
92-9068	Fitting - Male	1 2 1	3256-23	Washer - Flat	2 6 4
92-9069	Hose	1 1 1	3256-23	Washer - Flat	1 10 5
92-9070	Filter - Regulator	1 5 1	3256-24	Washer - Flat	3 4 4
92-9071	Tube - Inlet	1 18 1	3256-24	Washer - Flat	2 7 6
92-9600	Cylinder	5 9 1	3256-26	Washer - Flat	4 7 4
92-9601	Ring Set (High Pressure)	6 1 1	3290-414	Washer - Belleville	4 6 4
92-9602	Arm - Piston	6 23 1	3296-29	Nut - Lock	2 8 1
92-9603	Rod - Connecting	6 16 2	3296-29	Nut - Lock	1 29 1
92-9604	Crankshaft	6 24 1	32107-10	Nut - Square	2 5 1
92-9605	Bolt - Socket Head	6 25 6	32121-79	Pin - Roll	4 1 1
92-9606	Cap - Oil	6 5 1	32148-9	Insert - Thread	4 4 4
92-9607	Bearing - Crankshaft	6 6 2	32153-2	Nut - Lock	2 4 4
92-9608	Gasket - Bearing Cover	6 7 2			

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's

service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]