



Power Max 1128 OXE Snowthrower

Model No. 38657C - 290000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Auger and Housing Assembly	 3	Handle and Control Assembly	 9
28 Inch Auger Gearcase Assembly No. 108-7329	 4	Lever Chute Control Assembly	 10
Chute Assembly	 5	Engine Assembly	 11
Frame Assembly	 6	Wheel Clutch Assembly	 12
Handle Assembly	 8	Wheel Clutch Sprocket Assembly	 13
		Attachments and Accessories List	 14


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- | | | | |
|---|-------------------------|---|---|
| ❶ | Not serviced separately | ❷ | Obtain from your local Briggs & Stratton dealer |
|---|-------------------------|---|---|

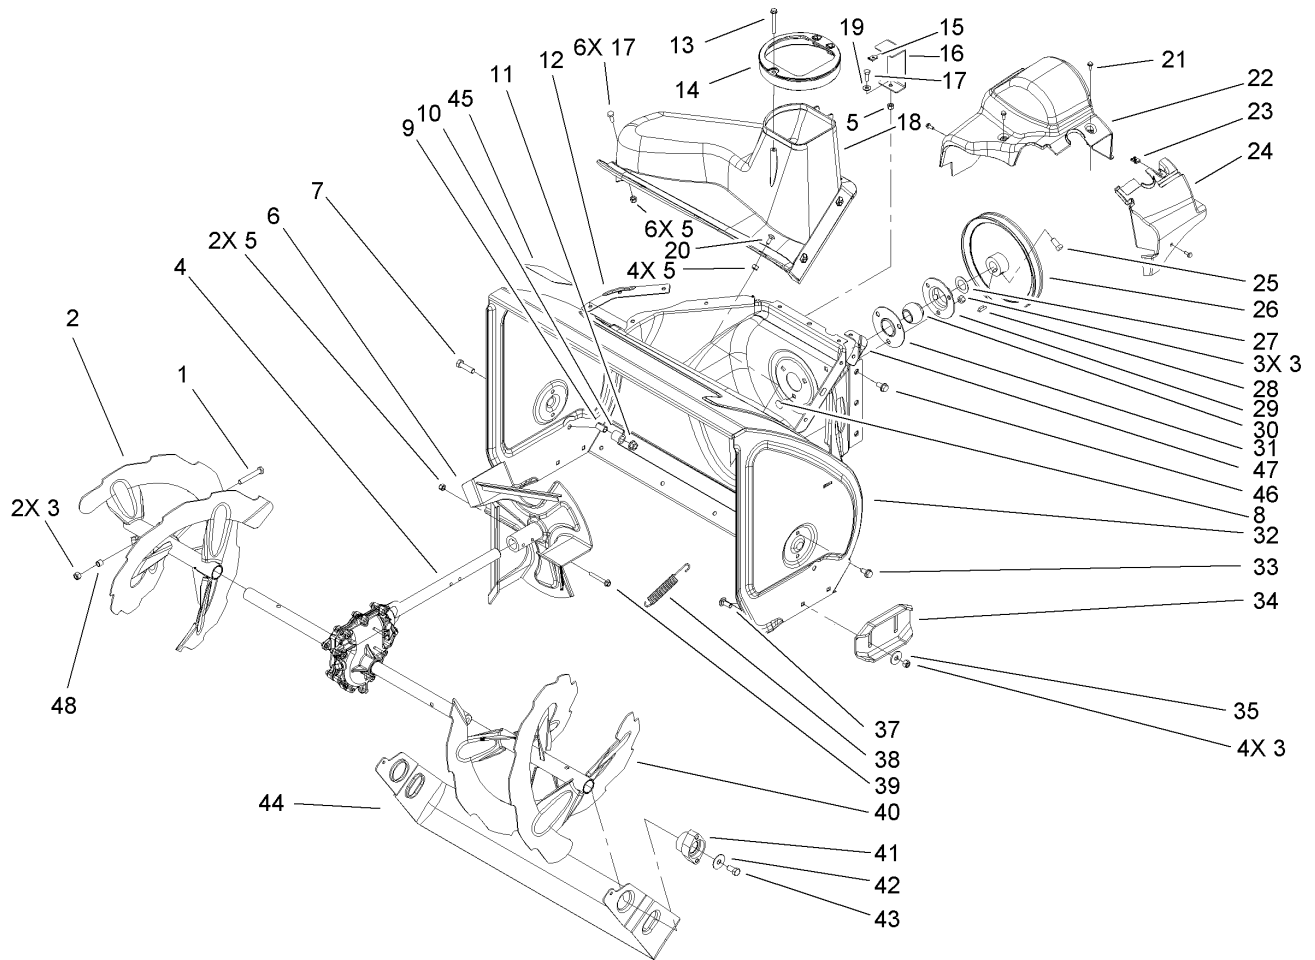

Auger and Housing Assembly

Ref	Part No.	Qty.	Description
1	322-11	2	Screw-HH
2	106-7291-03	1	Auger-RH
3	3296-29	9	Nut-Lock, NI
4	108-7329	1	28 Inch Auger Gearcase ASM
5	3296-42	13	Nut-Lock, NI
6	106-4576-03	1	Impeller ASM
7	323-29	2	Screw-HH
8	3230-23	3	Screw-CARR
9	106-4501	2	Spacer-Scraper, Stop
10	106-7318	2	Cushion-Scraper, Stop
11	32128-21	2	Nut-HF
12	107-1017-03	1	Seal-Flange, Cover
13	107-3003	1	Screw-Plastite
14	107-3006	1	Guide-Chute
15	107-1013	1	Nut-Speed, U-Type
16	107-1014-03	1	Bracket-Cover, Clip Nut
17	321-4	7	Screw-HH
18	108-0017	1	Cover
19	3256-22	1	Washer-Flat
20	3229-1	4	Screw-CARR
21	32144-112	4	Screw-HWH
22	107-1001	1	Cover-Belt
23	701493	1	Nut-Speed
24	107-1016	1	Cover-Extension, Belt

Ref	Part No.	Qty.	Description
25	3242-4	2	Screw-Set, SQH
26	62-1300	1	Pulley-Impeller
27	252-80	1	Washer-Thrust
28	3257-23	1	Key-Woodruff
29	26-6110	1	Flange-Cup, Bearing
30	63-3450	1	Bearing-Ball
31	26-6120	1	Flange-Cup, Bearing
32	107-3824	1	Housing- Auger, 28 Inch
33	32144-70	4	Screw-HWHTF
34	106-4588-01	2	Skid
35	52-2861	4	Washer
37	3230-16	4	Screw-CARR
38	106-4502	2	Spring-Scraper
39	321-44	2	Screw-HHF
40	106-7301-03	1	LH Auger ASM
41	106-4570	2	Auger-Bearing
42	3-0750	2	Washer
43	323-4	2	Screw-HH
44	106-4590-01	1	Scraper-28 Inch, Pivoting
45	107-3040	1	Decal-Danger, Auger
46	32144-14	6	Screw-HWHTF
47	108-0039-03	1	Seal
48	1-633545	2	Spacer

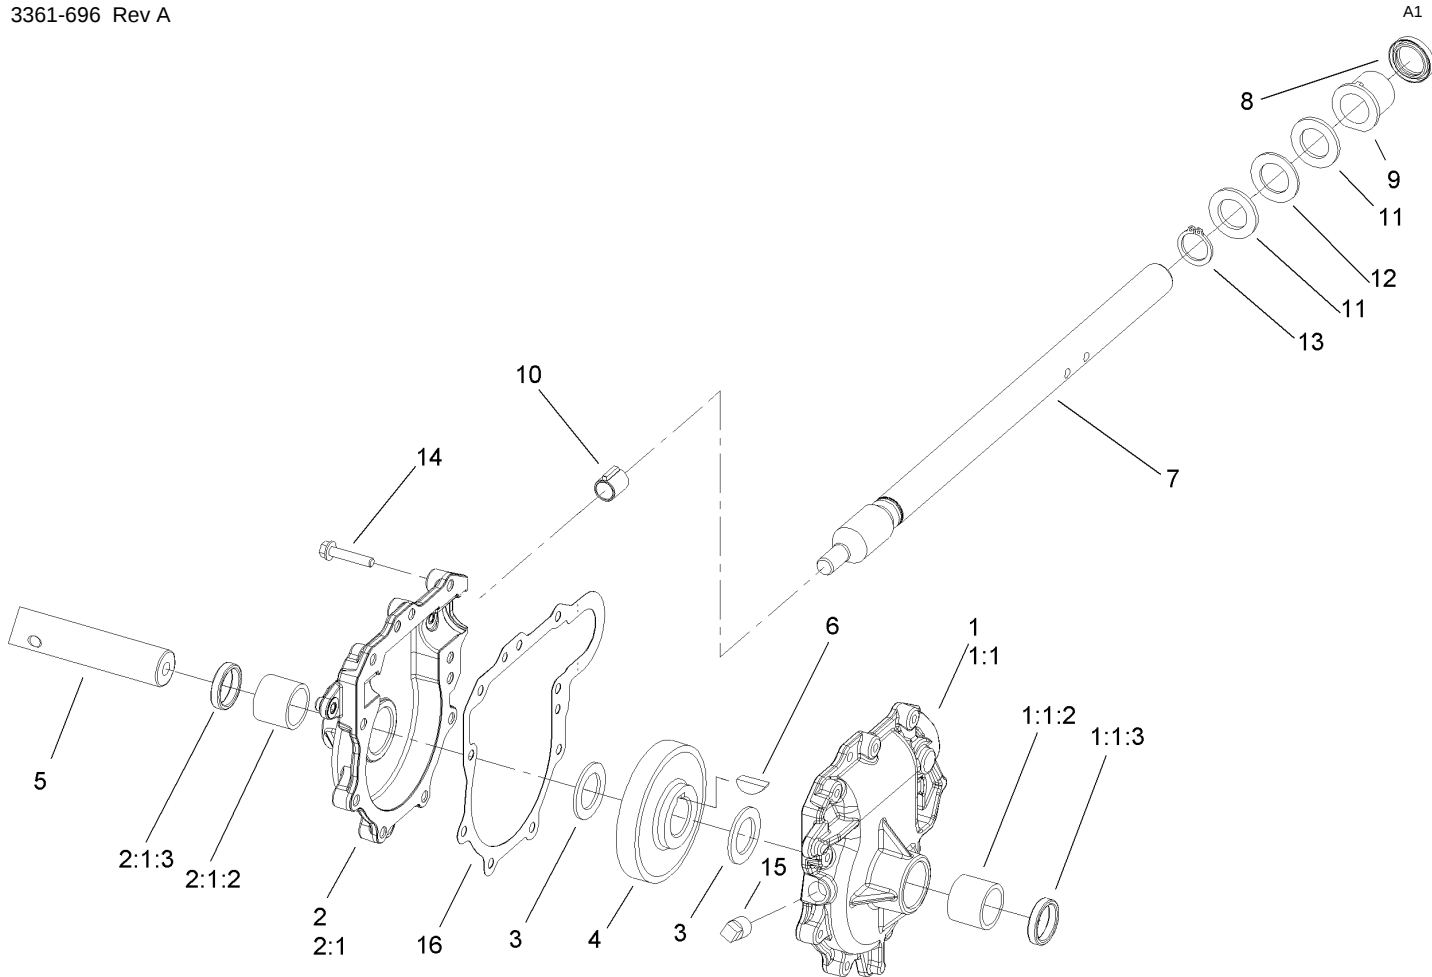

28 Inch Auger Gearcase Assembly No. 108-7329


Ref	Part No.	Qty.	Description				
1	108-7325	1	LH Auger Gearcase ASM				
1:1:1		1	Gearcase-Auger, LH				
1:1:2	112-6635	1	Bushing-Sleeve				
1:1:3	7-0045	1	Seal-Oil				
2	108-7327	1	RH Auger Gearcase ASM				
2:1:1		1	Gearcase-Auger, RH				
2:1:2	112-6635	1	Bushing-Sleeve				
2:1:3	7-0045	1	Seal-Oil				
3	252-71	2	Washer-Thrust				
4	62-0120	1	Gear-Helical				
5	106-4421	1	Shaft-Auger				
6	3257-10	1	Key-Woodruff				
7	66-7811	1	Shaft-Impeller				
8	253-149	1	Seal-Oil				
9	37-6560	1	Bushing-Input				
10	62-1150	1	Bushing-Worm				
11	252-78	2	Washer-Thrust				
12	252-76	1	Bearing-Thrust				
13	32151-33	1	Ring-Retaining, EXT				
14	108-4862	9	Screw-HWHTF				
15	281-1	1	Plug-Pipe, SQH				
16	108-7330	1	Gasket-Gearcase, Auger				



Chute Assembly

Ref	Part No.	Qty.	Description
1	112-6629	1	Deflector-Chute, Ce
2	106-4594	1	Spring-Torsion
3	46-8092	5	Screw-Plastite
4	106-4472	1	Gear-Chute
5	46-6810	3	Screw And Washer ASM
6	100-9880	1	Bolt-Shoulder
7	106-4585	1	Cover-Gear, Chute
9	106-7296	1	Bracket-Cable, Clamp
10	106-7297	1	Clamp-Cable
11	106-4471	1	Gear-Face
12	107-1021	1	Rod-Deflector
14	98-1375	2	Screw-HWH
15	106-7266	1	Bracket-Deflector
16	106-4582-03	1	Bracket-Support, Chute
17	106-4422	1	Spacer-Chute
18	3256-2	3	Washer-Flat
19	3296-47	2	Nut-Lock, NI
20	106-7276	3	Screw-Shoulder
21	106-7257	1	Mount-Gear, Face
22	63-2650	1	Screw-Shoulder
23	106-4476	1	Latch-Chute
24	106-7253-03	1	Tube-Support
25	3256-22	3	Washer-Flat
26	3296-42	3	Nut-Lock, NI

Ref	Part No.	Qty.	Description
27	3296-29	2	Nut-Lock, NI
28	106-7260	1	Washer-Curved
29	3230-5	1	Screw-CARR
30	3230-23	1	Screw-CARR
31	46-8091	3	Screw-HWH
32	105-9991	1	Ring-Chute
33	106-4440	1	Chute-Discharge
35	108-7315	1	Spring-Torsion
36	108-5052	1	Seal-Chute
37	3290-456	1	Washer-Belleville
38	32144-10	1	Screw-HWH

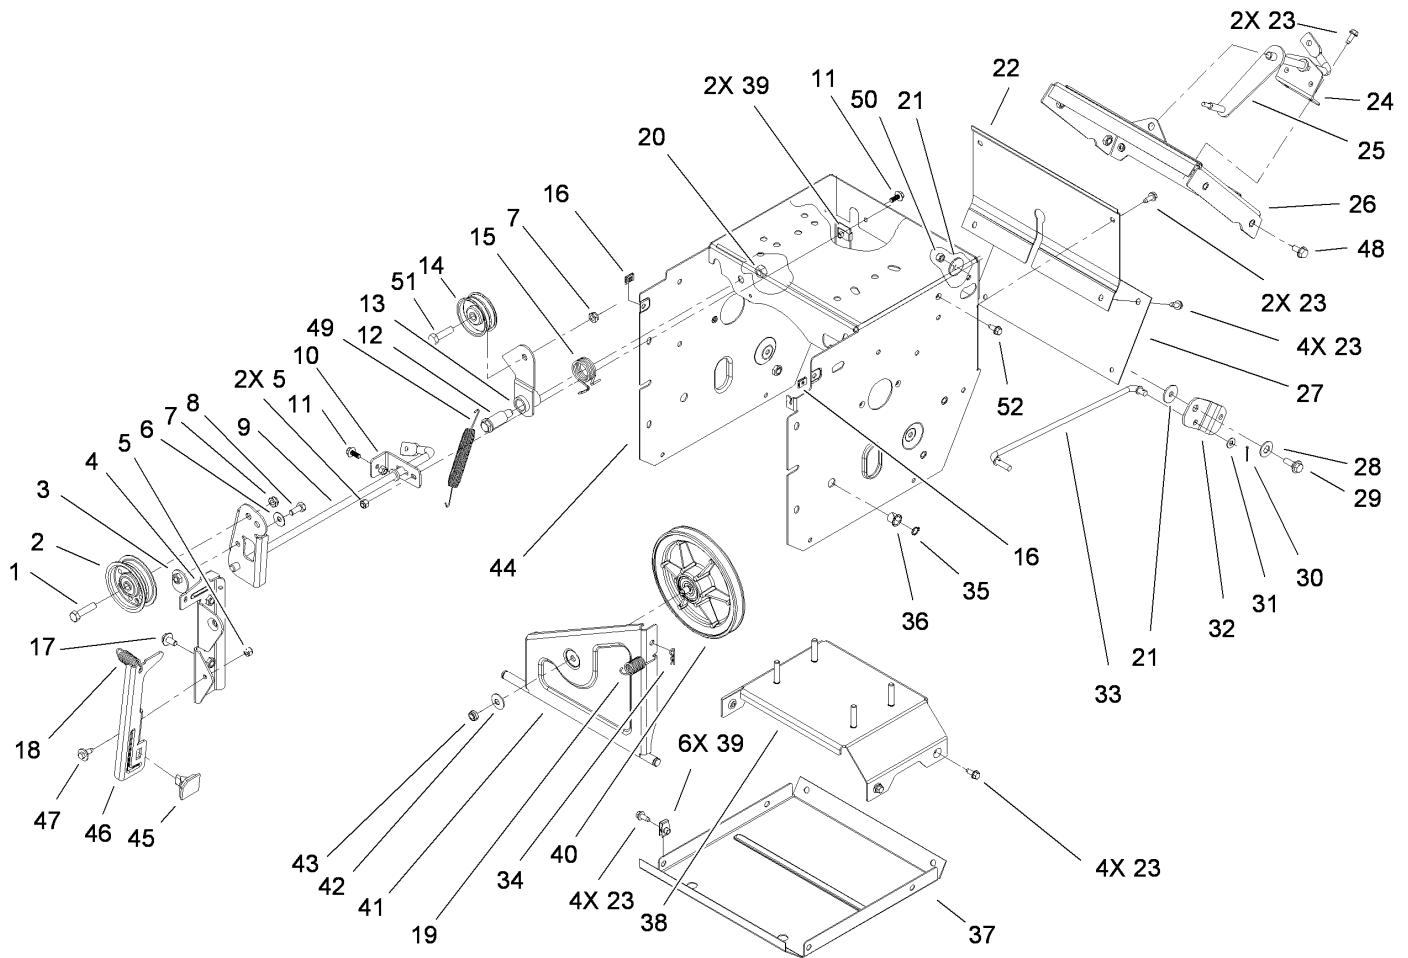


Frame Assembly

Ref	Part No.	Qty.	Description
1	323-8	1	Screw-HH
2	92-7104	1	Pulley-Idler
3	107-1047	1	Nut
4	107-1039	1	Bracket-Idler, Impeller
5	3296-42	3	Nut-Lock, NI
6	3290-456	1	Washer-Belleville
7	3296-59	2	Nut-Lock, NI
8	322-3	1	Screw-HH
9	107-3838-03	1	Impeller Clutch ASM
10	106-7341	1	Bracket-Rear, Clutch
11	99-6810	2	Screw-HH
12	108-5056	1	Bolt-Shoulder
13	108-5058	1	Arm-Idler, Traction
14	115-5694	1	Pulley-Idler
15	108-7332	1	Spring-Torsion
16	107-1013	2	Nut-Speed, U-Type
17	3234-7	2	Screw-HHF
18	107-3829	1	Spring-Extension
19	107-1003	1	Spring-Extension
20	3296-76	1	Nut-Lock, NI
21	5-4460	2	Washer-Pivot
22	108-0022-01	1	Cover-Upper
23	32144-10	16	Screw-HWH
24	108-0036	1	Bracket-Rod, Shift

Ref	Part No.	Qty.	Description
25	106-7268	1	Lever-Control, Traction
26	108-0026-01	1	Shift Plate ASM
27	106-7345-01	1	Cover-Lower
28	25-5640	1	Washer
29	27-0410	1	Screw-Shoulder
30	3272-4	1	Pin-Cotter
31	3256-23	1	Washer-Flat
32	107-1011	1	Bellcrank-Drive
33	106-4467	1	Link-Control, Speed
34	3290-307	1	Pin-Hair
35	32151-61	2	Ring-Retaining
36	256-257	2	Bushing-Nyliner
37	106-7330-01	1	Pan-Bottom
38	112-8127	1	Frame Brace ASM
39	107069	8	Clip
40	108-0031	1	Traction Pulley ASM
41	108-7307	1	Friction Wheel Bracket ASM
42	3290-340	1	Washer-Belleville
43	3296-5	1	Nut-Lock
44	114-9259-01	1	Traction Frame ASM
45	66-8060	1	Pad-Brake
46	107-1000	1	Arm-Brake
47	92-9698	1	Screw-Shoulder
48	32144-14	4	Screw-HWHTF




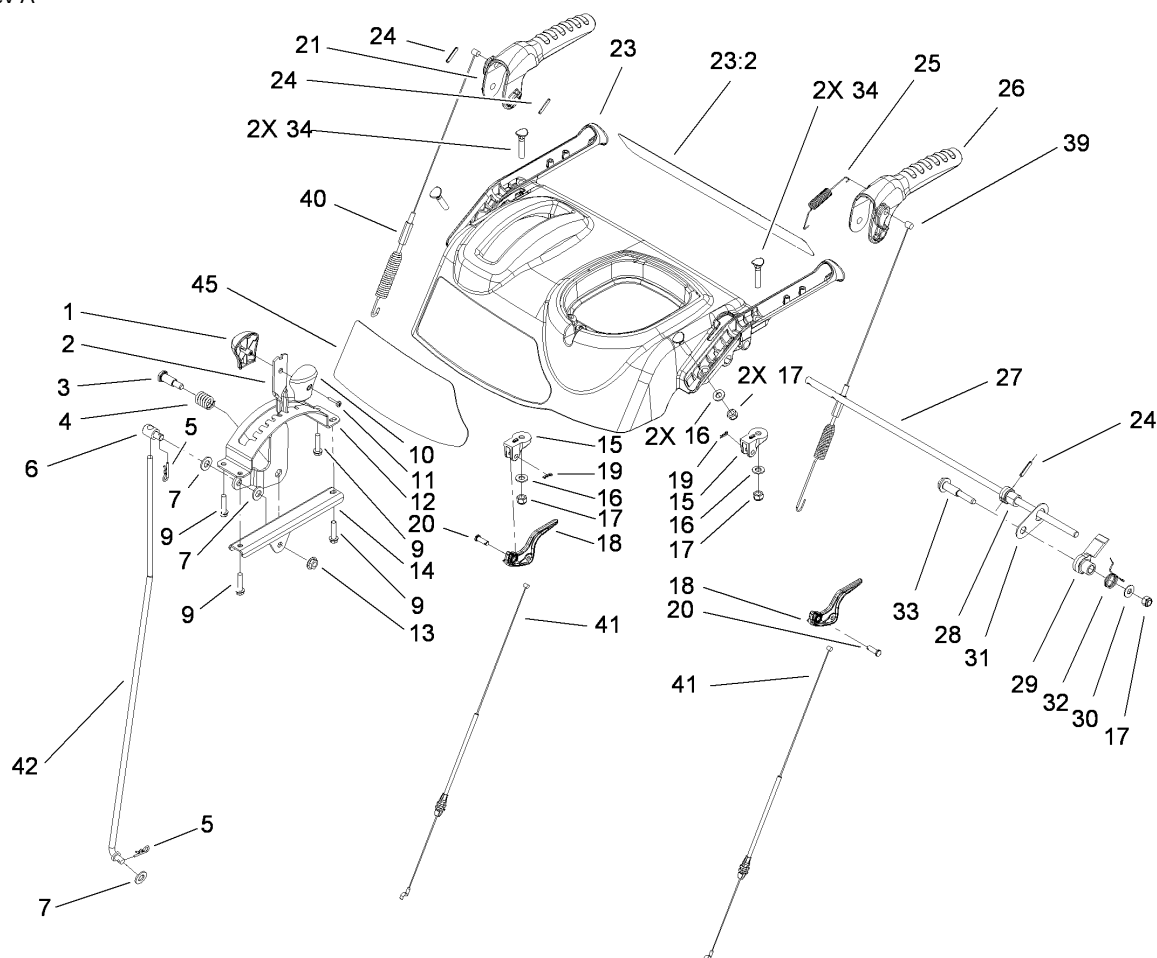

Handle Assembly


Ref	Part No.	Qty.	Description
1	106-4423	1	Knob-Shift, RH
2	106-7278-03	1	Selector-Speed
3	63-2650	1	Screw-Shoulder
4	108-7313	1	Spring-Compression
5	3290-307	2	Pin-Hair
6	110-3446	1	Trunion-Rod
7	3256-24	3	Washer-Flat
9	46-8092	4	Screw-Plastite
10	105-9999	1	Knob-Shift, LH
11	94-4496	1	Screw-PPH
12	106-7277-03	1	Guide-Selector, Speed
13	32128-13	1	Nut-HF
14	106-7279-03	1	Mount-Selector, Speed
15	105-9980	2	Mount-Clutch, Lever
16	3256-70	4	Washer-Flat
17	3296-72	5	Nut-Lock, NI
18	106-4505	2	Lever-Clutch
19	108-2992	2	Pin-Hair
20	1-808265	2	Pin-Clevis
21	106-4413	1	Lever-Auger
23	112-6633	1	Panel-Control
23:2	112-6627	1	Decal-Back, Control Panel
24	32121-125	3	Pin-Spring
25	107-3001	1	Spring-Tension

Ref	Part No.	Qty.	Description
26	106-4410	1	Lever-Traction
27	105-9996	1	Rod-Lockout
28	107-1043	1	Cam-Lockout
29	108-0023	1	Latch-Lockout
30	98-3499	1	Washer-Flat
31	107-3000	1	Link-Lockout
32	108-0024	1	Spring-Torsion
33	106-4412	1	Screw-Shoulder
34	107-3018	4	Screw-Handle
39	115-5671	1	Cable-Traction
40	115-5685	1	Cable-Auger
41	107-8896	2	Cable-Clutch
42	107-1005	1	Rod-Shift
45	112-8126	1	Decal-Control Panel

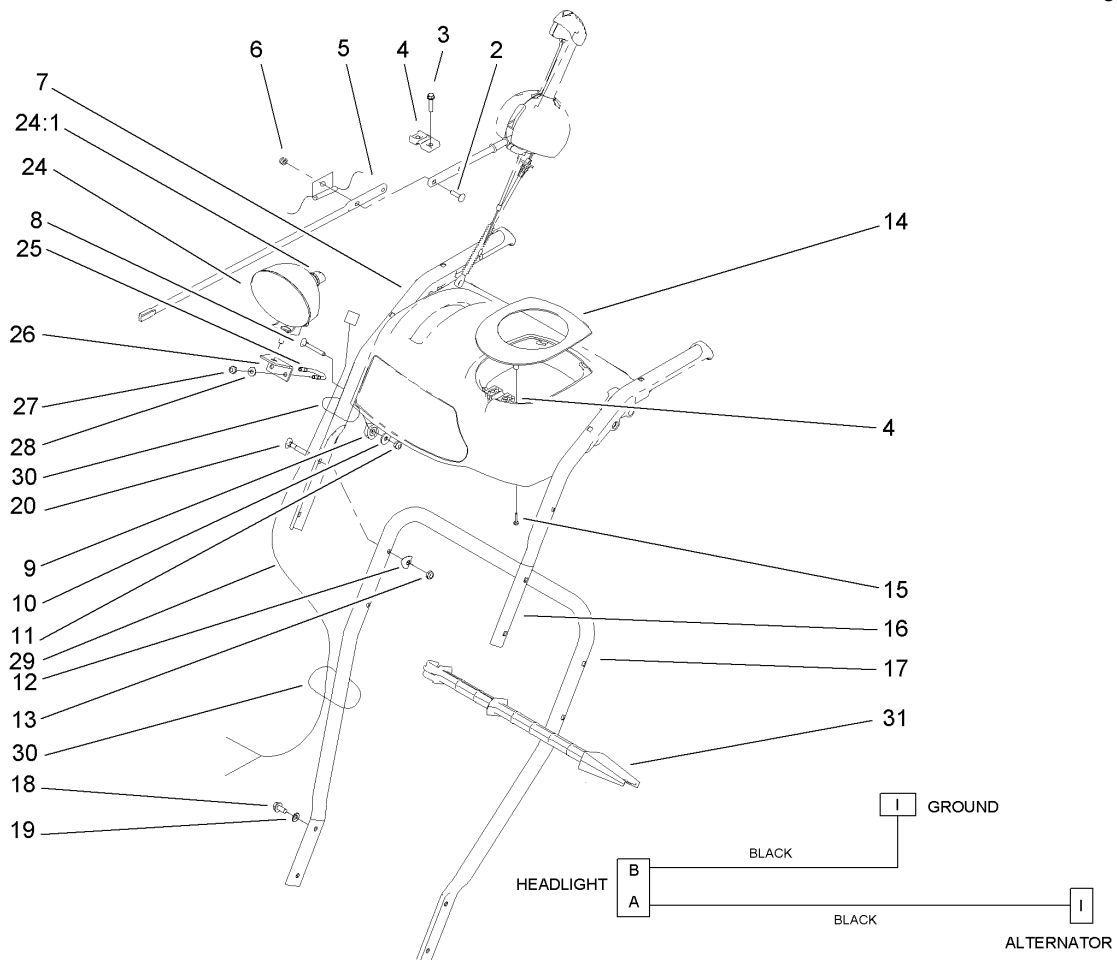

Handle and Control Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
2	3229-30	2	Screw-CARR	28	3256-1	2	Washer-Flat
3	46-8092	2	Screw-Plastite	29	106-4511	1	Harness-Wire
4	105-9987	2	Support-Rod	30	614249	2	Strap-Tie
5	106-7283	1	Rod-Chute, Front	31	110-3408	1	Stick-Cleanout
6	3296-73	2	Nut-Lock, NI				
7	108-0038-03	1	Handle-Upper, RH				
8	95-4453	2	Screw				
9	106-4509	2	Clamp-Cable				
10	87-6630	2	Washer-Plain				
11	3296-73	2	Nut-Lock, NI				
12	107-3844	4	Washer				
13	3296-72	4	Nut-Lock, NI				
14	106-4586	1	Cover-Panel, Control				
15	94-4496	2	Screw-PPH				
16	108-0037-03	1	Handle-Upper, LH				
17	105-9981-03	1	Handle-Lower				
18	32144-14	4	Screw-HWHTF				
19	3290-475	4	Washer-Belleville				
20	92-2260	4	Screw-Handle				
24	106-4510	1	Headlamp ASM				
24:1	108-0008	1	Lamp-12 Volt				
25	107-3024	1	Clamp				
26	107-1020-03	1	Bracket-Light				
27	3296-73	2	Nut-Lock, NI				

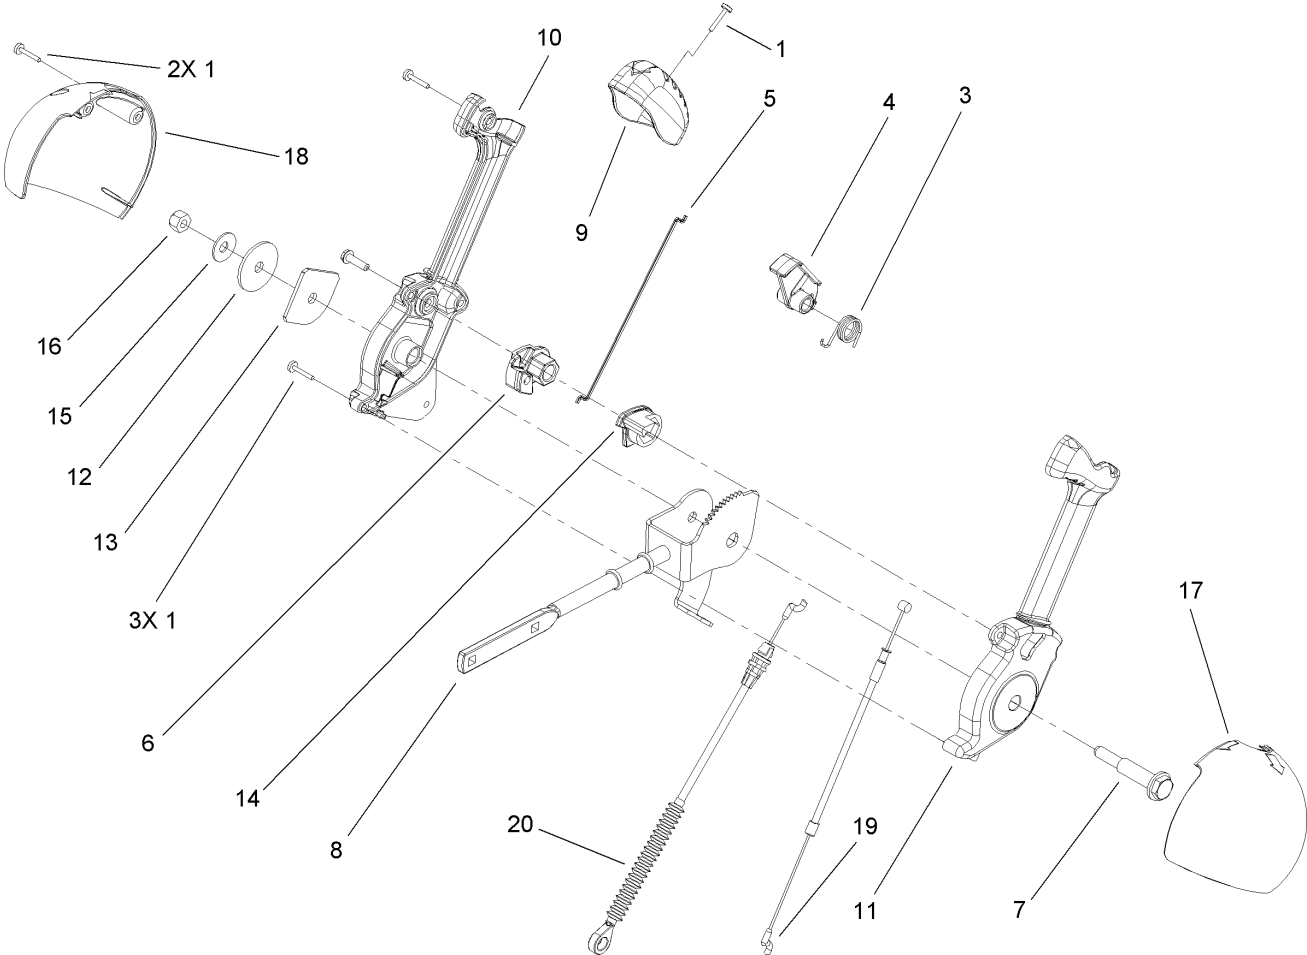

Lever Chute Control Assembly

Ref	Part No.	Qty.	Description				
1	94-4496	6	Screw-PPH				
3	105-9982	1	Spring-Torsion				
4	105-9984	1	Trigger-Latch				
5	105-9985	1	Link-Latch				
6	105-9988	1	Lever-Cable, Deflector				
7	105-9995	1	Screw-Shoulder				
8	106-4479	1	Rod-Control, Chute				
9	106-7280	1	Cap-Lever				
10	106-7281	1	Lever-Chute Control, RH				
11	106-7282	1	Lever-Chute Control, LH				
12	107-3002	1	Washer-Nylon				
13	106-7295	1	Plate-Friction				
14	106-7310	1	Pawl-Latch				
15	3290-456	1	Washer-Belleville				
16	3296-29	1	Nut-Lock, NI				
17	105-9986	1	Cover-Chute Lever, LH				
18	106-7292	1	Cover-Chute Lever, RH				
19	105-9989	1	Cable-Release, Chute				
20	105-9990	1	Cable-Control, Deflector				



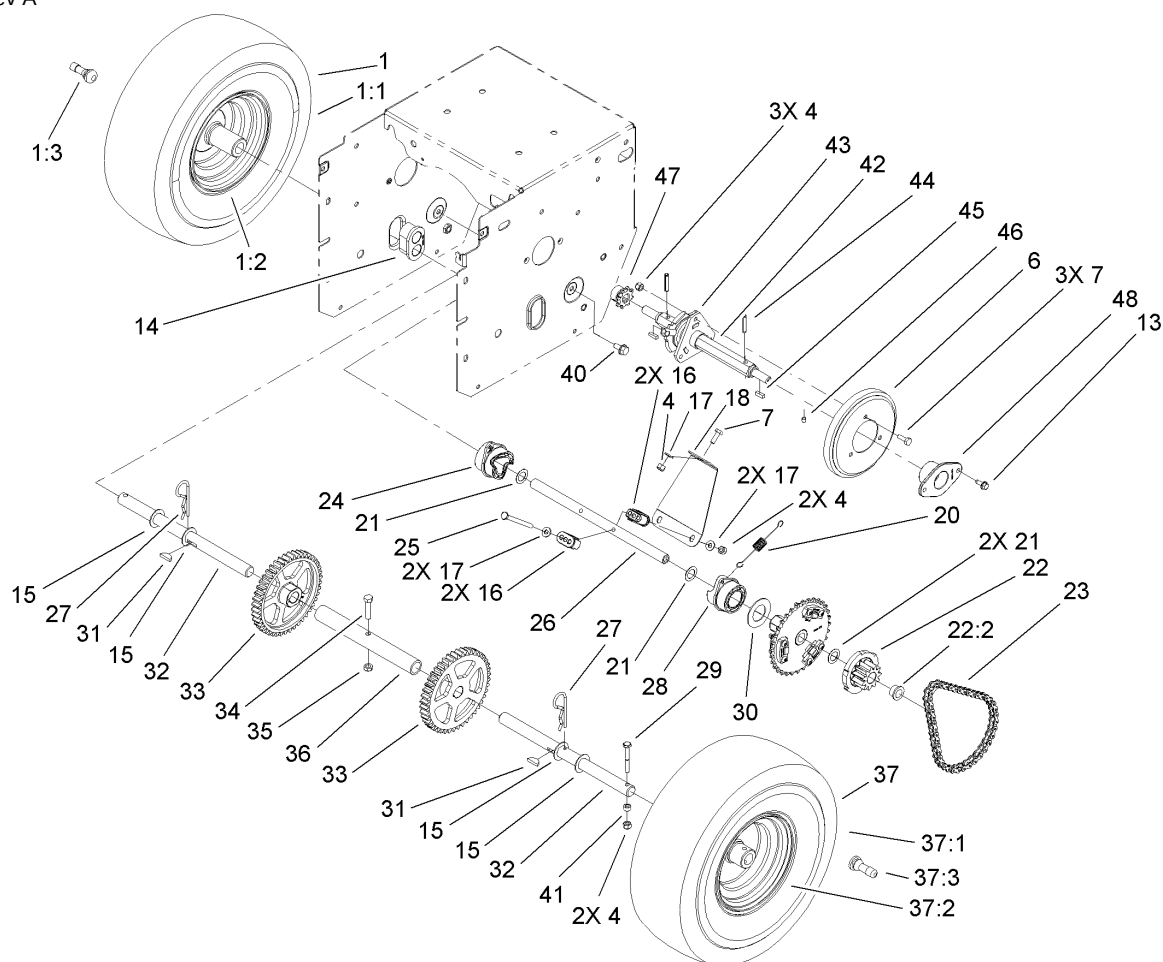

Wheel Clutch Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
❶ 1		1	RH Wheel And Tire ASM	29	108-2975	2	Screw-HH
1:1	107-3042	1	Tire	30	107-8891	2	Washer-Thrust
1:2	107-3043	1	Rim-Tire	31	3257-7	2	Key-Woodruff
1:3	232-27	1	Stem-Valve	32	107-8898	2	Shaft-Axle
4	3296-42	8	Nut-Lock, NI	33	106-4572	2	Gear-Axle, 44 Tooth
6	106-4480	1	Wheel-Friction	34	322-17	1	Screw-HH
7	321-4	4	Screw-HH	35	3296-47	1	Nut-Lock, NI
13	32144-10	4	Screw-HWH	36	106-7259	1	Tube-Axle
14	106-4558	2	Bearing-Axle	❶ 37		1	LH Wheel And Tire ASM
15	3-8664	4	Washer-Thrust	37:1	107-3042	1	Tire
16	107-8889	4	Guide-Collar	37:2	107-3043	1	Rim-Tire
17	3256-22	5	Washer-Flat	37:3	232-27	1	Stem-Valve
18	107-8892-03	1	Brace-Collar, Shift	40	32144-14	2	Screw-HWHTF
20	107-8893	2	Spring-Extension	41	55-9370	2	Spacer-Blade, Rotor
21	108-0015	4	Washer-Flat	42	108-7314	1	Shaft-Hex
22	107-8894	2	11T Gear ASM	43	106-4434	1	Trunion-Hex
22:2	108-2973	2	Bushing-Flange	44	32121-9	2	Pin-Roll, Slotted
23	108-0016	2	Chain-Roller	45	94-8850	2	Key-Square
23	2710-6	2	Link-Connecting	46	3245-32	4	Screw-HSH
24	107-8888	1	Collar-Shift, RH	47	106-7317	2	Sprocket-8 Tooth
25	321-23	2	Screw-HH	48	108-7319	2	Retainer-Bearing
26	107-8883	1	Shaft-Intermediate				
27	3290-343	2	Pin-Hair				
28	107-8887	1	Collar-Shift, LH				

Attachments and Accessories

For 38657C - Power Max 1128 OXE Snowthrower

Product Name	Model/Part
Tire Chain Kit	107-3813
Snow Cab	107-3814
Weight Kit	107-3815
28 Inch Drift Breaker	107-3817

NOTES

