




MODEL NO. 71182-4900001 & UP
 MODEL NO. 71200-4900001 & UP

PARTS
 CATALOG

1232XL LAWN TRACTOR

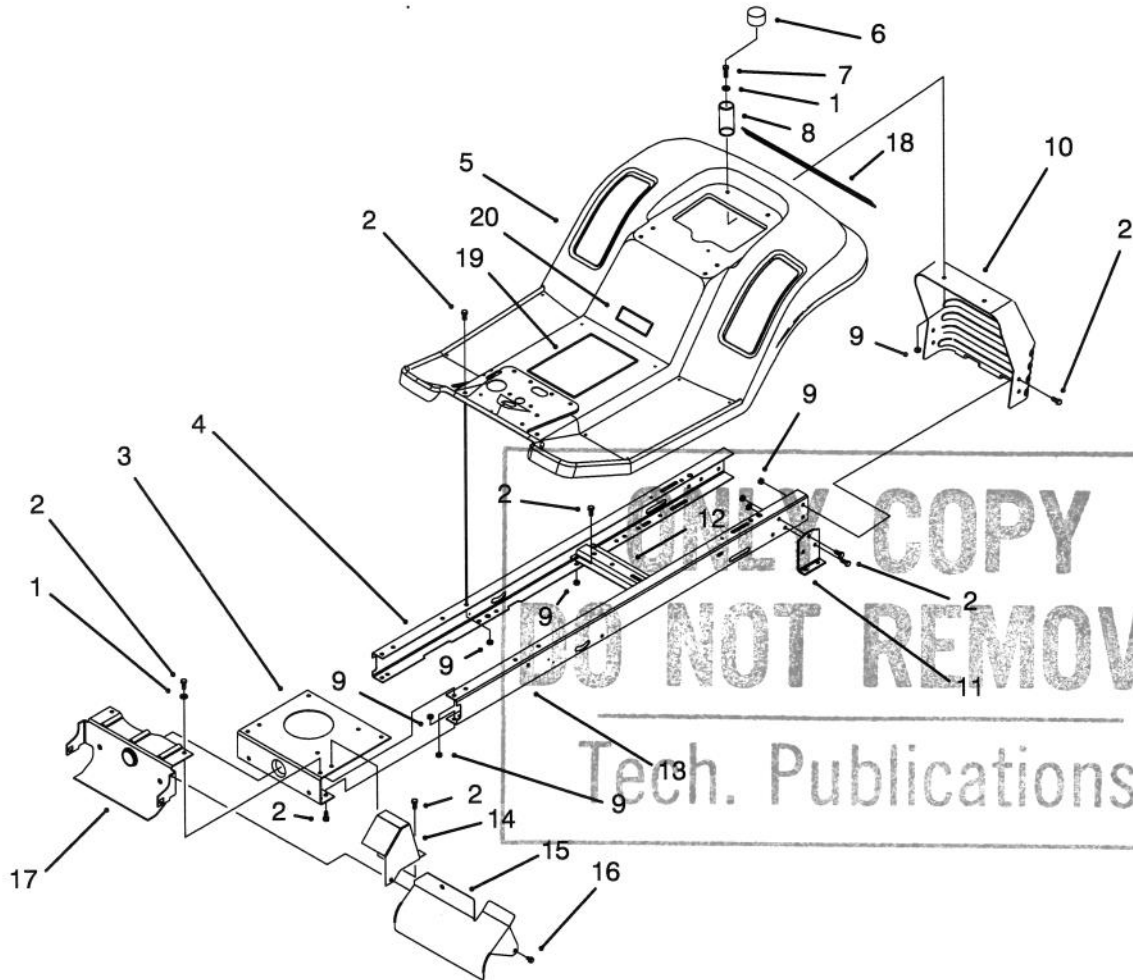


C-1307A

FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3256-23	Washer - Flat	4
2	322-3	Screw - Hex Hd. Cap	22
3	88-4630	Plate - Engine Mount	1
4	88-4650	Rail - R.H. Frame	1
5	88-3840-01	Body - Rear	1
6	701178	Cap - Protector	2
7	322-5	Screw - Hex Hd. Cap	2
8	88-6220	Spring - Compression	2
9	3296-29	Nut - Lock	24
10	88-3940	Panel - Rear Hitch	1
11	88-5260	Bracket - Transaxle Mtg.	2

Ref. No.	Part No.	Description	No. Used
12	88-4620	Bracket - Idler Pivot	1
13	88-4660	Rail - L.H. Frame	1
14	88-4960	Shield - Exhaust Pipe	1
15	88-6290	Shield - Muffler	1
16	32104-76	Screw - Thread Tapping	1
17	88-5120	Support - Front Axle	1
18	92-2489	Decal - Rear Body	1
19	92-2484	Decal - Instruction	1
20	117242	Decal - Made in USA (Model No. 71182 Only)	1

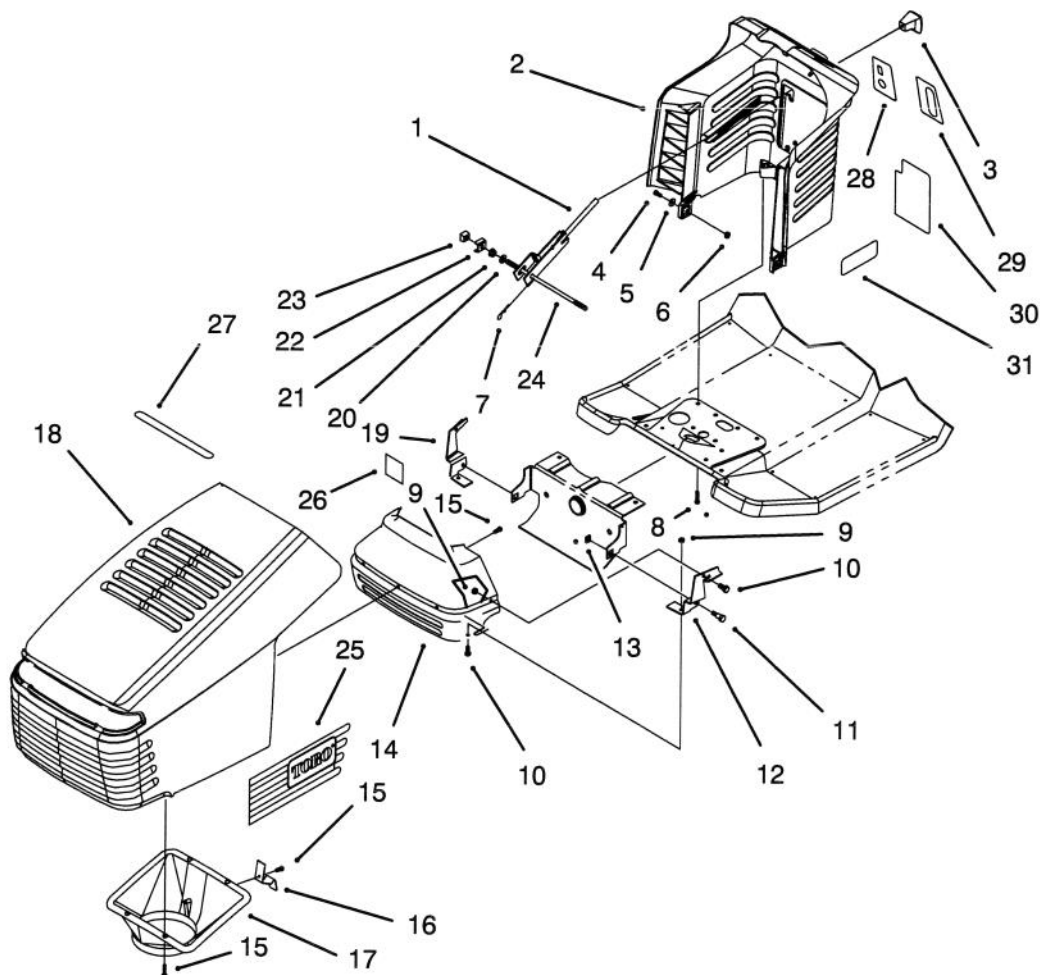


C-1308

HOOD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88-5190	Lever - Deck Engage	1
2	88-3910	Tower - Steering	1
3	62-1292	Knob - Engage Lever	1
4	322-3	Screw - Hex Hd. Cap	2
5	3256-23	Washer - Flat	2
6	3296-29	Nut - Lock	2
7	3290-307	Pin - Cotter	2
8	46-8091	Screw - Plastite	2
9	3296-42	Nut - Lock	4
10	321-4	Screw - Hex Hd. Cap	4
11	28-0540	Bolt - Shoulder	2
12	88-6050	Bracket - Hood Pivot L.H.	1
13	3290-496	Nut - Retained	2
14	88-3930	Shield - Heat	1
15	46-8090	Screw - Plastite	8
16	88-4220	Latch - Hood	1
17	88-4050	Duct - Hood Air	1
18	92-8650	Hood	1
19	88-6040	Bracket - Hood Pivot R.H.	1
20	3256-24	Washer - Flat	2
21	32128-43	Nut - Flange	2

Ref. No.	Part No.	Description	No. Used
22	88-4160	Clamp - Pivot Rod	2
23	88-4140	Nut - Wedge	2
24	88-4170	Rod - Tower Pivot	1
25	92-2468	Decal - Hood L.H.	1
*	92-2467	Decal - Hood R.H.	1
26	92-5782	Patch - Heat Tape	1
27	92-5748	Decal - Air Duct	1
28	92-2478	Decal - Ignition (Model No. 71182)	1
*	92-5732	Decal - Ignition (Model No. 71200)	1
29	92-2461	Decal - Throttle (Model No. 71182)	1
*	92-5730	Decal - Throttle (Model No. 71200)	1
30	92-2462	Decal - Deck Engage (Model No. 71182)	1
*	92-5733	Decal - Deck Engage (Model No. 71200)	1
31	92-2480	Decal - Tower 1232XL	2

*Not Illustrated

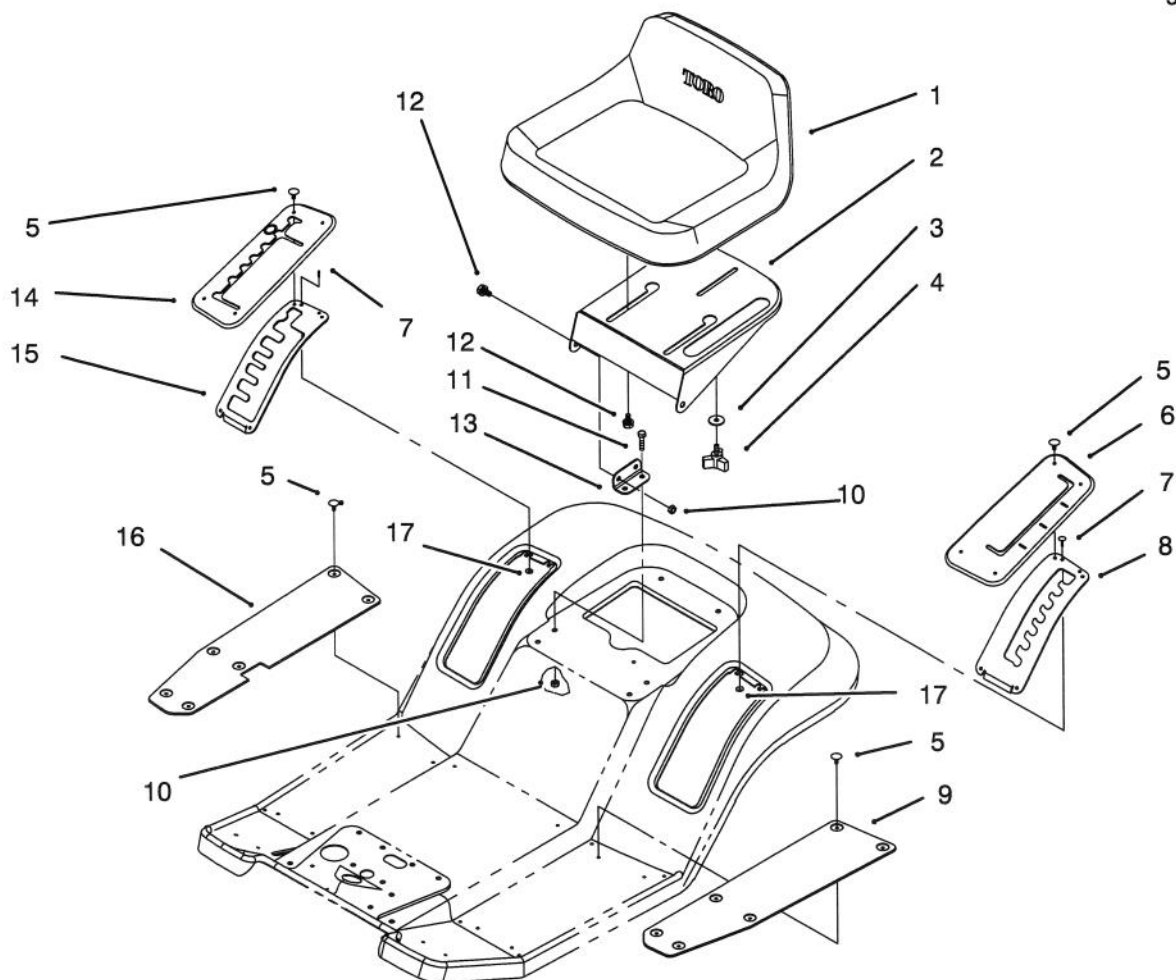


C-1830

SEAT ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	88-4330	Seat (Model No. 71182 Only)	1	8	88-5030	Gate - H.O.C.	1
*	88-3950	Seat (Model No. 71200 Only)	1	9	88-5240	Mat - L.H. Foot	1
2	88-4910	Support - Seat	1	10	3296-29	Nut - Lock	6
3	5-4460	Washer - Fender	1	11	322-3	Screw - Hex Hd. Cap	4
4	700806	Knob - Studded	1	12	37-8770	Bolt - Shoulder	4
5	3290-479	Fastener - Panel	20	13	88-4820	Bracket - Seat Hinge	2
6	88-5170	Cover - H.O.C.	1	14	88-5160	Cover - Shift Gate	1
7	3269-5	Rivet - Pop	4	15	88-5020	Gate - Shift	1
				16	88-5220	Mat - R.H. Foot	1
				17	3269-6	Washer - Backup	4

*Not Illustrated

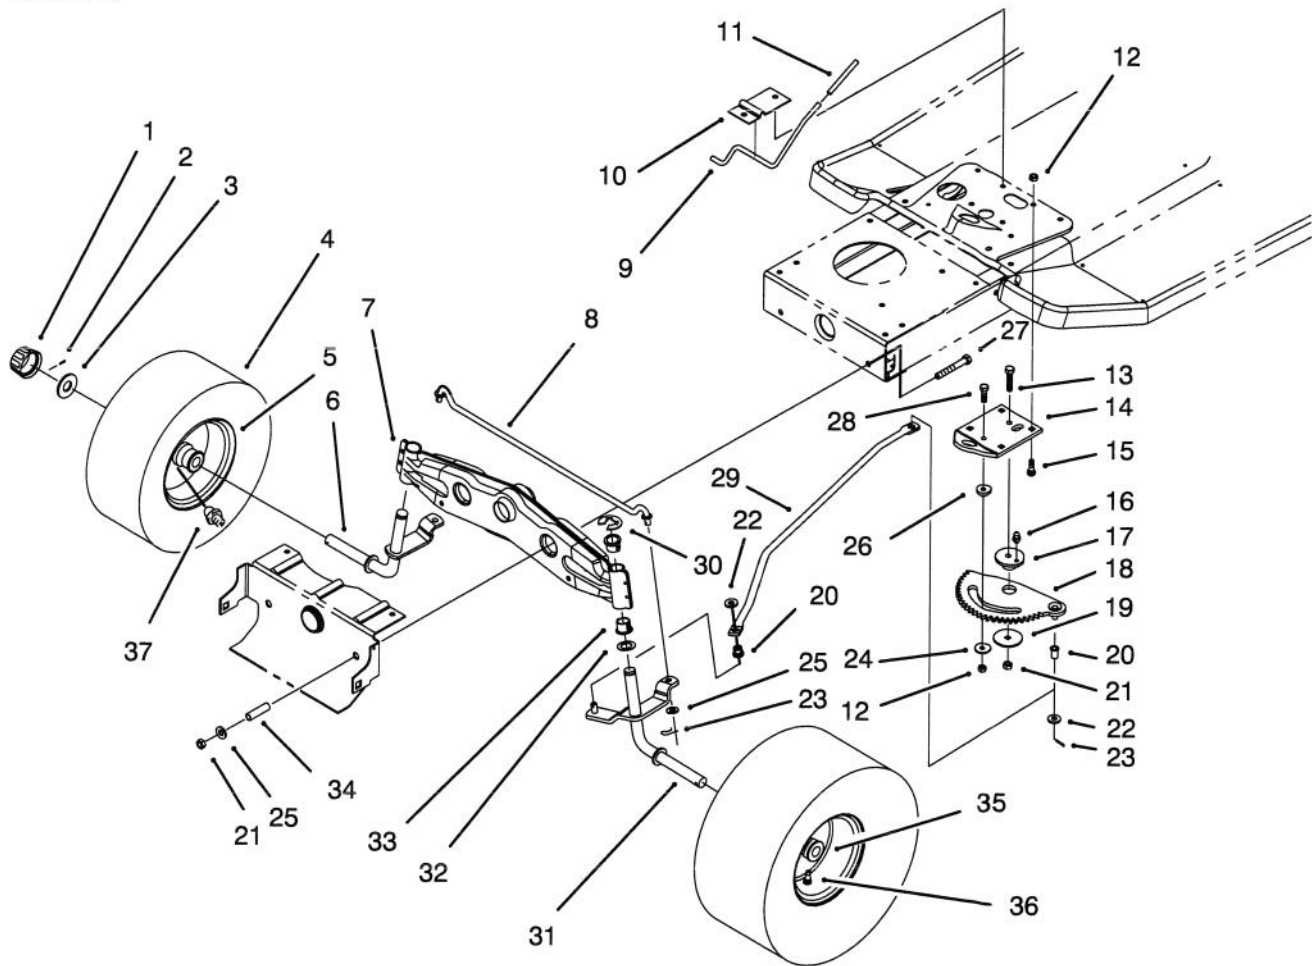


C-1302

FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	61-9780	Cap - Hub	2
2	3272-12	Pin - Cotter	2
3	28-2480	Washer	2
4	88-4060	Tire - 13"	2
5	88-4360	Rim - Front Wheel	2
6	92-7889	Spindle - R.H.	1
7	88-4460	Axle - Front	1
8	88-5380	Rod - Steering Tie	1
9	88-5510	Rod - Parking Brake	1
10	88-5520	Bracket - Parking Brake	1
11	88-0890	Grip - Brake Rod	1
12	3296-29	Nut - Lock	5
13	3231-4	Screw - Carriage	1
14	88-5130	Bracket - Steering Rack	1
15	3230-1	Bolt - Carriage	4
16	302-26	Fitting - Grease	1
17	88-4670	Bushing - Eccentric	1
18	88-5200	Rack - Steering	1
19	111419	Washer - Fender	1
20	52-2891	Bushing - Steering Link	2
21	3296-39	Nut - Lock	3

Ref. No.	Part No.	Description	No. Used
22	3256-25	Washer - Flat	2
23	3272-10	Pin - Cotter	4
24	5-4460	Washer - Fender	1
25	3256-24	Washer - Flat	4
26	88-5010	Spacer - Steering Rack	1
27	323-13	Screw - Hex Hd. Cap	2
28	3230-3	Screw - Carriage	1
29	88-4830	Link - Drag	1
30	32151-48	E-Ring	2
31	92-7890	Spindle - L.H.	1
32	3-6498	Washer - Thrust	2
33	88-5800	Bushing - Steering Spindle	4
34	88-5470	Spacer - Front Axle	2
35	88-4400	Bearing - Wheel	4
36	232-27	Valve Stem w/Cap	2
37	302-5	Fitting - Grease	2
*	232-40	Tube - Inner (Optional)	2
*	88-4270	Wheel & Tire Assembly (Incl. Ref. #4 & 5)	2

*Not Illustrated

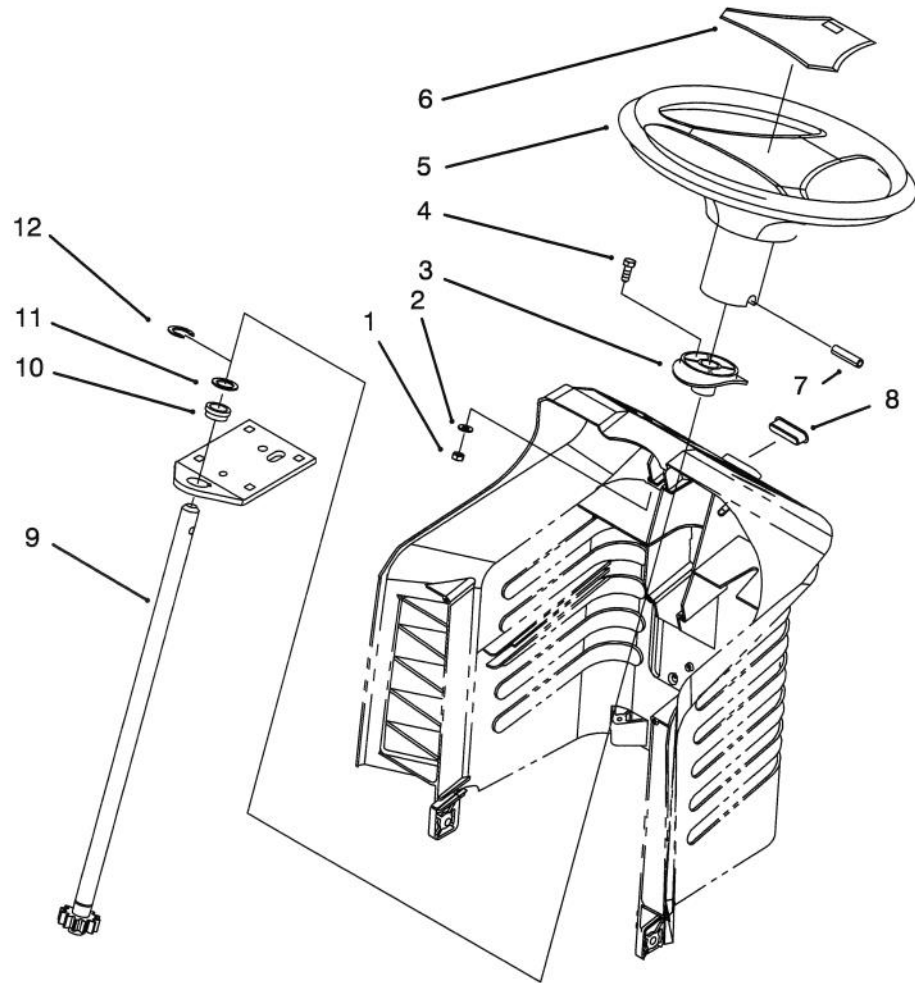


C-1341

STEERING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-42	Nut - Lock	2
2	3256-22	Washer - Flat	2
3	88-4190	Bushing - Sliding	1
4	321-4	Screw - Hex Hd. Cap	2
5	88-3850	Wheel - Steering (Incl. Ref. #6)	1
6	88-3870	Cover - Steering Wheel	1

Ref. No.	Part No.	Description	No. Used
7	32121-78	Pin - Roll	1
8	88-4150	Plug	1
9	88-6380	Shaft - Steering	1
10	88-5150	Bushing - Flange	1
11	3-6498	Washer - Thrust	1
12	32151-48	E-Ring	1

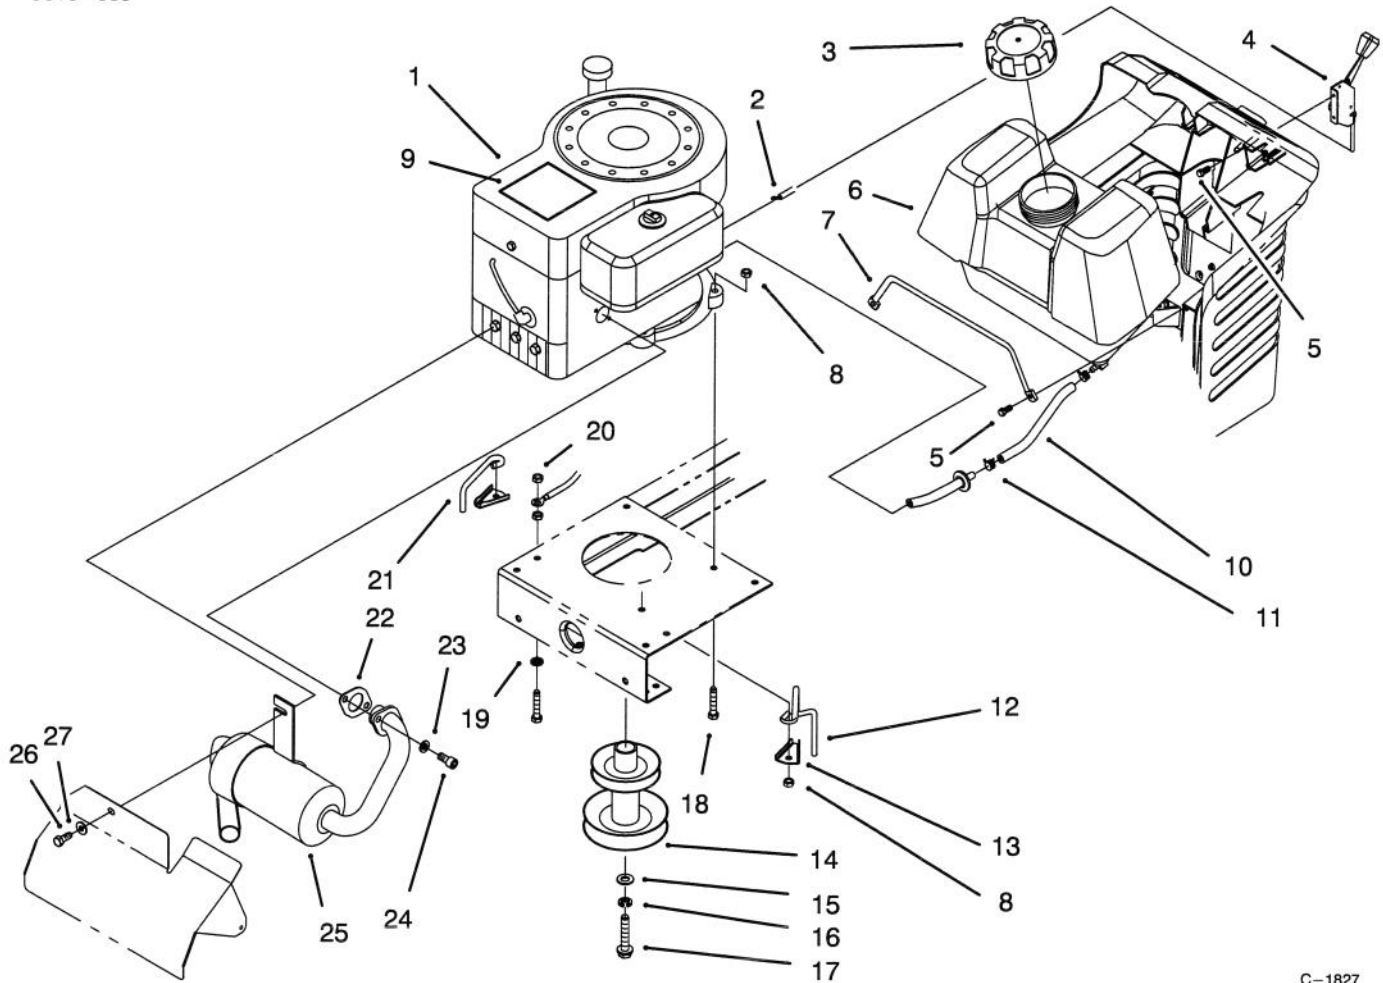


C-1827

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1		Engine - 12 H.P. (Model No. 71182 Only)	1
*		Engine - 12 H.P. (Model No. 71200 Only)	1
2	88-4350	Cable - Throttle	1
3	88-3980	Cap - Gas	1
4	88-4340	Control - Throttle	1
5	27-0220	Screw - Plastite	4
6	88-3880	Tank - Gas	1
7	88-5920	Rod - Gas Tank	1
8	3296-29	Nut - Lock	3
9	92-2482	Decal - Engine 12 H.P. (Model No. 71200 Only)	1
10	47-2963	Line - Fuel	1
11	2412-98	Clamp - Hose	2
12	88-6060	Guide - Belt L.H.	1

Ref. No.	Part No.	Description	No. Used
13	76-3820	Anchor - Belt Guide	2
14	88-5050	Pulley - Engine	1
15	3256-25	Washer - Flat	1
16	3253-22	Washer - Lock	1
17	26-0671	Bolt - Blade	1
18	322-9	Screw - Hex Hd. Cap	4
19	3255-8	Washer - Ext. Tooth Lock	1
20	32149-1	Nut - Keps	2
21	88-5490	Guide - Belt R.H.	1
22	88-4410	Gasket - Muffler	1
23	3253-4	Washer - Lock	2
24	3274-12	Screw - Hex Soc. Hd.	2
25	88-6480	Muffler	1
26	321-4	Screw - Hex Hd. Cap	1
27	3253-3	Washer - Lock	1

*Not Illustrated

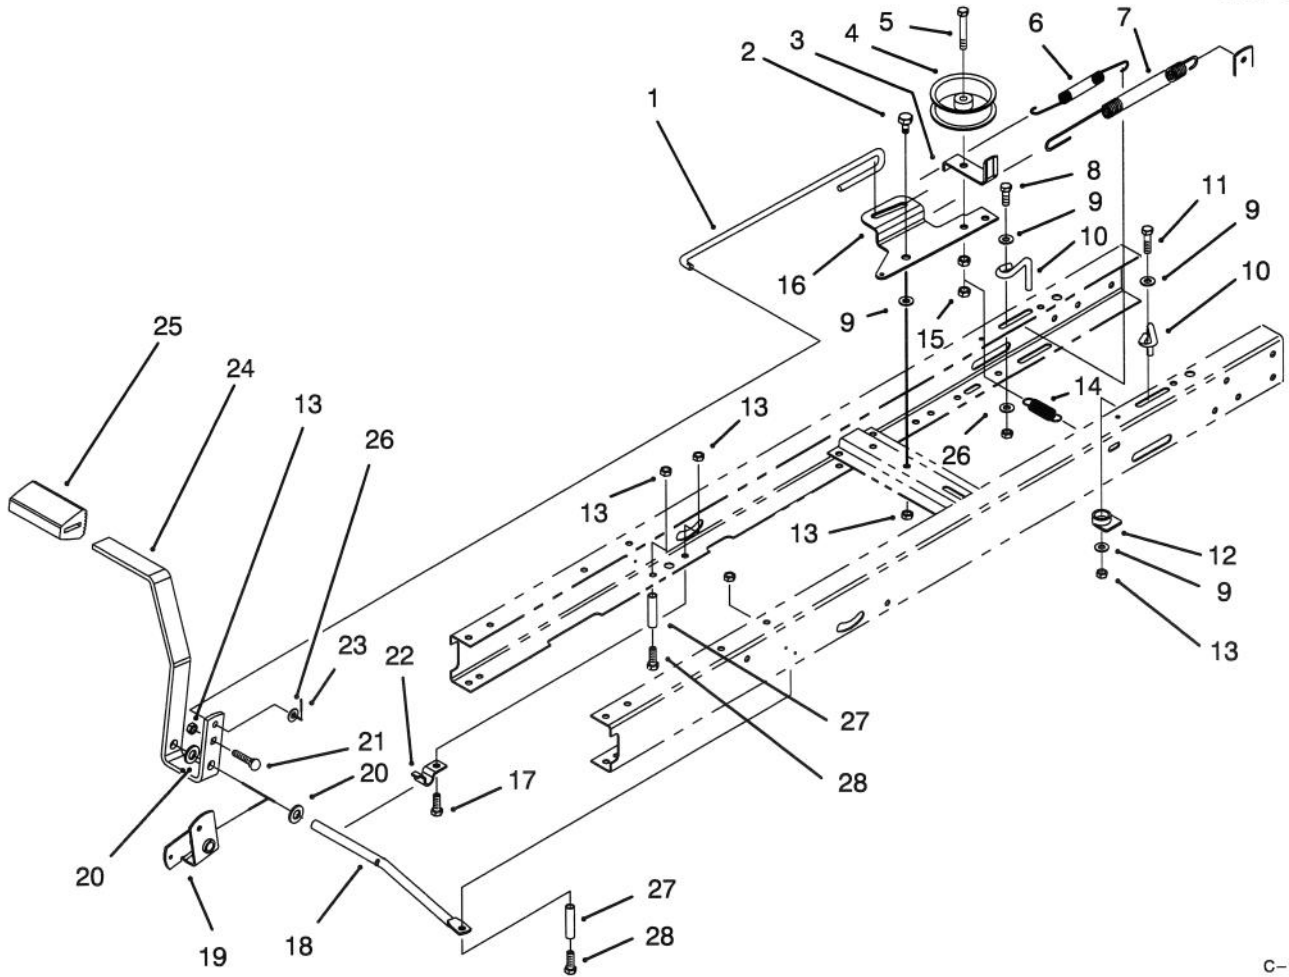


C-1828

CLUTCH ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88-5270	Rod - Clutch/Brake	1
2	37-8770	Bolt - Shoulder	1
3	88-5560	Guide - Idler Belt	1
4	88-5680	Pulley - Flat Idler	1
5	323-11	Screw - Hex Hd. Cap	1
6	27-8890	Spring - Pedal Return	1
7	88-6140	Spring - Brake	1
8	322-5	Screw - Hex Hd. Cap	1
9	5-4460	Washer - Flat	4
10	88-5460	Guide - Trans. Belt	2
11	322-7	Screw - Hex Hd. Cap	1
12	84-5610	Guide - Cable	1
13	3296-29	Nut - Lock	7
14	88-6330	Spring - Extension	1

Ref. No.	Part No.	Description	No. Used
15	3296-59	Nut - Lock	2
16	88-6070	Arm - Idler	1
17	322-3	Screw - Hex Hd. Cap	1
18	88-5500	Rod - Pedal Pivot	1
19	88-4800	Bellcrank	1
20	3256-26	Washer - Flat	2
21	3230-3	Bolt - Carriage	1
22	88-4810	Clamp - Shift Pivot	1
23	3272-10	Pin - Cotter	1
24	88-5000	Pedal - Clutch/Brake	1
25	65-2920	Pad - Pedal	1
26	3256-23	Washer - Flat	2
27	46-5590	Spacer - Tube	2
28	322-12	Screw - Hex Head Cap	2

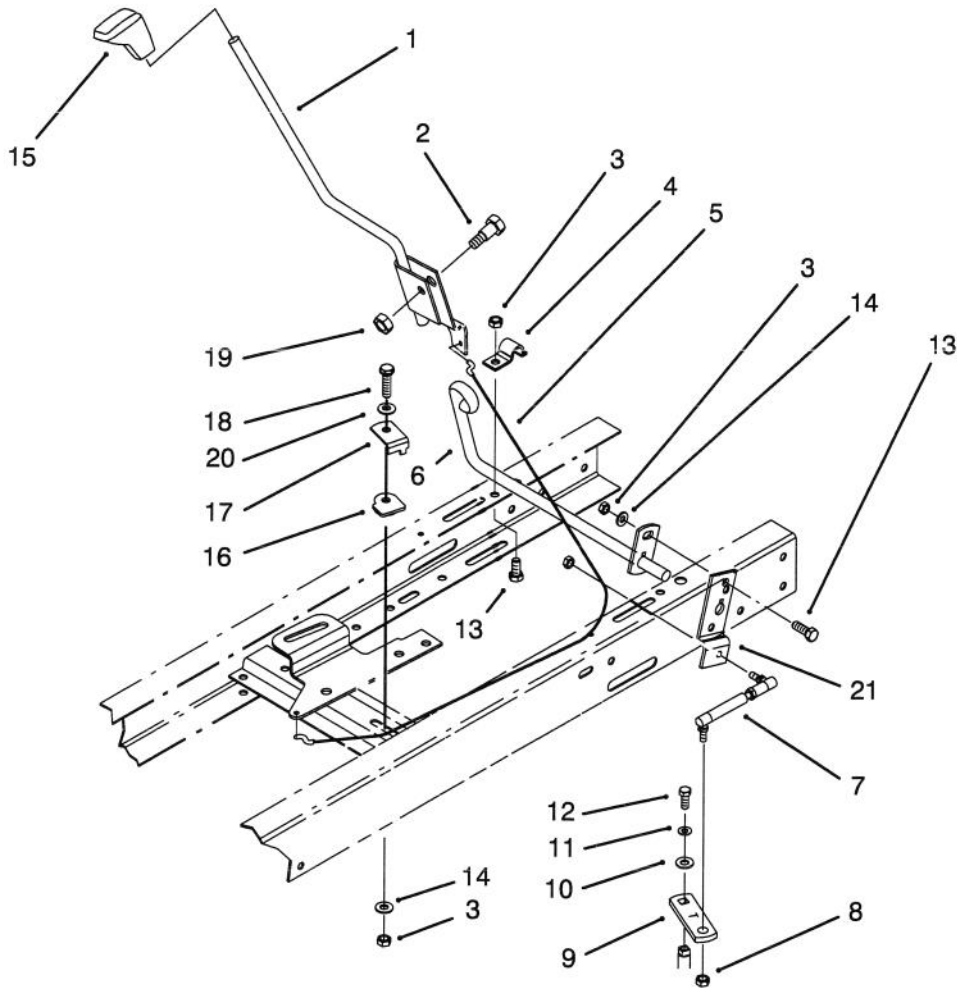


C-1317

SHIFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88-5300	Lever - Shift	1
2	5-4015	Bolt - Shoulder	1
3	3296-29	Nut - Lock	4
4	88-4810	Clamp - Shift Pivot	2
5	55-9321	Cable - Shotgo	1
6	92-5796	Pivot - Shift	1
7	88-5530	Rod - Shift Tie	1
8	3296-3	Nut - Lock	2
9	88-5340	Lever - Trans. Shift	1
10	7-5461	Washer - Hardened	1
11	3253-3	Washer - Lock	1

Ref. No.	Part No.	Description	No. Used
12	329-23	Screw - Hex Hd. Cap	1
13	322-3	Screw - Hex Hd. Cap	3
14	3256-23	Washer - Flat	2
15	62-1292	Knob - Shift	1
16	84-5610	Guide - Cable	1
17	88-5930	Keeper - Cable	1
18	3230-3	Bolt - Carriage	1
19	3296-39	Nut - Lock	1
20	3256-25	Washer - Flat	1
21	92-5794	Lever - Shift Pivot	1

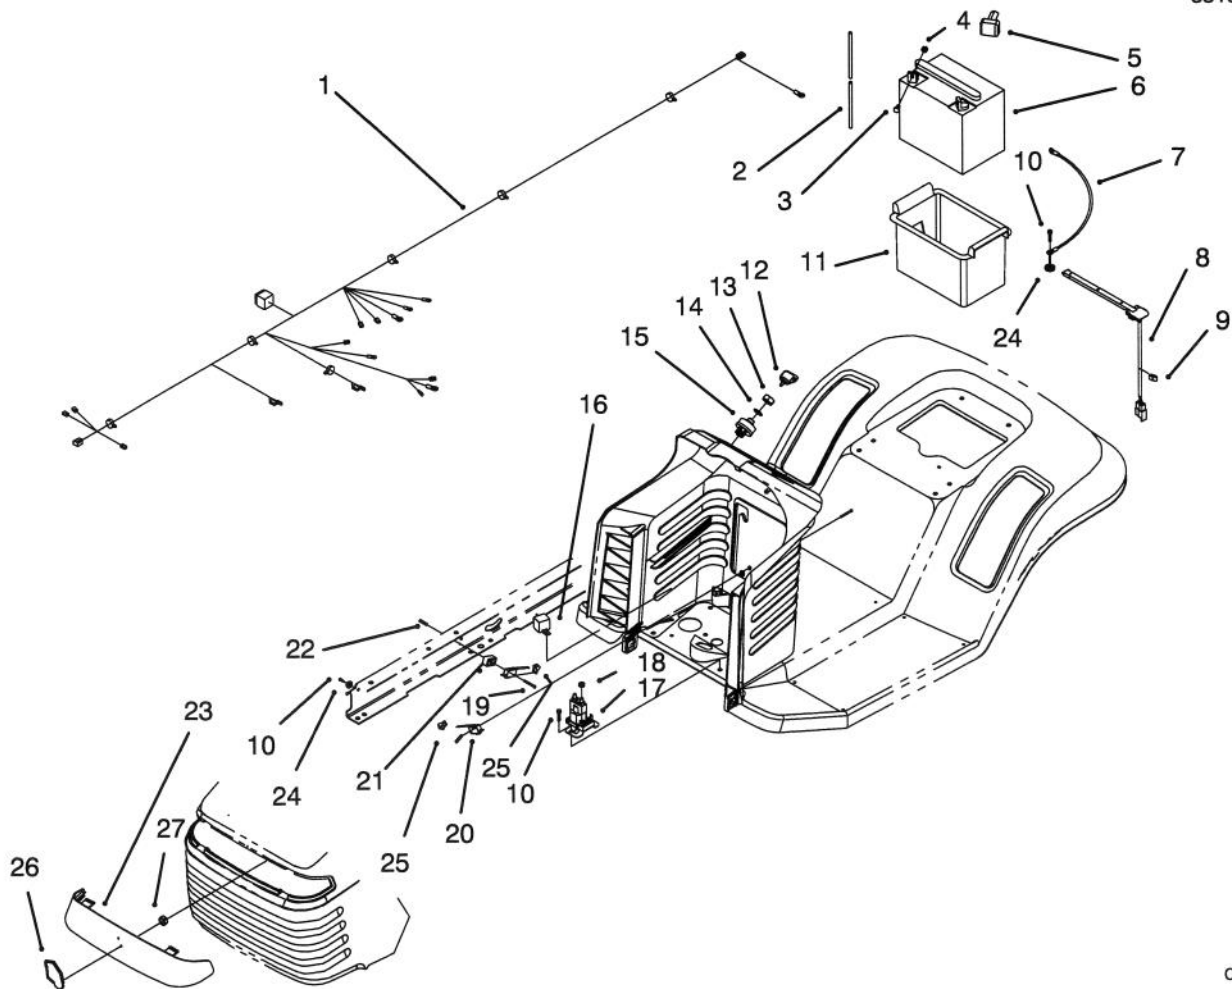


C-1306

ELECTRICAL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88-4310	Harness - Wire	1
2	56-2540	Vent - Tube	1
3	321-4	Screw - Hex Hd. Cap	2
4	32103-22	Nut - Wing	2
5	28-8080	Boot - Battery Terminal	1
6	80-2600	Battery - 7 Plate	1
7	44-8110	Cable - Battery Negative	1
8	38-1420	Switch - Seat	1
9	702366	Clip - Wire Retainer	1
10	32144-4	Screw - Hex Hd. Thr'd Form.	4
11	88-4040	Box - Battery	1
12	63-8360	Key - Ignition	1
13	218-461	Nut - Hex	1

Ref. No.	Part No.	Description	No. Used
14	3254-5	Washer - Lock	1
15	88-9830	Switch - Ignition	1
16	116397	Relay	1
17	47-1910	Solenoid	1
18	32149-2	Nut - Keps	2
19	910478	Screw - Phillips Hd.	4
20	88-9931	Switch - Micro	2
21	88-4880	Spacer - Microswitch	1
22	3290-354	Speednut	2
23	88-3960	Lens - Headlights	1
24	3255-7	Washer - Ext. Tooth Lock	2
25	88-4480	Seal - Plunger	2
26	80-2240	Plate - Grille Panel	1
27	3290-299	Nut - Tinnerman	1

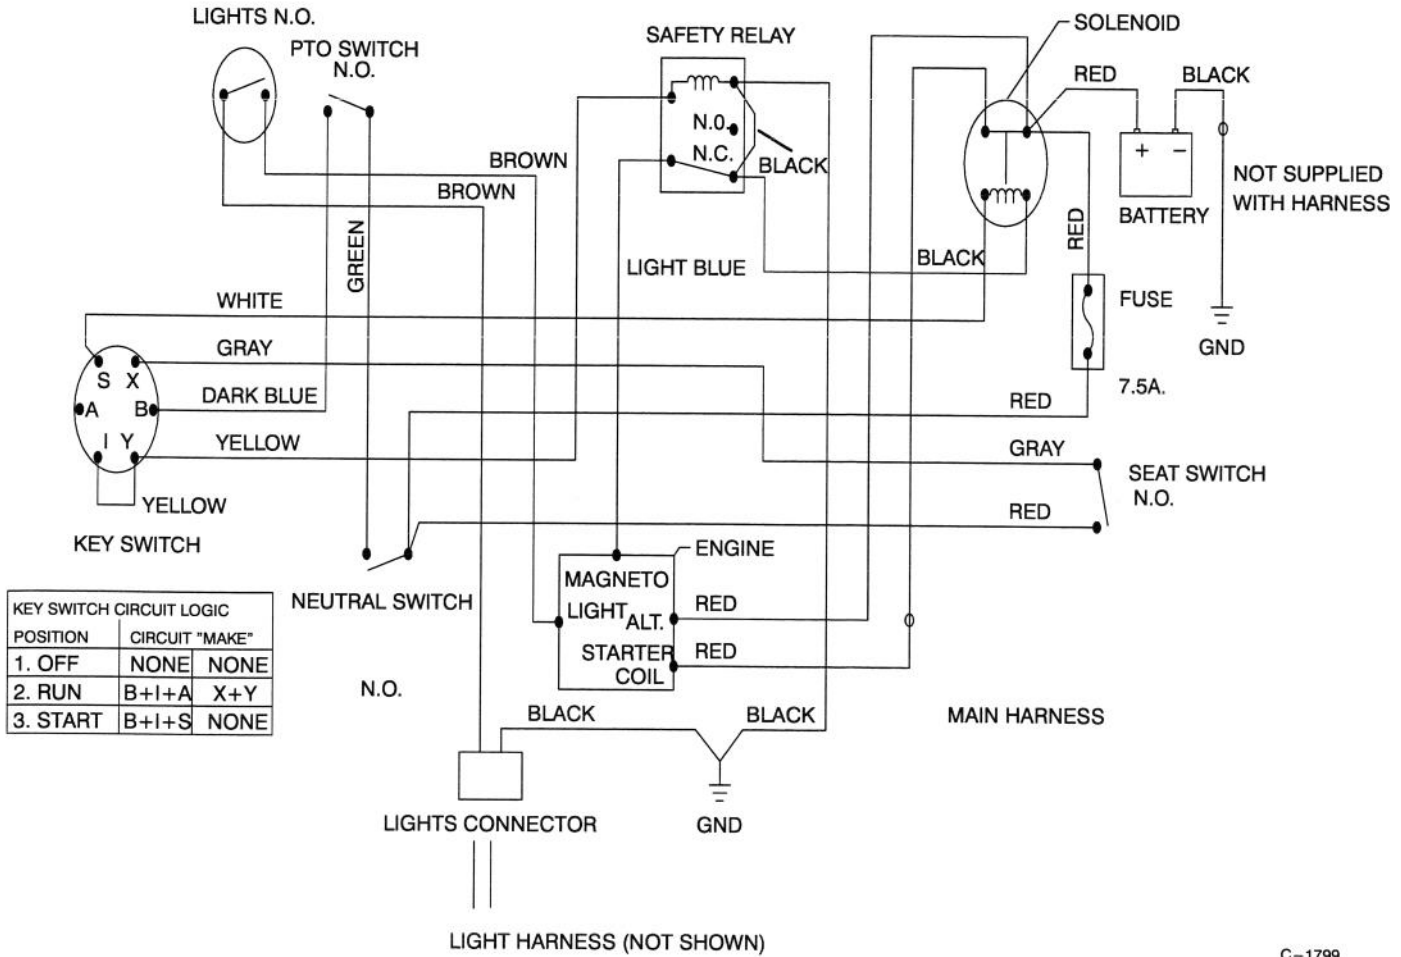


C-1799

ELECTRICAL SCHEMATIC

Ref. No.	Part No.	Description	No. Used


Ref. No.	Part No.	Description	No. Used

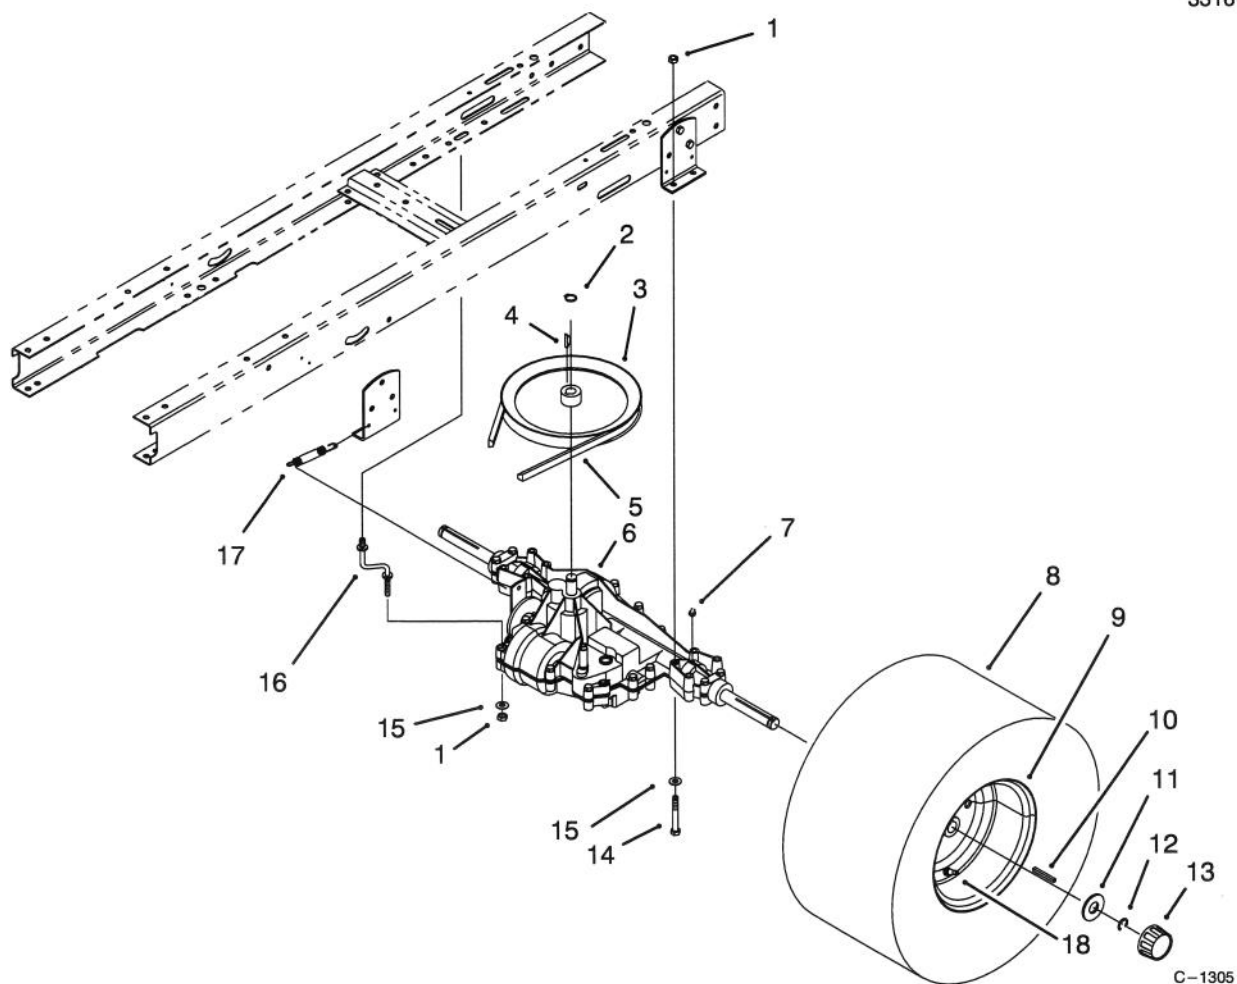

TRANSAXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3296-29	Nut - Lock	8	12	32151-48	E-Ring	2
2	32120-64	Ring - Snap	1	13	61-9780	Cap - Hub	2
3	88-4840	Pulley - Transmission	1	14	322-12	Screw - Hex Hd. Cap	4
4	3257-23	Key - Woodruff	1	15	3256-23	Washer - Flat	8
5	88-6270	V-Belt - Traction	1	16	88-5350	Strap - Torque	2
6	88-6450	Transaxle	1	17	26-6700	Spring - Brake Return	1
7	302-11	Fitting - Grease	2	18	232-27	Valve Stem w/Cap	2
8	88-4080	Tire	2	*	231-91	Tube - Inner (Optional)	2
9	88-4380	Rim	2	*	88-4290	Wheel & Tire Assembly (Incl. Ref. #8 & 9)	2
10	7-0036	Key - Square	2				
11	28-2480	Washer	2				

*Not Illustrated

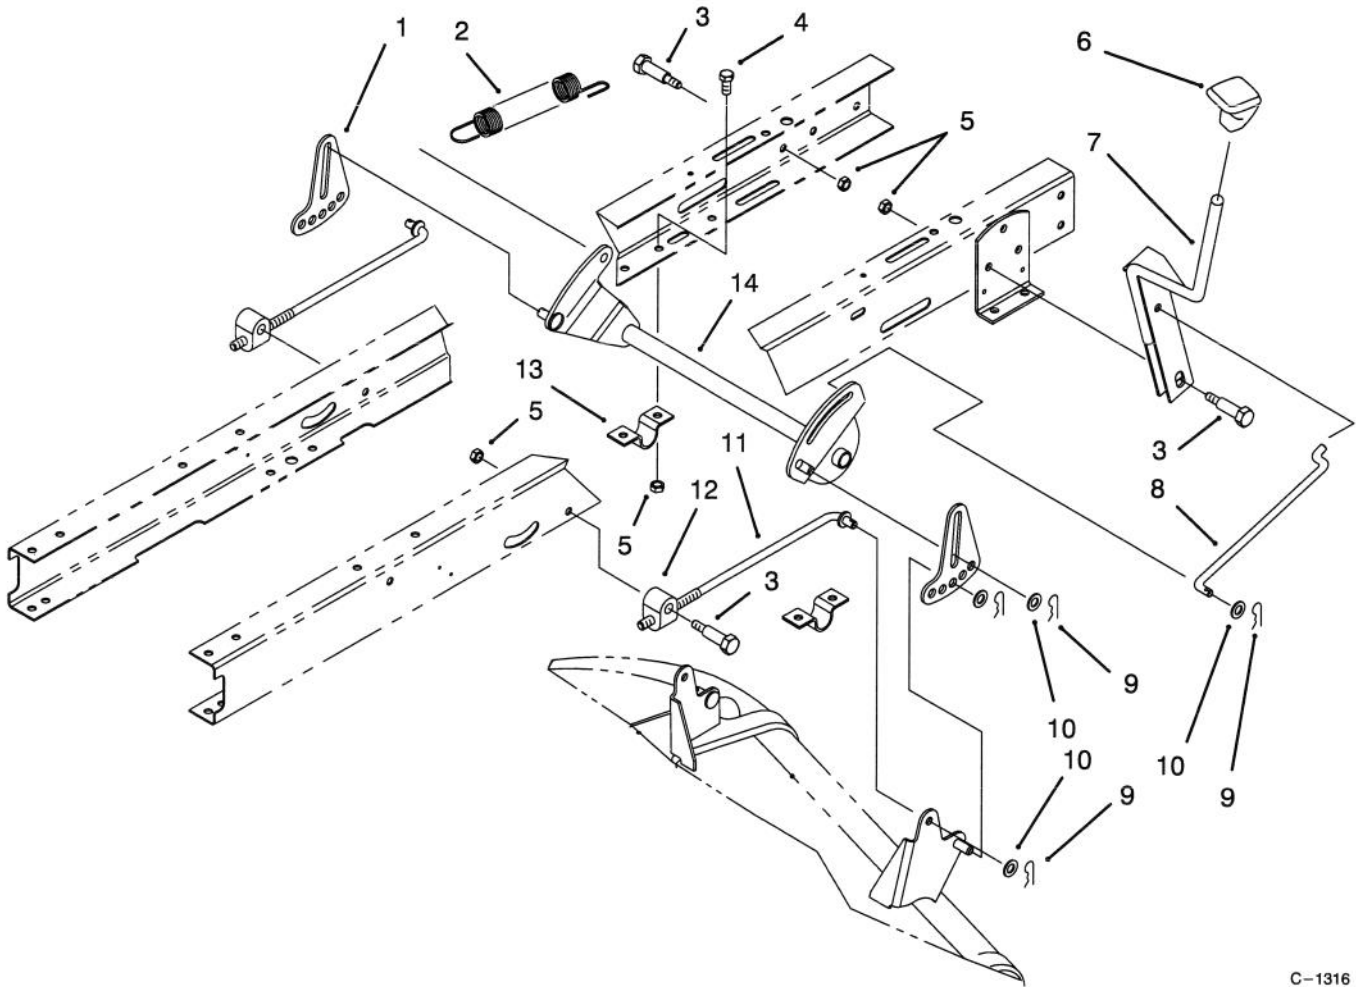


C-1316

HEIGHT OF CUT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88-5570	Link - Adjusting H.O.C.	2
2	88-6460	Spring - Extention	1
3	7-0030	Bolt - Shoulder	4
4	322-3	Screw - Hex Hd. Cap	4
5	3296-29	Nut - Lock	8
6	62-1292	Knob - Shift	1
7	88-5310	Lever - H.O.C.	1


Ref. No.	Part No.	Description	No. Used
8	88-5900	Link - H.O.C.	1
9	3290-307	Pin - Hair Cotter	7
10	3256-24	Washer - Flat	7
11	88-5450	Rod - Hanger Rear	2
12	88-4230	Trunnion - H.O.C. Rear	2
13	88-4730	Clamp - H.O.C. Pivot	2
14	88-5110	Pivot - H.O.C.	1

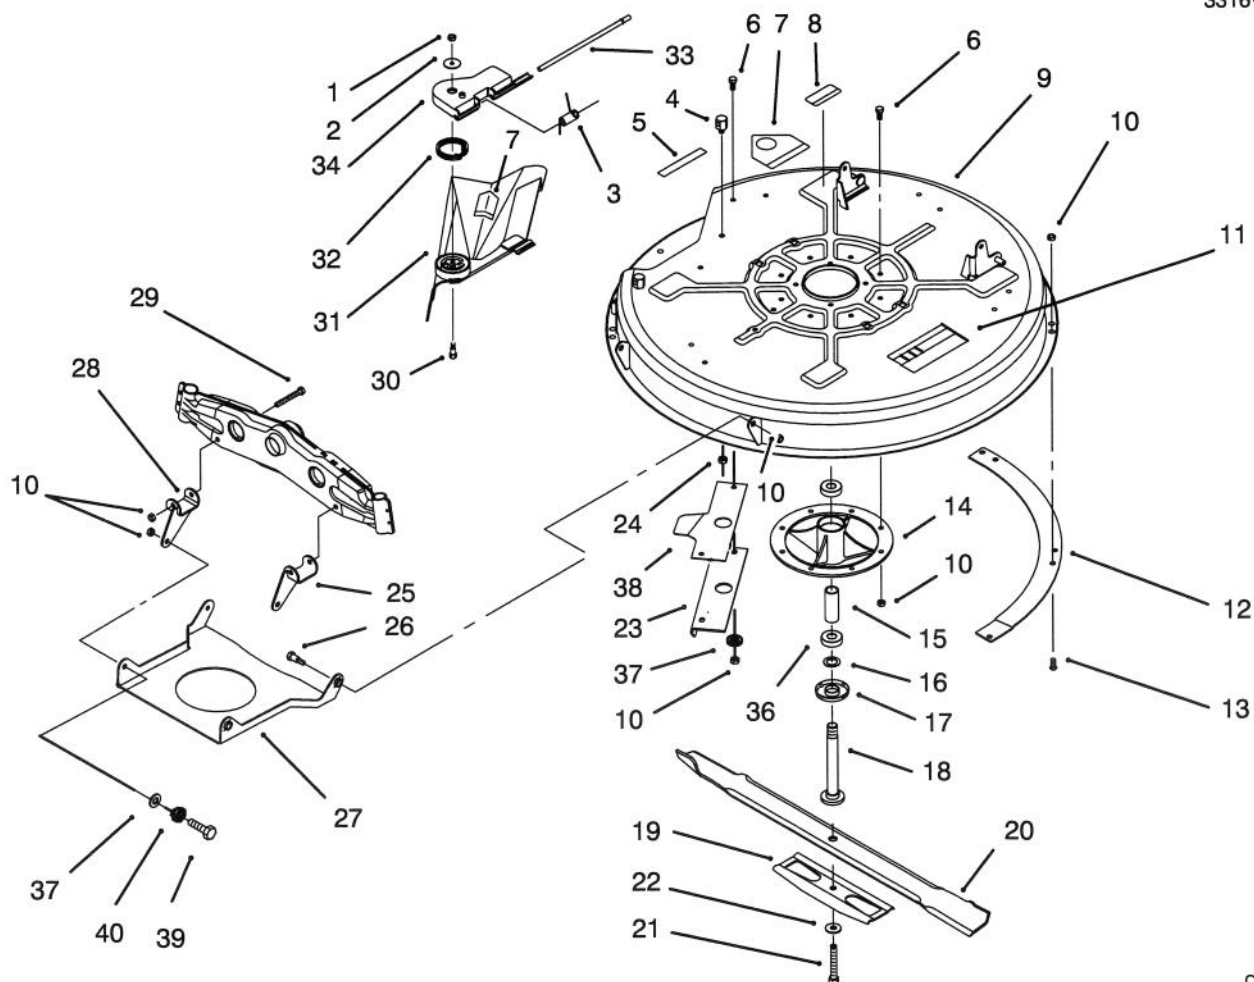

C-1829

DECK & SPINDLE ASSEMBLY (32" CUTTING UNIT)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3296-42	Nut - Lock	1	19	80-4570	Stiffener - Blade	1
2	3256-58	Washer - Fender	1	20	33-4750	Blade - 32"	1
3	92-2493	Spring - Torsion	1	21	26-0671	Bolt - Blade	1
4	28-7350	Post - Rear Pivot	1	22	3290-465	Washer - Belleville	1
5	68-3650	Decal - Deflector Danger	1	23	44-5720	Baffle - Deck	1
6	322-3	Screw - Hex Hd. Cap	10	24	3296-59	Nut - Lock	1
7	54-9220	Decal - Danger	2	25	88-5650	Bracket - L.H.	1
8	55-4300	Decal - Caution	2	26	28-0540	Bolt - Shoulder	2
9	88-5790-01	Cutter Deck - 32"	1	27	88-4940	Pan - Front Suspension	1
10	3296-29	Nut - Lock (Model No. 71182)	16	28	88-5640	Bracket - R.H.	1
		(Model No. 71200)	24	29	322-12	Screw - Hex Hd. Cap	2
11	66-1340	Decal - Danger	1	30	92-8916	Bolt - Shoulder	1
12	88-9780	Ring - Wet Grass (Model No. 71200 Only)	4	31	88-4560	Deflector - Double Pivot	1
13	32122-14	Screw - Truss Hd. (Model No. 71200 Only)	8	32	88-6160	Spring - Torsion	1
14	56-7030	Housing - Spindle	1	33	88-6150	Rod - Deflector Hinge	1
15	83-7020	Spacer - Bearing	1	34	88-4540	Hinge - Deflector Danger	1
16	80-4390	Spacer - Hardened	1	36	251-297	Bearing - Spindle	2
17	80-4370	Shield - Bearing	1	37	3256-23	Washer - Flat	4
18	80-4350	Shaft - Spindle	1	38	92-2494	Ramp - Deflector	1
				39	322-6	Screw - Hex Hd. Cap	2
				40	106661	Cam	2

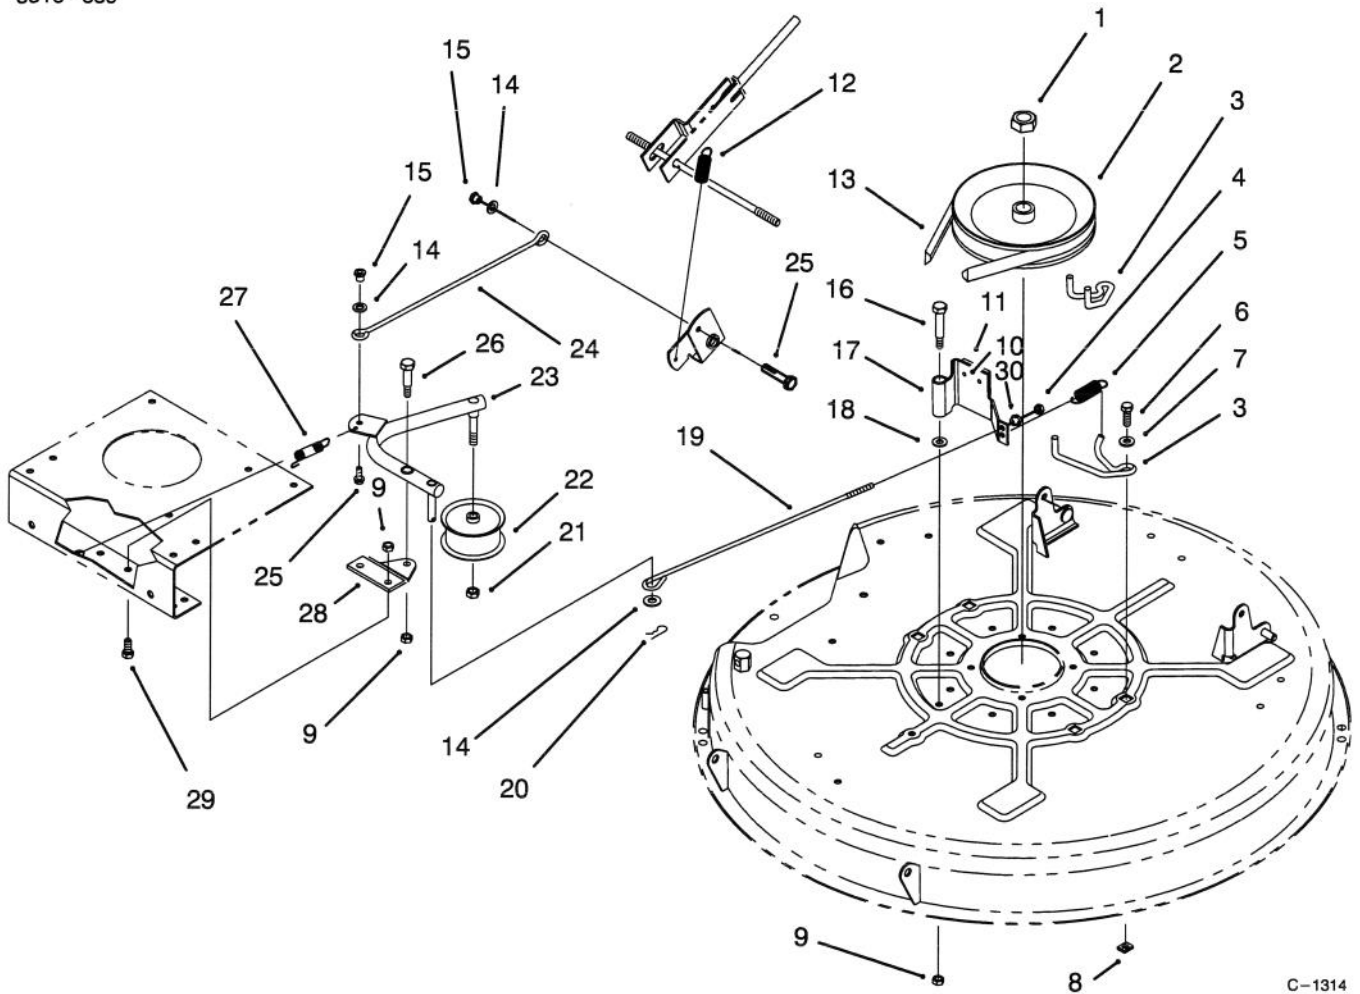


C-1314

PULLEY & BELT ASSEMBLY (32" CUTTING UNIT)

Ref. No.	Part No.	Description	No. Used
1	3219-7	Nut - Lock	1
2	88-5060	Pulley - Deck	1
3	88-5760	Guide - Belt	2
4	3296-42	Nut - Lock	1
5	88-6330	Spring - Extension	1
6	322-5	Screw - Hex Hd. Cap	2
7	5-4460	Washer - Fender	2
8	3290-496	Nut - Retained	2
9	3296-29	Nut - Lock	4
10	3290-282	Rivet - Pop	2
11	56-9830	Pad - Brake	1
12	88-6420	Spring/Cable Assembly	1
13	88-6260	V-Belt	1
14	3256-24	Washer - Flat	3
15	47-4990	Post	2
16	88-4590	Bolt - Shoulder	1

Ref. No.	Part No.	Description	No. Used
17	88-6110	Deck Brake Assembly (Incl. Ref. #10 & 11)	1
18	3256-23	Washer - Flat	1
19	88-5690	Rod - Deck Brake	1
20	3290-307	Pin - Hair Cotter	1
21	3296-39	Nut - Lock	1
22	56-9870	Pulley - Idler	1
23	88-5850	Arm - Idler	1
24	88-5980	Rod - Deck Engage	1
25	3234-13	Screw - Hex Flange Hd.	2
26	7-0030	Bolt - Shoulder	1
27	26-6700	Spring - Extension	1
28	88-5370	Plate - Idler Mount	1
29	322-3	Screw - Hex Hd. Cap	2
30	67-0710	Ball - Swivel	1

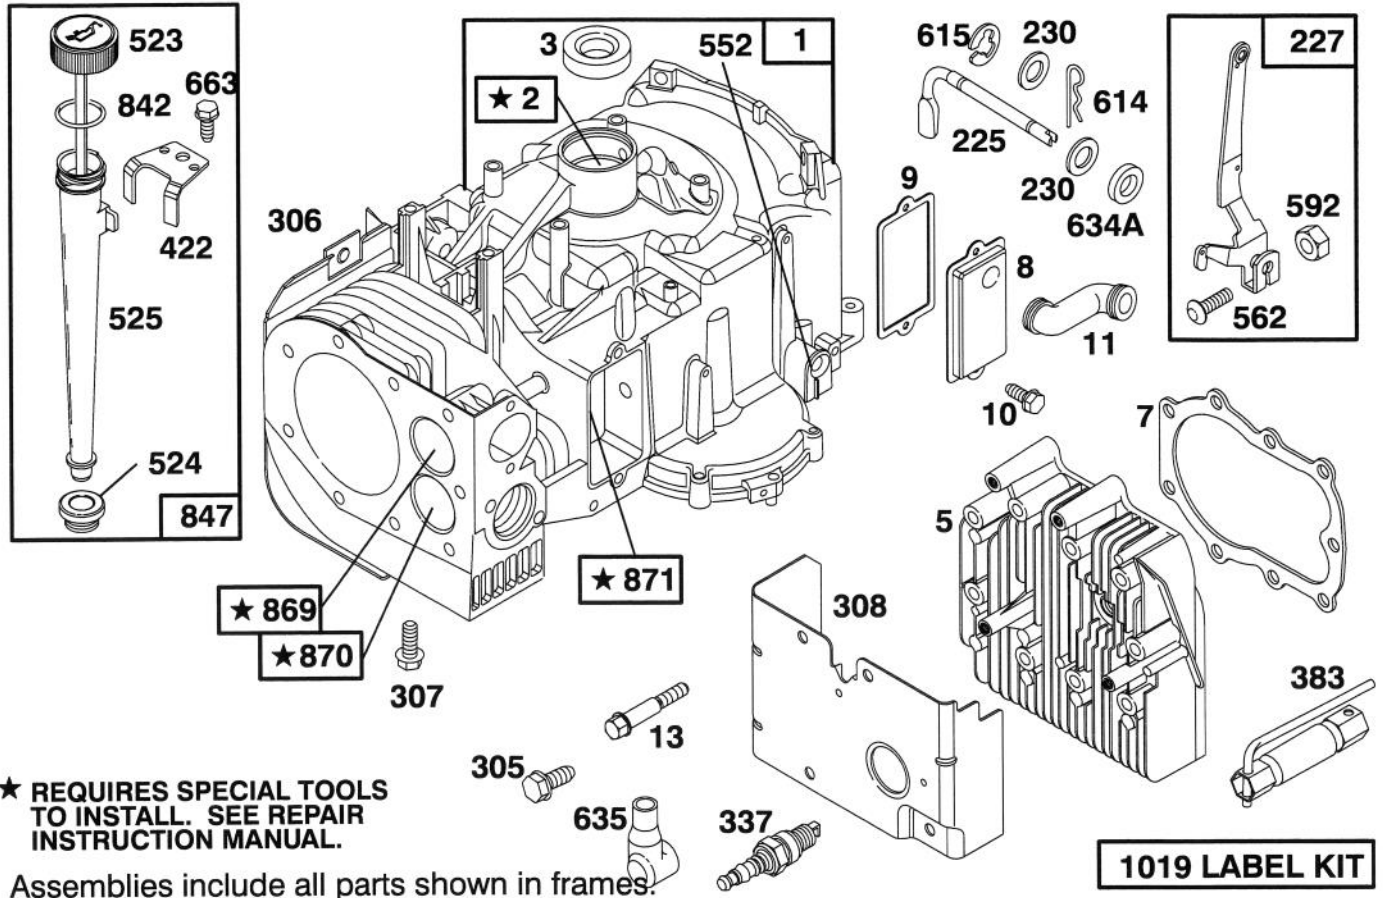


ENGINE BRIGGS & STRATTON MODEL 283707-0156-01

Ref. No.	Part No.	Description	No. Used
1	490450	Cylinder Assembly	1
2	399265	Bearing - Cylinder	1
★3	391086	Seal - Oil	1
5	494240	Head - Cylinder	1
★7	271866	Gasket - Cylinder Head	1
8	391406	Breather Assembly	1
★9	27803	Gasket - Valve Cover	1
10	94621	Screw - Sem	1
11	280100	Tube - Breather	1
13	94622	Screw - Cylinder Head	1
225	231058	Crank - Governor	1
227	493935	Lever Assy. - Governor	1
230	94742	Washer - Gov. Crank	1
305	94619	Screw - hex. Washer Hd.	1
306	224545	Shield - Cylinder	1
307	94623	Screw - Cyl. Shield Mtg.	1
308	491490	Cover - Cylinder Head	1
337	802592	Plug - Spark	1
383	89838	Wrench - Spark Plug	1
422	223721	Clamp - Oil Filler Tube	1

Ref. No.	Part No.	Description	No. Used
523	495230	Cap and Dipstick - Oil Filler	1
★524	68838	Seal - Filler Tube	1
525	280741	Tube - Oil Filler	1
552	231597	Bushing - Gov. Crank	1
562	92613	Bolt - Governor Lever	1
592	231082	Nut - Hex.	1
614	93306	Cotter - Hair Pin	1
615	93307	Retainer - E-Ring	1
★634A	491323	Seal - Governor	1
635	66538	Elbow - Spark Plug	1
663	94620	Screw - Hex Head	1
★842	270920	Seal - Oil Filler Cap	1
847	490474	Fill Group - Oil	1
869	261463	Seat - Intake Valve (Std.)	1
870	213316	Seat - Exhaust Valve (Std.)	1
871	261961	Guide - Exhaust Valve	1
		Note: 231218 Guide - Intake Valve	1
1019	491255	Label Kit	1

★ Included in Gasket Set - Part No. 494241.

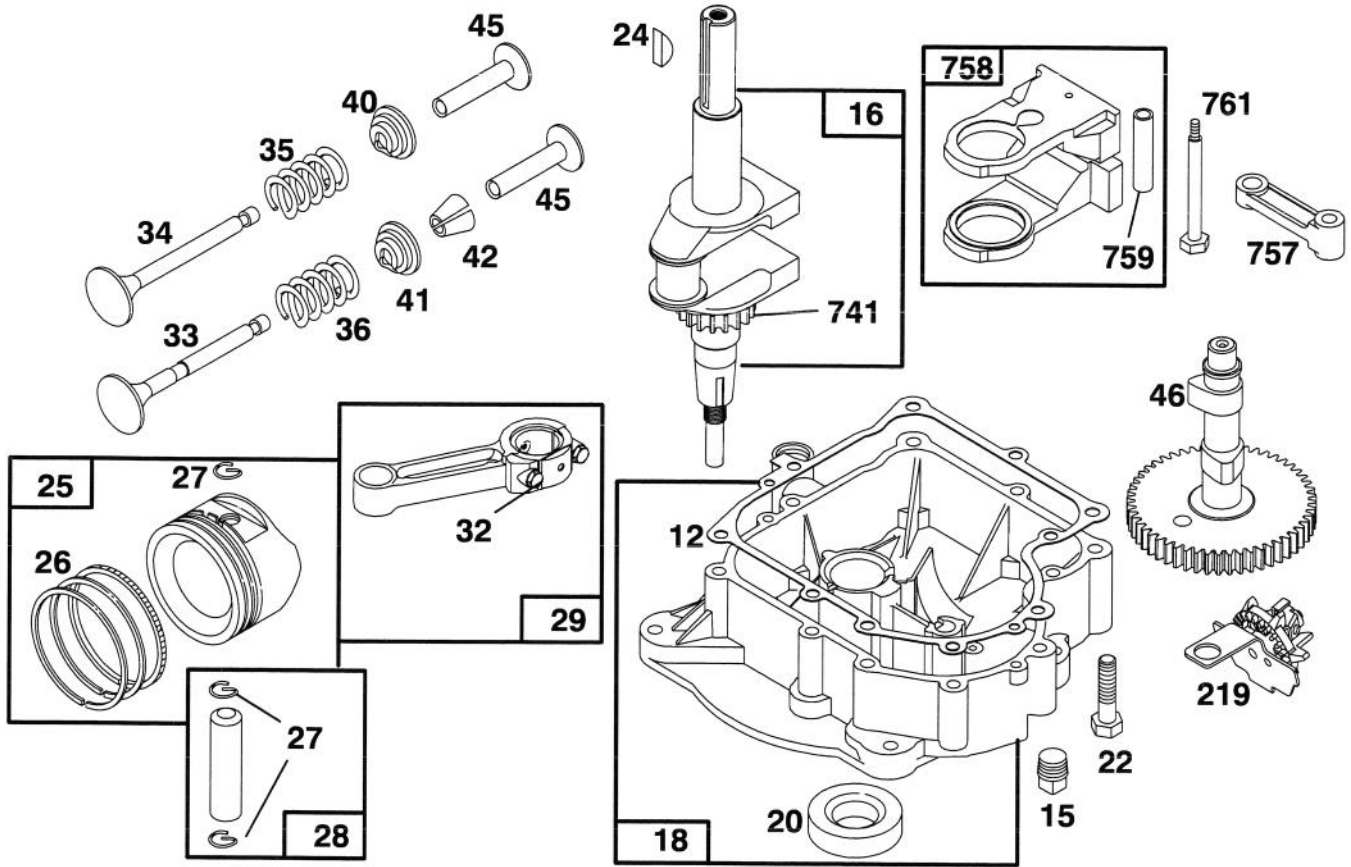


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 283707-0156-01

Ref. No.	Part No.	Description	No. Used
★12	271916	Gasket-Crkse. (1/64")	1
★	271997	Gasket-Crkse. (.005")	1
★	271996	Gasket-Crkse. (.009")	1
15	94239	Plug-Oil Drain	1
16	495162	Crankshaft	1
	94196	Key-Timing Gear	1
18	494238	Base-Engine	1
★20	291675	Seal-Oil	1
22	94624	Screw-Base Mtg. Sem	1
24	222698	Key-Flywheel	1
25	394661	Piston Assy. (Std.)	1
	394662	Piston Assy. (.010" O.S.)	1
	394663	Piston Assy. (.020" O.S.)	1
	394664	Piston Assy. (.030" O.S.)	1
26	391780	Ring Set-Piston (Std.)	1
	391781	Ring Set-Piston (.010" O.S.)	1
	391782	Ring Set-Piston (.020" O.S.)	1
	391783	Ring Set-Piston (.030" O.S.)	1
27	260924	Lock-Piston Pin	1
28	299691	Pin Assy.-Piston (Standard)	1
	391286	Pin Assy.-Piston (.005" O.S.)	1

Ref. No.	Part No.	Description	No. Used
29	490348	Rod Assembly-Connecting	1
	490469	Connecting Rod (.020" U.S. Crankpin Bore)	1
32	94671	Screw-Connecting Rod	1
33	262246	Valve-Exhaust	1
34	262247	Valve-Intake	1
35	65906	Spring-Intake Valve	1
36	26828	Spring-Exhaust Valve	1
40	221596	Retainer-Intake Valve	1
41	292260	Rotocoil-Exhaust Valve	1
42	93630	Retainer-Ex. Valve Rotocoil	1
45	262248	Tappet-Valve	1
46	212897	Gear-Cam	1
219	490815	Oil Slinger, Gov. Gear Assy.	1
741	262932	Gear-Timing	1
757	212359	Link-Counterweight	1
758	399891	Counterweight Assy.	1
759	298909	Pin-Counterweight	1
761	93875	Screw-Counterweight	1

★ Included in Gasket Set-Part No. 494241.

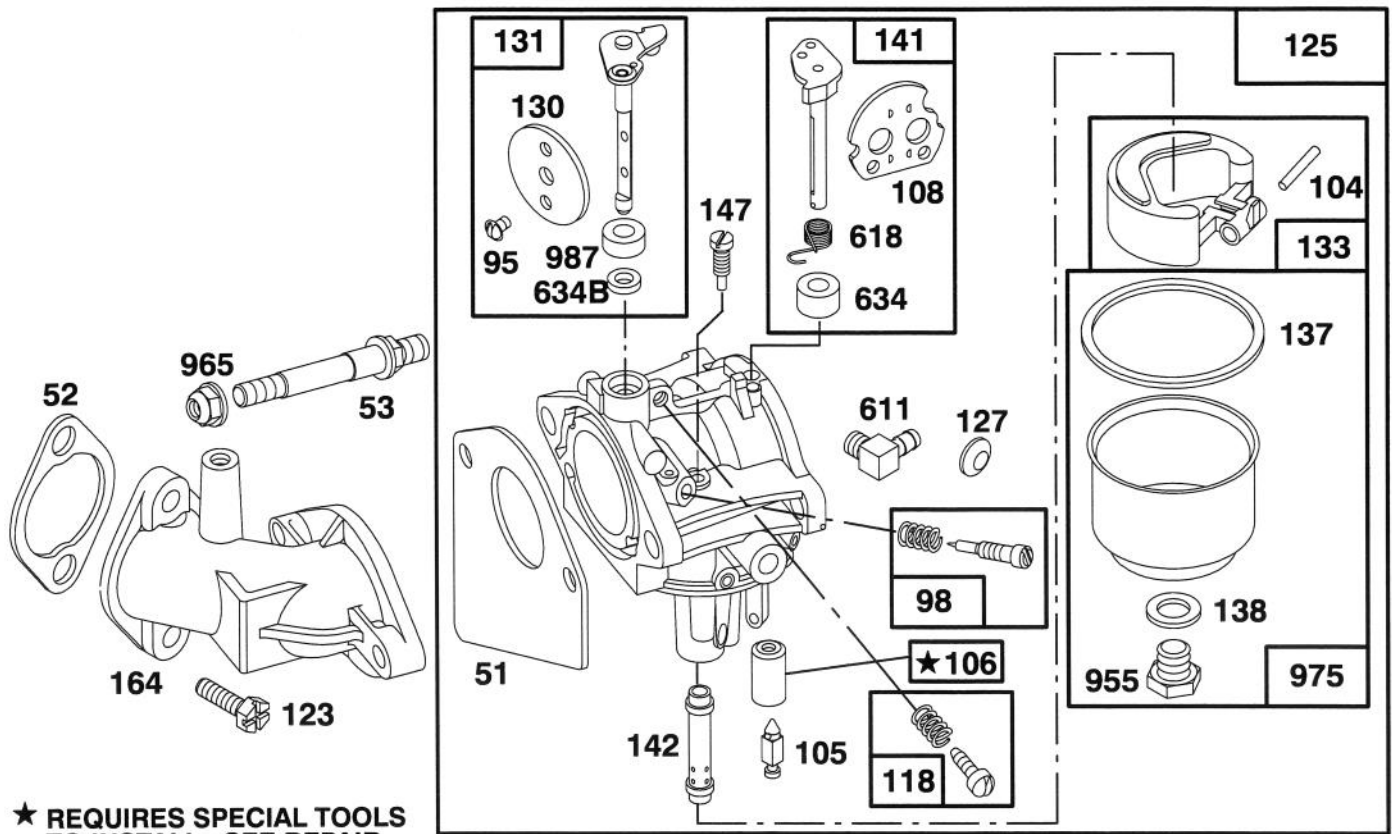

★ REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 283707-0156-01


Ref. No.	Part No.	Description	No. Used
◆5	1272465	Gasket-Carburetor (Carb. to Elbow)	1
★52	272554	Gasket-Carburetor (Elbow to Cylinder)	1
53	94637	Stud-Carb. Mtg.	1
●95	94098	Screw-Throttle	1
98	495800	Screw-Idle Speed	1
●104	231789	Pin-Float Hinge	1
●105	231855	Valve Assy.-Inlet Needle	1
●106	231854	Inlet Valve Seat	1
108	224540	Valve-Choke	1
118	494383	Valve-Needle	1
121	495799	Carburetor Overhaul Kit	1
123	94616	Screw-Elbow Mtg.	1
125	495706	Carburetor Assembly	1
●127		Plug-Welch (Sold in Kit Only).	1
130	224539	Valve-Throttle	1

Ref. No.	Part No.	Description	No. Used
131	494379	Shaft and Lever-Throttle	1
133	494381	Float-Carburetor	1
◆◆137	281165	Gasket-Float Bowl	1
◆◆138	281164	Washer-Float Bowl Screw	1
141	494380	Shaft and Lever-Choke	1
●142	494537	Nozzle-Carburetor	1
●147	231794	Pilot-Jet	1
164	213819	Carburetor-Elbow	1
611	494451	Fuel Inlet Tube	1
618	262803	Spring-Choke Return	1
●634	281168	Seal-Choke Shaft	1
●634B	281167	Washer-Throttle Shaft	1
955	94642	Screw-Fuel Bowl	1
965	94108	Locknut-Air Cleaner Mtg.	1
975	494378	Bowl Assy.-Carburetor	1
977	494385	Carburetor Gasket Kit	1
●987	281166	Seal-Throttle Shaft	1

◆ Included in Carburetor Gasket Set-Part No.494385.

★ Included in Gasket Set-Part No. 494241.

● Included in Carburetor Overhaul Kit-Part No. 495799.

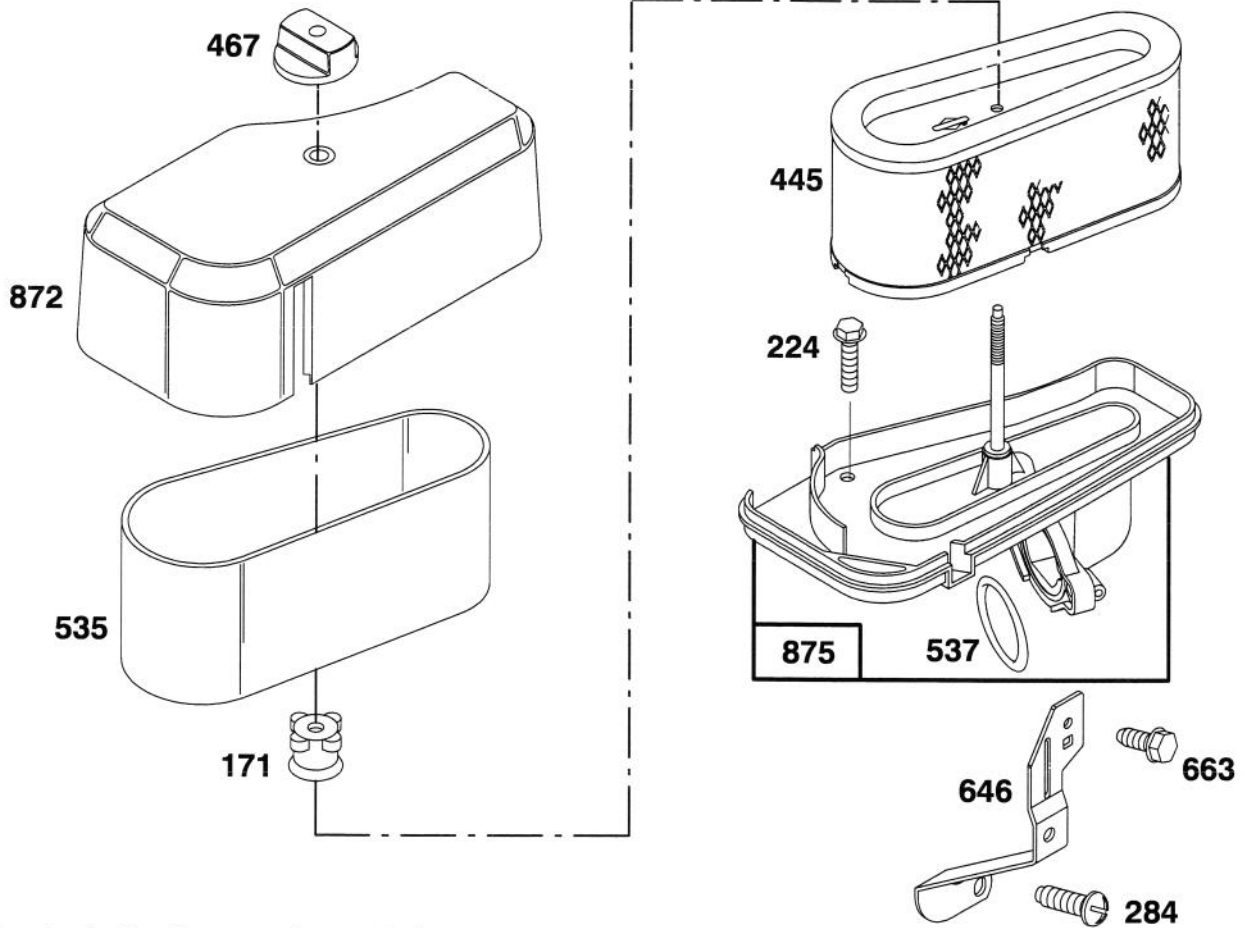


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 283707-0156-01

Ref. No.	Part No.	Description	No. Used
171	281051	Nut-Air Cleaner Mtg.	1
224	94513	Screw-Air Cleaner Sem	1
284	94326	Screw Hex. Head	1
445	493909	Cartridge-Air Cleaner	1
467	493903	Knob-Air Cleaner	1
535	272403	Element-Air Cleaner	1

Ref. No.	Part No.	Description	No. Used
★537	281106	O-Ring-Air Cleaner	1
646	224546	Brace-Air Cleaner	1
663	94620	Screw-Hex. Hd.	1
872	281104	Cover-Air Cleaner	1
875	494237	Body-Air Cleaner	1


★ Included in Gasket Set-Part No. 494241.

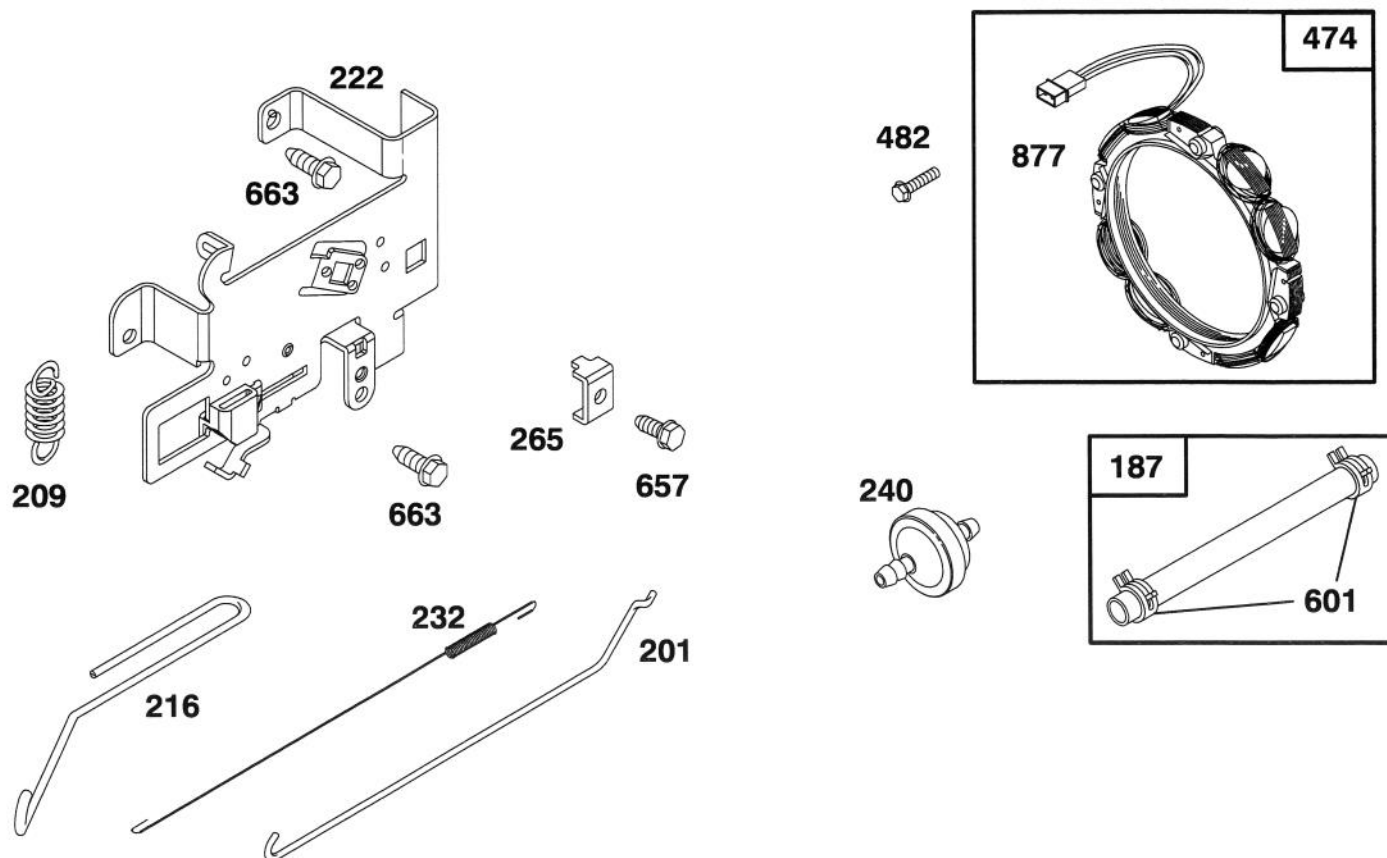

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 283707-0156-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
187	393815	Line—Fuel (11" Long, Cut to Suit)	1	265	221535	Clamp—Casing	1
201	262767	Link—Governor	1	474	393474	Stator—Alternator (Dual Circuit)	1
209	260871	Spring—Governor	1	482	93621	Screw—Sem	1
216	262766	Link—Choke	1	601	93053	Clamp—Fuel Pipe	1
222	494887	Plate—Governor Control (Choke-A-Matic®)	1	657	93496	Screw—Sem	1
232	262785	Spring—Governor Link	1	663	94620	Screw—Hex. Hd.	1
240	394358	Filter—Fuel (In Fuel Line)	1	877	393456	Diode and Connector Assy. (Dual Circuit)	1

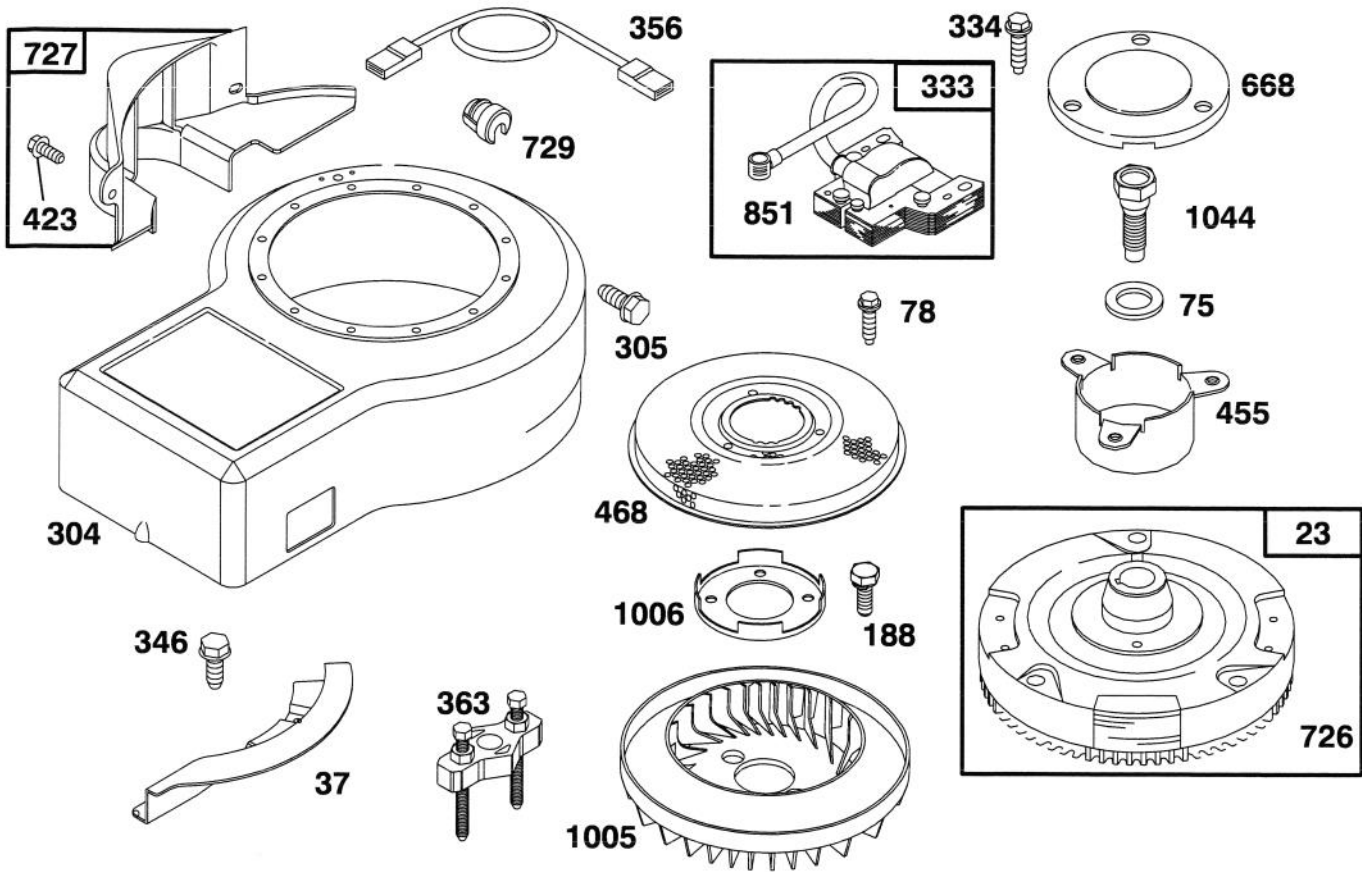

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 283707-0156-01


Ref. No.	Part No.	Description	No. Used
23	492326	Flywheel and Ring Gear Assy. - Magneto	1
37	224502	Guard - Flywheel	1
75	224061	Washer - Spring	1
78	93805	Screw - Sem	1
188	93535	Screw - Sem (3/4" Long)	1
304	494269	Housing - Blower	1
305	94619	Screw - Blower Housing Mtg.	1
333	492341	Armature - Magneto	1
334	93381	Screw - Armature Mtg.	1
346	93705	Screw - Hex. Head	1
356	494328	Wire Assembly	1
363	19203	Puller - Flywheel	1

Ref. No.	Part No.	Description	No. Used
423	94073	Screw - Sem	1
455	222561	Cup - Screen Mounting	1
468	222562	Screen - Flush Rotating	1
668	280848	Spacer	1
726	392134	Gear - Ring (Includes Mtg Hardware)	1
727	490324	Cover - Starter	1
729	281159	Clip - Lead Wire	1
851	221798	Terminal - Ignition Cable	1
1005	280687	Fan - Flywheel	1
1006	224413	Retainer - Fan	1
1044	94673	Screw - Hex. Head	1

729A



728



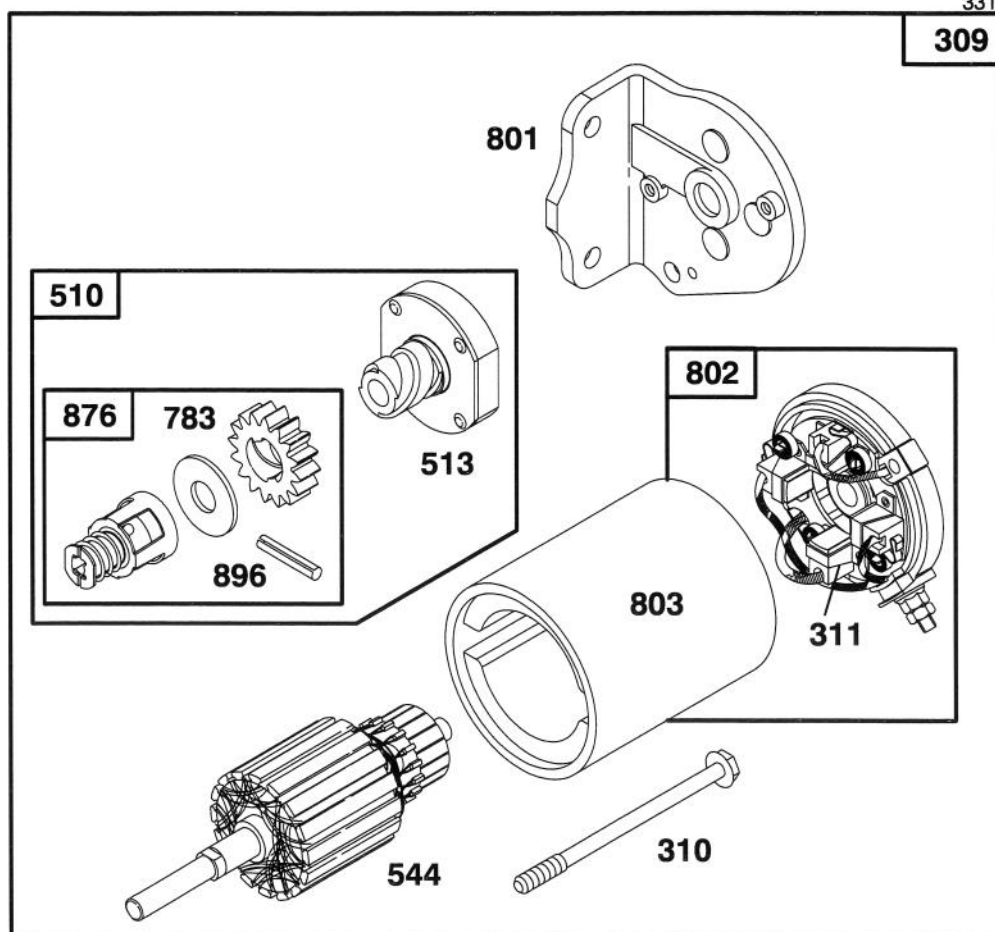


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 283707-0156-01

Ref. No.	Part No.	Description	No. Used
309	394805	Motor and Drive Assy.	1
310	94003	Bolt Hex. Hd.	1
311	395538	Brush Assy.	1
510	490421	Starter Drive Assy.	1
513	398003	Clutch Assy.	1
544	390837	Armature Assy.	1
728	94627	Screw-Hex. Hd.	1

Ref. No.	Part No.	Description	No. Used
729A	224723	Retainer-Wire	1
783	280104	Gear	1
801	394856	Drive End Cap Assy.	1
802	395537	End Cap Assy. Commutator	1
803	398159	Housing Assy.	1
876	490467	Retainer And Pin	1
896	94288	Pin-Roll	1

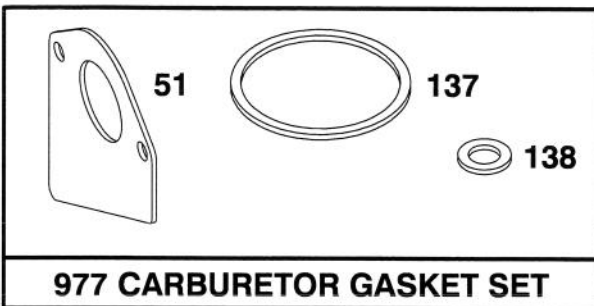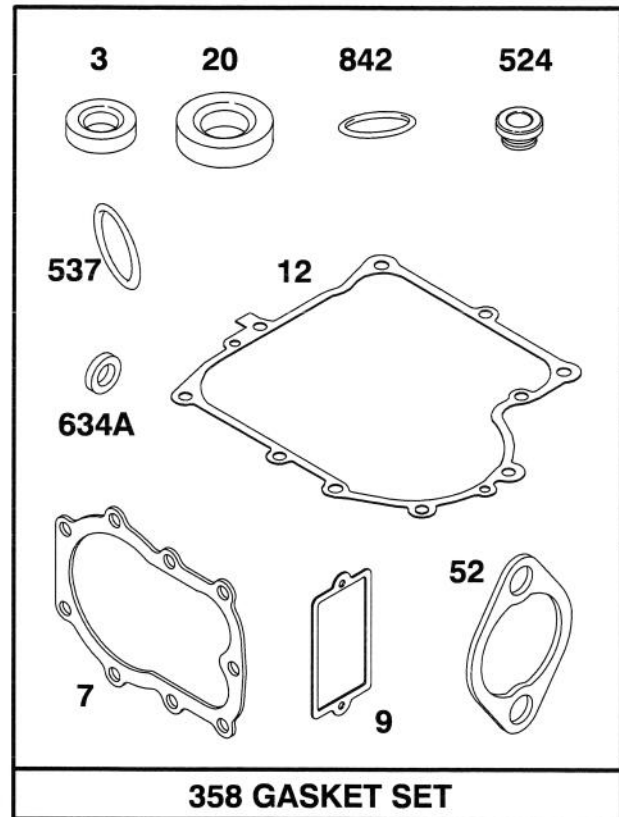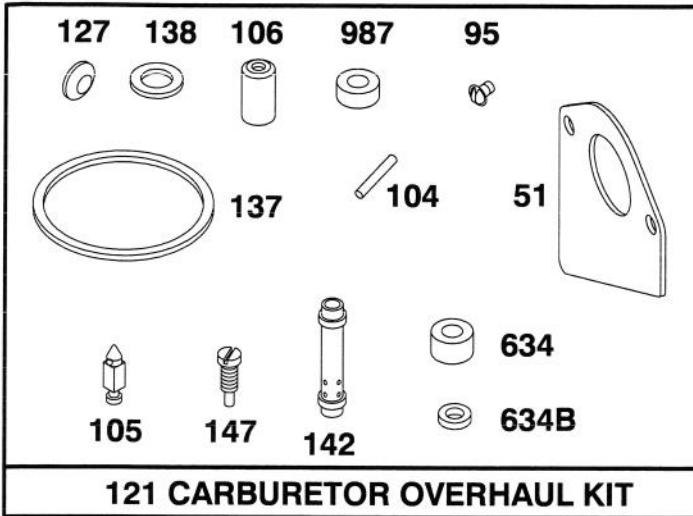

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 283707-0156-01


Ref. No.	Part No.	Description	No. Used
★3	391086	Seal-Oil	1
★7	271866	Gasket-Cylinder Head	1
★9	27803	Gasket-Valve Cover	1
★12	271916	Gasket-Crankcase Cover (1/64" Thick)	1
★	271997	Gasket-Crankcase Cover (.005" Thick)	1
★	271996	Gasket-Crankcase Cover (.009" Thick)	1
★20	291675	Seal-Oil	1
◆★51	272465	Gasket-Carburetor (Carb. to Elbow)	1
★52	272554	Gasket-Carburetor (Elbow to Cylinder)	1
●95	94098	Screw-Throttle	1
●104	231789	Pin-Float Hinge	1
●105	231855	Valve Assy.-Inlet Needle	1
●106	231854	Inlet Valve Seat	1

Ref. No.	Part No.	Description	No. Used
121	495799	Carburetor Overhaul Kit	1
●127		Plug-Welch (Sold in Kit Only).	1
◆●137	281165	Gasket-Float Bowl	1
◆●138	281164	Washer-Float Bowl Screw	1
●142	494537	Nozzle-Carburetor	1
●147	231794	Pilot-Jet	1
358	494241	Gasket Set	1
★524	68838	Seal-Filler Tube	1
★537	281106	O-Ring-Air Cleaner	1
●634	281168	Seal-Choke Shaft	1
★634A	491323	Seal-Governor	1
●634B	281167	Washer-Throttle Shaft	1
★842	270920	Seal-Oil Filler Cap	1
977	494358	Carburetor Gasket Set	1
●987	281166	Seal-Throttle Shaft	1

★ Included in Gasket Set-Part No. 494241.

● Included in Carburetor Overhaul Kit-Part No. 495799.

◆ Included in Carburetor Gasket Set-Part No. 494385.

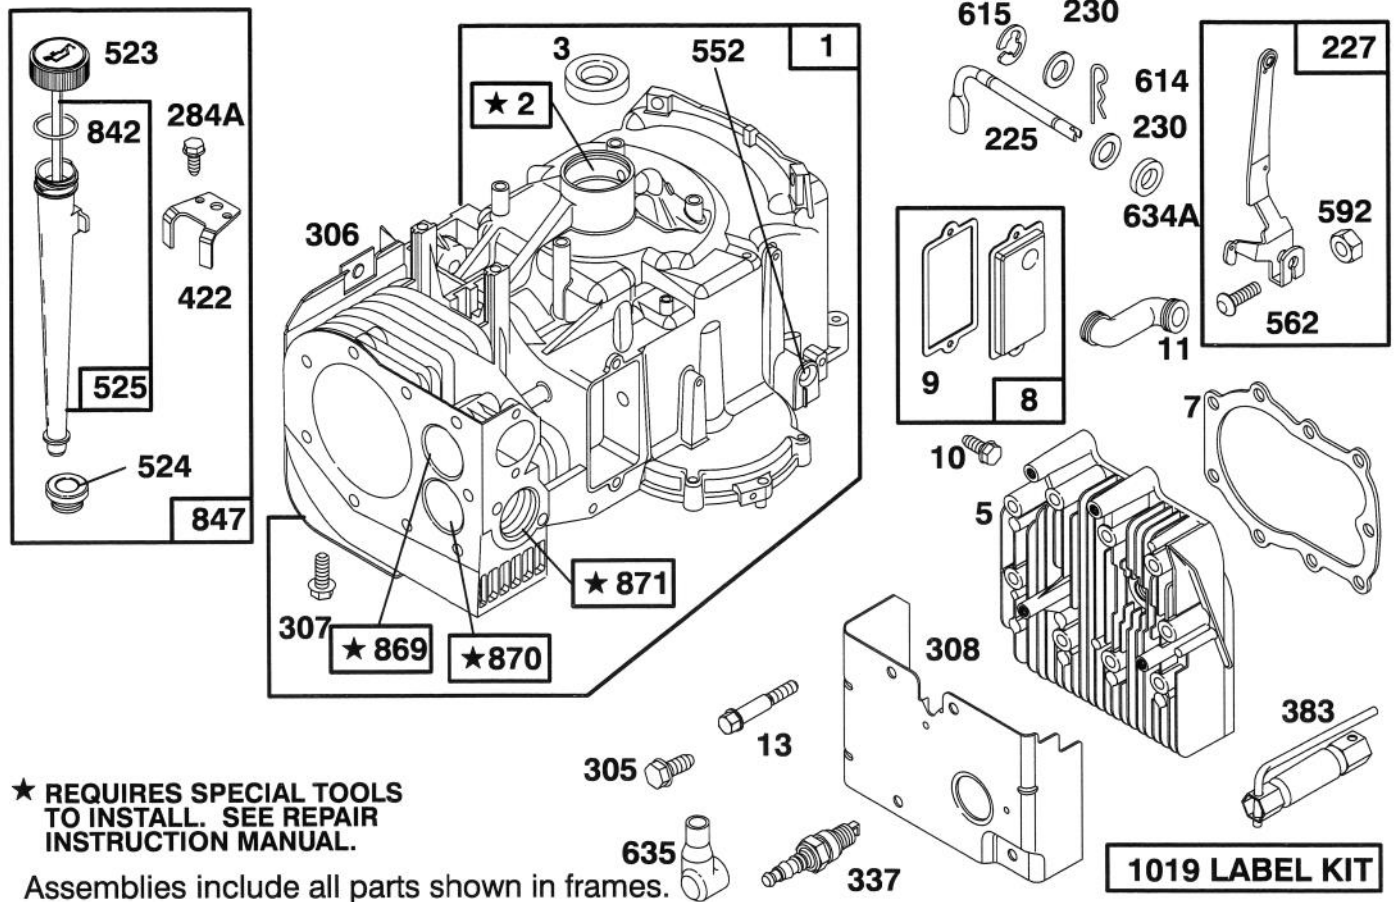


ENGINE BRIGGS & STRATTON MODEL 282707-0119-01

Ref. No.	Part No.	Description	No. Used
1	496414	Cylinder Assembly	1
2	399265	Bearing—Cylinder	1
★3	391086	Seal—Oil	1
5	494240	Head—Cylinder	1
★7	271866	Gasket—Cylinder Head	1
8	495735	Breather Assembly	1
★9	27803	Gasket—Valve Cover	1
10	94621	Screw—Sem	1
11	280100	Tube—Breather	1
13	94622	Screw—Cylinder Head	1
225	231058	Crank—Governor	1
227	493935	Lever Assy.—Governor	1
230	94742	Washer—Gov. Crank	1
284A	94602	Screw—Hex. Head	1
305	94786	Screw—Hex. Washer Hd.	1
306	224545	Shield—Cylinder	1
307	94623	Screw—Cyl. Shield Mtg.	1
308	491490	Cover—Cylinder Head	1
337	802592	Plug—Spark	1
383	89838	Wrench—Spark Plug	1

Ref. No.	Part No.	Description	No. Used
422	224390	Clamp—Oil Fill	1
523	495230	Cap—Oil Filler	1
★524	68838	Seal—Filler Tube	1
525	495768	Tube—Oil Filler	1
552	231597	Bushing—Gov. Crank	1
562	92613	Bolt—Governor Lever	1
592	231082	Nut—Hex.	1
614	93306	Cotter—Hair Pin	1
615	93307	Retainer—E-Rin	1
★634A	491323	Seal—Governor	1
635	66538	Elbow—Spark Plug	1
★842	270920	Seal—Oil Filler Cap	1
847	490474	Fill Group—Oil	1
869	261463	Seat—Intake Valve (Std.)	1
870	213316	Seat—Exhaust Valve (Std.)	1
871	261961	Guide—Exhaust Valve	1
		Note: 231218 Guide – Intake Valve	1
1019	491252	Label Kit	1

★ Included in Gasket Set—Part No. 494241.

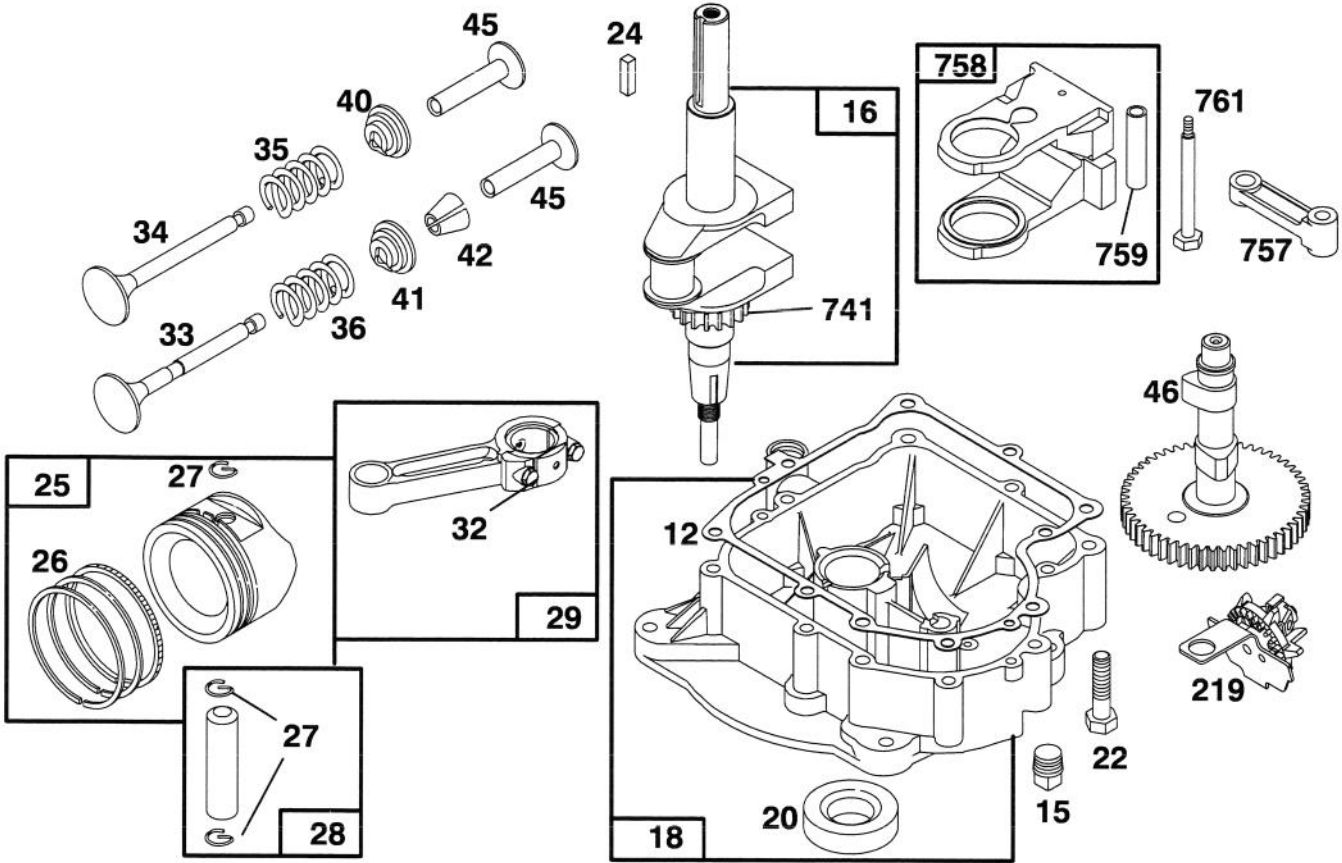


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 282707-0119-01

Ref. No.	Part No.	Description	No. Used
★12	271916	Gasket-Crkcse. (1/64" Thick)	1
★	271997	Gasket-Crkcse. (.005" Thick)	1
★	271996	Gasket-Crkcse. (.009" Thick)	1
15	94239	Plug-Oil Drain	1
16	495162	Crankshaft	1
	94196	Key-Timing Gear	1
18	494238	Base-Engine	1
★20	291675	Seal-Oil	1
22	94624	Screw-Base Mtg. Sem	1
24	222698	Key-Flywheel	1
25	391285	Piston Assy. (Std.)	1
	391287	Piston Assy. (.010" O.S.)	1
	391288	Piston Assy. (.020" O.S.)	1
	391289	Piston Assy. (.030" O.S.)	1
26	391780	Ring Set-Piston (Std.)	1
	391781	Ring Set-Piston (.010" O.S.)	1
	391782	Ring Set-Piston (.020" O.S.)	1
	391783	Ring Set-Piston (.030" O.S.)	1

Ref. No.	Part No.	Description	No. Used
27	260924	Lock-Piston Pin	1
28	299691	Pin Assy.-Piston (Std.)	1
	391286	Pin-Piston (.005" O.S.)	1
29	490348	Rod-Connecting	1
	490469	Rod-Connecting (020" U.S. Crankpin Bore)	1
32	94671	Screw-Connecting Rod	1
33	262246	Valve-Exhaust	1
34	262247	Valve-Intake	1
35	65906	Spring-Intake Valve	1
36	26828	Spring-Exhaust Valve	1
40	221596	Retainer-Intake Valve	1
41	292260	Rotocoil-Exhaust Valve	1
42	494553	Retainer-Ex. Valve Rotocoil	1
45	262248	Tappet-Valve	1
46	212897	Gear-Cam	1
219	490815	Slinger-Oil	1
741	262932	Gear-Timing	1
757	212359	Link-Counterweight	1
758	399891	Counterweight Assy.	1
759	298909	Pin-Counterweight	1
761	93875	Screw-Counterweight	1

★ Included in Gasket Set-Part No. 494241.

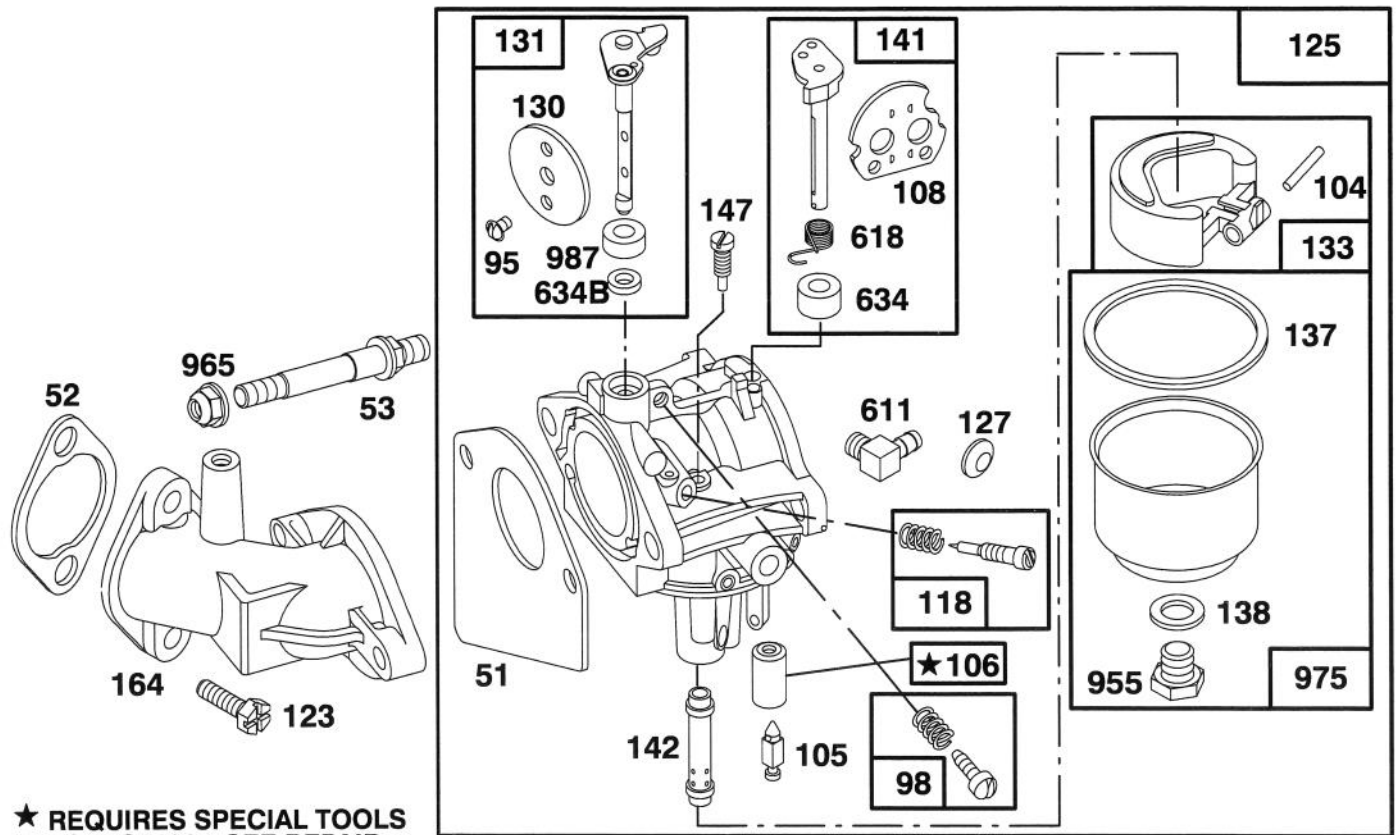

★ REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 282707-0119-01


Ref. No.	Part No.	Description	No. Used
51	272465	Gasket-Carburetor (Carb. to Elbow)	1
★52	272554	Gasket-Carburetor (Elbow to Cylinder)	1
53	94637	Stud-Carb. Mtg.	1
●95	94098	Screw-Throttle	1
98	495800	Screw-Idle Speed	1
●104	231789	Pin-Float Hinge	1
●105	231855	Valve Assy.-Inlet Needle	1
●106	231854	Inlet Valve Seat	1
108	224540	Valve-Choke	1
118	494383	Valve-Needle	1
121	495799	Carburetor Overhaul Kit	1
123	94616	Screw-Elbow Mtg.	1
125	495706	Carburetor Assembly	1
●127		Plug-Welch (Sold in Kit Only).	1
130	224539	Valve-Throttle	1

Ref. No.	Part No.	Description	No. Used
131	494379	Shaft and Lever-Throttle	1
133	494381	Float-Carburetor	1
◆◆137	281165	Gasket-Float Bowl	1
◆◆138	281164	Washer-Float Bowl Screw	1
141	495931	Shaft and Lever-Choke	1
●142	494537	Nozzle-Carburetor	1
●147	231794	Pilot-Jet	1
164	213819	Carburetor-Elbow	1
611	494451	Fuel Inlet Tube	1
618	262803	Spring-Choke Return	1
●634	281168	Seal-Choke Shaft	1
●634B	398970	Washer-Throttle Shaft	1
955	94642	Screw-Fuel Bowl	1
965	94010	Locknut-Air Cleaner Mtg.	1
975	494378	Bowl Assy.-Carburetor	1
977	494385	Carburetor Gasket Kit	1
●987	281166	Seal-Throttle Shaft	1

◆ Included in Carburetor Gasket Set-Part No.494385.

● Included in Carburetor Overhaul Kit-Part No. 495799.

★ Included in Gasket Set-Part No. 494241.

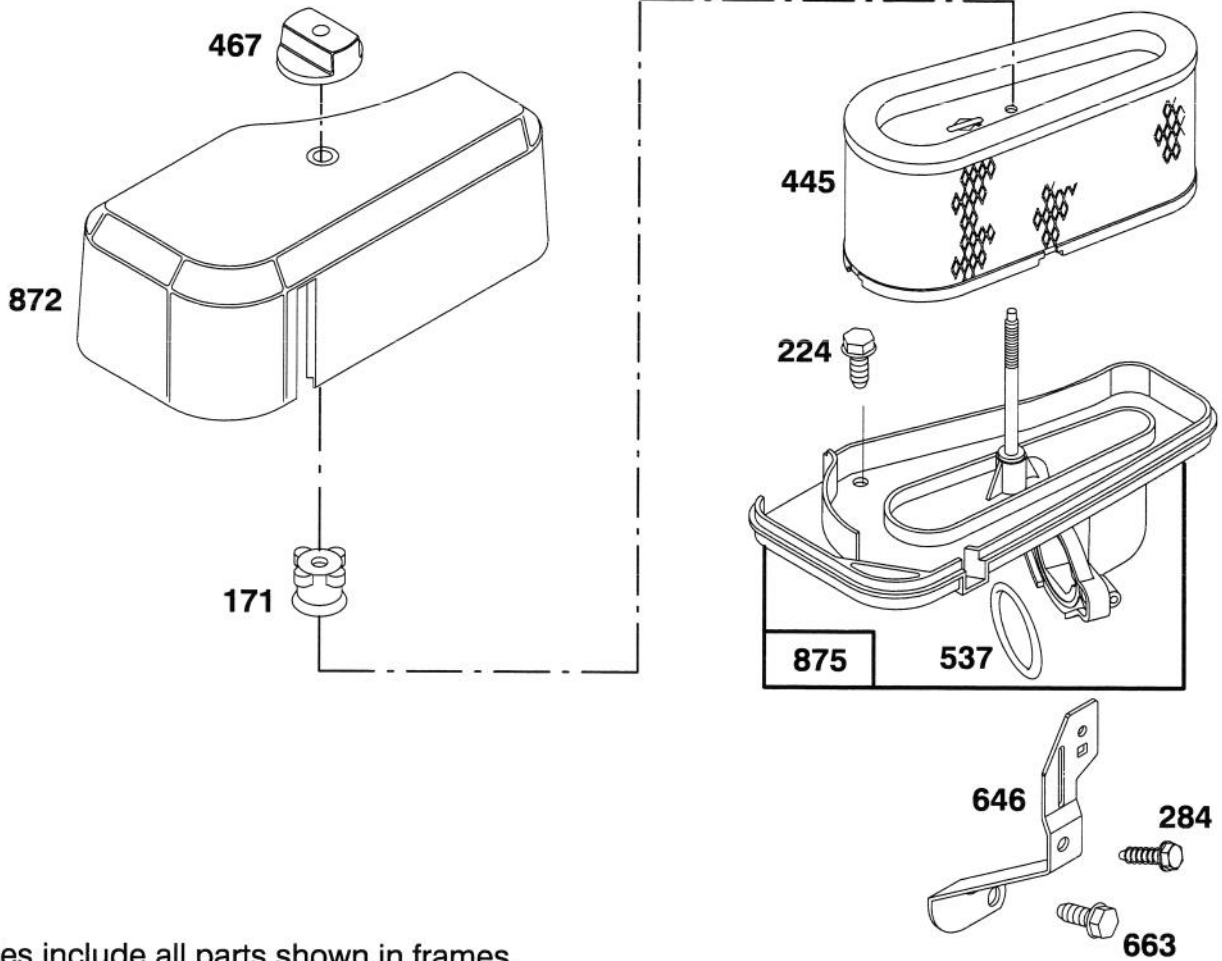




Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 282707-0119-01

Ref. No.	Part No.	Description	No. Used
171	281051	Nut-Air Cleaner Mtg.	1
224	94729	Screw-Air Cleaner Sem	1
284	94704	Screw Hex. Head	1
445	493909	Cartridge-Air Cleaner	1
467	493903	Knob-Air Cleaner	1

Ref. No.	Part No.	Description	No. Used
★537	281106	O-Ring-Air Cleaner	1
646	224546	Brace-Air Cleaner	1
663	94620	Screw-Hex. Hd.	1
872	281104	Cover-Air Cleaner	1
875	494237	Body-Air Cleaner	1

★ Included in Gasket Set-Part No. 494241.

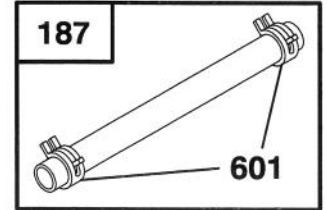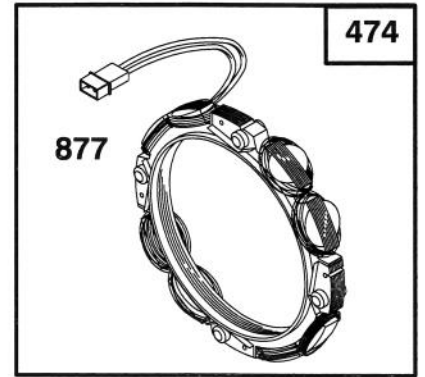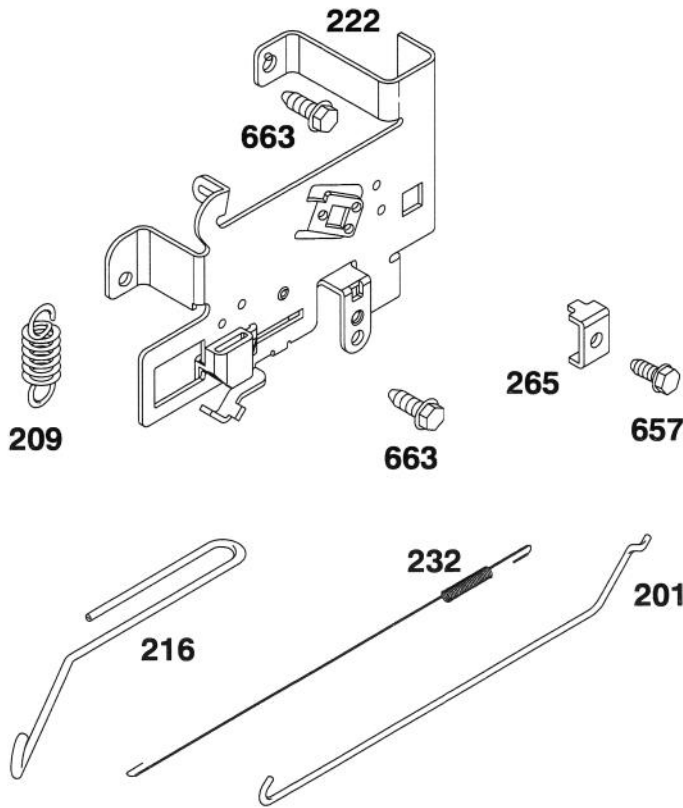


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 282707-0119-01

Ref. No.	Part No.	Description	No. Used
187	393815	Line-Fuel (11" Long, Cut to Suit)	1
201	262767	Link-Governor	1
209	260871	Spring-Governor	1
216	262766	Link-Choke	1
222	495611	Plate-Governor Control	1
232	262785	Spring-Governor Link	1
240	394358	Filter-Fuel	1
265	221535	Clamp-Casing	1

Ref. No.	Part No.	Description	No. Used
474	393474	Stator-Alternator (Dual Circuit)	1
482	93621	Screw-Sem	1
601	93053	Clamp-Fuel Pipe	1
657	93496	Screw-Sem	1
663	94620	Screw-Hex. Hd.	1
877	393456	Diode and Connector Assy. (Dual Circuit)	1


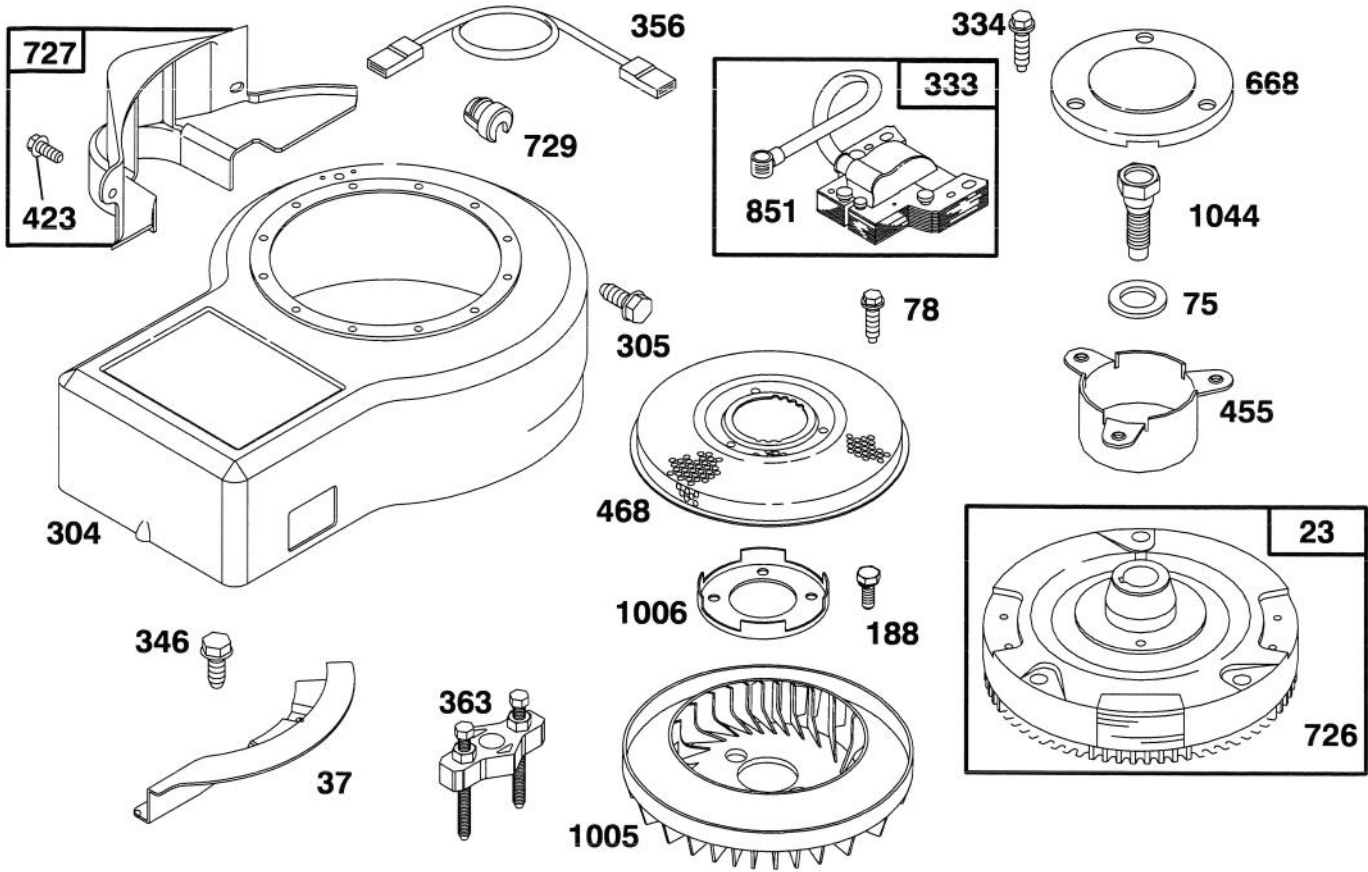


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 282707-0119-01

Ref. No.	Part No.	Description	No. Used
23	492326	Flywheel and Ring Gear Assy. - Magneto	1
37	224502	Guard - Flywheel	1
75	224061	Washer - Spring	1
78	93805	Screw - Sem	1
188	94627	Screw - Sem	1
304	494269	Housing - Blower	1
305	94786	Screw - Blower Housing Mounting	1
333	492341	Armature - Magneto	1
334	93381	Screw - Armature Mtg.	1
346	93705	Screw - Hex. Head	1
356	494328	Wire Assembly	1

Ref. No.	Part No.	Description	No. Used
363	19203	Puller - Flywheel	1
423	94073	Screw - Sem	1
455	222561	Cup - Screen Mounting	1
468	222562	Screen - Flush Rotating	1
668	280848	Spacer	1
726	392134	Gear - Ring (Includes Mtg Hardware)	1
727	490324	Cover - Starter	1
729	281159	Clip - Lead Wire	1
851	221798	Terminal - Ignition Cable	1
1005	280687	Fan - Flywheel	1
1006	224413	Retainer - Fan	1
1044	94673	Screw - Hex. Head	1


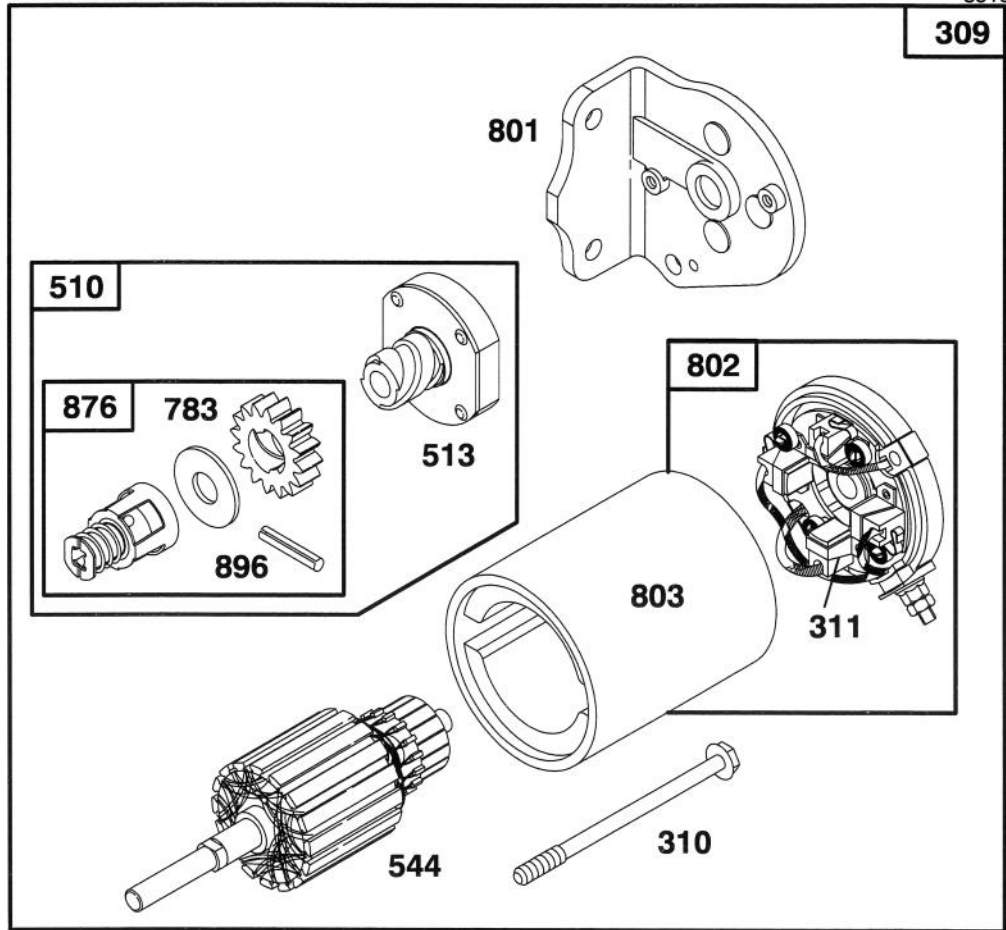
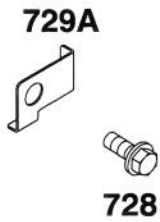


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 282707-0119-01

Ref. No.	Part No.	Description	No. Used
309	394805	Motor and Drive Assy.	1
310	94003	Bolt Hex. Hd.	1
311	395538	Brush Assy.	1
510	495878	Starter Drive Assy.	1
513	398003	Clutch Assy.	1
544	390837	Armature Assy.	1
728	94627	Screw-Hex. Hd.	1
729A	224723	Retainer-Wire	1

Ref. No.	Part No.	Description	No. Used
783	280104	Gear	1
801	394856	Drive End Cap Assy.	1
802	395537	End Cap Assy Commutator	1
803	398159	Housing Assy.	1
876	495877	Retainer And Pin	1
896	94288	Pin-Roll	1

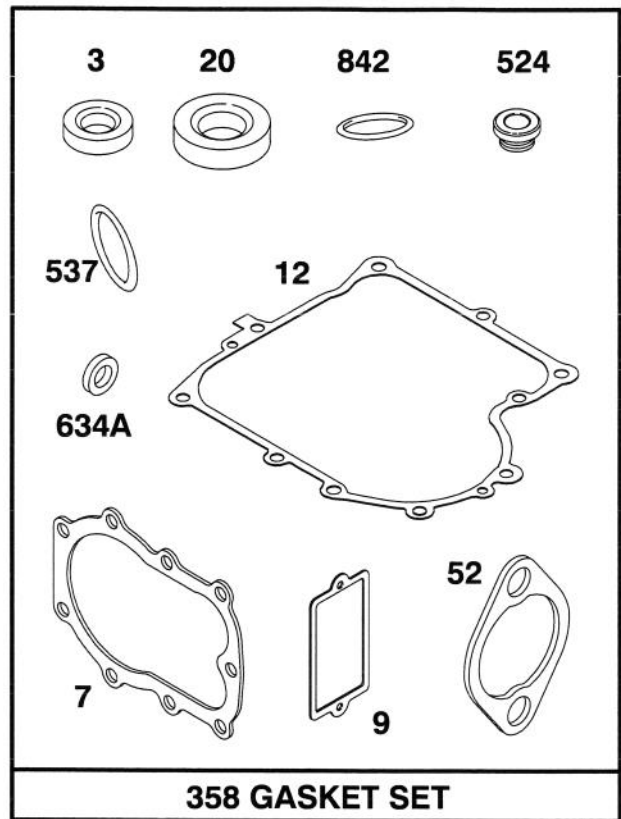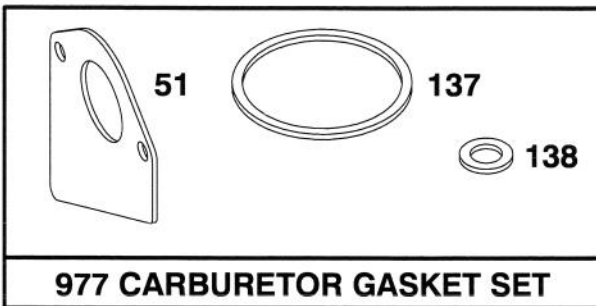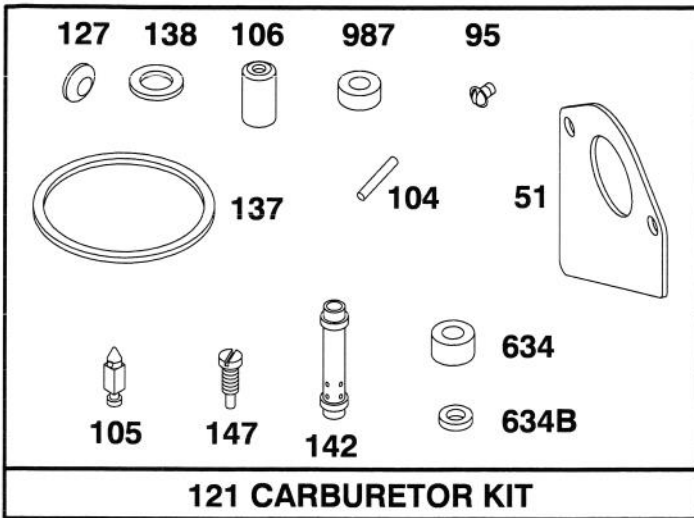

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 282707-0119-01


Ref. No.	Part No.	Description	No. Used
★3	391086	Seal—Oil	1
★7	271866	Gasket—Cylinder Head	1
★9	27803	Gasket—Valve Cover	1
★12	271916	Gasket—Crankcase Cover (1/64" Thick)	1
★	271997	Gasket—Crankcase Cover (.005" Thick)	1
★	271996	Gasket—Crankcase Cover (.009" Thick)	1
★20	291675	Seal—Oil	1
◆★51	272465	Gasket—Carburetor (Carb. to Elbow)	1
★52	272554	Gasket—Carburetor (Elbow to Cylinder)	1
●95	94098	Screw—Throttle	1
●104	231789	Pin—Float Hinge	1
●105	231855	Valve Assy.—Inlet Needle	1
●106	231854	Inlet Valve Seat	1

Ref. No.	Part No.	Description	No. Used
121	495799	Carburetor Kit	1
●127		Plug—Welch (Sold in Kit Only)	1
◆●137	281165	Gasket—Float Bowl	1
◆●138	281164	Washer—Float Bowl Screw	1
●142	494537	Nozzle—Carburetor	1
●147	231794	Pilot—Jet	1
358	494241	Gasket Set	1
★524	68838	Seal—Filler Tube	1
★537	281106	O-Ring—Air Cleaner	1
●634	281168	Seal—Choke Shaft	1
★634A	491323	Seal—Governor	1
●634B	394970	Washer—Throttle Shaft	1
★842	270920	Seal—Oil Filler Cap	1
977	494358	Carburetor Gasket Set	1
●987	281166	Seal—Throttle Shaft	1

★ Included in Gasket Set—Part No. 494241.

● Included in Carburetor Kit—Part No. 495799.


◆ Included in Carburetor Gasket Set—Part No. 494385.

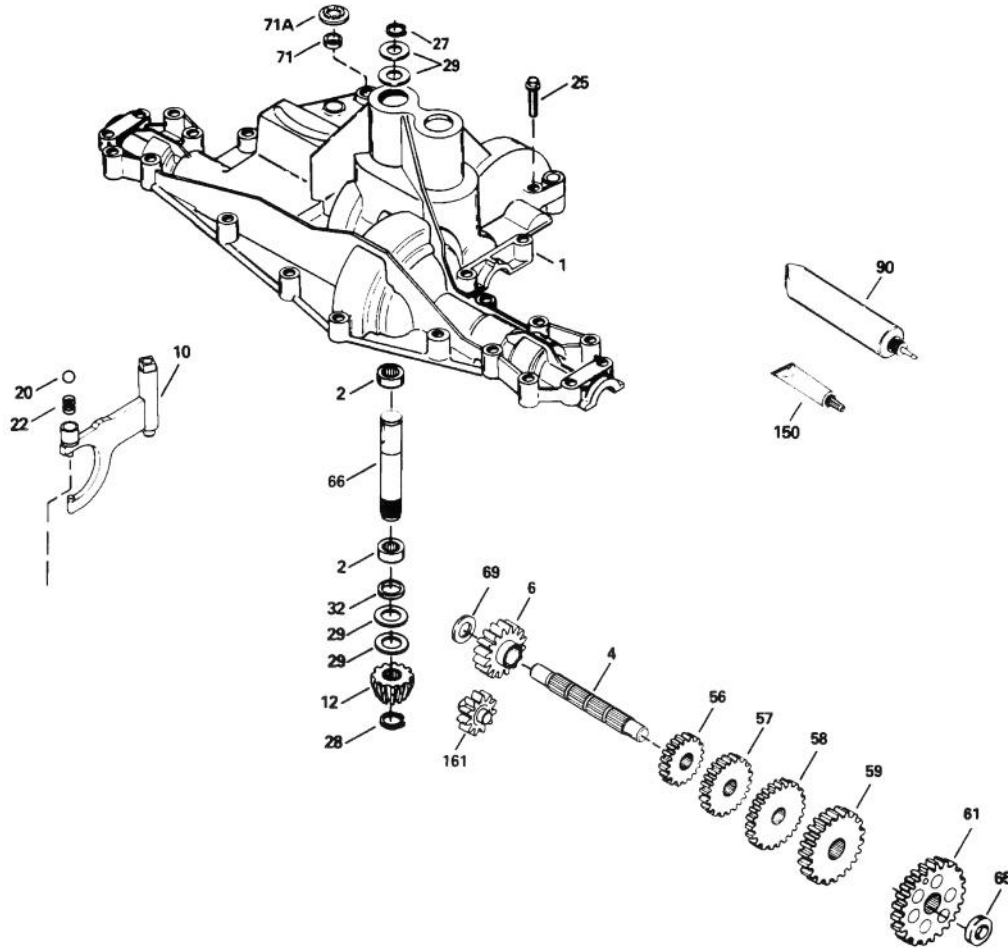

PEERLESS TRANSAXLE MODEL NO. 915-020

Ref. No.	Part No.	Description	No. Used
1	772128	Transaxle Cover	1
4	776300	Countershaft	1
6	778281	Spur Gear (16 Teeth)	1
10	784370	Shift Rod & Fork	1
12	778262	Bevel Pinion (14 Teeth)	1
20	792139	Ball (3/8" dia.)	1
22	792142	Spring	1
25	792073	Screw	17
27	792035	Retaining Ring	1
28	788040	Retaining Ring	1
29	780072	Washer	4
32	792001	O-Ring	1
56	778151	Spur Gear (15 Teeth)	1
57	778249	Spur Gear (23 Teeth)	1

Ref. No.	Part No.	Description	No. Used
58	778314	Spur Gear (21 Teeth)	1
59	778129A	Spur Gear (30 Teeth)	1
61	778265	Spur Gear (34 Teeth)	1
65	780162	Washer	1
66	776299	Input Shaft (3.522" lg.)	1
69	780161	Thrust Washer	1
71	788069	Square Cut Ring	1
71A	792145	Pushnut	1
90	788067B	Grease (32 oz. btl. Bentonite grease)	1
150	510334	Gasket Eliminator (Loctite #515)	1
161	776302	Reverse Idler Assembly	1

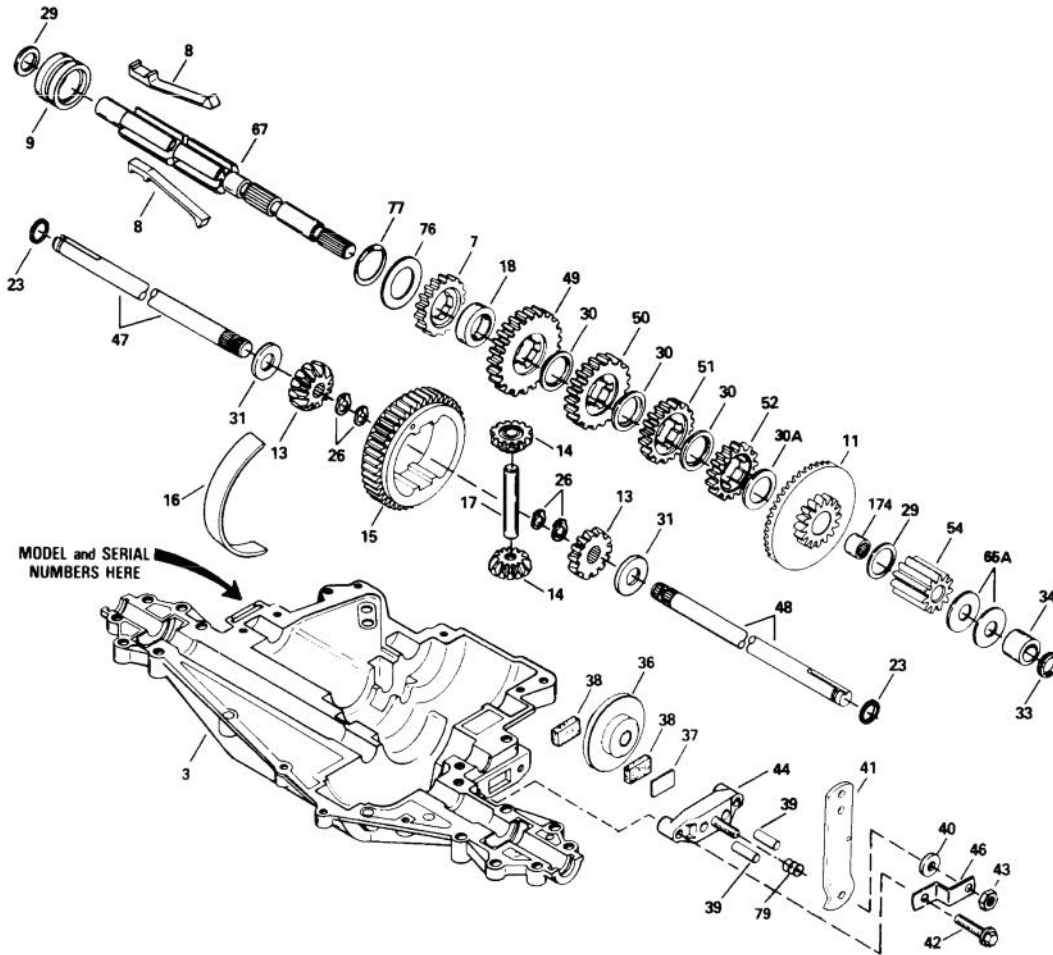

PEERLESS TRANSAXLE MODEL NO. 915-020 (Cont.)

Ref. No.	Part No.	Description	No. Used
3	770110	Transaxle Case	1
7	778122A	Spur Gear (22 Teeth)	1
8	792133	Shift Key	4
9	784352	Shift Coliar	1
11	778261	Bevel Gear & Bearing (44/16 Teeth) (Incl. Ref. #174)	1
13	778221	Bevel Gear (16 Teeth)	2
14	778068	Differential Pinion	2
15	778260	Ring Gear	1
16	786150	Bearing Strip	1
17	78139	Drive Pin	1
18	786147	Neutral Spacer	1
23	788061	Seal Ring	2
26	792125	Retaining Ring (pkg. of 2)	4
29	780072	Washer	2
30	780108	Washer	3
30A	789145	Washer	1
31	780001	Washer	2
33	788076	O-Ring	1
34	780159	Bushing	1
36	790071	Brake Disk	1
37	790007	Brake Pad Plate	1

Ref. No.	Part No.	Description	No. Used
38	790006	Brake Pad	2
39	786026	Dowel Pin	2
40	792076A	Washer	1
41	790045	Brake Lever	1
42	792073	Screw	2
43	792075	Locknut	1
44	790025	Brake Pad Holder	1
46	786086	Brake Lever Bracket	1
47	774869	Axle (16-13/16" lg.)	1
48	774688	Axle (11-5/8" lg.) (Incl. Ref. #26)	1
49	778125	Spur Gear (35 Teeth)	1
50	778250	Spur Gear (17 Teeth)	1
51	778313	Spur Gear (19 Teeth)	1
52	778121A	Spur Gear (20 Teeth)	1
54	778263	Spur Gear (11 Teeth)	1
65A	780160	Washer	2
67	776352	Shifter & Brake Shaft	1
76	780090	Washer	1
77	788078A	Inverted Retaining Ring (pkg. of 2)	1
79	792144	Spring	1
174	780085	Needle Bearing	1

TORO PART NUMBER INDEX

3316-539

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
106661	Cam	13 40 2	80-4370	Shield - Bearing	13 17 1
111419	Washer - Fender	4 19 1	80-4390	Spacer - Hardened	13 16 1
116397	Relay	9 16 1	80-4570	Stiffener - Blade	13 19 1
117242	Decal - Made in USA	1 20 1	83-7020	Spacer - Bearing	13 15 1
700806	Knob - Studded	3 4 1	84-5610	Guide - Cable	7 12 1
701178	Cap - Protector	1 6 2	84-5610	Guide - Cable	8 16 1
702366	Clip - Wire Retainer	9 9 1	88-0890	Grip - Brake Rod	4 11 1
910478	Screw - Phillips Hd.	9 19 4	88-3840	01 Body - Rear	1 5 1
3-6498	Washer - Thrust	5 11 1	88-3850	Wheel - Steering	5 5 1
3-6498	Washer - Thrust	4 32 2	88-3870	Cover - Steering Wheel	5 6 1
5-4015	Bolt - Shoulder	8 2 1	88-3880	Tank - Gas	6 6 1
5-4460	Washer - Fender	3 3 1	88-3910	Tower - Steering	2 2 1
5-4460	Washer - Fender	14 7 2	88-3930	Shield - Heat	2 14 1
5-4460	Washer - Fender	4 24 1	88-3940	Panel - Rear Hitch	1 10 1
5-4460	Washer - Flat	7 9 4	88-3950	Seat	3 * 1
7-0030	Bolt - Shoulder	12 3 4	88-3960	Lens - Headlights	9 23 1
7-0030	Bolt - Shoulder	14 26 1	88-3980	Cap - Gas	6 3 1
7-0036	Key - Square	11 10 2	88-4040	Box - Battery	9 11 1
7-5461	Washer - Hardened	8 10 1	88-4050	Duct - Hood Air	2 17 1
26-0671	Bolt - Blade	6 17 1	88-4060	Tire - 13	4 4 2
26-0671	Bolt - Blade	13 21 1	88-4080	Tire	11 8 2
26-6700	Spring - Brake Return	11 17 1	88-4140	Nut - Wedge	2 23 2
26-6700	Spring - Extension	14 27 1	88-4150	Plug	5 8 1
27-0220	Screw - Plastite	6 5 4	88-4160	Clamp - Pivot Rod	2 22 2
27-8890	Spring - Pedal Return	7 6 1	88-4170	Rod - Tower Pivot	2 24 1
28-0540	Bolt - Shoulder	2 11 2	88-4190	Bushing - Sliding	5 3 1
28-0540	Bolt - Shoulder	13 26 2	88-4220	Latch - Hood	2 16 1
28-2480	Washer	4 3 2	88-4230	Trunnion - H.O.C. Rear	12 12 2
28-2480	Washer	11 11 2	88-4270	Wheel & Tire Assembly	4 * 2
28-7350	Post - Rear Pivot	13 4 1	88-4290	Wheel & Tire Assembly	11 * 2
28-8080	Boot - Battery Terminal	9 5 1	88-4310	Harness - Wire	9 1 1
33-4750	Blade - 32	13 20 1	88-4330	Seat	3 1 1
37-8770	Bolt - Shoulder	7 2 1	88-4340	Control - Throttle	6 4 1
37-8770	Bolt - Shoulder	3 12 4	88-4350	Cable - Throttle	6 2 1
38-1420	Switch - Seat	9 8 1	88-4360	Rim - Front Wheel	4 5 2
44-5720	Baffle - Deck	13 23 1	88-4380	Rim	11 9 2
44-8110	Cable - Battery Negative	9 7 1	88-4400	Bearing - Wheel	4 35 4
46-5590	Spacer - Tube	7 27 2	88-4410	Gasket - Muffler	6 22 1
46-8090	Screw - Plastite	2 15 8	88-4460	Axle - Front	4 7 1
46-8091	Screw - Plastite	2 8 2	88-4480	Seal - Plunger	9 25 2
47-1910	Solenoid	9 17 1	88-4540	Hinge - Deflector Danger	13 34 1
47-2963	Line - Fuel	6 10 1	88-4560	Deflector - Double Pivot	13 31 1
47-4990	Post	14 15 2	88-4590	Bolt - Shoulder	14 16 1
52-2891	Bushing - Steering Link	4 20 2	88-4620	Bracket - Idler Pivot	1 12 1
54-9220	Decal - Danger	13 7 2	88-4630	Plate - Engine Mount	1 3 1
55-4300	Decal - Caution	13 8 2	88-4650	Rail - R.H. Frame	1 4 1
55-9321	Cable - Shotgo	8 5 1	88-4660	Rail - L.H. Frame	1 13 1
56-2540	Vent - Tube	9 2 1	88-4670	Bushing - Eccentric	4 17 1
56-7030	Housing - Spindle	13 14 1	88-4730	Clamp - H.O.C. Pivot	12 13 2
56-9830	Pad - Brake	14 11 1	88-4800	Bellcrank	7 19 1
56-9870	Pulley - Idler	14 22 1	88-4810	Clamp - Shift Pivot	8 4 2
61-9780	Cap - Hub	4 1 2	88-4810	Clamp - Shift Pivot	7 22 1
61-9780	Cap - Hub	11 13 2	88-4820	Bracket - Seat Hinge	3 13 2
62-1292	Knob - Engage Lever	2 3 1	88-4830	Link - Drag	4 29 1
62-1292	Knob - Shift	12 6 1	88-4840	Pulley - Transmission	11 3 1
62-1292	Knob - Shift	8 15 1	88-4880	Spacer - Microswitch	9 21 1
63-8360	Key - Ignition	9 12 1	88-4910	Support - Seat	3 2 1
65-2920	Pad - Pedal	7 25 1	88-4940	Pan - Front Suspension	13 27 1
66-1340	Decal - Danger	13 11 1	88-4960	Shield - Exhaust Pipe	1 14 1
67-0710	Ball - Swivel	14 30 1	88-5000	Pedal - Clutch/Brake	7 24 1
68-3650	Decal - Deflector Danger	13 5 1	88-5010	Spacer - Steering Rack	4 26 1
76-3820	Anchor - Belt Guide	6 13 2	88-5020	Gate - Shift	3 15 1
80-2240	Plate - Grille Panel	9 26 1	88-5030	Gate - H.O.C.	3 8 1
80-2600	Battery - 7 Plate	9 6 1	88-5050	Pulley - Engine	6 14 1
80-4350	Shaft - Spindle	13 18 1	88-5060	Pulley - Deck	14 2 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
88-5110	Pivot - H.O.C.	12	14	1	92-2468	Decal - Hood L.H.	2	25	1
88-5120	Support - Front Axle	1	17	1	92-2478	Decal - Ignition	2	28	1
88-5130	Bracket - Steering Rack	4	14	1	92-2480	Decal - Tower 1232XL	2	31	2
88-5150	Bushing - Flange	5	10	1	92-2482	Decal - Engine 12 H.P.	6	9	1
88-5160	Cover - Shift Gate	3	14	1	92-2484	Decal - Instruction	1	19	1
88-5170	Cover - H.O.C.	3	6	1	92-2489	Decal - Rear Body	1	18	1
88-5190	Lever - Deck Engage	2	1	1	92-2493	Spring - Torsion	13	3	1
88-5200	Rack - Steering	4	18	1	92-2494	Ramp - Deflector	13	38	1
88-5220	Mat - R.H. Foot	3	16	1	92-5730	Decal - Throttle	2	*	1
88-5240	Mat - L.H. Foot	3	9	1	92-5732	Decal - Ignition	2	*	1
88-5260	Bracket - Transaxle Mtg.	1	11	2	92-5733	Decal - Deck Engage	2	*	1
88-5270	Rod - Clutch/Brake	7	1	1	92-5748	Decal - Air Duct	2	27	1
88-5300	Lever - Shift	8	1	1	92-5782	Patch - Heat Tape	2	26	1
88-5310	Lever - H.O.C.	12	7	1	92-5794	Lever - Shift Pivot	8	21	1
88-5340	Lever - Trans. Shift	8	9	1	92-5796	Pivot - Shift	8	6	1
88-5350	Strap - Torque	11	16	2	92-7889	Spindle - R.H.	4	6	1
88-5370	Plate - Idler Mount	14	28	1	92-7890	Spindle - L.H.	4	31	1
88-5380	Rod - Steering Tie	4	8	1	92-8650	Hood	2	18	1
88-5450	Rod - Hanger Rear	12	11	2	92-8916	Bolt - Shoulder	13	30	1
88-5460	Guide - Trans. Belt	7	10	2	218-461	Nut - Hex	9	13	1
88-5470	Spacer - Front Axle	4	34	2	231-91	Tube - Inner (Optional)	11	*	2
88-5490	Guide - Belt R.H.	6	21	1	232-27	Valve Stem w/Cap	11	18	2
88-5500	Rod - Pedal Pivot	7	18	1	232-27	Valve Stem w/Cap	4	36	2
88-5510	Rod - Parking Brake	4	9	1	232-40	Tube - Inner (Optional)	4	*	2
88-5520	Bracket - Parking Brake	4	10	1	2412-98	Clamp - Hose	6	11	2
88-5530	Rod - Shift Tie	8	7	1	251-297	Bearing - Spindle	13	36	2
88-5560	Guide - Idler Belt	7	3	1	302-5	Fitting - Grease	4	37	2
88-5570	Link - Adjusting H.O.C.	12	1	2	302-11	Fitting - Grease	11	7	2
88-5640	Bracket - R.H.	13	28	1	302-26	Fitting - Grease	4	16	1
88-5650	Bracket - L.H.	13	25	1	321-4	Screw - Hex Hd. Cap	9	3	2
88-5680	Pulley - Flat Idler	7	4	1	321-4	Screw - Hex Hd. Cap	5	4	2
88-5690	Rod - Deck Brake	14	19	1	321-4	Screw - Hex Hd. Cap	2	10	4
88-5760	Guide - Belt	14	3	2	321-4	Screw - Hex Hd. Cap	6	26	1
88-5790-01	Cutter Deck - 32	13	9	1	322-3	Screw - Hex Hd. Cap	1	2	22
88-5800	Bushing - Steering	4	33	4	322-3	Screw - Hex Hd. Cap	12	4	4
88-5850	Arm - Idler	14	23	1	322-3	Screw - Hex Hd. Cap	2	4	2
88-5900	Link - H.O.C.	12	8	1	322-3	Screw - Hex Hd. Cap	13	6	10
88-5920	Rod - Gas Tank	6	7	1	322-3	Screw - Hex Hd. Cap	3	11	4
88-5930	Keeper - Cable	8	17	1	322-3	Screw - Hex Hd. Cap	8	13	3
88-5980	Rod - Deck Engage	14	24	1	322-3	Screw - Hex Hd. Cap	7	17	1
88-6040	Bracket - Hood Pivot R.H.	2	19	1	322-3	Screw - Hex Hd. Cap	14	29	2
88-6050	Bracket - Hood Pivot L.H.	2	12	1	322-5	Screw - Hex Hd. Cap	14	6	2
88-6060	Guide - Belt L.H.	6	12	1	322-5	Screw - Hex Hd. Cap	1	7	2
88-6070	Arm - Idler	7	16	1	322-5	Screw - Hex Hd. Cap	7	8	1
88-6110	Deck Brake Assembly	14	17	1	322-6	Screw - Hex Hd. Cap	13	39	2
88-6140	Spring - Brake	7	7	1	322-7	Screw - Hex Hd. Cap	7	11	1
88-6150	Rod - Deflector Hinge	13	33	1	322-9	Screw - Hex Hd. Cap	6	18	4
88-6160	Spring - Torsion	13	32	1	322-12	Screw - Hex Hd. Cap	11	14	4
88-6220	Spring - Compression	1	8	2	322-12	Screw - Hex Hd. Cap	13	29	2
88-6260	V-Belt	14	13	1	322-12	Screw - Hex Head Cap	7	28	2
88-6270	V-Belt - Traction	11	5	1	323-11	Screw - Hex Hd. Cap	7	5	1
88-6290	Shield - Muffler	1	15	1	323-13	Screw - Hex Hd. Cap	4	27	2
88-6330	Spring - Extension	14	5	1	329-23	Screw - Hex Hd. Cap	8	12	1
88-6330	Spring - Extension	7	14	1	3219-7	Nut - Lock	14	1	1
88-6380	Shaft - Steering	5	9	1	3230-1	Bolt - Carriage	4	15	4
88-6420	Spring/Cable Assembly	14	12	1	3230-3	Bolt - Carriage	8	18	1
88-6450	Transaxle	11	6	1	3230-3	Bolt - Carriage	7	21	1
88-6460	Spring - Extension	12	2	1	3230-3	Screw - Carriage	4	28	1
88-6480	Muffler	6	25	1	3231-4	Screw - Carriage	4	13	1
88-9780	Ring - Wet Grass	13	12	4	3234-13	Screw - Hex Flange Hd.	14	25	2
88-9830	Switch - Ignition	9	15	1	3253-3	Washer - Lock	8	11	1
88-9931	Switch - Micro	9	20	2	3253-3	Washer - Lock	6	27	1
92-2461	Decal - Throttle	2	29	1	3253-4	Washer - Lock	6	23	2
92-2462	Decal - Deck Engage	2	30	1	3253-22	Washer - Lock	6	16	1
92-2467	Decal - Hood R.H.	2	*	1	3254-5	Washer - Lock	9	14	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3316-539

Part No.	Description	Pg. Ref.		Part No.	Description	Pg. Ref.	
		No.	Qty.			No.	Qty.
3255-7	Washer - Ext. Tooth Lock	9	24	3296-29	Nut - Lock	1	9
3255-8	Washer - Ext. Tooth Lock	6	19	3296-29	Nut - Lock	14	9
3256-22	Washer - Flat	5	2	3296-29	Nut - Lock	13	10
3256-23	Washer - Flat	1	1	3296-29	Nut - Lock	3	10
3256-23	Washer - Flat	2	5	3296-29	Nut - Lock	4	12
3256-23	Washer - Flat	8	14	3296-29	Nut - Lock	7	13
3256-23	Washer - Flat	11	15	3296-39	Nut - Lock	8	19
3256-23	Washer - Flat	14	18	3296-39	Nut - Lock	14	21
3256-23	Washer - Flat	7	26	3296-39	Nut - Lock	4	21
3256-23	Washer - Flat	13	37	3296-42	Nut - Lock	13	1
3256-24	Washer - Flat	12	10	3296-42	Nut - Lock	5	1
3256-24	Washer - Flat	14	14	3296-42	Nut - Lock	14	4
3256-24	Washer - Flat	2	20	3296-42	Nut - Lock	2	9
3256-24	Washer - Flat	4	25	3296-59	Nut - Lock	7	15
3256-25	Washer - Flat	6	15	3296-59	Nut - Lock	13	24
3256-25	Washer - Flat	8	20	32103-22	Nut - Wing	9	4
3256-25	Washer - Flat	4	22	32104-76	Screw - Thread Tapping	1	16
3256-26	Washer - Flat	7	20	32120-64	Ring - Snap	11	2
3256-58	Washer - Fender	13	2	32121-78	Pin - Roll	5	7
3257-23	Key - Woodruff	11	4	32122-14	Screw - Truss Hd.	13	13
3269-5	Rivet - Pop	3	7	32128-43	Nut - Flange	2	21
3269-6	Washer - Backup	3	17	32144-4	Screw - Hex Hd. Thr'd	9	10
3272-10	Pin - Cotter	4	23	32149-1	Nut - Keps	6	20
3272-10	Pin - Cotter	7	23	32149-2	Nut - Keps	9	18
3272-12	Pin - Cotter	4	2	32151-48	E-Ring	11	12
3274-12	Screw - Hex Soc. Hd.	6	24	32151-48	E-Ring	5	12
3290-282	Rivet - Pop	14	10	32151-48	E-Ring	4	30
3290-299	Nut - Tinnerman	9	27				
3290-307	Pin - Cotter	2	7				
3290-307	Pin - Hair Cotter	12	9				
3290-307	Pin - Hair Cotter	14	20				
3290-354	Speednut	9	22				
3290-465	Washer - Belleville	13	22				
3290-479	Fastener - Panel	3	5				
3290-496	Nut - Retained	14	8				
3290-496	Nut - Retained	2	13				
3296-3	Nut - Lock	8	8				
3296-29	Nut - Lock	11	1				
3296-29	Nut - Lock	8	3				
3296-29	Nut - Lock	12	5				
3296-29	Nut - Lock	2	6				
3296-29	Nut - Lock	6	8				

OPTIONAL EQUIPMENT

Easy Empty Bagger Kit	Model No. 79095
Twin Bagger	Model No. 79085
Recycler Kit	Model No. 59167
Wheel Weight Kit	Model No. 59159
42" Snowblade Kit	Model No. 79150
Tire Chains	Part No. 47-7220
Wet Grass Bagging Kit	
(Standard for Model 71200)	Part No. 38-5730
Headlight Kit	Model No. 79180

*Not Illustrated

