 
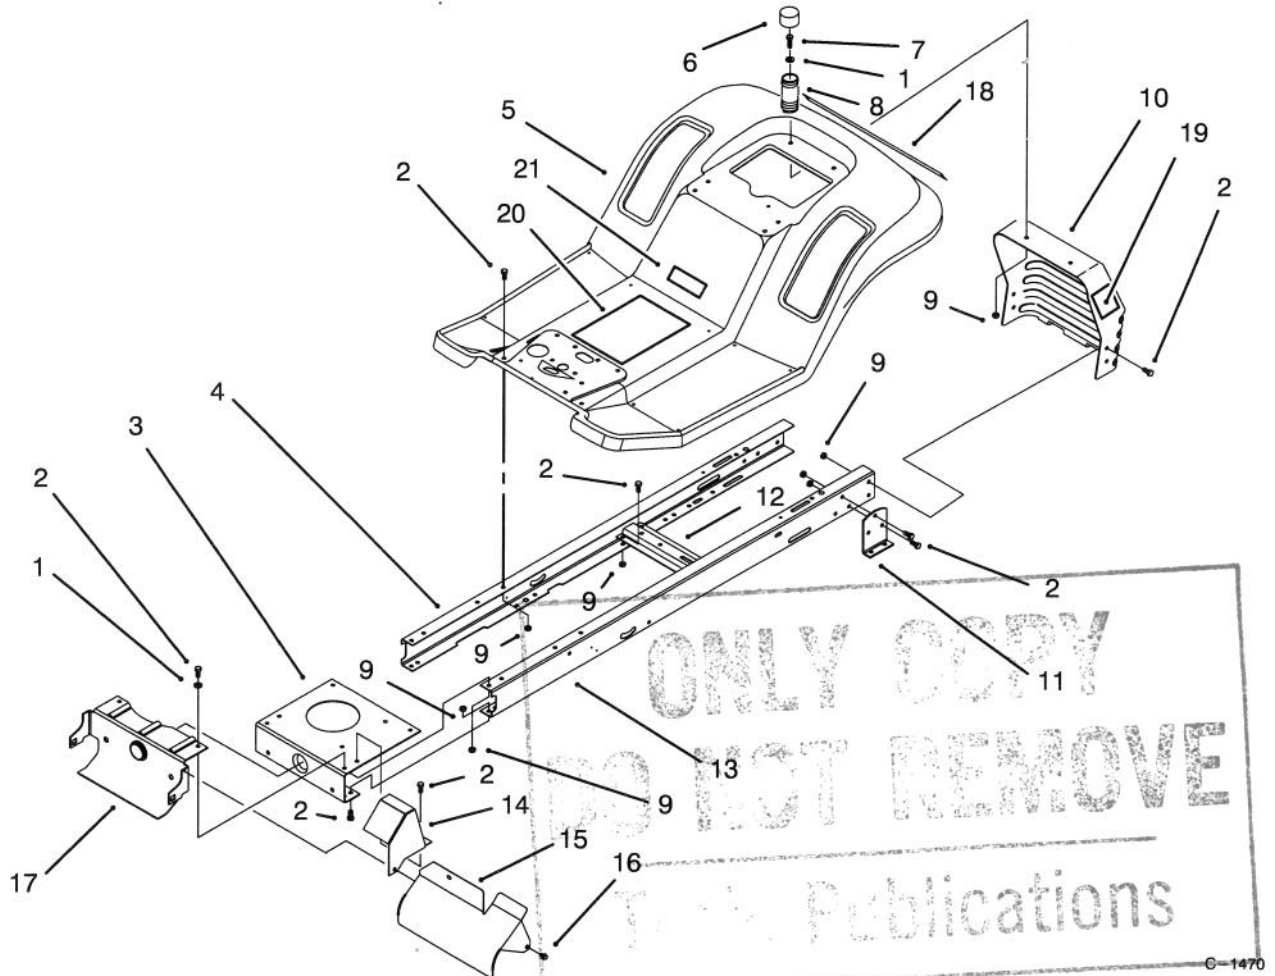 


TOROMODEL NO. 71191-490001 & UP
MODEL NO. 71213-490001 & UP**PARTS
CATALOG****1338HXL LAWN TRACTOR****FRAME ASSEMBLY**

Ref. No.	Part No.	Description	No. Used
1	3256-23	Washer - Flat	4
2	322-3	Screw - Hex Hd. Cap	22
3	88-4630	Plate - Engine Mount	1
4	88-4650	Rail - R.H. Frame	1
5	88-3840-01	Body - Rear	1
6	701178	Cap - Protector	2
7	322-5	Screw - Hex Hd. Cap	2
8	88-6220	Spring - Compression	2
9	3296-29	Nut - Lock	24
10	88-3940	Panel - Rear Hitch	1
11	88-5260	Bracket - Transaxle Mtg.	2
12	88-4620	Bracket - Idler Pivot	1

Ref. No.	Part No.	Description	No. Used
13	88-4660	Rail - L.H. Frame	1
14	88-4960	Shield - Exhaust Pipe	1
15	88-6290	Shield - Muffler	1
16	32104-76	Screw - Thread Tapping	1
17	88-5120	Support - Front Axle	1
18	92-8789	Decal - Rear Body	1
19	92-8784	Decal - Dump Valve Hydro	1
20	92-2486	Decal - Instruction Hydro	1
21	117242	Decal - Made in USA (Model No. 71191 Only)	1

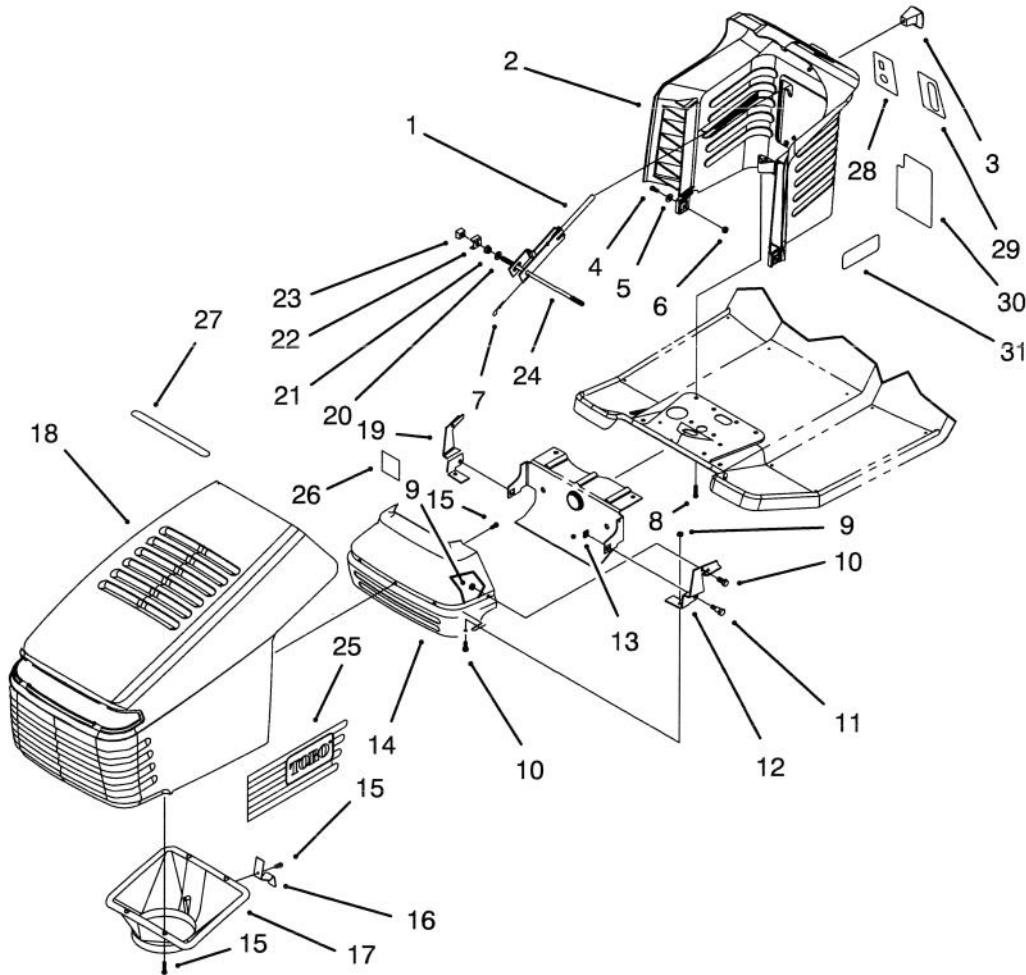


C-1308

HOOD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88-5190	Lever - Deck Engage	1
2	88-3910	Tower - Steering	1
3	62-1292	Knob - Engage Lever	1
4	322-3	Screw - Hex Hd. Cap	2
5	3256-23	Washer - Flat	2
6	3296-29	Nut - Lock	2
7	3290-307	Pin - Cotter	2
8	46-8091	Screw - Plastite	2
9	3296-42	Nut - Lock	4
10	321-4	Screw - Hex Hd. Cap	4
11	28-0540	Bolt - Shoulder	2
12	88-6050	Bracket - Hood Pivot L.H.	1
13	3290-496	Nut - Retained	2
14	88-3930	Shield - Heat	1
15	46-8090	Screw - Plastite	8
16	88-4220	Latch - Hood	1
17	88-4050	Duct - Hood Air	1
18	92-8650	Hood	1
19	88-6040	Bracket - Hood Pivot R.H.	1
20	3256-24	Washer - Flat	2
21	32128-43	Nut - Flange	2

Ref. No.	Part No.	Description	No. Used
22	88-4160	Clamp - Pivot Rod	2
23	88-4140	Nut - Wedge	2
24	88-4170	Rod - Tower Pivot	1
25	92-2467	Decal - Hood R.H.	1
*	92-2468	Decal - Hood L.H.	1
26	92-5782	Patch - Heat Tape	1
27	92-5748	Decal - Air Duct	1
28	92-2460	Decal - Ignition/Lights (Model No. 71191 Only)	1
*	92-5731	Decal - Ignition/Light (Model No. 71213 Only)	1
29	92-2461	Decal - Throttle (Model No. 71191 Only)	1
*	92-5730	Decal - Throttle (Model No. 71213 Only)	1
30	92-2462	Decal - Deck Engage (Model No. 71191 Only)	1
*	92-5733	Decal - Deck Engage (Model No. 71213 Only)	1
31	92-8786	Decal - Tower 1338HXL	2

 
*Not Illustrated

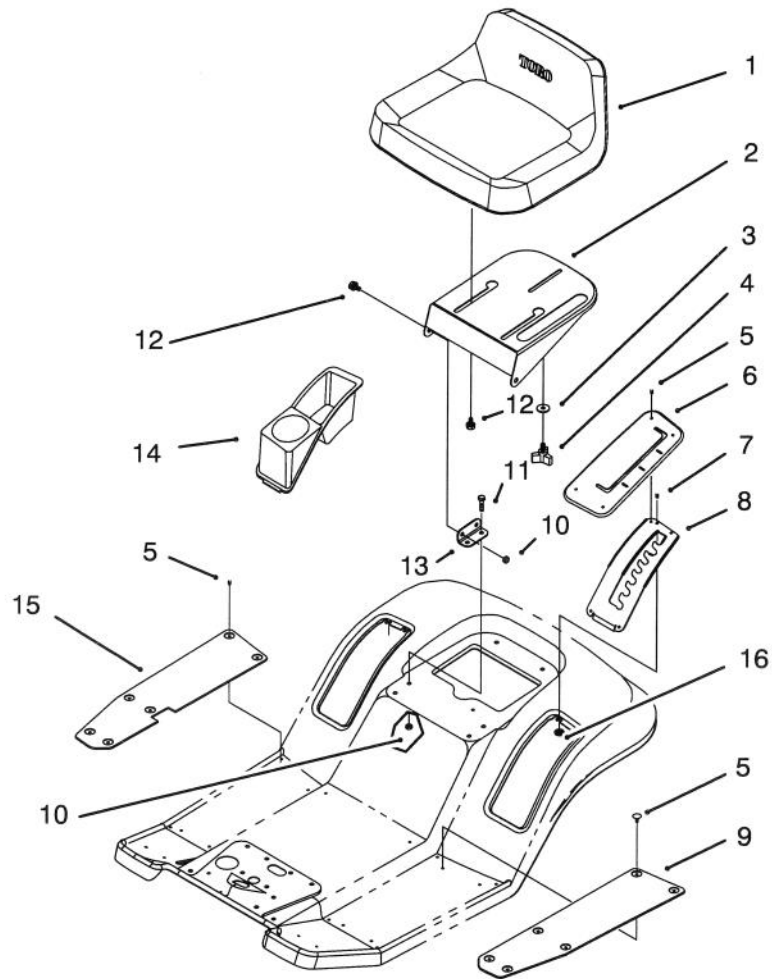

C-1350

SEAT ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	88-3950	Seat	1	9	88-5240	Mat - L.H. Foot	1
2	88-4910	Support - Seat	1	10	3296-29	Nut - Lock	6
3	5-4460	Washer - Fender	1	11	322-3	Screw - Hex Hd. Cap	4
4	700806	Knob - Studded	1	12	37-8770	Bolt - Shoulder	4
5	3290-479	Panel - Fastener	16	13	88-4820	Bracket - Seat Hinge	2
6	88-5170	Cover - H.O.C.	1	14	88-4990	Tray - Fender	1
7	3269-5	Rivet - Pop	2	15	88-5230	Mat - R.H. Foot	1
8	88-5030	Gate - H.O.C.	1	16	3269-6	Washer - Backup	2

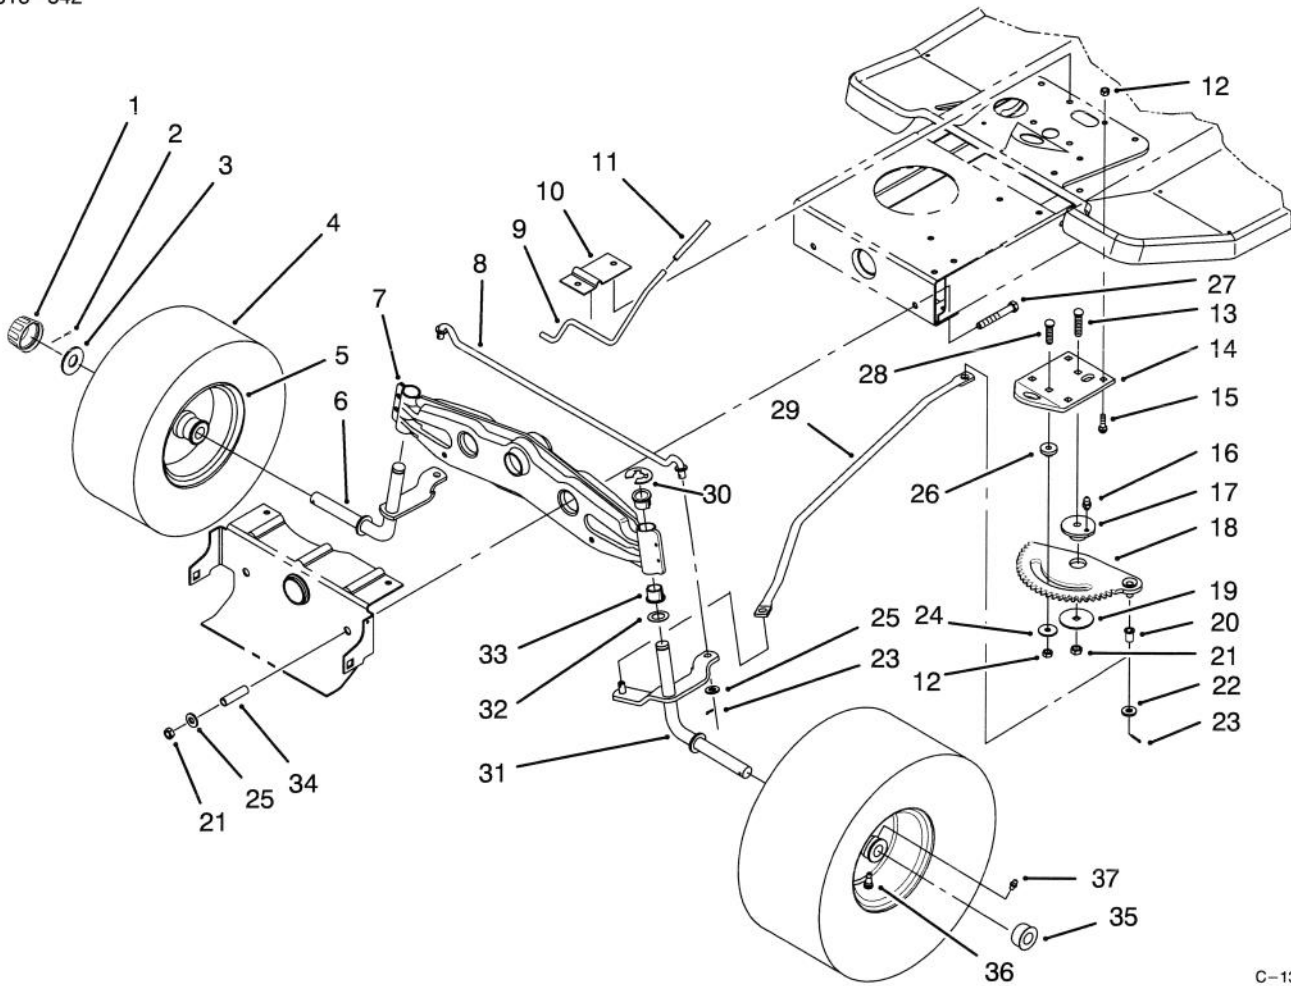 


C-1302A

FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	61-9780	Cap - Hub	2
2	3272-12	Pin - Cotter	2
3	28-2480	Washer	2
4	88-4070	Tire - 13"	2
5	88-4370	Rim - Front Wheel	2
6	92-7889	Spindle - R.H.	1
7	88-4460	Axle - Front	1
8	88-5380	Rod - Steering Tie	1
9	88-5510	Rod - Parking Brake	1
10	88-5520	Bracket - Parking Brake	1
11	88-0890	Grip - Brake Rod	1
12	3296-29	Nut - Lock	5
13	3231-4	Bolt - Carriage	1
14	88-5130	Bracket - Steering Rack	1
15	3230-1	Bolt - Carriage	4
16	302-26	Fitting - Grease	1
17	88-4670	Bushing - Eccentric	1
18	88-5200	Rack - Steering	1
19	111419	Washer - Fender	1
20	52-2891	Bushing - Steering Link	2
21	3296-39	Nut - Lock	3

Ref. No.	Part No.	Description	No. Used
22	3256-25	Washer - Flat	2
23	3272-10	Pin - Cotter	4
24	5-4460	Washer - Fender	1
25	3256-24	Washer - Flat	4
26	88-5010	Spacer - Steering Rack	1
27	323-13	Screw - Hex Hd. Cap	2
28	3230-3	Bolt - Carriage	1
29	88-4830	Link - Drag	1
30	32151-48	E-Ring	2
31	92-7890	Spindle - L.H.	1
32	3-6498	Washer - Thrust	2
33	88-5800	Bushing - Steering Spindle	4
34	88-5470	Spacer - Front Axle	2
35	88-4400	Bearing - Wheel	4
36	232-27	Valve Stem w/Cap	2
37	302-5	Fitting - Grease	2
*	232-39	Inner Tube (Optional)	2
*	88-4280	Wheel & Tire Assembly (Incl. Ref. #4 & 5)	2

 *Not Illustrated

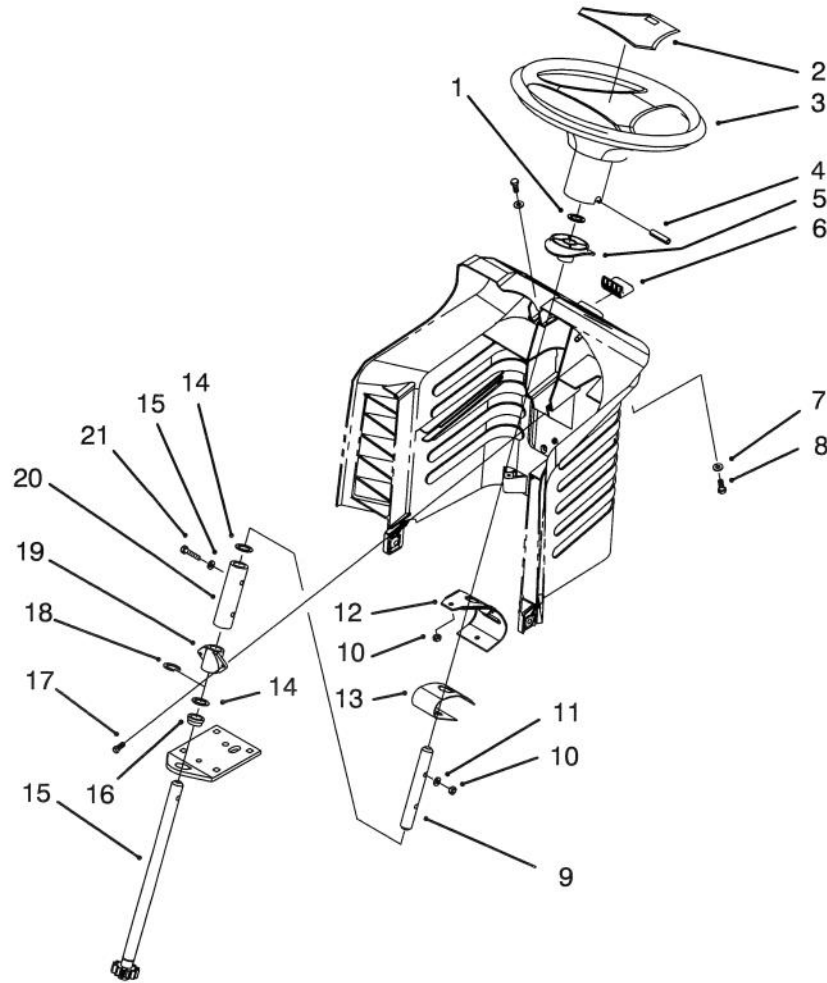


C-1344

STEERING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32151-81	Ring - Retaining	1
2	88-3870	Cover - Steering Wheel	1
3	88-3850	Wheel - Steering (Incl. Ref. #2)	1
4	32121-78	Pin - Roll	1
5	88-4190	Bushing - Sliding	1
6	88-4180	Button - Release	1
7	3256-22	Washer - Flat	2
8	321-4	Screw - Hex Hd. Cap	2
9	88-6300	Shaft - Steering Upper	1
10	3296-42	Nut - Lock	4

Ref. No.	Part No.	Description	No. Used
11	3-7501	Washer - Curved	4
12	88-5180	Bracket - Backup	1
13	88-4890	Spring - Leaf	1
14	3-6498	Washer - Thrust	2
15	88-6370	Shaft - Steering Short	1
16	88-5150	Bushing - Flange	1
17	27-0220	Screw - Plastite	2
18	32151-48	E-Ring	1
19	88-4210	Bushing - Stationary	1
20	88-6090	Coupling - Steering	1
21	321-9	Screw - Hex Hd. Cap	2

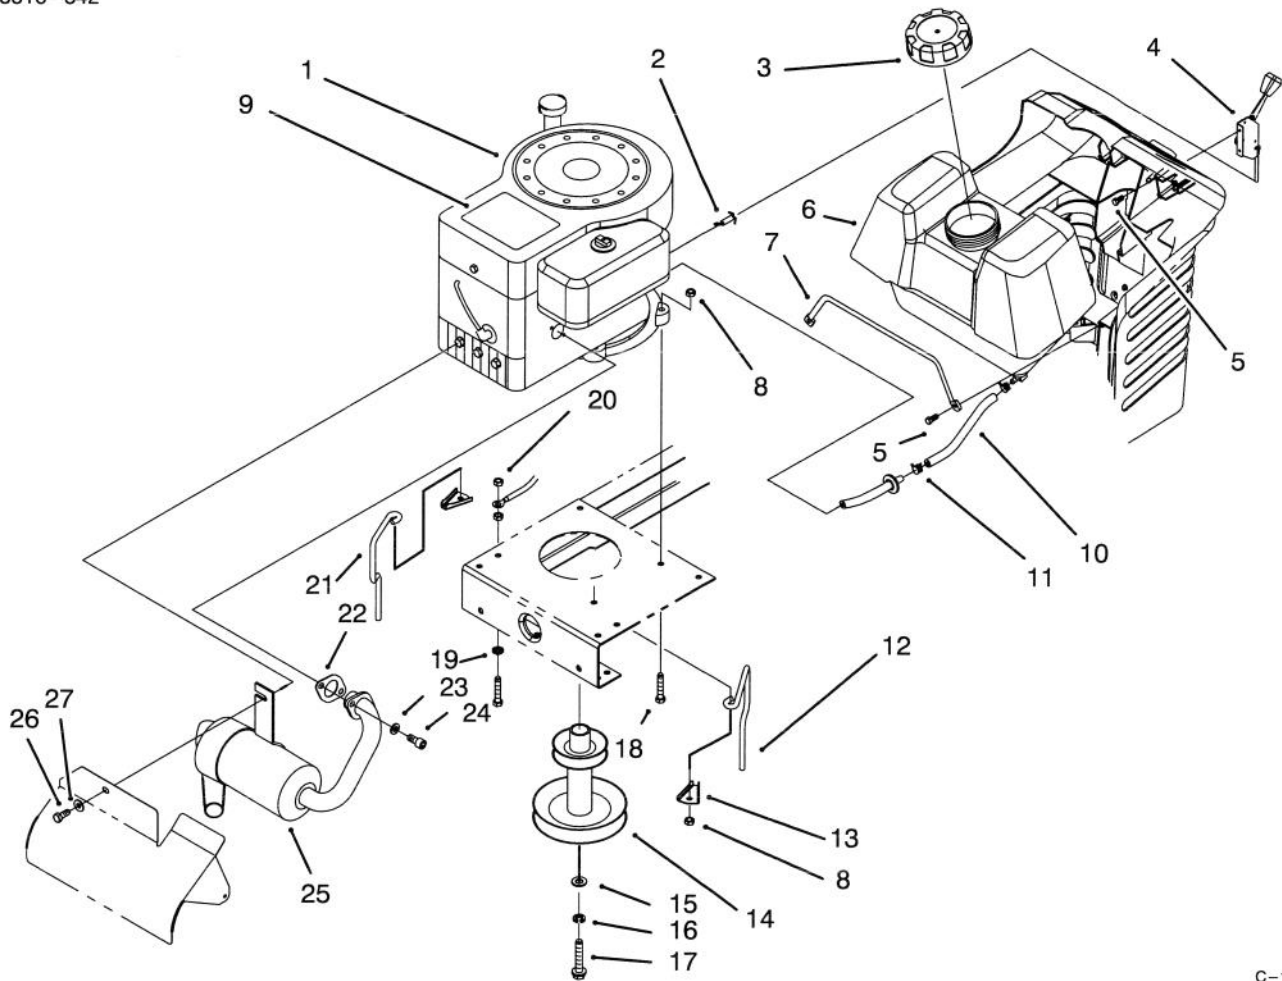 


C-1345

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1		Engine - 13 H.P	1
2	88-4350	Cable - Throttle	1
3	88-3980	Cap - Gas	1
4	88-4340	Control - Throttle	1
5	27-0220	Screw - Plastite	4
6	88-3880	Tank - Gas	1
7	88-5920	Rod - Gas Tank	1
8	3296-29	Nut - Lock	3
9	92-8757	Decal - Engine 13 H.P.	1
10	47-2963	Line - Fuel	1
11	2412-98	Clamp - Hose	2
12	88-5830	Guide - Belt L.H.	1
13	76-3820	Anchor - Belt Guide	2
14	88-4850	Pulley - Engine	1

Ref. No.	Part No.	Description	No. Used
15	3256-25	Washer - Flat	1
16	3253-22	Washer - Lock	1
17	26-0671	Bolt - Blade	1
18	322-9	Screw - Hex Hd. Cap	4
19	3255-8	Washer - Ext. Tooth Lock	1
20	32149-1	Nut - Keps	2
21	88-5840	Guide - Belt R.H.	1
22	88-4410	Gasket - Muffler	1
23	3253-4	Washer - Lock	2
24	3274-12	Screw - Hex Soc. Hd.	2
25	88-6480	Muffler	1
26	321-4	Screw - Hex Hd. Cap	1
27	3253-3	Washer - Lock	1

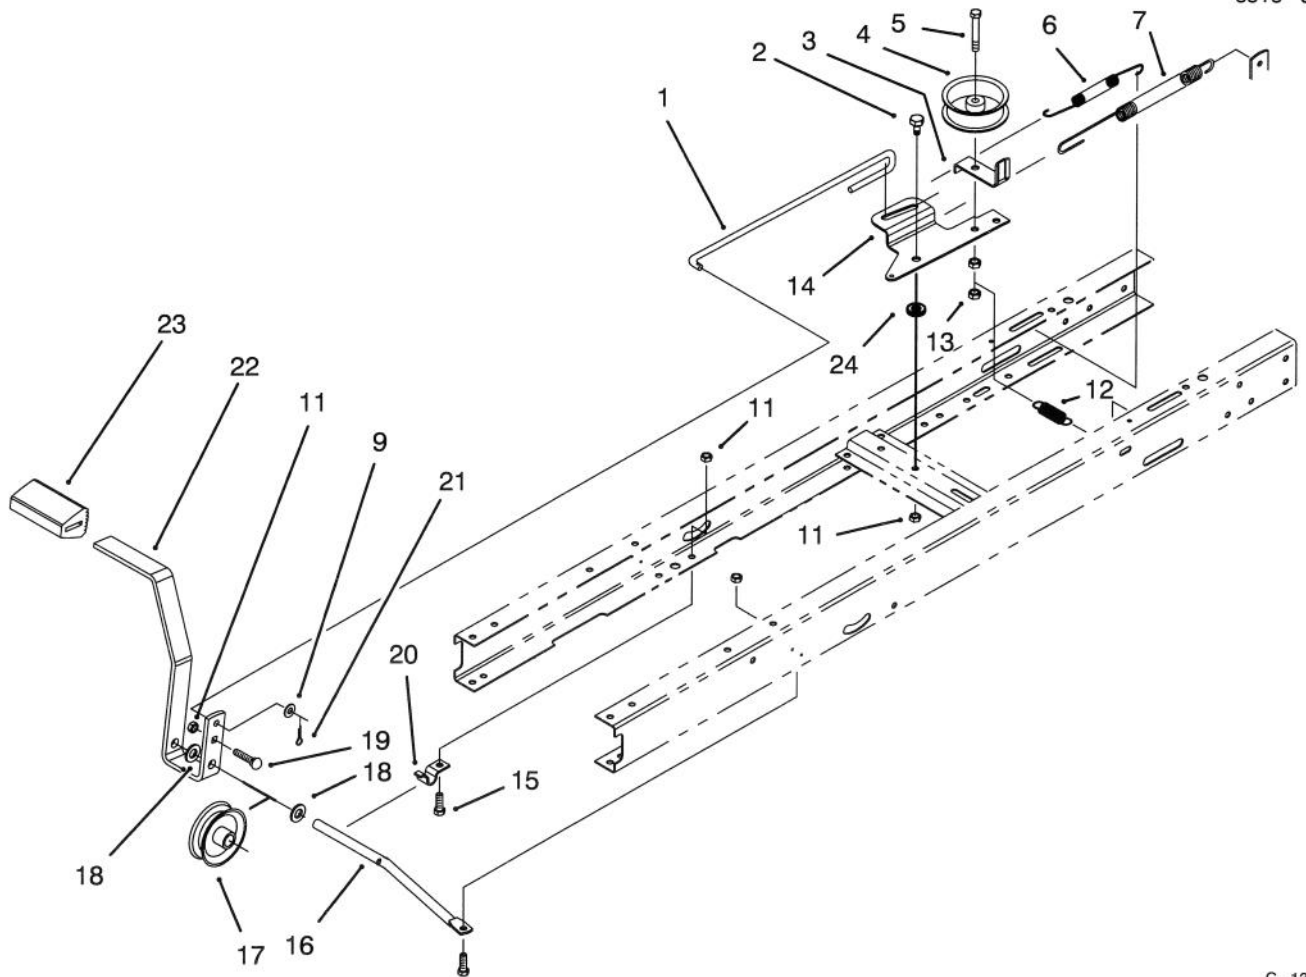 


C-1351

CLUTCH ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88-5270	Rod - Clutch/Brake	1
2	37-8770	Bolt - Shoulder	1
3	88-5560	Guide - Idler Belt	1
4	88-5680	Pulley - Flat Idler	1
5	323-11	Screw - Hex Hd. Cap	1
6	27-8890	Spring - Pedal Return	1
7	88-6140	Spring - Brake	1
9	3256-23	Washer - Flat	1
11	3296-29	Nut - Lock	4
12	88-6330	Spring - Extension	1
13	3296-59	Nut - Lock	2

Ref. No.	Part No.	Description	No. Used
14	88-6070	Arm - Idler	1
15	322-3	Screw - Hex Hd. Cap	2
16	88-5500	Rod - Pedal Pivot	1
17	88-4700	Pulley - Cable	1
18	3256-26	Washer - Flat	2
19	3230-3	Bolt - Carriage	1
20	88-4810	Clamp - Shift Pivot	1
21	3272-10	Pin - Cotter	1
22	88-5000	Pedal - Clutch/Brake	1
23	65-2920	Pad - Pedal	1
24	5-4460	Washer - Fender	1

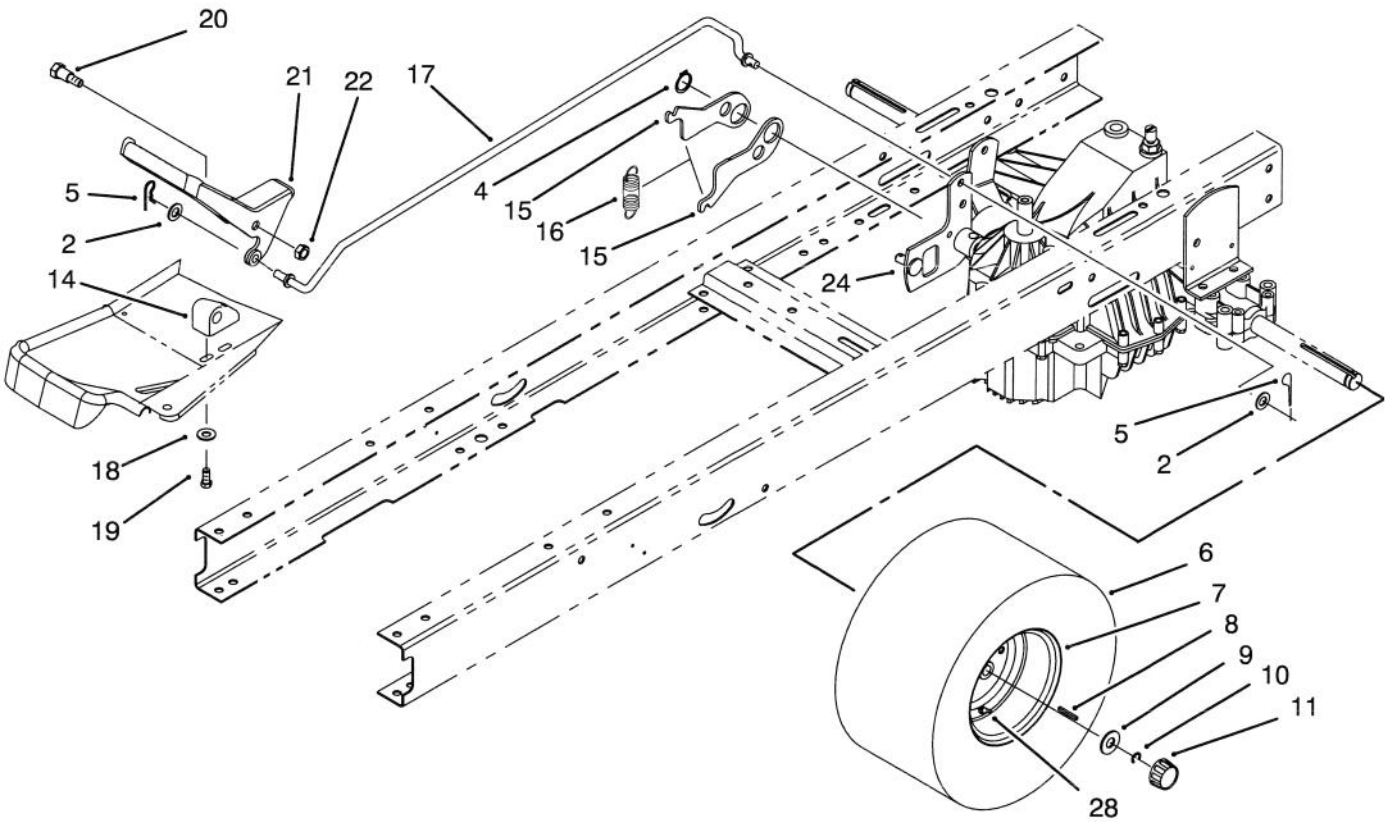 


C-1824

SPEED CONTROL & REAR WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
2	3256-23	Washer - Flat	2
4	32151-83	Ring - External Retaining	1
5	3290-307	Pin - Cotter Hair	2
6	88-4090	Tire	2
7	83-4390	Rim	2
8	7-0036	Key - Square	2
9	28-2480	Washer	2
10	32151-48	E-Ring	2
11	61-9780	Cap - Hub	2
14	88-4690	Block - Pivot	1
15	88-5610	Lever - Neutral Return	2

Ref. No.	Part No.	Description	No. Used
16	92-7305	Spring - Extension	1
17	88-5940	Rod - Speed Control	1
18	3256-22	Washer - Flat	2
19	46-8090	Screw - Plastiite	2
20	23-0310	Bolt - Shoulder	1
21	88-6030	Pedal - Speed Control	1
22	3296-59	Nut - Lock	1
28	232-27	Valve Stem w/Cap	2
*	232-41	Inner Tube (Optional)	2
*	88-4300	Wheel & Tire Assembly (Incl. Ref. #6 & 7)	1

 *Not Illustrated

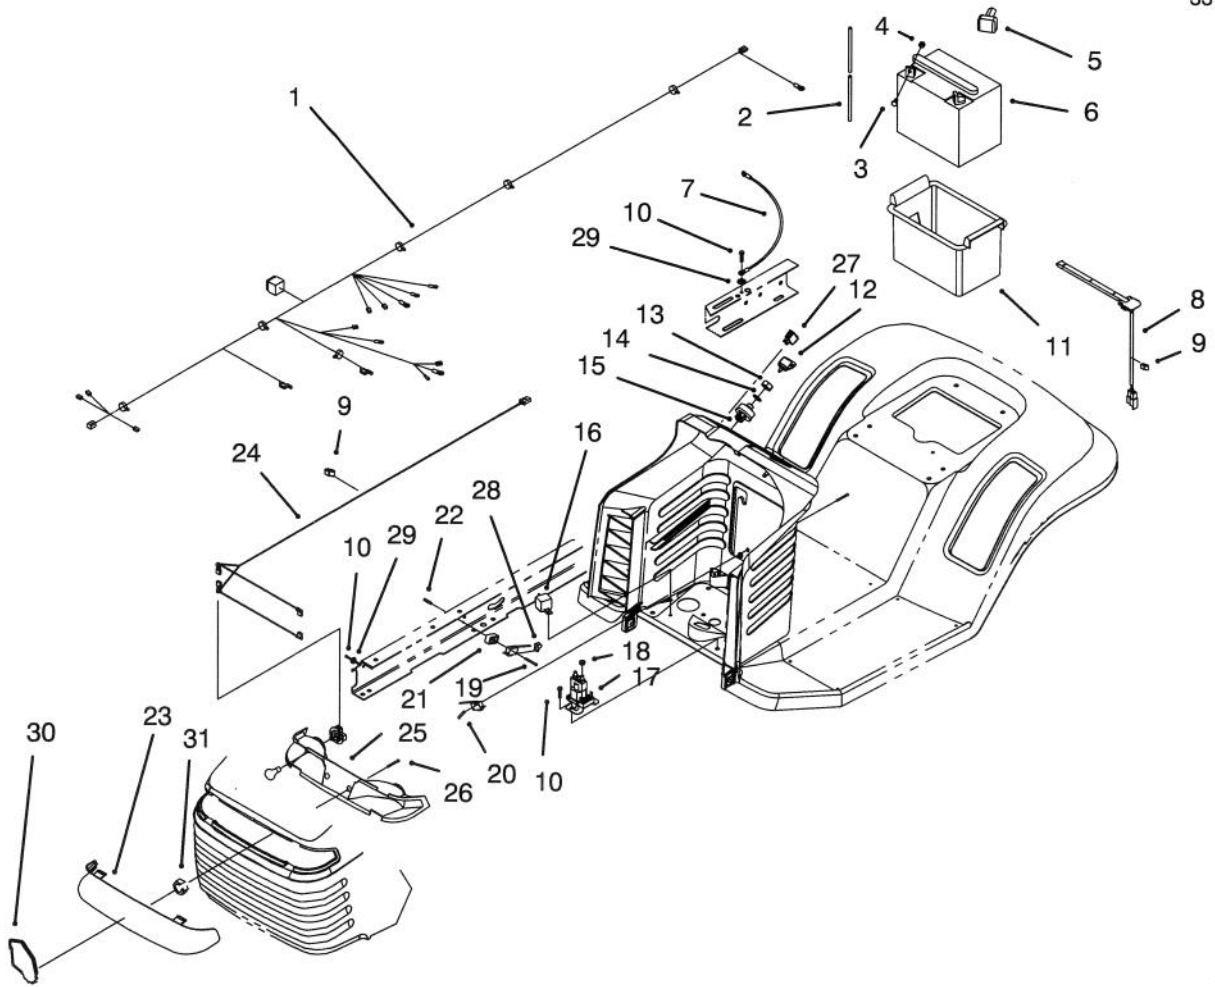


C-1342

ELECTRICAL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88-4310	Harness - Wire	1
2	56-2540	Vent - Tube	1
3	321-4	Screw - Hex Hd. Cap	2
4	32103-22	Nut - Wing	2
5	28-8080	Boot - Battery Terminal	1
6	80-2600	Battery - 7 Plate	1
7	44-8110	Cable - Battery Negative	1
8	38-1420	Switch - Seat	1
9	702366	Clip - Wire Retainer	3
10	32144-4	Screw - Hex Hd. Thr'd Forming	4
11	88-4040	Box - Battery	1
12	63-8360	Key - Ignition	1
13	218-461	Nut - Hex	1
14	3254-5	Washer - Lock	1
15	88-9830	Switch - Ignition (Incl. Ref. #13 & 14)	1

Ref. No.	Part No.	Description	No. Used
16	116397	Relay	1
17	47-1910	Solenoid	1
18	32149-2	Nut - Keps	2
19	910478	Screw - Phillips Hd.	4
20	88-9931	Switch - Micro	2
21	88-4880	Spacer - Microswitch	1
22	3290-354	Speednut	2
23	88-3960	Lens - Headlights	1
24	88-4320	Harness - Wire	1
25	88-3970	Reflector & Lamp	1
26	32144-32	Screw - Plastite	2
27	92-8875	Switch - Rocker	1
28	88-4480	Seal - Plunger	2
29	3255-7	Lockwasher	2
30	80-2240	Plate - Name Grille	1
31	3290-299	Nut - Tinnerman	1

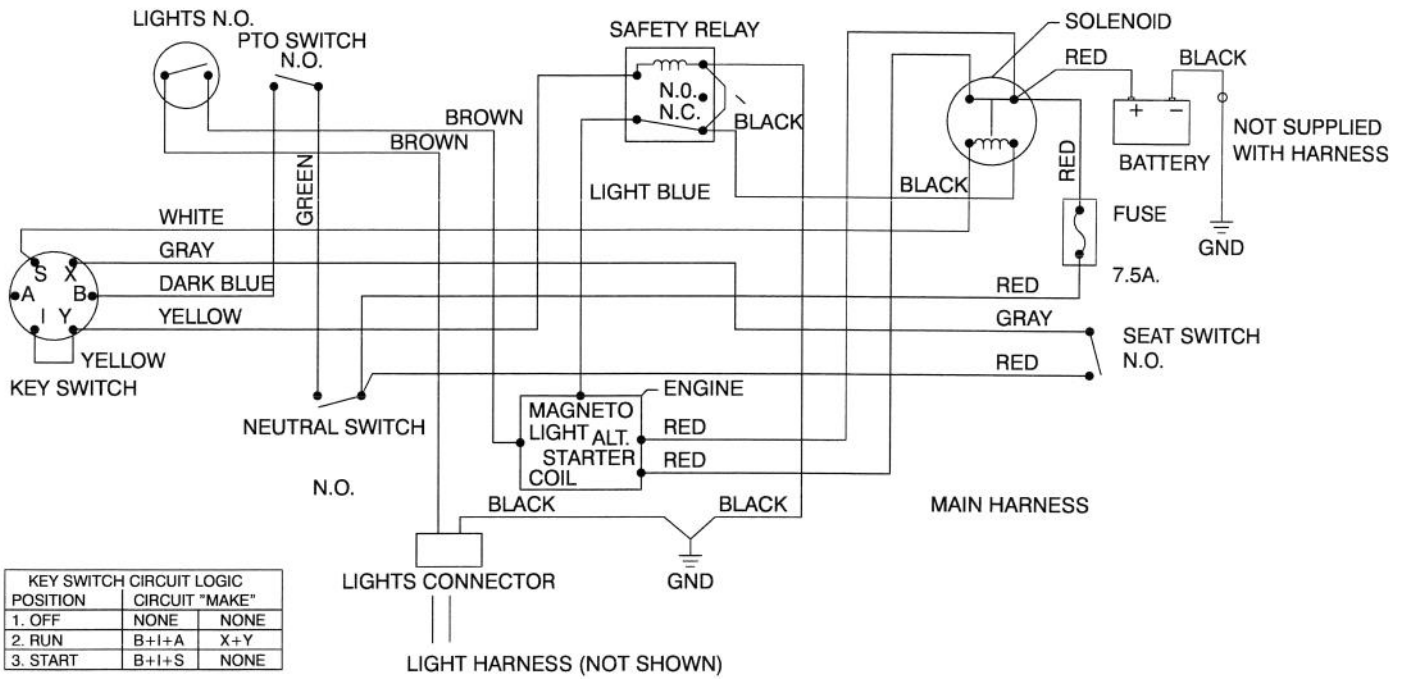 


C-1799

ELECTRICAL SCHEMATIC

Ref. No.	Part No.	Description	No. Used

Ref. No.	Part No.	Description	No. Used

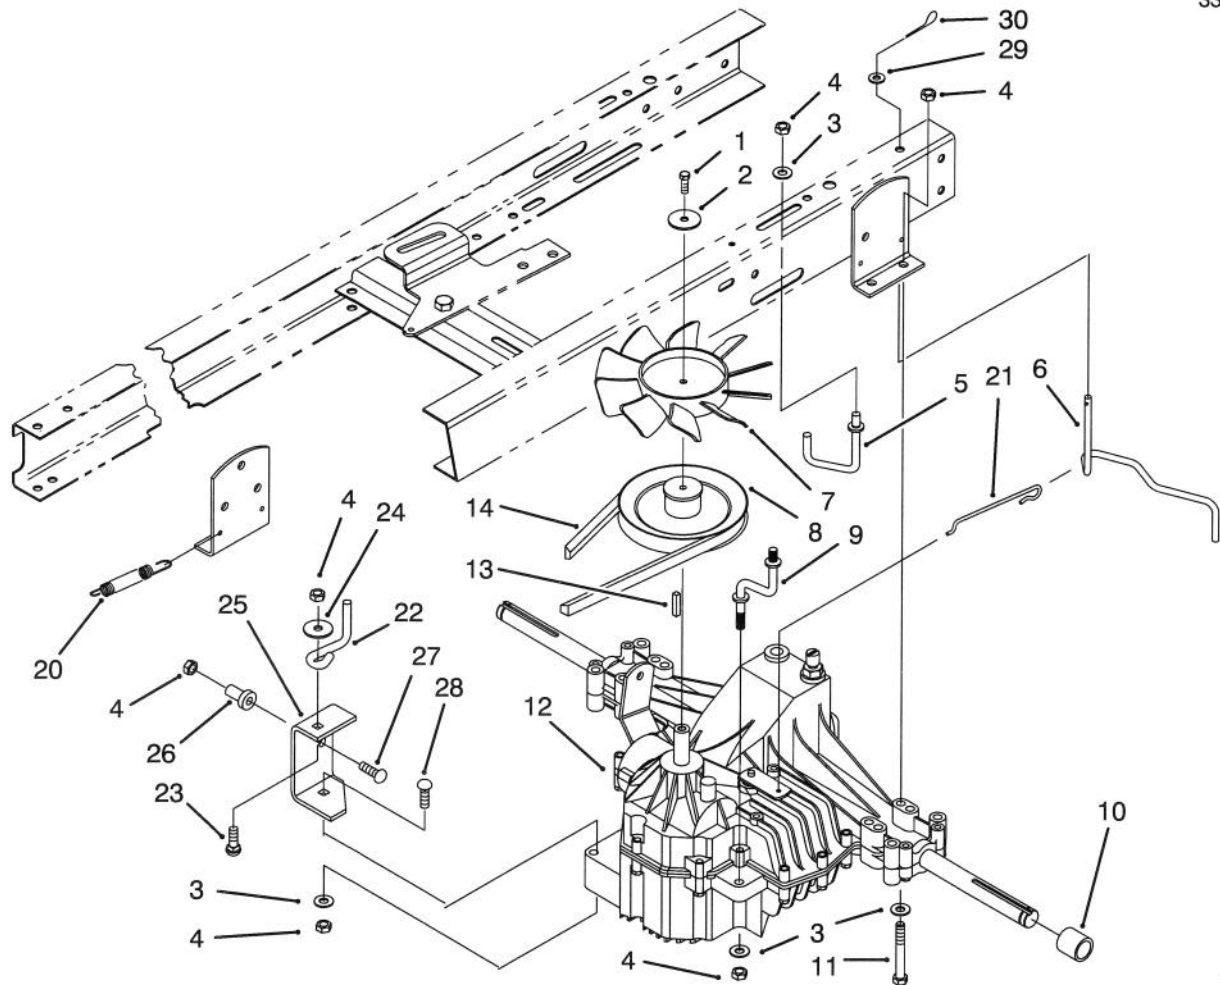 


C-1825

TRANSAXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	48-7620	Screw - Hex Hd. Cap	1
2	3256-58	Washer - Flat	1
3	3256-23	Washer - Flat	8
4	3296-29	Nut - Lock	10
5	88-5960	Guide - Trans. Belt L.H.	1
6	92-8857	Lever - Bypass	1
7	115271	Fan - Hydro	1
8	88-6180	Pulley - Transaxle	1
9	88-5620	Strap - Torque	1
10	88-5360	Spacer - Wheel	2
11	322-12	Screw - Hex Hd. Cap	4
12	92-8783	Transaxle	1
13	80-6090	Key - Square	1

Ref. No.	Part No.	Description	No. Used
14	88-6280	V-Belt - Transaxle	1
20	26-6701	Spring - Brake	1
21	92-8856	Wire - Bypass	1
22	88-5460	Guide - Trans. Belt	1
23	3230-2	Bolt - Carriage	1
24	5-4460	Washer - Fender	1
25	92-6013	Bracket - Speed Control	1
26	65-5080	Bushing - Flanged	1
27	3230-5	Bolt - Carriage	1
28	3230-7	Bolt - Carriage	1
29	3256-22	Washer - Flat	1
30	3290-307	Pin - Hair Cotter	1

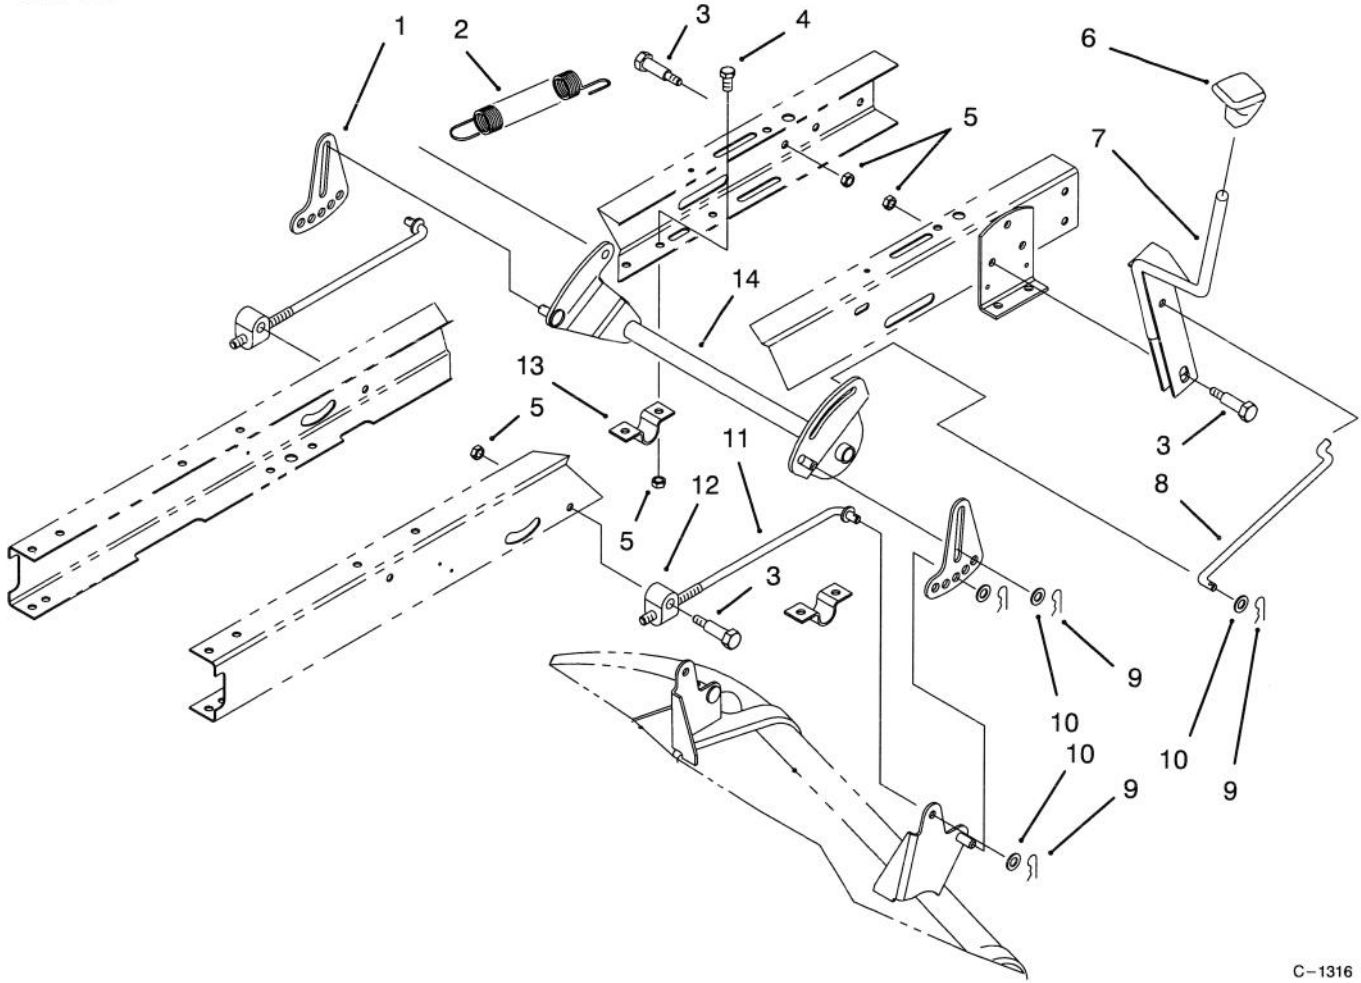 


C-1316

HEIGHT OF CUT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88-5570	Link - Adjusting H.O.C.	2
2	88-6460	Spring - Extension	1
3	7-0030	Bolt - Shoulder	4
4	322-3	Screw - Hex Hd. Cap	4
5	3296-29	Nut - Lock	8
6	62-1292	Knob - Shift	1
7	88-5310	Lever - H.O.C.	1


Ref. No.	Part No.	Description	No. Used
8	88-5900	Link - H.O.C.	1
9	3290-307	Pin - Hair Cotter	7
10	3256-24	Washer - Flat	7
11	88-5450	Rod - Hanger Rear	2
12	88-4230	Trunnion - H.O.C. Rear	2
13	88-4730	Clamp - H.O.C. Pivot	2
14	88-5110	Pivot - H.O.C.	1

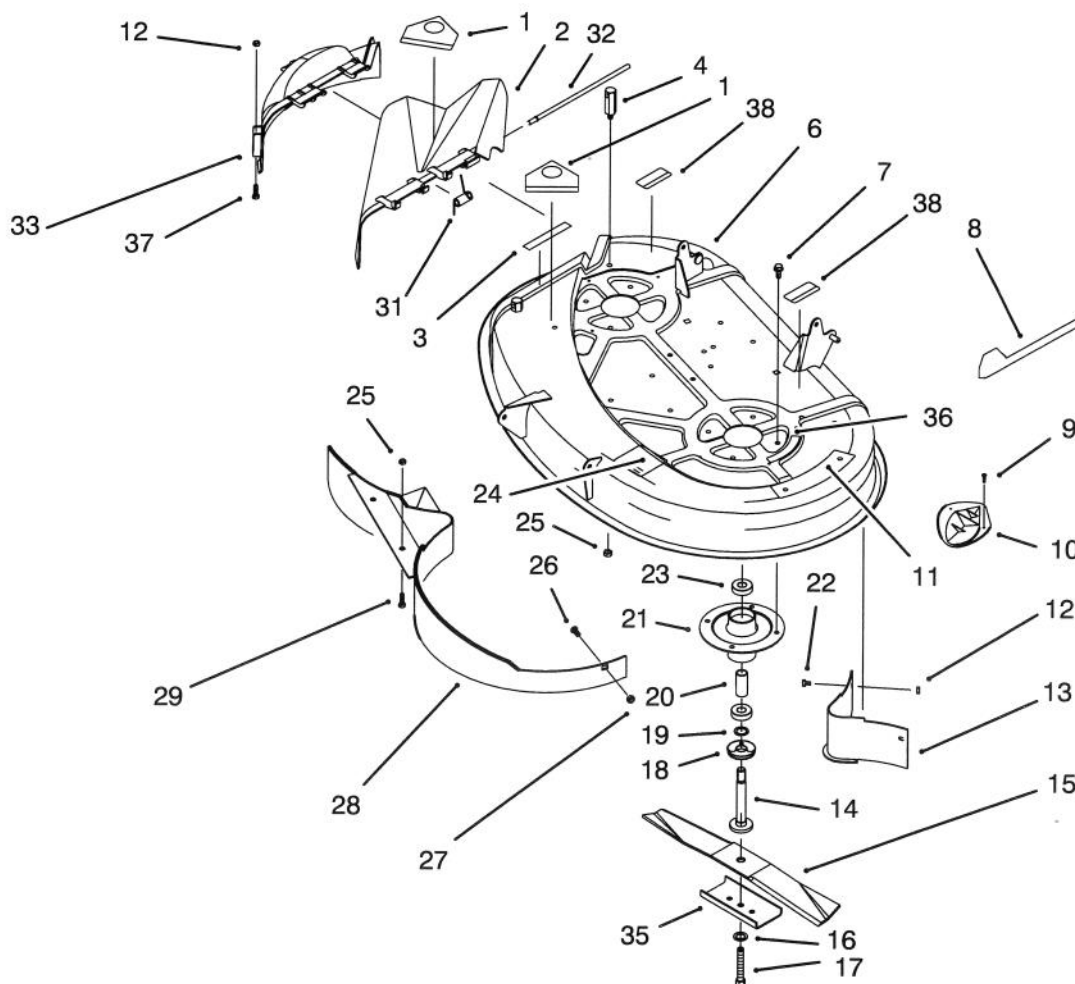 

C-1320

HOUSING & SPINDLE ASSEMBLY (38" CUTTING UNIT) (MODEL NO. 71191 ONLY)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	54-9220	Decal - Danger	2	20	62-3661	Spacer - Bearing	2
2	88-4550	Deflector - Deck	1	21	88-4510	Housing - Spindle	2
3	68-3650	Decal - Deflector Danger	1	22	321-4	Screw - Hex Hd. Cap	2
4	57-4360	Post - Rear Pivot	1	23	38-7820	Bearing - Spindle	4
6	88-5780-01	Deck - 38"	1	24	117137	Decal - Belt Guide	1
7	32144-41	Screw - Taptite	8	25	3296-39	Nut - Lock	3
8	92-9520	Decal - Recycler	1	26	3230-1	Bolt - Carriage	1
9	32144-111	Screw - Plastite	8	27	3296-29	Nut - Lock	1
10	76-2160	Plate - Kicker	4	28	79-1600	Baffle - Recycler	1
11	79-3140	Decal - Danger	1	29	323-5	Screw - Hex Hd. Cap	2
12	3296-42	Nut - Lock	4	31	57-6950	Spring - Torsion	1
13	79-1640	Baffle - Rear	1	32	57-4380	Rod - Deflector Hinge	1
14	80-4341	Shaft - Spindle	2	33	88-4430	Cover - Recycler	1
15	79-3061	Blade - Recycler	2	35	80-0510	Stiffener - Blade	2
16	3290-465	Washer - Belleville	2	36	68-3660	Decal - Shield Danger	1
17	26-0671	Bolt - Blade	2	37	321-14	Screw - Hex Hd. Cap	2
18	80-4360	Shield - Bearing	2	38	55-4300	Decal - Spring Caution	2
19	80-4380	Spacer - Hardened	2				

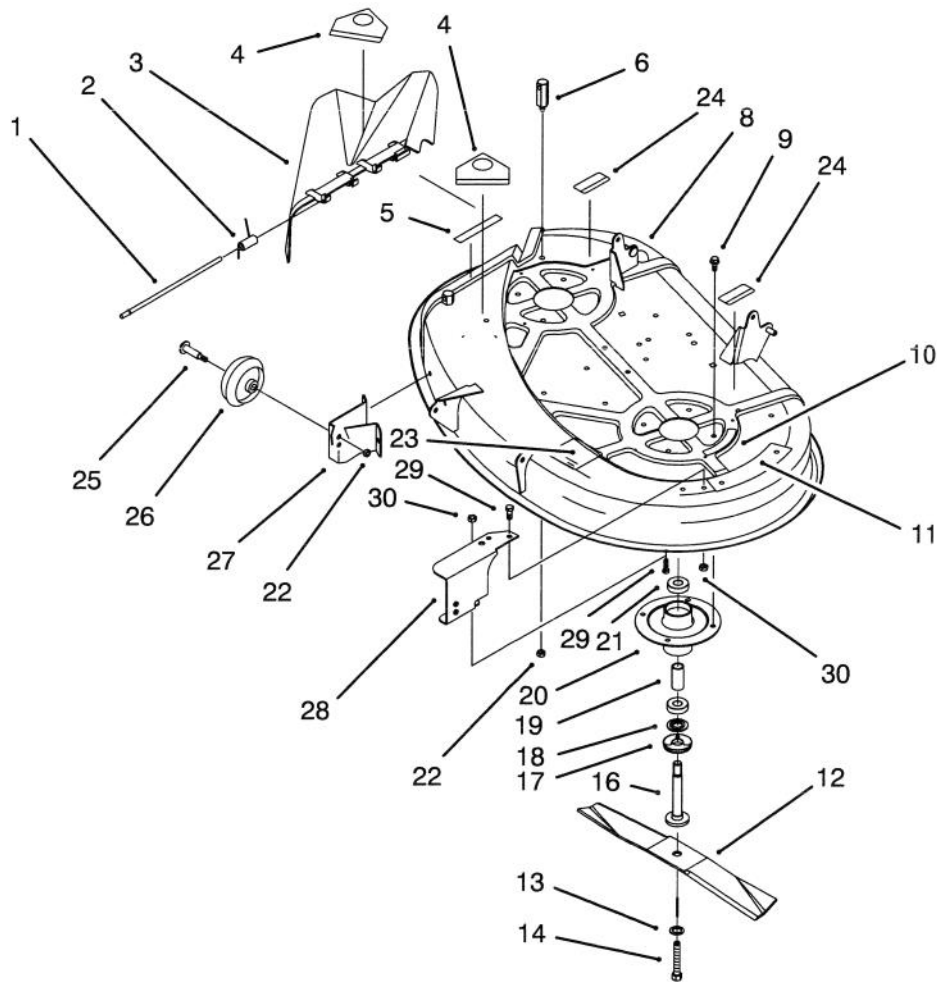 


C-1346

HOUSING & SPINDLE ASSEMBLY (38" CUTTING UNIT) (MODEL NO. 71213 ONLY)

Ref. No.	Part No.	Description	No. Used
1	57-4380	Rod - Deflector Hinge	1
2	57-6950	Spring - Torsion	1
3	88-4550	Deflector - Deck	1
4	54-9220	Decal - Danger	2
5	68-3650	Decal - Deflector Danger	1
6	57-4360	Post - Rear Pivot	1
8	88-5780-01	Deck - 38"	1
9	32144-41	Screw - Taptite	8
10	68-3660	Decal - Shield Danger	1
11	79-3140	Decal - Danger	1
12	57-4700	Blade - Side Discharge	2
13	3290-465	Washer - Belleville	2
14	26-0671	Bolt - Blade	2
16	80-4341	Shaft - Spindle	2
17	80-4360	Shield - Bearing	2

Ref. No.	Part No.	Description	No. Used
18	80-4380	Spacer - Hardened	2
19	62-3661	Spacer - Bearing	2
20	88-4510	Housing - Spindle	2
21	38-7820	Bearing - Spindle	4
22	3296-39	Nut - Lock	3
23	117137	Decal - Belt Guide	1
24	55-4300	Decal - Spring Caution	2
25	56-6591	Bolt - Wheel	2
26	701756	Wheel - Deck	2
27	88-5740	Bracket - Deck Wheel R.H.	1
28	88-5750	Bracket - Deck Wheel L.H.	1
29	322-3	Screw - Hex Hd. Cap	5
30	3296-29	Nut - Lock	5

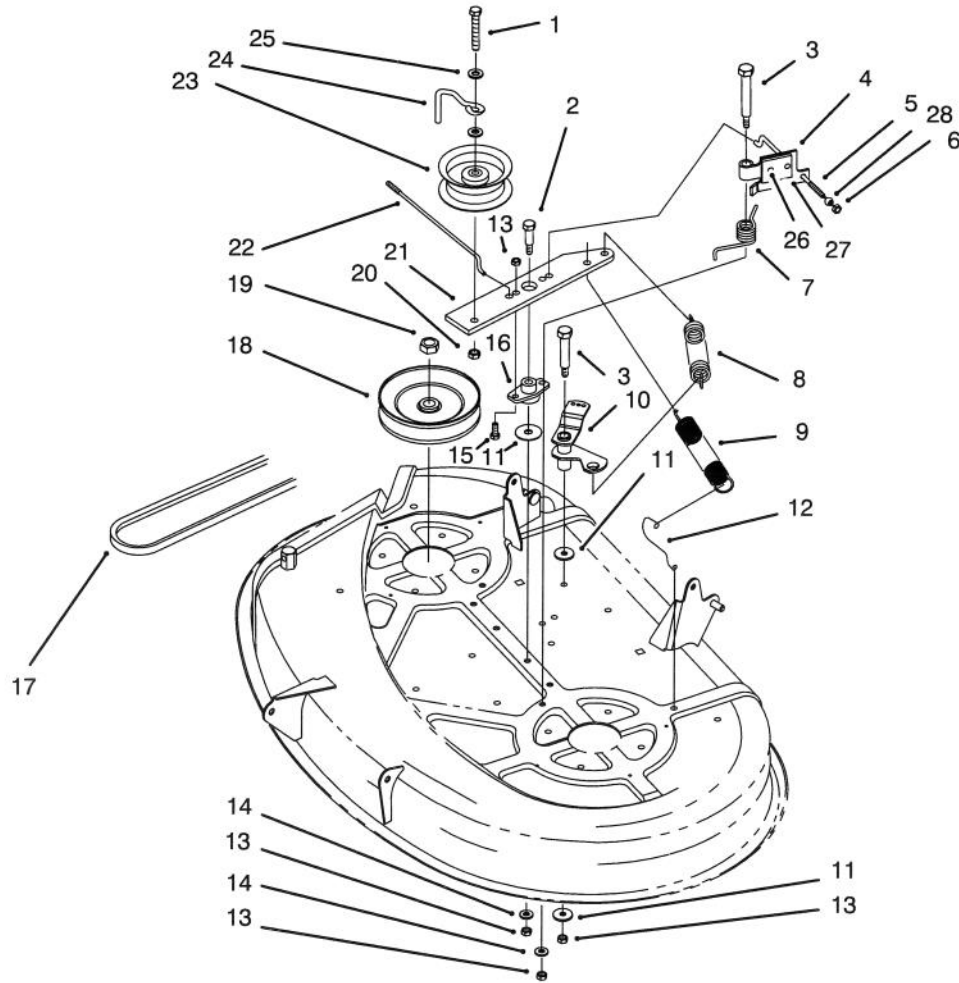 


C-1347

BRAKE ASSEMBLY (38" CUTTING UNIT)

Ref. No.	Part No.	Description	No. Used
1	323-12	Screw - Hex Hd. Cap	1
2	7-0030	Bolt - Shoulder	1
3	88-4590	Bolt - Shoulder	3
4	88-6100	Brake - Deck (Incl. Ref. #26 & 27)	2
5	88-5550	Rod - Deck Brake L.H.	1
6	3296-42	Nut - Lock	2
7	88-5910	Spring - Torsion	2
8	88-6130	Spring - Deck Engage	1
9	92-8934	Spring - Extension	1
10	88-5390	Bellcrank	1
11	3256-68	Washer - Fender	3
12	88-5970	Hook - Spring Return	1
13	3296-29	Nut - Lock	6
14	3256-23	Washer - Flat	3

Ref. No.	Part No.	Description	No. Used
15	322-5	Screw - Hex Hd. Cap	2
16	88-4980	Bushing - Idler Arm	1
17	88-6250	V-Belt - Deck	1
18	88-5330	Pulley - Deck	2
19	3219-6	Nut - Lock	2
20	3296-39	Nut - Lock	1
21	88-4870	Arm - Idler	1
22	88-5540	Rod - Deck Brake R.H.	1
23	88-5630	Pulley - Idler	1
24	88-5070	Guide - Idler Belt	1
25	3256-24	Washer - Flat	2
26	3290-282	Rivet - Pop	4
27	56-9830	Pad - Brake	2
28	67-0710	Ball - Swivel	2

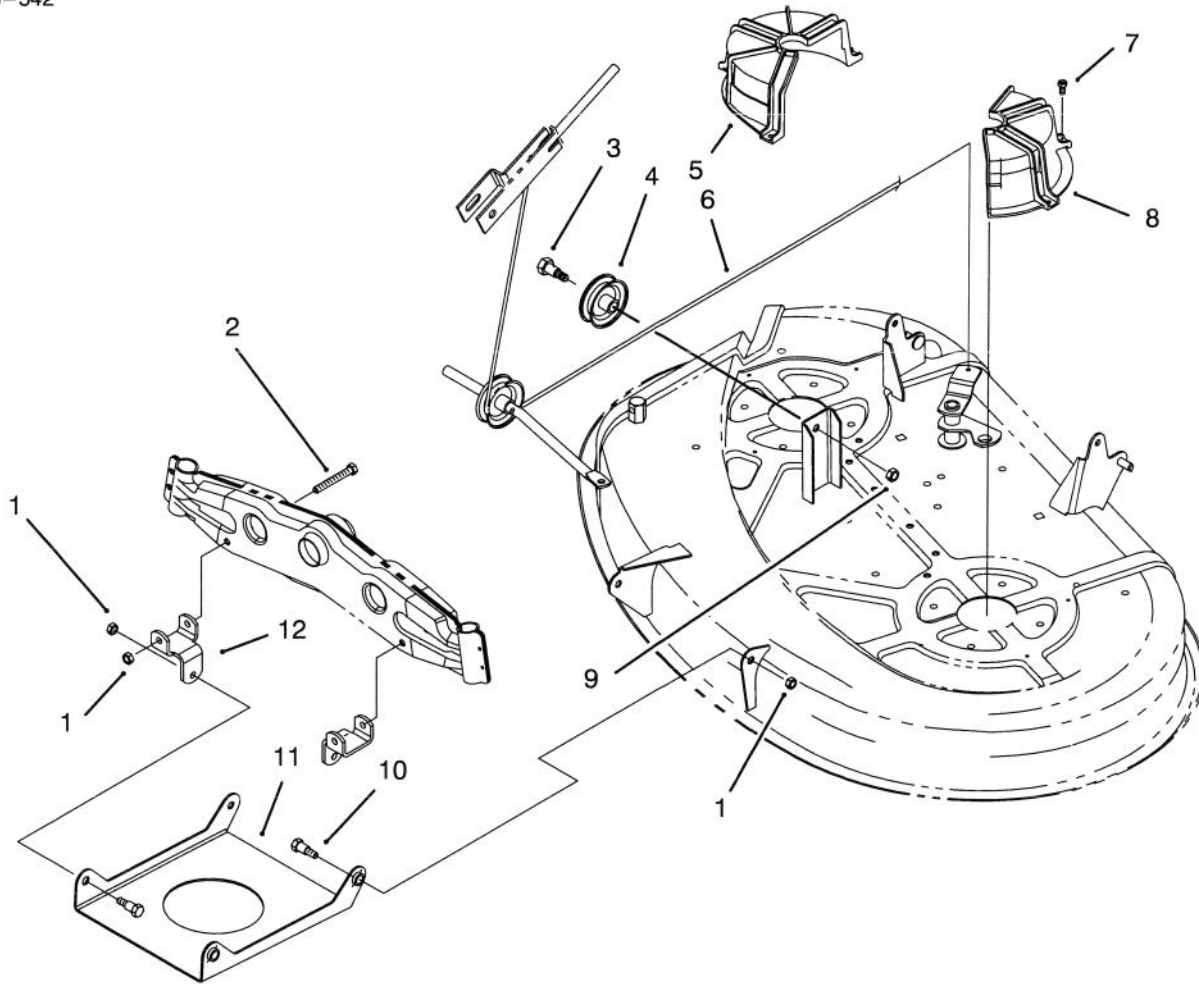 


C-1348

CABLE & COVER ASSEMBLY (38" CUTTING UNIT)

Ref. No.	Part No.	Description	No. Used
1	3296-29	Nut - Lock	6
2	322-12	Screw - Hex Hd. Cap	2
3	23-0310	Bolt - Shoulder	1
4	88-4700	Pulley - Cable	1
5	88-4020	Guide - Deck Belt R.H.	1
6	88-6410	Cable - Deck Engage	1
7	32104-76	Screw - Thread Cutting	5

Ref. No.	Part No.	Description	No. Used
8	88-4030	Guide - Deck Belt L.H.	1
9	3296-39	Nut - Lock	1
10	28-0540	Bolt - Shoulder	4
11	88-4900	Pan - Front Deck Suspension	1
12	88-4640	Bracket - Deck Suspension	2

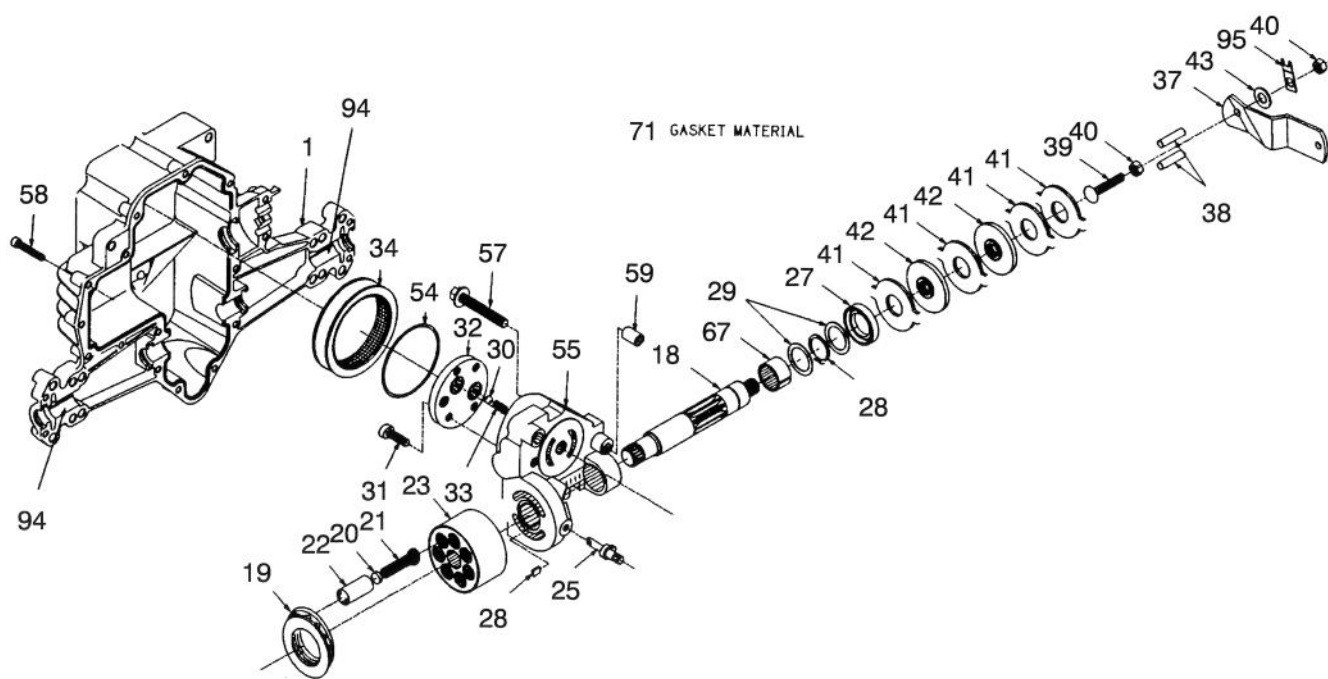 


C-1354

HYDROGEAR TRANSAXLE MODEL NO. 316-0500

Ref. No.	Part No.	Description	No. Used
1		Housing - Lower	1
18		Shaft - Motor	1
19		Bearing - Thrust	1
20		Seat - Piston Spring	7
21		Spring - Piston	7
22		Piston	7
23		Block - Cylinder (Motor)	1
25		Actuator - Bypass	1
26		Plate - Bypass	1
27		Seal - Lip	1
28		Ring - Retaining	1
29		Washer	2
30		Ball	2
31		Spring - Check Valve	2
32		Plate - Check Valve	1
33		Socket Hd. Cap Screw	4
34		Oil Filter Element	1

Ref. No.	Part No.	Description	No. Used
37	88-6230	Arm - Actuating	1
38	92-6549	Pin - Actuating	2
39		Bolt	1
40	3296-47	Nut - Hex Lock	2
41		Stator - Brake	4
42		Rotor - Brake	2
43	5-4460	Washer	1
54		O Ring	1
55		Center - Section	1
57		Bolt	3
58		Bolt	20
59		Pin	3
67		Du Bearing	1
71		Gasket Material	1
94		Grease Durina "O"	1
95	92-7300	Strap - Locking	1

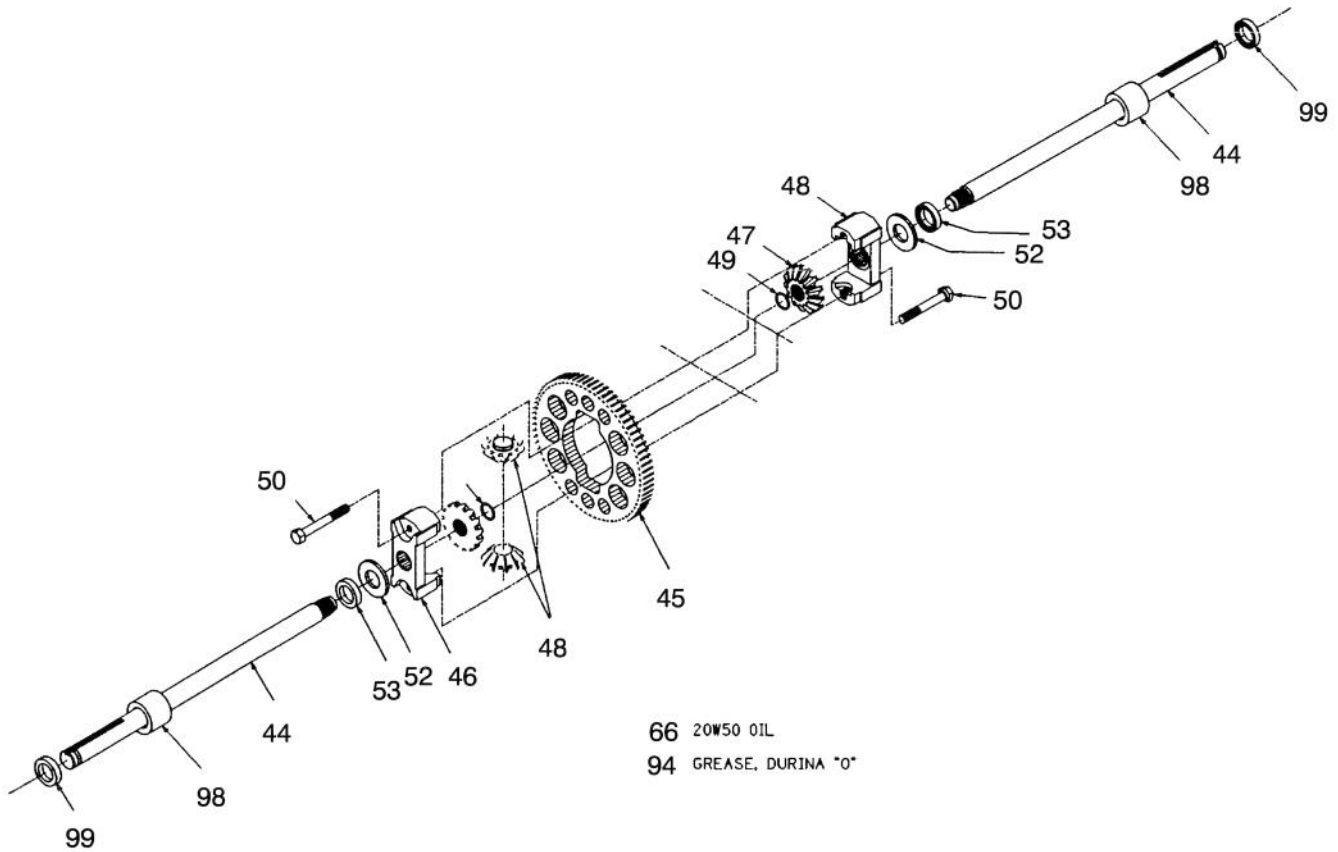 


C-1355

HYDROGEAR TRANSAXLE MODEL NO. 316-0500 (Continued)

Ref. No.	Part No.	Description	No. Used
44		Shaft - Axle	2
45		Gear - Diff. 72T	1
46		Housing - Diff.	2
47		Gear - Bevel 14T	2
48		Gear - Planet 10T	2
49		Ring - Retaining	2
50		Bolt - Diff. Locking	2

Ref. No.	Part No.	Description	No. Used
52		Washer	2
53		Seal	2
66		20W50 Oil (.5675)	1
94		Grease Durina "O"	1
98		Sleeve - Bearing	2
99		Seal - Wiper	2

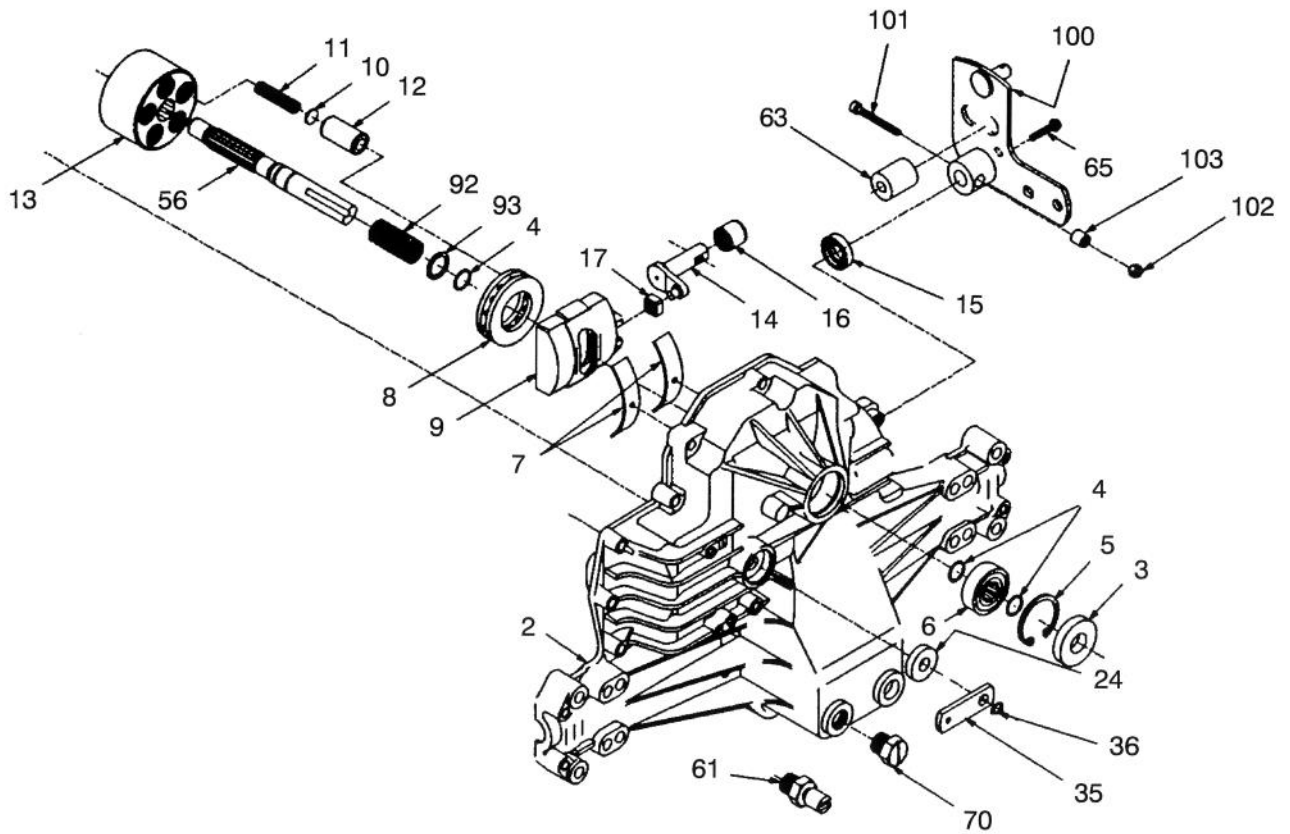 


C-1356

HYDROGEAR TRANSAXLE MODEL NO. 316-0500 (Continued)

Ref. No.	Part No.	Description	No. Used
2		Housing - Upper	1
3	92-6543	Seal - Lip	1
4		Ring - Wire Retaining	3
5		Ring - Retaining	1
6		Bearing - Shaft Ball	1
7		Bearing - Cradle	2
8		Bearing - Thrust	1
9		Swashplate - Variable	1
10		Washer - Piston Thrust	5
11		Spring - Piston	5
12		Piston	5
13		Block Cylinder (Motor)	1
14		Arm - Trunnion	1
15	92-6544	Seal - Lip	1
16		Bearing - Trunnion Journal	1

Ref. No.	Part No.	Description	No. Used
17		Guide - Slot	1
24	92-6545	Seal - Lip	1
35	92-6547	Arm - Bypass	1
36	936109	Ring - Retaining	1
56		Shaft - Input	1
61	92-8859	Breather Ass'y	1
63		Spacer	1
65		Bolt	1
70		Plug - Plastic	1
92		Spring - Block	1
93		Washer - Block Thrust	1
100	92-6015	Control Arm Ass'y	1
101	3274-59	Socket Head Cap Screw	1
102	3296-12	Nut	1
103	86-4270	Spacer	1

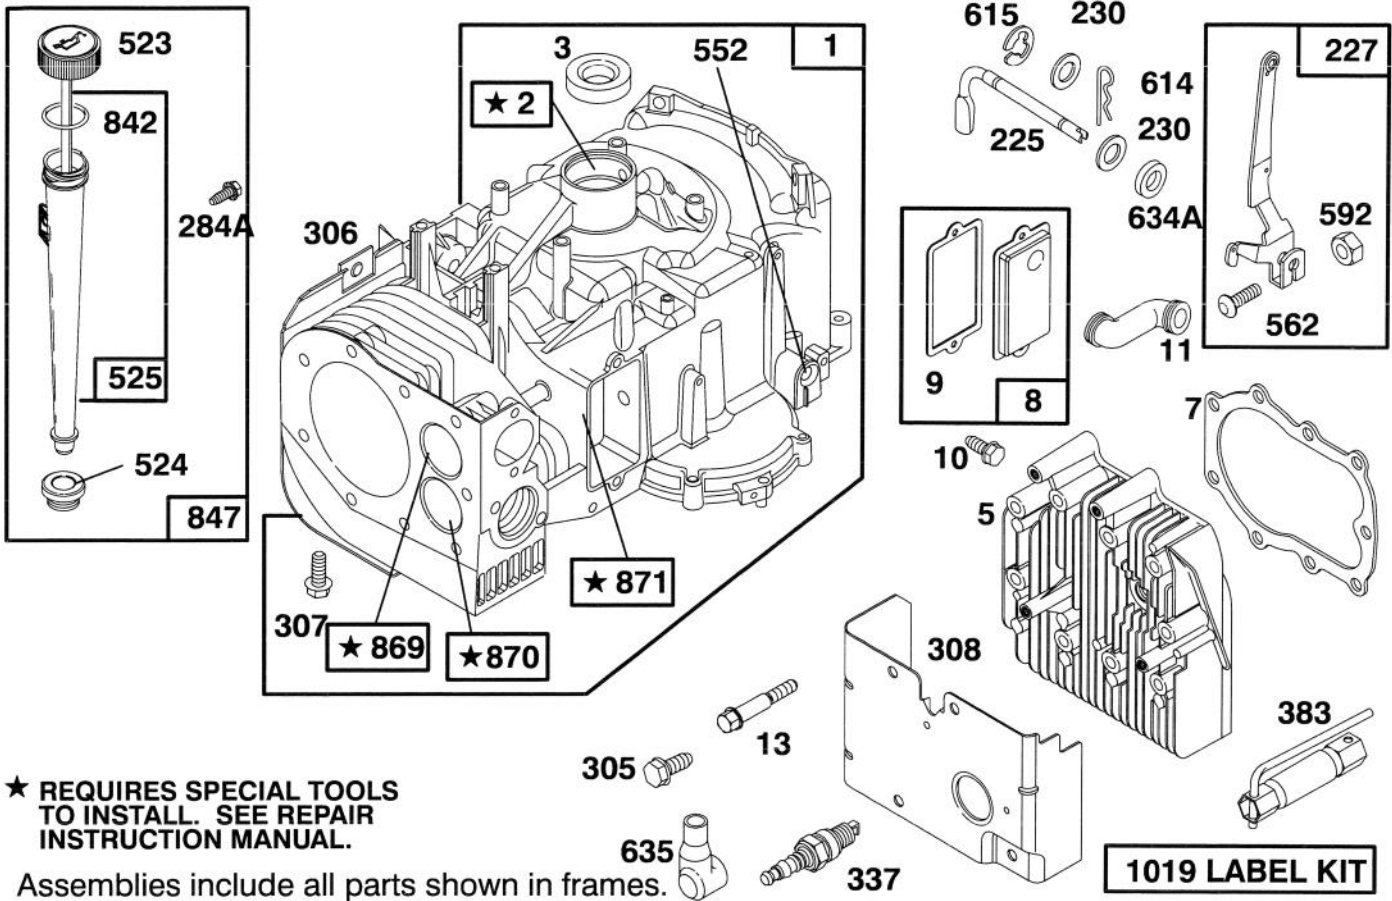 


ENGINE BRIGGS & STRATTON MODEL 28M707-0122-01

Ref. No.	Part No.	Description	No. Used
1	496413	Cylinder Assembly	1
2	399265	Bearing - Cylinder	1
★3	391086	Seal - Oil	1
5	494240	Head - Cylinder	1
★7	271866	Gasket - Cylinder Head	1
8	495735	Breather Assembly	1
★9	27803	Gasket - Valve Cover	1
10	94621	Screw - Sem	1
11	280100	Tube - Breather	1
13	94622	Screw - Cylinder Head	1
225	231058	Crank - Governor	1
227	493935	Lever Assy. - Governor	1
230	94742	Washer - Gov. Crank	1
284A	94073	Screw - Hex Head	1
305	94786	Screw - Hex. Washer Hd.	1
306	224545	Shield - Cylinder	1
307	94623	Screw - Cyl. Shield Mtg.	1
308	491490	Cover - Cylinder Head	1
337	802592	Plug - Spark	1
383	89838	Wrench - Spark Plug	1

Ref. No.	Part No.	Description	No. Used
523	495230	Cap and Dipstick - Oil Filler	1
★524	68838	Seal - Filler Tube	1
525	496113	Tube - Oil Filler	1
552	231597	Bushing - Gov. Crank	1
562	92613	Bolt - Governor Lever	1
592	231082	Nut - Hex.	1
614	93306	Cotter - Hair Pin	1
615	93307	Retainer - E-Ring	1
★634A	491323	Seal - Governor	1
635	66538	Elbow - Spark Plug	1
★842	270920	Seal - Oil Filler Cap	1
847	496415	Fill Group - Oil	1
869	261463	Seat - Intake Valve (Std.)	1
870	213316	Seat - Exhaust Valve (Std.)	1
871	261961	Guide - Exhaust Valve	1
		Note: 231218 Guide - Intake Valve	1
1019	491255	Label Kit	1

 ★ Included in Gasket Set - Part No. 494241.

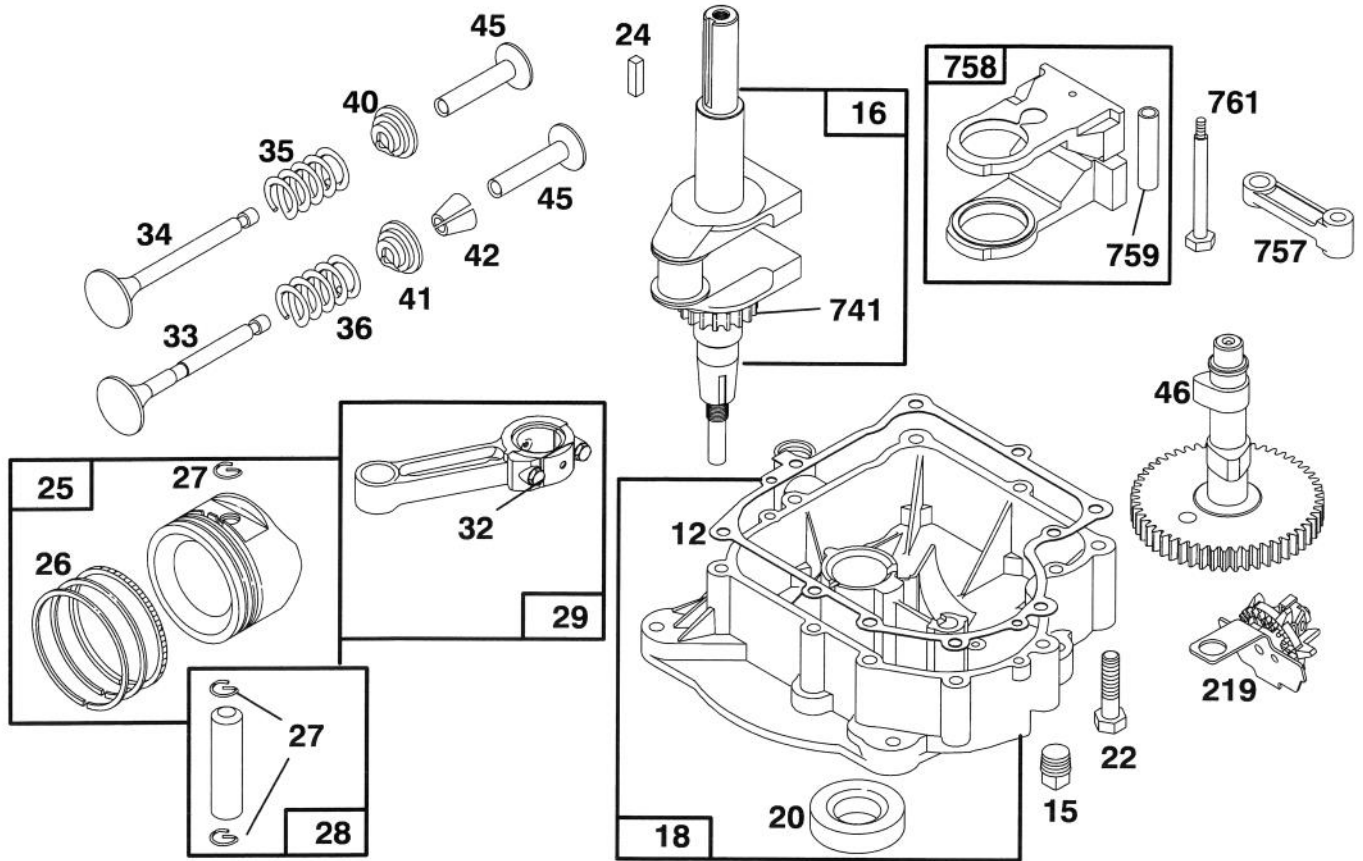


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707-0122-01

Ref. No.	Part No.	Description	No. Used
★12	271916	Gasket—Crkscse. (1/64" Thick)	1
★	271997	Gasket—Crkscse. (.005" Thick)	1
★	271996	Gasket—Crkscse. (.009" Thick)	1
15	94239	Plug—Oil Drain	1
16	495162	Crankshaft	1
	94196	Key—Timing Gear	1
18	494238	Base—Engine	1
★20	291675	Seal—Oil	1
22	94624	Screw—Base Mtg. Sem	1
24	222698	Key—Flywheel	1
25	394661	Piston Assy. (Std.)	1
	394662	Piston Assy. (.010" O.S.)	1
	394663	Piston Assy. (.020" O.S.)	1
	394664	Piston Assy. (.030" O.S.)	1
26	391780	Ring Set—Piston (Std.)	1
	391781	Ring Set—Piston (.010" O.S.)	1
	391782	Ring Set—Piston (.020" O.S.)	1
	391783	Ring Set—Piston (.030" O.S.)	1

Ref. No.	Part No.	Description	No. Used
27	260924	Lock—Piston Pin	1
28	299691	Pin Assy.—Piston (Std.)	1
	391286	Pin Assy.—Piston (.005" O.S.)	1
29	490348	Rod Assy—Connecting	1
	490469	Rod—Connecting (020" U.S. Crankpin Bore)	1
32	94671	Screw—Connecting Rod	1
33	262246	Valve—Exhaust	1
34	262247	Valve—Intake	1
35	65906	Spring—Intake Valve	1
36	26828	Spring—Exhaust Valve	1
40	221596	Retainer—Intake Valve	1
41	292260	Rotocoil—Exhaust Valve	1
42	93630	Retainer—Ex. Valve Rotocoil	1
45	262248	Tappet—Valve	1
46	212897	Gear—Cam	1
219	490815	Oil Slinger, Gov. Gear Assy.	1
741	262932	Gear—Timing	1
757	212359	Link—Counterweight	1
758	399891	Counterweight Assy.	1
759	298909	Pin—Counterweight	1
761	93875	Screw—Counterweight	1

 ★ Included in Gasket Set—Part No. 494241.

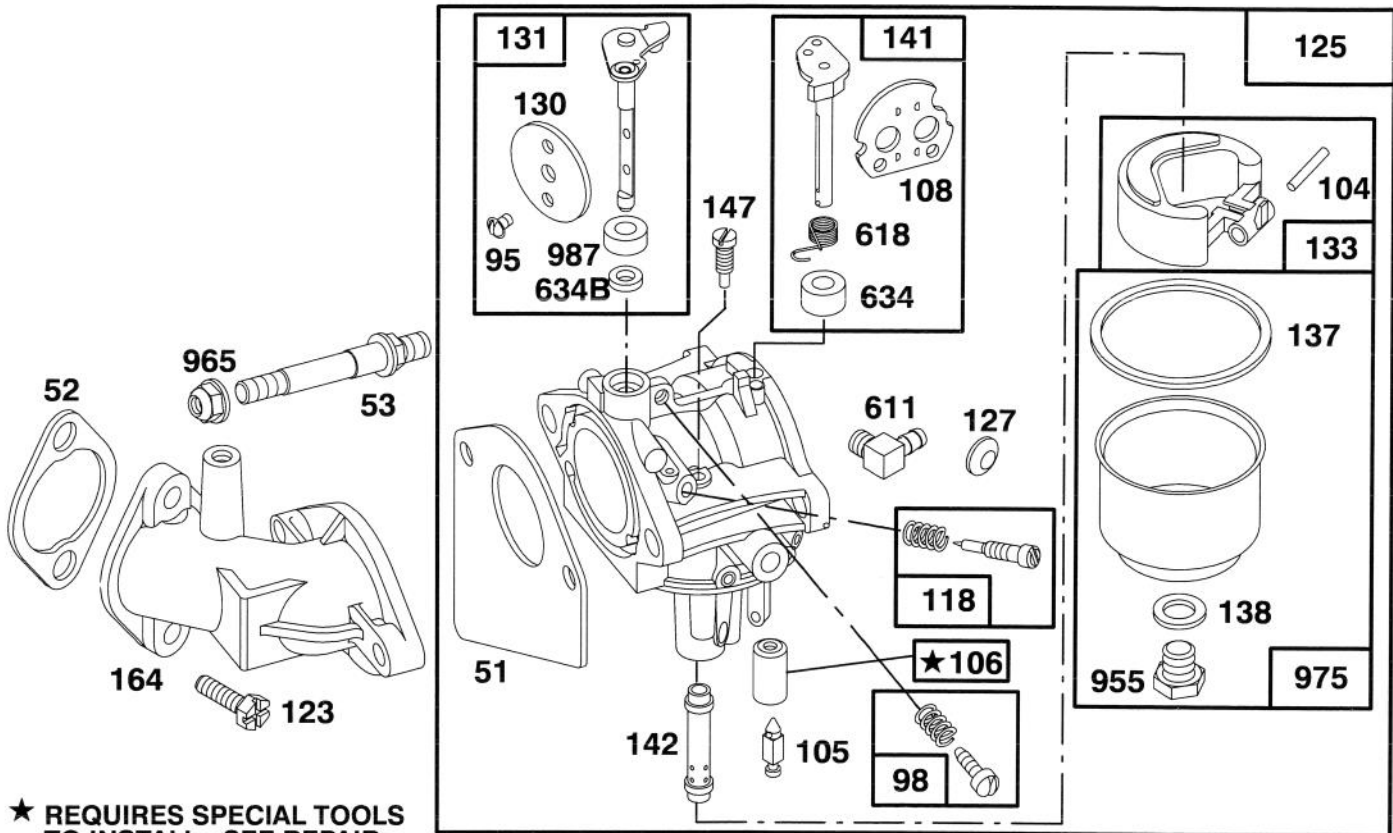

★ REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707-0122-01


Ref. No.	Part No.	Description	No. Used
●51	272465	Gasket—Carburetor (Carb. to Elbow)	1
★52	272554	Gasket—Carburetor (Elbow to Cylinder)	1
53	94637	Stud—Carb. Mtg.	1
●95	94098	Screw—Throttle	1
98	495800	Screw—Idle Speed	1
●104	231789	Pin—Float Hinge	1
●105	231855	Valve Assy.—Inlet Needle	1
●106	231854	Inlet Valve Seat	1
108	224540	Valve—Choke	1
118	494383	Valve—Needle	1
121	495799	Carburetor Overhaul Kit	1
123	94616	Screw—Elbow Mtg.	1
125	495706	Carburetor Assembly	1
●127		Plug—Welch (Sold in Kit Only).	1
130	224539	Valve—Throttle	1

Ref. No.	Part No.	Description	No. Used
131	494379	Shaft and Lever—Throttle	1
133	494381	Float—Carburetor	1
◆137	281165	Gasket—Float Bowl	1
◆138	281164	Washer—Float Bowl Screw	1
141	495931	Shaft and Lever—Choke	1
●142	494537	Nozzle—Carburetor	1
●147	231794	Pilot—Jet	1
164	213819	Carburetor—Elbow	1
611	494451	Fuel Inlet Tube	1
618	262803	Spring—Choke Return	1
●634	281168	Seal—Choke Shaft	1
●634B	398970	Washer—Throttle Shaft	1
955	94642	Screw—Fuel Bowl	1
965	94010	Locknut—Air Cleaner Mtg.	1
975	494378	Bowl Assy.—Carburetor	1
977	494385	Carburetor Gasket Kit	1
●987	281166	Seal—Throttle Shaft	1

◆ Included in Carburetor Gasket Set—Part No.494385.

★ Included in Gasket Set—Part No. 494241.

 ● Included in Carburetor Overhaul Kit—Part No. 495799.

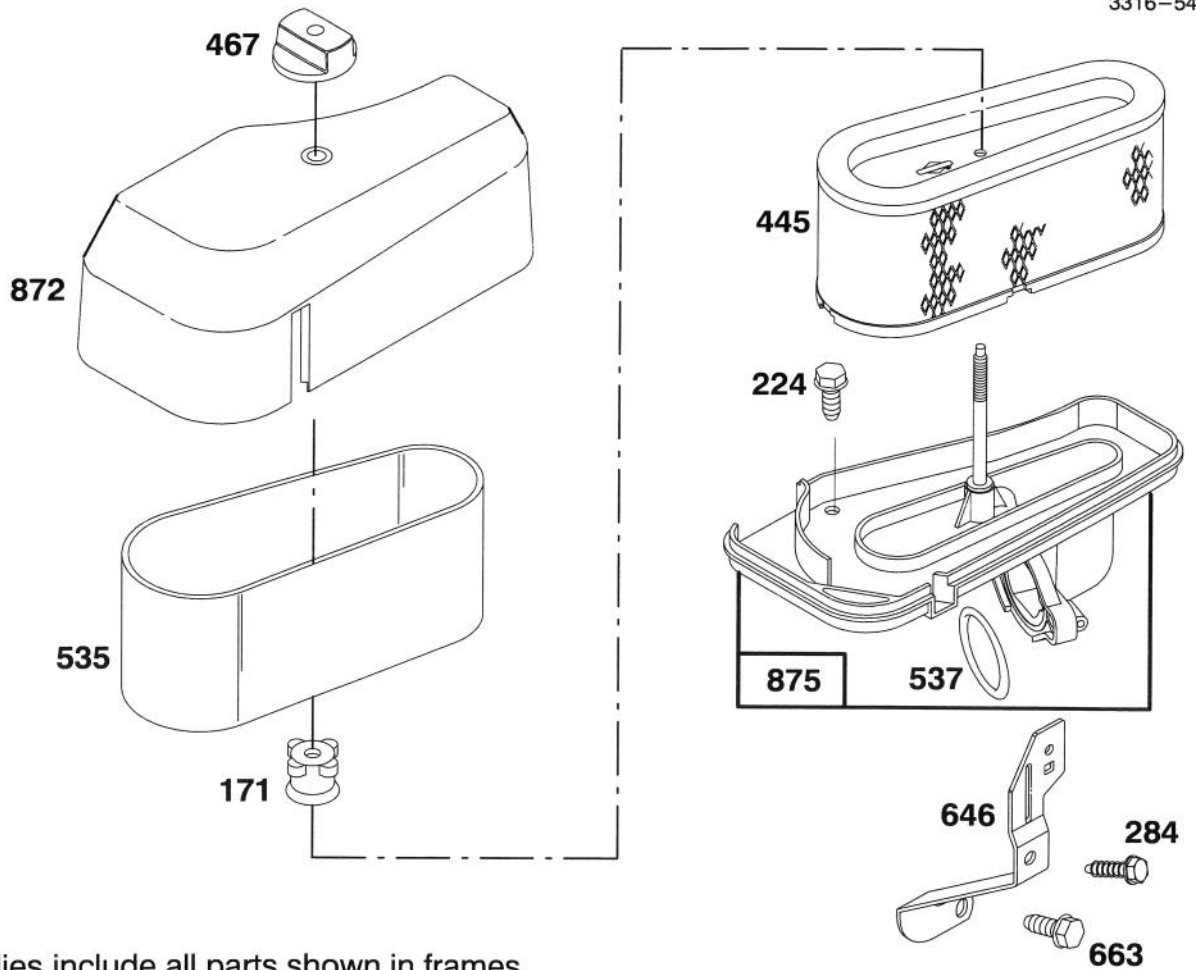


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707-0122-01

Ref. No.	Part No.	Description	No. Used
171	281051	Nut—Air Cleaner Mtg.	1
224	94513	Screw—Air Cleaner Sem	1
284	94704	Screw Hex. Head	1
445	493909	Cartridge—Air Cleaner	1
467	493903	Knob—Air Cleaner	1
535	272403	Element—Air Cleaner	1

Ref. No.	Part No.	Description	No. Used
★537	281106	O-Ring—Air Cleaner	1
646	224546	Brace—Air Cleaner	1
663	94620	Screw—Hex. Hd.	1
872	281361	Cover—Air Cleaner	1
875	494237	Body—Air Cleaner	1

 ★ Included in Gasket Set—Part No. 494241.

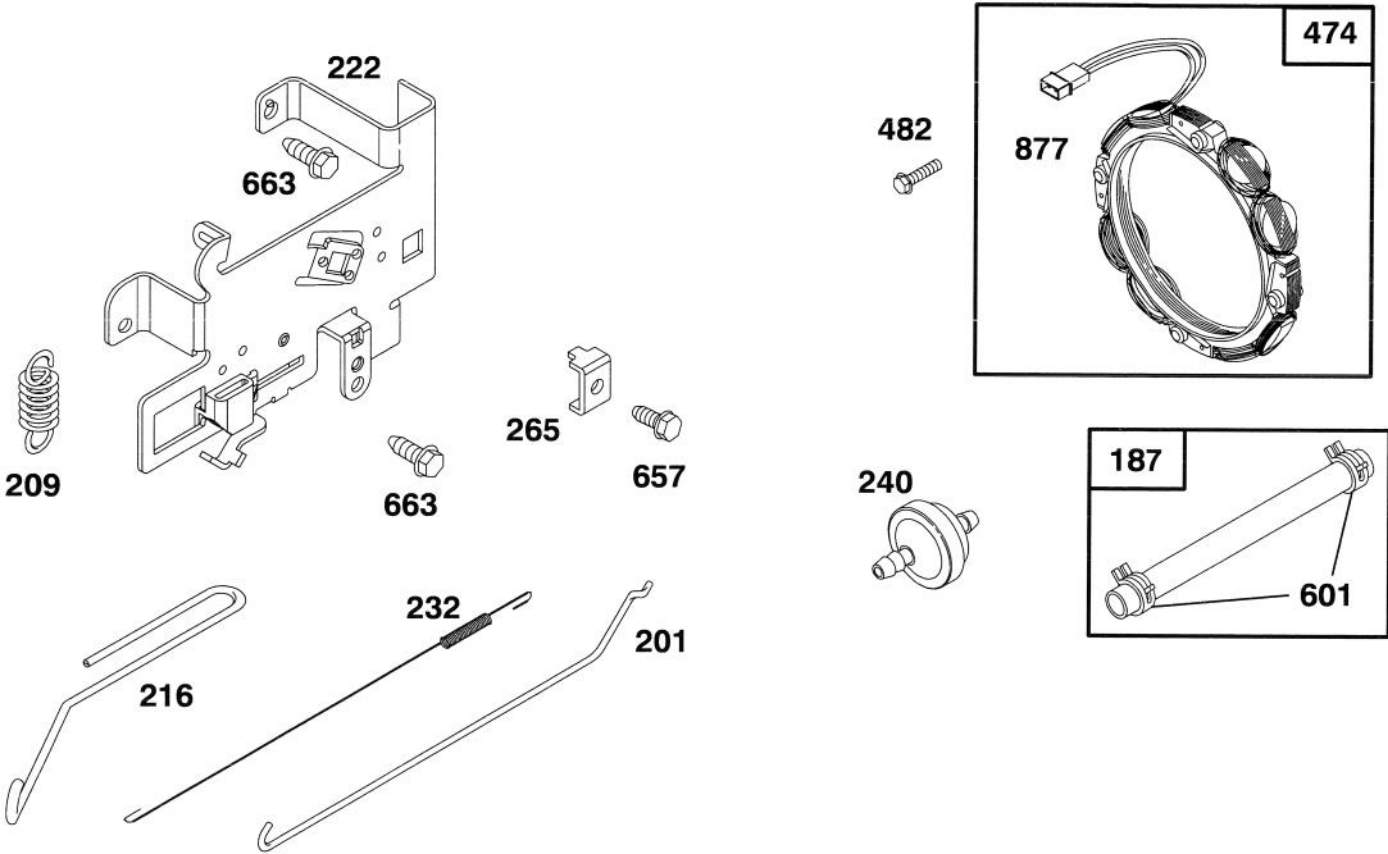


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707-0122-01

Ref. No.	Part No.	Description	No. Used
187	393815	Line-Fuel (11" Long, Cut to Suit)	1
201	262767	Link-Governor	1
209	260871	Spring-Governor	1
216	262766	Link-Choke	1
222	495611	Plate-Governor Control	1
232	262785	Spring-Governor Link	1
240	394358	Filter-Fuel	1
265	221535	Clamp-Casing	1

Ref. No.	Part No.	Description	No. Used
474	393474	Stator-Alternator (Dual Circuit)	1
482	93621	Screw-Sem	1
601	93053	Clamp-Fuel Pipe	1
657	93496	Screw-Sem	1
663	94620	Screw-Hex. Hd.	1
877	393456	Diode and Connector Assy (Dual Circuit)	1

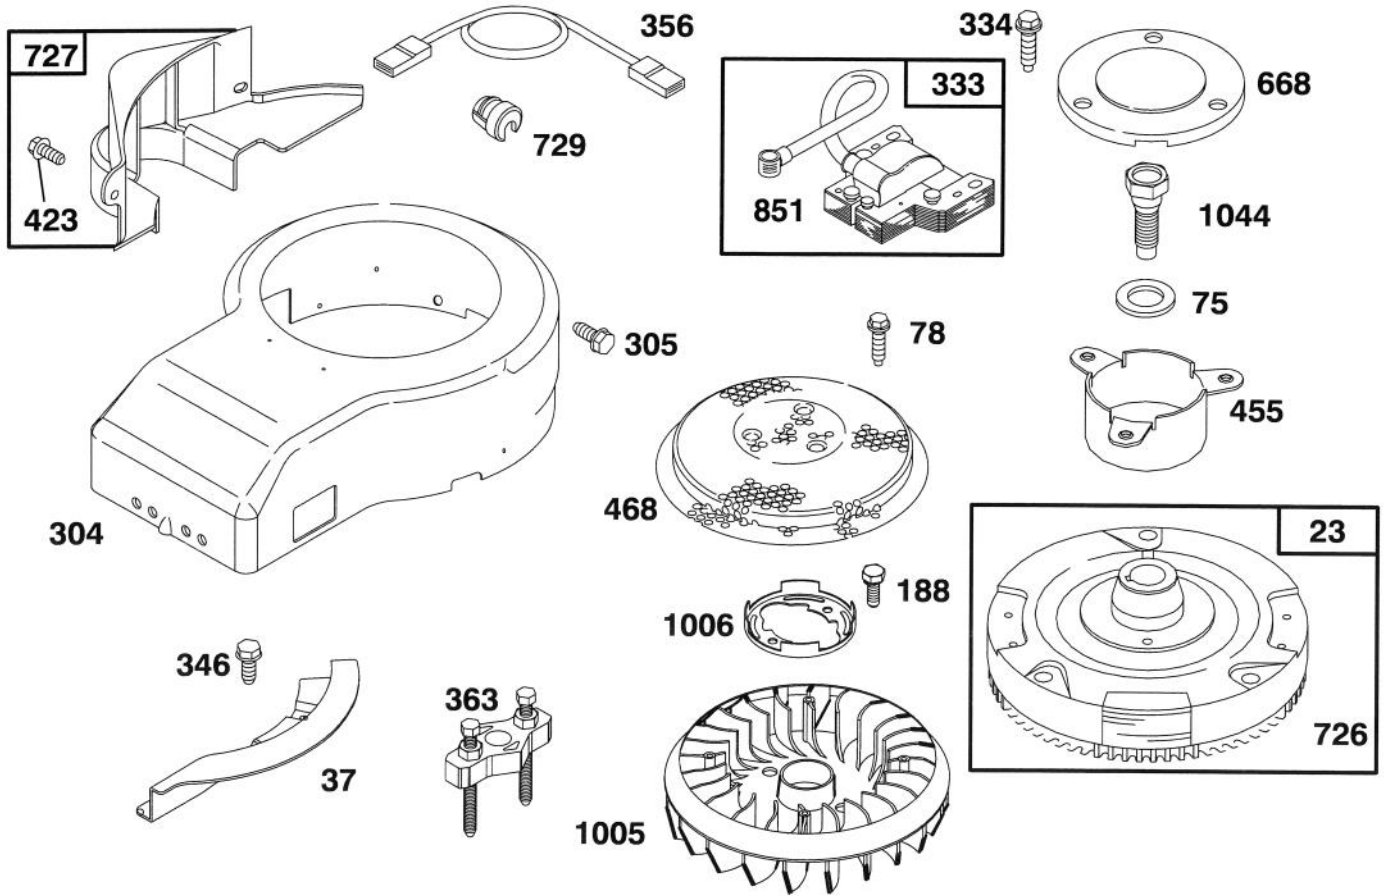 

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707-0122-01


Ref. No.	Part No.	Description	No. Used
23	492326	Flywheel and Ring Gear Assy.—Magneto	
37	224502	Guard—Flywheel	
75	224061	Washer—Spring	
78	93805	Screw—Sem	
188	93535	Screw—Sem (3/4" Long)	
304	496431	Housing—Blower	
305	94619	Screw—Blower Housing Mounting	
333	492341	Armature—Magneto	
334	93381	Screw—Armature Mtg.	
346	93705	Screw—Hex. Head	
356	494328	Wire Assembly	

Ref. No.	Part No.	Description	No. Used
363	19203	Puller—Flywheel	
423	94073	Screw—Sem	
455	222561	Cup—Screen Mounting	
468	224948	Screen—Flush Rotating	
668	280848	Spacer	
726	392134	Gear—Ring (Includes Mtg Hardware)	
727	490324	Cover—Starter	
729	281159	Clip—Lead Wire	
851	221798	Terminal—Ignition Cable	
1005	281355	Fan—Flywheel	
1006	224413	Retainer—Fan	
1044	94673	Screw—Hex. Head	

729A



 728

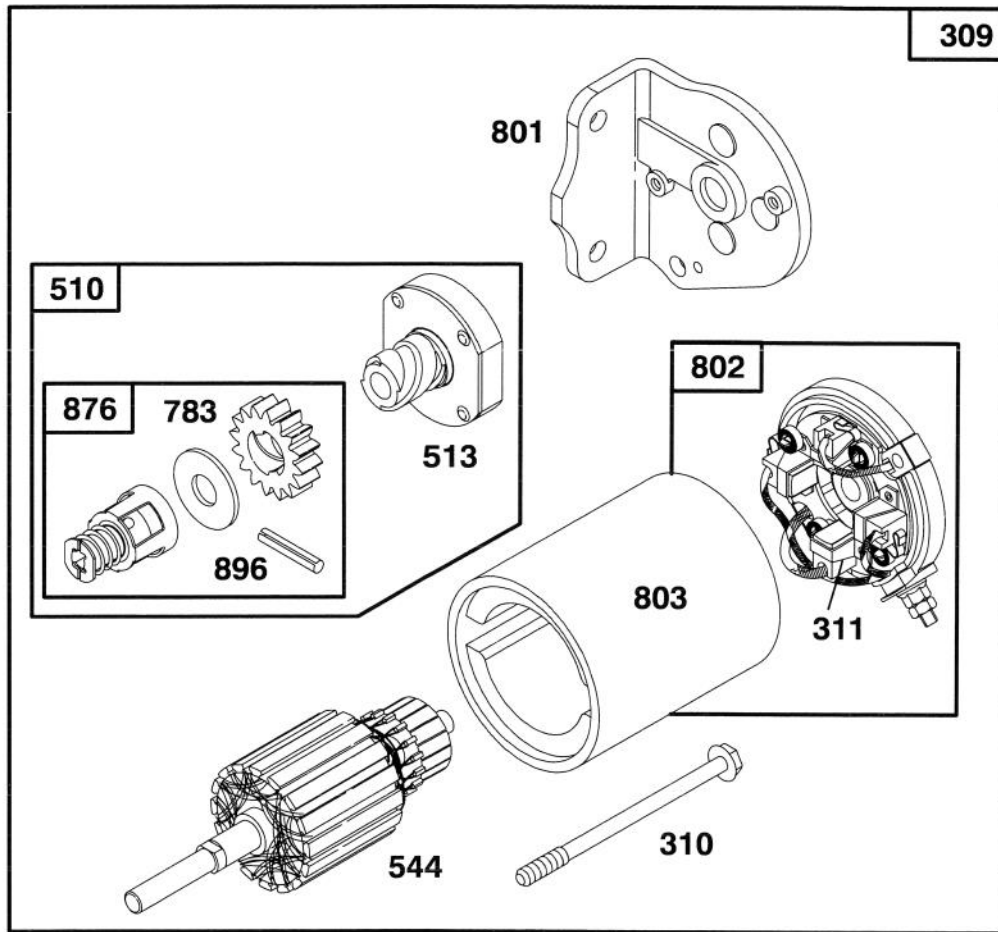


Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 28M707-0122-01

Ref. No.	Part No.	Description	No. Used
309	394805	Motor and Drive Assy.	1
310	94003	Bolt Hex. Hd.	1
311	395538	Brush Assy.	1
510	495878	Starter Drive Assy.	1
513	398003	Clutch Assy.	1
544	390837	Armature Assy.	1
728	94627	Screw-Hex. Hd.	1
729A	224723	Retainer-Wire	1


Ref. No.	Part No.	Description	No. Used
783	280104	Gear	1
801	394856	Drive End Cap Assy.	1
802	395537	End Cap Assy. Commutator	1
803	398159	Housing Assy.	1
876	495877	Retainer And Pin	1
896	94288	Pin-Roll	1

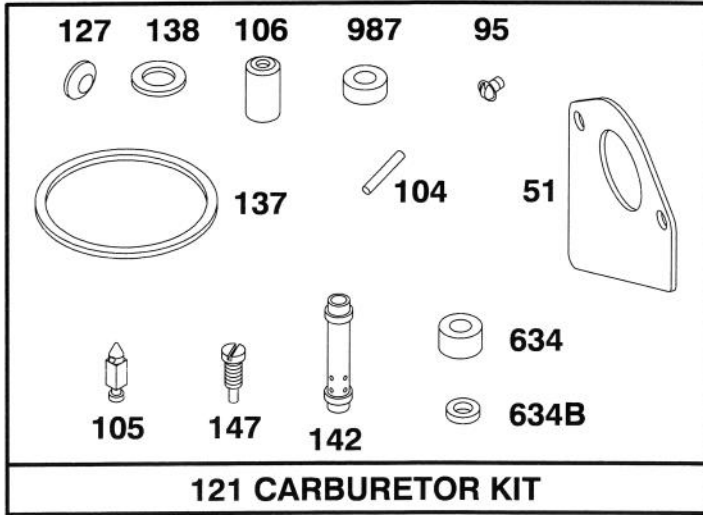 

121 CARBURETOR KIT

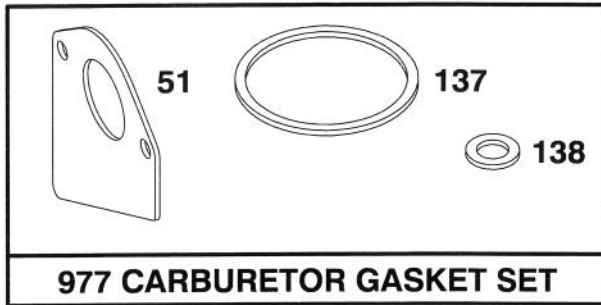 

977 CARBURETOR GASKET SET

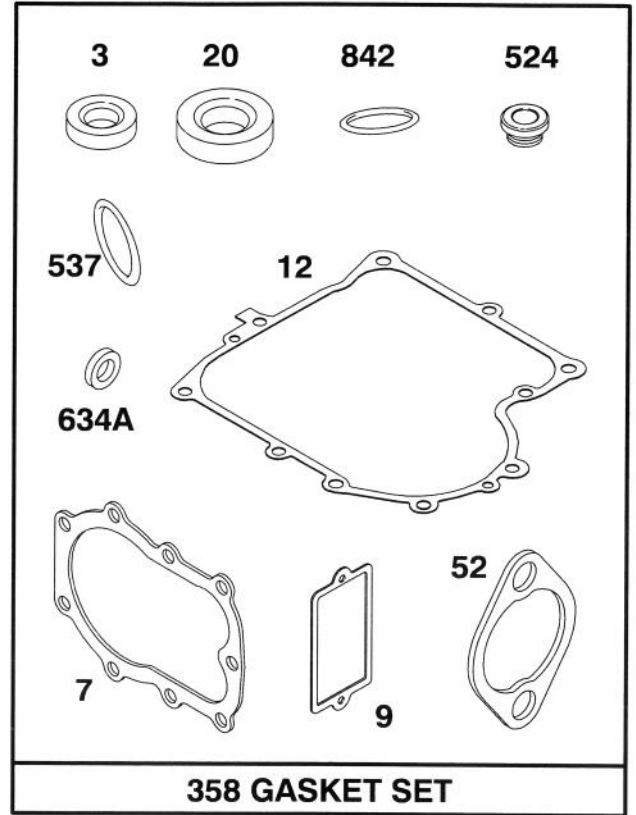 

358 GASKET SET

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707-0122-01

Ref. No.	Part No.	Description	No. Used
*3	391086	Seal—Oil	1
*7	271866	Gasket—Cylinder Head	1
*9	27803	Gasket—Valve Cover	1
*12	271916	Gasket—Crankcase Cover (1/64" Thick)	1
*	271997	Gasket—Crankcase Cover (.005" Thick)	1
*	271996	Gasket—Crankcase Cover (.009" Thick)	1
*20	291675	Seal—Oil	1
◆●51	272465	Gasket—Carburetor (Carb. to Elbow)	1
*52	272554	Gasket—Carburetor (Elbow to Cylinder)	1
●95	94098	Screw—Throttle	1
●104	231789	Pin—Float Hinge	1
●105	231855	Valve Assy.—Inlet Needle	1
●106	231854	Inlet Valve Seat	1

Ref. No.	Part No.	Description	No. Used
121	495799	Carburetor Kit	1
●127		Plug—Welch (Sold in Kit Only).	1
◆●137	281165	Gasket—Float Bowl	1
◆●138	281164	Washer—Float Bowl Screw	1
●142	494537	Nozzle—Carburetor	1
●147	231794	Pilot—Jet	1
358	494241	Gasket Set	1
*524	68838	Seal—Filler Tube	1
*537	281106	O-Ring—Air Cleaner	1
●634	281168	Seal—Choke Shaft	1
*634A	491323	Seal—Governor	1
●634B	394970	Washer—Throttle Shaft	1
*842	270920	Seal—Oil Filler Cap	1
977	494358	Carburetor Gasket Set	1
●987	281166	Seal—Throttle Shaft	1

* Included in Gasket Set—Part No. 494241.
 ● Included in Carburetor Kit—Part No. 495799.

◆ Included in Carburetor Gasket Set—Part No. 494385.

TORO PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
	Engine	6 1 1	57-4360	Post - Rear Pivot	13 4 1
111419	Washer - Fender	4 19 1	57-4360	Post - Rear Pivot	14 6 1
115271	Fan - Hydro	11 7 1	57-4380	Rod - Deflector Hinge	14 1 1
116397	Relay	9 16 1	57-4380	Rod - Deflector Hinge	13 32 1
117137	Decal - Belt Guide	14 23 1	57-4700	Blade - Side Discharge	14 12 2
117137	Decal - Belt Guide	13 24 1	57-6950	Spring - Torsion	14 2 1
117242	Decal - Made in USA	1 21 1	57-6950	Spring - Torsion	13 31 1
700806	Knob - Studded	3 4 1	61-9780	Cap - Hub	4 1 2
701178	Cap - Protector	1 6 2	61-9780	Cap - Hub	8 11 2
701756	Wheel - Deck	14 26 2	62-1292	Knob - Engage Lever	2 3 1
702366	Clip - Wire Retainer	9 9 3	62-1292	Knob - Shift	12 6 1
910478	Screw - Phillips Hd.	9 19 4	62-3661	Spacer - Bearing	14 19 2
936109	Ring - Retaining	19 36 1	62-3661	Spacer - Bearing	13 20 2
3-6498	Washer - Thrust	5 14 2	63-8360	Key - Ignition	9 12 1
3-6498	Washer - Thrust	4 32 2	65-2920	Pad - Pedal	7 23 1
3-7501	Washer - Curved	5 11 4	65-5080	Bushing - Flanged	11 26 1
5-4460	Washer	17 43 1	67-0710	Ball - Swivel	15 28 2
5-4460	Washer - Fender	3 3 1	68-3650	Decal - Deflector Danger	13 3 1
5-4460	Washer - Fender	11 24 1	68-3650	Decal - Deflector Danger	14 5 1
5-4460	Washer - Fender	4 24 1	68-3660	Decal - Shield Danger	14 10 1
5-4460	Washer - Fender	7 24 1	68-3660	Decal - Shield Danger	13 36 1
7-0030	Bolt - Shoulder	15 2 1	76-2160	Plate - Kicker	13 10 4
7-0030	Bolt - Shoulder	12 3 4	76-3820	Anchor - Belt Guide	6 13 2
7-0036	Key - Square	8 8 2	79-1600	Baffle - Recycler	13 28 1
23-0310	Bolt - Shoulder	16 3 1	79-1640	Baffle - Rear	13 13 1
23-0310	Bolt - Shoulder	8 20 1	79-3061	Blade - Recycler	13 15 2
26-0671	Bolt - Blade	14 14 2	79-3140	Decal - Danger	13 11 1
26-0671	Bolt - Blade	13 17 2	79-3140	Decal - Danger	14 11 1
26-0671	Bolt - Blade	6 17 1	80-0510	Stiffener - Blade	13 35 2
26-6701	Spring - Brake	11 20 1	80-2240	Plate - Name Grille	9 30 1
27-0220	Screw - Plastite	6 5 4	80-2600	Battery - 7 Plate	9 6 1
27-0220	Screw - Plastite	5 17 2	80-4341	Shaft - Spindle	13 14 2
27-8890	Spring - Pedal Return	7 6 1	80-4341	Shaft - Spindle	14 16 2
28-0540	Bolt - Shoulder	16 10 4	80-4360	Shield - Bearing	14 17 2
28-0540	Bolt - Shoulder	2 11 2	80-4360	Shield - Bearing	13 18 2
28-2480	Washer	4 3 2	80-4380	Spacer - Hardened	14 18 2
28-2480	Washer	8 9 2	80-4380	Spacer - Hardened	13 19 2
28-8080	Boot - Battery Terminal	9 5 1	80-6090	Key - Square	11 13 1
37-8770	Bolt - Shoulder	7 2 1	83-4390	Rim	8 7 2
37-8770	Bolt - Shoulder	3 12 4	86-4270	Spacer	19103 1
38-1420	Switch - Seat	9 8 1	88-0890	Grip - Brake Rod	4 11 1
38-7820	Bearing - Spindle	14 21 4	88-3840-01	Body - Rear	1 5 1
38-7820	Bearing - Spindle	13 23 4	88-3850	Wheel - Steering	5 3 1
44-8110	Cable - Battery Negative	9 7 1	88-3870	Cover - Steering Wheel	5 2 1
46-8090	Screw - Plastite	2 15 8	88-3880	Tank - Gas	6 6 1
46-8090	Screw - Plastite	8 19 2	88-3910	Tower - Steering	2 2 1
46-8091	Screw - Plastite	2 8 2	88-3930	Shield - Heat	2 14 1
47-1910	Solenoid	9 17 1	88-3940	Panel - Rear Hitch	1 10 1
47-2963	Line - Fuel	6 10 1	88-3950	Seat	3 1 1
48-7620	Screw - Hex Hd. Cap	11 1 1	88-3960	Lens - Headlights	9 23 1
52-2891	Bushing - Steering Link	4 20 2	88-3970	Reflector & Lamp	9 25 1
54-9220	Decal - Danger	13 1 2	88-3980	Cap - Gas	6 3 1
54-9220	Decal - Danger	14 4 2	88-4020	Guide - Deck Belt R.H.	16 5 1
55-4300	Decal - Spring Caution	14 24 2	88-4030	Guide - Deck Belt L.H.	16 8 1
55-4300	Decal - Spring Caution	13 38 2	88-4040	Box - Battery	9 11 1
56-2540	Vent - Tube	9 2 1	88-4050	Duct - Hood Air	2 17 1
56-6591	Bolt - Wheel	14 25 2	88-4070	Tire - 13	4 4 2
56-9830	Pad - Brake	15 27 2	88-4090	Tire	8 6 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3316-542

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
88-4140	Nut - Wedge	2 23 2	88-5200	Rack - Steering	4 18 1
88-4160	Clamp - Pivot Rod	2 22 2	88-5230	Mat - R.H. Foot	3 15 1
88-4170	Rod - Tower Pivot	2 24 1	88-5240	Mat - L.H. Foot	3 9 1
88-4180	Button - Release	5 6 1	88-5260	Bracket - Transaxle Mtg.	1 11 2
88-4190	Bushing - Sliding	5 5 1	88-5270	Rod - Clutch/Brake	7 1 1
88-4210	Bushing - Stationary	5 19 1	88-5310	Lever - H.O.C.	12 7 1
88-4220	Latch - Hood	2 16 1	88-5330	Pulley - Deck	15 18 2
88-4230	Trunnion - H.O.C. Rear	12 12 2	88-5360	Spacer - Wheel	11 10 2
88-4280	Wheel & Tire Assembly	4 * 2	88-5380	Rod - Steering Tie	4 8 1
88-4300	Wheel & Tire Assembly	8 * 1	88-5390	Bellcrank	15 10 1
88-4310	Harness - Wire	9 1 1	88-5450	Rod - Hanger Rear	12 11 2
88-4320	Harness - Wire	9 24 1	88-5460	Guide - Trans. Belt	11 22 1
88-4340	Control - Throttle	6 4 1	88-5470	Spacer - Front Axle	4 34 2
88-4350	Cable - Throttle	6 2 1	88-5500	Rod - Pedal Pivot	7 16 1
88-4370	Rim - Front Wheel	4 5 2	88-5510	Rod - Parking Brake	4 9 1
88-4400	Bearing - Wheel	4 35 4	88-5520	Bracket - Parking Brake	4 10 1
88-4410	Gasket - Muffler	6 22 1	88-5540	Rod - Deck Brake R.H.	15 22 1
88-4430	Cover - Recycler	13 33 1	88-5550	Rod - Deck Brake L.H.	15 5 1
88-4460	Axle - Front	4 7 1	88-5560	Guide - Idler Belt	7 3 1
88-4480	Seal - Plunger	9 28 2	88-5570	Link - Adjusting H.O.C.	12 1 2
88-4510	Housing - Spindle	14 20 2	88-5610	Lever - Neutral Return	8 15 2
88-4510	Housing - Spindle	13 21 2	88-5620	Strap - Torque	11 9 1
88-4550	Deflector - Deck	13 2 1	88-5630	Pulley - Idler	15 23 1
88-4550	Deflector - Deck	14 3 1	88-5680	Pulley - Flat Idler	7 4 1
88-4590	Bolt - Shoulder	15 3 3	88-5740	Bracket - Deck Wheel	14 27 1
88-4620	Bracket - Idler Pivot	1 12 1	88-5750	Bracket - Deck Wheel	14 28 1
88-4630	Plate - Engine Mount	1 3 1	88-5780-01 Deck - 38		13 6 1
88-4640	Bracket - Deck	16 12 2	88-5780-01 Deck - 38		14 8 1
88-4650	Rail - R.H. Frame	1 4 1	88-5800	Bushing - Steering	4 33 4
88-4660	Rail - L.H. Frame	1 13 1	88-5830	Guide - Belt L.H.	6 12 1
88-4670	Bushing - Eccentric	4 17 1	88-5840	Guide - Belt R.H.	6 21 1
88-4690	Block - Pivot	8 14 1	88-5900	Link - H.O.C.	12 8 1
88-4700	Pulley - Cable	16 4 1	88-5910	Spring - Torsion	15 7 2
88-4700	Pulley - Cable	7 17 1	88-5920	Rod - Gas Tank	6 7 1
88-4730	Clamp - H.O.C. Pivot	12 13 2	88-5940	Rod - Speed Control	8 17 1
88-4810	Clamp - Shift Pivot	7 20 1	88-5960	Guide - Trans. Belt L.H.	11 5 1
88-4820	Bracket - Seat Hinge	3 13 2	88-5970	Hook - Spring Return	15 12 1
88-4830	Link - Drag	4 29 1	88-6030	Pedal - Speed Control	8 21 1
88-4850	Pulley - Engine	6 14 1	88-6040	Bracket - Hood Pivot R.H.	2 19 1
88-4870	Arm - Idler	15 21 1	88-6050	Bracket - Hood Pivot L.H.	2 12 1
88-4880	Spacer - Microswitch	9 21 1	88-6070	Arm - Idler	7 14 1
88-4890	Spring - Leaf	5 13 1	88-6090	Coupling - Steering	5 20 1
88-4900	Pan - Front Deck	16 11 1	88-6100	Brake - Deck	15 4 2
88-4910	Support - Seat	3 2 1	88-6130	Spring - Deck Engage	15 8 1
88-4960	Shield - Exhaust Pipe	1 14 1	88-6140	Spring - Brake	7 7 1
88-4980	Bushing - Idler Arm	15 16 1	88-6180	Pulley - Transaxle	11 8 1
88-4990	Tray - Fender	3 14 1	88-6220	Spring - Compression	1 8 2
88-5000	Pedal - Clutch/Brake	7 22 1	88-6230	Arm - Actuating	17 37 1
88-5010	Spacer - Steering Rack	4 26 1	88-6250	V-Belt - Deck	15 17 1
88-5030	Gate - H.O.C.	3 8 1	88-6280	V-Belt - Transaxle	11 14 1
88-5070	Guide - Idler Belt	15 24 1	88-6290	Shield - Muffler	1 15 1
88-5110	Pivot - H.O.C.	12 14 1	88-6300	Shaft - Steering Upper	5 9 1
88-5120	Support - Front Axle	1 17 1	88-6330	Spring - Extension	7 12 1
88-5130	Bracket - Steering Rack	4 14 1	88-6370	Shaft - Steering Short	5 15 1
88-5150	Bushing - Flange	5 16 1	88-6410	Cable - Deck Engage	16 6 1
88-5170	Cover - H.O.C.	3 6 1	88-6460	Spring - Extension	12 2 1
88-5180	Bracket - Backup	5 12 1	88-6480	Muffler	6 25 1
88-5190	Lever - Deck Engage	2 1 1	88-9830	Switch - Ignition	9 15 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
88-9931	Switch - Micro	9 20 2	322-9	Screw - Hex Hd. Cap	6 18 4
92-2460	Decal - Ignition/Lights	2 28 1	322-12	Screw - Hex Hd. Cap	16 2 2
92-2461	Decal - Throttle	2 29 1	322-12	Screw - Hex Hd. Cap	11 11 4
92-2462	Decal - Deck Engage	2 30 1	323-5	Screw - Hex Hd. Cap	13 29 2
92-2467	Decal - Hood R.H.	2 25 1	323-11	Screw - Hex Hd. Cap	7 5 1
92-2468	Decal - Hood L.H.	2 * 1	323-12	Screw - Hex Hd. Cap	15 1 1
92-2486	Decal - Instruction Hydro	1 20 1	323-13	Screw - Hex Hd. Cap	4 27 2
92-5730	Decal - Throttle	2 * 1	3219-6	Nut - Lock	15 19 2
92-5731	Decal - Ignition/Light	2 * 1	3230-1	Bolt - Carriage	4 15 4
92-5733	Decal - Deck Engage	2 * 1	3230-1	Bolt - Carriage	13 26 1
92-5748	Decal - Air Duct	2 27 1	3230-2	Bolt - Carriage	11 23 1
92-5782	Patch - Heat Tape	2 26 1	3230-3	Bolt - Carriage	7 19 1
92-6013	Bracket - Speed Control	11 25 1	3230-3	Bolt - Carriage	4 28 1
92-6015	Control Arm Ass'y	19100 1	3230-5	Bolt - Carriage	11 27 1
92-6543	Seal - Lip	19 3 1	3230-7	Bolt - Carriage	11 28 1
92-6544	Seal - Lip	19 15 1	3231-4	Bolt - Carriage	4 13 1
92-6545	Seal - Lip	19 24 1	3253-3	Washer - Lock	6 27 1
92-6547	Arm - Bypass	19 35 1	3253-4	Washer - Lock	6 23 2
92-6549	Pin - Actuating	17 38 2	3253-22	Washer - Lock	6 16 1
92-7300	Strap - Locking	17 95 1	3254-5	Washer - Lock	9 14 1
92-7305	Spring - Extension	8 16 1	3255-7	Lockwasher	9 29 2
92-7889	Spindle - R.H.	4 6 1	3255-8	Washer - Ext. Tooth Lock	6 19 1
92-7890	Spindle - L.H.	4 31 1	3256-22	Washer - Flat	5 7 2
92-8650	Hood	2 18 1	3256-22	Washer - Flat	8 18 2
92-8757	Decal - Engine 13 H.P.	6 9 1	3256-22	Washer - Flat	11 29 1
92-8783	Transaxle	11 12 1	3256-23	Washer - Flat	1 1 4
92-8784	Decal - Dump Valve	1 19 1	3256-23	Washer - Flat	8 2 2
92-8786	Decal - Tower 1338HXL	2 31 2	3256-23	Washer - Flat	11 3 8
92-8789	Decal - Rear Body	1 18 1	3256-23	Washer - Flat	2 5 2
92-8856	Wire - Bypass	11 21 1	3256-23	Washer - Flat	7 9 1
92-8857	Lever - Bypass	11 6 1	3256-23	Washer - Flat	15 14 3
92-8859	Breather Ass'y	19 61 1	3256-24	Washer - Flat	12 10 7
92-8875	Switch - Rocker	9 27 1	3256-24	Washer - Flat	2 20 2
92-8934	Spring - Extension	15 9 1	3256-24	Washer - Flat	15 25 2
92-9520	Decal - Recycler	13 8 1	3256-24	Washer - Flat	4 25 4
218-461	Nut - Hex	9 13 1	3256-25	Washer - Flat	6 15 1
232-27	Valve Stem w/Cap	8 28 2	3256-25	Washer - Flat	4 22 2
232-27	Valve Stem w/Cap	4 36 2	3256-26	Washer - Flat	7 18 2
232-39	Inner Tube (Optional)	4 * 2	3256-58	Washer - Flat	11 2 1
232-41	Inner Tube (Optional)	8 * 2	3256-68	Washer - Fender	15 11 3
2412-98	Clamp - Hose	6 11 2	3269-5	Rivet - Pop	3 7 2
302-5	Fitting - Grease	4 37 2	3269-6	Washer - Backup	3 16 2
302-26	Fitting - Grease	4 16 1	3272-10	Pin - Cotter	7 21 1
321-4	Screw - Hex Hd. Cap	9 3 2	3272-10	Pin - Cotter	4 23 4
321-4	Screw - Hex Hd. Cap	5 8 2	3272-12	Pin - Cotter	4 2 2
321-4	Screw - Hex Hd. Cap	2 10 4	3274-12	Screw - Hex Soc. Hd.	6 24 2
321-4	Screw - Hex Hd. Cap	13 22 2	3274-59	Socket Head Cap Screw	19101 1
321-4	Screw - Hex Hd. Cap	6 26 1	3290-282	Rivet - Pop	15 26 4
321-9	Screw - Hex Hd. Cap	5 21 2	3290-299	Nut - Tinnerman	9 31 1
321-14	Screw - Hex Hd. Cap	13 37 2	3290-307	Pin - Cotter	2 7 2
322-3	Screw - Hex Hd. Cap	1 2 22	3290-307	Pin - Cotter Hair	8 5 2
322-3	Screw - Hex Hd. Cap	12 4 4	3290-307	Pin - Hair Cotter	12 9 7
322-3	Screw - Hex Hd. Cap	2 4 2	3290-307	Pin - Hair Cotter	11 30 1
322-3	Screw - Hex Hd. Cap	3 11 4	3290-354	Speednut	9 22 2
322-3	Screw - Hex Hd. Cap	7 15 2	3290-465	Washer - Belleville	14 13 2
322-3	Screw - Hex Hd. Cap	14 29 5	3290-465	Washer - Belleville	13 16 2
322-5	Screw - Hex Hd. Cap	1 7 2	3290-479	Panel - Fastener	3 5 16
322-5	Screw - Hex Hd. Cap	15 15 2	3290-496	Nut - Retained	2 13 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3316-542

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3296-12	Nut	19102 1	32104-76	Screw - Thread Cutting	16 7 5
3296-29	Nut - Lock	16 1 6	32104-76	Screw - Thread Tapping	1 16 1
3296-29	Nut - Lock	11 4 10	32121-78	Pin - Roll	5 4 1
3296-29	Nut - Lock	12 5 8	32128-43	Nut - Flange	2 21 2
3296-29	Nut - Lock	2 6 2	32144-4	Screw - Hex Hd. Thr'd	9 10 4
3296-29	Nut - Lock	6 8 3	32144-32	Screw - Plastite	9 26 2
3296-29	Nut - Lock	1 9 24	32144-41	Screw - Taptite	13 7 8
3296-29	Nut - Lock	3 10 6	32144-41	Screw - Taptite	14 9 8
3296-29	Nut - Lock	7 11 4	32144-111	Screw - Plastite	13 9 8
3296-29	Nut - Lock	4 12 5	32149-1	Nut - Keps	6 20 2
3296-29	Nut - Lock	15 13 6	32149-2	Nut - Keps	9 18 2
3296-29	Nut - Lock	13 27 1	32151-48	E-Ring	8 10 2
3296-29	Nut - Lock	14 30 5	32151-48	E-Ring	5 18 1
3296-39	Nut - Lock	16 9 1	32151-48	E-Ring	4 30 2
3296-39	Nut - Lock	15 20 1	32151-81	Ring - Retaining	5 1 1
3296-39	Nut - Lock	4 21 3	32151-83	Ring - External Retaining	8 4 1
3296-39	Nut - Lock	14 22 3			
3296-39	Nut - Lock	13 25 3		Optional Equipment	
3296-42	Nut - Lock	15 6 2		Easy Empty Bagger Kit	79116
3296-42	Nut - Lock	2 9 4		Twin Bagger	79101
3296-42	Nut - Lock	5 10 4		Anti-Scalp Kit	79181
3296-42	Nut - Lock	13 12 4		Recycler Kit	79170
3296-47	Nut - Hex Lock	17 40 2		Wheel Weight Kit	59159
3296-59	Nut - Lock	7 13 2		42" Snowblade Kit	79150
3296-59	Nut - Lock	8 22 1		Tire Chains	11-0430
32103-22	Nut - Wing	9 4 2		Hi-Sail Bagging Blade	57-4700

*Not Illustrated

