




MODEL NO. 07200-40500 & UP

PARTS CATALOG

**WORKMAN 3200**

ONLY COPY  
DO NOT REMOVE

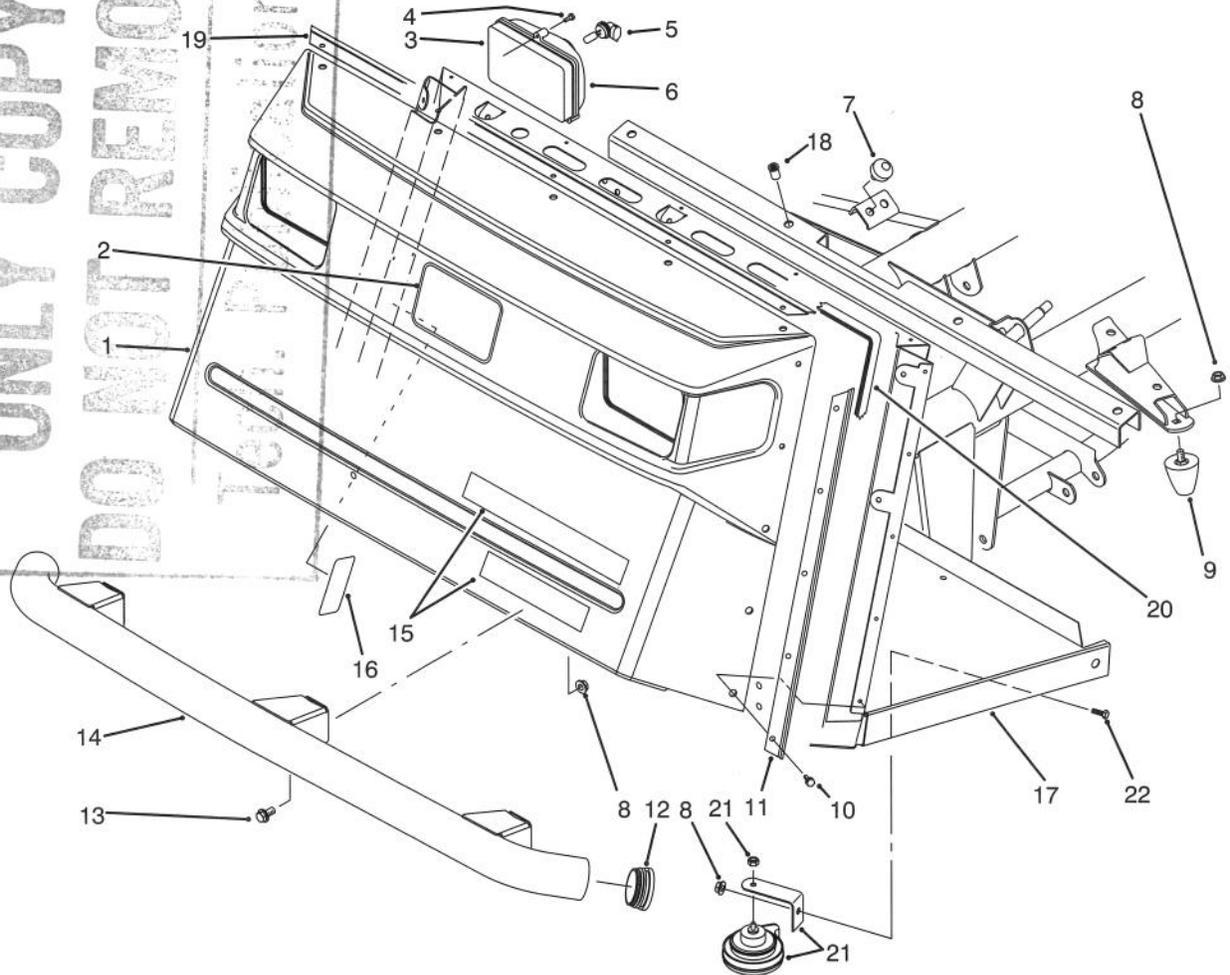


T-1581

**FRONT BUMPER & HOOD ASSEMBLY**

| Ref. No. | Part No. | Description                          | No. Used |
|----------|----------|--------------------------------------|----------|
| 1        | 87-0710  | Hood                                 | 1        |
| 2        | 62-5550  | Decal - TORO                         | 1        |
| 3        | 87-2120  | Headlight Assembly (Incl. Ref. #5-6) | 2        |
| 4        | 32104-88 | Screw                                | 6        |
| 5        | 87-6320  | Bulb - Headlight                     | 2        |
| 6        | 87-6330  | Lens - Headlight                     | 2        |
| 7        | 87-2440  | Bumper                               | 2        |
| 8        | 3290-357 | Nut - Flange Lock                    | 8        |
| 9        | 26-0071  | Bumper                               | 2        |
| 10       | 87-6620  | Screw                                | 15       |
| 11       | 87-8120  | Bracket - Trim Side                  | 2        |

| Ref. No. | Part No. | Description                               | No. Used |
|----------|----------|-------------------------------------------|----------|
| 12       | 2410-42  | Cap - Front Bumper                        | 2        |
| 13       | 3234-1   | Screw - Hex. Flange Hd.                   | 6        |
| 14       | 87-4070  | Bumper - Front                            | 1        |
| 15       | 87-6700  | Decal - Workman 3200                      | 1        |
| †16      | 87-6050  | Decal - Load Rating                       | 1        |
| 17       | 87-7130  | Operators Platform Assy. (Incl. Ref. #18) | 1        |
| 18       | 32148-7  | Nut - Clinch                              | 8        |
| 19       | 87-8130  | Bracket - Trim Top                        | 1        |
| 20       | 87-8160  | Trim                                      | 1        |
| 21       | 116749   | Horn Assembly                             | 1        |
| 22       | 323-4    | Screw - Cap Hex. Hd.                      | 1        |

†For different language versions of this part, see International Decal Cross Reference.

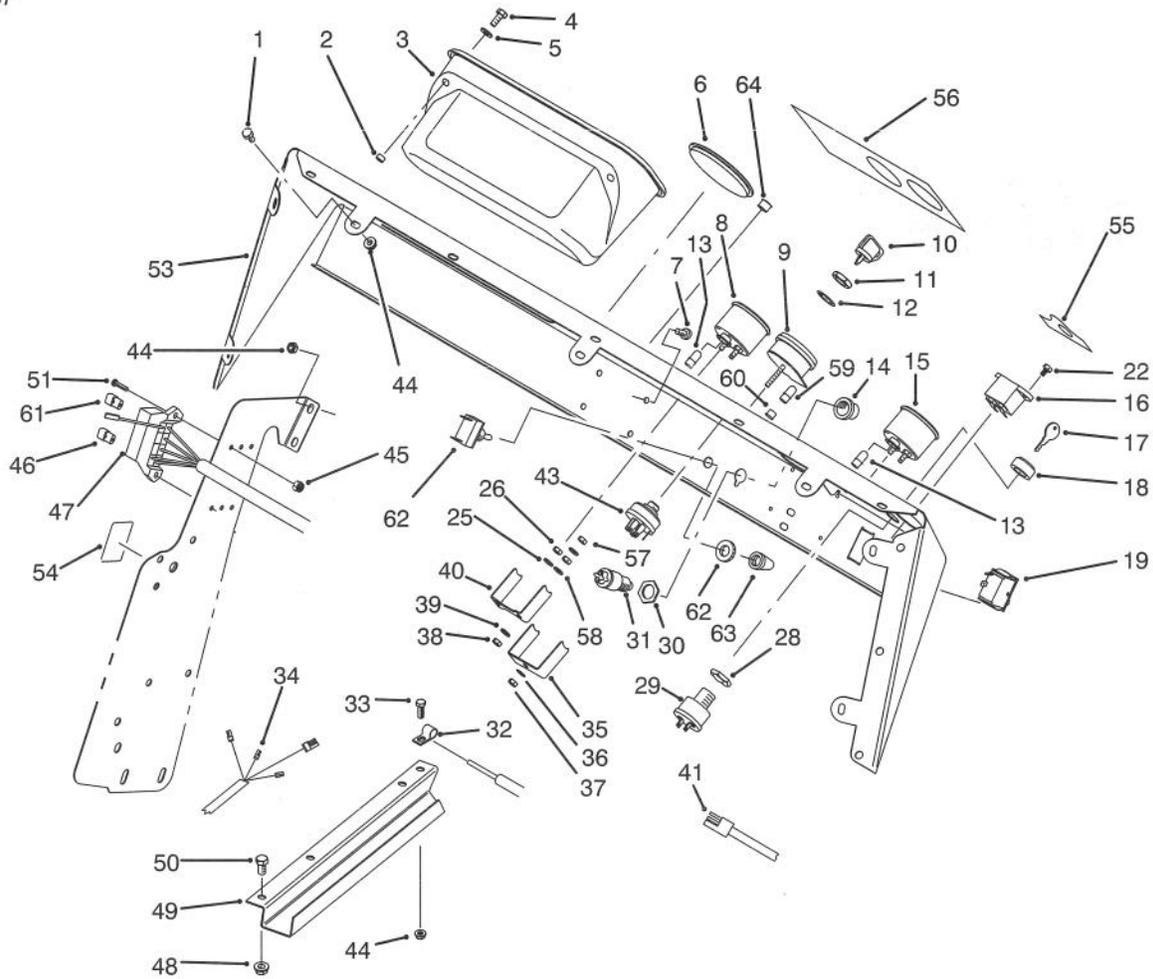


T-1706

## CONTROL PANEL ASSEMBLY

| Ref. No. | Part No. | Description                                             | No. Used |
|----------|----------|---------------------------------------------------------|----------|
| 1        | 321-2    | Screw - Cap Hex. Hd.                                    | 7        |
| 2        | 32148-6  | Insert - Threaded                                       | 2        |
| 3        | 87-3780  | Box - Glove                                             | 1        |
| 4        | 321-3    | Screw - Cap Hex. Hd.                                    | 2        |
| 5        | 3256-22  | Washer - Flat                                           | 2        |
| 6        | 2410-35  | Plug - Hole                                             | 1        |
| 7        | 3274-31  | Screw - Button Hd.                                      | 4        |
| 8        | 87-5590  | Temperature Gauge Assy.<br>(Incl. Ref. #38-40, 57 & 58) | 1        |
| 9        | 87-4140  | Warning Light Assembly<br>(Incl. Ref. #35-37, 59 & 60)  | 1        |
| 10       | 63-8360  | Key - Ignition                                          | 1        |
| 11       | 218-446  | Nut - Hex.                                              | 1        |
| 12       | 218-447  | Washer - Lock                                           | 1        |
| 13       | 218-600  | Bulb                                                    | 2        |
| 14       |          | Button - Horn                                           | 1        |
| 15       | 87-5580  | Fuel Gauge Assembly<br>(Incl. Ref. #38-40, 57 & 58)     | 1        |
| 16       | 75-6820  | Hourmeter                                               | 1        |
| 17       | 87-0740  | Key - Supervisor Switch                                 | 1        |
| 18       | 87-1720  | Nut - Supervisor Switch                                 | 1        |
| 19       | 87-3790  | Switch - Light                                          | 1        |
| 22       | 32144-18 | Screw - Cap Hex. Hd.                                    | 2        |
| 28       |          | Nut - Hex.                                              | 1        |
| 29       | 87-4030  | Supervisor Switch Assembly<br>(Incl. Ref. #17, 18 & 28) | 1        |

| Ref. No. | Part No. | Description                                       | No. Used |
|----------|----------|---------------------------------------------------|----------|
| 30       |          | Nut - Hex.                                        | 1        |
| 31       | 18-2830  | Horn Switch Assembly<br>(Incl. Ref. #14 & 30)     | 1        |
| 32       | 2412-89  | Clamp - R                                         | 1        |
| 33       | 321-4    | Screw - Cap Hex. Hd.                              | 1        |
| 34       | 87-4240  | Harness - Wire Rear                               | 1        |
| 35       |          | Clamp - Light                                     | 1        |
| 36       | 3254-1   | Washer - Lock                                     | 1        |
| 37       | 3217-26  | Hut - Hex.                                        | 1        |
| 38       | 3217-25  | Nut - Hex.                                        | 2        |
| 39       | 3253-15  | Washer - Lock                                     | 2        |
| 40       |          | Clamp - Temp. Gauge                               | 1        |
| 41       | 87-4230  | Harness - Wire Front LH                           | 1        |
| 43       | 27-2360  | Ignition Switch Assembly<br>(Incl. Ref. #11 & 12) | 1        |
| 44       | 32128-33 | Nut - Flange                                      | 12       |
| 45       | 3296-2   | Nut - Lock                                        | 2        |
| 46       | 218-574  | Fuse - 7.5 Amp                                    | 2        |
| 47       | 87-8500  | Front Wire Harness Assy.<br>(Incl. Ref. #13)      | 1        |
| 48       | 32128-20 | Nut - Flange                                      | 3        |
| 49       | 87-3320  | Cover - Wire Harness                              | 1        |
| 50       | 322-2    | Screw - Cap Hex. Hd.                              | 3        |
| 51       | 3250-13  | Screw                                             | 2        |
| 53       | 87-8540  | Control Panel Assembly<br>(Incl. Ref. #55-56)     | 1        |

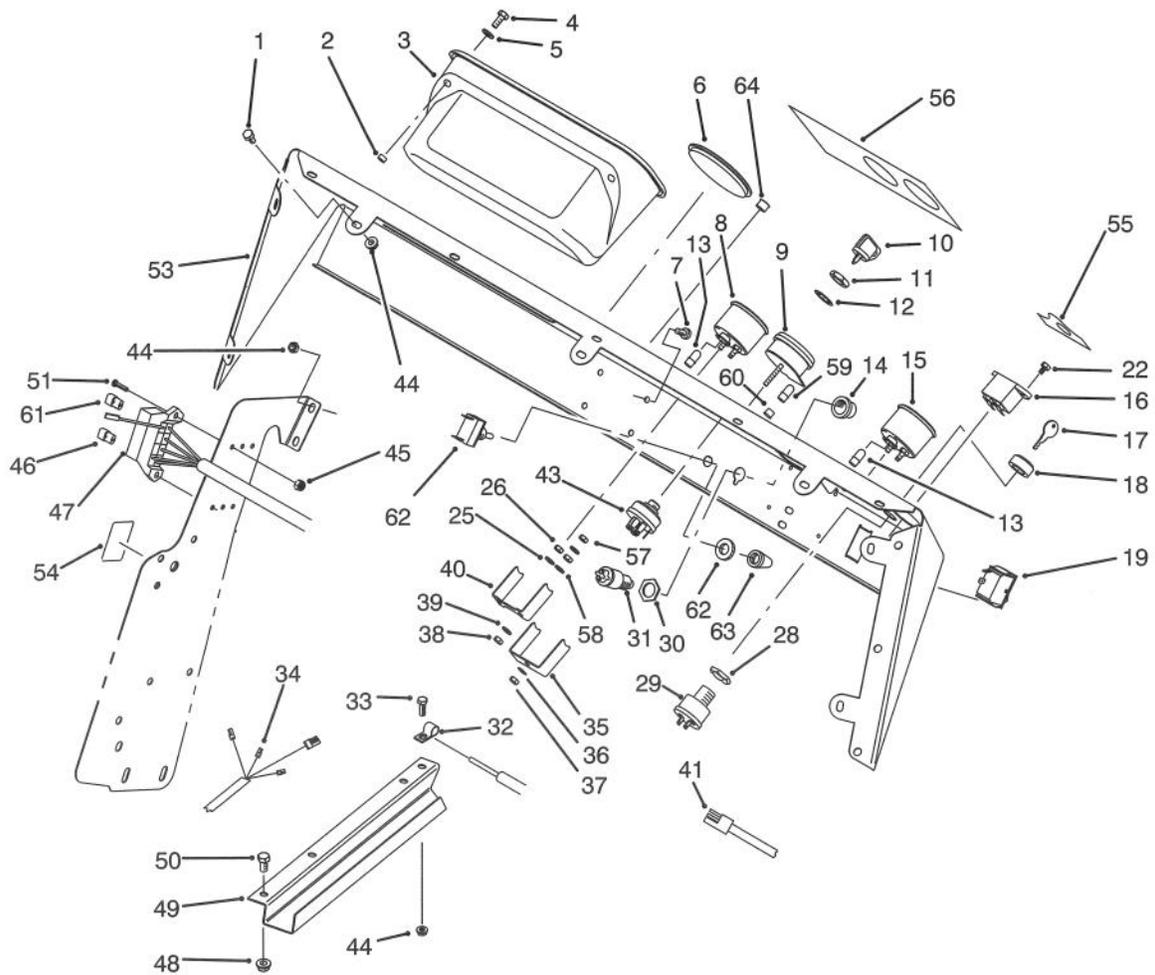


T-1706


## CONTROL PANEL ASSEMBLY (Continued)

| Ref. No. | Part No. | Description        | No. Used | Ref. No. | Part No. | Description                                | No. Used |
|----------|----------|--------------------|----------|----------|----------|--------------------------------------------|----------|
| ‡54      | 87-6670  | Decal - Fuse Block | 1        | 59       | 219-17   | Bulb - Warning Light                       | 4        |
| ‡55      | 87-5910  | Decal - Supervisor | 1        | 60       | 87-6270  | Socket & Bulb Assembly<br>(Incl. Ref. #59) | 4        |
| ‡56      | 87-8520  | Decal - Dash       | 1        | 61       | 218-578  | Fuse - 10 Amp                              | 1        |
| 57       | 3253-19  | Washer - Lock      | 3        | 62       | 2410-64  | Plug - Hole                                | 1        |
| 58       | 3217-29  | Nut - Jam          | 3        |          |          |                                            |          |

‡For different language versions of this part, see International Decal Cross Reference.

# ELECTRICAL SCHEMATIC

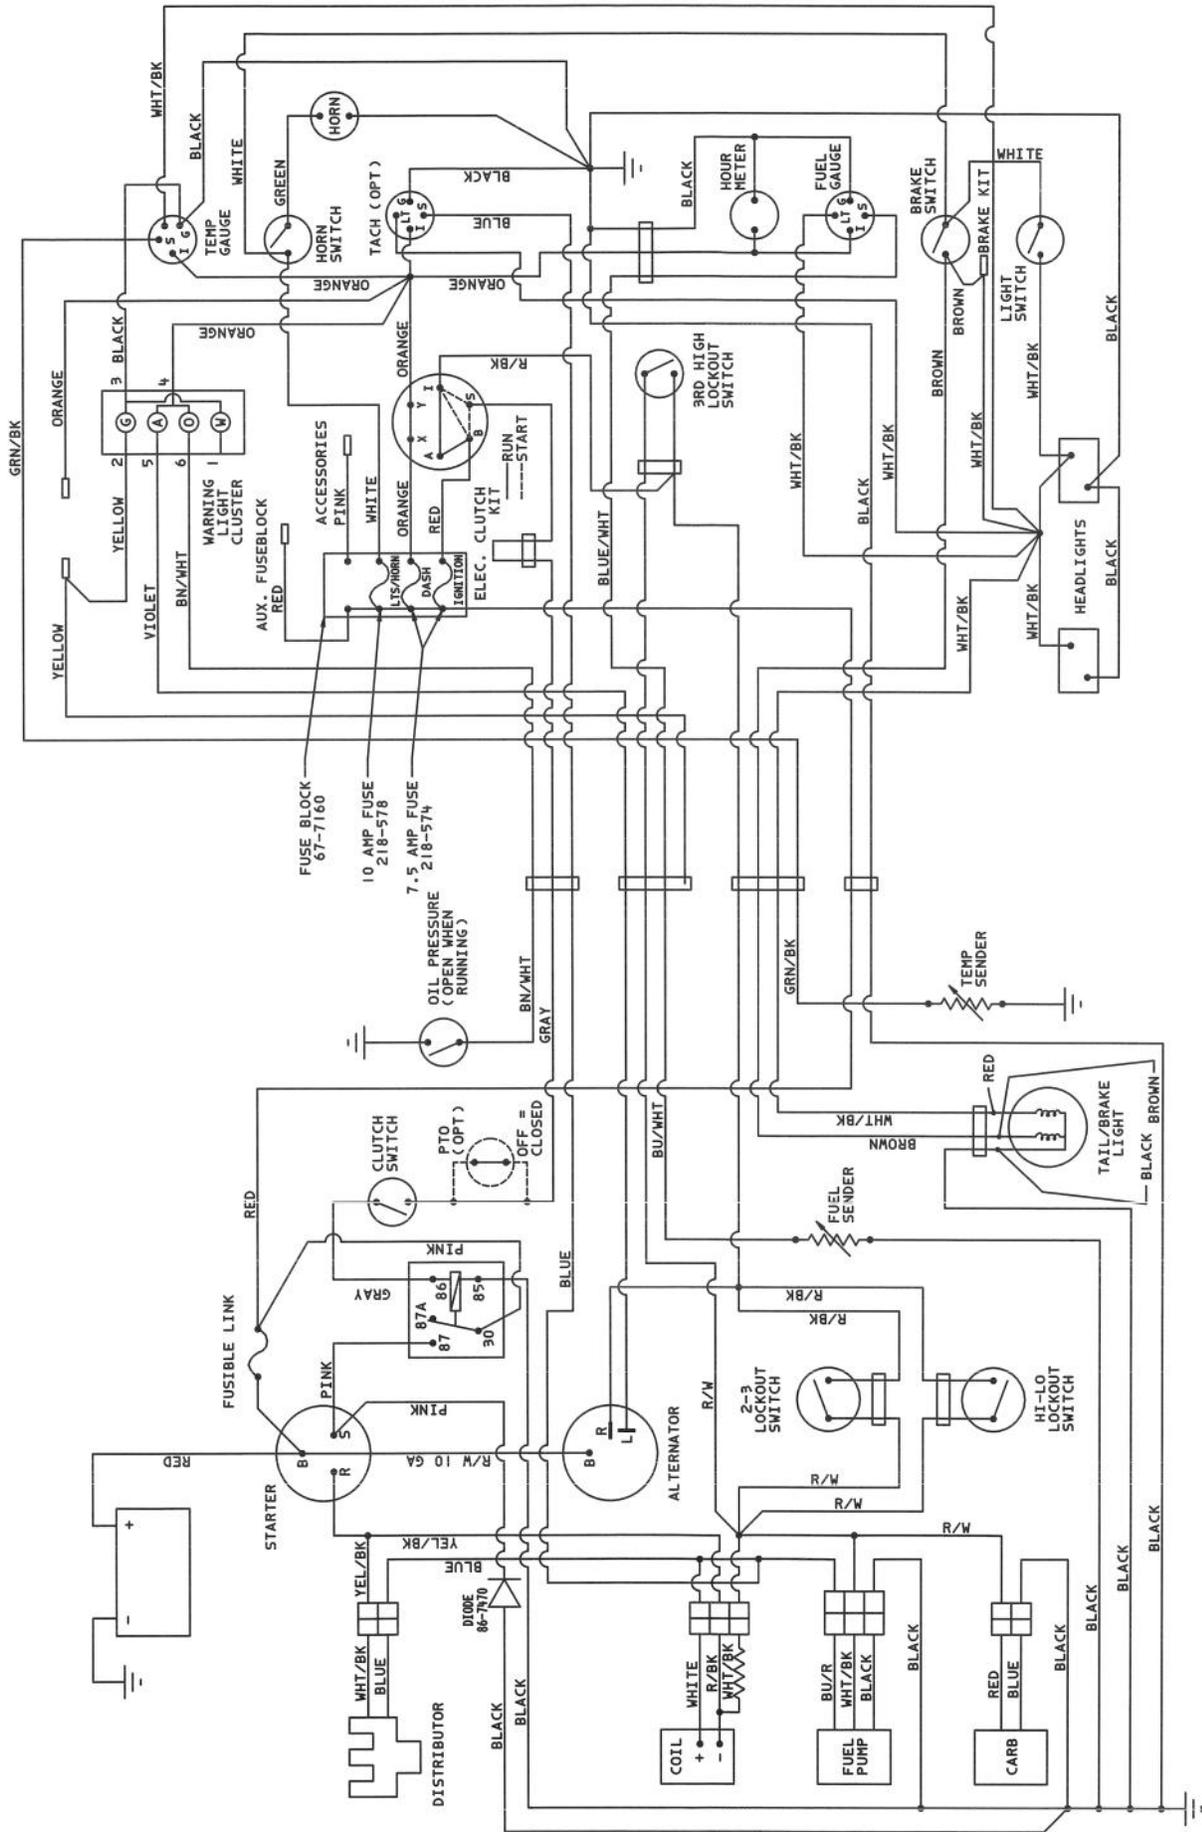

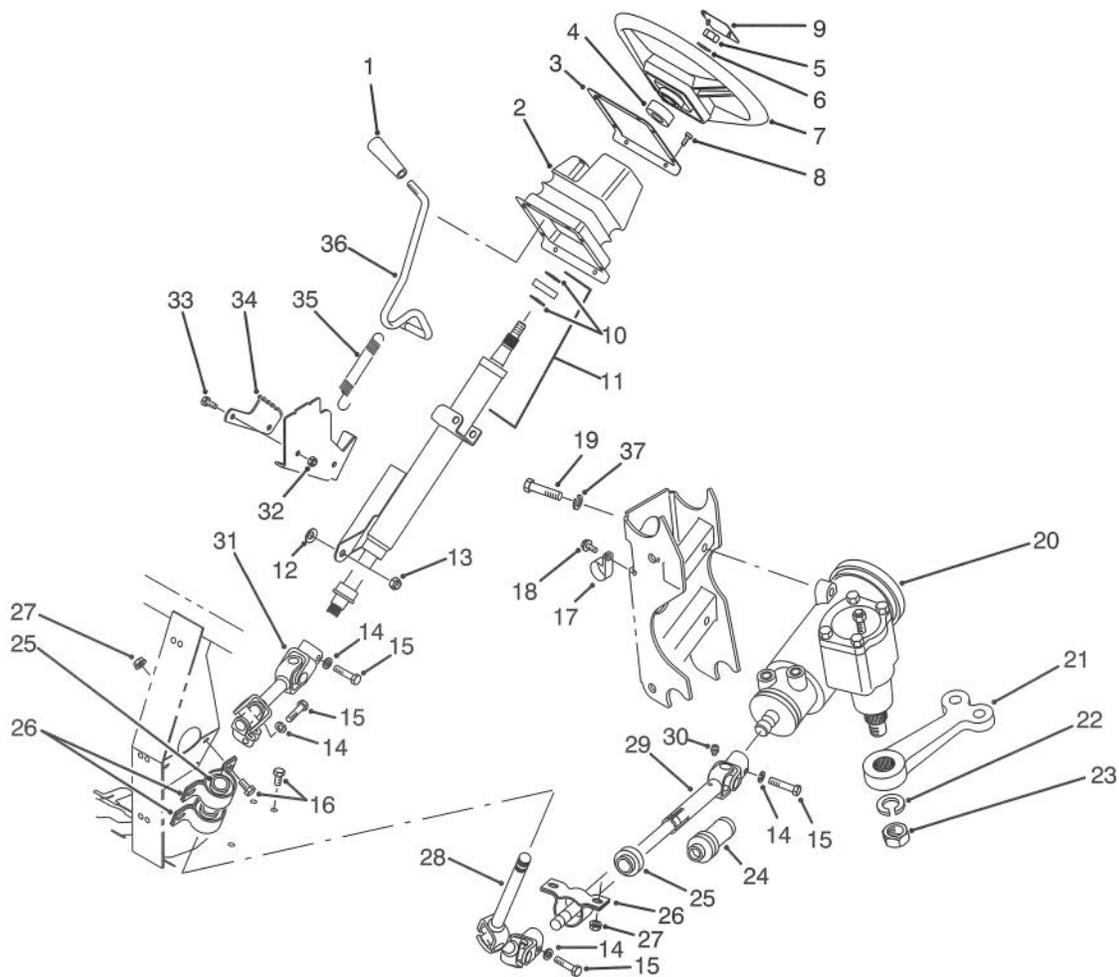


T-1584

## STEERING LINKAGE ASSEMBLY

| Ref. No. | Part No.  | Description                                     | No. Used | Ref. No. | Part No. | Description                                          | No. Used |
|----------|-----------|-------------------------------------------------|----------|----------|----------|------------------------------------------------------|----------|
| 1        | 233-39    | Knob                                            | 1        | 21       | 87-0370  | Arm - Pitman                                         | 1        |
| 2        | 87-3460   | Boot - Tilt Steering                            | 1        | 22       | 39-7420  | Washer - Lock                                        | 1        |
| 3        | 87-4720   | Plate - Steering Boot                           | 1        | 23       | 39-7440  | Nut - Lock                                           | 1        |
| 4        | 21-9260   | Spacer                                          | 1        | 24       | 92-4157  | Boot - Steering Shaft                                | 1        |
| 5        | 3277-1    | Nut - Hex.                                      | 1        | 25       | 87-2280  | Bearing                                              | 3        |
| 6        | 48-8070   | Washer - Flat                                   | 1        | 26       | 87-3250  | Mount - Bearing                                      | 3        |
| 7        | 87-3820   | Wheel - Steering                                | 1        | 27       | 32128-20 | Nut - Flange                                         | 6        |
| 8        | 32144-116 | Screw - Pan Head                                | 8        | 28       | 92-4155  | Slip Joint Assembly - Upper                          | 1        |
| 9        | 87-3750   | Cover - Steering Wheel                          | 1        | 29       | 92-4156  | Slip Joint Assembly - Lower<br>(Incl. Ref. #24 & 30) | 1        |
| 10       | 43-6550   | Ring - Retaining                                | 2        | 30       | 302-5    | Fitting - Grease                                     | 1        |
| 11       | 92-4153   | Assembly - Steering Column<br>(Incl. Ref. #10)  | 1        | 31       | 92-4154  | Universal Joint Assembly                             | 1        |
| 12       | 3290-455  | Washer                                          | 1        | 32       | 3296-42  | Nut - Lock                                           | 2        |
| 13       | 3296-59   | Nut - Lock                                      | 1        | 33       | 321-3    | Screw - Cap Hex. Hd.                                 | 2        |
| 14       | 3253-4    | Washer - Lock                                   | 4        | 34       | 87-3610  | Bracket - Detent                                     | 1        |
| 15       | 48-7740   | Screw - Cap Hex. Hd.                            | 4        | 35       | 65-5360  | Spring - Extension                                   | 1        |
| 16       | 322-2     | Screw - Cap Hex. Hd.                            | 6        | 36       | 87-3130  | Lever - Tilt Steering                                | 1        |
| 17       | 2412-105  | Clamp - R                                       | 2        | 37       | 3253-22  | Washer - Lock                                        | 3        |
| 18       | 32144-10  | Screw - Self Tapping                            | 2        | *        | 87-3100  | Lower Shaft Assembly<br>(Incl. Ref. #24 & 28-30)     | 1        |
| 19       | 324-8     | Screw - Cap Hex. Hd.                            | 3        | *        | 87-3120  | Steering Column & Shaft<br>(Incl. Ref. #10, 11 & 31) | 1        |
| 20       | 87-1500   | Steering Gear Assembly<br>(Incl. Ref. #22 & 23) | 1        |          |          |                                                      |          |

\*Not Illustrated

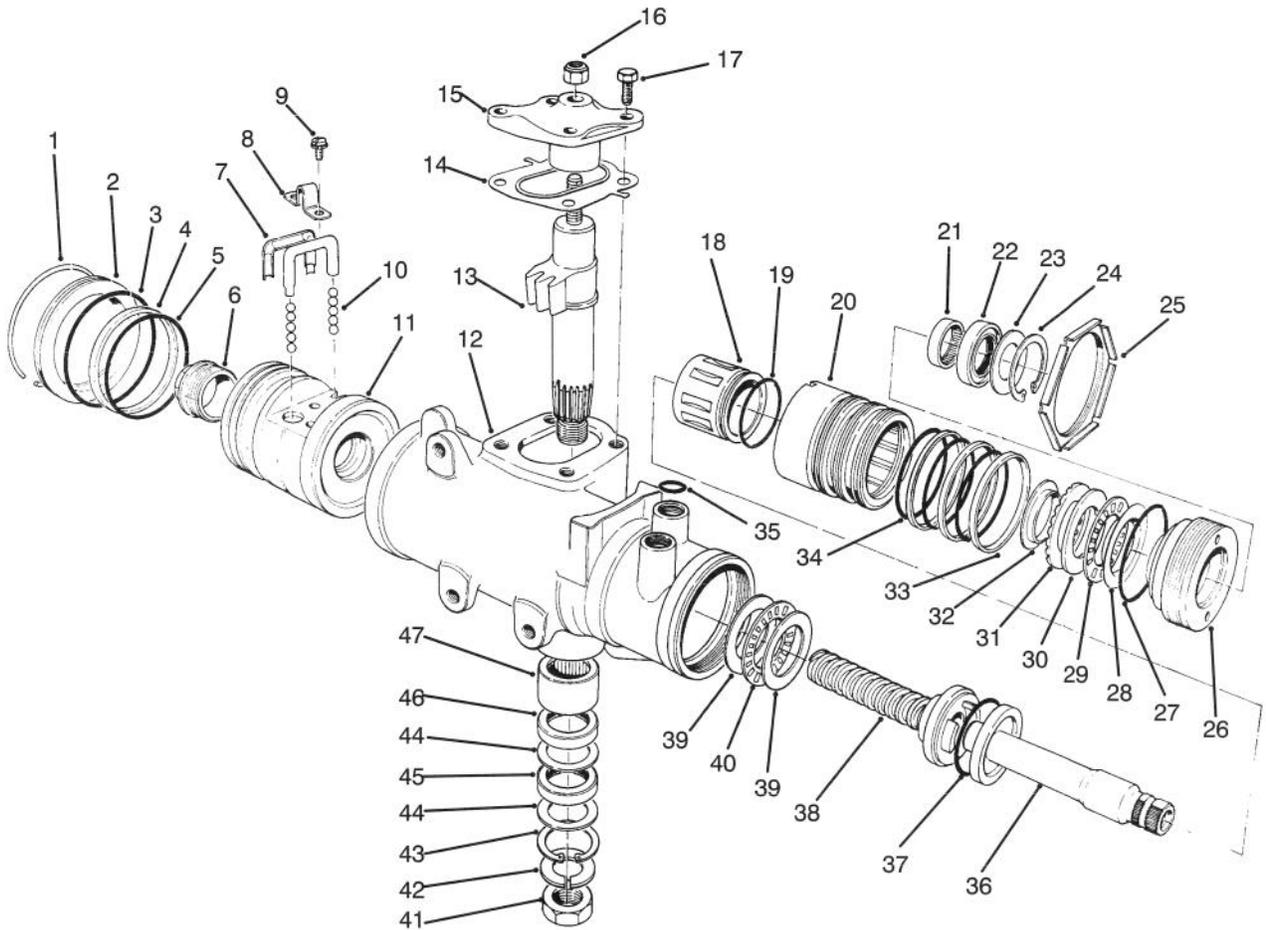


T-1580

## STEERING GEAR ASSEMBLY NO. 87-1500

| Ref. No. | Part No. | Description                               | No. Used |
|----------|----------|-------------------------------------------|----------|
| 1        |          | Ring - Retaining                          | 1        |
| 2        | 92-4165  | Plug - Housing End                        | 1        |
| 3        |          | Seal - Housing End Plug                   | 1        |
| 4        |          | Ring - Rack Piston                        | 1        |
| 5        |          | O-Ring, Rack Piston                       | 1        |
| 6        | 18-4340  | Plug - Rack Piston End                    | 1        |
| 7        | 92-4168  | Return - Guide Ball                       | 2        |
| 8        | 18-4270  | Clamp - Ball Return Guide                 | 1        |
| 9        | 18-4260  | Assy. - Screw/Lockwasher                  | 2        |
| 10       | 18-5190  | Ball - Chrome Alloy                       | 11       |
| 11       |          | Nut - Rack Piston                         | 1        |
| 12       |          | Housing - Steering Gear                   | 1        |
| 13       |          | Gear - Pitman Shaft                       | 1        |
| 14       | 28-8280  | Seal Kit - Side Cover<br>(Incl. Ref. #17) | 1        |
| 15       |          | Cover - Housing Side                      | 1        |
| 16       | 28-8220  | Nut - Lash Adjuster                       | 1        |
| 17       | 28-8210  | Bolt - Flange Hex. Hd.                    | 4        |
| 18       |          | Spool Valve                               | 1        |
| 19       |          | O-Ring, Spool Valve                       | 1        |
| 20       |          | Valve Body                                | 1        |
| 21       | 92-4169  | Bearing - Needle                          | 1        |
| 22       |          | Seal - Stub Shaft                         | 1        |
| 23       |          | Seal - Stub Shaft Dust                    | 1        |
| 24       |          | Ring - Retaining                          | 1        |
| 25       | 92-4159  | Nut - Adjuster Plug Lock                  | 1        |

| Ref. No. | Part No. | Description                                                     | No. Used |
|----------|----------|-----------------------------------------------------------------|----------|
| 26       |          | Plug - Adjuster                                                 | 1        |
| 27       | 28-8200  | O-Ring                                                          | 1        |
| 28       |          | Race - Upper Bearing                                            | 1        |
| 29       |          | Bearing - Roller, Thrust                                        | 1        |
| 30       |          | Race - Thrust Bearing                                           | 1        |
| 31       |          | Spacer - Thrust Bearing                                         | 1        |
| 32       |          | Retainer - Bearing                                              | 1        |
| 33       |          | Ring - Valve Body                                               | 3        |
| 34       |          | O-Ring                                                          | 3        |
| 35       | 39-7310  | O-Ring                                                          | 3        |
| 36       |          | Shaft - Stub                                                    | 1        |
| 37       |          | O-Ring                                                          | 1        |
| 38       |          | Worm - Steering                                                 | 1        |
| 39       |          | Race - Thrust Bearing                                           | 2        |
| 40       |          | Bearing - Roller, Thrust                                        | 1        |
| 41       | 39-7440  | Nut - Pitman Arm                                                | 1        |
| 42       | 39-7420  | Washer - Lock                                                   | 1        |
| 43       |          | Ring - Retaining                                                | 1        |
| 44       |          | Washer - Seal, Backup                                           | 2        |
| 45       |          | Seal - Pitman Shaft                                             | 1        |
| 46       |          | Seal - Pitman Shaft                                             | 1        |
| 47       | 92-4170  | Bearing - Pitman Shaft                                          | 1        |
| *        | 92-4161  | Assembly - Cover Service<br>Housing Side<br>(Incl. Ref. #14-17) | 1        |

\*Not Illustrated

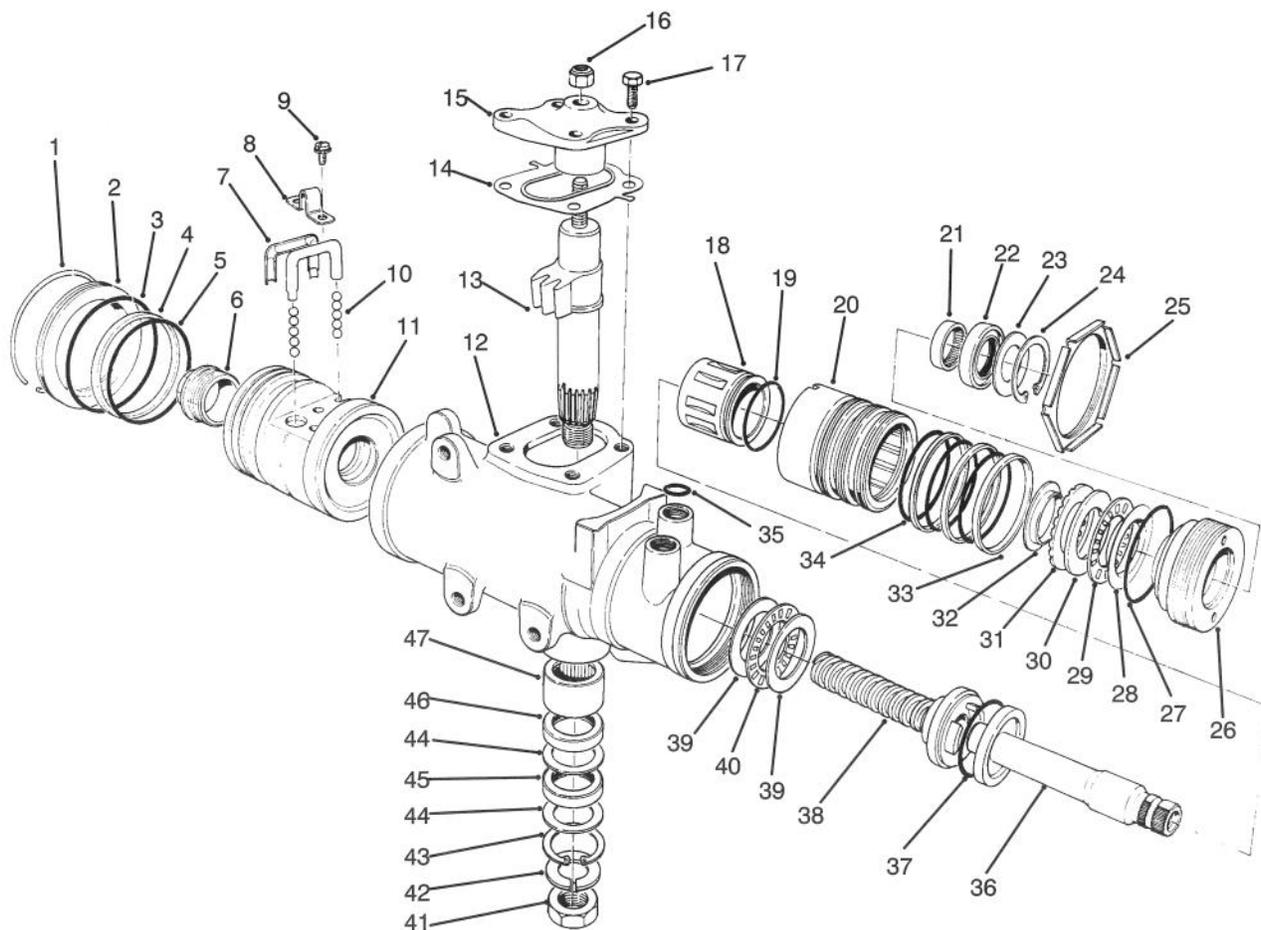


T-1580

## STEERING GEAR ASSEMBLY NO. 87-1500

| Ref. No. | Part No. | Description                                            | No. Used |
|----------|----------|--------------------------------------------------------|----------|
| *        | 28-8270  | Seal Service Kit - End Plug<br>(Incl. Ref. #1 & 3)     | 1        |
| *        | 28-8290  | Seal Service Kit<br>Rack/Piston<br>(Incl. Ref. #4 & 5) | 1        |
| *        | 18-5180  | Bearing Kit - Lower Thrust<br>(Incl. Ref. #39-40)      | 1        |
| *        | 18-5160  | Seal Kit - Pitman Shaft<br>(Incl. Ref. #43-46)         | 1        |
| *        | 18-5170  | Seal Kit - Valve Ring<br>(Incl. Ref. #19, 33, 34 & 37) | 1        |
| *        | 92-4163  | Assy. - Steering Housing<br>(Incl. Ref. #12 & 43-47)   | 1        |
| *        | 92-4167  | Assembly - Plug Service<br>(Incl. Ref. #22-24 & 27)    | 1        |

| Ref. No. | Part No. | Description                                                        | No. Used |
|----------|----------|--------------------------------------------------------------------|----------|
| *        | 92-4162  | Pitman Shaft - Gear Service<br>(Incl. Ref. #13-15 & 17)            | 1        |
| *        | 92-4158  | Valve Assy. - Hyd. Gear<br>(Incl. Ref. #18-20, 33, 34,<br>36 & 37) | 1        |
| *        | 92-4160  | Bearing Service Kit - Upper<br>(Incl. Ref. #28-32)                 | 1        |
| *        | 92-4166  | Rack/Piston/Nut Assembly<br>(Incl. Ref. #1-11 & 38)                | 1        |
| *        | 92-4164  | Plug Assy. - Service Adjust.<br>(Incl. Ref. #21-24 &<br>26-32)     | 1        |
| *        | 87-1500  | Steering Gear (Complete)                                           | 1        |

\*Not Illustrated

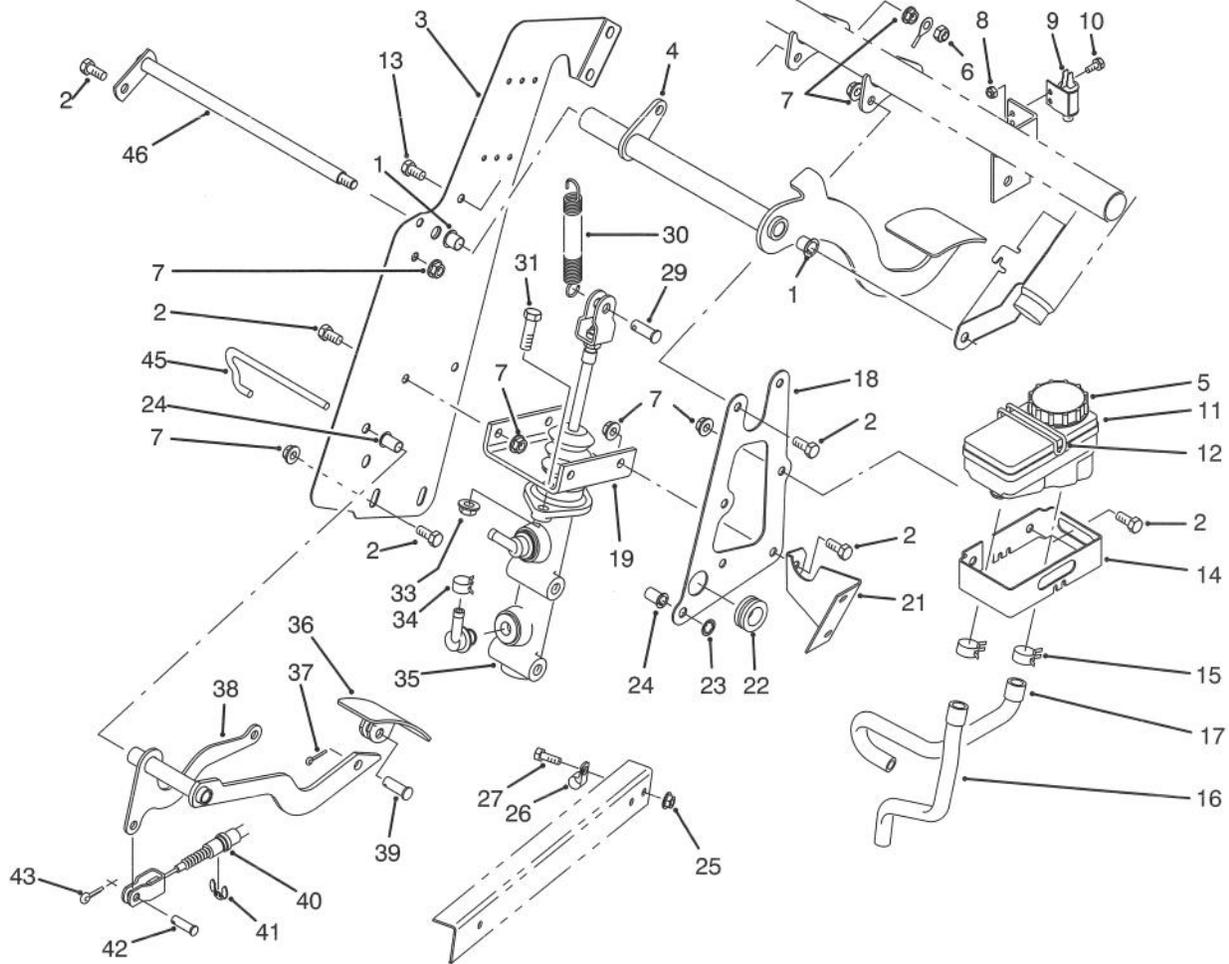


T-1585

## BRAKE & ACCELERATOR PEDAL ASSEMBLY

| Ref. No. | Part No. | Description                                 | No. Used |
|----------|----------|---------------------------------------------|----------|
| 1        | 256-257  | Bushing - Flange                            | 2        |
| 2        | 322-2    | Screw - Cap Hex. Hd.                        | 12       |
| 3        | 87-2910  | Support - Pedal RH                          | 1        |
| 4        | 87-2540  | Pedal - Brake                               | 1        |
| 5        | 92-4112  | Assembly - Cap                              | 1        |
| 6        | 3296-29  | Nut - Lock                                  | 1        |
| 7        | 32128-20 | Nut - Flange Lock                           | 13       |
| 8        | 3296-2   | Nut - Lock                                  | 2        |
| 9        | 55-7120  | Switch - Brake Light                        | 1        |
| 10       | 3290-321 | Screw - Hex. Flange Hd.                     | 2        |
| 11       | 87-3040  | Brake Fluid Reservoir Assy. (Incl. Ref. #5) | 1        |
| 12       | 87-7570  | Retainer - Reservoir                        | 1        |
| 13       | 322-5    | Screw - Cap Hex. Hd.                        | 1        |
| 14       | 87-2890  | Cradle - Reservoir                          | 1        |
| 15       | 2412-143 | Clamp - Hose                                | 2        |
| 16       | 87-0670  | Hose - Reservoir Front                      | 1        |
| 17       | 87-0660  | Hose - Reservoir Rear                       | 1        |
| 18       | 87-2660  | Support - Pedal LH                          | 1        |
| 19       | 87-2640  | Support - Master Cylinder                   | 1        |
| 21       | 87-2650  | Gusset                                      | 1        |
| 22       | 240-6    | Grommet                                     | 1        |

| Ref. No. | Part No. | Description               | No. Used |
|----------|----------|---------------------------|----------|
| 23       | 32151-56 | Ring - Push-On            | 1        |
| 24       | 52-2890  | Bushing - Flange          | 2        |
| 25       | 32128-33 | Nut - Flange Lock         | 1        |
| 26       | 2412-89  | Clamp - R                 | 1        |
| 27       | 321-4    | Screw - Cap Hex. Hd.      | 1        |
| 29       | 283-2    | Pin - Clevis              | 1        |
| 30       | 21-1830  | Spring - Extension        | 1        |
| 31       | 323-7    | Screw - Cap Hex. Hd.      | 2        |
| 33       | 3290-357 | Nut - Flange Lock         | 2        |
| 34       | 2412-144 | Clamp - Hose              | 2        |
| 35       | 87-3030  | Master Cylinder Assembly  | 1        |
| 36       | 87-2670  | Pedal - Accelerator       | 1        |
| 37       | 3272-6   | Pin - Cotter              | 1        |
| 38       | 87-4790  | Arm - Accelerator Pedal   | 1        |
| 39       | 283-85   | Pin - Clevis              | 1        |
| 40       | 87-8600  | Cable - Accelerator       | 1        |
| 41       | 32120-47 | Ring - E                  | 1        |
| 42       | 283-30   | Pin - Clevis              | 1        |
| 43       | 3272-10  | Pin - Cotter              | 1        |
| 45       | 87-2880  | Shaft - Accelerator Pedal | 1        |
| 46       | 87-2590  | Shaft - Brake Pedal       | 1        |

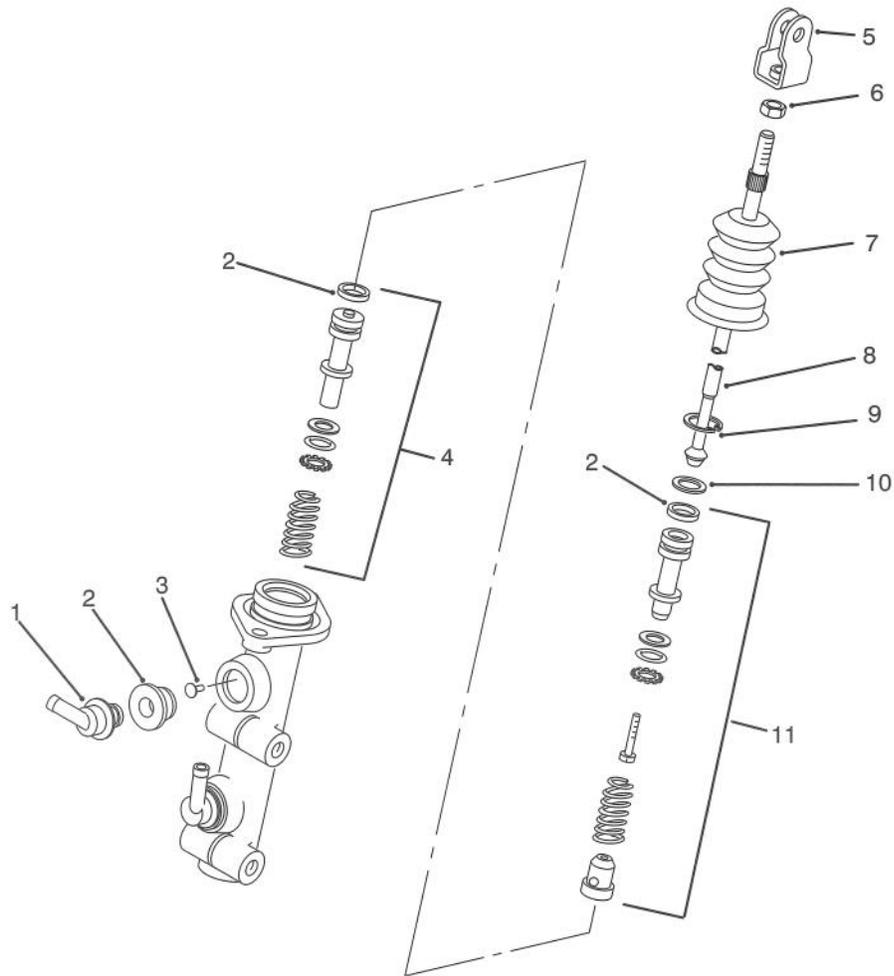


T-1586

## MASTER BRAKE CYLINDER NO. 87-3030

| Ref. No. | Part No. | Description               | No. Used |
|----------|----------|---------------------------|----------|
| 1        | 92-4104  | Adaptor - Pipe Fitting    | 2        |
| 2        | 92-4105  | Seal Kits                 | 1        |
| 3        | 92-4103  | Pin - Stop                | 1        |
| 4        | 92-4102  | Secondary Piston Assembly | 1        |
| 5        | 92-4110  | Clevis                    | 1        |
| 6        | 21-0360  | Nut                       | 1        |

| Ref. No. | Part No. | Description             | No. Used |
|----------|----------|-------------------------|----------|
| 7        | 92-4107  | Dust Cover              | 1        |
| 8        | 92-4106  | Rod - Push              | 1        |
| 9        | 92-4109  | Circlip                 | 1        |
| 10       | 92-4108  | Washer - Retainer       | 1        |
| 11       | 92-4101  | Primary Piston Assembly | 1        |

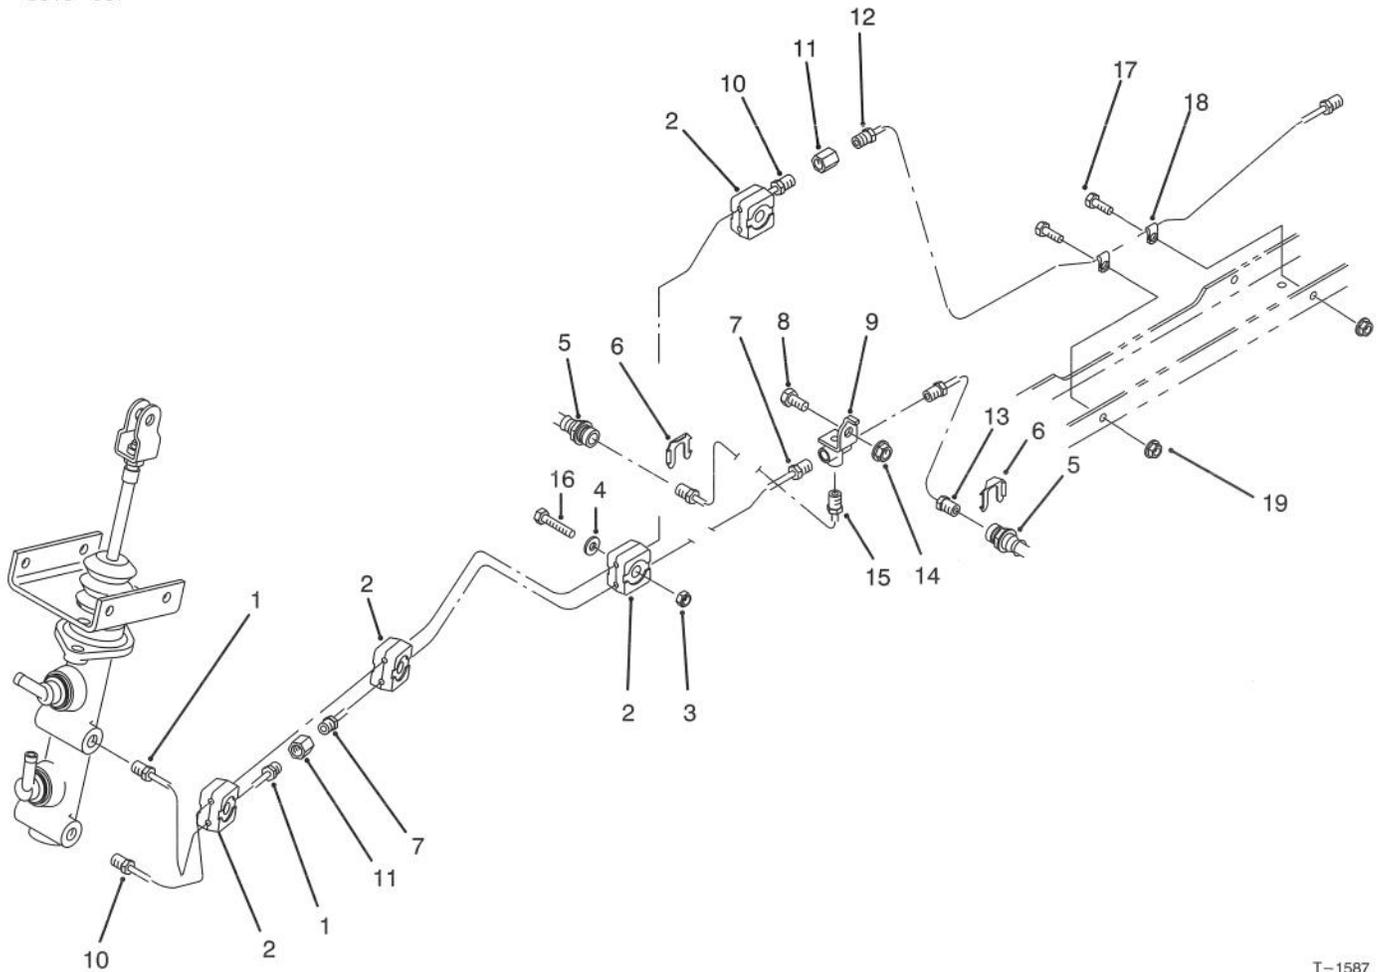


T-1587


## HYDRAULIC BRAKE LINE ROUTING ASSEMBLY

| Ref. No. | Part No. | Description           | No. Used |
|----------|----------|-----------------------|----------|
| 1        | 87-2830  | Tube - Brake          | 1        |
| 2        | 87-7660  | Clamp - Brake Line    | 8        |
| 3        | 3296-42  | Nut - Lock            | 4        |
| 4        | 3256-22  | Washer - Flat         | 4        |
| 5        | 87-2780  | Hose - Brake Front    | 2        |
| 6        | 87-3580  | Retainer - Brake Hose | 2        |
| 7        | 87-2840  | Tube - Brake          | 1        |
| 8        | 322-2    | Screw - Cap Hex. Hd.  | 1        |
| 9        | 87-3560  | Tee - Brake Line      | 1        |
| 10       | 87-2810  | Tube - Brake          | 1        |

| Ref. No. | Part No. | Description          | No. Used |
|----------|----------|----------------------|----------|
| 11       | 87-3570  | Fitting - Union      | 2        |
| 12       | 87-3260  | Tube - Brake         | 1        |
| 13       | 87-2850  | Tube - Brake         | 1        |
| 14       | 32128-20 | Nut - Flange         | 1        |
| 15       | 87-2860  | Tube - Brake         | 1        |
| 16       | 321-9    | Screw - Cap Hex. Hd. | 4        |
| 17       | 321-4    | Screw - Cap Hex. Hd. | 2        |
| 18       | 2412-149 | R-Clamp              | 2        |
| 19       | 32128-33 | Nut - Flange Head    | 2        |

# HYDRAULIC SCHEMATIC

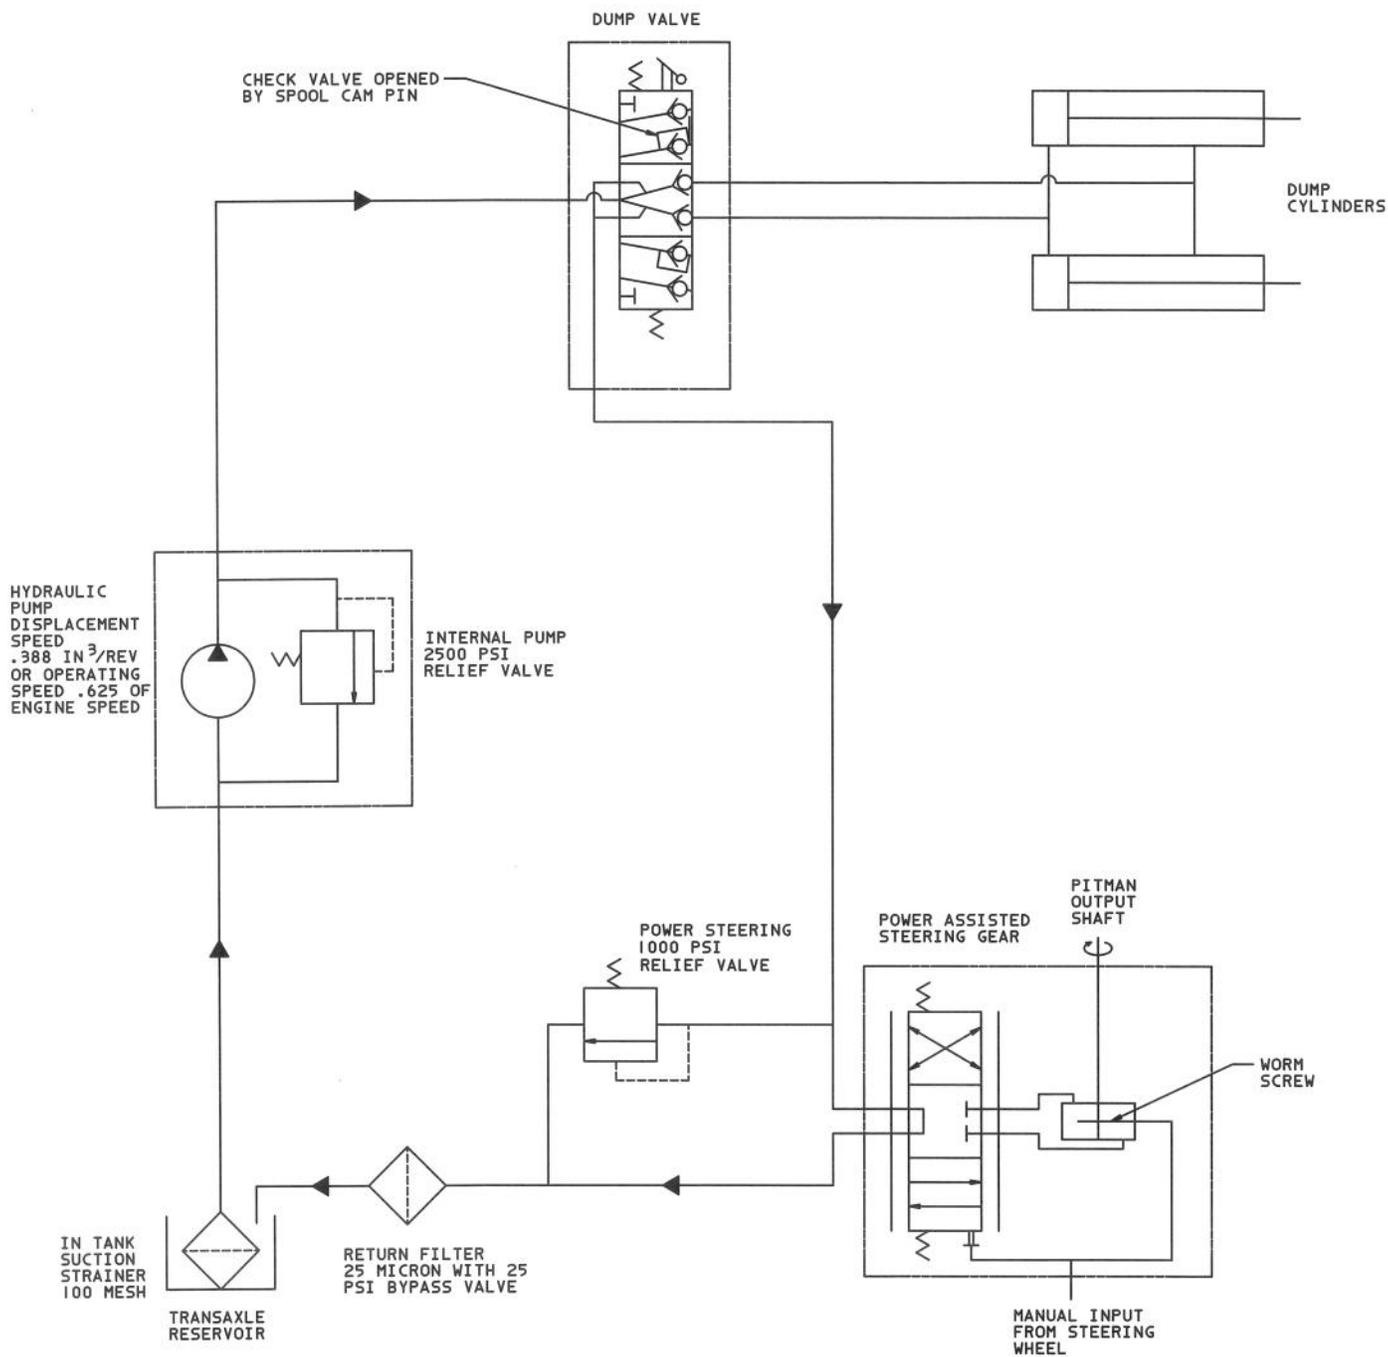

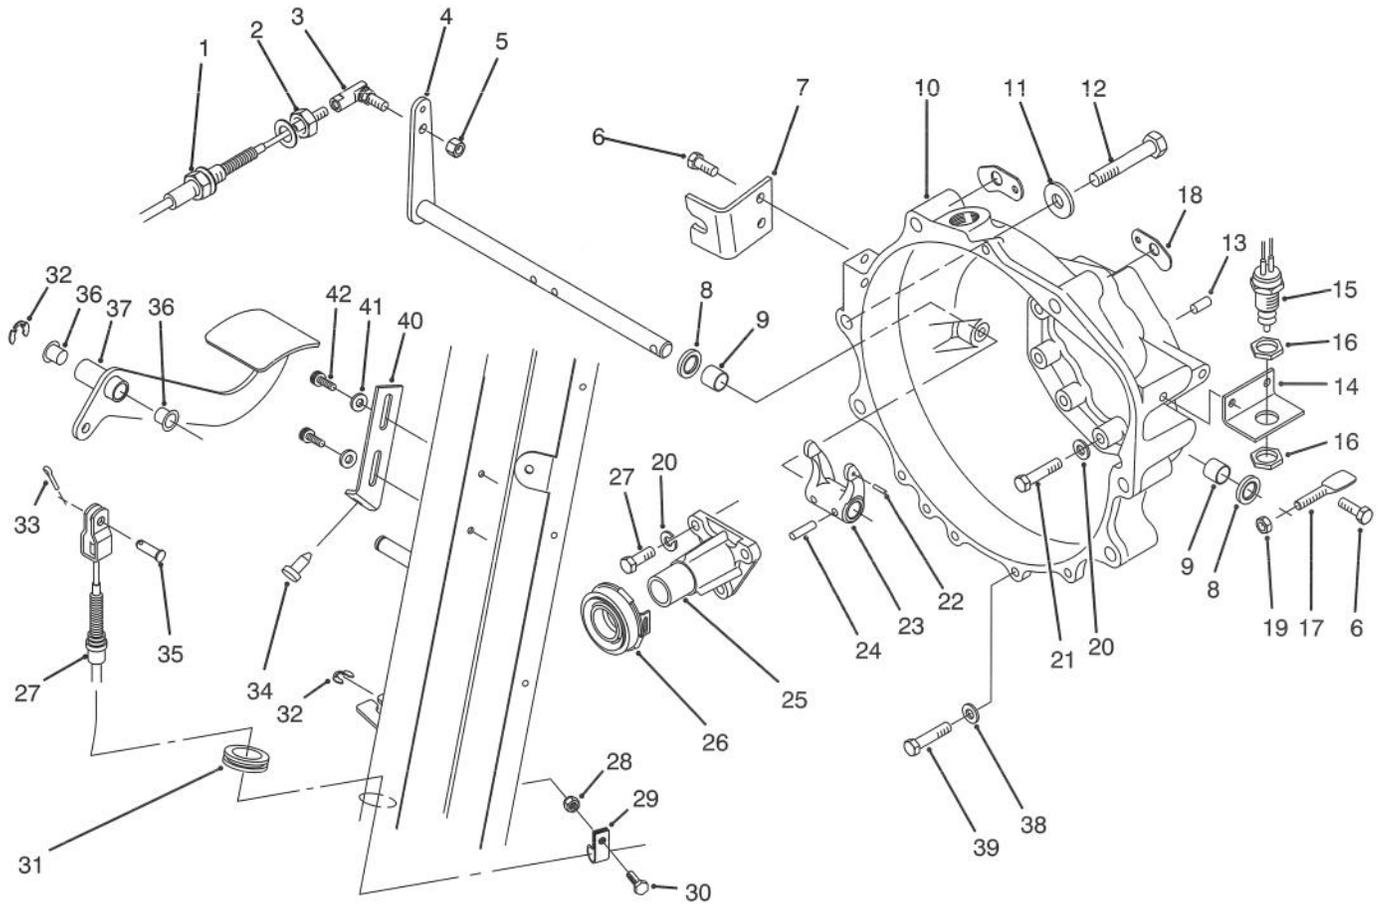


T-1658

## CLUTCH LINKAGE ASSEMBLY

| Ref. No. | Part No. | Description          | No. Used |
|----------|----------|----------------------|----------|
| 1        | 66-3160  | Screw - Cap Hex. Hd. | 2        |
| 2        | 3220-2   | Nut - Jam            | 1        |
| 3        | 2411-33  | Joint - Ball         | 1        |
| 4        | 3296-4   | Nut - Lock           | 1        |
| 5        | 87-5290  | Shaft - Release      | 1        |
| 6        | 87-1920  | Seal - Shaft         | 2        |
| 7        | 87-3770  | Bushing - Sleeve     | 2        |
| 8        | 87-1900  | Housing - Bell       | 1        |
| 9        | 3253-22  | Washer - Lock        | 4        |
| 10       | 56-2150  | Screw - Cap Hex. Hd. | 4        |
| 11       | 87-1910  | Pin - Alignment      | 2        |
| 12       | 87-5360  | Lever                | 1        |
| 13       | 3296-29  | Nut - Lock           | 1        |
| 14       | 3218-20  | Nut - Jam            | 2        |
| 15       | 87-5350  | Bracket - Switch     | 1        |
| 16       | 87-5490  | Switch - Neutral     | 1        |
| 17       | 42-9850  | Washer - Lock        | 12       |
| 18       | 42-9530  | Screw - Cap Hex. Hd. | 9        |
| 19       | 32121-7  | Pin - Roll           | 1        |
| 20       | 87-5300  | Fork - Clutch        | 1        |
| 21       | 32121-24 | Pin - Roll           | 2        |
| 22       | 87-5320  | Guide - Release      | 1        |

| Ref. No. | Part No. | Description                              | No. Used |
|----------|----------|------------------------------------------|----------|
| 23       | 87-2100  | Bearing - Release                        | 1        |
| 24       | 32128-33 | Nut - Flange Lock                        | 1        |
| 25       | 2412-89  | Clamp - R                                | 1        |
| 26       | 321-4    | Screw - Cap Hex. Hd.                     | 1        |
| 27       | 48-7610  | Screw - Cap Hex. Hd.                     | 4        |
| 28       | 3253-3   | Washer - Lock                            | 4        |
| 29       | 92-1938  | Cover - Bell Housing                     | 1        |
| 30       | 92-2129  | Screw - Cap Hex. Hd.                     | 2        |
| 31       | 57-6380  | Screw - Cap Hex. Hd.                     | 3        |
| 32       | 240-5    | Grommet                                  | 1        |
| 33       | 32120-47 | Ring - E                                 | 2        |
| 34       | 87-8460  | Bumper                                   | 1        |
| 35       | 283-30   | Pin - Clevis                             | 1        |
| 36       | 87-8590  | Clutch Cable Assembly<br>(Incl. Ref. #2) | 1        |
| 37       | 3272-10  | Pin - Cotter                             | 1        |
| 38       | 256-257  | Bushing - Flange                         | 2        |
| 39       | 87-2610  | Pin - Cotter                             | 1        |
| 40       | 87-6620  | Screw - Torx Pan Hd.                     | 2        |
| 41       | 3256-22  | Washer - Flat                            | 2        |
| 42       | 87-8710  | Tab - Clutch                             | 1        |
| 43       | 87-8480  | Bracket - Clutch                         | 1        |

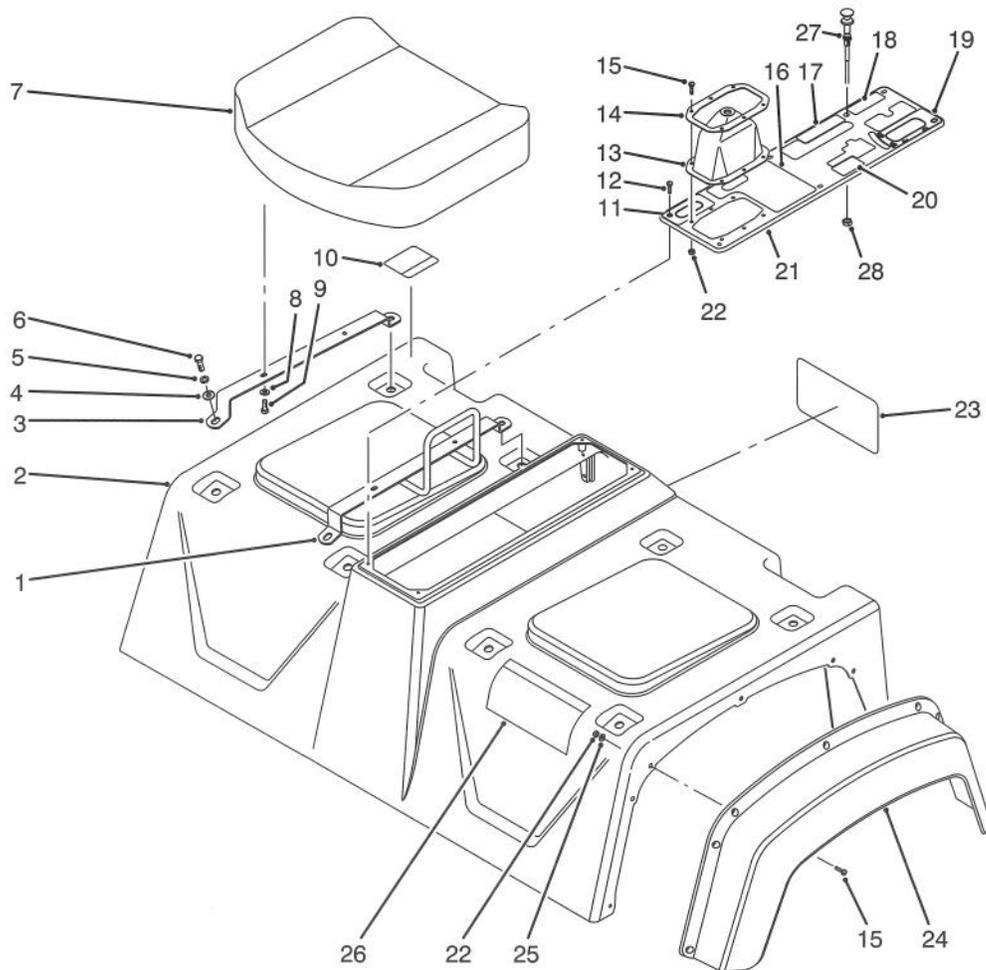


T-1589

## SEAT BASE ASSEMBLY

| Ref. No. | Part No. | Description                             | No. Used | Ref. No. | Part No. | Description                                        | No. Used |
|----------|----------|-----------------------------------------|----------|----------|----------|----------------------------------------------------|----------|
| 1        | 87-6890  | Hold - Hand                             | 1        | 14       | 87-3760  | Plate - Shift Boot                                 | 1        |
| 2        | 87-7070  | Skirt Assembly<br>(Incl. Ref. #10 & 26) | 1        | 15       | 3250-13  | Screw - Hex. Hd.                                   | 20       |
| 3        | 87-3800  | Bracket - Seat Bottom                   | 3        | ‡16      | 87-5970  | Decal - PTO                                        | 1        |
| 4        | 3256-23  | Washer - Flat                           | 8        | ‡17      | 87-6000  | Decal - Differential Lock                          | 1        |
| 5        | 3253-4   | Washer - Lock                           | 8        | ‡18      | 92-2609  | Decal - Remote Hydraulics                          | 1        |
| 6        | 322-5    | Screw - Cap Hex. Hd.                    | 8        | ‡19      | 87-6010  | Decal - Dump Hydraulics                            | 1        |
| 7        | 87-5060  | Cushion - Seat Bottom                   | 2        | ‡20      | 87-6020  | Decal - Parking Brake                              | 1        |
| 8        | 3256-22  | Washer - Flat                           | 8        | 21       | 87-8080  | Console Plate Assembly<br>(Incl. Ref. #11 & 16-20) | 1        |
| 9        | 321-4    | Screw - Cap Hex. Hd.                    | 8        | 22       | 3296-2   | Nut - Lock                                         | 20       |
| ‡10      | 87-5930  | Decal - Caution                         | 1        | ‡23      | 87-9060  | Decal - Quick Reference                            | 1        |
| ‡11      | 87-5960  | Decal - Axle Range                      | 1        | 24       | 87-2150  | Fender - Front                                     | 2        |
| 12       | 32144-52 | Screw - Hex. Hd.                        | 6        | 25       | 3256-61  | Washer - Flat                                      | 14       |
| 13       | 87-8620  | Boot - Shift                            | 1        | ‡26      | 87-5920  | Decal - Danger                                     | 1        |

‡For different language versions of this part, see International Decal Cross Reference.

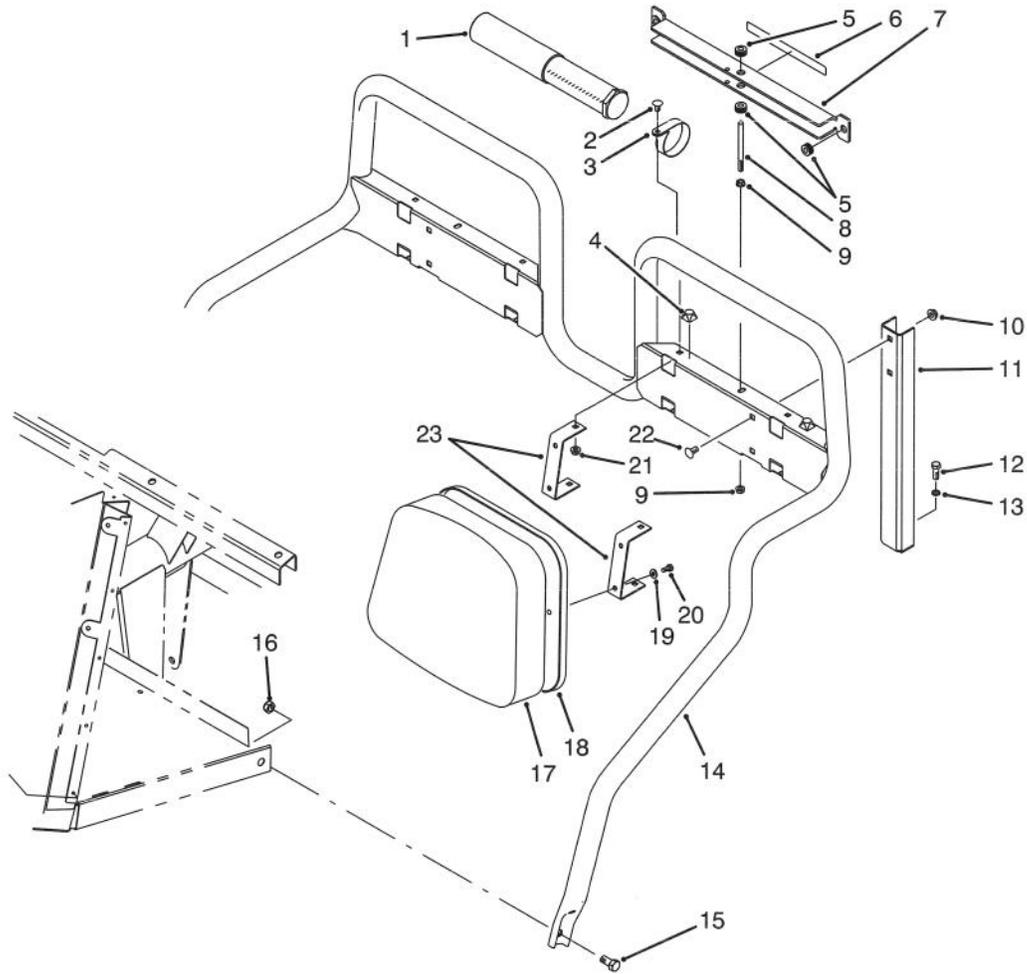


T-1779

## SEAT BACK ASSEMBLY

| Ref. No. | Part No. | Description                                 | No. Used |
|----------|----------|---------------------------------------------|----------|
| 1        | 74-0720  | Tube - Manual                               | 1        |
| 2        | 3230-18  | Bolt - Carriage                             | 2        |
| 3        | 2412-133 | Clamp - R                                   | 2        |
| 4        | 111071   | Bumper                                      | 2        |
| 5        | 92-5972  | Grommet                                     | 4        |
| ‡6       | 87-7930  | Decal - Danger                              | 1        |
| 7        | 87-7950  | Bed Support Assembly<br>(Incl. Ref. #5 & 6) | 1        |
| 8        | 87-7940  | Stud                                        | 1        |
| 9        | 32128-44 | Nut - Flange Lock                           | 2        |
| 10       | 3290-357 | Nut - Flange Lock                           | 4        |
| 11       | 87-2510  | Bracket - Seat Frame                        | 2        |

| Ref. No. | Part No. | Description          | No. Used |
|----------|----------|----------------------|----------|
| 12       | 323-6    | Screw - Cap Hex. Hd. | 2        |
| 13       | 3253-21  | Washer - Lock        | 2        |
| 14       | 87-6170  | Frame - Seat         | 1        |
| 15       | 325-4    | Screw - Cap Hex. Hd. | 2        |
| 16       | 3296-23  | Nut - Lock           | 2        |
| 17       | 87-6290  | Cushion - Seat Back  | 2        |
| 18       | 87-6280  | Plate - Seat Back    | 2        |
| 19       | 3256-22  | Washer - Flat        | 8        |
| 20       | 321-4    | Screw - Cap Hex. Hd. | 8        |
| 21       | 32128-20 | Nut - Flange Lock    | 8        |
| 22       | 3231-21  | Bolt - Carriage      | 4        |
| 23       | 87-6240  | Bracket - Seat Back  | 4        |

‡For different language versions of this part, see International Decal Cross Reference.

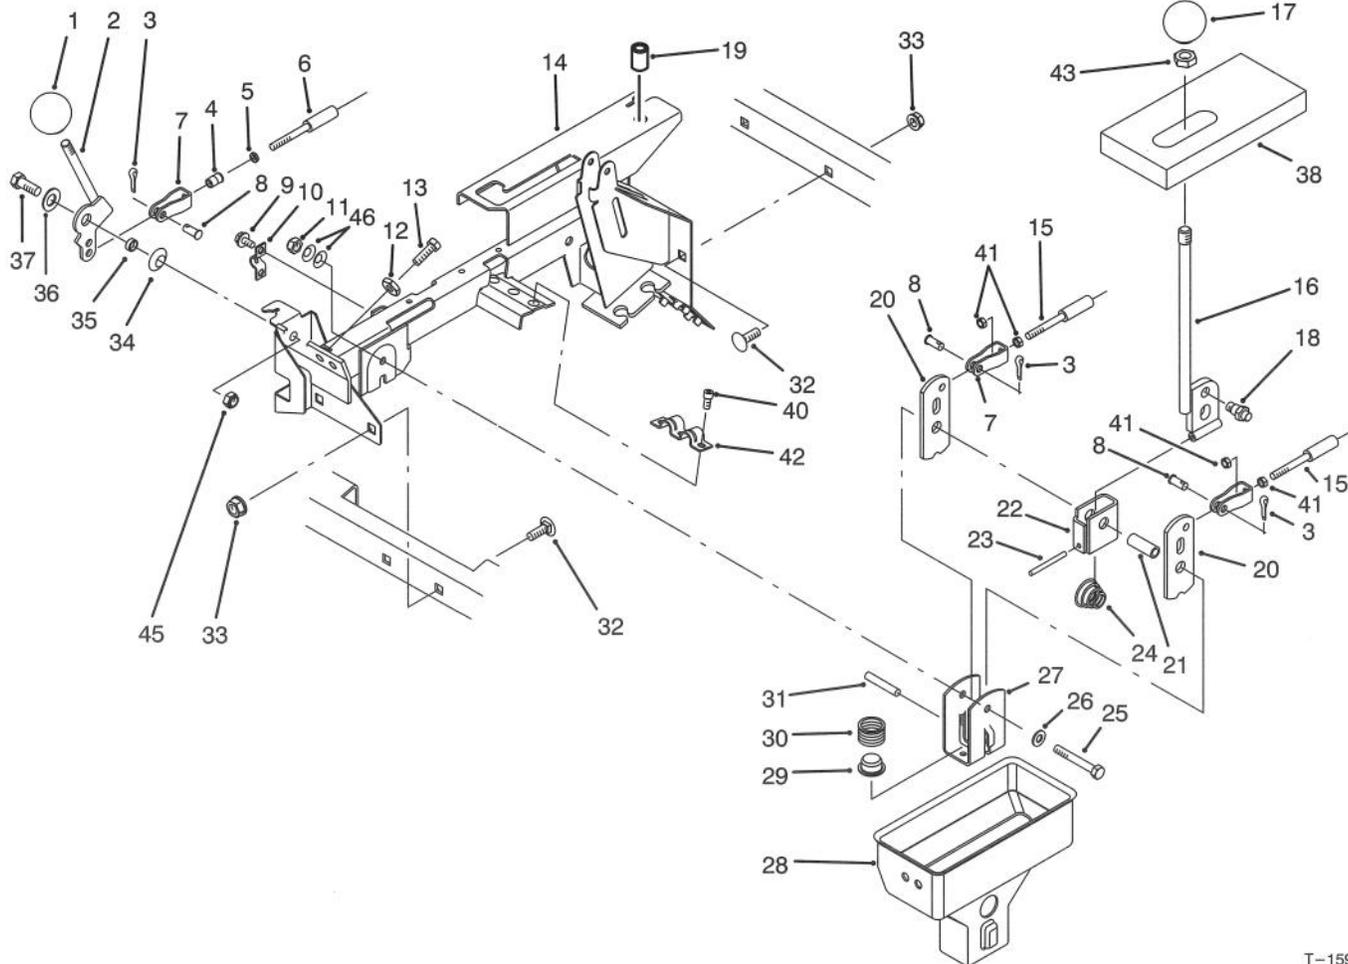


T-1590

## HI-LO & SHIFT LEVER ASSEMBLIES

| Ref. No. | Part No. | Description                                 | No. Used |
|----------|----------|---------------------------------------------|----------|
| 1        | 233-37   | Knob                                        | 1        |
| 2        | 87-4350  | Lever - Hi-Lo                               | 1        |
| 3        | 3272-6   | Pin - Cotter                                | 3        |
| 4        | 32148-15 | Insert - Threaded                           | 1        |
| 5        | 3219-14  | Nut                                         | 1        |
| 6        | 87-4420  | Hi-Lo Cable Assembly<br>(Incl. Ref. #5)     | 1        |
| 7        | 87-7160  | Assembly - Clevis, Cable<br>(Incl. Ref. #4) | 1        |
| 8        | 283-62   | Pin - Clevis                                | 3        |
| 9        | 32144-4  | Screw - Hex. Washer Hd.                     | 2        |
| 10       | 87-4340  | Clamp - Cable                               | 1        |
| 11       | 32128-25 | Nut - Lock                                  | 2        |
| 12       | 3220-3   | Nut - Jam                                   | 2        |
| 13       | 3211-8   | Screw - Cap Hex. Hd.                        | 2        |
| 14       | 87-8110  | Lever Support Assembly<br>(Incl. Ref. #19)  | 1        |
| 15       | 87-4260  | Cable Assembly<br>(Incl. Ref. #41)          | 2        |
| 16       | 87-2040  | Lever - Shift                               | 1        |
| 17       | 87-6720  | Knob                                        | 1        |
| 18       | 87-3650  | Pin - Shift                                 | 1        |
| 19       | 32148-7  | Nut - Clinch                                | 2        |
| 20       | 87-3540  | Link - Shift                                | 2        |

| Ref. No. | Part No. | Description             | No. Used |
|----------|----------|-------------------------|----------|
| 21       | 87-2520  | Tube - Pivot            | 1        |
| 22       | 87-6040  | Bracket - Shifter       | 1        |
| 23       | 32121-48 | Pin - Roll              | 1        |
| 24       | 87-2900  | Spring - Compression    | 1        |
| 25       | 322-12   | Screw - Cap Hex. Hd.    | 1        |
| 26       | 87-8640  | Washer - Flat           | 1        |
| 27       | 87-3520  | Clevis                  | 1        |
| 28       | 87-2260  | Boot - Shift Lower      | 1        |
| 29       | 87-3530  | Button - Shifter        | 1        |
| 30       | 87-3660  | Spring - Compression    | 1        |
| 31       | 3290-507 | Pin - Dowel             | 1        |
| 32       | 3231-21  | Bolt - Carriage         | 4        |
| 33       | 3290-357 | Nut - Flange Lock       | 4        |
| 34       | 3290-221 | Washer - Spring         | 1        |
| 35       | 76-9100  | Spacer - Hi-Lo Lever    | 1        |
| 36       | 49-9150  | Washer - Flat           | 1        |
| 37       | 323-6    | Screw - Cap Hex. Hd.    | 1        |
| 38       | 87-6570  | Foam - Seal             | 1        |
| 40       | 65-5220  | Screw - Hex. Socket Hd. | 3        |
| 41       | 3220-1   | Nut - Jam               | 4        |
| 42       | 87-4960  | Clamp - Cable           | 1        |
| 43       | 3218-18  | Nut - Jam               | 1        |
| 45       | 3296-39  | Nut - Lock              | 1        |
| 46       | 3290-456 | Washer - Belleville     | 2        |


3316-557

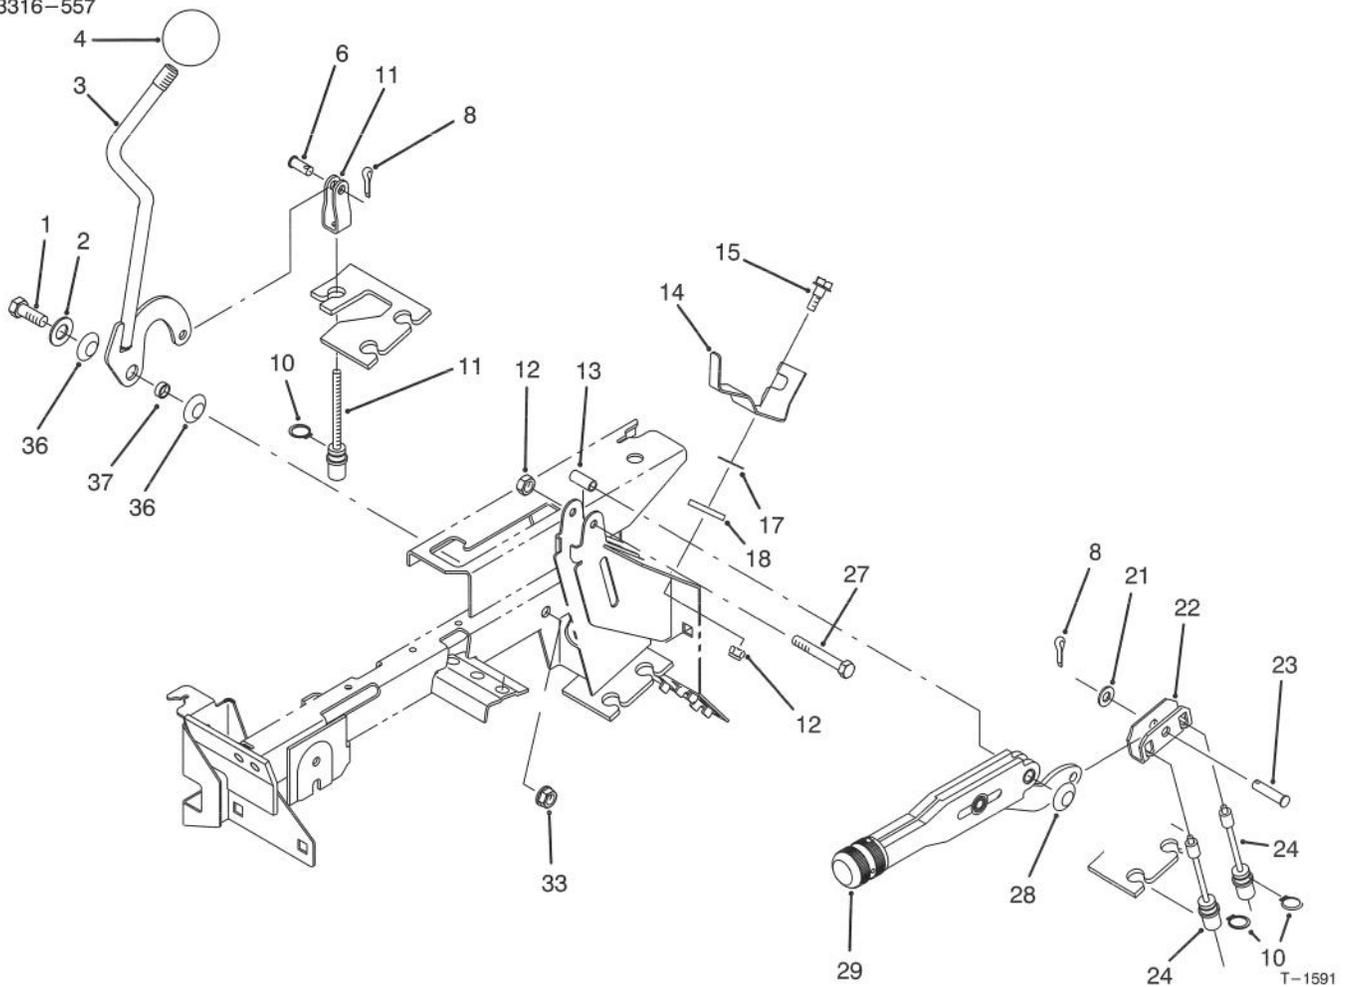

## DIFFERENTIAL LOCK & PARKING BRAKE ASSEMBLIES

| Ref. No. | Part No. | Description               | No. Used |
|----------|----------|---------------------------|----------|
| 1        | 323-6    | Screw - Cap Hex. Hd.      | 1        |
| 2        | 49-9150  | Washer - Flat             | 1        |
| 3        | 87-5030  | Lever - Differential Lock | 1        |
| 4        | 233-48   | Knob                      | 1        |
| 6        | 283-62   | Pin - Clevis              | 1        |
| 8        | 3272-10  | Pin - Cotter              | 1        |
| 10       | 32120-47 | Ring - Retaining          | 3        |
| 11       | 87-4460  | Differential Lock Cable   | 1        |
| 12       | 3296-42  | Nut - Lock                | 1        |
| 13       | 87-4710  | Spacer - Barking Brake    | 1        |
| 14       | 87-6640  | Lever - Dump Stop         | 1        |
| 15       | 42-3560  | Screw - Shoulder          | 1        |

| Ref. No. | Part No. | Description             | No. Used |
|----------|----------|-------------------------|----------|
| 17       | 3290-478 | Washer - Belleville     | 1        |
| 18       | 71-5320  | Washer - Flat           | 1        |
| 21       | 3256-23  | Washer - Flat           | 1        |
| 22       | 87-3480  | Plate - Brake Equalizer | 1        |
| 23       | 283-14   | Pin - Clevis            | 1        |
| 24       | 87-8240  | Cable - Parking Brake   | 2        |
| 27       | 321-9    | Screw - Cap Hex. Hd.    | 1        |
| 28       | 3290-477 | Washer - Curved         | 1        |
| 29       | 87-2710  | Lever - Parking Brake   | 1        |
| 33       | 3296-39  | Nut - Lock              | 1        |
| 36       | 3290-221 | Washer - Spring         | 2        |
| 37       | 76-2290  | Spacer                  | 1        |

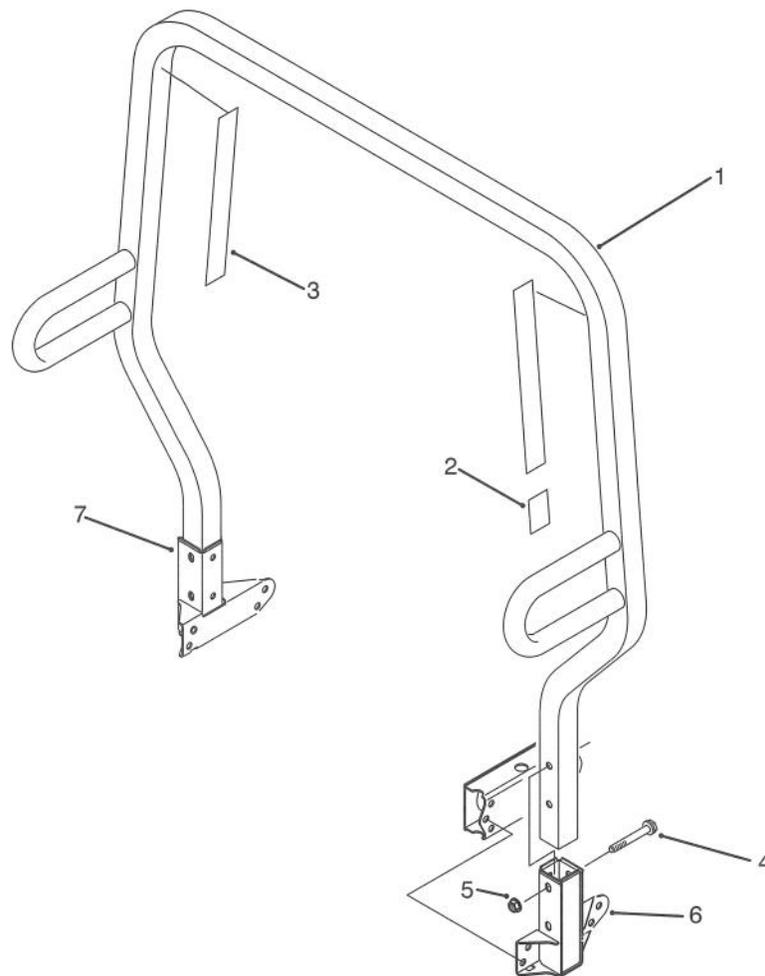


T-1592

## R.O.P.S. ASSEMBLY

| Ref. No. | Part No. | Description                                       | No. Used | Ref. No. | Part No. | Description             | No. Used |
|----------|----------|---------------------------------------------------|----------|----------|----------|-------------------------|----------|
| 1        | 87-7090  | Assembly – Frame, R.O.P.S.<br>(Incl. Ref. #2 & 3) | 1        | 4        | 3234-40  | Screw – Hex. Flange Hd. | 4        |
| ‡2       | 87-5940  | Decal – Rollover                                  | 1        | 5        | 32128-23 | Nut – Flange Lock       | 4        |
| ‡3       | 87-5980  | Decal – ROPS                                      | 2        | 6        | 87-6950  | Receiver – LH           | 1        |
|          |          |                                                   |          | 7        | 87-6960  | Receiver – RH           | 1        |

‡For different language versions of this part, see International Decal Cross Reference.

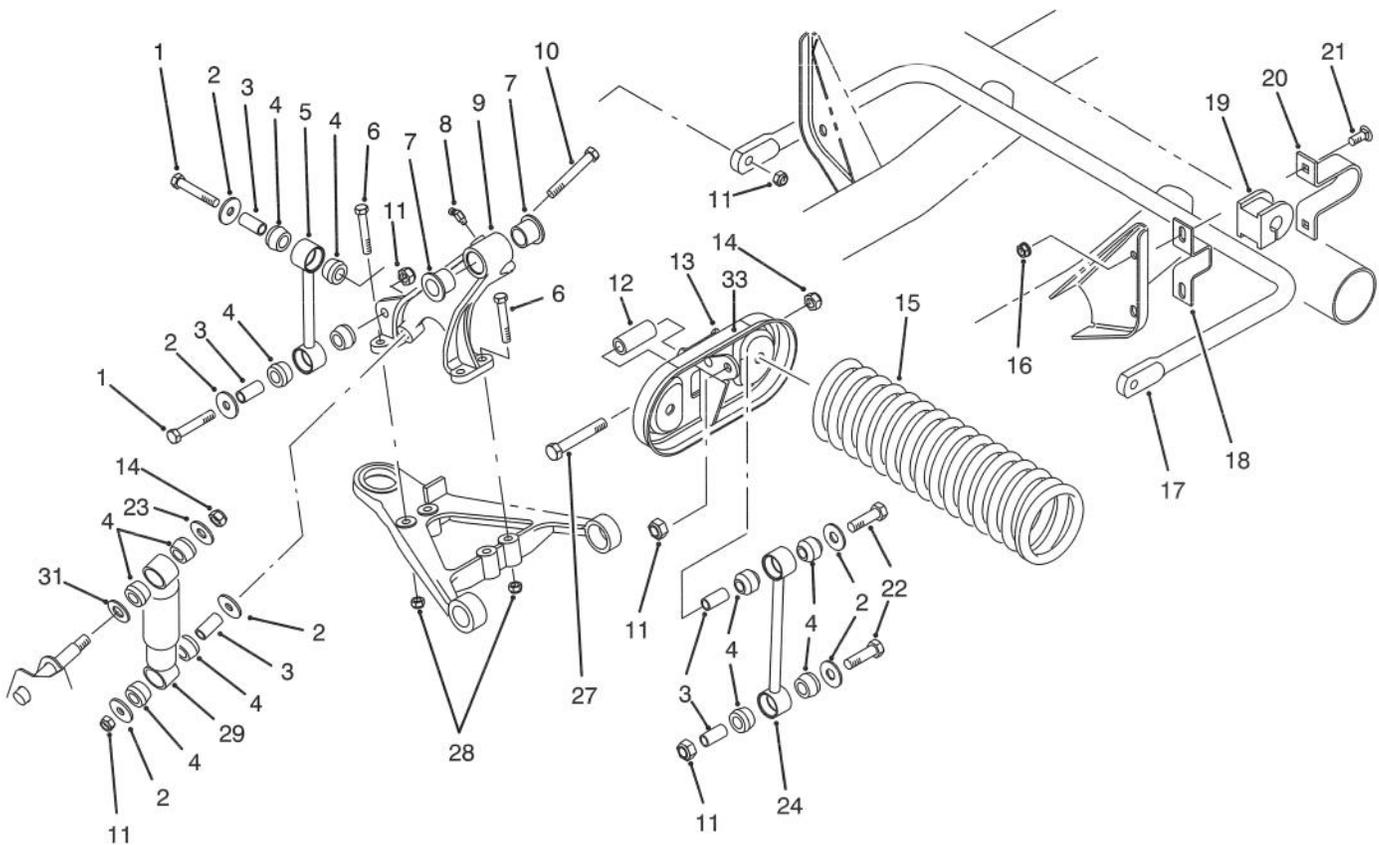

T-1593


## FRONT SUSPENSION ASSEMBLY

| Ref. No. | Part No. | Description                                   | No. Used |
|----------|----------|-----------------------------------------------|----------|
| 1        | 324-10   | Screw - Cap Hex. Hd.                          | 4        |
| 2        | 87-5330  | Washer                                        | 8        |
| 3        | 87-3600  | Spacer                                        | 10       |
| 4        | 87-3920  | Bushing - Rubber                              | 16       |
| 5        | 87-3860  | Link - Anti-Sway Bar                          | 2        |
| 6        | 323-12   | Screw - Cap Hex. Hd.                          | 8        |
| 7        | 33-3090  | Bushing - Flange                              | 4        |
| 8        | 302-11   | Fitting - Grease                              | 1        |
| 9        | 87-0150  | Tower - Control Arm RH                        | 1        |
| *        | 87-0160  | Tower - Control Arm LH                        | 1        |
| 10       | 324-13   | Screw - Cap Hex. Hd.                          | 2        |
| 11       | 3296-48  | Nut - Lock                                    | 10       |
| 12       | 87-2500  | Sleeve - Spring Pivot                         | 2        |
| 13       | 87-7150  | Assembly - Cradle, Spring<br>(Incl. Ref. #33) | 2        |
| 14       | 3296-23  | Nut - Lock                                    | 4        |

| Ref. No. | Part No. | Description             | No. Used |
|----------|----------|-------------------------|----------|
| 15       | 87-0690  | Spring - Compression    | 2        |
| 16       | 3290-357 | Nut - Flange Lock       | 4        |
| 17       | 87-3850  | Bar - Anti-Sway         | 1        |
| 18       | 87-3890  | Bracket - Anti-Sway Bar | 2        |
| 19       | 87-3910  | Bushing - Anti-Sway Bar | 2        |
| 20       | 87-4010  | Clamp - Anti-Sway Bar   | 2        |
| 21       | 3231-3   | Bolt - Carriage         | 4        |
| 22       | 324-9    | Screw - Cap Hex. Hd.    | 4        |
| 24       | 87-2480  | Link - Stabilizer       | 2        |
| 27       | 325-13   | Screw - Cap Hex. Hd.    | 4        |
| 28       | 3296-39  | Nut - Lock              | 8        |
| 29       | 87-3110  | Absorber - Shock        | 2        |
| 31       | 3256-27  | Washer - Flat           | 2        |
| 32       | 3256-6   | Washer - Flat           | 2        |
| ‡33      | 44-0760  | Decal - Warning         | 2        |

\*Not Illustrated

‡For different language versions of this part, see International Decal Cross Reference.

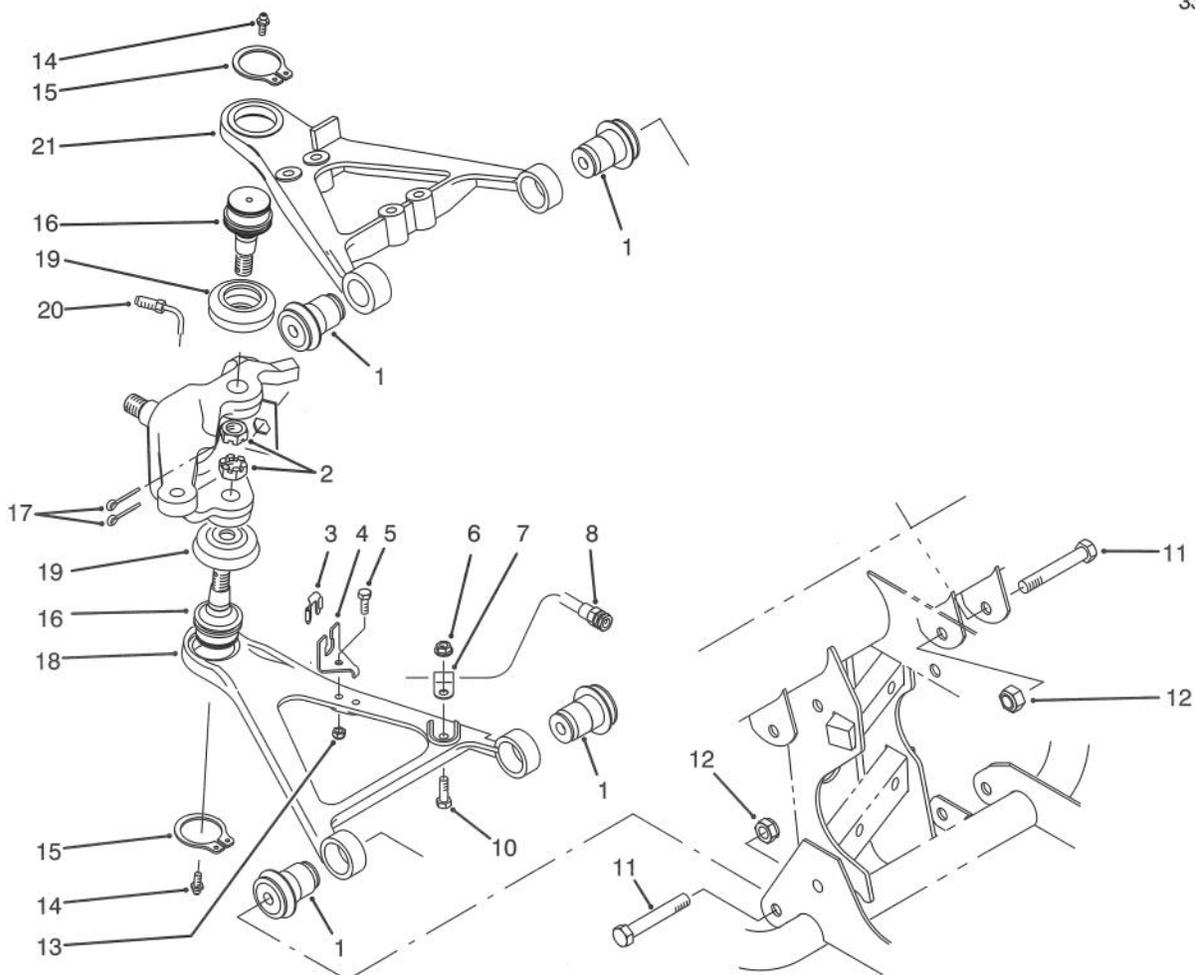


T-1594

## FRONT SUSPENSION CONTROL ARM ASSEMBLY

| Ref. No. | Part No. | Description           | No. Used |
|----------|----------|-----------------------|----------|
| 1        | 87-1450  | Bushing - Rubber      | 8        |
| 2        | 32136-2  | Nut - Slotted         | 2        |
| 3        | 87-3580  | Retainer - Brake Hose | 2        |
| 4        | 87-2870  | Bracket - Brake Hose  | 2        |
| 5        | 321-6    | Screw - Cap Hex. Hd.  | 2        |
| 6        | 32128-20 | Nut - Flange Lock     | 2        |
| 7        | 2412-10  | Clamp - R             | 2        |
| 8        | 87-2780  | Hose - Brake Front    | 2        |
| 10       | 322-5    | Screw - Cap Hex. Hd.  | 2        |
| 11       | 325-13   | Screw - Cap Hex. Hd   | 8        |
| 12       | 3296-23  | Nut - Flange Lock     | 8        |
| 13       | 3296-42  | Nut - Lock            | 2        |

| Ref. No. | Part No.  | Description            | No. Used |
|----------|-----------|------------------------|----------|
| 14       | 302-5     | Fitting - Grease       | 4        |
| 15       | 32151-104 | Ring - Snap            | 4        |
| 16       | 87-1430   | Joint - Ball           | 4        |
| 17       | 3272-12   | Pin - Cotter           | 4        |
| 18       | 87-0210   | Arm - Control Lower RH | 1        |
| *        | 87-0220   | Arm - Control Lower LH | 1        |
| 19       | 87-2420   | Boot                   | 4        |
| 20       | 87-2800   | Tube - Brake RH        | 1        |
| *        | 87-2790   | Tube - Brake LH        | 1        |
| 21       | 87-0170   | Arm - Control Upper RH | 1        |
| *        | 87-0180   | Arm - Control Upper LH | 1        |

\*Not Illustrated

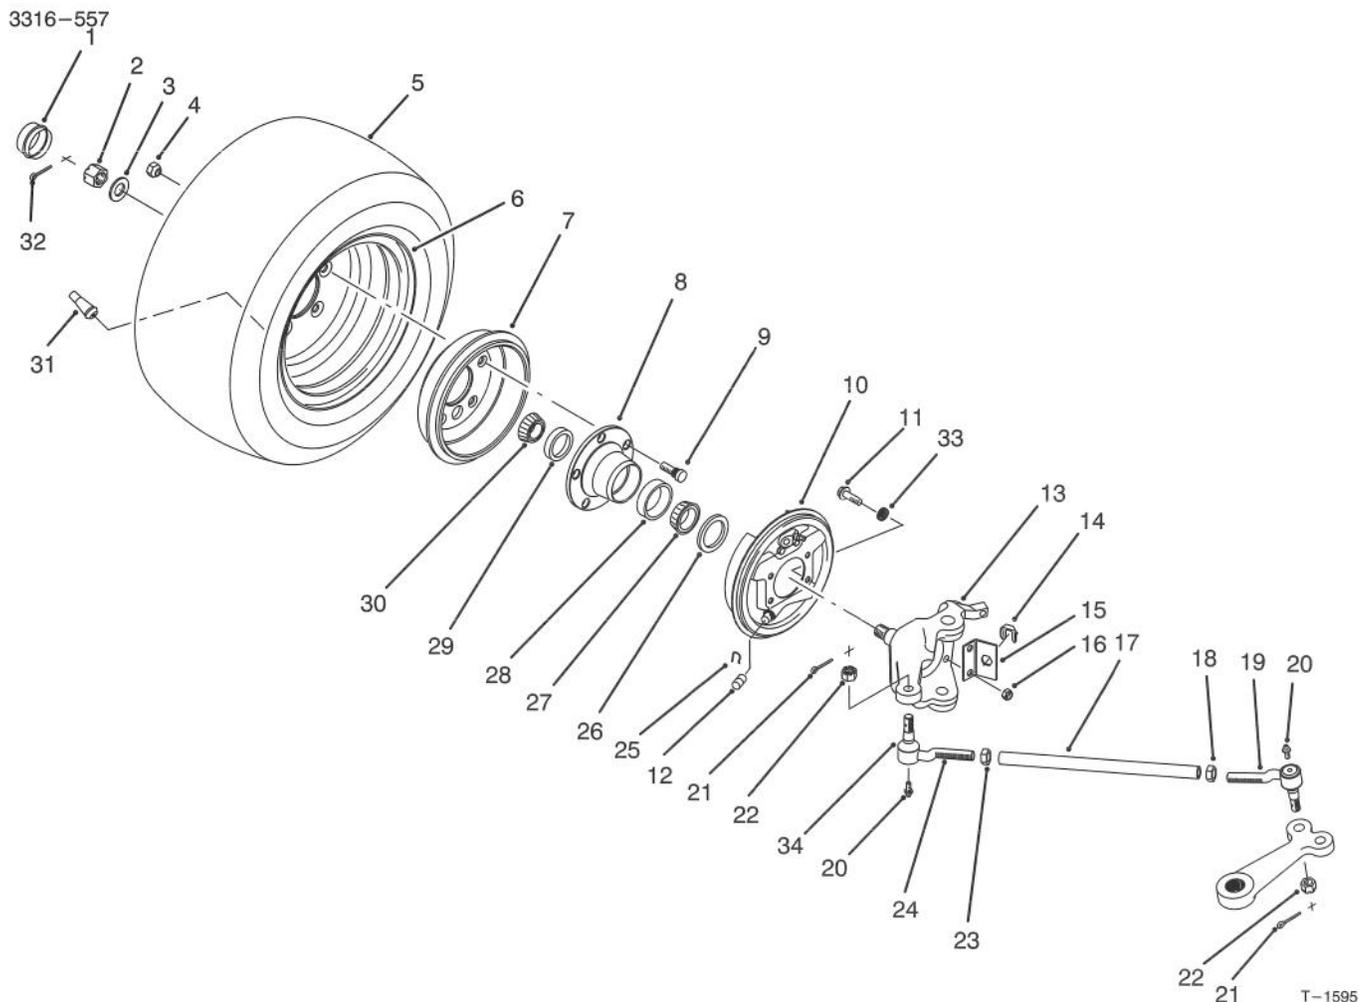


## FRONT WHEEL ASSEMBLY

| Ref. No. | Part No. | Description             | No. Used |
|----------|----------|-------------------------|----------|
| 1        | 241-119  | Cap Dust                | 2        |
| 2        | 32136-5  | Nut Slotted             | 2        |
| 3        | 3256-28  | Washer - Flat           | 2        |
| 4        | 23-7270  | Nut - Lug               | 10       |
| 5        | 87-3300  | Tire                    | 2        |
| 6        | 87-5720  | Rim                     | 2        |
| 7        | 87-0270  | Drum - Brake            | 2        |
| 8        | 87-5560  | Hub - Wheel             | 2        |
| 9        | 87-8730  | Stud - Drive            | 10       |
| 10       | 87-3010  | Brake Assembly - RH     | 1        |
| *        | 87-3020  | Brake Assembly - LH     | 1        |
| 11       | 323-8    | Screw - Hex. Flange Hd. | 8        |
| 12       | 87-3450  | Plug                    | 2        |
| 13       | 87-5520  | Spindle - RH            | 1        |
| *        | 87-5540  | Spindle - LH            | 1        |
| 14       | 87-3580  | Retainer                | 2        |
| 15       | 87-2820  | Bracket - Hose          | 2        |
| 16       | 3296-39  | Nut - Lock              | 8        |
| 17       | 87-2410  | Rod - Tie               | 2        |
| 18       | 3218-21  | Nut - Jam               | 2        |

| Ref. No. | Part No. | Description                                           | No. Used |
|----------|----------|-------------------------------------------------------|----------|
| 19       | 87-1470  | Rod End Assy. - LH Thread<br>(Incl. Ref. #20-22 & 34) | 2        |
| 20       | 302-5    | Fitting - Grease                                      | 4        |
| 21       | 3272-12  | Pin - Cotter                                          | 4        |
| 22       | 32136-3  | Nut - Slotted                                         | 4        |
| 23       | 3220-11  | Nut - Jam                                             | 2        |
| 24       | 87-1480  | Rod End Assy. - RH Thread<br>(Incl. Ref. #20-22 & 34) | 2        |
| 25       | 87-3310  | Clip - Brake Cable                                    | 2        |
| 26       | 87-3590  | Seal - Bearing                                        | 2        |
| 27       | 254-106  | Cone - Bearing                                        | 2        |
| 28       | 254-107  | Cup - Bearing                                         | 2        |
| 29       | 254-72   | Cup - Bearing                                         | 2        |
| 30       | 254-94   | Cone - Bearing                                        | 2        |
| 31       | 232-27   | Stem - Valve                                          | 2        |
| 32       | 3272-12  | Pin - Cotter                                          | 2        |
| 33       | 3253-21  | Washer - Lock                                         | 4        |
| 34       |          | Seal - Rod End                                        | 4        |
| *        | 87-5340  | Seal Kit - Tie Rod End<br>(Incl. Ref. #20-22 & 34)    | 4        |

\*Not Illustrated

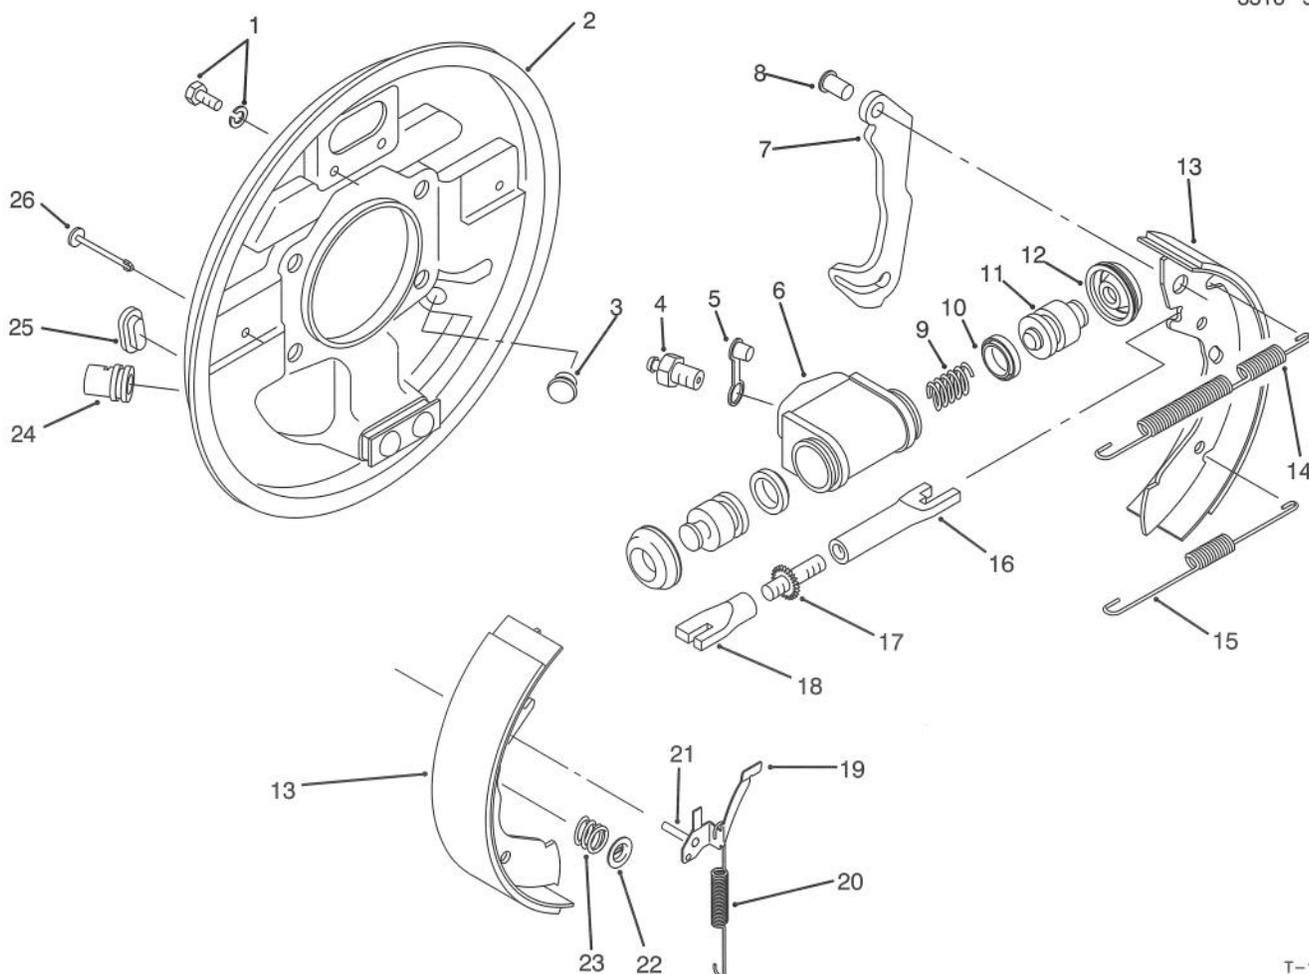


T-1596

## FRONT BRAKE ASSEMBLY

| Ref. No. | Part No. | Description                               | No. Used |
|----------|----------|-------------------------------------------|----------|
| 1        | 92-4135  | Set Bolt                                  | 2        |
| 2        | 92-4115  | Backplate Assembly LH<br>(Incl. Ref. #24) | 1        |
| *        | 92-4116  | Backplate Assembly RH<br>(Incl. Ref. #24) | 1        |
| 3        | 92-4125  | Plug                                      | 1        |
| 4        | 92-4113  | Screw - Bleed                             | 1        |
| 5        | 92-4114  | Cap - Bleed Screw                         | 1        |
| 6        |          | Body                                      | 1        |
| 7        |          | Lever - Operating LH/RH                   | 1        |
| 8        |          | Pin                                       | 1        |
| 9        |          | Spring                                    | 1        |
| 10       |          | Seal - 'L' Type                           | 2        |
| 11       |          | Piston                                    | 2        |
| 12       |          | Cover - Dust                              | 2        |
| 13       | 92-4120  | Shoe & Lining Set<br>(Incl. Ref. #7 & 8)  | 1        |
| 14       | 92-4126  | Spring - Shoe, Upper LH                   | 1        |
| *        | 92-4127  | Spring - Shoe, Upper RH                   | 1        |
| 15       | 92-4128  | Spring - Shoe, Lower                      | 1        |
| 16       |          | Pushrod - Female LH                       | 1        |
| *        |          | Pushrod - Female RH                       | 1        |
| 17       |          | Bolt - Adjuster                           | 1        |
| 18       |          | Sleeve - Adjuster                         | 1        |

| Ref. No. | Part No. | Description                                           | No. Used |
|----------|----------|-------------------------------------------------------|----------|
| 19       | 92-4123  | Assembly - Pawl LH<br>(Incl. Ref. #21)                | 1        |
| *        | 92-4124  | Assembly - Pawl RH<br>(Incl. Ref. #21)                | 1        |
| 20       | 92-4129  | Spring - Adjuster, LH                                 | 1        |
| *        | 92-4130  | Spring - Adjuster, RH                                 | 1        |
| 21       |          | Pin - Pawl                                            | 1        |
| 22       | 92-4131  | Washer - Hold Down                                    | 2        |
| 23       | 92-4132  | Spring - Hold Down                                    | 2        |
| 24       |          | Guide - Pipe                                          | 1        |
| 25       | 92-4134  | Plug - Inspection                                     | 1        |
| 26       | 92-4133  | Pin - Hold Down                                       | 2        |
| *        | 92-4121  | Assembly - Adjuster LH<br>(Incl. Ref. #16-18)         | 1        |
| *        | 92-4122  | Assembly - Adjuster RH<br>(Incl. Ref. #16-18)         | 1        |
| *        | 92-4117  | Assy. - Wheel Cylinder LH<br>(Incl. Ref. #4-6 & 9-12) | 1        |
| *        | 92-4118  | Assy. - Wheel Cylinder RH<br>(Incl. Ref. #4-6 & 9-12) | 1        |
| *        | 92-4119  | Kit - Seal<br>(Incl. Ref. #10 & 12)                   | 1        |
| *        | 87-3010  | Front Brake Assembly - RH<br>(Complete)               | 1        |
| *        | 87-3020  | Front Brake Assembly - LH<br>(Complete)               | 1        |

\*Not Illustrated

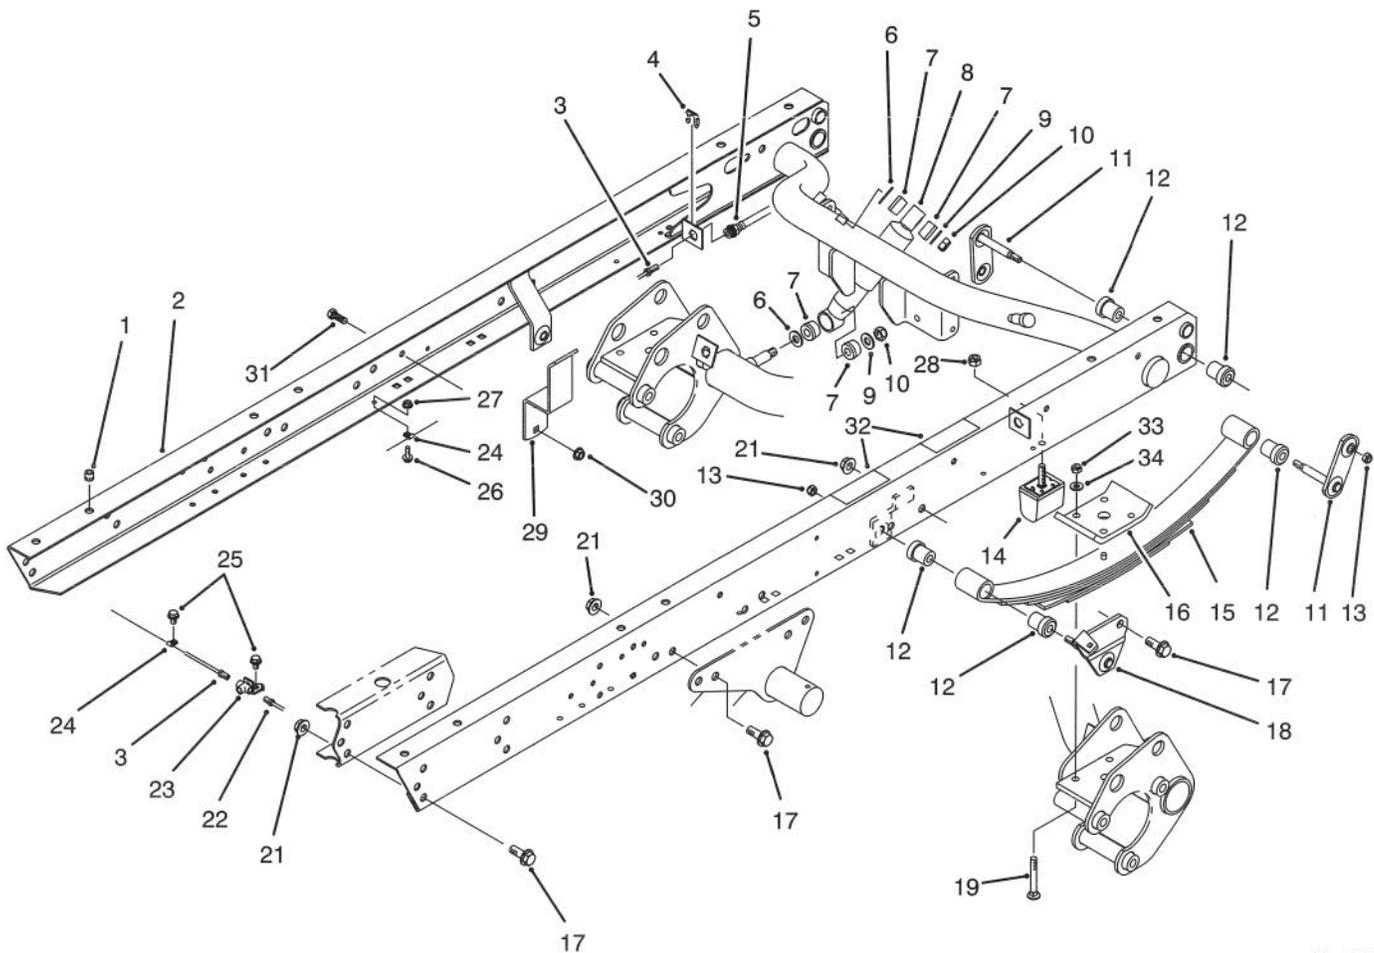

T-1597


## REAR FRAME ASSEMBLY

| Ref. No. | Part No. | Description                                   | No. Used |
|----------|----------|-----------------------------------------------|----------|
| 1        | 32148-10 | Insert - Threaded                             | 6        |
| 2        | 87-8440  | Assembly - Rear Frame<br>(Incl. Ref. #1 & 32) | 1        |
| 3        | 87-3270  | Tube - Brake RH                               | 1        |
| 4        | 87-3580  | Retainer                                      | 2        |
| 5        | 87-4100  | Hose - Brake                                  | 2        |
| 6        | 3256-27  | Washer - Flat                                 | 4        |
| 7        | 87-3920  | Bushing - Rubber                              | 8        |
| 8        | 87-3110  | Shock Absorber                                | 2        |
| 9        | 3256-6   | Washer - Flat                                 | 4        |
| 10       | 3296-23  | Nut - Lock                                    | 4        |
| 11       | 87-3980  | Shackle - Spring                              | 4        |
| 12       | 87-4760  | Bushing                                       | 12       |
| 13       | 3296-39  | Nut - Lock                                    | 6        |
| 14       | 87-3470  | Bumper - Spring                               | 2        |
| 15       | 87-1490  | Spring - Leaf                                 | 2        |
| 16       | 87-7470  | Plate - Clamp                                 | 2        |
| 17       | 3234-38  | Screw - Hex. Flange Hd.                       | 22       |

| Ref. No. | Part No. | Description               | No. Used |
|----------|----------|---------------------------|----------|
| 18       | 87-3960  | Mount - Spring LH         | 1        |
| *        | 87-3940  | Mount - Spring RH         | 1        |
| 19       | 3232-17  | Bolt - Carriage           | 8        |
| 21       | 32128-23 | Nut - Flange Lock         | 22       |
| 22       | 87-3280  | Tube - Brake LH           | 1        |
| 23       | 87-3560  | Tee - Brake Tube          | 1        |
| 24       | 2412-149 | Clamp - Tube              | 5        |
| 25       | 32104-82 | Screw - Hex. Flange Hd.   | 2        |
| 26       | 3234-4   | Screw - Hex. Flange Hd.   | 4        |
| 27       | 32128-33 | Nut - Flange Lock         | 4        |
| 28       | 48-9520  | Nut - Lock                | 2        |
| 29       | 87-6690  | Guard - Induction Chamber | 1        |
| 30       | 3290-357 | Nut - Flange Head         | 2        |
| 31       | 323-6    | Screw - Cap Hex. Hd.      | 2        |
| ‡32      | 66-6840  | Decal - Caution           | 2        |
| 33       | 3296-76  | Nut - Lock                | 8        |
| 34       | 87-7480  | Washer - Flat             | 8        |

\*Not Illustrated

‡For different language versions of this part, see International Decal Cross Reference.

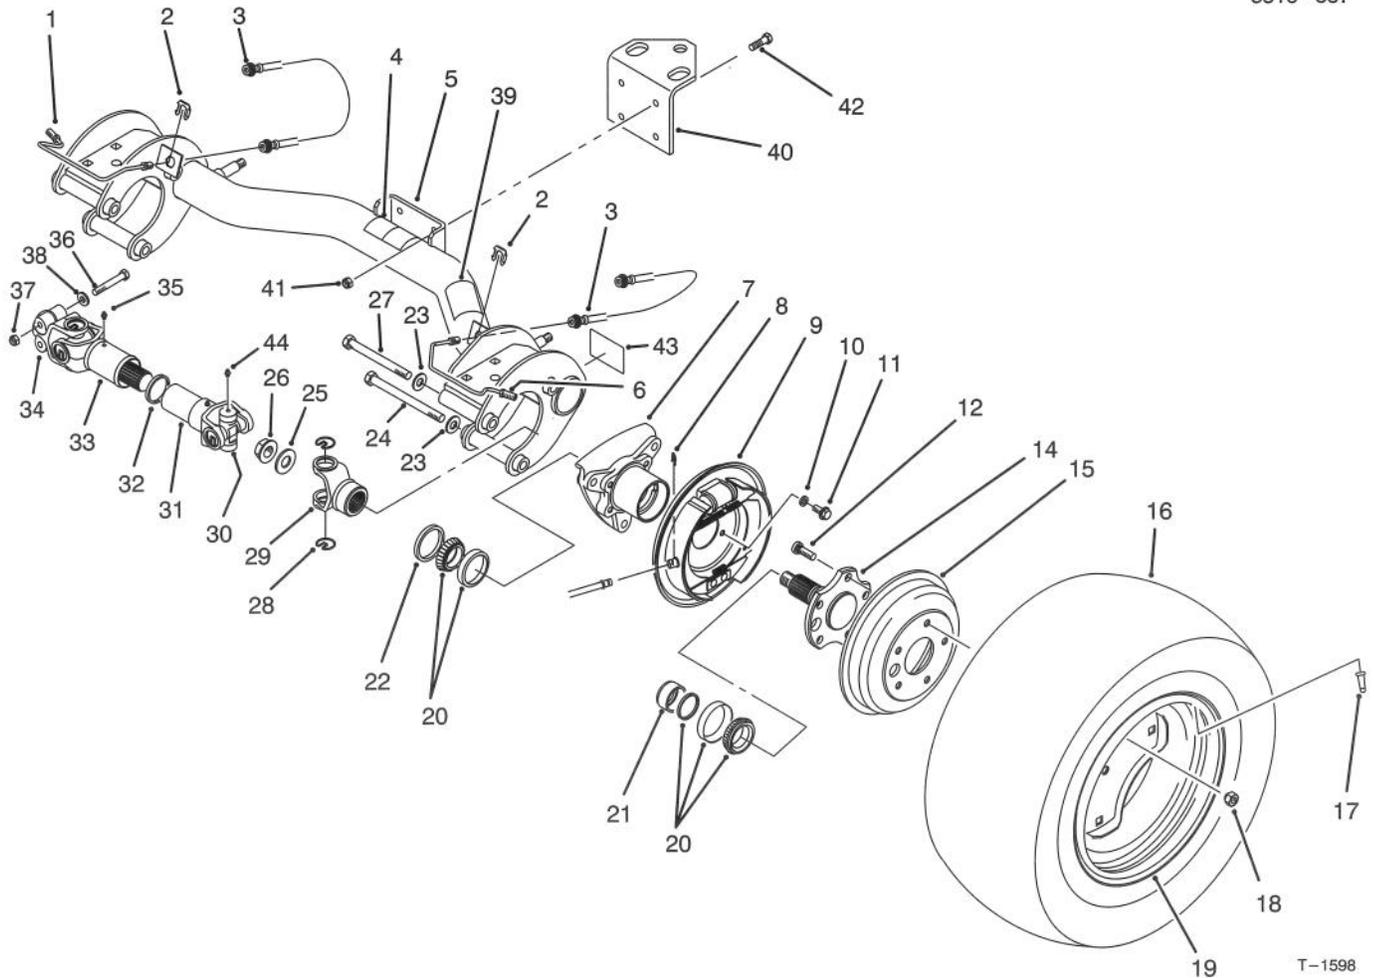


T-1598

## REAR AXLE ASSEMBLY

| Ref. No. | Part No. | Description                                       | No. Used | Ref. No. | Part No. | Description                             | No. Used |
|----------|----------|---------------------------------------------------|----------|----------|----------|-----------------------------------------|----------|
| 1        | 87-4090  | Tube - Brake RH                                   | 1        | 21       | 87-4060  | Spacer - Bearing                        | 2        |
| 2        | 87-3580  | Retainer - Brake Hose                             | 2        | 22       | 87-3590  | Seal - Bearing                          | 2        |
| 3        | 87-4100  | Hose - Brake                                      | 2        | 23       | 87-7270  | Washer - Flat                           | 6        |
| ‡4       | 87-6060  | Decal - ATF                                       | 1        | 24       | 325-20   | Screw - Cap Hex. Hd.                    | 5        |
| 5        | 87-7110  | Assembly - Axle, Rear<br>(Incl. Ref. #4, 39 & 43) | 1        | 25       | 87-3060  | Washer - Flat                           | 2        |
| 6        | 87-4080  | Tube - Brake LH                                   | 1        | 26       | 32128-53 | Nut - Flange Lock                       | 2        |
| 7        | 87-2240  | Housing - Axle                                    | 2        | 27       | 325-19   | Screw - Cap Hex. Hd.                    | 1        |
| 8        | 87-3310  | Clip - Brake Cable                                | 2        | 28       | 92-4188  | Ring - Snap                             | 16       |
| 9        | 87-3840  | Brake Assembly LH                                 | 1        | 29       | 92-4183  | Yoke - End                              | 2        |
| *        | 87-3830  | Brake Assembly RH                                 | 1        | 30       | 92-4187  | Cross & Bearing Kit                     | 4        |
| 10       | 3253-21  | Washer - Lock                                     | 8        | 31       | 92-4182  | Yoke & Hub Assembly<br>(Incl. Ref. #28) | 2        |
| 11       | 323-6    | Screw - Cap Hex. Hd.                              | 8        | 32       | 92-4180  | Seal                                    | 2        |
| 12       | 87-8730  | Stud - Drive                                      | 10       | 33       | 92-4179  | Yoke, Shaft & Seal                      | 2        |
| 14       | 87-8740  | Stub - Axle                                       | 2        | 34       | 92-4177  | Yoke - Double Clamp                     | 2        |
| 15       | 87-1840  | Drum - Brake                                      | 2        | 35       | 302-5    | Fitting - Grease                        | 4        |
| 16       | 87-6740  | Tire - Rear 24"                                   | 2        | 36       | 87-8700  | Screw - Cap Hex. Hd.                    | 4        |
| *        | 87-3290  | Tire - Rear 23"<br>(Optional)                     | 2        | 37       | 32128-36 | Nut - Lock                              | 4        |
| 17       | 232-27   | Valve - Stem                                      | 2        | 38       | 80-6990  | Washer                                  | 4        |
| 18       | 23-7270  | Nut - Lug                                         | 10       | ‡39      | 87-5990  | Decal - PTO                             | 1        |
| 19       | 87-6750  | Rim - Rear 24"                                    | 2        | 40       | 92-5951  | Angle - Hitch                           | 1        |
| *        | 87-3000  | Rim - Rear 23"<br>(Optional)                      | 2        | 41       | 3296-39  | Nut - Lock                              | 4        |
| 20       | 87-1970  | Bearing Matched Set                               | 2        | 42       | 323-7    | Screw - Cap Hex. Hd.                    | 4        |
|          |          |                                                   |          | ‡43      | 87-9080  | Decal - Grease                          | 2        |

\*Not Illustrated

‡For different language versions of this part, see International Decal Cross Reference.

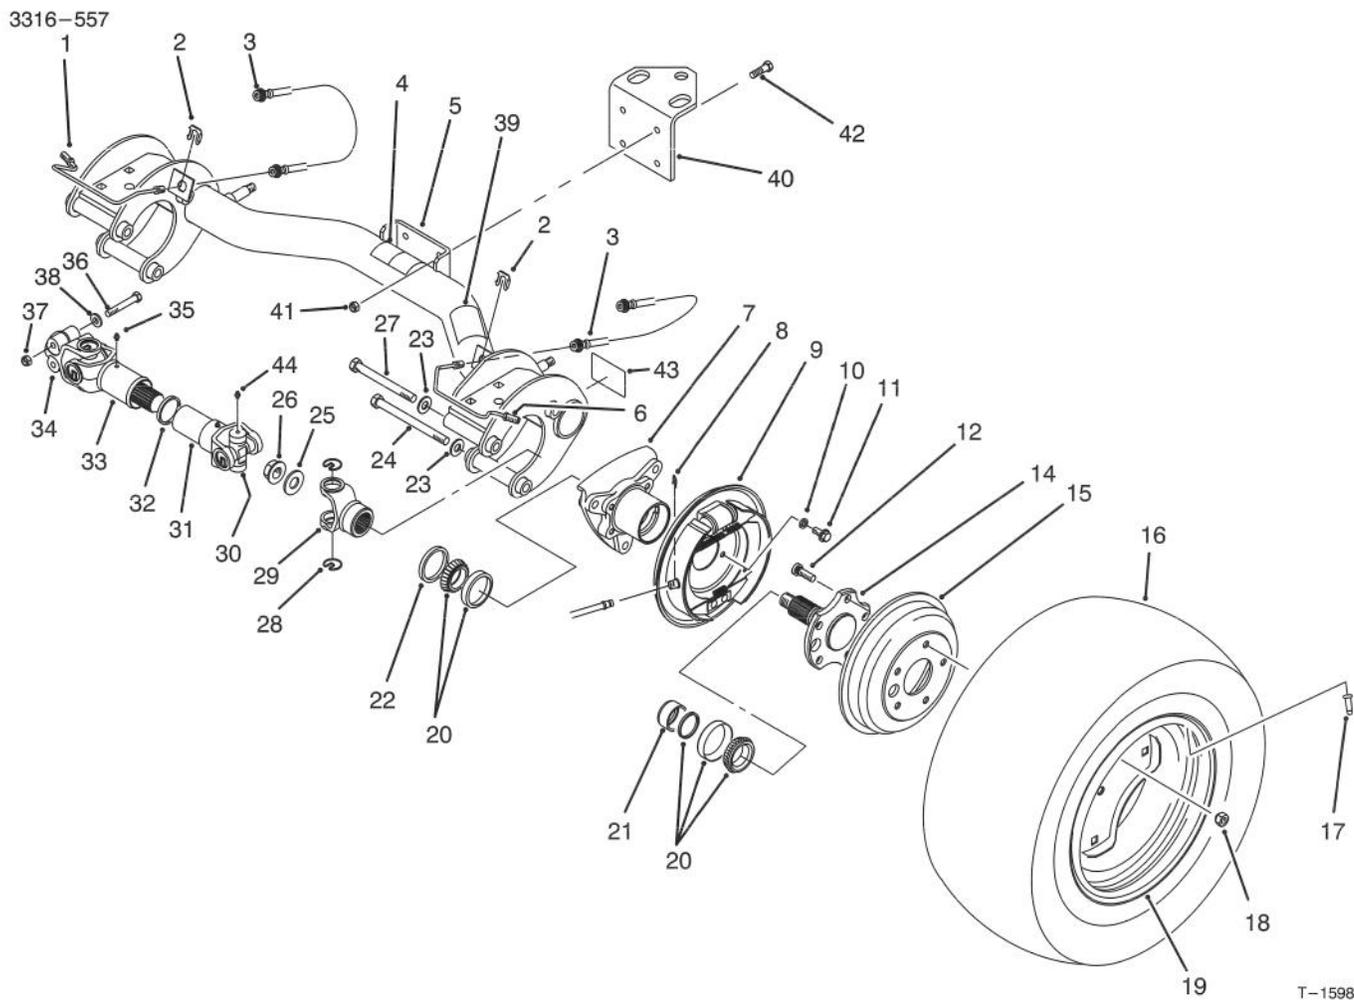


T-1598

## REAR AXLE ASSEMBLY (Continued)

| Ref. No. | Part No. | Description                                                      | No. Used |
|----------|----------|------------------------------------------------------------------|----------|
| 44       | 302-58   | Fitting – Grease Driveshaft Assembly<br>(Incl. Ref. #28-35 & 44) | 16       |
| *        | 87-8750  |                                                                  | 2        |

| Ref. No. | Part No. | Description                               | No. Used |
|----------|----------|-------------------------------------------|----------|
| *        | 87-5370  | Rear Tire & Wheel Assembly (24")          | 2        |
| *        | 87-6370  | Rear Tire & Wheel Assembly (Optional 23") | 2        |

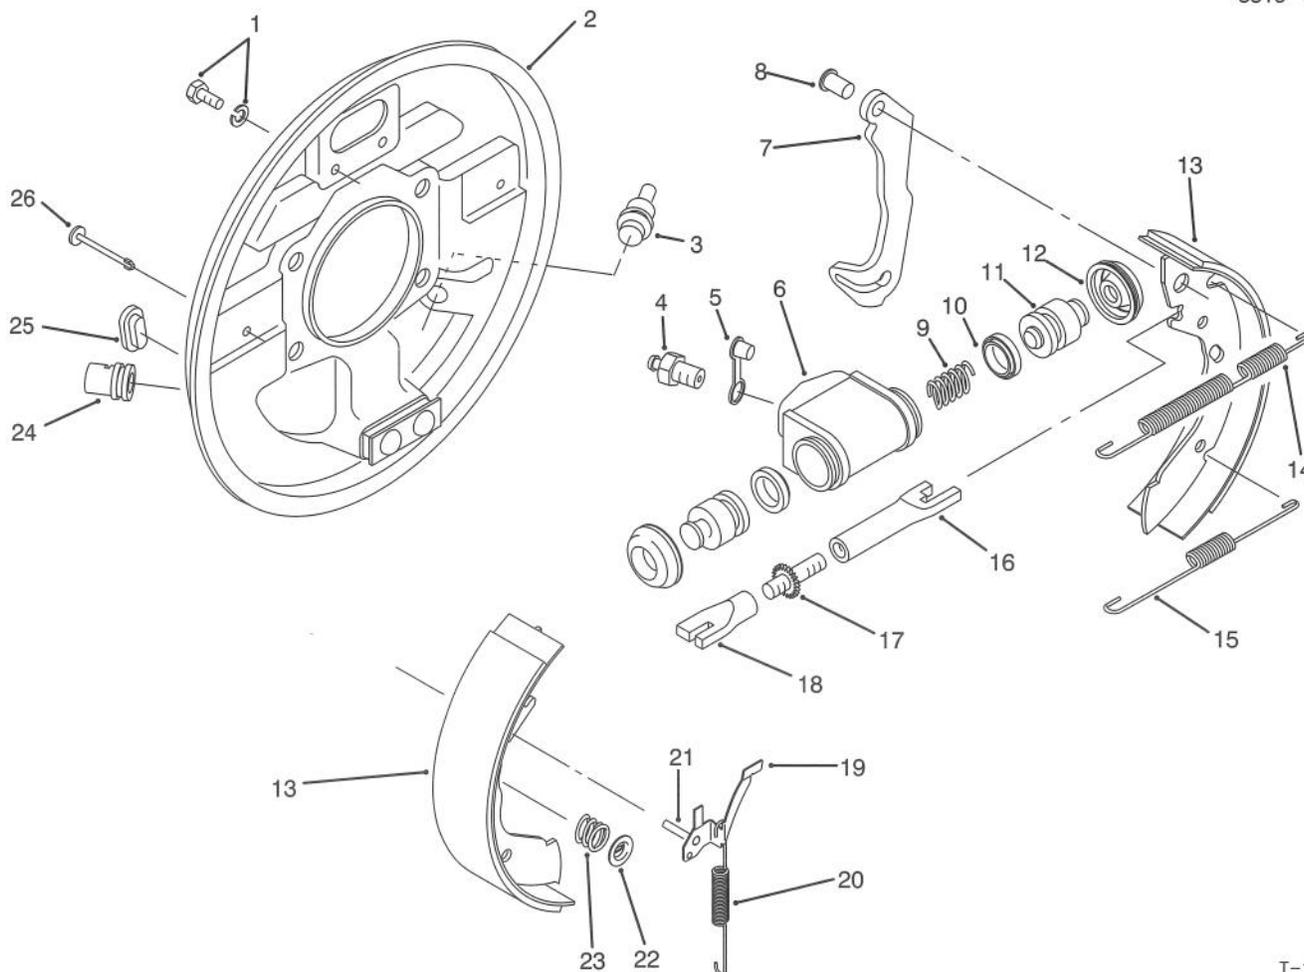


T-1599

## REAR BRAKE ASSEMBLY

| Ref. No. | Part No. | Description                               | No. Used |
|----------|----------|-------------------------------------------|----------|
| 1        | 92-4135  | Set Bolt                                  | 2        |
| 2        | 92-4138  | Backplate Assembly LH<br>(Incl. Ref. #24) | 1        |
| *        | 92-4139  | Backplate Assembly RH<br>(Incl. Ref. #24) | 1        |
| 3        | 92-4146  | Plug                                      | 1        |
| 4        | 92-4137  | Screw - Bleed                             | 1        |
| 5        | 92-4114  | Cap - Bleed Screw                         | 1        |
| 6        |          | Body                                      | 1        |
| 7        |          | Lever - Operating LH/RH                   | 1        |
| 8        |          | Pin                                       | 1        |
| 9        |          | Spring                                    | 1        |
| 10       |          | Seal - 'L' Type                           | 2        |
| 11       |          | Piston                                    | 2        |
| 12       |          | Cover - Dust                              | 2        |
| 13       | 92-4143  | Shoe & Lining Set<br>(Incl. Ref. #7 & 8)  | 1        |
| 14       | 92-4147  | Spring - Shoe, Upper LH                   | 1        |
| *        | 92-4148  | Spring - Shoe, Upper RH                   | 1        |
| 15       | 92-4149  | Spring - Shoe, Lower                      | 1        |
| 16       |          | Pushrod - Female LH                       | 1        |
| *        |          | Pushrod - Female RH                       | 1        |
| 17       |          | Bolt - Adjuster                           | 1        |
| 18       |          | Sleeve - Adjuster                         | 1        |

| Ref. No. | Part No. | Description                                           | No. Used |
|----------|----------|-------------------------------------------------------|----------|
| 19       | 92-4123  | Assembly - Pawl LH<br>(Incl. Ref. #21)                | 1        |
| *        | 92-4124  | Assembly - Pawl RH<br>(Incl. Ref. #21)                | 1        |
| 20       | 92-4150  | Spring - Adjuster, LH                                 | 1        |
| *        | 92-4151  | Spring - Adjuster, RH                                 | 1        |
| 21       |          | Pin - Pawl                                            | 1        |
| 22       | 92-4131  | Washer - Hold Down                                    | 2        |
| 23       | 92-4152  | Spring - Hold Down                                    | 2        |
| 24       |          | Guide - Pipe                                          | 1        |
| 25       | 92-4134  | Plug - Inspection                                     | 1        |
| 26       | 92-4133  | Pin - Hold Down                                       | 2        |
| *        | 92-4144  | Assembly - Adjuster LH<br>(Incl. Ref. #16-18)         | 1        |
| *        | 92-4145  | Assembly - Adjuster RH<br>(Incl. Ref. #16-18)         | 1        |
| *        | 92-4140  | Assy. - Wheel Cylinder LH<br>(Incl. Ref. #4-6 & 9-12) | 1        |
| *        | 92-4141  | Assy. - Wheel Cylinder RH<br>(Incl. Ref. #4-6 & 9-12) | 1        |
| *        | 92-4142  | Seal Kit<br>(Incl. Ref. #10 & 12)                     | 1        |
| *        | 87-3830  | Rear Brake Assembly - RH<br>(Complete)                | 1        |
| *        | 87-3840  | Rear Brake Assembly - LH<br>(Complete)                | 1        |

\*Not Illustrated

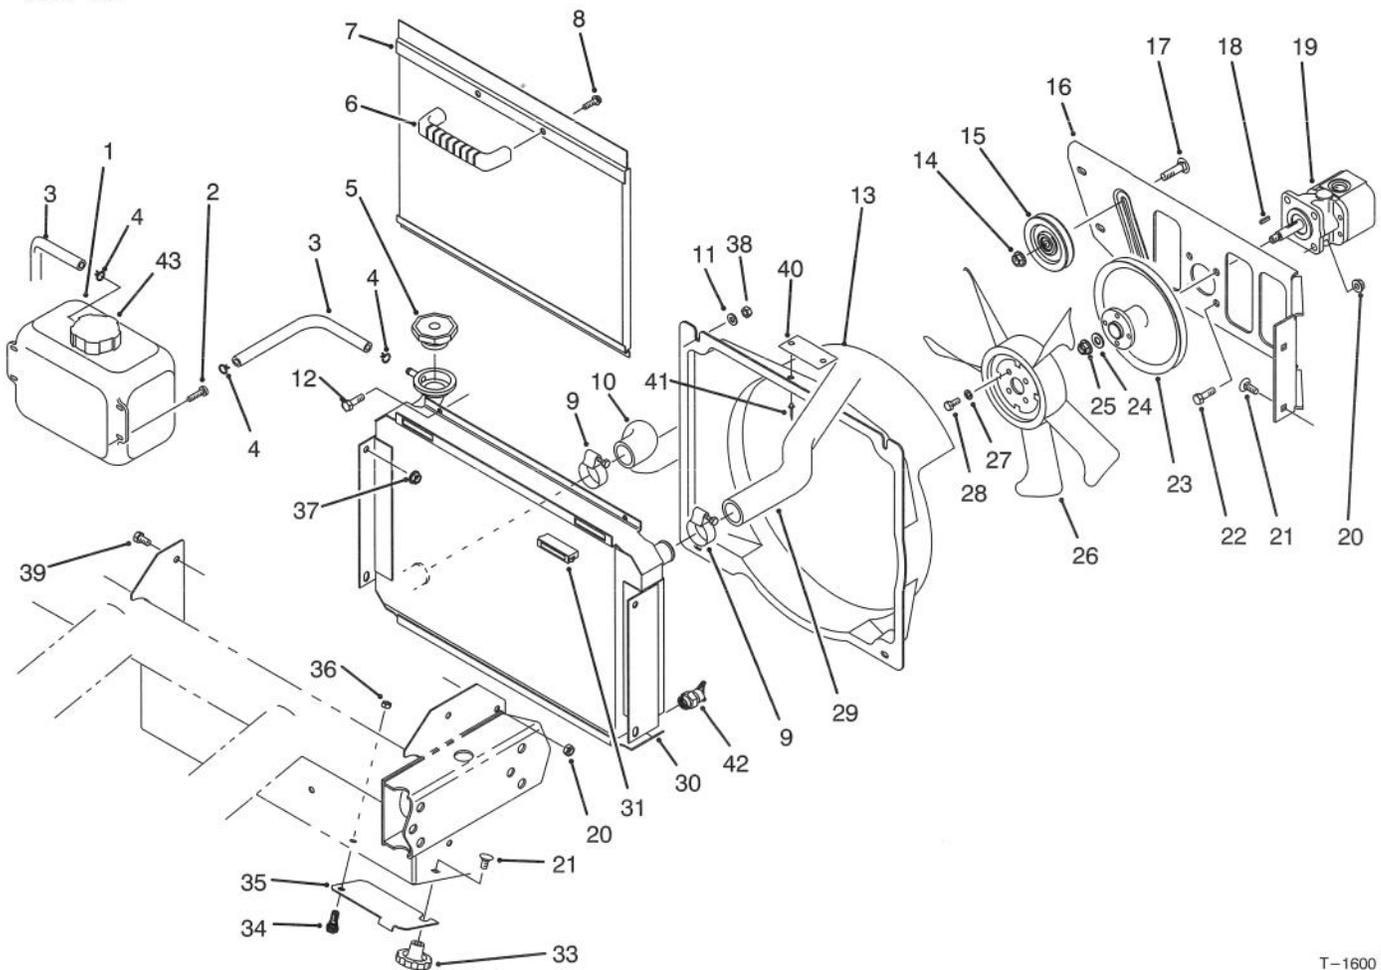


T-1600

## RADIATOR & HYDRAULIC PUMP ASSEMBLY

| Ref. No. | Part No. | Description                                     | No. Used |
|----------|----------|-------------------------------------------------|----------|
| 1        | 87-3710  | Overflow Reservoir Assembly<br>(Incl. Ref. #43) | 1        |
| 2        | 3250-20  | Screw - Round Hd.                               | 4        |
| 3        | 71-3381  | Tube - Overflow                                 | 2        |
| 4        | 92-2379  | Clamp - Hose                                    | 3        |
| 5        | 66-3240  | Cap - Radiator                                  | 1        |
| 6        | 65-5100  | Handle                                          | 1        |
| 7        | 87-2000  | Screen - Radiator                               | 1        |
| 8        | 46-8091  | Screw - Hex. Flange Hd.                         | 2        |
| 9        | 2412-34  | Clamp - Hose                                    | 2        |
| 10       | 87-5050  | Hose - Radiator Lower                           | 1        |
| 11       | 3256-22  | Washer - Flat                                   | 4        |
| 12       | 321-4    | Screw - Cap Hex. Hd.                            | 4        |
| 13       | 87-7120  | Assembly - Shroud, Fan<br>(Incl. Ref. #40-41)   | 1        |
| 14       | 3290-357 | Nut - Flange Lock                               | 1        |
| 15       | 63-8140  | Pulley                                          | 1        |
| 16       | 87-8230  | Support - Fan                                   | 1        |
| 17       | 3231-28  | Bolt - Carriage                                 | 1        |
| 18       | 92-2179  | Key - Square                                    | 1        |
| 19       | 87-5700  | Hydraulic Pump Assembly<br>(Incl. Ref #18)      | 1        |
| 20       | 3296-29  | Nut - Flange Lock                               | 8        |

| Ref. No. | Part No. | Description                           | No. Used |
|----------|----------|---------------------------------------|----------|
| 21       | 3230-23  | Bolt - Carriage                       | 4        |
| 22       | 322-5    | Screw - Cap Hex. Hd.                  | 4        |
| 23       | 87-3390  | Pulley                                | 1        |
| 24       | 3256-45  | Washer - Flat                         | 1        |
| 25       | 3296-5   | Nut - Flange Lock                     | 1        |
| 26       | 43-1911  | Fan                                   | 1        |
| 27       | 3253-3   | Washer - Lock                         | 4        |
| 28       | 321-3    | Screw - Cap Hex. Hd.                  | 4        |
| 29       | 87-3430  | Hose - Radiator Upper                 | 1        |
| 30       | 87-3050  | Radiator Assembly<br>(Incl. Ref. #42) | 1        |
| 31       | 58-4250  | Magnet                                | 2        |
| 33       | 19-4050  | Knob                                  | 1        |
| 34       | 3-7166   | Bolt - Shoulder                       | 1        |
| 35       | 87-4040  | Plate                                 | 1        |
| 36       | 3296-3   | Nut - Lock                            | 1        |
| 37       | 32128-20 | Nut - Lock                            | 4        |
| 38       | 3296-42  | Nut - Lock                            | 4        |
| 39       | 322-2    | Screw - Cap Hex. Hd.                  | 4        |
| 40       | 76-8750  | Plate - Warning                       | 1        |
| 41       | 3290-271 | Rivet - Pop                           | 2        |
| 42       | 92-4111  | Petcock - Radiator                    | 1        |
| 43       | 87-7050  | Cap - Reservoir                       | 1        |

‡For different language versions of this part, see International Decal Cross Reference.

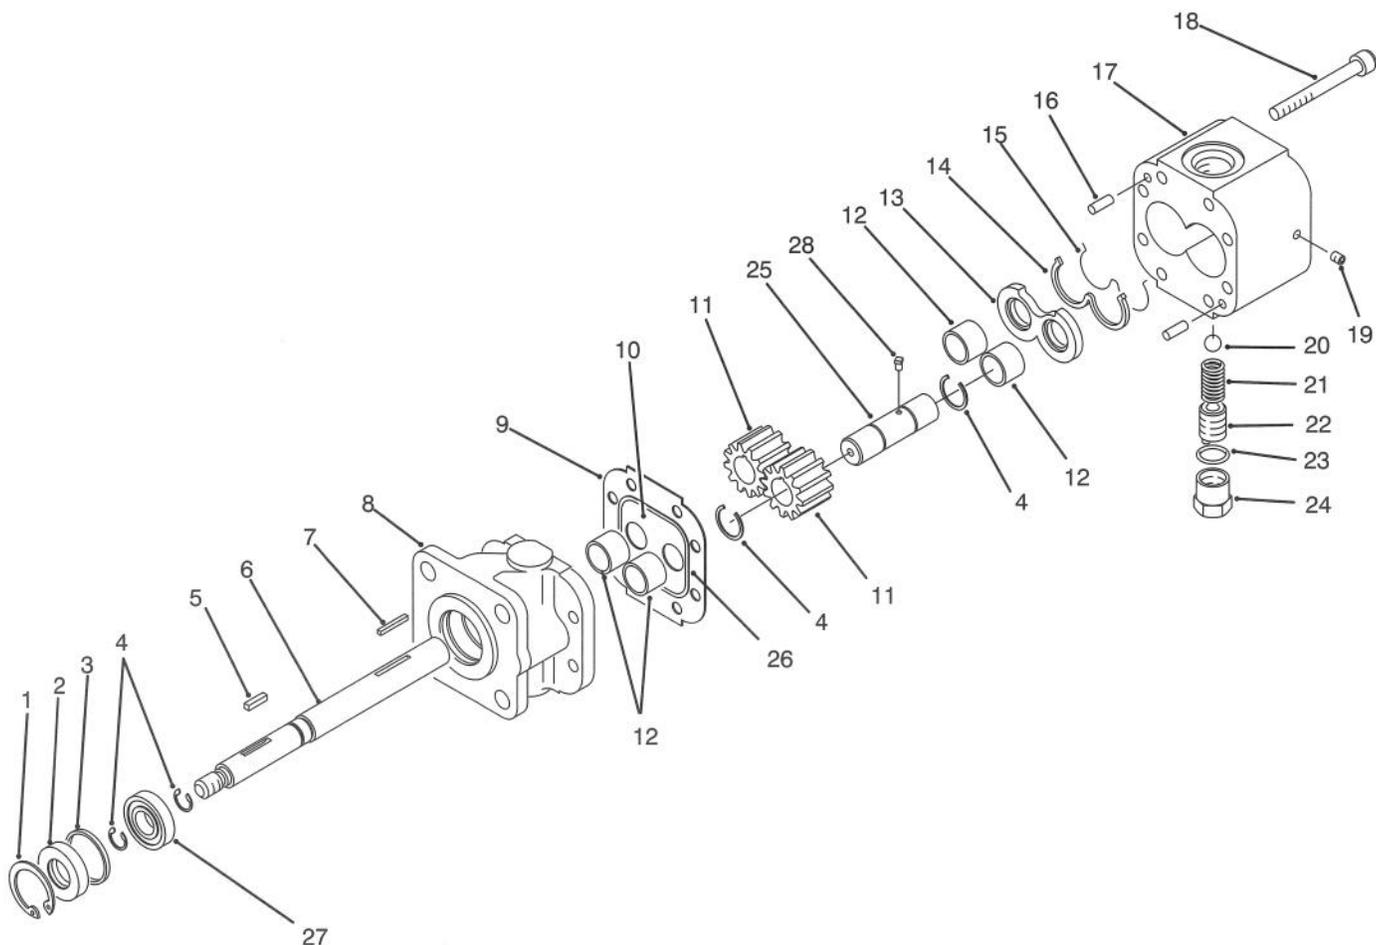


T-1601

## HYDRAULIC PUMP ASSEMBLY NO. 87-5700

| Ref. No. | Part No. | Description      | No. Used |
|----------|----------|------------------|----------|
| 1        | 32151-41 | Ring - Retaining | 1        |
| 2        | 92-2195  | Seal - Oil       | 1        |
| 3        | 92-2186  | Spacer           | 1        |
| 4        | 92-2178  | Ring - Crescent  | 4        |
| 5        | 92-2179  | Key - Square     | 1        |
| 6        | 92-2189  | Shaft - Drive    | 1        |
| 7        | 92-2177  | Pin - Shear      | 1        |
| 8        | 92-2188  | Stator           | 1        |
| 9        | 92-2182  | Plate - Seal     | 1        |
| 10       | 92-2183  | Plate - Wear     | 1        |
| 11       | 92-2175  | Gear             | 2        |
| 12       | 92-2192  | Bearing          | 4        |
| 13       | 92-2181  | Plate - Pressure | 1        |
| 14       | 92-2197  | Seal - Back Up   | 1        |

| Ref. No. | Part No. | Description             | No. Used |
|----------|----------|-------------------------|----------|
| 15       | 92-2196  | Seal - Pressure Plate   | 1        |
| 16       | 92-2176  | Pin - Dowel             | 2        |
| 17       | 92-2187  | Housing - Gear, End     | 1        |
| 18       | 92-2173  | Screw - Cap Socket Head | 8        |
| 19       | 92-2185  | Plug                    | 1        |
| 20       | 92-2193  | Ball                    | 1        |
| 21       | 92-2194  | Spring                  | 1        |
| 22       | 92-2174  | Screw - Adjusting       | 1        |
| 23       | 92-2180  | Gasket - Copper         | 1        |
| 24       | 92-2184  | Cap - Relief Valve      | 1        |
| 25       | 92-2190  | Shaft - Idler           | 1        |
| 26       | 92-2198  | Seal                    | 1        |
| 27       | 92-2191  | Bearing                 | 1        |
| 28       | 92-2199  | Key - Ball              | 1        |

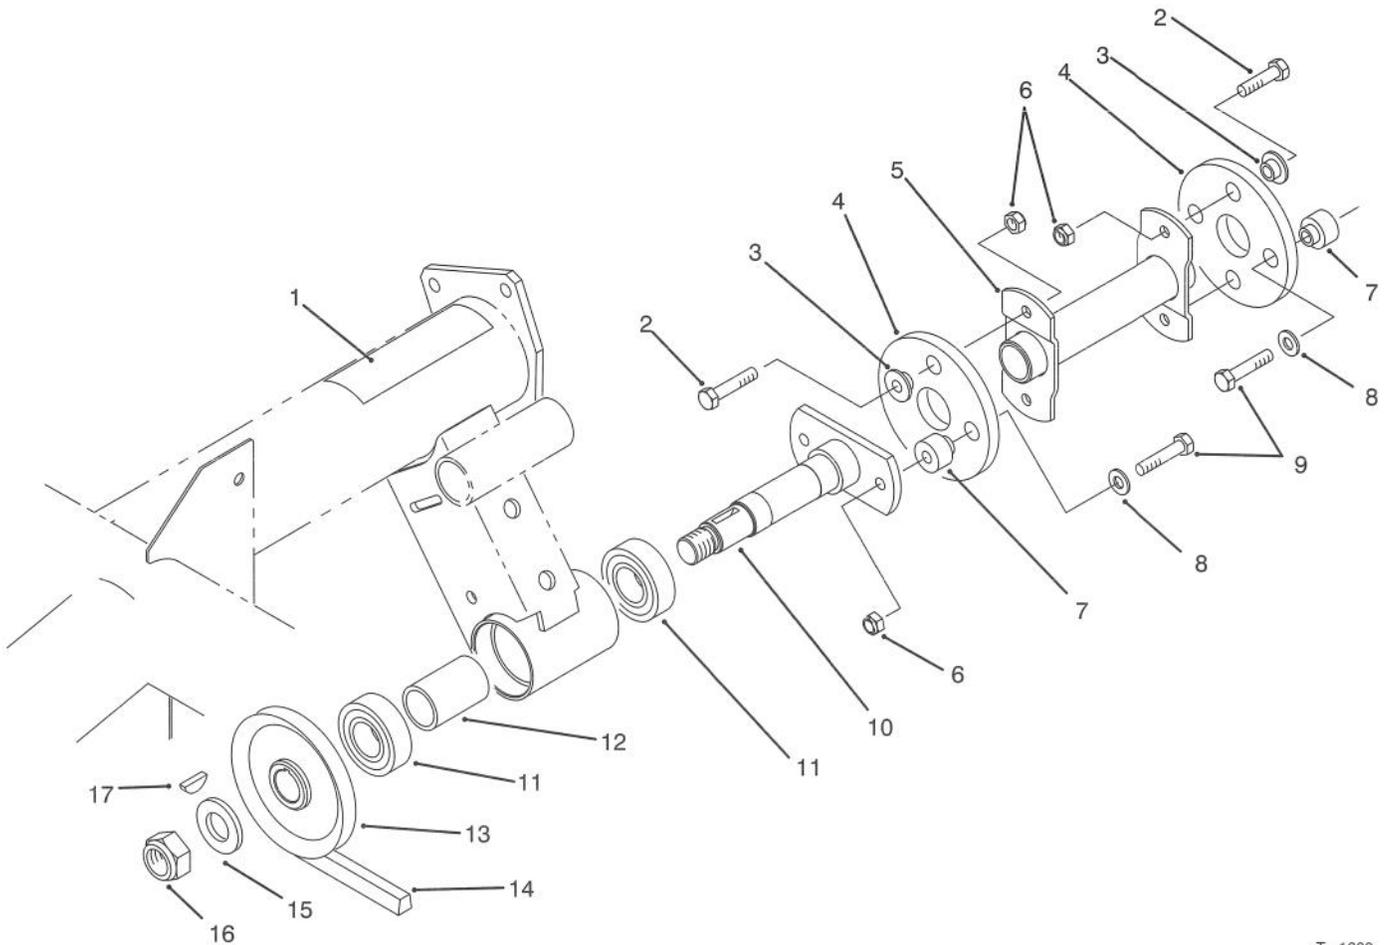


T-1660

## HYDRAULIC PUMP DRIVE ASSEMBLY

| Ref. No. | Part No. | Description          | No. Used |
|----------|----------|----------------------|----------|
| ‡1       | 80-8040  | Decal - Caution      | 1        |
| 2        | 322-5    | Screw - Cap Hex. Hd. | 4        |
| 3        | 27-6600  | Spacer - Thin        | 4        |
| 4        | 44-2230  | Disc - Rubber        | 2        |
| 5        | 87-4440  | Driveshaft           | 1        |
| 6        | 3296-29  | Nut - Lock           | 6        |
| 7        | 27-6590  | Spacer - Thick       | 4        |
| 8        | 3256-3   | Washer - Flat        | 4        |
| 9        | 322-7    | Screw - Cap Hex. Hd. | 4        |

| Ref. No. | Part No. | Description      | No. Used |
|----------|----------|------------------|----------|
| 10       | 87-2720  | Driveshaft       | 1        |
| 11       | 251-82   | Bearing - Ball   | 2        |
| 12       | 87-2750  | Spacer - Bearing | 1        |
| 13       | 87-3370  | Pulley           | 1        |
| 14       | 87-3210  | Belt - V         | 1        |
| 15       | 3256-28  | Washer - Flat    | 1        |
| 16       | 3296-15  | Nut - Lock       | 1        |
| 17       | 3257-7   | Key - Woodruff   | 1        |


‡For different language versions of this part, see International Decal Cross Reference.

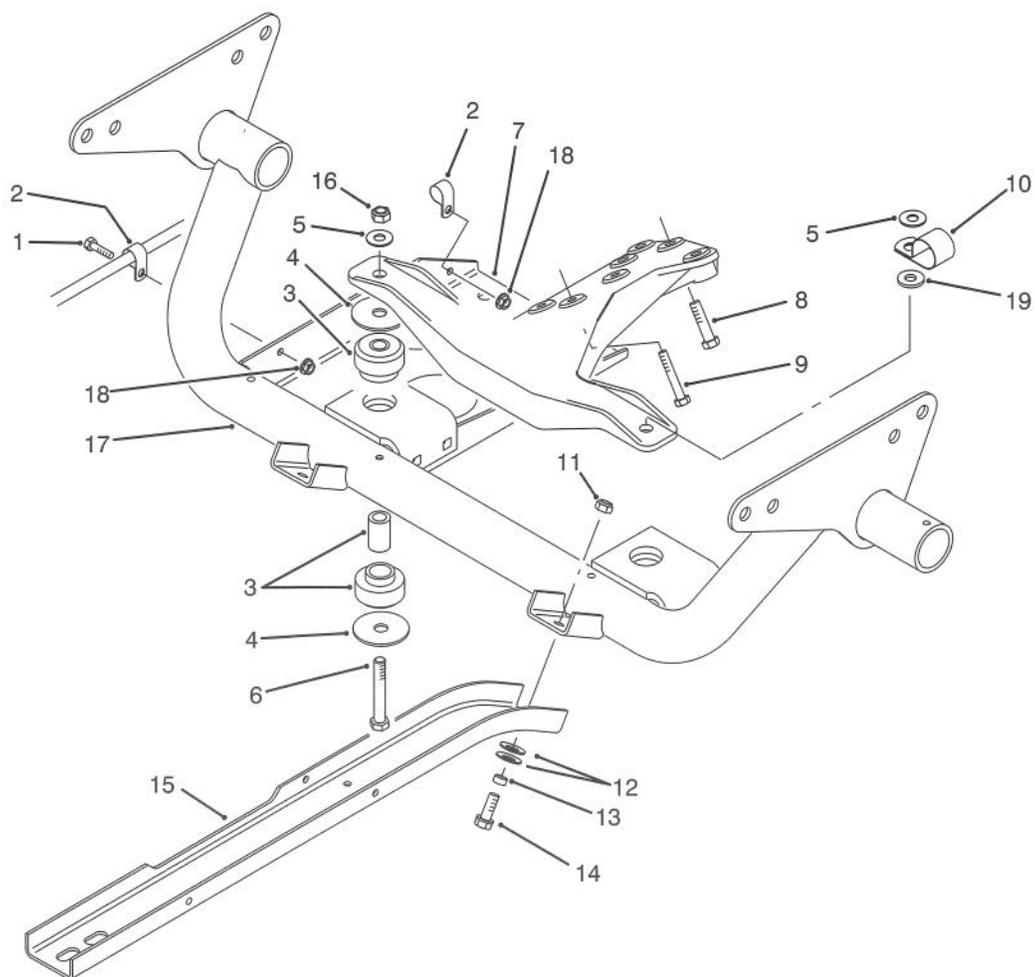

T-1603

## ENGINE FRAME ASSEMBLY

| Ref. No. | Part No. | Description           | No. Used | Ref. No. | Part No. | Description          | No. Used |
|----------|----------|-----------------------|----------|----------|----------|----------------------|----------|
| 1        | 321-4    | Screw - Cap Hex. Hd.  | 2        | 11       | 3296-39  | Nut - Lock           | 2        |
| 2        | 2412-89  | Clamp - R             | 2        | 12       | 3290-413 | Washer - Belleville  | 4        |
| 3        | 87-4970  | Engine Mount Assembly | 2        | 13       | 76-9100  | Spacer               | 2        |
| 4        | 87-5100  | Washer - Flat         | 4        | 14       | 3234-11  | Screw - Cap Hex. Hd. | 2        |
| 5        | 3256-25  | Washer - Flat         | 2        | 15       | 87-4730  | Guard - Belly        | 2        |
| 6        | 324-19   | Screw - Cap Hex. Hd.  | 2        | 16       | 3296-48  | Nut - Lock           | 2        |
| 7        | 87-0330  | Mount - Engine        | 1        | 17       | 87-0720  | Frame - Engine       | 1        |
| 8        | 87-3700  | Screw - Cap Hex. Hd.  | 4        | 18       | 32128-33 | Nut - Flange         | 2        |
| 9        | 48-7560  | Screw - Cap Hex. Hd.  | 3        | 19       | 59-2290  | Spacer               | 1        |
| 10       | 2412-82  | Clamp - R             | 1        |          |          |                      |          |

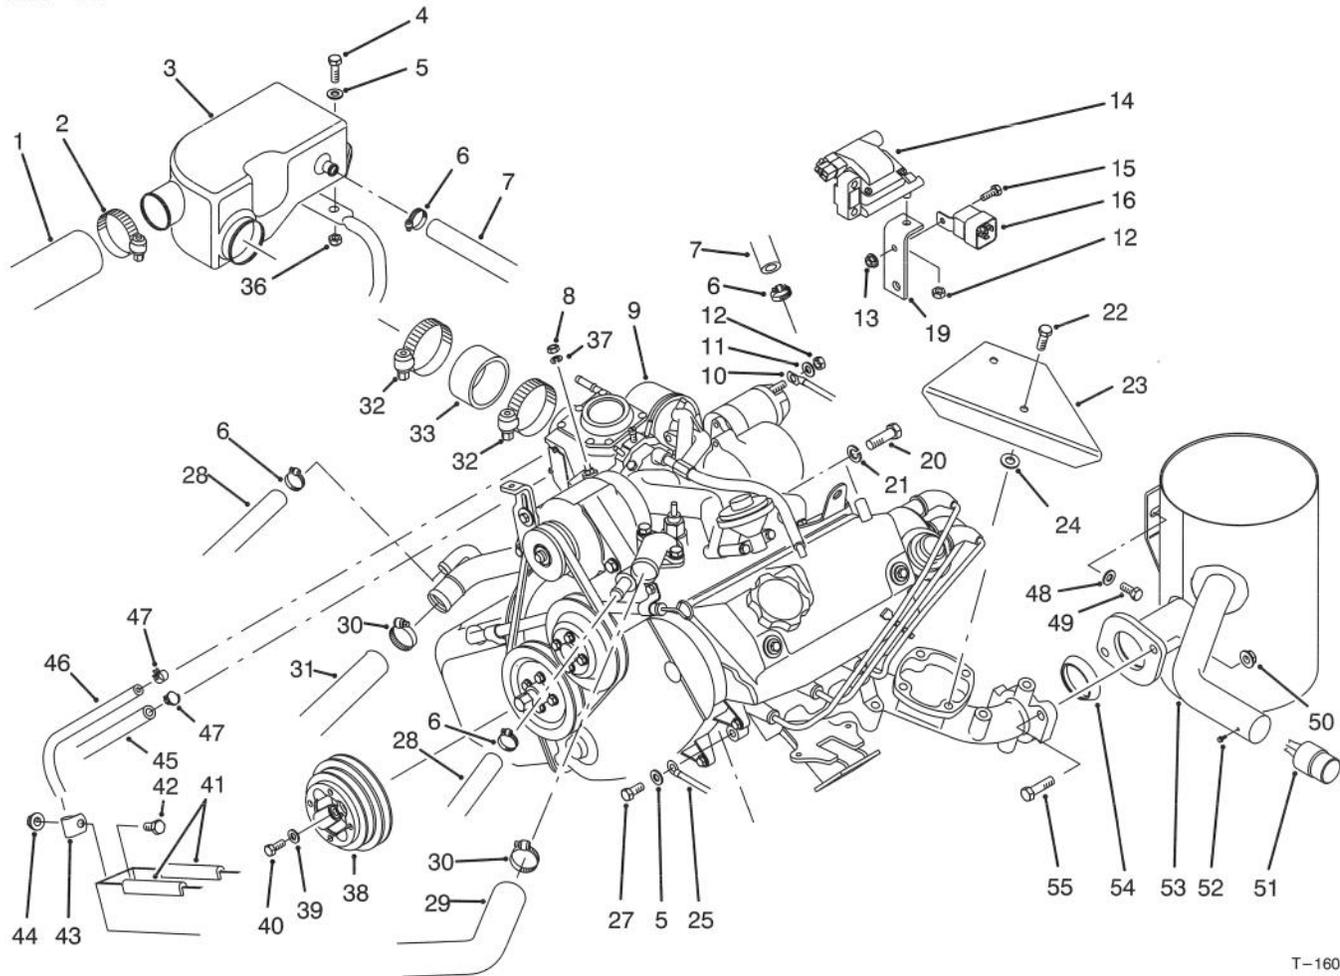


T-1604

## ENGINE INSTALLATION ASSEMBLY

| Ref. No. | Part No. | Description                                  | No. Used |
|----------|----------|----------------------------------------------|----------|
| 1        | 87-3420  | Hose - Air Cleaner                           | 1        |
| 2        | 2412-92  | Clamp - Hose                                 | 1        |
| 3        | 87-1680  | Chamber - Air                                | 1        |
| 4        | 322-6    | Screw - Cap Hex. Hd.                         | 2        |
| 5        | 3256-23  | Washer - Flat                                | 2        |
| 6        | 2412-119 | Clamp - Hose                                 | 3        |
| 7        | 87-3740  | Hose - Breather                              | 1        |
| 8        | 48-7890  | Nut - Hex.                                   | 1        |
| 9        | 87-1960  | Engine Assembly<br>(Incl. Ref. #11, 12 & 14) | 1        |
| 10       | 87-3070  | Cable - Positive                             | 1        |
| 11       | 3254-2   | Washer - Lock                                | 1        |
| 12       | 42-9580  | Nut - Hex.                                   | 3        |
| 13       | 32128-33 | Nut - Flange                                 | 1        |
| 14       | 92-2027  | Coil - Ignition                              | 1        |
| 15       | 321-4    | Screw - Cap Hex. Hd.                         | 1        |
| 16       | 63-7590  | Relay                                        | 1        |
| 19       | 87-2760  | Bracket - Ignition Coil                      | 1        |
| 20       | 48-9480  | Screw - Cap Hex. Hd.                         | 2        |
| 21       | 3253-6   | Washer - Lock                                | 2        |
| 22       | 57-6380  | Screw - Cap Hex. Hd.                         | 2        |
| 23       | 87-3620  | Shield - Heat                                | 1        |
| 24       | 52-2480  | Spacer                                       | 2        |
| 25       | 87-3080  | Wire - Ground                                | 1        |
| 27       | 66-3160  | Screw - Cap Hex. Hd.                         | 1        |
| 28       | 87-3730  | Hose - Coolant                               | 2        |


| Ref. No. | Part No. | Description                                   | No. Used |
|----------|----------|-----------------------------------------------|----------|
| 29       | 87-3430  | Hose - Radiator Upper                         | 1        |
| 30       | 2412-34  | Clamp - Hose                                  | 2        |
| 31       | 87-5050  | Hose - Radiator Lower                         | 1        |
| 32       | 2412-130 | Clamp - Hose                                  | 2        |
| 33       | 87-3500  | Hose - Air Cleaner                            | 1        |
| 36       | 3296-29  | Nut - Lock                                    | 2        |
| 37       | 3253-3   | Washer - Lock                                 | 1        |
| 38       | 87-5070  | Pulley - Crankshaft                           | 1        |
| 39       | 65-5390  | Washer - Flat                                 | 4        |
| 40       | 66-3160  | Screw - Cap Hex. Hd.                          | 4        |
| 41       | 43-4300  | Trim                                          | 2        |
| 42       | 322-2    | Screw - Cap Hex. Hd.                          | 1        |
| 43       | 2412-10  | Clamp - R                                     | 1        |
| 44       | 32128-20 | Nut - Flange Lock                             | 1        |
| 45       | 63-6940  | Hose - Fuel                                   | 1        |
| 46       | 75-4701  | Hose - Fuel                                   | 1        |
| 47       | 2412-108 | Clamp - Hose                                  | 2        |
| 48       | 87-8640  | Washer - Flat                                 | 1        |
| 49       | 66-3160  | Screw - Cap Hex. Hd.                          | 1        |
| 50       | 3290-357 | Nut - Flange Lock                             | 2        |
| 51       | 75-6880  | Spark Arrestor (Optional)<br>(Incl. Ref. #52) | 1        |
| 52       | 32144-42 | Screw - Spark Arrestor                        | 1        |
| 53       | 87-1510  | Muffler & Tailpipe                            | 1        |
| 54       | 92-2044  | Gasket - Exhaust                              | 1        |
| 55       | 323-29   | Screw - Cap Hex. Hd.                          | 2        |

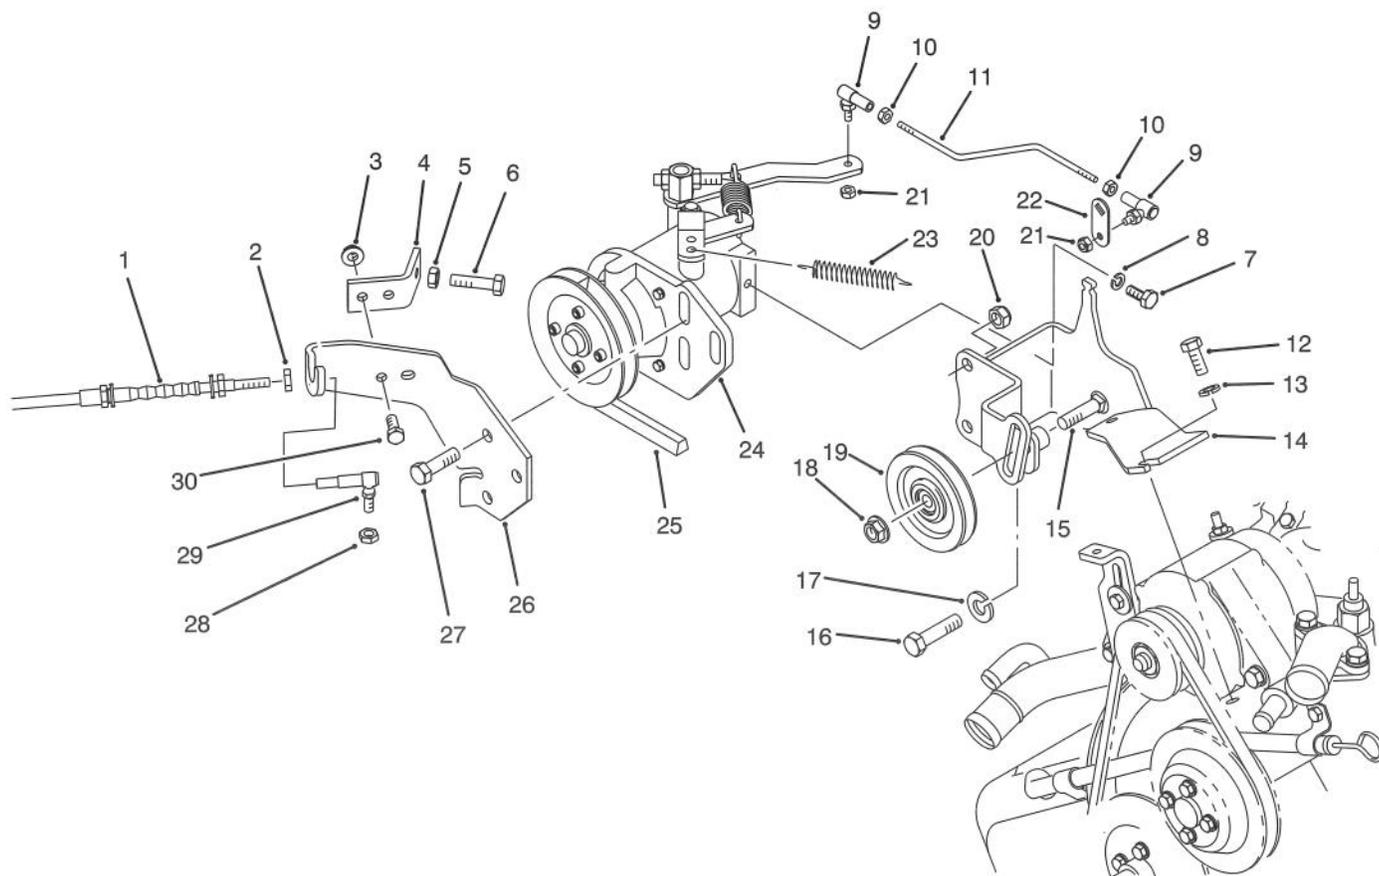

T-1605

## GOVERNOR ASSEMBLY

| Ref. No. | Part No. | Description                                | No. Used | Ref. No. | Part No. | Description          | No. Used |
|----------|----------|--------------------------------------------|----------|----------|----------|----------------------|----------|
| 1        | 87-8600  | Accelerator Cable Assembly (Incl. Ref. #2) | 1        | 16       | 87-3700  | Screw - Cap Hex. Hd. | 1        |
| 2        | 3220-1   | Nut - Jam                                  | 1        | 17       | 3253-22  | Washer - Lock        | 1        |
| 3        | 32128-33 | Nut - Flange                               | 2        | 18       | 3290-357 | Nut - Flange         | 1        |
| 4        | 87-4770  | Bracket - High Idle Stop                   | 1        | 19       | 63-8140  | Pulley               | 1        |
| 5        | 3220-2   | Nut - Jam                                  | 1        | 20       | 3296-39  | Nut - Lock           | 3        |
| 6        | 3210-9   | Screw - Cap Hex. Hd.                       | 1        | 21       | 3296-27  | Nut - Lock           | 2        |
| 7        | 321-3    | Screw - Cap Hex. Hd.                       | 1        | 22       | 87-2400  | Lever - Throttle     | 1        |
| 8        | 3253-3   | Washer - Lock                              | 1        | 23       | 87-4020  | Spring - Extension   | 1        |
| 9        | 21-5640  | Joint - Ball                               | 2        | 24       | 87-8720  | Governor Assembly    | 1        |
| 10       | 3219-14  | Nut - Jam                                  | 2        | 25       | 87-3200  | Belt - V             | 1        |
| 11       | 87-4210  | Rod - Linkage                              | 1        | 26       | 87-3900  | Bracket - Cable      | 1        |
| 12       | 66-3160  | Screw - Cap Hex. Hd.                       | 2        | 27       | 323-7    | Screw - Cap Hex. Hd. | 3        |
| 13       | 3253-4   | Washer - Lock                              | 2        | 28       | 3296-3   | Nut - Lock           | 1        |
| 14       | 87-4750  | Bracket - Governor                         | 1        | 29       | 18-1720  | Joint - Ball         | 1        |
| 15       | 3231-26  | Bolt - Carriage                            | 1        | 30       | 321-4    | Screw - Cap Hex. Hd. | 2        |

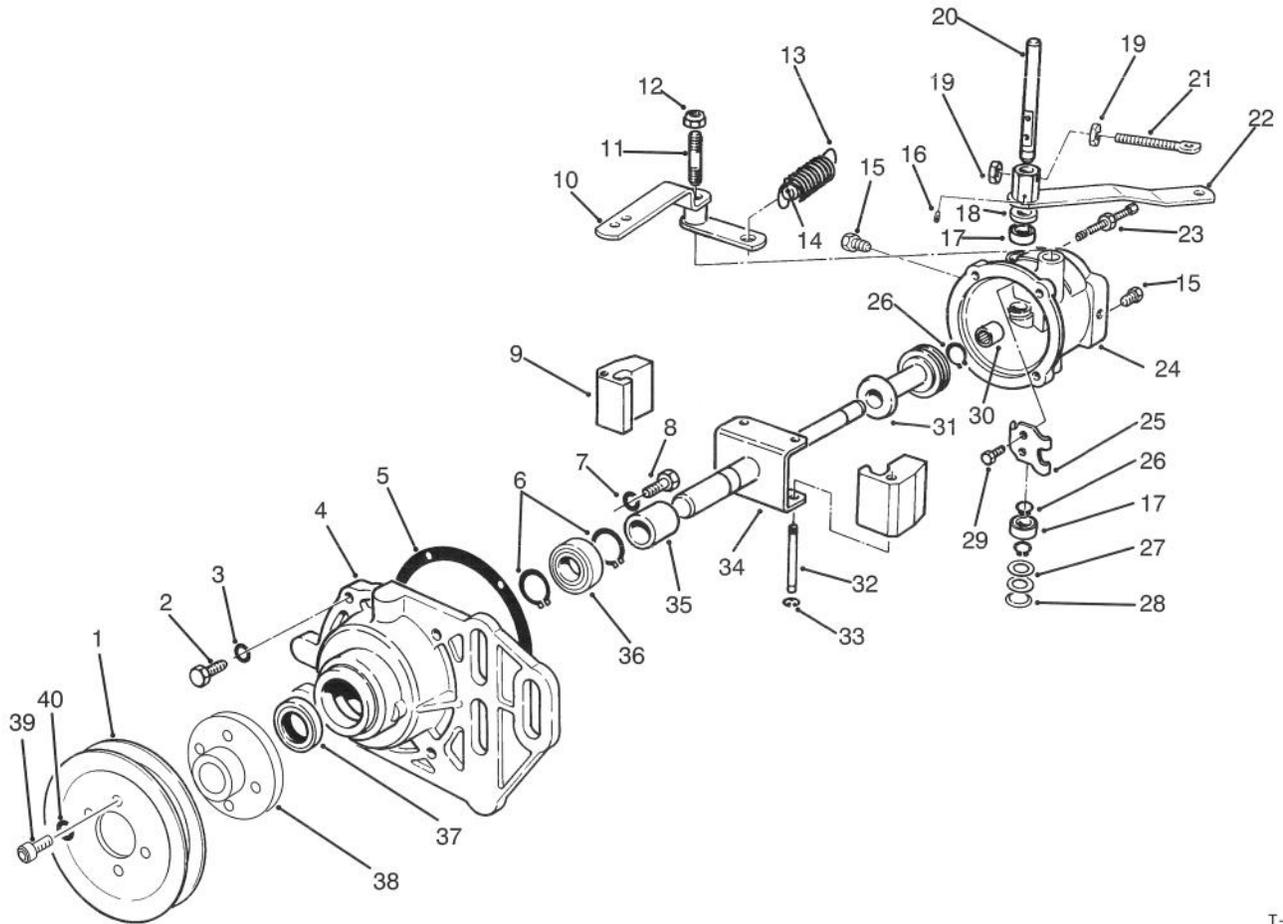


T-1606

## GOVERNOR

| Ref. No. | Part No. | Description              | No. Used |
|----------|----------|--------------------------|----------|
| 1        | 87-8830  | Pulley                   | 1        |
| 2        | 18-5620  | Screw                    | 4        |
| 3        | 18-5630  | Washer - Lock            | 4        |
| 4        | 87-6560  | Cover                    | 1        |
| 5        | 18-5790  | Gasket                   | 1        |
| 6        | 18-5640  | Ring - Retaining         | 2        |
| 7        | 18-5770  | Washer - Lock            | 2        |
| 8        | 32113-14 | Screw                    | 2        |
| 9        | 70-2150  | Flyweight                | 2        |
| 10       | 87-6590  | Assy. Lever & Fitting    | 1        |
| 11       | 87-6580  | Stud - Lever Pivot       | 1        |
| 12       | 3296-5   | Nut - Lock               | 1        |
| 13       | 87-6490  | Spring                   | 1        |
| 14       | 87-6550  | Pin - Forced Idle        | 1        |
| 15       | 285-17   | Plug - Pipe              | 2        |
| 16       | 18-5750  | Pin                      | 1        |
| 17       | 18-5450  | Bearing                  | 2        |
| 18       | 71-4780  | Seal - Oil, Rocker Shaft | 1        |
| 19       | 3219-2   | Nut                      | 2        |
| 20       | 72-5890  | Shaft - Rocker           | 1        |
| 21       | 87-6540  | Bolt - Eye               | 1        |


| Ref. No. | Part No. | Description                        | No. Used |
|----------|----------|------------------------------------|----------|
| 22       | 87-6530  | Assembly - Throttle Lever          | 1        |
| 23       | 72-5910  | Assembly - Bumper Screw            | 1        |
| 24       | 87-6520  | Body                               | 1        |
| 25       | 18-5520  | Lever - Rocker                     | 1        |
| 26       | 18-5540  | Retainer - Sleeve Stop             | 3        |
| 27       | 18-5440  | Spacer                             | 2        |
| 28       | 18-5430  | Plug - Expansion                   | 1        |
| 29       | 18-5530  | Screw & Lockwasher                 | 2        |
| 30       | 72-5940  | Bearing - Needle                   | 1        |
| 31       | 70-2100  | Assembly - Thrust Sleeve & Bearing | 1        |
| 32       | 18-5660  | Pin - Pivot, Flyweight             | 2        |
| 33       | 18-5670  | Retainer - Pivot Pin               | 2        |
| 34       | 87-6510  | Assembly - Shaft & Yoke            | 1        |
| 35       | 70-2120  | Spacer                             | 1        |
| 36       | 70-2140  | Bearing - Front                    | 1        |
| 37       | 18-5580  | Seal - Oil, Front                  | 1        |
| 38       | 87-8820  | Hub - Pulley                       | 1        |
| 39       | 3274-52  | Screw - Hex. Socket Hd.            | 4        |
| 40       | 3253-18  | Washer - Lock                      | 4        |

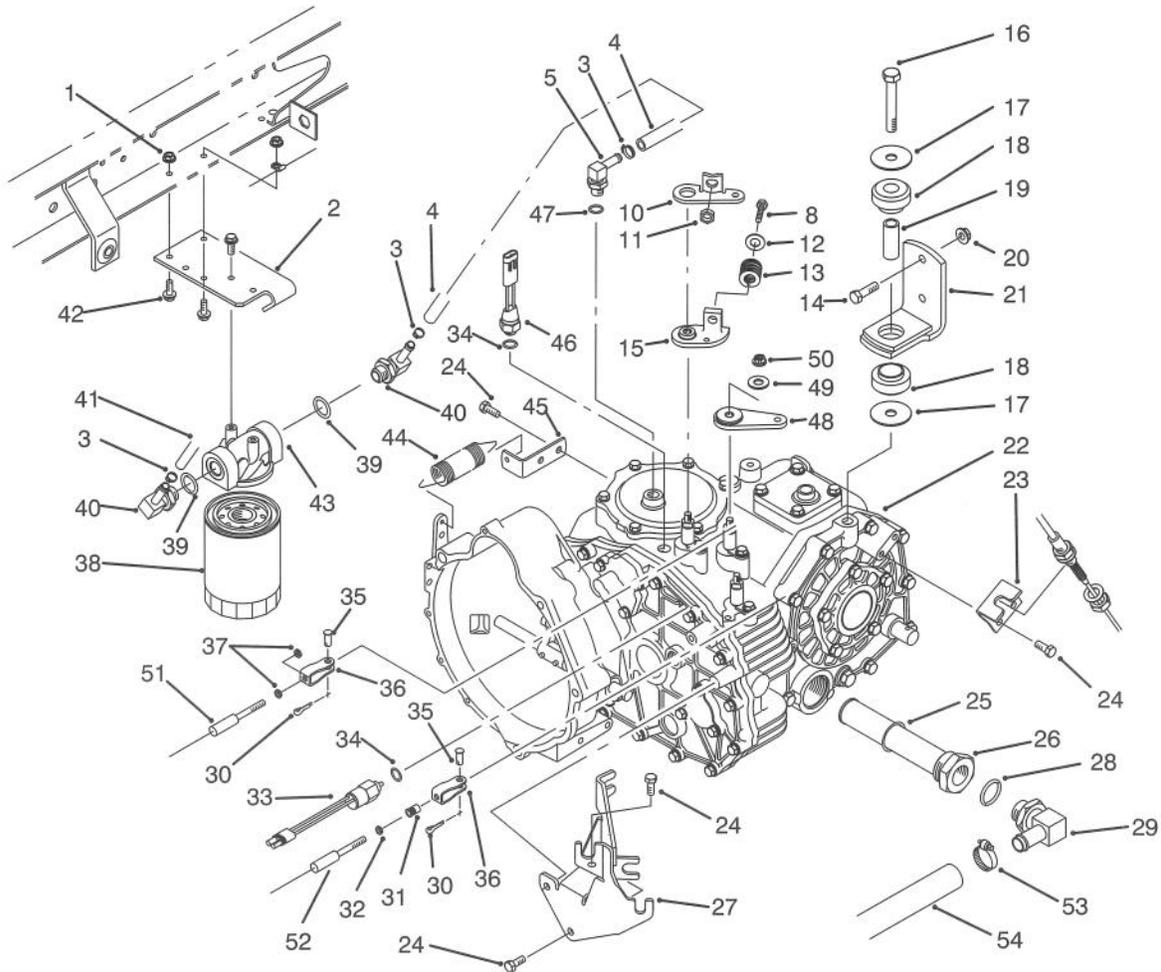

T-1607

## TRANSAXLE INSTALLATION ASSEMBLY

| Ref. No. | Part No. | Description                                  | No. Used | Ref. No. | Part No. | Description                                 | No. Used |
|----------|----------|----------------------------------------------|----------|----------|----------|---------------------------------------------|----------|
| 1        | 32128-33 | Nut - Flange Lock                            | 1        | 27       | 87-4820  | Bracket - Cable                             | 1        |
| 2        | 87-7040  | Bracket - Oil Filter                         | 1        | 28       | 237-81   | Seal - O-Ring                               | 1        |
| 3        | 2412-36  | Clamp - Hose                                 | 3        | 29       | 253-987  | Fitting - Hydraulic 90°<br>(Incl. Ref. #28) | 1        |
| 4        | 87-5730  | Hose - Hydraulic                             | 1        | 30       | 3272-6   | Pin - Cotter                                | 3        |
| 5        | 354-135  | Fitting - Hydraulic 90°<br>(Incl. Ref. #47)  | 1        | 31       | 32148-15 | Nut - Clinch                                | 1        |
| 8        | 323-10   | Screw - Cap Hex. Hd.                         | 1        | 32       | 3219-14  | Nut - Hex.                                  | 1        |
| 10       | 87-8250  | Plate - Shift Arm                            | 1        | 33       | 87-6710  | Switch - Supervisor                         | 1        |
| 11       | 32128-21 | Nut - Lock                                   | 1        | 34       | 237-30   | Seal - O-Ring                               | 2        |
| 12       | 3256-4   | Washer - Flat                                | 1        | 35       | 283-62   | Pin - Clevis                                | 3        |
| 13       | 87-6910  | Spring - Compression                         | 1        | 36       | 87-2310  | Clevis - Cable                              | 3        |
| 14       | 323-7    | Screw - Cap Hex. Hd.                         | 4        | 37       | 3220-1   | Nut - Jam                                   | 4        |
| 15       | 87-7970  | Arm - Shift                                  | 1        | 38       | 54-0110  | Element - Oil Filter                        | 1        |
| 16       | 3215-1   | Screw - Cap Hex. Hd.                         | 1        | 39       | 237-79   | Seal - O-Ring                               | 2        |
| 17       | 87-5100  | Washer                                       | 4        | 40       | 354-134  | Fitting - Hydraulic 90°<br>(Incl. Ref. #39) | 2        |
| 18       | 87-4970  | Transaxle Mount Assembly<br>(Incl. Ref. #19) | 2        | 41       | 87-4920  | Hose - Hydraulic                            | 1        |
| 19       |          | Spacer - Mount                               | 2        | 42       | 3234-4   | Screw - Hex. Flange Hd.                     | 4        |
| 20       | 3296-39  | Nut - Flange Lock                            | 4        | 43       | 87-8780  | Head - Oil Filter                           | 1        |
| 21       | 87-5800  | Bracket - Mount                              | 2        | 44       | 68-9950  | Spring - Extension                          | 1        |
| 22       | 87-8800  | Transaxle Assembly                           | 1        | 45       | 87-7170  | Bracket - Clutch Spring                     | 1        |
| 23       | 87-4470  | Bracket                                      | 1        | 46       | 72-4310  | Switch - Ball N.C.                          | 1        |
| 24       | 66-3160  | Screw - Cap Hex. Hd.                         | 7        | 47       | 237-42   | Seal - O-Ring                               | 1        |
| 25       | 237-123  | Seal - O-Ring                                | 1        | 48       | 87-7960  | Lever - Shift Arm                           | 2        |
| 26       | 87-3990  | Oil Strainer Assembly<br>(Incl. Ref. #25)    | 1        | 49       | 80-6990  | Washer - Flat                               | 3        |
|          |          |                                              |          | 50       | 48-9520  | Nut - Lock                                  | 3        |

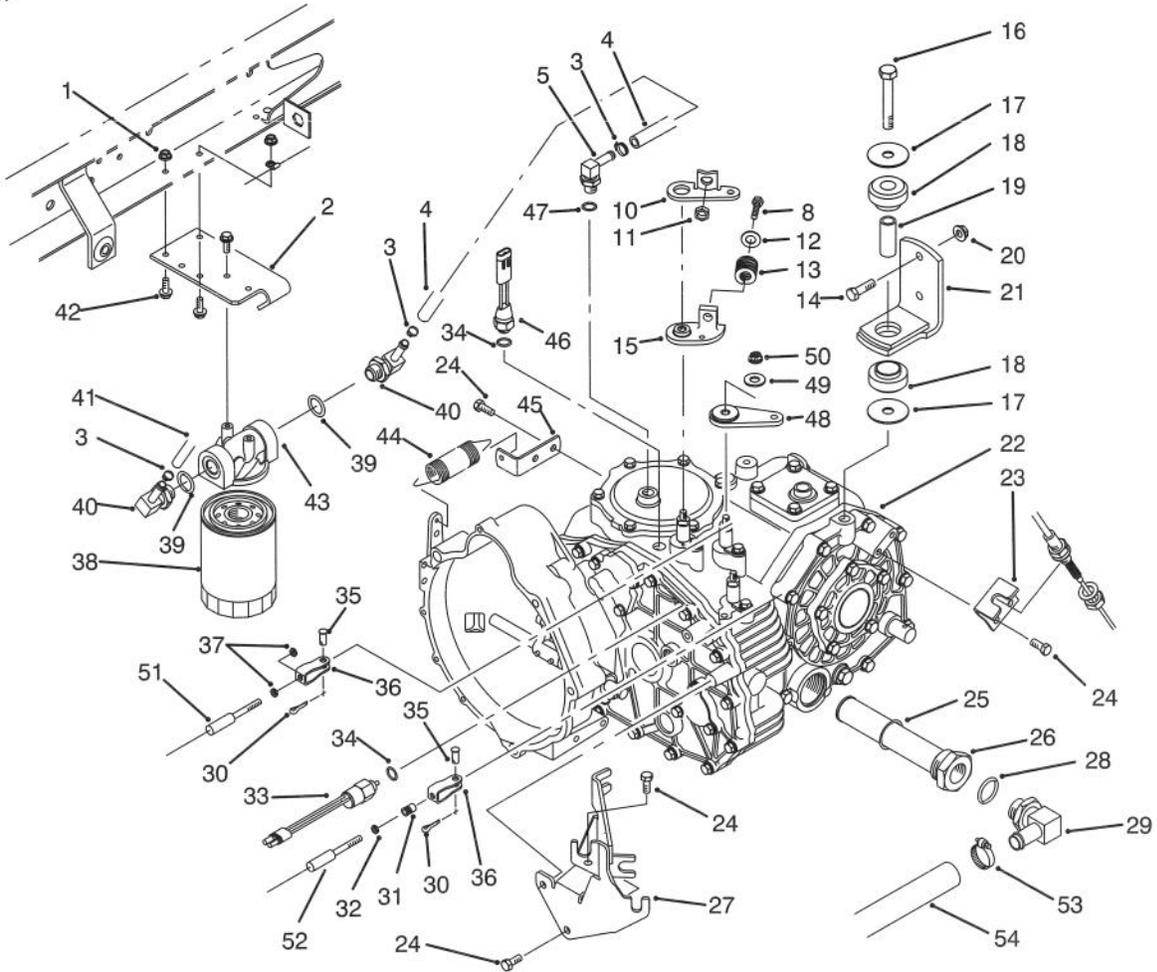


T-1607

## TRANSAXLE INSTALLATION ASSEMBLY (Continued)

| Ref. No. | Part No. | Description                              | No. Used |
|----------|----------|------------------------------------------|----------|
| 51       | 87-4260  | Shift Cable Assembly<br>(Incl. Ref. #37) | 2        |
| 52       | 87-4420  | Hi-Lo Cable Assembly<br>(Incl. Ref. #32) | 1        |


| Ref. No. | Part No. | Description      | No. Used |
|----------|----------|------------------|----------|
| 53       | 2412-34  | Clamp - Hose     | 1        |
| 54       | 87-3670  | Hose - Hydraulic | 1        |

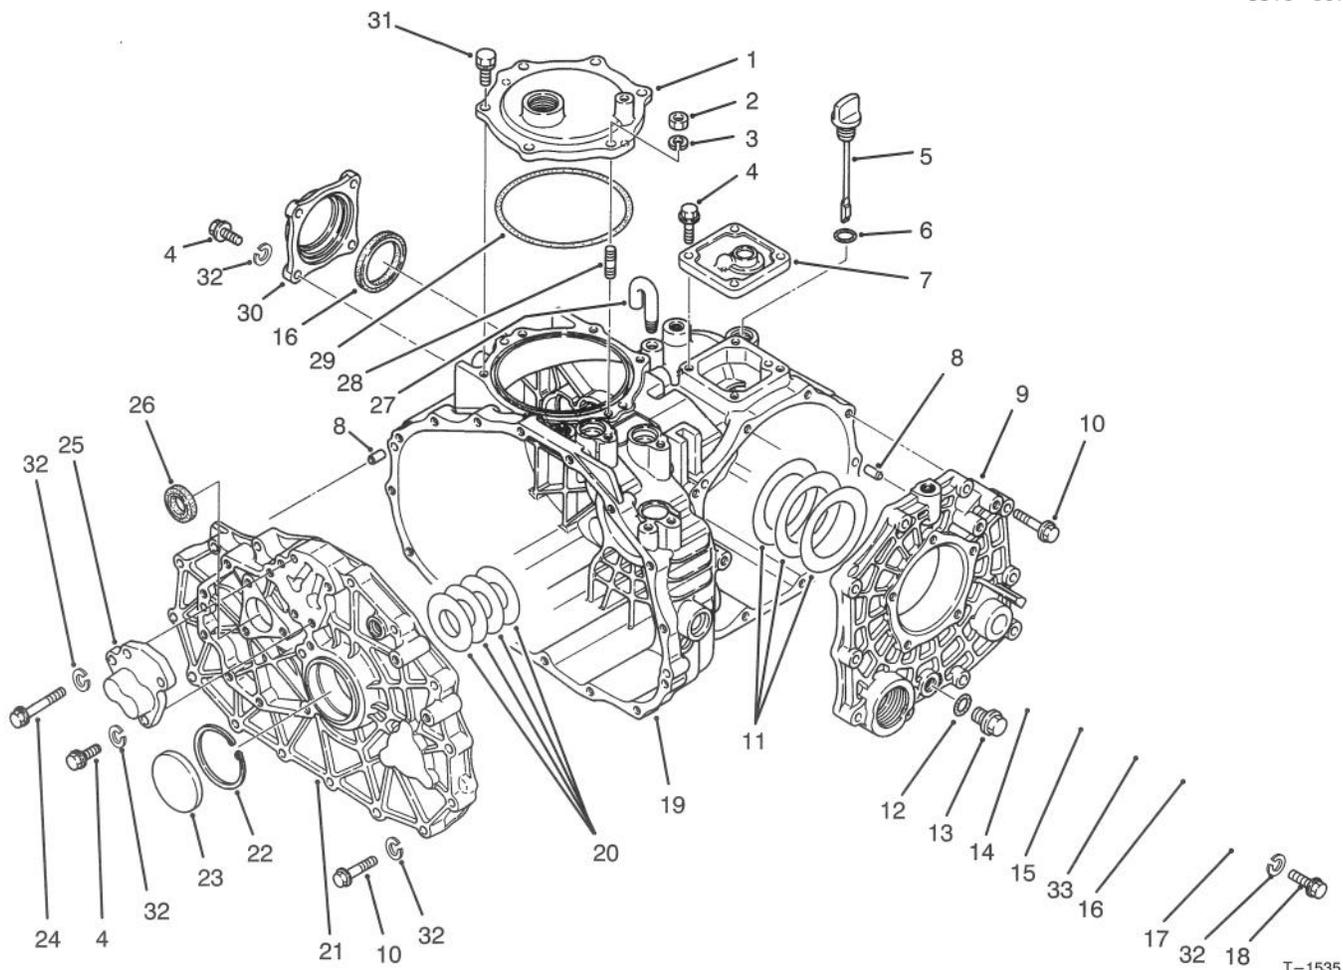

T-1535

## TRANSAXLE CASE ASSEMBLY

| Ref. No. | Part No. | Description                             | No. Used | Ref. No. | Part No. | Description            | No. Used |
|----------|----------|-----------------------------------------|----------|----------|----------|------------------------|----------|
| 1        | 92-0656  | Cover - P.T.O.                          | 1        | 17       | 92-0654  | Carrier - Differential | 1        |
| 2        | 48-7930  | Nut - Hex.                              | 1        | 18       | 48-7730  | Screw - Cap Hex. Hd.   | 5        |
| 3        | 92-0762  | Washer - Lock                           | 1        | 19       | 92-0651  | Case - Transaxle       | 1        |
| 4        | 60-6750  | Screw - Cap Hex. Hd.                    | 11       | 20       | 92-0808  | Shim Set               | 1        |
| 5        | 92-0662  | Cap - Oil                               | 1        | 21       | 92-0657  | Plate - Center         | 1        |
| 6        | 92-0788  | O-Ring                                  | 1        | 22       | 92-0759  | Ring - Retaining       | 1        |
| 7        | 92-0652  | Cover - Upper                           | 1        | 23       | 92-0807  | Cap - Sealing          | 1        |
| 8        | 92-0765  | Pin - Alignment                         | 4        | 24       | 48-7560  | Screw - Cap Hex. Hd.   | 1        |
| 9        | 92-0653  | Cover - Side                            | 1        | 25       | 92-0706  | Cap - Fork Shaft       | 1        |
| 10       | 42-9530  | Screw - Cap Hex. Hd.                    | 25       | 26       | 92-0791  | Seal - Oil             | 1        |
| 11       | 92-0809  | Shim Set                                | 1        | 27       | 92-0743  | Breather - Air         | 1        |
| 12       |          | O-Ring                                  | 1        | 28       | 92-0804  | Stud                   | 1        |
| 13       | 92-0773  | Drain Plug Assembly<br>(Incl. Ref. #12) | 1        | 29       | 92-0790  | O-Ring                 | 1        |
| 14       | 92-0789  | O-Ring                                  | 1        | 30       | 92-0655  | Cover - Seal           | 1        |
| 15       | 92-0760  | Ring - Retaining                        | 1        | 31       | 92-0796  | Screw - Cap Hex. Hd.   | 5        |
| 16       | 92-0793  | Seal - Oil                              | 2        | 32       | 42-9850  | Washer - Lock          | 42       |
|          |          |                                         |          | 33       | 92-0775  | Bearing - Ball         | 2        |

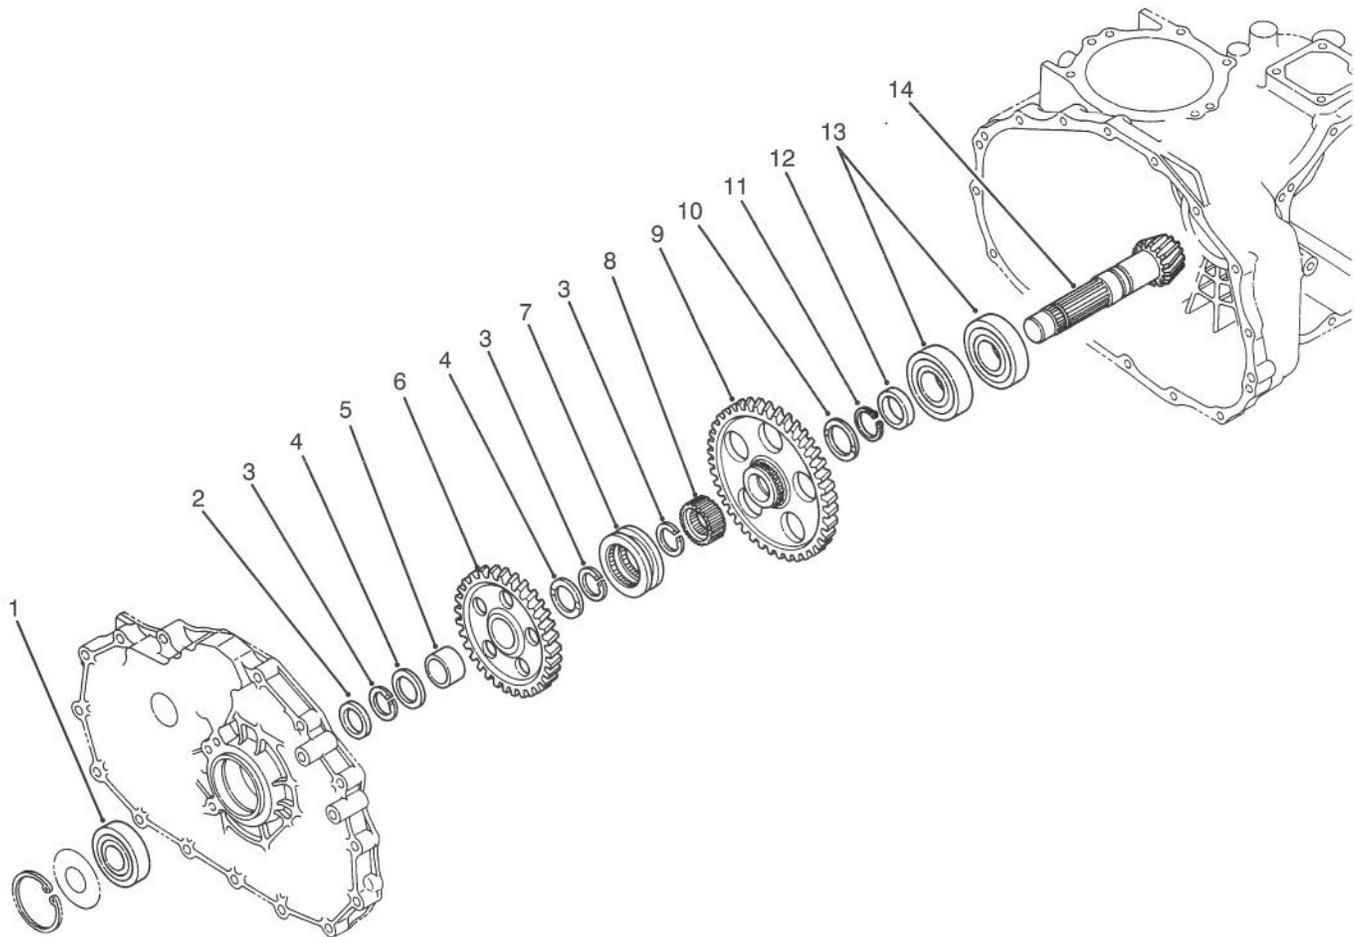


T-1536

## COUNTERSHAFT ASSEMBLY

| Ref. No. | Part No. | Description      | No. Used |
|----------|----------|------------------|----------|
| 1        | 92-0712  | Bearing - Ball   | 1        |
| 2        | 92-0716  | Collar           | 1        |
| 3        | 92-0764  | Ring - Retaining | 3        |
| 4        | 92-0711  | Washer - Thrust  | 2        |
| 5        | 92-0783  | Sleeve - Inner   | 1        |
| 6        | 92-0715  | Gear - 49T       | 1        |
| 7        | 92-0718  | Shifter - Hi-Lo  | 1        |
| 8        | 92-0719  | Collar - Spline  | 1        |

| Ref. No. | Part No. | Description                                 | No. Used |
|----------|----------|---------------------------------------------|----------|
| 9        | 92-0717  | Gear - 71T                                  | 1        |
| 10       | 92-0741  | Washer - Thrust                             | 1        |
| 11       | 92-0755  | Ring - Retaining                            | 1        |
| 12       | 92-0713  | Collar                                      | 1        |
| 13       | 92-0714  | Bearing - Ball                              | 2        |
| 14       | 92-0710  | Counter Shaft Assembly<br>(Incl. Ring Gear) | 1        |

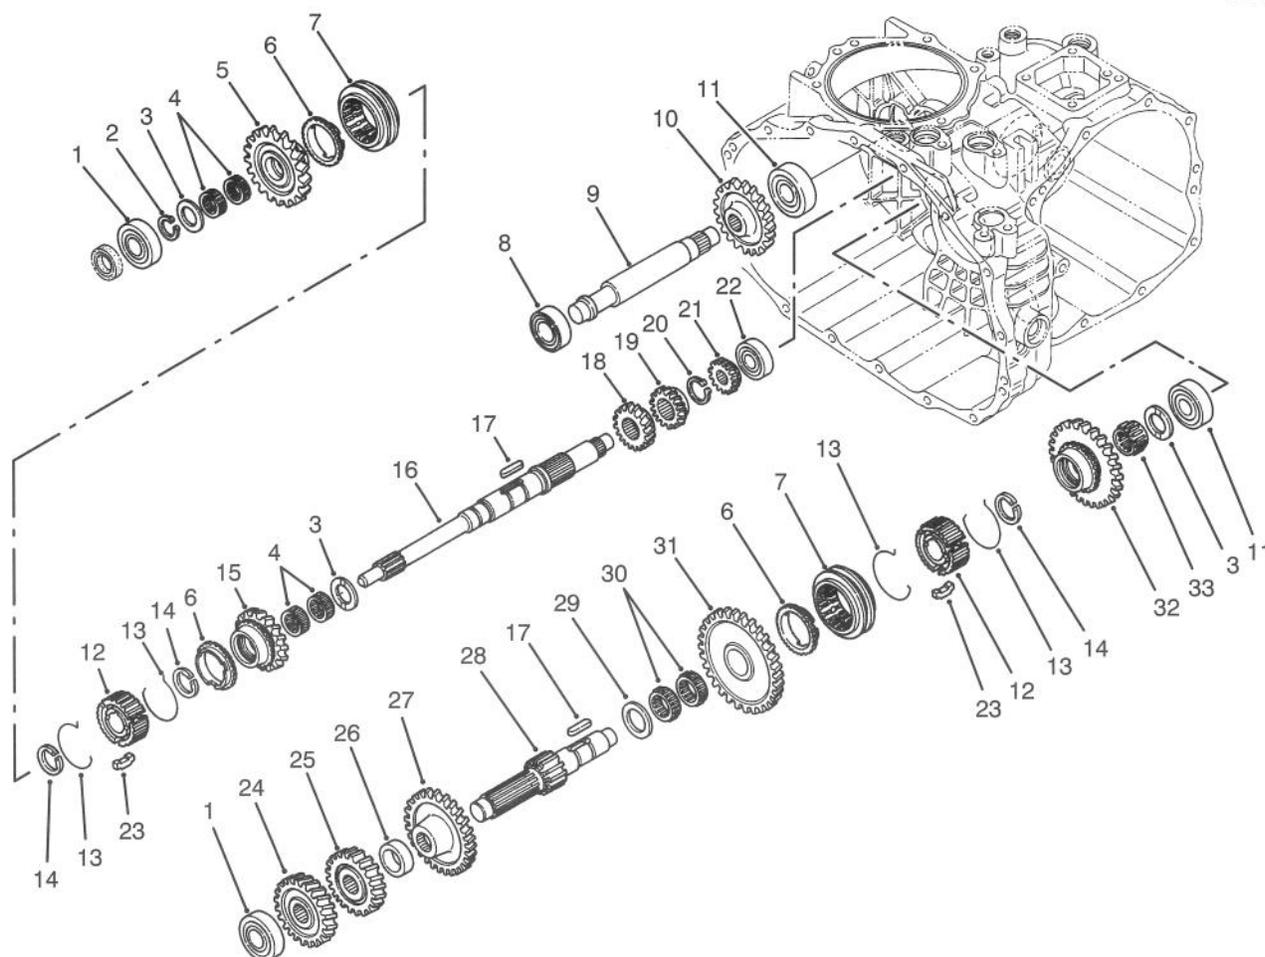


T-1533

## TRANSAXLE GEAR SHAFTS ASSEMBLY

| Ref. No. | Part No. | Description           | No. Used |
|----------|----------|-----------------------|----------|
| 1        | 251-8    | Bearing - Ball        | 2        |
| 2        | 92-0753  | Ring - Retaining      | 1        |
| 3        | 92-0740  | Washer - Thrust       | 3        |
| 4        | 92-0781  | Bearing - Needle      | 4        |
| 5        | 92-0670  | Gear - 29T            | 1        |
| 6        | 92-0667  | Ring - Synchro        | 3        |
| 7        | 92-0668  | Shifter - Synchro     | 2        |
| 8        | 251-346  | Bearing - Ball        | 1        |
| 9        | 92-0683  | Shaft - Reverse Idler | 1        |
| 10       | 92-0684  | Gear - 33T            | 1        |
| 11       | 92-0778  | Bearing - Ball        | 2        |
| 12       | 92-0664  | Hub - Synchro         | 2        |
| 13       | 92-0666  | Spring - Synchro      | 4        |
| 14       | 92-0763  | Ring - Retaining      | 3        |
| 15       | 92-0671  | Gear - 22T            | 1        |
| 16       | 92-0663  | Shaft - Main          | 1        |
| 17       | 92-0772  | Key                   | 2        |

| Ref. No. | Part No. | Description       | No. Used |
|----------|----------|-------------------|----------|
| 18       | 92-0687  | Gear - 16T        | 1        |
| 19       | 92-0672  | Gar - 18T         | 1        |
| 20       | 92-0754  | Ring - Retaining  | 1        |
| 21       | 92-0673  | Gear - 14T        | 1        |
| 22       | 92-0650  | Bearing - Ball    | 1        |
| 23       | 92-0665  | Key - Synchro     | 6        |
| 24       | 92-0675  | Gear - 25T        | 1        |
| 25       | 92-0679  | Gear - 23T        | 1        |
| 26       | 92-0680  | Collar            | 1        |
| 27       | 92-0676  | Gear - 32T        | 1        |
| 28       | 92-0674  | Shaft - Reduction | 1        |
| 29       | 92-0682  | Washer - Thrust   | 1        |
| 30       | 92-0681  | Bearing - Needle  | 2        |
| 31       | 92-0677  | Gear - 49T        | 1        |
| 32       | 92-0819  | Gear - 40T        | 1        |
| 33       | 92-0782  | Bearing - Needle  | 1        |

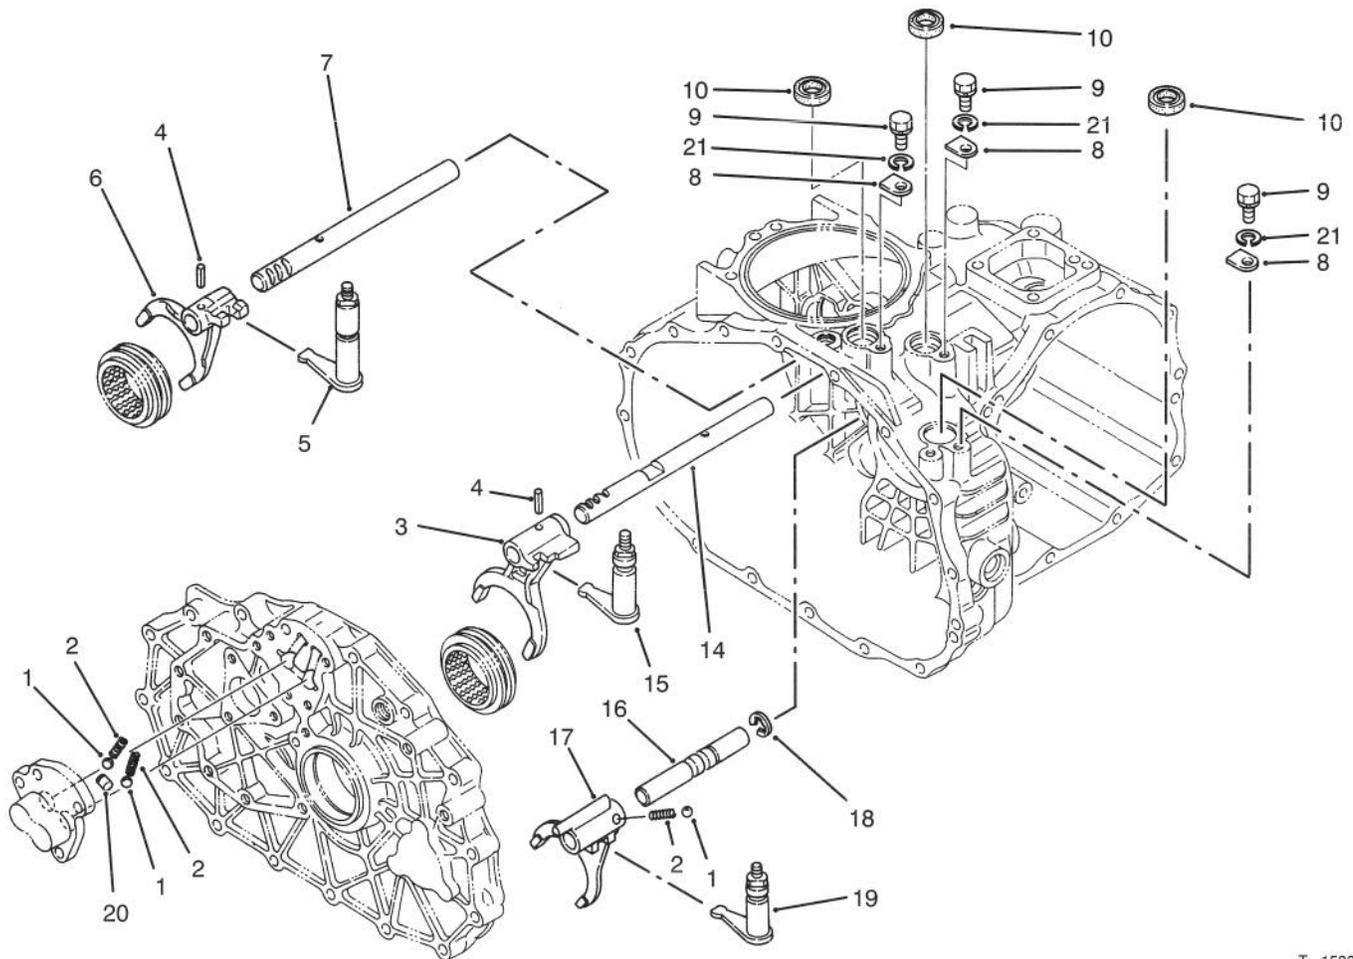


T-1530

## SHIFT FORK ASSEMBLY


| Ref. No. | Part No. | Description          | No. Used |
|----------|----------|----------------------|----------|
| 1        | 92-0785  | Ball                 | 3        |
| 2        | 92-0731  | Spring - Compression | 3        |
| 3        | 92-0700  | Fork - Shift R-1     | 1        |
| 4        | 92-0769  | Pin - Spring         | 2        |
| 5        | 92-0817  | Arm - Shift Fork 2-3 | 1        |
| 6        | 92-0701  | Fork - Shift 2-3     | 1        |
| 7        | 92-0699  | Shaft - Fork 2-3     | 1        |
| 8        | 92-0732  | Plate - Keeper       | 3        |
| 9        | 48-7700  | Screw - Cap Hex. Hd. | 3        |

| Ref. No. | Part No. | Description            | No. Used |
|----------|----------|------------------------|----------|
| 10       | 92-0729  | Seal - Oil             | 3        |
| 14       | 92-0698  | Shaft - Fork R-1       | 1        |
| 15       | 92-0816  | Arm - Shift Fork R-1   | 1        |
| 16       | 92-0708  | Shaft - Fork Hi-Lo     | 1        |
| 17       | 92-0709  | Fork - Shift Hi-Lo     | 1        |
| 18       | 92-0761  | Ring - Retaining       | 1        |
| 19       | 92-0818  | Arm - Shift Fork Hi-Lo | 1        |
| 20       | 92-0705  | Lock - Spindle         | 1        |
| 21       | 42-9850  | Washer - Lock          | 3        |

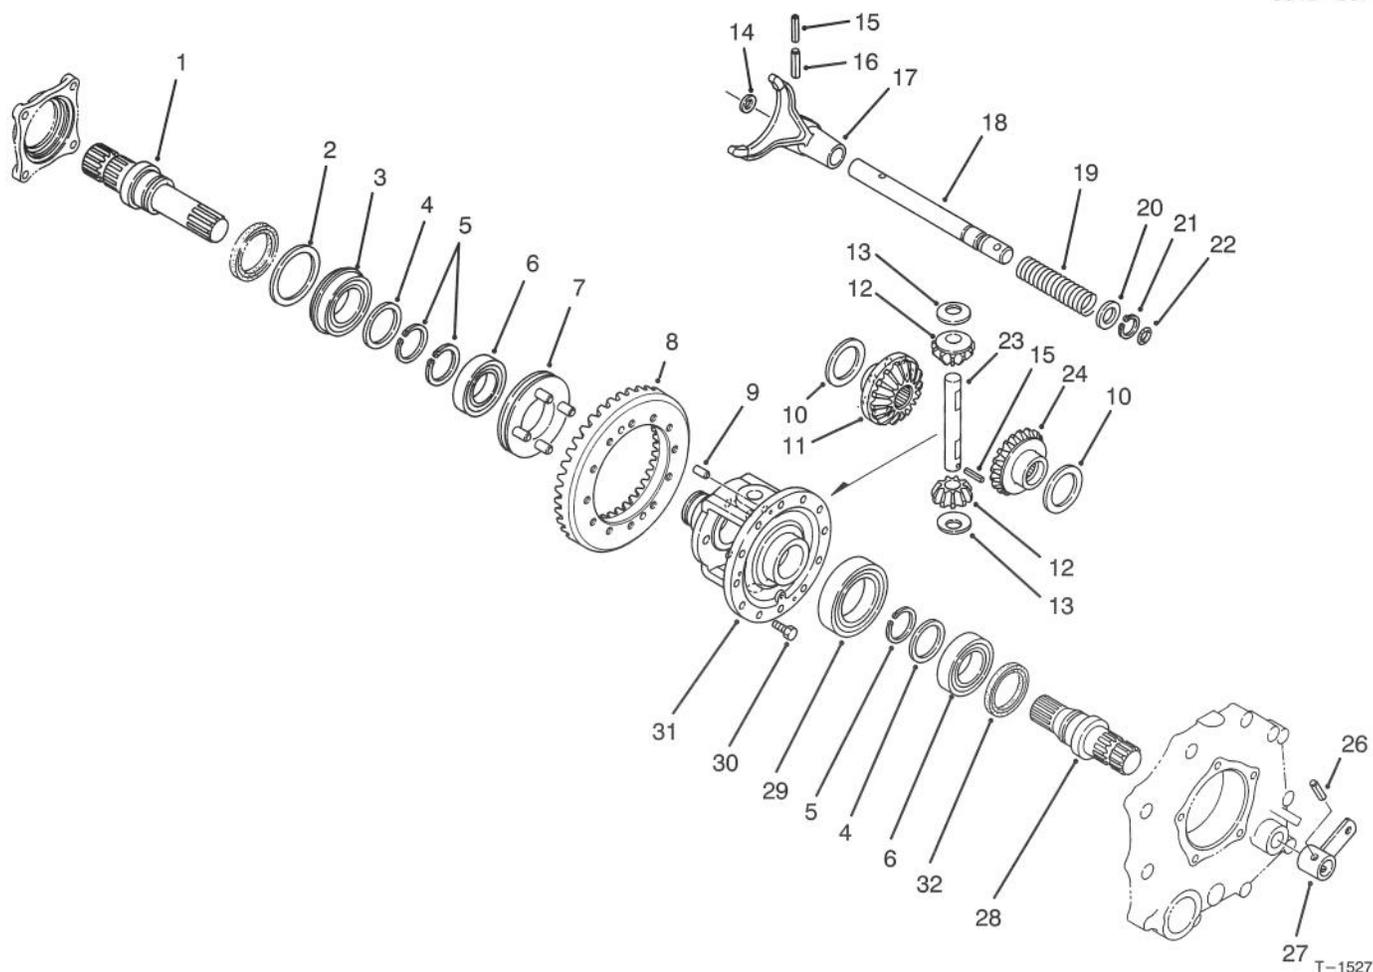

## DIFFERENTIAL GEAR ASSEMBLY

| Ref. No. | Part No. | Description                                 | No. Used | Ref. No. | Part No. | Description              | No. Used |
|----------|----------|---------------------------------------------|----------|----------|----------|--------------------------|----------|
| 1        | 92-0726  | Shaft - Axle R.H.                           | 1        | 16       | 92-0771  | Pin - Spring             | 1        |
| 2        | 92-0728  | Washer                                      | 1        | 17       | 92-0721  | Fork - Differential Lock | 1        |
| 3        | 92-0780  | Bearing - Ball                              | 1        | 18       | 92-0722  | Shaft - Lock Fork        | 1        |
| 4        | 92-0727  | Washer                                      | 2        | 19       | 92-0723  | Spring - Compression     | 1        |
| 5        | 92-0756  | Ring - Retaining                            | 3        | 20       | 92-0733  | Washer                   | 1        |
| 6        | 92-0775  | Bearing - Ball                              | 2        | 21       | 92-0753  | Ring - Retaining         | 1        |
| 7        | 92-0730  | Slider - Differential Lock                  | 1        | 22       | 92-0787  | O-Ring                   | 1        |
| 8        | 92-0710  | Ring Gear Assembly<br>(Incl. Counter Shaft) | 1        | 23       | 92-0749  | Shaft - Pinion           | 1        |
| 9        | 92-0765  | Pin - Alignment                             | 2        | 24       | 92-0745  | Gear - Side L.H.         | 1        |
| 10       | 92-0747  | Washer - Thrust                             | 2        | 26       | 92-0770  | Pin - Spring             | 1        |
| 11       | 92-0746  | Gear - Side R.H.                            | 1        | 27       | 92-0724  | Arm - Differential Lock  | 1        |
| 12       | 92-0748  | Gear - Pinion                               | 2        | 28       | 92-0725  | Shaft - Axle L.H.        | 1        |
| 13       | 92-0750  | Washer                                      | 2        | 29       | 92-0776  | Bearing - Ball           | 1        |
| 14       | 92-0744  | Washer                                      | 1        | 30       | 92-0803  | Screw - Hex. Flange Hd.  | 12       |
| 15       | 92-0768  | Pin - Spring                                | 2        | 31       | 92-0720  | Case - Differential      | 1        |
|          |          |                                             |          | 32       | 92-0793  | Seal - Oil               | 2        |

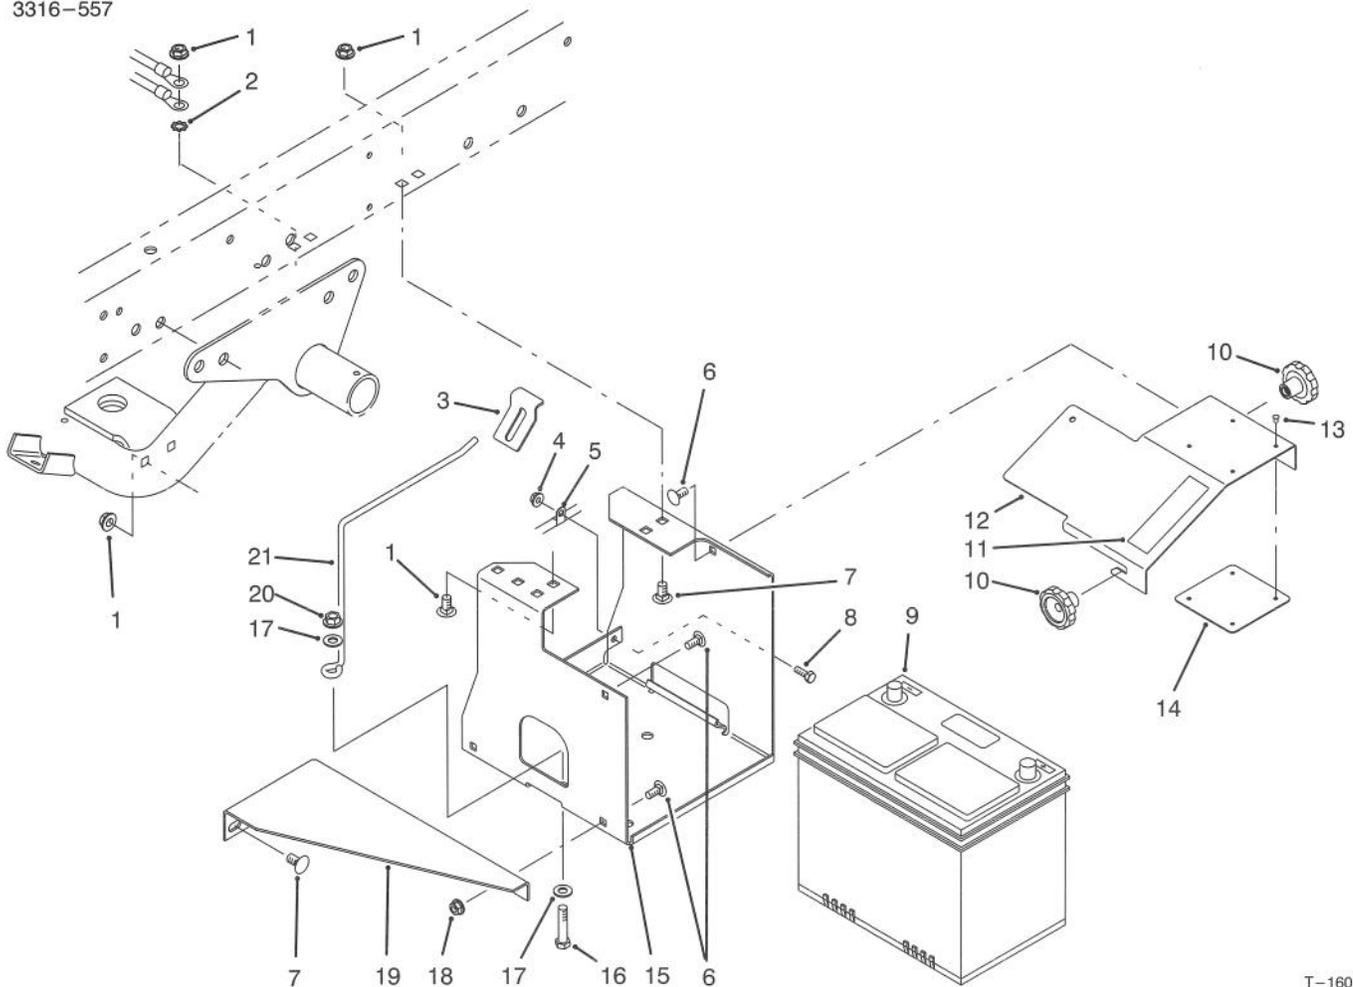


T-1608

## BATTERY MOUNT ASSEMBLY

| Ref. No. | Part No. | Description           | No. Used |
|----------|----------|-----------------------|----------|
| 1        | 3290-357 | Nut - Flange Lock     | 6        |
| 2        | 3255-9   | Washer - Lock ETLW    | 1        |
| 3        | 87-7610  | Tab - Battery Support | 1        |
| 4        | 32128-33 | Nut - Flange Lock     | 1        |
| 5        | 2412-89  | Clamp - R             | 1        |
| 6        | 3230-23  | Bolt - Carriage       | 4        |
| 7        | 3231-21  | Bolt - Carriage       | 6        |
| 8        | 321-4    | Screw - Cap Hex. Hd.  | 1        |
| 9        | 55-7290  | Battery               | 1        |
| 10       | 19-4050  | Knob                  | 2        |
| ‡11      | 36-3400  | Decal - No Step       | 1        |

| Ref. No. | Part No. | Description            | No. Used |
|----------|----------|------------------------|----------|
| 12       | 87-5130  | Cover - Battery Base   | 1        |
| 13       | 3296-27  | Rivet - Plastic        | 4        |
| 14       | 87-7620  | Shield - Plastic       | 1        |
| 15       | 87-5120  | Bracket - Battery Base | 1        |
| 16       | 323-9    | Screw - Cap Hex. Hd.   | 1        |
| 17       | 3256-24  | Washer - Flat          | 2        |
| 18       | 32128-20 | Nut - Flange Lock      | 2        |
| 19       | 87-5110  | Support - Lower        | 1        |
| 20       | 3296-39  | Nut - Flange Lock      | 1        |
| 21       | 87-7600  | Rod - Battery Support  | 1        |

‡For different language versions of this part, see International Decal Cross Reference.

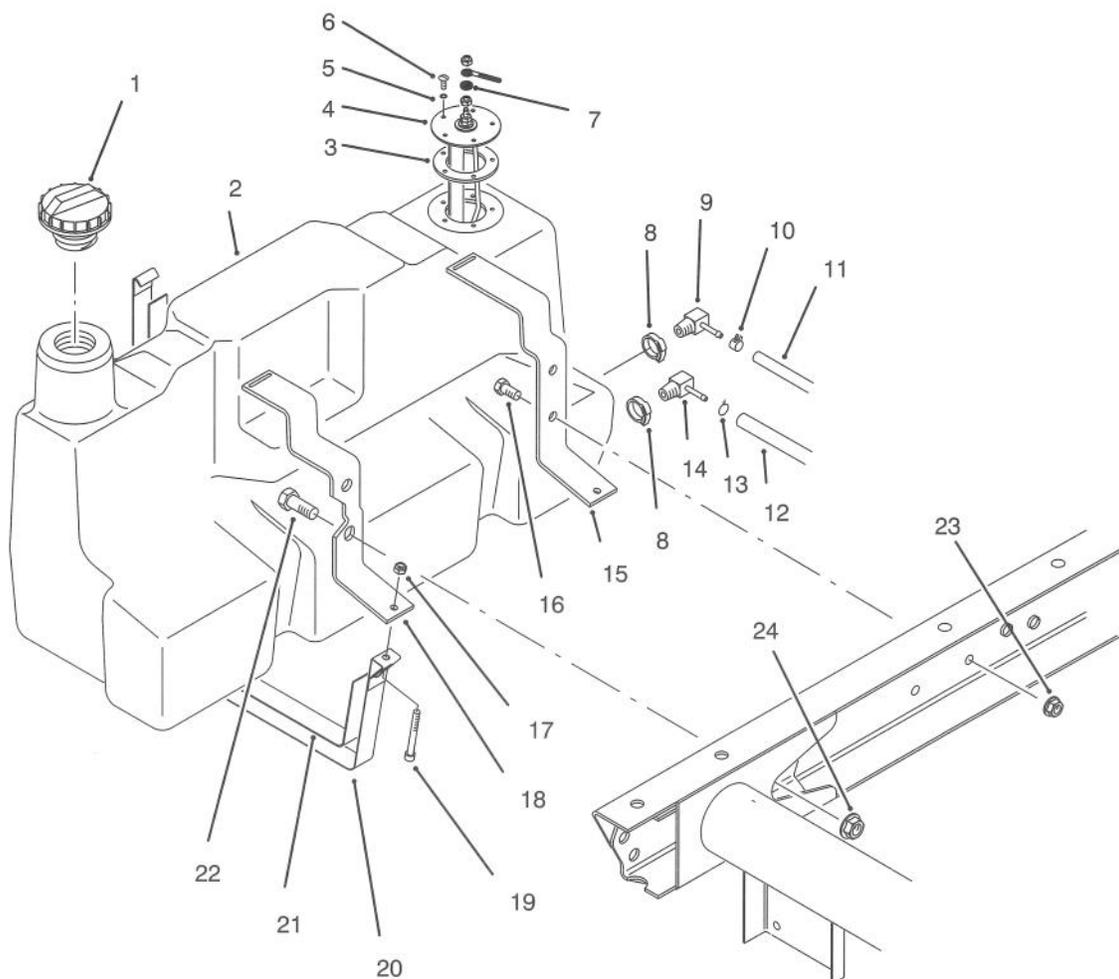


T-1609

## FUEL TANK ASSEMBLY

| Ref. No. | Part No. | Description                                   | No. Used |
|----------|----------|-----------------------------------------------|----------|
| 1        | 70-8631  | Cap - Fuel                                    | 1        |
| 2        | 87-0650  | Fuel Tank Assembly<br>(Incl. Ref. #8, 9 & 14) | 1        |
| 3        | 62-7650  | Gasket - Sending Unit                         | 1        |
| 4        | 63-7640  | Unit - Sending                                | 1        |
| 5        | 3253-15  | Washer - Lock                                 | 5        |
| 6        | 32122-24 | Screw - Round Hd                              | 5        |
| 7        | 5-3637   | Washer - Flat                                 | 1        |
| 8        | 2412-36  | Clamp                                         | 2        |
| 9        | 76-4430  | Fitting - Fuel 90°                            | 1        |
| 10       | 2412-108 | Clamp - Hose                                  | 1        |
| 11       | 75-4701  | Hose - Fuel                                   | 1        |
| 12       | 63-9640  | Hose - Fuel                                   | 2        |

| Ref. No. | Part No. | Description              | No. Used |
|----------|----------|--------------------------|----------|
| 13       | 92-2379  | Clamp - Hose             | 1        |
| 14       | 353-781  | Fitting - Fuel 90°       | 1        |
| 15       | 87-3140  | Support - Rear           | 1        |
| 16       | 323-4    | Screw - Cap Hex. Hd.     | 2        |
| 17       | 3296-42  | Nut - Lock               | 2        |
| 18       | 87-3150  | Support - Front          | 1        |
| 19       | 3274-54  | Screw - Hex. Socket Hd.  | 2        |
| 20       | 87-3160  | Strap - Tank Support     | 2        |
| 21       | 87-3170  | Pad - Tank Support Strap | 2        |
| 22       | 3234-38  | Screw - Cap Hex. Hd.     | 2        |
| 23       | 3290-357 | Nut - Flange             | 2        |
| 24       | 32128-23 | Nut - Flange             | 2        |

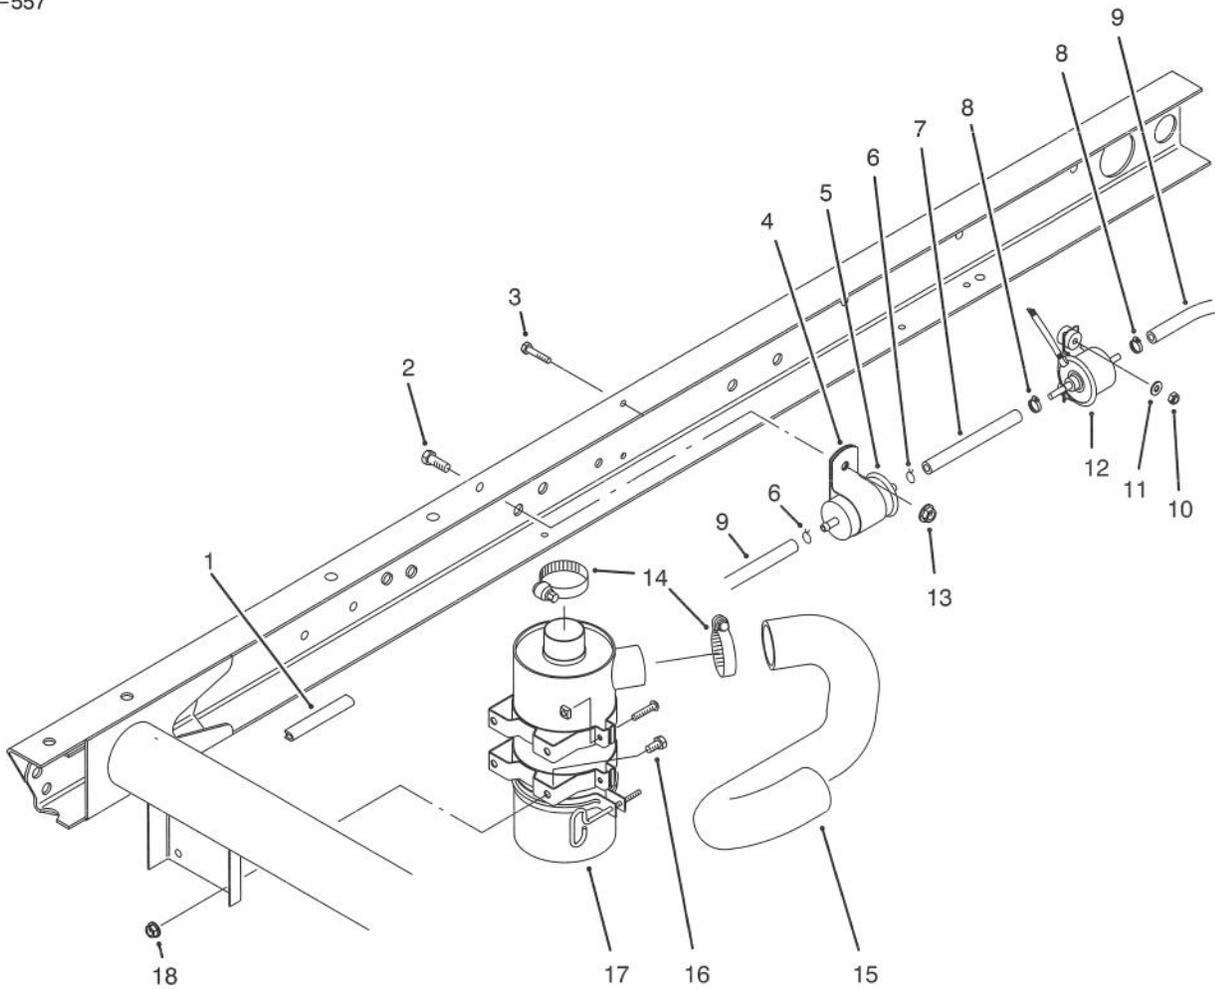


T-1738

## AIR CLEANER & FUEL SUPPLY ASSEMBLY

| Ref. No. | Part No. | Description          | No. Used |
|----------|----------|----------------------|----------|
| 1        | 43-4300  | Trim                 | 1        |
| 2        | 323-6    | Screw - Cap Hex. Hd. | 1        |
| 3        | 48-7650  | Screw - Cap Hex. Hd. | 2        |
| 4        | 2412-96  | Clamp - R            | 1        |
| 5        | 18-1520  | Filter - Fuel        | 1        |
| 6        | 92-2379  | Clamp - Hose         | 2        |
| 7        | 71-2690  | Hose - Fuel          | 1        |
| 8        | 2412-108 | Clamp - Hose         | 2        |
| 9        | 47-2964  | Hose - Fuel          | 1        |

| Ref. No. | Part No. | Description          | No. Used |
|----------|----------|----------------------|----------|
| 10       | 49-7810  | Nut - Lock           | 2        |
| 11       | 3256-67  | Washer - Flat        | 2        |
| 12       | 92-2007  | Pump - Fuel          | 2        |
| 13       | 3290-357 | Nut - Flange         | 1        |
| 14       | 2412-92  | Clamp - Hose         | 2        |
| 15       | 87-3350  | Hose - Air Cleaner   | 1        |
| 16       | 322-2    | Screw - Cap Hex. Hd. | 4        |
| 17       | 87-8300  | Air Cleaner Assembly | 1        |
| 18       | 32128-20 | Nut - Flange         | 4        |

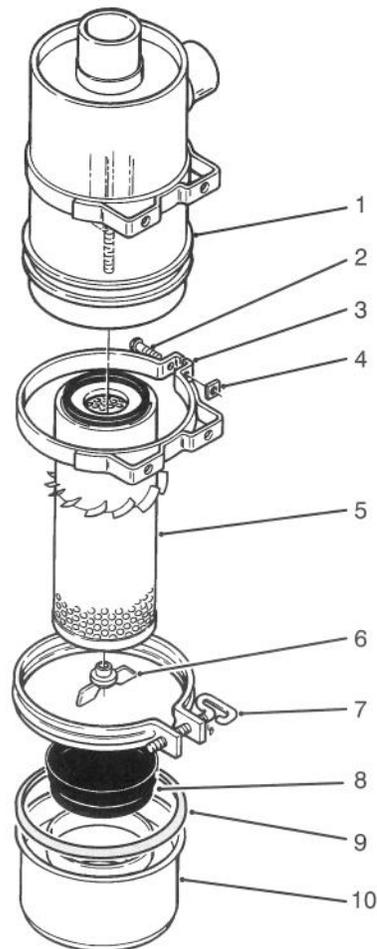


T-1349

## AIR CLEANER ASSEMBLY

| Ref. No. | Part No. | Description                            | No. Used | Ref. No. | Part No. | Description                                     | No. Used |
|----------|----------|----------------------------------------|----------|----------|----------|-------------------------------------------------|----------|
| 1        |          | Body                                   | 1        | 7        | 33-1340  | Assembly - Clamp                                | 1        |
| 2        | 3258-19  | Screw - Round Head                     | 2        | 8        | 33-1310  | Baffle                                          | 1        |
| 3        | 33-1350  | Assembly - Band<br>(Incl. Ref. #2 & 4) | 2        | 9        | 87-7560  | Seal - Air Cleaner                              | 1        |
| 4        | 32107-11 | Nut - Square                           | 2        | 10       | 33-1320  | Cup                                             | 1        |
| 5        | 33-1300  | Assembly - Element                     | 1        | *        | 87-8300  | Air Cleaner (Complete)<br>(Incl. Ref. #1, 5-10) | 1        |
| 6        | 33-1330  | Assembly - Nut                         | 1        |          |          |                                                 |          |

\*Not Illustrated

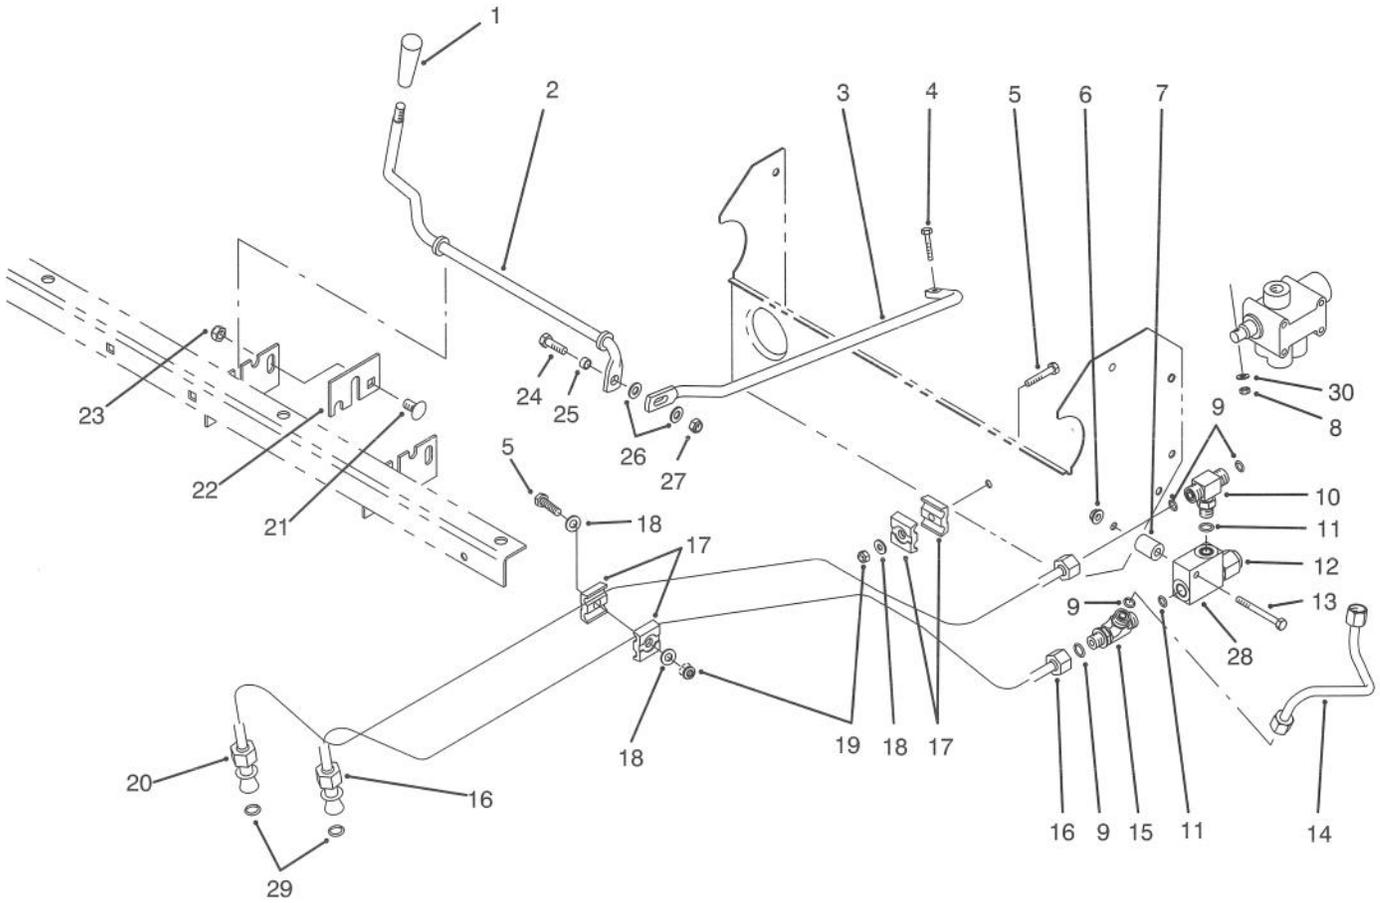


T-1610

## LIFT VALVE LINKAGE ASSEMBLY

| Ref. No. | Part No. | Description                                     | No. Used |
|----------|----------|-------------------------------------------------|----------|
| 1        | 233-39   | Knob                                            | 1        |
| 2        | 87-4500  | Rod - Pivot                                     | 1        |
| 3        | 87-4510  | Rod - Connecting                                | 1        |
| 4        | 87-5150  | Screw - Cap Hex. Hd.                            | 1        |
| 5        | 321-9    | Screw - Cap Hex. Hd.                            | 2        |
| 6        | 32128-33 | Nut - Flange Lock                               | 1        |
| 7        | 75-9610  | Spacer                                          | 1        |
| 8        | 87-5140  | Nut - Lock                                      | 1        |
| 9        | 237-22   | Seal - O-Ring                                   | 4        |
| 10       | 340-94   | Fitting - Hydraulic Tee<br>(Incl. Ref. #9 & 11) | 1        |
| 11       | 237-42   | Seal - O-Ring                                   | 2        |
| 12       | 92-2160  | Cartridge - Relief Valve                        | 1        |
| 13       | 321-15   | Screw - Cap Hex. Hd.                            | 1        |
| 14       | 87-4560  | Tube - Hydraulic                                | 1        |
| 15       | 340-86   | Fitting - Hydraulic Tee<br>(Incl. Ref. #9 & 11) | 1        |
| 16       | 87-4550  | Hydraulic Tube Assembly<br>(Incl. Ref. #29)     | 1        |

| Ref. No. | Part No. | Description                                      | No. Used |
|----------|----------|--------------------------------------------------|----------|
| 17       | 56-7973  | Clamp - Hydraulic Tube                           | 4        |
| 18       | 3256-22  | Washer - Flat                                    | 3        |
| 19       | 3296-42  | Nut - Lock                                       | 2        |
| 20       | 87-4540  | Hydraulic Tube Assembly<br>(Incl. Ref. #29)      | 1        |
| 21       | 3231-21  | Bolt - Carriage                                  | 1        |
| 22       | 87-4490  | Bracket - Hold-Down                              | 1        |
| 23       | 3296-39  | Nut - Lock                                       | 1        |
| 24       | 322-5    | Screw - Cap Hex. Hd.                             | 1        |
| 25       | 87-5080  | Spacer - Connecting                              | 1        |
| 26       | 3256-23  | Washer - Flat                                    | 2        |
| 27       | 3296-29  | Nut - Lock                                       | 1        |
| 28       | 92-2161  | Body - Relief Valve                              | 1        |
| 29       | 39-7310  | Seal - O-Ring                                    | 2        |
| 30       | 3256-14  | Washer - Flat                                    | 1        |
| *        | 87-3680  | Assembly - Relief Valve<br>(Incl. Ref. #12 & 28) | 1        |

\*Not Illustrated

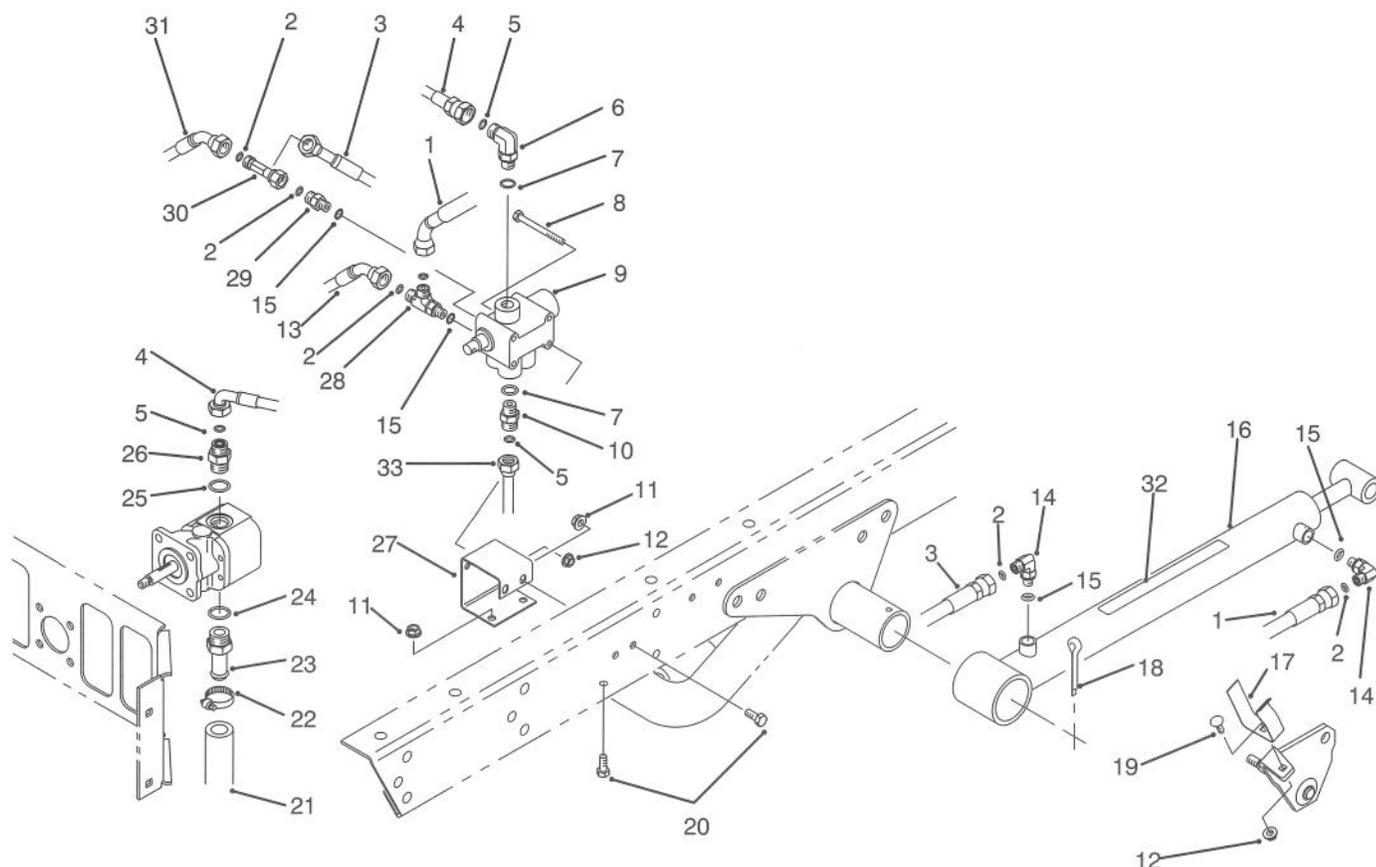


T-1611

## LIFT VALVE & CYLINDER ASSEMBLY

| Ref. No. | Part No. | Description                                     | No. Used | Ref. No. | Part No. | Description                                          | No. Used |
|----------|----------|-------------------------------------------------|----------|----------|----------|------------------------------------------------------|----------|
| 1        | 92-2697  | Hose - Hydraulic                                | 1        | 19       | 3229-25  | Screw - Carriage                                     | 2        |
| 2        | 237-21   | Seal - O-Ring                                   | 6        | 20       | 322-3    | Screw - Cap Hex. Hd.                                 | 4        |
| 3        | 87-4880  | Hose - Hydraulic                                | 1        | 21       | 87-3670  | Hose - Hydraulic                                     | 1        |
| 4        | 87-4870  | Hose - Hydraulic                                | 1        | 22       | 2412-34  | Clamp                                                | 1        |
| 5        | 237-22   | Seal - O-Ring                                   | 3        | 23       | 354-136  | Fitting - Hydraulic Straight<br>(Incl. Ref. #24)     | 1        |
| 6        | 340-77   | Fitting - Hydraulic 90°<br>(Incl. Ref. #5 & 7)  | 1        | 24       | 237-80   | Seal - O-Ring                                        | 1        |
| 7        | 237-42   | Seal - O-Ring                                   | 2        | 25       | 237-79   | Seal - O-Ring                                        | 1        |
| 8        | 321-14   | Screw - Cap Hex. Hd.                            | 2        | 26       | 340-3    | Fitting - Hydraulic Straight<br>(Incl. Ref. #5 & 25) | 1        |
| 9        | 43-1950  | Valve                                           | 1        | 27       | 87-4520  | Bracket - Dump Valve                                 | 1        |
| 10       | 340-2    | Fitting - Straight                              | 1        | 28       | 340-140  | Fitting - Hydraulic Tee<br>(Incl. Ref. #2 & 15)      | 1        |
| 11       | 32128-20 | Nut - Flange Head                               | 4        | 29       | 340-92   | Fitting - Hydraulic Straight<br>(Incl. Ref. #2 & 15) | 1        |
| 12       | 32128-33 | Nut - Flange Head                               | 2        | 30       | 340-151  | Fitting - Hydraulic Tee<br>(Incl. Ref. #2)           | 1        |
| 13       | 87-4910  | Hose - Hydraulic                                | 1        | 31       | 87-4900  | Hose - Hydraulic                                     | 1        |
| 14       | 340-132  | Fitting - Hydraulic 90°<br>(Incl. Ref. #2 & 15) | 4        | ‡32      | 87-7930  | Decal - Warning                                      | 2        |
| 15       | 237-78   | Seal - O-Ring                                   | 4        | 33       | 87-4560  | Tube - Hydraulic                                     | 1        |
| 16       | 87-7990  | Hydraulic Cylinder Assy.<br>(Incl. Ref. #32)    | 2        |          |          |                                                      |          |
| 17       | 87-3720  | Retainer - Cylinder                             | 2        |          |          |                                                      |          |
| 18       | 3272-37  | Pin - Cotter                                    | 2        |          |          |                                                      |          |

‡For different language versions of this part, see International Decal Cross Reference.

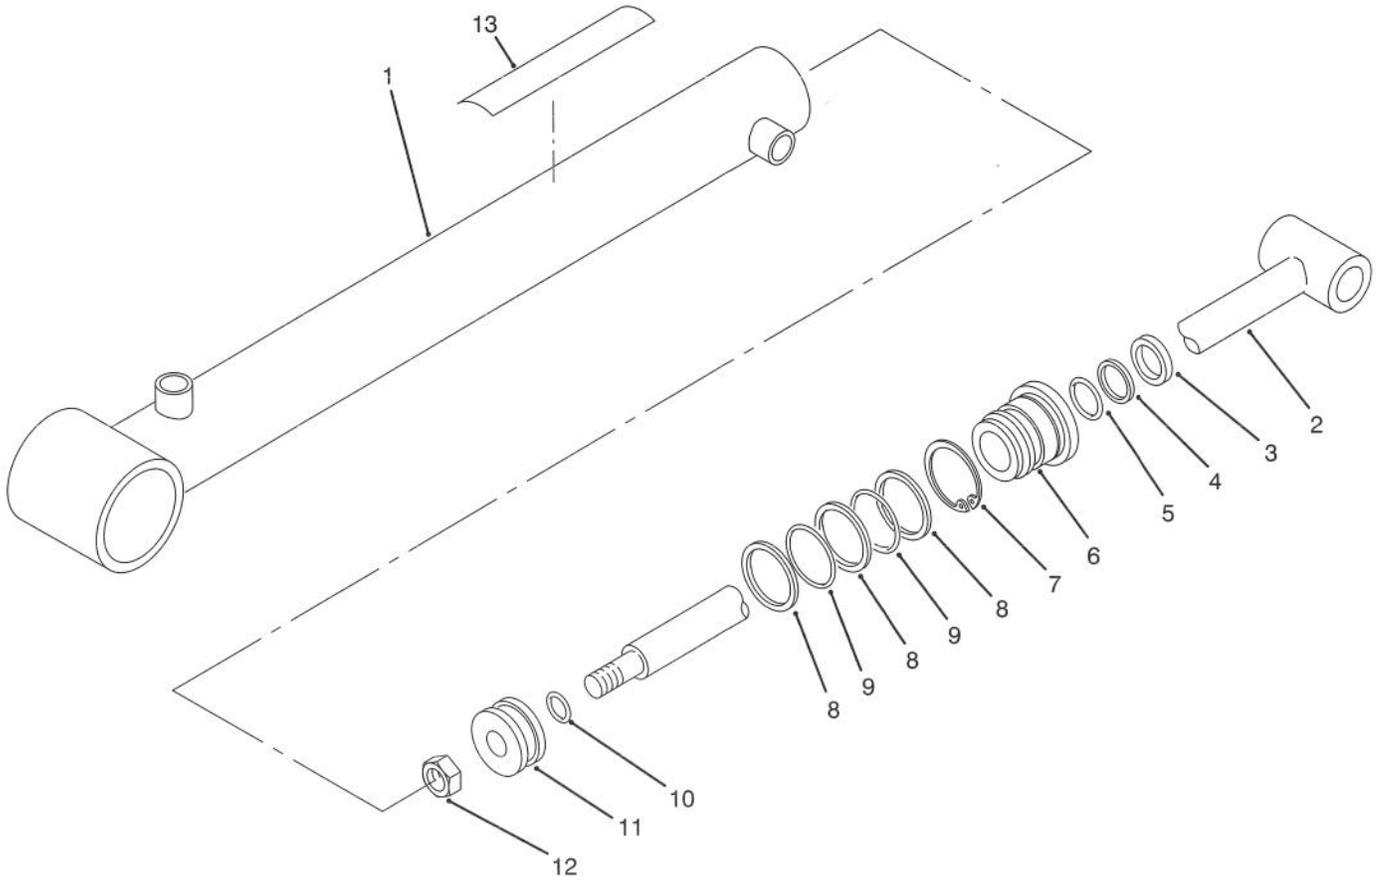

T-1612


### LIFT CYLINDER 87-7990

| Ref. No. | Part No. | Description      | No. Used |
|----------|----------|------------------|----------|
| 1        |          | Barrel Assembly  | 1        |
| 2        | 92-2163  | Shaft            | 1        |
| 3        |          | Seal - Dust      | 1        |
| 4        |          | Backup           | 1        |
| 5        |          | Seal - O-Ring    | 1        |
| 6        | 92-2162  | Head             | 1        |
| 7        | 84-1680  | Ring - Retaining | 1        |
| 8        |          | Backup           | 3        |

| Ref. No. | Part No. | Description                              | No. Used |
|----------|----------|------------------------------------------|----------|
| 9        |          | Seal - O-Ring                            | 2        |
| 10       |          | Seal - O-Ring                            | 1        |
| 11       | 43-5150  | Piston                                   | 1        |
| 12       | 32152-10 | Nut                                      | 1        |
| ‡13      | 87-7930  | Decal - Warning                          | 1        |
| *        | 92-2165  | Kit - Repair<br>(Incl. Ref. #3-5 & 8-10) | 1        |

\*Not Illustrated

‡For different language versions of this part, see International Decal Cross Reference.

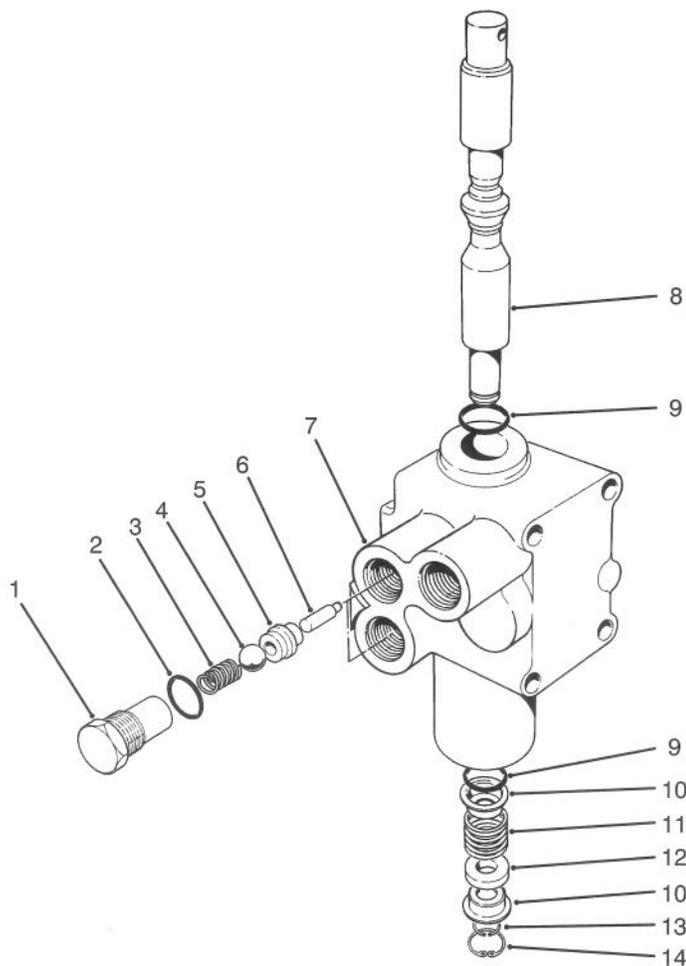


T-0280

## CONTROL VALVE ASSEMBLY NO. 43-1950

| Ref. No. | Part No. | Description      | No. Used |
|----------|----------|------------------|----------|
| 1        | 22-8330  | Plug             | 2        |
| 2        | 237-42   | O-Ring           | 2        |
| 3        | 22-8340  | Spring           | 2        |
| 4        | 22-8350  | Ball             | 2        |
| 5        | 22-8370  | Seat-Check Valve | 2        |
| 6        | 22-8360  | Pin - Cam        | 2        |
| 7        |          | Body             | 1        |

| Ref. No. | Part No. | Description             | No. Used |
|----------|----------|-------------------------|----------|
| 8        | 22-8420  | Spool                   | 1        |
| 9        | 22-8500  | O-Ring                  | 2        |
| 10       | 22-8380  | Retainer - Spring       | 2        |
| 11       | 22-8410  | Spring                  | 1        |
| 12       | 23-3030  | Spacer                  | 1        |
| 13       | 22-8480  | Ring - Retaining, Spool | 1        |
| 14       | 22-8490  | Ring - Retaining        | 1        |

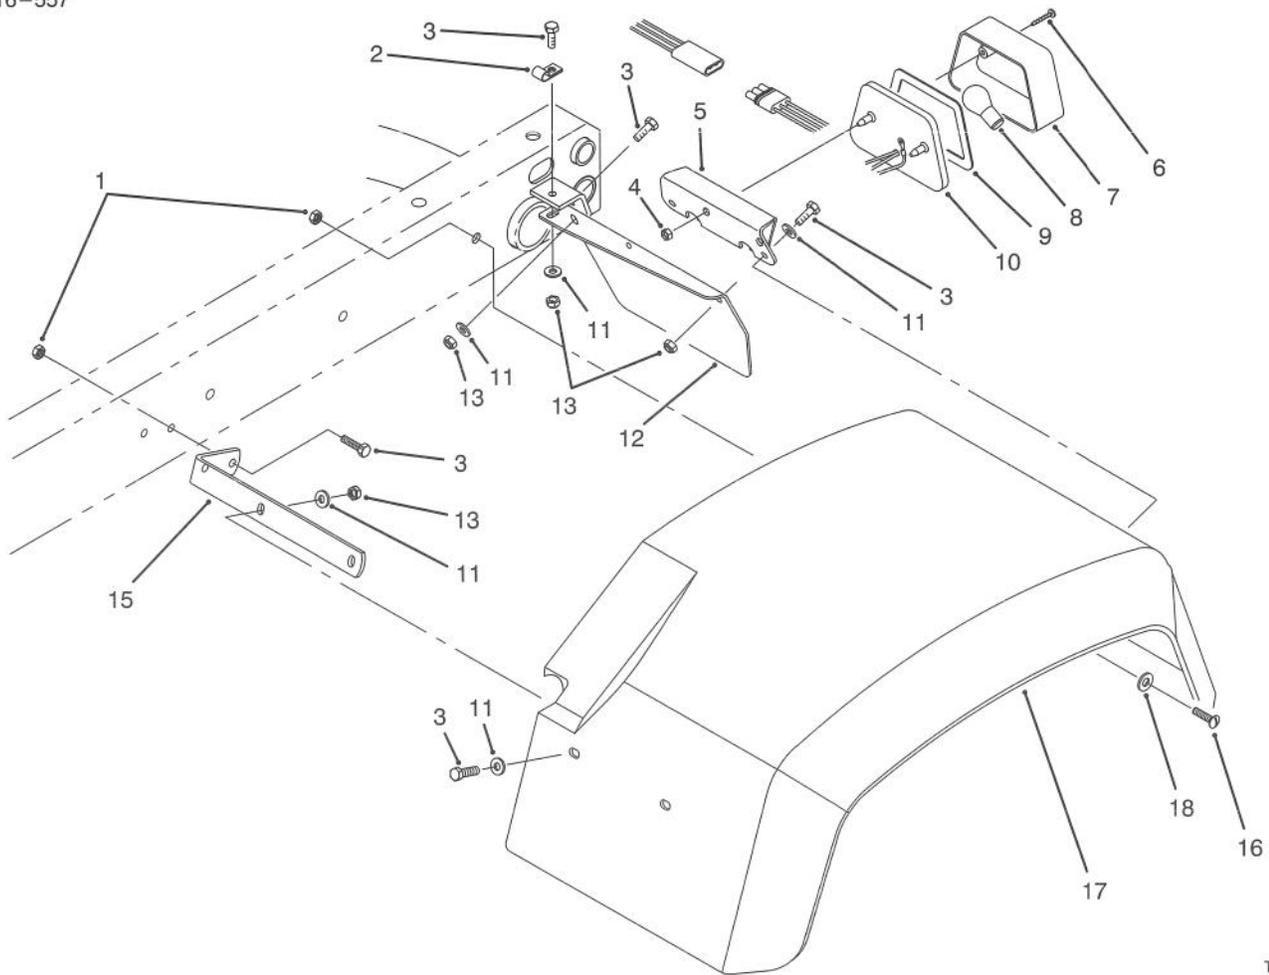


T-1613

## REAR FENDER & TAIL LIGHT ASSEMBLY

| Ref. No. | Part No. | Description                  | No. Used |
|----------|----------|------------------------------|----------|
| 1        | 3296-39  | Nut - Lock                   | 6        |
| 2        | 2412-89  | Clamp - R                    | 1        |
| 3        | 321-6    | Screw - Cap Hex. Hd.         | 16       |
| 4        | 3290-506 | Palnut                       | 2        |
| 5        | 87-5770  | U-Bracket - Tail Light       | 1        |
| 6        | 32144-93 | Screw - Self Tapping         | 2        |
| 7        | 87-6300  | Lens                         | 1        |
| 8        |          | Bulb<br>(#1157 Std. 12 Volt) | 1        |
| 9        | 87-6310  | Gasket                       | 1        |

| Ref. No. | Part No. | Description                              | No. Used |
|----------|----------|------------------------------------------|----------|
| 10       | 87-2110  | Tail Light Assembly<br>(Incl. Ref. #6-9) | 1        |
| 11       | 3256-22  | Washer - Flat                            | 23       |
| 12       | 87-5750  | Plate - Tail Light LH                    | 1        |
| *        | 87-6250  | Plate - Tail Light RH                    | 1        |
| 13       | 3296-42  | Nut - Lock                               | 16       |
| 15       | 87-6870  | Bracket - Front                          | 2        |
| 16       | 3274-94  | Screw - Socket Button Hd.                | 6        |
| 17       | 87-6660  | Fender - Rear 24"                        | 2        |
| 18       | 3256-24  | Washer - Flat                            | 6        |

\*Not Illustrated

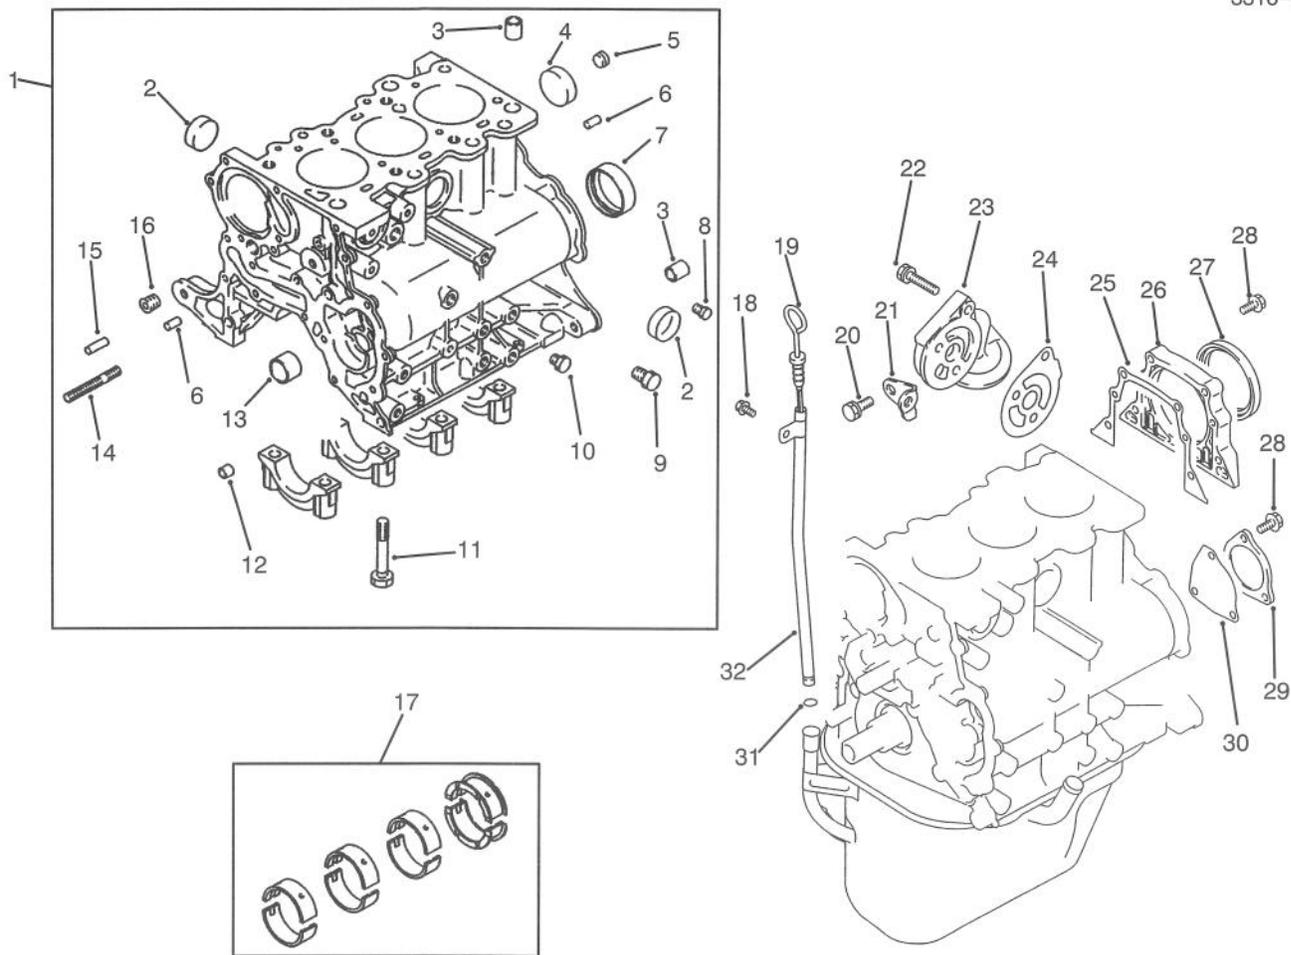


### CYLINDER BLOCK ASSEMBLY

T-1631

| Ref. No. | Part No. | Description                                | No. Used |
|----------|----------|--------------------------------------------|----------|
| 1        | 92-2006  | Assembly - Crankcase<br>(Incl. Ref. #2-16) | 1        |
| 2        | 92-2151  | Cap - Sealing                              | 3        |
| 3        | 92-2152  | Bushing                                    | 4        |
| 4        | 92-1994  | Cap - Sealing                              | 1        |
| 5        | 92-1935  | Plug - Taper                               | 1        |
| 6        | 92-2148  | Pin - Dowel                                | 2        |
| 7        | 92-1982  | Bearing - Rear                             | 1        |
| 8        | 92-1902  | Plug - Taper                               | 1        |
| 9        | 56-0100  | Plug - Taper                               | 1        |
| 10       | 92-1910  | Plug - Taper                               | 1        |
| 11       | 67-2250  | Bolt                                       | 8        |
| 12       | 67-2360  | Bushing                                    | 4        |
| 13       | 92-1981  | Bearing - Front                            | 1        |
| 14       | 92-5107  | Stud                                       | 1        |
| 15       | 92-1958  | Pin - Dowel                                | 1        |
| 16       | 67-2390  | Plug - Taper                               | 1        |

| Ref. No. | Part No. | Description             | No. Used |
|----------|----------|-------------------------|----------|
| 17       | 92-1956  | Bearing - Set, Main     | 1        |
| 18       | 92-5112  | Bolt - Flange Head      | 1        |
| 19       | 92-5110  | Gauge - Oil Level       | 1        |
| 20       | 92-2144  | Bolt                    | 2        |
| 21       | 92-5109  | Stay - Oil Filter       | 1        |
| 22       | 92-2143  | Bolt                    | 3        |
| 23       | 92-2012  | Bracket - Oil Filter    | 1        |
| 24       | 92-5108  | Gasket - Bracket        | 1        |
| 25       | 92-1987  | Gasket                  | 1        |
| 26       | 92-2045  | Housing - Seal, Oil     | 1        |
| 27       | 92-1952  | Seal - Oil              | 1        |
| 28       | 92-2131  | Bolt - Flange Head      | 7        |
| 29       | 92-1945  | Cover - Rear            | 1        |
| 30       | 92-1991  | Gasket                  | 1        |
| 31       | 92-1925  | O-Ring                  | 1        |
| 32       | 92-5111  | Guide - Oil Level Gauge | 1        |

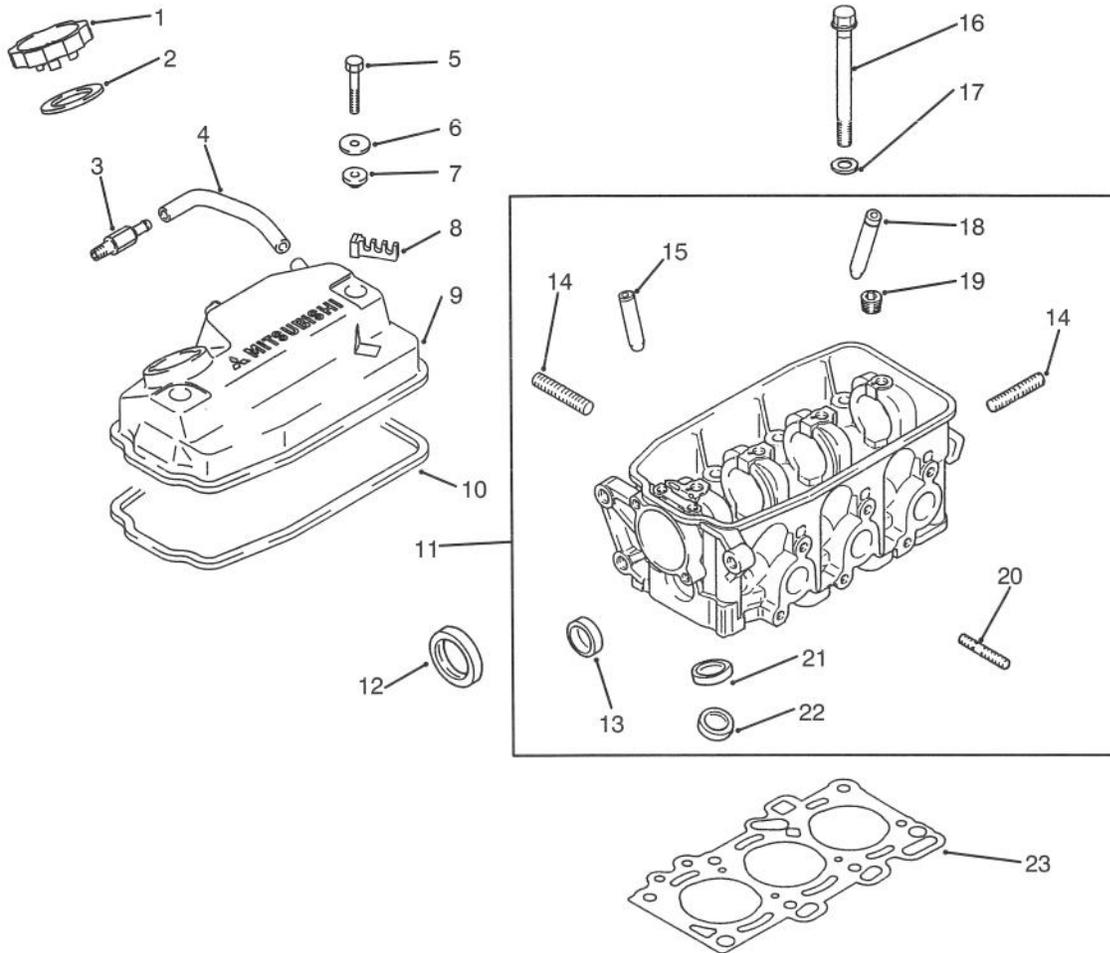


T-1630

## ROCKER COVER & CYLINDER HEAD ASSEMBLY

| Ref. No. | Part No. | Description                                       | No. Used |
|----------|----------|---------------------------------------------------|----------|
| 1        | 92-1975  | Cap - Oil<br>(Incl. Ref. #2)                      | 1        |
| 2        | 92-1943  | Packing                                           | 1        |
| 3        | 92-2050  | PCV Valve                                         | 1        |
| 4        | 92-2026  | Hose - PCV Valve                                  | 1        |
| 5        | 92-2128  | Bolt - Cover                                      | 2        |
| 6        | 92-2063  | Washer                                            | 2        |
| 7        | 92-1929  | Seal - Oil                                        | 2        |
| 8        | 92-1915  | Clamp - Cable                                     | 1        |
| 9        | 92-2020  | Assembly - Cover<br>(Incl. Ref. #8 & 10)          | 1        |
| 10       | 92-1944  | Gasket - Cover, Rocker                            | 1        |
| 11       | 92-2034  | Head - Cylinder<br>(Incl. Ref. #13-15 &<br>18-22) | 1        |
| 12       | 92-2021  | Seal - Oil                                        | 1        |
| 13       | 92-2151  | Cap - Sealing                                     | 1        |
| 14       | 42-9560  | Stud                                              | 3        |
| 15       | 92-1926  | Guide - Intake Valve<br>(.05 mm OS)               | 3        |
| *        | 92-5103  | Guide - Intake Valve<br>(.25 mm OS)               | 3        |
| *        | 92-5104  | Guide - Intake Valve<br>(.50 mm OS)               | 3        |

| Ref. No. | Part No. | Description                          | No. Used |
|----------|----------|--------------------------------------|----------|
| 16       | 92-1971  | Bolt                                 | 8        |
| 17       | 92-1903  | Washer                               | 8        |
| 18       | 92-1911  | Guide - Exhaust Valve<br>(.05 mm OS) | 1        |
| *        | 92-5105  | Guide - Exhaust Valve<br>(.25 mm OS) | 1        |
| *        | 92-5106  | Guide - Exhaust Valve<br>(.50 mm OS) | 1        |
| 19       | 92-1916  | Plug - Taper                         | 1        |
| 20       | 92-1905  | Stud                                 | 6        |
| 21       | 92-1959  | Seat - Intake Valve<br>(.30 mm OS)   | 3        |
| *        | 92-5102  | Seat - Intake Valve<br>(.60 mm OS)   | 3        |
| 22       | 92-1976  | Seat - Exhaust Valve<br>(.30 mm OS)  | 3        |
| *        | 92-5101  | Seat - Exhaust Valve<br>(.60 mm OS)  | 3        |
| 23       | 92-1997  | Gasket - Cylinder                    | 1        |

\*Not Illustrated

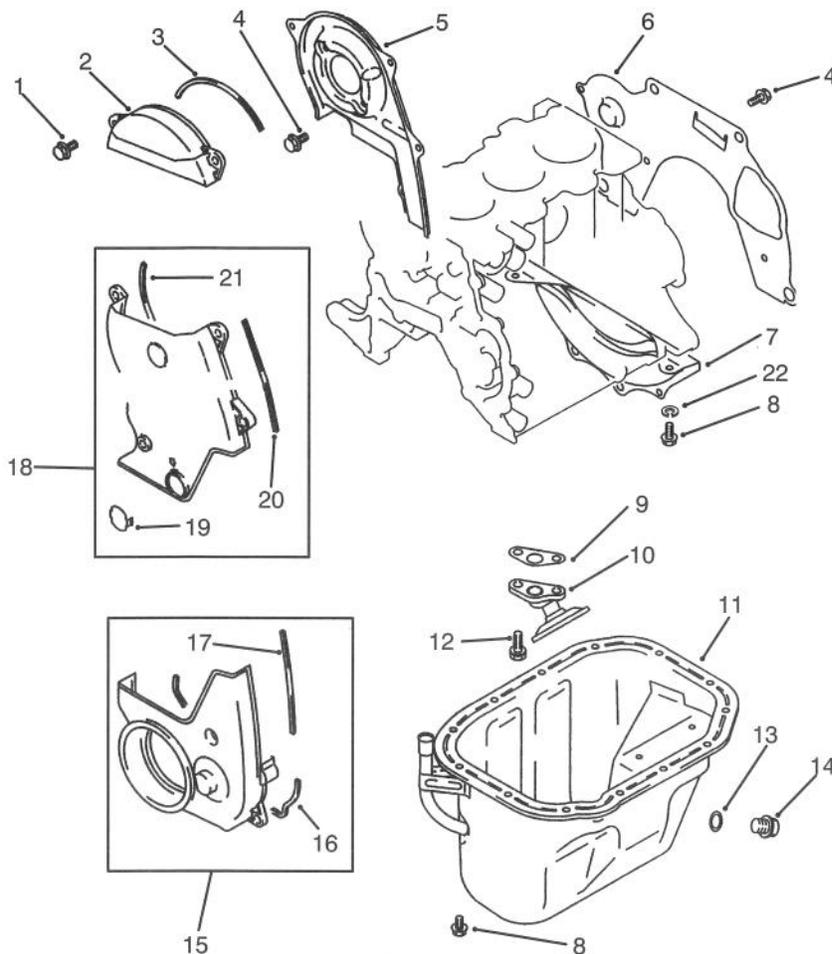


T-1632

## COVERS & OIL PAN ASSEMBLY

| Ref. No. | Part No. | Description                              | No. Used |
|----------|----------|------------------------------------------|----------|
| 1        | 92-5113  | Bolt - Flange Head                       | 3        |
| 2        | 92-1965  | Assembly - Cover<br>(Incl. Ref.#3)       | 1        |
| 3        | 92-1962  | Gasket                                   | 1        |
| 4        | 92-2131  | Bolt - Flange Head                       | 2        |
| 5        | 92-2035  | Cover - Front                            | 1        |
| 6        | 92-1937  | Plate - Rear                             | 1        |
| 7        | 92-1938  | Cover - Bell Housing                     | 1        |
| 8        | 48-7610  | Bolt - Hex. Head                         | 2        |
| 9        | 92-1988  | Gasket - Oil                             | 1        |
| 10       | 92-2019  | Strainer - Oil                           | 1        |
| 11       | 92-2053  | Assembly - Oil Pan<br>(Incl. Ref.#13-14) | 1        |

| Ref. No. | Part No. | Description                                   | No. Used |
|----------|----------|-----------------------------------------------|----------|
| 12       | 92-2137  | Bolt/washer                                   | 2        |
| 13       | 92-1921  | Gasket - Oil                                  | 1        |
| 14       | 92-1920  | Plug - Oil                                    | 1        |
| 15       | 92-1967  | Assembly - Cover<br>(Incl. Ref. #16-17)       | 1        |
| 16       | 92-1939  | Gasket                                        | 1        |
| 17       | 92-1940  | Gasket                                        | 1        |
| 18       | 92-1996  | Assembly - Cover, Front<br>(Incl. Ref.#19-21) | 1        |
| 19       | 92-1907  | Cover - Access                                | 1        |
| 20       | 92-1962  | Gasket                                        | 1        |
| 21       | 92-1966  | Gasket                                        | 1        |
| 22       | 3253-3   | Washer - Lock                                 | 2        |

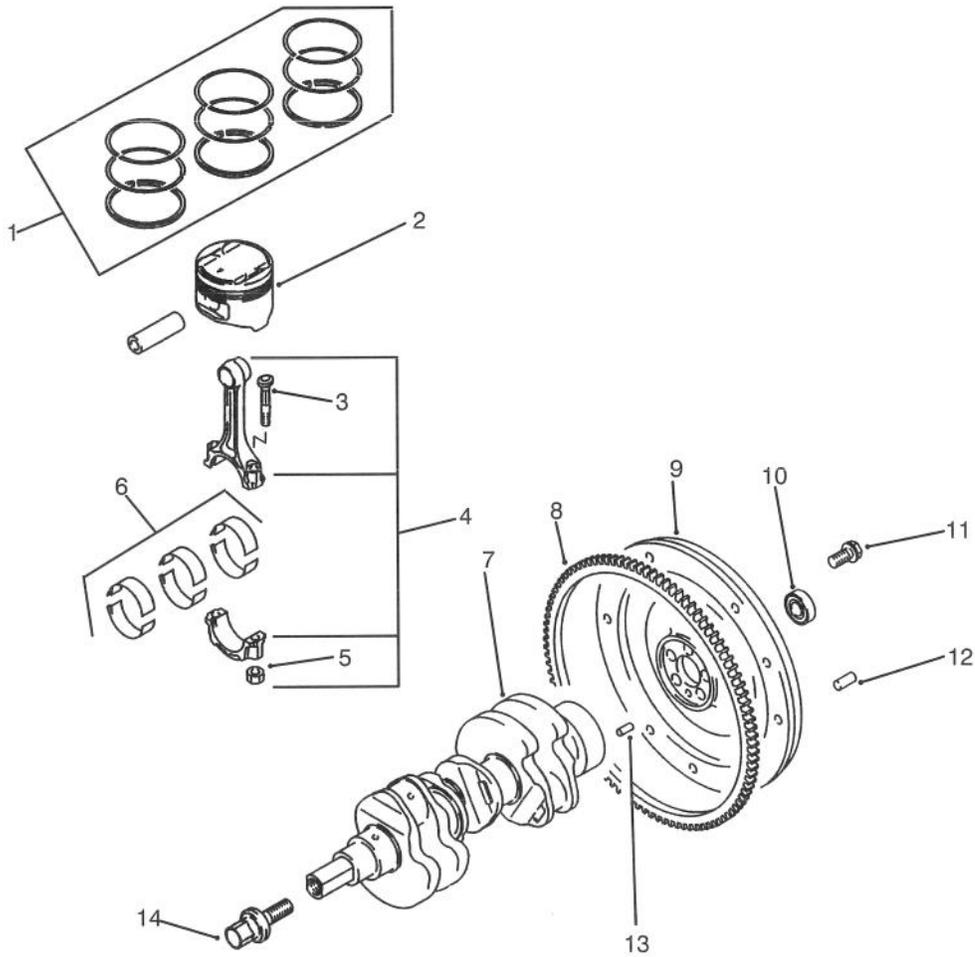


T-1633

## PISTON & CRANKSHAFT ASSEMBLY

| Ref. No. | Part No. | Description                  | No. Used |
|----------|----------|------------------------------|----------|
| 1        | 92-2014  | Piston Ring Set (Std.)       | 1        |
| *        | 92-5118  | Piston Ring Set (.25 mm OS)  | 1        |
| *        | 92-2015  | Piston Ring Set (.50 mm OS)  | 1        |
| *        | 92-5120  | Piston Ring Set (.75 mm OS)  | 1        |
| *        | 92-5121  | Piston Ring Set (1.00 mm OS) | 1        |
| 2        | 92-2005  | Piston & Pin (Std.)          | 3        |
| *        | 92-5114  | Piston & Pin (.25 mm OS)     | 3        |
| *        | 92-2013  | Piston & Pin (.50 mm OS)     | 3        |
| *        | 92-5116  | Piston & Pin (.75 mm OS)     | 3        |
| *        | 92-5117  | Piston & Pin (1.00 mm OS)    | 3        |

| Ref. No. | Part No. | Description                          | No. Used |
|----------|----------|--------------------------------------|----------|
| 3        | 92-2003  | Bolt - Connecting Rod                | 6        |
| 4        | 92-1999  | Rod - Connecting (Incl. Ref. #3 & 5) | 3        |
| 5        | 92-1923  | Nut                                  | 6        |
| 6        | 92-1957  | Rod Bearing Set                      | 1        |
| 7        | 92-1995  | Assembly - Crankshaft                | 1        |
| 8        | 92-1942  | Gear - Ring                          | 1        |
| 9        | 92-1980  | Flywheel                             | 1        |
| 10       | 92-1914  | Bearing - Ball                       | 1        |
| 11       | 92-1934  | Bolt - Flywheel                      | 5        |
| 12       | 42-7160  | Pin - Dowel                          | 3        |
| 13       | 92-2148  | Pin - Dowel                          | 1        |
| 14       | 92-2057  | Bolt - Crankshaft PTO                | 1        |

\*Not Illustrated

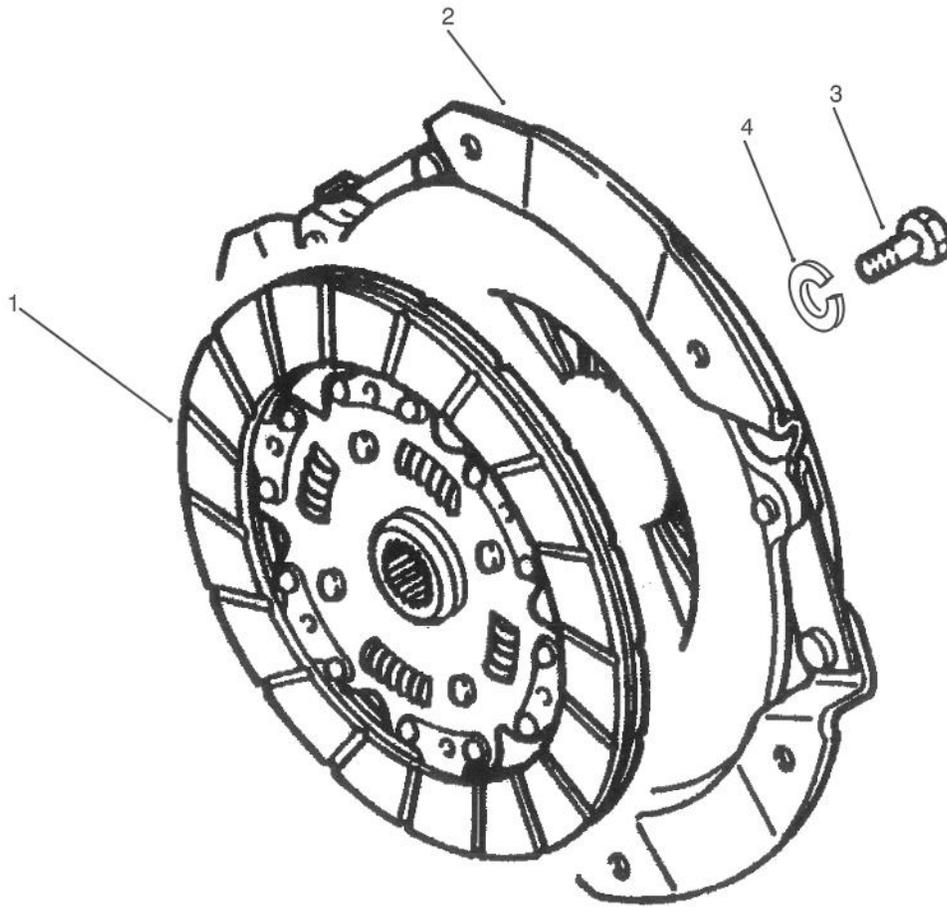


T-1644

### CLUTCH & CLUTCH RELEASE ASSEMBLY

| Ref. No. | Part No. | Description    | No. Used |
|----------|----------|----------------|----------|
| 1        | 87-3190  | Disc - Clutch  | 1        |
| 2        | 87-3180  | Cover - Clutch | 1        |

| Ref. No. | Part No. | Description   | No. Used |
|----------|----------|---------------|----------|
| 3        | 48-7700  | Bolt          | 6        |
| 4        | 3253-4   | Washer - Lock | 6        |

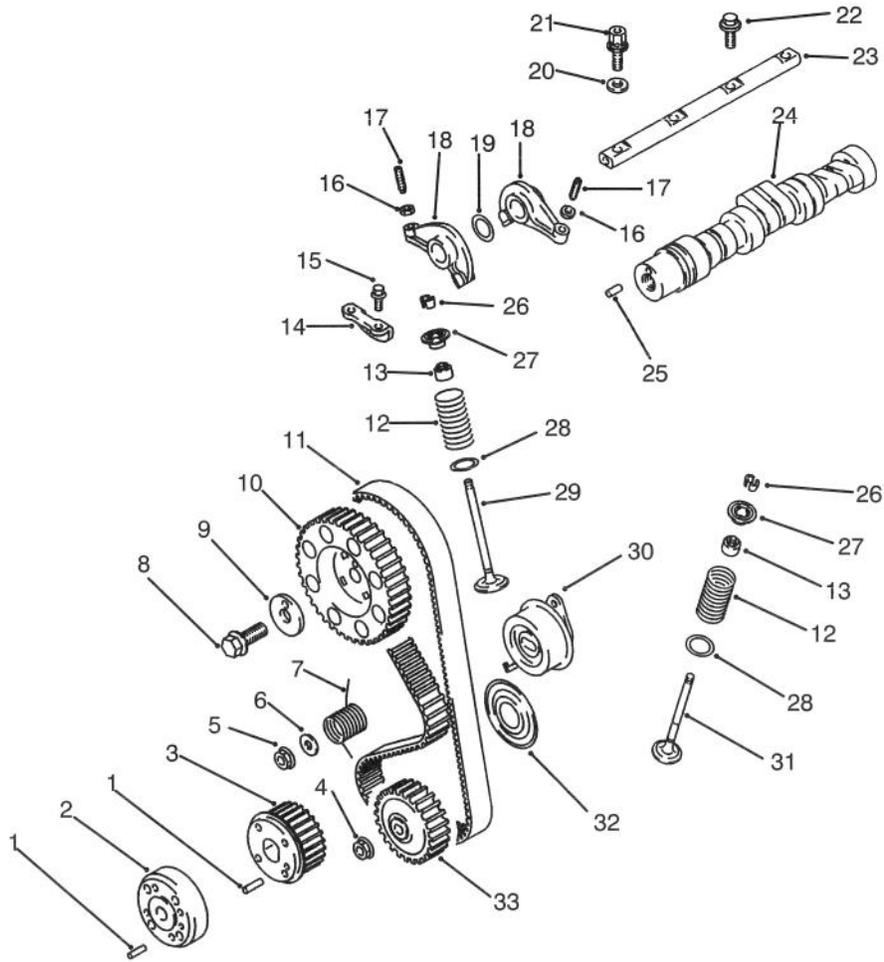


T-1634

## CAMSHAFT & VALVES ASSEMBLY

| Ref. No. | Part No. | Description                               | No. Used |
|----------|----------|-------------------------------------------|----------|
| 1        | 92-2149  | Pin                                       | 2        |
| 2        | 92-2062  | Assembly - PTO Adapter<br>(Incl. Ref.#1)  | 1        |
| 3        | 92-2061  | Assembly - PTO Sprocket<br>(Incl. Ref.#1) | 1        |
| 4        | 92-5122  | Nut - Timing Belt                         | 1        |
| 5        | 92-2145  | Nut - Flange                              | 1        |
| 6        | 92-2147  | Washer                                    | 1        |
| 7        | 92-2001  | Spring                                    | 1        |
| 8        | 92-2135  | Bolt - Flange Head                        | 1        |
| 9        | 92-1922  | Washer                                    | 1        |
| 10       | 92-2000  | Sprocket                                  | 1        |
| 11       | 92-2059  | Belt - Timing                             | 1        |
| 12       | 92-1977  | Spring - Valve                            | 6        |
| 13       | 92-1961  | Seal - Valve                              | 6        |
| 14       | 92-1964  | Plate - Cam                               | 1        |
| 15       | 92-2130  | Bolt - Flange Head                        | 2        |
| 16       | 92-1909  | Nut                                       | 6        |

| Ref. No. | Part No. | Description                            | No. Used |
|----------|----------|----------------------------------------|----------|
| 17       | 92-1953  | Screw - Adjusting                      | 6        |
| 18       | 92-1947  | Arm - Rocker                           | 6        |
| 19       | 92-1930  | Washer - Wave                          | 2        |
| 20       | 92-1972  | Washer                                 | 2        |
| 21       | 92-2017  | Bolt - Rocker Shaft                    | 2        |
| 22       | 92-2018  | Bolt - Rocker Shaft                    | 2        |
| 23       | 92-1973  | Shaft - Rocker Arm                     | 1        |
| 24       | 92-2049  | Assembly - Camshaft<br>(Incl. Ref.#25) | 1        |
| 25       | 92-2010  | Pin - Dowel                            | 1        |
| 26       | 42-7860  | Lock - Valve                           | 12       |
| 27       | 92-1931  | Retainer                               | 6        |
| 28       | 92-1936  | Seal - Valve                           | 6        |
| 29       | 92-1954  | Valve - Inlet                          | 3        |
| 30       | 92-1968  | Tensioner - Belt                       | 1        |
| 31       | 92-1955  | Valve - Exhaust                        | 3        |
| 32       | 92-2056  | Flange - PTO                           | 1        |
| 33       | 92-2042  | Sprocket - Oil                         | 1        |

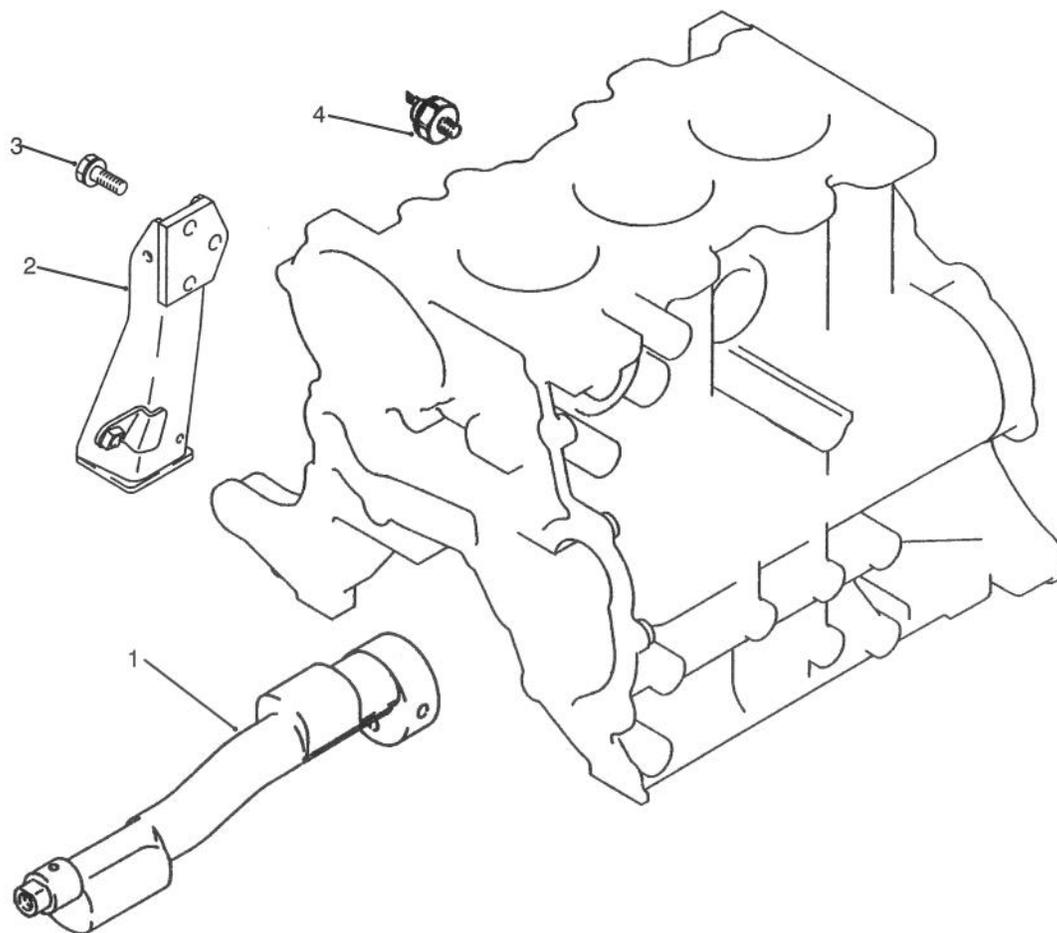


T-1635

## BALANCER & OIL PRESSURE SWITCH & ENGINE MOUNT

| Ref. No. | Part No. | Description      | No. Used |
|----------|----------|------------------|----------|
| 1        | 92-1998  | Shaft - Balancer | 1        |
| 2        | 92-2022  | Mount - Engine   | 1        |


| Ref. No. | Part No. | Description           | No. Used |
|----------|----------|-----------------------|----------|
| 3        | 92-5123  | Bolt - Engine Mount   | 3        |
| 4        | 92-1978  | Switch - Oil Pressure | 1        |

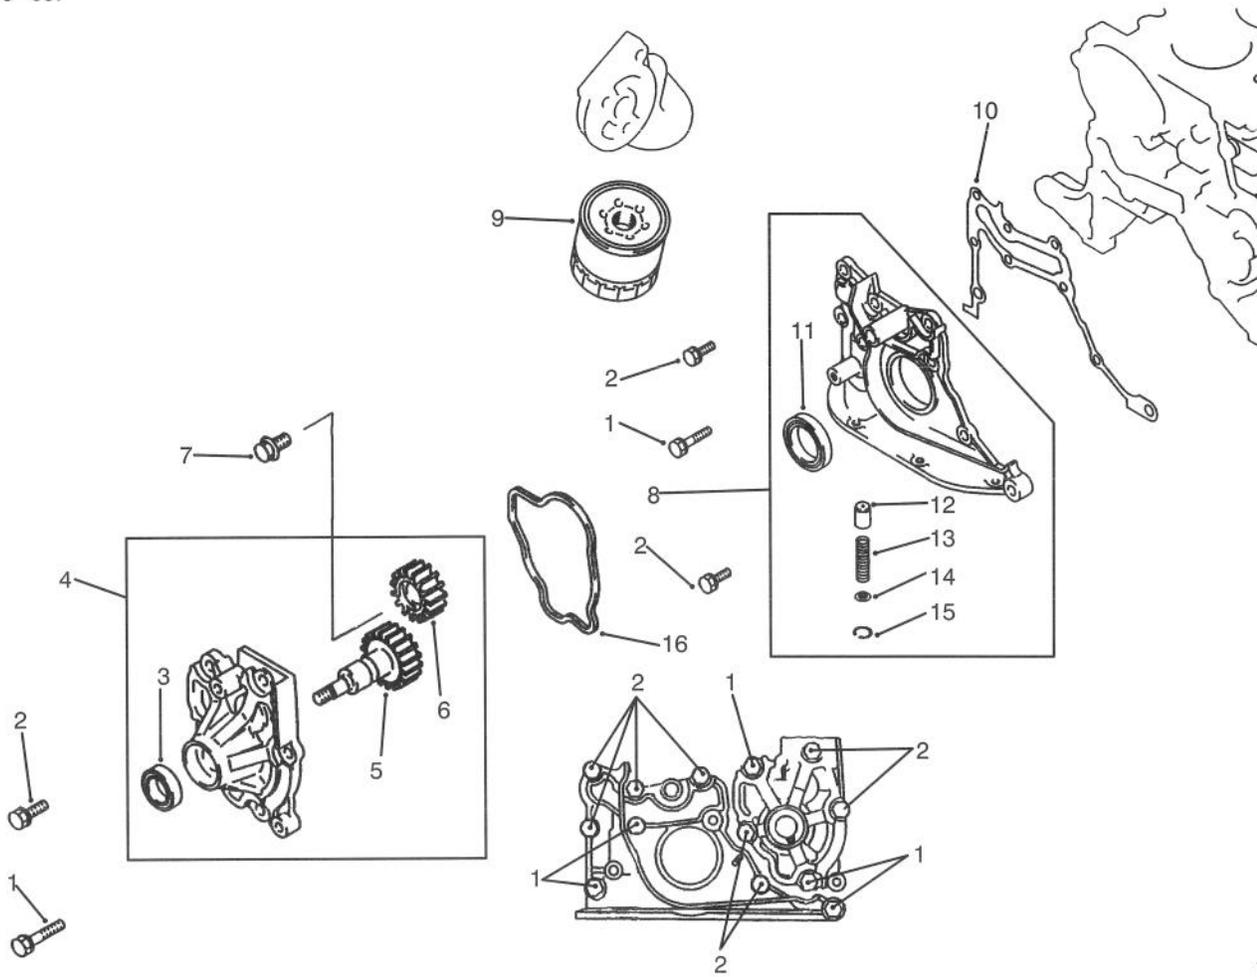

T-1636

## OIL PUMP & FILTER ASSEMBLY

| Ref. No. | Part No. | Description                                  | No. Used | Ref. No. | Part No. | Description      | No. Used |
|----------|----------|----------------------------------------------|----------|----------|----------|------------------|----------|
| 1        | 67-2560  | Bolt/washer                                  | 5        | 9        | 67-4330  | Filter - Oil     | 1        |
| 2        | 42-9400  | Bolt/washer                                  | 8        | 10       | 92-1946  | Gasket - Front   | 1        |
| 3        | 92-2032  | Seal - Oil                                   | 1        | 11       | 92-1960  | Seal - Oil       | 1        |
| 4        | 92-2046  | Assembly - Oil Pump<br>(Incl. Ref.#3, 5 & 6) | 1        | 12       | 92-1927  | Plunger - Relief | 1        |
| 5        | 92-1948  | Gear - Oil Pump                              | 1        | 13       | 92-1928  | Spring - Relief  | 1        |
| 6        | 92-1949  | Gear - Oil Pump                              | 1        | 14       | 92-1983  | Retainer         | 1        |
| 7        | 92-1918  | Bolt - Flange Head                           | 1        | 15       | 92-2150  | Ring - Snap      | 1        |
| 8        | 92-1974  | Assembly - Case<br>(Incl. Ref.#11-15)        | 1        | 16       | 92-1941  | Gasket - Oil     | 1        |

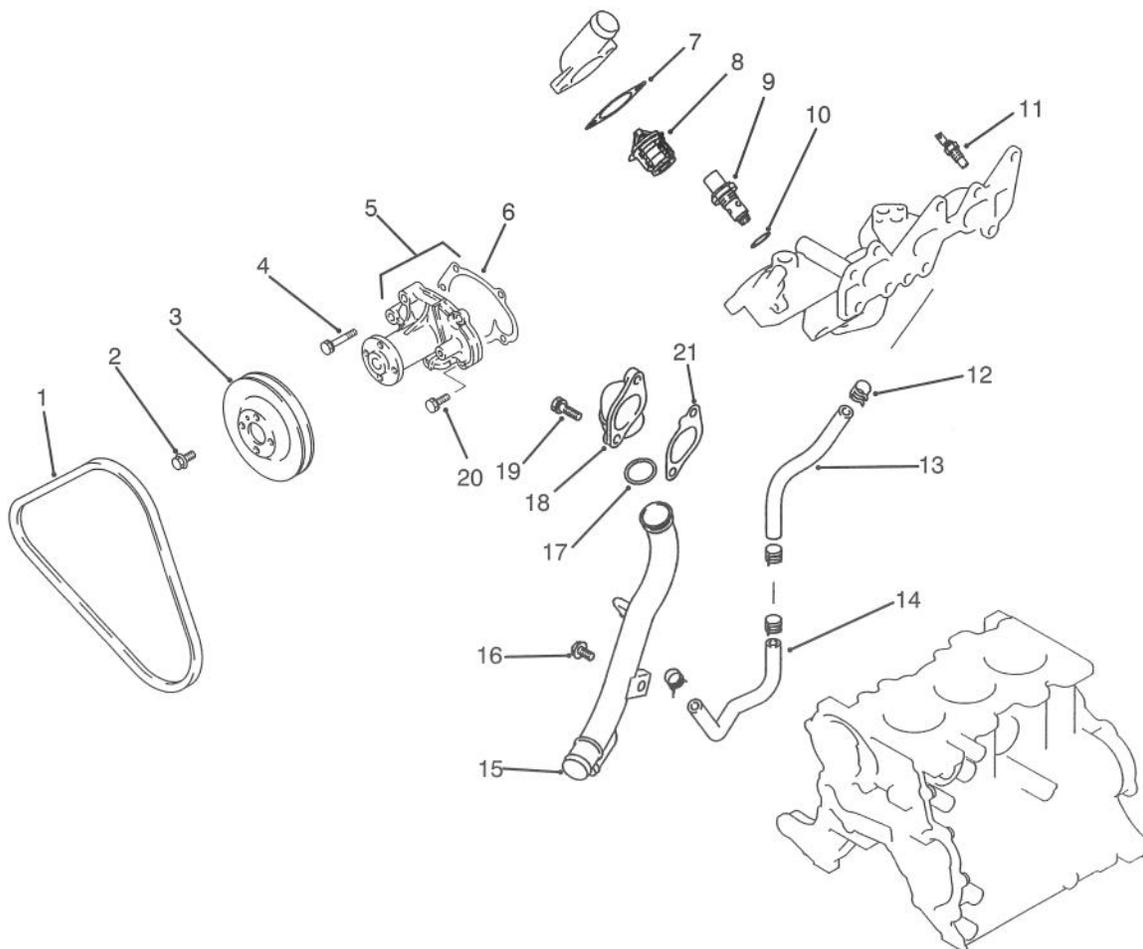


T-1639

## WATER PUMP & THERMOSTAT ASSEMBLY

| Ref. No. | Part No. | Description                             | No. Used |
|----------|----------|-----------------------------------------|----------|
| 1        | 92-2041  | V-Belt                                  | 1        |
| 2        | 92-5112  | Bolt - Flange Head                      | 4        |
| 3        | 92-2040  | Pulley                                  | 1        |
| 4        | 92-2142  | Bolt/washer                             | 3        |
| 5        | 92-2060  | Assembly - Water Pump<br>(Incl. Ref.#6) | 1        |
| 6        | 92-1989  | Gasket                                  | 1        |
| 7        | 92-1950  | Gasket                                  | 1        |
| 8        | 92-2039  | Kit - Thermostat<br>(Incl. Ref.#7)      | 1        |
| 9        | 92-5160  | Valve - Thermostat                      | 1        |
| 10       | 92-5161  | Gasket                                  | 1        |

| Ref. No. | Part No. | Description               | No. Used |
|----------|----------|---------------------------|----------|
| 11       | 92-1933  | Gauge - Water Temperature | 1        |
| 12       | 54-1400  | Clip                      | 4        |
| 13       | 92-1924  | Hose - Water By-Pass      | 1        |
| 14       | 92-2009  | Hose - By-Pass            | 1        |
| 15       | 92-2024  | Pipe - Water              | 1        |
| 16       | 92-2132  | Bolt                      | 1        |
| 17       | 92-1908  | O-Ring                    | 1        |
| 18       | 92-2008  | Cover                     | 1        |
| 19       | 92-2138  | Bolt                      | 2        |
| 20       | 42-9400  | Bolt                      | 2        |
| 21       | 92-2155  | Gasket - Water Inlet      | 1        |

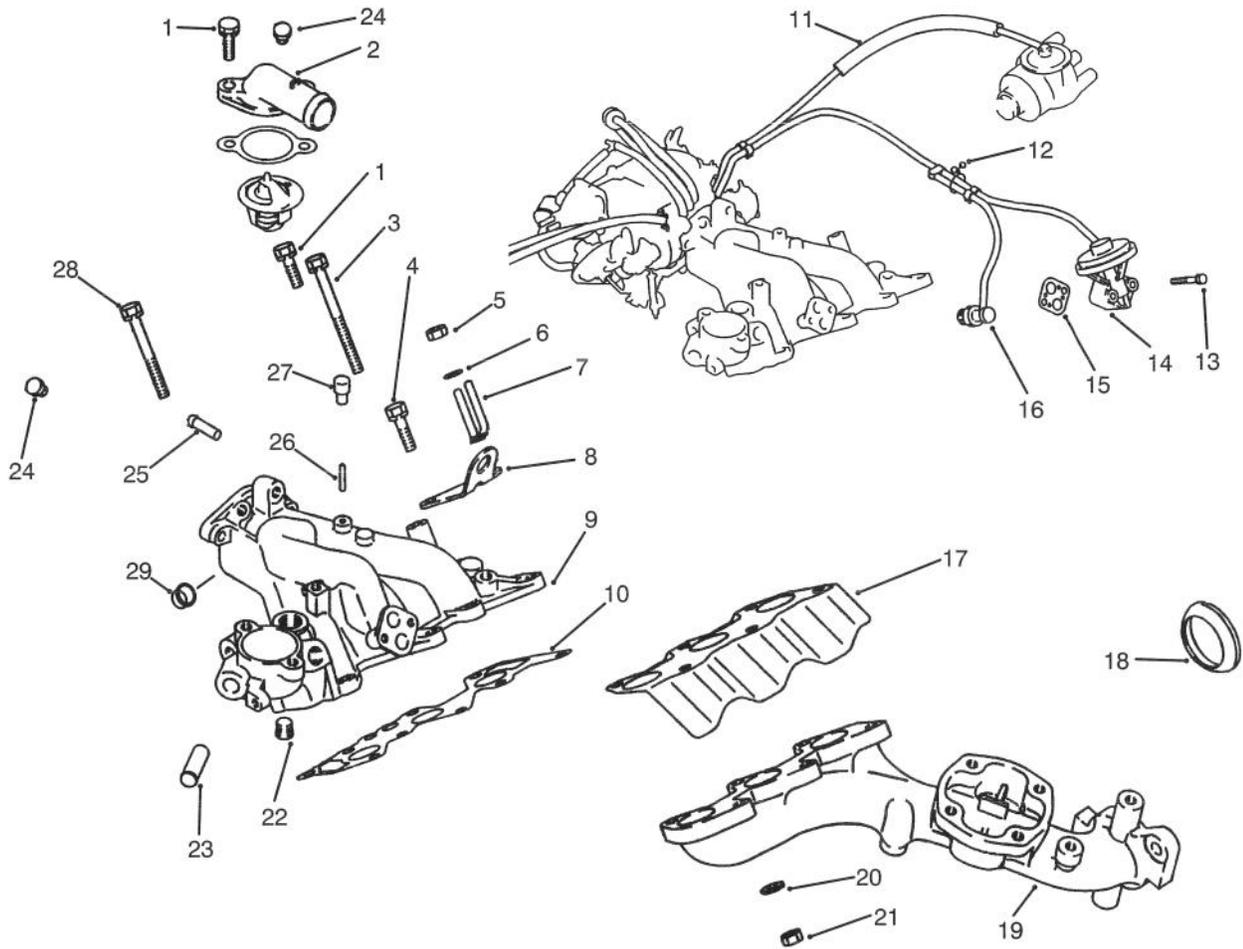


T-1640

## EXHAUST & INTAKE MANIFOLD ASSEMBLY

| Ref. No. | Part No. | Description                                       | No. Used |
|----------|----------|---------------------------------------------------|----------|
| 1        | 92-2138  | Bolt                                              | 3        |
| 2        | 92-2157  | Outlet - Water                                    | 1        |
| 3        | 92-2141  | Bolt                                              | 2        |
| 4        | 92-2139  | Bolt                                              | 1        |
| 5        | 67-4670  | Nut                                               | 2        |
| 6        | 67-3260  | Washer                                            | 2        |
| 7        | 92-1901  | Clip                                              | 1        |
| 8        | 92-1963  | Mount - Engine                                    | 1        |
| 9        | 92-2054  | Manifold - Intake<br>(Incl. Ref.#22, 23, 25 & 26) | 1        |
| 10       | 92-1993  | Gasket - Intake                                   | 1        |
| 11       | 92-5164  | Assembly - Hose                                   | 1        |
| 12       | 92-5165  | Clip                                              | 1        |
| 13       | 92-5166  | Bolt                                              | 2        |
| 14       | 92-2016  | Valve - EGR                                       | 1        |

| Ref. No. | Part No. | Description              | No. Used |
|----------|----------|--------------------------|----------|
| 15       | 92-5163  | Gasket - EGR Valve       | 1        |
| 16       | 92-1906  | Assembly - Valve         | 1        |
| 17       | 92-2036  | Cover - Exhaust Manifold | 1        |
| 18       | 92-2044  | Gasket - Exhaust Ring    | 1        |
| 19       | 92-2023  | Manifold - Exhaust       | 1        |
| 20       | 48-8030  | Washer                   | 6        |
| 21       | 48-7930  | Nut                      | 6        |
| 22       | 67-2390  | Plug - Taper             | 1        |
| 23       | 92-1912  | Pipe - Manifold          | 1        |
| 24       | 92-5162  | Plug - Inlet             | 2        |
| 25       | 92-1917  | Nipple                   | 1        |
| 26       | 92-1951  | Nipple                   | 1        |
| 27       | 92-2002  | Cap Inlet                | 1        |
| 28       | 92-2140  | Bolt                     | 1        |
| 29       | 92-2151  | Cap - Plug               | 1        |

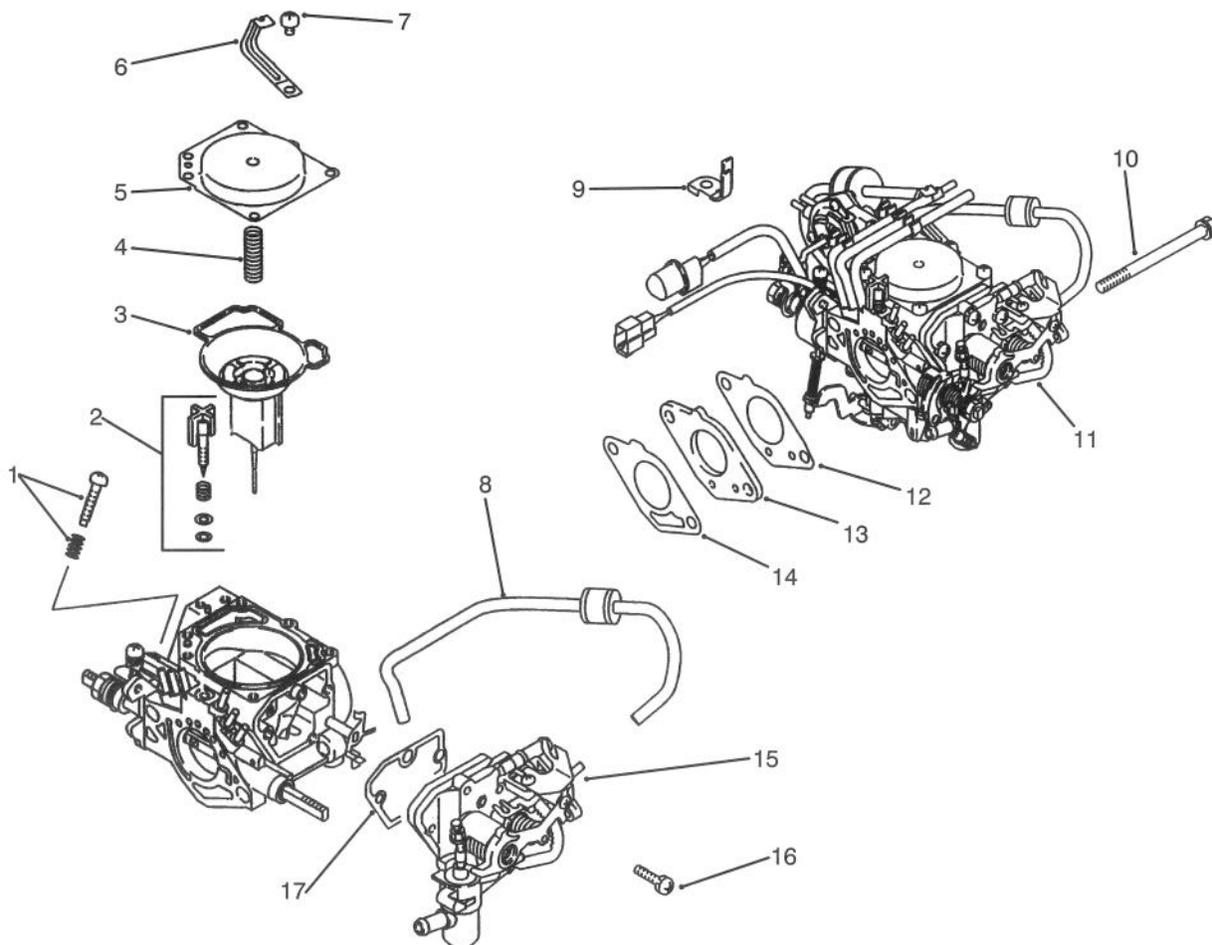


## CARBURETOR INSTALLATION ASSEMBLY

T-1637

| Ref. No. | Part No. | Description               | No. Used |
|----------|----------|---------------------------|----------|
| 1        | 92-5136  | Kit - Adjusting Screw     | 1        |
| 2        | 92-2111  | Kit - Mixing Screw        | 1        |
| 3        | 92-5142  | Valve - Carburetor Piston | 1        |
| 4        | 92-5137  | Spring                    | 1        |
| 5        | 92-5126  | Cover - Carburetor Top    | 1        |
| 6        | 92-5156  | Clamp - Carburetor INR    | 1        |
| 7        | 92-5145  | Screw                     | 6        |
| 8        | 92-5134  | Orifice - Choke           | 1        |
| 9        | 92-5155  | Clamp - Carburetor        | 1        |

| Ref. No. | Part No. | Description            | No. Used |
|----------|----------|------------------------|----------|
| 10       | 92-5157  | Bolt                   | 2        |
| 11       | 92-2058  | Carburetor             | 1        |
| 12       | 92-2038  | Kit - Gasket           | 1        |
| 13       | 92-5128  | Insulator - Carburetor | 1        |
| 14       | 92-2037  | Kit - Gasket           | 1        |
| 15       | 92-5124  | Body - Choke, Auto     | 1        |
| 16       | 92-5149  | Screw                  | 1        |
| 17       | 92-5143  | Gasket - Choke, Auto   | 1        |

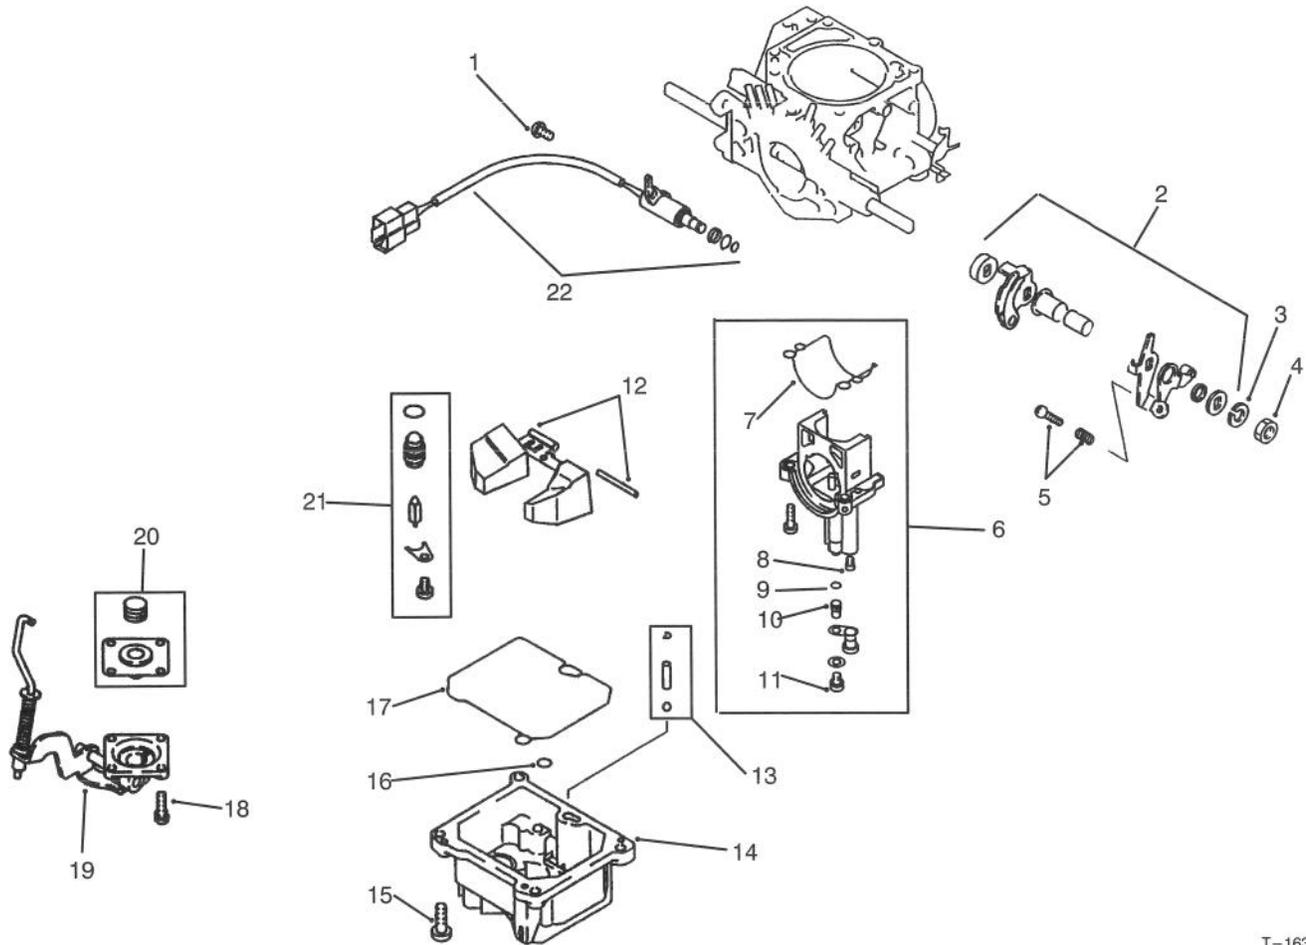


T-1638

## CARBURETOR ASSEMBLY

| Ref. No. | Part No. | Description                                 | No. Used |
|----------|----------|---------------------------------------------|----------|
| 1        | 92-5148  | Screw                                       | 1        |
| 2        | 92-5133  | Kit - Lever, Throttle                       | 1        |
| 3        | 67-3260  | Washer                                      | 1        |
| 4        | 92-5154  | Nut - Carburetor, INR                       | 1        |
| 5        | 92-5135  | Kit - Screw Adjusting, Idle                 | 1        |
| 6        | 92-5132  | Kit - Holder, Main Jet<br>(Incl. Ref.#7-11) | 1        |
| 7        | 92-5152  | O-Ring                                      | 1        |
| 8        | 92-5129  | Jet - Pilot                                 | 1        |
| 9        | 92-5150  | O-Ring                                      | 1        |
| 10       | 92-5130  | Jet - Main                                  | 1        |
| 11       | 92-5131  | Jet - Power                                 | 1        |

| Ref. No. | Part No. | Description           | No. Used |
|----------|----------|-----------------------|----------|
| 12       | 92-5127  | Kit - Float & Pin     | 1        |
| 13       | 92-5125  | Kit - Check Valve     | 1        |
| 14       | 92-5144  | Cover - Float Chamber | 1        |
| 15       | 92-5147  | Screw                 | 4        |
| 16       | 92-5151  | O-Ring                | 1        |
| 17       | 92-5153  | O-Ring                | 1        |
| 18       | 92-5146  | Screw                 | 4        |
| 19       | 92-2110  | Cover - Acc. Pump     | 1        |
| 20       | 92-2154  | Kit - Diaphragm       | 1        |
| 21       | 92-5140  | Kit - Needle Valve    | 1        |
| 22       | 92-5141  | Valve - Fuel Cut-Off  | 1        |

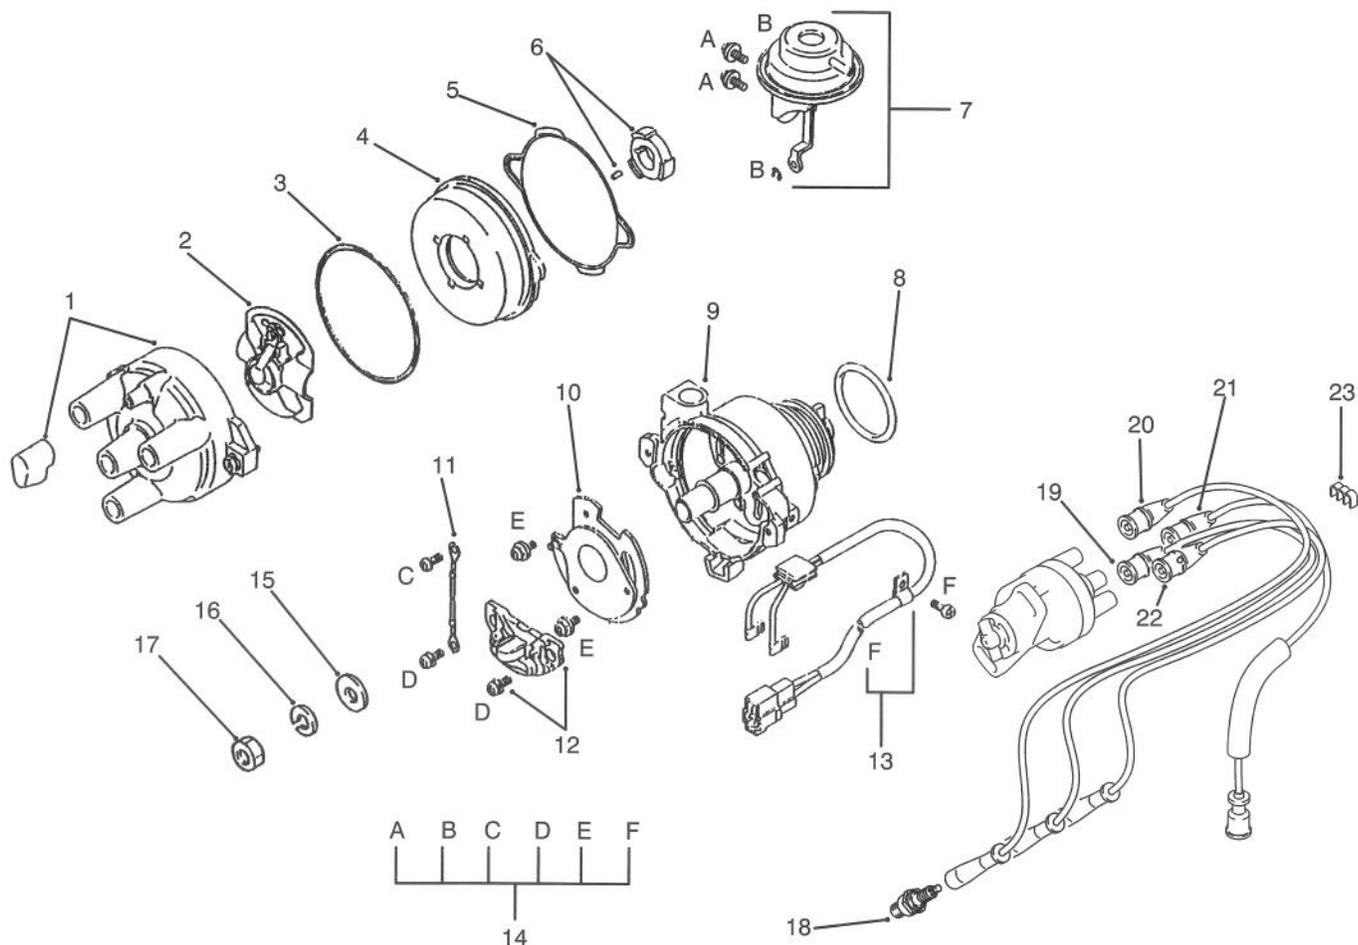


## DISTRIBUTOR ASSEMBLY

T-1643

| Ref. No. | Part No. | Description             | No. Used |
|----------|----------|-------------------------|----------|
| 1        | 92-2114  | Assembly - Cap          | 1        |
| 2        | 92-2113  | Rotor                   | 1        |
| 3        | 92-2120  | Gasket                  | 1        |
| 4        | 92-5170  | Cover                   | 1        |
| 5        | 92-5171  | Gasket - Cover          | 1        |
| 6        | 92-2116  | Assembly - Signal Rotor | 1        |
| 7        | 92-2117  | Chamber - Vacuum        | 1        |
| 8        | 92-2109  | O-Ring                  | 1        |
| 9        | 92-2122  | Housing                 | 1        |
| 10       | 92-2118  | Plate                   | 1        |
| 11       | 92-2119  | Wire - Lead             | 1        |
| 12       | 92-2108  | Igniter Set             | 1        |
| 13       | 92-2121  | Wire Assembly - Lead    | 1        |
| 14       | 92-2115  | Screw Set               | 1        |

| Ref. No. | Part No. | Description                                       | No. Used |
|----------|----------|---------------------------------------------------|----------|
| 15       | 92-2146  | Washer                                            | 1        |
| 16       | 67-3260  | Washer                                            | 1        |
| 17       | 67-4670  | Nut                                               | 1        |
| 18       | 92-2153  | Plug - Spark                                      | 3        |
| 19       | 92-2030  | Wire - Spark Plug, #2                             | 1        |
| 20       | 92-2029  | Wire - Spark Plug, #1                             | 1        |
| 21       | 92-2028  | Wire - High Tension                               | 1        |
| 22       | 92-2031  | Wire - Spark Plug, #3                             | 1        |
| 23       | 92-5172  | Clamp                                             | 1        |
| *        | 92-2043  | Assembly - Distributor<br>(Incl. Ref.#1-14)       | 1        |
| *        | 92-2125  | Assy. - Spark Plug Wire Set<br>(Incl. Ref.#19-22) | 1        |

\*Not Illustrated

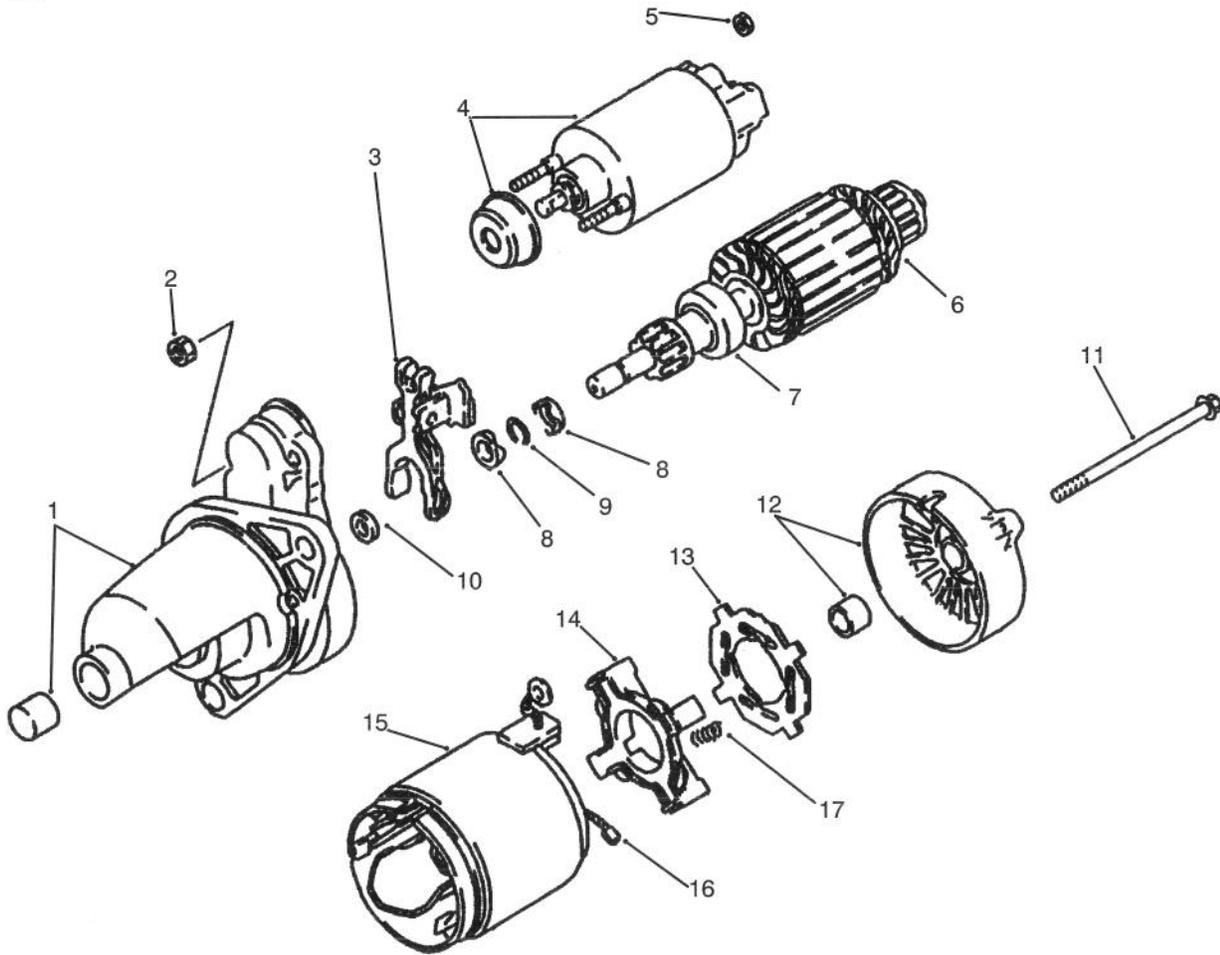


T-1641

## STARTER ASSEMBLY

| Ref. No. | Part No. | Description     | No. Used |
|----------|----------|-----------------|----------|
| 1        | 92-5167  | Bracket - Front | 1        |
| 2        | 92-2106  | Nut             | 2        |
| 3        | 92-2102  | Lever - Clutch  | 1        |
| 4        | 92-2095  | Kit - Switch    | 1        |
| 5        | 92-2107  | Nut             | 1        |
| 6        | 92-2093  | Armature        | 1        |
| 7        | 92-2094  | Clutch          | 1        |
| 8        | 92-2097  | Nut             | 2        |
| 9        | 92-2096  | Ring - Snap     | 1        |
| 10       | 92-2098  | Washer          | 1        |

| Ref. No. | Part No. | Description                             | No. Used |
|----------|----------|-----------------------------------------|----------|
| 11       | 92-2099  | Bolt                                    | 2        |
| 12       | 92-5168  | Bracket - Rear                          | 1        |
| 13       | 92-2092  | Insulator                               | 1        |
| 14       | 92-2091  | Assembly - Holder                       | 1        |
| 15       | 92-2088  | Yoke<br>(Incl. Ref.#16)                 | 1        |
| 16       | 92-2089  | Brush                                   | 4        |
| 17       | 92-2090  | Spring                                  | 4        |
| *        | 92-2055  | Assembly - Starter<br>(Incl. Ref.#1-17) | 1        |

\*Not Illustrated

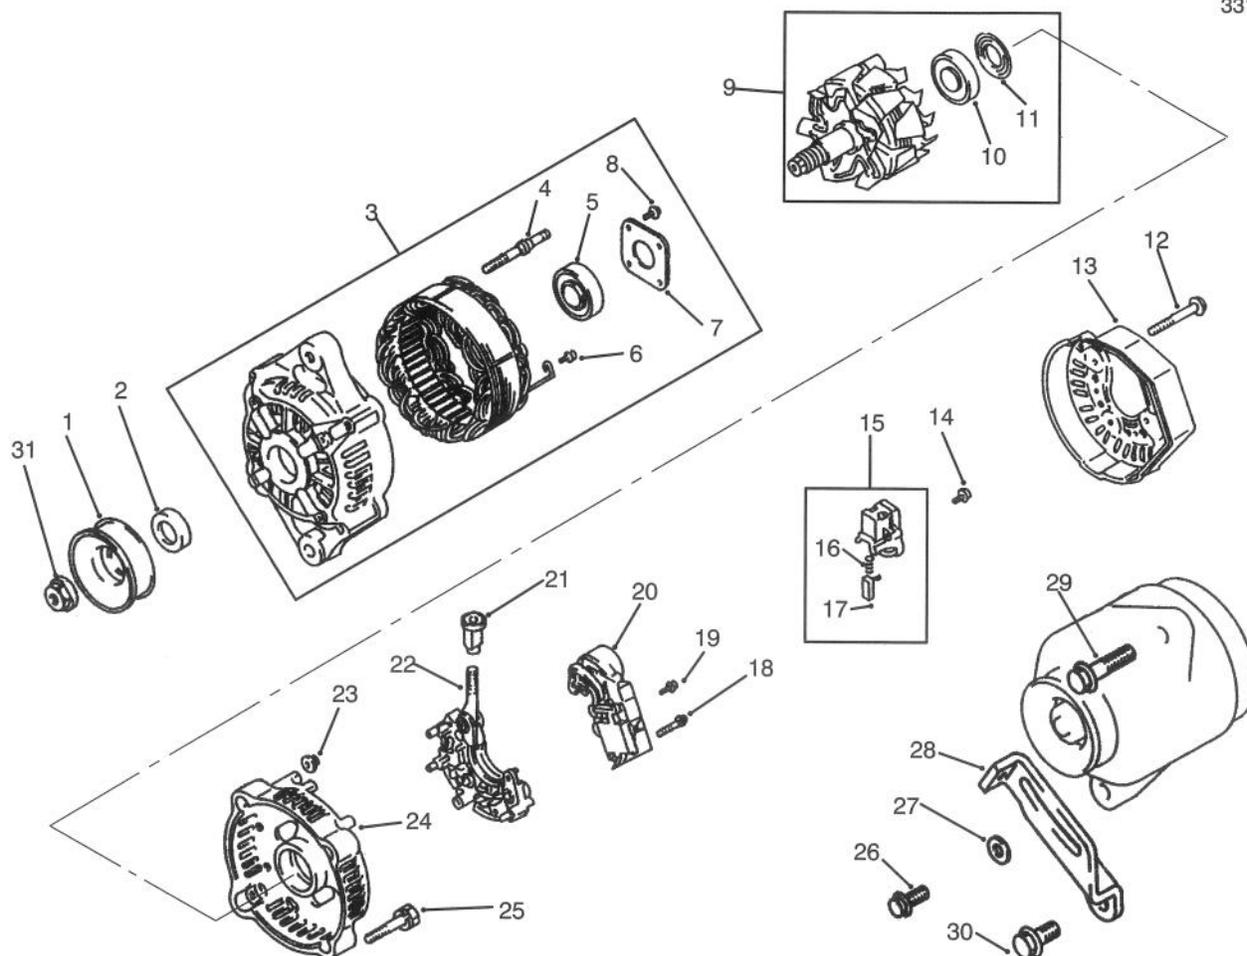


T-1642

## ALTERNATOR ASSEMBLY

| Ref. No. | Part No. | Description                                   | No. Used | Ref. No. | Part No. | Description                                     | No. Used |
|----------|----------|-----------------------------------------------|----------|----------|----------|-------------------------------------------------|----------|
| 1        | 92-5169  | Pulley                                        | 1        | 16       | 92-2067  | Spring - Brush                                  | 2        |
| 2        | 92-2079  | Collar                                        | 1        | 17       | 92-2068  | Brush                                           | 2        |
| 3        | 92-2103  | Assembly - Bracket, Front<br>(Incl. Ref.#4-8) | 1        | 18       | 92-2071  | Screw                                           | 2        |
| 4        | 92-2078  | Bolt                                          | 2        | 19       | 92-2086  | Screw W/washer                                  | 1        |
| 5        | 92-2065  | Bearing                                       | 1        | 20       | 92-2084  | Regulator                                       | 1        |
| 6        | 92-2085  | Screw W/washer                                | 6        | 21       | 92-2083  | Bushing                                         | 1        |
| 7        | 92-2076  | Plate                                         | 1        | 22       | 92-2082  | Rectifier                                       | 1        |
| 8        | 92-2077  | Screw                                         | 4        | 23       | 92-2066  | Nut                                             | 2        |
| 9        | 92-2075  | Assembly - Rotor<br>(Incl. Ref.#10-11)        | 1        | 24       | 92-2080  | Frame - End                                     | 1        |
| 10       | 92-2070  | Bearing                                       | 1        | 25       | 92-2100  | Bolt                                            | 2        |
| 11       | 92-2069  | Cover - Bearing                               | 1        | 26       | 92-2133  | Bolt - Flange Head                              | 1        |
| 12       | 92-2087  | Bolt W/washer                                 | 3        | 27       | 92-1984  | Washer                                          | 1        |
| 13       | 92-2081  | Cover - End                                   | 1        | 28       | 92-2011  | Brace                                           | 1        |
| 14       | 92-2085  | Screw W/washer                                | 6        | 29       | 92-1932  | Bolt                                            | 1        |
| 15       | 92-2073  | Assembly - Holder<br>(Incl. Ref.#16-17)       | 1        | 30       | 92-2134  | Bolt - Flange Head                              | 1        |
|          |          |                                               |          | 31       | 92-2156  | Nut - Alternator                                | 1        |
|          |          |                                               |          | *        | 92-2025  | Assembly - Alternator<br>(Incl. Ref.#1-25 & 31) | 1        |

\*Not Illustrated

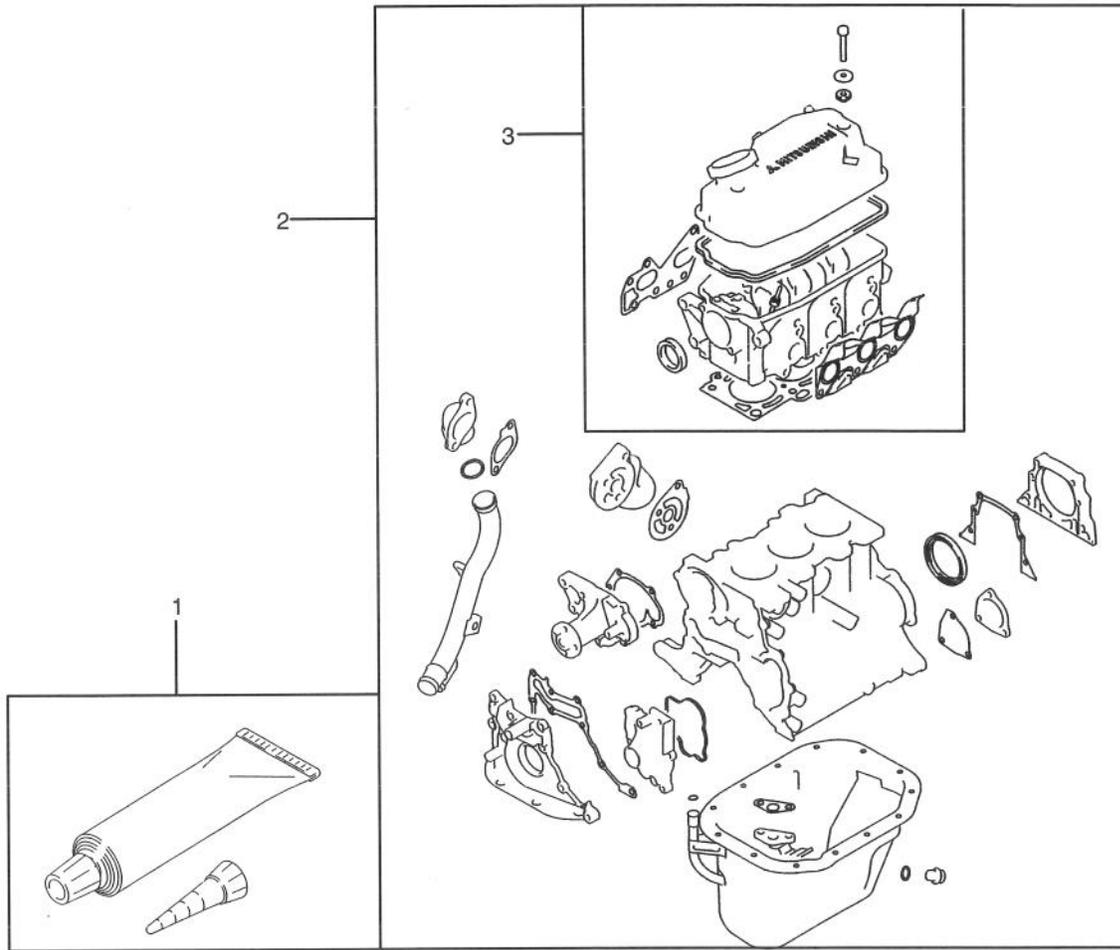

T-1629

### GASKET KIT

| Ref. No. | Part No. | Description           | No. Used |
|----------|----------|-----------------------|----------|
| 1        | 92-5100  | Gasket - Liquid       | 1        |
| 2        | 92-2127  | Kit - Overhaul Gasket | 1        |

| Ref. No. | Part No. | Description         | No. Used |
|----------|----------|---------------------|----------|
| 3        | 92-2126  | Kit - Gasket, Upper | 1        |

# INTERNATIONAL DECAL CROSS REFERENCE

## DUTCH DECAL KIT NO. 92-7226

| DESCRIPTION                   | LOCATION                       | PART NUMBER |         |
|-------------------------------|--------------------------------|-------------|---------|
|                               |                                | ENGLISH     | DUTCH   |
| DECAL<br>LOAD RATING          | UNDER<br>RIGHT SIDE<br>OF DASH | 87-6050     | 92-5391 |
| DECAL<br>FUSE BLOCK           | UNDER<br>RIGHT SIDE<br>OF DASH | 87-6670     | 92-5370 |
| DECAL<br>SUPERVISOR           | ON DASH                        | 87-5910     | 92-5328 |
| DECAL<br>DASH                 | ON DASH                        | 87-8520     | 92-6418 |
| DECAL<br>CAUTION<br>FUEL      | ON SKIRT                       | 87-5930     | 92-5321 |
| DECAL<br>AXLE RANGE           | ON<br>CONSOLE                  | 87-5960     | 92-5314 |
| DECAL<br>PTO                  | ON<br>CONSOLE                  | 87-5970     | 92-5356 |
| DECAL<br>DIFFERENTIAL<br>LOCK | ON<br>CONSOLE                  | 87-6000     | 92-5307 |
| DECAL<br>REMOTE<br>HYDRAULICS | ON<br>CONSOLE                  | 92-2609     | 92-5342 |
| DECAL<br>DUMP<br>HYDRAULICS   | ON<br>CONSOLE                  | 87-6010     | 92-5349 |
| DECAL<br>PARKING<br>BRAKE     | ON<br>CONSOLE                  | 87-6020     | 92-5300 |
| DECAL<br>QUICK<br>REFERENCE   | ON REAR<br>OF SKIRT            | 87-9060     | 92-5490 |
| DECAL<br>DANGER               | ON FRONT<br>OF SKIRT           | 87-5920     | 92-6404 |

| DESCRIPTION                            | LOCATION                                   | PART NUMBER |         |
|----------------------------------------|--------------------------------------------|-------------|---------|
|                                        |                                            | ENGLISH     | DUTCH   |
| DECAL<br>DANGER<br>BED SUPPORT         | ON LIFT<br>CYLINDERS<br>AND BED<br>SUPPORT | 87-7930     | 92-6411 |
| DECAL<br>ROLLOVER                      | ON ROPS                                    | 87-5940     | 92-5384 |
| DECAL<br>ROPS                          | ON ROPS                                    | 87-5980     | 92-5377 |
| DECAL<br>WARNING<br>SPRING<br>LOADED   | ON SPRING<br>CRADLE                        | 44-0760     | 92-6489 |
| DECAL<br>CAUTION<br>HOT SURFACE        | ON LEFT<br>REAR<br>FRAME<br>RAIL           | 66-6840     | 92-6475 |
| DECAL<br>ATF                           | ON REAR<br>AXLE TUBE                       | 87-6060     | 92-5469 |
| DECAL<br>DANGER                        | ON REAR<br>AXLE TUBE                       | 87-5990     | 92-5363 |
| DECAL<br>GREASE<br>DRIVE<br>SHAFTS     | ON REAR<br>AXLE TUBE                       | 87-9080     | 92-6440 |
| PLATE<br>WARNING                       | ON FAN<br>SHROUD                           | 76-8750     | 92-7236 |
| DECAL<br>WARNING<br>ROTATING<br>MEMBER | ON FAN<br>SUPPORT                          | 80-8040     | 83-6439 |
| DECAL<br>NO STEP                       | ON<br>BATTERY<br>COVER                     | 36-3400     | 84-2760 |

# INTERNATIONAL DECAL CROSS REFERENCE (Cont.)

## FRENCH DECAL KIT NO. 92-7227

| DESCRIPTION             | LOCATION                 | PART NUMBER |         |
|-------------------------|--------------------------|-------------|---------|
|                         |                          | ENGLISH     | FRENCH  |
| DECAL LOAD RATING       | UNDER RIGHT SIDE OF DASH | 87-6050     | 92-5392 |
| DECAL FUSE BLOCK        | UNDER RIGHT SIDE OF DASH | 87-6670     | 92-5371 |
| DECAL SUPERVISOR        | ON DASH                  | 87-5910     | 92-5329 |
| DECAL DASH              | ON DASH                  | 87-8520     | 92-6419 |
| DECAL CAUTION FUEL      | ON SKIRT                 | 87-5930     | 92-5322 |
| DECAL AXLE RANGE        | ON CONSOLE               | 87-5960     | 92-5315 |
| DECAL PTO               | ON CONSOLE               | 87-5970     | 92-5357 |
| DECAL DIFFERENTIAL LOCK | ON CONSOLE               | 87-6000     | 92-5308 |
| DECAL REMOTE HYDRAULICS | ON CONSOLE               | 92-2609     | 92-5343 |
| DECAL DUMP HYDRAULICS   | ON CONSOLE               | 87-6010     | 92-5350 |
| DECAL PARKING BRAKE     | ON CONSOLE               | 87-6020     | 92-5301 |
| DECAL QUICK REFERENCE   | ON REAR OF SKIRT         | 87-9060     | 92-5491 |
| DECAL DANGER            | ON FRONT OF SKIRT        | 87-5920     | 92-6405 |

| DESCRIPTION                   | LOCATION                          | PART NUMBER |         |
|-------------------------------|-----------------------------------|-------------|---------|
|                               |                                   | ENGLISH     | FRENCH  |
| DECAL DANGER BED SUPPORT      | ON LIFT CYLINDERS AND BED SUPPORT | 87-7930     | 92-6412 |
| DECAL ROLLOVER                | ON ROPS                           | 87-5940     | 92-5385 |
| DECAL ROPS                    | ON ROPS                           | 87-5980     | 92-5378 |
| DECAL WARNING SPRING LOADED   | ON SPRING CRADLE                  | 44-0760     | 92-6490 |
| DECAL CAUTION HOT SURFACE     | ON LEFT REAR FRAME RAIL           | 66-6840     | 92-6476 |
| DECAL ATF                     | ON REAR AXLE TUBE                 | 87-6060     | 92-5470 |
| DECAL DANGER                  | ON REAR AXLE TUBE                 | 87-5990     | 92-5364 |
| DECAL GREASE DRIVE SHAFTS     | ON REAR AXLE TUBE                 | 87-9080     | 92-6441 |
| PLATE WARNING                 | ON FAN SHROUD                     | 76-8750     | 92-7237 |
| DECAL WARNING ROTATING MEMBER | ON FAN SUPPORT                    | 80-8040     | 83-6210 |
| DECAL NO STEP                 | ON BATTERY COVER                  | 36-3400     | 84-2720 |

# INTERNATIONAL DECAL CROSS REFERENCE (Cont.)

## GERMAN DECAL KIT NO. 92-7228

| DESCRIPTION                   | LOCATION                       | PART NUMBER |         |
|-------------------------------|--------------------------------|-------------|---------|
|                               |                                | ENGLISH     | GERMAN  |
| DECAL<br>LOAD RATING          | UNDER<br>RIGHT SIDE<br>OF DASH | 87-6050     | 92-5393 |
| DECAL<br>FUSE BLOCK           | UNDER<br>RIGHT SIDE<br>OF DASH | 87-6670     | 92-5372 |
| DECAL<br>SUPERVISOR           | ON DASH                        | 87-5910     | 92-5330 |
| DECAL<br>DASH                 | ON DASH                        | 87-8520     | 92-6420 |
| DECAL<br>CAUTION<br>FUEL      | ON SKIRT                       | 87-5930     | 92-5323 |
| DECAL<br>AXLE RANGE           | ON<br>CONSOLE                  | 87-5960     | 92-5316 |
| DECAL<br>PTO                  | ON<br>CONSOLE                  | 87-5970     | 92-5358 |
| DECAL<br>DIFFERENTIAL<br>LOCK | ON<br>CONSOLE                  | 87-6000     | 92-5309 |
| DECAL<br>REMOTE<br>HYDRAULICS | ON<br>CONSOLE                  | 92-2609     | 92-5344 |
| DECAL<br>DUMP<br>HYDRAULICS   | ON<br>CONSOLE                  | 87-6010     | 92-5351 |
| DECAL<br>PARKING<br>BRAKE     | ON<br>CONSOLE                  | 87-6020     | 92-5302 |
| DECAL<br>QUICK<br>REFERENCE   | ON REAR<br>OF SKIRT            | 87-9060     | 92-5492 |
| DECAL<br>DANGER               | ON FRONT<br>OF SKIRT           | 87-5920     | 92-6406 |

| DESCRIPTION                            | LOCATION                                   | PART NUMBER |         |
|----------------------------------------|--------------------------------------------|-------------|---------|
|                                        |                                            | ENGLISH     | GERMAN  |
| DECAL<br>DANGER<br>BED SUPPORT         | ON LIFT<br>CYLINDERS<br>AND BED<br>SUPPORT | 87-7930     | 92-6413 |
| DECAL<br>ROLLOVER                      | ON ROPS                                    | 87-5940     | 92-5386 |
| DECAL<br>ROPS                          | ON ROPS                                    | 87-5980     | 92-5379 |
| DECAL<br>WARNING<br>SPRING<br>LOADED   | ON SPRING<br>CRADLE                        | 44-0760     | 92-6491 |
| DECAL<br>CAUTION<br>HOT SURFACE        | ON LEFT<br>REAR<br>FRAME<br>RAIL           | 66-6840     | 92-6477 |
| DECAL<br>ATF                           | ON REAR<br>AXLE TUBE                       | 87-6060     | 92-5471 |
| DECAL<br>DANGER                        | ON REAR<br>AXLE TUBE                       | 87-5990     | 92-5365 |
| DECAL<br>GREASE<br>DRIVE<br>SHAFTS     | ON REAR<br>AXLE TUBE                       | 87-9080     | 92-6442 |
| PLATE<br>WARNING                       | ON FAN<br>SHROUD                           | 76-8750     | 92-7238 |
| DECAL<br>WARNING<br>ROTATING<br>MEMBER | ON FAN<br>SUPPORT                          | 80-8040     | 83-5730 |
| DECAL<br>NO STEP                       | ON<br>BATTERY<br>COVER                     | 36-3400     | 84-2730 |

# INTERNATIONAL DECAL CROSS REFERENCE (Cont.)

## ITALIAN DECAL KIT NO. 92-7229

| DESCRIPTION                   | LOCATION                       | PART NUMBER |         |
|-------------------------------|--------------------------------|-------------|---------|
|                               |                                | ENGLISH     | ITALIAN |
| DECAL<br>LOAD RATING          | UNDER<br>RIGHT SIDE<br>OF DASH | 87-6050     | 92-5394 |
| DECAL<br>FUSE BLOCK           | UNDER<br>RIGHT SIDE<br>OF DASH | 87-6670     | 92-5373 |
| DECAL<br>SUPERVISOR           | ON DASH                        | 87-5910     | 92-5331 |
| DECAL<br>DASH                 | ON DASH                        | 87-8520     | 92-6421 |
| DECAL<br>CAUTION<br>FUEL      | ON SKIRT                       | 87-5930     | 92-5324 |
| DECAL<br>AXLE RANGE           | ON<br>CONSOLE                  | 87-5960     | 92-5317 |
| DECAL<br>PTO                  | ON<br>CONSOLE                  | 87-5970     | 92-5359 |
| DECAL<br>DIFFERENTIAL<br>LOCK | ON<br>CONSOLE                  | 87-6000     | 92-5310 |
| DECAL<br>REMOTE<br>HYDRAULICS | ON<br>CONSOLE                  | 92-2609     | 92-5345 |
| DECAL<br>DUMP<br>HYDRAULICS   | ON<br>CONSOLE                  | 87-6010     | 92-5352 |
| DECAL<br>PARKING<br>BRAKE     | ON<br>CONSOLE                  | 87-6020     | 92-5303 |
| DECAL<br>QUICK<br>REFERENCE   | ON REAR<br>OF SKIRT            | 87-9060     | 92-5493 |
| DECAL<br>DANGER               | ON FRONT<br>OF SKIRT           | 87-5920     | 92-6407 |

| DESCRIPTION                            | LOCATION                                   | PART NUMBER |         |
|----------------------------------------|--------------------------------------------|-------------|---------|
|                                        |                                            | ENGLISH     | ITALIAN |
| DECAL<br>DANGER<br>BED SUPPORT         | ON LIFT<br>CYLINDERS<br>AND BED<br>SUPPORT | 87-7930     | 92-6414 |
| DECAL<br>ROLLOVER                      | ON ROPS                                    | 87-5940     | 92-5387 |
| DECAL<br>ROPS                          | ON ROPS                                    | 87-5980     | 92-5380 |
| DECAL<br>WARNING<br>SPRING<br>LOADED   | ON SPRING<br>CRADLE                        | 44-0760     | 92-6492 |
| DECAL<br>CAUTION<br>HOT SURFACE        | ON LEFT<br>REAR<br>FRAME<br>RAIL           | 66-6840     | 92-6478 |
| DECAL<br>ATF                           | ON REAR<br>AXLE TUBE                       | 87-6060     | 92-5472 |
| DECAL<br>DANGER                        | ON REAR<br>AXLE TUBE                       | 87-5990     | 92-5366 |
| DECAL<br>GREASE<br>DRIVE<br>SHAFTS     | ON REAR<br>AXLE TUBE                       | 87-9080     | 92-6443 |
| PLATE<br>WARNING                       | ON FAN<br>SHROUD                           | 76-8750     | 92-7239 |
| DECAL<br>WARNING<br>ROTATING<br>MEMBER | ON FAN<br>SUPPORT                          | 80-8040     | 83-5600 |
| DECAL<br>NO STEP                       | ON<br>BATTERY<br>COVER                     | 36-3400     | 84-2750 |

## INTERNATIONAL DECAL CROSS REFERENCE (Cont.)

## JAPANESE DECAL KIT NO. 92-7230

| DESCRIPTION                   | LOCATION                       | PART NUMBER |          |
|-------------------------------|--------------------------------|-------------|----------|
|                               |                                | ENGLISH     | JAPANESE |
| DECAL<br>LOAD RATING          | UNDER<br>RIGHT SIDE<br>OF DASH | 87-6050     | 92-5395  |
| DECAL<br>FUSE BLOCK           | UNDER<br>RIGHT SIDE<br>OF DASH | 87-6670     | 92-5374  |
| DECAL<br>SUPERVISOR           | ON DASH                        | 87-5910     | 92-5332  |
| DECAL<br>DASH                 | ON DASH                        | 87-8520     | 92-6422  |
| DECAL<br>CAUTION<br>FUEL      | ON SKIRT                       | 87-5930     | 92-5325  |
| DECAL<br>AXLE RANGE           | ON<br>CONSOLE                  | 87-5960     | 92-5318  |
| DECAL<br>PTO                  | ON<br>CONSOLE                  | 87-5970     | 92-5360  |
| DECAL<br>DIFFERENTIAL<br>LOCK | ON<br>CONSOLE                  | 87-6000     | 92-5311  |
| DECAL<br>REMOTE<br>HYDRAULICS | ON<br>CONSOLE                  | 92-2609     | 92-5346  |
| DECAL<br>DUMP<br>HYDRAULICS   | ON<br>CONSOLE                  | 87-6010     | 92-5353  |
| DECAL<br>PARKING<br>BRAKE     | ON<br>CONSOLE                  | 87-6020     | 92-5304  |
| DECAL<br>QUICK<br>REFERENCE   | ON REAR<br>OF SKIRT            | 87-9060     | 92-5494  |
| DECAL<br>DANGER               | ON FRONT<br>OF SKIRT           | 87-5920     | 92-6408  |

| DESCRIPTION                            | LOCATION                                   | PART NUMBER |          |
|----------------------------------------|--------------------------------------------|-------------|----------|
|                                        |                                            | ENGLISH     | JAPANESE |
| DECAL<br>DANGER<br>BED SUPPORT         | ON LIFT<br>CYLINDERS<br>AND BED<br>SUPPORT | 87-7930     | 92-6415  |
| DECAL<br>ROLLOVER                      | ON ROPS                                    | 87-5940     | 92-5388  |
| DECAL<br>ROPS                          | ON ROPS                                    | 87-5980     | 92-5381  |
| DECAL<br>WARNING<br>SPRING<br>LOADED   | ON SPRING<br>CRADLE                        | 44-0760     | 92-6493  |
| DECAL<br>CAUTION<br>HOT SURFACE        | ON LEFT<br>REAR<br>FRAME<br>RAIL           | 66-6840     | 92-6479  |
| DECAL<br>ATF                           | ON REAR<br>AXLE TUBE                       | 87-6060     | 92-5473  |
| DECAL<br>DANGER                        | ON REAR<br>AXLE TUBE                       | 87-5990     | 92-5367  |
| DECAL<br>GREASE<br>DRIVE<br>SHAFTS     | ON REAR<br>AXLE TUBE                       | 87-9080     | 92-6444  |
| PLATE<br>WARNING                       | ON FAN<br>SHROUD                           | 76-8750     | 92-7240  |
| DECAL<br>WARNING<br>ROTATING<br>MEMBER | ON FAN<br>SUPPORT                          | 80-8040     | 83-6030  |
| DECAL<br>NO STEP                       | ON<br>BATTERY<br>COVER                     | 36-3400     | 84-2780  |

# INTERNATIONAL DECAL CROSS REFERENCE (Cont.)

## SPANISH DECAL KIT NO. 92-7231

| DESCRIPTION                   | LOCATION                       | PART NUMBER |         |
|-------------------------------|--------------------------------|-------------|---------|
|                               |                                | ENGLISH     | SPANISH |
| DECAL<br>LOAD RATING          | UNDER<br>RIGHT SIDE<br>OF DASH | 87-6050     | 92-5396 |
| DECAL<br>FUSE BLOCK           | UNDER<br>RIGHT SIDE<br>OF DASH | 87-6670     | 92-5375 |
| DECAL<br>SUPERVISOR           | ON DASH                        | 87-5910     | 92-5333 |
| DECAL<br>DASH                 | ON DASH                        | 87-8520     | 92-6423 |
| DECAL<br>CAUTION<br>FUEL      | ON SKIRT                       | 87-5930     | 92-5326 |
| DECAL<br>AXLE RANGE           | ON<br>CONSOLE                  | 87-5960     | 92-5319 |
| DECAL<br>PTO                  | ON<br>CONSOLE                  | 87-5970     | 92-5361 |
| DECAL<br>DIFFERENTIAL<br>LOCK | ON<br>CONSOLE                  | 87-6000     | 92-5312 |
| DECAL<br>REMOTE<br>HYDRAULICS | ON<br>CONSOLE                  | 92-2609     | 92-5347 |
| DECAL<br>DUMP<br>HYDRAULICS   | ON<br>CONSOLE                  | 87-6010     | 92-5354 |
| DECAL<br>PARKING<br>BRAKE     | ON<br>CONSOLE                  | 87-6020     | 92-5305 |
| DECAL<br>QUICK<br>REFERENCE   | ON REAR<br>OF SKIRT            | 87-9060     | 92-5495 |
| DECAL<br>DANGER               | ON FRONT<br>OF SKIRT           | 87-5920     | 92-6409 |

| DESCRIPTION                            | LOCATION                                   | PART NUMBER |         |
|----------------------------------------|--------------------------------------------|-------------|---------|
|                                        |                                            | ENGLISH     | SPANISH |
| DECAL<br>DANGER<br>BED SUPPORT         | ON LIFT<br>CYLINDERS<br>AND BED<br>SUPPORT | 87-7930     | 92-6416 |
| DECAL<br>ROLLOVER                      | ON ROPS                                    | 87-5940     | 92-5389 |
| DECAL<br>ROPS                          | ON ROPS                                    | 87-5980     | 92-5382 |
| DECAL<br>WARNING<br>SPRING<br>LOADED   | ON SPRING<br>CRADLE                        | 44-0760     | 92-6494 |
| DECAL<br>CAUTION<br>HOT SURFACE        | ON LEFT<br>REAR<br>FRAME<br>RAIL           | 66-6840     | 92-6480 |
| DECAL<br>ATF                           | ON REAR<br>AXLE TUBE                       | 87-6060     | 92-5474 |
| DECAL<br>DANGER                        | ON REAR<br>AXLE TUBE                       | 87-5990     | 92-5368 |
| DECAL<br>GREASE<br>DRIVE<br>SHAFTS     | ON REAR<br>AXLE TUBE                       | 87-9080     | 92-6445 |
| PLATE<br>WARNING                       | ON FAN<br>SHROUD                           | 76-8750     | 92-7241 |
| DECAL<br>WARNING<br>ROTATING<br>MEMBER | ON FAN<br>SUPPORT                          | 80-8040     | 83-5890 |
| DECAL<br>NO STEP                       | ON<br>BATTERY<br>COVER                     | 36-3400     | 84-2740 |

## INTERNATIONAL DECAL CROSS REFERENCE (Cont.)

## SWEDISH DECAL KIT NO. 92-7232

| DESCRIPTION                   | LOCATION                       | PART NUMBER |         |
|-------------------------------|--------------------------------|-------------|---------|
|                               |                                | ENGLISH     | SWEDISH |
| DECAL<br>LOAD RATING          | UNDER<br>RIGHT SIDE<br>OF DASH | 87-6050     | 92-5397 |
| DECAL<br>FUSE BLOCK           | UNDER<br>RIGHT SIDE<br>OF DASH | 87-6670     | 92-5376 |
| DECAL<br>SUPERVISOR           | ON DASH                        | 87-5910     | 92-5334 |
| DECAL<br>DASH                 | ON DASH                        | 87-8520     | 92-6424 |
| DECAL<br>CAUTION<br>FUEL      | ON SKIRT                       | 87-5930     | 92-5327 |
| DECAL<br>AXLE RANGE           | ON<br>CONSOLE                  | 87-5960     | 92-5320 |
| DECAL<br>PTO                  | ON<br>CONSOLE                  | 87-5970     | 92-5362 |
| DECAL<br>DIFFERENTIAL<br>LOCK | ON<br>CONSOLE                  | 87-6000     | 92-5313 |
| DECAL<br>REMOTE<br>HYDRAULICS | ON<br>CONSOLE                  | 92-2609     | 92-5348 |
| DECAL<br>DUMP<br>HYDRAULICS   | ON<br>CONSOLE                  | 87-6010     | 92-5355 |
| DECAL<br>PARKING<br>BRAKE     | ON<br>CONSOLE                  | 87-6020     | 92-5306 |
| DECAL<br>QUICK<br>REFERENCE   | ON REAR<br>OF SKIRT            | 87-9060     | 92-5496 |
| DECAL<br>DANGER               | ON FRONT<br>OF SKIRT           | 87-5920     | 92-6410 |

| DESCRIPTION                            | LOCATION                                   | PART NUMBER |         |
|----------------------------------------|--------------------------------------------|-------------|---------|
|                                        |                                            | ENGLISH     | SWEDISH |
| DECAL<br>DANGER<br>BED SUPPORT         | ON LIFT<br>CYLINDERS<br>AND BED<br>SUPPORT | 87-7930     | 92-6417 |
| DECAL<br>ROLLOVER                      | ON ROPS                                    | 87-5940     | 92-5390 |
| DECAL<br>ROPS                          | ON ROPS                                    | 87-5980     | 92-5383 |
| DECAL<br>WARNING<br>SPRING<br>LOADED   | ON SPRING<br>CRADLE                        | 44-0760     | 92-6495 |
| DECAL<br>CAUTION<br>HOT SURFACE        | ON LEFT<br>REAR<br>FRAME<br>RAIL           | 66-6840     | 92-6481 |
| DECAL<br>ATF                           | ON REAR<br>AXLE TUBE                       | 87-6060     | 92-5475 |
| DECAL<br>DANGER                        | ON REAR<br>AXLE TUBE                       | 87-5990     | 92-5369 |
| DECAL<br>GREASE<br>DRIVE<br>SHAFTS     | ON REAR<br>AXLE TUBE                       | 87-9080     | 92-6446 |
| PLATE<br>WARNING                       | ON FAN<br>SHROUD                           | 76-8750     | 92-7242 |
| DECAL<br>WARNING<br>ROTATING<br>MEMBER | ON FAN<br>SUPPORT                          | 80-8040     | 83-5450 |
| DECAL<br>NO STEP                       | ON<br>BATTERY<br>COVER                     | 36-3400     | 84-2710 |

# TORO PART NUMBER INDEX

| Part No. | Description                 | Pg. Ref. |     |      | Part No. | Description             | Pg. Ref. |     |      |
|----------|-----------------------------|----------|-----|------|----------|-------------------------|----------|-----|------|
|          |                             | No.      | No. | Qty. |          |                         | No.      | No. | Qty. |
| 111071   | Bumper                      | 14       | 4   | 2    | 39-7420  | Washer - Lock           | 5        | 22  | 1    |
| 116749   | Horn Assembly               | 1        | 21  | 1    | 39-7420  | Washer - Lock           | 6        | 42  | 1    |
| 3-7166   | Bolt - Shoulder             | 26       | 34  | 1    | 39-7440  | Nut - Lock              | 5        | 23  | 1    |
| 5-3637   | Washer - Flat               | 41       | 7   | 1    | 39-7440  | Nut - Pitman Arm        | 6        | 41  | 1    |
| 18-1520  | Filter - Fuel               | 42       | 5   | 1    | 42-3560  | Screw - Shoulder        | 16       | 15  | 1    |
| 18-1720  | Joint - Ball                | 31       | 29  | 1    | 42-7160  | Pin - Dowel             | 52       | 12  | 3    |
| 18-2830  | Horn Switch Assembly        | 2        | 31  | 1    | 42-7860  | Lock - Valve            | 54       | 26  | 12   |
| 18-4260  | Assy. - Screw/Lockwasher    | 6        | 9   | 2    | 42-9400  | Bolt                    | 57       | 20  | 2    |
| 18-4270  | Clamp - Ball Return Guide   | 6        | 8   | 1    | 42-9400  | Bolt/washer             | 56       | 2   | 8    |
| 18-4340  | Plug - Rack Piston End      | 6        | 6   | 1    | 42-9530  | Screw - Cap Hex. Hd.    | 35       | 10  | 25   |
| 18-5160  | Seal Kit - Pitman Shaft     | 7        | *   | 1    | 42-9530  | Screw - Cap Hex. Hd.    | 12       | 18  | 9    |
| 18-5170  | Seal Kit - Valve Ring       | 7        | *   | 1    | 42-9560  | Stud                    | 50       | 14  | 3    |
| 18-5180  | Bearing Kit - Lower Thrust  | 7        | *   | 1    | 42-9580  | Nut - Hex.              | 30       | 12  | 3    |
| 18-5190  | Ball - Chrome Alloy         | 6        | 10  | 11   | 42-9850  | Washer - Lock           | 12       | 17  | 12   |
| 18-5430  | Plug - Expansion            | 32       | 28  | 1    | 42-9850  | Washer - Lock           | 38       | 21  | 3    |
| 18-5440  | Spacer                      | 32       | 27  | 2    | 42-9850  | Washer - Lock           | 35       | 32  | 42   |
| 18-5450  | Bearing                     | 32       | 17  | 2    | 43-1911  | Fan                     | 26       | 26  | 1    |
| 18-5520  | Lever - Rocker              | 32       | 25  | 1    | 43-1950  | Valve                   | 45       | 9   | 1    |
| 18-5530  | Screw & Lockwasher          | 32       | 29  | 2    | 43-4300  | Trim                    | 42       | 1   | 1    |
| 18-5540  | Retainer - Sleeve Stop      | 32       | 26  | 3    | 43-4300  | Trim                    | 30       | 41  | 2    |
| 18-5580  | Seal - Oil, Front           | 32       | 37  | 1    | 43-5150  | Piston                  | 46       | 11  | 1    |
| 18-5620  | Screw                       | 32       | 2   | 4    | 43-6550  | Ring - Retaining        | 5        | 10  | 2    |
| 18-5630  | Washer - Lock               | 32       | 3   | 4    | 44-0760  | Decal - Warning         | 18       | 33  | 2    |
| 18-5640  | Ring - Retaining            | 32       | 6   | 2    | 44-2230  | Disc - Rubber           | 28       | 4   | 2    |
| 18-5660  | Pin - Pivot, Flyweight      | 32       | 32  | 2    | 46-8091  | Screw - Hex. Flange Hd. | 26       | 8   | 2    |
| 18-5670  | Retainer - Pivot Pin        | 32       | 33  | 2    | 47-2964  | Hose - Fuel             | 42       | 9   | 1    |
| 18-5750  | Pin                         | 32       | 16  | 1    | 48-7560  | Screw - Cap Hex. Hd.    | 29       | 9   | 3    |
| 18-5770  | Washer - Lock               | 32       | 7   | 2    | 48-7560  | Screw - Cap Hex. Hd.    | 35       | 24  | 1    |
| 18-5790  | Gasket                      | 32       | 5   | 1    | 48-7610  | Bolt - Hex. Head        | 51       | 8   | 2    |
| 19-4050  | Knob                        | 40       | 10  | 2    | 48-7610  | Screw - Cap Hex. Hd.    | 12       | 27  | 4    |
| 19-4050  | Knob                        | 26       | 33  | 1    | 48-7650  | Screw - Cap Hex. Hd.    | 42       | 3   | 2    |
| 21-0360  | Nut                         | 9        | 6   | 1    | 48-7700  | Bolt                    | 53       | 3   | 6    |
| 21-1830  | Spring - Extension          | 8        | 30  | 1    | 48-7700  | Screw - Cap Hex. Hd.    | 38       | 9   | 3    |
| 21-5640  | Joint - Ball                | 31       | 9   | 2    | 48-7730  | Screw - Cap Hex. Hd.    | 35       | 18  | 5    |
| 21-9260  | Spacer                      | 5        | 4   | 1    | 48-7740  | Screw - Cap Hex. Hd.    | 5        | 15  | 4    |
| 22-8330  | Plug                        | 47       | 1   | 2    | 48-7890  | Nut - Hex.              | 30       | 8   | 1    |
| 22-8340  | Spring                      | 47       | 3   | 2    | 48-7930  | Nut                     | 58       | 21  | 6    |
| 22-8350  | Ball                        | 47       | 4   | 2    | 48-7930  | Nut - Hex.              | 35       | 2   | 1    |
| 22-8360  | Pin - Cam                   | 47       | 6   | 2    | 48-8030  | Washer                  | 58       | 20  | 6    |
| 22-8370  | Seat - Check Valve          | 47       | 5   | 2    | 48-8070  | Washer - Flat           | 5        | 6   | 1    |
| 22-8380  | Retainer - Spring           | 47       | 10  | 2    | 48-9480  | Screw - Cap Hex. Hd.    | 30       | 20  | 2    |
| 22-8410  | Spring                      | 47       | 11  | 1    | 48-9520  | Nut - Lock              | 22       | 28  | 2    |
| 22-8420  | Spool                       | 47       | 8   | 1    | 48-9520  | Nut - Lock              | 33       | 50  | 3    |
| 22-8480  | Ring - Retaining, Spool     | 47       | 13  | 1    | 49-7810  | Nut - Lock              | 42       | 10  | 2    |
| 22-8490  | Ring - Retaining            | 47       | 14  | 1    | 49-9150  | Washer - Flat           | 16       | 2   | 1    |
| 22-8500  | O-Ring                      | 47       | 9   | 2    | 49-9150  | Washer - Flat           | 15       | 36  | 1    |
| 23-3030  | Spacer                      | 47       | 12  | 1    | 52-2480  | Spacer                  | 30       | 24  | 2    |
| 23-7270  | Nut - Lug                   | 20       | 4   | 10   | 52-2890  | Bushing - Flange        | 8        | 24  | 2    |
| 23-7270  | Nut - Lug                   | 23       | 18  | 10   | 54-0110  | Element - Oil Filter    | 33       | 38  | 1    |
| 26-0071  | Bumper                      | 1        | 9   | 2    | 54-1400  | Clip                    | 57       | 12  | 4    |
| 27-2360  | Ignition Switch Assembly    | 2        | 43  | 1    | 55-7120  | Switch - Brake Light    | 8        | 9   | 1    |
| 27-6590  | Spacer - Thick              | 28       | 7   | 4    | 55-7290  | Battery                 | 40       | 9   | 1    |
| 27-6600  | Spacer - Thin               | 28       | 3   | 4    | 56-0100  | Plug - Taper            | 49       | 9   | 1    |
| 28-8200  | O-Ring                      | 6        | 27  | 1    | 56-2150  | Screw - Cap Hex. Hd.    | 12       | 10  | 4    |
| 28-8210  | Bolt - Flange Hex. Hd.      | 6        | 17  | 4    | 56-7973  | Clamp - Hydraulic Tube  | 44       | 17  | 4    |
| 28-8220  | Nut - Lash Adjuster         | 6        | 16  | 1    | 57-6380  | Screw - Cap Hex. Hd.    | 30       | 22  | 2    |
| 28-8270  | Seal Service Kit - End Plug | 7        | *   | 1    | 57-6380  | Screw - Cap Hex. Hd.    | 12       | 31  | 3    |
| 28-8280  | Seal Kit - Side Cover       | 6        | 14  | 1    | 58-4250  | Magnet                  | 26       | 31  | 2    |
| 28-8290  | Seal Service Kit            | 7        | *   | 1    | 59-2290  | Spacer                  | 29       | 19  | 1    |
| 33-1300  | Assembly - Element          | 43       | 5   | 1    | 60-6750  | Screw - Cap Hex. Hd.    | 35       | 4   | 11   |
| 33-1310  | Baffle                      | 43       | 8   | 1    | 62-5550  | Decal - TORO            | 1        | 2   | 1    |
| 33-1320  | Cup                         | 43       | 10  | 1    | 62-7650  | Gasket - Sending Unit   | 41       | 3   | 1    |
| 33-1330  | Assembly - Nut              | 43       | 6   | 1    | 63-6940  | Hose - Fuel             | 30       | 45  | 1    |
| 33-1340  | Assembly - Clamp            | 43       | 7   | 1    | 63-7590  | Relay                   | 30       | 16  | 1    |
| 33-1350  | Assembly - Band             | 43       | 3   | 2    | 63-7640  | Unit - Sending          | 41       | 4   | 1    |
| 33-3090  | Bushing - Flange            | 18       | 7   | 4    | 63-8140  | Pulley                  | 26       | 15  | 1    |
| 36-3400  | Decal - No Step             | 40       | 11  | 1    | 63-8140  | Pulley                  | 31       | 19  | 1    |
| 39-7310  | O-Ring                      | 6        | 35  | 3    | 63-8360  | Key - Ignition          | 2        | 10  | 1    |
| 39-7310  | Seal - O-Ring               | 44       | 29  | 2    | 63-9640  | Hose - Fuel             | 41       | 12  | 2    |

\*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

| Part No. | Description                | Pg. Ref.<br>No. No. Qty. | Part No. | Description                 | Pg. Ref.<br>No. No. Qty. |
|----------|----------------------------|--------------------------|----------|-----------------------------|--------------------------|
| 65-5100  | Handle                     | 26 6 1                   | 87-1450  | Bushing - Rubber            | 19 1 8                   |
| 65-5220  | Screw - Hex. Socket Hd.    | 15 40 3                  | 87-1470  | Rod End Assy. - LH Thread   | 20 19 2                  |
| 65-5360  | Spring - Extension         | 5 35 1                   | 87-1480  | Rod End Assy. - RH Thread   | 20 24 2                  |
| 65-5390  | Washer - Flat              | 30 39 4                  | 87-1490  | Spring - Leaf               | 22 15 2                  |
| 66-3160  | Screw - Cap Hex. Hd.       | 12 1 2                   | 87-1500  | Steering Gear (Complete)    | 7 * 1                    |
| 66-3160  | Screw - Cap Hex. Hd.       | 31 12 2                  | 87-1500  | Steering Gear Assembly      | 5 20 1                   |
| 66-3160  | Screw - Cap Hex. Hd.       | 33 24 7                  | 87-1510  | Muffler & Tailpipe          | 30 53 1                  |
| 66-3160  | Screw - Cap Hex. Hd.       | 30 27 1                  | 87-1680  | Chamber - Air               | 30 3 1                   |
| 66-3160  | Screw - Cap Hex. Hd.       | 30 40 4                  | 87-1720  | Nut - Supervisor Switch     | 2 18 1                   |
| 66-3160  | Screw - Cap Hex. Hd.       | 30 49 1                  | 87-1840  | Drum - Brake                | 23 15 2                  |
| 66-3240  | Cap - Radiator             | 26 5 1                   | 87-1900  | Housing - Bell              | 12 8 1                   |
| 66-6840  | Decal - Caution            | 22 32 2                  | 87-1910  | Pin - Alignment             | 12 11 2                  |
| 67-2250  | Bolt                       | 49 11 8                  | 87-1920  | Seal - Shaft                | 12 6 2                   |
| 67-2360  | Bushing                    | 49 12 4                  | 87-1960  | Engine Assembly             | 30 9 1                   |
| 67-2390  | Plug - Taper               | 49 16 1                  | 87-1970  | Bearing Matched Set         | 23 20 2                  |
| 67-2390  | Plug - Taper               | 58 22 1                  | 87-2000  | Screen - Radiator           | 26 7 1                   |
| 67-2560  | Bolt/washer                | 56 1 5                   | 87-2040  | Lever - Shift               | 15 16 1                  |
| 67-3260  | Washer                     | 60 3 1                   | 87-2100  | Bearing - Release           | 12 23 1                  |
| 67-3260  | Washer                     | 58 6 2                   | 87-2110  | Tail Light Assembly         | 48 10 1                  |
| 67-3260  | Washer                     | 61 16 1                  | 87-2120  | Headlight Assembly          | 1 3 2                    |
| 67-4330  | Filter - Oil               | 56 9 1                   | 87-2150  | Fender - Front              | 13 24 2                  |
| 67-4670  | Nut                        | 58 5 2                   | 87-2240  | Housing - Axle              | 23 7 2                   |
| 67-4670  | Nut                        | 61 17 1                  | 87-2260  | Boot - Shift Lower          | 15 28 1                  |
| 68-9950  | Spring - Extension         | 33 44 1                  | 87-2280  | Bearing                     | 5 25 3                   |
| 70-2100  | Assembly - Thrust Sleeve & | 32 31 1                  | 87-2310  | Clevis - Cable              | 33 36 3                  |
| 70-2120  | Spacer                     | 32 35 1                  | 87-2400  | Lever - Throttle            | 31 22 1                  |
| 70-2140  | Bearing - Front            | 32 36 1                  | 87-2410  | Rod - Tie                   | 20 17 2                  |
| 70-2150  | Flyweight                  | 32 9 2                   | 87-2420  | Boot                        | 19 19 4                  |
| 70-8631  | Cap - Fuel                 | 41 1 1                   | 87-2440  | Bumper                      | 1 7 2                    |
| 71-2690  | Hose - Fuel                | 42 7 1                   | 87-2480  | Link - Stabilizer           | 18 24 2                  |
| 71-3381  | Tube - Overflow            | 26 3 2                   | 87-2500  | Sleeve - Spring Pivot       | 18 12 2                  |
| 71-4780  | Seal - Oil, Rocker Shaft   | 32 18 1                  | 87-2510  | Bracket - Seat Frame        | 14 11 2                  |
| 71-5320  | Washer - Flat              | 16 18 1                  | 87-2520  | Tube - Pivot                | 15 21 1                  |
| 72-4310  | Switch - Ball N.C.         | 33 46 1                  | 87-2540  | Pedal - Brake               | 8 4 1                    |
| 72-5890  | Shaft - Rocker             | 32 20 1                  | 87-2590  | Shaft - Brake Pedal         | 8 46 1                   |
| 72-5910  | Assembly - Bumper Screw    | 32 23 1                  | 87-2610  | Pin - Cotter                | 12 39 1                  |
| 72-5940  | Bearing - Needle           | 32 30 1                  | 87-2640  | Support - Master Cylinder   | 8 19 1                   |
| 74-0720  | Tube - Manual              | 14 1 1                   | 87-2650  | Gusset                      | 8 21 1                   |
| 75-4701  | Hose - Fuel                | 41 11 1                  | 87-2660  | Support - Pedal LH          | 8 18 1                   |
| 75-4701  | Hose - Fuel                | 30 46 1                  | 87-2670  | Pedal - Accelerator         | 8 36 1                   |
| 75-6820  | Hourmeter                  | 2 16 1                   | 87-2710  | Lever - Parking Brake       | 16 29 1                  |
| 75-6880  | Spark Arrestor (Optional)  | 30 51 1                  | 87-2720  | Driveshaft                  | 28 10 1                  |
| 75-9610  | Spacer                     | 44 7 1                   | 87-2750  | Spacer - Bearing            | 28 12 1                  |
| 76-2290  | Spacer                     | 16 37 1                  | 87-2760  | Bracket - Ignition Coil     | 30 19 1                  |
| 76-4430  | Fitting - Fuel 90°         | 41 9 1                   | 87-2780  | Hose - Brake Front          | 10 5 2                   |
| 76-8750  | Plate - Warning            | 26 40 1                  | 87-2780  | Hose - Brake Front          | 19 8 2                   |
| 76-9100  | Spacer                     | 29 13 2                  | 87-2790  | Tube - Brake LH             | 19 * 1                   |
| 76-9100  | Spacer - Hi-Lo Lever       | 15 35 1                  | 87-2800  | Tube - Brake RH             | 19 20 1                  |
| 80-6990  | Washer                     | 23 38 4                  | 87-2810  | Tube - Brake                | 10 10 1                  |
| 80-6990  | Washer - Flat              | 33 49 3                  | 87-2820  | Bracket - Hose              | 20 15 2                  |
| 80-8040  | Decal - Caution            | 28 1 1                   | 87-2830  | Tube - Brake                | 10 1 1                   |
| 84-1680  | Ring - Retaining           | 46 7 1                   | 87-2840  | Tube - Brake                | 10 7 1                   |
| 87-0150  | Tower - Control Arm RH     | 18 9 1                   | 87-2850  | Tube - Brake                | 10 13 1                  |
| 87-0160  | Tower - Control Arm LH     | 18 * 1                   | 87-2860  | Tube - Brake                | 10 15 1                  |
| 87-0170  | Arm - Control Upper RH     | 19 21 1                  | 87-2870  | Bracket - Brake Hose        | 19 4 2                   |
| 87-0180  | Arm - Control Upper LH     | 19 * 1                   | 87-2880  | Shaft - Accelerator Pedal   | 8 45 1                   |
| 87-0210  | Arm - Control Lower RH     | 19 18 1                  | 87-2890  | Cradle - Reservoir          | 8 14 1                   |
| 87-0220  | Arm - Control Lower LH     | 19 * 1                   | 87-2900  | Spring - Compression        | 15 24 1                  |
| 87-0270  | Drum - Brake               | 20 7 2                   | 87-2910  | Support - Pedal RH          | 8 3 1                    |
| 87-0330  | Mount - Engine             | 29 7 1                   | 87-3000  | Rim - Rear 23               | 23 * 2                   |
| 87-0370  | Arm - Pitman               | 5 21 1                   | 87-3010  | Brake Assembly - RH         | 20 10 1                  |
| 87-0650  | Fuel Tank Assembly         | 41 2 1                   | 87-3010  | Front Brake Assembly - RH   | 21 * 1                   |
| 87-0660  | Hose - Reservoir Rear      | 8 17 1                   | 87-3020  | Brake Assembly - LH         | 20 * 1                   |
| 87-0670  | Hose - Reservoir Front     | 8 16 1                   | 87-3020  | Front Brake Assembly - LH   | 21 * 1                   |
| 87-0690  | Spring - Compression       | 18 15 2                  | 87-3030  | Master Cylinder Assembly    | 8 35 1                   |
| 87-0710  | Hood                       | 1 1 1                    | 87-3040  | Brake Fluid Reservoir Assy. | 8 11 1                   |
| 87-0720  | Frame - Engine             | 29 17 1                  | 87-3050  | Radiator Assembly           | 26 30 1                  |
| 87-0740  | Key - Supervisor Switch    | 2 17 1                   | 87-3060  | Washer - Flat               | 23 25 2                  |
| 87-1430  | Joint - Ball               | 19 16 4                  | 87-3070  | Cable - Positive            | 30 10 1                  |

\*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

| Part No. | Description                 | Pg. No. | Ref. No. | Qty. | Part No. | Description                | Pg. No. | Ref. No. | Qty. |
|----------|-----------------------------|---------|----------|------|----------|----------------------------|---------|----------|------|
| 87-3080  | Wire - Ground               | 30      | 25       | 1    | 87-3830  | Rear Brake Assembly - RH   | 25      | *        | 1    |
| 87-3100  | Lower Shaft Assembly        | 5       | *        | 1    | 87-3840  | Brake Assembly LH          | 23      | 9        | 1    |
| 87-3110  | Absorber - Shock            | 18      | 29       | 2    | 87-3840  | Rear Brake Assembly - LH   | 25      | *        | 1    |
| 87-3110  | Shock Absorber              | 22      | 8        | 2    | 87-3850  | Bar - Anti-Sway            | 18      | 17       | 1    |
| 87-3120  | Steering Column & Shaft     | 5       | *        | 1    | 87-3860  | Link - Anti-Sway Bar       | 18      | 5        | 2    |
| 87-3130  | Lever - Tilt Steering       | 5       | 36       | 1    | 87-3890  | Bracket - Anti-Sway Bar    | 18      | 18       | 2    |
| 87-3140  | Support - Rear              | 41      | 15       | 1    | 87-3900  | Bracket - Cable            | 31      | 26       | 1    |
| 87-3150  | Support - Front             | 41      | 18       | 1    | 87-3910  | Bushing - Anti-Sway Bar    | 18      | 19       | 2    |
| 87-3160  | Strap - Tank Support        | 41      | 20       | 2    | 87-3920  | Bushing - Rubber           | 18      | 4        | 16   |
| 87-3170  | Pad - Tank Support Strap    | 41      | 21       | 2    | 87-3920  | Bushing - Rubber           | 22      | 7        | 8    |
| 87-3180  | Cover - Clutch              | 53      | 2        | 1    | 87-3940  | Mount - Spring RH          | 22      | *        | 1    |
| 87-3190  | Disc - Clutch               | 53      | 1        | 1    | 87-3960  | Mount - Spring LH          | 22      | 18       | 1    |
| 87-3200  | Belt - V                    | 31      | 25       | 1    | 87-3980  | Shackle - Spring           | 22      | 11       | 4    |
| 87-3210  | Belt - V                    | 28      | 14       | 1    | 87-3990  | Oil Strainer Assembly      | 33      | 26       | 1    |
| 87-3250  | Mount - Bearing             | 5       | 26       | 3    | 87-4010  | Clamp - Anti-Sway Bar      | 18      | 20       | 2    |
| 87-3260  | Tube - Brake                | 10      | 12       | 1    | 87-4020  | Spring - Extension         | 31      | 23       | 1    |
| 87-3270  | Tube - Brake RH             | 22      | 3        | 1    | 87-4030  | Supervisor Switch Assembly | 2       | 29       | 1    |
| 87-3280  | Tube - Brake LH             | 22      | 22       | 1    | 87-4040  | Plate                      | 26      | 35       | 1    |
| 87-3290  | Tire - Rear 23              | 23      | *        | 2    | 87-4060  | Spacer - Bearing           | 23      | 21       | 2    |
| 87-3300  | Tire                        | 20      | 5        | 2    | 87-4070  | Bumper - Front             | 1       | 14       | 1    |
| 87-3310  | Clip - Brake Cable          | 23      | 8        | 2    | 87-4080  | Tube - Brake LH            | 23      | 6        | 1    |
| 87-3310  | Clip - Brake Cable          | 20      | 25       | 2    | 87-4090  | Tube - Brake RH            | 23      | 1        | 1    |
| 87-3320  | Cover - Wire Harness        | 2       | 49       | 1    | 87-4100  | Hose - Brake               | 23      | 3        | 2    |
| 87-3350  | Hose - Air Cleaner          | 42      | 15       | 1    | 87-4100  | Hose - Brake               | 22      | 5        | 2    |
| 87-3370  | Pulley                      | 28      | 13       | 1    | 87-4140  | Warning Light Assembly     | 2       | 9        | 1    |
| 87-3390  | Pulley                      | 26      | 23       | 1    | 87-4210  | Rod - Linkage              | 31      | 11       | 1    |
| 87-3420  | Hose - Air Cleaner          | 30      | 1        | 1    | 87-4230  | Harness - Wire Front LH    | 2       | 41       | 1    |
| 87-3430  | Hose - Radiator Upper       | 26      | 29       | 1    | 87-4240  | Harness - Wire Rear        | 2       | 34       | 1    |
| 87-3430  | Hose - Radiator Upper       | 30      | 29       | 1    | 87-4260  | Cable Assembly             | 15      | 15       | 2    |
| 87-3450  | Plug                        | 20      | 12       | 2    | 87-4260  | Shift Cable Assembly       | 34      | 51       | 2    |
| 87-3460  | Boot - Tilt Steering        | 5       | 2        | 1    | 87-4340  | Clamp - Cable              | 15      | 10       | 1    |
| 87-3470  | Bumper - Spring             | 22      | 14       | 2    | 87-4350  | Lever - Hi-Lo              | 15      | 2        | 1    |
| 87-3480  | Plate - Brake Equalizer     | 16      | 22       | 1    | 87-4420  | Hi-Lo Cable Assembly       | 15      | 6        | 1    |
| 87-3500  | Hose - Air Cleaner          | 30      | 33       | 1    | 87-4420  | Hi-Lo Cable Assembly       | 34      | 52       | 1    |
| 87-3520  | Clevis                      | 15      | 27       | 1    | 87-4440  | Driveshaft                 | 28      | 5        | 1    |
| 87-3530  | Button - Shifter            | 15      | 29       | 1    | 87-4460  | Differential Lock Cable    | 16      | 11       | 1    |
| 87-3540  | Link - Shift                | 15      | 20       | 2    | 87-4470  | Bracket                    | 33      | 23       | 1    |
| 87-3560  | Tee - Brake Line            | 10      | 9        | 1    | 87-4490  | Bracket - Hold-Down        | 44      | 22       | 1    |
| 87-3560  | Tee - Brake Tube            | 22      | 23       | 1    | 87-4500  | Rod - Pivot                | 44      | 2        | 1    |
| 87-3570  | Fitting - Union             | 10      | 11       | 2    | 87-4510  | Rod - Connecting           | 44      | 3        | 1    |
| 87-3580  | Retainer                    | 22      | 4        | 2    | 87-4520  | Bracket - Dump Valve       | 45      | 27       | 1    |
| 87-3580  | Retainer                    | 20      | 14       | 2    | 87-4540  | Hydraulic Tube Assembly    | 44      | 20       | 1    |
| 87-3580  | Retainer - Brake Hose       | 23      | 2        | 2    | 87-4550  | Hydraulic Tube Assembly    | 44      | 16       | 1    |
| 87-3580  | Retainer - Brake Hose       | 19      | 3        | 2    | 87-4560  | Tube - Hydraulic           | 44      | 14       | 1    |
| 87-3580  | Retainer - Brake Hose       | 10      | 6        | 2    | 87-4560  | Tube - Hydraulic           | 45      | 33       | 1    |
| 87-3590  | Seal - Bearing              | 23      | 22       | 2    | 87-4710  | Spacer - Barking Brake     | 16      | 13       | 1    |
| 87-3590  | Seal - Bearing              | 20      | 26       | 2    | 87-4720  | Plate - Steering Boot      | 5       | 3        | 1    |
| 87-3600  | Spacer                      | 18      | 3        | 10   | 87-4730  | Guard - Belly              | 29      | 15       | 2    |
| 87-3610  | Bracket - Detent            | 5       | 34       | 1    | 87-4750  | Bracket - Governor         | 31      | 14       | 1    |
| 87-3620  | Shield - Heat               | 30      | 23       | 1    | 87-4760  | Bushing                    | 22      | 12       | 12   |
| 87-3650  | Pin - Shift                 | 15      | 18       | 1    | 87-4770  | Bracket - High Idle Stop   | 31      | 4        | 1    |
| 87-3660  | Spring - Compression        | 15      | 30       | 1    | 87-4790  | Arm - Accelerator Pedal    | 8       | 38       | 1    |
| 87-3670  | Hose - Hydraulic            | 45      | 21       | 1    | 87-4820  | Bracket - Cable            | 33      | 27       | 1    |
| 87-3670  | Hose - Hydraulic            | 34      | 54       | 1    | 87-4870  | Hose - Hydraulic           | 45      | 4        | 1    |
| 87-3680  | Assembly - Relief Valve     | 44      | *        | 1    | 87-4880  | Hose - Hydraulic           | 45      | 3        | 1    |
| 87-3700  | Screw - Cap Hex. Hd.        | 29      | 8        | 4    | 87-4900  | Hose - Hydraulic           | 45      | 31       | 1    |
| 87-3700  | Screw - Cap Hex. Hd.        | 31      | 16       | 1    | 87-4910  | Hose - Hydraulic           | 45      | 13       | 1    |
| 87-3710  | Overflow Reservoir Assembly | 26      | 1        | 1    | 87-4920  | Hose - Hydraulic           | 33      | 41       | 1    |
| 87-3720  | Retainer - Cylinder         | 45      | 17       | 2    | 87-4960  | Clamp - Cable              | 15      | 42       | 1    |
| 87-3730  | Hose - Coolant              | 30      | 28       | 2    | 87-4970  | Engine Mount Assembly      | 29      | 3        | 2    |
| 87-3740  | Hose - Breather             | 30      | 7        | 1    | 87-4970  | Transaxle Mount Assembly   | 33      | 18       | 2    |
| 87-3750  | Cover - Steering Wheel      | 5       | 9        | 1    | 87-5030  | Lever - Differential Lock  | 16      | 3        | 1    |
| 87-3760  | Plate - Shift Boot          | 13      | 14       | 1    | 87-5050  | Hose - Radiator Lower      | 26      | 10       | 1    |
| 87-3770  | Bushing - Sleeve            | 12      | 7        | 2    | 87-5050  | Hose - Radiator Lower      | 30      | 31       | 1    |
| 87-3780  | Box - Glove                 | 2       | 3        | 1    | 87-5060  | Cushion - Seat Bottom      | 13      | 7        | 2    |
| 87-3790  | Switch - Light              | 2       | 19       | 1    | 87-5070  | Pulley - Crankshaft        | 30      | 38       | 1    |
| 87-3800  | Bracket - Seat Bottom       | 13      | 3        | 3    | 87-5080  | Spacer - Connecting        | 44      | 25       | 1    |
| 87-3820  | Wheel - Steering            | 5       | 7        | 1    | 87-5100  | Washer                     | 33      | 17       | 4    |
| 87-3830  | Brake Assembly RH           | 23      | *        | 1    | 87-5100  | Washer - Flat              | 29      | 4        | 4    |

\*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

| Part No. | Description                | Pg. Ref. |      | Part No. | Description | Pg. Ref.                   |      |    |    |
|----------|----------------------------|----------|------|----------|-------------|----------------------------|------|----|----|
|          |                            | No.      | Qty. |          |             | No.                        | Qty. |    |    |
| 87-5110  | Support - Lower            | 40       | 19   | 1        | 87-6740     | Tire - Rear 24             | 23   | 16 | 2  |
| 87-5120  | Bracket - Battery Base     | 40       | 15   | 1        | 87-6750     | Rim - Rear 24              | 23   | 19 | 2  |
| 87-5130  | Cover - Battery Base       | 40       | 12   | 1        | 87-6870     | Bracket - Front            | 48   | 15 | 2  |
| 87-5140  | Nut - Lock                 | 44       | 8    | 1        | 87-6890     | Hold - Hand                | 13   | 1  | 1  |
| 87-5150  | Screw - Cap Hex. Hd.       | 44       | 4    | 1        | 87-6910     | Spring - Compression       | 33   | 13 | 1  |
| 87-5290  | Shaft - Release            | 12       | 5    | 1        | 87-6950     | Receiver - LH              | 17   | 6  | 1  |
| 87-5300  | Fork - Clutch              | 12       | 20   | 1        | 87-6960     | Receiver - RH              | 17   | 7  | 1  |
| 87-5320  | Guide - Release            | 12       | 22   | 1        | 87-7040     | Bracket - Oil Filter       | 33   | 2  | 1  |
| 87-5330  | Washer                     | 18       | 2    | 8        | 87-7050     | Cap - Reservoir            | 26   | 43 | 1  |
| 87-5340  | Seal Kit - Tie Rod End     | 20       | *    | 4        | 87-7070     | Skirt Assembly             | 13   | 2  | 1  |
| 87-5350  | Bracket - Switch           | 12       | 15   | 1        | 87-7090     | Assembly - Frame, R.O.P.S. | 17   | 1  | 1  |
| 87-5360  | Lever                      | 12       | 12   | 1        | 87-7110     | Assembly - Axle, Rear      | 23   | 5  | 1  |
| 87-5370  | Rear Tire & Wheel Assembly | 24       | *    | 2        | 87-7120     | Assembly - Shroud, Fan     | 26   | 13 | 1  |
| 87-5490  | Switch - Neutral           | 12       | 16   | 1        | 87-7130     | Operators Platform Assy.   | 1    | 17 | 1  |
| 87-5520  | Spindle - RH               | 20       | 13   | 1        | 87-7150     | Assembly - Cradle, Spring  | 18   | 13 | 2  |
| 87-5540  | Spindle - LH               | 20       | *    | 1        | 87-7160     | Assembly - Clevis, Cable   | 15   | 7  | 1  |
| 87-5560  | Hub - Wheel                | 20       | 8    | 2        | 87-7170     | Bracket - Clutch Spring    | 33   | 45 | 1  |
| 87-5580  | Fuel Gauge Assembly        | 2        | 15   | 1        | 87-7270     | Washer - Flat              | 23   | 23 | 6  |
| 87-5590  | Temperature Gauge Assy.    | 2        | 8    | 1        | 87-7470     | Plate - Clamp              | 22   | 16 | 2  |
| 87-5700  | Hydraulic Pump Assembly    | 26       | 19   | 1        | 87-7480     | Washer - Flat              | 22   | 34 | 8  |
| 87-5720  | Rim                        | 20       | 6    | 2        | 87-7560     | Seal - Air Cleaner         | 43   | 9  | 1  |
| 87-5730  | Hose - Hydraulic           | 33       | 4    | 1        | 87-7570     | Retainer - Reservoir       | 8    | 12 | 1  |
| 87-5750  | Plate - Tail Light LH      | 48       | 12   | 1        | 87-7600     | Rod - Battery Support      | 40   | 21 | 1  |
| 87-5770  | U-Bracket - Tail Light     | 48       | 5    | 1        | 87-7610     | Tab - Battery Support      | 40   | 3  | 1  |
| 87-5800  | Bracket - Mount            | 33       | 21   | 2        | 87-7620     | Shield - Plastic           | 40   | 14 | 1  |
| 87-5910  | Decal - Supervisor         | 3        | 55   | 1        | 87-7660     | Clamp - Brake Line         | 10   | 2  | 8  |
| 87-5920  | Decal - Danger             | 13       | 26   | 1        | 87-7930     | Decal - Danger             | 14   | 6  | 1  |
| 87-5930  | Decal - Caution            | 13       | 10   | 1        | 87-7930     | Decal - Warning            | 45   | 32 | 2  |
| 87-5940  | Decal - Rollover           | 17       | 2    | 1        | 87-7930     | Decal - Warning            | 46   | 13 | 1  |
| 87-5960  | Decal - Axle Range         | 13       | 11   | 1        | 87-7940     | Stud                       | 14   | 8  | 1  |
| 87-5970  | Decal - PTO                | 13       | 16   | 1        | 87-7950     | Bed Support Assembly       | 14   | 7  | 1  |
| 87-5980  | Decal - ROPS               | 17       | 3    | 2        | 87-7960     | Lever - Shift Arm          | 33   | 48 | 2  |
| 87-5990  | Decal - PTO                | 23       | 39   | 1        | 87-7970     | Arm - Shift                | 33   | 15 | 1  |
| 87-6000  | Decal - Differential Lock  | 13       | 17   | 1        | 87-7990     | Hydraulic Cylinder Assy.   | 45   | 16 | 2  |
| 87-6010  | Decal - Dump Hydraulics    | 13       | 19   | 1        | 87-8080     | Console Plate Assembly     | 13   | 21 | 1  |
| 87-6020  | Decal - Parking Brake      | 13       | 20   | 1        | 87-8110     | Lever Support Assembly     | 15   | 14 | 1  |
| 87-6040  | Bracket - Shifter          | 15       | 22   | 1        | 87-8120     | Bracket - Trim Side        | 1    | 11 | 2  |
| 87-6050  | Decal - Load Rating        | 1        | 16   | 1        | 87-8130     | Bracket - Trim Top         | 1    | 19 | 1  |
| 87-6060  | Decal - ATF                | 23       | 4    | 1        | 87-8160     | Trim                       | 1    | 20 | 1  |
| 87-6170  | Frame - Seat               | 14       | 14   | 1        | 87-8230     | Support - Fan              | 26   | 16 | 1  |
| 87-6240  | Bracket - Seat Back        | 14       | 23   | 4        | 87-8240     | Cable - Parking Brake      | 16   | 24 | 2  |
| 87-6250  | Plate - Tail Light RH      | 48       | *    | 1        | 87-8250     | Plate - Shift Arm          | 33   | 10 | 1  |
| 87-6270  | Socket & Bulb Assembly     | 3        | 60   | 4        | 87-8300     | Air Cleaner (Complete)     | 43   | *  | 1  |
| 87-6280  | Plate - Seat Back          | 14       | 18   | 2        | 87-8300     | Air Cleaner Assembly       | 42   | 17 | 1  |
| 87-6290  | Cushion - Seat Back        | 14       | 17   | 2        | 87-8440     | Assembly - Rear Frame      | 22   | 2  | 1  |
| 87-6300  | Lens                       | 48       | 7    | 1        | 87-8460     | Bumper                     | 12   | 34 | 1  |
| 87-6310  | Gasket                     | 48       | 9    | 1        | 87-8480     | Bracket - Clutch           | 12   | 43 | 1  |
| 87-6320  | Bulb - Headlight           | 1        | 5    | 2        | 87-8500     | Front Wire Harness Assy.   | 2    | 47 | 1  |
| 87-6330  | Lens - Headlight           | 1        | 6    | 2        | 87-8520     | Decal - Dash               | 3    | 56 | 1  |
| 87-6370  | Rear Tire & Wheel Assembly | 24       | *    | 2        | 87-8540     | Control Panel Assembly     | 2    | 53 | 1  |
| 87-6490  | Spring                     | 32       | 13   | 1        | 87-8590     | Clutch Cable Assembly      | 12   | 36 | 1  |
| 87-6510  | Assembly - Shaft & Yoke    | 32       | 34   | 1        | 87-8600     | Accelerator Cable Assembly | 31   | 1  | 1  |
| 87-6520  | Body                       | 32       | 24   | 1        | 87-8600     | Cable - Accelerator        | 8    | 40 | 1  |
| 87-6530  | Assembly - Throttle Lever  | 32       | 22   | 1        | 87-8620     | Boot - Shift               | 13   | 13 | 1  |
| 87-6540  | Bolt - Eye                 | 32       | 21   | 1        | 87-8640     | Washer - Flat              | 15   | 26 | 1  |
| 87-6550  | Pin - Forced Idle          | 32       | 14   | 1        | 87-8640     | Washer - Flat              | 30   | 48 | 1  |
| 87-6560  | Cover                      | 32       | 4    | 1        | 87-8700     | Screw - Cap Hex. Hd.       | 23   | 36 | 4  |
| 87-6570  | Foam - Seal                | 15       | 38   | 1        | 87-8710     | Tab - Clutch               | 12   | 42 | 1  |
| 87-6580  | Stud - Lever Pivot         | 32       | 11   | 1        | 87-8720     | Governor Assembly          | 31   | 24 | 1  |
| 87-6590  | Assy. Lever & Fitting      | 32       | 10   | 1        | 87-8730     | Stud - Drive               | 20   | 9  | 10 |
| 87-6620  | Screw                      | 1        | 10   | 15       | 87-8730     | Stud - Drive               | 23   | 12 | 10 |
| 87-6620  | Screw - Torx Pan Hd.       | 12       | 40   | 2        | 87-8740     | Stub - Axle                | 23   | 14 | 2  |
| 87-6640  | Lever - Dump Stop          | 16       | 14   | 1        | 87-8750     | Driveshaft Assembly        | 24   | *  | 2  |
| 87-6660  | Fender - Rear 24           | 48       | 17   | 2        | 87-8780     | Head - Oil Filter          | 33   | 43 | 1  |
| 87-6670  | Decal - Fuse Block         | 3        | 54   | 1        | 87-8800     | Transaxle Assembly         | 33   | 22 | 1  |
| 87-6690  | Guard - Induction Chamber  | 22       | 29   | 1        | 87-8820     | Hub - Pulley               | 32   | 38 | 1  |
| 87-6700  | Decal - Workman 3200       | 1        | 15   | 1        | 87-8830     | Pulley                     | 32   | 1  | 1  |
| 87-6710  | Switch - Supervisor        | 33       | 33   | 1        | 87-9060     | Decal - Quick Reference    | 13   | 23 | 1  |
| 87-6720  | Knob                       | 15       | 17   | 1        | 87-9080     | Decal - Grease             | 23   | 43 | 2  |

\*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

| Part No. | Description                | Pg. Ref. |      | Part No. | Description             | Pg. Ref. |      |
|----------|----------------------------|----------|------|----------|-------------------------|----------|------|
|          |                            | No.      | Qty. |          |                         | No.      | Qty. |
| 92-0650  | Bearing - Ball             | 37       | 22   | 92-0747  | Washer - Thrust         | 39       | 10   |
| 92-0651  | Case - Transaxle           | 35       | 19   | 92-0748  | Gear - Pinion           | 39       | 12   |
| 92-0652  | Cover - Upper              | 35       | 7    | 92-0749  | Shaft - Pinion          | 39       | 23   |
| 92-0653  | Cover - Side               | 35       | 9    | 92-0750  | Washer                  | 39       | 13   |
| 92-0654  | Carrier - Differential     | 35       | 17   | 92-0753  | Ring - Retaining        | 37       | 2    |
| 92-0655  | Cover - Seal               | 35       | 30   | 92-0753  | Ring - Retaining        | 39       | 21   |
| 92-0656  | Cover - P.T.O.             | 35       | 1    | 92-0754  | Ring - Retaining        | 37       | 20   |
| 92-0657  | Plate - Center             | 35       | 21   | 92-0755  | Ring - Retaining        | 36       | 11   |
| 92-0662  | Cap - Oil                  | 35       | 5    | 92-0756  | Ring - Retaining        | 39       | 5    |
| 92-0663  | Shaft - Main               | 37       | 16   | 92-0759  | Ring - Retaining        | 35       | 22   |
| 92-0664  | Hub - Synchro              | 37       | 12   | 92-0760  | Ring - Retaining        | 35       | 15   |
| 92-0665  | Key - Synchro              | 37       | 23   | 92-0761  | Ring - Retaining        | 38       | 18   |
| 92-0666  | Spring - Synchro           | 37       | 13   | 92-0762  | Washer - Lock           | 35       | 3    |
| 92-0667  | Ring - Synchro             | 37       | 6    | 92-0763  | Ring - Retaining        | 37       | 14   |
| 92-0668  | Shifter - Synchro          | 37       | 7    | 92-0764  | Ring - Retaining        | 36       | 3    |
| 92-0670  | Gear - 29T                 | 37       | 5    | 92-0765  | Pin - Alignment         | 35       | 8    |
| 92-0671  | Gear - 22T                 | 37       | 15   | 92-0765  | Pin - Alignment         | 39       | 9    |
| 92-0672  | Gar - 18T                  | 37       | 19   | 92-0768  | Pin - Spring            | 39       | 15   |
| 92-0673  | Gear - 14T                 | 37       | 21   | 92-0769  | Pin - Spring            | 38       | 4    |
| 92-0674  | Shaft - Reduction          | 37       | 28   | 92-0770  | Pin - Spring            | 39       | 26   |
| 92-0675  | Gear - 25T                 | 37       | 24   | 92-0771  | Pin - Spring            | 39       | 16   |
| 92-0676  | Gear - 32T                 | 37       | 27   | 92-0772  | Key                     | 37       | 17   |
| 92-0677  | Gear - 49T                 | 37       | 31   | 92-0773  | Drain Plug Assembly     | 35       | 13   |
| 92-0679  | Gear - 23T                 | 37       | 25   | 92-0775  | Bearing - Ball          | 39       | 6    |
| 92-0680  | Collar                     | 37       | 26   | 92-0775  | Bearing - Ball          | 35       | 33   |
| 92-0681  | Bearing - Needle           | 37       | 30   | 92-0776  | Bearing - Ball          | 39       | 29   |
| 92-0682  | Washer - Thrust            | 37       | 29   | 92-0778  | Bearing - Ball          | 37       | 11   |
| 92-0683  | Shaft - Reverse Idler      | 37       | 9    | 92-0780  | Bearing - Ball          | 39       | 3    |
| 92-0684  | Gear - 33T                 | 37       | 10   | 92-0781  | Bearing - Needle        | 37       | 4    |
| 92-0687  | Gear - 16T                 | 37       | 18   | 92-0782  | Bearing - Needle        | 37       | 33   |
| 92-0698  | Shaft - Fork R-1           | 38       | 14   | 92-0783  | Sleeve - Inner          | 36       | 5    |
| 92-0699  | Shaft - Fork 2-3           | 38       | 7    | 92-0785  | Ball                    | 38       | 1    |
| 92-0700  | Fork - Shift R-1           | 38       | 3    | 92-0787  | O-Ring                  | 39       | 22   |
| 92-0701  | Fork - Shift 2-3           | 38       | 6    | 92-0788  | O-Ring                  | 35       | 6    |
| 92-0705  | Lock - Spindle             | 38       | 20   | 92-0789  | O-Ring                  | 35       | 14   |
| 92-0706  | Cap - Fork Shaft           | 35       | 25   | 92-0790  | O-Ring                  | 35       | 29   |
| 92-0708  | Shaft - Fork Hi-Lo         | 38       | 16   | 92-0791  | Seal - Oil              | 35       | 26   |
| 92-0709  | Fork - Shift Hi-Lo         | 38       | 17   | 92-0793  | Seal - Oil              | 35       | 16   |
| 92-0710  | Counter Shaft Assembly     | 36       | 14   | 92-0793  | Seal - Oil              | 39       | 32   |
| 92-0710  | Ring Gear Assembly         | 39       | 8    | 92-0796  | Screw - Cap Hex. Hd.    | 35       | 31   |
| 92-0711  | Washer - Thrust            | 36       | 4    | 92-0803  | Screw - Hex. Flange Hd. | 39       | 30   |
| 92-0712  | Bearing - Ball             | 36       | 1    | 92-0804  | Stud                    | 35       | 28   |
| 92-0713  | Collar                     | 36       | 12   | 92-0807  | Cap - Sealing           | 35       | 23   |
| 92-0714  | Bearing - Ball             | 36       | 13   | 92-0808  | Shim Set                | 35       | 20   |
| 92-0715  | Gear - 49T                 | 36       | 6    | 92-0809  | Shim Set                | 35       | 11   |
| 92-0716  | Collar                     | 36       | 2    | 92-0816  | Arm - Shift Fork R-1    | 38       | 15   |
| 92-0717  | Gear - 71T                 | 36       | 9    | 92-0817  | Arm - Shift Fork 2-3    | 38       | 5    |
| 92-0718  | Shifter - Hi-Lo            | 36       | 7    | 92-0818  | Arm - Shift Fork Hi-Lo  | 38       | 19   |
| 92-0719  | Collar - Spline            | 36       | 8    | 92-0819  | Gear - 40T              | 37       | 32   |
| 92-0720  | Case - Differential        | 39       | 31   | 92-1901  | Clip                    | 58       | 7    |
| 92-0721  | Fork - Differential Lock   | 39       | 17   | 92-1902  | Plug - Taper            | 49       | 8    |
| 92-0722  | Shaft - Lock Fork          | 39       | 18   | 92-1903  | Washer                  | 50       | 17   |
| 92-0723  | Spring - Compression       | 39       | 19   | 92-1905  | Stud                    | 50       | 20   |
| 92-0724  | Arm - Differential Lock    | 39       | 27   | 92-1906  | Assembly - Valve        | 58       | 16   |
| 92-0725  | Shaft - Axle L.H.          | 39       | 28   | 92-1907  | Cover - Access          | 51       | 19   |
| 92-0726  | Shaft - Axle R.H.          | 39       | 1    | 92-1908  | O-Ring                  | 57       | 17   |
| 92-0727  | Washer                     | 39       | 4    | 92-1909  | Nut                     | 54       | 16   |
| 92-0728  | Washer                     | 39       | 2    | 92-1910  | Plug - Taper            | 49       | 10   |
| 92-0729  | Seal - Oil                 | 38       | 10   | 92-1911  | Guide - Exhaust Valve   | 50       | 18   |
| 92-0730  | Slider - Differential Lock | 39       | 7    | 92-1912  | Pipe - Manifold         | 58       | 23   |
| 92-0731  | Spring - Compression       | 38       | 2    | 92-1914  | Bearing - Ball          | 52       | 10   |
| 92-0732  | Plate - Keeper             | 38       | 8    | 92-1915  | Clamp - Cable           | 50       | 8    |
| 92-0733  | Washer                     | 39       | 20   | 92-1916  | Plug - Taper            | 50       | 19   |
| 92-0740  | Washer - Thrust            | 37       | 3    | 92-1917  | Nipple                  | 58       | 25   |
| 92-0741  | Washer - Thrust            | 36       | 10   | 92-1918  | Bolt - Flange Head      | 56       | 7    |
| 92-0743  | Breather - Air             | 35       | 27   | 92-1920  | Plug - Oil              | 51       | 14   |
| 92-0744  | Washer                     | 39       | 14   | 92-1921  | Gasket - Oil            | 51       | 13   |
| 92-0745  | Gear - Side L.H.           | 39       | 24   | 92-1922  | Washer                  | 54       | 9    |
| 92-0746  | Gear - Side R.H.           | 39       | 11   | 92-1923  | Nut                     | 52       | 5    |

\*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

| Part No. | Description               | Pg. Ref.<br>No. No. Qty. | Part No. | Description              | Pg. Ref.<br>No. No. Qty. |
|----------|---------------------------|--------------------------|----------|--------------------------|--------------------------|
| 92-1924  | Hose - Water By-Pass      | 57 13 1                  | 92-1998  | Shaft - Balancer         | 55 1 1                   |
| 92-1925  | O-Ring                    | 49 31 1                  | 92-1999  | Rod - Connecting         | 52 4 3                   |
| 92-1926  | Guide - Intake Valve      | 50 15 3                  | 92-2000  | Sprocket                 | 54 10 1                  |
| 92-1927  | Plunger - Relief          | 56 12 1                  | 92-2001  | Spring                   | 54 7 1                   |
| 92-1928  | Spring - Relief           | 56 13 1                  | 92-2002  | Cap Inlet                | 58 27 1                  |
| 92-1929  | Seal - Oil                | 50 7 2                   | 92-2003  | Bolt - Connecting Rod    | 52 3 6                   |
| 92-1930  | Washer - Wave             | 54 19 2                  | 92-2005  | Piston & Pin (Std.)      | 52 2 3                   |
| 92-1931  | Retainer                  | 54 27 6                  | 92-2006  | Assembly - Crankcase     | 49 1 1                   |
| 92-1932  | Bolt                      | 63 29 1                  | 92-2007  | Pump - Fuel              | 42 12 2                  |
| 92-1933  | Gauge - Water Temperature | 57 11 1                  | 92-2008  | Cover                    | 57 18 1                  |
| 92-1934  | Bolt - Flywheel           | 52 11 5                  | 92-2009  | Hose - By-Pass           | 57 14 1                  |
| 92-1935  | Plug - Taper              | 49 5 1                   | 92-2010  | Pin - Dowel              | 54 25 1                  |
| 92-1936  | Seal - Valve              | 54 28 6                  | 92-2011  | Brace                    | 63 28 1                  |
| 92-1937  | Plate - Rear              | 51 6 1                   | 92-2012  | Bracket - Oil Filter     | 49 23 1                  |
| 92-1938  | Cover - Bell Housing      | 51 7 1                   | 92-2013  | Piston & Pin             | 52 * 3                   |
| 92-1938  | Cover - Bell Housing      | 12 29 1                  | 92-2014  | Piston Ring Set (Std.)   | 52 1 1                   |
| 92-1939  | Gasket                    | 51 16 1                  | 92-2015  | Piston Ring Set          | 52 * 1                   |
| 92-1940  | Gasket                    | 51 17 1                  | 92-2016  | Valve - EGR              | 58 14 1                  |
| 92-1941  | Gasket - Oil              | 56 16 1                  | 92-2017  | Bolt - Rocker Shaft      | 54 21 2                  |
| 92-1942  | Gear - Ring               | 52 8 1                   | 92-2018  | Bolt - Rocker Shaft      | 54 22 2                  |
| 92-1943  | Packing                   | 50 2 1                   | 92-2019  | Strainer - Oil           | 51 10 1                  |
| 92-1944  | Gasket - Cover, Rocker    | 50 10 1                  | 92-2020  | Assembly - Cover         | 50 9 1                   |
| 92-1945  | Cover - Rear              | 49 29 1                  | 92-2021  | Seal - Oil               | 50 12 1                  |
| 92-1946  | Gasket - Front            | 56 10 1                  | 92-2022  | Mount - Engine           | 55 2 1                   |
| 92-1947  | Arm - Rocker              | 54 18 6                  | 92-2023  | Manifold - Exhaust       | 58 19 1                  |
| 92-1948  | Gear - Oil Pump           | 56 5 1                   | 92-2024  | Pipe - Water             | 57 15 1                  |
| 92-1949  | Gear - Oil Pump           | 56 6 1                   | 92-2025  | Assembly - Alternator    | 63 * 1                   |
| 92-1950  | Gasket                    | 57 7 1                   | 92-2026  | Hose - PCV Valve         | 50 4 1                   |
| 92-1951  | Nipple                    | 58 26 1                  | 92-2027  | Coil - Ignition          | 30 14 1                  |
| 92-1952  | Seal - Oil                | 49 27 1                  | 92-2028  | Wire - High Tension      | 61 21 1                  |
| 92-1953  | Screw - Adjusting         | 54 17 6                  | 92-2029  | Wire - Spark Plug, #1    | 61 20 1                  |
| 92-1954  | Valve - Inlet             | 54 29 3                  | 92-2030  | Wire - Spark Plug, #2    | 61 19 1                  |
| 92-1955  | Valve - Exhaust           | 54 31 3                  | 92-2031  | Wire - Spark Plug, #3    | 61 22 1                  |
| 92-1956  | Bearing - Set, Main       | 49 17 1                  | 92-2032  | Seal - Oil               | 56 3 1                   |
| 92-1957  | Rod Bearing Set           | 52 6 1                   | 92-2034  | Head - Cylinder          | 50 11 1                  |
| 92-1958  | Pin - Dowel               | 49 15 1                  | 92-2035  | Cover - Front            | 51 5 1                   |
| 92-1959  | Seat - Intake Valve       | 50 21 3                  | 92-2036  | Cover - Exhaust Manifold | 58 17 1                  |
| 92-1960  | Seal - Oil                | 56 11 1                  | 92-2037  | Kit - Gasket             | 59 14 1                  |
| 92-1961  | Seal - Valve              | 54 13 6                  | 92-2038  | Kit - Gasket             | 59 12 1                  |
| 92-1962  | Gasket                    | 51 3 1                   | 92-2039  | Kit - Thermostat         | 57 8 1                   |
| 92-1962  | Gasket                    | 51 20 1                  | 92-2040  | Pulley                   | 57 3 1                   |
| 92-1963  | Mount - Engine            | 58 8 1                   | 92-2041  | V-Belt                   | 57 1 1                   |
| 92-1964  | Plate - Cam               | 54 14 1                  | 92-2042  | Sprocket - Oil           | 54 33 1                  |
| 92-1965  | Assembly - Cover          | 51 2 1                   | 92-2043  | Assembly - Distributor   | 61 * 1                   |
| 92-1966  | Gasket                    | 51 21 1                  | 92-2044  | Gasket - Exhaust         | 30 54 1                  |
| 92-1967  | Assembly - Cover          | 51 15 1                  | 92-2044  | Gasket - Exhaust Ring    | 58 18 1                  |
| 92-1968  | Tensioner - Belt          | 54 30 1                  | 92-2045  | Housing - Seal, Oil      | 49 26 1                  |
| 92-1971  | Bolt                      | 50 16 8                  | 92-2046  | Assembly - Oil Pump      | 56 4 1                   |
| 92-1972  | Washer                    | 54 20 2                  | 92-2049  | Assembly - Camshaft      | 54 24 1                  |
| 92-1973  | Shaft - Rocker Arm        | 54 23 1                  | 92-2050  | PCV Valve                | 50 3 1                   |
| 92-1974  | Assembly - Case           | 56 8 1                   | 92-2053  | Assembly - Oil Pan       | 51 11 1                  |
| 92-1975  | Cap - Oil                 | 50 1 1                   | 92-2054  | Manifold - Intake        | 58 9 1                   |
| 92-1976  | Seat - Exhaust Valve      | 50 22 3                  | 92-2055  | Assembly - Starter       | 62 * 1                   |
| 92-1977  | Spring - Valve            | 54 12 6                  | 92-2056  | Flange - PTO             | 54 32 1                  |
| 92-1978  | Switch - Oil Pressure     | 55 4 1                   | 92-2057  | Bolt - Crankshaft PTO    | 52 14 1                  |
| 92-1980  | Flywheel                  | 52 9 1                   | 92-2058  | Carburetor               | 59 11 1                  |
| 92-1981  | Bearing - Front           | 49 13 1                  | 92-2059  | Belt - Timing            | 54 11 1                  |
| 92-1982  | Bearing - Rear            | 49 7 1                   | 92-2060  | Assembly - Water Pump    | 57 5 1                   |
| 92-1983  | Retainer                  | 56 14 1                  | 92-2061  | Assembly - PTO Sprocket  | 54 3 1                   |
| 92-1984  | Washer                    | 63 27 1                  | 92-2062  | Assembly - PTO Adapter   | 54 2 1                   |
| 92-1987  | Gasket                    | 49 25 1                  | 92-2063  | Washer                   | 50 6 2                   |
| 92-1988  | Gasket - Oil              | 51 9 1                   | 92-2065  | Bearing                  | 63 5 1                   |
| 92-1989  | Gasket                    | 57 6 1                   | 92-2066  | Nut                      | 63 23 2                  |
| 92-1991  | Gasket                    | 49 30 1                  | 92-2067  | Spring - Brush           | 63 16 2                  |
| 92-1993  | Gasket - Intake           | 58 10 1                  | 92-2068  | Brush                    | 63 17 2                  |
| 92-1994  | Cap - Sealing             | 49 4 1                   | 92-2069  | Cover - Bearing          | 63 11 1                  |
| 92-1995  | Assembly - Crankshaft     | 52 7 1                   | 92-2070  | Bearing                  | 63 10 1                  |
| 92-1996  | Assembly - Cover, Front   | 51 18 1                  | 92-2071  | Screw                    | 63 18 2                  |
| 92-1997  | Gasket - Cylinder         | 50 23 1                  | 92-2073  | Assembly - Holder        | 63 15 1                  |

\*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

| Part No. | Description                 | Pg. No. | Ref. No. | Qty. | Part No. | Description               | Pg. No. | Ref. No. | Qty. |
|----------|-----------------------------|---------|----------|------|----------|---------------------------|---------|----------|------|
| 92-2075  | Assembly - Rotor            | 63      | 9        | 1    | 92-2148  | Pin - Dowel               | 49      | 6        | 2    |
| 92-2076  | Plate                       | 63      | 7        | 1    | 92-2148  | Pin - Dowel               | 52      | 13       | 1    |
| 92-2077  | Screw                       | 63      | 8        | 4    | 92-2149  | Pin                       | 54      | 1        | 2    |
| 92-2078  | Bolt                        | 63      | 4        | 2    | 92-2150  | Ring - Snap               | 56      | 15       | 1    |
| 92-2079  | Collar                      | 63      | 2        | 1    | 92-2151  | Cap - Plug                | 58      | 29       | 1    |
| 92-2080  | Frame - End                 | 63      | 24       | 1    | 92-2151  | Cap - Sealing             | 49      | 2        | 3    |
| 92-2081  | Cover - End                 | 63      | 13       | 1    | 92-2151  | Cap - Sealing             | 50      | 13       | 1    |
| 92-2082  | Rectifier                   | 63      | 22       | 1    | 92-2152  | Bushing                   | 49      | 3        | 4    |
| 92-2083  | Bushing                     | 63      | 21       | 1    | 92-2153  | Plug - Spark              | 61      | 18       | 3    |
| 92-2084  | Regulator                   | 63      | 20       | 1    | 92-2154  | Kit - Diaphragm           | 60      | 20       | 1    |
| 92-2085  | Screw W/washer              | 63      | 6        | 6    | 92-2155  | Gasket - Water Inlet      | 57      | 21       | 1    |
| 92-2085  | Screw W/washer              | 63      | 14       | 6    | 92-2156  | Nut - Alternator          | 63      | 31       | 1    |
| 92-2086  | Screw W/washer              | 63      | 19       | 1    | 92-2157  | Outlet - Water            | 58      | 2        | 1    |
| 92-2087  | Bolt W/washer               | 63      | 12       | 3    | 92-2160  | Cartridge - Relief Valve  | 44      | 12       | 1    |
| 92-2088  | Yoke                        | 62      | 15       | 1    | 92-2161  | Body - Relief Valve       | 44      | 28       | 1    |
| 92-2089  | Brush                       | 62      | 16       | 4    | 92-2162  | Head                      | 46      | 6        | 1    |
| 92-2090  | Spring                      | 62      | 17       | 4    | 92-2163  | Shaft                     | 46      | 2        | 1    |
| 92-2091  | Assembly - Holder           | 62      | 14       | 1    | 92-2165  | Kit - Repair              | 46      | *        | 1    |
| 92-2092  | Insulator                   | 62      | 13       | 1    | 92-2173  | Screw - Cap Socket Head   | 27      | 18       | 8    |
| 92-2093  | Armature                    | 62      | 6        | 1    | 92-2174  | Screw - Adjusting         | 27      | 22       | 1    |
| 92-2094  | Clutch                      | 62      | 7        | 1    | 92-2175  | Gear                      | 27      | 11       | 2    |
| 92-2095  | Kit - Switch                | 62      | 4        | 1    | 92-2176  | Pin - Dowel               | 27      | 16       | 2    |
| 92-2096  | Ring - Snap                 | 62      | 9        | 1    | 92-2177  | Pin - Shear               | 27      | 7        | 1    |
| 92-2097  | Nut                         | 62      | 8        | 2    | 92-2178  | Ring - Crescent           | 27      | 4        | 4    |
| 92-2098  | Washer                      | 62      | 10       | 1    | 92-2179  | Key - Square              | 27      | 5        | 1    |
| 92-2099  | Bolt                        | 62      | 11       | 2    | 92-2179  | Key - Square              | 26      | 18       | 1    |
| 92-2100  | Bolt                        | 63      | 25       | 2    | 92-2180  | Gasket - Copper           | 27      | 23       | 1    |
| 92-2102  | Lever - Clutch              | 62      | 3        | 1    | 92-2181  | Plate - Pressure          | 27      | 13       | 1    |
| 92-2103  | Assembly - Bracket, Front   | 63      | 3        | 1    | 92-2182  | Plate - Seal              | 27      | 9        | 1    |
| 92-2106  | Nut                         | 62      | 2        | 2    | 92-2183  | Plate - Wear              | 27      | 10       | 1    |
| 92-2107  | Nut                         | 62      | 5        | 1    | 92-2184  | Cap - Relief Valve        | 27      | 24       | 1    |
| 92-2108  | Igniter Set                 | 61      | 12       | 1    | 92-2185  | Plug                      | 27      | 19       | 1    |
| 92-2109  | O-Ring                      | 61      | 8        | 1    | 92-2186  | Spacer                    | 27      | 3        | 1    |
| 92-2110  | Cover - Acc. Pump           | 60      | 19       | 1    | 92-2187  | Housing - Gear, End       | 27      | 17       | 1    |
| 92-2111  | Kit - Mixing Screw          | 59      | 2        | 1    | 92-2188  | Stator                    | 27      | 8        | 1    |
| 92-2113  | Rotor                       | 61      | 2        | 1    | 92-2189  | Shaft - Drive             | 27      | 6        | 1    |
| 92-2114  | Assembly - Cap              | 61      | 1        | 1    | 92-2190  | Shaft - Idler             | 27      | 25       | 1    |
| 92-2115  | Screw Set                   | 61      | 14       | 1    | 92-2191  | Bearing                   | 27      | 27       | 1    |
| 92-2116  | Assembly - Signal Rotor     | 61      | 6        | 1    | 92-2192  | Bearing                   | 27      | 12       | 4    |
| 92-2117  | Chamber - Vacuum            | 61      | 7        | 1    | 92-2193  | Ball                      | 27      | 20       | 1    |
| 92-2118  | Plate                       | 61      | 10       | 1    | 92-2194  | Spring                    | 27      | 21       | 1    |
| 92-2119  | Wire - Lead                 | 61      | 11       | 1    | 92-2195  | Seal - Oil                | 27      | 2        | 1    |
| 92-2120  | Gasket                      | 61      | 3        | 1    | 92-2196  | Seal - Pressure Plate     | 27      | 15       | 1    |
| 92-2121  | Wire Assembly - Lead        | 61      | 13       | 1    | 92-2197  | Seal - Back Up            | 27      | 14       | 1    |
| 92-2122  | Housing                     | 61      | 9        | 1    | 92-2198  | Seal                      | 27      | 26       | 1    |
| 92-2125  | Assy. - Spark Plug Wire Set | 61      | *        | 1    | 92-2199  | Key - Ball                | 27      | 28       | 1    |
| 92-2126  | Kit - Gasket, Upper         | 64      | 3        | 1    | 92-2379  | Clamp - Hose              | 26      | 4        | 3    |
| 92-2127  | Kit - Overhaul Gasket       | 64      | 2        | 1    | 92-2379  | Clamp - Hose              | 42      | 6        | 2    |
| 92-2128  | Bolt - Cover                | 50      | 5        | 2    | 92-2379  | Clamp - Hose              | 41      | 13       | 1    |
| 92-2129  | Screw - Cap Hex. Hd.        | 12      | 30       | 2    | 92-2609  | Decal - Remote Hydraulics | 13      | 18       | 1    |
| 92-2130  | Bolt - Flange Head          | 54      | 15       | 2    | 92-2697  | Hose - Hydraulic          | 45      | 1        | 1    |
| 92-2131  | Bolt - Flange Head          | 51      | 4        | 2    | 92-4101  | Primary Piston Assembly   | 9       | 11       | 1    |
| 92-2131  | Bolt - Flange Head          | 49      | 28       | 7    | 92-4102  | Secondary Piston Assembly | 9       | 4        | 1    |
| 92-2132  | Bolt                        | 57      | 16       | 1    | 92-4103  | Pin - Stop                | 9       | 3        | 1    |
| 92-2133  | Bolt - Flange Head          | 63      | 26       | 1    | 92-4104  | Adaptor - Pipe Fitting    | 9       | 1        | 2    |
| 92-2134  | Bolt - Flange Head          | 63      | 30       | 1    | 92-4105  | Seal Kits                 | 9       | 2        | 1    |
| 92-2135  | Bolt - Flange Head          | 54      | 8        | 1    | 92-4106  | Rod - Push                | 9       | 8        | 1    |
| 92-2137  | Bolt/washer                 | 51      | 12       | 2    | 92-4107  | Dust Cover                | 9       | 7        | 1    |
| 92-2138  | Bolt                        | 58      | 1        | 3    | 92-4108  | Washer - Retainer         | 9       | 10       | 1    |
| 92-2138  | Bolt                        | 57      | 19       | 2    | 92-4109  | Circlip                   | 9       | 9        | 1    |
| 92-2139  | Bolt                        | 58      | 4        | 1    | 92-4110  | Clevis                    | 9       | 5        | 1    |
| 92-2140  | Bolt                        | 58      | 28       | 1    | 92-4111  | Petcock - Radiator        | 26      | 42       | 1    |
| 92-2141  | Bolt                        | 58      | 3        | 2    | 92-4112  | Assembly - Cap            | 8       | 5        | 1    |
| 92-2142  | Bolt/washer                 | 57      | 4        | 3    | 92-4113  | Screw - Bleed             | 21      | 4        | 1    |
| 92-2143  | Bolt                        | 49      | 22       | 3    | 92-4114  | Cap - Bleed Screw         | 21      | 5        | 1    |
| 92-2144  | Bolt                        | 49      | 20       | 2    | 92-4114  | Cap - Bleed Screw         | 25      | 5        | 1    |
| 92-2145  | Nut - Flange                | 54      | 5        | 1    | 92-4115  | Backplate Assembly LH     | 21      | 2        | 1    |
| 92-2146  | Washer                      | 61      | 15       | 1    | 92-4116  | Backplate Assembly RH     | 21      | *        | 1    |
| 92-2147  | Washer                      | 54      | 6        | 1    | 92-4117  | Assy. - Wheel Cylinder LH | 21      | *        | 1    |

\*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

| Part No. | Description                  | Pg. Ref.<br>No. No. Qty. | Part No. | Description                 | Pg. Ref.<br>No. No. Qty. |
|----------|------------------------------|--------------------------|----------|-----------------------------|--------------------------|
| 92-4118  | Assy. - Wheel Cylinder RH    | 21 * 1                   | 92-5104  | Guide - Intake Valve        | 50 * 3                   |
| 92-4119  | Kit - Seal                   | 21 * 1                   | 92-5105  | Guide - Exhaust Valve       | 50 * 1                   |
| 92-4120  | Shoe & Lining Set            | 21 13 1                  | 92-5106  | Guide - Exhaust Valve       | 50 * 1                   |
| 92-4121  | Assembly - Adjuster LH       | 21 * 1                   | 92-5107  | Stud                        | 49 14 1                  |
| 92-4122  | Assembly - Adjuster RH       | 21 * 1                   | 92-5108  | Gasket - Bracket            | 49 24 1                  |
| 92-4123  | Assembly - Pawl LH           | 21 19 1                  | 92-5109  | Stay - Oil Filter           | 49 21 1                  |
| 92-4124  | Assembly - Pawl LH           | 25 19 1                  | 92-5110  | Gauge - Oil Level           | 49 19 1                  |
| 92-4124  | Assembly - Pawl RH           | 21 * 1                   | 92-5111  | Guide - Oil Level Gauge     | 49 32 1                  |
| 92-4124  | Assembly - Pawl RH           | 25 * 1                   | 92-5112  | Bolt - Flange Head          | 49 18 1                  |
| 92-4125  | Plug                         | 21 3 1                   | 92-5112  | Bolt - Flange Head          | 57 2 4                   |
| 92-4126  | Spring - Shoe, Upper LH      | 21 14 1                  | 92-5113  | Bolt - Flange Head          | 51 1 3                   |
| 92-4127  | Spring - Shoe, Upper RH      | 21 * 1                   | 92-5114  | Piston & Pin                | 52 * 3                   |
| 92-4128  | Spring - Shoe, Lower         | 21 15 1                  | 92-5116  | Piston & Pin                | 52 * 3                   |
| 92-4129  | Spring - Adjuster, LH        | 21 20 1                  | 92-5117  | Piston & Pin                | 52 * 3                   |
| 92-4130  | Spring - Adjuster, RH        | 21 * 1                   | 92-5118  | Piston Ring Set             | 52 * 1                   |
| 92-4131  | Washer - Hold Down           | 21 22 2                  | 92-5120  | Piston Ring Set             | 52 * 1                   |
| 92-4131  | Washer - Hold Down           | 25 22 2                  | 92-5121  | Piston Ring Set             | 52 * 1                   |
| 92-4132  | Spring - Hold Down           | 21 23 2                  | 92-5122  | Nut - Timing Belt           | 54 4 1                   |
| 92-4133  | Pin - Hold Down              | 21 26 2                  | 92-5123  | Bolt - Engine Mount         | 55 3 3                   |
| 92-4133  | Pin - Hold Down              | 25 26 2                  | 92-5124  | Body - Choke, Auto          | 59 15 1                  |
| 92-4134  | Plug - Inspection            | 21 25 1                  | 92-5125  | Kit - Check Valve           | 60 13 1                  |
| 92-4134  | Plug - Inspection            | 25 25 1                  | 92-5126  | Cover - Carburetor Top      | 59 5 1                   |
| 92-4135  | Set Bolt                     | 21 1 2                   | 92-5127  | Kit - Float & Pin           | 60 12 1                  |
| 92-4135  | Set Bolt                     | 25 1 2                   | 92-5128  | Insulator - Carburetor      | 59 13 1                  |
| 92-4137  | Screw - Bleed                | 25 4 1                   | 92-5129  | Jet - Pilot                 | 60 8 1                   |
| 92-4138  | Backplate Assembly LH        | 25 2 1                   | 92-5130  | Jet - Main                  | 60 10 1                  |
| 92-4139  | Backplate Assembly RH        | 25 * 1                   | 92-5131  | Jet - Power                 | 60 11 1                  |
| 92-4140  | Assy. - Wheel Cylinder LH    | 25 * 1                   | 92-5132  | Kit - Holder, Main Jet      | 60 6 1                   |
| 92-4141  | Assy. - Wheel Cylinder RH    | 25 * 1                   | 92-5133  | Kit - Lever, Throttle       | 60 2 1                   |
| 92-4142  | Seal Kit                     | 25 * 1                   | 92-5134  | Orifice - Choke             | 59 8 1                   |
| 92-4143  | Shoe & Lining Set            | 25 13 1                  | 92-5135  | Kit - Screw Adjusting, Idle | 60 5 1                   |
| 92-4144  | Assembly - Adjuster LH       | 25 * 1                   | 92-5136  | Kit - Adjusting Screw       | 59 1 1                   |
| 92-4145  | Assembly - Adjuster RH       | 25 * 1                   | 92-5137  | Spring                      | 59 4 1                   |
| 92-4146  | Plug                         | 25 3 1                   | 92-5140  | Kit - Needle Valve          | 60 21 1                  |
| 92-4147  | Spring - Shoe, Upper LH      | 25 14 1                  | 92-5141  | Valve - Fuel Cut-Off        | 60 22 1                  |
| 92-4148  | Spring - Shoe, Upper RH      | 25 * 1                   | 92-5142  | Valve - Carburetor Piston   | 59 3 1                   |
| 92-4149  | Spring - Shoe, Lower         | 25 15 1                  | 92-5143  | Gasket - Choke, Auto        | 59 17 1                  |
| 92-4150  | Spring - Adjuster, LH        | 25 20 1                  | 92-5144  | Cover - Float Chamber       | 60 14 1                  |
| 92-4151  | Spring - Adjuster, RH        | 25 * 1                   | 92-5145  | Screw                       | 59 7 6                   |
| 92-4152  | Spring - Hold Down           | 25 23 2                  | 92-5146  | Screw                       | 60 18 4                  |
| 92-4153  | Assembly - Steering Column   | 5 11 1                   | 92-5147  | Screw                       | 60 15 4                  |
| 92-4154  | Universal Joint Assembly     | 5 31 1                   | 92-5148  | Screw                       | 60 1 1                   |
| 92-4155  | Slip Joint Assembly - Upper  | 5 28 1                   | 92-5149  | Screw                       | 59 16 1                  |
| 92-4156  | Slip Joint Assembly - Lower  | 5 29 1                   | 92-5150  | O-Ring                      | 60 9 1                   |
| 92-4157  | Boot - Steering Shaft        | 5 24 1                   | 92-5151  | O-Ring                      | 60 16 1                  |
| 92-4158  | Valve Assy. - Hyd. Gear      | 7 * 1                    | 92-5152  | O-Ring                      | 60 7 1                   |
| 92-4159  | Nut - Adjuster Plug Lock     | 6 25 1                   | 92-5153  | O-Ring                      | 60 17 1                  |
| 92-4160  | Bearing Service Kit - Upper  | 7 * 1                    | 92-5154  | Nut - Carburetor, INR       | 60 4 1                   |
| 92-4161  | Assembly - Cover Service     | 6 * 1                    | 92-5155  | Clamp - Carburetor          | 59 9 1                   |
| 92-4162  | Pitman Shaft - Gear Service  | 7 * 1                    | 92-5156  | Clamp - Carburetor INR      | 59 6 1                   |
| 92-4163  | Assy. - Steering Housing     | 7 * 1                    | 92-5157  | Bolt                        | 59 10 2                  |
| 92-4164  | Plug Assy. - Service Adjust. | 7 * 1                    | 92-5160  | Valve - Thermostat          | 57 9 1                   |
| 92-4165  | Plug - Housing End           | 6 2 1                    | 92-5161  | Gasket                      | 57 10 1                  |
| 92-4166  | Rack/Piston/Nut Assembly     | 7 * 1                    | 92-5162  | Plug - Inlet                | 58 24 2                  |
| 92-4167  | Assembly - Plug Service      | 7 * 1                    | 92-5163  | Gasket - EGR Valve          | 58 15 1                  |
| 92-4168  | Return - Guide Ball          | 6 7 2                    | 92-5164  | Assembly - Hose             | 58 11 1                  |
| 92-4169  | Bearing - Needle             | 6 21 1                   | 92-5165  | Clip                        | 58 12 1                  |
| 92-4170  | Bearing - Pitman Shaft       | 6 47 1                   | 92-5166  | Bolt                        | 58 13 2                  |
| 92-4177  | Yoke - Double Clamp          | 23 34 2                  | 92-5167  | Bracket - Front             | 62 1 1                   |
| 92-4179  | Yoke, Shaft & Seal           | 23 33 2                  | 92-5168  | Bracket - Rear              | 62 12 1                  |
| 92-4180  | Seal                         | 23 32 2                  | 92-5169  | Pulley                      | 63 1 1                   |
| 92-4182  | Yoke & Hub Assembly          | 23 31 2                  | 92-5170  | Cover                       | 61 4 1                   |
| 92-4183  | Yoke - End                   | 23 29 2                  | 92-5171  | Gasket - Cover              | 61 5 1                   |
| 92-4187  | Cross & Bearing Kit          | 23 30 4                  | 92-5172  | Clamp                       | 61 23 1                  |
| 92-4188  | Ring - Snap                  | 23 28 16                 | 92-5951  | Angle - Hitch               | 23 40 1                  |
| 92-5100  | Gasket - Liquid              | 64 1 1                   | 92-5972  | Grommet                     | 14 5 4                   |
| 92-5101  | Seat - Exhaust Valve         | 50 * 3                   | 218-446  | Nut - Hex.                  | 2 11 1                   |
| 92-5102  | Seat - Intake Valve          | 50 * 3                   | 218-447  | Washer - Lock               | 2 12 1                   |
| 92-5103  | Guide - Intake Valve         | 50 * 3                   | 218-574  | Fuse - 7.5 Amp              | 2 46 2                   |

\*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

| Part No. | Description             | Pg. No. | Ref. No. | Qty. | Part No. | Description             | Pg. No. | Ref. No. | Qty. |
|----------|-------------------------|---------|----------|------|----------|-------------------------|---------|----------|------|
| 218-578  | Fuse - 10 Amp           | 3       | 61       | 1    | 283-2    | Pin - Clevis            | 8       | 29       | 1    |
| 218-600  | Bulb                    | 2       | 13       | 2    | 283-14   | Pin - Clevis            | 16      | 23       | 1    |
| 219-17   | Bulb - Warning Light    | 3       | 59       | 4    | 283-30   | Pin - Clevis            | 12      | 35       | 1    |
| 232-27   | Stem - Valve            | 20      | 31       | 2    | 283-30   | Pin - Clevis            | 8       | 42       | 1    |
| 232-27   | Valve - Stem            | 23      | 17       | 2    | 283-62   | Pin - Clevis            | 16      | 6        | 1    |
| 233-37   | Knob                    | 15      | 1        | 1    | 283-62   | Pin - Clevis            | 15      | 8        | 3    |
| 233-39   | Knob                    | 44      | 1        | 1    | 283-62   | Pin - Clevis            | 33      | 35       | 3    |
| 233-39   | Knob                    | 5       | 1        | 1    | 283-85   | Pin - Clevis            | 8       | 39       | 1    |
| 233-48   | Knob                    | 16      | 4        | 1    | 285-17   | Plug - Pipe             | 32      | 15       | 2    |
| 237-21   | Seal - O-Ring           | 45      | 2        | 6    | 302-5    | Fitting - Grease        | 19      | 14       | 4    |
| 237-22   | Seal - O-Ring           | 45      | 5        | 3    | 302-5    | Fitting - Grease        | 20      | 20       | 4    |
| 237-22   | Seal - O-Ring           | 44      | 9        | 4    | 302-5    | Fitting - Grease        | 5       | 30       | 1    |
| 237-30   | Seal - O-Ring           | 33      | 34       | 2    | 302-5    | Fitting - Grease        | 23      | 35       | 4    |
| 237-42   | O-Ring                  | 47      | 2        | 2    | 302-11   | Fitting - Grease        | 18      | 8        | 1    |
| 237-42   | Seal - O-Ring           | 45      | 7        | 2    | 302-58   | Fitting - Grease        | 24      | 44       | 16   |
| 237-42   | Seal - O-Ring           | 44      | 11       | 2    | 321-2    | Screw - Cap Hex. Hd.    | 2       | 1        | 7    |
| 237-42   | Seal - O-Ring           | 33      | 47       | 1    | 321-3    | Screw - Cap Hex. Hd.    | 2       | 4        | 2    |
| 237-78   | Seal - O-Ring           | 45      | 15       | 4    | 321-3    | Screw - Cap Hex. Hd.    | 31      | 7        | 1    |
| 237-79   | Seal - O-Ring           | 45      | 25       | 1    | 321-3    | Screw - Cap Hex. Hd.    | 26      | 28       | 4    |
| 237-79   | Seal - O-Ring           | 33      | 39       | 2    | 321-3    | Screw - Cap Hex. Hd.    | 5       | 33       | 2    |
| 237-80   | Seal - O-Ring           | 45      | 24       | 1    | 321-4    | Screw - Cap Hex. Hd.    | 29      | 1        | 2    |
| 237-81   | Seal - O-Ring           | 33      | 28       | 1    | 321-4    | Screw - Cap Hex. Hd.    | 40      | 8        | 1    |
| 237-123  | Seal - O-Ring           | 33      | 25       | 1    | 321-4    | Screw - Cap Hex. Hd.    | 13      | 9        | 8    |
| 240-5    | Grommet                 | 12      | 32       | 1    | 321-4    | Screw - Cap Hex. Hd.    | 26      | 12       | 4    |
| 240-6    | Grommet                 | 8       | 22       | 1    | 321-4    | Screw - Cap Hex. Hd.    | 30      | 15       | 1    |
| 241-119  | Cap Dust                | 20      | 1        | 2    | 321-4    | Screw - Cap Hex. Hd.    | 10      | 17       | 2    |
| 2410-35  | Plug - Hole             | 2       | 6        | 1    | 321-4    | Screw - Cap Hex. Hd.    | 14      | 20       | 8    |
| 2410-42  | Cap - Front Bumper      | 1       | 12       | 2    | 321-4    | Screw - Cap Hex. Hd.    | 12      | 26       | 1    |
| 2410-64  | Plug - Hole             | 3       | 62       | 1    | 321-4    | Screw - Cap Hex. Hd.    | 8       | 27       | 1    |
| 2411-33  | Joint - Ball            | 12      | 3        | 1    | 321-4    | Screw - Cap Hex. Hd.    | 2       | 33       | 1    |
| 2412-10  | Clamp - R               | 19      | 7        | 2    | 321-4    | Screw - Cap Hex. Hd.    | 31      | 30       | 2    |
| 2412-10  | Clamp - R               | 30      | 43       | 1    | 321-6    | Screw - Cap Hex. Hd.    | 48      | 3        | 16   |
| 2412-34  | Clamp                   | 45      | 22       | 1    | 321-6    | Screw - Cap Hex. Hd.    | 19      | 5        | 2    |
| 2412-34  | Clamp - Hose            | 26      | 9        | 2    | 321-9    | Screw - Cap Hex. Hd.    | 44      | 5        | 2    |
| 2412-34  | Clamp - Hose            | 30      | 30       | 2    | 321-9    | Screw - Cap Hex. Hd.    | 10      | 16       | 4    |
| 2412-34  | Clamp - Hose            | 34      | 53       | 1    | 321-9    | Screw - Cap Hex. Hd.    | 16      | 27       | 1    |
| 2412-36  | Clamp                   | 41      | 8        | 2    | 321-14   | Screw - Cap Hex. Hd.    | 45      | 8        | 2    |
| 2412-36  | Clamp - Hose            | 33      | 3        | 3    | 321-15   | Screw - Cap Hex. Hd.    | 44      | 13       | 1    |
| 2412-82  | Clamp - R               | 29      | 10       | 1    | 322-2    | Screw - Cap Hex. Hd.    | 8       | 2        | 12   |
| 2412-89  | Clamp - R               | 29      | 2        | 2    | 322-2    | Screw - Cap Hex. Hd.    | 10      | 8        | 1    |
| 2412-89  | Clamp - R               | 48      | 2        | 1    | 322-2    | Screw - Cap Hex. Hd.    | 42      | 16       | 4    |
| 2412-89  | Clamp - R               | 40      | 5        | 1    | 322-2    | Screw - Cap Hex. Hd.    | 5       | 16       | 6    |
| 2412-89  | Clamp - R               | 12      | 25       | 1    | 322-2    | Screw - Cap Hex. Hd.    | 26      | 39       | 4    |
| 2412-89  | Clamp - R               | 8       | 26       | 1    | 322-2    | Screw - Cap Hex. Hd.    | 30      | 42       | 1    |
| 2412-89  | Clamp - R               | 2       | 32       | 1    | 322-2    | Screw - Cap Hex. Hd.    | 2       | 50       | 3    |
| 2412-92  | Clamp - Hose            | 30      | 2        | 1    | 322-3    | Screw - Cap Hex. Hd.    | 45      | 20       | 4    |
| 2412-92  | Clamp - Hose            | 42      | 14       | 2    | 322-5    | Screw - Cap Hex. Hd.    | 28      | 2        | 4    |
| 2412-96  | Clamp - R               | 42      | 4        | 1    | 322-5    | Screw - Cap Hex. Hd.    | 13      | 6        | 8    |
| 2412-105 | Clamp - R               | 5       | 17       | 2    | 322-5    | Screw - Cap Hex. Hd.    | 19      | 10       | 2    |
| 2412-108 | Clamp - Hose            | 42      | 8        | 2    | 322-5    | Screw - Cap Hex. Hd.    | 8       | 13       | 1    |
| 2412-108 | Clamp - Hose            | 41      | 10       | 1    | 322-5    | Screw - Cap Hex. Hd.    | 26      | 22       | 4    |
| 2412-108 | Clamp - Hose            | 30      | 47       | 2    | 322-5    | Screw - Cap Hex. Hd.    | 44      | 24       | 1    |
| 2412-119 | Clamp - Hose            | 30      | 6        | 3    | 322-6    | Screw - Cap Hex. Hd.    | 30      | 4        | 2    |
| 2412-130 | Clamp - Hose            | 30      | 32       | 2    | 322-7    | Screw - Cap Hex. Hd.    | 28      | 9        | 4    |
| 2412-133 | Clamp - R               | 14      | 3        | 2    | 322-12   | Screw - Cap Hex. Hd.    | 15      | 25       | 1    |
| 2412-143 | Clamp - Hose            | 8       | 15       | 2    | 323-4    | Screw - Cap Hex. Hd.    | 41      | 16       | 2    |
| 2412-144 | Clamp - Hose            | 8       | 34       | 2    | 323-4    | Screw - Cap Hex. Hd.    | 1       | 22       | 1    |
| 2412-149 | Clamp - Tube            | 22      | 24       | 5    | 323-6    | Screw - Cap Hex. Hd.    | 16      | 1        | 1    |
| 2412-149 | R-Clamp                 | 10      | 18       | 2    | 323-6    | Screw - Cap Hex. Hd.    | 42      | 2        | 1    |
| 251-8    | Bearing - Ball          | 37      | 1        | 2    | 323-6    | Screw - Cap Hex. Hd.    | 23      | 11       | 8    |
| 251-82   | Bearing - Ball          | 28      | 11       | 2    | 323-6    | Screw - Cap Hex. Hd.    | 14      | 12       | 2    |
| 251-346  | Bearing - Ball          | 37      | 8        | 1    | 323-6    | Screw - Cap Hex. Hd.    | 22      | 31       | 2    |
| 253-987  | Fitting - Hydraulic 90° | 33      | 29       | 1    | 323-6    | Screw - Cap Hex. Hd.    | 15      | 37       | 1    |
| 254-72   | Cup - Bearing           | 20      | 29       | 2    | 323-7    | Screw - Cap Hex. Hd.    | 33      | 14       | 4    |
| 254-94   | Cone - Bearing          | 20      | 30       | 2    | 323-7    | Screw - Cap Hex. Hd.    | 31      | 27       | 3    |
| 254-106  | Cone - Bearing          | 20      | 27       | 2    | 323-7    | Screw - Cap Hex. Hd.    | 8       | 31       | 2    |
| 254-107  | Cup - Bearing           | 20      | 28       | 2    | 323-7    | Screw - Cap Hex. Hd.    | 23      | 42       | 4    |
| 256-257  | Bushing - Flange        | 8       | 1        | 2    | 323-8    | Screw - Hex. Flange Hd. | 20      | 11       | 8    |
| 256-257  | Bushing - Flange        | 12      | 38       | 2    | 323-9    | Screw - Cap Hex. Hd.    | 40      | 16       | 1    |

\*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

| Part No. | Description             | Pg. No. | Ref. No. | Qty. | Part No. | Description               | Pg. No. | Ref. No. | Qty. |
|----------|-------------------------|---------|----------|------|----------|---------------------------|---------|----------|------|
| 323-10   | Screw - Cap Hex. Hd.    | 33      | 8        | 1    | 3253-21  | Washer - Lock             | 23      | 10       | 8    |
| 323-12   | Screw - Cap Hex. Hd.    | 18      | 6        | 8    | 3253-21  | Washer - Lock             | 14      | 13       | 2    |
| 323-29   | Screw - Cap Hex. Hd.    | 30      | 55       | 2    | 3253-21  | Washer - Lock             | 20      | 33       | 4    |
| 324-8    | Screw - Cap Hex. Hd.    | 5       | 19       | 3    | 3253-22  | Washer - Lock             | 12      | 9        | 4    |
| 324-9    | Screw - Cap Hex. Hd.    | 18      | 22       | 4    | 3253-22  | Washer - Lock             | 31      | 17       | 1    |
| 324-10   | Screw - Cap Hex. Hd.    | 18      | 1        | 4    | 3253-22  | Washer - Lock             | 5       | 37       | 3    |
| 324-13   | Screw - Cap Hex. Hd.    | 18      | 10       | 2    | 3254-1   | Washer - Lock             | 2       | 36       | 1    |
| 324-19   | Screw - Cap Hex. Hd.    | 29      | 6        | 2    | 3254-2   | Washer - Lock             | 30      | 11       | 1    |
| 325-4    | Screw - Cap Hex. Hd.    | 14      | 15       | 2    | 3255-9   | Washer - Lock ETLW        | 40      | 2        | 1    |
| 325-13   | Screw - Cap Hex. Hd.    | 19      | 11       | 8    | 3256-3   | Washer - Flat             | 28      | 8        | 4    |
| 325-13   | Screw - Cap Hex. Hd.    | 18      | 27       | 4    | 3256-4   | Washer - Flat             | 33      | 12       | 1    |
| 325-19   | Screw - Cap Hex. Hd.    | 23      | 27       | 1    | 3256-6   | Washer - Flat             | 22      | 9        | 4    |
| 325-20   | Screw - Cap Hex. Hd.    | 23      | 24       | 5    | 3256-6   | Washer - Flat             | 18      | 32       | 2    |
| 3210-9   | Screw - Cap Hex. Hd.    | 31      | 6        | 1    | 3256-14  | Washer - Flat             | 44      | 30       | 1    |
| 3211-8   | Screw - Cap Hex. Hd.    | 15      | 13       | 2    | 3256-22  | Washer - Flat             | 10      | 4        | 4    |
| 3215-1   | Screw - Cap Hex. Hd.    | 33      | 16       | 1    | 3256-22  | Washer - Flat             | 2       | 5        | 2    |
| 3217-25  | Nut - Hex.              | 2       | 38       | 2    | 3256-22  | Washer - Flat             | 13      | 8        | 8    |
| 3217-26  | Nut - Hex.              | 2       | 37       | 1    | 3256-22  | Washer - Flat             | 26      | 11       | 4    |
| 3217-29  | Nut - Jam               | 3       | 58       | 3    | 3256-22  | Washer - Flat             | 48      | 11       | 23   |
| 3218-18  | Nut - Jam               | 15      | 43       | 1    | 3256-22  | Washer - Flat             | 44      | 18       | 3    |
| 3218-20  | Nut - Jam               | 12      | 14       | 2    | 3256-22  | Washer - Flat             | 14      | 19       | 8    |
| 3218-21  | Nut - Jam               | 20      | 18       | 2    | 3256-22  | Washer - Flat             | 12      | 41       | 2    |
| 3219-2   | Nut                     | 32      | 19       | 2    | 3256-23  | Washer - Flat             | 13      | 4        | 8    |
| 3219-14  | Nut                     | 15      | 5        | 1    | 3256-23  | Washer - Flat             | 30      | 5        | 2    |
| 3219-14  | Nut - Hex.              | 33      | 32       | 1    | 3256-23  | Washer - Flat             | 16      | 21       | 1    |
| 3219-14  | Nut - Jam               | 31      | 10       | 2    | 3256-23  | Washer - Flat             | 44      | 26       | 2    |
| 3220-1   | Nut - Jam               | 31      | 2        | 1    | 3256-24  | Washer - Flat             | 40      | 17       | 2    |
| 3220-1   | Nut - Jam               | 33      | 37       | 4    | 3256-24  | Washer - Flat             | 48      | 18       | 6    |
| 3220-1   | Nut - Jam               | 15      | 41       | 4    | 3256-25  | Washer - Flat             | 29      | 5        | 2    |
| 3220-2   | Nut - Jam               | 12      | 2        | 1    | 3256-27  | Washer - Flat             | 22      | 6        | 4    |
| 3220-2   | Nut - Jam               | 31      | 5        | 1    | 3256-27  | Washer - Flat             | 18      | 31       | 2    |
| 3220-3   | Nut - Jam               | 15      | 12       | 2    | 3256-28  | Washer - Flat             | 20      | 3        | 2    |
| 3220-11  | Nut - Jam               | 20      | 23       | 2    | 3256-28  | Washer - Flat             | 28      | 15       | 1    |
| 3229-25  | Screw - Carriage        | 45      | 19       | 2    | 3256-45  | Washer - Flat             | 26      | 24       | 1    |
| 3230-18  | Bolt - Carriage         | 14      | 2        | 2    | 3256-61  | Washer - Flat             | 13      | 25       | 14   |
| 3230-23  | Bolt - Carriage         | 40      | 6        | 4    | 3256-67  | Washer - Flat             | 42      | 11       | 2    |
| 3230-23  | Bolt - Carriage         | 26      | 21       | 4    | 3257-7   | Key - Woodruff            | 28      | 17       | 1    |
| 3231-3   | Bolt - Carriage         | 18      | 21       | 4    | 3258-19  | Screw - Round Head        | 43      | 2        | 2    |
| 3231-21  | Bolt - Carriage         | 40      | 7        | 6    | 3272-6   | Pin - Cotter              | 15      | 3        | 3    |
| 3231-21  | Bolt - Carriage         | 44      | 21       | 1    | 3272-6   | Pin - Cotter              | 33      | 30       | 3    |
| 3231-21  | Bolt - Carriage         | 14      | 22       | 4    | 3272-6   | Pin - Cotter              | 8       | 37       | 1    |
| 3231-21  | Bolt - Carriage         | 15      | 32       | 4    | 3272-10  | Pin - Cotter              | 16      | 8        | 1    |
| 3231-26  | Bolt - Carriage         | 31      | 15       | 1    | 3272-10  | Pin - Cotter              | 12      | 37       | 1    |
| 3231-28  | Bolt - Carriage         | 26      | 17       | 1    | 3272-10  | Pin - Cotter              | 8       | 43       | 1    |
| 3232-17  | Bolt - Carriage         | 22      | 19       | 8    | 3272-12  | Pin - Cotter              | 19      | 17       | 4    |
| 3234-1   | Screw - Hex. Flange Hd. | 1       | 13       | 6    | 3272-12  | Pin - Cotter              | 20      | 21       | 4    |
| 3234-4   | Screw - Hex. Flange Hd. | 22      | 26       | 4    | 3272-12  | Pin - Cotter              | 20      | 32       | 2    |
| 3234-4   | Screw - Hex. Flange Hd. | 33      | 42       | 4    | 3272-37  | Pin - Cotter              | 45      | 18       | 2    |
| 3234-11  | Screw - Cap Hex. Hd.    | 29      | 14       | 2    | 3274-31  | Screw - Button Hd.        | 2       | 7        | 4    |
| 3234-38  | Screw - Cap Hex. Hd.    | 41      | 22       | 2    | 3274-52  | Screw - Hex. Socket Hd.   | 32      | 39       | 4    |
| 3234-38  | Screw - Hex. Flange Hd. | 22      | 17       | 22   | 3274-54  | Screw - Hex. Socket Hd.   | 41      | 19       | 2    |
| 3234-40  | Screw - Hex. Flange Hd. | 17      | 4        | 4    | 3274-94  | Screw - Socket Button Hd. | 48      | 16       | 6    |
| 3250-13  | Screw                   | 2       | 51       | 2    | 3277-1   | Nut - Hex.                | 5       | 5        | 1    |
| 3250-13  | Screw - Hex. Hd.        | 13      | 15       | 20   | 3290-221 | Washer - Spring           | 15      | 34       | 1    |
| 3250-20  | Screw - Round Hd.       | 26      | 2        | 4    | 3290-221 | Washer - Spring           | 16      | 36       | 2    |
| 3253-3   | Washer - Lock           | 31      | 8        | 1    | 3290-271 | Rivet - Pop               | 26      | 41       | 2    |
| 3253-3   | Washer - Lock           | 51      | 22       | 2    | 3290-321 | Screw - Hex. Flange Hd.   | 8       | 10       | 2    |
| 3253-3   | Washer - Lock           | 26      | 27       | 4    | 3290-357 | Nut - Flange              | 42      | 13       | 1    |
| 3253-3   | Washer - Lock           | 12      | 28       | 4    | 3290-357 | Nut - Flange              | 31      | 18       | 1    |
| 3253-3   | Washer - Lock           | 30      | 37       | 1    | 3290-357 | Nut - Flange              | 41      | 23       | 2    |
| 3253-4   | Washer - Lock           | 53      | 4        | 6    | 3290-357 | Nut - Flange Head         | 22      | 30       | 2    |
| 3253-4   | Washer - Lock           | 13      | 5        | 8    | 3290-357 | Nut - Flange Lock         | 40      | 1        | 6    |
| 3253-4   | Washer - Lock           | 31      | 13       | 2    | 3290-357 | Nut - Flange Lock         | 1       | 8        | 8    |
| 3253-4   | Washer - Lock           | 5       | 14       | 4    | 3290-357 | Nut - Flange Lock         | 14      | 10       | 4    |
| 3253-6   | Washer - Lock           | 30      | 21       | 2    | 3290-357 | Nut - Flange Lock         | 26      | 14       | 1    |
| 3253-15  | Washer - Lock           | 41      | 5        | 5    | 3290-357 | Nut - Flange Lock         | 18      | 16       | 4    |
| 3253-15  | Washer - Lock           | 2       | 39       | 2    | 3290-357 | Nut - Flange Lock         | 15      | 33       | 4    |
| 3253-18  | Washer - Lock           | 32      | 40       | 4    | 3290-357 | Nut - Flange Lock         | 8       | 33       | 2    |
| 3253-19  | Washer - Lock           | 3       | 57       | 3    | 3290-357 | Nut - Flange Lock         | 30      | 50       | 2    |

\*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

| Part No. | Description             | Pg. Ref.<br>No. No. | Qty.  | Part No.  | Description                  | Pg. Ref.<br>No. No. | Qty.  |
|----------|-------------------------|---------------------|-------|-----------|------------------------------|---------------------|-------|
| 3290-413 | Washer - Belleville     | 29                  | 12 4  | 32128-20  | Nut - Flange                 | 10                  | 14 1  |
| 3290-455 | Washer                  | 5                   | 12 1  | 32128-20  | Nut - Flange                 | 5                   | 27 6  |
| 3290-456 | Washer - Belleville     | 15                  | 46 2  | 32128-20  | Nut - Flange                 | 2                   | 48 3  |
| 3290-477 | Washer - Curved         | 16                  | 28 1  | 32128-20  | Nut - Flange Head            | 45                  | 11 4  |
| 3290-478 | Washer - Belleville     | 16                  | 17 1  | 32128-20  | Nut - Flange Lock            | 19                  | 6 2   |
| 3290-506 | Palnut                  | 48                  | 4 2   | 32128-20  | Nut - Flange Lock            | 8                   | 7 13  |
| 3290-507 | Pin - Dowel             | 15                  | 31 1  | 32128-20  | Nut - Flange Lock            | 40                  | 18 2  |
| 3296-2   | Nut - Lock              | 8                   | 8 2   | 32128-20  | Nut - Flange Lock            | 14                  | 21 8  |
| 3296-2   | Nut - Lock              | 13                  | 22 20 | 32128-20  | Nut - Flange Lock            | 30                  | 44 1  |
| 3296-2   | Nut - Lock              | 2                   | 45 2  | 32128-20  | Nut - Lock                   | 26                  | 37 4  |
| 3296-3   | Nut - Lock              | 31                  | 28 1  | 32128-21  | Nut - Lock                   | 33                  | 11 1  |
| 3296-3   | Nut - Lock              | 26                  | 36 1  | 32128-23  | Nut - Flange                 | 41                  | 24 2  |
| 3296-4   | Nut - Lock              | 12                  | 4 1   | 32128-23  | Nut - Flange Lock            | 17                  | 5 4   |
| 3296-5   | Nut - Flange Lock       | 26                  | 25 1  | 32128-23  | Nut - Flange Lock            | 22                  | 21 22 |
| 3296-5   | Nut - Lock              | 32                  | 12 1  | 32128-25  | Nut - Lock                   | 15                  | 11 2  |
| 3296-15  | Nut - Lock              | 28                  | 16 1  | 32128-33  | Nut - Flange                 | 31                  | 3 2   |
| 3296-23  | Nut - Flange Lock       | 19                  | 12 8  | 32128-33  | Nut - Flange                 | 30                  | 13 1  |
| 3296-23  | Nut - Lock              | 22                  | 10 4  | 32128-33  | Nut - Flange                 | 29                  | 18 2  |
| 3296-23  | Nut - Lock              | 18                  | 14 4  | 32128-33  | Nut - Flange                 | 2                   | 44 12 |
| 3296-23  | Nut - Lock              | 14                  | 16 2  | 32128-33  | Nut - Flange Head            | 45                  | 12 2  |
| 3296-27  | Nut - Lock              | 31                  | 21 2  | 32128-33  | Nut - Flange Head            | 10                  | 19 2  |
| 3296-27  | Rivet - Plastic         | 40                  | 13 4  | 32128-33  | Nut - Flange Lock            | 33                  | 1 1   |
| 3296-29  | Nut - Flange Lock       | 26                  | 20 8  | 32128-33  | Nut - Flange Lock            | 40                  | 4 1   |
| 3296-29  | Nut - Lock              | 28                  | 6 6   | 32128-33  | Nut - Flange Lock            | 44                  | 6 1   |
| 3296-29  | Nut - Lock              | 8                   | 6 1   | 32128-33  | Nut - Flange Lock            | 12                  | 24 1  |
| 3296-29  | Nut - Lock              | 12                  | 13 1  | 32128-33  | Nut - Flange Lock            | 8                   | 25 1  |
| 3296-29  | Nut - Lock              | 44                  | 27 1  | 32128-33  | Nut - Flange Lock            | 22                  | 27 4  |
| 3296-29  | Nut - Lock              | 30                  | 36 2  | 32128-36  | Nut - Lock                   | 23                  | 37 4  |
| 3296-39  | Nut - Flange Lock       | 33                  | 20 4  | 32128-44  | Nut - Flange Lock            | 14                  | 9 2   |
| 3296-39  | Nut - Flange Lock       | 40                  | 20 1  | 32128-53  | Nut - Flange Lock            | 23                  | 26 2  |
| 3296-39  | Nut - Lock              | 48                  | 1 6   | 32136-2   | Nut - Slotted                | 19                  | 2 2   |
| 3296-39  | Nut - Lock              | 29                  | 11 2  | 32136-3   | Nut - Slotted                | 20                  | 22 4  |
| 3296-39  | Nut - Lock              | 22                  | 13 6  | 32136-5   | Nut Slotted                  | 20                  | 2 2   |
| 3296-39  | Nut - Lock              | 20                  | 16 8  | 32144-4   | Screw - Hex. Washer Hd.      | 15                  | 9 2   |
| 3296-39  | Nut - Lock              | 31                  | 20 3  | 32144-10  | Screw - Self Tapping         | 5                   | 18 2  |
| 3296-39  | Nut - Lock              | 44                  | 23 1  | 32144-18  | Screw - Cap Hex. Hd.         | 2                   | 22 2  |
| 3296-39  | Nut - Lock              | 18                  | 28 8  | 32144-42  | Screw - Spark Arrestor       | 30                  | 52 1  |
| 3296-39  | Nut - Lock              | 16                  | 33 1  | 32144-52  | Screw - Hex. Hd.             | 13                  | 12 6  |
| 3296-39  | Nut - Lock              | 23                  | 41 4  | 32144-93  | Screw - Self Tapping         | 48                  | 6 2   |
| 3296-39  | Nut - Lock              | 15                  | 45 1  | 32144-116 | Screw - Pan Head             | 5                   | 8 8   |
| 3296-42  | Nut - Lock              | 10                  | 3 4   | 32148-6   | Insert - Threaded            | 2                   | 2 2   |
| 3296-42  | Nut - Lock              | 16                  | 12 1  | 32148-7   | Nut - Clinch                 | 1                   | 18 8  |
| 3296-42  | Nut - Lock              | 19                  | 13 2  | 32148-7   | Nut - Clinch                 | 15                  | 19 2  |
| 3296-42  | Nut - Lock              | 48                  | 13 16 | 32148-10  | Insert - Threaded            | 22                  | 1 6   |
| 3296-42  | Nut - Lock              | 41                  | 17 2  | 32148-15  | Insert - Threaded            | 15                  | 4 1   |
| 3296-42  | Nut - Lock              | 44                  | 19 2  | 32148-15  | Nut - Clinch                 | 33                  | 31 1  |
| 3296-42  | Nut - Lock              | 5                   | 32 2  | 32151-41  | Ring - Retaining             | 27                  | 1 1   |
| 3296-42  | Nut - Lock              | 26                  | 38 4  | 32151-56  | Ring - Push-On               | 8                   | 23 1  |
| 3296-48  | Nut - Lock              | 18                  | 11 10 | 32151-104 | Ring - Snap                  | 19                  | 15 4  |
| 3296-48  | Nut - Lock              | 29                  | 16 2  | 32152-10  | Nut                          | 46                  | 12 1  |
| 3296-59  | Nut - Lock              | 5                   | 13 1  | 340-2     | Fitting - Straight           | 45                  | 10 1  |
| 3296-76  | Nut - Lock              | 22                  | 33 8  | 340-3     | Fitting - Hydraulic Straight | 45                  | 26 1  |
| 32104-82 | Screw - Hex. Flange Hd. | 22                  | 25 2  | 340-77    | Fitting - Hydraulic 90°      | 45                  | 6 1   |
| 32104-88 | Screw                   | 1                   | 4 6   | 340-86    | Fitting - Hydraulic Tee      | 44                  | 15 1  |
| 32107-11 | Nut - Square            | 43                  | 4 2   | 340-92    | Fitting - Hydraulic Straight | 45                  | 29 1  |
| 32113-14 | Screw                   | 32                  | 8 2   | 340-94    | Fitting - Hydraulic Tee      | 44                  | 10 1  |
| 32120-47 | Ring - E                | 12                  | 33 2  | 340-132   | Fitting - Hydraulic 90°      | 45                  | 14 4  |
| 32120-47 | Ring - E                | 8                   | 41 1  | 340-140   | Fitting - Hydraulic Tee      | 45                  | 28 1  |
| 32120-47 | Ring - Retaining        | 16                  | 10 3  | 340-151   | Fitting - Hydraulic Tee      | 45                  | 30 1  |
| 32121-7  | Pin - Roll              | 12                  | 19 1  | 353-781   | Fitting - Fuel 90°           | 41                  | 14 1  |
| 32121-24 | Pin - Roll              | 12                  | 21 2  | 354-134   | Fitting - Hydraulic 90°      | 33                  | 40 2  |
| 32121-48 | Pin - Roll              | 15                  | 23 1  | 354-135   | Fitting - Hydraulic 90°      | 33                  | 5 1   |
| 32122-24 | Screw - Round Hd        | 41                  | 6 5   | 354-136   | Fitting - Hydraulic Straight | 45                  | 23 1  |
| 32128-20 | Nut - Flange            | 42                  | 18 4  |           |                              |                     |       |

\*Not Illustrated

## PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

## IDENTIFICATION AND ORDERING

### MODEL AND SERIAL NUMBERS

The Workman 3200 has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame. In any correspondence concerning the Workman 3200, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the Workman 3200.
2. Part number, description, and the quantity of part(s) desired.

**NOTE:** Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

## TABLE OF CONTENTS

| Description                                        | Page  | Description                                            | Page  |
|----------------------------------------------------|-------|--------------------------------------------------------|-------|
| Front Bumper & Hood Assembly .....                 | 1     | Transaxle Gear Shafts Assembly .....                   | 37    |
| Control Panel Assembly .....                       | 2-3   | Shift Fork Assembly .....                              | 38    |
| Electrical Schematic .....                         | 4     | Differential Gear Assembly .....                       | 39    |
| Steering Linkage Assembly .....                    | 5     | Battery Mount Assembly .....                           | 40    |
| Steering Gear Assembly No. 87-1500 .....           | 6-7   | Fuel Tank Assembly .....                               | 41    |
| Brake & Accelerator Pedal Assembly .....           | 8     | Air Cleaner & Fuel Supply Assembly .....               | 42    |
| Master Brake Cylinder No. 87-3030 .....            | 9     | Air Cleaner Assembly .....                             | 43    |
| Hydraulic Brake Line Routing Assembly .....        | 10    | Lift Valve Linkage Assembly .....                      | 44    |
| Hydraulic Schematic .....                          | 11    | Lift Valve & Cylinder Assembly .....                   | 45    |
| Clutch Linkage Assembly .....                      | 12    | Lift Cylinder No. 87-7990 .....                        | 46    |
| Seat Base Assembly .....                           | 13    | Control Valve Assembly No. 43-1950 .....               | 47    |
| Seat Back Assembly .....                           | 14    | Rear Fender & Tail Light Assembly .....                | 48    |
| Hi-Lo Shift Levers Assemblies .....                | 15    | Cylinder Block Assembly .....                          | 49    |
| Differential Lock & Parking Brake Assemblies ..... | 16    | Rocker Cover & Cylinder Head Assembly .....            | 50    |
| R.O.P.S. Assembly .....                            | 17    | Covers & Oil Pan Assembly .....                        | 51    |
| Front Suspension Assembly .....                    | 18    | Piston & Crankshaft Assembly .....                     | 52    |
| Front Suspension Control Arm Assembly .....        | 19    | Clutch & Clutch Release Assembly .....                 | 53    |
| Front Wheel Assembly .....                         | 20    | Camshaft & Valves Assembly .....                       | 54    |
| Front Brake Assembly .....                         | 21    | Balancer & Oil Pressure Switch &<br>Engine Mount ..... | 55    |
| Rear Frame Assembly .....                          | 22    | Oil Pump & Filter Assembly .....                       | 56    |
| Rear Axle Assembly .....                           | 23-24 | Water Pump & Thermostat Assembly .....                 | 57    |
| Rear Brake Assembly .....                          | 25    | Exhaust & Intake Manifold Assembly .....               | 58    |
| Radiator & Hydraulic Pump Assembly .....           | 26    | Carburetor Installation Assembly .....                 | 59    |
| Hydraulic Pump Assembly No. 87-5700 .....          | 27    | Carburetor Assembly .....                              | 60    |
| Hydraulic Pump Drive Assembly .....                | 28    | Distributor Assembly .....                             | 61    |
| Engine Frame Assembly .....                        | 29    | Starter Assembly .....                                 | 62    |
| Engine Installation Assembly .....                 | 30    | Alternator Assembly .....                              | 63    |
| Governor Assembly .....                            | 31    | Gasket Kit .....                                       | 64    |
| Governor .....                                     | 32    | International Decal Cross Reference .....              | 65-71 |
| Transaxle Installation Assembly .....              | 33-34 | TORO Part Number Index .....                           | 72-82 |
| Transaxle Case Assembly .....                      | 35    |                                                        |       |
| Countershaft Assembly .....                        | 36    |                                                        |       |

