
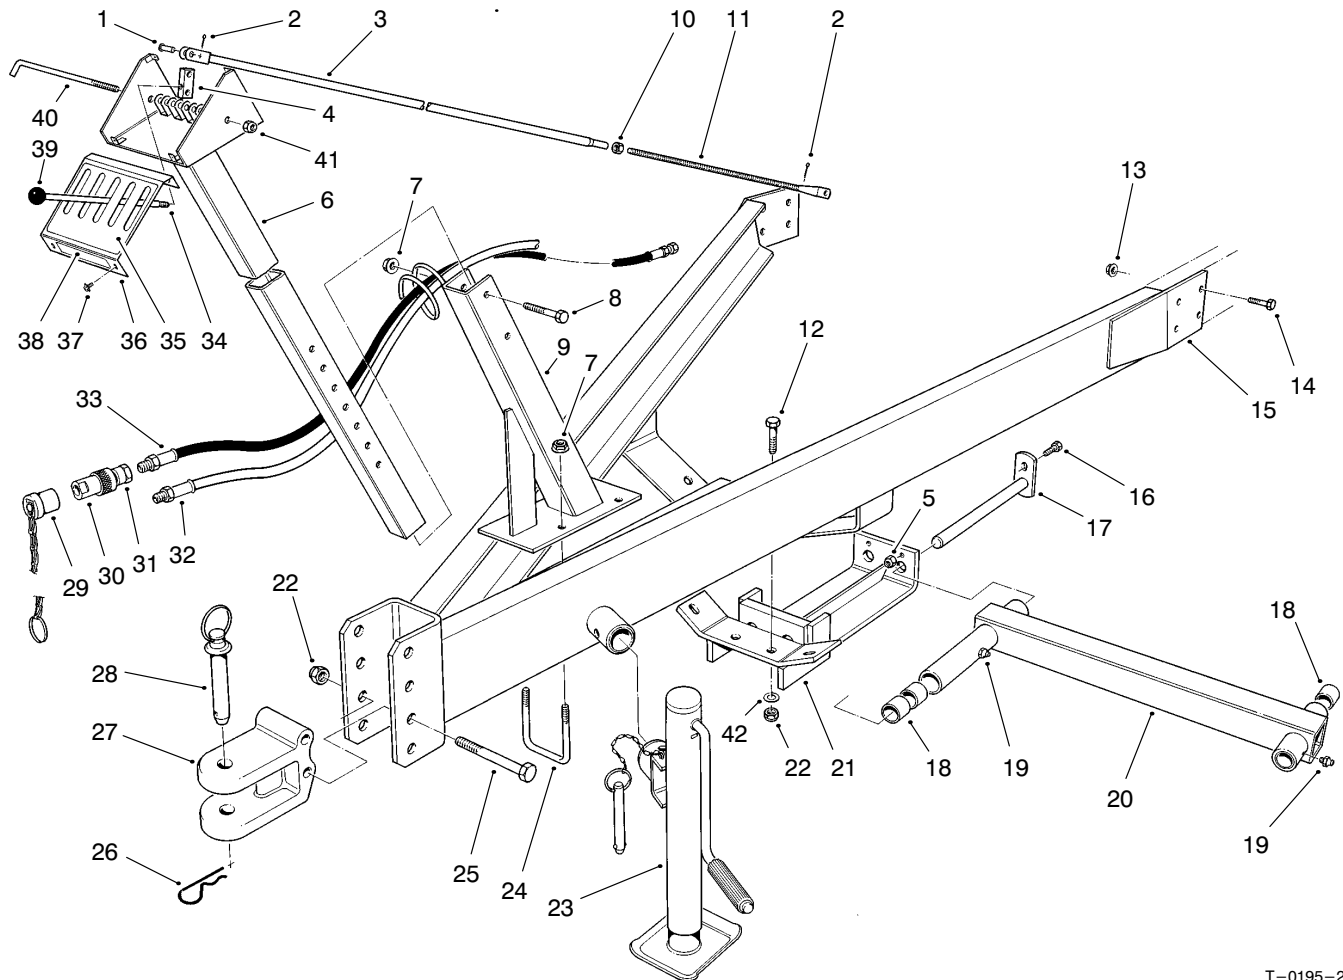


TORO®**MODEL NO. 33455-50001 & UP****PARTS
CATALOG****REELMASTER® TRANSPORT FRAME
5 UNIT**

T-0195-2

CONTROL TOWER & LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	283-6	Pin - Clevis	3	17	26-8250	Pin - Arm, Lift	2
2	3272-10	Pin - Cotter	6	18	3-0348	Bushing	12
3	47-3880	Linkage - Control	3	19	302-5	Fitting - Grease	4
4	47-3620	Lever - Block, Pivot	3	20	47-3250	Arm - Lift #2 & 3 Cutting Units (Incl. Ref. #18)	2
5	32153-3	Nut - Lock	2	21	26-8160	Support - Arm, Lift	1
6	47-3680	Tower - Control, Upper	1	22	3296-24	Nut - Lock	6
7	3290-357	Nut - Flange	6	23	60-8900	Jack Assembly	1
8	323-13	Screw - Cap, Hex. Hd.	2	24	47-3460	U-Bolt	2
9	47-3380	Tower - Control, Lower	1	25	327-23	Screw - Cap, Hex. Hd.	2
10	3217-8	Nut - Hex	3	26	3290-343	Pin - Cotter, Hair	1
11	47-3630	Rod - Linkage, Control	3	27	47-3550	Hitch - Clevis	1
12	327-6	Screw - Cap, Hex. Hd.	4	28	13-6200	Pin - Pointed (Incl. Ref. #26)	1
13	32128-23	Nut - Flange	8	29	49-8180	Cap - Dust	2
14	325-6	Screw - Cap, Hex. Hd.	8	30	353-819	Body - Coupler, Quick Disc.	2
15	55-7380	Tongue	1				
16	322-6	Screw - Cap, Hex. Hd.	2				

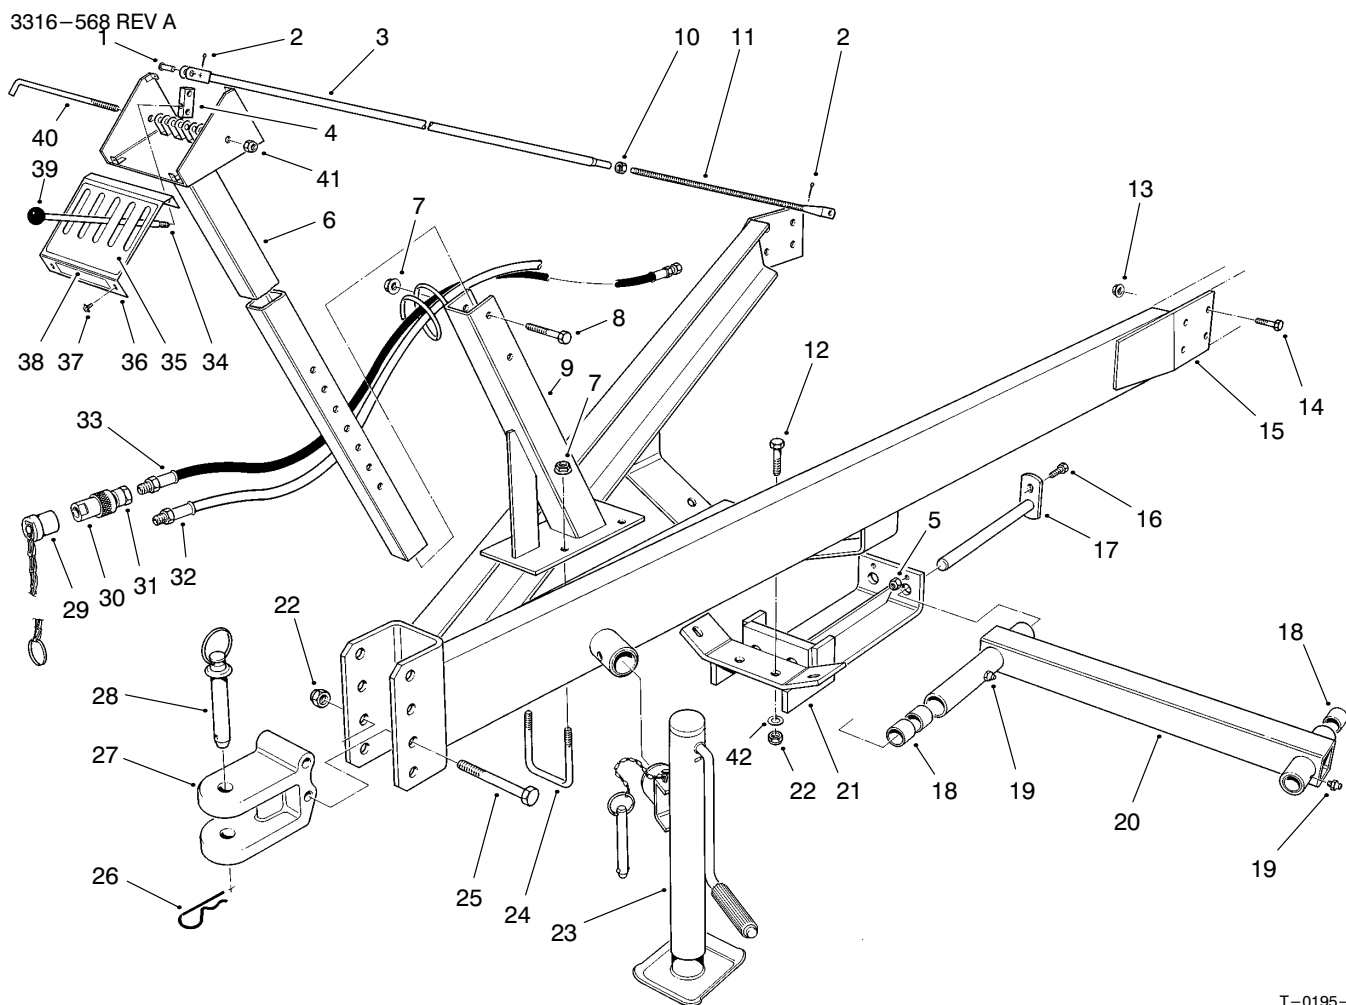


T-0195-2

CONTROL TOWER & LINKAGE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
31	353-820	Tip - Coupler, Quick Disc.	2
32	52-5990	Hose - Hydraulic (Orange)	1
33	52-5991	Hose - Hydraulic (Black)	1
34	47-3810	Lever - Valve	3
35	47-5600	Decal - Operation	1
36	47-3820	Cover - Column, Control	1

Ref. No.	Part No.	Description	No. Used
37	3234-13	Screw - Cap, Hex. Hd.	4
38	47-3770	Decal - Manual, Operator's	1
39	3-0631	Knob	3
40	47-3450	Pin - Pivot	1
41	3296-29	Nut - Lock	1
42	3256-27	Washer - Flat	4

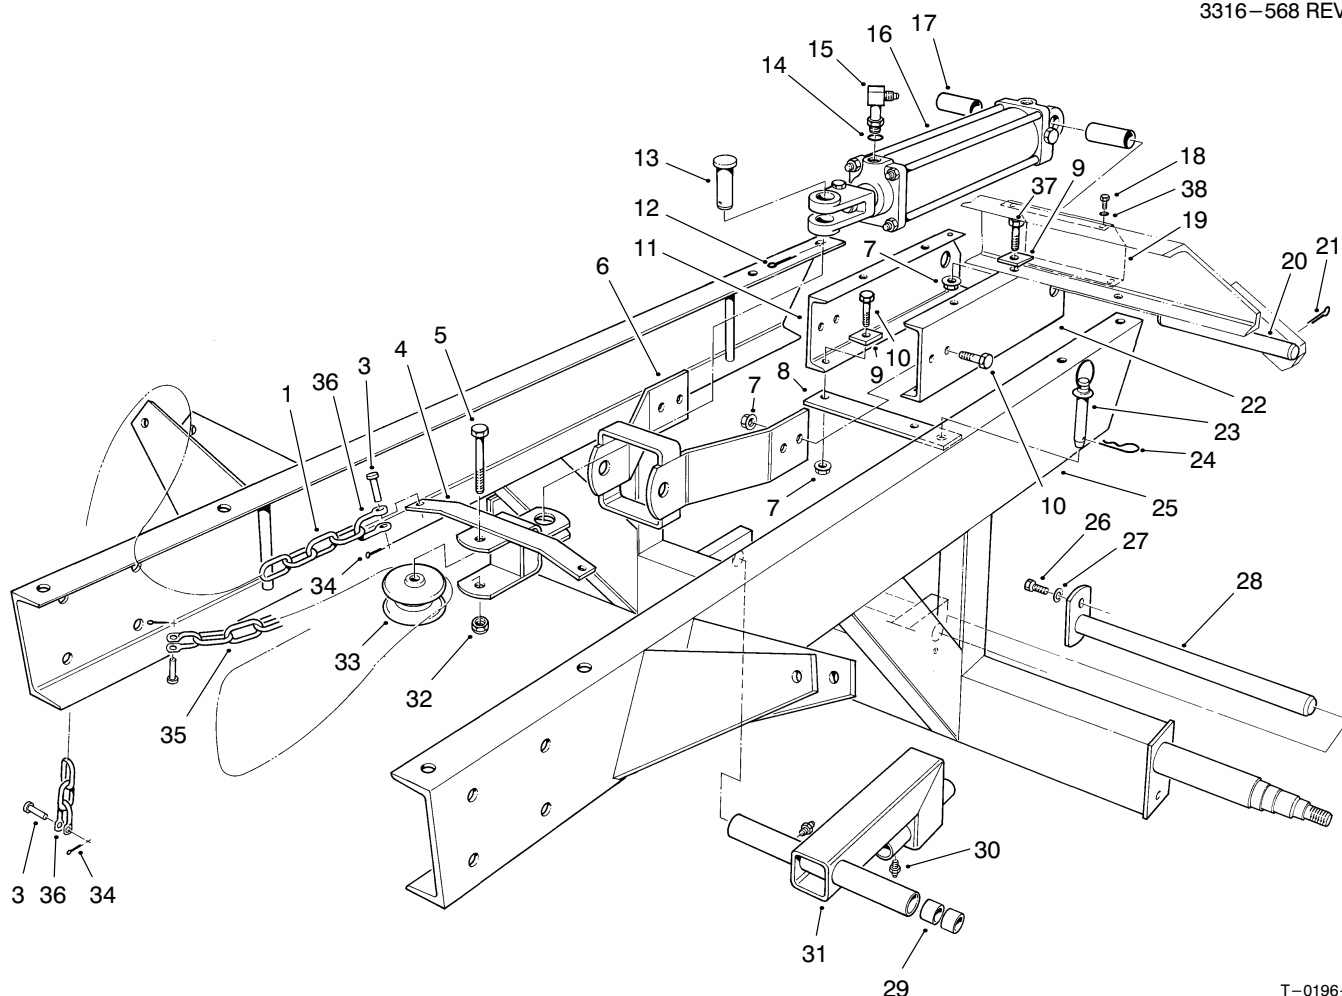


T-0196-1

MAIN FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	47-3650	Chain - Lift, No. 2 & 3 Cutting Units	2	21	3272-24	Pin - Cotter	2
3	283-10	Pin - Clevis	5	22	47-3860	Channel - LH	1
4	51-0850	Support - Pulley	1	23	13-6200	Pin - Pointed (Incl. Ref. #24)	1
5	325-17	Screw - Cap, Hex. Hd.	1	24	3290-343	Pin - Cotter, Hair	1
6	47-3930	Bracket - Lockup	1	25	47-3010	Frame - Trailer	1
7	32128-23	Nut - Flange	10	26	322-3	Screw - Cap, Hex. Hd.	1
8	47-3640	Rest - Cylinder	1	27	3253-4	Washer - Lock	1
9	3290-216	Washer - Tapered	10	28	60-9110	Bail - Pin, Lift	1
10	325-6	Screw - Cap, Hex. Hd.	6	29	3-0348	Bushing	6
11	47-3870	Channel - RH	1	30	302-5	Fitting - Grease	2
12	3272-13	Pin - Cotter	1	31	47-3230	Arm - Lift (Incl. Ref. #29)	1
13	26-8590	Pin - Cylinder	1	32	32153-5	Nut - Lock	1
14	237-79	O-Ring	2	33	3-2196	Sheave	1
15	353-537	Elbow - Male (Incl. Ref. #14)	2	34	3272-10	Pin - Cotter	5
16	47-3720	Cylinder - Hydraulic	1	35	47-3660	Chain - Lift, No. 1 Cut. Unit	1
17	20-4390	Tube - Spacer	2	36	5-2942	Shackle - Long	5
18	32104-17	Screw - Hex. Hd. Self Tap.	4	37	325-7	Screw - Cap, Hex. Hd.	4
19	42-3550	Cover - Mount, Cylinder	1	38	3256-22	Washer - Flat	4
20	3-0144	Shaft	1	*	52-3500	Kit - Spindle, Replacement	1

*Not Illustrated

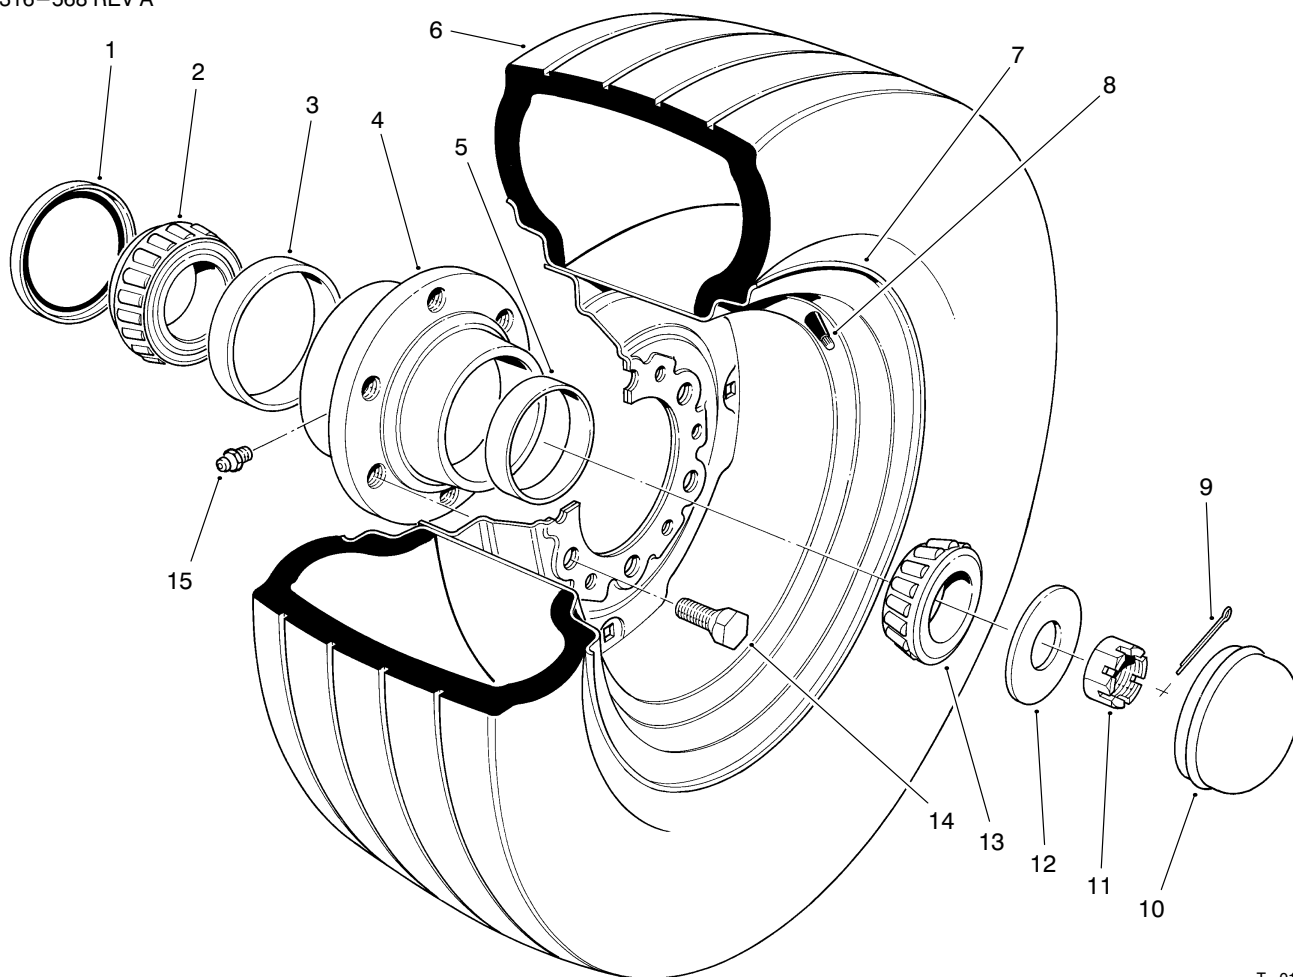


T-0197-1

WHEEL & TIRE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	253-144	Seal - Grease	2
2	254-103	Cone - Bearing, Inner	2
3	254-104	Cup - Bearing	2
4	77-0650	Hub	2
		(Incl. Ref. #3, 5 & 15)	
5	254-61	Cup - Bearing	2
6	56-7960	Tire	2
7	217-109	Wheel	2

Ref. No.	Part No.	Description	No. Used
8	232-27	Stem - Valve	2
9	3272-19	Pin - Cotter	2
10	217-111	Cap - Hub	2
11	32136-1	Nut - Slotted	2
12	47-2540	Washer	2
13	254-62	Cone - Bearing, Outer	2
14	217-103	Bolt - Wheel	12
15	302-2	Fitting - Grease	1

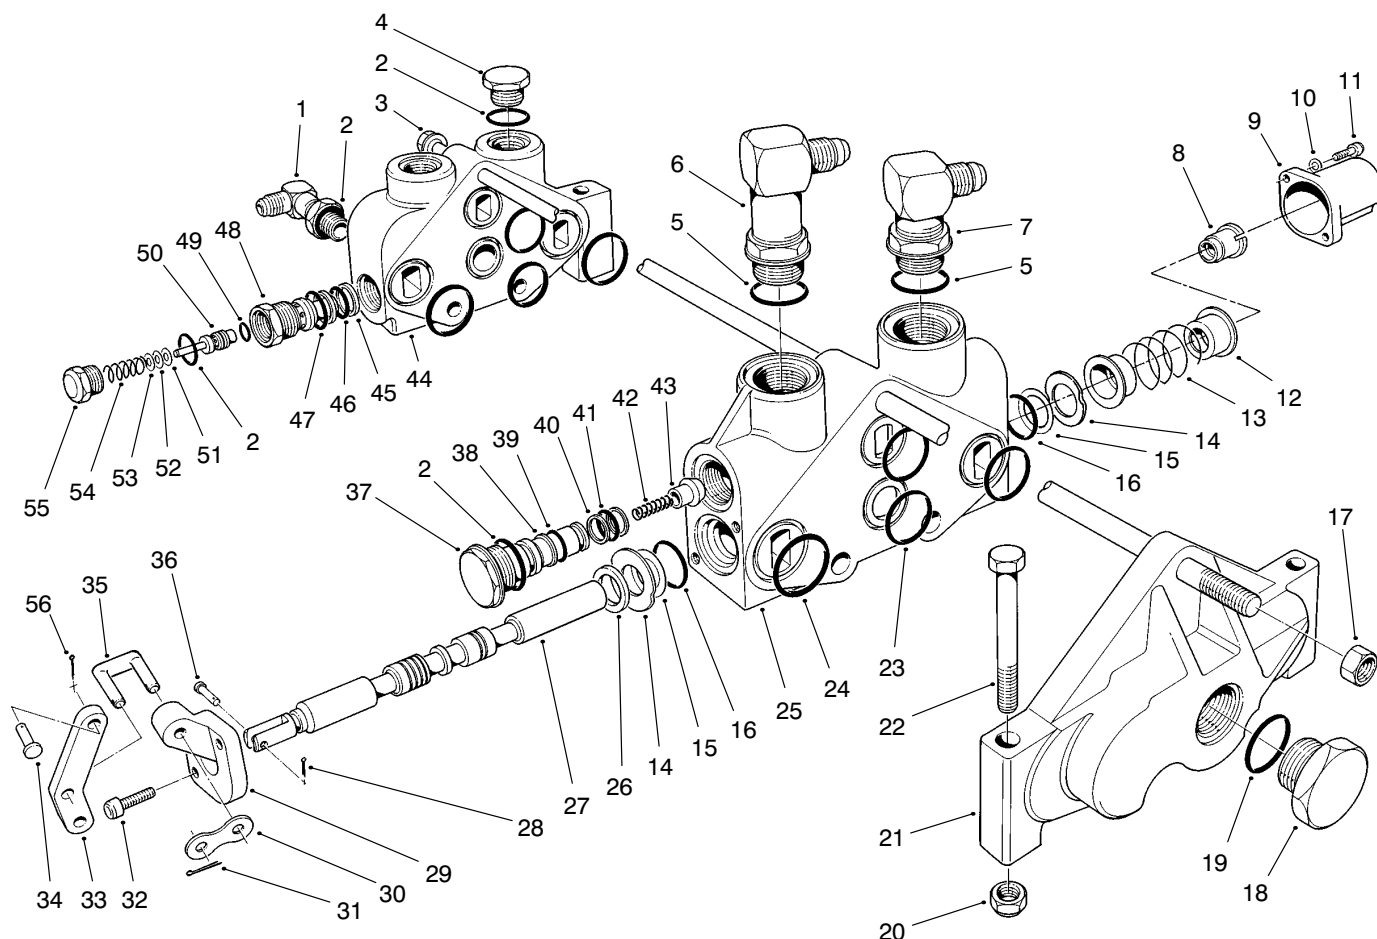


T-0198-2

HYDRAULIC VALVE ASSEMBLY NO. 63-8510

Ref. No.	Part No.	Description	No. Used
1	353-426	Elbow (Incl. Ref. #2)	2
2	237-80	O-Ring	8
3	44-7612	Bolt - Hex. Washer Hd.	3
4	353-721	Plug Assembly (Incl. Ref. #2)	2
5	237-79	O-Ring	10
6	38-5540	Elbow - Male (Incl. Ref. #5)	3
7	353-537	Elbow - Male (Incl. Ref. #5)	3
8	52-5860	Spool - Collar	1
9	68-4240	Bonnet	1
10	3253-3	Washer - Lock	2
11	353-976	Screw - Socket Head	2
12	353-417	Collar - Spring	2
13	44-7650	Spring - Compression	1
14	353-959	Plate - Retainer, Seal	2
15	353-958	Washer - Backup	2
16	353-570	O-Ring	2
17	3219-3	Nut - Hex	3
18	353-799	Conversion Plug Assembly (Incl. Ref. #19)	1
19	353-800	O-Ring	1

Ref. No.	Part No.	Description	No. Used
20	32153-3	Nut - Lock	3
21	353-798	Plate - Cover, Right	1
22	322-13	Screw - Cap, Hex. Hd.	3
23		O-Ring	16
24		O-Ring	16
25		Housing - Valve	1
*	63-8520	Section - Valve, 1 Spool (Incl. Ref. #2, 8-16, 25-27, 29 & 37-43)	5
26	353-318	Seal - Wiper	1
27		Spool - 4 Way	1
28	353-321	Pin - Cotter	5
29	353-324	Bracket - Handle	1
30	63-8760	Link - Connecting	3
31	3272-1	Pin - Cotter	6
32	52-5900	Screw - Cap, Soc. Hd.	2
33	52-5670	Lever - Control (Incl. Ref. #34)	3
34	283-62	Pin - Clevis	3
35	63-8760	Pin - Link	3
36	353-322	Pin	3
37	44-7660	Plug - Check	2
38	353-306	Washer - Backup	2
39	353-305	O-Ring	2

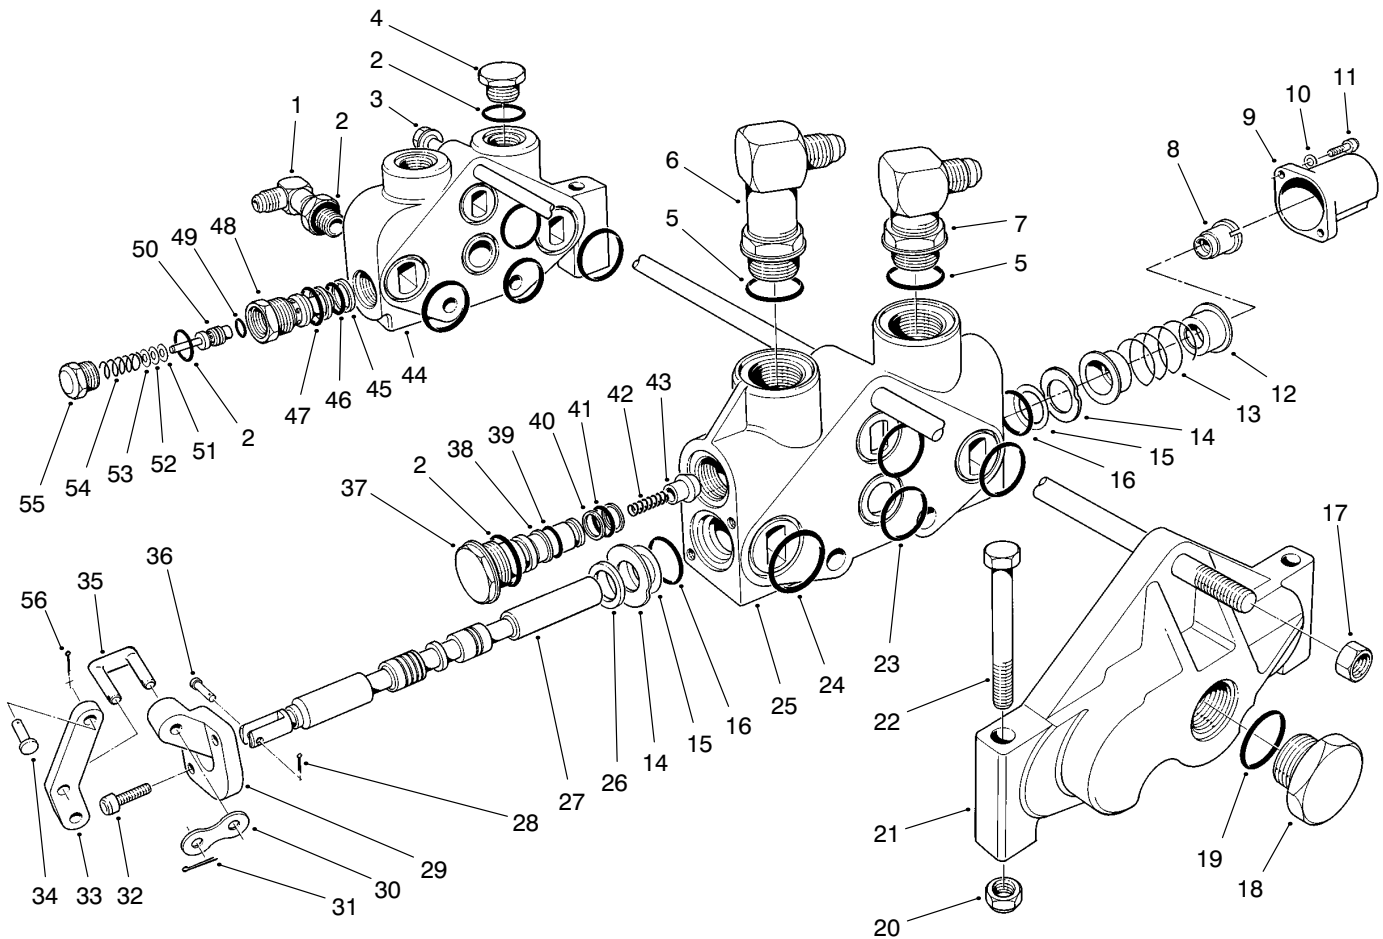

T-0198-2


HYDRAULIC VALVE ASSEMBLY NO. 63-8510 (Continued)

Ref. No.	Part No.	Description	No. Used
40	353-303	Seal - Backup	4
41	353-302	O-Ring	2
42	353-304	Poppet - Spring	2
43	353-301	Poppet - Lift, Check	2
44	44-7621	Plate - Cover, V20 L.E.	1
45	353-952	Seal - Backup	1
46	353-758	O-Ring	1
47	353-331	O-Ring	1
48	353-760	Body - "WH" Relief	1
49	353-392	Seal - Relief, Poppet	1
50	353-531	Poppet - Relief Assembly (Incl. Ref. #49)	1
51	353-328	Washer - Shim .040	A/R
52	353-329	Washer - Shim .020	A/R
53	353-330	Washer - Shim .010	A/R

Ref. No.	Part No.	Description	No. Used
54	46-2380	Spring - Relief	1
55	353-334	Cap - Relief	1
56	3272-10	Pin - Cotter	3
*	84-2190	Kit - Seal, Sectional (Incl. Ref. #23 & 24)	1
*	353-481	Plug - Load Check Assy. (Incl. Ref. #2 & 37-41)	2
*	353-515	Kit - Seal, Spool (Incl. Ref. #14-16)	1
*	63-8760	Kit - Pin, Link (Incl. Ref. #30, 31, 35 & 36)	3
*	353-743	Kit - Seal (Incl. Ref. #2 & 38-41)	1
*	353-988	Plug - Assembly (Incl. Ref. #5)	3

*Not Illustrated


Note: Quantities indicated are for one valve section.

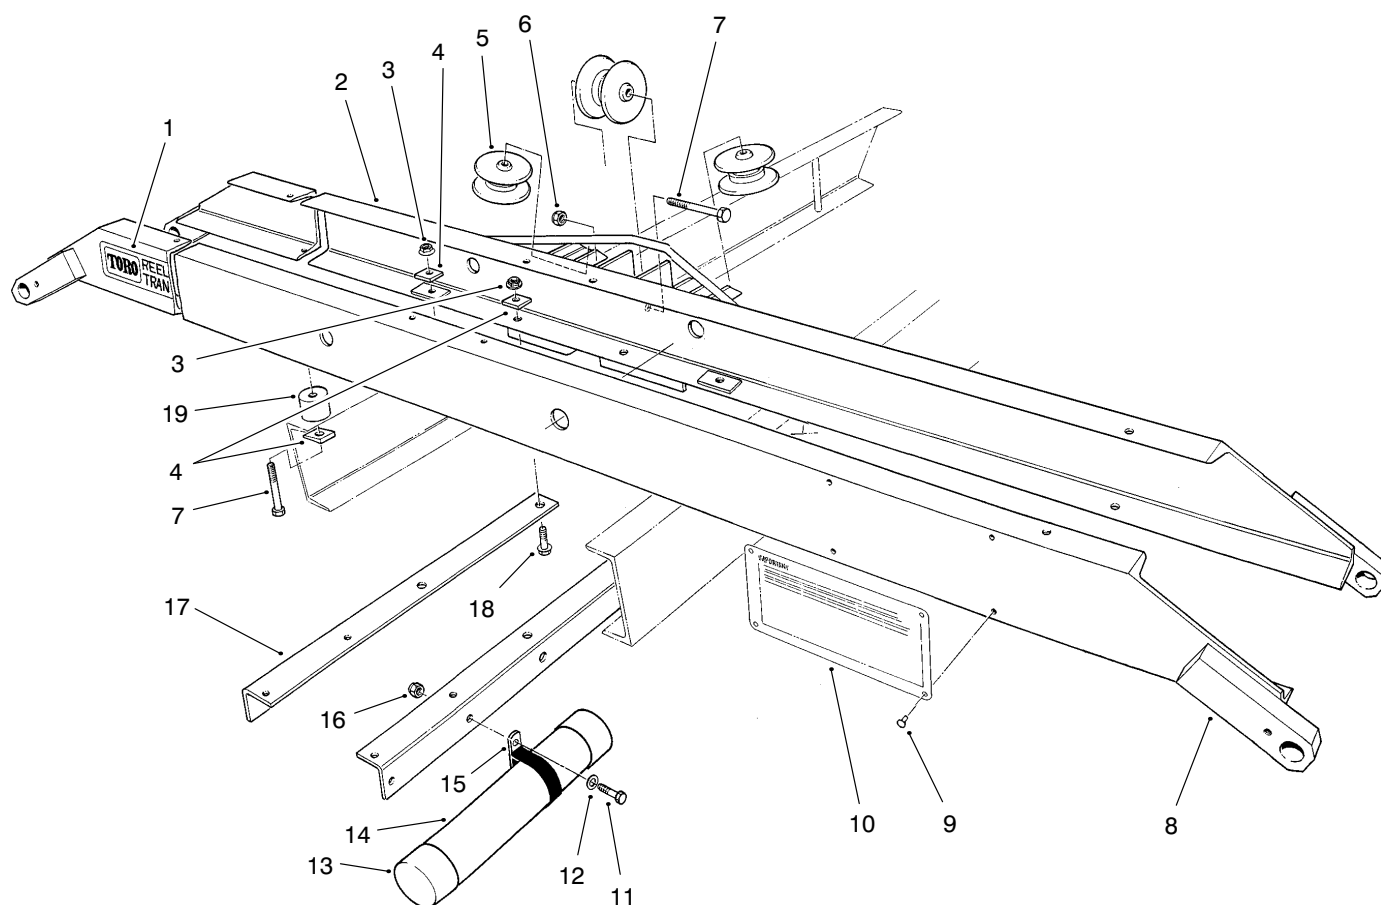

T-1876-1

FRONT CROSS CHANNEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	47-3990	Decal - Toro	1	11	322-3	Screw - Cap Hex. Hd.	2
2	47-3570	Channel - Cross, Rear	1	12	3256-2	Washer - Flat	2
3	32128-23	Nut - Flange	8	13	65-5890	Cap - Tube, Manual	2
4	3290-216	Washer - Tapered	12	14	65-5871	Tube - Manual	1
5	3-2196	Sheave	3	15	2412-102	R-Clamp	2
6	32153-5	Nut - Lock	3	16	32153-3	Nut - Lock	2
7	325-14	Screw - Cap Hex. Hd.	7	17	47-3470	Support - Valve	2
8	47-3560	Channel - Cross, Front	1	18	325-6	Screw - Cap Hex. Hd.	4
9	3290-274	Rivet	4	19	49-8170	Spacer	4
10	47-3900	Plate - Information	1				

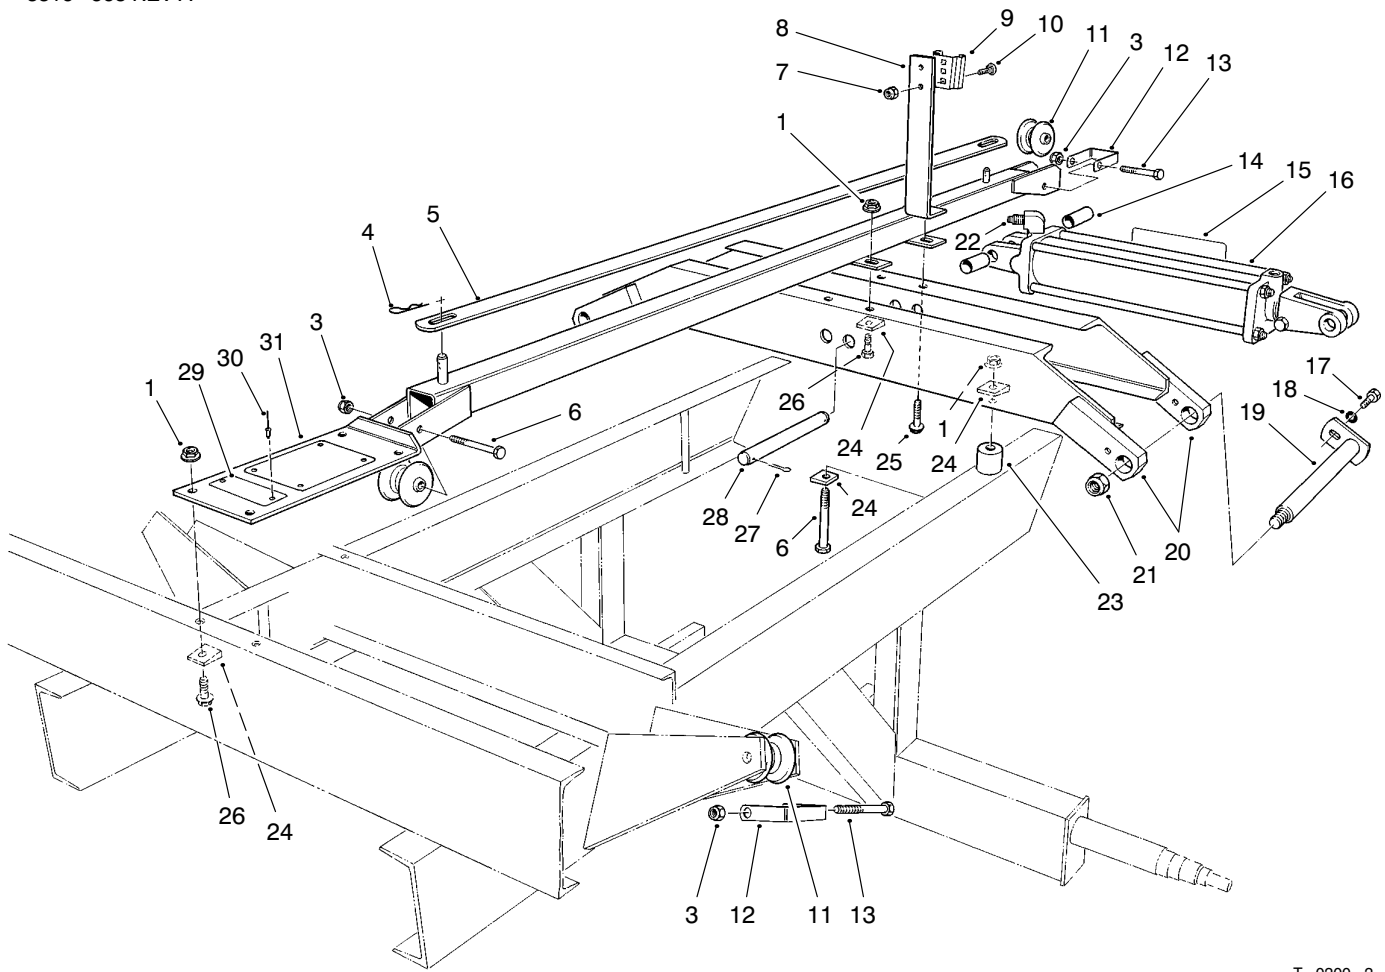


T-0200-2

REAR CROSS CHANNEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32128-23	Nut - Flange	12
3	32153-5	Nut - Lock	4
4	3290-355	Pin - Cotter, Hair	2
5	47-3800	Strap - Locking	1
6	325-14	Screw - Cap, Hex. Hd.	5
7	32128-20	Nut - Lock	2
8	47-3480	Bracket - Slow Moving Veh.	1
9	38-6200	Socket - Slow Moving Veh.	1
10	3230-20	Bolt - Carriage	2
11	3-2196	Sheave	4
12	3-0136	Keeper - Chain	3
13	325-18	Screw - Cap, Hex. Hd.	3
14	20-4390	Tube - Spacer	4
15	47-3990	Decal - Toro	1
16	22-7520	Cylinder - Hydraulic, 10"	2

Ref. No.	Part No.	Description	No. Used
17	322-3	Screw - Cap, Hex. Hd.	2
18	3253-4	Washer - Lock	2
19	37-2760	Bail - Pin, Lift	2
20	8-1280	Channel - Cross, Rear	2
21	3296-50	Nut - Lock	2
22	47-3840	Elbow - .094 Orifice	4
23	49-8170	Spacer	4
24	3290-216	Washer - Tapered	16
25	3234-22	Screw - Cap, Hex. Hd.	1
26	325-6	Screw - Cap, Hex. Hd.	7
27	3272-24	Pin - Cotter	4
28	3-0144	Shaft	2
29	65-2710	Plate - Information	1
30	3290-274	Rivet - Pop	2
31	47-3500	Brace - Channel	1

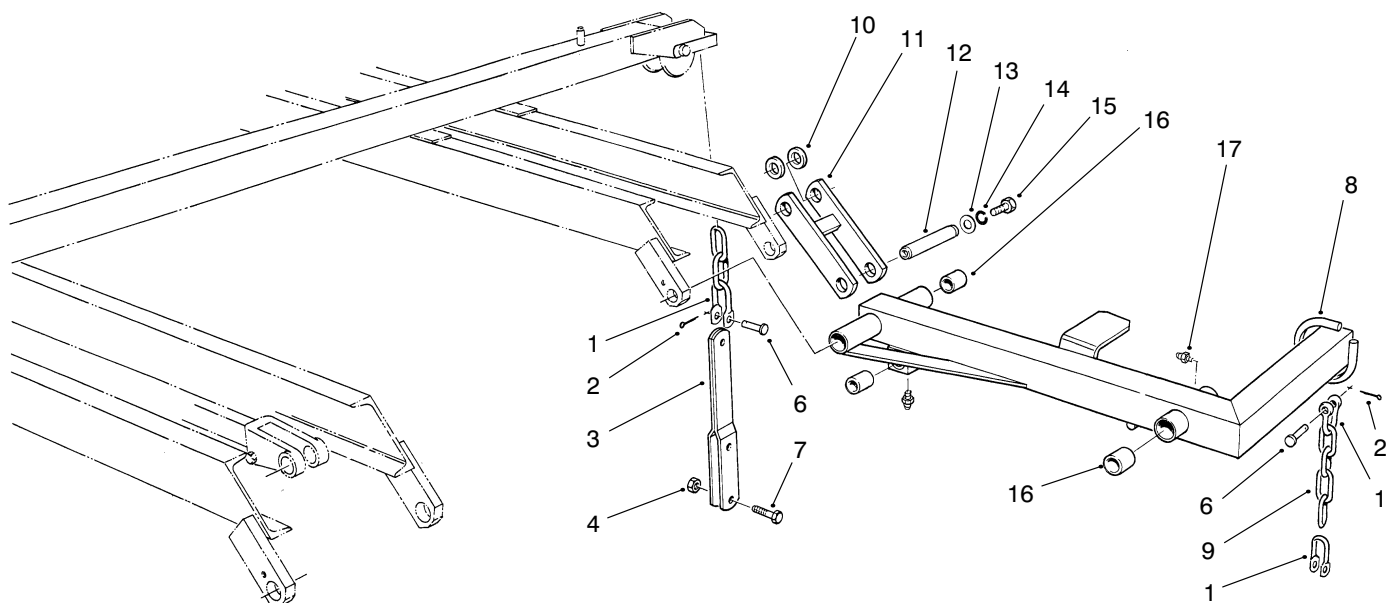


T-1877-1

LIFT ARM ASSEMBLIES NO. 4 & 5

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	5-2942	Shackle - Long	5	9	3-4636	Chain - Bail, Lift	2
2	3272-10	Pin - Cotter	5	10	3256-62	Washer - Flat	4
3	47-3430	Bracket - Lift	1	11	23-2610	Link	2
4	32153-2	Nut - Lock	1	12	3-0128	Shaft	4
6	283-10	Pin - Clevis	3	13	5-1720	Washer	8
7	323-8	Screw - Cap, Hex. Hd.	1	14	3253-5	Washer - Lock	8
8	47-3280	Arm - Short, No. 4 Cutting Unit (Incl. Ref. #16)	1	15	3211-4	Screw - Cap, Hex. Hd.	8
*	47-3270	Arm - Short, No. 5 Cutting Unit (Incl. Ref. #16)	1	16	3-0348	Bushing	16
				17	302-5	Fitting - Grease	4

*Not Illustrated

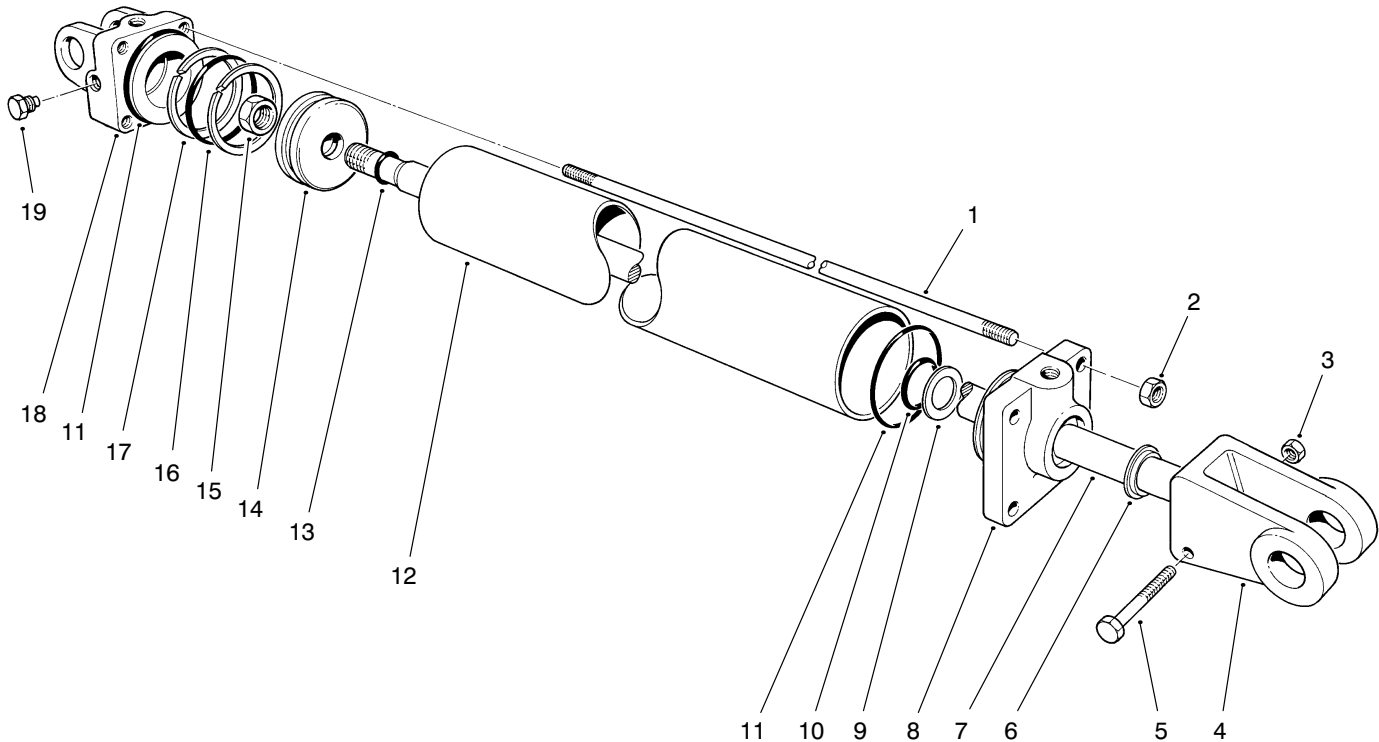

T-0202-2


HYDRAULIC CYLINDERS 10" (22-7520) & 14" (47-3720)

Ref. No.	Part No.	Description	No. Used
1	22-8670	Tie Rod 10" (Incl. Ref. #2)	4
*	47-2660	Tie Rod 14" (Incl. Ref. #2)	4
2	3217-9	Nut - Hex.	4
3	32153-3	Nut - Lock	1
4	22-8680	Clevis Assembly	1
5	322-11	Screw - Cap, Hex. Hd.	1
6	22-8660	Wiper - Seal, 10"	1
*	47-5630	Wiper - Seal, 14"	1
7	22-8610	Rod - Piston, 10"	1
*	47-2690	Rod - Piston, 14"	1
8	22-8630	Head - 10"	1
*	47-2670	Head - 14"	1
9	22-8650	Washer - Backup, 10"	1
*	47-2290	Washer - Backup, 14"	1
10	22-8640	O-Ring - 10"	1
*	47-2280	U-Cup Seal, 14"	1
11	22-8550	O-Ring, 10"	2
*	47-2270	O-Ring, 14"	2

Ref. No.	Part No.	Description	No. Used
12	22-7520	Barrel - 10"	1
*	47-2680	Barrel - 14"	1
13	22-8600	O-Ring	1
14	22-8590	Piston	1
15	22-8560	Nut - Lock	1
16	22-8570	O-Ring	1
17	22-8580	Washer - Backup	2
18	22-8540	Butt - Cap, End 10"	1
*	47-2700	Butt - Cap, End 14"	1
*	22-8720	Kit - Seal (Incl. Ref. #6, 9-11, 13, 16 & 17) 10" Cylinder	1
*	47-3730	Kit - Seal (Incl. Ref. #6, 9-11, 13, 16 & 17) 14" Cylinder	1
19	281-2	Plug - 10" Cylinder	1
*	353-497	Plug - 14" Cylinder	1

*Not Illustrated

Note: Quantities indicated are for one cylinder.

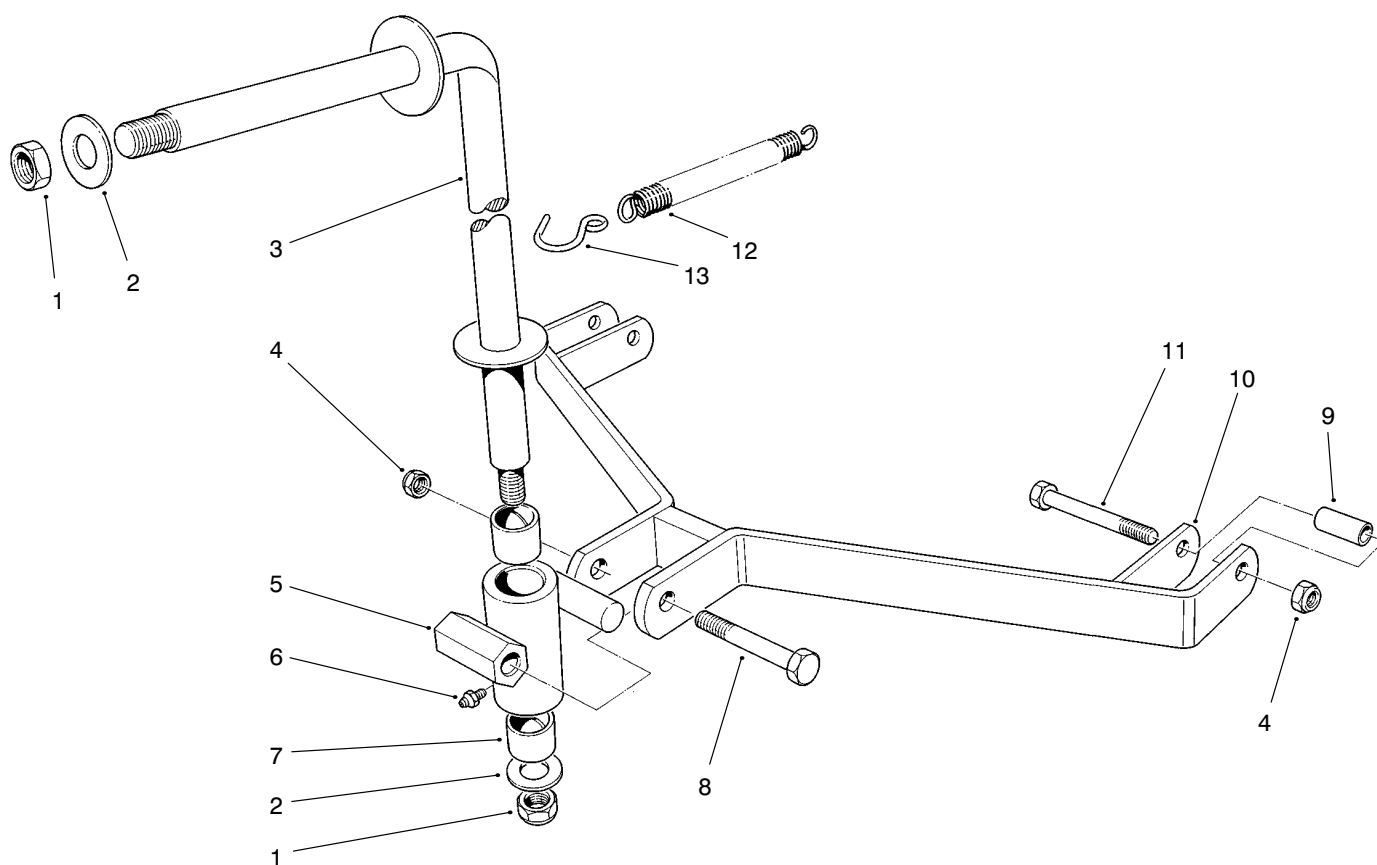


T-0203-2

LIFT BAIL ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3296-50	Nut - Lock	10	6	302-5	Fitting - Grease	5
2	3-8448	Washer - Thrust	10	7	3-0348	Bushing	10
3	26-8310	Bail - Lift, No. 1, 2 & 3 Cutting Units	3	8	325-17	Screw - Cap, Hex. Hd.	5
*	28-8720	Bail - Lift, No. 4 & 5 Cutting Units	2	9	5-1091	Spacer	10
4	32153-5	Nut - Lock	15	10	3-9280	Bar - Draw	5
5	6-1030	Housing Assembly (Incl. Ref. #6 & 7)	5	11	325-14	Screw - Cap, Hex. Hd.	10
				12	5-1706	Spring	5
				13	3-2198	S-Hook	5

*Not Illustrated

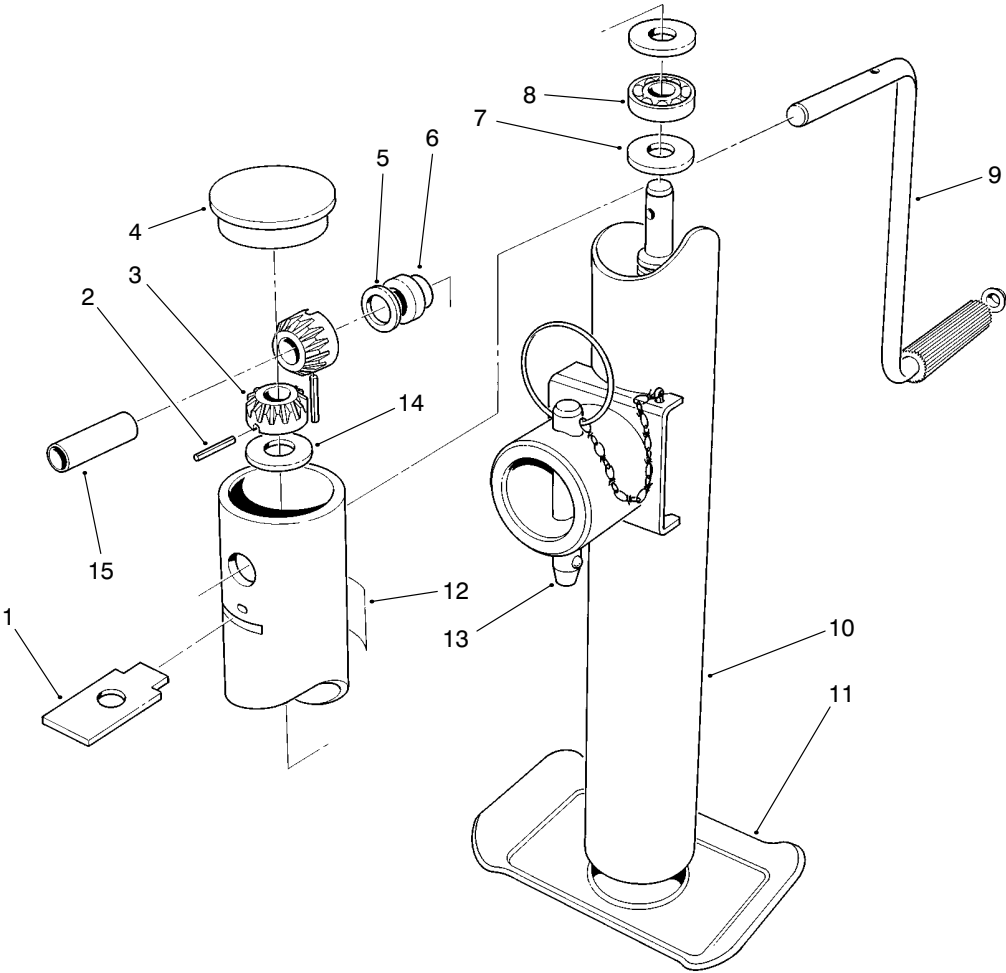

T-0204-1

JACK ASSEMBLY NO. 60-8900

Ref. No.	Part No.	Description	No. Used
1	60-8950	Plate - Support	1
2	32121-51	Pin - Roll	2
3		Gear - Bevel	2
4	60-8960	Cap - Tube, Jack	1
5		Washer - Thrust	1
6		Bushing	2
7		Washer	2
8		Bearing - Open Cage	1
9	60-8940	Handle Assembly	1
10	60-8930	Tube - Outer	1

Ref. No.	Part No.	Description	No. Used
11	60-8970	Tube - Screw Assy., Inner	1
12		Decal	1
13	55-7190	Pin & Chain Assembly	1
14		Washer	1
15		Spacer - Gear	1
*	60-8910	Kit - Bearing (Incl. Ref. #7 & 8)	1
*	60-8920	Kit - Gear (Incl. Ref. #2, 3, 5, 6, 14 & 15)	1

*Not Illustrated

TORO PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3-0128	Shaft	9 12 4	47-3280	Arm - Short, No. 4 Cutting	9 8 1
3-0136	Keeper - Chain	8 12 3	47-3380	Tower - Control, Lower	1 9 1
3-0144	Shaft	3 20 1	47-3430	Bracket - Lift	9 3 1
3-0144	Shaft	8 28 2	47-3450	Pin - Pivot	2 40 1
3-0348	Bushing	11 7 10	47-3460	U-Bolt	1 24 2
3-0348	Bushing	9 16 16	47-3470	Support - Valve	7 17 2
3-0348	Bushing	1 18 12	47-3480	Bracket - Slow Moving Veh.	8 8 1
3-0348	Bushing	3 29 6	47-3500	Brace - Channel	8 31 1
3-0631	Knob	2 39 3	47-3550	Hitch - Clevis	1 27 1
3-2196	Sheave	7 5 3	47-3560	Channel - Cross, Front	7 8 1
3-2196	Sheave	8 11 4	47-3570	Channel - Cross, Rear	7 2 1
3-2196	Sheave	3 33 1	47-3620	Lever - Block, Pivot	1 4 3
3-2198	S-Hook	11 13 5	47-3630	Rod - Linkage, Control	1 11 3
3-4636	Chain - Bail, Lift	9 9 2	47-3640	Rest - Cylinder	3 8 1
3-8448	Washer - Thrust	11 2 10	47-3650	Chain - Lift, No. 2 & 3	3 1 2
3-9280	Bar - Draw	11 10 5	47-3660	Chain - Lift, No. 1 Cut. Unit	3 35 1
5-1091	Spacer	11 9 10	47-3680	Tower - Control, Upper	1 6 1
5-1706	Spring	11 12 5	47-3720	Cylinder - Hydraulic	3 16 1
5-1720	Washer	9 13 8	47-3730	Kit - Seal	10 * 1
5-2942	Shackle - Long	9 1 5	47-3760	Hydraulic Hose Assembly	13 1 6
5-2942	Shackle - Long	3 36 5	47-3770	Decal - Manual, Operator's	2 38 1
6-1030	Housing Assembly	11 5 5	47-3800	Strap - Locking	8 5 1
8-1280	Channel - Cross, Rear	8 20 2	47-3810	Lever - Valve	2 34 3
13-6200	Pin - Pointed	3 23 1	47-3820	Cover - Column, Control	2 36 1
13-6200	Pin - Pointed	1 28 1	47-3840	Elbow - .094 Orifice	8 22 4
20-4390	Tube - Spacer	8 14 4	47-3860	Channel - LH	3 22 1
20-4390	Tube - Spacer	3 17 2	47-3870	Channel - RH	3 11 1
22-7520	Cylinder - Hydraulic, 10"	8 16 2	47-3880	Linkage - Control	1 3 3
22-7520	Barrel - 10"	10 12 1	47-3900	Plate - Information	7 10 1
22-8540	Butt - Cap, End 10"	10 18 1	47-3930	Bracket - Lockup	3 6 1
22-8550	O-Ring, 10"	10 11 2	47-3990	Decal - Toro	7 1 1
22-8560	Nut - Lock	10 15 1	47-3990	Decal - Toro	8 15 1
22-8570	O-Ring	10 16 1	47-5600	Decal - Operation	2 35 1
22-8580	Washer - Backup	10 17 2	47-5630	Wiper - Seal, 14"	10 * 1
22-8590	Piston	10 14 1	49-8170	Spacer	7 19 4
22-8600	O-Ring	10 13 1	49-8170	Spacer	8 23 4
22-8610	Rod - Piston, 10"	10 7 1	49-8180	Cap - Dust	1 29 2
22-8630	Head - 10"	10 8 1	51-0850	Support - Pulley	3 4 1
22-8640	O-Ring - 10"	10 10 1	52-3500	Kit - Spindle, Replacement	3 * 1
22-8650	Washer - Backup, 10"	10 9 1	52-5670	Lever - Control	5 33 3
22-8660	Wiper - Seal, 10"	10 6 1	52-5860	Spool - Collar	5 8 1
22-8670	Tie Rod 10"	10 1 4	52-5900	Screw - Cap, Soc. Hd.	5 32 2
22-8680	Clevis Assembly	10 4 1	52-5990	Hose - Hydraulic (Orange)	13 2 1
22-8720	Kit - Seal	10 * 1	52-5990	Hose - Hydraulic (Orange)	2 32 1
23-2610	Link	9 11 2	52-5991	Hose - Hydraulic (Black)	13 3 1
26-8160	Support - Arm, Lift	1 21 1	52-5991	Hose - Hydraulic (Black)	2 33 1
26-8250	Pin - Arm, Lift	1 17 2	55-7190	Pin & Chain Assembly	12 13 1
26-8310	Bail - Lift, No. 1, 2 & 3	11 3 3	55-7380	Tongue	1 15 1
26-8590	Pin - Cylinder	3 13 1	56-7960	Tire	4 6 2
28-8720	Bail - Lift, No. 4 & 5	11 * 2	60-8900	Jack Assembly	1 23 1
37-2760	Bail - Pin, Lift	8 19 2	60-8910	Kit - Bearing	12 * 1
38-5540	Elbow - Male	5 6 3	60-8920	Kit - Gear	12 * 1
38-6200	Socket - Slow Moving Veh.	8 9 1	60-8930	Tube - Outer	12 10 1
42-3550	Cover - Mount, Cylinder	3 19 1	60-8940	Handle Assembly	12 9 1
44-7612	Bolt - Hex. Washer Hd.	5 3 3	60-8950	Plate - Support	12 1 1
44-7621	Plate - Cover, V20 L.E.	6 44 1	60-8960	Cap - Tube, Jack	12 4 1
44-7650	Spring - Compression	5 13 1	60-8970	Tube - Screw Assy., Inner	12 11 1
44-7660	Plug - Check	5 37 2	60-9110	Bail - Pin, Lift	3 28 1
46-2380	Spring - Relief	6 54 1	63-8520	Section - Valve, 1 Spool	5 * 5
47-2270	O-Ring, 14"	10 * 2	63-8760	Pin - Link	5 35 3
47-2280	U-Cup Seal, 14"	10 * 1	63-8760	Link - Connecting	5 30 3
47-2290	Washer - Backup, 14	10 * 1	63-8760	Kit - Pin, Link	6 * 3
47-2540	Washer"	4 12 2	65-2710	Plate - Information	8 29 1
47-2660	Tie Rod 14"	10 * 4	65-5871	Tube - Manual	7 14 1
47-2670	Head - 14"	10 * 1	65-5890	Cap - Tube, Manual	7 13 2
47-2680	Barrel - 14"	10 * 1	68-4240	Bonnet	5 9 1
47-2690	Rod - Piston, 14"	10 * 1	77-0650	Hub	4 4 2
47-2700	Butt - Cap, End 14"	10 * 1	84-2190	Kit - Seal, Sectional	6 * 1
47-3010	Frame - Trailer	3 25 1	217-103	Bolt - Wheel	4 14 12
47-3230	Arm - Lift	3 31 1	217-109	Wheel	4 7 2
47-3250	Arm - Lift #2 & 3 Cutting	1 20 2	217-111	Cap - Hub	4 10 2
47-3270	Arm - Short, No. 5 Cutting	9 * 1	232-27	Stem - Valve	4 8 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
237-79	O-Ring	5 5 10	3290-274	Rivet	7 9 4
237-79	O-Ring	3 14 2	3290-274	Rivet - Pop	8 30 2
237-80	O-Ring	5 2 8	3290-343	Pin - Cotter, Hair	3 24 1
2412-102	R-Clamp	7 15 2	3290-343	Pin - Cotter, Hair	1 26 1
253-144	Seal - Grease	4 1 2	3290-355	Pin - Cotter, Hair	8 4 2
254-61	Cup - Bearing	4 5 2	3290-357	Nut - Flange	1 7 6
254-62	Cone - Bearing, Outer	4 13 2	3296-24	Nut - Lock	1 22 6
254-103	Cone - Bearing, Inner	4 2 2	3296-29	Nut - Lock	2 41 1
254-104	Cup - Bearing	4 3 2	3296-50	Nut - Lock	11 1 10
281-2	Plug - 10" Cylinder	10 19 1	3296-50	Nut - Lock	8 21 2
283-6	Pin - Clevis	1 1 3	32104-17	Screw - Hex. Hd. Self Tap.	3 18 4
283-10	Pin - Clevis	3 3 5	32121-51	Pin - Roll	12 2 2
283-10	Pin - Clevis	9 6 3	32128-20	Nut - Lock	8 7 2
283-62	Pin - Clevis	5 34 3	32128-23	Nut - Flange	8 1 12
302-2	Fitting - Grease	4 15 1	32128-23	Nut - Flange	7 3 8
302-5	Fitting - Grease	11 6 5	32128-23	Nut - Flange	3 7 10
302-5	Fitting - Grease	9 17 4	32128-23	Nut - Flange	1 13 8
302-5	Fitting - Grease	1 19 4	32136-1	Nut - Slotted	4 11 2
302-5	Fitting - Grease	3 30 2	32153-2	Nut - Lock	9 4 1
322-3	Screw - Cap Hex. Hd.	7 11 2	32153-3	Nut - Lock	10 3 1
322-3	Screw - Cap, Hex. Hd.	8 17 2	32153-3	Nut - Lock	1 5 2
322-3	Screw - Cap, Hex. Hd.	3 26 1	32153-3	Nut - Lock	7 16 2
322-6	Screw - Cap, Hex. Hd.	1 16 2	32153-3	Nut - Lock	5 20 3
322-11	Screw - Cap, Hex. Hd.	10 5 1	32153-5	Nut - Lock	8 3 4
322-13	Screw - Cap, Hex. Hd.	5 22 3	32153-5	Nut - Lock	11 4 15
323-8	Screw - Cap, Hex. Hd.	9 7 1	32153-5	Nut - Lock	7 6 3
323-13	Screw - Cap, Hex. Hd.	1 8 2	32153-5	Nut - Lock	3 32 1
325-6	Screw - Cap Hex. Hd.	7 18 4	353-301	Poppet - Lift, Check	6 43 2
325-6	Screw - Cap, Hex. Hd.	3 10 6	353-302	O-Ring	6 41 2
325-6	Screw - Cap, Hex. Hd.	1 14 8	353-303	Seal - Backup	6 40 4
325-6	Screw - Cap, Hex. Hd.	8 26 7	353-304	Poppet - Spring	6 42 2
325-7	Screw - Cap, Hex. Hd.	3 37 4	353-305	O-Ring	5 39 2
325-14	Screw - Cap Hex. Hd.	7 7 7	353-306	Washer - Backup	5 38 2
325-14	Screw - Cap, Hex. Hd.	8 6 5	353-318	Seal - Wiper	5 26 1
325-14	Screw - Cap, Hex. Hd.	11 11 10	353-321	Pin - Cotter	5 28 5
325-17	Screw - Cap, Hex. Hd.	3 5 1	353-322	Pin	5 36 3
325-17	Screw - Cap, Hex. Hd.	11 8 5	353-324	Bracket - Handle	5 29 1
325-18	Screw - Cap, Hex. Hd.	8 13 3	353-328	Washer - Shim .040	6 51 A/R
327-6	Screw - Cap, Hex. Hd.	1 12 4	353-329	Washer - Shim .020	6 52 A/R
327-23	Screw - Cap, Hex. Hd.	1 25 2	353-330	Washer - Shim .010	6 53 A/R
3211-4	Screw - Cap, Hex. Hd.	9 15 8	353-331	O-Ring	6 47 1
3217-8	Nut - Hex	1 10 3	353-334	Cap - Relief	6 55 1
3217-9	Nut - Hex.	10 2 4	353-392	Seal - Relief, Poppet	6 49 1
3219-3	Nut - Hex	5 17 3	353-417	Collar - Spring	5 12 2
3230-20	Bolt - Carriage	8 10 2	353-426	Elbow	5 1 2
3234-13	Screw - Cap, Hex. Hd.	2 37 4	353-481	Plug - Load Check Assy.	6 * 2
3234-22	Screw - Cap, Hex. Hd.	8 25 1	353-497	Plug - 14" Cylinder	10 * 1
3253-3	Washer - Lock	5 10 2	353-515	Kit - Seal, Spool	6 * 1
3253-4	Washer - Lock	8 18 2	353-531	Poppet - Relief Assembly	6 50 1
3253-4	Washer - Lock	3 27 1	353-537	Elbow - Male	5 7 3
3253-5	Washer - Lock	9 14 8	353-537	Elbow - Male	3 15 2
3256-2	Washer - Flat	7 12 2	353-570	O-Ring	5 16 2
3256-22	Washer - Flat	3 38 4	353-721	Plug Assembly	5 4 2
3256-27	Washer - Flat	2 42 4	353-743	Kit - Seal	6 * 1
3256-62	Washer - Flat	9 10 4	353-758	O-Ring	6 46 1
3272-1	Pin - Cotter	5 31 6	353-760	Body - WH Relief	6 48 1
3272-10	Pin - Cotter	1 2 6	353-798	Plate - Cover, Right	5 21 1
3272-10	Pin - Cotter	6 56 3	353-799	Conversion Plug Assembly	5 18 1
3272-10	Pin - Cotter	9 2 5	353-800	O-Ring	5 19 1
3272-10	Pin - Cotter	3 34 5	353-819	Body - Coupler, Quick Disc.	1 30 2
3272-13	Pin - Cotter	3 12 1	353-820	Tip - Coupler, Quick Disc.	2 31 2
3272-19	Pin - Cotter	4 9 2	353-952	Seal - Backup	6 45 1
3272-24	Pin - Cotter	3 21 2	353-958	Washer - Backup	5 15 2
3272-24	Pin - Cotter	8 27 4	353-959	Plate - Retainer, Seal	5 14 2
3290-216	Washer - Tapered	7 4 12	353-976	Screw - Socket Head	5 11 2
3290-216	Washer - Tapered	3 9 10	353-988	Plug - Assembly	6 * 3
3290-216	Washer - Tapered	8 24 16			

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Reelmaster Transport Frame has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame. In any correspondence concerning the Reelmaster Transport Frame, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:
1. Model and serial number of the Reelmaster Transport Frame.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Control Tower & Linkage Assembly	1-2	Hydraulic Cylinder No. 22-7520	10
Main Frame Assembly	3	Hydraulic Cylinder No. 47-3720	10
Wheel & Tire Assembly	4	Lift Bail Assembly	11
Hydraulic Valve Assembly No. 63-8510	5-6	Jack Assembly No. 60-8900	12
Front Cross Channel Assembly	7	Hydraulic Schematic	13
Rear Cross Channel Assembly	8	TORO Part Number Index	14-15
Lift Arm Assemblies No. 4 & 5	9		