



Z300 Z Master[®] With 40in 7-Gauge Side Discharge Mower

Model No. 74409CP - 290000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Deck Connection Assembly 3	Caster Wheel and Height-of-Cut Assembly 12
Deck Assembly 4	Seat Assembly 13
Spindle Assembly No. 110-9963 5	Motion Control Assembly 14
Deck Decal Assembly No. 114-0518 6	Fuel Tank Assembly 15
Deflector Assembly No. 110-9917 7	Engine Mounting Assembly 16
Idler Assembly No. 112-3787 8	Hydraulic Drive Assembly 17
Brake Linkage Assembly 9	LH Transmission Assembly No. 109-5847 18
Front Frame Assembly 10	RH Transmission Assembly No. 109-5846 19
Frame Decal Assembly No. 114-3552 11	Electrical Assembly 20
		Attachments and Accessories List 21


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head


Footnotes

- ❶ Not illustrated
- ❷ Obtain from your local Kawasaki dealer
- ❸ Not serviced separately

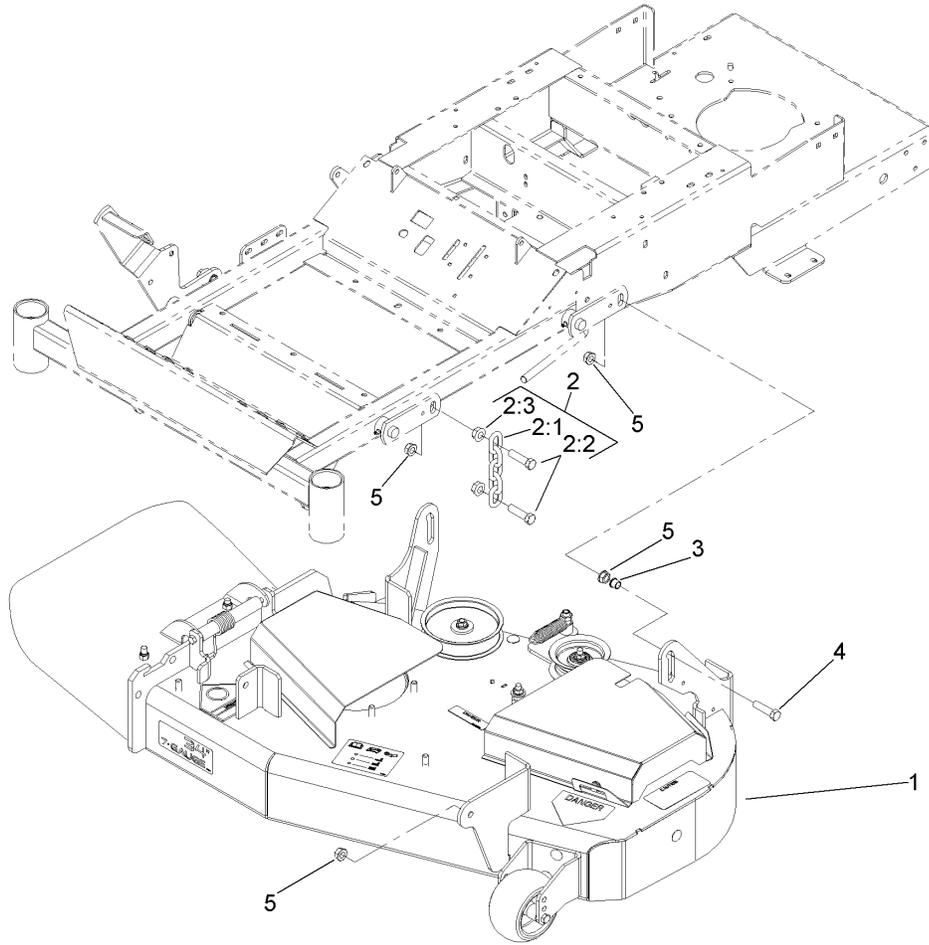

Deck Connection Assembly


Ref	Part No.	Qty.	Description				
①		1	Deck ASM				
2	103-9817	2	Deck Chain ASM				
2:1	1-633447	1	Chain-Lift, Deck				
2:2	103-1898	2	Screw-HH				
2:3	32128-37	2	Nut-HF				
3	104-9776	2	Bushing-Flanged				
4	103-1898	2	Screw-HH				
5	32128-37	8	Nut-HF				

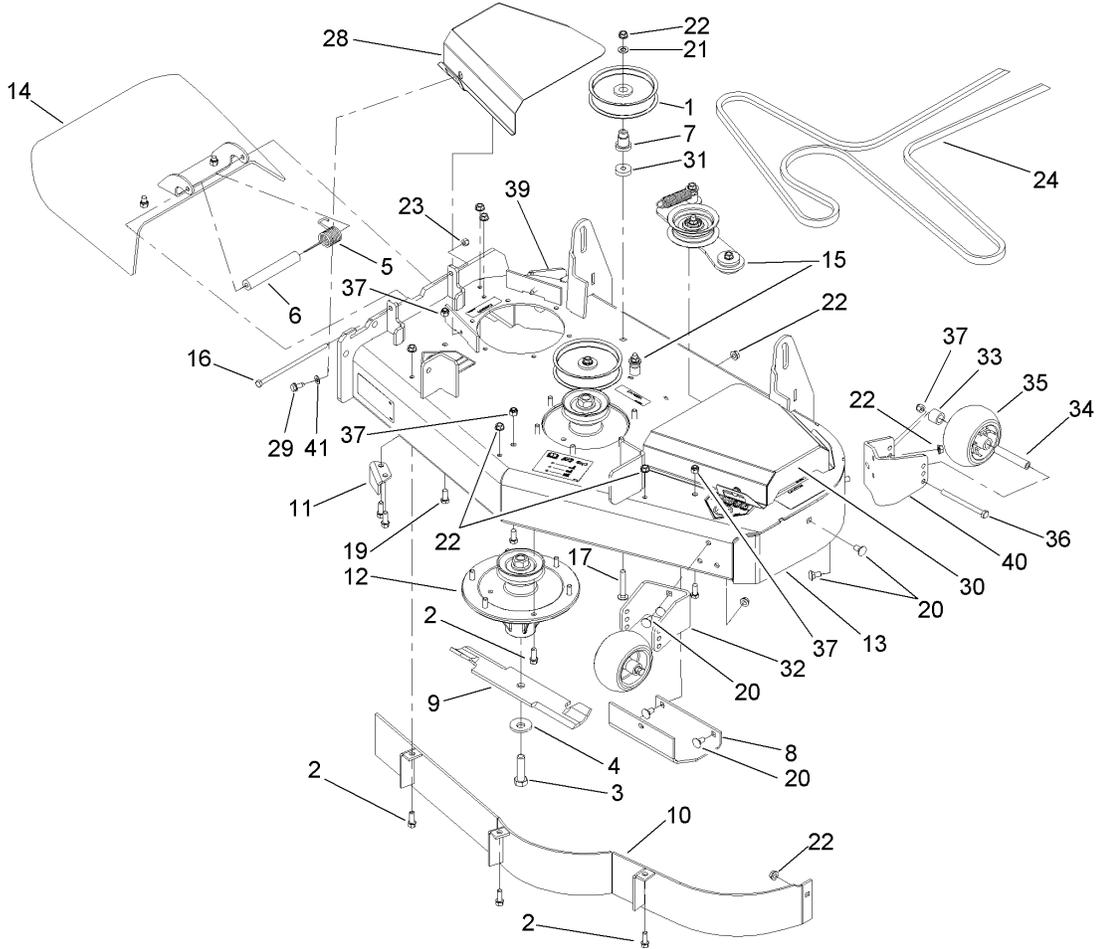

Deck Assembly


Ref	Part No.	Qty.	Description
1	1-613098	2	Pulley-Idler
2	92-1624	23	Screw-HWH
3	51-4060	3	Screw-Blade
4	103-0865	3	Washer-Blade Bolt, Heavy
5	108-4052	1	Spring-Torsion
6	105-4622	1	Spacer
7	106-3214	2	Mount-Pulley
8	107-3166-01	1	Skid
9	108-4081-03	3	Blade-14 Inch (High Sail)
10	108-7266-01	1	Baffle ASM
11	108-7273-01	1	Baffle-Discharge
12	110-9963	3	Spindle ASM
13	114-0518	1	Deck Decal ASM
14	110-9917	1	Deflector ASM
15	112-3787	1	Idler ASM
16	322-50	1	Screw-HH
17	3231-31	2	Screw-CARR
19	323-5	3	Screw-HH
20	3231-1	13	Screw-CARR
21	3256-24	2	Washer-Flat
22	3290-357	26	Nut-HHF, Whiz
23	3296-29	1	Nut-Lock, NI
24	114-0453	1	Belt-V
28	110-9959-01	1	Cover-RH

Ref	Part No.	Qty.	Description
29	32144-70	4	Screw-HWHTF
30	110-9982-01	1	Cover-LH
31	105-7788	2	Spacer
32	110-9946-01	1	Plate-Support, Wheel
33	98-7913	3	Tube-Spacer
34	98-7912	3	Tube-Spanner
35	1-603299	3	Roller-Scalp, Anti
36	323-23	3	Screw-HH
37	3296-39	6	Nut-Lock, NI
39	110-9991-01	1	Mount-Wheel, RH
40	110-9992-01	1	Mount-Wheel, LH
41	3256-23	4	Washer-Flat

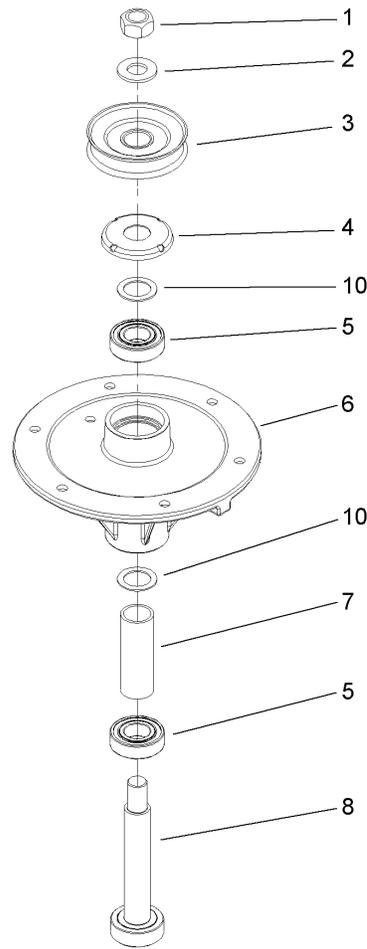

Spindle Assembly No. 110-9963


Ref	Part No.	Qty.	Description
1	3219-7	1	Nut-Hex
2	7-4150	1	Washer
3	110-9931	1	Pulley
4	106-3204	1	Shield-Bearing
5	104-6325	2	Bearing-Ball
6	108-6696	1	Housing-Spindle
7	107-8502	1	Spacer-Bearing
8	110-0726	1	Shaft-Spindle
10	10-8110	2	Washer-Thrust

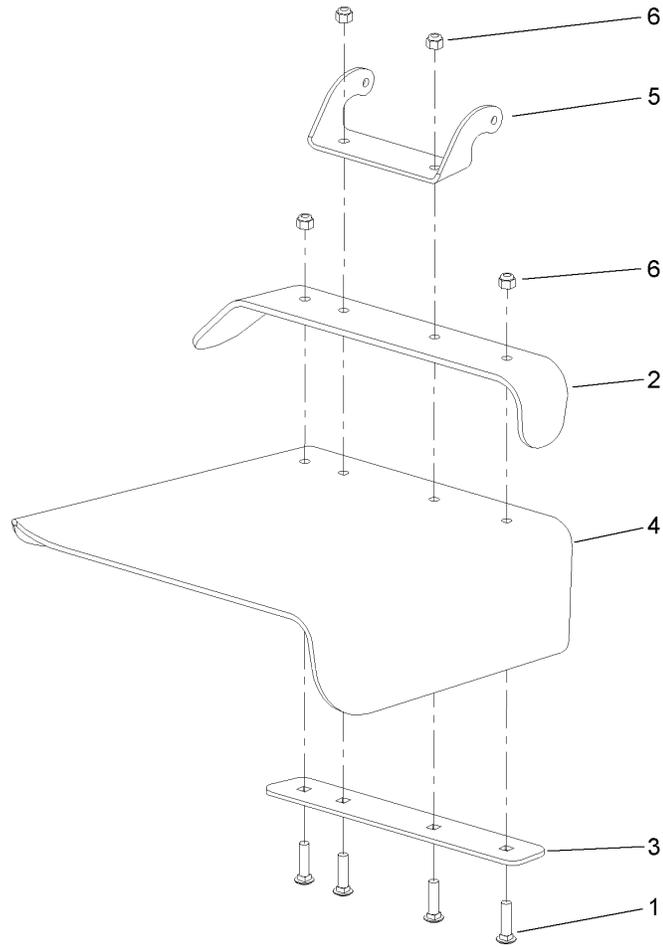

Deflector Assembly No. 110-9917

Ref	Part No.	Qty.	Description
1	3231-4	4	Screw-CARR
2	110-0792-01	1	Deflector
3	110-0793-03	1	Strap-Discharge
4	110-0791	1	Deflector-Rubber
5	110-9923-01	1	Bracket-Mounting, Deflector
6	3296-39	4	Nut-Lock, NI


--	--	--	--

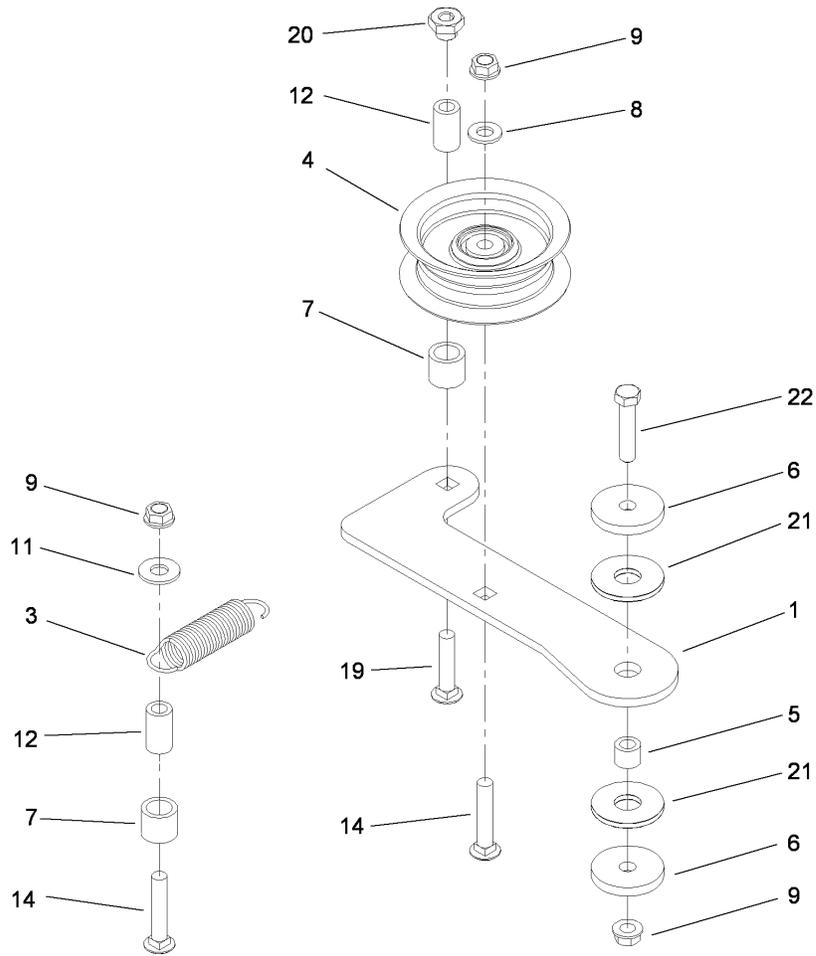

Idler Assembly No. 112-3787


Ref	Part No.	Qty.	Description
1	110-9996	1	Arm-Idler
3	108-4056	1	Spring-Extension
4	106-2175	1	Pulley-Idler, Flat
5	1-413088	1	Bushing-Lever, Lift
6	110-9981	2	Washer-Plain
7	108-4063	2	Spacer-Rubber
8	3256-24	1	Washer-Flat
9	3290-357	3	Nut-HHF, Whiz
11	3256-4	2	Washer-Flat
12	1-603401	3	Spacer-Fender
14	3231-6	2	Screw-CARR
19	3231-5	1	Screw-CARR
20	103-9933	1	Nut-Shoulder
21	114-0463	2	Washer-Friction, Composite
22	323-9	1	Screw-HH

--	--	--	--

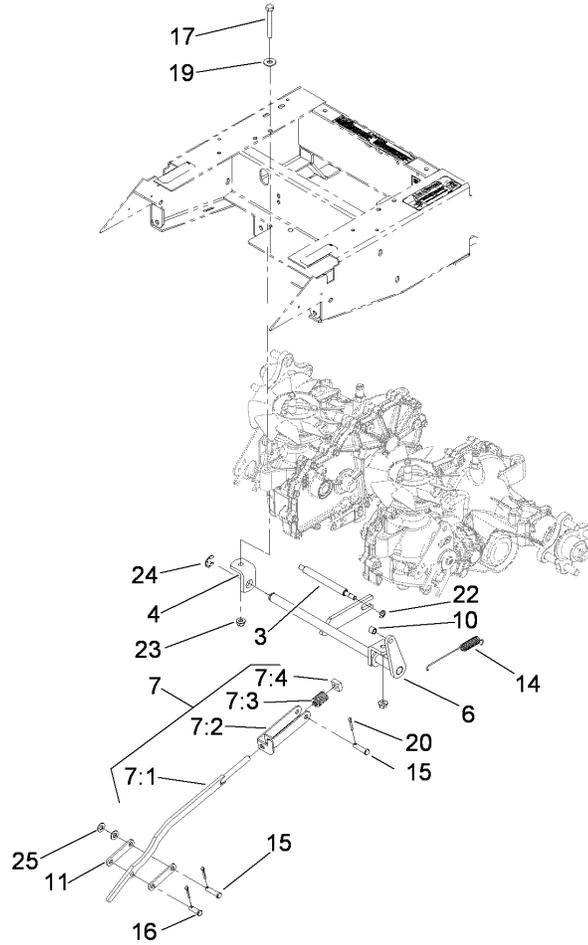

Brake Linkage Assembly


Ref	Part No.	Qty.	Description				
3	103-9408	1	Bar-Equalizer				
4	103-9409	1	Bracket-Pivot, Brake				
6	109-5376	1	Bellcrank-Brake				
7		1	Brake Link ASM				
7:1	109-5370	1	Link-Brake				
7:2	114-0548	1	Clevis-Brake				
7:3	103-9925	1	Spring-Brake				
7:4	103-9926	1	Nut-Square				
10	1-633545	1	Spacer				
11	109-0223	2	Link-Center, Over				
14	109-2861	1	Spring-Return, Brake				
15	283-6	2	Pin-Clevis				
16	283-75	1	Pin-Clevis				
17	322-12	2	Screw-HH				
19	3256-3	2	Washer-Flat				
20	3272-10	3	Pin-Cotter				
22	32120-35	1	Ring-Retaining, EXT				
23	104-8300	2	Nut-Flange, NI				
24	32120-19	1	E-Ring				
25	3256-23	2	Washer-Flat				

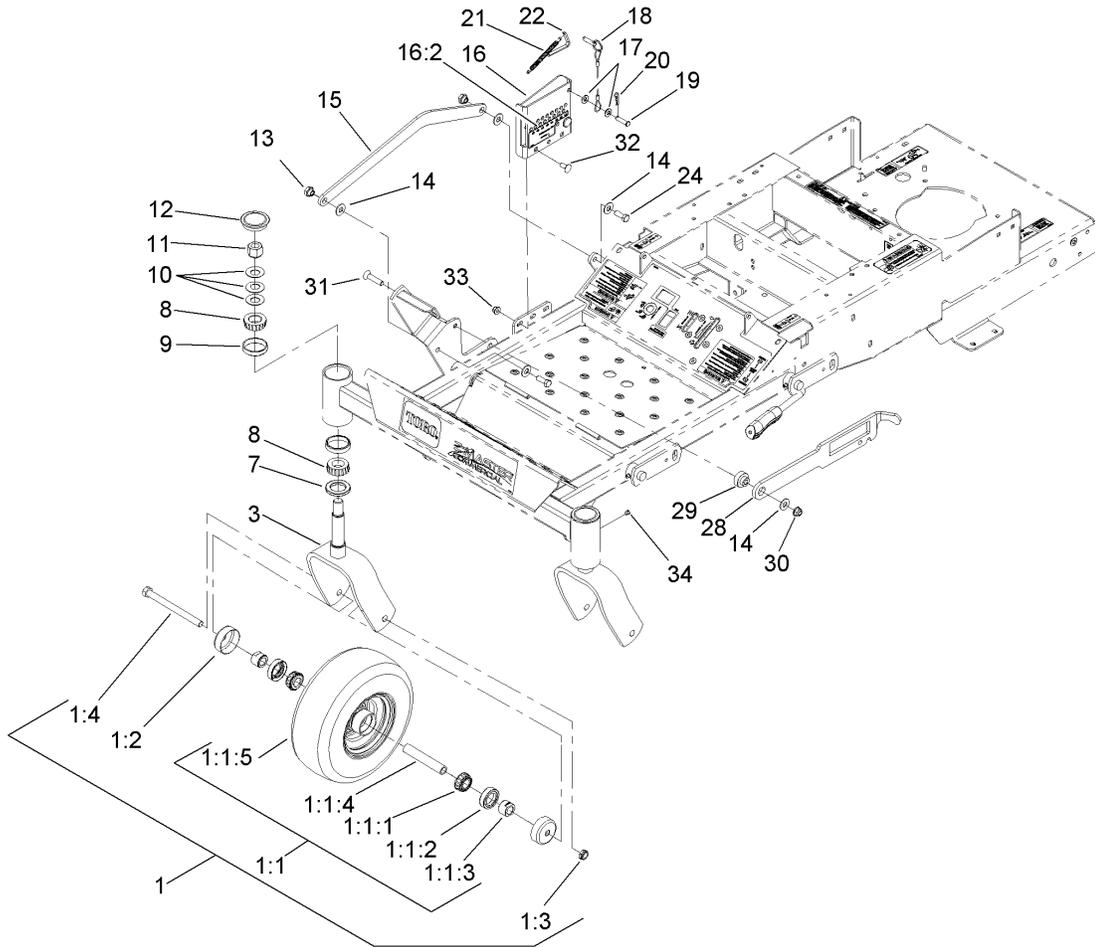

Caster Wheel and Height-of-Cut Assembly


Ref	Part No.	Qty.	Description
1	112-3810	2	Wheel And Bearing ASM
② 1:1		1	Wheel Bearing ASM
1:1:1	1-633585	2	Bearing-Cone, Taper
1:1:2	103-0063	2	Seal-Caster
1:1:3	103-3051	2	Spacer-Nut
1:1:4	103-3157	1	Axle-Caster
1:1:5	110-9965	1	Wheel And Tire ASM
1:2	103-2768	2	Guard-Seal
1:3	3296-45	1	Nut-Lock, NI
1:4	325-20	1	Screw-HH
3	103-8618-01	2	Fork-Caster
7	1-543511	2	Seal-Grease
8	1-543509	4	Bearing-Roller, Tapered
9	1-543508	4	Cup-Bearing
10	1-633508	6	Washer-Bellville
11	3296-51	2	Nut-Lock, NI
12	103-4882	2	Cap-Grease
13	103-9933	2	Nut-Shoulder
14	63-8410	5	Washer
15	103-9932	1	Link-Control, Deck
16	109-3544	1	Height Adjust ASM
16:2	109-2463	1	Decal-Height, Deck
17	1-303334	2	Washer-Spring
18	109-3323	1	Height Pin W/Lanyard ASM

Ref	Part No.	Qty.	Description
19	283-6	1	Pin-Clevis
20	1-806003	1	Pin-Hair
21	109-2416	1	Spring-Adjust, Height
22	109-2620	1	Pawl-Control, Height
24	323-6	2	Screw-HH
28	109-2410	1	Bar-Adjust, Height
29	103-9934	1	Bushing
30	104-8301	1	Nut-Flange, NI
31	3289-19	1	Screw-FH
32	3230-23	2	Screw-CARR
33	104-8300	2	Nut-Flange, NI
34	1-811010	2	Plug

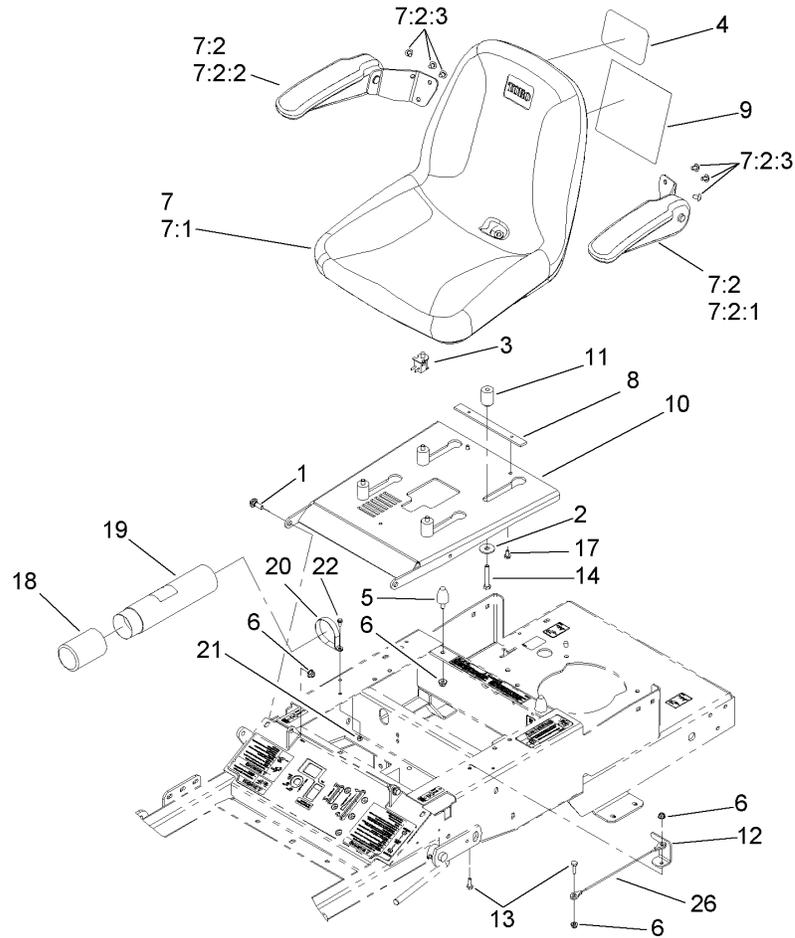

Seat Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	27-0410	2	Screw-Shoulder	22	3290-321	1	Screw-HWH
2	63-8410	4	Washer	26	109-2628	1	Cable-Stop, Seat
3	82-2190	1	Switch-Bail				
4	94-2579	1	Decal				
5	103-9376	2	Bumper-Seat				
6	104-8300	4	Nut-Flange, NI				
7	112-3845	1	Seat (With Arm Rests)				
7:1	112-3846	1	Seat				
7:2	108-6163	1	Armrest Kit				
7:2:1	110-6569	1	LH Armrest Kit				
7:2:2	110-6570	1	RH Armrest Kit				
7:2:3	108-6179	6	Screw-HSBH				
8	109-2427-03	1	Bar-Stop, Seat				
9	112-3836	1	Decal-Service				
10	109-2607-03	1	Bracket-Seat				
11	109-2608	4	Spacer				
12	114-0507	1	Bracket-Seat Holddown				
13	321-6	2	Screw-HH				
14	322-10	4	Screw-HH				
17	32144-4	2	Screw-HWH				
18	104-7048	1	Cap-Housing				
19	104-7050	1	Housing-Manual				
20	2412-120	1	R-Clamp				
21	3296-2	1	Nut-Lock, NI				

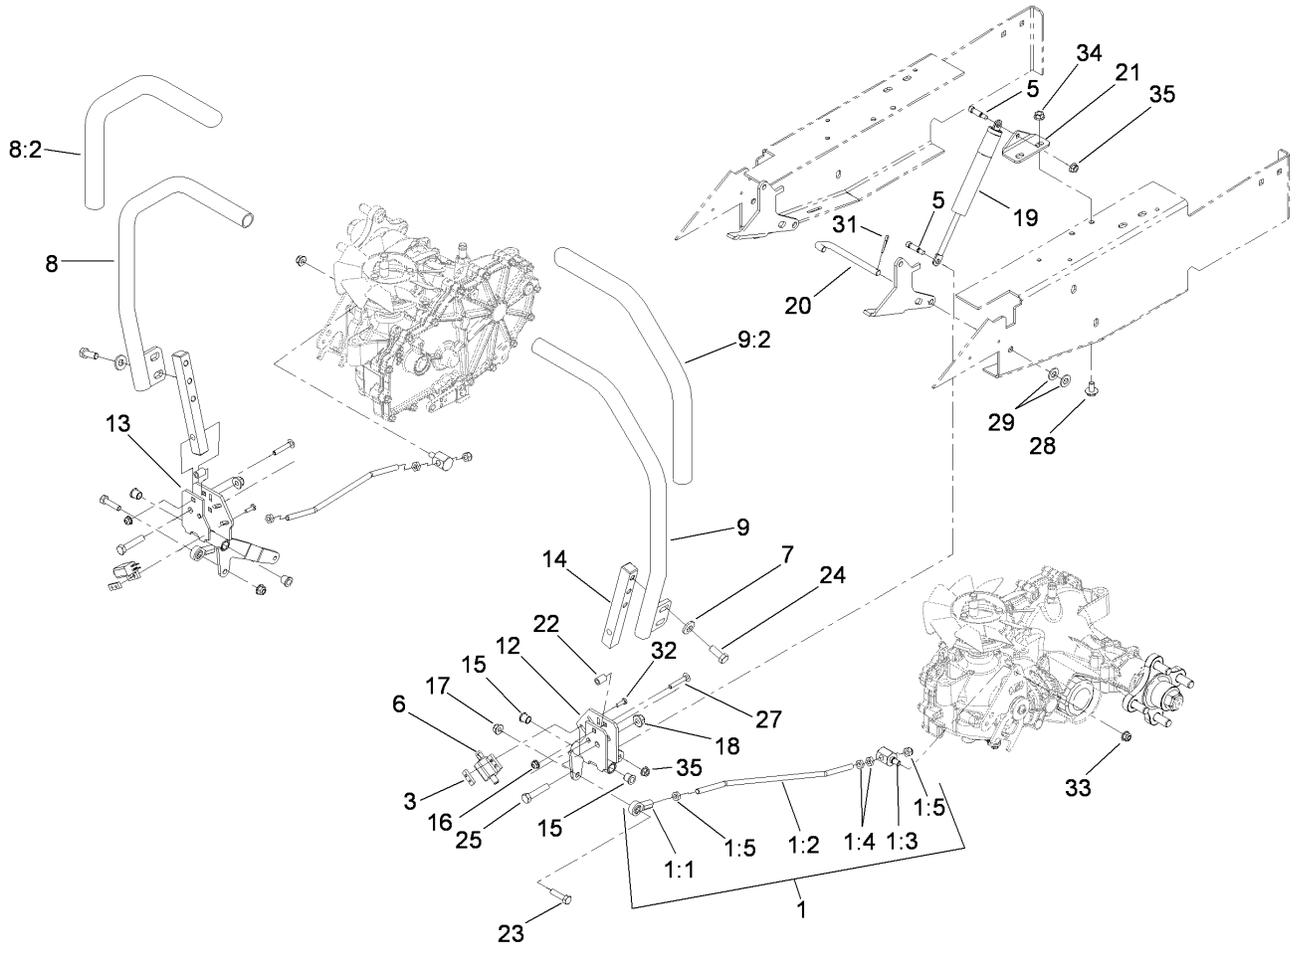

Motion Control Assembly

Ref	Part No.	Qty.	Description
1		2	Steering Rod ASM
1:1	1-543017	1	Balljoint-RH
1:2	103-9407	1	Rod-Steering, LH
1:3	103-9373	1	Trunnion
1:4	3220-2	3	Nut-Jam
1:5	3296-4	1	Nut-Lock
3	1-633181	2	Plate-Tapped
5	1-809057	4	Screw-HSH
6	65-7410	2	Switch-Pole, Single
7	98-5975	4	Washer-Belleville
8	112-3814	1	RH Control Lever ASM
8:2	108-5213	1	Grip-Foam
9	112-3815	1	LH Control Lever ASM
9:2	108-5213	1	Grip-Foam
12	103-9411	1	Control-Steering, RH
13	103-9413	1	Control-Steering, LH
14	103-9414	2	Mount-Post, Lever
15	103-9928	4	Bearing
16	104-7201	4	Nut-HF
17	104-8300	2	Nut-Flange, NI
18	104-8301	2	Nut-Flange, NI
19	109-2339	2	Damper-Control, Motion
20	109-2423	2	Shaft-Pivot, Control
21	109-2428	2	Bracket-Damper


Ref	Part No.	Qty.	Description
22	1-633545	4	Spacer
23	322-6	2	Screw-HH
24	323-6	4	Screw-HH
25	323-9	2	Screw-HH
27	3229-4	4	Screw-CARR
28	3234-7	4	Screw-HHF
29	3256-24	2	Washer-Flat
31	3272-10	2	Pin-Cotter
32	3290-500	4	Screw-PPH
33	104-8300	2	Nut-Flange, NI
34	32128-20	4	Nut-HF
35	32128-33	4	Nut-HF

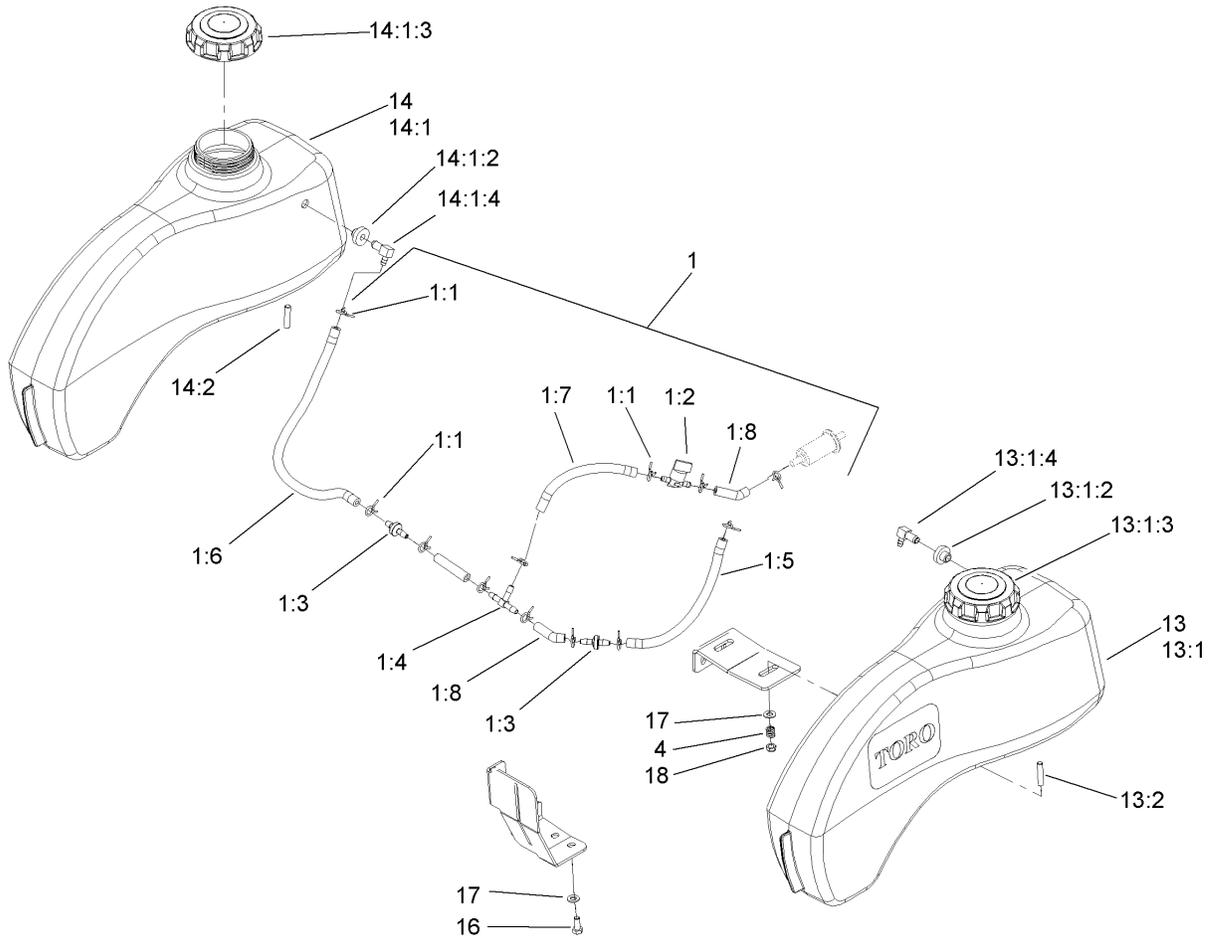

Fuel Tank Assembly

Ref	Part No.	Qty.	Description
1		1	Fuel Line ASM
1:1	1-303077	12	Clamp
1:2	1-603770	1	Valve-Fuel
1:3	99-5000	2	Valve-Check, Fuel
1:4	99-5005	1	Fitting-Tee, Barbed
1:5	107-7684	1	Hose-Fuel
1:6	108-4582	1	Hose-Fuel
1:7	109-0293	1	Hose-Fuel
1:8	109-0304	3	Hose-Fuel
4	1-633349	4	Spring-Tank, Fuel
13	112-3780	1	LH Tank ASM (W/Studs)
13:1		1	LH Tank ASM
13:1:2	104-7789	1	Bushing
13:1:3	109-0346	1	Cap-Fuel, Gas
13:1:4	109-2420	1	Fitting-Fuel (W/Line And Screen)
13:2	1-633023	2	Stud
14	112-3783	1	RH Tank ASM (W/Studs)
14:1		1	RH Tank ASM
14:1:2	104-7789	1	Bushing
14:1:3	109-0346	1	Cap-Fuel, Gas
14:1:4	109-2420	1	Fitting-Fuel (W/Line And Screen)
14:2	1-633023	2	Stud
16	322-3	2	Screw-HH
17	3256-23	6	Washer-Flat


Ref	Part No.	Qty.	Description
18	3296-47	4	Nut-Lock, NI

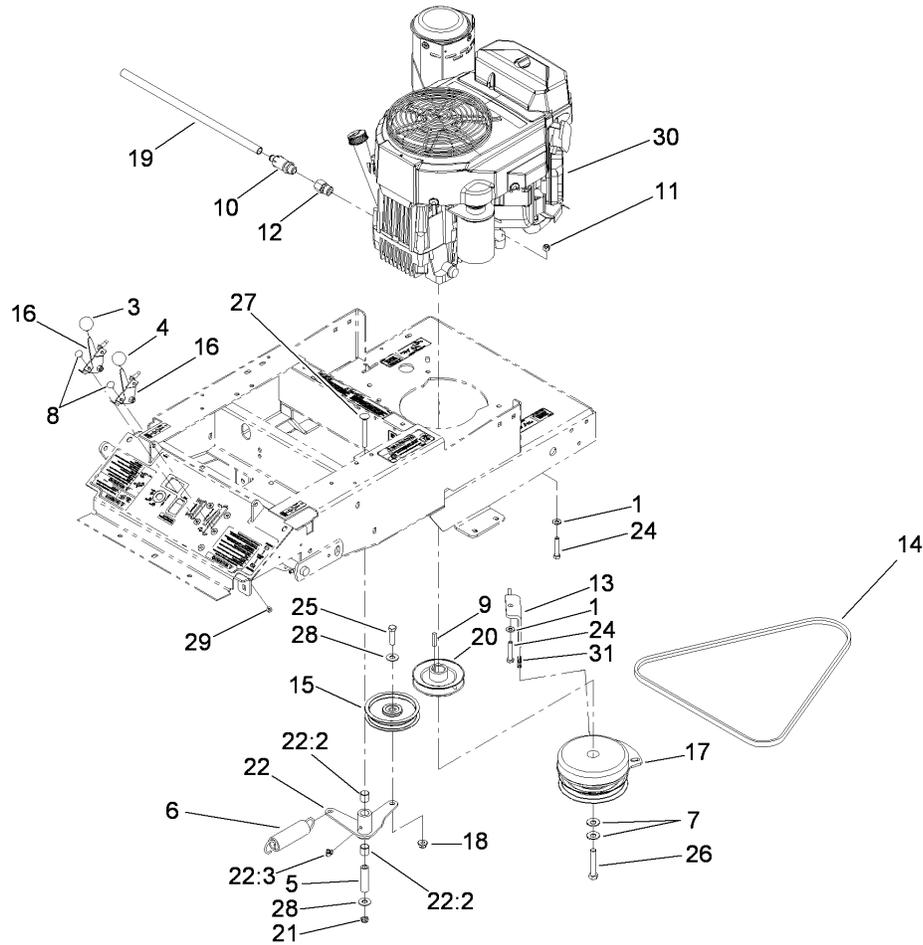

Engine Mounting Assembly

Ref	Part No.	Qty.	Description
1	1-303334	4	Washer-Spring
3	1-513592	1	Knob-Ball
4	1-513593	1	Knob-Ball, Black
5	1-603384	1	Bushing-Pivot, Idler
6	108-4056	1	Spring-Extension
7	1-603610	2	Washer-Spring
8	1-807513	4	Bolt-CARR
9	13-2840	1	Key-Square
10	92-6877	1	Valve-Drain, Oil
11	3296-29	4	Nut-Lock, NI
12	103-1966	1	Adapter
13	103-9356-03	1	Rotation-Stop, Clutch
14	112-3799	1	Belt-V
15	103-9401	1	Idler
16	103-9946	2	Throttle Control ASM
17	103-9950	1	Clutch
18	104-8301	1	Nut-Flange, NI
19	106-7022	1	Tube-Drain, Oil
20	109-0393	1	Pulley-Engine
21	3296-59	1	Nut-Lock, NI
22	109-3119	1	Idler Hydro ASM
22:2	1-513034	2	Sleeve-Bearing
22:3	302-40	1	Fitting-Grease
24	322-9	4	Screw-HH


Ref	Part No.	Qty.	Description
25	323-8	1	Screw-HH
26	3212-10	1	Screw-HH
27	3231-10	1	Screw-CARR
28	3256-4	2	Washer-Flat
29	3296-2	4	Nut-Lock, NI
30		1	Engine-Kawasaki, FH580V
31	109-3765	1	Bumper

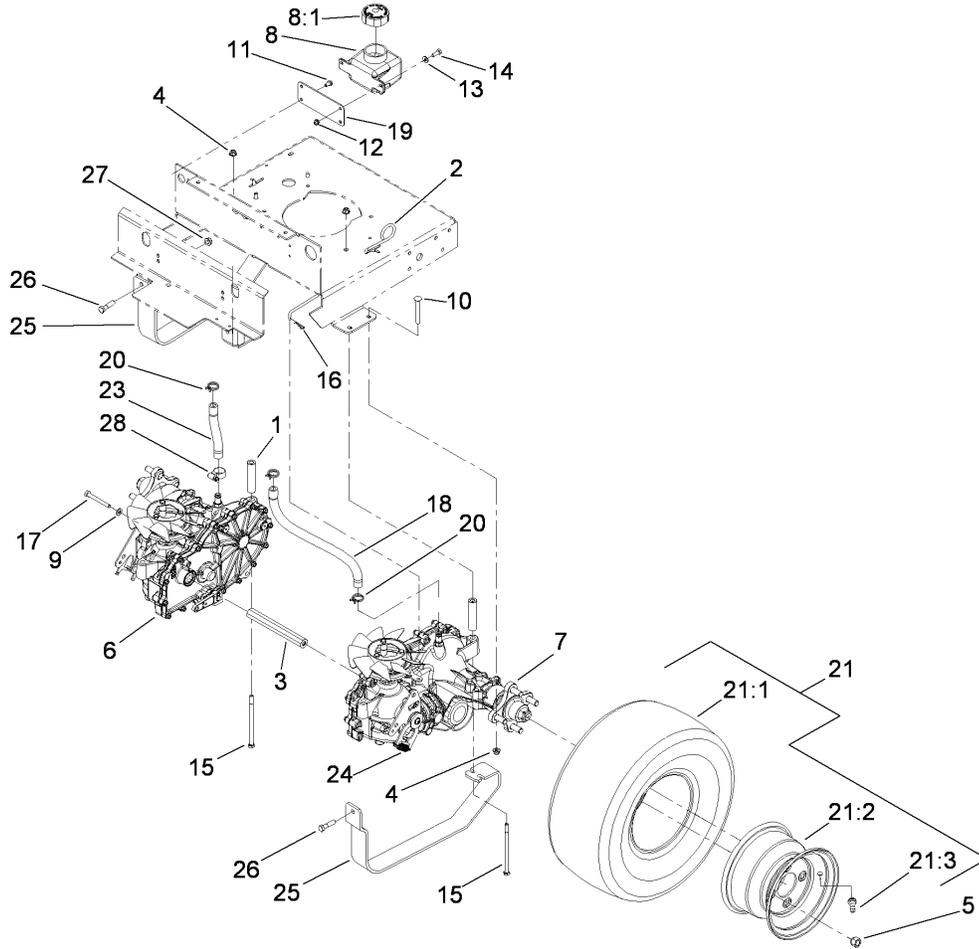

Hydraulic Drive Assembly

Ref	Part No.	Qty.	Description
1	103-9397	2	Spacer-Hydro
2	103-9380	2	Rod-Bypass, Hydro
3	103-9398	1	Spacer-Axle
4	104-8300	6	Nut-Flange, NI
5	242-50	8	Nut-Lug
6	109-5846	1	Transmission-RH
7	109-5847	1	Transmission-LH
8	109-2250	1	Vent-Tank, Hydro
8:1	109-3320	1	Cap-Reservoir, Hydraulic
9	98-5975	2	Washer-Belleville
10	3230-9	4	Screw-CARR
11	32144-4	2	Screw-HWH
12	104-7201	2	Nut-HF
13	3256-22	2	Washer-Flat
14	321-4	2	Screw-HH
15	1-800286	2	Screw-HH
16	1-806003	2	Pin-Hair
17	323-11	2	Screw-HH
18	109-3459	1	Hose-HYD
19	103-9350-03	1	Plate-Mount, Tank
20	109-3322	3	Clamp-Hose
21	112-3795	2	Wheel And Tire
21:1	112-3798	1	Tire
21:2	217-60	1	Rim


Ref	Part No.	Qty.	Description
21:3	232-27	1	Stem-Valve
●21:99	232-37	1	Tube
23	109-3319	1	Hose-HYD
24	109-2631	2	Spring-Return, Neutral
25	114-0469-03	2	Guard-Transmission
26	323-8	2	Screw-HH
27	3290-357	2	Nut-HHF, Whiz
28	109-6801	1	Clamp-Hose

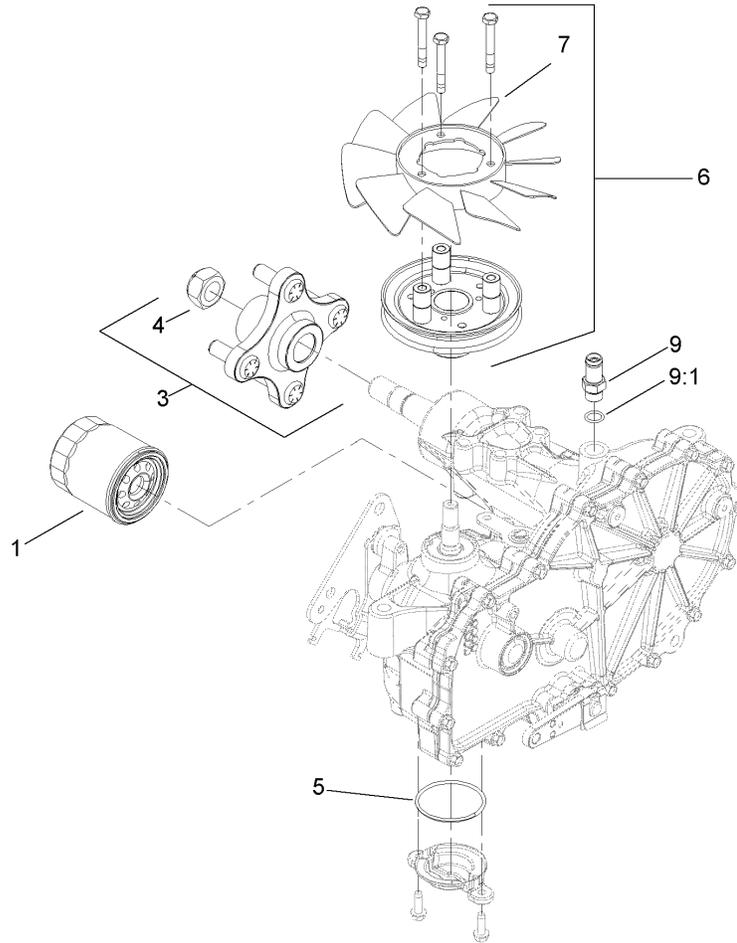

RH Transmission Assembly No. 109-5846

Ref	Part No.	Qty.	Description
1	109-3321	1	Element-Oil Filter, HYD
①2	109-3537	1	Complete Seal Kit
3	109-3538	1	Hub-Kit
4	109-3536	1	Nut-Hub
5	109-3540	1	O-Ring-Seal
6	109-3541	1	Fan And Pulley Kit
7	109-3542	1	Fan
9	109-3278	1	Adapter-Straight
9:1	1-603921	1	O-Ring

--	--	--	--

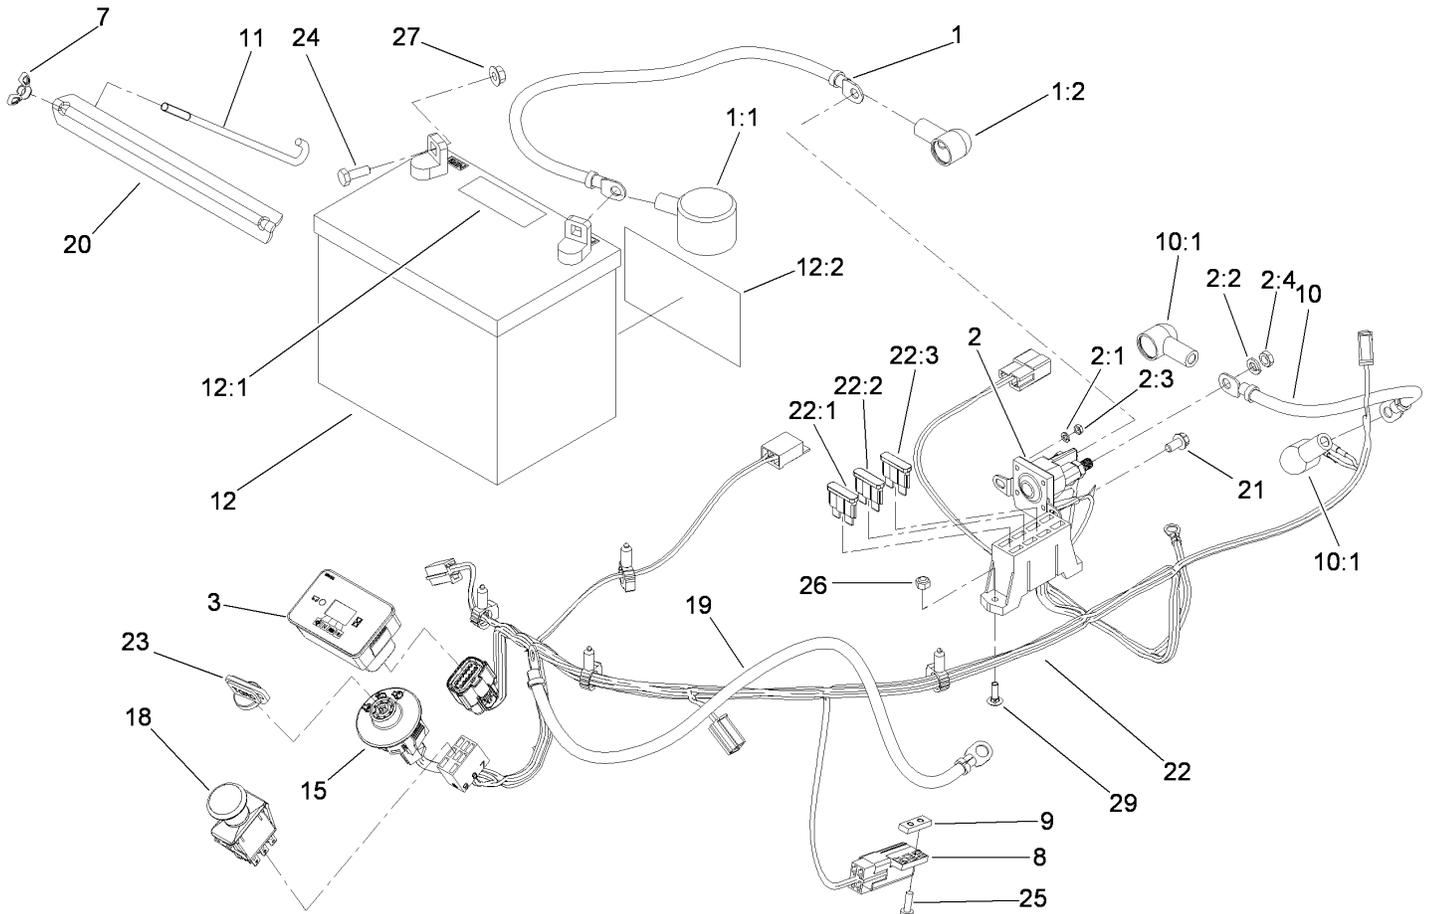

Electrical Assembly

Ref	Part No.	Qty.	Description
1	109-7653	1	Positive Battery Cable ASM
1:1	109-2407	1	Insulator-Battery
1:2	1-543393	1	Insulator-Solenoid
2	1-513075	1	Switch-Solenoid
2:1	3253-17	2	Washer-Lock
2:2	3253-4	2	Washer-Lock
2:3	3219-14	2	Nut-Hex
2:4	3220-2	2	Nut-Jam
3	112-8650	1	Hour Meter ASM
7	1-543792	2	Wingnut
8	1-633111	1	Switch
9	1-633181	1	Plate-Tapped
10	109-7620	1	Positive Starter Cable ASM
10:1	1-543393	2	Insulator-Solenoid
11	1-633651	2	Bolt-Holddown
12	105-1692	1	Battery
12:1	104-4163	1	Decal-Battery
12:2	104-4164	1	Decal-Battery
15	116-0229	1	Switch-Ignition
18	103-5221	1	Switch-PTO
19	103-8355	1	Cable-Battery, Negative
20	103-9944-03	1	Angle-Battery
21	32144-4	2	Screw-HWH
22	114-3515	1	Harness-Wire

Ref	Part No.	Qty.	Description
22:1	109103	1	Fuse-30 Amp
22:2	109102	2	Fuse-25 Amp
22:3	218-578	1	Fuse-10 Amp
23	63-8360	1	Key-Ignition
24	321-4	2	Screw-HH
25	3290-500	2	Screw-PPH
26	3296-2	2	Nut-Lock, NI
27	32128-33	2	Nut-HF
29	1-807533	2	Bolt-CARR

Attachments and Accessories

For 74409CP - Z300 Z Master, With 40in 7-Gauge Side Discharge Mower

Product Name	Model/Part
40 Inch Recycler Kit	110-2070
Blade-Recycler, 14 Inch (6-pack)	114-4961
Blade-Low Flow, 14inch (6-pack)	114-4962
Blade-Mid Flow, 14 Inch (6-pack)	114-4963
Blade-High Flow, 14 Inch (6-pack)	114-4964
Blade-Atomic, 14 Inch (6-pack)	114-4965
Chute Gate Kit	78520

NOTES

NOTES

