



21in Commercial Lawn Mower

Model No. 22156 - 290000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Front End and Tunnel Assembly	 3	Camshaft Pulley Assembly Honda GSV190LA A3T	 14
Wheel Assembly No. 117-5252	 4	Recoil Starter Assembly Honda GSV190LA A3T	 15
Discharge Door and Rear Wheel Assembly	 5	Fan Cover Assembly Honda GSV190LA A3T	 16
Wheel Assembly No. 117-5253	 6	Carburetor Assembly Honda GSV190LA A3T	 17
Engine and Blade Assembly	 7	Air Cleaner Assembly Honda GSV190LA A3T	 18
Handle Assembly	 8	Muffler Assembly Honda GSV190LA A3T	 19
Rear Bag Assembly	 9	Fuel Tank Assembly Honda GSV190LA A3T	 20
Cylinder Barrel Assembly Honda GSV190LA A3T	 10	Flywheel Assembly Honda GSV190LA A3T	 21
Oil Pan Assembly Honda GSV190LA A3T	 11	Control Assembly Honda GSV190LA A3T	 22
Crankshaft Assembly Honda GSV190LA A3T	 12	Label Assembly Honda GSV190LA A3T	 23
Piston and Connecting Rod Assembly Honda GSV190LA A3T	 13		

Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


❶ Not serviced separately

❷ Obtain from your local Honda dealer

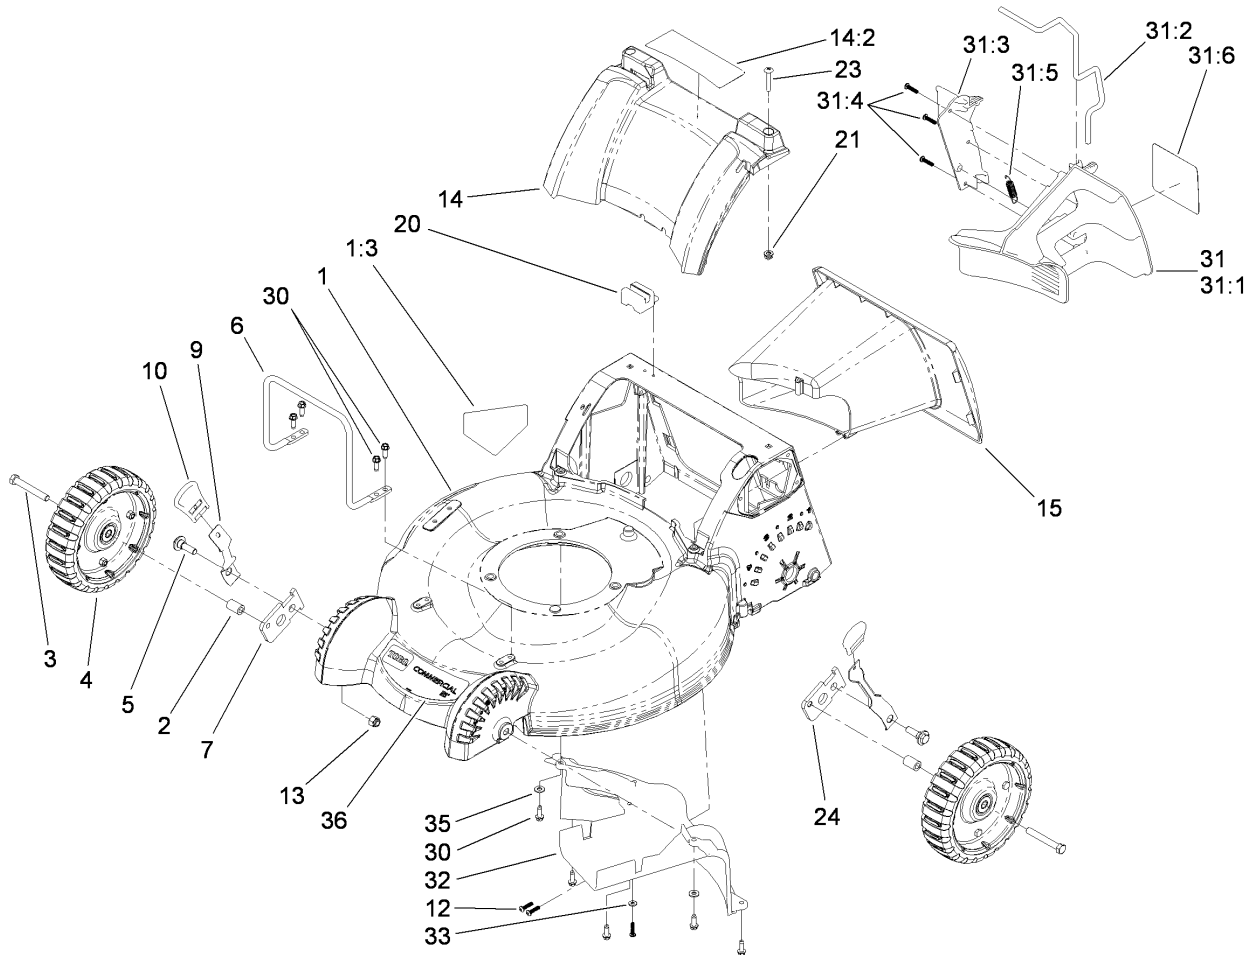


Front End and Tunnel Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	117-5266	1	Housing Assembly	31:4	108-7476	3	Screw-Plastite
1:3	94-8072	1	Decal-Danger	31:5	110-9458	1	Spring-Extension
2	114-2754	2	Spacer	31:6	110-9457	1	Decal-Plug, Mulch
3	323-13	2	Screw-HH	32	110-9413	1	Baffle-Rear
4	117-5252	2	8 Inch Wheel ASM	33	3256-14	1	Washer-Flat
5	614672	2	Bolt-Shoulder	35	3256-22	2	Washer-Flat
6	110-9475-03	1	Guard-Engine	36	117-5247	1	Decal-Housing, Front
7	110-9421	1	Arm-Pivot, RH				
9	110-9434	2	Arm-Spring, Front				
10	110-0549	2	Knob-HOC				
12	108-7476	6	Screw-Plastite				
13	3296-39	2	Nut-Lock, NI				
14	115-3177	1	Cover-Rear				
14:2	114-2820	1	Decal-Warning				
15	110-9455	1	Tunnel				
20	110-1786	1	Module-Switch				
21	94-1610	2	Nut-Clip				
23	108-0965	2	Screw-PTH				
24	110-9420	1	Arm-Pivot, LH				
30	49-2040	9	Screw-HWHTF				
31	110-9468	1	Mulch Plug ASM				
31:1	110-9446	1	Plug-Mulch, LH				
31:2	110-9448	1	Latch-Plug, Mulch				
31:3	110-9447	1	Plug-Mulch, RH				

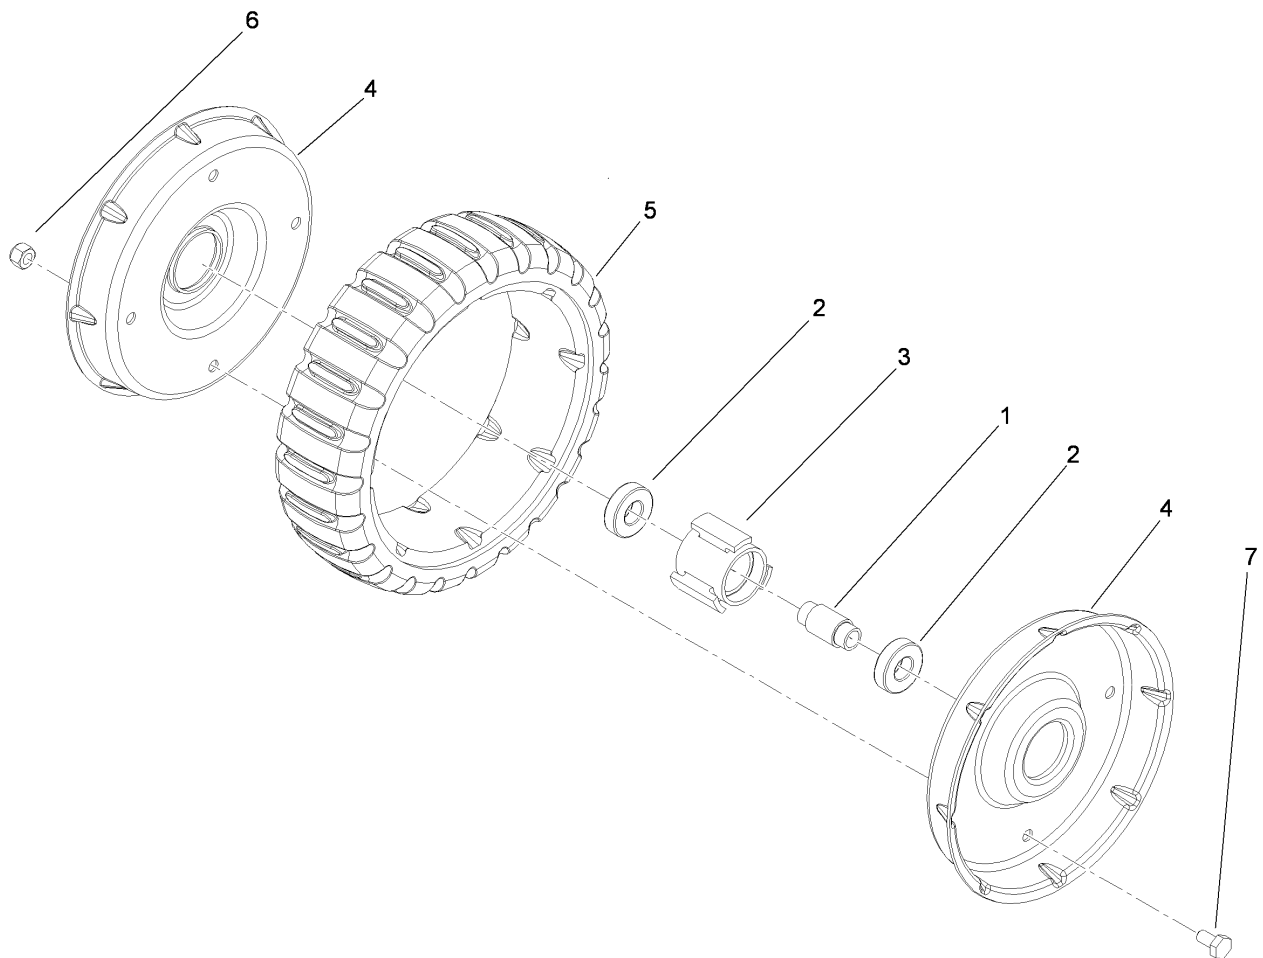

Wheel Assembly No. 117-5252


Ref	Part No.	Qty.	Description
1	52-2440	1	Spacer-Bearing
2	52-2450	2	Bearing-Wheel
3	52-2410	1	Hub-Bearing
4	117-5250	2	Wheel-Half
5	110-9499	1	Tire-8 Inch
6	3296-42	4	Nut-Lock, NI
7	321-2	4	Screw-HH

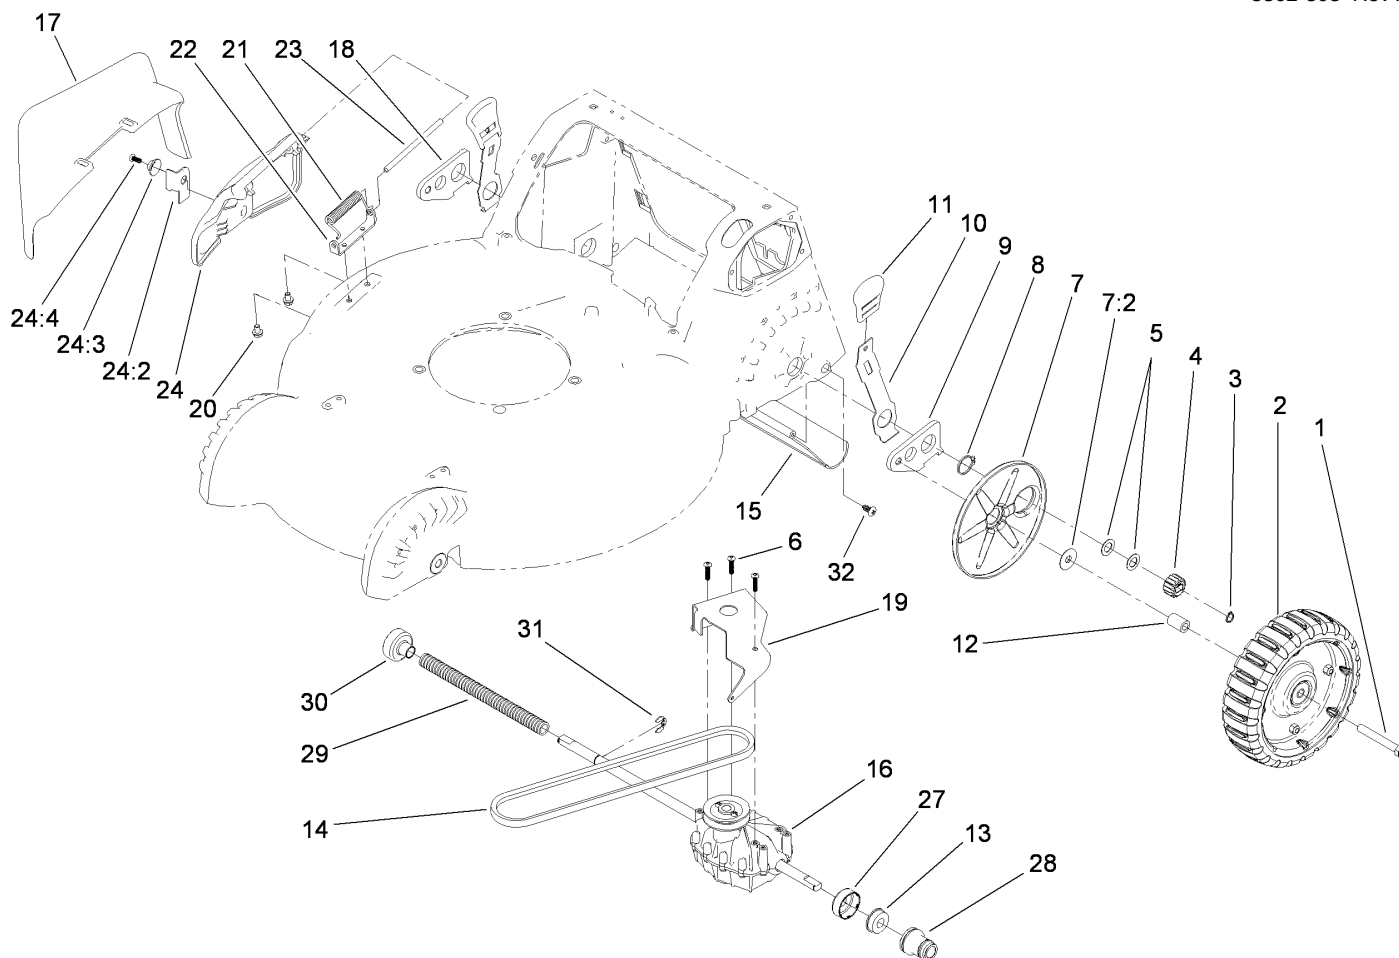

Discharge Door and Rear Wheel Assembly


Ref	Part No.	Qty.	Description
1	323-13	2	Screw-HH
2	117-5253	2	8-Inch Wheel ASM
3	32151-61	2	Ring-Retaining
4	110-9417	2	Pinion
5	36-4780	2	Washer-Plain
6	108-7476	3	Screw-Plastite
7	110-1792	2	Wheel Cover ASM
7:2	614426	1	Washer-Stepped
8	32151-36	2	Ring-Retaining
9	108-9344	1	Arm-Rear Pivot, LH
10	110-9445	2	Arm-Spring, Rear
11	110-0549	2	Knob-HOC
12	114-2754	2	Spacer
13	104-8699	2	Bearing-Ball
14	110-9429	1	V-Belt
15	112-8768	1	Shield-Trailing
16	114-2819	1	Transmission
17	105-3028	1	Chute-Discharge, Side
18	108-9343	1	Arm-Rear Pivot, RH
19	114-7977-03	1	Bracket-Transmission
20	99-8445	2	Screw-HWH
21	99-5293	1	Spring-Torsion
22	112-6416	1	Bracket-Cover
23	99-5291	1	Rod-Cover

Ref	Part No.	Qty.	Description
24	106-8376	1	Discharge Door ASM
24:2	107-0795	1	Latch-Door
24:3	107-7456	1	Cap-Door
24:4	107-7461	1	Screw-Plastite
27	117-5268	1	Cover-Bearing
28	110-9422	2	Retainer-Bearing
29	117-5260	1	Cover-Shaft, Drive
30	114-2755	1	Cap-Bearing
31	65-2720	1	Ring-Clip, Locking
32	117-1092	2	Screw-PTH

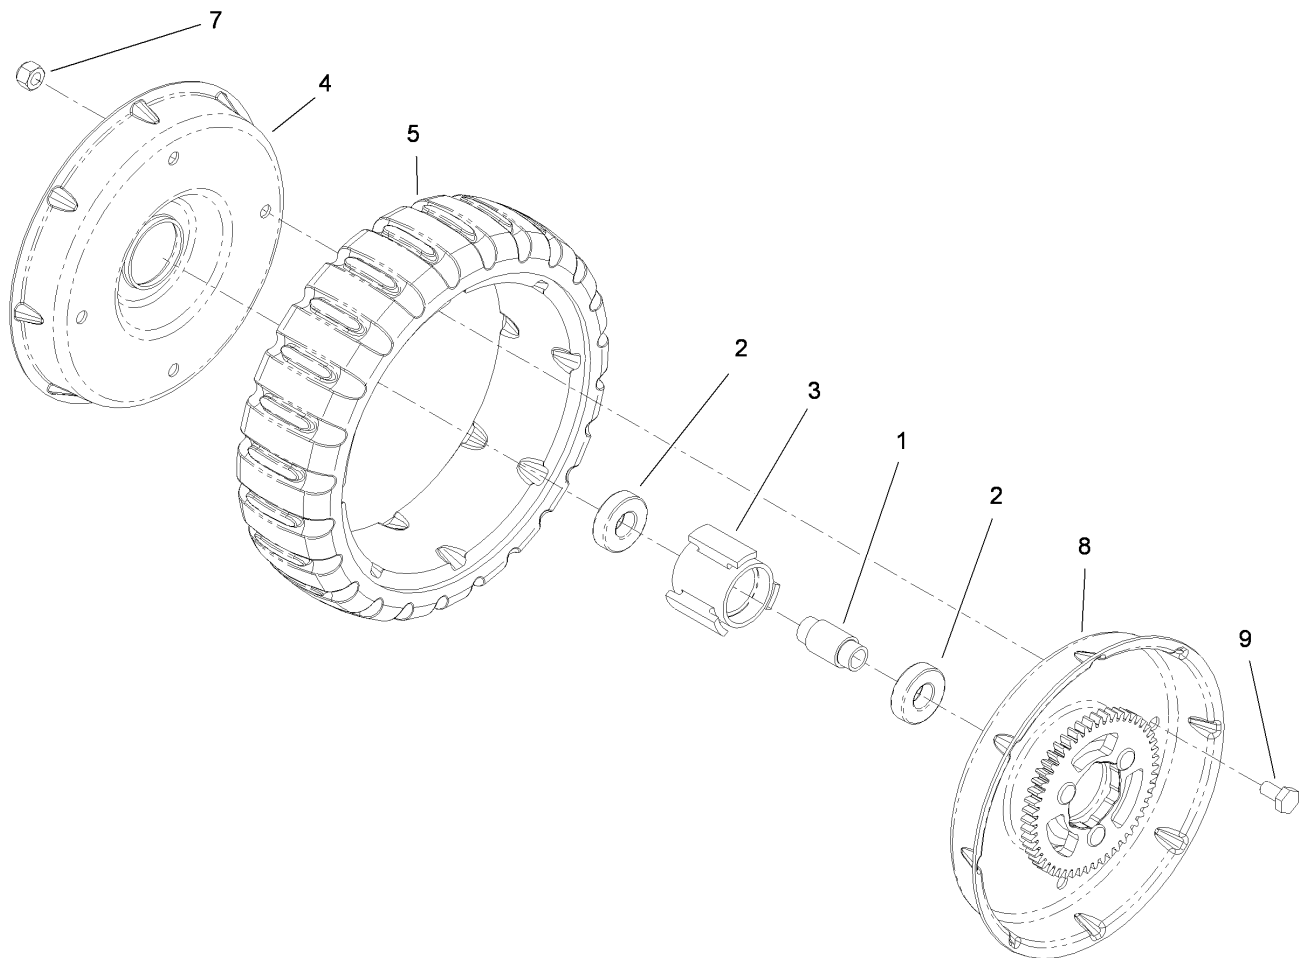


Wheel Assembly No. 117-5253

Ref	Part No.	Qty.	Description				
1	52-2440	1	Spacer-Bearing				
2	52-2450	2	Bearing-Wheel				
3	52-2410	1	Hub-Bearing				
4	117-5250	1	Wheel-Half				
5	110-9499	1	Tire-8 Inch				
7	3296-42	4	Nut-Lock, NI				
8	117-5251	1	Hub Gear ASM				
9	321-2	4	Screw-HH				

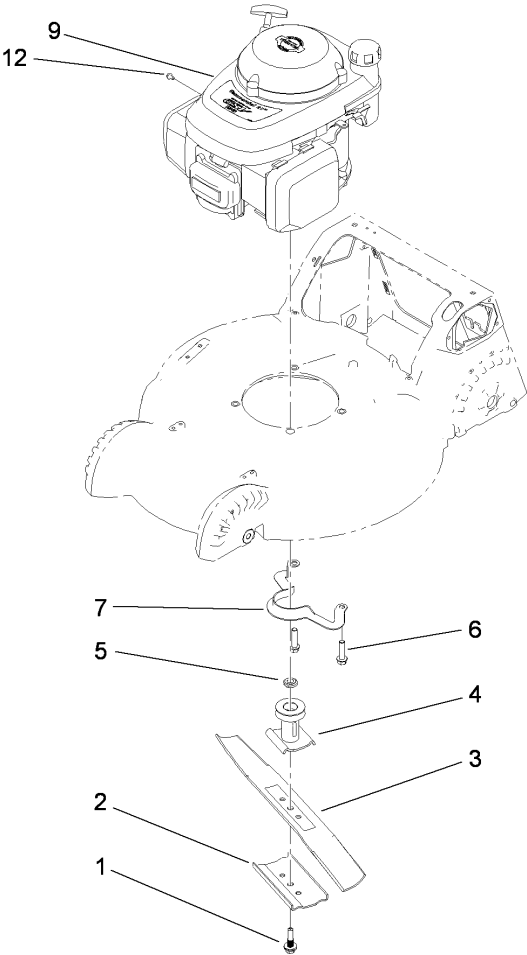

Engine and Blade Assembly


Ref	Part No.	Qty.	Description				
1	117-5270	1	Bolt-Blade				
2	108-3766-03	1	Support-Blade				
3	108-3759-03	1	Blade-Bagging				
4	114-2774	1	Driver-Blade				
5	106-3999	1	Spacer-Driver				
6	32144-102	3	Screw-HWH				
7	108-8110-03	1	Guide-Belt				
9		1	Engine-Honda, Gsv190La A3T				
12	98-1394	1	Screw-HWH				

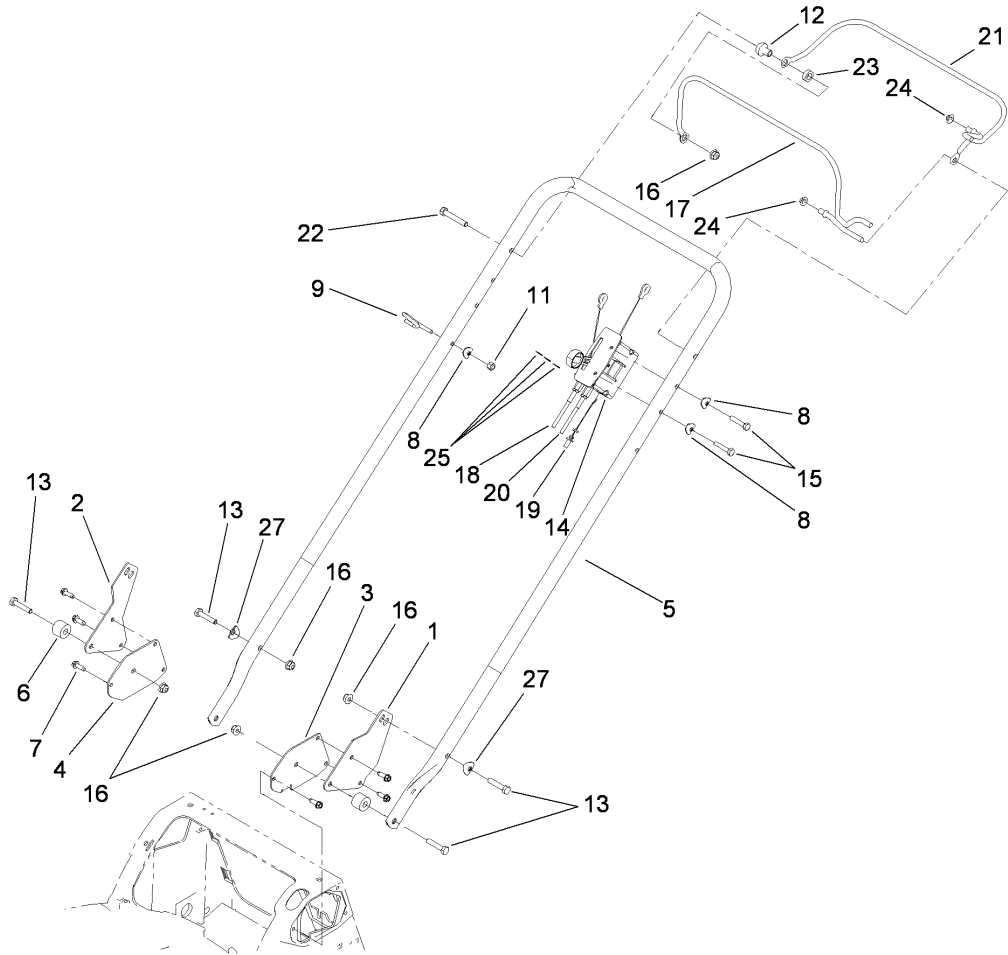


Handle Assembly

Ref	Part No.	Qty.	Description
1	110-9494-03	1	Support-Strut, LH
2	110-9495-03	1	Support-Strut, RH
3	114-2760-03	1	Plate-Handle, Traction
4	110-9471-03	1	Plate-Handle
5	107-4162-03	1	Handle
6	112-8797-03	2	Spacer
7	49-2040	6	Screw-HWHTF
8	3-7501	3	Washer
9	114-2775	1	Guide-Rope
11	3296-42	1	Nut-Lock, NI
12	49-1630	1	Spacer-Support
13	322-7	4	Screw-HH
14	108-2645	1	Control-Head, Throttle
15	321-13	2	Screw-HH
16	104-8300	5	Nut-Flange, NI
17	114-2768-03	1	Bail-Brake
18	114-2771	1	Cable-Brake
19	110-4923	1	Throttle Cable ASM
20	115-3170	1	Cable-Traction
21	114-2769-03	1	Bail-Traction
22	322-10	1	Screw-HH
23	256-276	1	Spacer-Nylon
24	109-0917	2	Nut-Push
25	32151-86	3	E-Ring

Ref	Part No.	Qty.	Description
27	107-3844	2	Washer

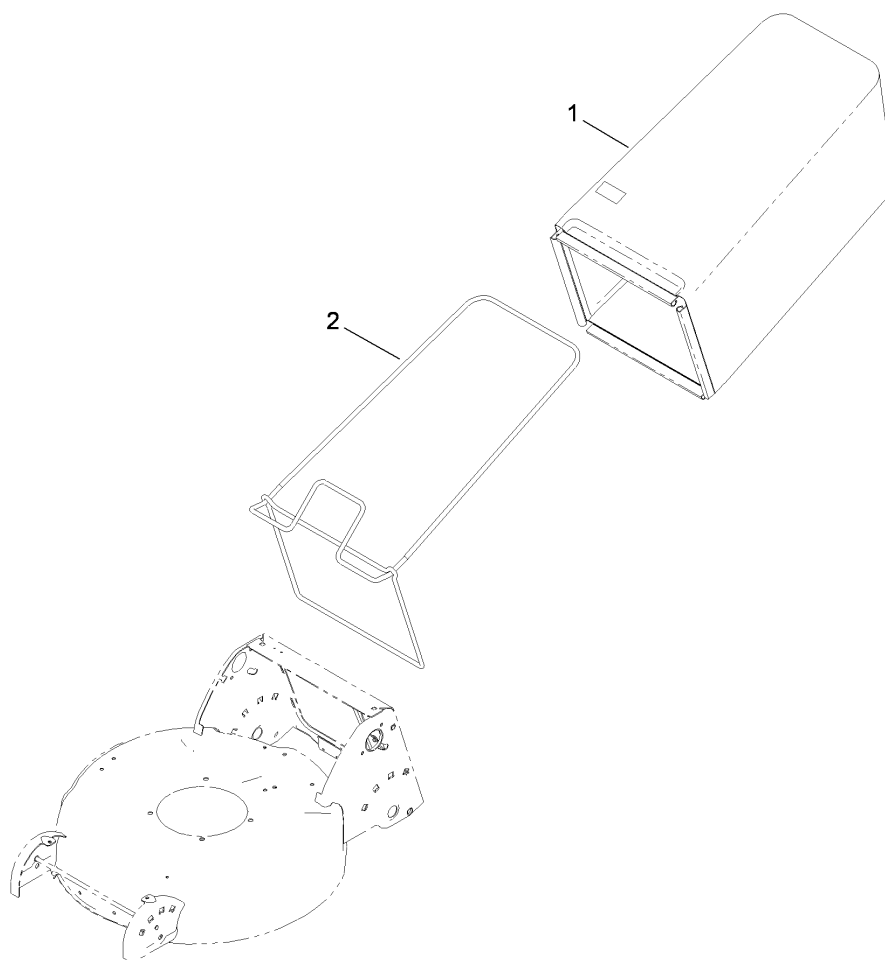


Rear Bag Assembly

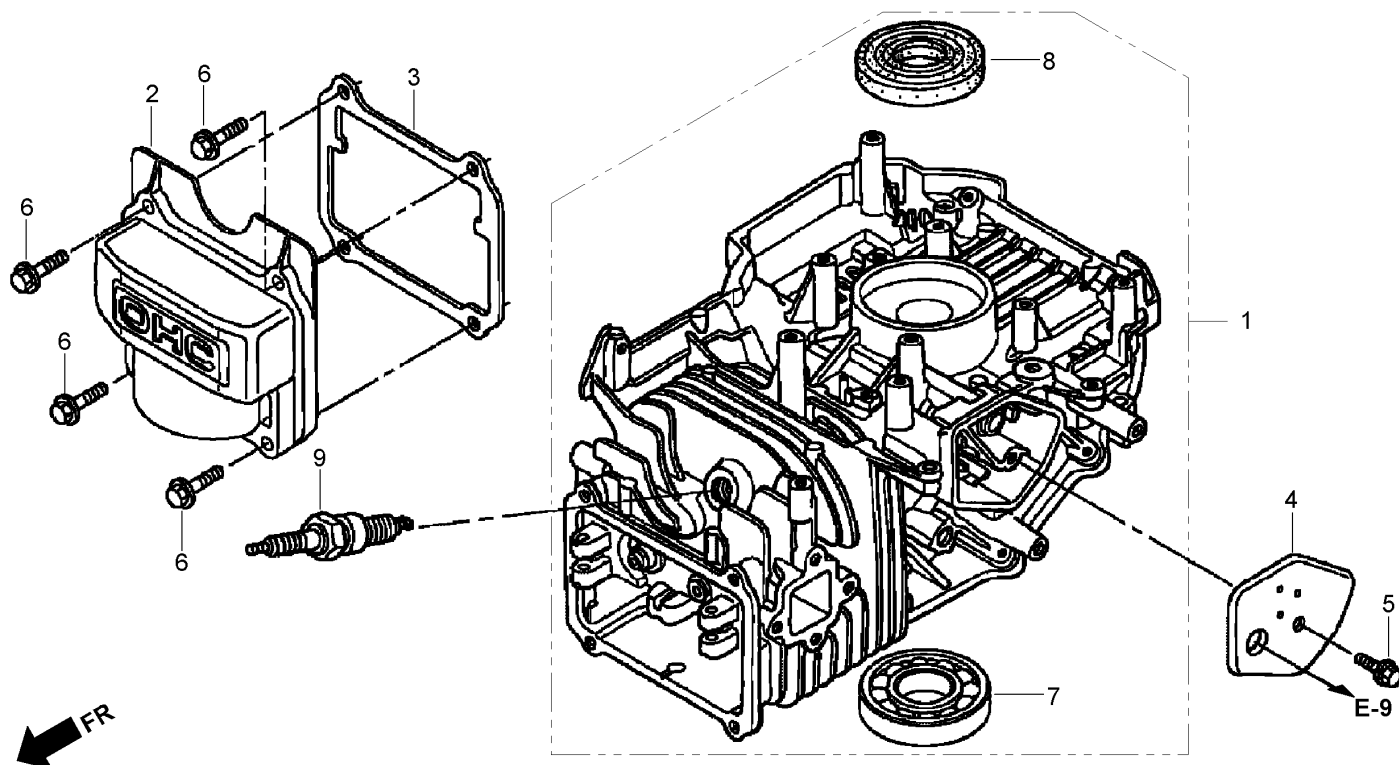

Cylinder Barrel Assembly

Honda GSV190LA A3T


Ref	Part No.	Qty.	Description				
21	12000-Z2C-000	1	Cylinder ASM				
22	12311-Z2A-000	1	Cover-Head, Cylinder				
23	12312-Z2A-000	1	Gasket-Cover, Head				
24	12355-ZL8-000	1	Cover-Breather (Breather Valve ASM)				
25	90014-952-000	1	Bolt-Flange (6X14) (C T200)				
26	90121-952-000	4	Bolt-Flange (6X25) (C T 200)				
27	91001-894-004	1	Bearing-Ball, Radial				
28	91201-Z2A-003	1	Seal-Oil (25.4X74X6)				
29	98079-55846	1	Spark Plug (B P R 5E S) (N G K)				

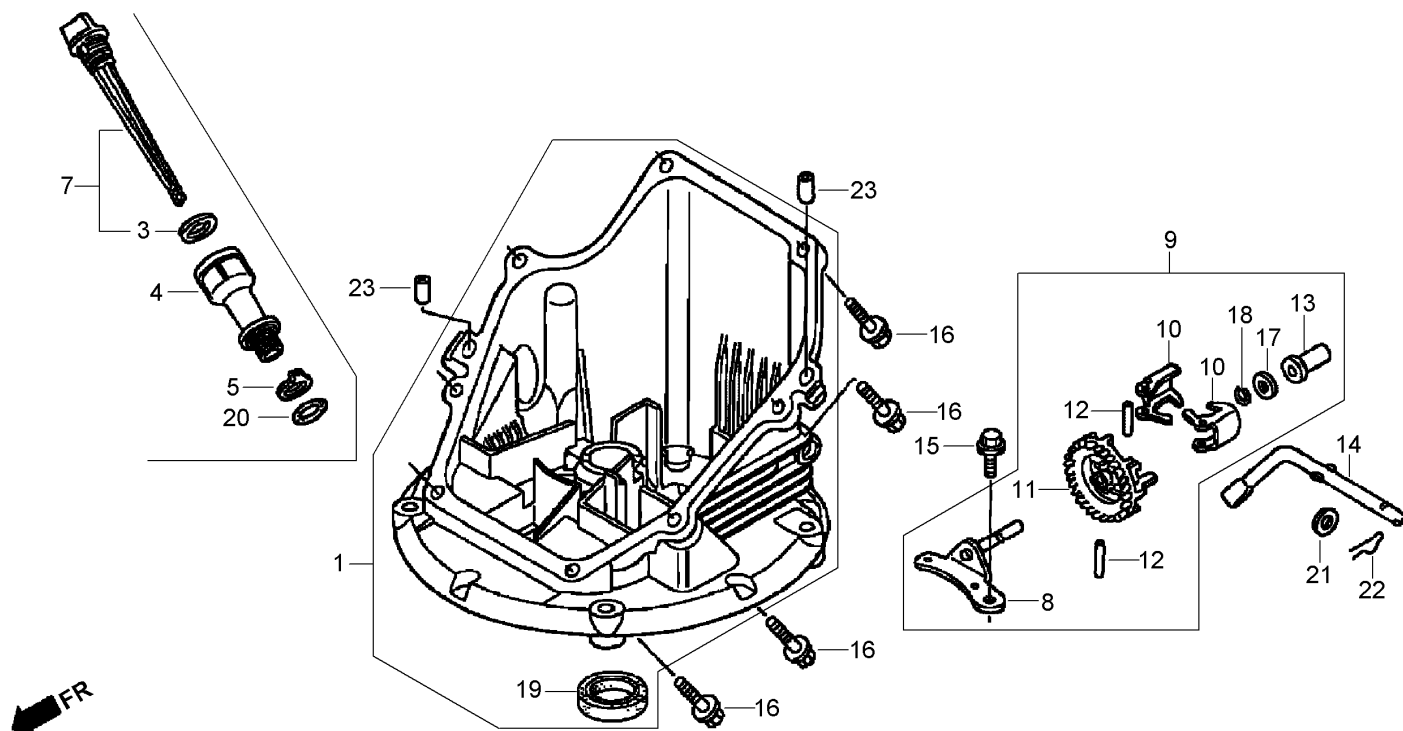

Oil Pan Assembly Honda GSV190LA A3T

Ref	Part No.	Qty.	Description
②1	11300-Z0Y-406	1	Oil Pan ASM
②3	15625-ZE6-000	1	Gasket-Cap, Oil Filler
②4	15631-ZM0-000	1	Extension-Filler, Oil
②5	15639-ZM0-000	1	Washer-Lock, Extension
②7	15650-ZM0-801	1	Oil Level Gauge ASM
②8	16508-ZM0-010	1	Shaft-Holder, Governor
②9	16510-ZM0-010	1	Governor ASM
②10	16511-ZL8-000	2	Weight-Governor
②11	16512-ZM0-000	1	Holder-Weight, Governor
②12	16513-ZE1-000	2	Pin-Weight, Governor
②13	16531-ZE1-000	1	Slider-Governor
②14	16541-ZM0-000	1	Shaft-Arm, Governor
②15	90014-952-000	1	Bolt-Flange (6X14) (C T200)


Ref	Part No.	Qty.	Description
②16	90121-952-000	8	Bolt-Flange (6X25) (C T 200)
②17	90451-ZE1-000	1	Washer-Thrust (6Mm)
②18	90602-ZE1-000	1	Clip-Holder, Governor
②19	91202-ZL8-003	1	Seal-Oil (28X41.25X6)
②20	91356-MA6-005	1	O-Ring (14.8X24) (N O K)
②21	94101-06800	1	Washer-Plain (6Mm)
②22	94251-08000	1	Pin-Lock (8Mm)
②23	94301-08200	2	Pin-Dowel (8X20)

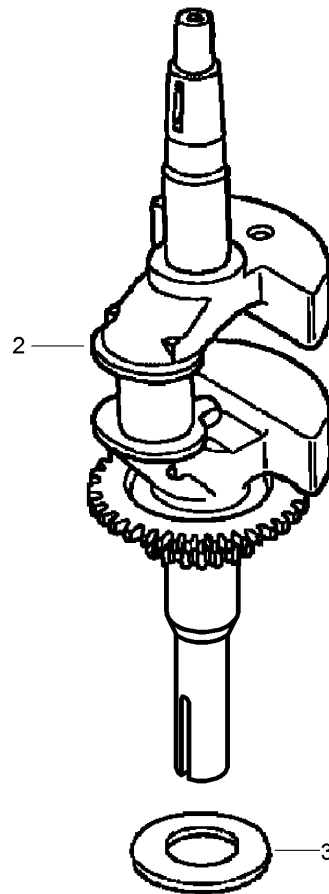

Crankshaft Assembly

Honda GSV190LA A3T


Ref	Part No.	Qty.	Description				
2	13310-Z0Y-610	1	Crankshaft				
3	90402-ZL8-000	1	Washer-Thrust				

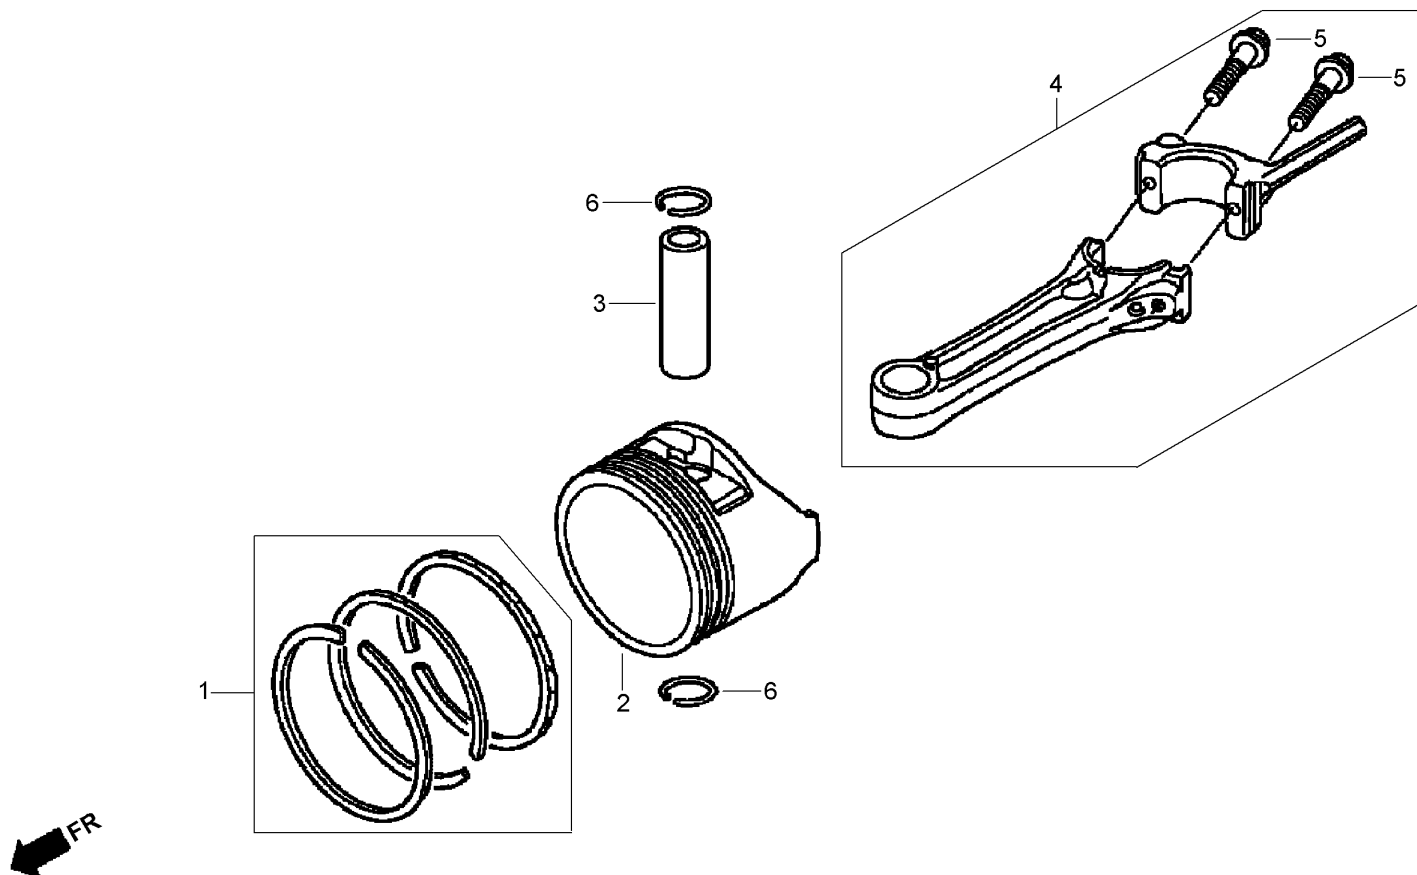

Piston and Connecting Rod Assembly


Honda GSV190LA A3T

Ref	Part No.	Qty.	Description				
②1	13010-Z2C-014	1	Piston Ring Set (STD) (Teikoku)				
②2	13101-Z0Y-010	1	Piston				
②3	13111-Z0Y-000	1	Pin-Piston				
②4	13200-Z0Y-010	1	Connecting Rod ASM				
②5	90001-ZE1-000	2	Bolt-Rod, Connecting				
②6	90551-ZE0-000	2	Clip-Pin, Piston (13Mm)				

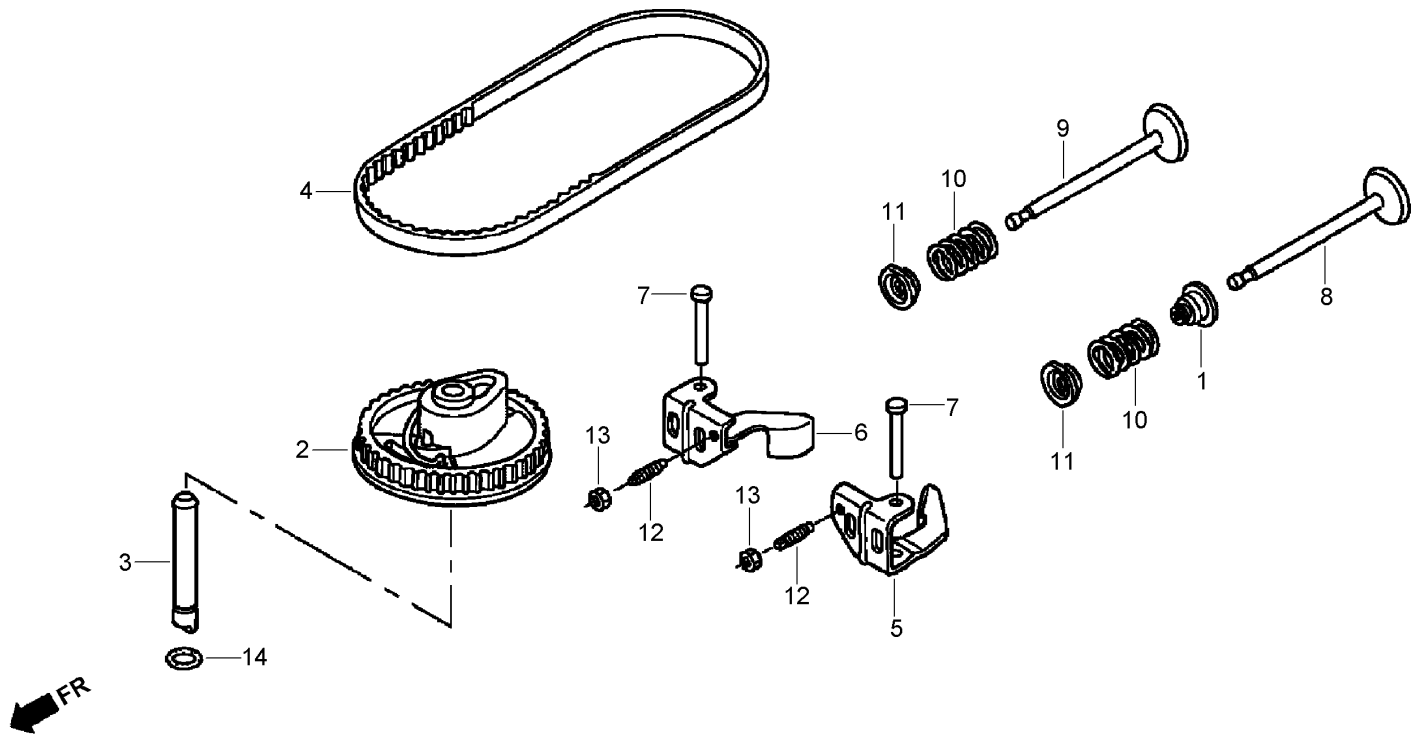

Camshaft Pulley Assembly Honda GSV190LA A3T


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	12209-ZM0-003	1	Seal-Stem, Valve	13	90206-001-000	2	Nut-Adjusting, Tappet
2	14320-Z0Y-000	1	Pulley-Camshaft	14	91301-ZM0-V31	1	O-Ring (6.8X19) (Arai)
3	14324-ZL8-000	1	Shaft-Pulley, Cam				
4	14400-Z0J-014	1	Belt-Timing (84H U7 G-200)				
5	14431-Z0J-000	1	Arm-Rocker, Intake Valve				
6	14441-Z0J-000	1	Arm-Rocker, Exhaust Valve				
7	14461-ZL8-000	2	Shaft-Arm, Rocker				
8	14711-ZL8-000	1	Valve-Intake (Technostar)				
8	14711-Z0J-000	1	Valve-Intake (Rocknel)				
9	14721-ZL8-000	1	Valve-Exhaust				
10	14751-ZL8-000	2	Spring-Valve				
11	14771-Z0J-000	2	Retainer-Spring, Valve				
12	90012-333-000	2	Screw-Adjusting, Tappet				

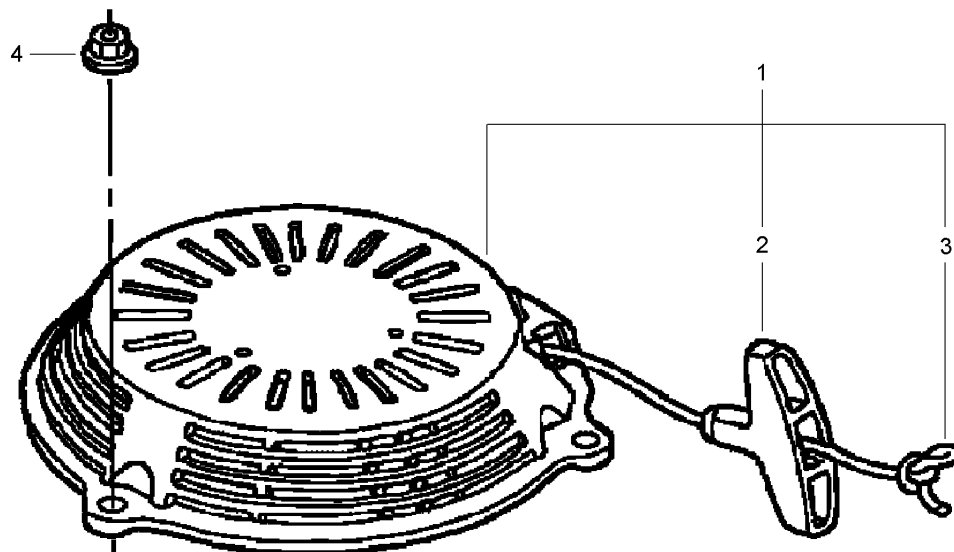

Recoil Starter Assembly

Honda GSV190LA A3T


Ref	Part No.	Qty.	Description				
②1	28400-Z0Y-013ZB	1	Recoil Starter ASM (N H1) (Black)				
②2	28461-ZL8-003	1	Grip-Starter				
②3	28462-ZL8-631	1	Rope-Starter, Recoil (Long Type)				
②4	90201-ZM0-000	3	Nut-Flange (6Mm)				

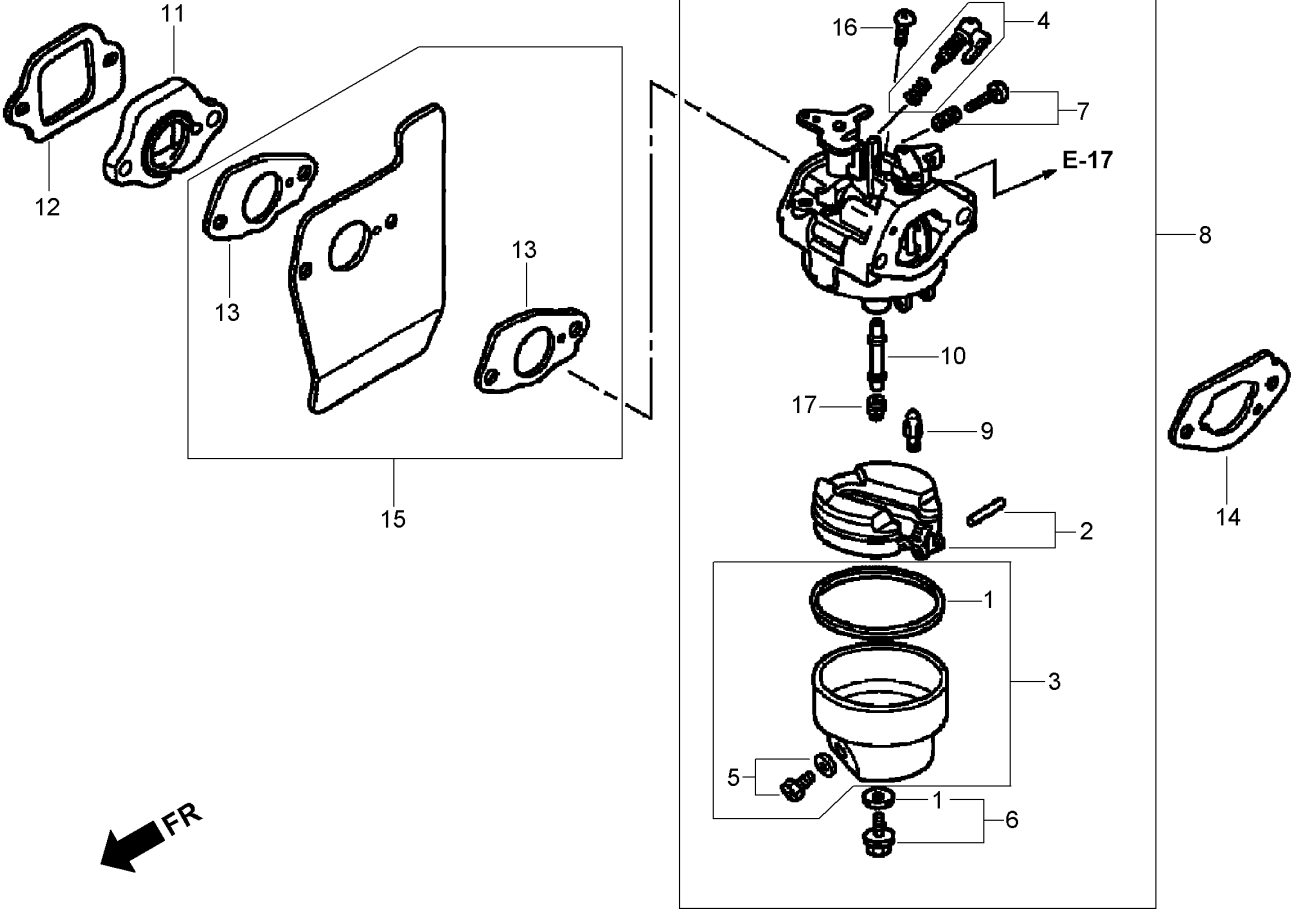

Carburetor Assembly
Honda GSV190LA A3T


Ref	Part No.	Qty.	Description
❶1	16010-883-015	1	Gasket Set
❷2	16013-ZL1-003	1	Float Set
❸3	16015-887-782	1	Float Chamber Set
❹4	16016-ZG0-W00	1	Screw Set
❺5	16024-ZE1-811	1	Drain Screw Set
❻6	16028-ZE0-005	1	Screw Set
❼7	16029-ZG0-901	1	Screw Set (Throttle Stop)
❽8	16100-Z2D-811	1	Carburetor ASM (Bb65G A)
❾9	16155-ZM0-013	1	Valve-Float
❿10	16166-Z0Y-003	1	Nozzle-Main
⓫11	16211-ZL8-000	1	Insulator-Carburetor
⓫12	16212-ZL8-000	1	Gasket-Insulator
⓫13	16221-883-800	2	Gasket-Carburetor

Ref	Part No.	Qty.	Description
❶14	16228-ZL8-000	1	Gasket-Carburetor
❷15	19650-ZM0-000	1	Guide-Air
❸16	93500-05006-0H	1	Screw-Pan (5X6)
❹17	99101-124-0620	1	Jet-Main (No.62)
❺17	99101-124-0650	1	Jet-Main (No.65)
❻17	99101-124-0680	1	Jet-Main (No.68)

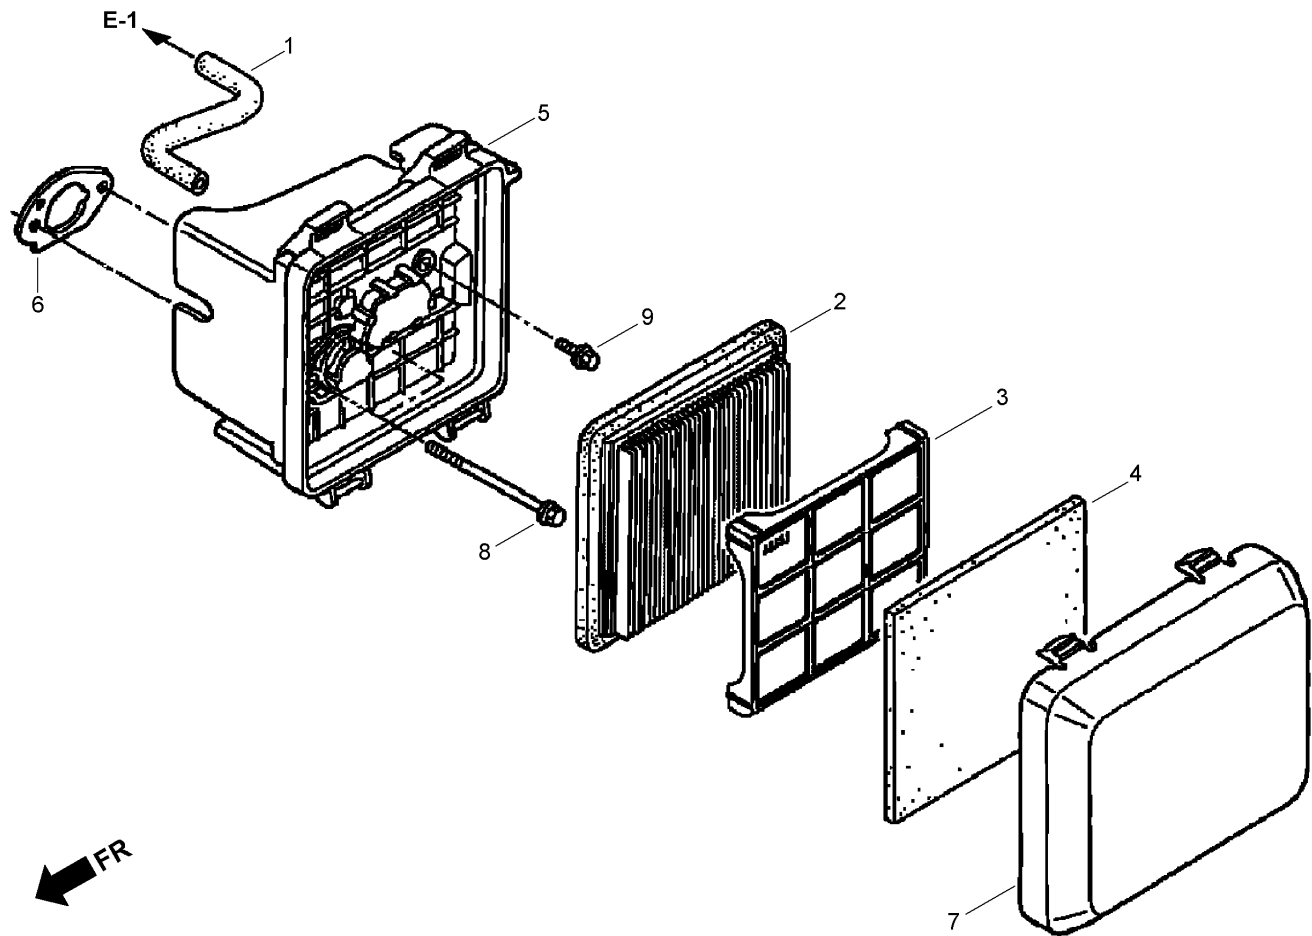


Air Cleaner Assembly
Honda GSV190LA A3T

Ref	Part No.	Qty.	Description				
②1	15721-ZM0-000	1	Tube-Breather				
②2	17211-ZL8-023	1	Element-Cleaner, Air				
②3	17212-Z2A-000	1	Grid-Cleaner, Air				
②4	17218-Z2A-000	1	Filter (Outer) (Wet)				
②5	17220-ZM0-000	1	Air Cleaner Case ASM				
②6	17228-ZM0-000	1	Gasket-Cleaner, Air				
②7	17231-Z2B-000	1	Cover-Cleaner, Air (Dual)				
②8	90003-ZM0-000	2	Bolt-Flange (6X86) (C T200)				
②9	95701-06014-08	1	Bolt-Flange (6X14)				

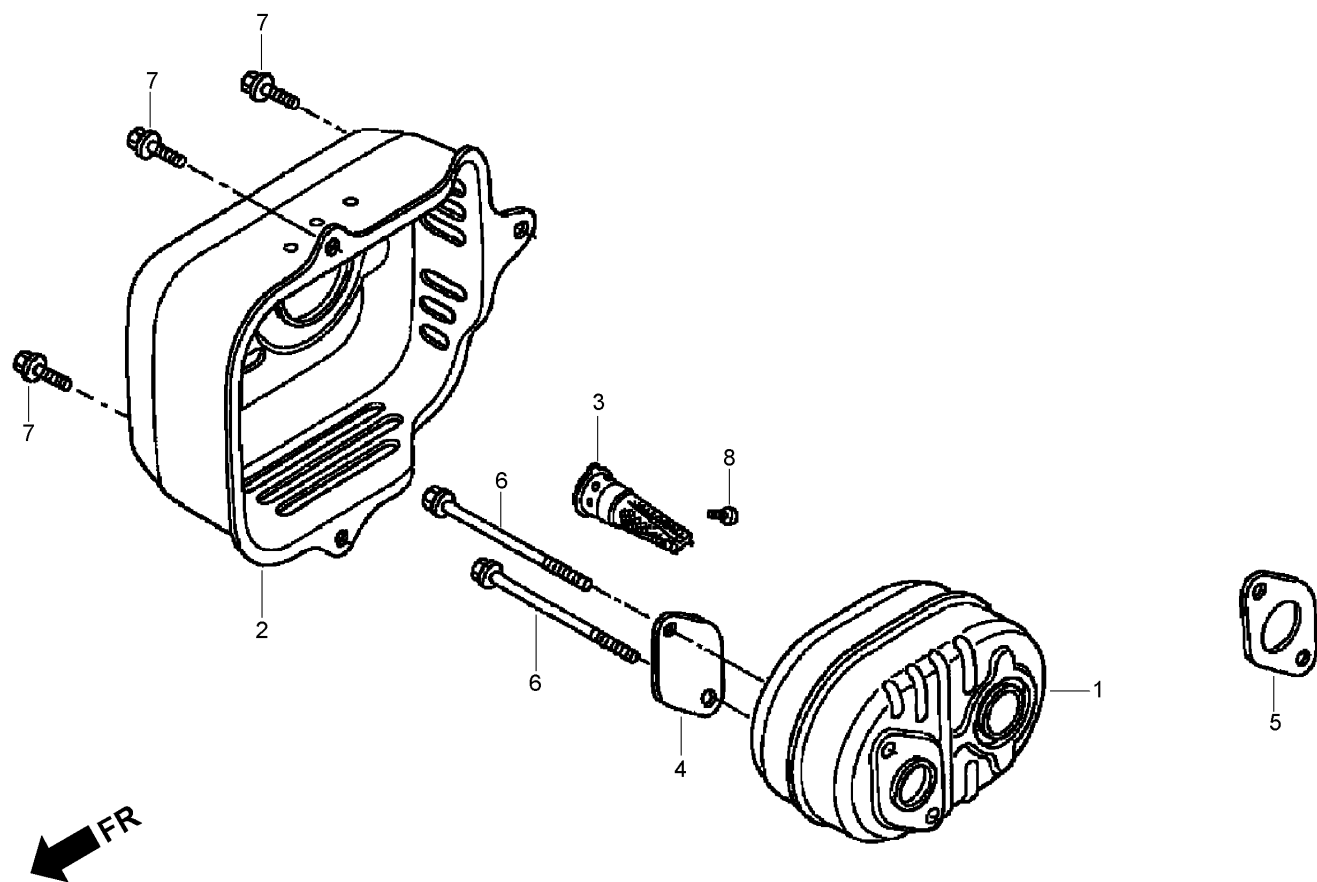

Muffler Assembly
Honda GSV190LA A3T

Ref	Part No.	Qty.	Description				
❶	18310-Z0Y-000	1	Muffler				
❷	18321-Z0L-J00	1	Protector-Muffler				
❸	18350-ZL8-000	1	Arrester-Spark				
❹	18356-ZL8-000	1	Plate-Number, Arrester				
❺	18381-ZL8-305	1	Gasket-Muffler				
❻	90004-ZL8-000	2	Bolt-Flange (6X79) (C T200)				
❼	90013-883-000	3	Bolt-Flange (6X12) (C T200)				
❽	90055-ZE1-000	1	Screw-Tapping (4X6)				

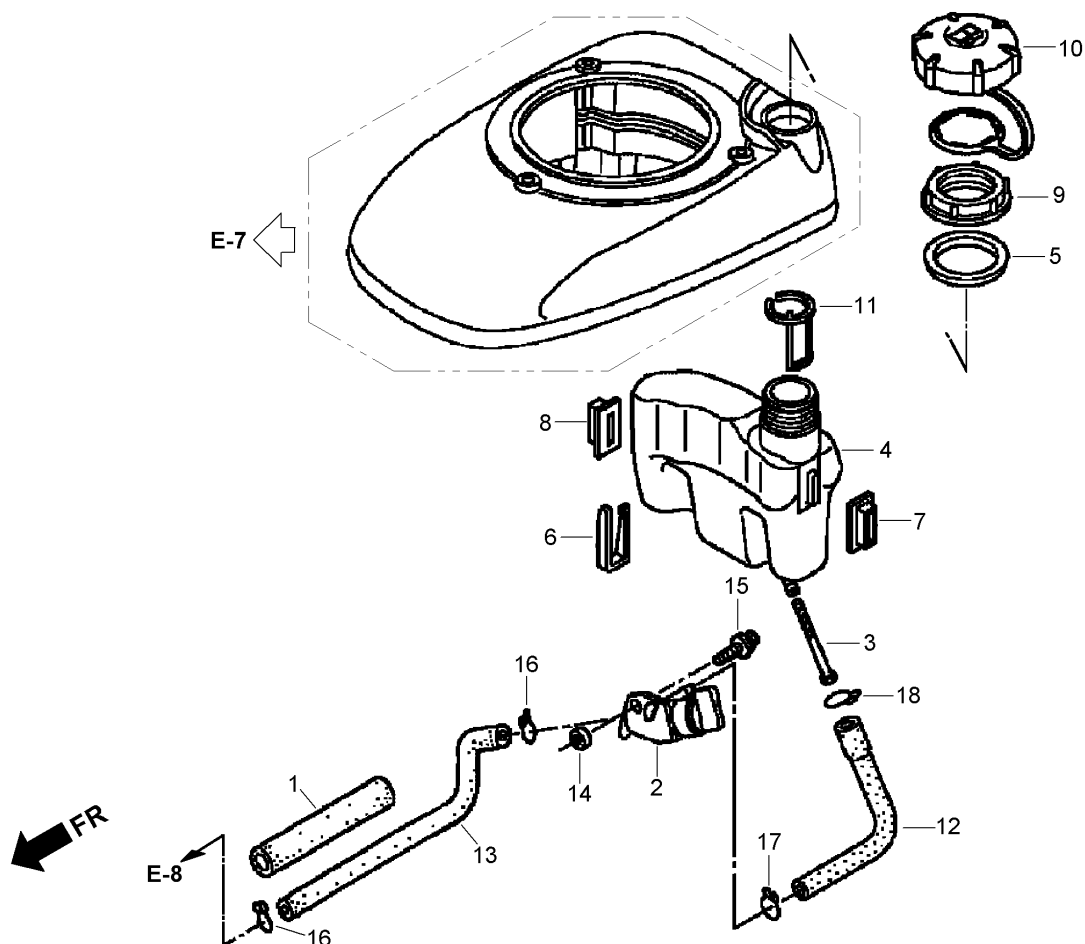


Fuel Tank Assembly

Honda GSV190LA A3T

Ref	Part No.	Qty.	Description
21	16854-ZH8-000	1	Supporter-Rubber (107 Mm)
22	16950-ZM0-003	1	Petcock ASM
23	16952-ZA8-800	1	Filter-Fuel
24	17511-Z0L-000	1	Tank-Fuel
25	17514-Z0L-000	1	Seal-Neck, Fuel Filler
26	17516-Z0L-000	1	Clip-Mounting, Tank
27	17532-Z0L-000	1	Rubber A-Mounting, Tank
28	17533-Z0L-000	1	Rubber B-Mounting, Tank
29	17534-Z0L-000	1	Nut-Mounting, Tank
210	17620-Z0J-800	1	Fuel Tank Cap ASM
211	17636-Z0L-000	1	Gauge-Level, Fuel
212	17701-Z0L-810	1	Tube-Tank, Fuel
213	17702-ZM0-800	1	Tube-Fuel


Ref	Part No.	Qty.	Description
② 14	91501-Z0L-800	1	Collar-Petcock, Fuel
② 15	93891-05010-08	1	Screw-Washer (5X10)
② 16	95002-02080	2	Clip-Tube (B8)
② 17	95002-02100	1	Clip-Tube (B10)
② 18	95002-70000	1	Clip-Tube (C11)

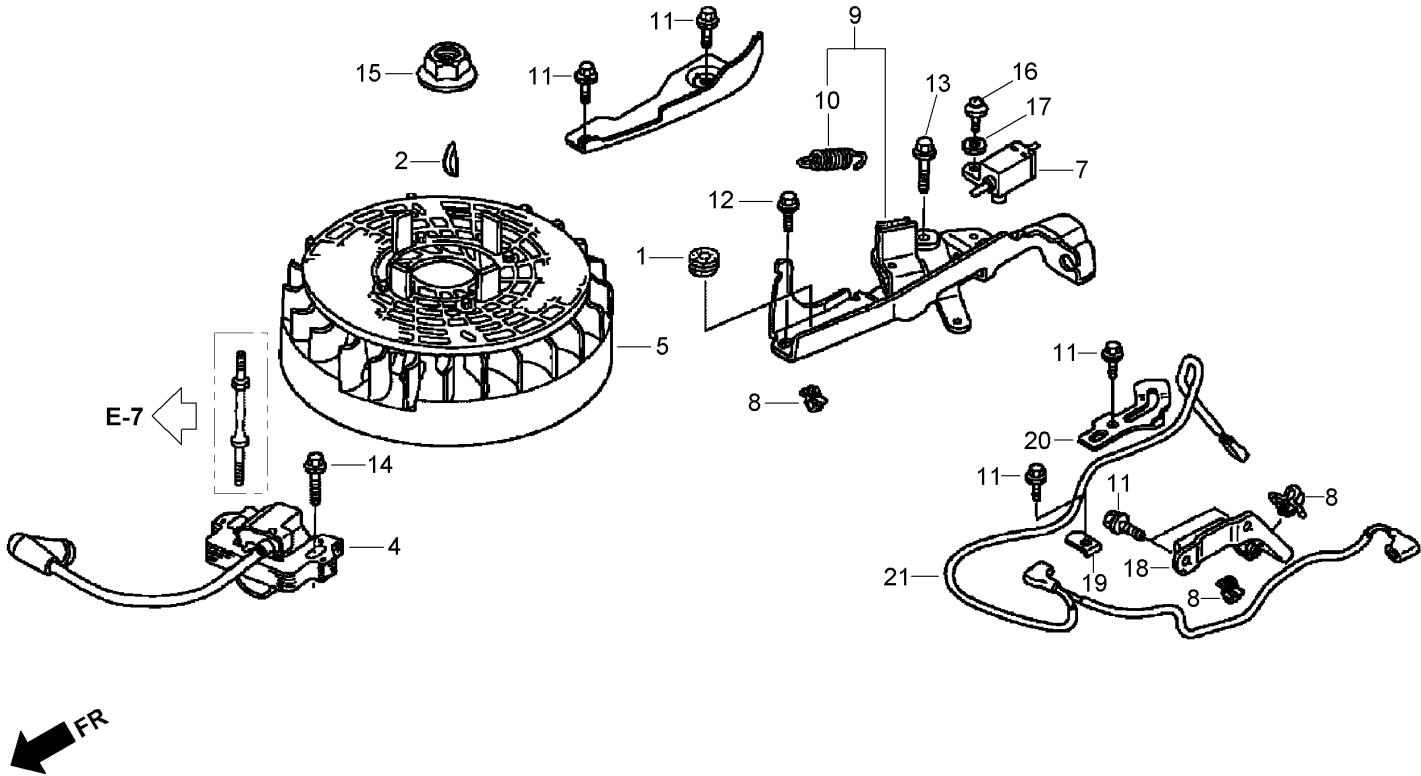

Flywheel Assembly
Honda GSV190LA A3T


Ref	Part No.	Qty.	Description
❶1	11344-MB0-000	1	Grommet A-Cover, R R (8X16X6.6)
❶1	11344-Z0L-800	1	Grommet A, Rr Cover (8X16X8)
❷2	13331-357-000	1	Key-Woodruff, Special (25X18)
❹4	30500-Z0J-003	1	Ignition Coil ASM (Phelon) (Use For Flywheel Of Phelon)
❺5	31105-Z0Y-010	1	Flywheel ASM (Phelon) (Use For Ignition Coil Of Phelon)
❷7	35120-ZM0-003	1	Engine Stop Switch ASM (N C)
❸8	51125-Z0L-003	1	Holder-Wire (Fastex)
❸8	90681-959-003	1	Clip A-Cable (Nifco)
❹9	75110-Z0L-800	1	Brake ASM
❹10	75113-ZM0-000	1	Spring-Lever, Brake
❹11	90013-883-000	2	Bolt-Flange (6X12) (C T200)
❹12	90014-952-000	1	Bolt-Flange (6X14) (C T200)
❹13	90018-ZE1-000	1	Bolt-Flange (6X23) (C T200)

Ref	Part No.	Qty.	Description
❹14	90022-888-010	1	Bolt-Flange (6X20) (C T200)
❹15	90213-S3Y-000	1	Nut-Flange (14Mm)
❹16	93892-04012-00	1	Screw-Washer (4X12)
❹17	94103-04000	1	Washer-Plain (4Mm)
❹18	30547-Z0L-S00	1	Clamp-Wire, Stop Switch
❹19	30548-ZL8-000	1	Clamp-Wire, Stop Switch
❹20	30549-ZL8-000	1	Clamp-Wire
❹21	32195-Z0L-S00	1	Wire-Switch, Stop

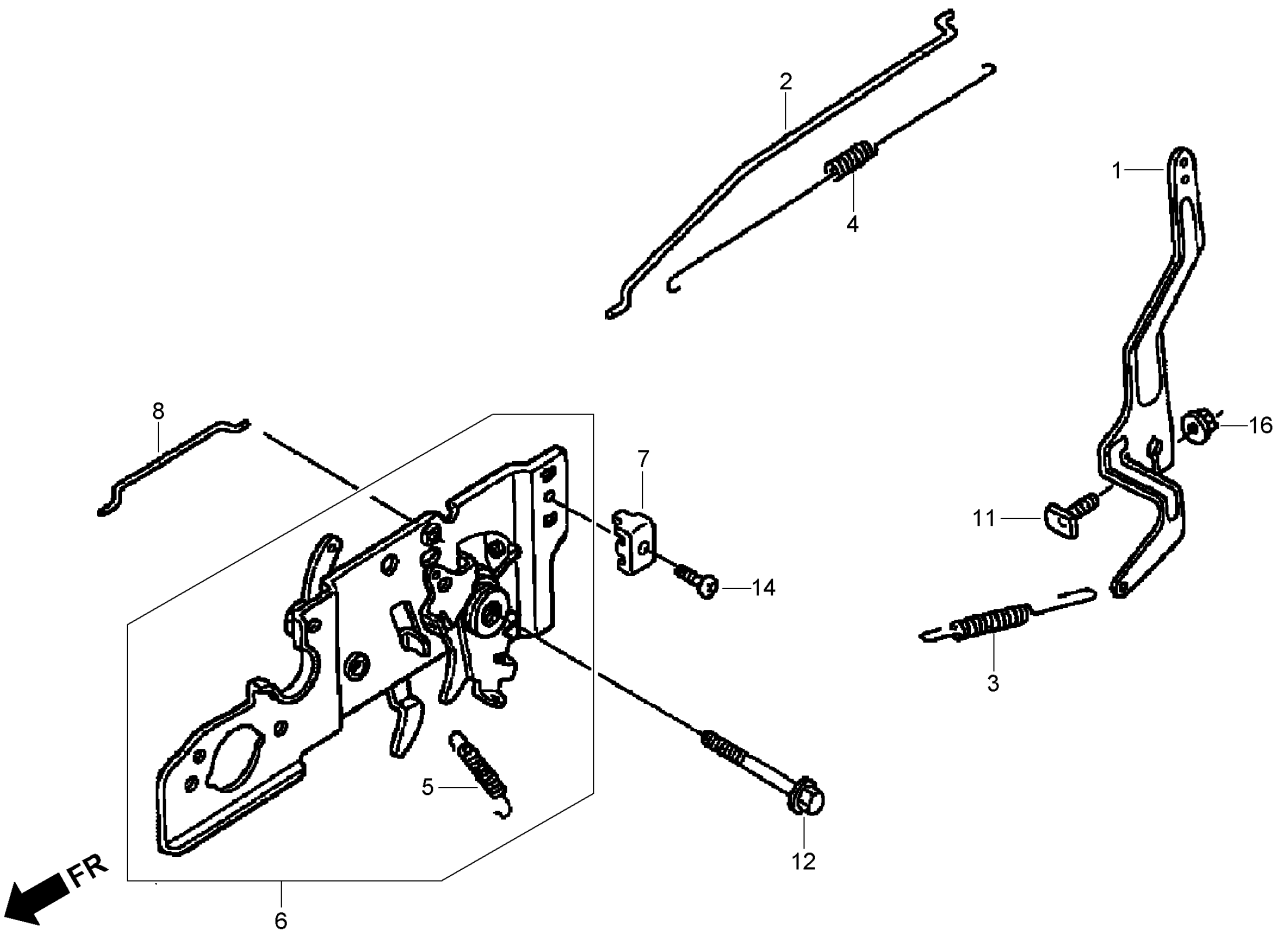

Control Assembly
Honda GSV190LA A3T

Ref	Part No.	Qty.	Description				
❶1	16551-ZM0-010	1	Arm-Governor				
❷2	16555-Z0L-800	1	Rod-Governor				
❸3	16561-Z0L-000	1	Spring-Governor				
❹4	16562-ZM0-000	1	Spring-Return, Throttle				
❺5	16576-ZE7-300	1	Spring-Lever				
❻6	16580-ZM0-030	1	Base, Control				
❼7	16617-VG3-000	1	Holder-Cable				
❽8	16674-ZM0-000	1	Rod-Choke				
❾11	90015-ZE5-010	1	Bolt-Arm, Governor				
❿12	90016-ZM0-000	1	Bolt-Flange (6X45) (Ct200)				
⓫14	93500-05016-0A	1	Screw-Pan (5X16)				
⓬16	94050-06000	1	Nut-Flange (6 Mm)				

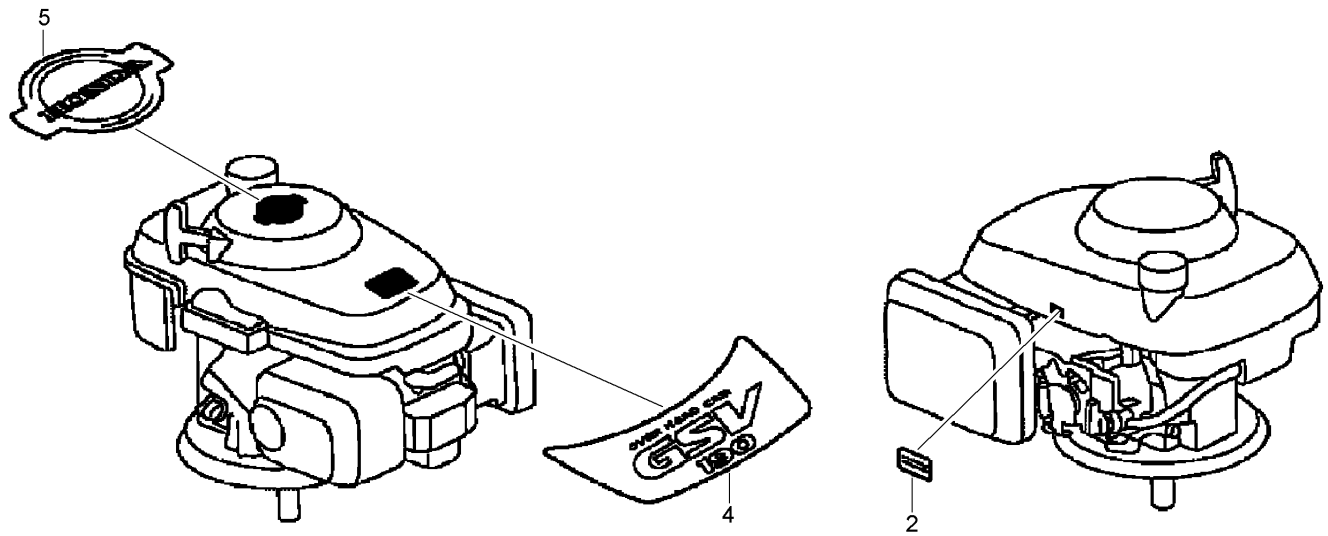

Label Assembly Honda GSV190LA A3T

Ref	Part No.	Qty.	Description				
22	87114-ZH7-821	1	Label-Warning (Not Certified For Sale)				
24	87101-Z8E-000	1	Mark, Emblem (Gsv190)				
25	87169-Z8E-000	1	Mark, Recoil Cover				

