



## 21in Commercial Lawn Mower

Model No. 22156 - 290000001 and up.

### Parts Catalog

#### Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

#### Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

#### Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

#### Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

## Contents

| Description                                           | Page     | Description                                 | Page     |
|-------------------------------------------------------|----------|---------------------------------------------|----------|
| Front End and Tunnel Assembly                         | ..... 3  | Camshaft Pulley Assembly Honda GSV190LA A3T | ..... 14 |
| Wheel Assembly No. 117-5252                           | ..... 4  | Recoil Starter Assembly Honda GSV190LA A3T  | ..... 15 |
| Discharge Door and Rear Wheel Assembly                | ..... 5  | Fan Cover Assembly Honda GSV190LA A3T       | ..... 16 |
| Wheel Assembly No. 117-5253                           | ..... 6  | Carburetor Assembly Honda GSV190LA A3T      | ..... 17 |
| Engine and Blade Assembly                             | ..... 7  | Air Cleaner Assembly Honda GSV190LA A3T     | ..... 18 |
| Handle Assembly                                       | ..... 8  | Muffler Assembly Honda GSV190LA A3T         | ..... 19 |
| Rear Bag Assembly                                     | ..... 9  | Fuel Tank Assembly Honda GSV190LA A3T       | ..... 20 |
| Cylinder Barrel Assembly Honda GSV190LA A3T           | ..... 10 | Flywheel Assembly Honda GSV190LA A3T        | ..... 21 |
| Oil Pan Assembly Honda GSV190LA A3T                   | ..... 11 | Control Assembly Honda GSV190LA A3T         | ..... 22 |
| Crankshaft Assembly Honda GSV190LA A3T                | ..... 12 | Label Assembly Honda GSV190LA A3T           | ..... 23 |
| Piston and Connecting Rod Assembly Honda GSV190LA A3T | ..... 13 |                                             |          |

## Part Description Abbreviations

 
Part descriptions in this catalog may include the following abbreviations.

|                                            |                                              |
|--------------------------------------------|----------------------------------------------|
| AR. .... as required                       | HYD. .... hydraulic                          |
| ASM. .... assembly                         | LH. .... left hand                           |
| BBC. .... blade brake clutch               | NI. .... nylon insert                        |
| CARR. .... carriage                        | NPTF. .... national pipe thread fine         |
| DEG. .... degrees                          | PFH. .... phillips flat head                 |
| EXT. .... external                         | PPH. .... phillips pan head                  |
| FH. .... flat head                         | PPHTF. .... phillips pan head thread forming |
| GA. .... gauge                             | PRH. .... phillips round head                |
| HD. .... heavy-duty                        | PTH. .... phillips truss head                |
| HF. .... hex flange                        | PTO. .... power-take-off                     |
| HH. .... hex head                          | RH. .... right hand                          |
| HHF. .... hex head flange                  | ROPS. .... roll-over protection system       |
| HHFTF. .... hex head flange thread forming | SFH. .... slotted fillister head             |
| HJ. .... hex jam                           | SHH. .... slotted hex head                   |
| HLH. .... hex lag head                     | SHWH. .... slotted hex washer head           |
| HOC. .... height-of-cut                    | SPH. .... slotted pan head                   |
| HSBH. .... hex socket button head          | SQH. .... square head                        |
| HSFH. .... hex socket flat head            | SRH. .... slotted round head                 |
| HS. .... hex socket head                   | STD. .... standard                           |
| HWH. .... hex washer head                  | TAP. .... self tapping                       |
| HWHTF. .... hex washer head thread forming | TTH. .... torx truss head                    |

## Footnotes


❶ Not serviced separately

❷ Obtain from your local Honda dealer

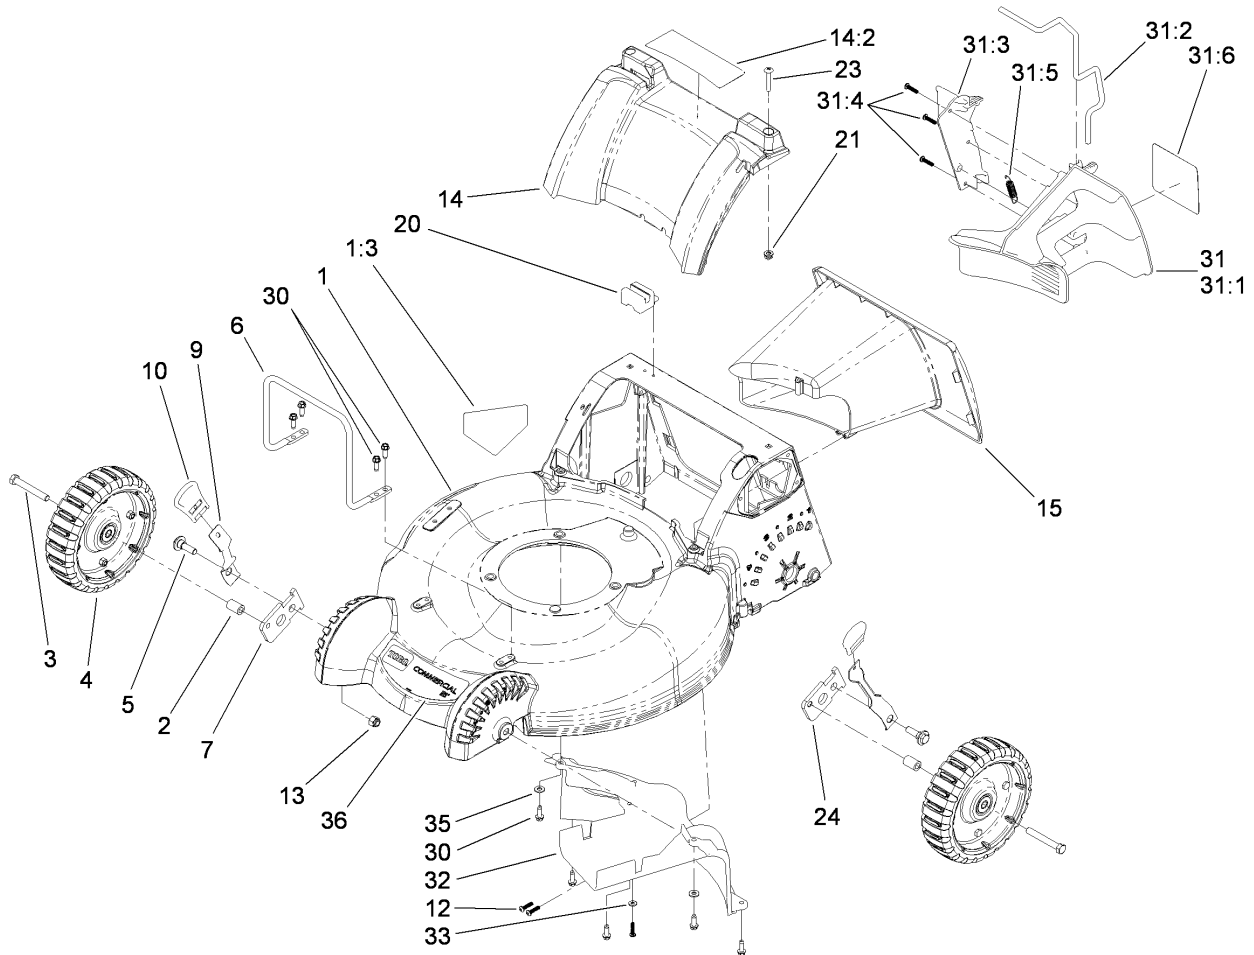


## Front End and Tunnel Assembly

| Ref  | Part No.    | Qty. | Description       | Ref  | Part No. | Qty. | Description          |
|------|-------------|------|-------------------|------|----------|------|----------------------|
| 1    | 117-5266    | 1    | Housing Assembly  | 31:4 | 108-7476 | 3    | Screw-Plastite       |
| 1:3  | 94-8072     | 1    | Decal-Danger      | 31:5 | 110-9458 | 1    | Spring-Extension     |
| 2    | 114-2754    | 2    | Spacer            | 31:6 | 110-9457 | 1    | Decal-Plug, Mulch    |
| 3    | 323-13      | 2    | Screw-HH          | 32   | 110-9413 | 1    | Baffle-Rear          |
| 4    | 117-5252    | 2    | 8 Inch Wheel ASM  | 33   | 3256-14  | 1    | Washer-Flat          |
| 5    | 614672      | 2    | Bolt-Shoulder     | 35   | 3256-22  | 2    | Washer-Flat          |
| 6    | 110-9475-03 | 1    | Guard-Engine      | 36   | 117-5247 | 1    | Decal-Housing, Front |
| 7    | 110-9421    | 1    | Arm-Pivot, RH     |      |          |      |                      |
| 9    | 110-9434    | 2    | Arm-Spring, Front |      |          |      |                      |
| 10   | 110-0549    | 2    | Knob-HOC          |      |          |      |                      |
| 12   | 108-7476    | 6    | Screw-Plastite    |      |          |      |                      |
| 13   | 3296-39     | 2    | Nut-Lock, NI      |      |          |      |                      |
| 14   | 115-3177    | 1    | Cover-Rear        |      |          |      |                      |
| 14:2 | 114-2820    | 1    | Decal-Warning     |      |          |      |                      |
| 15   | 110-9455    | 1    | Tunnel            |      |          |      |                      |
| 20   | 110-1786    | 1    | Module-Switch     |      |          |      |                      |
| 21   | 94-1610     | 2    | Nut-Clip          |      |          |      |                      |
| 23   | 108-0965    | 2    | Screw-PTH         |      |          |      |                      |
| 24   | 110-9420    | 1    | Arm-Pivot, LH     |      |          |      |                      |
| 30   | 49-2040     | 9    | Screw-HWHTF       |      |          |      |                      |
| 31   | 110-9468    | 1    | Mulch Plug ASM    |      |          |      |                      |
| 31:1 | 110-9446    | 1    | Plug-Mulch, LH    |      |          |      |                      |
| 31:2 | 110-9448    | 1    | Latch-Plug, Mulch |      |          |      |                      |
| 31:3 | 110-9447    | 1    | Plug-Mulch, RH    |      |          |      |                      |

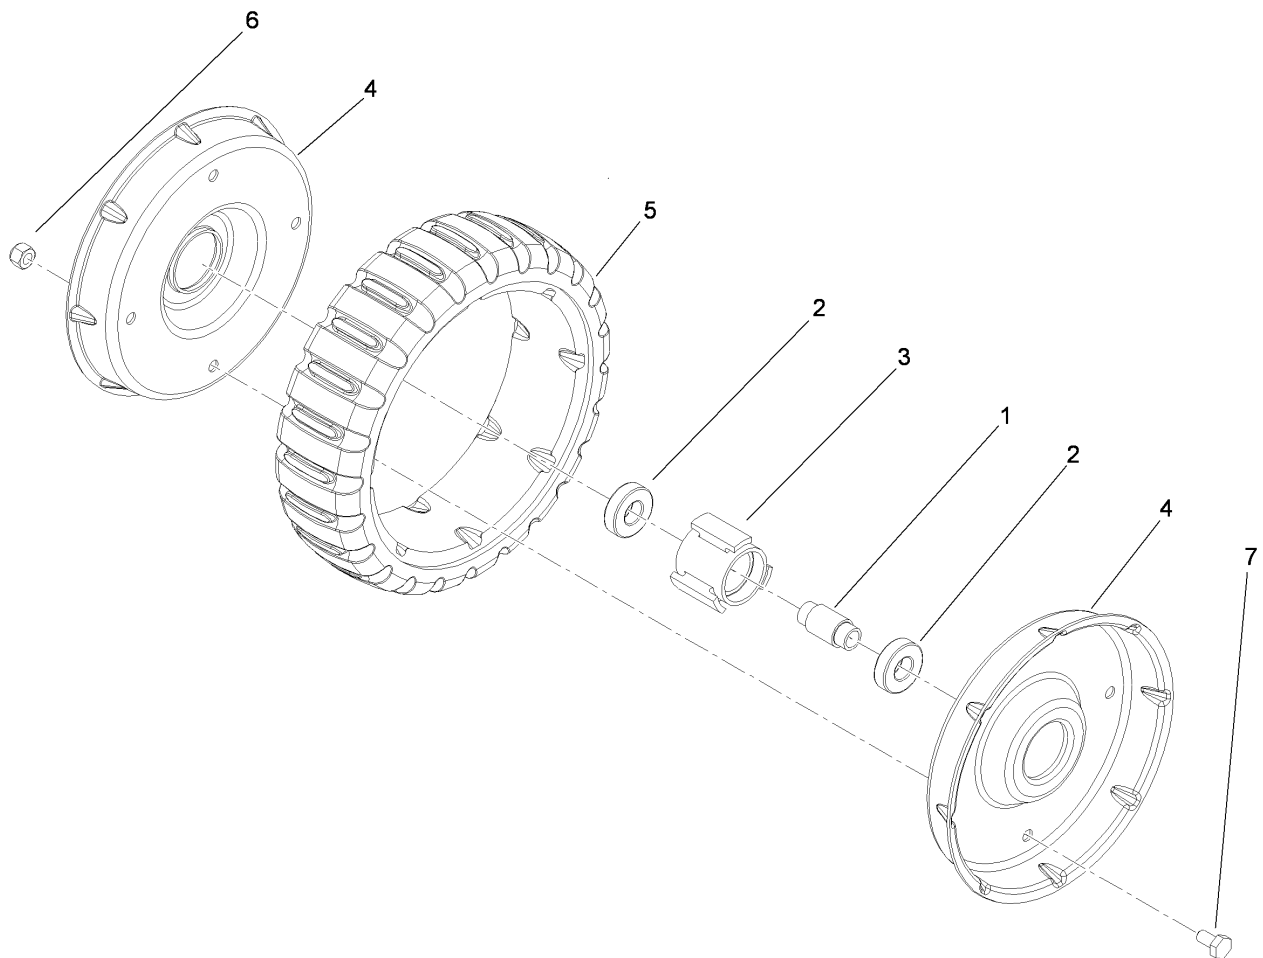

# Wheel Assembly No. 117-5252


| Ref | Part No. | Qty. | Description    |  |  |  |  |
|-----|----------|------|----------------|--|--|--|--|
| 1   | 52-2440  | 1    | Spacer-Bearing |  |  |  |  |
| 2   | 52-2450  | 2    | Bearing-Wheel  |  |  |  |  |
| 3   | 52-2410  | 1    | Hub-Bearing    |  |  |  |  |
| 4   | 117-5250 | 2    | Wheel-Half     |  |  |  |  |
| 5   | 110-9499 | 1    | Tire-8 Inch    |  |  |  |  |
| 6   | 3296-42  | 4    | Nut-Lock, NI   |  |  |  |  |
| 7   | 321-2    | 4    | Screw-HH       |  |  |  |  |

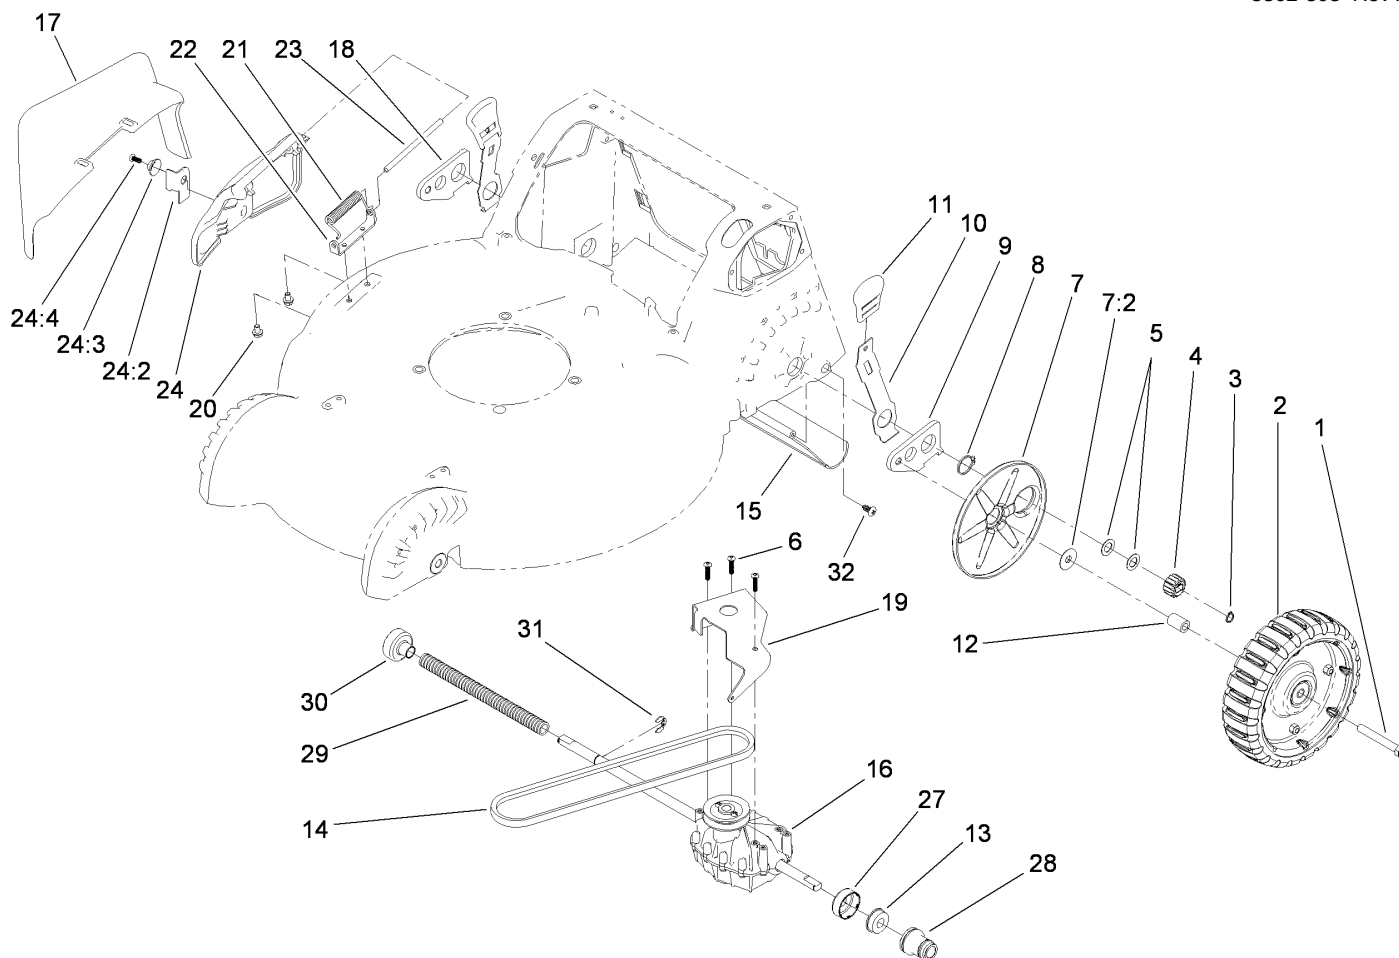

## Discharge Door and Rear Wheel Assembly


| Ref | Part No.    | Qty. | Description           |
|-----|-------------|------|-----------------------|
| 1   | 323-13      | 2    | Screw-HH              |
| 2   | 117-5253    | 2    | 8-Inch Wheel ASM      |
| 3   | 32151-61    | 2    | Ring-Retaining        |
| 4   | 110-9417    | 2    | Pinion                |
| 5   | 36-4780     | 2    | Washer-Plain          |
| 6   | 108-7476    | 3    | Screw-Plastite        |
| 7   | 110-1792    | 2    | Wheel Cover ASM       |
| 7:2 | 614426      | 1    | Washer-Stepped        |
| 8   | 32151-36    | 2    | Ring-Retaining        |
| 9   | 108-9344    | 1    | Arm-Rear Pivot, LH    |
| 10  | 110-9445    | 2    | Arm-Spring, Rear      |
| 11  | 110-0549    | 2    | Knob-HOC              |
| 12  | 114-2754    | 2    | Spacer                |
| 13  | 104-8699    | 2    | Bearing-Ball          |
| 14  | 110-9429    | 1    | V-Belt                |
| 15  | 112-8768    | 1    | Shield-Trailing       |
| 16  | 114-2819    | 1    | Transmission          |
| 17  | 105-3028    | 1    | Chute-Discharge, Side |
| 18  | 108-9343    | 1    | Arm-Rear Pivot, RH    |
| 19  | 114-7977-03 | 1    | Bracket-Transmission  |
| 20  | 99-8445     | 2    | Screw-HWH             |
| 21  | 99-5293     | 1    | Spring-Torsion        |
| 22  | 112-6416    | 1    | Bracket-Cover         |
| 23  | 99-5291     | 1    | Rod-Cover             |

| Ref  | Part No. | Qty. | Description        |
|------|----------|------|--------------------|
| 24   | 106-8376 | 1    | Discharge Door ASM |
| 24:2 | 107-0795 | 1    | Latch-Door         |
| 24:3 | 107-7456 | 1    | Cap-Door           |
| 24:4 | 107-7461 | 1    | Screw-Plastite     |
| 27   | 117-5268 | 1    | Cover-Bearing      |
| 28   | 110-9422 | 2    | Retainer-Bearing   |
| 29   | 117-5260 | 1    | Cover-Shaft, Drive |
| 30   | 114-2755 | 1    | Cap-Bearing        |
| 31   | 65-2720  | 1    | Ring-Clip, Locking |
| 32   | 117-1092 | 2    | Screw-PTH          |

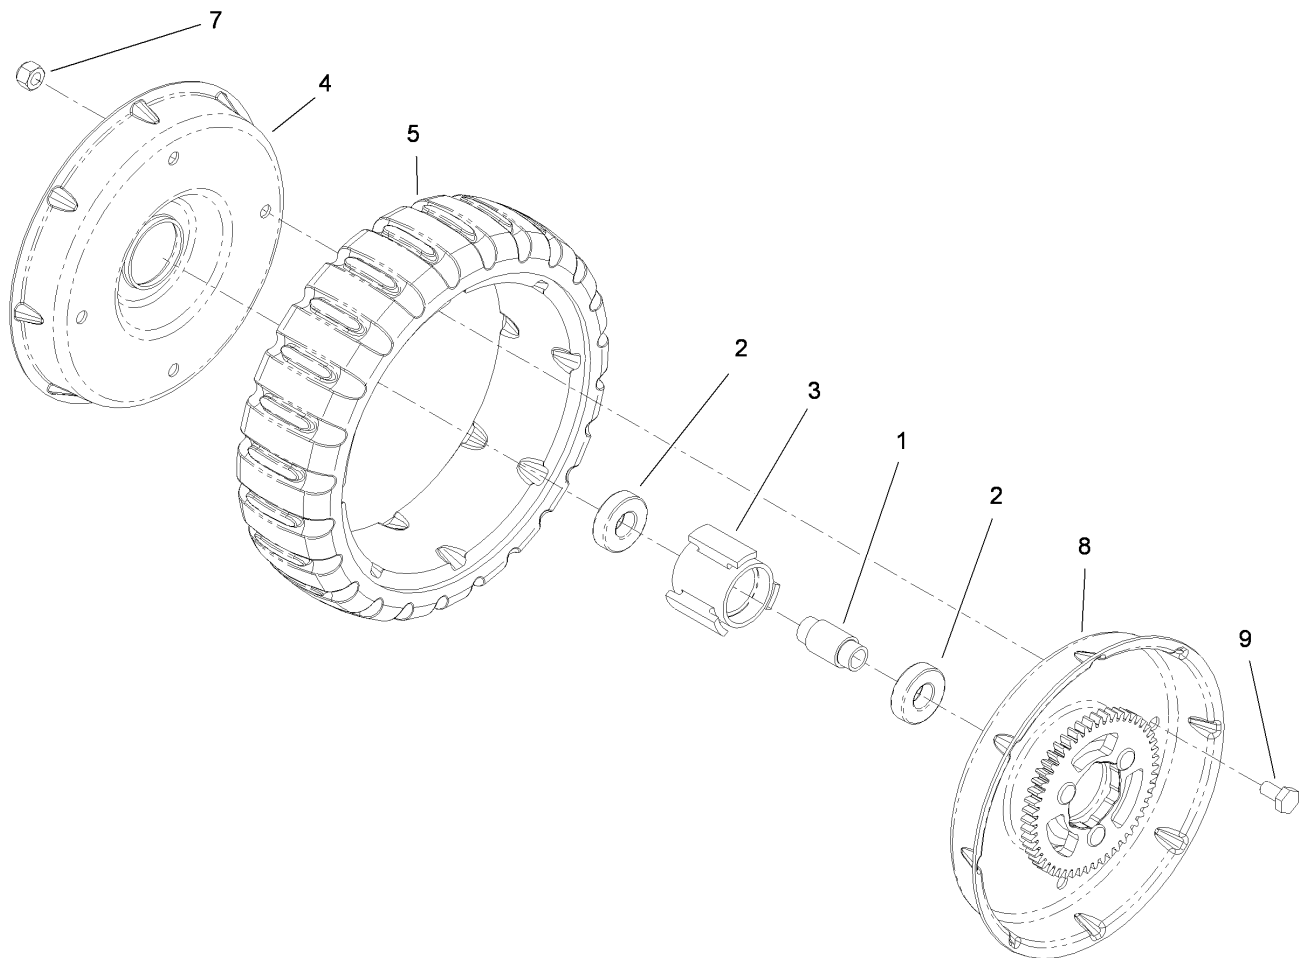


# Wheel Assembly No. 117-5253

| Ref | Part No. | Qty. | Description    |  |  |  |  |
|-----|----------|------|----------------|--|--|--|--|
| 1   | 52-2440  | 1    | Spacer-Bearing |  |  |  |  |
| 2   | 52-2450  | 2    | Bearing-Wheel  |  |  |  |  |
| 3   | 52-2410  | 1    | Hub-Bearing    |  |  |  |  |
| 4   | 117-5250 | 1    | Wheel-Half     |  |  |  |  |
| 5   | 110-9499 | 1    | Tire-8 Inch    |  |  |  |  |
| 7   | 3296-42  | 4    | Nut-Lock, NI   |  |  |  |  |
| 8   | 117-5251 | 1    | Hub Gear ASM   |  |  |  |  |
| 9   | 321-2    | 4    | Screw-HH       |  |  |  |  |

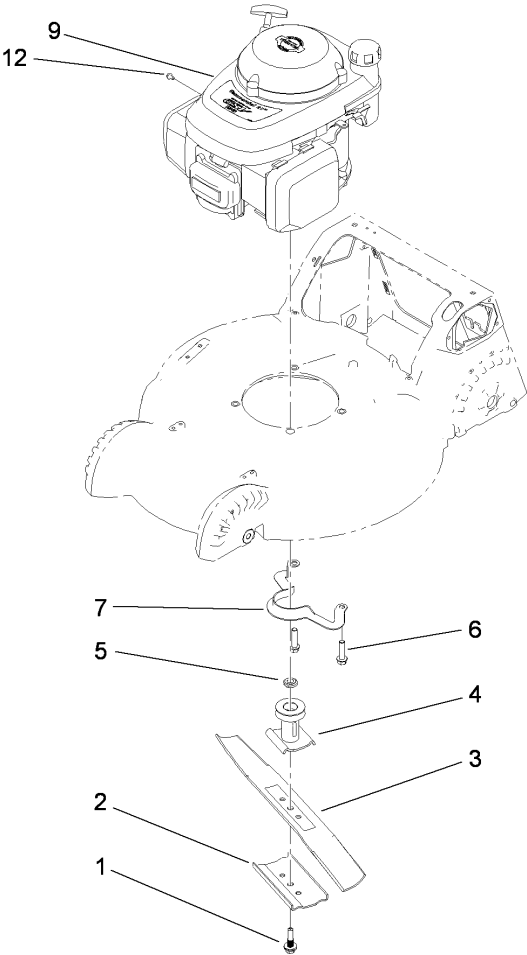


Engine and Blade Assembly

| Ref | Part No.    | Qty. | Description                |  |  |  |  |
|-----|-------------|------|----------------------------|--|--|--|--|
| 1   | 117-5270    | 1    | Bolt-Blade                 |  |  |  |  |
| 2   | 108-3766-03 | 1    | Support-Blade              |  |  |  |  |
| 3   | 108-3759-03 | 1    | Blade-Bagging              |  |  |  |  |
| 4   | 114-2774    | 1    | Driver-Blade               |  |  |  |  |
| 5   | 106-3999    | 1    | Spacer-Driver              |  |  |  |  |
| 6   | 32144-102   | 3    | Screw-HWH                  |  |  |  |  |
| 7   | 108-8110-03 | 1    | Guide-Belt                 |  |  |  |  |
| 9   |             | 1    | Engine-Honda, Gsv190La A3T |  |  |  |  |
| 12  | 98-1394     | 1    | Screw-HWH                  |  |  |  |  |

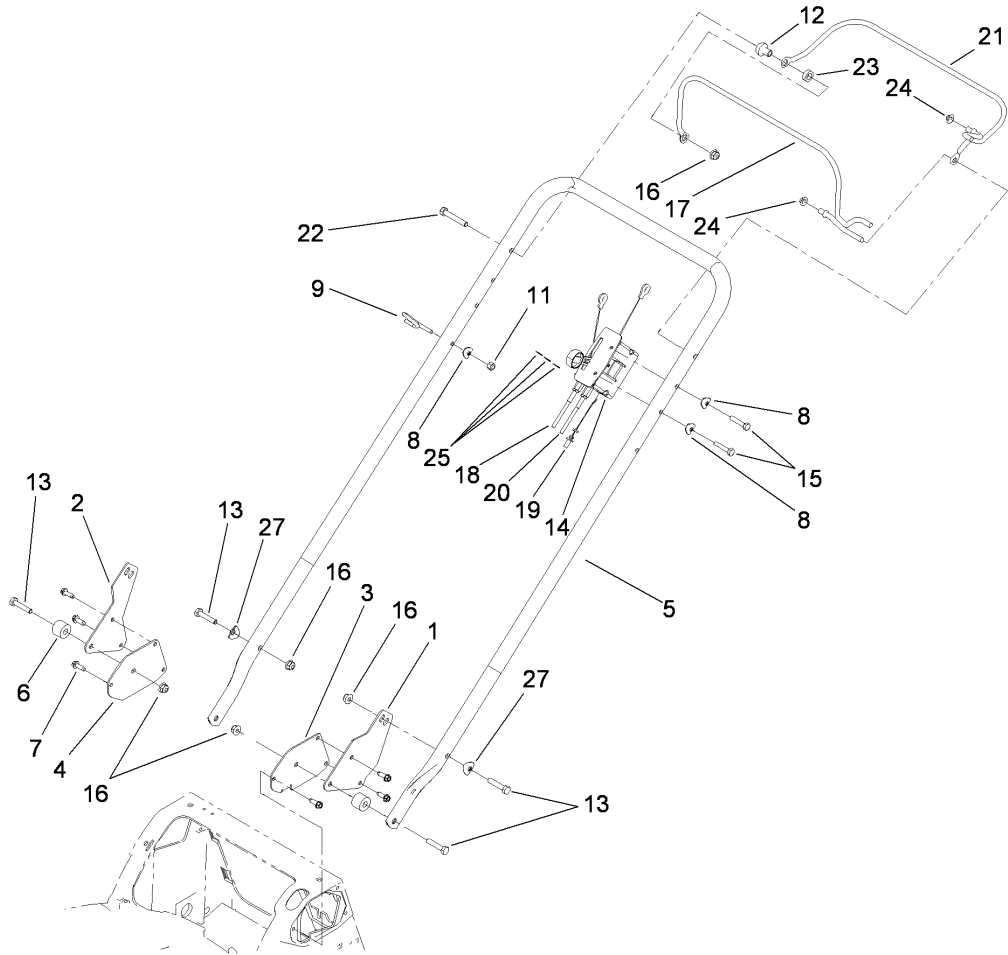


Handle Assembly

| Ref | Part No.    | Qty. | Description            | Ref | Part No. | Qty. | Description |
|-----|-------------|------|------------------------|-----|----------|------|-------------|
| 1   | 110-9494-03 | 1    | Support-Strut, LH      | 27  | 107-3844 | 2    | Washer      |
| 2   | 110-9495-03 | 1    | Support-Strut, RH      |     |          |      |             |
| 3   | 114-2760-03 | 1    | Plate-Handle, Traction |     |          |      |             |
| 4   | 110-9471-03 | 1    | Plate-Handle           |     |          |      |             |
| 5   | 107-4162-03 | 1    | Handle                 |     |          |      |             |
| 6   | 112-8797-03 | 2    | Spacer                 |     |          |      |             |
| 7   | 49-2040     | 6    | Screw-HWHTF            |     |          |      |             |
| 8   | 3-7501      | 3    | Washer                 |     |          |      |             |
| 9   | 114-2775    | 1    | Guide-Rope             |     |          |      |             |
| 11  | 3296-42     | 1    | Nut-Lock, NI           |     |          |      |             |
| 12  | 49-1630     | 1    | Spacer-Support         |     |          |      |             |
| 13  | 322-7       | 4    | Screw-HH               |     |          |      |             |
| 14  | 108-2645    | 1    | Control-Head, Throttle |     |          |      |             |
| 15  | 321-13      | 2    | Screw-HH               |     |          |      |             |
| 16  | 104-8300    | 5    | Nut-Flange, NI         |     |          |      |             |
| 17  | 114-2768-03 | 1    | Bail-Brake             |     |          |      |             |
| 18  | 114-2771    | 1    | Cable-Brake            |     |          |      |             |
| 19  | 110-4923    | 1    | Throttle Cable ASM     |     |          |      |             |
| 20  | 115-3170    | 1    | Cable-Traction         |     |          |      |             |
| 21  | 114-2769-03 | 1    | Bail-Traction          |     |          |      |             |
| 22  | 322-10      | 1    | Screw-HH               |     |          |      |             |
| 23  | 256-276     | 1    | Spacer-Nylon           |     |          |      |             |
| 24  | 109-0917    | 2    | Nut-Push               |     |          |      |             |
| 25  | 32151-86    | 3    | E-Ring                 |     |          |      |             |

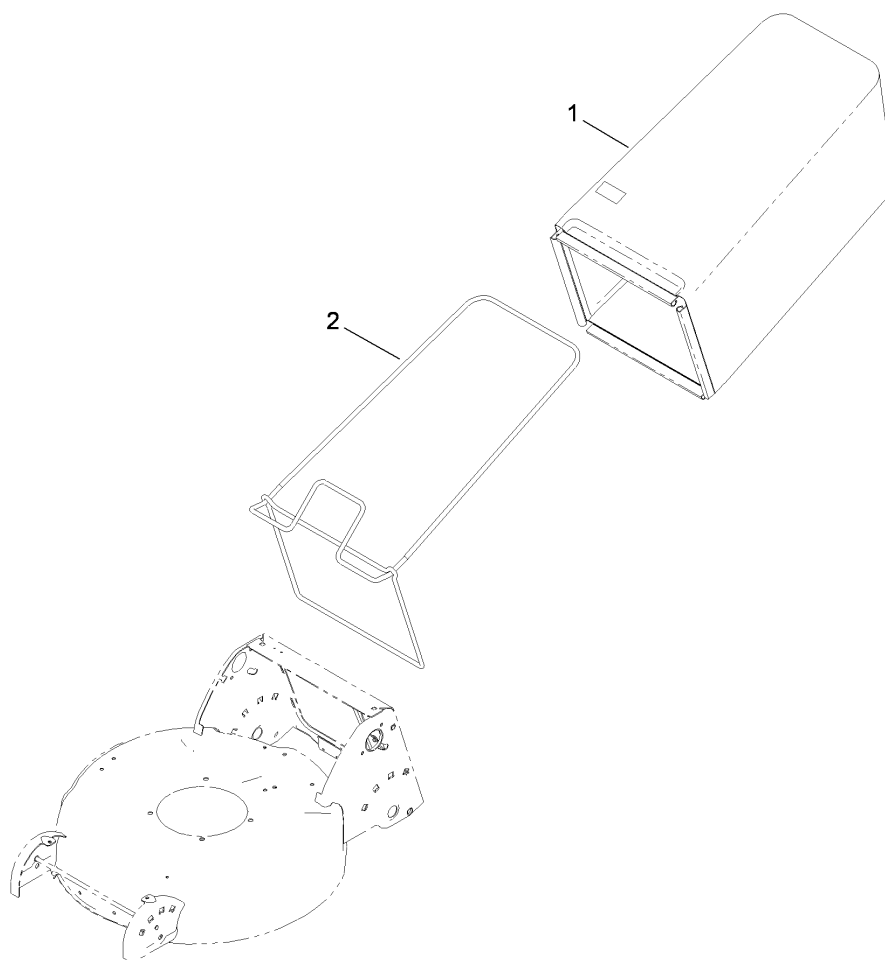

## Rear Bag Assembly


| Ref | Part No.    | Qty. | Description   |
|-----|-------------|------|---------------|
| 1   | 117-4191    | 1    | Grass Bag ASM |
| 2   | 112-8750-03 | 1    | Frame-Bag     |

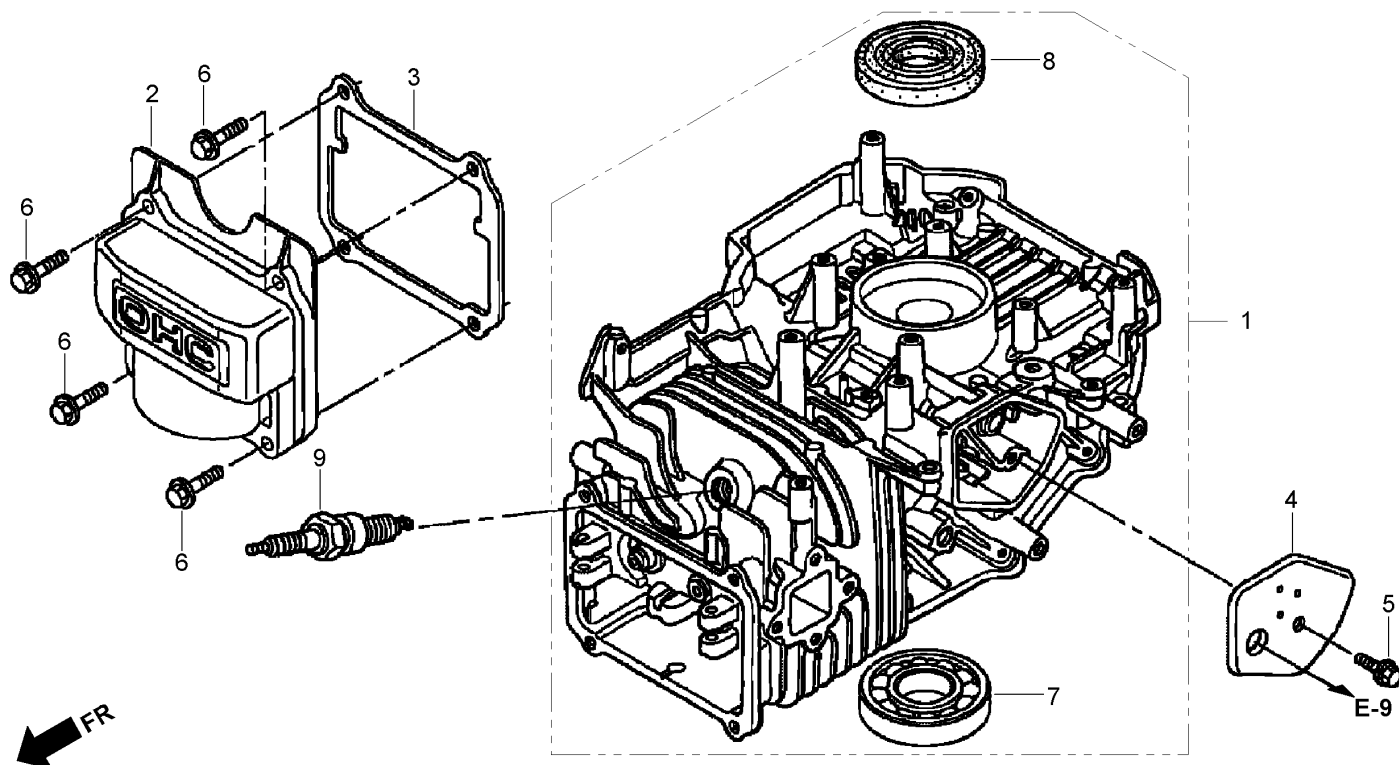

# Cylinder Barrel Assembly

## Honda GSV190LA A3T


| Ref | Part No.      | Qty. | Description                         |  |  |  |  |
|-----|---------------|------|-------------------------------------|--|--|--|--|
| 21  | 12000-Z2C-000 | 1    | Cylinder ASM                        |  |  |  |  |
| 22  | 12311-Z2A-000 | 1    | Cover-Head, Cylinder                |  |  |  |  |
| 23  | 12312-Z2A-000 | 1    | Gasket-Cover, Head                  |  |  |  |  |
| 24  | 12355-ZL8-000 | 1    | Cover-Breather (Breather Valve ASM) |  |  |  |  |
| 25  | 90014-952-000 | 1    | Bolt-Flange (6X14) (C T200)         |  |  |  |  |
| 26  | 90121-952-000 | 4    | Bolt-Flange (6X25) (C T 200)        |  |  |  |  |
| 27  | 91001-894-004 | 1    | Bearing-Ball, Radial                |  |  |  |  |
| 28  | 91201-Z2A-003 | 1    | Seal-Oil (25.4X74X6)                |  |  |  |  |
| 29  | 98079-55846   | 1    | Spark Plug (B P R 5E S) (N G K)     |  |  |  |  |

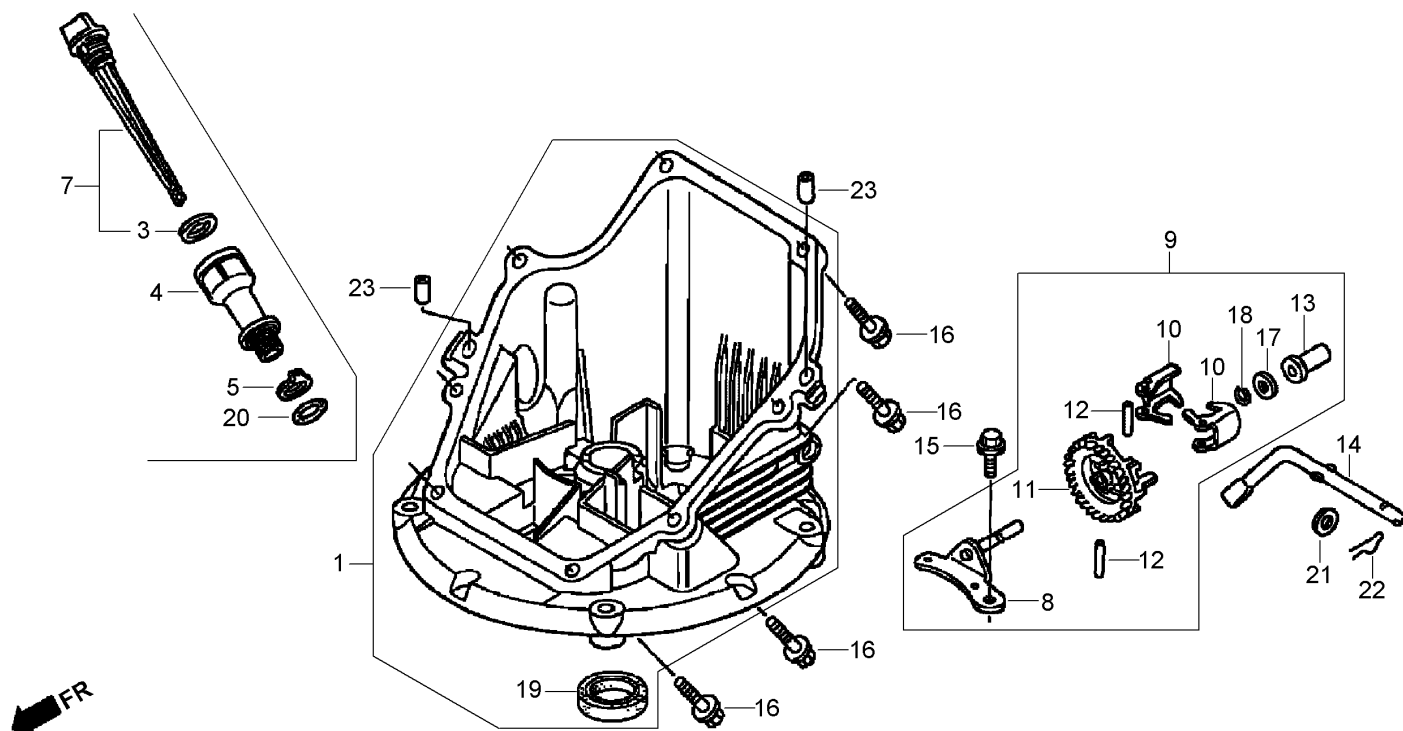

## Oil Pan Assembly Honda GSV190LA A3T

| Ref | Part No.      | Qty. | Description                 |
|-----|---------------|------|-----------------------------|
| ②1  | 11300-Z0Y-406 | 1    | Oil Pan ASM                 |
| ②3  | 15625-ZE6-000 | 1    | Gasket-Cap, Oil Filler      |
| ②4  | 15631-ZM0-000 | 1    | Extension-Filler, Oil       |
| ②5  | 15639-ZM0-000 | 1    | Washer-Lock, Extension      |
| ②7  | 15650-ZM0-801 | 1    | Oil Level Gauge ASM         |
| ②8  | 16508-ZM0-010 | 1    | Shaft-Holder, Governor      |
| ②9  | 16510-ZM0-010 | 1    | Governor ASM                |
| ②10 | 16511-ZL8-000 | 2    | Weight-Governor             |
| ②11 | 16512-ZM0-000 | 1    | Holder-Weight, Governor     |
| ②12 | 16513-ZE1-000 | 2    | Pin-Weight, Governor        |
| ②13 | 16531-ZE1-000 | 1    | Slider-Governor             |
| ②14 | 16541-ZM0-000 | 1    | Shaft-Arm, Governor         |
| ②15 | 90014-952-000 | 1    | Bolt-Flange (6X14) (C T200) |


| Ref | Part No.      | Qty. | Description                  |
|-----|---------------|------|------------------------------|
| ②16 | 90121-952-000 | 8    | Bolt-Flange (6X25) (C T 200) |
| ②17 | 90451-ZE1-000 | 1    | Washer-Thrust (6Mm)          |
| ②18 | 90602-ZE1-000 | 1    | Clip-Holder, Governor        |
| ②19 | 91202-ZL8-003 | 1    | Seal-Oil (28X41.25X6)        |
| ②20 | 91356-MA6-005 | 1    | O-Ring (14.8X24) (N O K)     |
| ②21 | 94101-06800   | 1    | Washer-Plain (6Mm)           |
| ②22 | 94251-08000   | 1    | Pin-Lock (8Mm)               |
| ②23 | 94301-08200   | 2    | Pin-Dowel (8X20)             |

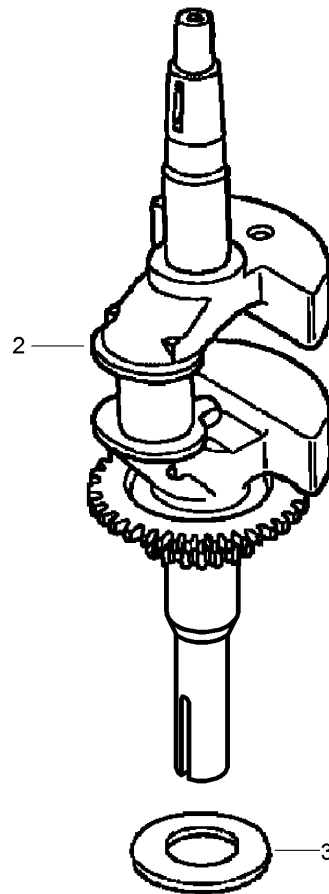

# Crankshaft Assembly

## Honda GSV190LA A3T
 
| Ref | Part No.      | Qty. | Description   |
|-----|---------------|------|---------------|
| 2   | 13310-Z0Y-610 | 1    | Crankshaft    |
| 3   | 90402-ZL8-000 | 1    | Washer-Thrust |

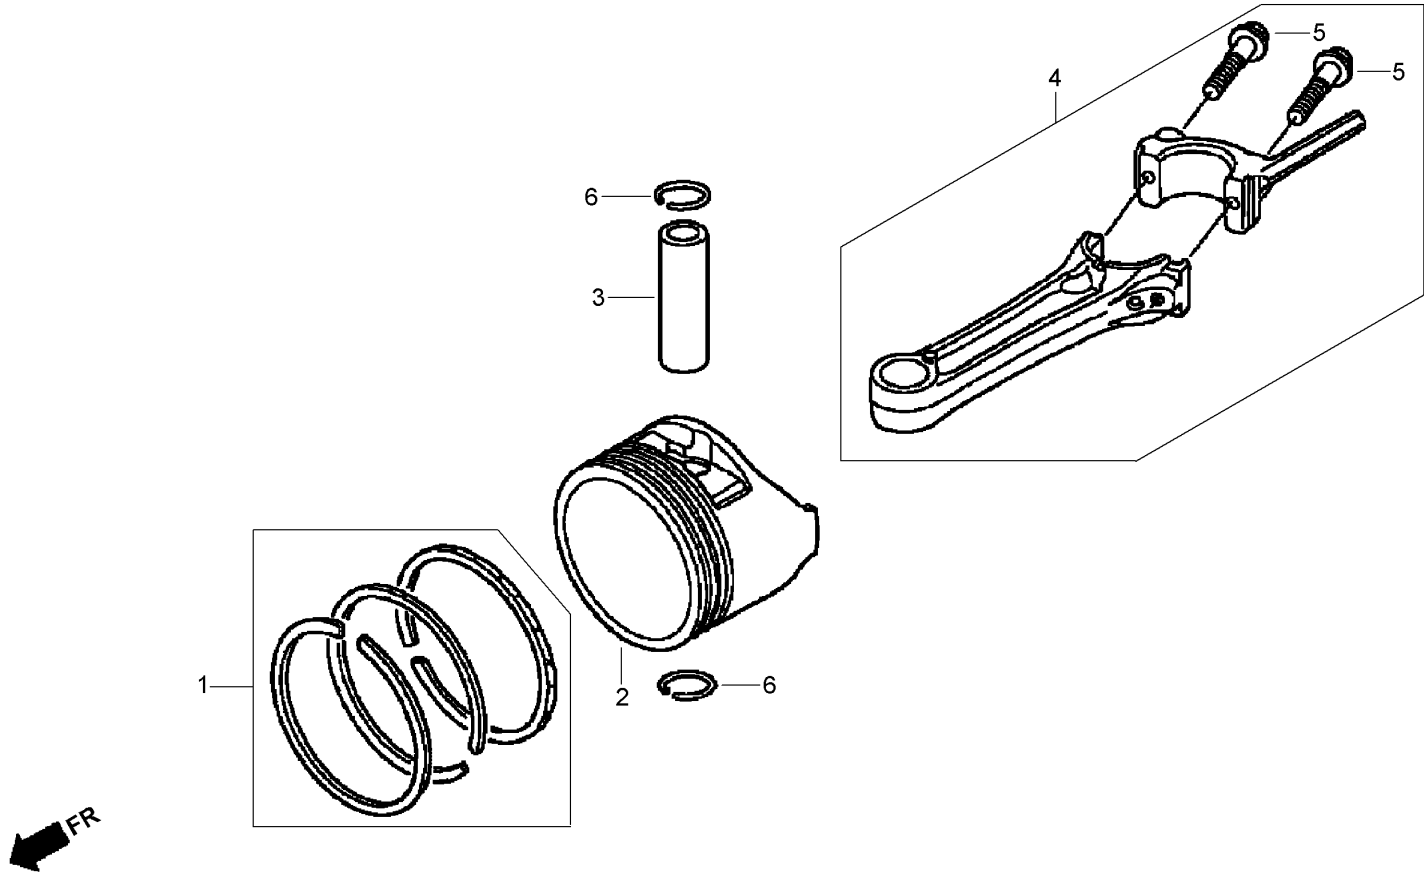

**Piston and Connecting Rod Assembly**  
**Honda GSV190LA A3T**

| Ref | Part No.      | Qty. | Description                     |  |  |  |  |
|-----|---------------|------|---------------------------------|--|--|--|--|
| ❶1  | 13010-Z2C-014 | 1    | Piston Ring Set (STD) (Teikoku) |  |  |  |  |
| ❷2  | 13101-Z0Y-010 | 1    | Piston                          |  |  |  |  |
| ❸3  | 13111-Z0Y-000 | 1    | Pin-Piston                      |  |  |  |  |
| ❹4  | 13200-Z0Y-010 | 1    | Connecting Rod ASM              |  |  |  |  |
| ❺5  | 90001-ZE1-000 | 2    | Bolt-Rod, Connecting            |  |  |  |  |
| ❻6  | 90551-ZE0-000 | 2    | Clip-Pin, Piston (13Mm)         |  |  |  |  |




# Camshaft Pulley Assembly

## Honda GSV190LA A3T

| Ref | Part No.      | Qty. | Description                |
|-----|---------------|------|----------------------------|
| ❷1  | 12209-ZM0-003 | 1    | Seal-Stem, Valve           |
| ❷2  | 14320-Z0Y-000 | 1    | Pulley-Camshaft            |
| ❷3  | 14324-ZL8-000 | 1    | Shaft-Pulley, Cam          |
| ❷4  | 14400-Z0J-014 | 1    | Belt-Timing (84H U7 G-200) |
| ❷5  | 14431-Z0J-000 | 1    | Arm-Rocker, Intake Valve   |
| ❷6  | 14441-Z0J-000 | 1    | Arm-Rocker, Exhaust Valve  |
| ❷7  | 14461-ZL8-000 | 2    | Shaft-Arm, Rocker          |
| ❷8  | 14711-ZL8-000 | 1    | Valve-Intake (Technostar)  |
| ❷8  | 14711-Z0J-000 | 1    | Valve-Intake (Rocknel)     |
| ❷9  | 14721-ZL8-000 | 1    | Valve-Exhaust              |
| ❷10 | 14751-ZL8-000 | 2    | Spring-Valve               |
| ❷11 | 14771-Z0J-000 | 2    | Retainer-Spring, Valve     |
| ❷12 | 90012-333-000 | 2    | Screw-Adjusting, Tappet    |

| Ref | Part No.      | Qty. | Description            |
|-----|---------------|------|------------------------|
| 213 | 90206-001-000 | 2    | Nut-Adjusting, Tappet  |
| 214 | 91301-ZM0-V31 | 1    | O-Ring (6.8X19) (Arai) |

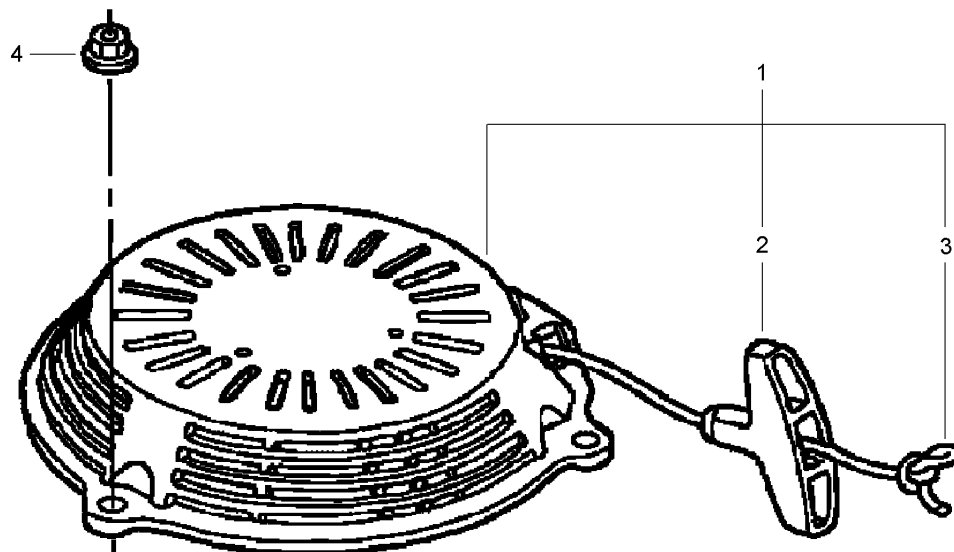


# Recoil Starter Assembly

## Honda GSV190LA A3T

| Ref | Part No.        | Qty. | Description                       |
|-----|-----------------|------|-----------------------------------|
| ②1  | 28400-Z0Y-013ZB | 1    | Recoil Starter ASM (N H1) (Black) |
| ②2  | 28461-ZL8-003   | 1    | Grip-Starter                      |
| ②3  | 28462-ZL8-631   | 1    | Rope-Starter, Recoil (Long Type)  |
| ②4  | 90201-ZM0-000   | 3    | Nut-Flange (6Mm)                  |

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |




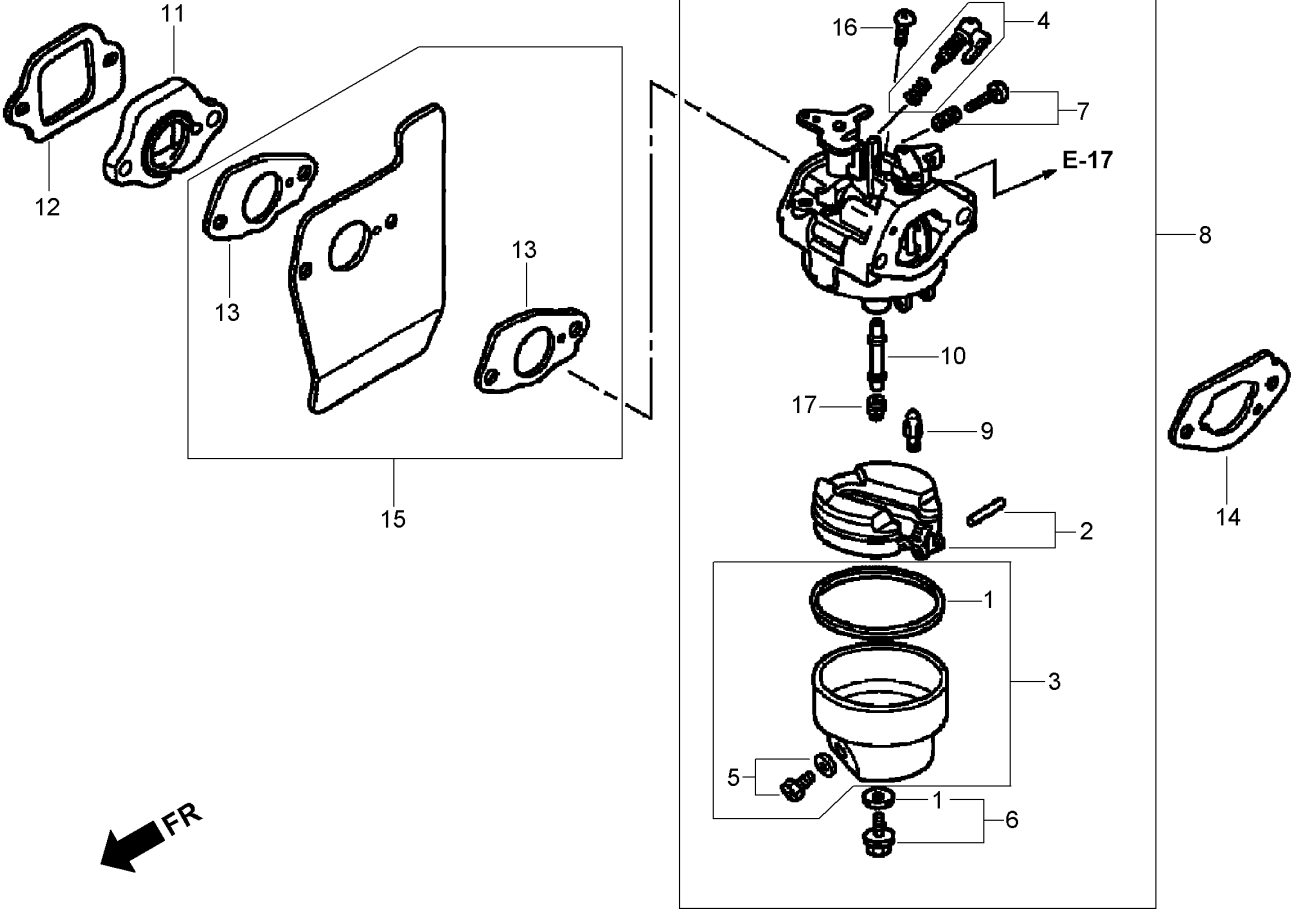

**Carburetor Assembly**  
**Honda GSV190LA A3T**

| Ref | Part No.      | Qty. | Description               |
|-----|---------------|------|---------------------------|
| ❶1  | 16010-883-015 | 1    | Gasket Set                |
| ❷2  | 16013-ZL1-003 | 1    | Float Set                 |
| ❸3  | 16015-887-782 | 1    | Float Chamber Set         |
| ❹4  | 16016-ZG0-W00 | 1    | Screw Set                 |
| ❺5  | 16024-ZE1-811 | 1    | Drain Screw Set           |
| ❻6  | 16028-ZE0-005 | 1    | Screw Set                 |
| ❼7  | 16029-ZG0-901 | 1    | Screw Set (Throttle Stop) |
| ❽8  | 16100-Z2D-811 | 1    | Carburetor ASM (Bb65G A)  |
| ❾9  | 16155-ZM0-013 | 1    | Valve-Float               |
| ❿10 | 16166-Z0Y-003 | 1    | Nozzle-Main               |
| ⓫11 | 16211-ZL8-000 | 1    | Insulator-Carburetor      |
| ⓬12 | 16212-ZL8-000 | 1    | Gasket-Insulator          |
| ⓭13 | 16221-883-800 | 2    | Gasket-Carburetor         |


| Ref | Part No.       | Qty. | Description       |
|-----|----------------|------|-------------------|
| ❶14 | 16228-ZL8-000  | 1    | Gasket-Carburetor |
| ❷15 | 19650-ZM0-000  | 1    | Guide-Air         |
| ❸16 | 93500-05006-0H | 1    | Screw-Pan (5X6)   |
| ❹17 | 99101-124-0620 | 1    | Jet-Main (No.62)  |
| ❺17 | 99101-124-0650 | 1    | Jet-Main (No.65)  |
| ❻17 | 99101-124-0680 | 1    | Jet-Main (No.68)  |

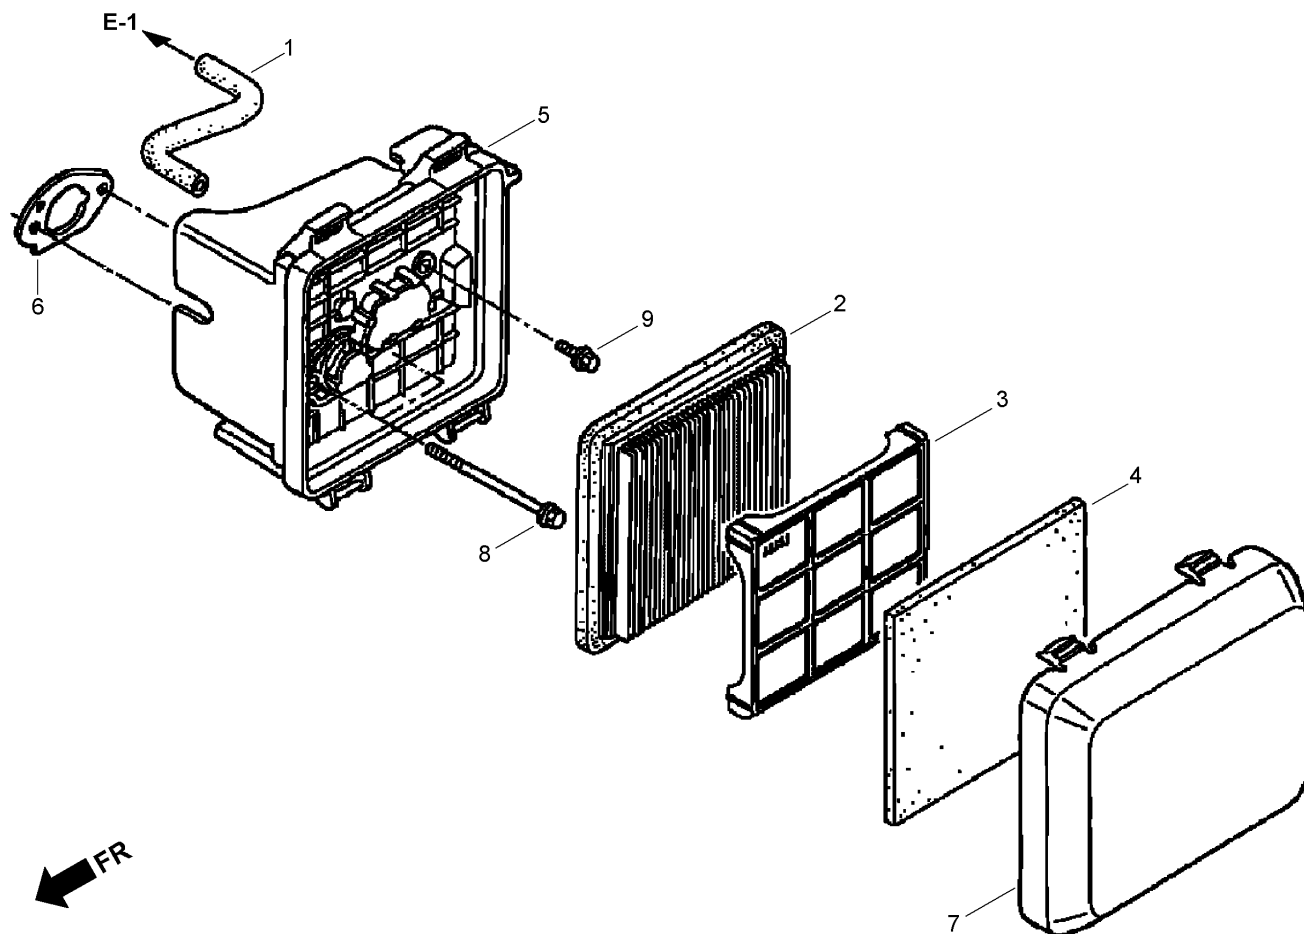 

# Air Cleaner Assembly


## Honda GSV190LA A3T
 
| Ref | Part No.       | Qty. | Description                 |  |  |  |  |
|-----|----------------|------|-----------------------------|--|--|--|--|
| 21  | 15721-ZM0-000  | 1    | Tube-Breather               |  |  |  |  |
| 22  | 17211-ZL8-023  | 1    | Element-Cleaner, Air        |  |  |  |  |
| 23  | 17212-Z2A-000  | 1    | Grid-Cleaner, Air           |  |  |  |  |
| 24  | 17218-Z2A-000  | 1    | Filter (Outer) (Wet)        |  |  |  |  |
| 25  | 17220-ZM0-000  | 1    | Air Cleaner Case ASM        |  |  |  |  |
| 26  | 17228-ZM0-000  | 1    | Gasket-Cleaner, Air         |  |  |  |  |
| 27  | 17231-Z2B-000  | 1    | Cover-Cleaner, Air (Dual)   |  |  |  |  |
| 28  | 90003-ZM0-000  | 2    | Bolt-Flange (6X86) (C T200) |  |  |  |  |
| 29  | 95701-06014-08 | 1    | Bolt-Flange (6X14)          |  |  |  |  |

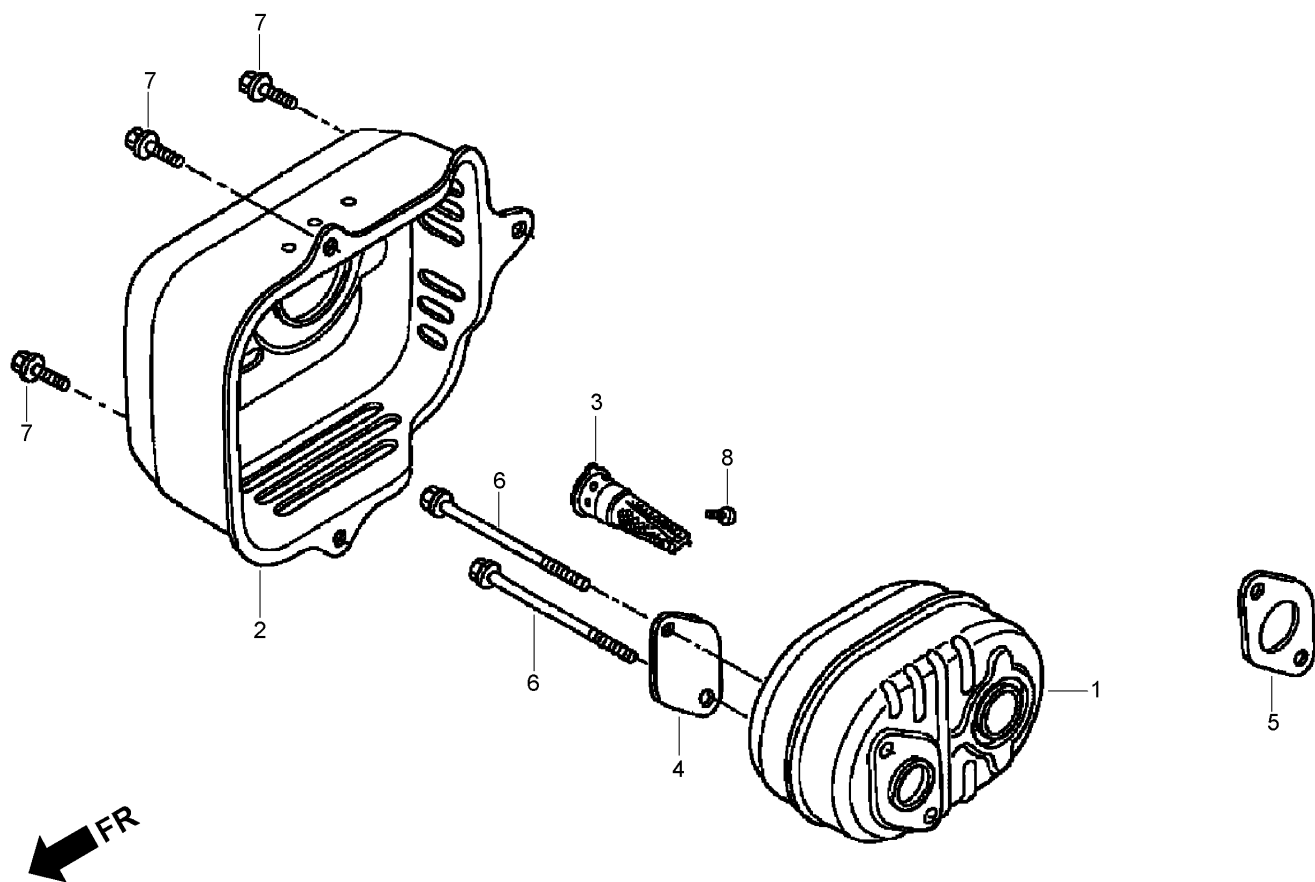

Muffler Assembly  
Honda GSV190LA A3T

| Ref | Part No.      | Qty. | Description                 |  |  |  |  |
|-----|---------------|------|-----------------------------|--|--|--|--|
| ❶   | 18310-Z0Y-000 | 1    | Muffler                     |  |  |  |  |
| ❷   | 18321-Z0L-J00 | 1    | Protector-Muffler           |  |  |  |  |
| ❸   | 18350-ZL8-000 | 1    | Arrester-Spark              |  |  |  |  |
| ❹   | 18356-ZL8-000 | 1    | Plate-Number, Arrester      |  |  |  |  |
| ❺   | 18381-ZL8-305 | 1    | Gasket-Muffler              |  |  |  |  |
| ❻   | 90004-ZL8-000 | 2    | Bolt-Flange (6X79) (C T200) |  |  |  |  |
| ❼   | 90013-883-000 | 3    | Bolt-Flange (6X12) (C T200) |  |  |  |  |
| ❽   | 90055-ZE1-000 | 1    | Screw-Tapping (4X6)         |  |  |  |  |

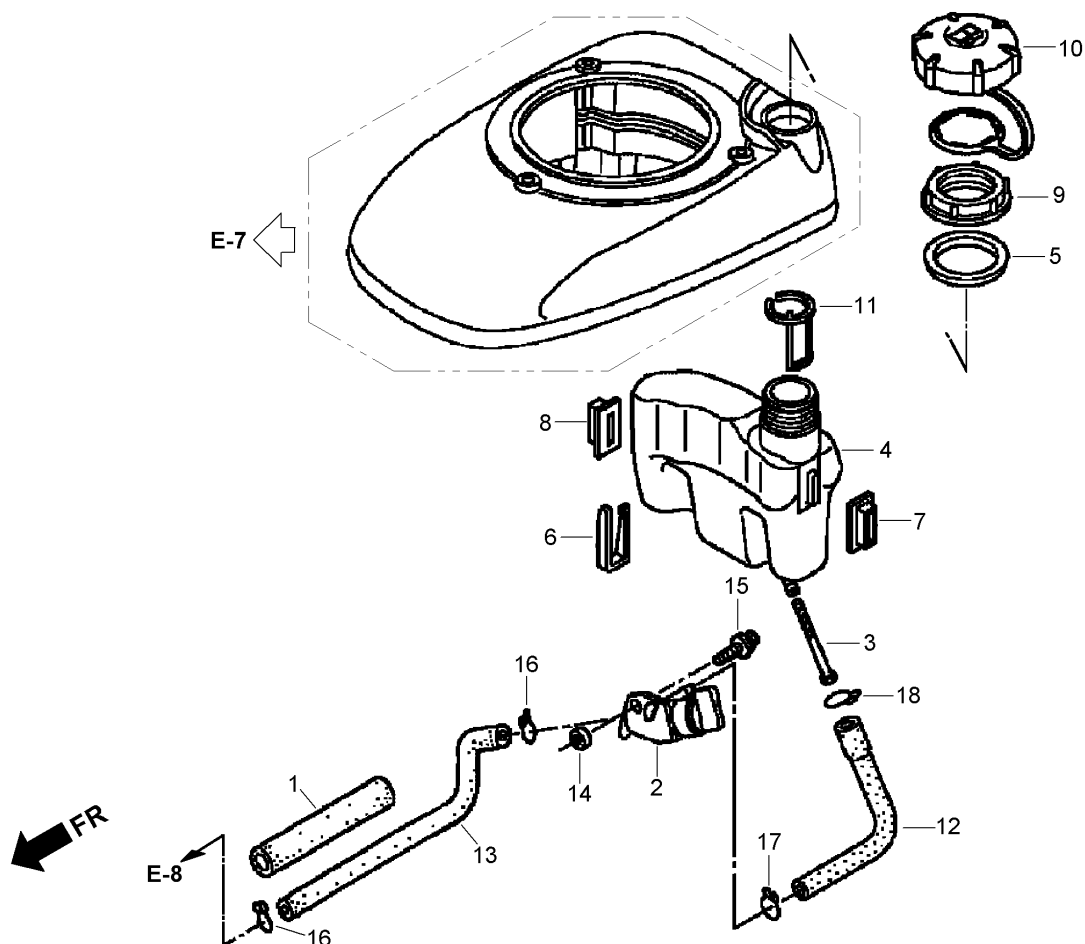


# Fuel Tank Assembly

## Honda GSV190LA A3T

| Ref | Part No.      | Qty. | Description               |
|-----|---------------|------|---------------------------|
| 21  | 16854-ZH8-000 | 1    | Supporter-Rubber (107 Mm) |
| 22  | 16950-ZM0-003 | 1    | Petcock ASM               |
| 23  | 16952-ZA8-800 | 1    | Filter-Fuel               |
| 24  | 17511-Z0L-000 | 1    | Tank-Fuel                 |
| 25  | 17514-Z0L-000 | 1    | Seal-Neck, Fuel Filler    |
| 26  | 17516-Z0L-000 | 1    | Clip-Mounting, Tank       |
| 27  | 17532-Z0L-000 | 1    | Rubber A-Mounting, Tank   |
| 28  | 17533-Z0L-000 | 1    | Rubber B-Mounting, Tank   |
| 29  | 17534-Z0L-000 | 1    | Nut-Mounting, Tank        |
| 210 | 17620-Z0J-800 | 1    | Fuel Tank Cap ASM         |
| 211 | 17636-Z0L-000 | 1    | Gauge-Level, Fuel         |
| 212 | 17701-Z0L-810 | 1    | Tube-Tank, Fuel           |
| 213 | 17702-ZM0-800 | 1    | Tube-Fuel                 |


| Ref  | Part No.       | Qty. | Description          |
|------|----------------|------|----------------------|
| ② 14 | 91501-Z0L-800  | 1    | Collar-Petcock, Fuel |
| ② 15 | 93891-05010-08 | 1    | Screw-Washer (5X10)  |
| ② 16 | 95002-02080    | 2    | Clip-Tube (B8)       |
| ② 17 | 95002-02100    | 1    | Clip-Tube (B10)      |
| ② 18 | 95002-70000    | 1    | Clip-Tube (C11)      |

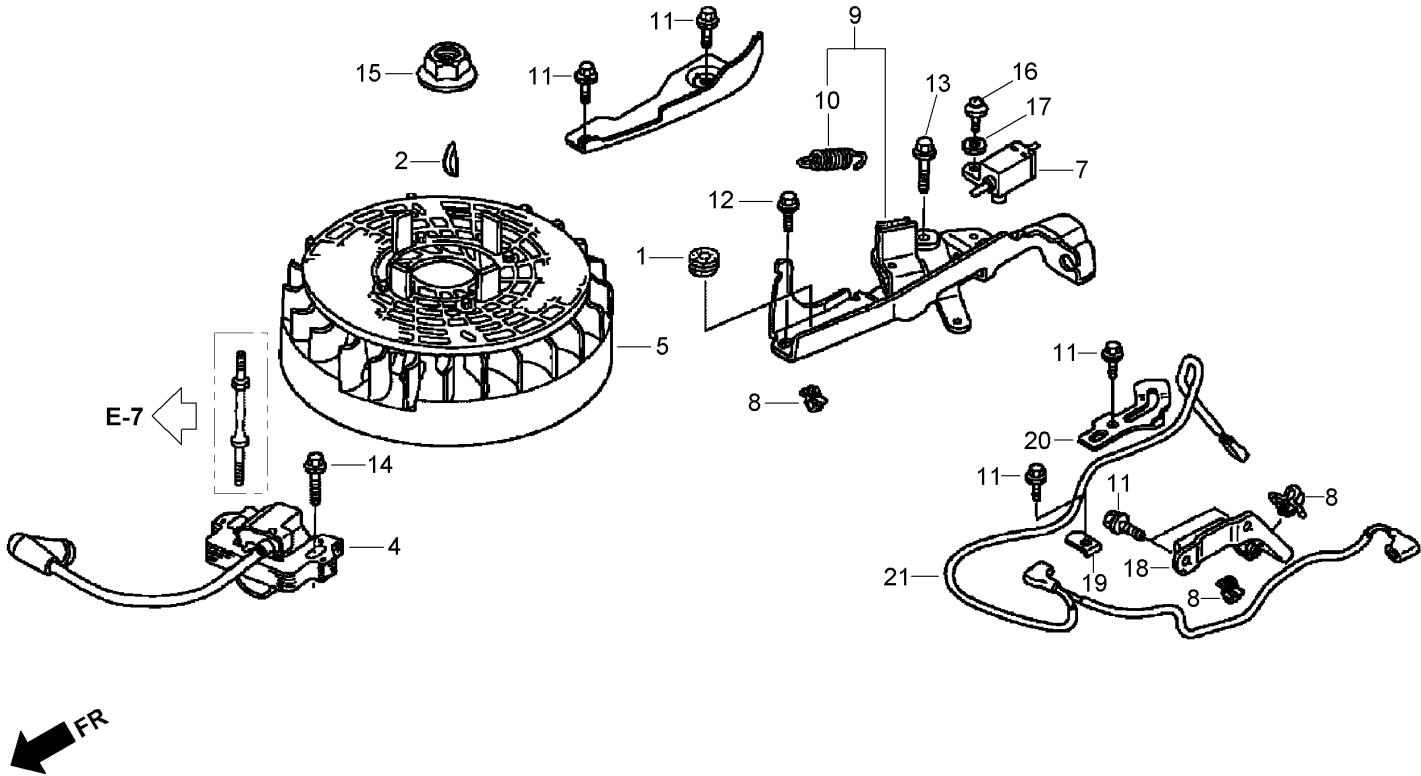

**Flywheel Assembly**  
**Honda GSV190LA A3T**


| Ref | Part No.      | Qty. | Description                                             |
|-----|---------------|------|---------------------------------------------------------|
| ❶1  | 11344-MB0-000 | 1    | Grommet A-Cover, R R (8X16X6.6)                         |
| ❶1  | 11344-Z0L-800 | 1    | Grommet A, Rr Cover (8X16X8)                            |
| ❷2  | 13331-357-000 | 1    | Key-Woodruff, Special (25X18)                           |
| ❹4  | 30500-Z0J-003 | 1    | Ignition Coil ASM (Phelon) (Use For Flywheel Of Phelon) |
| ❺5  | 31105-Z0Y-010 | 1    | Flywheel ASM (Phelon) (Use For Ignition Coil Of Phelon) |
| ❷7  | 35120-ZM0-003 | 1    | Engine Stop Switch ASM (N C)                            |
| ❸8  | 51125-Z0L-003 | 1    | Holder-Wire (Fastex)                                    |
| ❸8  | 90681-959-003 | 1    | Clip A-Cable (Nifco)                                    |
| ❹9  | 75110-Z0L-800 | 1    | Brake ASM                                               |
| ❹10 | 75113-ZM0-000 | 1    | Spring-Lever, Brake                                     |
| ❹11 | 90013-883-000 | 2    | Bolt-Flange (6X12) (C T200)                             |
| ❹12 | 90014-952-000 | 1    | Bolt-Flange (6X14) (C T200)                             |
| ❹13 | 90018-ZE1-000 | 1    | Bolt-Flange (6X23) (C T200)                             |

| Ref | Part No.       | Qty. | Description                 |
|-----|----------------|------|-----------------------------|
| ❹14 | 90022-888-010  | 1    | Bolt-Flange (6X20) (C T200) |
| ❹15 | 90213-S3Y-000  | 1    | Nut-Flange (14Mm)           |
| ❹16 | 93892-04012-00 | 1    | Screw-Washer (4X12)         |
| ❹17 | 94103-04000    | 1    | Washer-Plain (4Mm)          |
| ❹18 | 30547-Z0L-S00  | 1    | Clamp-Wire, Stop Switch     |
| ❹19 | 30548-ZL8-000  | 1    | Clamp-Wire, Stop Switch     |
| ❹20 | 30549-ZL8-000  | 1    | Clamp-Wire                  |
| ❹21 | 32195-Z0L-S00  | 1    | Wire-Switch, Stop           |

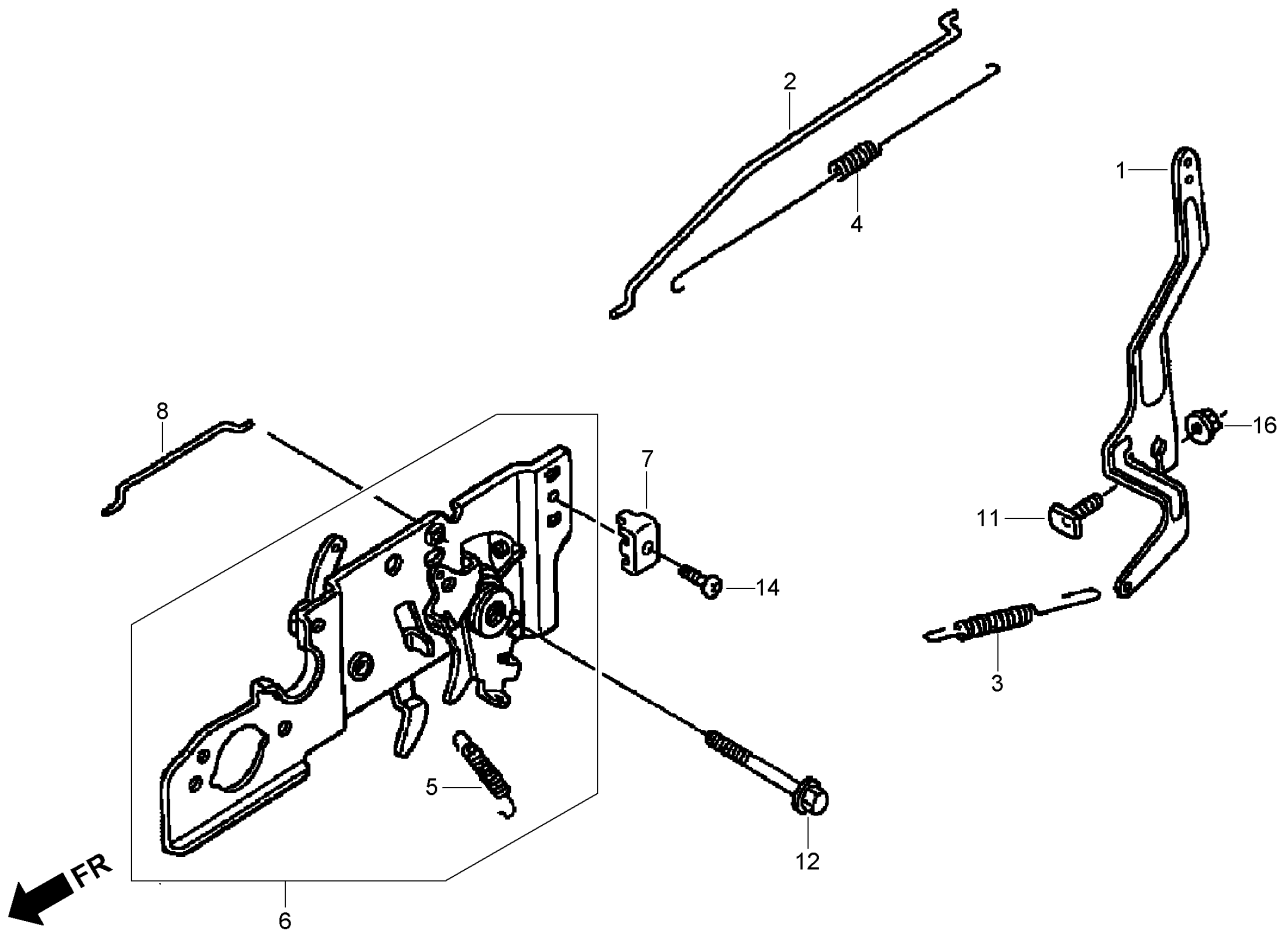 

**Control Assembly**  
**Honda GSV190LA A3T**

| Ref | Part No.       | Qty. | Description                |  |  |  |  |
|-----|----------------|------|----------------------------|--|--|--|--|
| ❶   | 16551-ZM0-010  | 1    | Arm-Governor               |  |  |  |  |
| ❷   | 16555-Z0L-800  | 1    | Rod-Governor               |  |  |  |  |
| ❸   | 16561-Z0L-000  | 1    | Spring-Governor            |  |  |  |  |
| ❹   | 16562-ZM0-000  | 1    | Spring-Return, Throttle    |  |  |  |  |
| ❺   | 16576-ZE7-300  | 1    | Spring-Lever               |  |  |  |  |
| ❻   | 16580-ZM0-030  | 1    | Base, Control              |  |  |  |  |
| ❼   | 16617-VG3-000  | 1    | Holder-Cable               |  |  |  |  |
| ❽   | 16674-ZM0-000  | 1    | Rod-Choke                  |  |  |  |  |
| ❾   | 90015-ZE5-010  | 1    | Bolt-Arm, Governor         |  |  |  |  |
| ❿   | 90016-ZM0-000  | 1    | Bolt-Flange (6X45) (Ct200) |  |  |  |  |
| ⓫   | 93500-05016-0A | 1    | Screw-Pan (5X16)           |  |  |  |  |
| ⓬   | 94050-06000    | 1    | Nut-Flange (6 Mm)          |  |  |  |  |

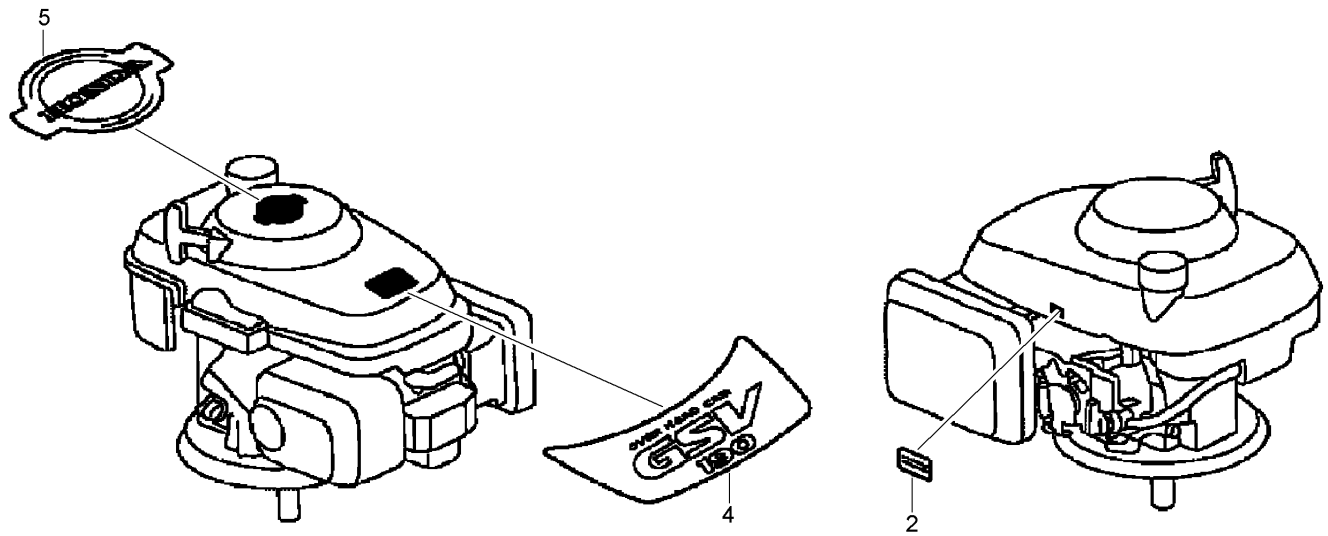

**Label Assembly Honda GSV190LA A3T**

| Ref | Part No.      | Qty. | Description                            |  |  |  |  |
|-----|---------------|------|----------------------------------------|--|--|--|--|
| 22  | 87114-ZH7-821 | 1    | Label-Warning (Not Certified For Sale) |  |  |  |  |
| 24  | 87101-Z8E-000 | 1    | Mark, Emblem (Gsv190)                  |  |  |  |  |
| 25  | 87169-Z8E-000 | 1    | Mark, Recoil Cover                     |  |  |  |  |

