



Spreader Base Unit

2002 and later Workman® 3000/4000 and HD Series Utility Vehicle

Model No. 41253 - 290000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Frame Assembly	 3	Hydraulic Assembly	 5
Hopper Support Assembly	 4	Hydraulic Motor Assembly No. 115-7852	 6
		Drive Shaft Assembly No. 105-9536	 7


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR.	as required	HYD.	hydraulic
ASM.	assembly	LH.	left hand
BBC.	blade brake clutch	NI.	nylon insert
CARR.	carriage	NPTF.	national pipe thread fine
DEG.	degrees	PFH.	phillips flat head
EXT.	external	PPH.	phillips pan head
FH.	flat head	PPHTF.	phillips pan head thread forming
GA.	gauge	PRH.	phillips round head
HD.	heavy-duty	PTH.	phillips truss head
HF.	hex flange	PTO.	power-take-off
HH.	hex head	RH.	right hand
HHF.	hex head flange	ROPS.	roll-over protection system
HHFTF.	hex head flange thread forming	SFH.	slotted fillister head
HJ.	hex jam	SHH.	slotted hex head
HLH.	hex lag head	SHWH.	slotted hex washer head
HOC.	height-of-cut	SPH.	slotted pan head
HSBH.	hex socket button head	SQH.	square head
HSFH.	hex socket flat head	SRH.	slotted round head
HS.	hex socket head	STD.	standard
HWH.	hex washer head	TAP.	self tapping
HWHTF.	hex washer head thread forming	TTH.	torx truss head

Footnotes


- ❶ Not serviced separately

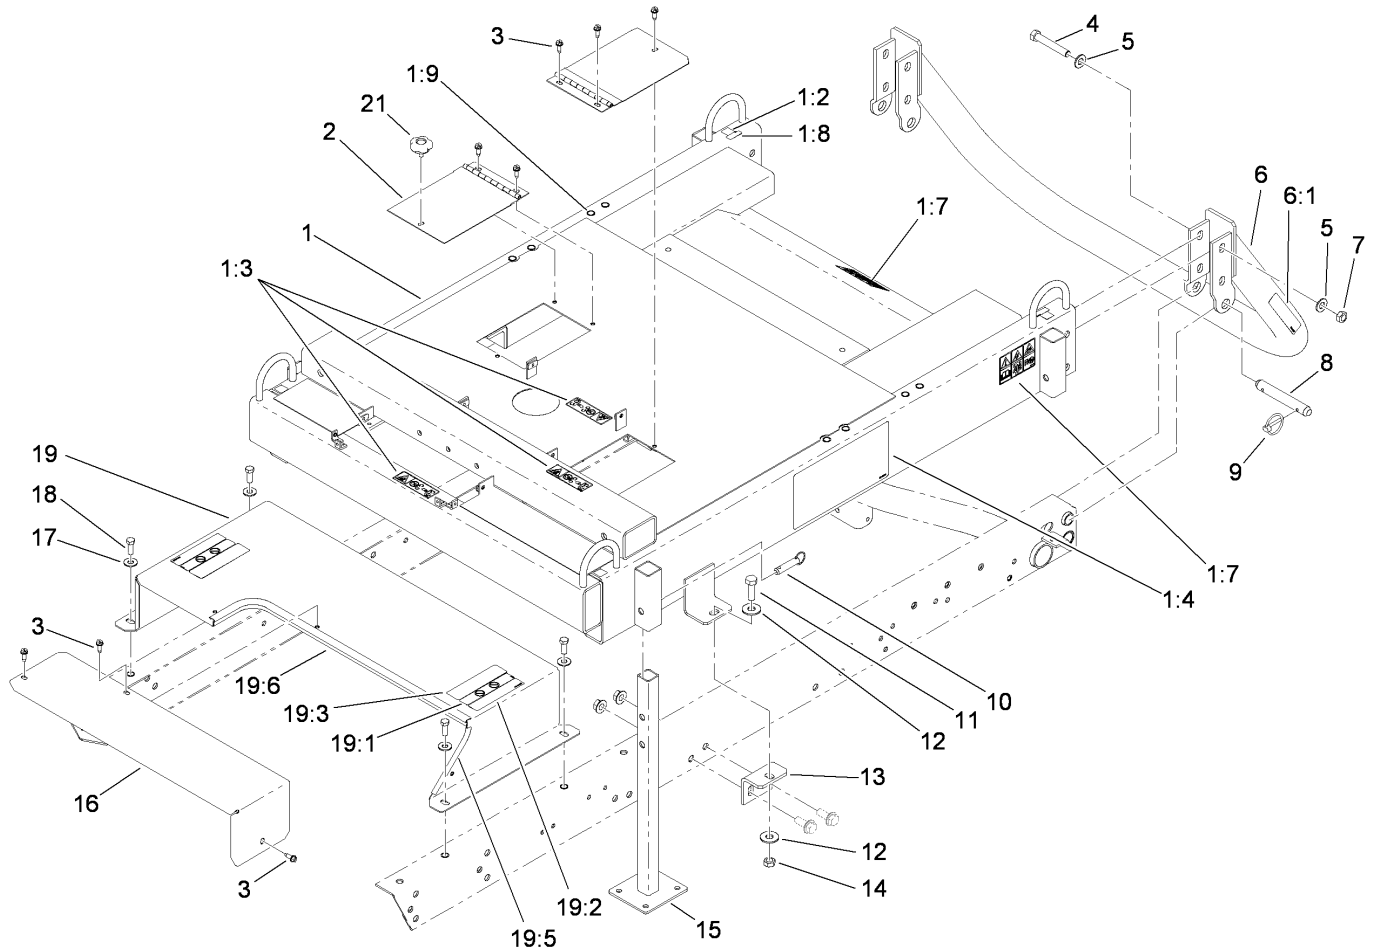

Frame Assembly


Ref	Part No.	Qty.	Description
1	106-2252	1	Frame ASM
1:2	93-9084	4	Decal-Point, Lift
1:3	117-4979	3	Decal-Warning, Shields (Ce)
1:4	93-9863	2	Decal-Danger, Tipover
1:7	117-4977	3	Decal-Risk, Residual (Ce)
1:8	93-9528	4	Decal-Value, Kilogram
1:9	32148-10	8	Insert-Nut
2	92-8211-03	2	Service Door ASM
3	32104-95	8	Screw-HWH
4	325-13	4	Screw-HH
5	3256-26	8	Washer-Flat
6	106-2255	1	Support Tube ASM
6:1	93-6689	2	Decal-No Riders
7	32153-5	4	Nut-Lock, Side
8	92-1233	2	Pin-Clevis
9	92-1298	4	Pin-Lynch
10	100-4523	2	Pin-Hitch
11	325-6	2	Screw-HH
12	3256-6	4	Washer-Flat
13	92-2667-03	2	Bracket-Mount
14	32153-5	2	Nut-Lock, Side
15	105-9482-03	2	Jack Stand ASM
16	93-6427-03	1	Panel-Radiator
17	3256-4	4	Washer-Flat

Ref	Part No.	Qty.	Description
18	323-6	4	Screw-HH
19	106-2275	1	Radiator Cover ASM
19:1	93-6687	2	Decal-No Step
19:2	93-6689	2	Decal-No Riders
19:3	93-7814	2	Decal-Danger
19:5	92-3627	1	Trim
19:6	42657	1	Trim-Panel, Front
21	105-1406	1	Knob

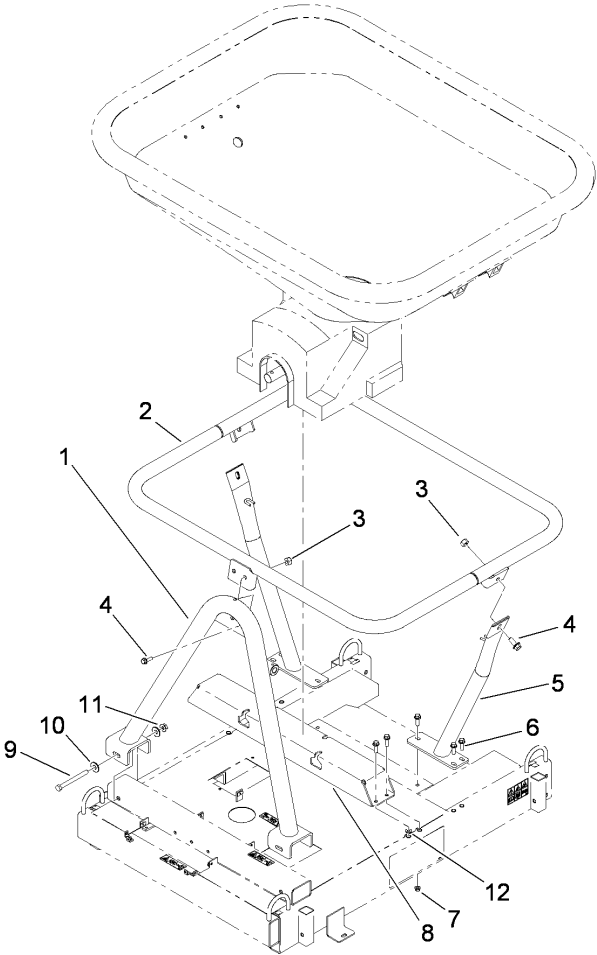


Hopper Support Assembly

Ref	Part No.	Qty.	Description				
1	105-9456-03	1	Support Tube ASM				
2	105-9459-03	1	Upper Frame ASM				
3	3296-25	4	Nut-Lock, NI				
4	3234-32	4	Screw-HHF				
5	105-8007-03	2	Support Tube ASM				
6	3234-24	10	Screw-HHF				
7	32128-40	2	Nut-Flange				
8	105-7973-03	1	Channel-Support				
9	325-19	2	Screw-HH				
10	3256-6	4	Washer-Flat				
11	32128-49	2	Nut-HHF				
12	3256-24	4	Washer-Flat				

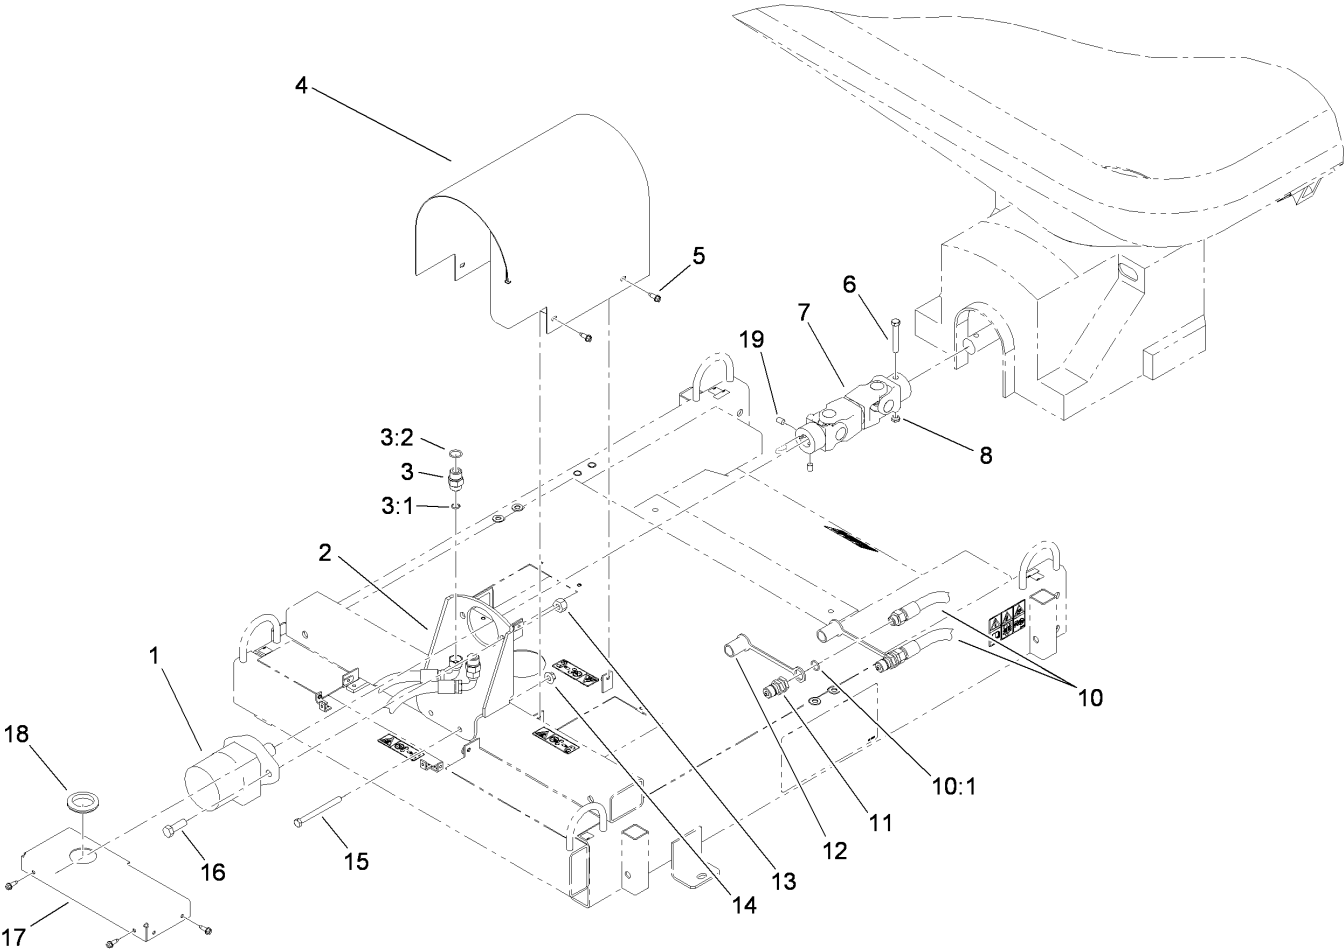

Hydraulic Assembly

Ref	Part No.	Qty.	Description				
1	115-7852	1	Motor-Hydraulic				
2	105-7984-03	1	Motor Mount ASM				
3	340-6	2	Fitting-HYD, Straight				
3:1	237-30	1	O-Ring				
3:2	237-80	1	O-Ring				
4	105-9485-03	1	Drive Shaft Cover ASM				
5	32104-95	8	Screw-HWH				
6	323-12	1	Screw-HH				
7	105-9536	1	Drive Shaft ASM				
8	3296-59	1	Nut-Lock, NI				
10	105-9539	2	HYD Hose ASM				
10:1	237-79	1	O-Ring				
11	105-4170	2	Coupler-Male				
12	105-7963	2	Cap-Dust				
13	3296-25	2	Nut-Lock, NI				
14	32128-19	2	Nut-HF				
15	323-17	2	Screw-HH				
16	325-6	2	Screw-HH				
17	105-9474-03	1	Cover-Access				
18	240-2	1	Grommet-Rubber				
19	3247-3	2	Screw-Set				

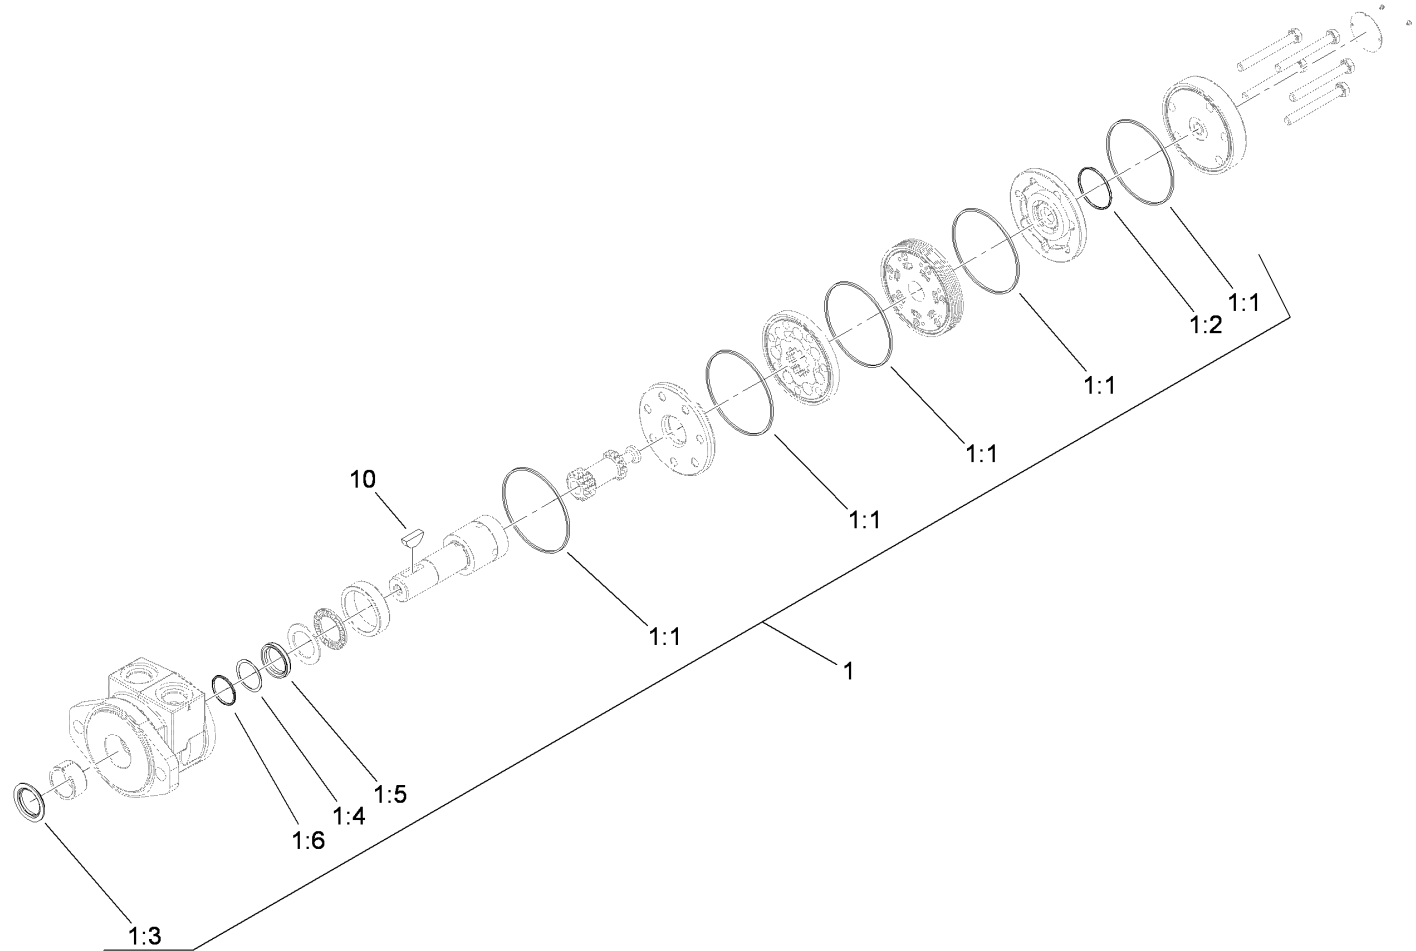

Hydraulic Motor Assembly No. 115-7852

Ref	Part No.	Qty.	Description				
1	106-1989	1	Seal Kit				
1:1		6	Seal-Ring				
1:2		1	Seal-Commutator				
1:3		1	Seal-Dirt And Water				
1:4		1	Washer-Backup				
1:5		1	Seal-Shaft				
1:6		1	Ring-Back Up				
10	106-1990	1	Key-Woodruff				

Drive Shaft Assembly No. 105-9536

Ref	Part No.	Qty.	Description
2	54-9180	2	U-Joint Kit
2:1	62-3820	1	Fitting-Grease

