



50cm Mulching/Rear Bagging Lawn Mower

Model No. 29641 - 290000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Housing Assembly	 3	Engine and Blade Assembly	 6
Front Axle Assembly	 4	Handle and Control Assembly	 7
Rear Axle and Transmission Assembly	 5	Grass Bag Assembly	 8


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HS. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head


Footnotes

- ❶ Not serviced separately
- ❷ Obtain from your local Briggs & Stratton dealer

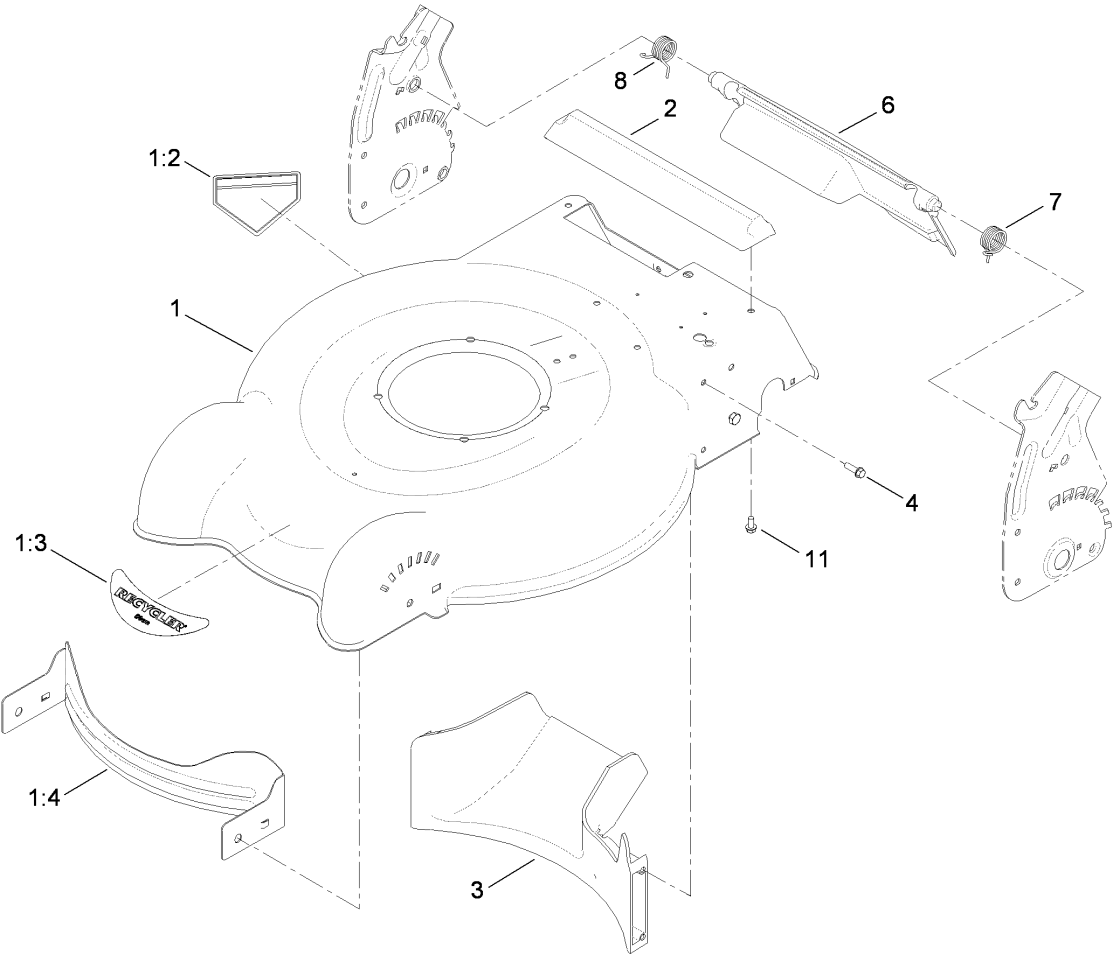


Housing Assembly

Ref	Part No.	Qty.	Description				
1	117-5944	1	Housing ASM				
1:2	112-8760	1	Decal-Danger				
1:3	117-5947	1	Decal-Deck				
1:4	117-4162-01	1	Baffle-Front				
2	112-8845	1	Chute-Rear				
3	112-8821	1	Baffle-Rear				
4	46-8091	5	Screw-HWH				
6	117-5923	1	Rear Deflector ASM				
7	112-8848	1	Spring-Torsion, LH				
8	112-8849	1	Spring-Torsion, RH				
11	46-8093	3	Screw-Plastite				

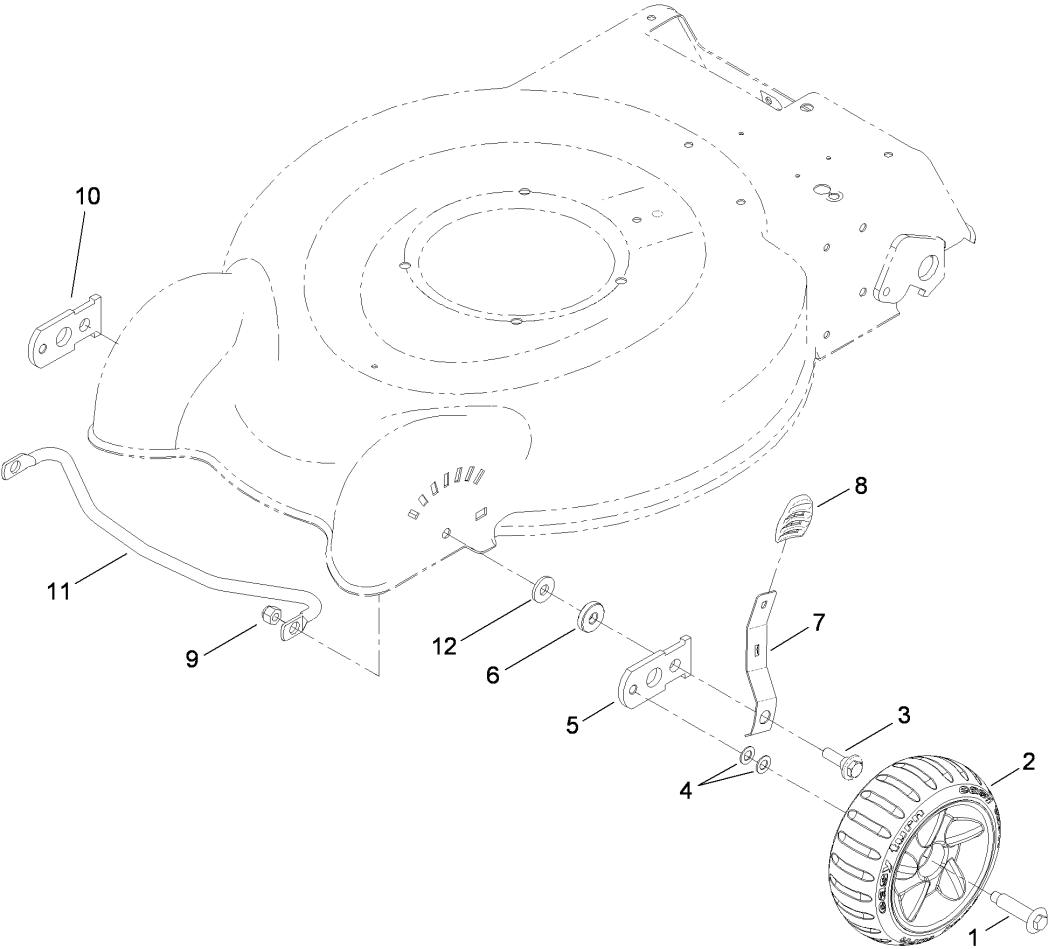

Front Axle Assembly


Ref	Part No.	Qty.	Description				
1	614650	2	Bolt-Shoulder				
2	112-1548	2	7 Inch Front Wheel ASM				
3	614672	2	Bolt-Shoulder				
4	40-1940	4	Washer				
5	107-3877	1	Arm-Pivot, RH				
6	92-4890	2	Washer				
7	112-8828	2	Arm-Spring, Front				
8	105-3042	2	Knob-Lever, HOC				
9	3296-39	2	Nut-Lock, NI				
10	108-1044	1	Arm-Pivot, LH				
11	117-4161	1	Brace-Front				
12	80-6990	2	Washer-Hardened				

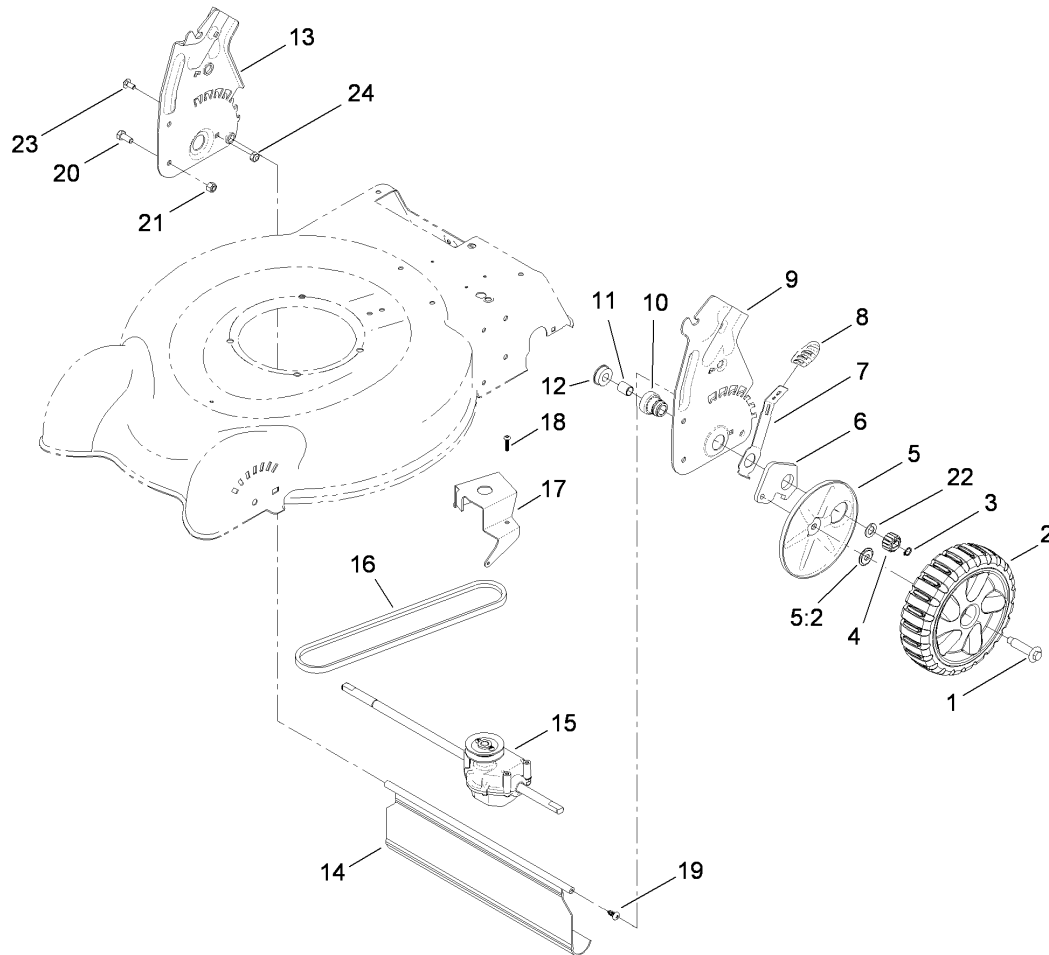

Rear Axle and Transmission Assembly


Ref	Part No.	Qty.	Description
1	614650	2	Bolt-Shoulder
2	107-3906	2	Rear Wheel ASM
3	32151-61	2	Ring-Retaining
4	110-9417	2	Pinion
5	110-1793	2	Wheel Cover ASM
5:2	614426	1	Washer-Stepped
6	108-9781	2	Arm-Pivot, Rear
7	108-9780	2	Arm-Spring
8	105-3042	2	Knob-Lever, HOC
9	112-8822-03	1	Plate-HOC, LH
10	108-9779	2	Retainer-Bushing, HOC
11	108-9782	2	Bushing-Sleeve
12	104-8699	2	Bearing-Ball
13	112-8823-03	1	Plate-HOC, RH
14	112-8768	1	Shield-Trailing
15	112-8831	1	Transmission ASM
16	110-9429	1	V-Belt
17	114-7977-03	1	Bracket-Transmission
18	108-7476	3	Screw-Plastite
19	117-1092	2	Screw-PTH
20	322-3	4	Screw-HH
21	3296-29	4	Nut-Lock, NI
22	110-7191	2	Washer-Thrust
23	3229-11	2	Screw-CARR

Ref	Part No.	Qty.	Description
24	3296-16	2	Nut-Lock, NI

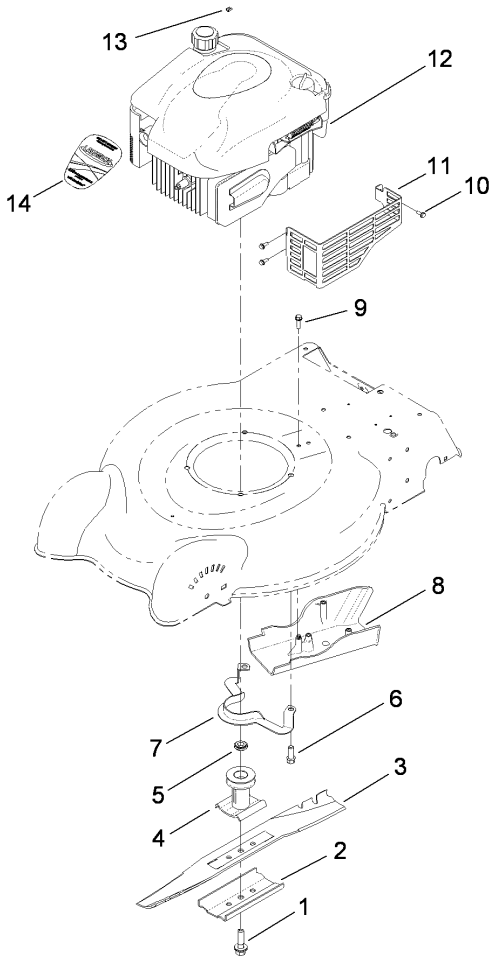


Engine and Blade Assembly

Ref	Part No.	Qty.	Description				
1	105-8579	1	Bolt-Blade				
2	108-3766-03	1	Support-Blade				
3	112-8841-03	1	Blade-20 Inch				
4	106-3987	1	Blade Driver ASM				
5	106-3999	1	Spacer-Driver				
6	95-1726	3	Screw-Taptite				
7	105-3030-03	1	Guide-Belt				
8	112-8829	1	Cover-Belt				
9	46-8091	3	Screw-HWH				
10	32144-1	3	Screw-Taptite				
11	104-7577-03	1	Shield-Muffler				
12		1	Engine-B&S, 124T02-0222-B				
13	2210-316	1	Stop-Rope				
14	117-5946	1	Decal-Engine				

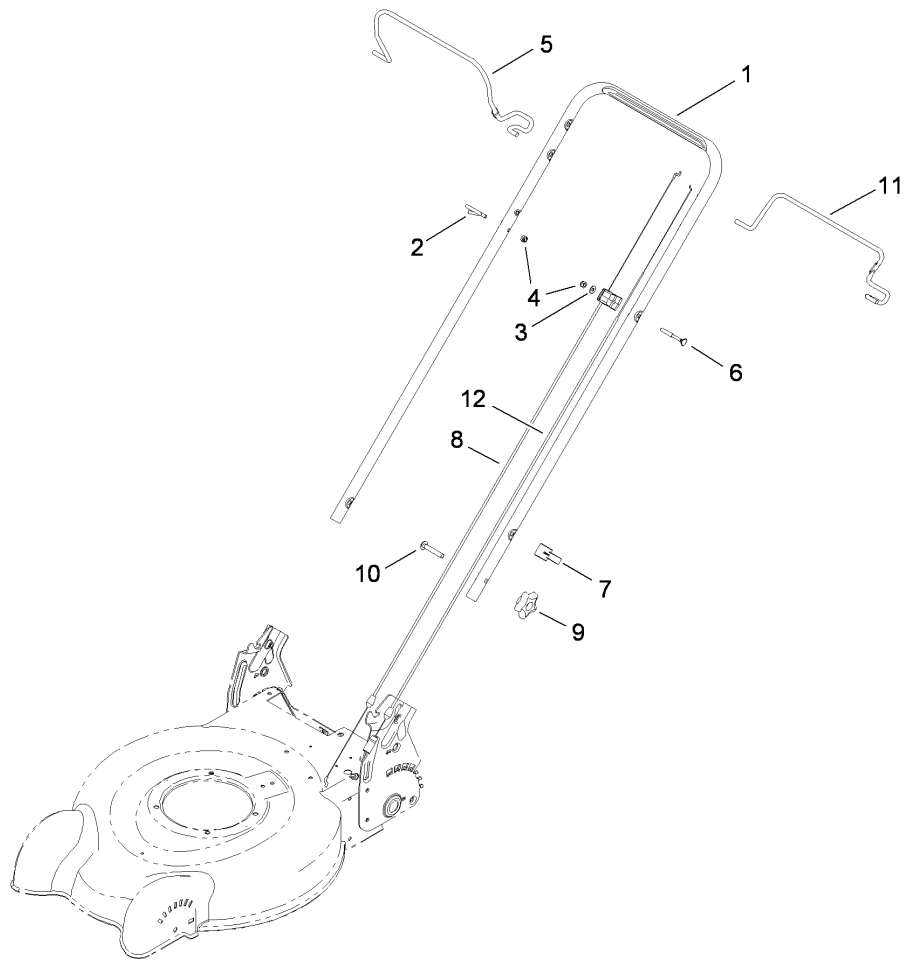

Handle and Control Assembly

Ref	Part No.	Qty.	Description				
1	112-8833-05	1	Handle				
2	86-9671	1	Guide-Rope				
3	3256-1	1	Washer-Flat				
4	3296-73	2	Nut-Lock, NI				
5	112-8834-03	1	Bail-Brake, 2-Bail Flat				
6	92-2270	1	Screw-Handle				
7	106-6805	1	Guide-Cable				
8	112-8818	1	Cable-Brake				
9	108-8162	2	Knob-Locking				
10	3230-6	2	Screw-CARR				
11	112-8835-03	1	Bail-Traction, 2-Bail Flat				
12	112-8817	1	Cable-Traction				

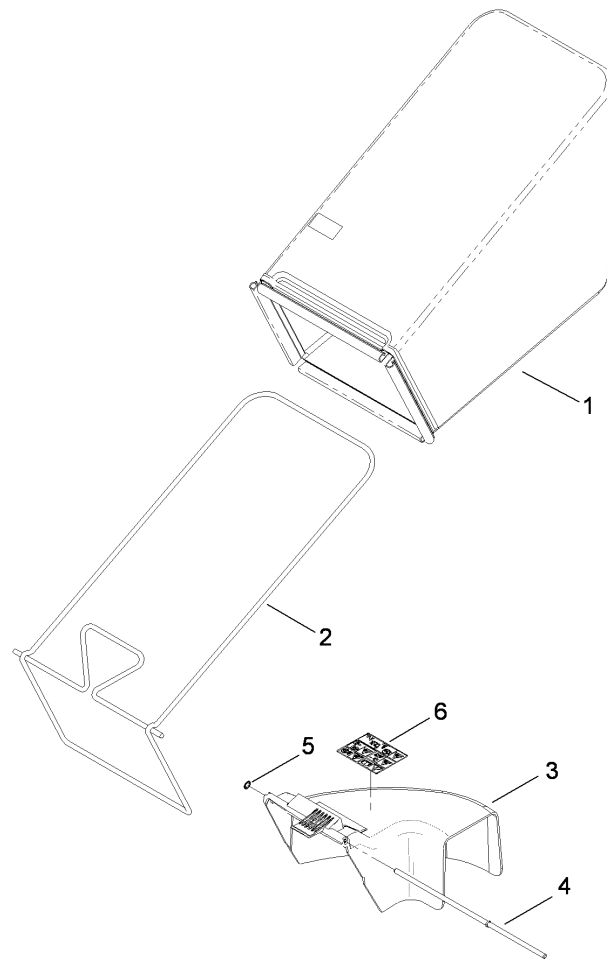

Grass Bag Assembly

Ref	Part No.	Qty.	Description				
1	117-5927	1	Grass Bag ASM				
2	112-8825-03	1	Frame-Bag				
3	112-8819	1	Deflector-Rear				
4	117-4159	1	Rod				
5	32151-72	1	Ring-Retaining				
6	117-4143	1	Decal-Warning, Ce				

NOTES

NOTES

NOTES

