



21in Commercial Lawn Mower

Model No. 22271 - 280000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Front End and Tunnel Assembly	 3	Piston and Connecting Rod Assembly Honda GSV190LA A3T	 13
Wheel Assembly No. 114-2752	 4	Camshaft Pulley Assembly Honda GSV190LA A3T	 14
Rear Axle, Transmission and Discharge Chute Assembly	 5	Recoil Starter Assembly Honda GSV190LA A3T	 15
Wheel Assembly No. 114-2753	 6	Fan Cover Assembly Honda GSV190LA A3T	 16
Engine and Blade Assembly	 7	Carburetor Assembly Honda GSV190LA A3T	 17
Handle Assembly	 8	Air Cleaner Assembly Honda GSV190LA A3T	 18
Rear Bag Assembly	 9	Muffler Assembly Honda GSV190LA A3T	 19
Cylinder Barrel Assembly Honda GSV190LA A3T	 10	Fuel Tank Assembly Honda GSV190LA A3T	 20
Oil Pan Assembly Honda GSV190LA A3T	 11	Flywheel Assembly Honda GSV190LA A3T	 21
Crankshaft Assembly Honda GSV190LA A3T	 12	Control Assembly Honda GSV190LA A3T	 22
		Label Assembly Honda GSV190LA A3T	 23

Part Description Abbreviations

 
Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HS. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes

❶ Not serviced separately


❷ Obtain from your local Honda dealer

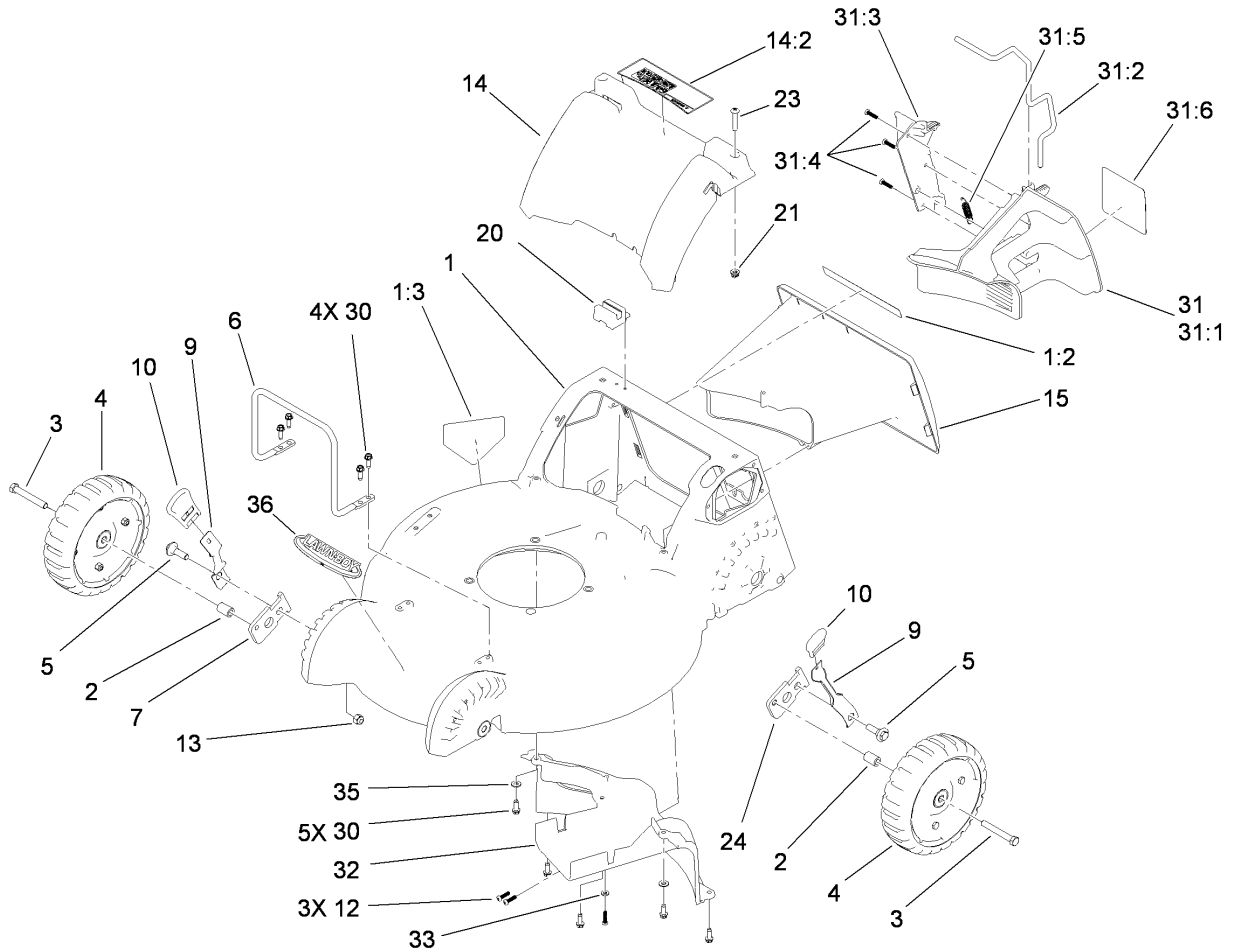

Front End and Tunnel Assembly

Ref	Part No.	Qty.	Description
1	117-4156-02	1	Housing
1:2	107-3889	1	Decal-Safety
1:3	94-8072	1	Decal-Danger
2	114-2754	2	Spacer
3	323-13	2	Screw-HH
4	114-2752	2	8 Inch Wheel ASM
5	614672	2	Bolt-Shoulder
6	110-9475-03	1	Guard-Engine
7	110-9421	1	Arm-Pivot, RH
9	110-9434	2	Arm-Spring, Front
10	105-3042	2	Knob-Lever, HOC
12	108-7476	6	Screw-Plastite
13	3296-39	2	Nut-Lock, NI
14	108-9349	1	Cover-Rear
14:2	107-3888	1	Decal-Safety
15	110-9455	1	Tunnel
20	110-1786	1	Module-Switch
21	94-1610	2	Nut-Clip
23	108-0965	2	Screw-PTH
24	110-9420	1	Arm-Pivot, LH
30	49-2040	9	Screw-HWHTF
31	110-9468	1	Mulch Plug ASM
31:1	110-9446	1	Plug-Mulch, LH
31:2	110-9448	1	Latch-Plug, Mulch


Ref	Part No.	Qty.	Description
31:3	110-9447	1	Plug-Mulch, RH
31:4	108-7476	3	Screw-Plastite
31:5	110-9458	1	Spring-Extension
31:6	110-9457	1	Decal-Plug, Mulch
32	110-9413	1	Baffle-Rear
33	3256-14	1	Washer-Flat
35	3256-22	2	Washer-Flat
36	117-5961	1	Decal

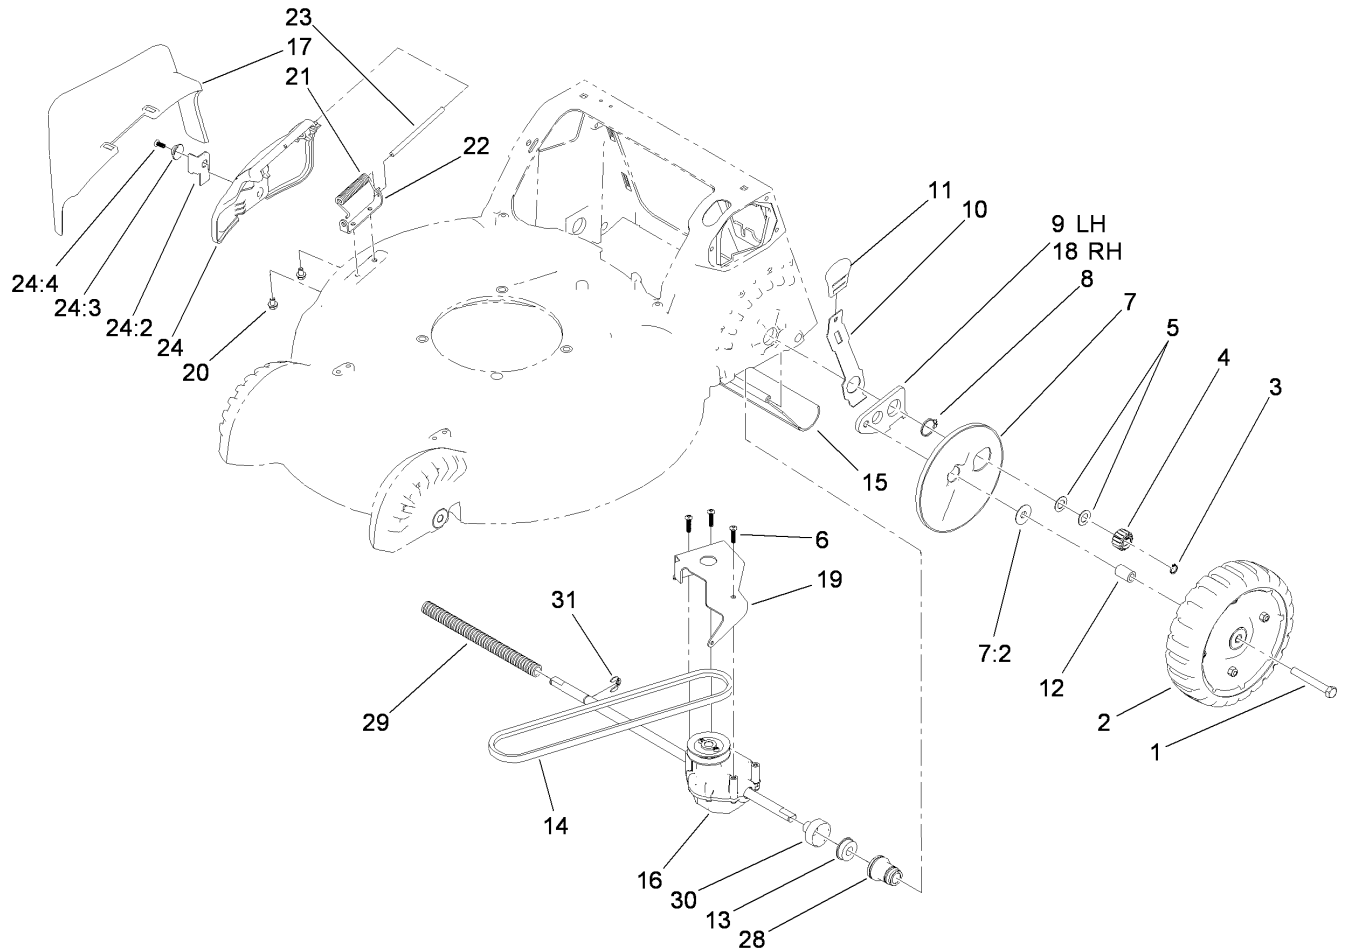 

Rear Axle, Transmission and Discharge Chute Assembly


Ref	Part No.	Qty.	Description
1	323-13	2	Screw-HH
2	114-2753	2	8 Inch Wheel ASM
3	32151-61	2	Ring-Retaining
4	110-9417	2	Pinion
5	36-4780	2	Washer-Plain
6	108-7476	3	Screw-Plastite
7	110-1793	2	Wheel Cover ASM
7:2	614426	1	Washer-Stepped
8	32151-36	2	Ring-Retaining
9	108-9344	1	Arm-Rear Pivot, LH
10	110-9445	2	Arm-Spring, Rear
11	105-3042	2	Knob-Lever, HOC
12	114-2754	2	Spacer
13	104-8699	2	Bearing-Ball
14	110-9429	1	V-Belt
15	112-8768	1	Shield-Trailing
16	114-2819	1	Transmission
17	105-3028	1	Chute-Discharge, Side
18	108-9343	1	Arm-Rear Pivot, RH
19	114-7977-03	1	Bracket-Transmission
20	99-8445	2	Screw-HWH
21	99-5293	1	Spring-Torsion
22	112-6416	1	Bracket-Cover
23	99-5291	1	Rod-Cover

Ref	Part No.	Qty.	Description
24	106-8376	1	Discharge Door ASM
24:2	107-0795	1	Latch-Door
24:3	107-7456	1	Cap-Door
24:4	107-7461	1	Screw-Plastite
28	110-9422	2	Retainer-Bearing
29	24-7922	1	Cover-Shaft, Drive
30	114-2755	2	Cap-Bearing
31	65-2720	1	Ring-Clip, Locking

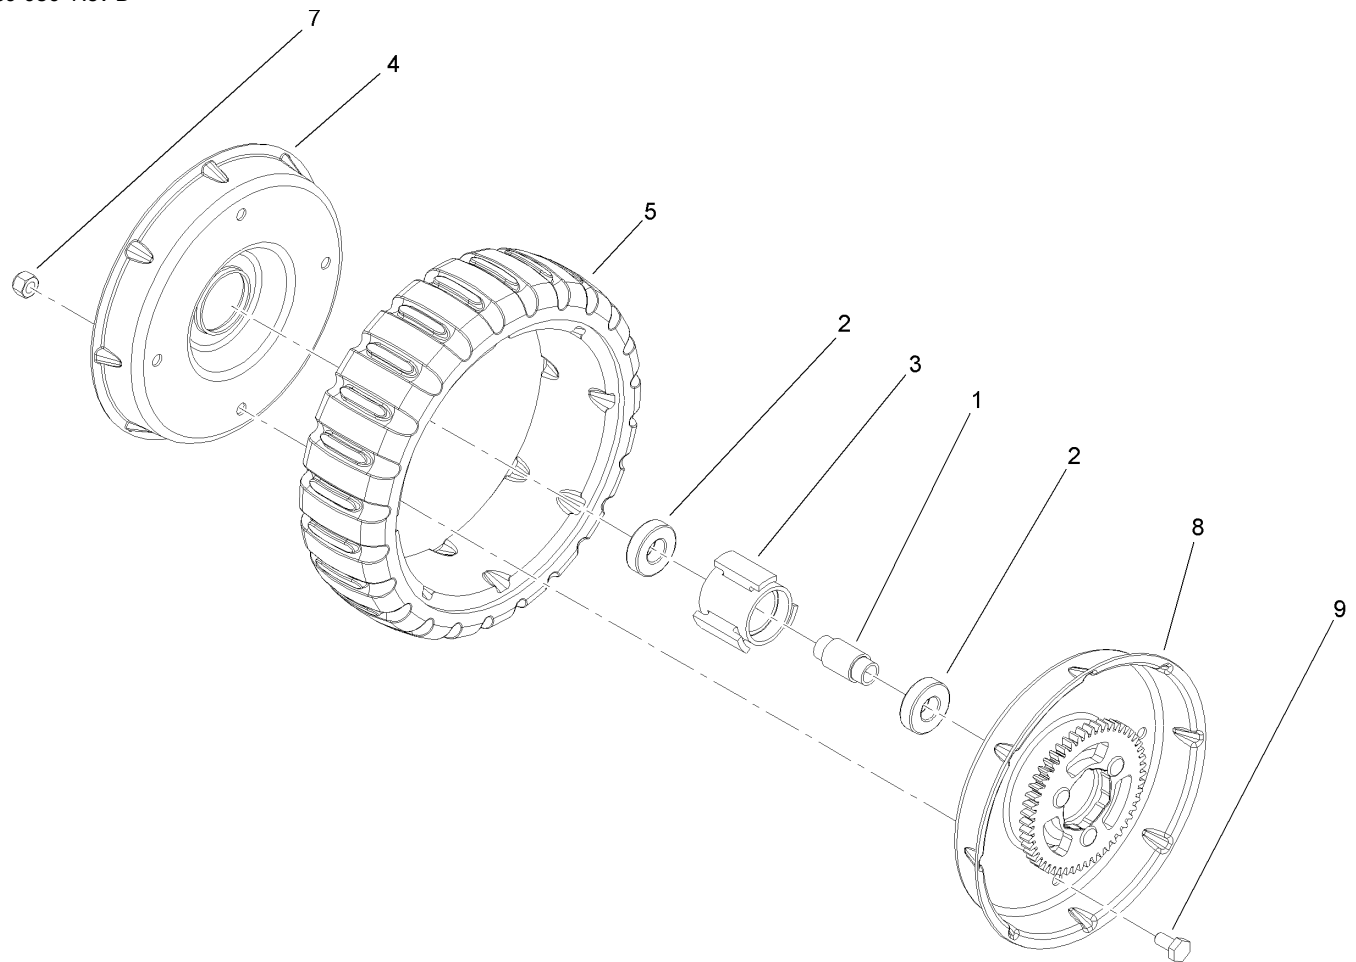 


Wheel Assembly No. 114-2753

Ref	Part No.	Qty.	Description				
1	52-2440	1	Spacer-Bearing				
2	52-2450	2	Bearing-Wheel				
3	52-2410	1	Hub-Bearing				
4	114-2750	1	Wheel Half				
5	110-9499	1	Tire-8 Inch				
7	3296-42	4	Nut-Lock, NI				
8	114-2751	1	Hub And Gear ASM				
9	321-2	4	Screw-HH				

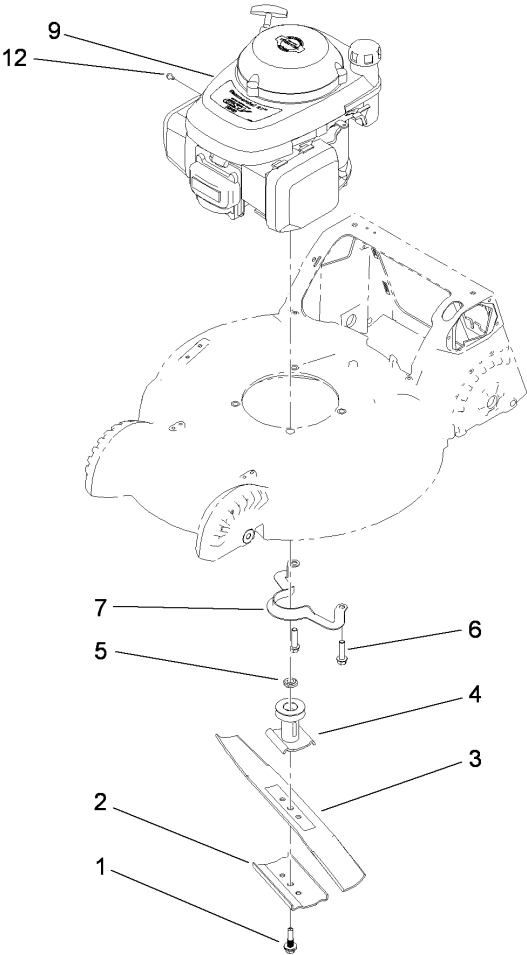 

Engine and Blade Assembly


Ref	Part No.	Qty.	Description				
1	112-8789	1	Bolt-Shoulder				
2	108-3766-03	1	Support-Blade				
3	108-3759-03	1	Blade-Bagging				
4	114-2774	1	Driver-Blade				
5	106-3999	1	Spacer-Driver				
6	32144-102	3	Screw-HWH				
7	108-8110-03	1	Guide-Belt				
9		1	Engine-Honda, Gsv190La A3T				
12	98-1394	1	Screw-HWH				

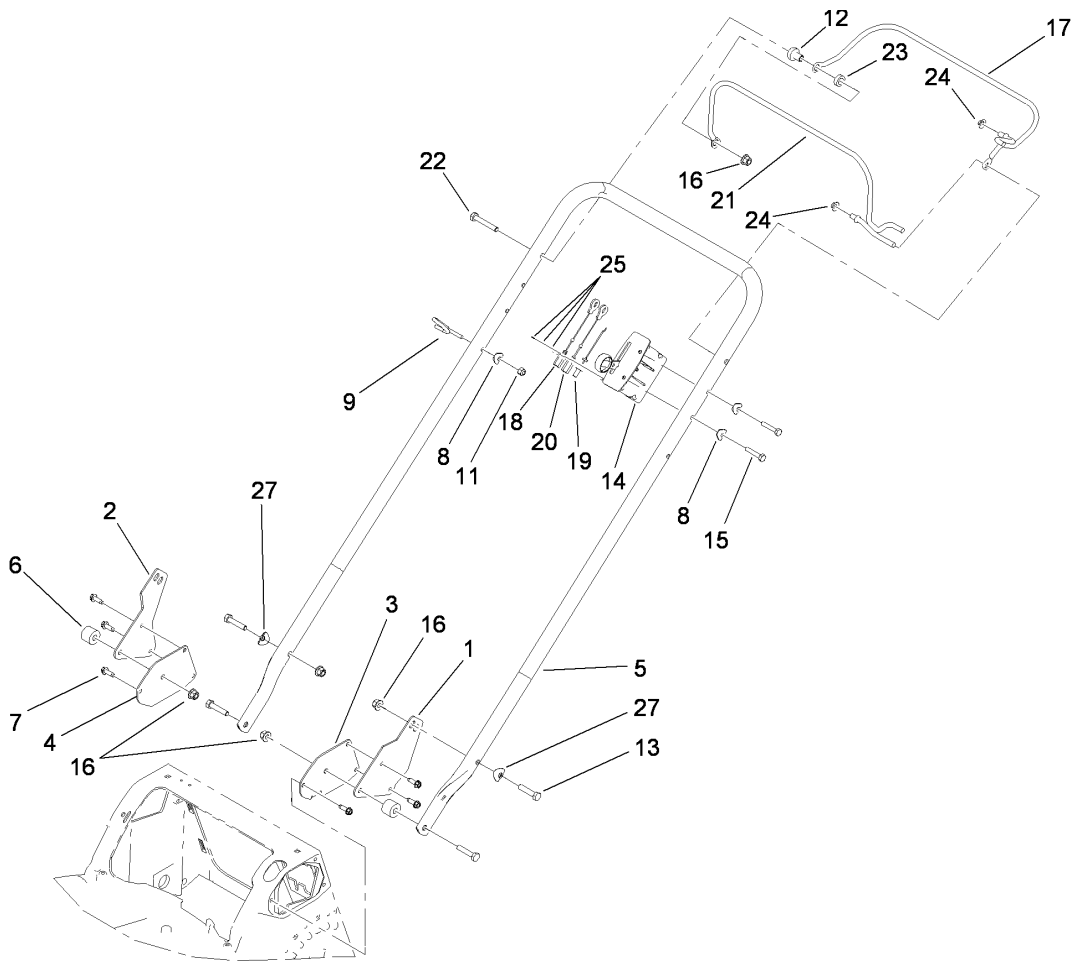 

Handle Assembly


Ref	Part No.	Qty.	Description
1	110-9494-03	1	Support-Strut, LH
2	110-9495-03	1	Support-Strut, RH
3	114-2760-03	1	Plate-Handle, Traction
4	110-9471-03	1	Plate-Handle
5	107-4162-03	1	Handle
6	112-8797-03	2	Spacer
7	49-2040	6	Screw-HWHTF
8	3-7501	3	Washer
9	114-2775	1	Guide-Rope
11	3296-42	1	Nut-Lock, NI
12	49-1630	1	Spacer-Support
13	322-7	4	Screw-HH
14	108-2645	1	Control-Head, Throttle
15	321-13	2	Screw-HH
16	3296-58	5	Nut-Lock, NI
17	114-2768-03	1	Bail-Brake
18	114-2771	1	Cable-Brake
19	110-4923	1	Throttle Cable ASM
20	115-3170	1	Cable-Traction
21	114-2769-03	1	Bail-Traction
22	322-10	1	Screw-HH
23	256-276	1	Spacer-Nylon
24	109-0917	2	Nut-Push
25	32151-86	3	E-Ring

Ref	Part No.	Qty.	Description
27	107-3844	2	Washer

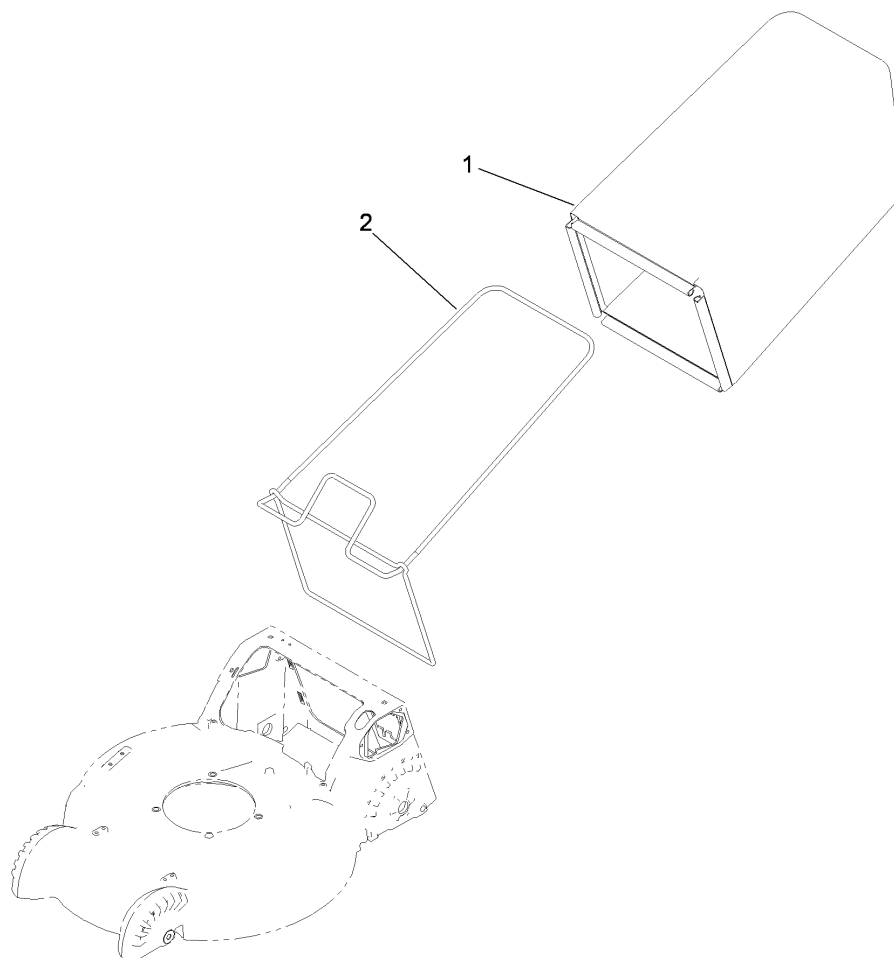 

Rear Bag Assembly


Ref	Part No.	Qty.	Description
1	110-9483	1	Grass Bag ASM
2	112-8750-03	1	Frame-Bag

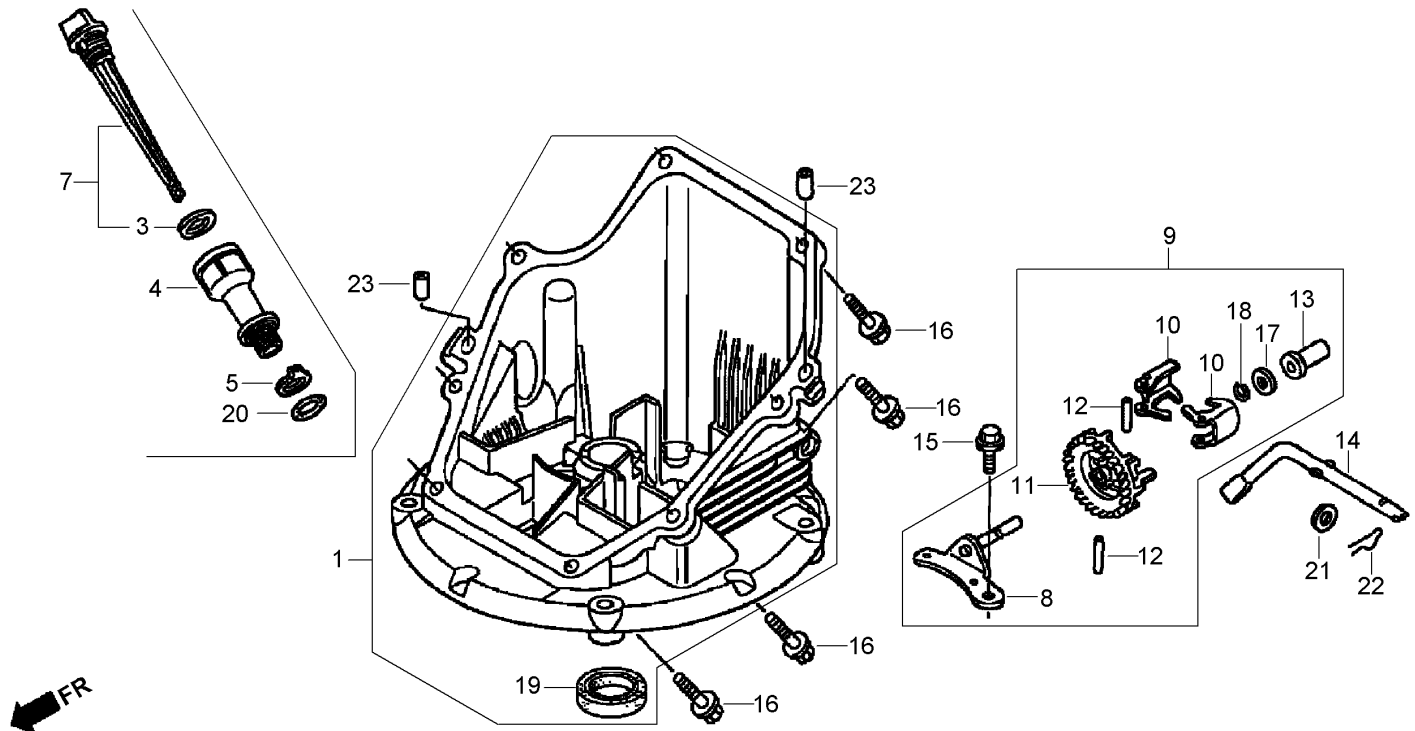 

Oil Pan Assembly Honda GSV190LA A3T


Ref	Part No.	Qty.	Description
②1	11300-Z0Y-406	1	Oil Pan ASM
②3	15625-ZE6-000	1	Gasket-Cap, Oil Filler
②4	15631-ZM0-000	1	Extension-Filler, Oil
②5	15639-ZM0-000	1	Washer-Lock, Extension
②7	15650-ZM0-801	1	Oil Level Gauge ASM
②8	16508-ZM0-010	1	Shaft-Holder, Governor
②9	16510-ZM0-010	1	Governor ASM
②10	16511-ZL8-000	2	Weight-Governor
②11	16512-ZM0-000	1	Holder-Weight, Governor
②12	16513-ZE1-000	2	Pin-Weight, Governor
②13	16531-ZE1-000	1	Slider-Governor
②14	16541-ZM0-000	1	Shaft-Arm, Governor
②15	90014-952-000	1	Bolt-Flange (6X14) (C T200)

Ref	Part No.	Qty.	Description
②16	90121-952-000	8	Bolt-Flange (6X25) (C T 200)
②17	90451-ZE1-000	1	Washer-Thrust (6Mm)
②18	90602-ZE1-000	1	Clip-Holder, Governor
②19	91202-ZL8-003	1	Seal-Oil (28X41.25X6)
②20	91356-MA6-005	1	O-Ring (14.8X24) (N O K)
②21	94101-06800	1	Washer-Plain (6Mm)
②22	94251-08000	1	Pin-Lock (8Mm)
②23	94301-08200	2	Pin-Dowel (8X20)

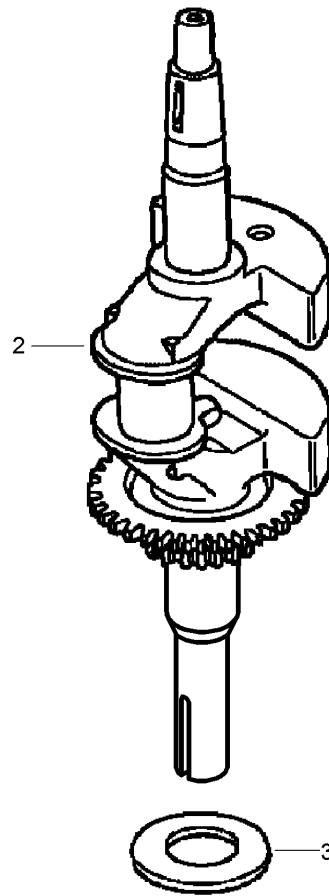 


Crankshaft Assembly Honda GSV190LA A3T

Ref	Part No.	Qty.	Description
2	13310-Z0Y-610	1	Crankshaft
3	90402-ZL8-000	1	Washer-Thrust

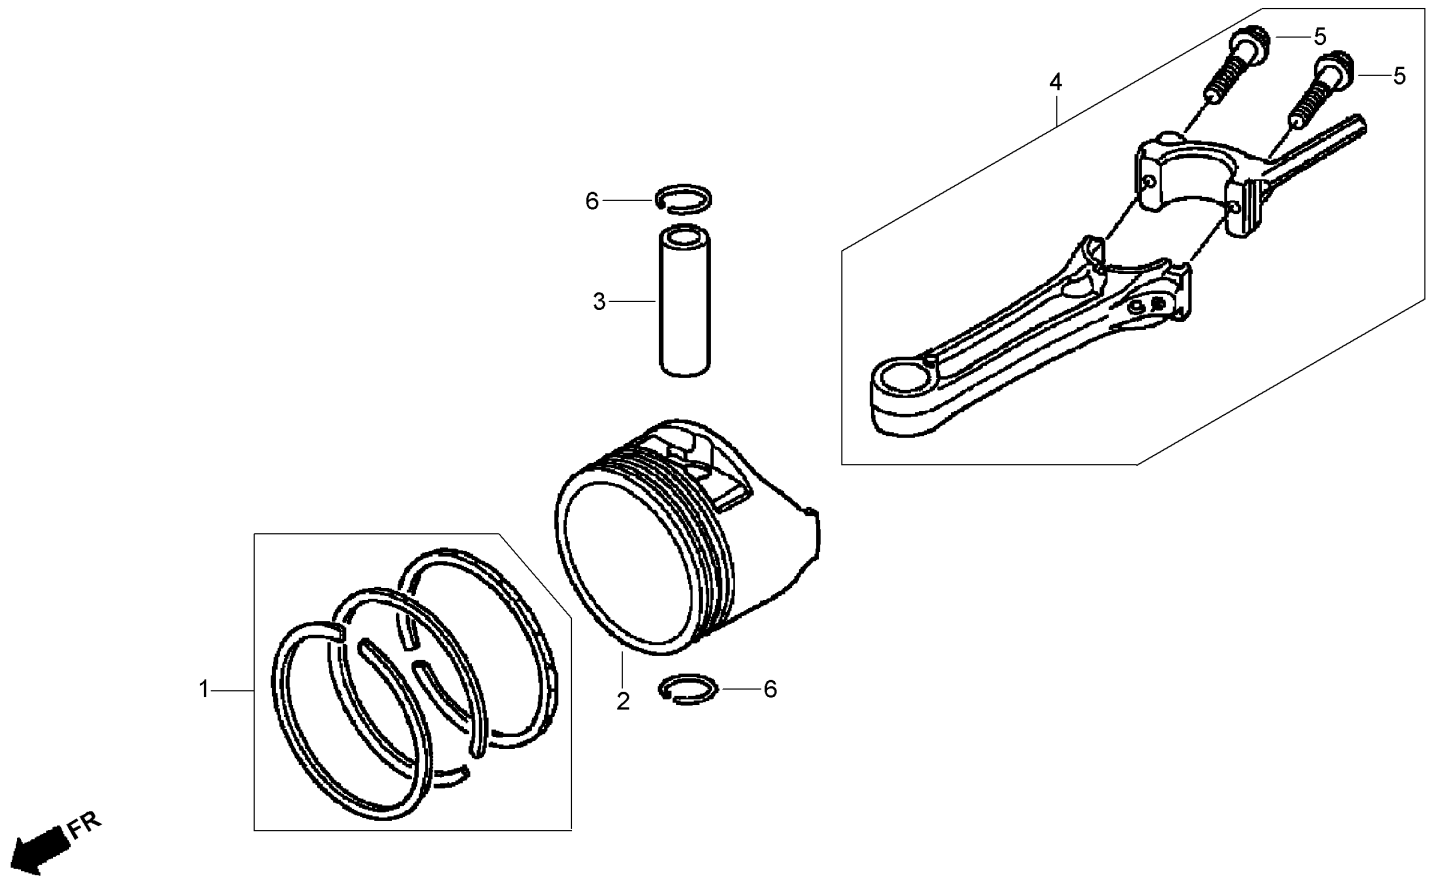 

Piston and Connecting Rod Assembly Honda GSV190LA A3T

Ref	Part No.	Qty.	Description				
21	13010-Z2C-014	1	Piston Ring Set (STD) (Teikoku)				
22	13101-Z0Y-010	1	Piston				
23	13111-Z0Y-000	1	Pin-Piston				
24	13200-Z0Y-010	1	Connecting Rod ASM				
25	90001-ZE1-000	2	Bolt-Rod, Connecting				
26	90551-ZE0-000	2	Clip-Pin, Piston (13Mm)				

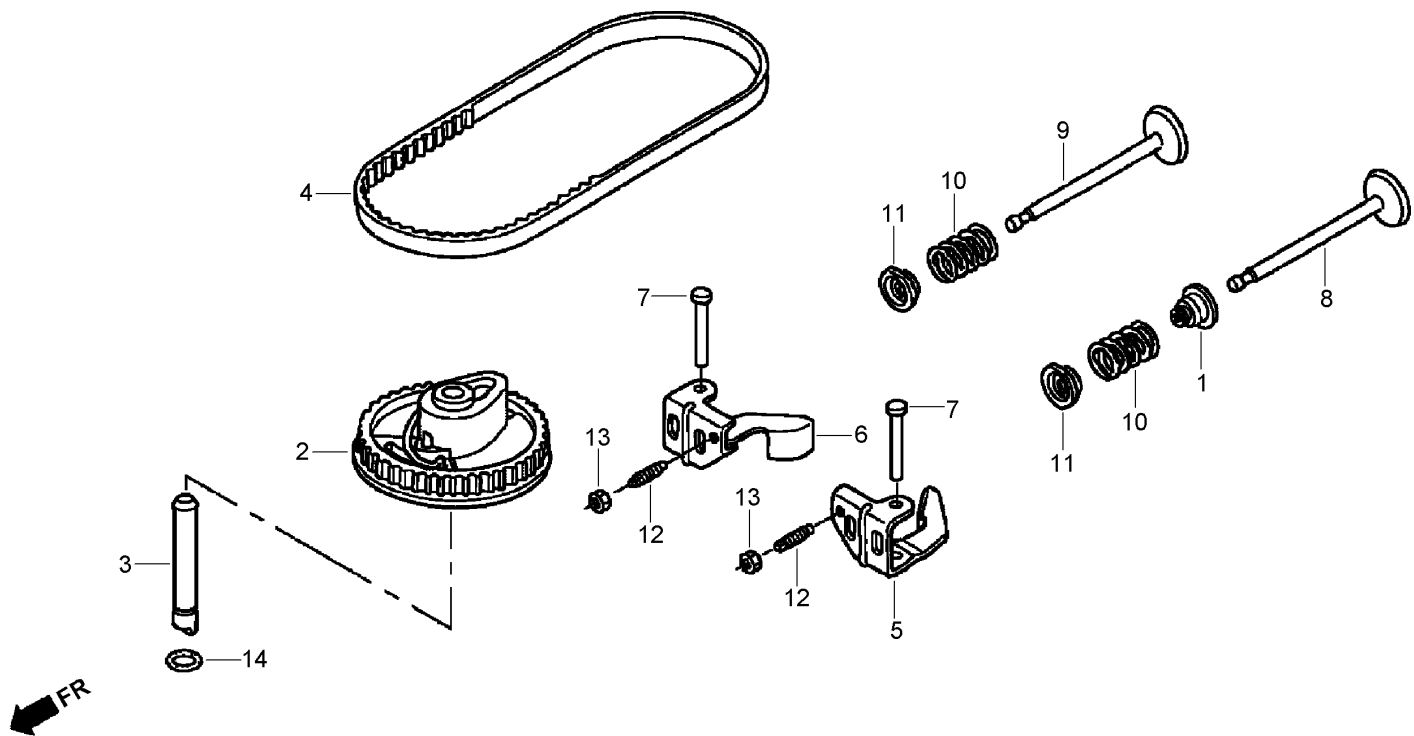 


Camshaft Pulley Assembly

Honda GSV190LA A3T


Ref	Part No.	Qty.	Description
1	12209-ZM0-003	1	Seal-Stem, Valve
2	14320-Z0Y-000	1	Pulley-Camshaft
3	14324-ZL8-000	1	Shaft-Pulley, Cam
4	14400-Z0J-014	1	Belt-Timing (84H U7 G-200)
5	14431-Z0J-000	1	Arm-Rocker, Intake Valve
6	14441-Z0J-000	1	Arm-Rocker, Exhaust Valve
7	14461-ZL8-000	2	Shaft-Arm, Rocker
8	14711-ZL8-000	1	Valve-Intake (Technostar)
8	14711-Z0J-000	1	Valve-Intake (Rocknel)
9	14721-ZL8-000	1	Valve-Exhaust
10	14751-ZL8-000	2	Spring-Valve
11	14771-Z0J-000	2	Retainer-Spring, Valve
12	90012-333-000	2	Screw-Adjusting, Tappet

Ref	Part No.	Qty.	Description
13	90206-001-000	2	Nut-Adjusting, Tappet
14	91301-ZM0-V31	1	O-Ring (6.8X19) (Arai)

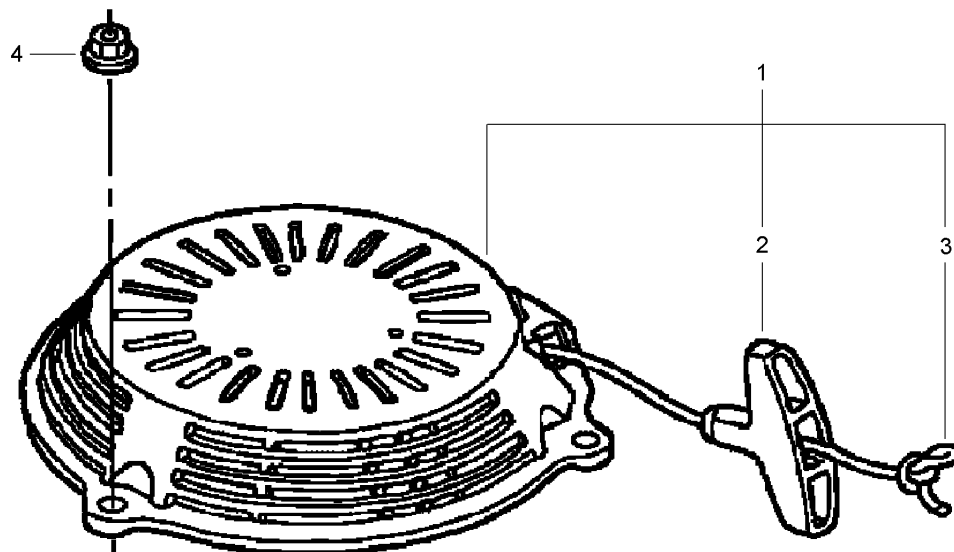 

Recoil Starter Assembly Honda GSV190LA A3T


Ref	Part No.	Qty.	Description
②1	28400-Z0Y-013ZB	1	Recoil Starter ASM (N H1) (Black)
②2	28461-ZL8-003	1	Grip-Starter
②3	28462-ZL8-631	1	Rope-Starter, Recoil (Long Type)
②4	90201-ZM0-000	3	Nut-Flange (6Mm)

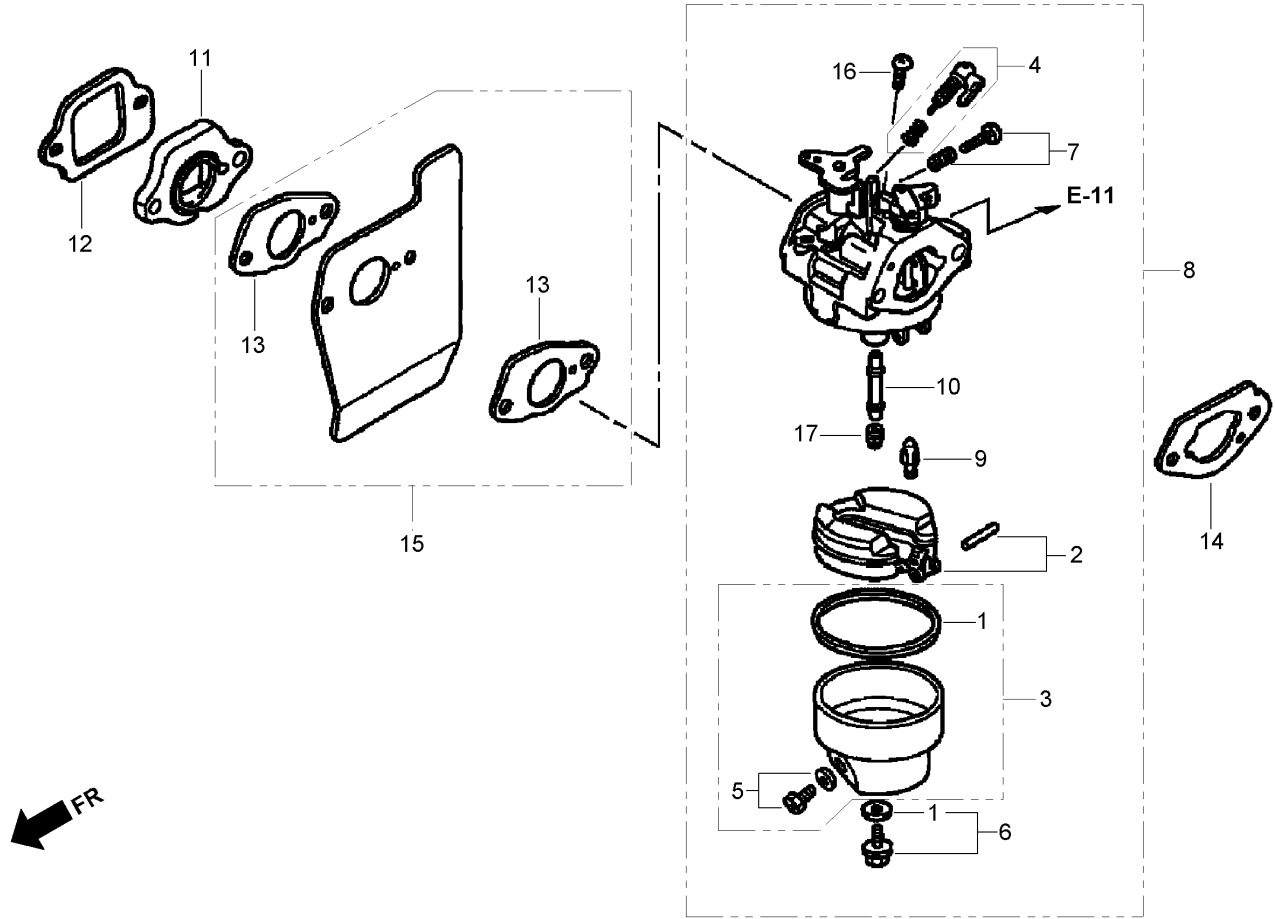 

Carburetor Assembly
Honda GSV190LA A3T


Ref	Part No.	Qty.	Description
❶1	16010-883-015	1	Gasket Set
❷2	16013-ZL1-003	1	Float Set
❸3	16015-887-782	1	Float Chamber Set
❹4	16016-ZG0-W00	1	Screw Set
❺5	16024-ZE1-811	1	Drain Screw Set
❻6	16028-ZE0-005	1	Screw Set
❼7	16029-ZG0-901	1	Screw Set (Throttle Stop)
❽8	16100-Z2D-811	1	Carburetor ASM (Bb65G A)
❾9	16155-ZM0-013	1	Valve-Float
❿10	16166-Z0Y-003	1	Nozzle-Main
⓫11	16211-ZL8-000	1	Insulator-Carburetor
⓫12	16212-ZL8-000	1	Gasket-Insulator
⓫13	16221-883-800	2	Gasket-Carburetor

Ref	Part No.	Qty.	Description
❿14	16228-ZL8-000	1	Gasket-Carburetor
⓫15	19650-ZM0-000	1	Guide-Air
⓫16	93500-05006-0H	1	Screw-Pan (5X6)
⓫17	99101-124-0620	1	Jet-Main (No.62)
⓫17	99101-124-0650	1	Jet-Main (No.65)
⓫17	99101-124-0680	1	Jet-Main (No.68)

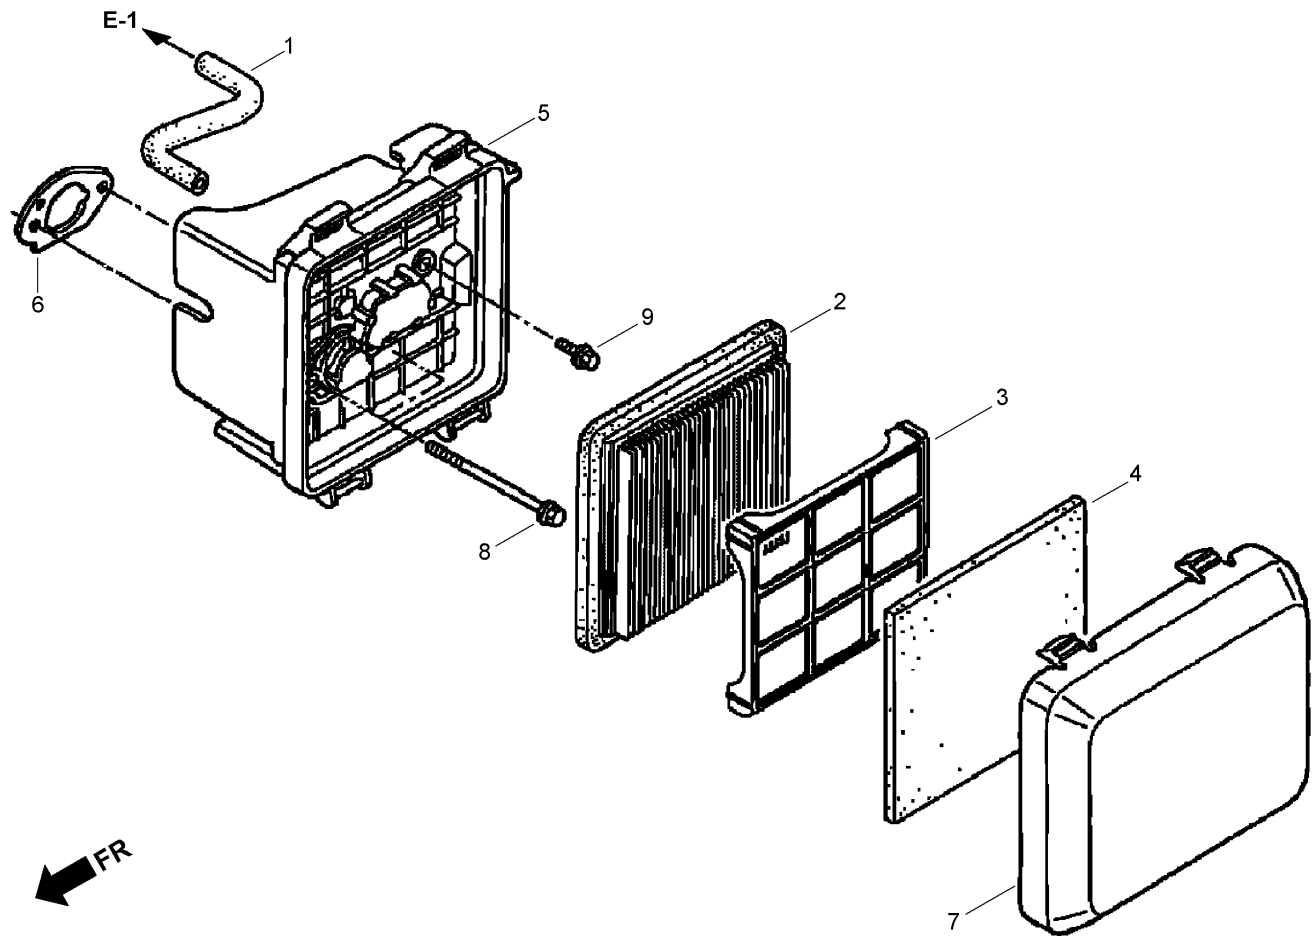 

Air Cleaner Assembly
Honda GSV190LA A3T


Ref	Part No.	Qty.	Description				
❶	15721-ZM0-000	1	Tube-Breather				
❷	17211-ZL8-023	1	Element-Cleaner, Air				
❸	17212-Z2A-000	1	Grid-Cleaner, Air				
❹	17218-Z2A-000	1	Filter (Outer) (Wet)				
❺	17220-ZM0-000	1	Air Cleaner Case ASM				
❻	17228-ZM0-000	1	Gasket-Cleaner, Air				
❼	17231-Z2B-000	1	Cover-Cleaner, Air (Dual)				
❽	90003-ZM0-000	2	Bolt-Flange (6X86) (C T200)				
❾	95701-06014-08	1	Bolt-Flange (6X14)				

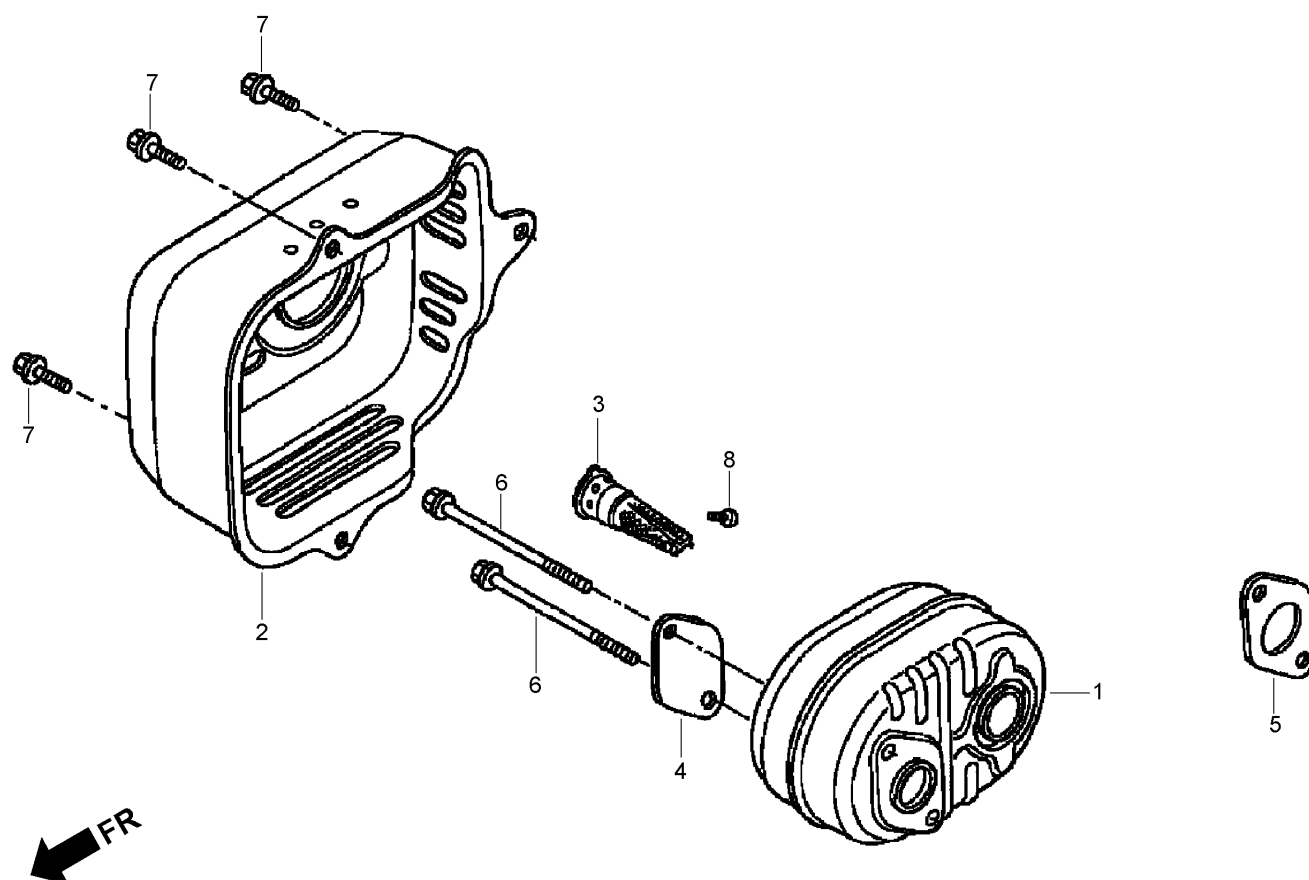 

Muffler Assembly


Honda GSV190LA A3T

Ref	Part No.	Qty.	Description				
21	18310-Z0Y-000	1	Muffler				
22	18321-Z0L-J00	1	Protector-Muffler				
23	18350-ZL8-000	1	Arrester-Spark				
24	18356-ZL8-000	1	Plate-Number, Arrester				
25	18381-ZL8-305	1	Gasket-Muffler				
26	90004-ZL8-000	2	Bolt-Flange (6X79) (C T200)				
27	90013-883-000	3	Bolt-Flange (6X12) (C T200)				
28	90055-ZE1-000	1	Screw-Tapping (4X6)				

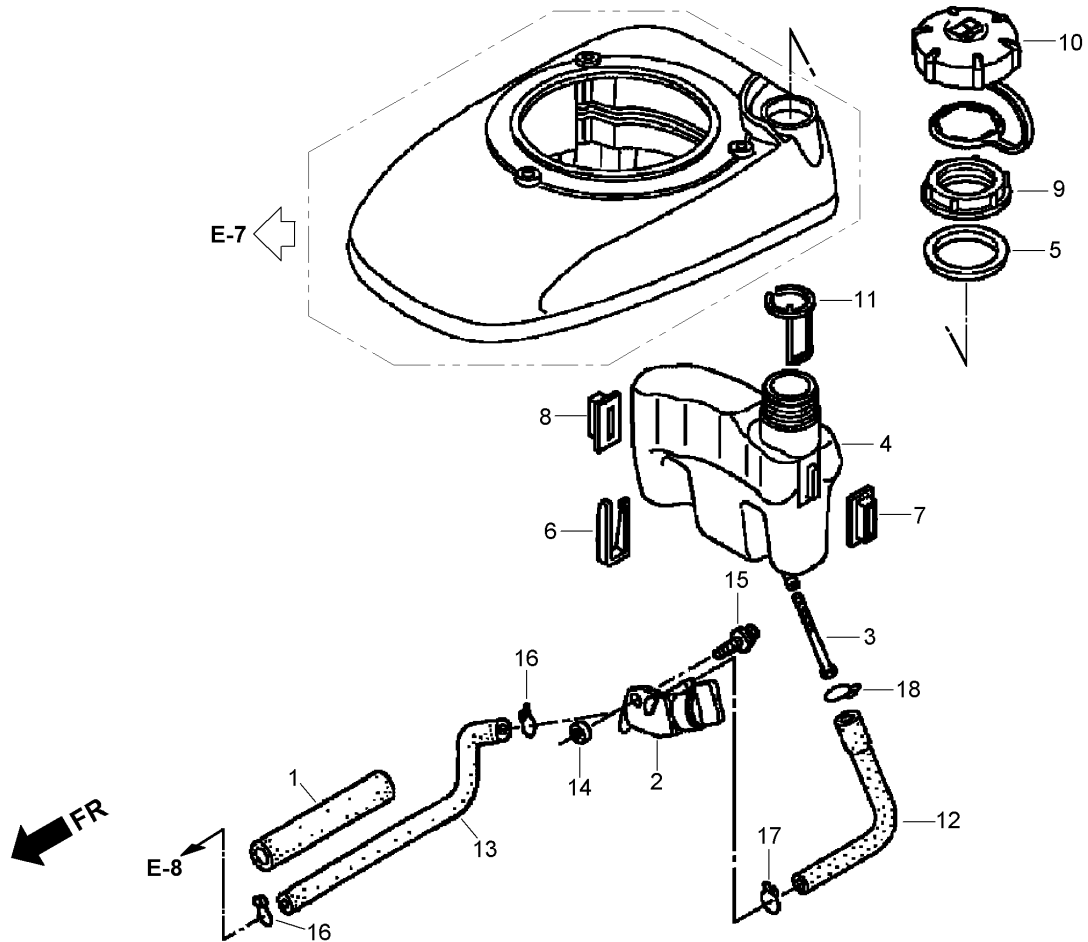 

Fuel Tank Assembly Honda GSV190LA A3T


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
❶1	16854-ZH8-000	1	Supporter-Rubber (107 Mm)	❶14	91501-Z0L-800	1	Collar-Petcock, Fuel
❶2	16950-ZM0-003	1	Petcock ASM	❶15	93891-05010-08	1	Screw-Washer (5X10)
❶3	16952-ZA8-800	1	Filter-Fuel	❶16	95002-02080	2	Clip-Tube (B8)
❶4	17511-Z0L-000	1	Tank-Fuel	❶17	95002-02100	1	Clip-Tube (B10)
❶5	17514-Z0L-000	1	Seal-Neck, Fuel Filler	❶18	95002-70000	1	Clip-Tube (C11)
❶6	17516-Z0L-000	1	Clip-Mounting, Tank				
❶7	17532-Z0L-000	1	Rubber A-Mounting, Tank				
❶8	17533-Z0L-000	1	Rubber B-Mounting, Tank				
❶9	17534-Z0L-000	1	Nut-Mounting, Tank				
❶10	17620-Z0J-800	1	Fuel Tank Cap ASM				
❶11	17636-Z0L-000	1	Gauge-Level, Fuel				
❶12	17701-Z0L-810	1	Tube-Tank, Fuel				
❶13	17702-ZM0-800	1	Tube-Fuel				

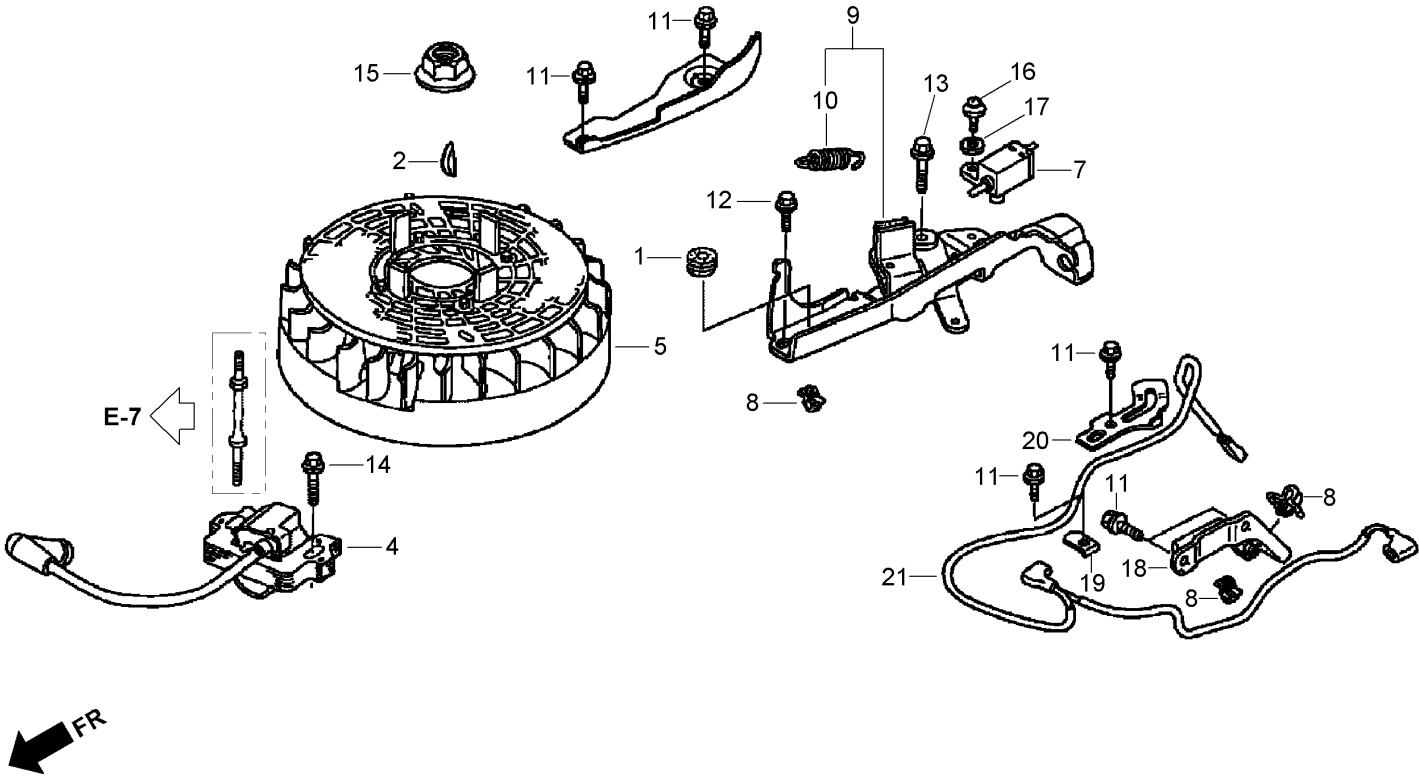 

Flywheel Assembly
Honda GSV190LA A3T

Ref	Part No.	Qty.	Description
❶1	11344-MB0-000	1	Grommet A-Cover, R R (8X16X6.6)
❶1	11344-Z0L-800	1	Grommet A, Rr Cover (8X16X8)
❷2	13331-357-000	1	Key-Woodruff, Special (25X18)
❹4	30500-Z0J-003	1	Ignition Coil ASM (Phelon) (Use For Flywheel Of Phelon)
❺5	31105-Z0Y-010	1	Flywheel ASM (Phelon) (Use For Ignition Coil Of Phelon)
❷7	35120-ZM0-003	1	Engine Stop Switch ASM (N C)
❸8	51125-Z0L-003	1	Holder-Wire (Fastex)
❸8	90681-959-003	1	Clip A-Cable (Nifco)
❹9	75110-Z0L-800	1	Brake ASM
❹10	75113-ZM0-000	1	Spring-Lever, Brake
❹11	90013-883-000	2	Bolt-Flange (6X12) (C T200)
❹12	90014-952-000	1	Bolt-Flange (6X14) (C T200)
❹13	90018-ZE1-000	1	Bolt-Flange (6X23) (C T200)

Ref	Part No.	Qty.	Description
❹14	90022-888-010	1	Bolt-Flange (6X20) (C T200)
❹15	90213-S3Y-000	1	Nut-Flange (14Mm)
❹16	93892-04012-00	1	Screw-Washer (4X12)
❹17	94103-04000	1	Washer-Plain (4Mm)
❹18	30547-Z0L-S00	1	Clamp-Wire, Stop Switch
❹19	30548-ZL8-000	1	Clamp-Wire, Stop Switch
❹20	30549-ZL8-000	1	Clamp-Wire
❹21	32195-Z0L-S00	1	Wire-Switch, Stop

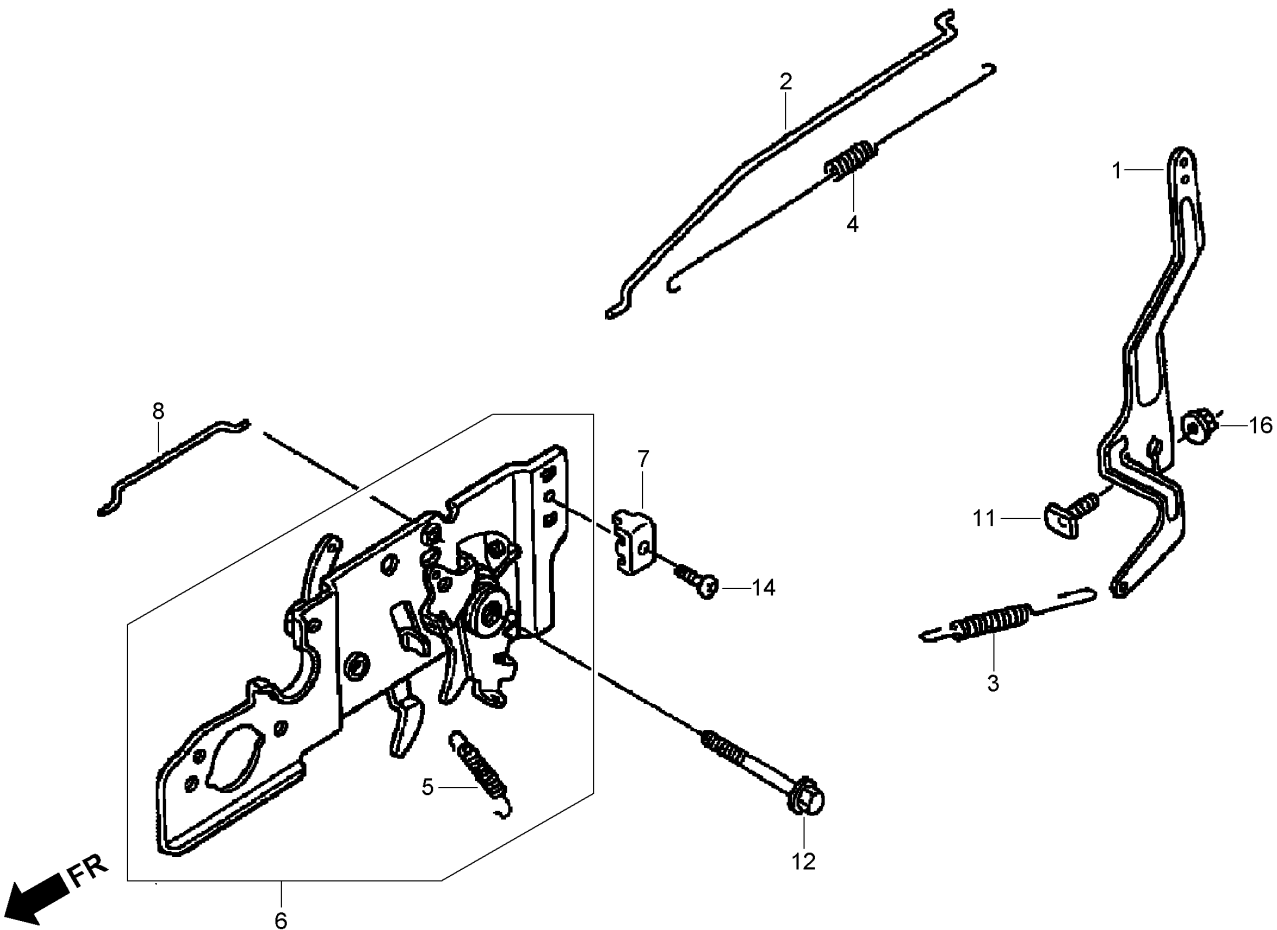 

Control Assembly
Honda GSV190LA A3T

Ref	Part No.	Qty.	Description				
❶1	16551-ZM0-010	1	Arm-Governor				
❷2	16555-Z0L-800	1	Rod-Governor				
❸3	16561-Z0L-000	1	Spring-Governor				
❹4	16562-ZM0-000	1	Spring-Return, Throttle				
❺5	16576-ZE7-300	1	Spring-Lever				
❻6	16580-ZM0-030	1	Base, Control				
❼7	16617-VG3-000	1	Holder-Cable				
❽8	16674-ZM0-000	1	Rod-Choke				
❾11	90015-ZE5-010	1	Bolt-Arm, Governor				
❿12	90016-ZM0-000	1	Bolt-Flange (6X45) (Ct200)				
⓫14	93500-05016-0A	1	Screw-Pan (5X16)				
⓫16	94050-06000	1	Nut-Flange (6 Mm)				

