



Power Max 6000 Snowthrower

Model No. 38597 - 280000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Auger and Housing Assembly	 3	Crankcase Assembly Briggs and Stratton 15D102-0111-E1	 16
26 Inch Auger Gearcase Assembly No. 108-7328	 4	Carburetor Assembly Briggs and Stratton 15D102-0111-E1	 17
Chute Assembly	 5	Muffler and Fuel Tank Assembly Briggs and Stratton 15D102-0111-E1	 18
Chain Drive Assembly	 6	Governor Assembly Briggs and Stratton 15D102-0111-E1	 19
Engine Assembly	 7	Shroud Assembly Briggs and Stratton 15D102-0111-E1	 20
Frame Assembly	 8	Blower Housing Assembly Briggs and Stratton 15D102-0111-E1	 21
Handle and Control Assembly	 10	Rewind Starter Assembly Briggs and Stratton 15D102-0111-E1	 22
Handle Assembly	 11	Gasket Kit Briggs and Stratton 15D102-0111-E1	 23
Lever Chute Control Assembly	 12	Carburetor Overhaul Kit Briggs and Stratton 15D102-0111-E1	 24
Cylinder Assembly Briggs and Stratton 15D102-0111-E1	 13	Attachments and Accessories List	 25
Cylinder Head Assembly Briggs and Stratton 15D102-0111-E1	 14		
Crankshaft Assembly Briggs and Stratton 15D102-0111-E1	 15		

 
Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- | | |
|--|---|
| ❶ Not serviced separately | ❷ Obtain from your local Briggs & Stratton dealer |
| ❸ Included in Carburetor Overhaul Kit (Ref. No. 121) | ❹ Included in Engine Gasket Set (Ref. No. 358) |
| ❺ Included in Carburetor Gasket Set (Ref. No. 977) | ❻ Included in Valve Gasket Set (Ref. No. 1095) |

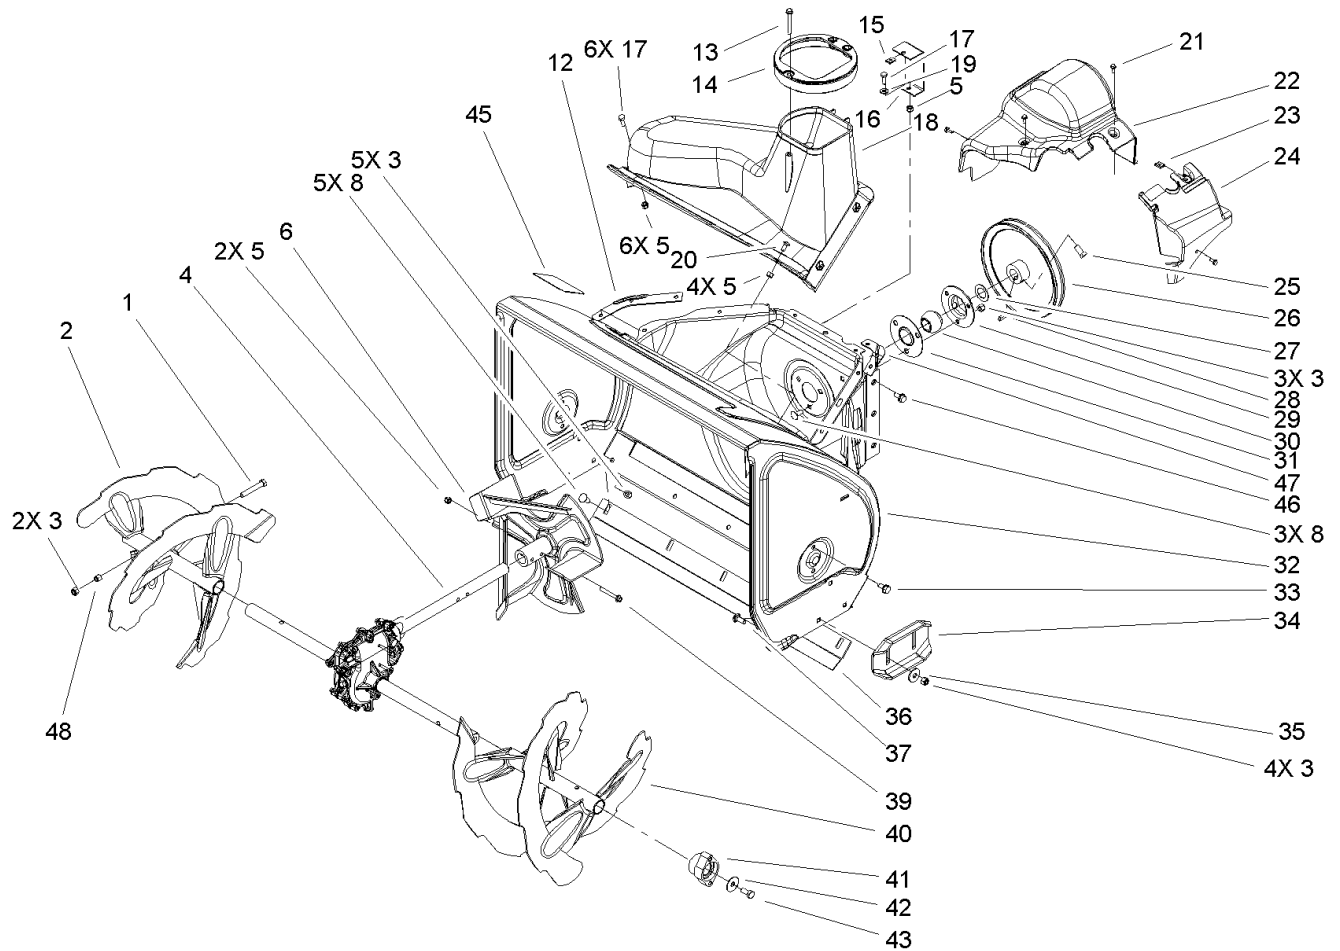

Auger and Housing Assembly

Ref	Part No.	Qty.	Description
1	322-11	2	Screw-HH
2	106-7289-03	1	RH Auger ASM
3	3296-29	14	Nut-Lock, NI
4	108-7328	1	26 Inch Auger Gearcase ASM
5	3296-42	13	Nut-Lock, NI
6	106-4576-03	1	Impeller ASM
8	3230-23	8	Screw-CARR
12	107-1017-03	1	Seal-Flange, Cover
13	107-3003	1	Screw-Plastite
14	107-3006	1	Guide-Chute
15	107-1013	1	Nut-Speed, U-Type
16	107-1014-03	1	Bracket-Cover, Clip Nut
17	321-4	7	Screw-HH
18	108-0017	1	Cover
19	3256-22	1	Washer-Flat
20	3229-1	4	Screw-CARR
21	32144-112	4	Screw-HWH
22	107-1001	1	Cover-Belt
23	701493	1	Nut-Speed
24	107-1016	1	Cover-Extension, Belt
25	3242-4	2	Screw-Set, SQH
26	62-1300	1	Pulley-Impeller
27	252-80	1	Washer-Thrust
28	3257-23	1	Key-Woodruff

Ref	Part No.	Qty.	Description
29	26-6110	1	Flange-Cup, Bearing
30	63-3450	1	Bearing-Ball
31	26-6120	1	Flange-Cup, Bearing
32	107-3822	1	Housing-Auger, 26 Inch
33	32144-70	4	Screw-HWHTF
34	106-4588-01	2	Skid
35	52-2861	4	Washer
36	105-9976-01	1	Scraper-Fixed
37	3230-16	4	Screw-CARR
39	321-44	2	Screw-HHF
40	106-7299-03	1	LH Auger ASM
41	106-4570	2	Auger-Bearing
42	3-0750	2	Washer
43	323-4	2	Screw-HH
45	107-3040	1	Decal-Danger, Auger
46	32144-14	6	Screw-HWHTF
47	108-0039-03	1	Seal
48	1-633545	2	Spacer

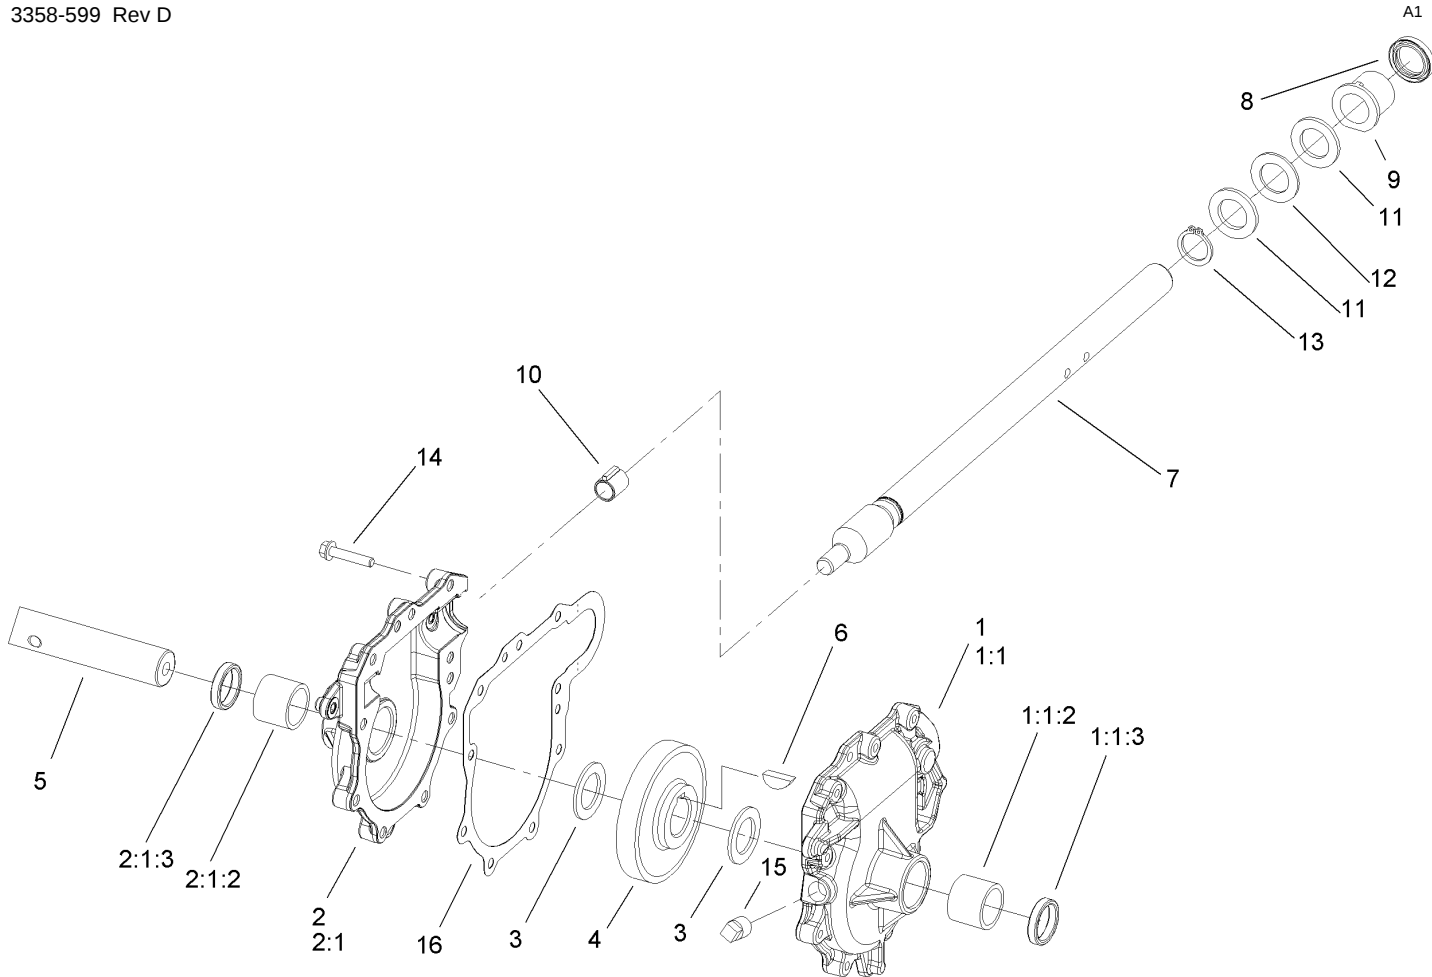 

26 Inch Auger Gearcase Assembly No. 108-7328


Ref	Part No.	Qty.	Description				
1	108-7325	1	LH Auger Gearcase ASM				
1:1:1		1	Gearcase-Auger, LH				
1:1:2	112-6635	1	Bushing-Sleeve				
1:1:3	7-0045	1	Seal-Oil				
2	108-7327	1	RH Auger Gearcase ASM				
2:1		1	Gearcase-Auger, RH				
2:1:2	112-6635	1	Bushing-Sleeve				
2:1:3	7-0045	1	Seal-Oil				
3	252-71	2	Washer-Thrust				
4	62-0120	1	Gear-Helical				
5	106-4579	1	Shaft-Auger				
6	3257-10	1	Key-Woodruff				
7	66-7811	1	Shaft-Impeller				
8	253-149	1	Seal-Oil				
9	37-6560	1	Bushing-Input				
10	62-1150	1	Bushing-Worm				
11	252-78	2	Washer-Thrust				
12	252-76	1	Bearing-Thrust				
13	32151-33	1	Ring-Retaining, EXT				
14	108-4862	9	Screw-HWHTF				
15	281-1	1	Plug-Pipe, SQH				
16	108-7330	1	Gasket-Gearcase, Auger				



Chute Assembly


Ref	Part No.	Qty.	Description
1	112-6629	1	Deflector-Chute, Ce
2	106-4594	1	Spring-Torsion
3	46-8092	5	Screw-Plastite
4	106-4472	1	Gear-Chute
5	46-6810	3	Screw And Washer ASM
6	100-9880	1	Bolt-Shoulder
7	106-4585	1	Cover-Gear, Chute
9	106-7296	1	Bracket-Cable, Clamp
10	106-7297	1	Clamp-Cable
11	106-4471	1	Gear-Face
12	107-1021	1	Rod-Deflector
14	98-1375	2	Screw-HWH
15	106-7266	1	Bracket-Deflector
16	106-4582-03	1	Bracket-Support, Chute
17	106-4422	1	Spacer-Chute
18	3256-2	3	Washer-Flat
19	3296-47	2	Nut-Lock, NI
20	106-7276	3	Screw-Shoulder
21	106-7257	1	Mount-Gear, Face
22	63-2650	1	Screw-Shoulder
23	106-4476	1	Latch-Chute
24	106-7253-03	1	Tube-Support
25	3256-22	3	Washer-Flat
26	3296-42	3	Nut-Lock, NI

Ref	Part No.	Qty.	Description
27	3296-29	2	Nut-Lock, NI
28	106-7260	1	Washer-Curved
29	3230-5	1	Screw-CARR
30	3230-23	1	Screw-CARR
31	46-8091	3	Screw-HWH
32	105-9991	1	Ring-Chute
33	106-4440	1	Chute-Discharge
35	108-7315	1	Spring-Torsion
36	108-5052	1	Seal-Chute
37	3290-456	1	Washer-Belleville
38	32144-10	1	Screw-HWH

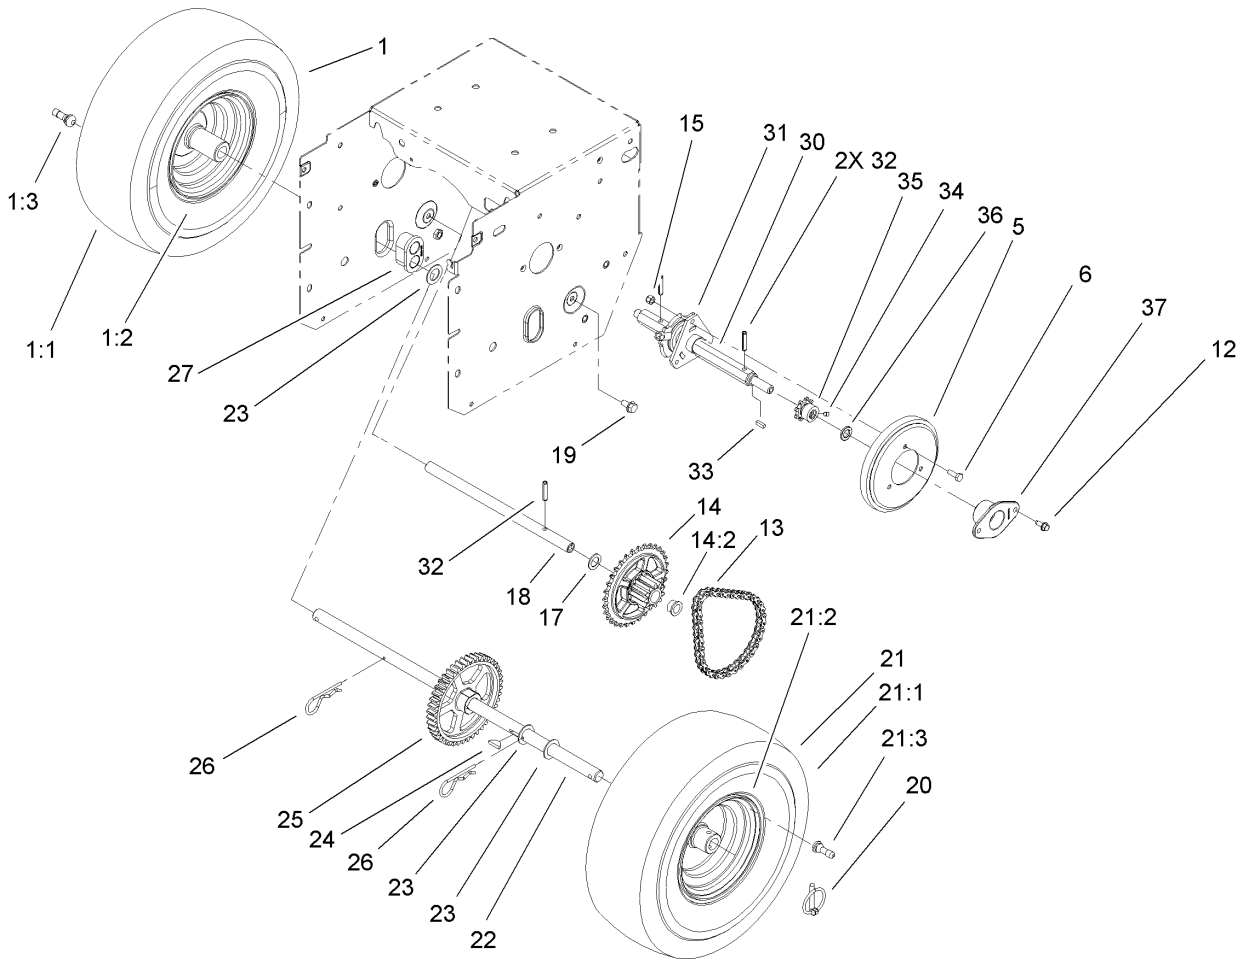 


Chain Drive Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
❶ 1		1	RH Wheel And Tire ASM	26	3290-343	2	Pin-Hair
1:1	107-3042	1	Tire	27	106-4558	2	Bearing-Axle
1:2	107-3043	1	Rim-Tire	30	108-5054	1	Shaft-Hex
1:3	232-27	1	Stem-Valve	31	106-4434	1	Trunion-Hex
5	106-4480	1	Wheel-Friction	32	32121-9	3	Pin-Roll, Slotted
6	321-4	3	Screw-HH	33	94-8850	1	Key-Square
12	32144-10	4	Screw-HWH	34	3245-32	2	Screw-HSH
13	108-0016	1	Chain-Roller	35	106-7317	1	Sprocket-8 Tooth
13	2710-6	1	Link-Connecting	36	108-5059	1	Spacer-Bushing
14	108-0013	1	Sprocket ASM	37	108-7319	2	Retainer-Bearing
14:2	108-2974	2	Bushing-Flange				
15	3296-42	3	Nut-Lock, NI				
17	107-3041	1	Washer-Flat				
18	106-4592	1	Shaft-Intermediate				
19	32144-14	2	Screw-HWHTF				
20	107-3039	2	Klik Pin ASM				
❶ 21		1	LH Wheel And Tire ASM				
21:1	107-3042	1	Tire				
21:2	107-3043	1	Rim-Tire				
21:3	232-27	1	Stem-Valve				
22	106-4449	1	Shaft-Axle				
23	3-8664	3	Washer-Thrust				
24	3257-7	1	Key-Woodruff				
25	106-4572	1	Gear-Axle, 44 Tooth				

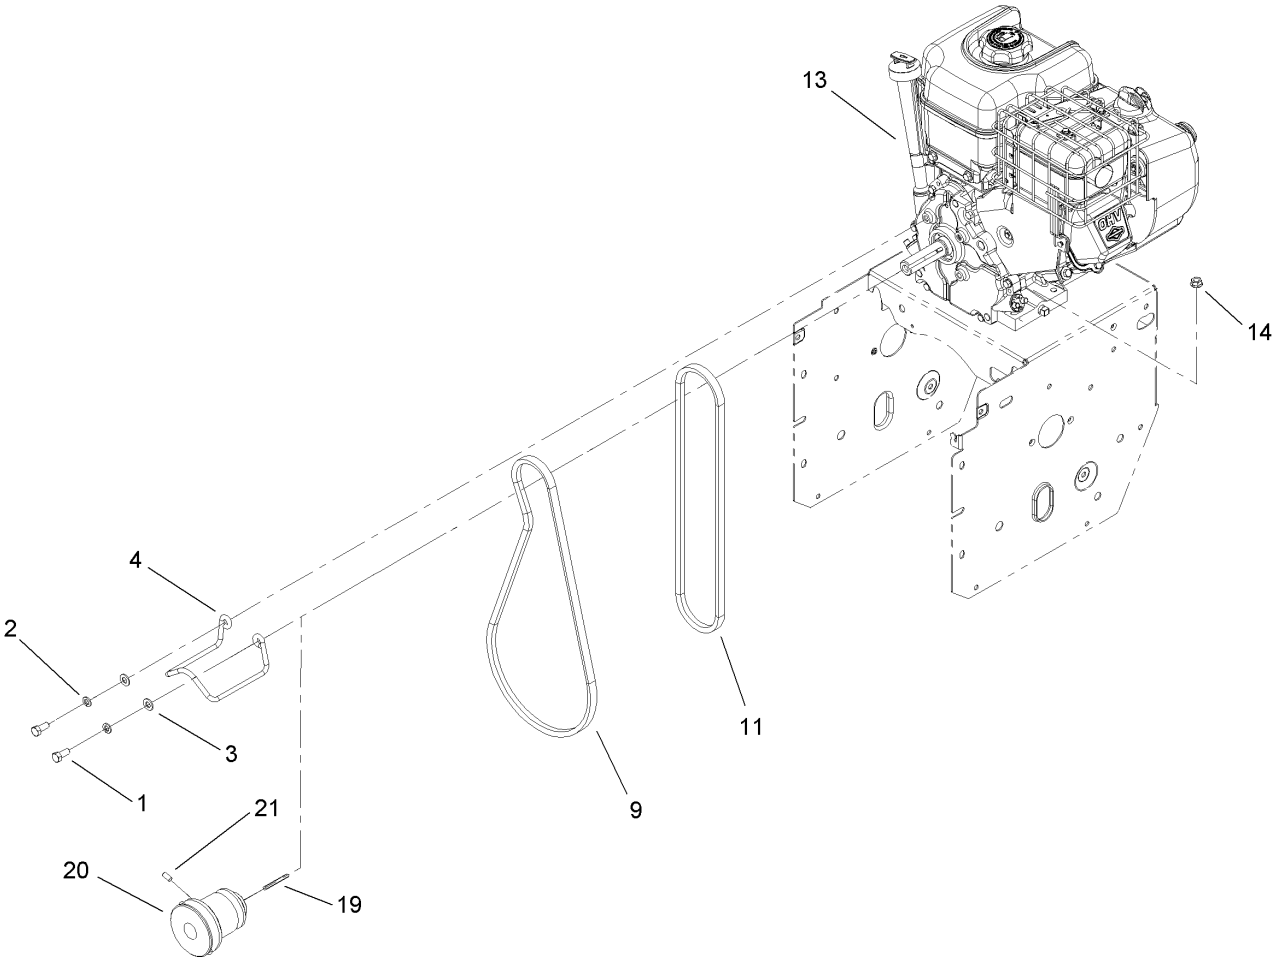 

Engine Assembly


Ref	Part No.	Qty.	Description				
1	3210-3	2	Screw-HH				
2	3253-4	2	Washer-Lock				
3	3256-23	2	Washer-Flat				
4	107-3835	1	Guide-Belt				
9	106-4498	1	Belt-V				
11	94-8812	1	V Belt-Traction				
1 2 13		1	Engine-Briggs And Stratton, 15D102-0111-E1				
14	32128-20	4	Nut-HF				
19	7-0036	1	Key-Square				
20	114-9252	1	Pulley-Engine				
21	3245-9	2	Screw-Set				

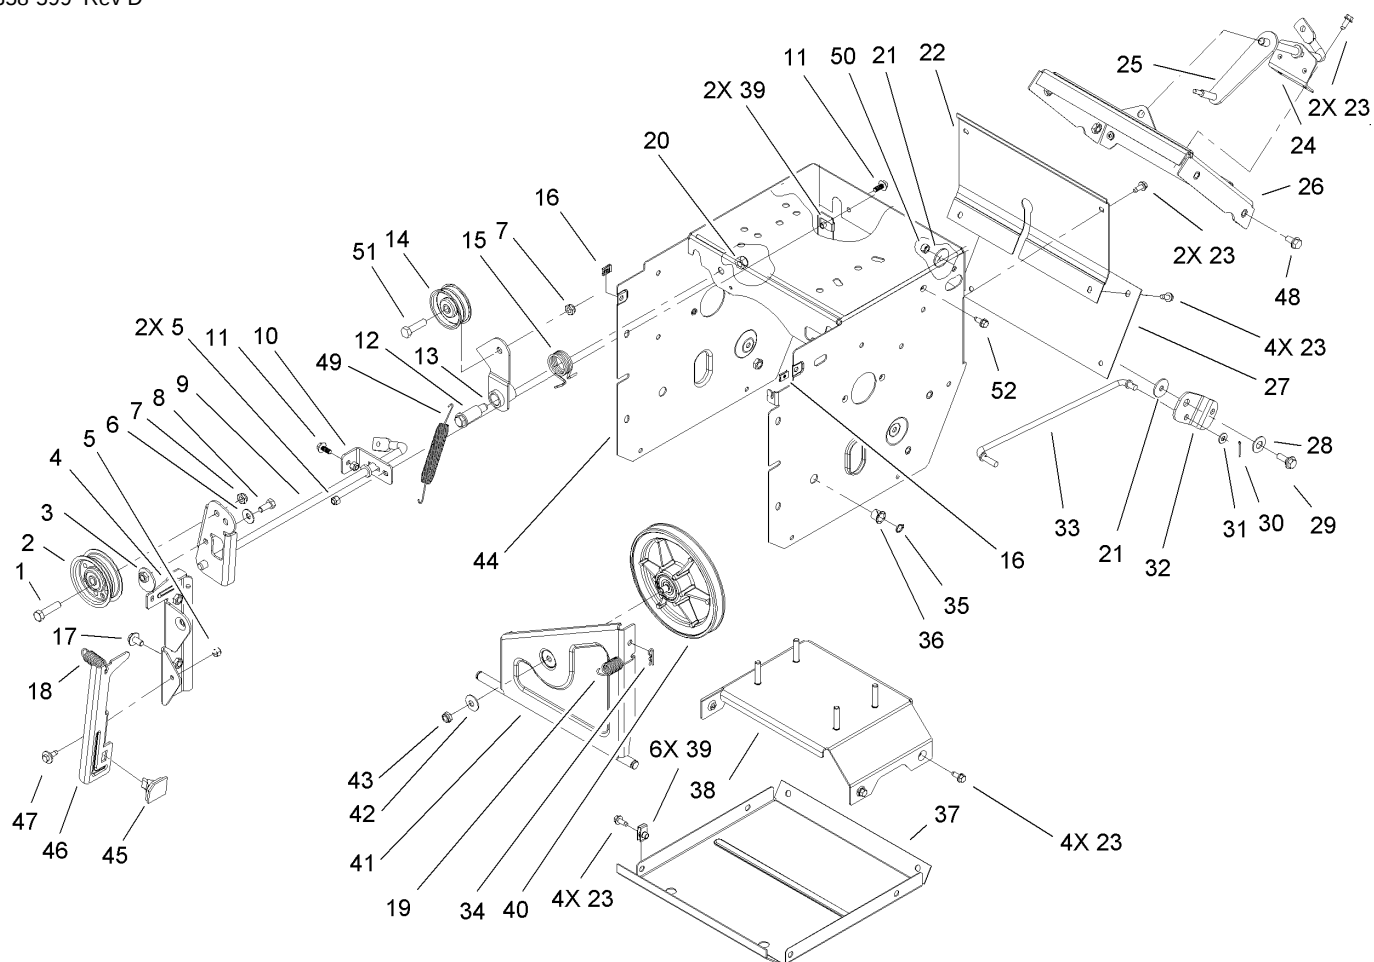 

Frame Assembly

Ref	Part No.	Qty.	Description
1	323-8	1	Screw-HH
2	92-7104	1	Pulley-Idler
3	107-1047	1	Nut
4	107-1039	1	Bracket-Idler, Impeller
5	3296-42	3	Nut-Lock, NI
6	3290-456	1	Washer-Belleville
7	3296-59	2	Nut-Lock, NI
8	322-3	1	Screw-HH
9	107-3838-03	1	Impeller Clutch ASM
10	106-7341	1	Bracket-Rear, Clutch
11	99-6810	2	Screw-HH
12	108-5056	1	Bolt-Shoulder
13	108-5058	1	Arm-Idler, Traction
14	3-4244	1	Pulley-Idler
15	108-7332	1	Spring-Torsion
16	107-1013	2	Nut-Speed, U-Type
17	3234-7	2	Screw-HHF
18	107-1045	1	Spring-Extension
19	107-1003	1	Spring-Extension
20	3296-76	1	Nut-Lock, NI
21	5-4460	2	Washer-Pivot
22	106-4556-01	1	Cover-Upper
23	32144-10	16	Screw-HWH
24	108-0036	1	Bracket-Rod, Shift


Ref	Part No.	Qty.	Description
25	106-7268	1	Lever-Control, Traction
26	108-0026-01	1	Shift Plate ASM
27	106-7345-01	1	Cover-Lower
28	25-5640	1	Washer
29	27-0410	1	Screw-Shoulder
30	3272-4	1	Pin-Cotter
31	3256-23	1	Washer-Flat
32	107-1011	1	Bellcrank-Drive
33	106-4467	1	Link-Control, Speed
34	3290-307	1	Pin-Hair
35	32151-61	2	Ring-Retaining
36	256-257	2	Bushing-Nyliner
37	106-7330-01	1	Pan-Bottom
38	112-8128	1	Frame Brace ASM
39	107069	8	Clip
40	108-0031	1	Traction Pulley ASM
41	108-7307	1	Friction Wheel Bracket ASM
42	3290-340	1	Washer-Belleville
43	3296-5	1	Nut-Lock
44	114-9259-01	1	Traction Frame ASM
45	66-8060	1	Pad-Brake
46	107-1000	1	Arm-Brake
47	92-9698	1	Screw-Shoulder
48	32144-14	4	Screw-HWHTF

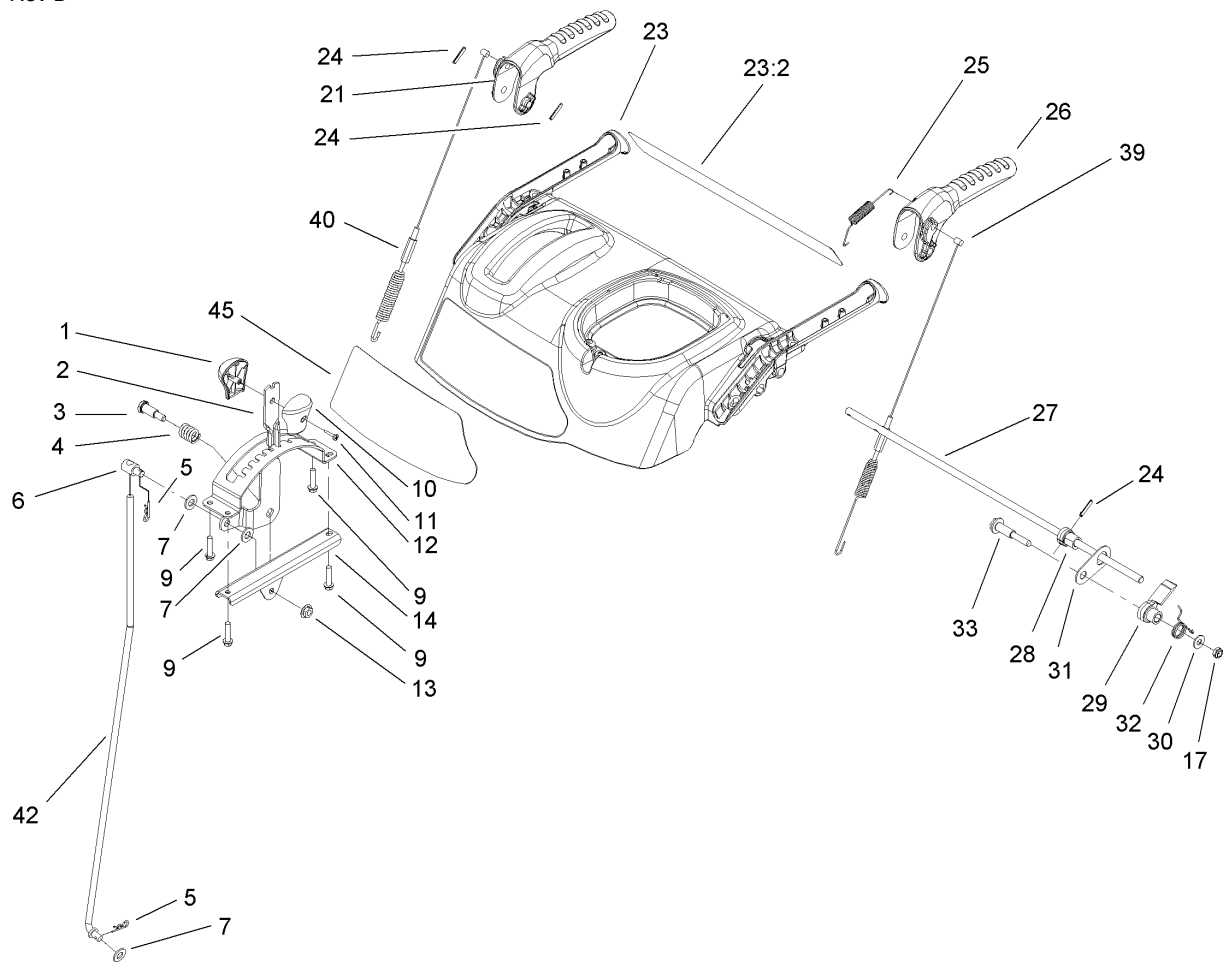 

Handle and Control Assembly


Ref	Part No.	Qty.	Description
1	106-4423	1	Knob-Shift, RH
2	106-7278-03	1	Selector-Speed
3	63-2650	1	Screw-Shoulder
4	108-7313	1	Spring-Compression
5	3290-307	2	Pin-Hair
6	110-3446	1	Trunion-Rod
7	3256-24	3	Washer-Flat
9	46-8092	4	Screw-Plastite
10	105-9999	1	Knob-Shift, LH
11	94-4496	1	Screw-PPH
12	106-7277-03	1	Guide-Selector, Speed
13	32128-13	1	Nut-HF
14	106-7279-03	1	Mount-Selector, Speed
17	3296-72	1	Nut-Lock, NI
21	106-4413	1	Lever-Auger
23	112-6631	1	Control Panel ASM
23:2	112-6626	1	Decal-Panel, Control
24	32121-125	3	Pin-Spring
25	107-3001	1	Spring-Tension
26	106-4410	1	Lever-Traction
27	105-9996	1	Rod-Lockout
28	107-1043	1	Cam-Lockout
29	108-0023	1	Latch-Lockout
30	98-3499	1	Washer-Flat

Ref	Part No.	Qty.	Description
31	107-3000	1	Link-Lockout
32	108-0024	1	Spring-Torsion
33	106-4412	1	Screw-Shoulder
39	106-4563	1	Cable-Traction
40	106-4599	1	Cable-Auger
42	107-1005	1	Rod-Shift
45	115-5653	1	Decal

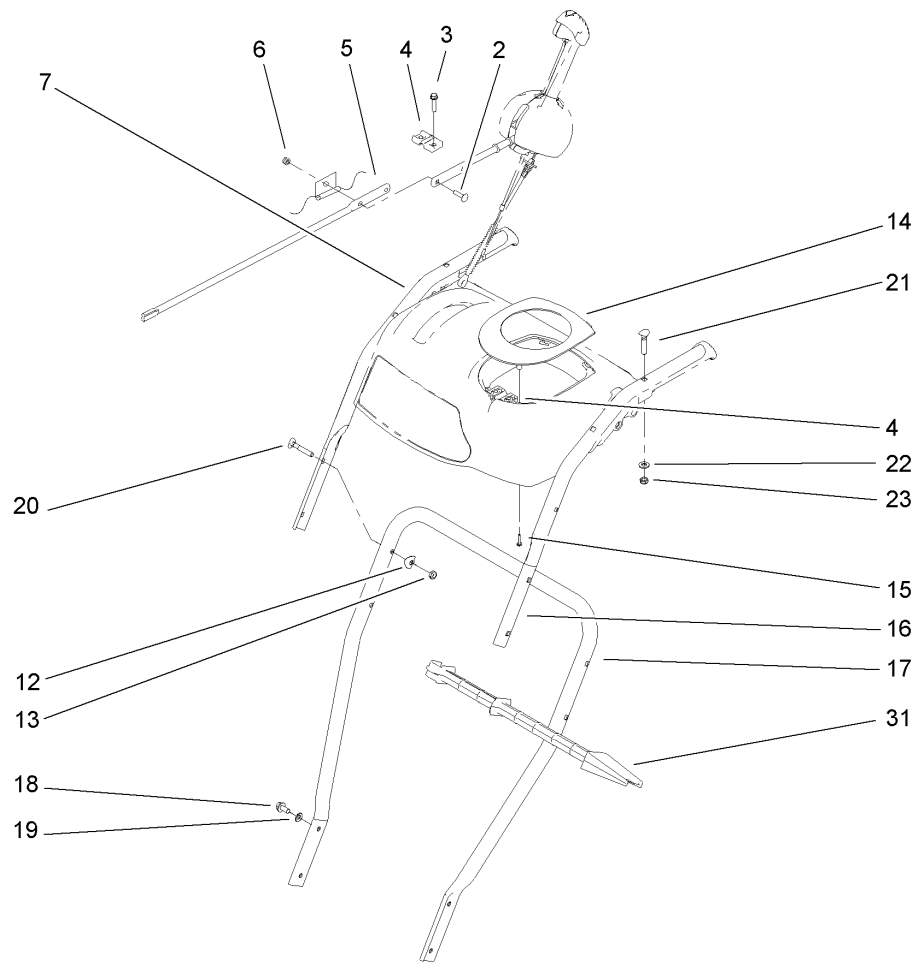 



Handle Assembly

Ref	Part No.	Qty.	Description				
2	3229-30	2	Screw-CARR				
3	46-8092	2	Screw-Plastite				
4	105-9987	2	Support-Rod				
5	106-7283	1	Rod-Chute, Front				
6	3296-73	2	Nut-Lock, NI				
7	108-0038-03	1	Handle-Upper, RH				
12	107-3844	4	Washer				
13	3296-72	4	Nut-Lock, NI				
14	106-4586	1	Cover-Panel, Control				
15	94-4496	2	Screw-PPH				
16	108-0037-03	1	Handle-Upper, LH				
17	105-9981-03	1	Handle-Lower				
18	32144-14	4	Screw-HWHTF				
19	3290-475	4	Washer-Belleville				
20	92-2260	4	Screw-Handle				
21	107-3018	4	Screw-Handle				
22	3256-70	4	Washer-Flat				
23	3296-72	4	Nut-Lock, NI				
31	110-3408	1	Stick-Cleanout				

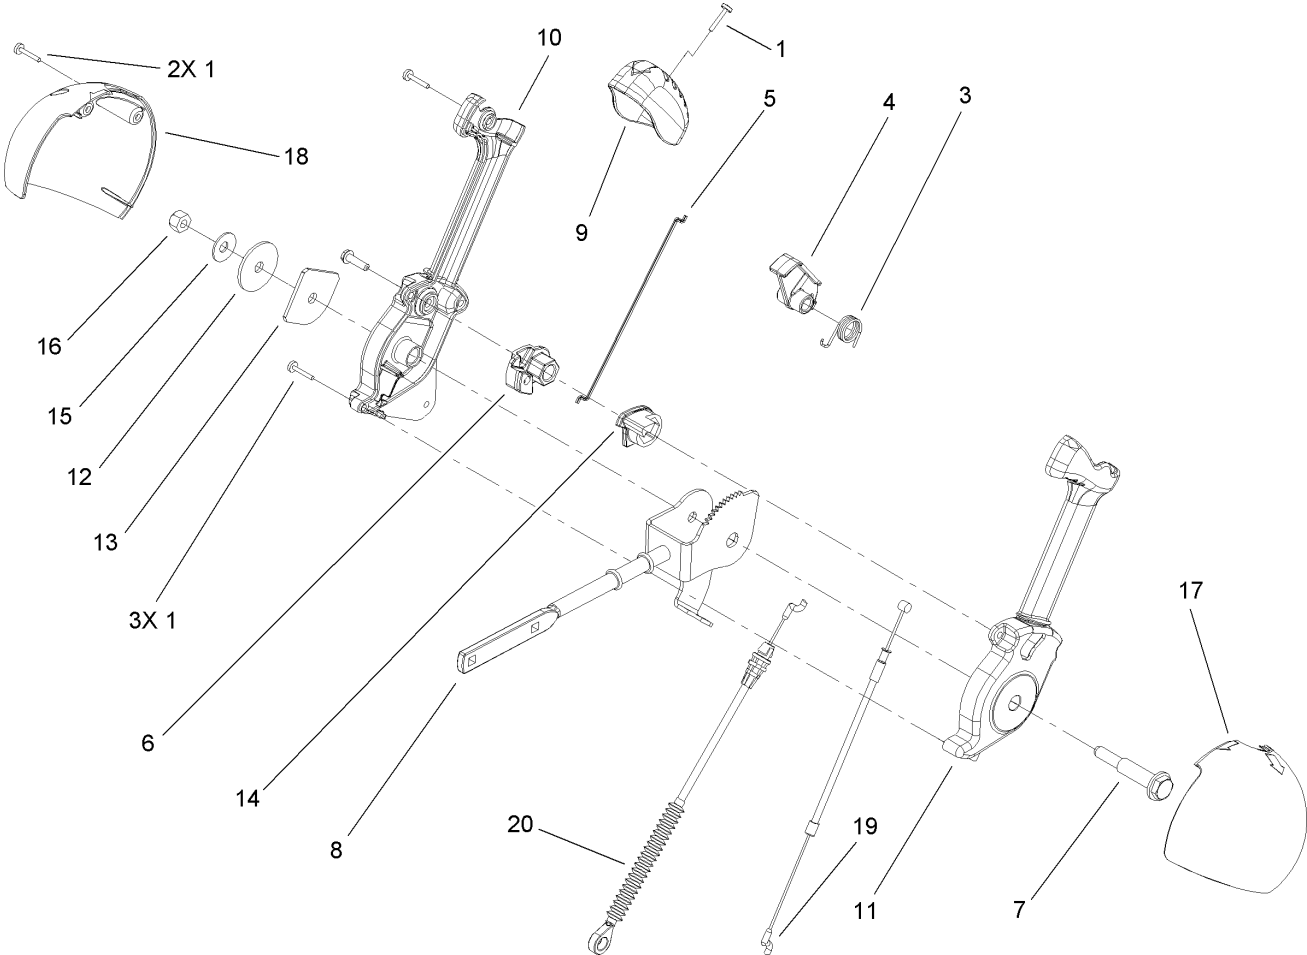 

Lever Chute Control Assembly

Ref	Part No.	Qty.	Description				
1	94-4496	6	Screw-PPH				
3	105-9982	1	Spring-Torsion				
4	105-9984	1	Trigger-Latch				
5	105-9985	1	Link-Latch				
6	105-9988	1	Lever-Cable, Deflector				
7	105-9995	1	Screw-Shoulder				
8	106-4479	1	Rod-Control, Chute				
9	106-7280	1	Cap-Lever				
10	106-7281	1	Lever-Chute Control, RH				
11	106-7282	1	Lever-Chute Control, LH				
12	107-3002	1	Washer-Nylon				
13	106-7295	1	Plate-Friction				
14	106-7310	1	Pawl-Latch				
15	3290-456	1	Washer-Belleville				
16	3296-29	1	Nut-Lock, NI				
17	105-9986	1	Cover-Chute Lever, LH				
18	106-7292	1	Cover-Chute Lever, RH				
19	105-9989	1	Cable-Release, Chute				
20	105-9990	1	Cable-Control, Deflector				

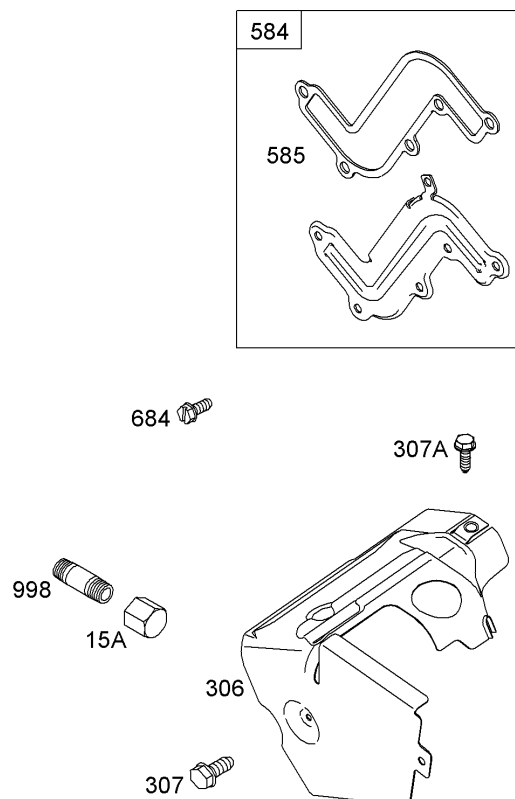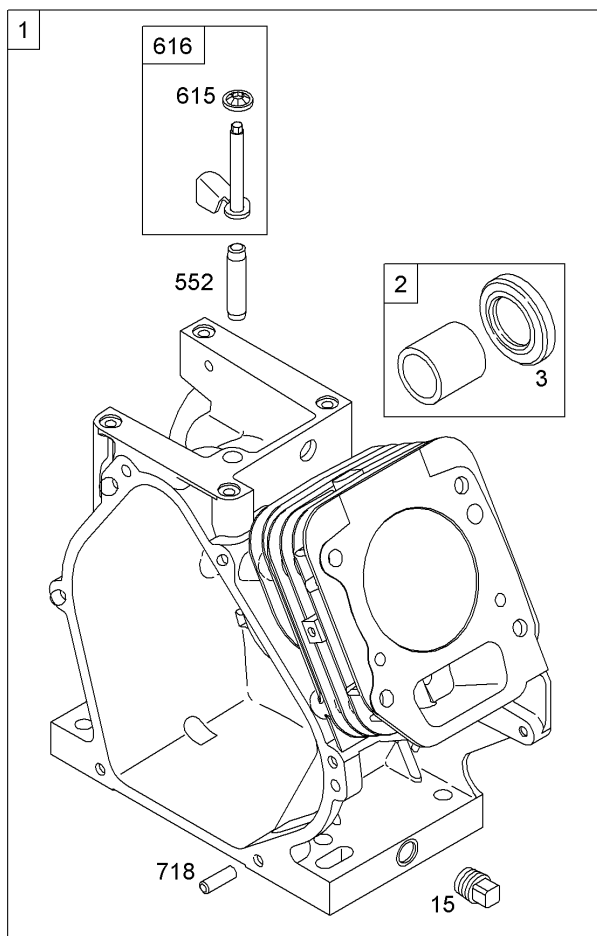  


Assemblies include all parts shown in frames

Cylinder Assembly

Briggs and Stratton 15D102-0111-E1

Ref	Part No.	Qty.	Description
21	794188	1	Cylinder ASM
22	399269	1	Bushing And Seal Kit (Magnetoside)
243	299819s	1	Seal-Oil (Magnetoside)
215	691686	1	Plug-Drain, Oil (Square Head)
215A	695757	1	Plug-Oil Drain
2306	695710	1	Shield-Cylinder
2307	699483	1	Screw (Cylinder Shield)
2307A	699234	1	Screw (Cylinder Shield)
2552	692346	1	Bushing-Crank, Governor
2584	791759	1	Cover-Passage, Breather
24585		1	Gasket-Passage, Breather
2615	692576	1	Retainer-Shaft, Governor
2616	692547	1	Crank-Governor
2684	793369	1	Screw (Breather Passage Cover)
2718	690959	1	Pin-Locating
2998	794701	1	Pipe-Oil




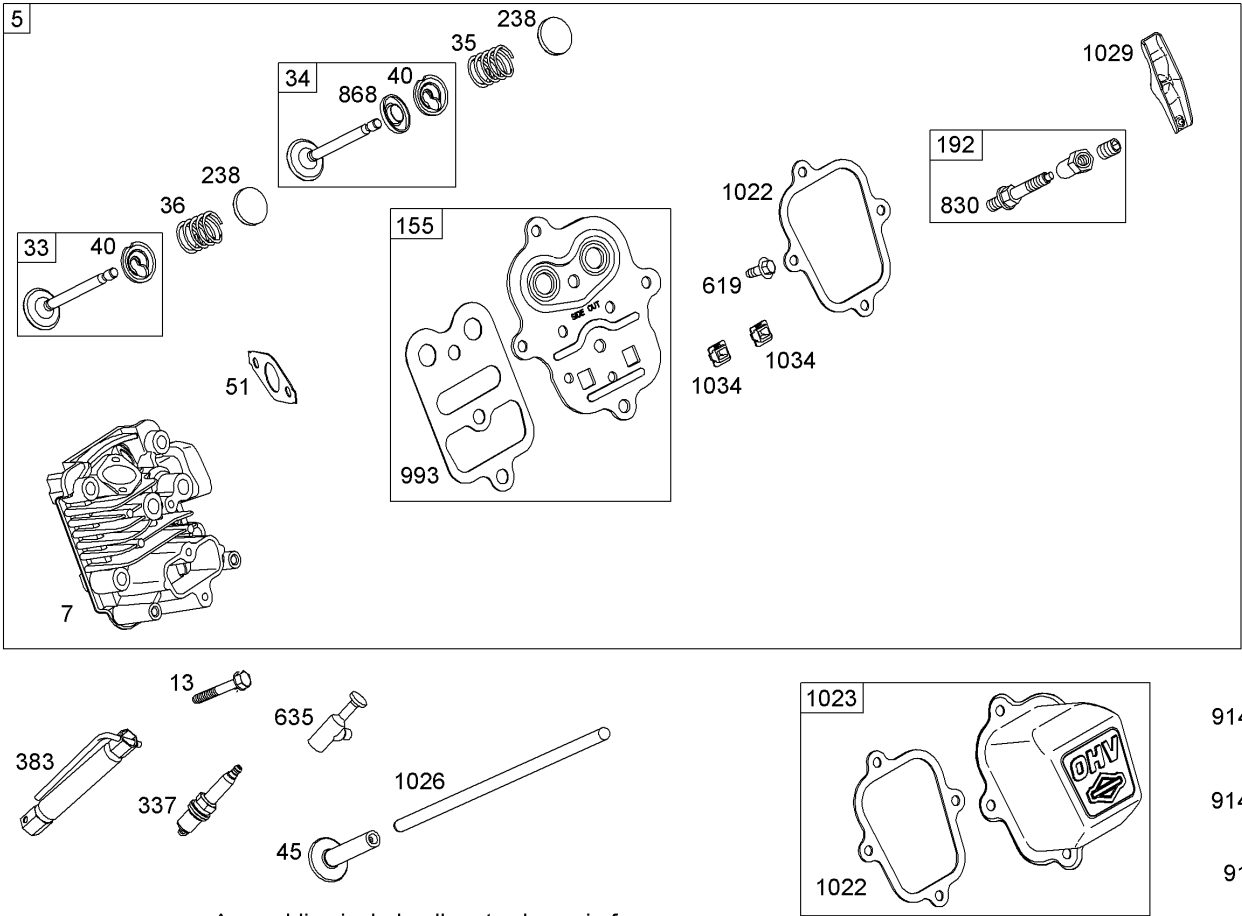 


Assemblies include all parts shown in frames

Cylinder Head Assembly

Briggs and Stratton 15D102-0111-E1


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
25	791720	1	Head-Cylinder	24993	694088	1	Gasket-Head Plate, Cylinder
247	791716	1	Gasket-Head, Cylinder	6			
6				241022	691890	1	Gasket-Cover, Rocker
213	699482	1	Screw (Cylinder Head)	6			
233	499642	1	Valve-Exhaust	21023	499924	1	Cover-Arm, Rocker
234	499641	1	Valve-Intake	21026	790287	1	Rod-Push
235	691304	1	Spring-Valve (Intake)	21029	691230	1	Arm-Rocker
236	691304	1	Spring-Valve (Exhaust)	21034	691343	1	Guide-Rod, Push
240	692194	1	Retainer-Valve				
245	690977	1	Tappet-Valve				
2451	791718	1	Gasket-Intake				
6							
2155	698214	1	Plate-Head, Cylinder				
2192	694543	1	Adjuster-Arm, Rocker				
2238	691300	1	Cap-Valve				
2337	691043	1	Spark Plug				
2383	19374s	1	Wrench-Spark Plug				
2619	699480	1	Screw (Cylinder Head Plate)				
2635	692927	1	Boot-Sparkplug				
2830	694544	1	Stud (Rocker Arm)				
24868	692044	1	Seal-Valve				
6							
2914	699480	1	Screw (Rocker Cover) (Bottom)				
2914A	692557	1	Screw (Rocker Cover) (Top)				
2914B	697551	1	Screw (Rocker Cover) (Center)				

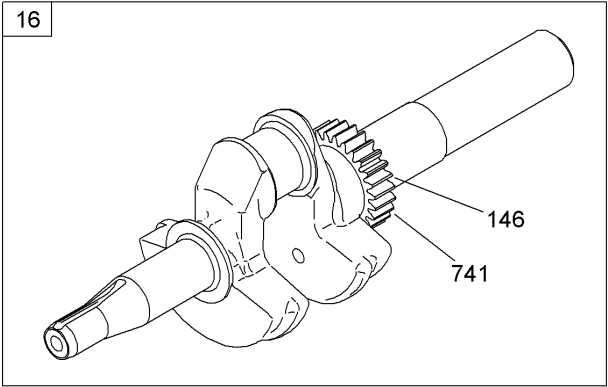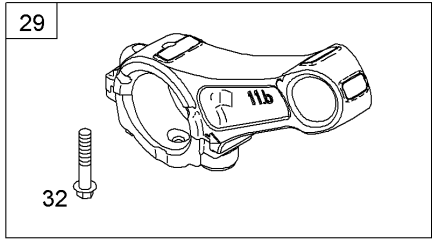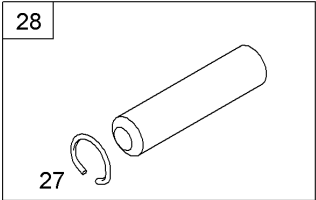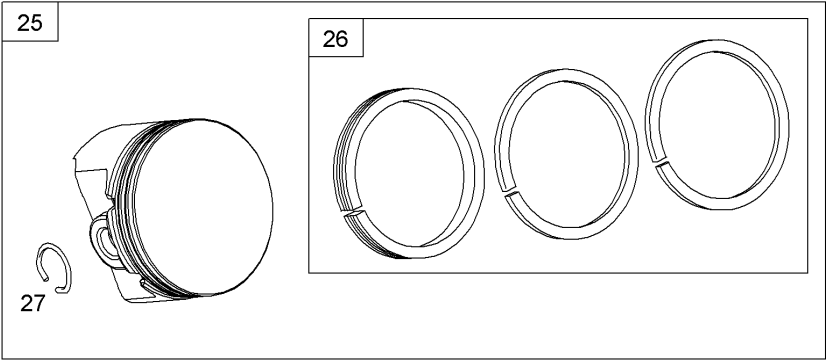    

Assemblies include all parts shown in frames

Crankshaft Assembly
Briggs and Stratton 15D102-0111-E1

Ref	Part No.	Qty.	Description				
16	791721	1	Crankshaft				
24	222698s	1	Key-Flywheel				
25	791786	1	Piston ASM (STD)				
25	791791	1	Piston ASM (.020 O S)				
26	791787	1	Ring Set (STD)				
26	791792	1	Ring Set (.020 O S)				
27	690975	1	Lock-Pin, Piston				
28	690229	1	Pin-Piston (STD)				
29	791783	1	Rod-Connecting				
32	791784	1	Screw (Connecting Rod)				
146	690979	1	Key-Timing				
741	695087	1	Gear-Timing				

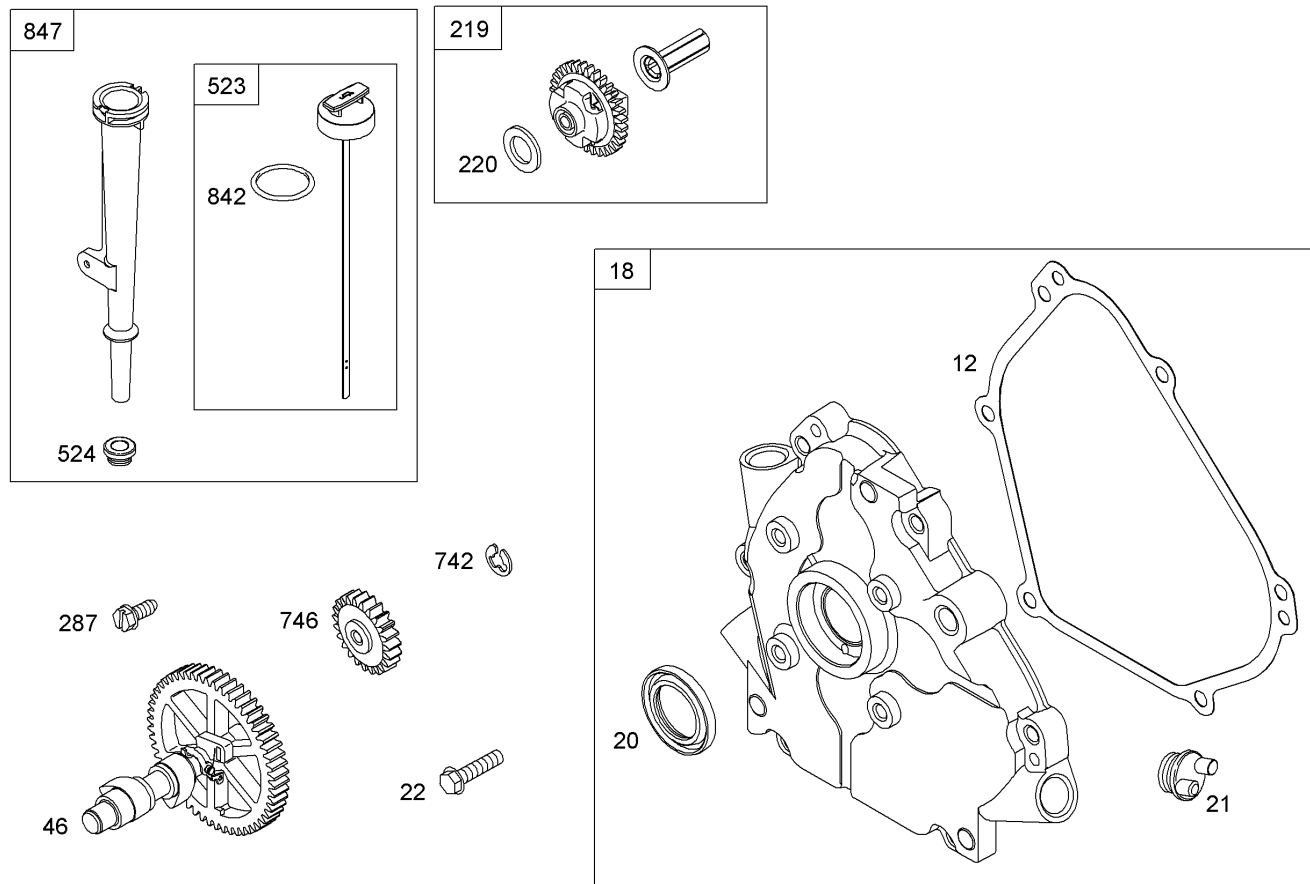 


Assemblies include all parts shown in frames

Crankcase Assembly

Briggs and Stratton 15D102-0111-E1

Ref	Part No.	Qty.	Description				
212	699485	1	Gasket-Cover, Crankcase				
218	699696	1	Cover-Crankcase				
220	692550	1	Seal-Oil (PTO Side)				
221	281658S	1	Cap-Fill, Oil				
222	699478	1	Screw (Crankcase Cover)				
246	693404	1	Camshaft				
219	693578	1	Gear-Governor				
220	691724	1	Washer (Governor Gear)				
287	699629	1	Screw (Dipstick Tube)				
523	693618	1	Dipstick				
524	281370S	1	Seal-Tube, Dipstick				
742	692564	1	Retainer-E Ring				
746	790278	1	Gear-Idler				
842	691031	1	Seal-O Ring (Dipstick Tube)				
847	693617	1	Dipstick And Tube ASM				

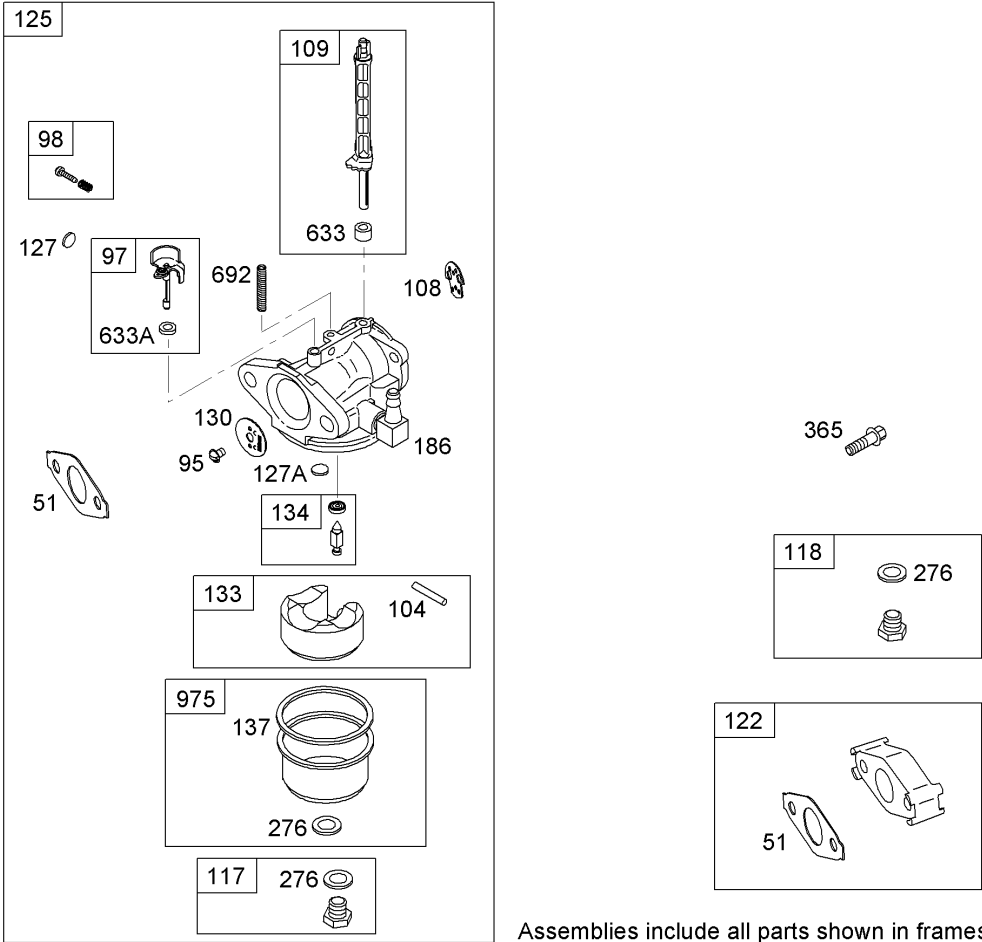 








Assemblies include all parts shown in frames

Carburetor Assembly

Briggs and Stratton 15D102-0111-E1

Ref	Part No.	Qty.	Description
③④51	791718	1	Gasket-Intake
⑤⑥			
②95	691636	1	Screw (Throttle Valve)
②97	690024	1	Shaft-Throttle
②98	398185	1	Idle Speed Kit
②③104	691242	1	Pin-Hinge, Float
②108	695807	1	Valve-Choke
②109	791957	1	Shaft-Choke
②117	694176	1	Jet-Main (STD)
②118	690048	1	Jet-Main (High Altitude)
②122	791717	1	Spacer-Carburetor
②125	794588	1	Carburetor
②127	694468	1	Plug-Welch
②③127A	691739	1	Plug-Welch
②130	691181	1	Valve-Throttle
②133	398187	1	Float-Carburetor
②③134	398188	1	Needle And Seat Kit
②③137	693981	1	Gasket-Bowl, Float
⑤			
②186	692317	1	Connector-Hose
②③276	271716	1	Washer-Sealing
②365	699484	1	Screw (Carburetor)
②③633	693867	1	Seal-Shaft, Choke Throttle
⑤			


Ref	Part No.	Qty.	Description
②③633A	691321	1	Seal-Shaft, Choke Throttle
⑤			
②692	690572	1	Spring-Detent
②975	790559	1	Bowl-Float

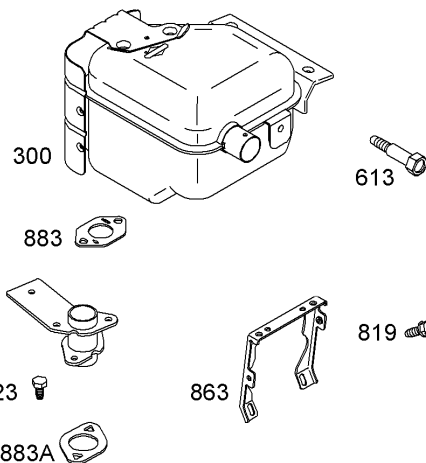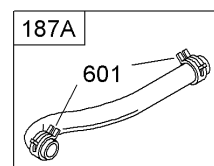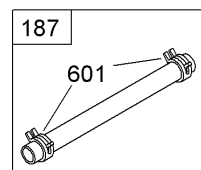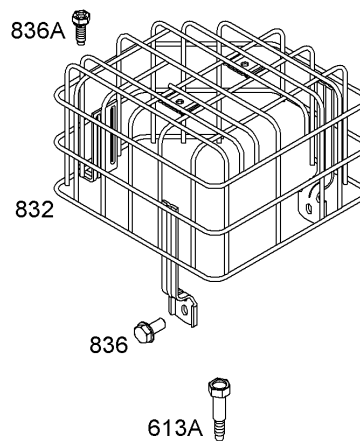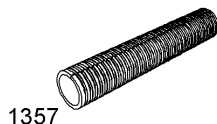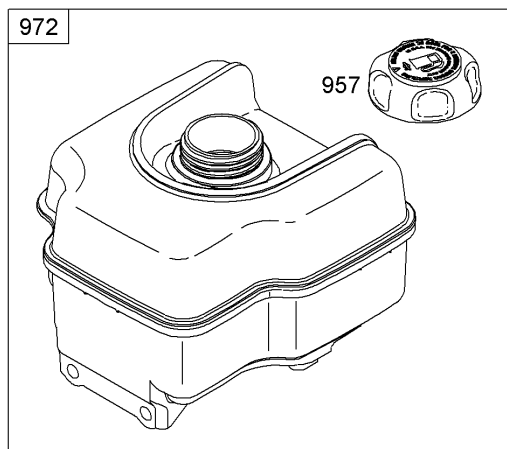       

Assemblies include all parts shown in frames

Muffler and Fuel Tank Assembly Briggs and Stratton 15D102-0111-E1


Ref	Part No.	Qty.	Description
2187	791766	1	Line-Fuel (Cut To Required Length)
2187A	791867	1	Line-Fuel (Molded)
2190	699220	1	Screw (Fuel Tank)
2300	699512	1	Muffler
2601	791850	1	Clamp-Hose
2613	697812	1	Screw (Muffler)
2613A	699480	1	Screw (Muffler)
2819	699233	1	Screw (Muffler Adapter)
2823	699209	1	Screw (Muffler Adapter)
2832	699313	1	Guard-Muffler
2836	791972	1	Screw (Muffler Guard)
2836A	699234	1	Screw (Muffler Guard)
2863	699849	1	Bracket-Muffler
2864	699232	1	Adapter-Muffler
24883	692237	1	Gasket-Exhaust
24883A	691893	1	Gasket-Exhaust
2957	792647	1	Cap-Tank, Fuel
2958	698180	1	Valve-Shut Off, Fuel
2972	694260	1	Tank-Fuel
21357	794700	1	Sleeve-Fuel Line

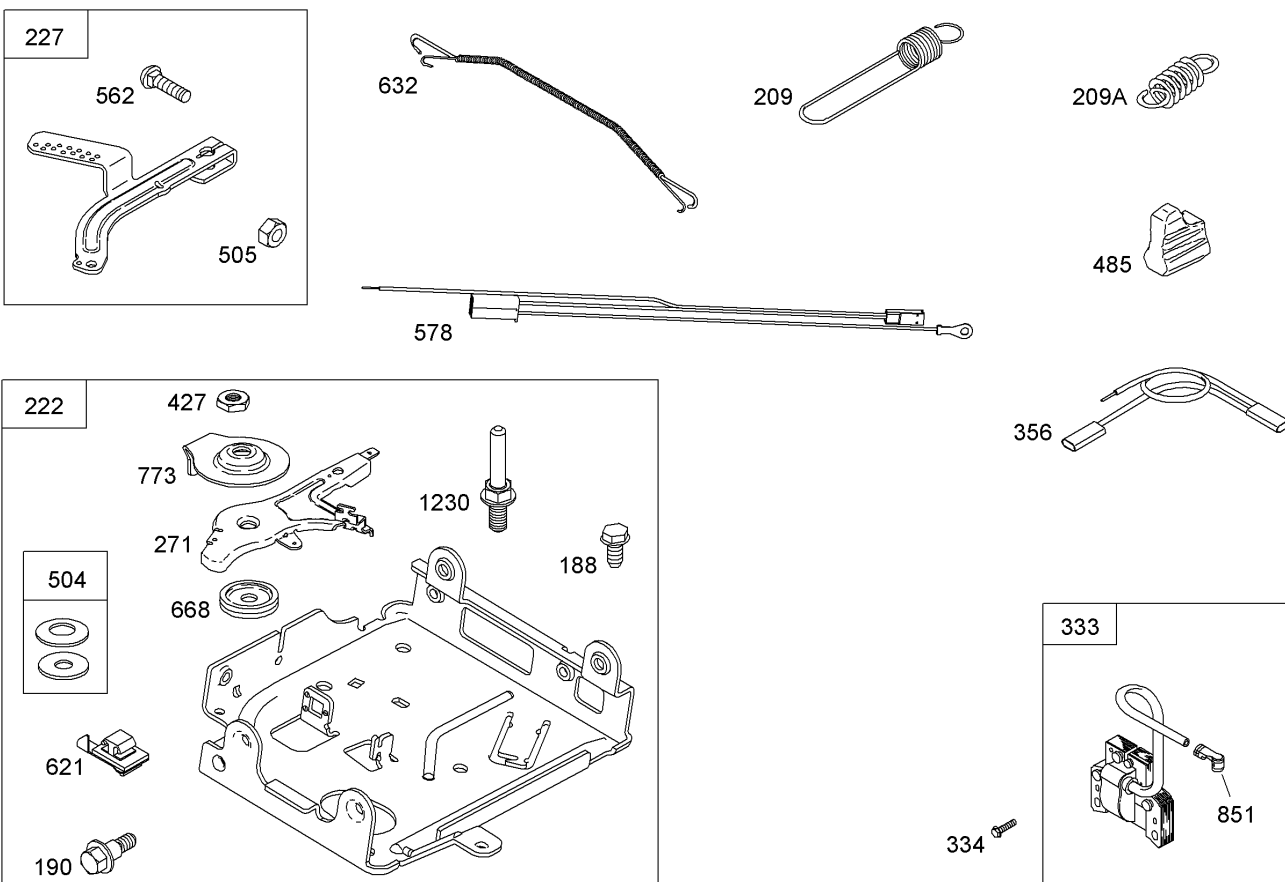 

Assemblies include all parts shown in frames

Governor Assembly
Briggs and Stratton 15D102-0111-E1


Ref	Part No.	Qty.	Description				
2188	699479	1	Screw (Control Bracket)				
2190	699220	1	Screw (Fuel Tank)				
2209	692571	1	Spring-Governor				
2209A	691278	1	Spring-Governor				
2222	793109	1	Bracket-Control				
2227	692573	1	Lever-Control, Governor				
2271	698038	1	Lever-Control				
2333	695711	1	Armature-Magneto				
2334	699477	1	Screw (Magneto Armature)				
2356	695731	1	Wire-Stop				
2427	694255	1	Nut (Control Bracket)				
2485	695755	1	Knob-Control				
2504	694254	1	Friction Washer Set				
2505	691251	1	Nut (Governor Control Lever)				
2562	691119	1	Bolt (Governor Control Lever)				
2578	794819	1	Wire ASM				
2621	692310	1	Switch-Stop				
2632	692653	1	Link-Spring, Mechanical Governor				
2668	694257	1	Spacer				
2773	694258	1	Retainer				
2851	493880s	1	Terminal-Spark Plug				
21230	699847	1	Screw (Control Bracket)				

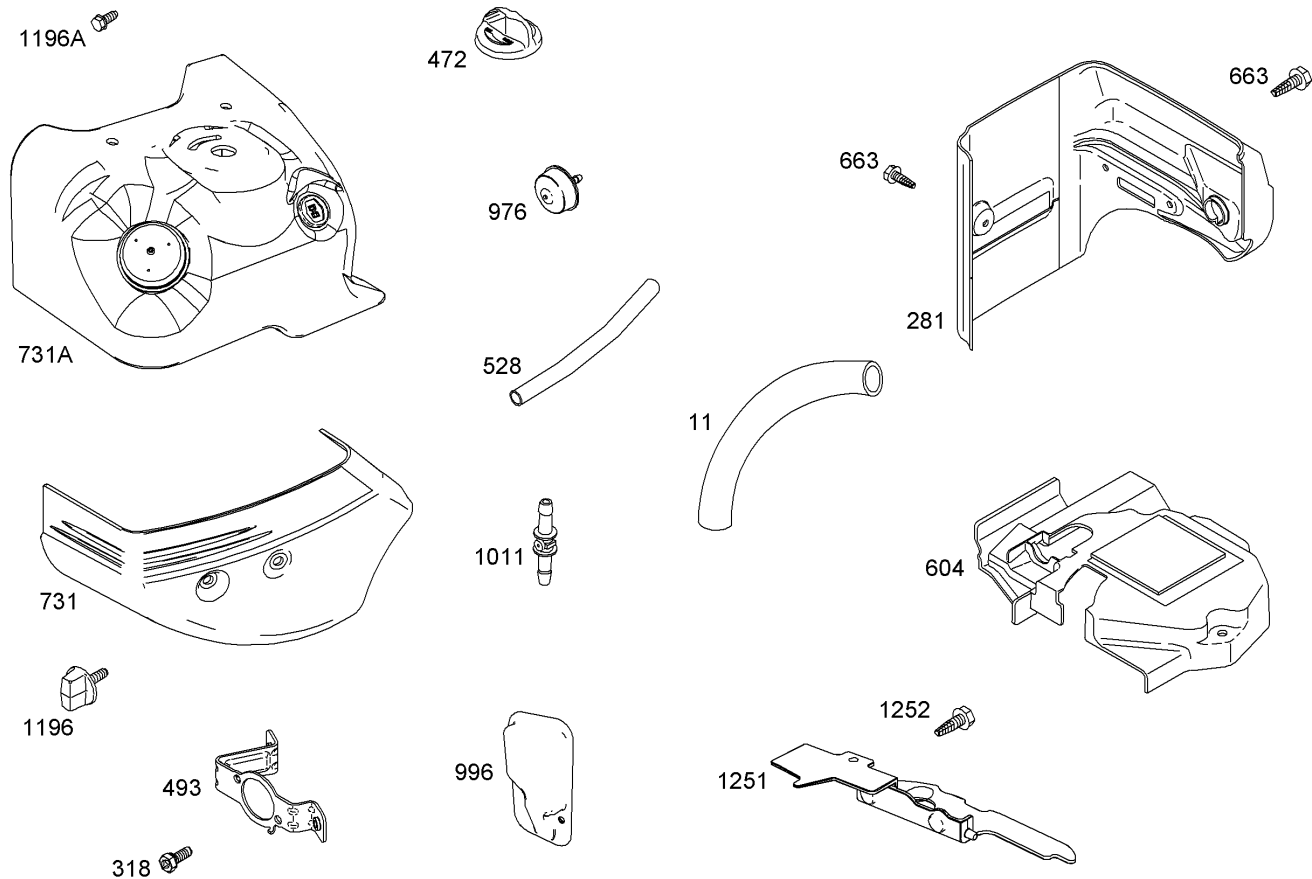 

Assemblies include all parts shown in frames

Shroud Assembly
Briggs and Stratton 15D102-0111-E1

Ref	Part No.	Qty.	Description				
211	695745	1	Tube-Breather				
2281	793122	1	Panel-Control				
2318	690370	1	Screw (Mounting Bracket)				
2472	791958	1	Knob-Choke Shaft				
2493	695744	1	Bracket-Mounting				
2528	793006	1	Hose-Primer				
2604	793134	1	Cover-Control				
2663	699206	1	Screw (Control Panel)				
2731	794703	1	Hood-Snow				
2731A	794704	1	Hood-Snow				
2976	790221	1	Primer-Carburetor				
2996	794687	1	Shield-Carburetor				
21011	794544	1	Tube-Vent				
21196	696692	1	Screw (Snow Hood)				
21196A	699854	1	Screw (Snow Hood)				
21251	794702	1	Shield-Snow				
21252	699234	1	Screw (Snow Shield)				

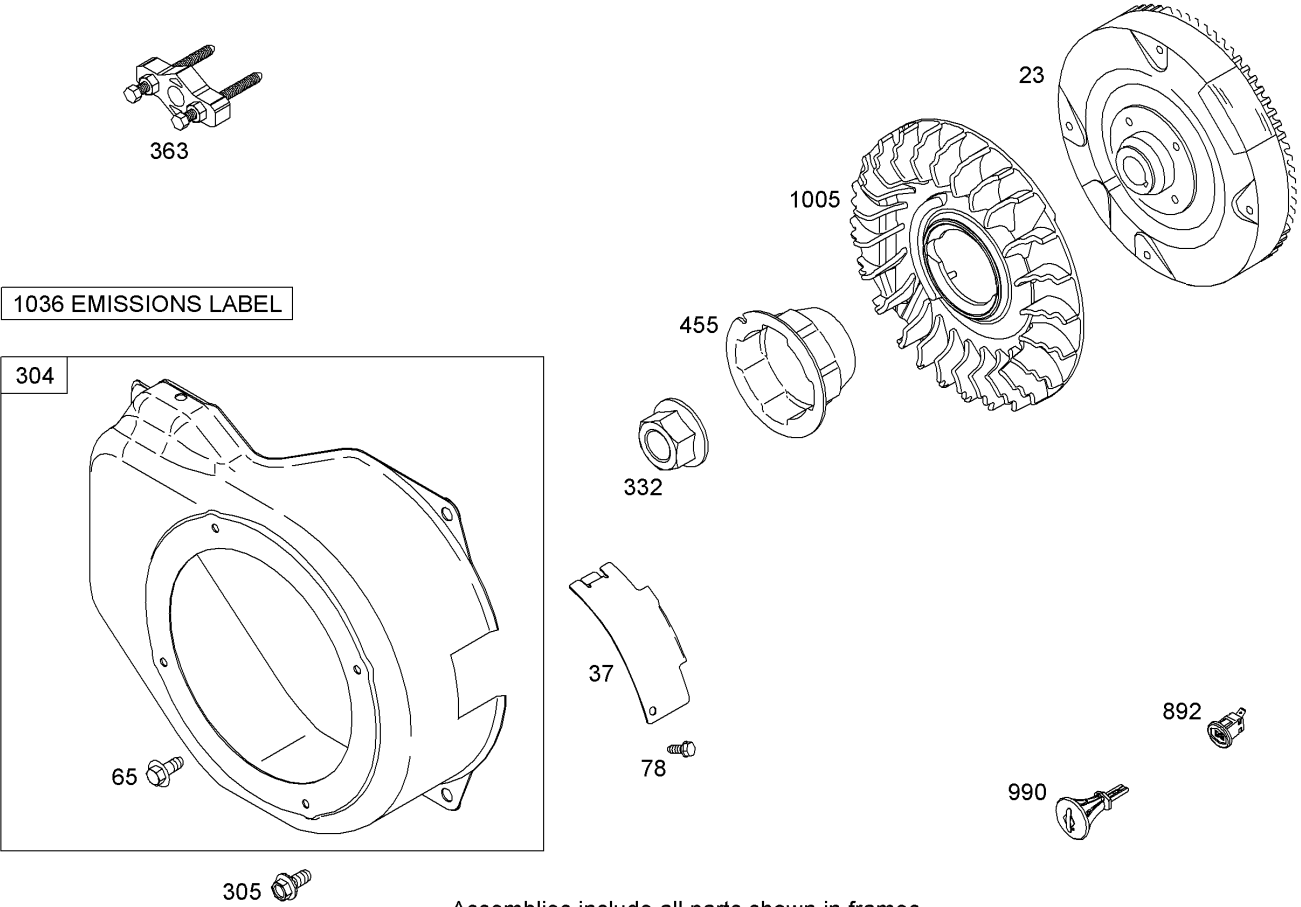 


Assemblies include all parts shown in frames

Blower Housing Assembly

Briggs and Stratton 15D102-0111-E1



Ref	Part No.	Qty.	Description				
23	699516	1	Flywheel				
37	699661	1	Guard-Flywheel				
65	699228	1	Screw (Rewind Starter)				
78	699205	1	Screw (Flywheel Guard)				
304	699598	1	Housing-Blower				
305	699480	1	Screw (Blower Housing)				
332	792723	1	Nut (Flywheel)				
363	19203	1	Puller-Flywheel				
455	692591	1	Cup-Flywheel				
892	791944	1	Switch-Key				
990	695756	1	Key				
1005	794273	1	Fan-Flywheel				
1036		1	Label-Emissions (Available From An Authorized Briggs & Stratton Service Dealer)				

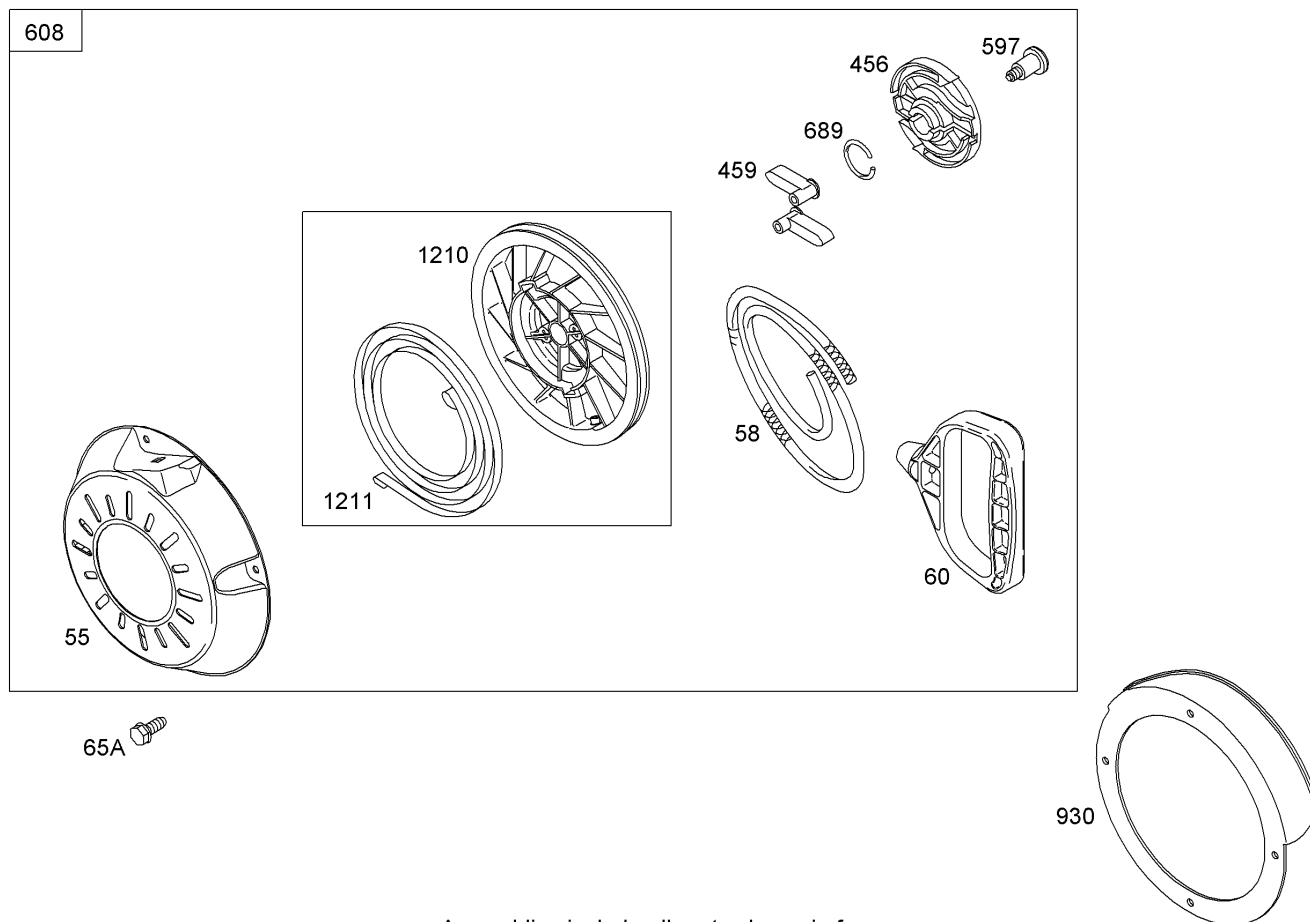 

Assemblies include all parts shown in frames

Rewind Starter Assembly Briggs and Stratton 15D102-0111-E1



Ref	Part No.	Qty.	Description				
255	696710	1	Housing-Starter, Rewind				
265A	699851	1	Screw (Rewind Starter)				
258	693389	1	Rope-Starter				
260	699334	1	Grip-Starter Rope				
2456	692299	1	Plate-Friction, Pawl				
2459	281505s	1	Ratchet-Pawl				
2597	691696	1	Screw (Pawl Friction Plate)				
2608	699335	1	Starter-Rewind				
2689	691855	1	Spring-Friction				
2930	696709	1	Guard-Rewind				
21210	498144	1	Pulley And Spring ASM (Pulley)				
21211	498144	1	Pulley And Spring ASM (Spring)				

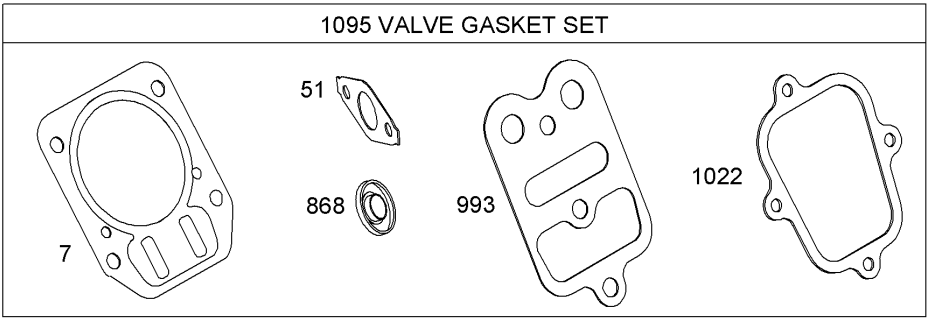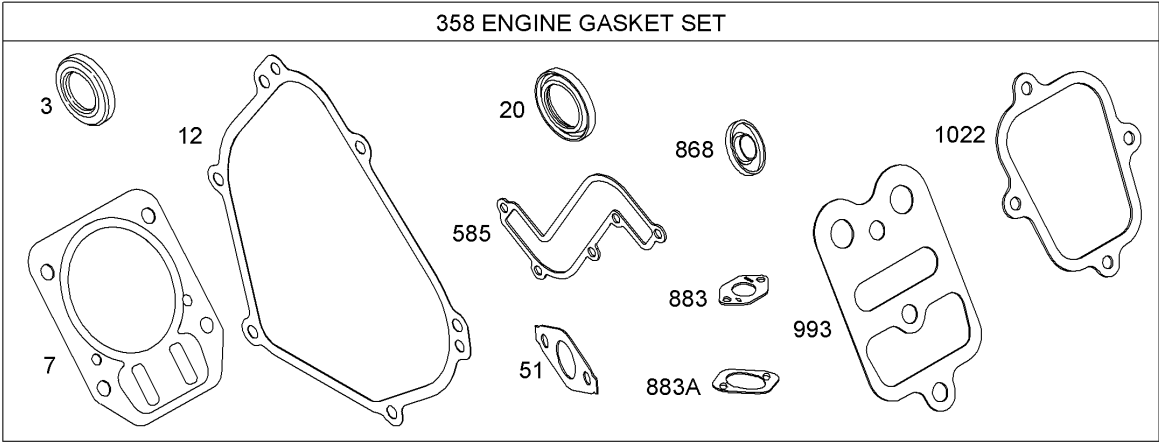  

Assemblies include all parts shown in frames

Gasket Kit
Briggs and Stratton 15D102-0111-E1

Ref	Part No.	Qty.	Description				
243	299819s	1	Seal-Oil (Magneto Side)				
247	791716	1	Gasket-Head, Cylinder				
6							
2412	699485	1	Gasket-Cover, Crankcase				
2420	691952	1	Seal-Oil (PTO Side)				
3451	791718	1	Gasket-Intake				
56							
2358	791797	1	Engine Gasket Set				
24585		1	Gasket-Passage, Breather				
24868	692044	1	Seal-Valve				
6							
24883	692237	1	Gasket-Exhaust				
24883A	691893	1	Gasket-Exhaust				
24993	694088	1	Gasket-Head Plate, Cylinder				
6							
241022	691890	1	Gasket-Cover, Rocker				
6							
21095	791798	1	Valve Gasket Set				

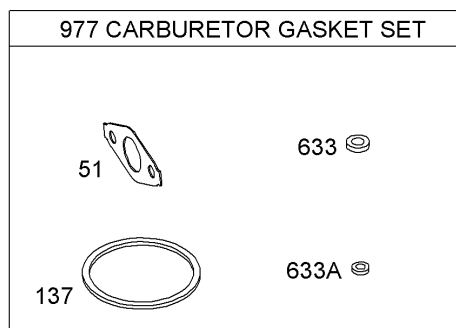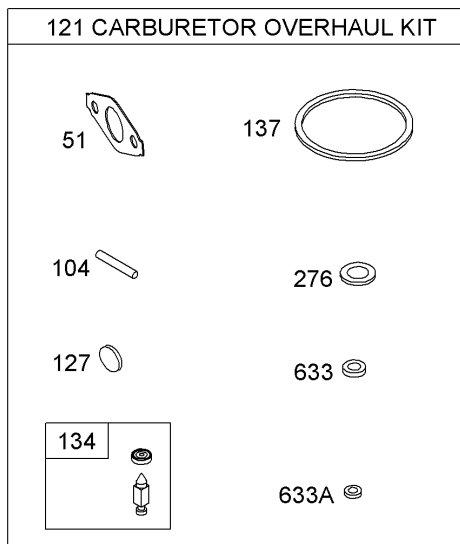  

Assemblies include all parts shown in frames

Carburetor Overhaul Kit

Briggs and Stratton 15D102-0111-E1

Ref	Part No.	Qty.	Description
3451 56	791718	1	Gasket-Intake
23 104 2 121	691242 792006	1	Pin-Hinge, Float
23 127	691739	1	Carburetor Overhaul Kit
23 134	398188	1	Plug-Welch
23 137 5	693981	1	Needle And Seat Kit
23 276	271716	1	Gasket-Bowl, Float
23 633 5	691321	1	Washer-Sealing
23 633A 5	693867	1	Seal-Shaft, Choke Throttle
2 977	792007	1	Seal-Shaft, Choke Throttle
		1	Carburetor Gasket Set

Attachments and Accessories

For 38597 - Power Max 6000 Snowthrower

Product Name	Model/Part
Tire Chain Kit	107-3813
Snow Cab	107-3814
Weight Kit	107-3815
26 Inch Drift Breaker	107-3816

NOTES

NOTES

