



Power Max 828 OXE Snowthrower

Model No. 38637C - 290000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Auger and Housing Assembly	 3	Cylinder Head Assembly Briggs and Stratton 15D104-0113-E8	 16
28 Inch Auger Gearcase Assembly No. 108-7329	 4	Carburetor and Fuel Tank Assembly Briggs and Stratton 15D104-0113-E8	 17
Chute Assembly	 5	Rewind Starter and Starter Motor Assembly Briggs and Stratton 15D104-0113-E8	 18
Frame Assembly	 6	Governor, Controls and Ignition Assembly Briggs and Stratton 15D104-0113-E8	 19
Handle Assembly	 8	Muffler, Blower Housing and Flywheel Assembly Briggs and Stratton 15D104-0113-E8	 20
Handle and Control Assembly	 9	Snow Hood, Snow Shield and Panel Briggs and Stratton 15D104-0113-E8	 21
Lever Chute Control Assembly	 10	Engine and Valve Gasket Sets Briggs and Stratton 15D104-0113-E8	 22
Engine Assembly	 11	Carburetor Overhaul Kit Briggs and Stratton 15D104-0113-E8	 23
Wheel Clutch Assembly	 12	Attachments and Accessories List	 24
Wheel Clutch Sprocket Assembly	 13		
Cylinder Assembly Briggs and Stratton 15D104-0113-E8	 14		
Crankshaft, Piston, Ring and Connecting Rod Assembly Briggs and Stratton 15D104-0113-E8	 15		


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- | | |
|--|---|
| ❶ Not serviced separately | ❷ Obtain from your local Briggs & Stratton dealer |
| ❸ Included in Carburetor Overhaul Kit (Ref. No. 121) | ❹ Included in Engine Gasket Set (Ref. No. 358) |
| ❺ Included in Valve Gasket Set (Ref. No. 1095) | |

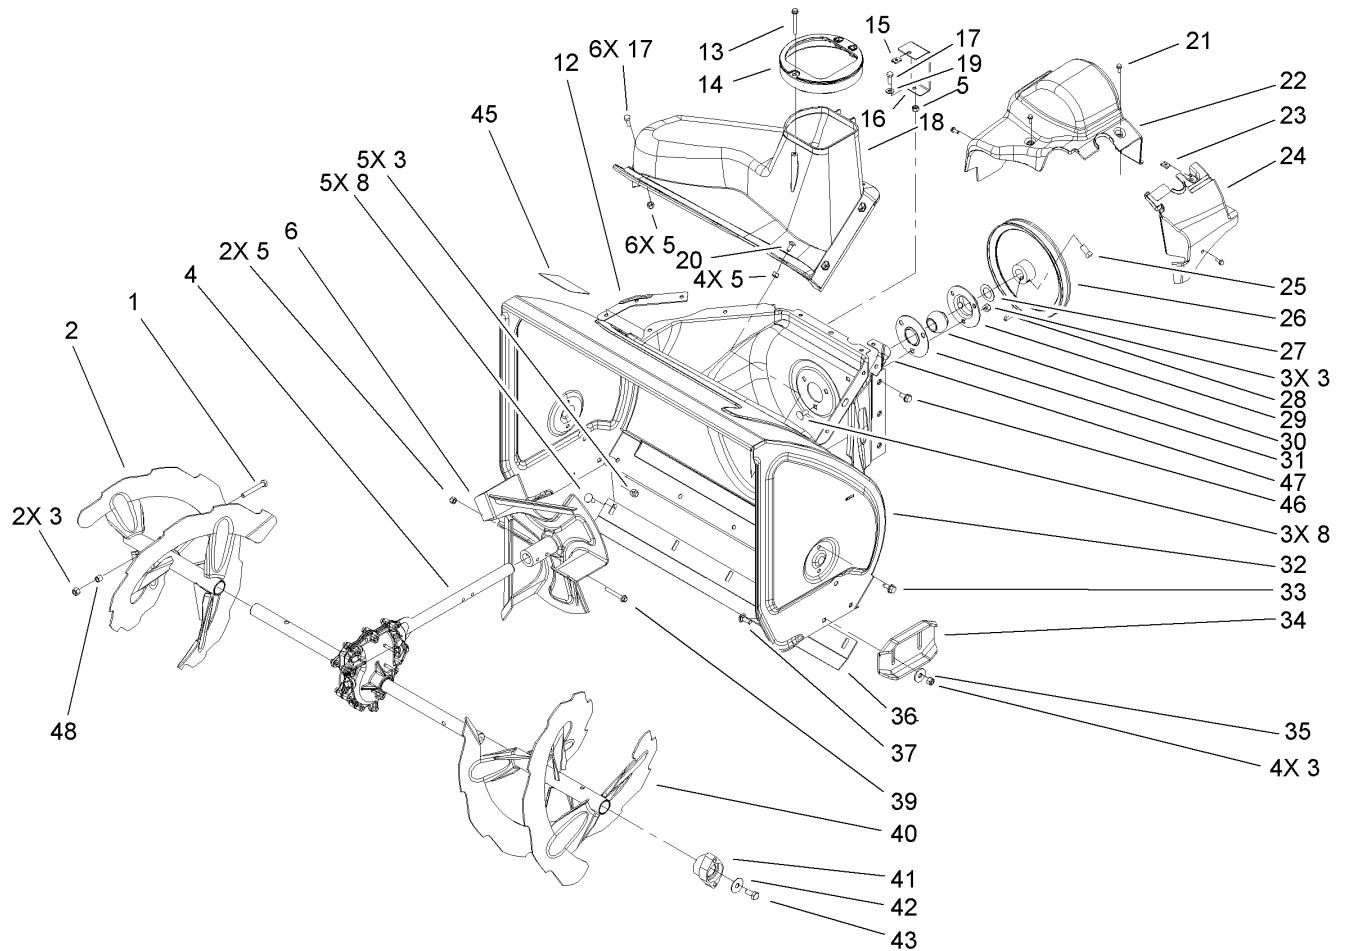

Auger and Housing Assembly

Ref	Part No.	Qty.	Description
1	322-11	2	Screw-HH
2	106-7291-03	1	Auger-RH
3	3296-29	14	Nut-Lock, NI
4	108-7329	1	28 Inch Auger Gearcase ASM
5	3296-42	13	Nut-Lock, NI
6	106-4576-03	1	Impeller ASM
8	3230-23	8	Screw-CARR
12	107-1017-03	1	Seal-Flange, Cover
13	107-3003	1	Screw-Plastite
14	107-3006	1	Guide-Chute
15	107-1013	1	Nut-Speed, U-Type
16	107-1014-03	1	Bracket-Cover, Clip Nut
17	321-4	7	Screw-HH
18	108-0017	1	Cover
19	3256-22	1	Washer-Flat
20	3229-1	4	Screw-CARR
21	32144-112	4	Screw-HWH
22	107-1001	1	Cover-Belt
23	701493	1	Nut-Speed
24	107-1016	1	Cover-Extension, Belt
25	3242-4	2	Screw-Set, SQH
26	62-1300	1	Pulley-Impeller
27	252-80	1	Washer-Thrust
28	3257-23	1	Key-Woodruff

Ref	Part No.	Qty.	Description
29	26-6110	1	Flange-Cup, Bearing
30	63-3450	1	Bearing-Ball
31	26-6120	1	Flange-Cup, Bearing
32	107-3824	1	Housing- Auger, 28 Inch
33	32144-70	4	Screw-HWHTF
34	106-4588-01	2	Skid
35	52-2861	4	Washer
36	106-4573-01	1	Scraper-Fixed
37	3230-16	4	Screw-CARR
39	321-44	2	Screw-HHF
40	106-7301-03	1	LH Auger ASM
41	106-4570	2	Auger-Bearing
42	3-0750	2	Washer
43	323-4	2	Screw-HH
45	107-3040	1	Decal-Danger, Auger
46	32144-14	6	Screw-HWHTF
47	108-0039-03	1	Seal
48	1-633545	2	Spacer

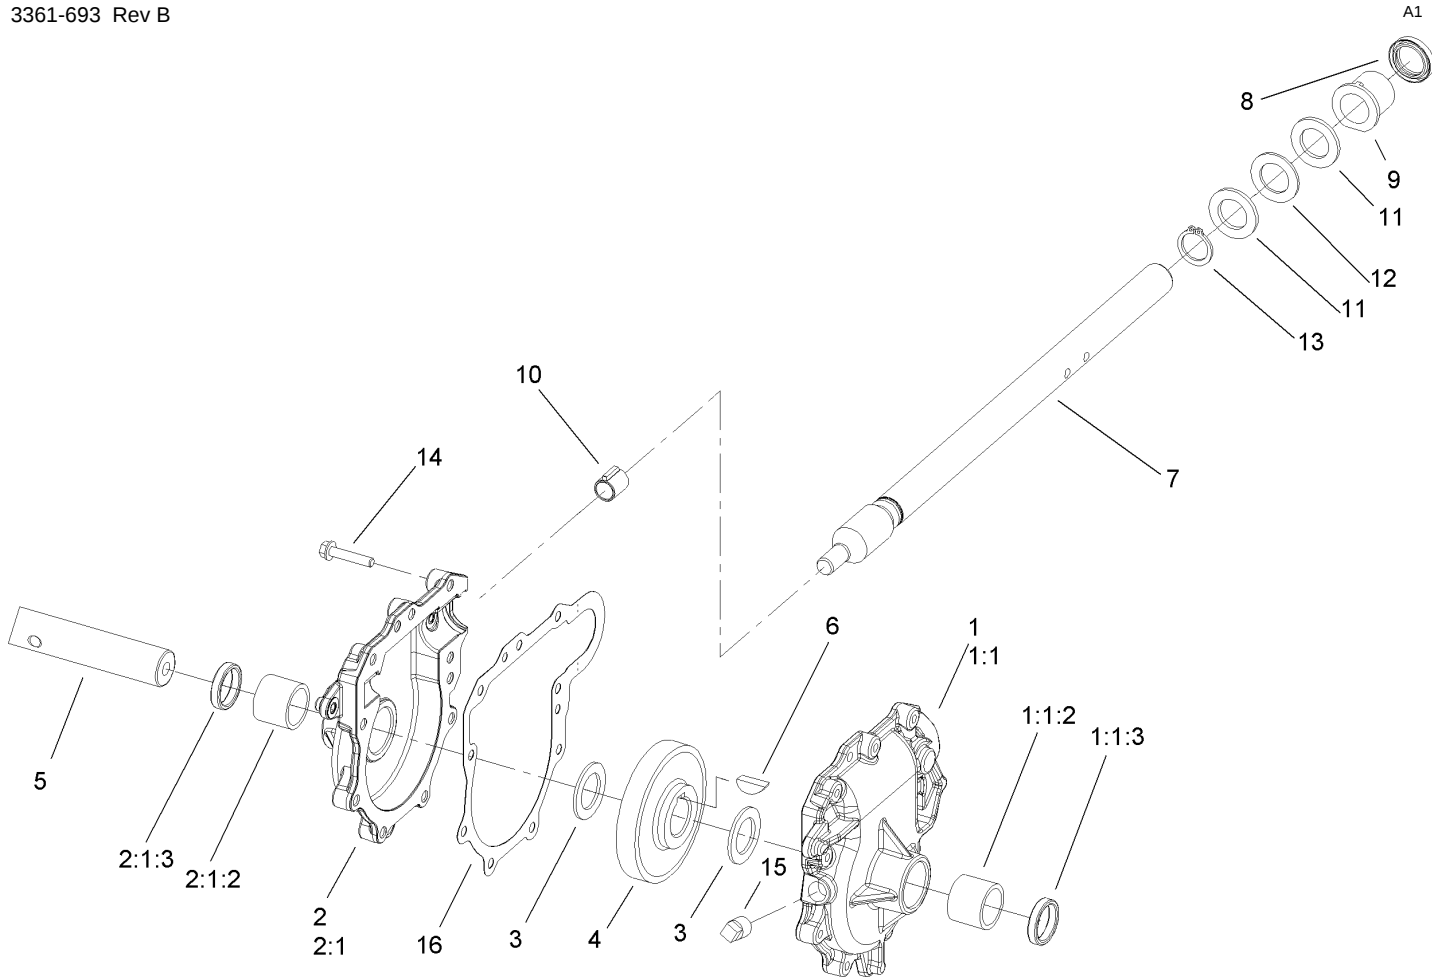

28 Inch Auger Gearcase Assembly No. 108-7329


Ref	Part No.	Qty.	Description				
1	108-7325	1	LH Auger Gearcase ASM				
1:1:1		1	Gearcase-Auger, LH				
1:1:2	112-6635	1	Bushing-Sleeve				
1:1:3	7-0045	1	Seal-Oil				
2	108-7327	1	RH Auger Gearcase ASM				
2:1		1	Gearcase-Auger, RH				
2:1:2	112-6635	1	Bushing-Sleeve				
2:1:3	7-0045	1	Seal-Oil				
3	252-71	2	Washer-Thrust				
4	62-0120	1	Gear-Helical				
5	106-4421	1	Shaft-Auger				
6	3257-10	1	Key-Woodruff				
7	66-7811	1	Shaft-Impeller				
8	253-149	1	Seal-Oil				
9	37-6560	1	Bushing-Input				
10	62-1150	1	Bushing-Worm				
11	252-78	2	Washer-Thrust				
12	252-76	1	Bearing-Thrust				
13	32151-33	1	Ring-Retaining, EXT				
14	108-4862	9	Screw-HWHTF				
15	281-1	1	Plug-Pipe, SQH				
16	108-7330	1	Gasket-Gearcase, Auger				



Chute Assembly

Ref	Part No.	Qty.	Description
1	112-6629	1	Deflector-Chute, Ce
2	106-4594	1	Spring-Torsion
3	46-8092	5	Screw-Plastite
4	106-4472	1	Gear-Chute
5	46-6810	3	Screw And Washer ASM
6	100-9880	1	Bolt-Shoulder
7	106-4585	1	Cover-Gear, Chute
9	106-7296	1	Bracket-Cable, Clamp
10	106-7297	1	Clamp-Cable
11	106-4471	1	Gear-Face
12	107-1021	1	Rod-Deflector
14	98-1375	2	Screw-HWH
15	106-7266	1	Bracket-Deflector
16	106-4582-03	1	Bracket-Support, Chute
17	106-4422	1	Spacer-Chute
18	3256-2	3	Washer-Flat
19	3296-47	2	Nut-Lock, NI
20	106-7276	3	Screw-Shoulder
21	106-7257	1	Mount-Gear, Face
22	63-2650	1	Screw-Shoulder
23	106-4476	1	Latch-Chute
24	106-7253-03	1	Tube-Support
25	3256-22	3	Washer-Flat
26	3296-42	3	Nut-Lock, NI

Ref	Part No.	Qty.	Description
27	3296-29	2	Nut-Lock, NI
28	106-7260	1	Washer-Curved
29	3230-5	1	Screw-CARR
30	3230-23	1	Screw-CARR
31	46-8091	3	Screw-HWH
32	105-9991	1	Ring-Chute
33	106-4440	1	Chute-Discharge
35	108-7315	1	Spring-Torsion
36	108-5052	1	Seal-Chute
37	3290-456	1	Washer-Belleville
38	32144-10	1	Screw-HWH

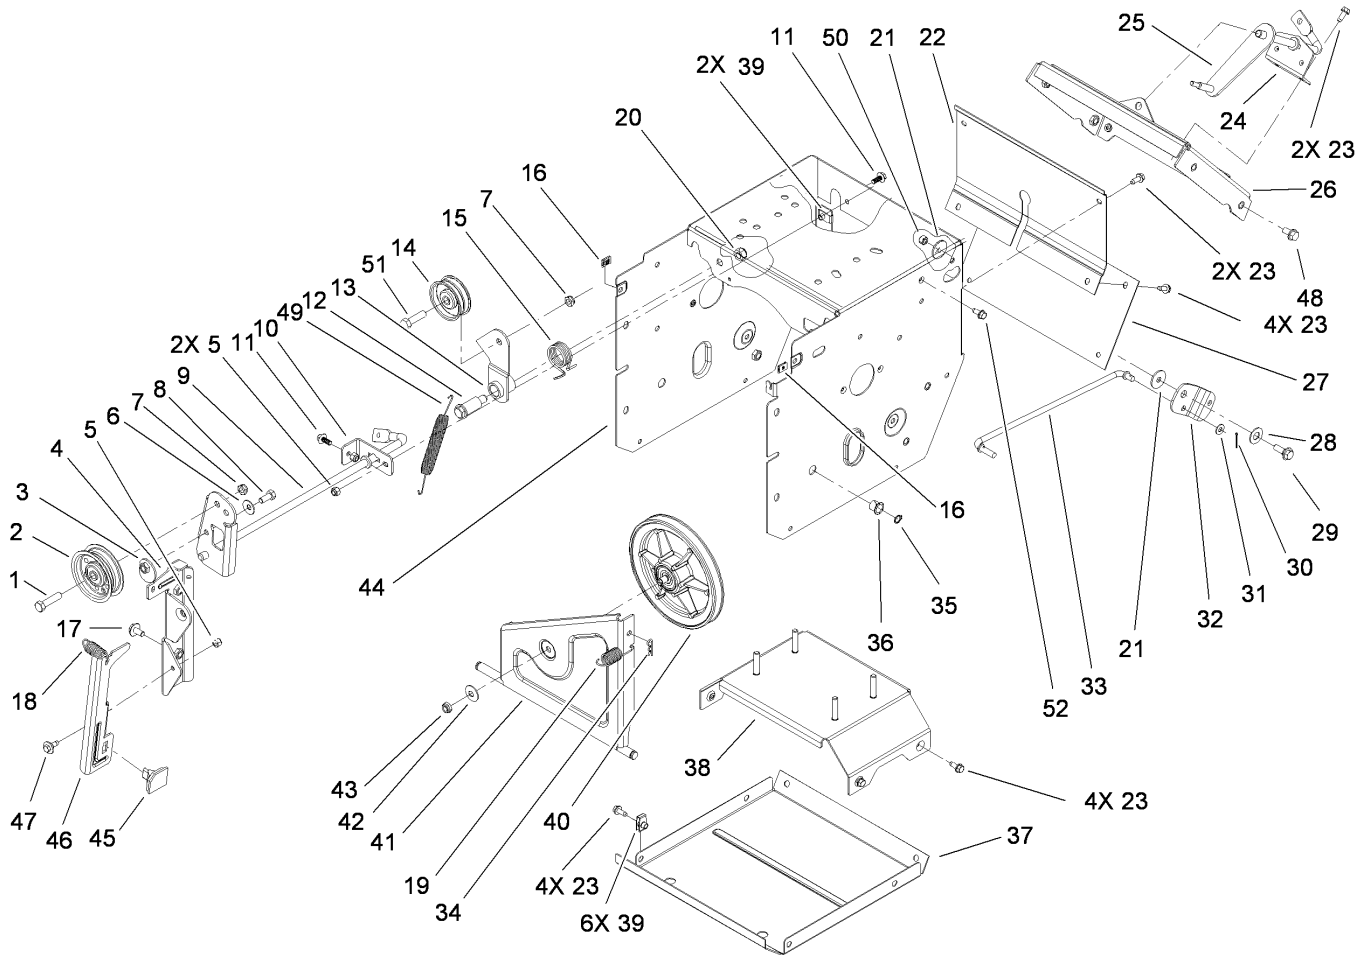


Frame Assembly

Ref	Part No.	Qty.	Description
1	323-8	1	Screw-HH
2	92-7104	1	Pulley-Idler
3	107-1047	1	Nut
4	107-1039	1	Bracket-Idler, Impeller
5	3296-42	3	Nut-Lock, NI
6	3290-456	1	Washer-Belleville
7	3296-59	2	Nut-Lock, NI
8	322-3	1	Screw-HH
9	107-3838-03	1	Impeller Clutch ASM
10	106-7341	1	Bracket-Rear, Clutch
11	99-6810	2	Screw-HH
12	108-5056	1	Bolt-Shoulder
13	108-5058	1	Arm-Idler, Traction
14	115-5694	1	Pulley-Idler
15	108-7332	1	Spring-Torsion
16	107-1013	2	Nut-Speed, U-Type
17	3234-7	2	Screw-HHF
18	107-1045	1	Spring-Extension
19	107-1003	1	Spring-Extension
20	3296-76	1	Nut-Lock, NI
21	5-4460	2	Washer-Pivot
22	108-0022-01	1	Cover-Upper
23	32144-10	16	Screw-HWH
24	108-0036	1	Bracket-Rod, Shift

Ref	Part No.	Qty.	Description
25	106-7268	1	Lever-Control, Traction
26	108-0026-01	1	Shift Plate ASM
27	106-7345-01	1	Cover-Lower
28	25-5640	1	Washer
29	27-0410	1	Screw-Shoulder
30	3272-4	1	Pin-Cotter
31	3256-23	1	Washer-Flat
32	107-1011	1	Bellcrank-Drive
33	106-4467	1	Link-Control, Speed
34	3290-307	1	Pin-Hair
35	32151-61	2	Ring-Retaining
36	256-257	2	Bushing-Nyliner
37	106-7330-01	1	Pan-Bottom
38	112-8128	1	Frame Brace ASM
39	107069	8	Clip
40	108-0031	1	Traction Pulley ASM
41	108-7307	1	Friction Wheel Bracket ASM
42	3290-340	1	Washer-Belleville
43	3296-5	1	Nut-Lock
44	114-9259-01	1	Traction Frame ASM
45	66-8060	1	Pad-Brake
46	107-1000	1	Arm-Brake
47	92-9698	1	Screw-Shoulder
48	32144-14	4	Screw-HWHTF


7

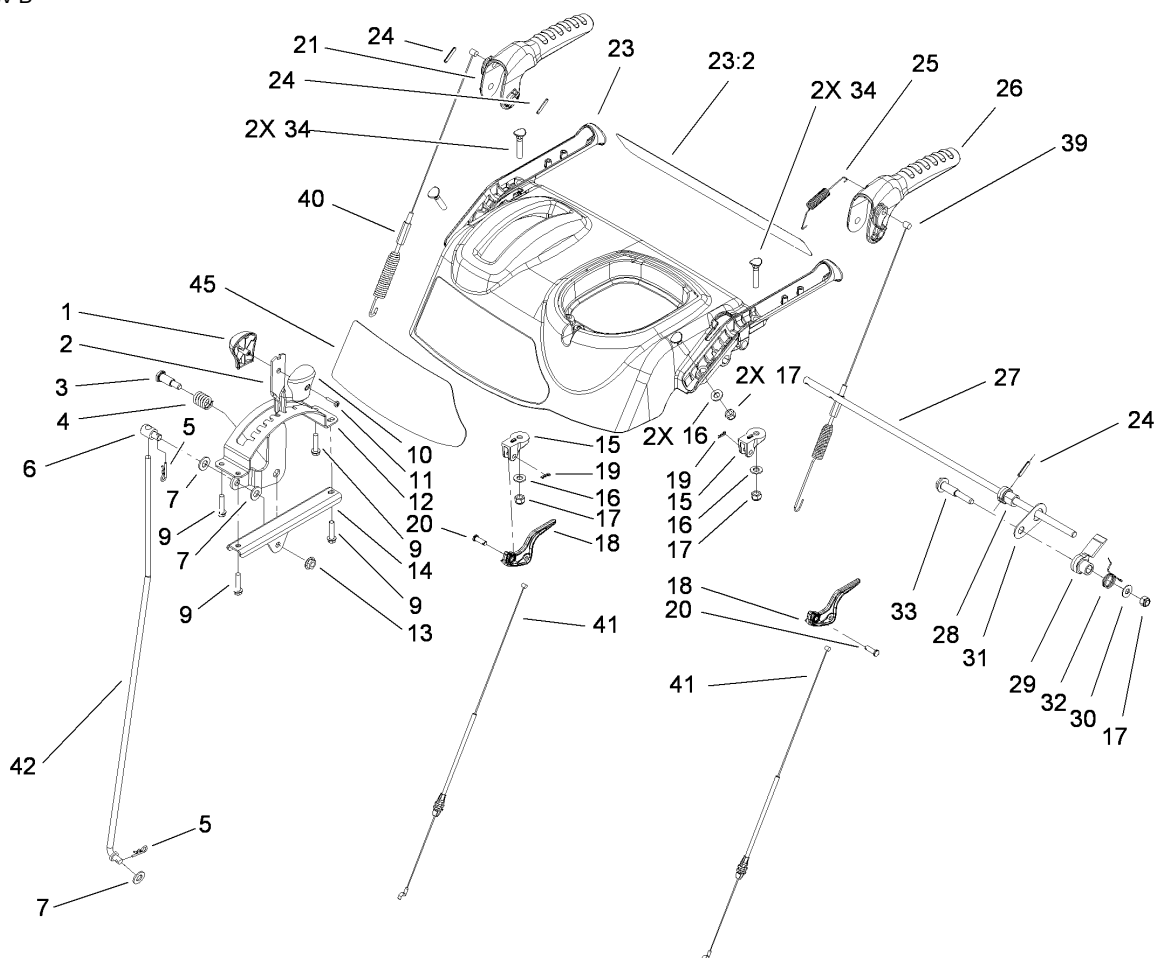

Handle Assembly


Ref	Part No.	Qty.	Description
1	106-4423	1	Knob-Shift, RH
2	106-7278-03	1	Selector-Speed
3	63-2650	1	Screw-Shoulder
4	108-7313	1	Spring-Compression
5	3290-307	2	Pin-Hair
6	110-3446	1	Trunion-Rod
7	3256-24	3	Washer-Flat
9	46-8092	4	Screw-Plastite
10	105-9999	1	Knob-Shift, LH
11	94-4496	1	Screw-PPH
12	106-7277-03	1	Guide-Selector, Speed
13	32128-13	1	Nut-HF
14	106-7279-03	1	Mount-Selector, Speed
15	105-9980	2	Mount-Clutch, Lever
16	3256-70	4	Washer-Flat
17	3296-72	5	Nut-Lock, NI
18	106-4505	2	Lever-Clutch
19	108-2992	2	Pin-Hair
20	1-808265	2	Pin-Clevis
21	106-4413	1	Lever-Auger
23	112-6633	1	Panel-Control
23:2	112-6627	1	Decal-Back, Control Panel
24	32121-125	3	Pin-Spring
25	107-3001	1	Spring-Tension

Ref	Part No.	Qty.	Description
26	106-4410	1	Lever-Traction
27	105-9996	1	Rod-Lockout
28	107-1043	1	Cam-Lockout
29	108-0023	1	Latch-Lockout
30	98-3499	1	Washer-Flat
31	107-3000	1	Link-Lockout
32	108-0024	1	Spring-Torsion
33	106-4412	1	Screw-Shoulder
34	107-3018	4	Screw-Handle
39	115-5671	1	Cable-Traction
40	115-5680	1	Cable-Auger
41	107-8896	2	Cable-Clutch
42	107-1005	1	Rod-Shift
45	112-8145	1	Decal-Control Panel

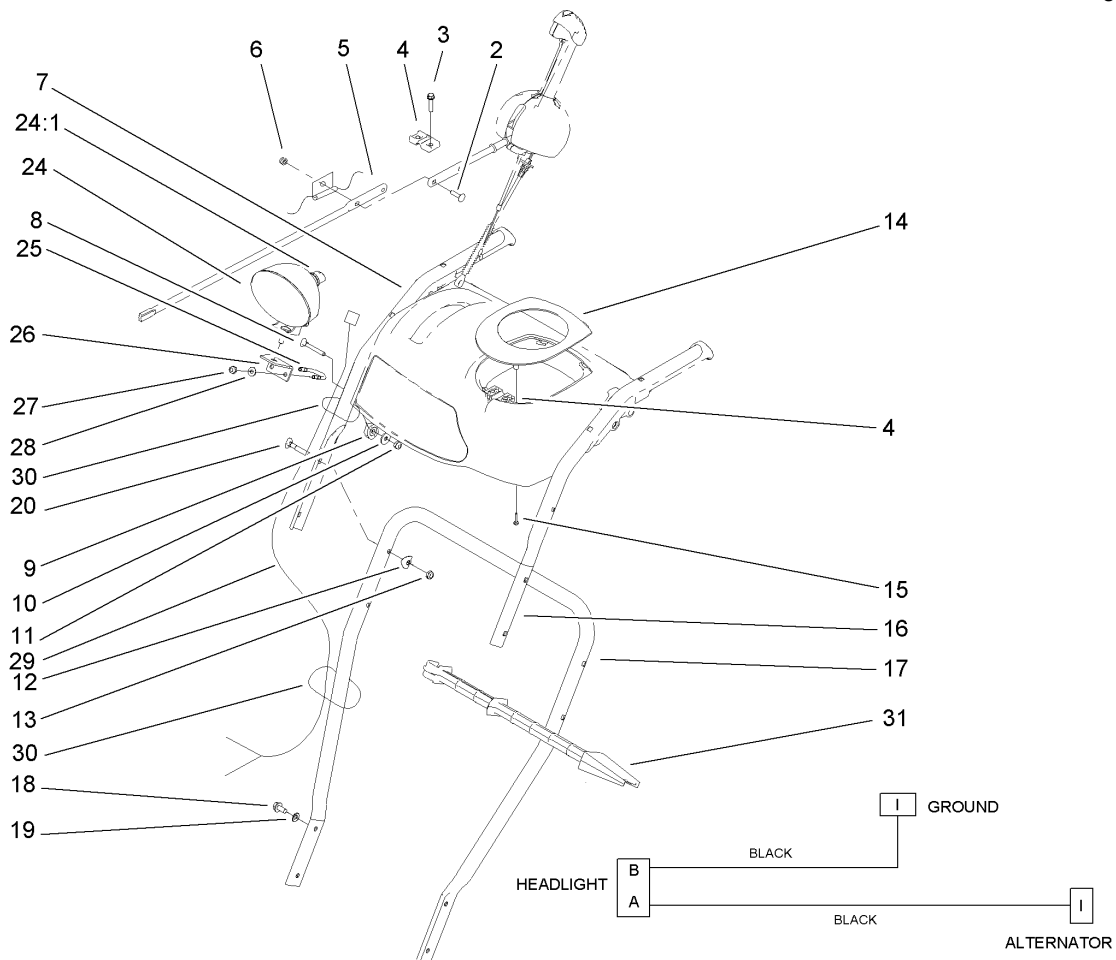


Handle and Control Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
2	3229-30	2	Screw-CARR	28	3256-1	2	Washer-Flat
3	46-8092	2	Screw-Plastite	29	106-4511	1	Harness-Wire
4	105-9987	2	Support-Rod	30	614249	2	Strap-Tie
5	106-7283	1	Rod-Chute, Front	31	110-3408	1	Stick-Cleanout
6	3296-73	2	Nut-Lock, NI				
7	108-0038-03	1	Handle-Upper, RH				
8	95-4453	2	Screw				
9	106-4509	2	Clamp-Cable				
10	87-6630	2	Washer-Plain				
11	3296-73	2	Nut-Lock, NI				
12	107-3844	4	Washer				
13	3296-72	4	Nut-Lock, NI				
14	106-4586	1	Cover-Panel, Control				
15	94-4496	2	Screw-PPH				
16	108-0037-03	1	Handle-Upper, LH				
17	105-9981-03	1	Handle-Lower				
18	32144-14	4	Screw-HWHTF				
19	3290-475	4	Washer-Belleville				
20	92-2260	4	Screw-Handle				
24	106-4510	1	Headlamp ASM				
24:1	108-0008	1	Lamp-12 Volt				
25	107-3024	1	Clamp				
26	107-1020-03	1	Bracket-Light				
27	3296-73	2	Nut-Lock, NI				

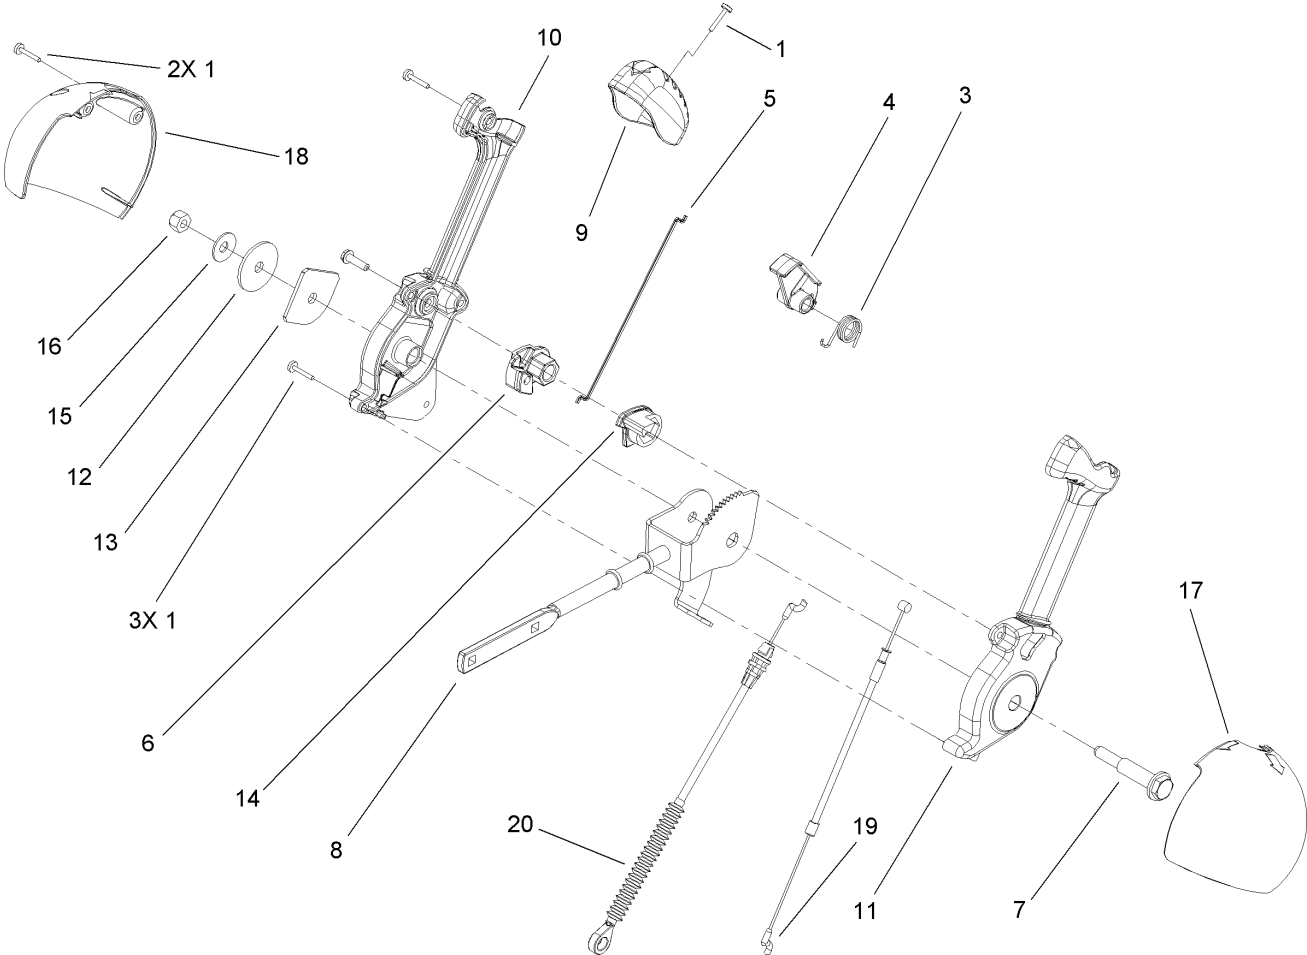


Lever Chute Control Assembly

Ref	Part No.	Qty.	Description				
1	94-4496	6	Screw-PPH				
3	105-9982	1	Spring-Torsion				
4	105-9984	1	Trigger-Latch				
5	105-9985	1	Link-Latch				
6	105-9988	1	Lever-Cable, Deflector				
7	105-9995	1	Screw-Shoulder				
8	106-4479	1	Rod-Control, Chute				
9	106-7280	1	Cap-Lever				
10	106-7281	1	Lever-Chute Control, RH				
11	106-7282	1	Lever-Chute Control, LH				
12	107-3002	1	Washer-Nylon				
13	106-7295	1	Plate-Friction				
14	106-7310	1	Pawl-Latch				
15	3290-456	1	Washer-Belleville				
16	3296-29	1	Nut-Lock, NI				
17	105-9986	1	Cover-Chute Lever, LH				
18	106-7292	1	Cover-Chute Lever, RH				
19	105-9989	1	Cable-Release, Chute				
20	105-9990	1	Cable-Control, Deflector				

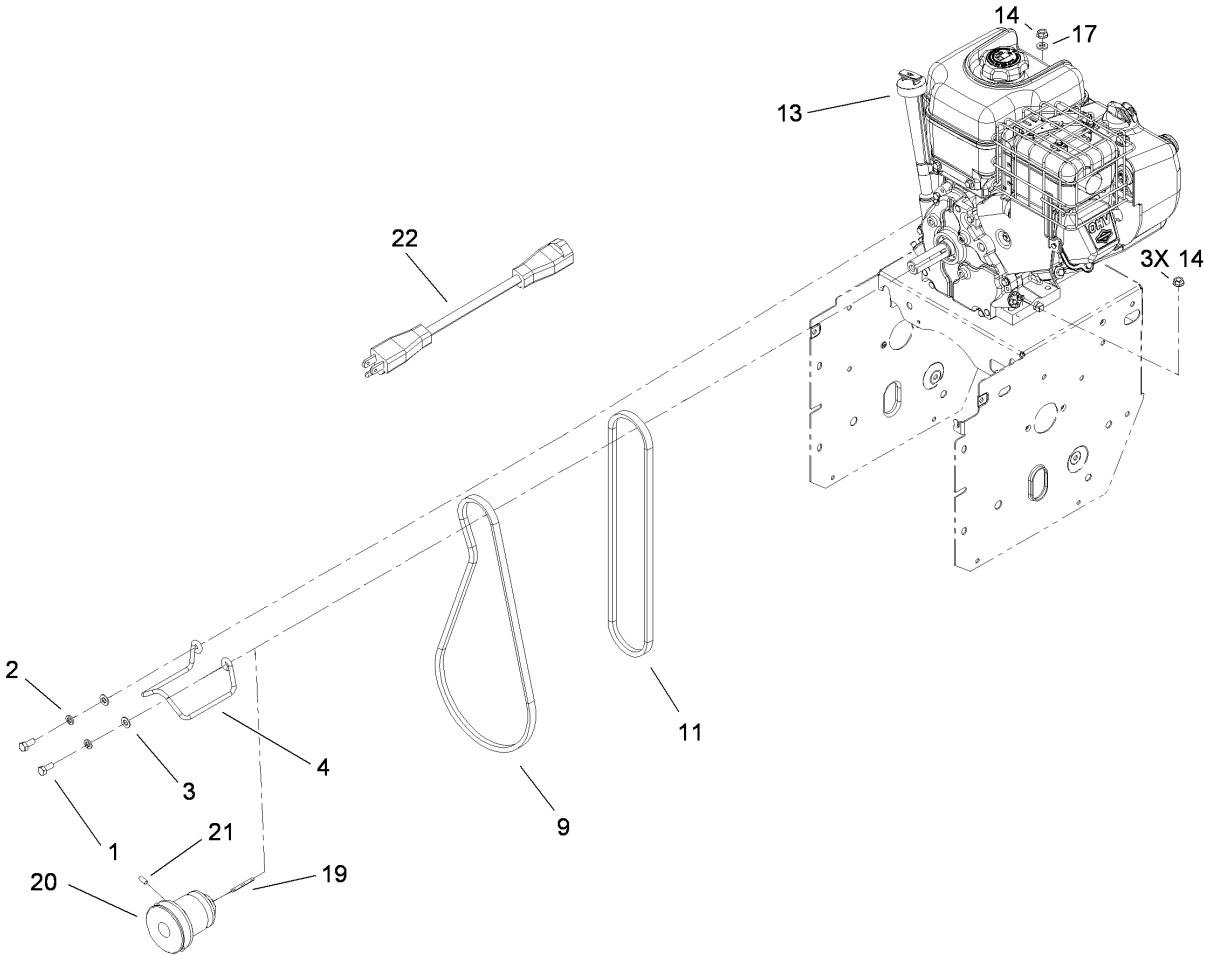

Engine Assembly


Ref	Part No.	Qty.	Description				
1	3210-3	2	Screw-HH				
2	3253-4	2	Washer-Lock				
3	3256-23	2	Washer-Flat				
4	107-3835	1	Guide-Belt				
9	106-4498	1	Belt-V				
11	94-8812	1	V Belt-Traction				
1 2 13		1	Engine-Briggs, 15D104-0113-E8				
14	32128-20	4	Nut-HF				
17	3256-2	1	Washer-Flat				
19	7-0036	1	Key-Square				
20	114-9252	1	Pulley-Engine				
21	3245-9	2	Screw-Set				
22	99-9300	1	Cord-Extension				

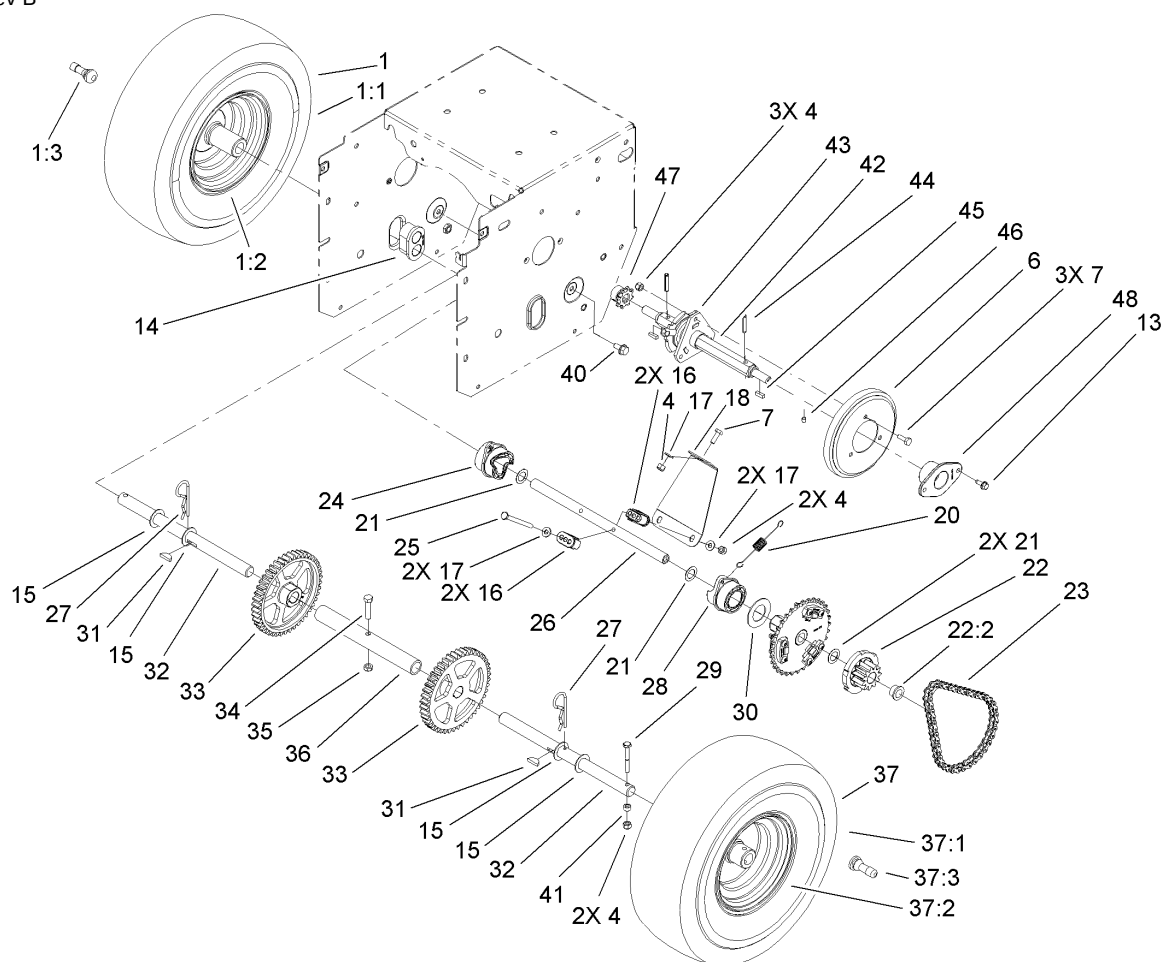

Wheel Clutch Assembly

Ref	Part No.	Qty.	Description
❶ 1		1	RH Wheel And Tire ASM
1:1	107-3042	1	Tire
1:2	107-3043	1	Rim-Tire
1:3	232-27	1	Stem-Valve
4	3296-42	8	Nut-Lock, NI
6	106-4480	1	Wheel-Friction
7	321-4	4	Screw-HH
13	32144-10	4	Screw-HWH
14	106-4558	2	Bearing-Axle
15	3-8664	4	Washer-Thrust
16	107-8889	4	Guide-Collar
17	3256-22	5	Washer-Flat
18	107-8892-03	1	Brace-Collar, Shift
20	107-8893	2	Spring-Extension
21	108-0015	4	Washer-Flat
22	107-8894	2	11T Gear ASM
22:2	108-2973	2	Bushing-Flange
23	108-0016	2	Chain-Roller
23	2710-6	2	Link-Connecting
24	107-8888	1	Collar-Shift, RH
25	321-23	2	Screw-HH
26	107-8883	1	Shaft-Intermediate
27	3290-343	2	Pin-Hair
28	107-8887	1	Collar-Shift, LH

Ref	Part No.	Qty.	Description
29	108-2975	2	Screw-HH
30	107-8891	2	Washer-Thrust
31	3257-7	2	Key-Woodruff
32	107-8898	2	Shaft-Axle
33	106-4572	2	Gear-Axle, 44 Tooth
34	322-17	1	Screw-HH
35	3296-47	1	Nut-Lock, NI
36	106-7259	1	Tube-Axle
❶ 37		1	LH Wheel And Tire ASM
37:1	107-3042	1	Tire
37:2	107-3043	1	Rim-Tire
37:3	232-27	1	Stem-Valve
40	32144-14	2	Screw-HWHTF
41	55-9370	2	Spacer-Blade, Rotor
42	108-7314	1	Shaft-Hex
43	106-4434	1	Trunion-Hex
44	32121-9	2	Pin-Roll, Slotted
45	94-8850	2	Key-Square
46	3245-32	4	Screw-HSH
47	106-7317	2	Sprocket-8 Tooth
48	108-7319	2	Retainer-Bearing

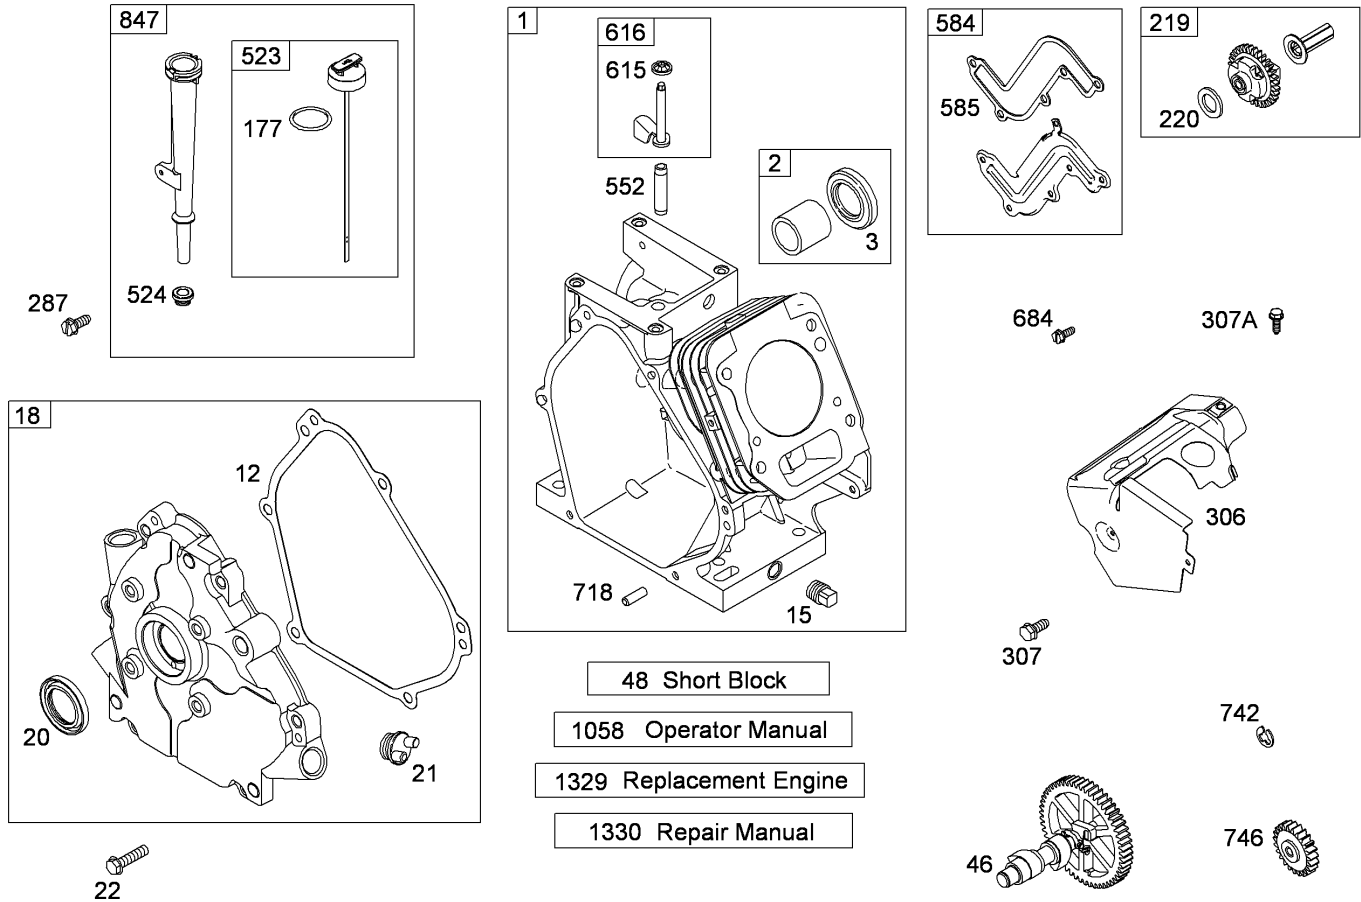





Assemblies include all parts shown in frames

Cylinder Assembly

Briggs and Stratton 15D104-0113-E8

Ref	Part No.	Qty.	Description
1	794188	1	Cylinder ASM
2	399269	1	Bushing And Seal Kit (Magnetoside)
3	299819s	1	Seal-Oil (Magnetoside)
12	699485	1	Gasket-Cover, Crankcase
15	691686	1	Plug-Drain, Oil (Square Head)
18	699696	1	Cover-Crankcase
20	692550	1	Seal-Oil
21	281658S	1	Cap-Fill, Oil
22	699478	1	Screw (Crankcase Cover To Sump)
46	693404	1	Camshaft
48	791711	1	Short Block
177	691031	1	Seal-O Ring (Dipstick)
219	693578	1	Gear-Governor
220	691724	1	Washer (Governor Gear)
287	699629	1	Screw (Dipstick Tube)
306	695710	1	Shield-Cylinder
307	699483	1	Screw (Cylinder Shield) (M4)
307A	699234	1	Screw (Cylinder Shield) (M5)
523	693618	1	Dipstick
524	281730s	1	Seal-Dipstick Tube
552	692346	1	Bushing-Crank, Governor
584	791759	1	Cover-Passage, Breather


Ref	Part No.	Qty.	Description
585	791760	1	Cup-Flywheel
615	692576	1	Retainer-Shaft, Governor
616	692547	1	Crank-Governor
684	793369	1	Screw (Breather Passage Cover)
718	690959	1	Pin-Locating
742	692564	1	Retainer-E Ring
746	790278	1	Gear-Idler
847	693617	1	Dipstick And Tube ASM
1058	277104	1	Operator Manual

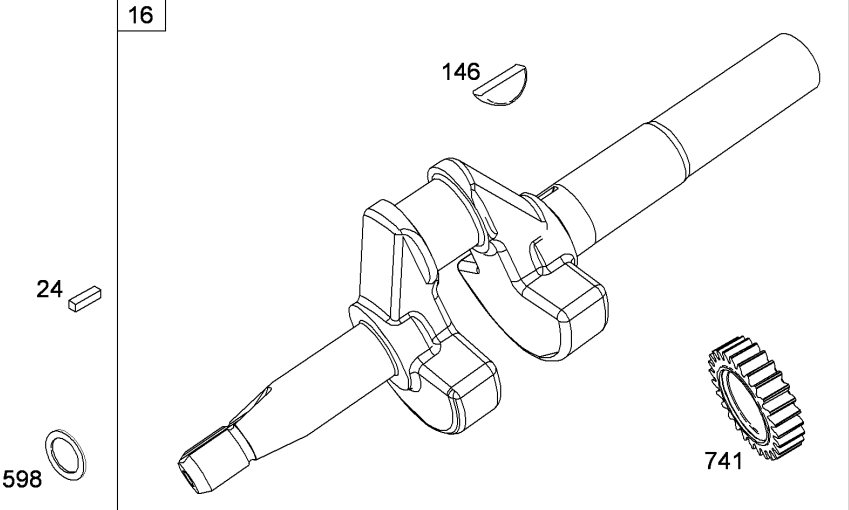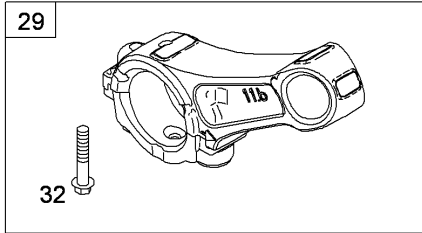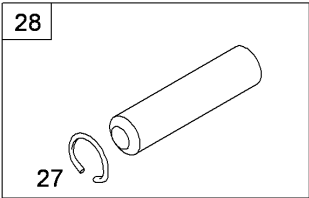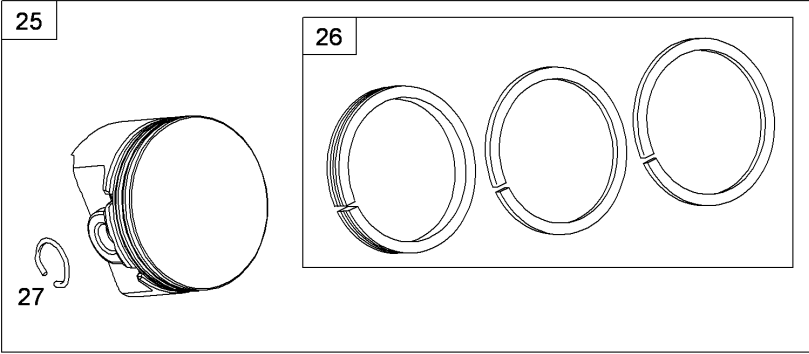

Assemblies include all parts shown in frames

Crankshaft, Piston, Ring and Connecting Rod Assembly
Briggs and Stratton 15D104-0113-E8

Ref	Part No.	Qty.	Description				
216	699454	1	Crankshaft				
224	222698s	1	Key-Flywheel				
225	791786	1	Piston ASM (Standard)				
225	791791	1	Piston ASM (.020 Oversize)				
226	791787	1	Ring Set (Standard)				
226	791792	1	Ring Set (.020 Oversize)				
227	690975	1	Lock-Pin, Piston				
228	690229	1	Pin-Piston (STD)				
229	791783	1	Rod-Connecting				
232	791784	1	Screw (Connecting Rod)				
2146	690979	1	Key-Timing				
2598	220624	1	Shim-End Play (Crankshaft)				
2741	695087	1	Gear-Timing				
21329	15D114-0020	1	Replacement Engine				
21330	272147	1	Repair Manual				

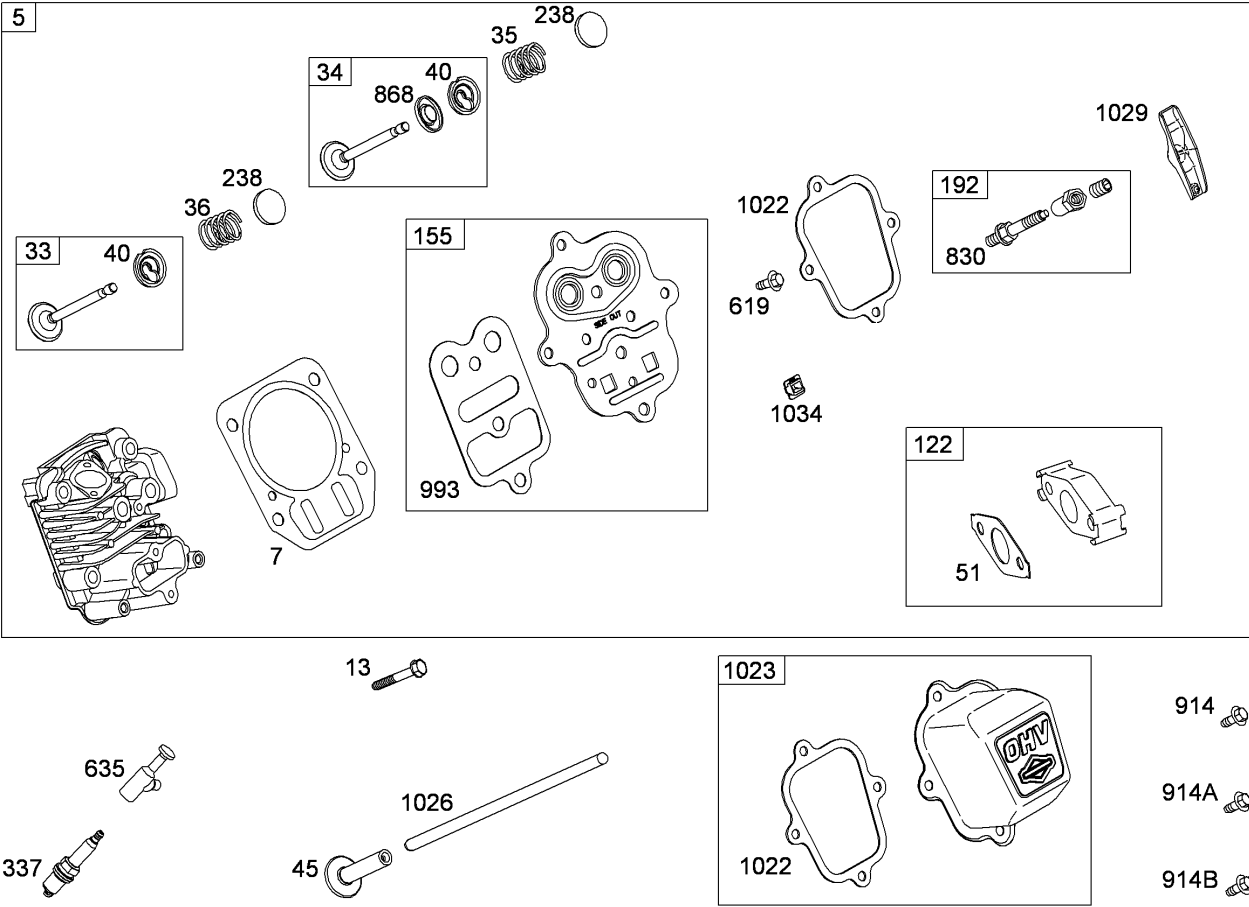


Assemblies include all parts shown in frames

Cylinder Head Assembly

Briggs and Stratton 15D104-0113-E8

Ref	Part No.	Qty.	Description
25	791720	1	Head-Cylinder
2475	791716	1	Gasket-Head, Cylinder
213	699482	1	Screw (Cylinder Head)
233	499642	1	Valve-Exhaust
234	499641	1	Valve-Intake
235	691304	1	Spring-Valve (Intake)
236	691304	1	Spring-Valve (Exhaust)
240	692194	1	Retainer-Valve
245	690977	1	Tappet-Valve
235145	791718	1	Gasket-Intake
2122	791717	1	Spacer-Carburetor
2155	698214	1	Plate-Head, Cylinder
2192	694543	1	Adjuster-Arm, Rocker
2238	691300	1	Cap-Valve
2337	691043	1	Spark Plug
2619	699480	1	Screw (Cylinder Head Plate)
2635	692927	1	Boot-Sparkplug
2830	694544	1	Stud-Arm, Rocker
248685	795440	1	Seal-Valve
2914	699480	1	Screw (Rocker Cover) (Bottom)
2914A	692557	1	Screw (Rocker Cover) (Top)
2914B	697551	1	Screw (Rocker Cover) (Sides)

Ref	Part No.	Qty.	Description
249935	694088	1	Gasket-Head Plate, Cylinder
2410225	691890	1	Gasket-Cover, Rocker
21023	499924	1	Cover-Arm, Rocker
21026	790287	1	Rod-Push
21029	691230	1	Arm-Rocker
21034	691343	1	Guide-Rod, Push

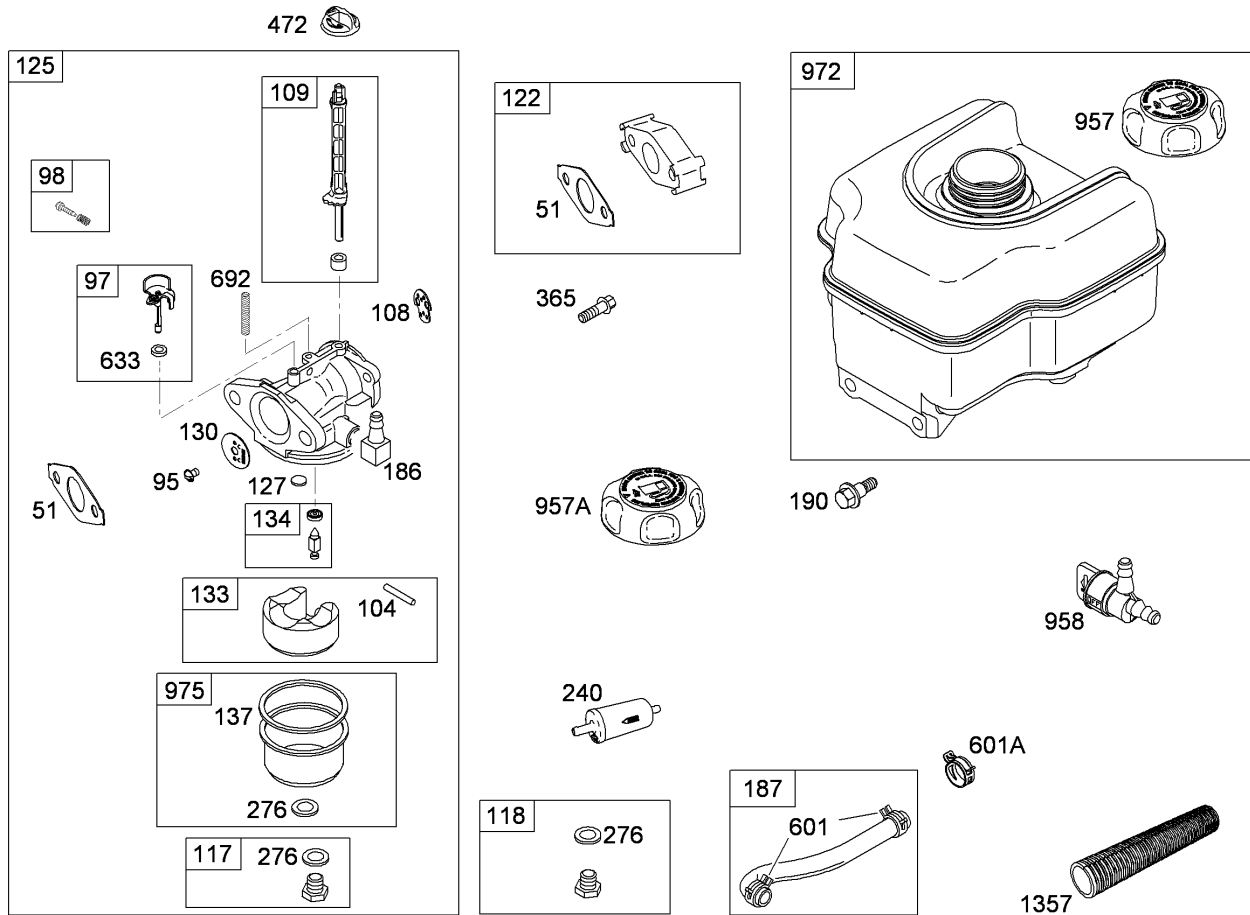


Assemblies include all parts shown in frames

Carburetor and Fuel Tank Assembly Briggs and Stratton 15D104-0113-E8

Ref	Part No.	Qty.	Description
2 51	791718	1	Gasket-Intake
1 95			
2 95	691636	1	Screw (Throttle Valve)
2 97	690024	1	Shaft-Throttle
2 98	398185	1	Idle Speed Kit
2 104	691242	1	Pin-Hinge, Float
2 108	695807	1	Valve-Choke
2 109	791957	1	Shaft-Choke
2 117	691428	1	Jet-Main (Standard)
2 118	690048	1	Jet-Main (High Altitude)
2 122	791717	1	Spacer-Carburetor
2 125	794588	1	Carburetor
2 127	691739	1	Plug-Welch
2 130	691181	1	Valve-Throttle
2 133	398187	1	Float-Carburetor
2 134	398188	1	Needle And Seat Kit
2 137	693981	1	Gasket-Bowl, Float
2 186	692317	1	Connector-Hose
2 187	791867	1	Line-Fuel (Molded)
2 190	699220	1	Screw (Fuel Tank)
2 240	695666	1	Filter-Fuel
2 276	271716	1	Washer-Sealing
2 291	790830	1	Thermostat
2 365	699484	1	Screw (Carburetor)

Ref	Part No.	Qty.	Description
2 472	791958	1	Knob-Choke Shaft
2 601	791850	1	Clamp-Hose (Green)
2 601A	691038	1	Clamp-Hose (Black)
2 633	691321	1	Seal-Shaft, Choke Throttle
2 692	690572	1	Spring-Detent
2 972	694260	1	Tank-Fuel
2 957	795027	1	Cap-Fuel Tank
2 957A	792647	1	Cap-Fuel Tank (Fresh Start)
2 958	698180	1	Valve-Shut Off, Fuel
2 975	790559	1	Bowl-Float
2 1357	794700	1	Sleeve-Fuel Line

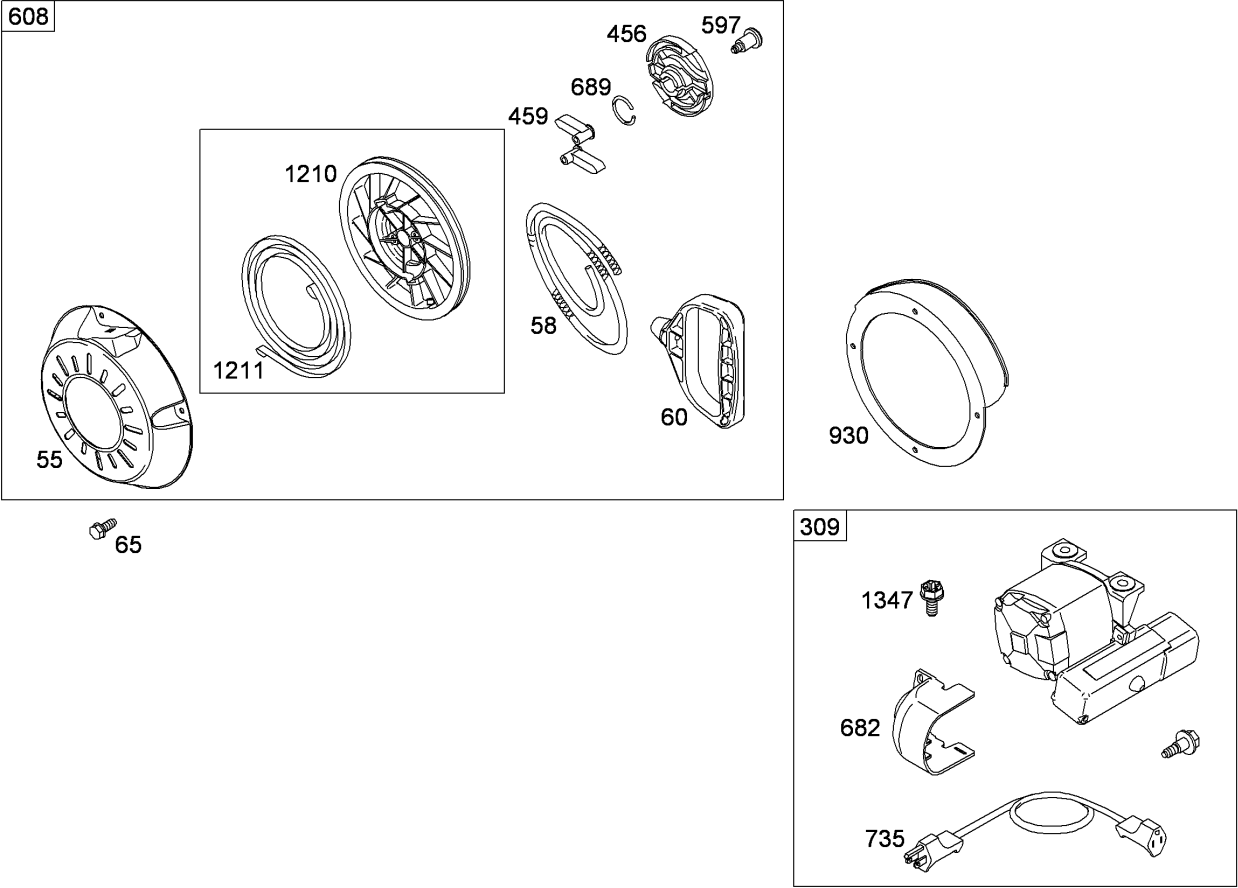


Assemblies include all parts shown in frames

Rewind Starter and Starter Motor Assembly

Briggs and Stratton 15D104-0113-E8

Ref	Part No.	Qty.	Description				
255	696710	1	Housing-Starter, Rewind				
258	693389	1	Rope-Starter				
260	699334	1	Grip-Starter Rope				
265	699228	1	Screw (Rewind Starter)				
2309	793667	1	Motor-Starter				
2456	692299	1	Plate-Friction, Pawl				
2459	281505s	1	Ratchet-Pawl				
2597	691696	1	Screw (Pawl Friction Plate)				
2608	699335	1	Starter-Rewind				
2682	698039	1	Shield-Starter				
2689	691855	1	Spring-Friction				
2735	795901	1	Cord-Starter				
2930	696709	1	Guard-Rewind				
21009	790537	1	Screw (Starter Motor)				
21210	498144	1	Pulley And Spring ASM (Pulley)				
21211	498144	1	Pulley And Spring ASM (Spring)				
21347	699200	1	Screw (Starter Shield)				

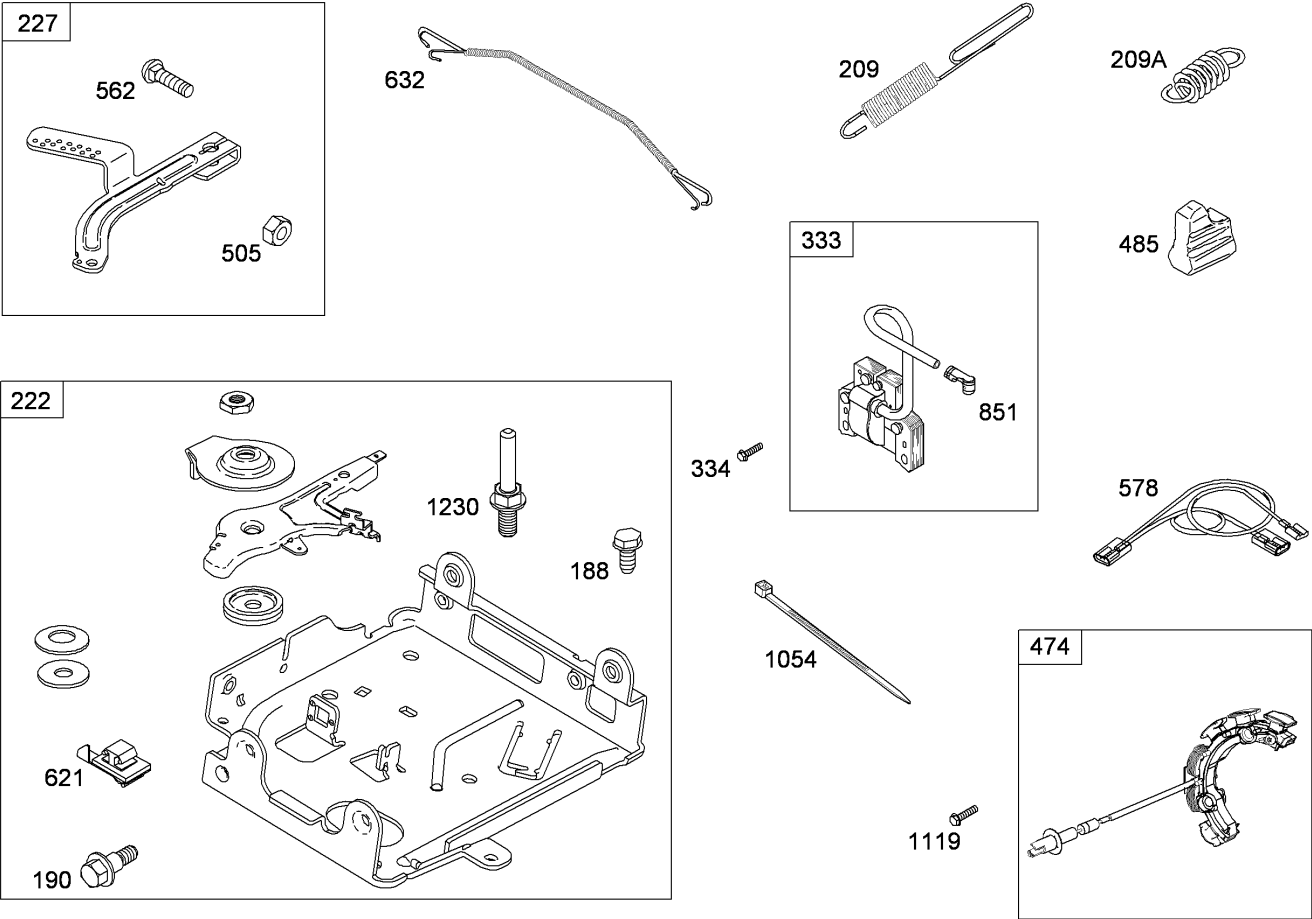


Assemblies include all parts shown in frames

Governor, Controls and Ignition Assembly

Briggs and Stratton 15D104-0113-E8

Ref	Part No.	Qty.	Description				
2188	699479	1	Screw (Control Bracket)				
2190	699220	1	Screw (Fuel Tank)				
2209	692571	1	Spring-Governor				
2209A	691278	1	Spring-Governor (Platinum)				
2222	793109	1	Bracket-Control				
2227	794367	1	Lever-Control, Governor				
2333	695711	1	Armature-Magneto				
2334	699477	1	Screw (Magneto Armature)				
2474	793640	1	Alternator				
2485	695755	1	Knob-Control				
2505	691251	1	Nut (Governor Control Lever)				
2562	691119	1	Bolt (Governor Control Lever)				
2578	794819	1	Wire ASM				
2621	692310	1	Switch-Stop				
2632	692653	1	Link-Spring, Mechanical Governor				
2851	493880s	1	Terminal-Spark Plug				
21054	280275	1	Tie-Cable				
21119	699772	1	Screw (Alternator)				
21230	699847	1	Stud (Control Bracket)				









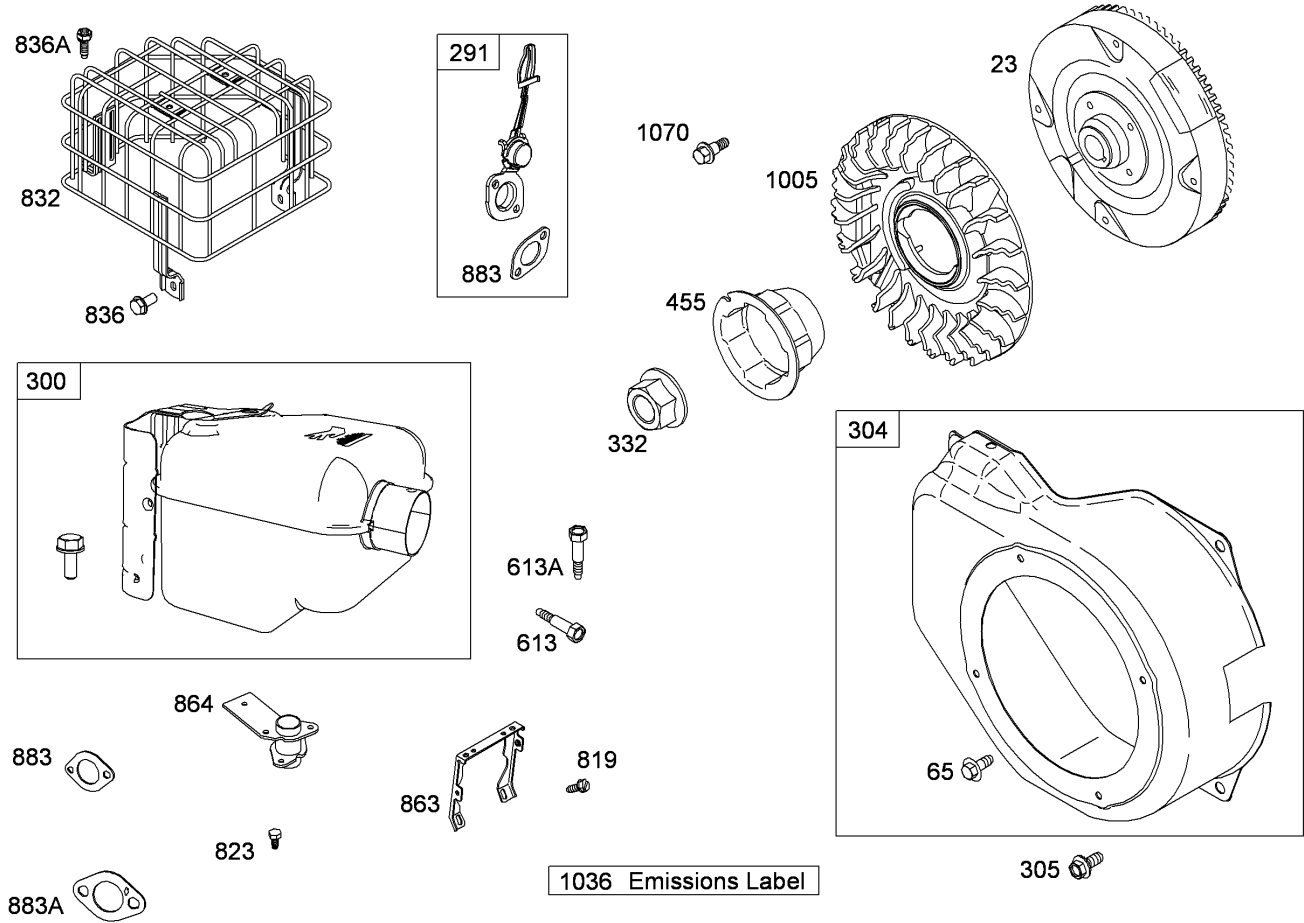


Assemblies include all parts shown in frames

Muffler, Blower Housing and Flywheel Assembly

Briggs and Stratton 15D104-0113-E8



Ref	Part No.	Qty.	Description				
23	699516	1	Flywheel				
65	699228	1	Screw (Rewind Starter)				
300	794726	1	Muffler				
304	699598	1	Housing-Blower				
305	699480	1	Screw (Muffler) (M6)				
332	792723	1	Nut (Flywheel)				
455	692591	1	Cup-Flywheel				
613	697812	1	Screw (Muffler)				
613A	699480	1	Screw (Muffler) (M6)				
819	699223	1	Screw (Muffler Bracket)				
823	791972	1	Screw (Muffler Adapter)				
832	699313	1	Guard-Muffler				
836	699209	1	Screw (Muffler Guard)				
836A	699234	1	Screw (Muffler Guard) (M5)				
863	699849	1	Bracket-Muffler				
864	699232	1	Adapter-Muffler				
883	692237	1	Gasket-Exhaust (Muffler Adapter)				
883A	691893	1	Gasket-Exhaust (Muffler)				
1005	692592	1	Fan-Flywheel				
1036		1	Label-Emissions				
1070	699201	1	Screw (Flywheel Fan)				

 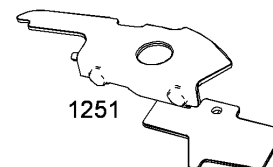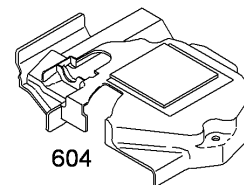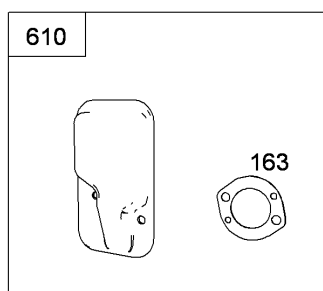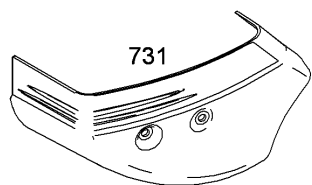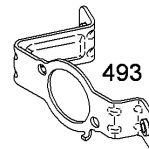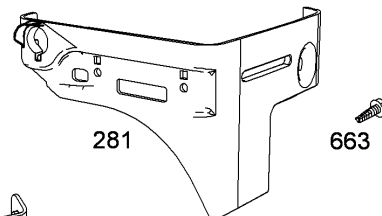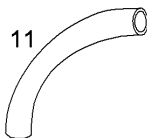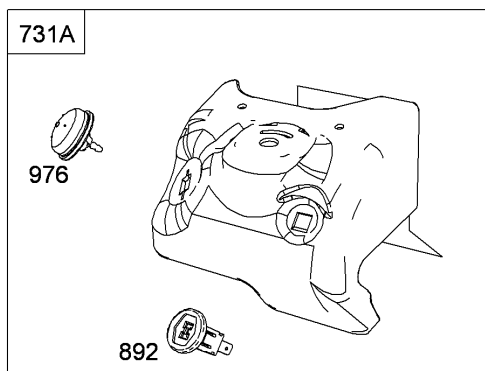

Assemblies include all parts shown in frames

**Snow Hood, Snow Shield and Panel
Briggs and Stratton 15D104-0113-E8**


Ref	Part No.	Qty.	Description				
211	695745	1	Tube-Breather				
213163	696024	1	Gasket-Air Cleaner				
2281	793122	1	Panel-Control				
2318	690370	1	Screw (Mounting Bracket)				
2493	695744	1	Bracket-Mounting				
2528	793006	1	Hose-Primer				
2604	793134	1	Cover-Control				
2610	794614	1	Arrester-Intake				
2663	699206	1	Screw (Control Panel)				
2731	794703	1	Hood-Snow				
2731A	794704	1	Hood-Snow				
2892	791944	1	Switch-Key				
2976	790221	1	Primer-Carburetor				
2990	794696	1	Key Set				
21196	696692	1	Screw (Snow Hood)				
21196A	699854	1	Screw (Snow Hood)				
21251	794702	1	Shield-Snow				
21252	699234	1	Screw (Snow Shield)				

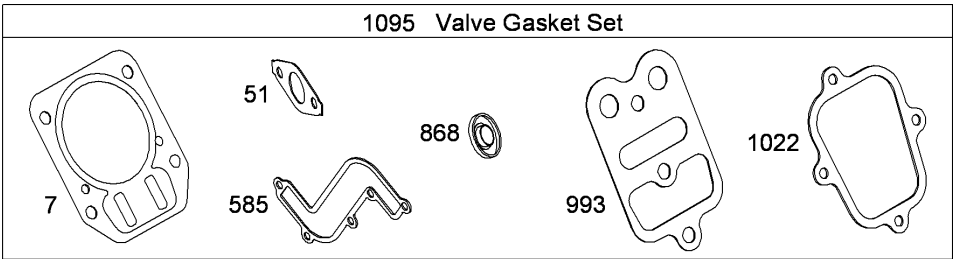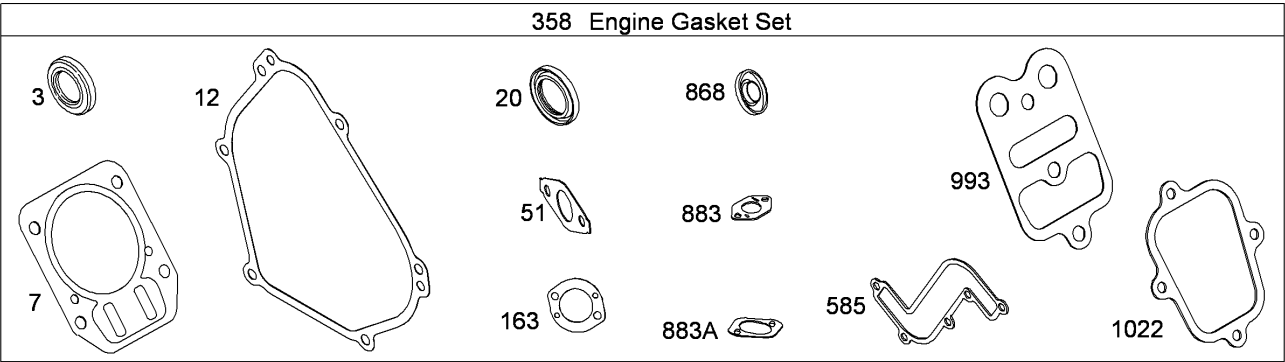

Assemblies include all parts shown in frames

Engine and Valve Gasket Sets
Briggs and Stratton 15D104-0113-E8

Ref	Part No.	Qty.	Description				
243	299819s	1	Seal-Oil (Magneto Side)				
247	791716	1	Gasket-Head, Cylinder				
5							
2412	699485	1	Gasket-Cover, Crankcase				
2420	692550	1	Seal-Oil (PTO Side)				
2351	791718	1	Gasket-Intake				
45							
23163	696024	1	Gasket-Air Cleaner				
4							
2358	791797	1	Engine Gasket Set				
24585	791760	1	Cup-Flywheel				
5							
24868	795440	1	Seal-Valve				
5							
24883	692237	1	Gasket-Exhaust (Muffler Adapter)				
24883A	691893	1	Gasket-Exhaust (Muffler)				
24993	694088	1	Gasket-Head Plate, Cylinder				
5							
241022	691890	1	Gasket-Cover, Rocker				
5							
21095	791798	1	Valve Gasket Set				

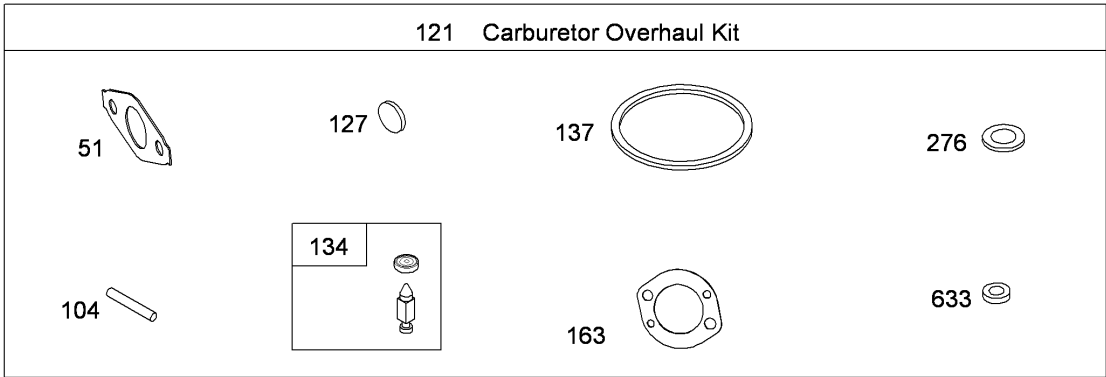

Assemblies include all parts shown in frames

Carburetor Overhaul Kit

Briggs and Stratton 15D104-0113-E8

Ref	Part No.	Qty.	Description				
2 3 51	791718	1	Gasket-Intake				
4 5							
2 3 104	691242	1	Pin-Hinge, Float				
2 121	792006	1	Carburetor Overhaul Kit				
2 3 127	691739	1	Plug-Welch				
2 3 134	398188	1	Needle And Seat Kit				
2 3 137	693981	1	Gasket-Bowl, Float				
2 3 163	696024	1	Gasket-Air Cleaner				
4							
2 3 276	271716	1	Washer-Sealing				
2 3 633	691321	1	Seal-Shaft, Choke Throttle				

Attachments and Accessories

For 38637C - Power Max 828 OXE Snowthrower

Product Name	Model/Part
Tire Chain Kit	107-3813
Snow Cab	107-3814
Weight Kit	107-3815
28 Inch Drift Breaker	107-3817

NOTES

NOTES

NOTES

