



Power Max 826 OE Snowthrower

Model No. 38624 - 290000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Auger and Housing Assembly	 3	Cylinder Head Assembly Briggs and Stratton 15D104-0113-E8	 15
26 Inch Auger Gearcase Assembly No. 108-7328	 4	Carburetor and Fuel Tank Assembly Briggs and Stratton 15D104-0113-E8	 16
Chute Assembly	 5	Rewind Starter and Starter Motor Assembly Briggs and Stratton 15D104-0113-E8	 17
Frame Assembly	 6	Governor, Controls and Ignition Assembly Briggs and Stratton 15D104-0113-E8	 18
Chain Drive Assembly	 8	Muffler, Blower Housing and Flywheel Assembly Briggs and Stratton 15D104-0113-E8	 19
Handle Assembly	 9	Snow Hood, Snow Shield and Panel Briggs and Stratton 15D104-0113-E8	 20
Handle and Control Assembly	 10	Engine and Valve Gasket Sets Briggs and Stratton 15D104-0113-E8	 21
Lever Chute Control Assembly	 11	Carburetor Overhaul Kit Briggs and Stratton 15D104-0113-E8	 22
Engine Assembly	 12	Attachments and Accessories List	 23
Cylinder Assembly Briggs and Stratton 15D104-0113-E8	 13		
Crankshaft, Piston, Ring and Connecting Rod Assembly Briggs and Stratton 15D104-0113-E8	 14		

 
Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head


Footnotes

- | | |
|--|---|
| ❶ Not serviced separately | ❷ Obtain from your local Briggs & Stratton dealer |
| ❸ Included in Carburetor Overhaul Kit (Ref. No. 121) | ❹ Included in Engine Gasket Set (Ref. No. 358) |
| ❺ Included in Valve Gasket Set (Ref. No. 1095) | |

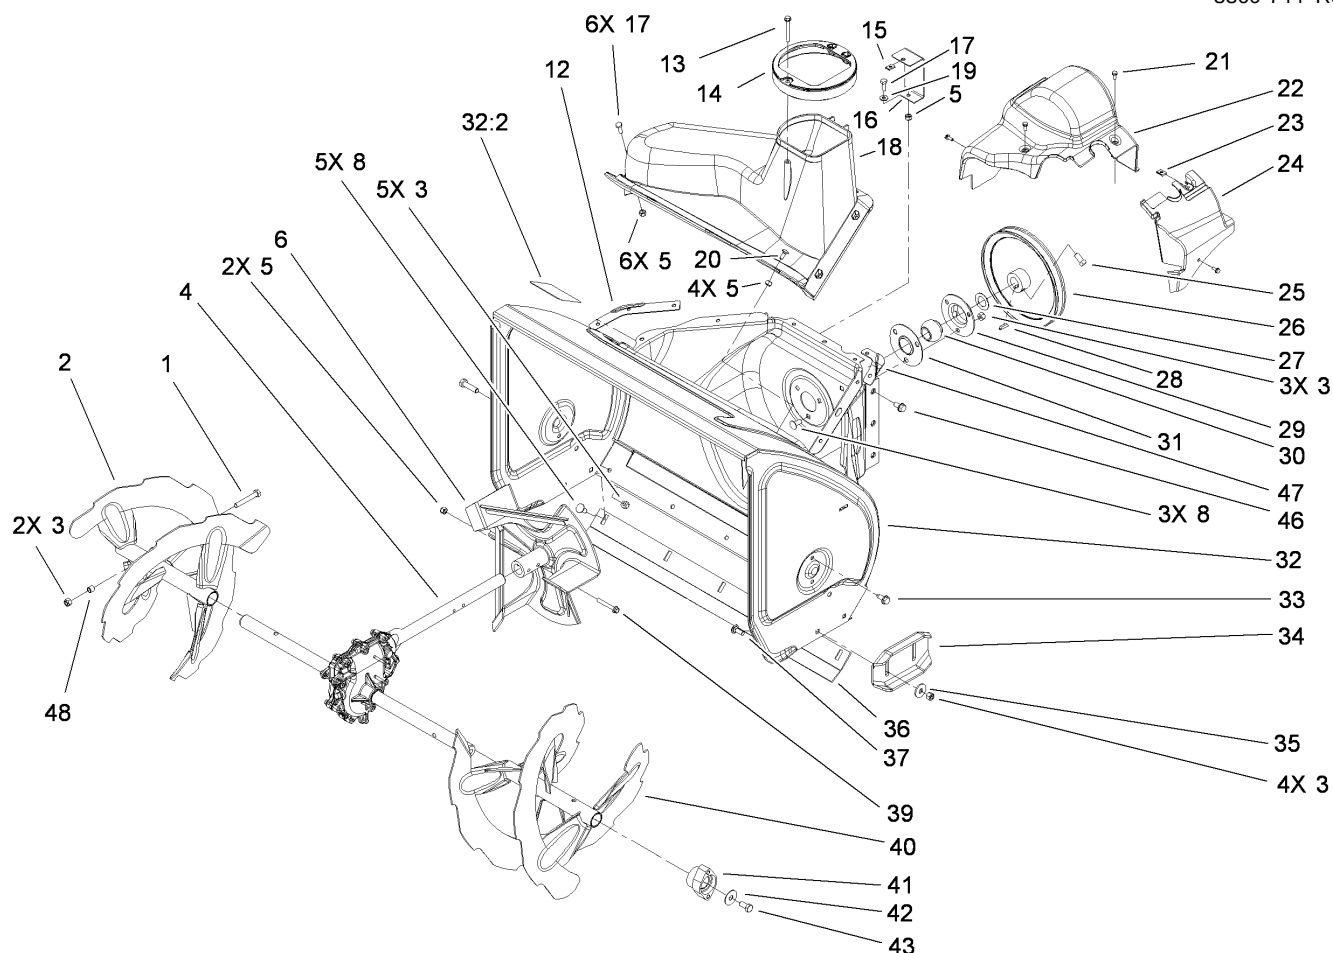


Auger and Housing Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	322-11	2	Screw-HH	29	26-6110	1	Flange-Cup, Bearing
2	106-7289-03	1	RH Auger ASM	30	63-3450	1	Bearing-Ball
3	3296-29	14	Nut-Lock, NI	31	26-6120	1	Flange-Cup, Bearing
4	108-7328	1	26 Inch Auger Gearcase ASM	32	107-3821	1	Housing-Auger, 26 Inch
5	3296-42	13	Nut-Lock, NI	32:2	53-7670	1	Decal-Warning, Auger
6	106-4576-03	1	Impeller ASM	33	32144-70	4	Screw-HWHTF
8	3230-23	8	Screw-CARR	34	106-4588-01	2	Skid
12	107-1017-03	1	Seal-Flange, Cover	35	52-2861	4	Washer
13	107-3003	1	Screw-Plastite	36	105-9976-01	1	Scraper-Fixed
14	107-3006	1	Guide-Chute	37	3230-16	4	Screw-CARR
15	107-1013	1	Nut-Speed, U-Type	39	321-44	2	Screw-HHF
16	107-1014-03	1	Bracket-Cover, Clip Nut	40	106-7299-03	1	LH Auger ASM
17	321-4	7	Screw-HH	41	106-4570	2	Auger-Bearing
18	108-0017	1	Cover	42	3-0750	2	Washer
19	3256-22	1	Washer-Flat	43	323-4	2	Screw-HH
20	3229-1	4	Screw-CARR	46	32144-14	6	Screw-HWHTF
21	32144-112	4	Screw-HWH	47	108-0039-03	1	Seal
22	107-1001	1	Cover-Belt	48	1-633545	2	Spacer
23	701493	1	Nut-Speed				
24	107-1016	1	Cover-Extension, Belt				
25	3242-4	2	Screw-Set, SQH				
26	62-1300	1	Pulley-Impeller				
27	252-80	1	Washer-Thrust				
28	3257-23	1	Key-Woodruff				

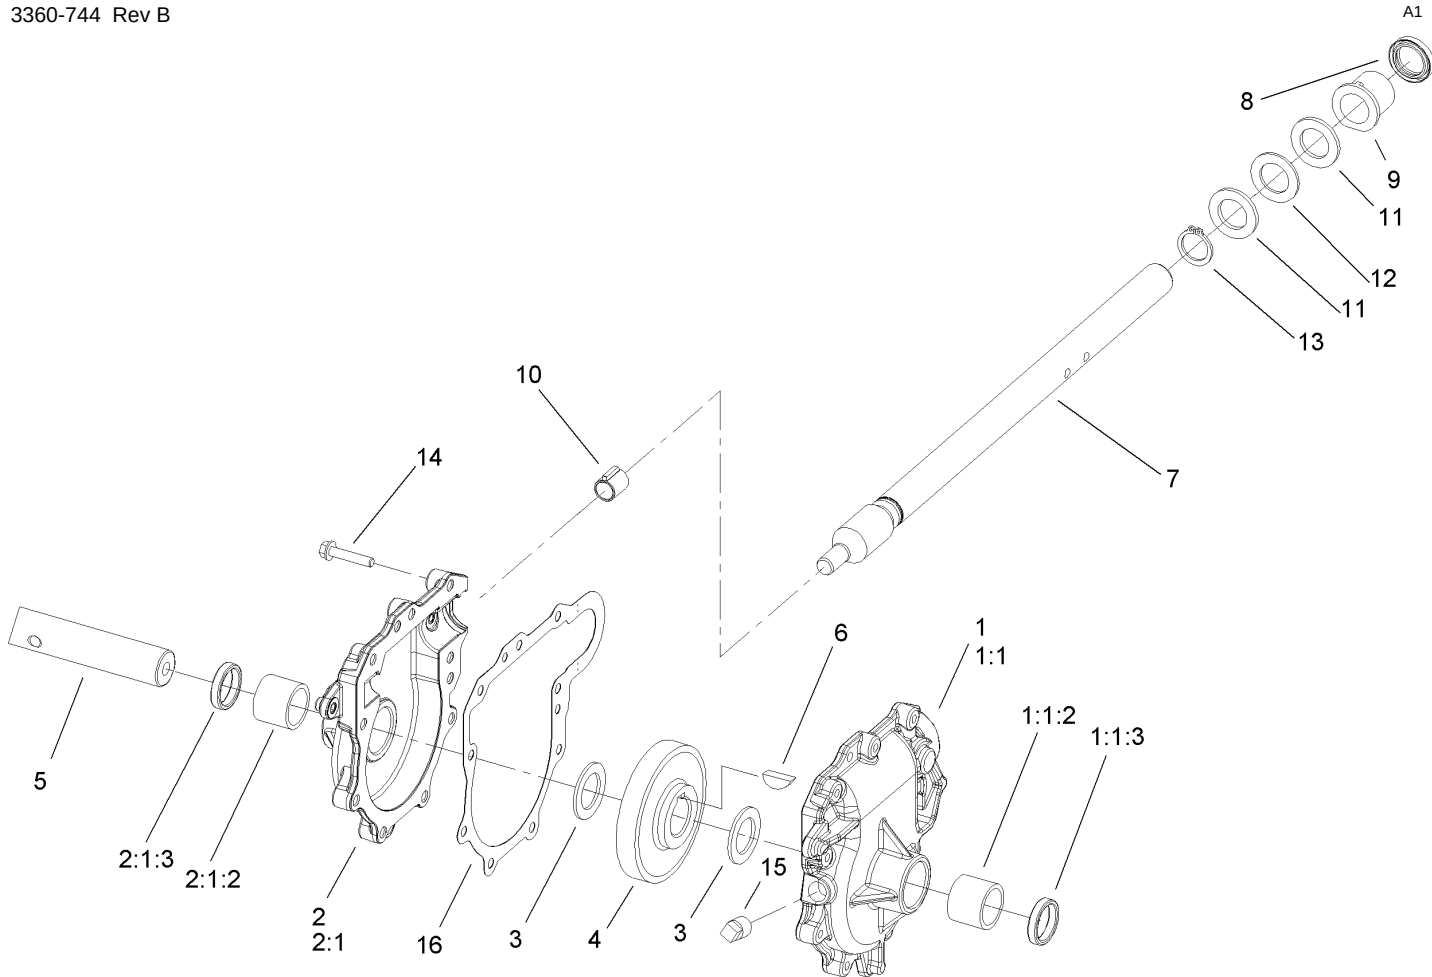 

26 Inch Auger Gearcase Assembly No. 108-7328


Ref	Part No.	Qty.	Description				
1	108-7325	1	LH Auger Gearcase ASM				
1:1		1	Gearcase-Auger, LH				
1:1:2	112-6635	1	Bushing-Sleeve				
1:1:3	7-0045	1	Seal-Oil				
2	108-7327	1	RH Auger Gearcase ASM				
2:1		1	Gearcase-Auger, RH				
2:1:2	112-6635	1	Bushing-Sleeve				
2:1:3	7-0045	1	Seal-Oil				
3	252-71	2	Washer-Thrust				
4	62-0120	1	Gear-Helical				
5	106-4579	1	Shaft-Auger				
6	3257-10	1	Key-Woodruff				
7	66-7811	1	Shaft-Impeller				
8	253-149	1	Seal-Oil				
9	37-6560	1	Bushing-Input				
10	62-1150	1	Bushing-Worm				
11	252-78	2	Washer-Thrust				
12	252-76	1	Bearing-Thrust				
13	32151-33	1	Ring-Retaining, EXT				
14	108-4862	9	Screw-HWHTF				
15	281-1	1	Plug-Pipe, SQH				
16	108-7330	1	Gasket-Gearcase, Auger				

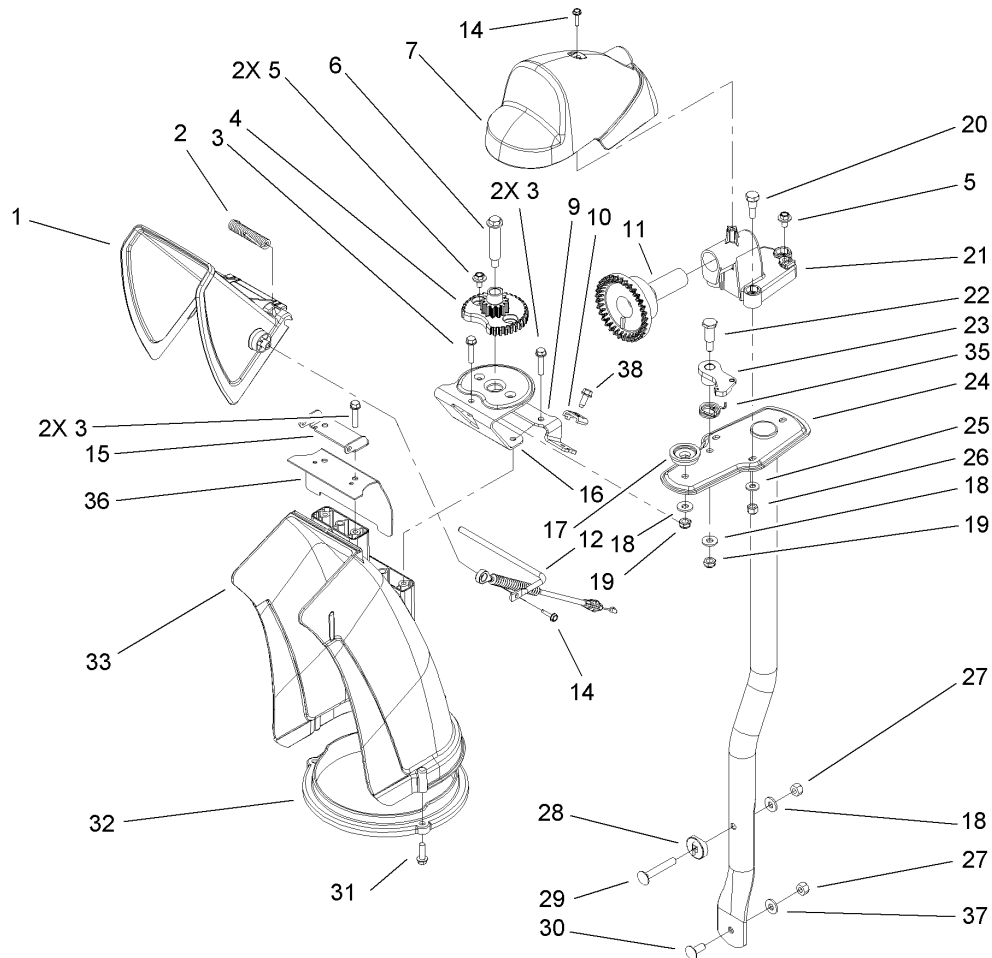 

Chute Assembly

Ref	Part No.	Qty.	Description
1	112-6606	1	Deflector-Chute
2	106-4594	1	Spring-Torsion
3	46-8092	5	Screw-Plastite
4	106-4472	1	Gear-Chute
5	46-6810	3	Screw And Washer ASM
6	100-9880	1	Bolt-Shoulder
7	106-4585	1	Cover-Gear, Chute
9	106-7296	1	Bracket-Cable, Clamp
10	106-7297	1	Clamp-Cable
11	106-4471	1	Gear-Face
12	107-1021	1	Rod-Deflector
14	98-1375	2	Screw-HWH
15	106-7266	1	Bracket-Deflector
16	106-4582-03	1	Bracket-Support, Chute
17	106-4422	1	Spacer-Chute
18	3256-2	3	Washer-Flat
19	3296-47	2	Nut-Lock, NI
20	106-7276	3	Screw-Shoulder
21	106-7257	1	Mount-Gear, Face
22	63-2650	1	Screw-Shoulder
23	106-4476	1	Latch-Chute
24	106-7253-03	1	Tube-Support
25	3256-22	3	Washer-Flat
26	3296-42	3	Nut-Lock, NI

Ref	Part No.	Qty.	Description
27	3296-29	2	Nut-Lock, NI
28	106-7260	1	Washer-Curved
29	3230-5	1	Screw-CARR
30	3230-23	1	Screw-CARR
31	46-8091	3	Screw-HWH
32	105-9991	1	Ring-Chute
33	106-4440	1	Chute-Discharge
35	108-7315	1	Spring-Torsion
36	108-5052	1	Seal-Chute
37	3290-456	1	Washer-Belleville
38	32144-10	1	Screw-HWH

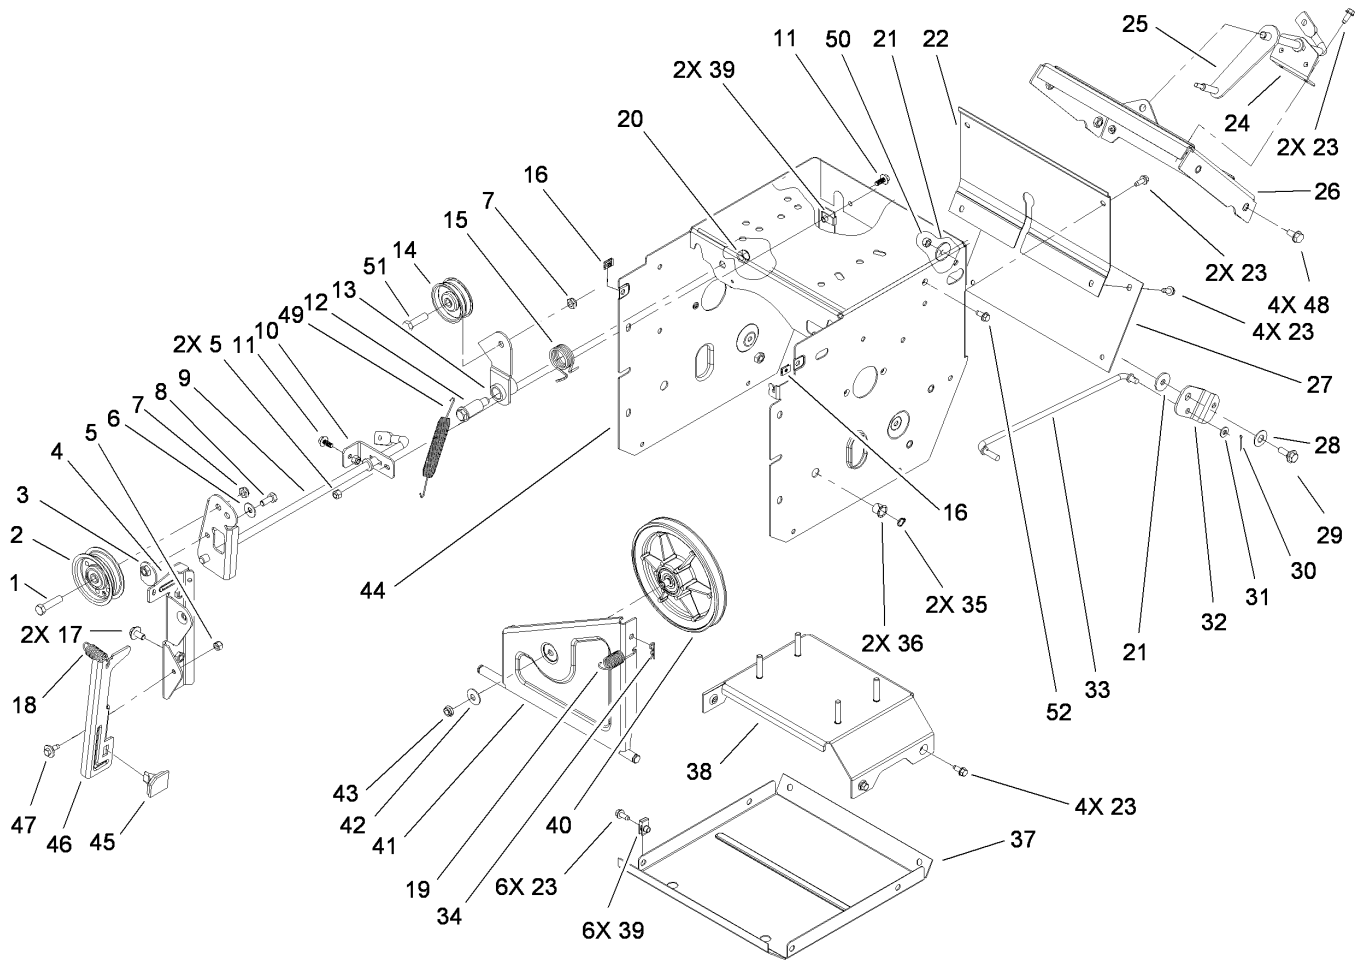 


Frame Assembly

Ref	Part No.	Qty.	Description
1	323-8	1	Screw-HH
2	92-7104	1	Pulley-Idler
3	107-1047	1	Nut
4	107-1039	1	Bracket-Idler, Impeller
5	3296-42	3	Nut-Lock, NI
6	3290-456	1	Washer-Belleville
7	3296-59	2	Nut-Lock, NI
8	322-3	1	Screw-HH
9	107-3838-03	1	Impeller Clutch ASM
10	106-7341	1	Bracket-Rear, Clutch
11	99-6810	2	Screw-HH
12	108-5056	1	Bolt-Shoulder
13	108-5058	1	Arm-Idler, Traction
14	3-4244	1	Pulley-Idler
15	108-7332	1	Spring-Torsion
16	107-1013	2	Nut-Speed, U-Type
17	3234-7	2	Screw-HHF
18	107-1045	1	Spring-Extension
19	107-1003	1	Spring-Extension
20	3296-76	1	Nut-Lock, NI
21	5-4460	2	Washer-Pivot
22	106-4556-01	1	Cover-Upper
23	32144-10	16	Screw-HWH
24	108-0036	1	Bracket-Rod, Shift


Ref	Part No.	Qty.	Description
25	106-7268	1	Lever-Control, Traction
26	108-0026-01	1	Shift Plate ASM
27	106-7345-01	1	Cover-Lower
28	25-5640	1	Washer
29	27-0410	1	Screw-Shoulder
30	3272-4	1	Pin-Cotter
31	3256-23	1	Washer-Flat
32	107-1011	1	Bellcrank-Drive
33	106-4467	1	Link-Control, Speed
34	3290-307	1	Pin-Hair
35	32151-61	2	Ring-Retaining
36	256-257	2	Bushing-Nyliner
37	106-7330-01	1	Pan-Bottom
38	112-8128	1	Frame Brace ASM
39	107069	8	Clip
40	108-0031	1	Traction Pulley ASM
41	108-7307	1	Friction Wheel Bracket ASM
42	3290-340	1	Washer-Belleville
43	3296-5	1	Nut-Lock
44	114-9259-01	1	Traction Frame ASM
45	66-8060	1	Pad-Brake
46	107-1000	1	Arm-Brake
47	92-9698	1	Screw-Shoulder
48	32144-14	4	Screw-HWHTF



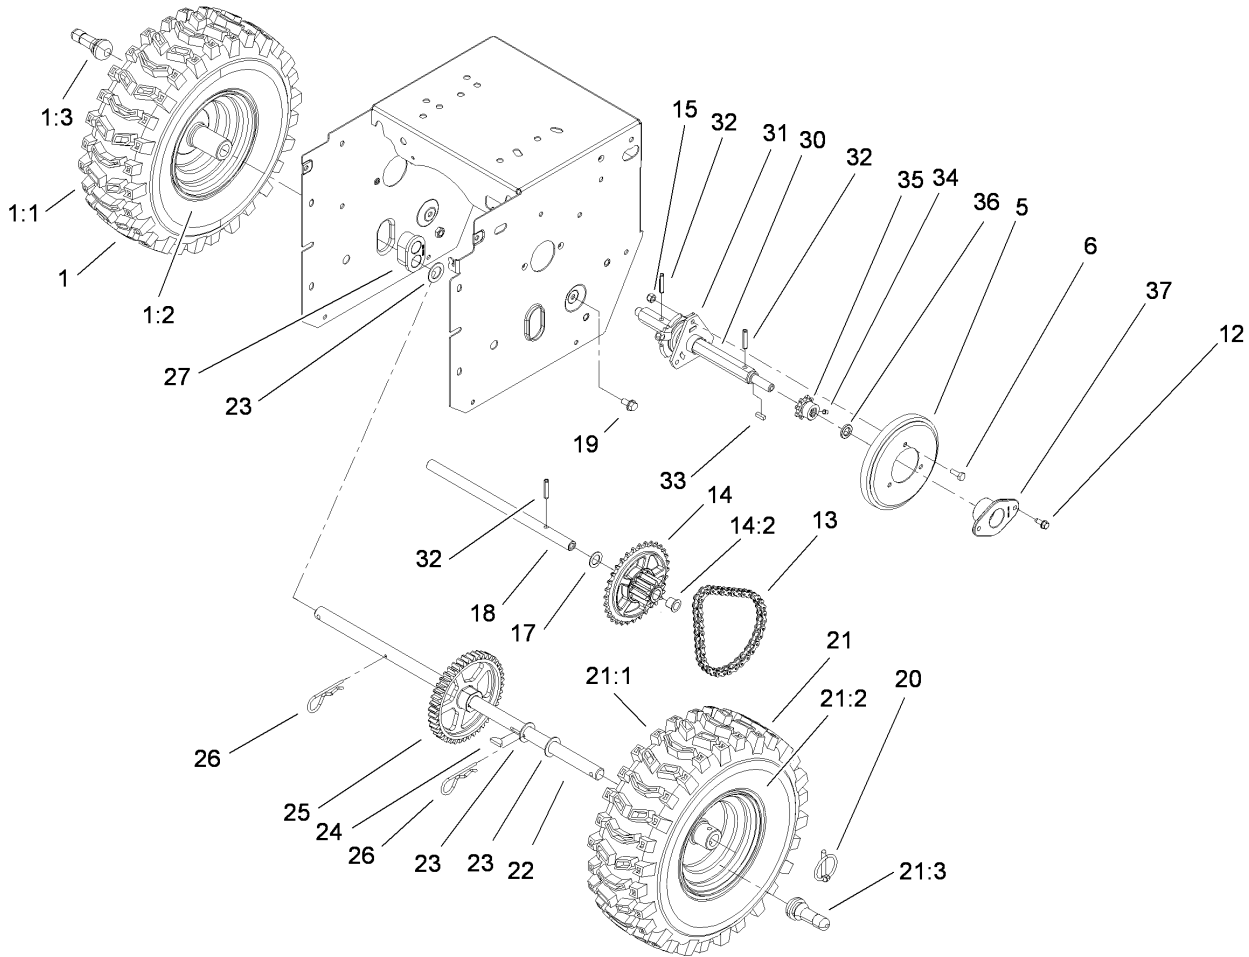 

Chain Drive Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
❶ 1		1	RH Wheel And Tire ASM	26	3290-343	2	Pin-Hair
1:1	107-3042	1	Tire	27	106-4558	2	Bearing-Axle
1:2	107-3043	1	Rim-Tire	30	108-5054	1	Shaft-Hex
1:3	232-27	1	Stem-Valve	31	106-4434	1	Trunion-Hex
5	106-4480	1	Wheel-Friction	32	32121-9	3	Pin-Roll, Slotted
6	321-4	3	Screw-HH	33	94-8850	1	Key-Square
12	32144-10	4	Screw-HWH	34	3245-32	2	Screw-HSH
13	108-0016	1	Chain-Roller	35	106-7317	1	Sprocket-8 Tooth
13	2710-6	1	Link-Connecting	36	108-5059	1	Spacer-Bushing
14	108-0013	1	Sprocket ASM	37	108-7319	2	Retainer-Bearing
14:2	108-2974	2	Bushing-Flange				
15	3296-42	3	Nut-Lock, NI				
17	107-3041	1	Washer-Flat				
18	106-4592	1	Shaft-Intermediate				
19	32144-14	2	Screw-HWHTF				
20	107-3039	2	Klik Pin ASM				
❶ 21		1	LH Wheel And Tire ASM				
21:1	107-3042	1	Tire				
21:2	107-3043	1	Rim-Tire				
21:3	232-27	1	Stem-Valve				
22	106-4449	1	Shaft-Axle				
23	3-8664	3	Washer-Thrust				
24	3257-7	1	Key-Woodruff				
25	106-4572	1	Gear-Axle, 44 Tooth				

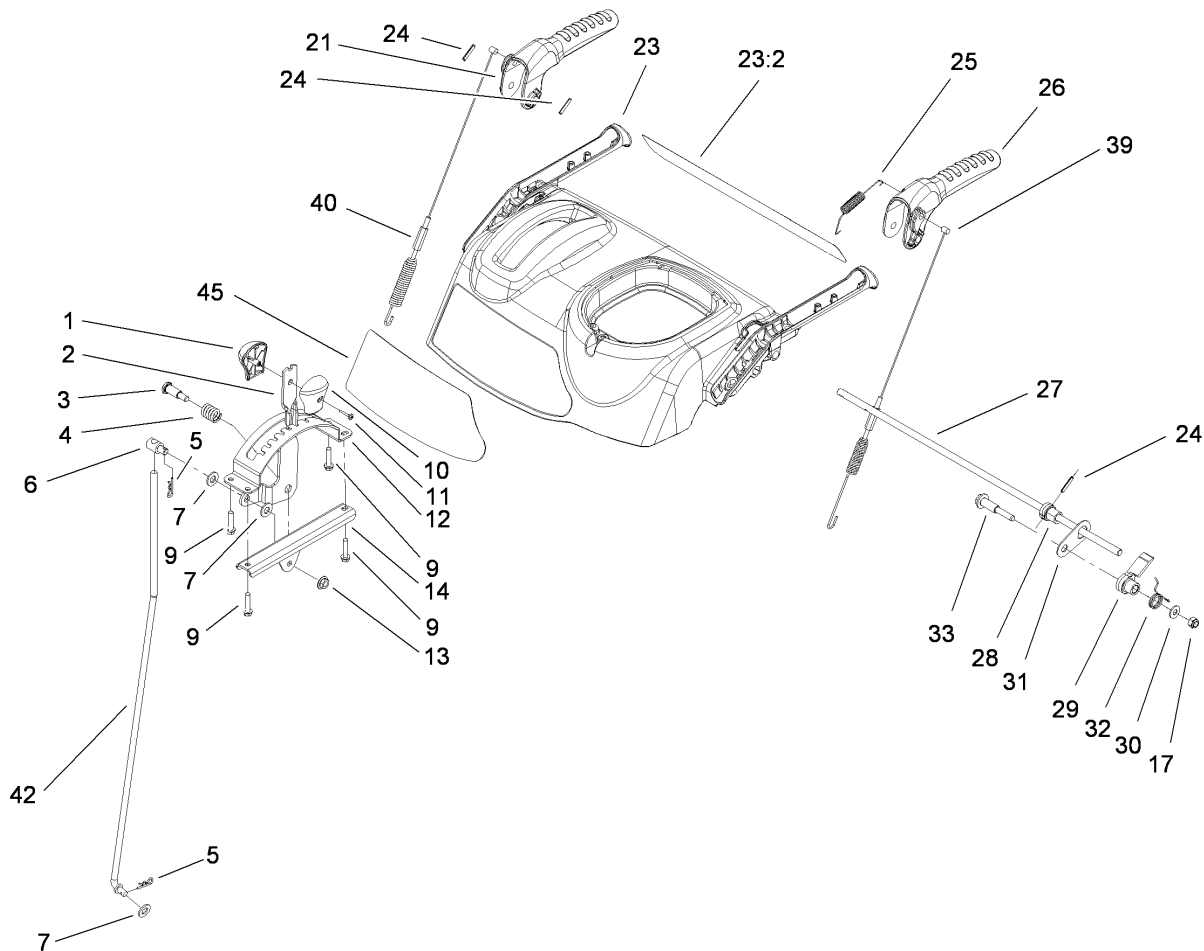 

Handle Assembly


Ref	Part No.	Qty.	Description
1	106-4423	1	Knob-Shift, RH
2	106-7278-03	1	Selector-Speed
3	63-2650	1	Screw-Shoulder
4	108-7313	1	Spring-Compression
5	3290-307	2	Pin-Hair
6	110-3446	1	Trunion-Rod
7	3256-24	3	Washer-Flat
9	46-8092	4	Screw-Plastite
10	105-9999	1	Knob-Shift, LH
11	94-4496	1	Screw-PPH
12	106-7277-03	1	Guide-Selector, Speed
13	32128-13	1	Nut-HF
14	106-7279-03	1	Mount-Selector, Speed
17	3296-72	1	Nut-Lock, NI
21	106-4413	1	Lever-Augur
23	112-6630	1	Control Panel ASM
23:2	112-6623	1	Decal-Control Panel, Back
24	32121-125	3	Pin-Spring
25	107-3001	1	Spring-Tension
26	106-4410	1	Lever-Traction
27	105-9996	1	Rod-Lockout
28	107-1043	1	Cam-Lockout
29	108-0023	1	Latch-Lockout
30	98-3499	1	Washer-Flat

Ref	Part No.	Qty.	Description
31	107-3000	1	Link-Lockout
32	108-0024	1	Spring-Torsion
33	106-4412	1	Screw-Shoulder
39	115-5671	1	Cable-Traction
40	115-5680	1	Cable-Augur
42	107-1005	1	Rod-Shift
45	115-5668	1	Decal-Control Panel

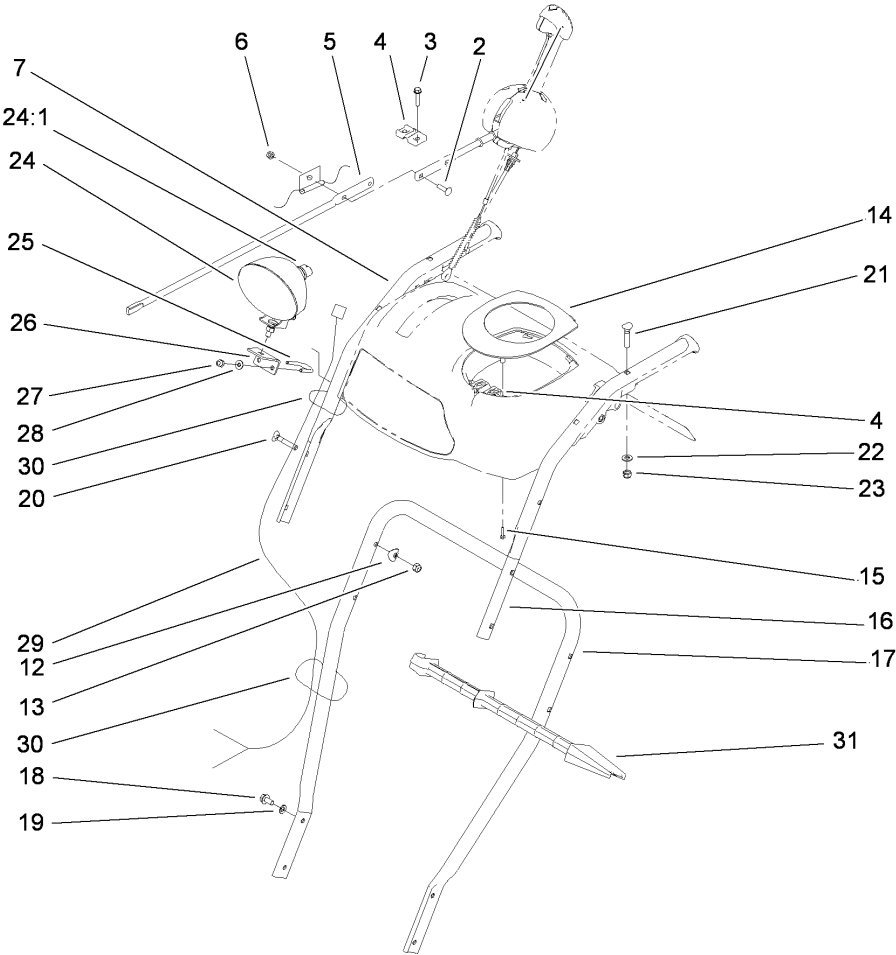 


Handle and Control Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
2	3229-30	2	Screw-CARR	29	106-4511	1	Harness-Wire
3	46-8092	2	Screw-Plastite	30	614249	2	Strap-Tie
4	105-9987	2	Support-Rod	31	110-3408	1	Stick-Cleanout
5	106-7283	1	Rod-Chute, Front				
6	3296-73	2	Nut-Lock, NI				
7	108-0038-03	1	Handle-Upper, RH				
12	107-3844	4	Washer				
13	3296-72	4	Nut-Lock, NI				
14	106-4586	1	Cover-Panel, Control				
15	94-4496	2	Screw-PPH				
16	108-0037-03	1	Handle-Upper, LH				
17	105-9981-03	1	Handle-Lower				
18	32144-14	4	Screw-HWHTF				
19	3290-475	4	Washer-Belleville				
20	92-2260	4	Screw-Handle				
21	107-3018	4	Screw-Handle				
22	3256-70	4	Washer-Flat				
23	3296-72	4	Nut-Lock, NI				
24	106-4510	1	Headlamp ASM				
24:1	108-0008	1	Lamp-12 Volt				
25	107-3024	1	Clamp				
26	107-1020-03	1	Bracket-Light				
27	3296-73	2	Nut-Lock, NI				
28	3256-1	2	Washer-Flat				

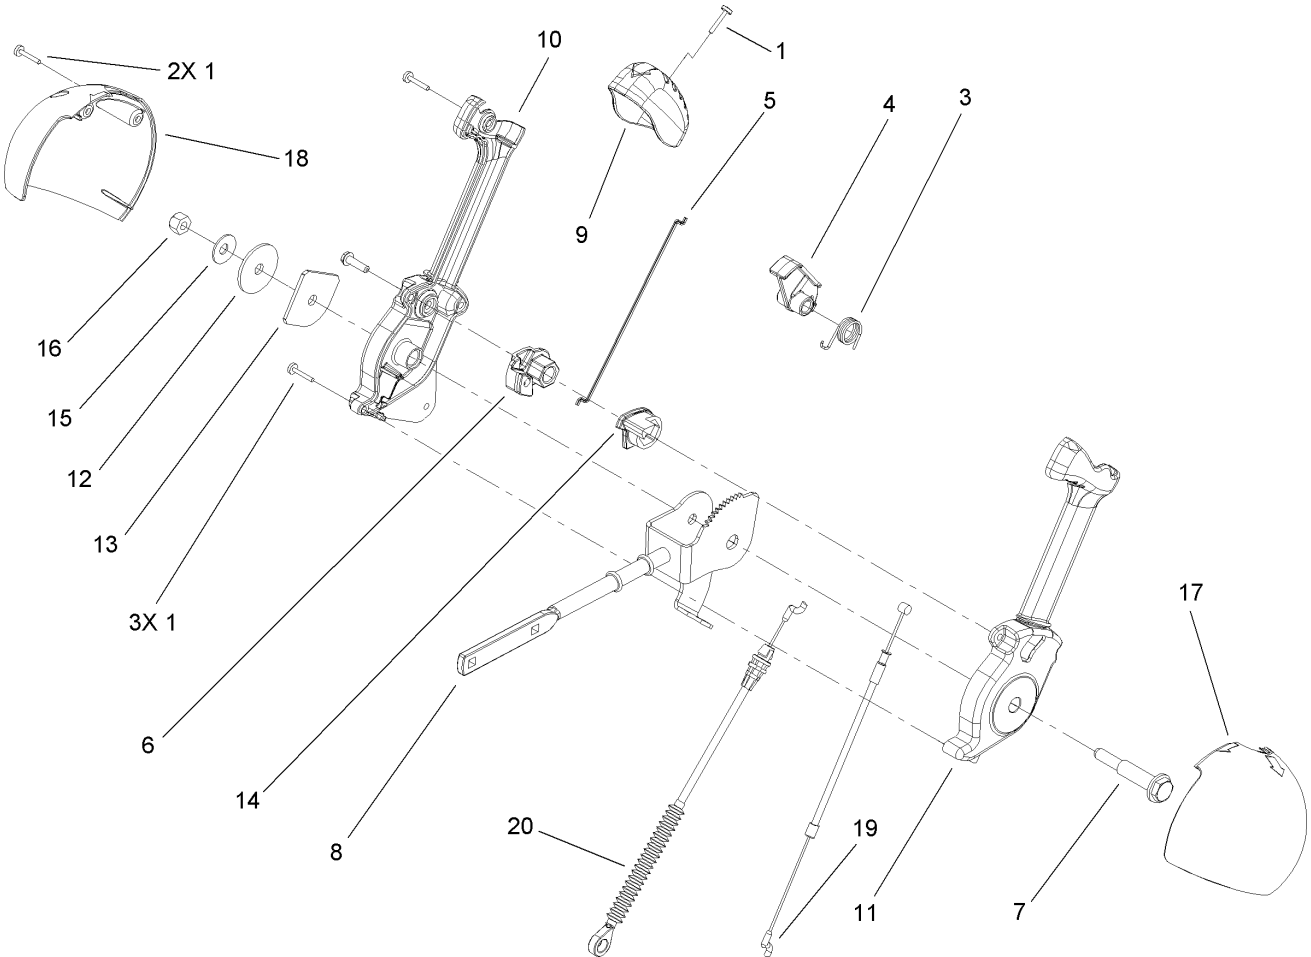 


Lever Chute Control Assembly

Ref	Part No.	Qty.	Description				
1	94-4496	6	Screw-PPH				
3	105-9982	1	Spring-Torsion				
4	105-9984	1	Trigger-Latch				
5	105-9985	1	Link-Latch				
6	105-9988	1	Lever-Cable, Deflector				
7	105-9995	1	Screw-Shoulder				
8	106-4479	1	Rod-Control, Chute				
9	106-7280	1	Cap-Lever				
10	106-7281	1	Lever-Chute Control, RH				
11	106-7282	1	Lever-Chute Control, LH				
12	107-3002	1	Washer-Nylon				
13	106-7295	1	Plate-Friction				
14	106-7310	1	Pawl-Latch				
15	3290-456	1	Washer-Belleville				
16	3296-29	1	Nut-Lock, NI				
17	105-9986	1	Cover-Chute Lever, LH				
18	106-7292	1	Cover-Chute Lever, RH				
19	105-9989	1	Cable-Release, Chute				
20	105-9990	1	Cable-Control, Deflector				

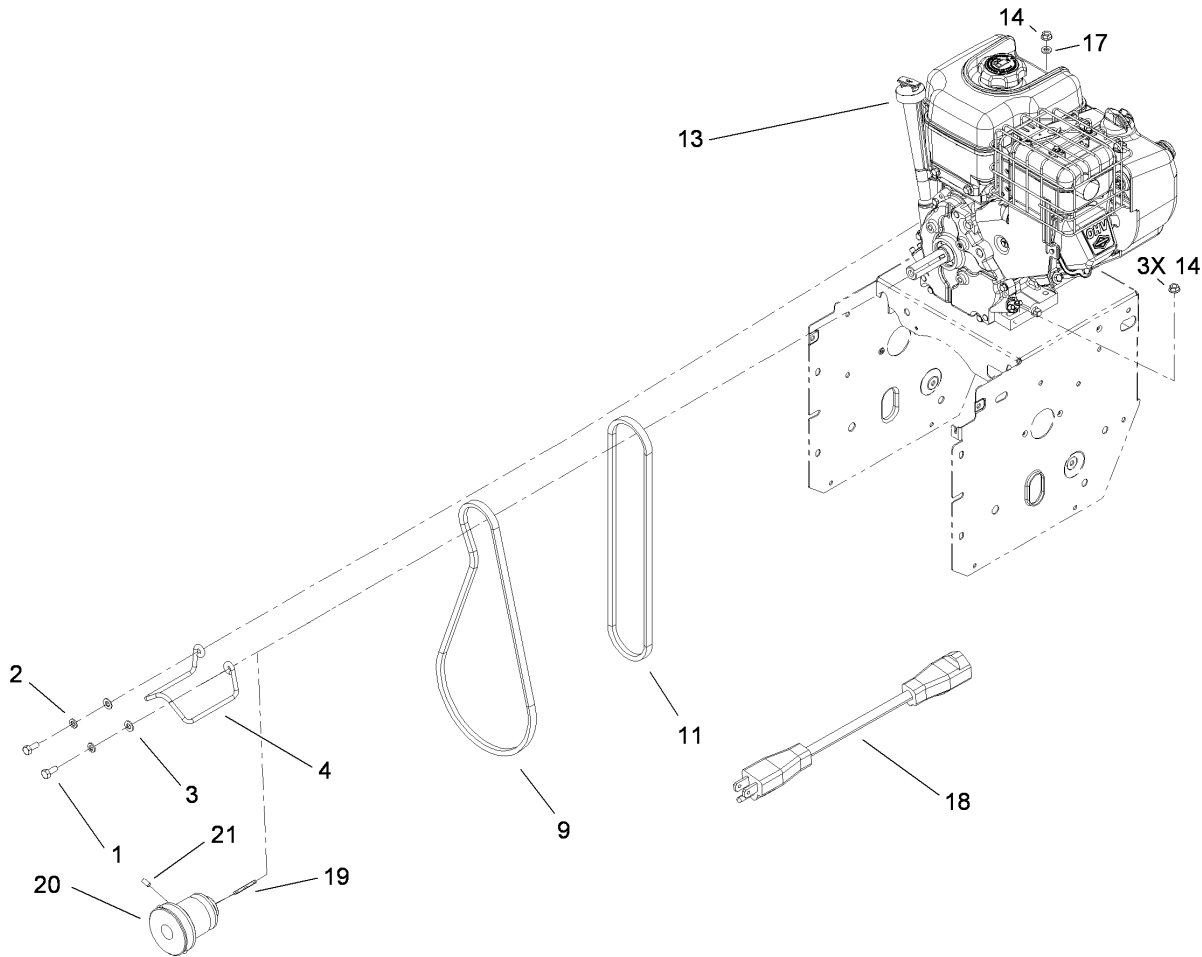 

Engine Assembly

Ref	Part No.	Qty.	Description				
1	3210-3	2	Screw-HH				
2	3253-4	2	Washer-Lock				
3	3256-23	2	Washer-Flat				
4	107-3835	1	Guide-Belt				
9	106-4498	1	Belt-V				
11	94-8812	1	V Belt-Traction				
1 2 13			1 Engine-Briggs, 15D104-0113-E8				
14	32128-20	4	Nut-HF				
17	3256-2	1	Washer-Flat				
18	99-9300	1	Cord-Extension				
19	7-0036	1	Key-Square				
20	114-9252	1	Pulley-Engine				
21	3245-9	2	Screw-Set				

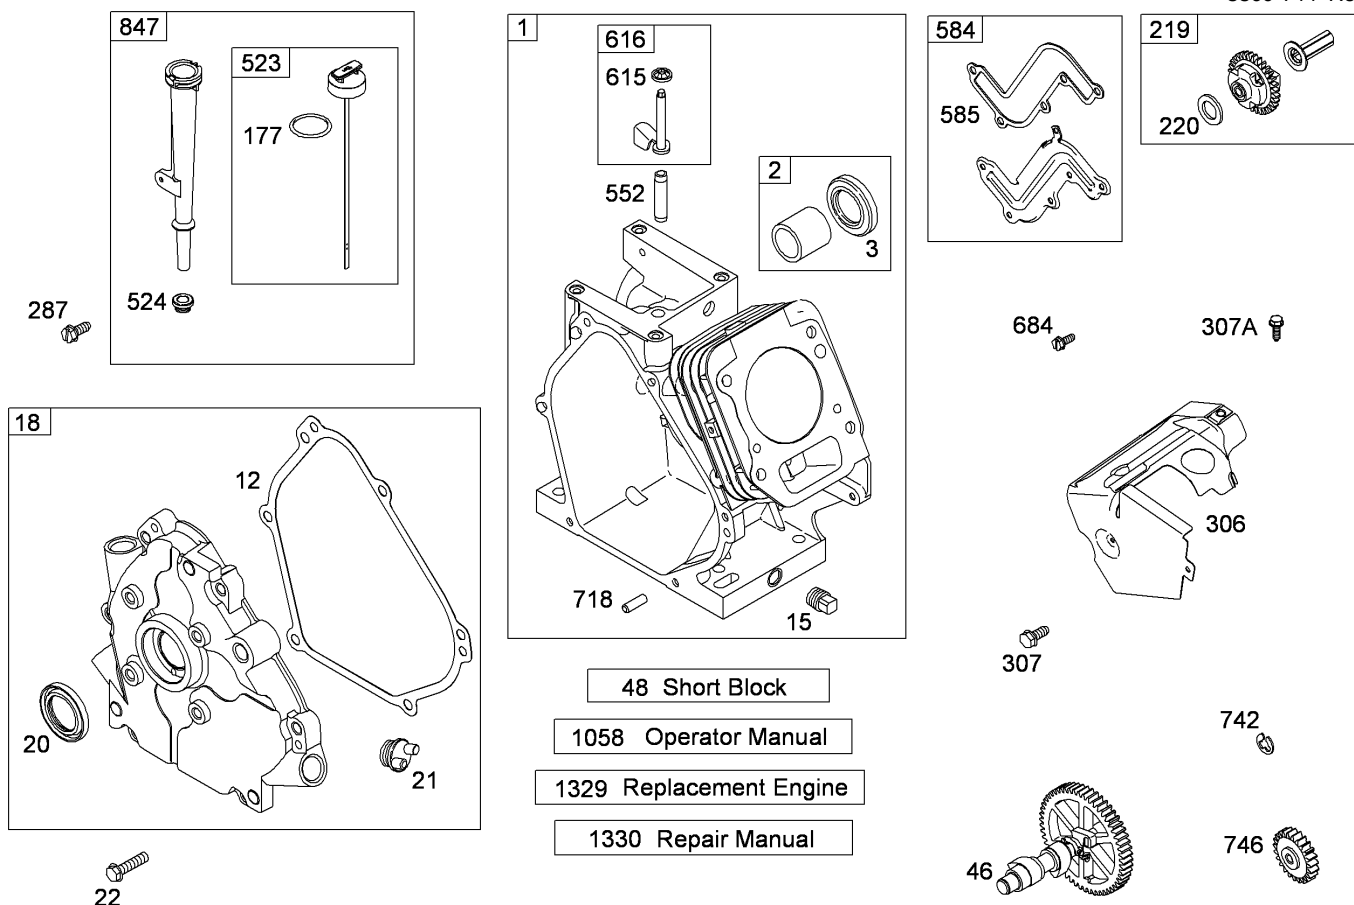 


Assemblies include all parts shown in frames

Cylinder Assembly

Briggs and Stratton 15D104-0113-E8

Ref	Part No.	Qty.	Description
21	794188	1	Cylinder ASM
22	399269	1	Bushing And Seal Kit (Magnetoside)
243	299819s	1	Seal-Oil (Magnetoside)
2412	699485	1	Gasket-Cover, Crankcase
215	691686	1	Plug-Drain, Oil (Square Head)
218	699696	1	Cover-Crankcase
2420	692550	1	Seal-Oil
221	281658S	1	Cap-Fill, Oil
222	699478	1	Screw (Crankcase Cover To Sump)
246	693404	1	Camshaft
248	791711	1	Short Block
2177	691031	1	Seal-O Ring (Dipstick)
2219	693578	1	Gear-Governor
2220	691724	1	Washer (Governor Gear)
2287	699629	1	Screw (Dipstick Tube)
2306	695710	1	Shield-Cylinder
2307	699483	1	Screw (Cylinder Shield) (M4)
2307A	699234	1	Screw (Cylinder Shield) (M5)
2523	693618	1	Dipstick
2524	281730s	1	Seal-Dipstick Tube
2552	692346	1	Bushing-Crank, Governor
2584	791759	1	Cover-Passage, Breather

Ref	Part No.	Qty.	Description
24585 5	791760	1	Cup-Flywheel
2615	692576	1	Retainer-Shaft, Governor
2616	692547	1	Crank-Governor
2684	793369	1	Screw (Breather Passage Cover)
2718	690959	1	Pin-Locating
2742	692564	1	Retainer-E Ring
2746	790278	1	Gear-Idler
2847	693617	1	Dipstick And Tube ASM
21058	277104	1	Operator Manual

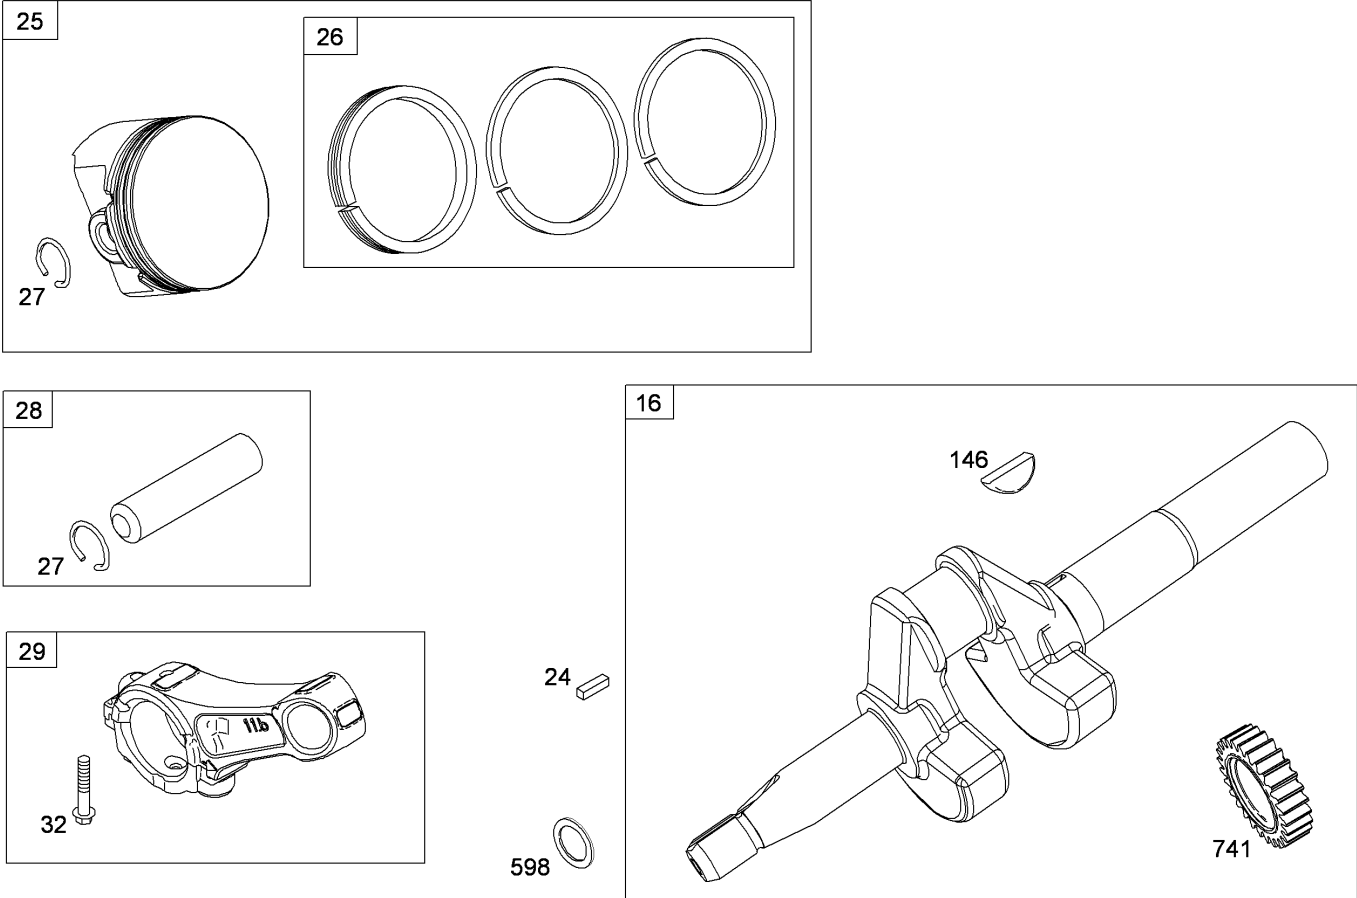 


Assemblies include all parts shown in frames

Crankshaft, Piston, Ring and Connecting Rod Assembly

Briggs and Stratton 15D104-0113-E8

Ref	Part No.	Qty.	Description				
16	699454	1	Crankshaft				
24	222698s	1	Key-Flywheel				
25	791786	1	Piston ASM (Standard)				
25	791791	1	Piston ASM (.020 Oversize)				
26	791787	1	Ring Set (Standard)				
26	791792	1	Ring Set (.020 Oversize)				
27	690975	1	Lock-Pin, Piston				
28	690229	1	Pin-Piston (STD)				
29	791783	1	Rod-Connecting				
32	791784	1	Screw (Connecting Rod)				
146	690979	1	Key-Timing				
598	220624	1	Shim-End Play (Crankshaft)				
741	695087	1	Gear-Timing				
1329	15D114-0020	1	Replacement Engine				
1330	272147	1	Repair Manual				

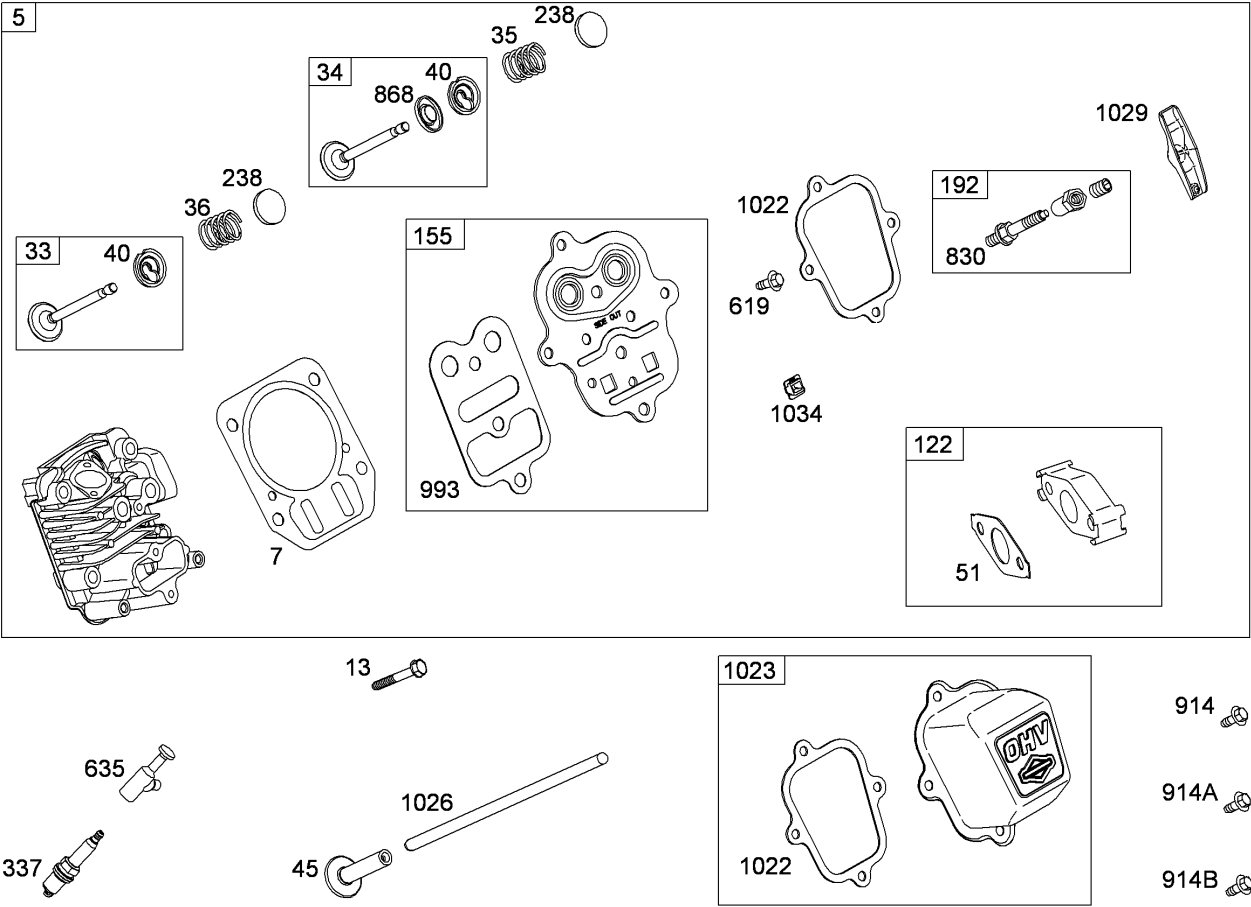 


Assemblies include all parts shown in frames

Cylinder Head Assembly

Briggs and Stratton 15D104-0113-E8

Ref	Part No.	Qty.	Description
25	791720	1	Head-Cylinder
2475	791716	1	Gasket-Head, Cylinder
213	699482	1	Screw (Cylinder Head)
233	499642	1	Valve-Exhaust
234	499641	1	Valve-Intake
235	691304	1	Spring-Valve (Intake)
236	691304	1	Spring-Valve (Exhaust)
240	692194	1	Retainer-Valve
245	690977	1	Tappet-Valve
255145	791718	1	Gasket-Intake
2122	791717	1	Spacer-Carburetor
2155	698214	1	Plate-Head, Cylinder
2192	694543	1	Adjuster-Arm, Rocker
2238	691300	1	Cap-Valve
2337	691043	1	Spark Plug
2619	699480	1	Screw (Cylinder Head Plate)
2635	692927	1	Boot-Sparkplug
2830	694544	1	Stud-Arm, Rocker
248685	795440	1	Seal-Valve
2914	699480	1	Screw (Rocker Cover) (Bottom)
2914A	692557	1	Screw (Rocker Cover) (Top)
2914B	697551	1	Screw (Rocker Cover) (Sides)

Ref	Part No.	Qty.	Description
249935	694088	1	Gasket-Head Plate, Cylinder
2410225	691890	1	Gasket-Cover, Rocker
21023	499924	1	Cover-Arm, Rocker
21026	790287	1	Rod-Push
21029	691230	1	Arm-Rocker
21034	691343	1	Guide-Rod, Push

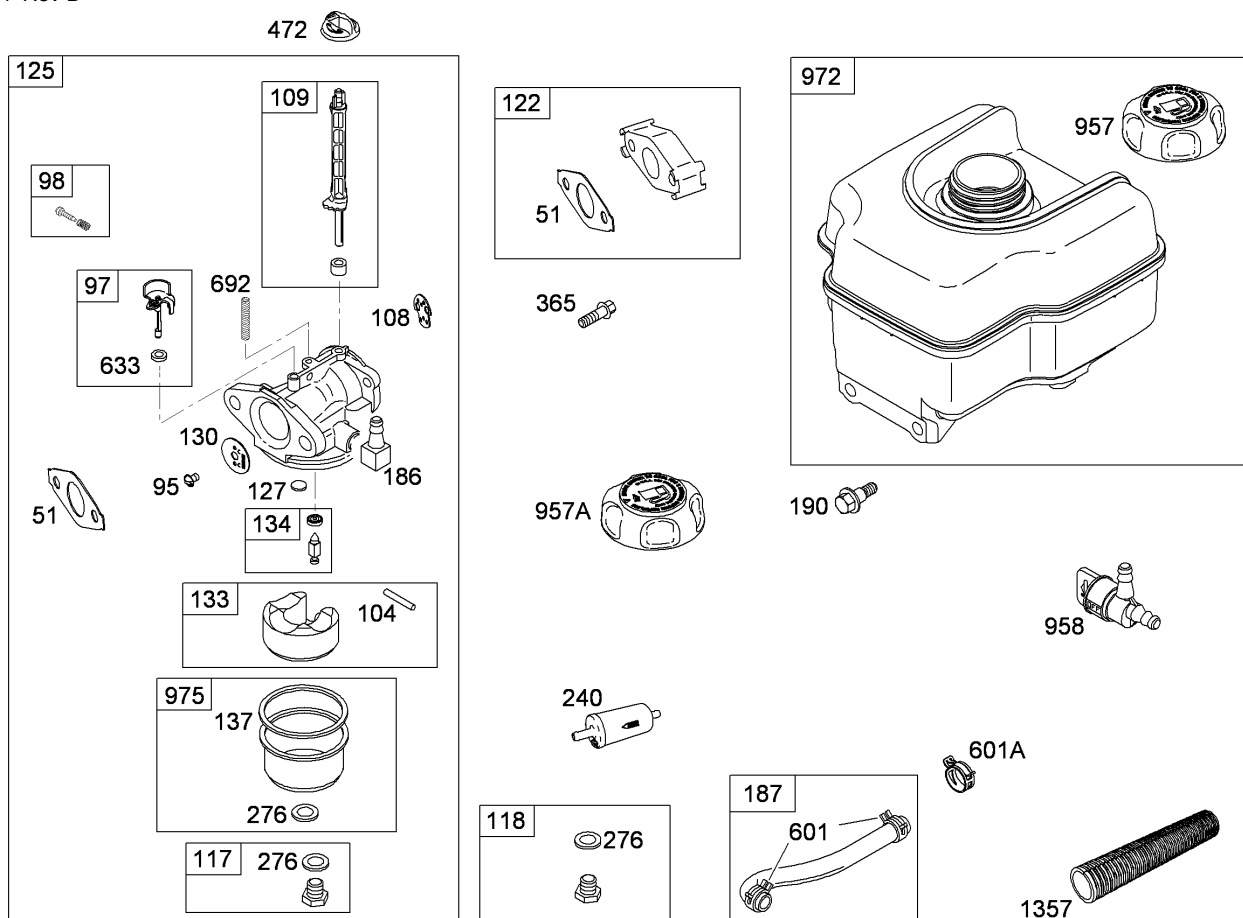 


Assemblies include all parts shown in frames

Carburetor and Fuel Tank Assembly Briggs and Stratton 15D104-0113-E8

Ref	Part No.	Qty.	Description
2 51	791718	1	Gasket-Intake
1 95			
2 95	691636	1	Screw (Throttle Valve)
2 97	690024	1	Shaft-Throttle
2 98	398185	1	Idle Speed Kit
2 104	691242	1	Pin-Hinge, Float
2 108	695807	1	Valve-Choke
2 109	791957	1	Shaft-Choke
2 117	691428	1	Jet-Main (Standard)
2 118	690048	1	Jet-Main (High Altitude)
2 122	791717	1	Spacer-Carburetor
2 125	794588	1	Carburetor
2 127	691739	1	Plug-Welch
2 130	691181	1	Valve-Throttle
2 133	398187	1	Float-Carburetor
2 134	398188	1	Needle And Seat Kit
2 137	693981	1	Gasket-Bowl, Float
2 186	692317	1	Connector-Hose
2 187	791867	1	Line-Fuel (Molded)
2 190	699220	1	Screw (Fuel Tank)
2 240	695666	1	Filter-Fuel
2 276	271716	1	Washer-Sealing
2 291	790830	1	Thermostat
2 365	699484	1	Screw (Carburetor)

Ref	Part No.	Qty.	Description
2 472	791958	1	Knob-Choke Shaft
2 601	791850	1	Clamp-Hose (Green)
2 601A	691038	1	Clamp-Hose (Black)
2 633	691321	1	Seal-Shaft, Choke Throttle
2 692	690572	1	Spring-Detent
2 972	694260	1	Tank-Fuel
2 957	795027	1	Cap-Fuel Tank
2 957A	792647	1	Cap-Fuel Tank (Fresh Start)
2 958	698180	1	Valve-Shut Off, Fuel
2 975	790559	1	Bowl-Float
2 1357	794700	1	Sleeve-Fuel Line







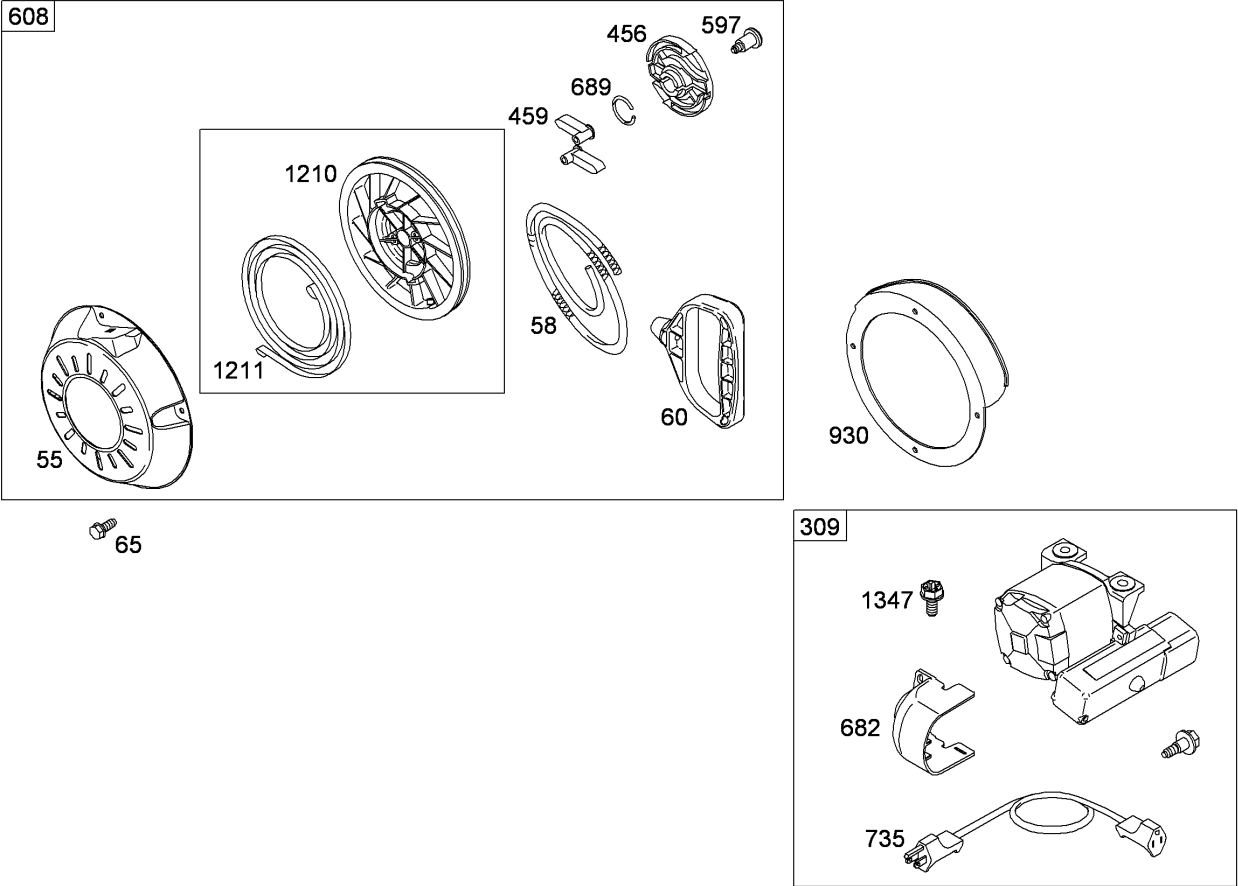 


Assemblies include all parts shown in frames

Rewind Starter and Starter Motor Assembly

Briggs and Stratton 15D104-0113-E8


Ref	Part No.	Qty.	Description				
255	696710	1	Housing-Starter, Rewind				
258	693389	1	Rope-Starter				
260	699334	1	Grip-Starter Rope				
265	699228	1	Screw (Rewind Starter)				
2309	793667	1	Motor-Starter				
2456	692299	1	Plate-Friction, Pawl				
2459	281505s	1	Ratchet-Pawl				
2597	691696	1	Screw (Pawl Friction Plate)				
2608	699335	1	Starter-Rewind				
2682	698039	1	Shield-Starter				
2689	691855	1	Spring-Friction				
2735	795901	1	Cord-Starter				
2930	696709	1	Guard-Rewind				
21009	790537	1	Screw (Starter Motor)				
21210	498144	1	Pulley And Spring ASM (Pulley)				
21211	498144	1	Pulley And Spring ASM (Spring)				
21347	699200	1	Screw (Starter Shield)				

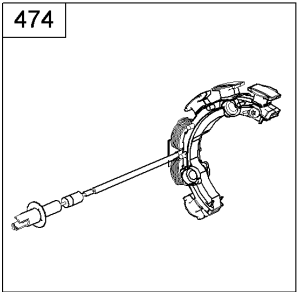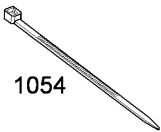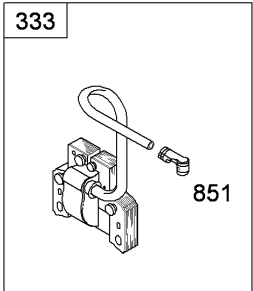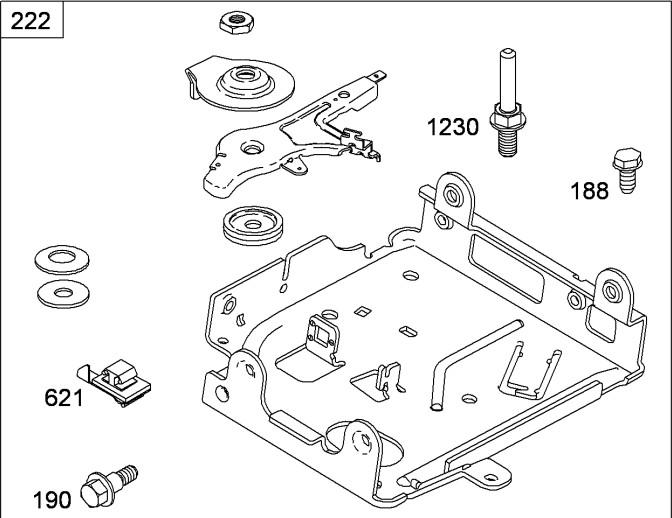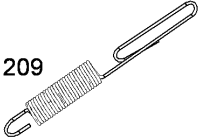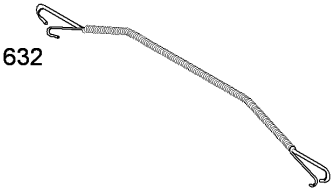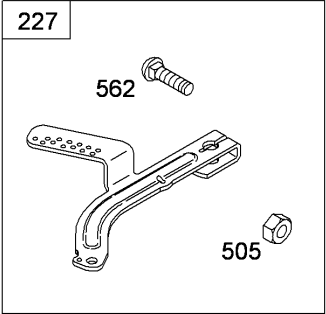       

Assemblies include all parts shown in frames

Governor, Controls and Ignition Assembly
Briggs and Stratton 15D104-0113-E8










Ref	Part No.	Qty.	Description				
2188	699479	1	Screw (Control Bracket)				
2190	699220	1	Screw (Fuel Tank)				
2209	692571	1	Spring-Governor				
2209A	691278	1	Spring-Governor (Platinum)				
2222	793109	1	Bracket-Control				
2227	794367	1	Lever-Control, Governor				
2333	695711	1	Armature-Magneto				
2334	699477	1	Screw (Magneto Armature)				
2474	793640	1	Alternator				
2485	695755	1	Knob-Control				
2505	691251	1	Nut (Governor Control Lever)				
2562	691119	1	Bolt (Governor Control Lever)				
2578	794819	1	Wire ASM				
2621	692310	1	Switch-Stop				
2632	692653	1	Link-Spring, Mechanical Governor				
2851	493880s	1	Terminal-Spark Plug				
21054	280275	1	Tie-Cable				
21119	699772	1	Screw (Alternator)				
21230	699847	1	Stud (Control Bracket)				

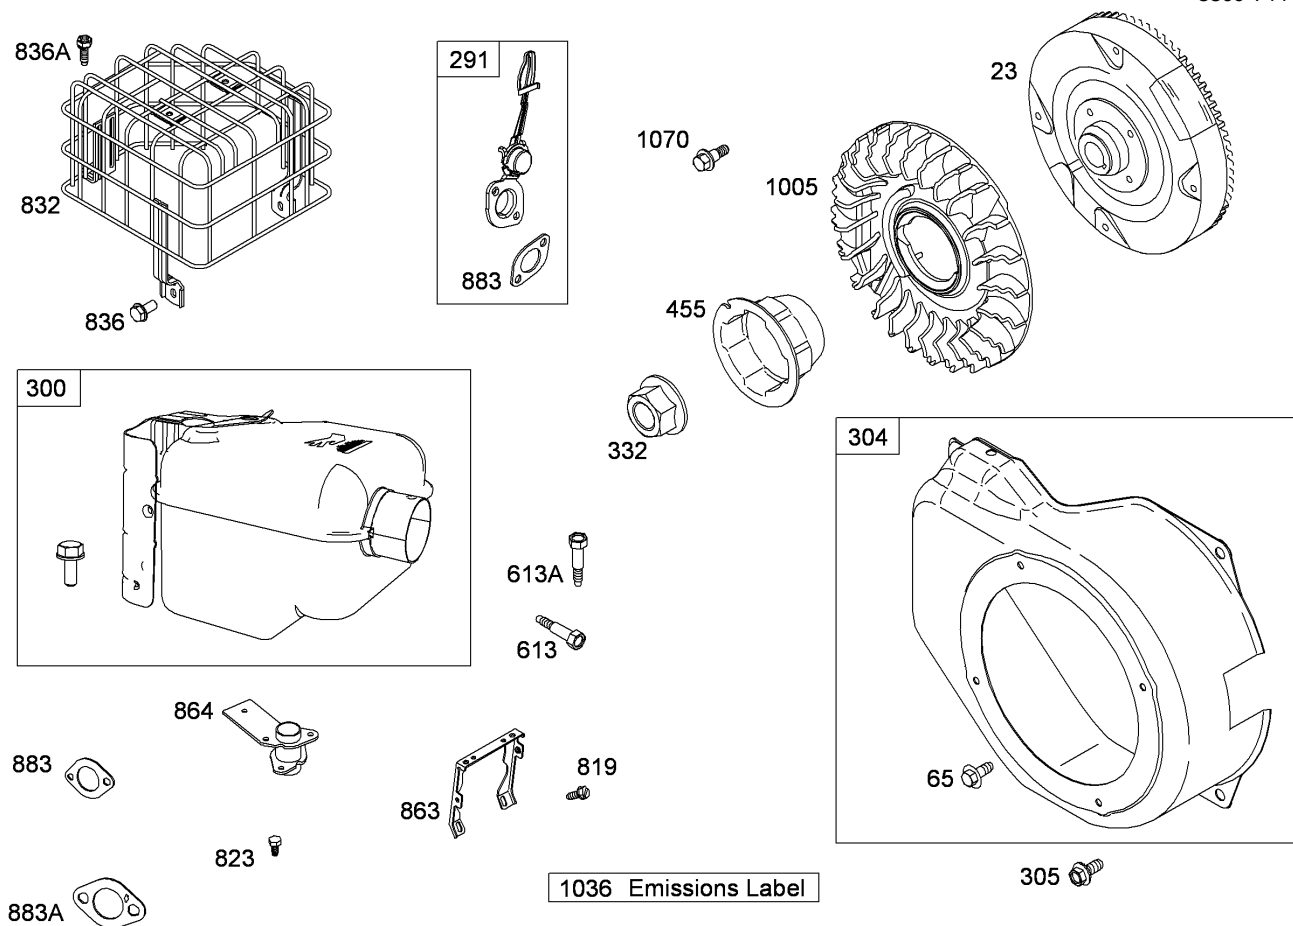 

Assemblies include all parts shown in frames

**Muffler, Blower Housing and Flywheel Assembly
Briggs and Stratton 15D104-0113-E8**



Ref	Part No.	Qty.	Description				
223	699516	1	Flywheel				
265	699228	1	Screw (Rewind Starter)				
2300	794726	1	Muffler				
2304	699598	1	Housing-Blower				
2305	699480	1	Screw (Muffler) (M6)				
2332	792723	1	Nut (Flywheel)				
2455	692591	1	Cup-Flywheel				
2613	697812	1	Screw (Muffler)				
2613A	699480	1	Screw (Muffler) (M6)				
2819	699223	1	Screw (Muffler Bracket)				
2823	791972	1	Screw (Muffler Adapter)				
2832	699313	1	Guard-Muffler				
2836	699209	1	Screw (Muffler Guard)				
2836A	699234	1	Screw (Muffler Guard) (M5)				
2863	699849	1	Bracket-Muffler				
2864	699232	1	Adapter-Muffler				
24883	692237	1	Gasket-Exhaust (Muffler Adapter)				
24883A	691893	1	Gasket-Exhaust (Muffler)				
21005	692592	1	Fan-Flywheel				
121036		1	Label-Emissions				
21070	699201	1	Screw (Flywheel Fan)				

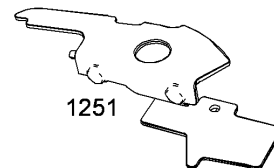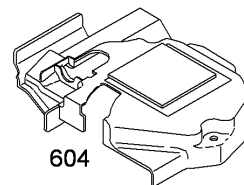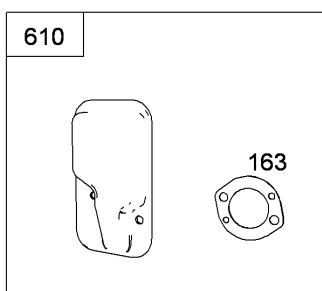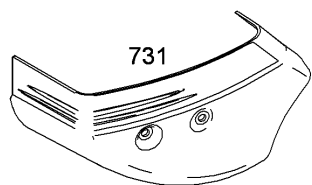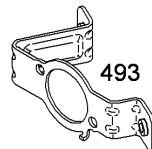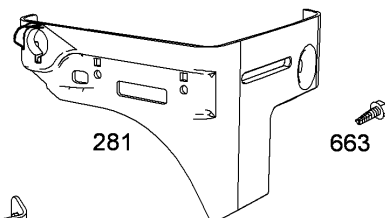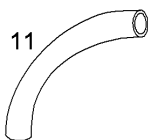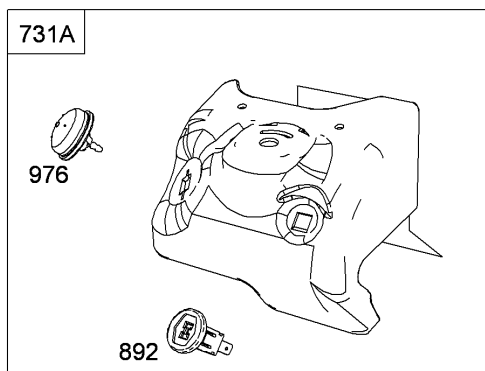         

Assemblies include all parts shown in frames

**Snow Hood, Snow Shield and Panel
Briggs and Stratton 15D104-0113-E8**


Ref	Part No.	Qty.	Description				
211	695745	1	Tube-Breather				
213163	696024	1	Gasket-Air Cleaner				
2281	793122	1	Panel-Control				
2318	690370	1	Screw (Mounting Bracket)				
2493	695744	1	Bracket-Mounting				
2528	793006	1	Hose-Primer				
2604	793134	1	Cover-Control				
2610	794614	1	Arrester-Intake				
2663	699206	1	Screw (Control Panel)				
2731	794703	1	Hood-Snow				
2731A	794704	1	Hood-Snow				
2892	791944	1	Switch-Key				
2976	790221	1	Primer-Carburetor				
2990	794696	1	Key Set				
21196	696692	1	Screw (Snow Hood)				
21196A	699854	1	Screw (Snow Hood)				
21251	794702	1	Shield-Snow				
21252	699234	1	Screw (Snow Shield)				

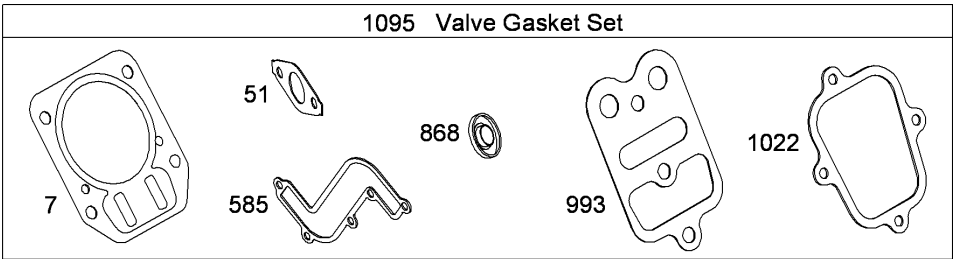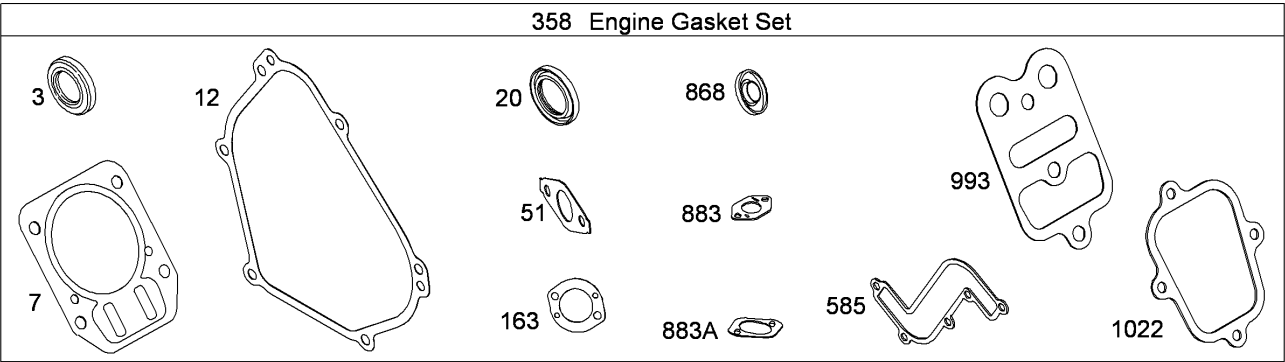  

Assemblies include all parts shown in frames

Engine and Valve Gasket Sets
Briggs and Stratton 15D104-0113-E8

Ref	Part No.	Qty.	Description				
243	299819s	1	Seal-Oil (Magneto Side)				
247	791716	1	Gasket-Head, Cylinder				
5							
2412	699485	1	Gasket-Cover, Crankcase				
2420	692550	1	Seal-Oil (PTO Side)				
2351	791718	1	Gasket-Intake				
45							
23163	696024	1	Gasket-Air Cleaner				
4							
2358	791797	1	Engine Gasket Set				
24585	791760	1	Cup-Flywheel				
5							
24868	795440	1	Seal-Valve				
5							
24883	692237	1	Gasket-Exhaust (Muffler Adapter)				
24883A	691893	1	Gasket-Exhaust (Muffler)				
24993	694088	1	Gasket-Head Plate, Cylinder				
5							
241022	691890	1	Gasket-Cover, Rocker				
5							
21095	791798	1	Valve Gasket Set				

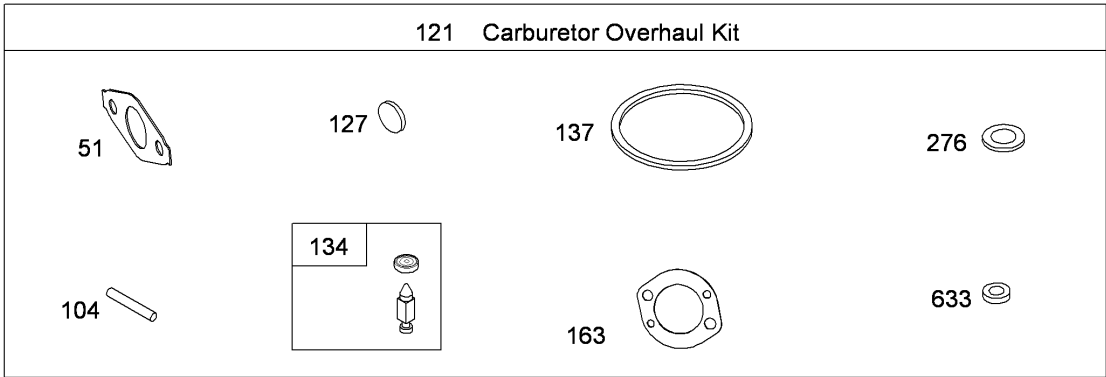 

Assemblies include all parts shown in frames

Carburetor Overhaul Kit

Briggs and Stratton 15D104-0113-E8

Ref	Part No.	Qty.	Description				
2 3 51	791718	1	Gasket-Intake				
4 5							
2 3 104	691242	1	Pin-Hinge, Float				
2 121	792006	1	Carburetor Overhaul Kit				
2 3 127	691739	1	Plug-Welch				
2 3 134	398188	1	Needle And Seat Kit				
2 3 137	693981	1	Gasket-Bowl, Float				
2 3 163	696024	1	Gasket-Air Cleaner				
4							
2 3 276	271716	1	Washer-Sealing				
2 3 633	691321	1	Seal-Shaft, Choke Throttle				

Attachments and Accessories

For 38624 - Power Max 826 OE Snowthrower

Product Name	Model/Part
Tire Chain Kit	107-3813
Snow Cab	107-3814
Weight Kit	107-3815
26 Inch Drift Breaker	107-3816

