



Greensmaster® Flex™ 21 Traction Unit

Model No. 04025 - 290000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Frame Assembly	 3	Lubrication Equipment Assembly	 15
Reel Drive Assembly	 4	Cooling Equipment Assembly	 16
Drum Drive and Basket Assembly	 5	Electric Equipment Assembly	 17
Gearbox and Engine Assembly	 6	Control Equipment Assembly	 18
Gearbox Assembly	 7	Carburetor Assembly	 19
Differential Assembly No. 99-2038	 9	Air Filter and Muffler Assembly	 20
Handle Assembly	 10	Fuel Tank and Fuel Valve Assembly	 21
Cylinder and Crankcase Assembly	 12	Starter Assembly	 22
Piston and Crankshaft Assembly	 13	Label Set	 23
Valve and Camshaft Assembly	 14	Attachments and Accessories List	 24


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HS. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- ❶ Not serviced separately

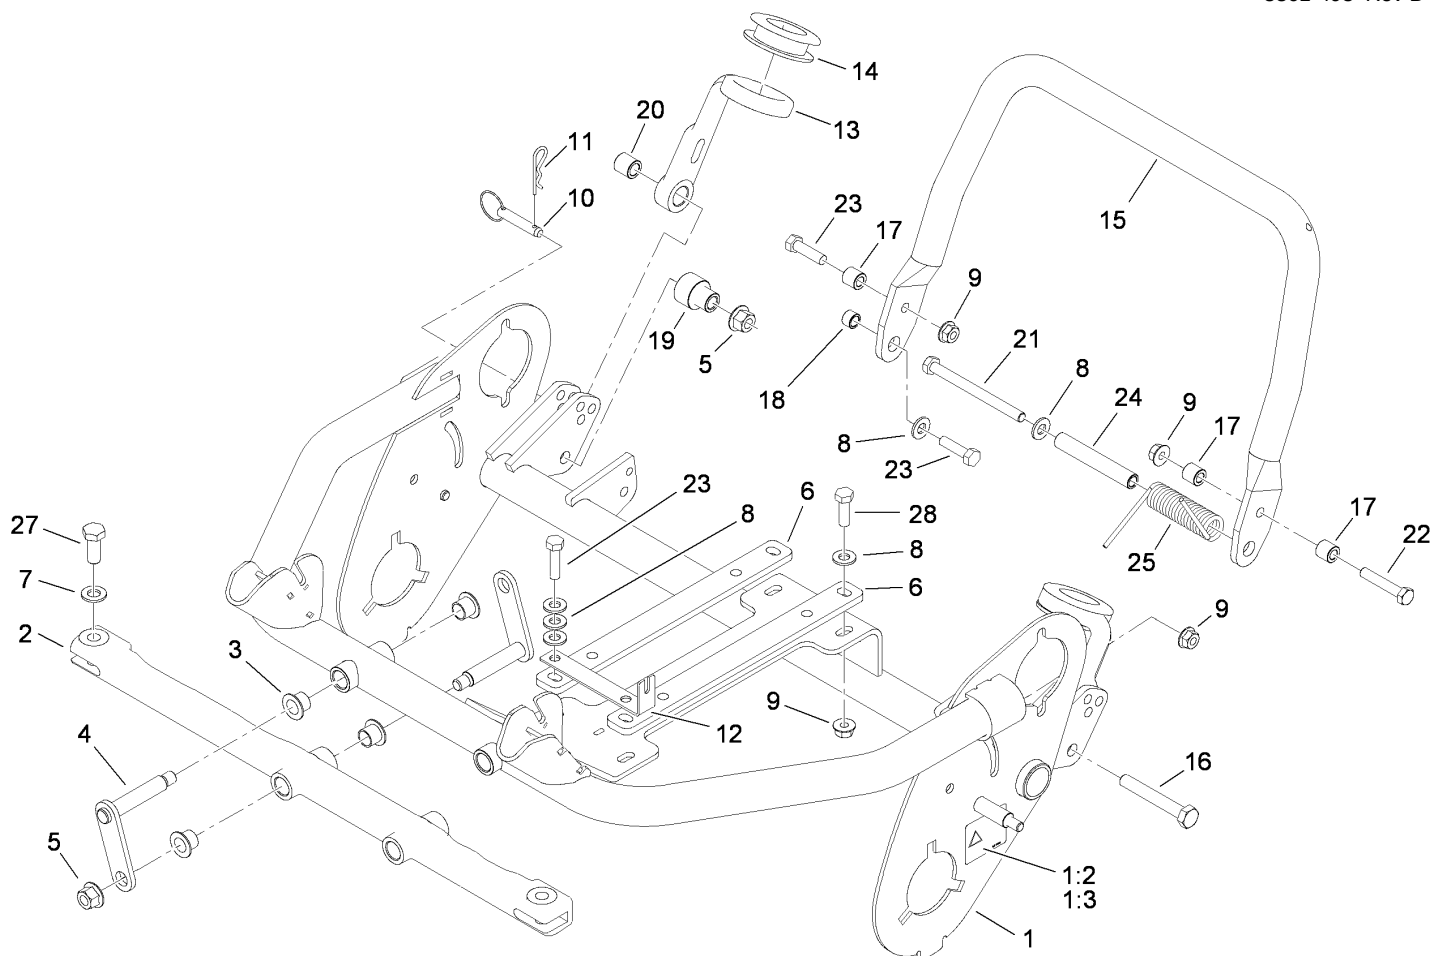

Frame Assembly


Ref	Part No.	Qty.	Description
1	110-2401	1	Frame ASM
1:2	93-9356	2	Decal-Warning, Belt
1:3	93-9389	2	Decal-Warning, Belt (Japan)
2	104-9798-01	1	Front Frame ASM
3	93-2561	8	Bushing-Flange
4	99-2063	4	Link ASM
5	104-2611	6	Nut-HF
6	99-2070-01	2	Base-Engine
7	33095-00	2	Washer-Flat
8	33094-00	8	Washer-Plain
9	117-1350	8	Nut-HF, Lock
10	93-6029	2	Pin-Clevis, Ring
11	3290-467	2	Pin-Hair
12	105-9939	1	Strap-Support, Cable
13	99-3774-03	2	Arm-Handle
14	65-7510	2	Grommet-Handle
15	99-3778-03	1	Kickstand
16	33115-070	2	Screw-HH
17	93-6024	3	Bushing-Support, Handle
18	65-7910	1	Spacer
19	108-3177	2	Spacer-Hub
20	99-2058	2	Spacer-Support, Handle
21	33114-100	1	Screw-HH
22	33114-045	1	Screw-HH

Ref	Part No.	Qty.	Description
23	33114-030	3	Screw-HH
24	104-0502	1	Spacer-Kickstand, Long
25	99-2011	1	Spring-Torsion
27	33115-025	2	Screw-HH
28	33114-025	3	Screw-HH

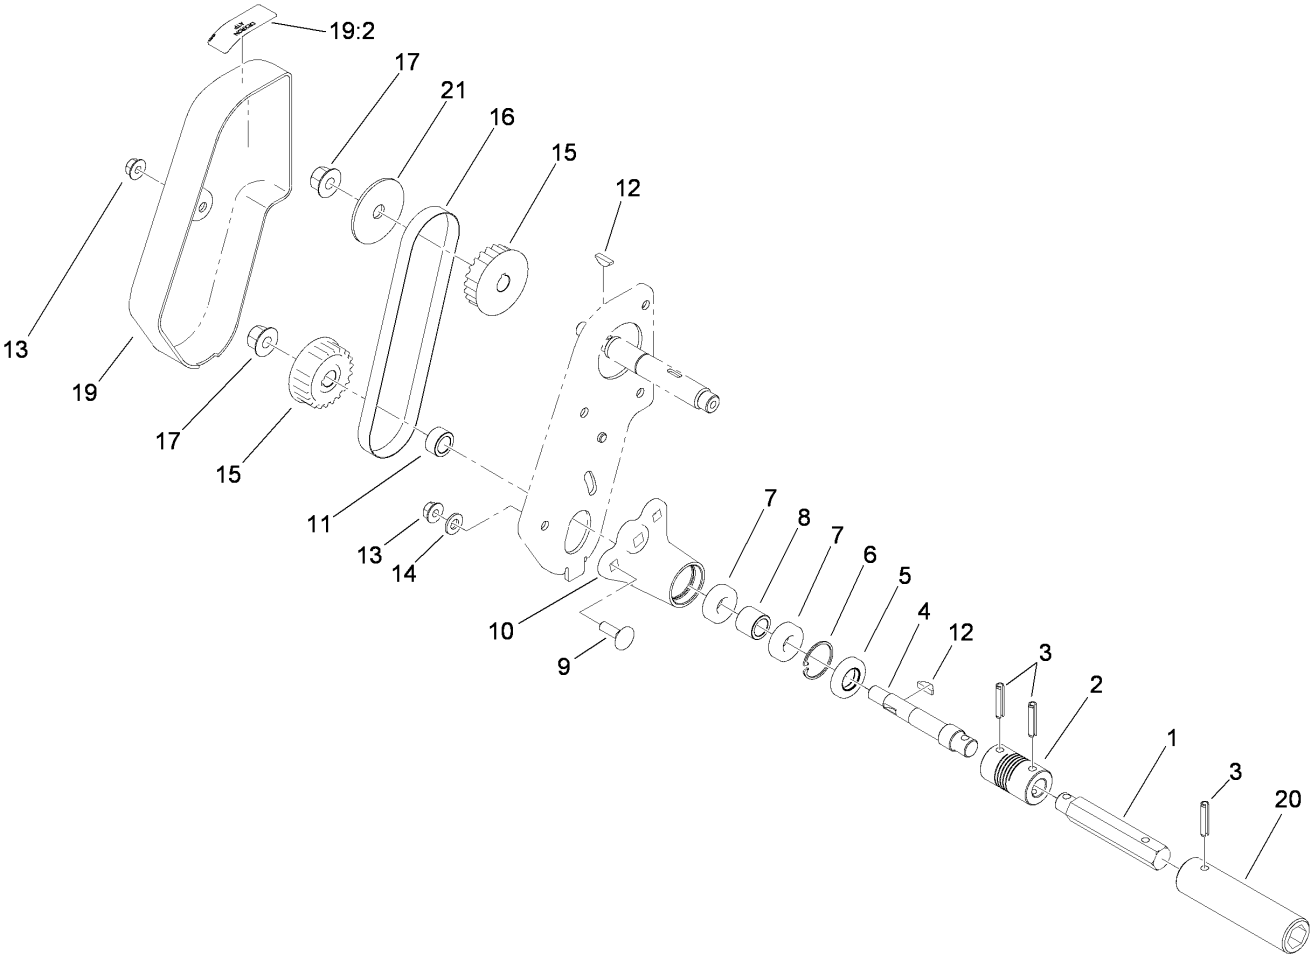

Reel Drive Assembly


Ref	Part No.	Qty.	Description				
1	110-2389	1	Shaft-Hex				
2	99-3757	1	Coupling-Flex				
3	32121-69	3	Pin-Spring				
4	110-2382	1	Shaft-Drive, Reel				
5	107-3205	1	Seal-Oil				
6	32151-51	1	Ring-Retaining				
7	251-336	2	Bearing-Ball				
8	99-2079	1	Spacer				
9	33124-025	2	Screw-CARR				
10	99-2083	1	Housing-Bearing				
11	110-2381	1	Spacer				
12	3257-30	2	Key-Woodruff				
13	117-1350	3	Nut-HF, Lock				
14	33094-00	2	Washer-Plain				
15	107-9044	2	Pulley-22 Tooth				
16	99-2022	1	Belt				
17	104-2610	2	Nut-HF				
19	110-2286	1	Belt Cover ASM				
19:2	105-2411	1	Decal-Oil, HYD				
20	110-2390	1	Tube-Hex				
21	104-0532	1	Washer-Pulley				

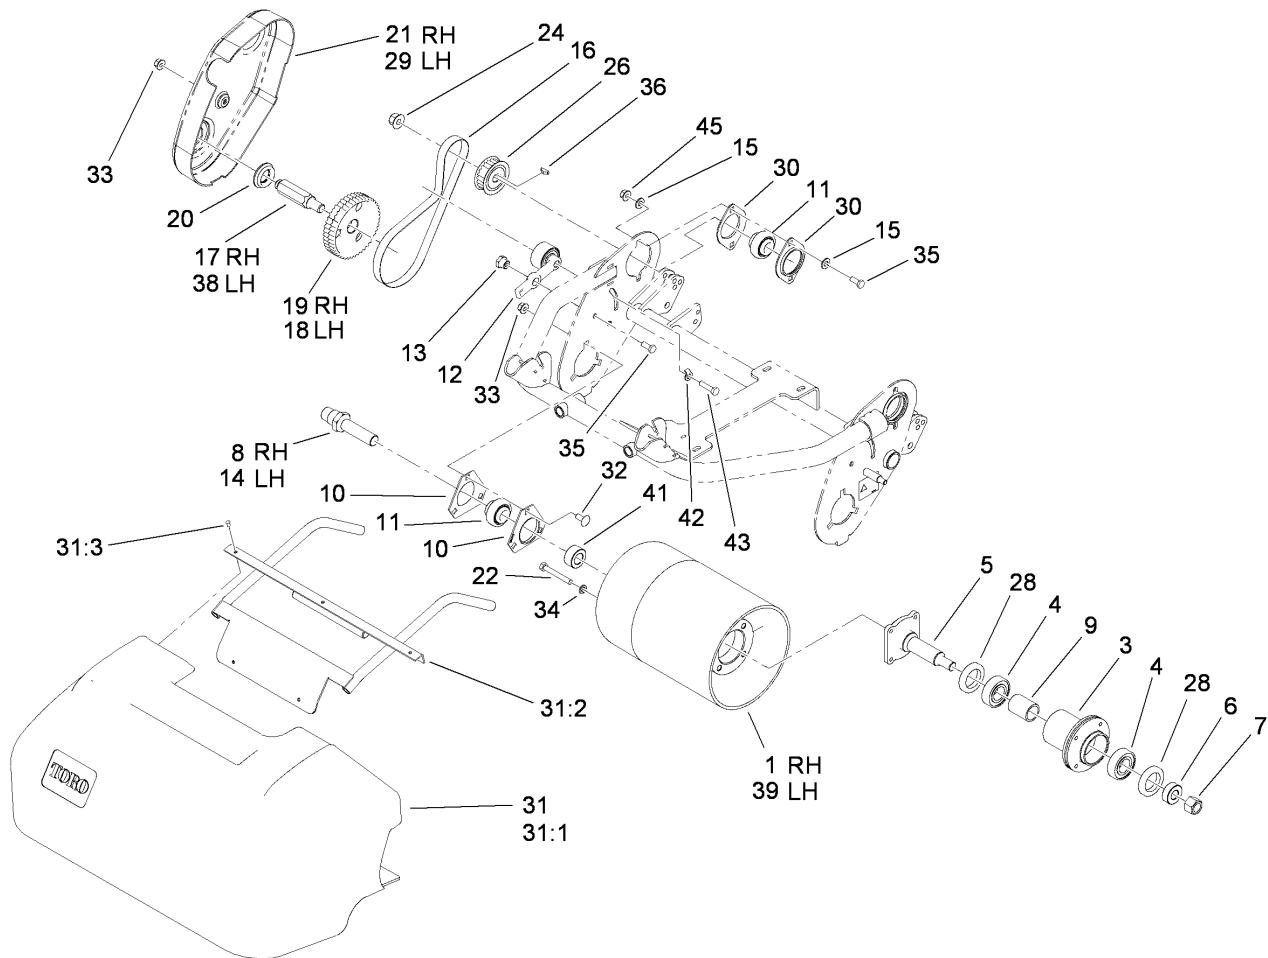

Drum Drive and Basket Assembly


Ref	Part No.	Qty.	Description
1	107-3210	1	Drum-Traction, RH
3	107-3214	1	Hub-Drum
4	251-82	2	Bearing-Ball
5	107-3215	1	Spindle-Drum
6	65-6530	1	Spacer
7	33028-00	1	Nut-Lock, NI
8	107-3206	1	Shaft-Drum, RH
9	65-6520	1	Spacer
10	108-8626	4	Flange-Triangular
11	106-8448	4	Bearing-Race, Extended
12	117-1434	2	Idler ASM
13	105-5770	2	Nut-Shoulder
14	107-3207	1	Shaft-Drum, LH
15	33094-00	8	Washer-Plain
16	117-1353	2	Belt-Traction
17	107-3216	1	Shaft-Wheel, Transport (RH)
18	110-2290	1	Pulley-Driven, Traction (LH)
19	110-2289	1	Pulley-Driven, Traction (RH)
20	104-0533	2	Seal-Cover, Drum
21	105-5326	1	Cover-Drum, RH
22	33114-060	8	Screw-HH
24	115-1115	2	Nut-HHF, Lock
26	110-2315	2	Pulley-Driver, 22 Tooth
28	253-159	2	Seal

Ref	Part No.	Qty.	Description
29	105-5327	1	Cover-Drum, LH
30	700083	4	Flangette-Bearing
31	110-2380	1	Basket With Frame ASM
31:1	105-2439	1	Basket-Grass
31:2	112-9462-03	1	Basket Frame ASM
31:3	3269-28	5	Rivet-Pop
32	33124-020	6	Screw-CARR
33	117-1350	8	Nut-HF, Lock
34	3253-4	8	Washer-Lock
35	33114-020	6	Screw-HH
36	3257-30	2	Key-Woodruff
38	107-3224	1	Shaft-Wheel, Transport (LH)
39	107-3211	1	Drum-Traction, LH
41	106-8417	2	Spacer-Shaft, Drum
42	107-8180	2	Washer-Tab
43	33114-030	2	Screw-HH
45	98-0668	4	Nut

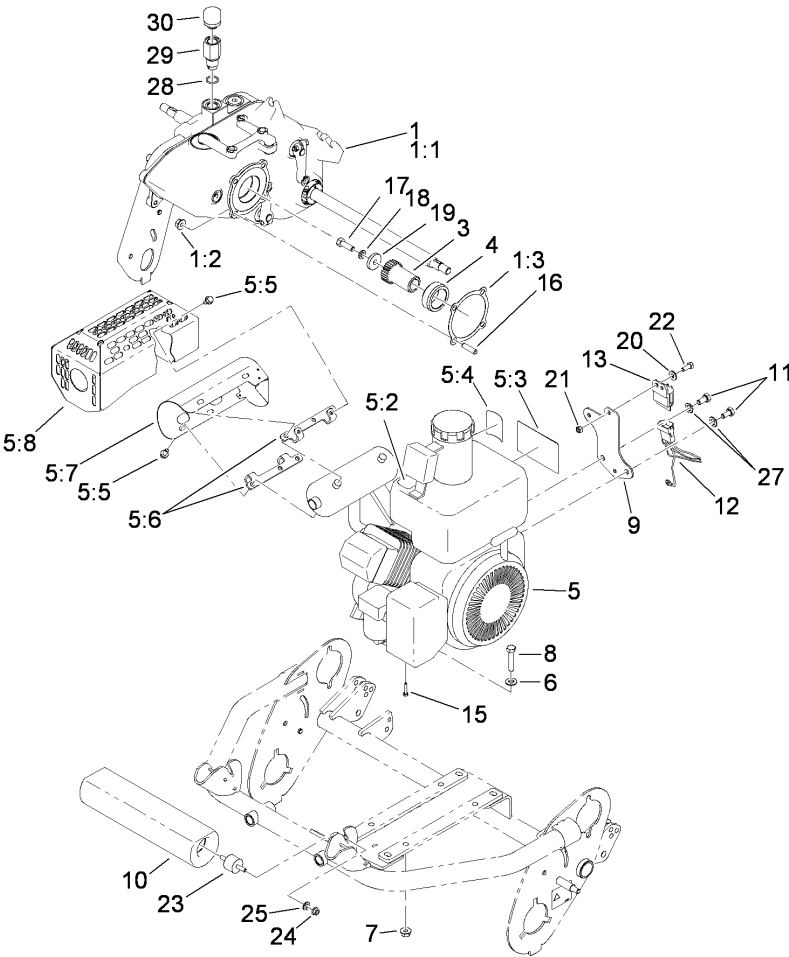

Gearbox and Engine Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	117-1457	1	Gearbox Service ASM	17	3210-5	1	Screw-HH
1:1		1	Gearbox ASM	18	3253-4	1	Washer-Lock
1:2	117-1350	4	Nut-HF, Lock	19	65-8270	1	Washer
1:3	99-2052	1	Gasket-Flange	20	3256-22	1	Washer-Flat
3	110-2445	1	Gear-Engine, 28 Tooth	21	33023-00	1	Nut-Lock
4	99-2001	1	Adapter-Engine	22	33113-016	1	Screw-HH
5	112-9400	1	Engine ASM	23	110-2259	2	Mount-Isolator
5:2	115-1615	1	Decal-Surface, Hot	24	33003-00	2	Nut-HF
5:3	115-1613	1	Decal-Danger	25	107-7601	2	Washer-Tab
5:4	93-9886	1	Decal-Fuel	27	3255-9	2	Washer-Lock
5:5	104-2628	8	Screw-HWH	28	237-79	1	O-Ring
5:6	104-9771	2	Bracket-Guard, Muffler	29	117-1453	1	Adapter-Vent
5:7	112-9360	1	Shield-Muffler, Inner	30	117-1446	1	Vent-Breather
5:8	112-9361-03	1	Guard-Muffler				
6	33094-00	4	Washer-Plain				
7	117-1350	8	Nut-HF, Lock				
8	33114-040	4	Screw-HH				
9	117-1365-03	1	Plate-Harness, Wire				
10	107-8191-01	1	Damper-13Lbs				
11	33114-016	2	Screw-HH				
12	117-1410	1	Harness-Wire				
13	1-323430	1	Module-Interlock				
15	94-9015	1	Screw-HH				
16	108-9446	4	Screw-Set				

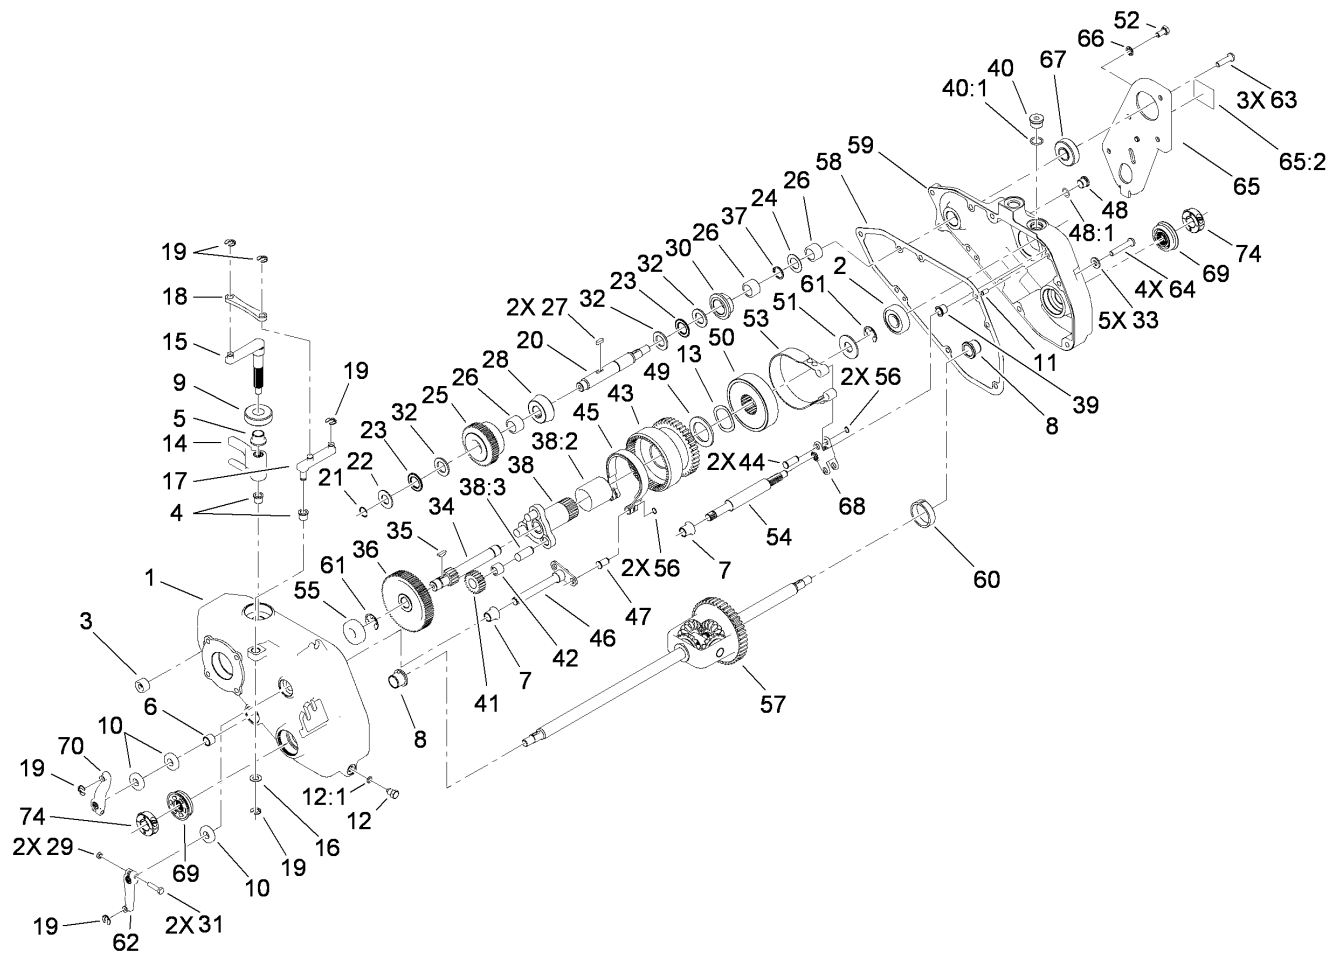

Gearbox Assembly

Ref	Part No.	Qty.	Description
1	117-1450	1	Housing-Gearbox
2	110-7339	1	Bearing-Ball
3	98-4194	1	Bearing-Needle, Caged
4	256-316	2	Bushing
5	256-287	1	Bushing
6	256-1	1	Bushing
7	256-219	2	Bushing
8	99-2062	2	Bushing-Keyed, Flanged
9	99-3842	1	Seal-Oil
10	99-2056	3	Seal-Oil
11	95-0715	2	Pin-Dowel
12	110-2455	1	Fitting-Plug, Magnetic
12:1	237-118	1	O-Ring
13	105-9944	1	Washer-Wave, Spring
14	99-2014	1	Fork-Clutch
15	99-2015	1	Shaft-Fork
16	37-8080	1	Washer-Thrust
17	110-2450	1	Lever-Bellcrank
18	99-3780	1	Link
19	32151-47	6	Ring-Retaining
20	115-1117	1	Shaft-Clutch, Reel
21	99-3805	1	Ring-Retaining
22	99-3806	1	Washer-Thrust
23	99-3836	2	Bearing-Thrust


Ref	Part No.	Qty.	Description
24	99-3837	1	Washer-Thrust
25	110-2444	1	Gear-Clutch, 55 Tooth (Reel Crowned)
26	1523	3	Bearing-Needle
27	99-2059	2	Key
28	107-3232	1	Cone ASM
29	33023-00	2	Nut-Lock
30	110-2459	1	Hub-Plunger
31	33113-025	2	Screw-HH
32	99-3807	3	Washer-Thrust
33	33094-00	5	Washer-Plain
34	107-8128	1	Shaft-Sun
35	3257-30	1	Key-Woodruff
36	110-2442	1	Gear-Traction, 78 Tooth (Crowned)
37	32120-72	1	Ring-Snap
38	110-2439	1	Carrier ASM
38:2	104-0524	1	Bushing-Carrier
38:3	107-9031	3	Pin-Dowel
39	104-9776	1	Bushing-Flanged
40	353-988	1	Plug-Hex
40:1	237-79	1	O-Ring
41	106-4694	3	Gear-Spur
42	48-2060	3	Bearing-Roller

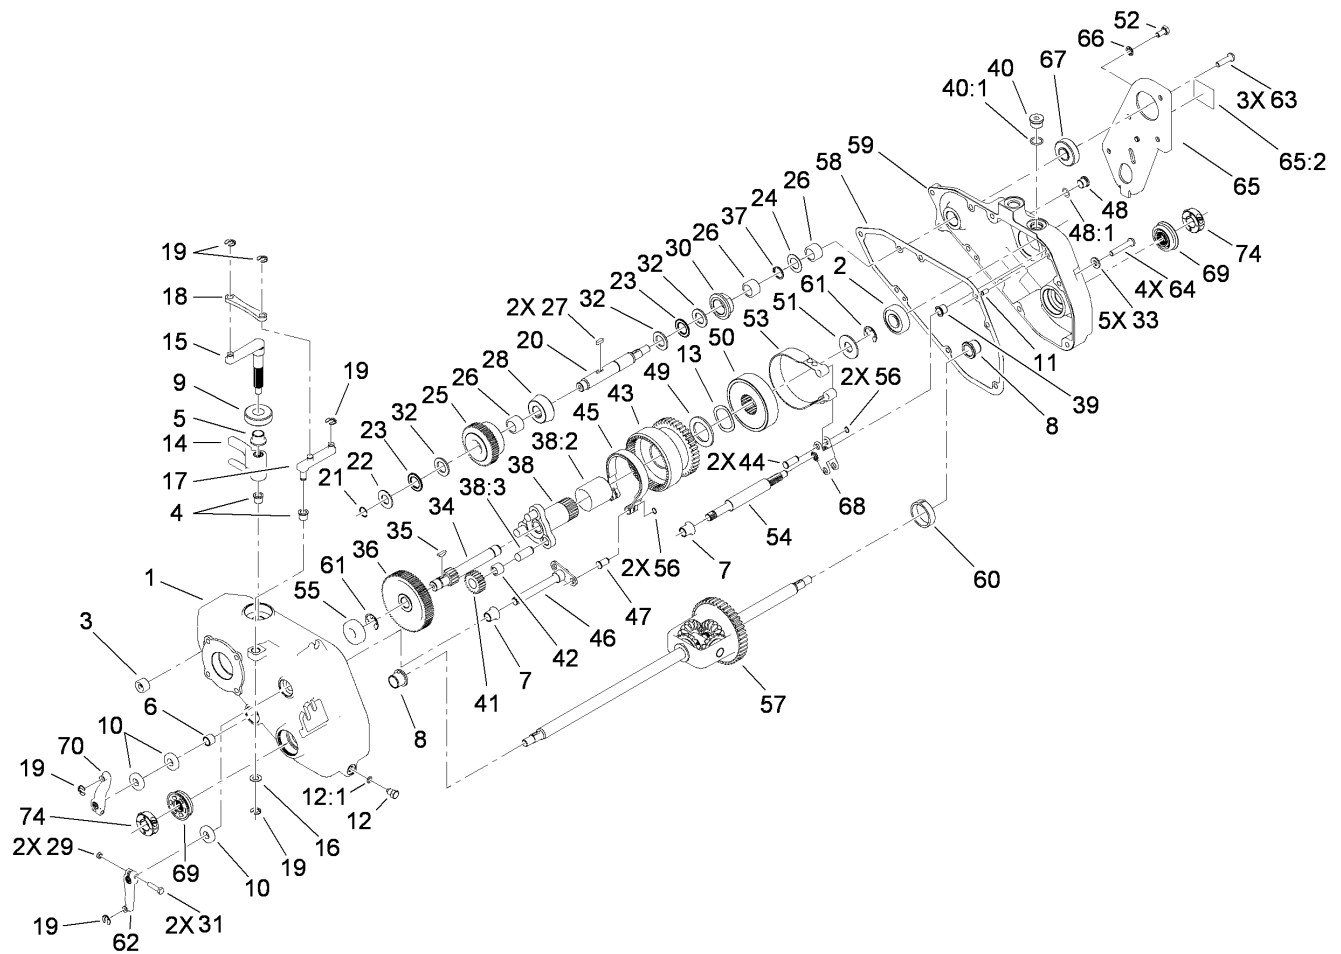

Gearbox Assembly (continued)


Ref	Part No.	Qty.	Description
43	110-2451	1	Gear-Ring, Planetary
44	106-8444	2	Pin-Clevis, Long
45	99-2049	1	Band-Brake
46	99-2020	1	Shaft-Brake
47	106-8445	2	Pin-Clevis, Short
48	353-989	1	Plug-Hex, Hollow
48:1	237-42	1	O-Ring
49	99-2054	1	Washer-Thrust
50	110-2452	1	Drum-Clutch, Traction
51	99-2055	1	Washer-Thrust
52	33114-016	1	Screw-HH
53	107-9042	1	Clutch Band ASM
54	105-9937	1	Shaft-Clutch, Traction
55	251-6	1	Bearing-Ball
56	32120-46	4	Ring-Retaining
57	99-2038	1	Differential ASM
58	117-1452	1	Gasket-Gearbox
59	117-1451	1	Cover-Gearbox
60	99-2061	1	Bushing-Keyed
61	32151-48	2	E-Ring
62	99-3761	1	Lever-Gearbox
63	99-6208	3	Screw-HSH
64	99-6207	4	Screw-HSBH
65	110-2293	1	Drive Plate ASM

Ref	Part No.	Qty.	Description
65:2	93-9356	1	Decal-Warning, Belt
65:2	93-9389	1	Decal-Warning, Belt (Japan)
66	3254-2	1	Washer-Lock, Internal
67	105-2429	1	Seal-Oil
68	105-9938	1	Hub-Clutch, Traction
69	117-1443	2	Seal-Oil
70	110-3451	1	Lever-Gearbox
74	117-1375	2	Collar ASM

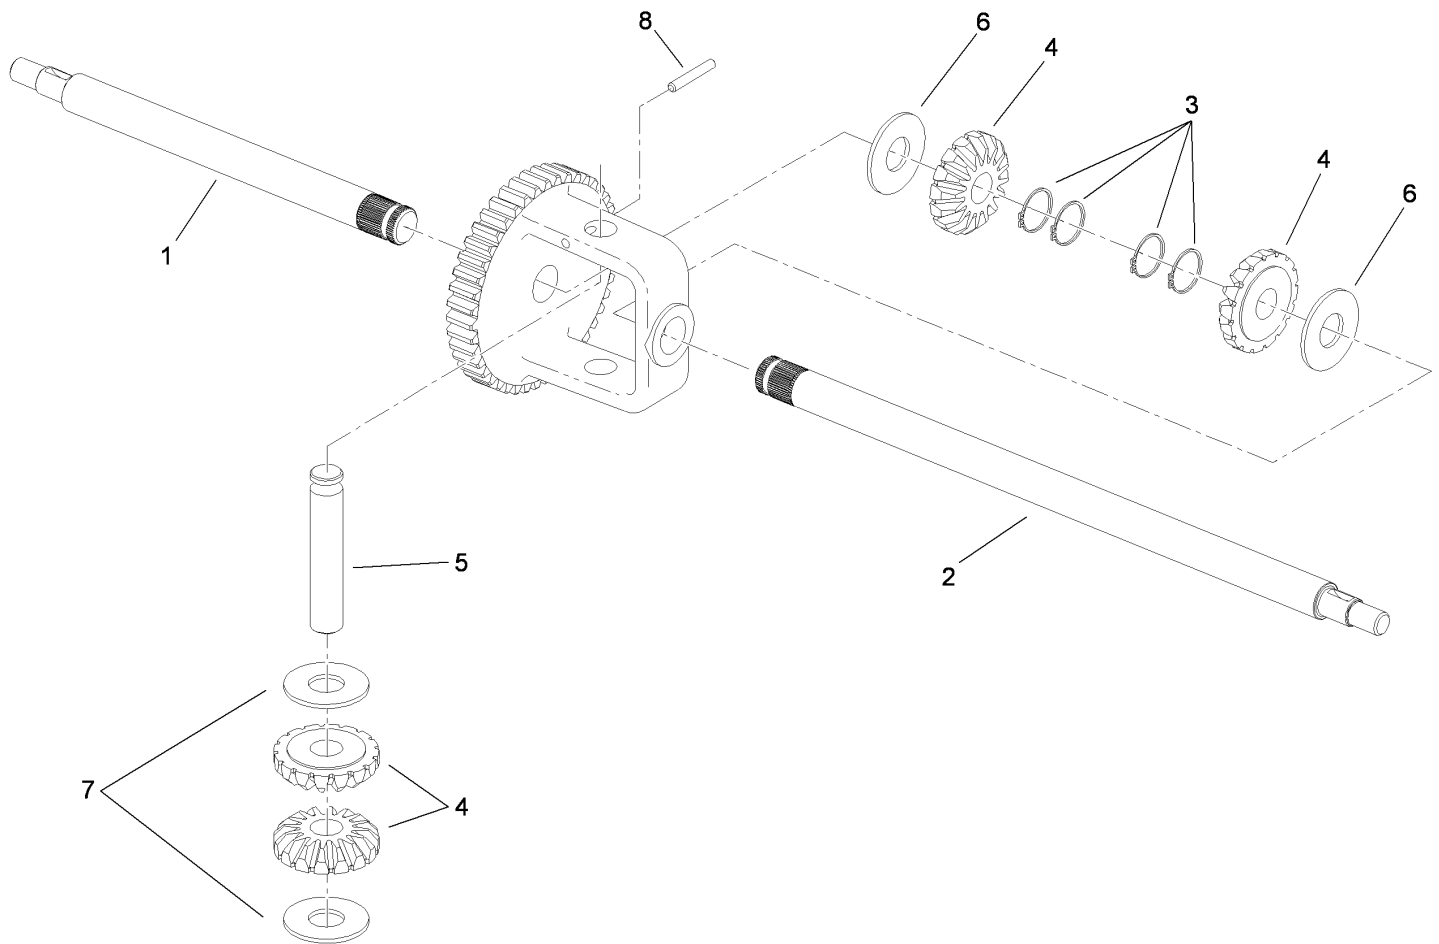

Differential Assembly No. 99-2038


Ref	Part No.	Qty.	Description
1	105-2402	1	Axle (Short)
2	105-2403	1	Axle (Long)
3	95-5746	2	Ring-Retaining
4	105-2405	1	Gear Set-Differential
5	105-2404	1	Pin-Drive
6	95-5745	2	Washer
7	105-2406	2	Washer-Thrust
8	32121-79	1	Pin-Roll

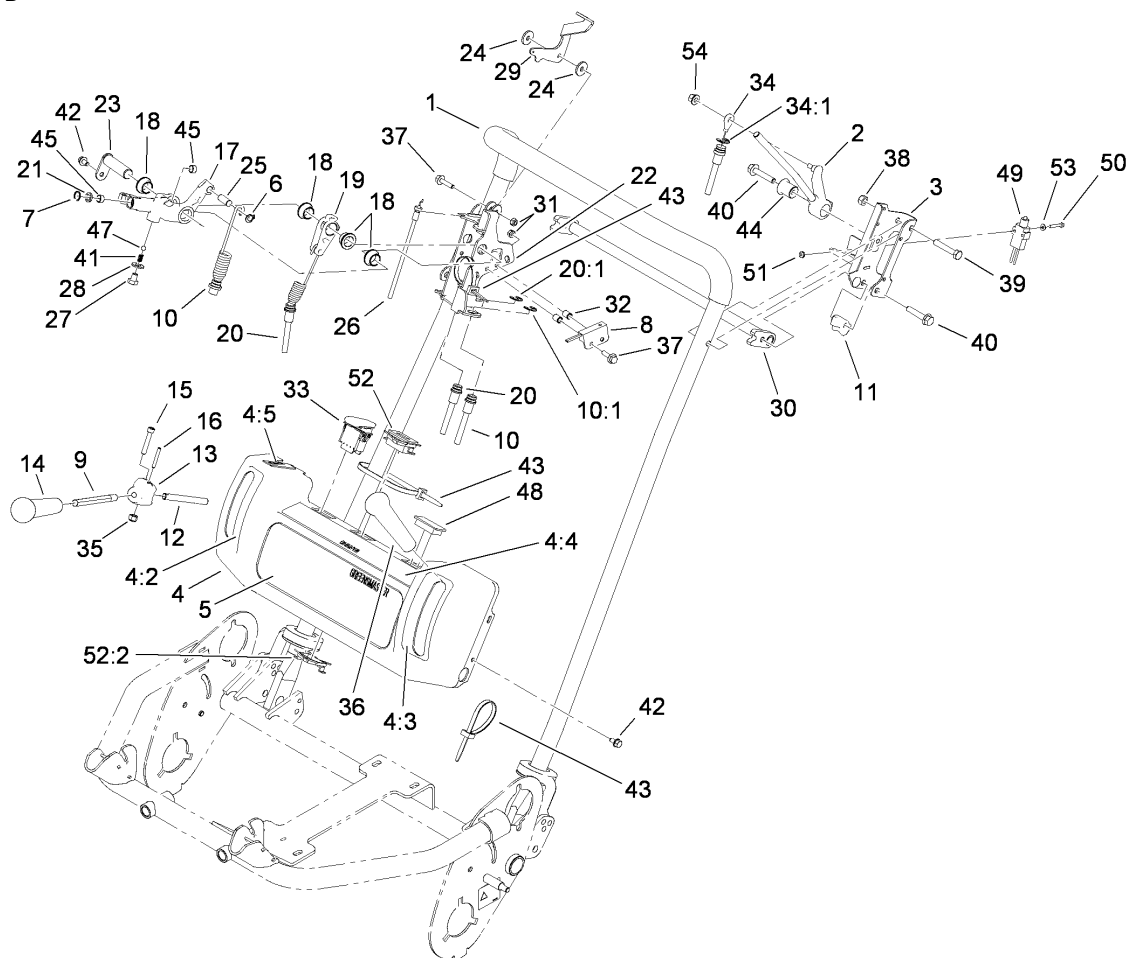

Handle Assembly


Ref	Part No.	Qty.	Description
1	110-2414	1	Handle
2	117-1361	1	Lever-Brake, Console
3	117-1363-03	1	Brake Bracket ASM
4	115-1123	1	Console ASM
4:2	104-2617	1	Decal-Lever, Traction
4:3	104-2618	1	Decal-Lever, Brake
4:4	115-1614	1	Decal-Warning
4:5	93-6085	1	Decal-Throttle
5	105-9916	1	Decal-Console, Main
6	105-2410	1	Ring-Retaining
7	105-5324	1	Ring-Retaining
8	100-1270	1	Switch-Proximity
9	105-5319	1	Rod-Handle
10	105-5328	1	Cable-Clutch, Traction
10:1	32120-47	1	Ring-Retaining, External
11	110-2415	2	Clamp-Handle
12	99-3835	1	Pin
13	104-9761	1	Hub-Mount, Handle
14	104-9760	1	Knob-Black
15	105-5349	1	Screw-HSH, Special
16	32121-51	1	Pin-Roll
17	104-9758	1	Lever-Control, Traction
18	80-1290	4	Bushing
19	99-3830	1	Lever-Reel

Ref	Part No.	Qty.	Description
20	99-3765	1	Cable-Clutch, Reel
20:1	32120-47	1	Ring-Retaining, External
21	105-2407	1	Wiper
22	110-7334-03	1	Control Bracket ASM
23	99-3833	1	Pin-Lever, Reel
24	66-2921	2	Washer-Friction
25	104-9782	1	Pin-Dowel
26	104-2620	1	Cable-Throttle
27	108-8646	1	Screw-HH, Lock
28	33094-00	1	Washer-Plain
29	108-3179	1	Lever-Throttle
30	112-9425	1	Handle-Crossmember
31	33023-00	3	Nut-Lock
32	105-2401	2	Spacer-Cable, Brake
33	112-9420	1	Switch-Engine
34	99-6214	1	Cable-Brake
34:1	32120-47	1	Ring-Retaining, External
35	3296-42	1	Nut-Lock, NI
36	104-9774	1	Knob-Red
37	33103-025	3	Screw-HHF
38	33024-00	2	Nut-Lock
39	33114-045	2	Screw-HH
40	112-9419	3	Screw-HHF, W/Lock
41	105-2443	1	Spring-Detent

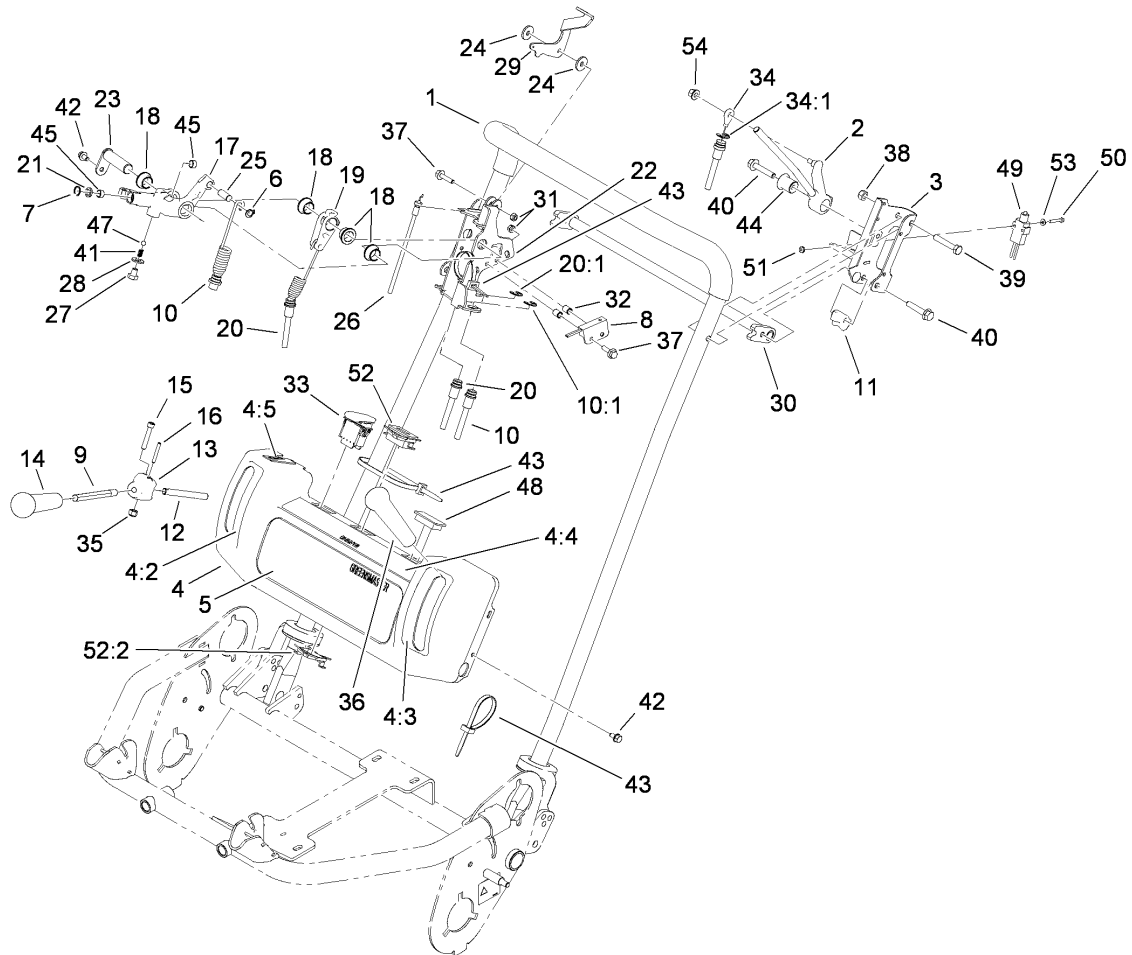


Handle Assembly (continued)

Ref	Part No.	Qty.	Description				
42	104-2628	5	Screw-HWH				
43	3290-378	5	Tie-Cable				
44	112-9317	1	Bushing-Flanged				
45	99-6247	2	Bushing-Bronze				
47	105-2442	1	Ball-Detent				
48	99-7420	1	Plug-Hole				
49	95-8900	1	Switch				
50	32105-9	2	Screw				
51	3296-9	2	Nut-Lock				
52	104-4233	1	Meter-Hour				
52:2	104-4234	1	Clip-Mounting				
53	3269-6	2	Washer-Flat				
54	81-0130	1	Nut-Flange, NI				

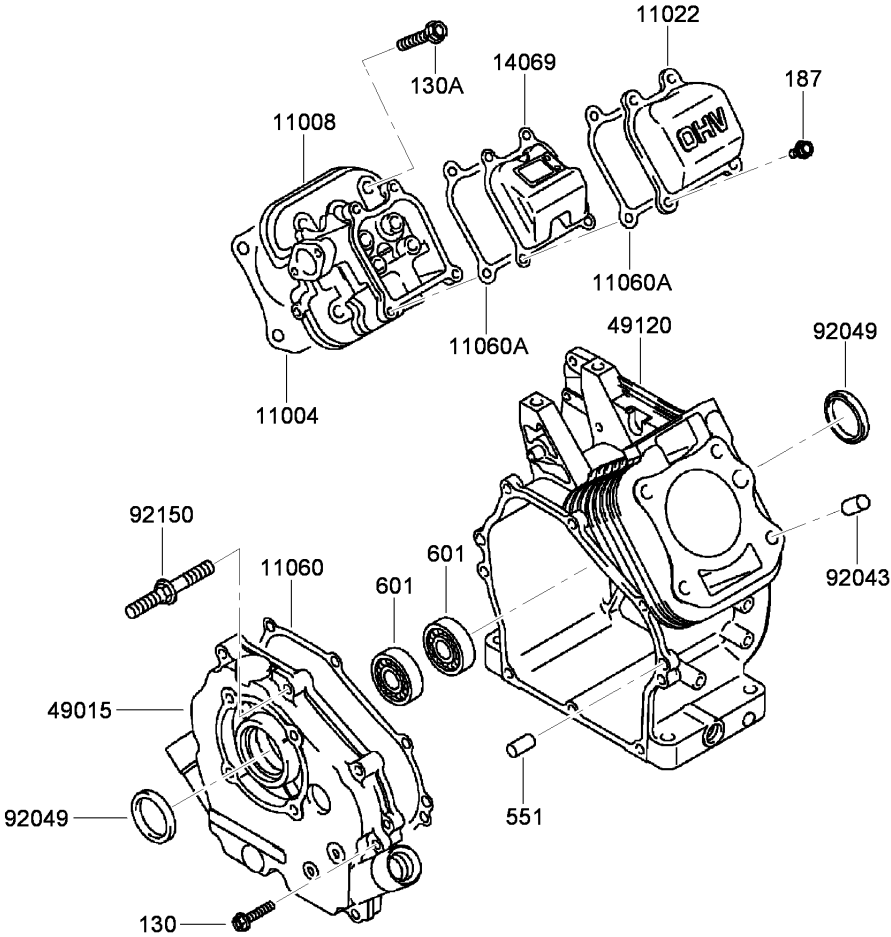


Cylinder and Crankcase Assembly

Ref	Part No.	Qty.	Description				
130	108-2522	7	Bolt-Flanged (6X30)				
130A	115-1759	4	Bolt-Flanged (8X45)				
187	115-1760	4	Bolt-Upset, Wsp (6X16)				
551	93-8516	2	Pin-Dowel (6X12)				
601	93-8517	2	Bearing-Ball				
11004	93-8504	1	Gasket-Head				
11008	115-1757	1	Head-Cylinder				
11022	93-8508	1	Case-Rocker				
11060	93-8525	1	Gasket-Cover, Crankcase				
11060A	93-8509	2	Gasket-Case, Rocker				
14069	93-8510	1	Breather				
49015	93-8697	1	Cover-Crankcase				
49120	93-8515	1	Crankcase				
92043	93-8512	2	Pin				
92049	93-8511	2	Seal-Oil				
92150	93-8524	1	Stud				

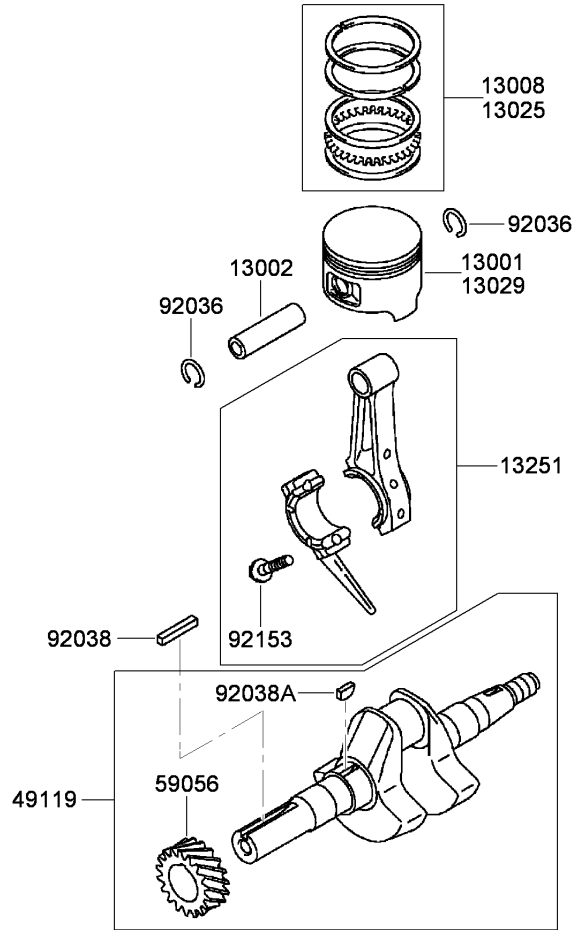


Piston and Crankshaft Assembly

Ref	Part No.	Qty.	Description				
13001	93-8502	1	Piston				
13002	93-8501	1	Pin-Piston				
13008	93-8503	1	Set-Ring, Piston				
13025	94-6837	1	Piston Ring Set (.05Mm)				
13029	94-6836	1	Piston (0.5 O S)				
13251	93-8528	1	Connecting Rod ASM				
49119	93-8696	1	Crankshaft ASM				
59056	94-9043	1	Gear-Helical				
92036	93-8500	2	Ring-Retaining				
92038	93-8526	1	Key				
92038A	93-8698	1	Key				
92153	115-1805	2	Bolt (6X30)				

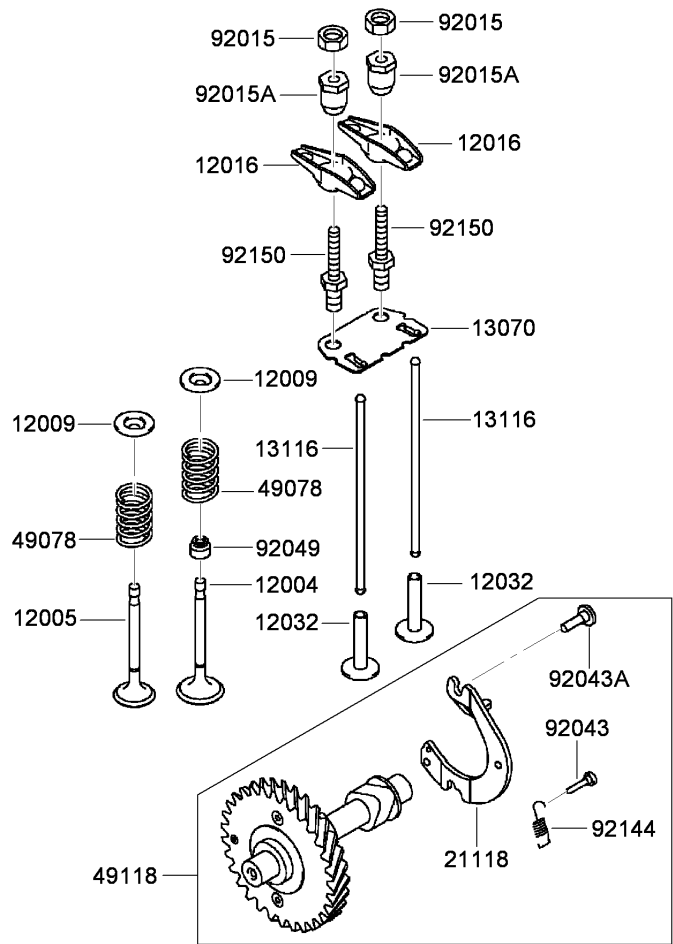


Valve and Camshaft Assembly

Ref	Part No.	Qty.	Description				
12004	93-8532	1	Valve-Intake				
12005	93-8529	1	Valve-Exhaust				
12009	93-8531	2	Retainer-Spring, Valve				
12016	93-8535	2	Arm-Rocker				
12032	93-8539	2	Tappet				
13070	115-1758	1	Guide				
13116	93-8538	2	Rod-Push				
21118	93-8543	1	Decompressor				
49078	115-1763	2	Spring-Valve, Engine				
49118	93-8699	1	Camshaft ASM				
92015	93-8533	2	Nut				
92015A	93-8534	2	Nut				
92043	93-8542	1	Pin				
92043A	93-8540	2	Pin				
92049	115-1762	1	Seal-Oil				
92144	93-8541	1	Spring				
92150	93-8536	2	Bolt				

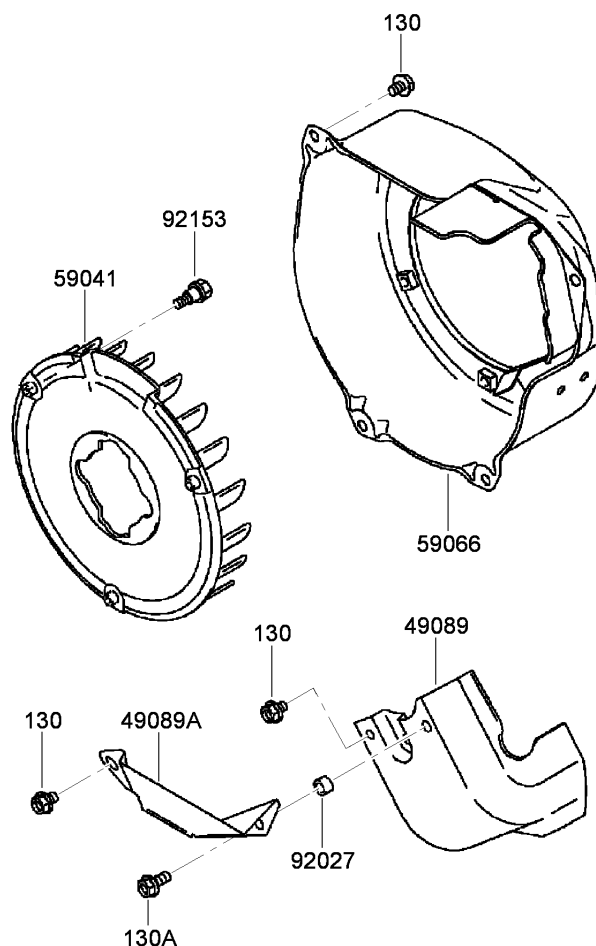


Cooling Equipment Assembly

Ref	Part No.	Qty.	Description
130	115-1765	7	Bolt-Flanged (6X8)
130A	115-1764	1	Bolt-Flanged (6X14)
49089	93-8563	1	Shroud-Engine
49089A	93-8565	1	Shroud-Engine
59041	93-8572	1	Fan
59066	115-1804	1	Housing-Fan
92027	93-8564	1	Collar (6.8X10X6)
92153	115-1766	3	Bolt

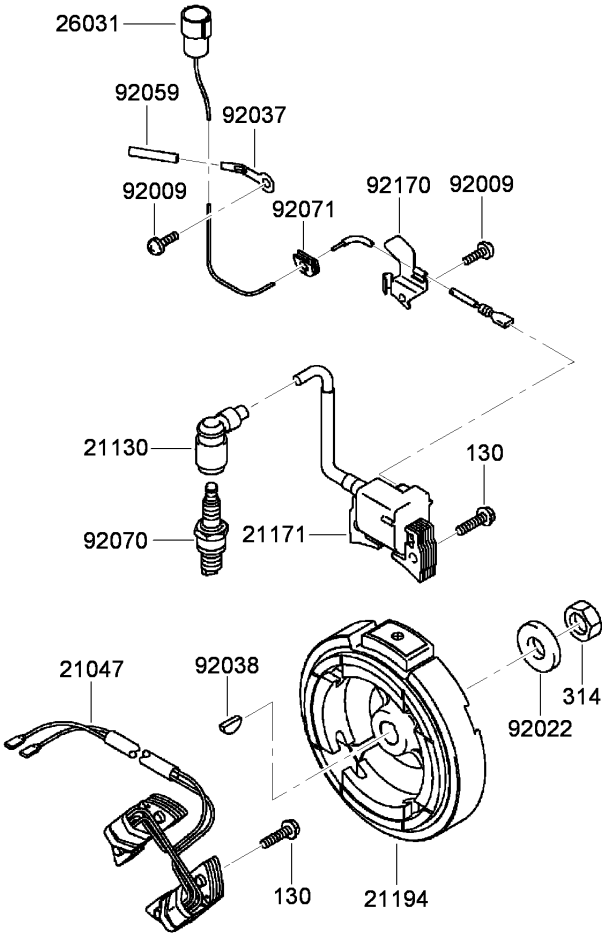

Electric Equipment Assembly


Ref	Part No.	Qty.	Description				
130	100-2610	6	Bolt-Flanged (6X25)				
314	115-1845	1	Nut-Hex, Fine				
21047	99-4267	1	Coil-Lighting				
21130	KW10087	1	Cap-Sparkplug				
21171	94-9031	1	Ignition Coil ASM				
21194	99-6237	1	Flywheel ASM				
26031	115-1767	1	Harness				
92009	95-9716	2	Screw				
92022	93-8569	1	Washer				
92037	115-1771	1	Clamp				
92038	93-8571	1	Key				
92059	115-1768	1	Tube (5X6X75)				
92070	108-2557	1	Sparkplug (Bpr5Es) (Ngk) Solid				
92071	115-1772	1	Grommet				
92170	93-8583	1	Clamp				

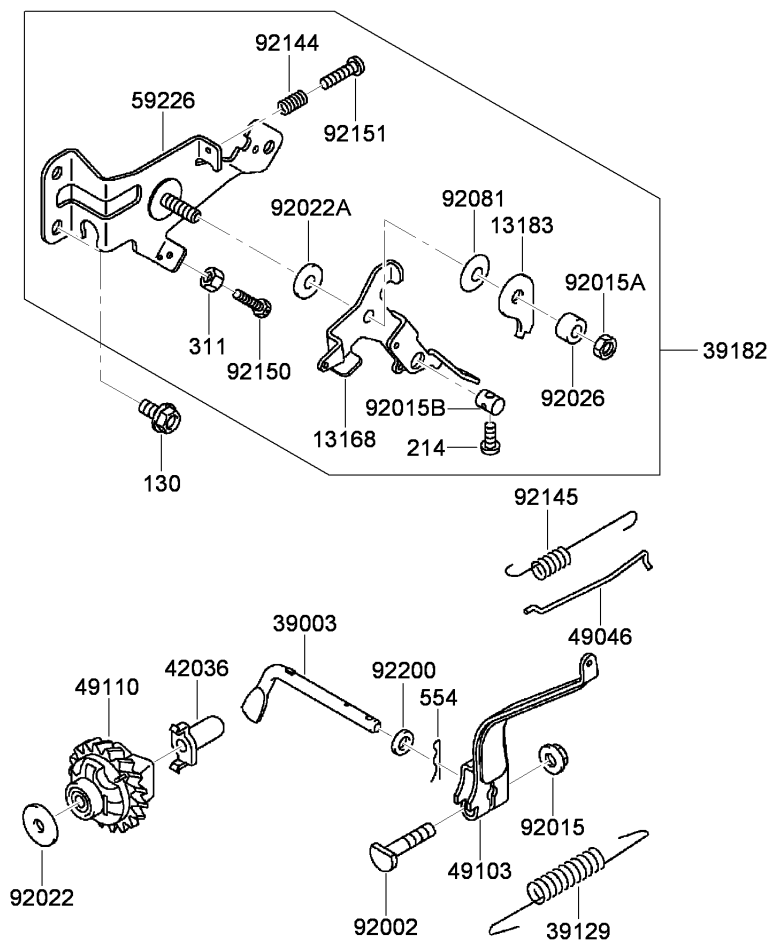

Control Equipment Assembly


Ref	Part No.	Qty.	Description
130	115-1809	2	Bolt-Flanged (6X12)
214	115-1778	1	Screw-Pan (4X14)
311	115-6495	1	Nut-Hex (4Mm)
554	115-8671	1	Pin-Snap (1.2X21.2)
13168	93-8598	1	Lever
13183	93-8592	1	Plate
39003	93-8609	1	Arm-Pivot
39129	115-1803	1	Spring-Governor
39182	115-1754	1	Control Panel ASM
42036	108-2567	1	Sleeve
49046	115-1811	1	Rod-Governor
49103	93-8603	1	Arm-Governor
49110	115-1812	1	Governor ASM
59226	115-1773	1	Panel-Control
92002	93-8606	1	Bolt (6X28)
92015	93-8631	1	Nut
92015A	93-8595	1	Nut
92015B	93-8597	1	Nut
92022	94-6842	1	Washer (6.2X20X0.5)
92022A	93-8590	1	Washer
92026	115-1776	1	Spacer
92081	115-1775	1	Spring
92144	93-8588	1	Spring
92145	115-1810	1	Spring

Ref	Part No.	Qty.	Description
92150	115-1813	1	Bolt
92151	115-1774	1	Bolt (4X22)
92200	93-8608	1	Washer (6.5X11.5X2.0)

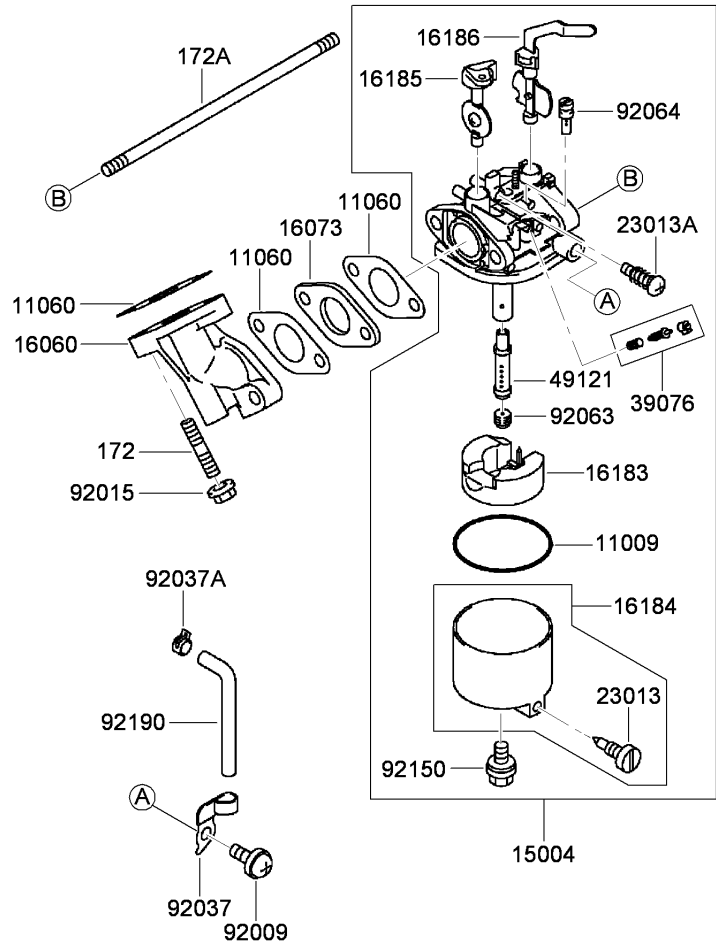


Carburetor Assembly

Ref	Part No.	Qty.	Description				
172	93-8632	2	Bolt-Stud (6X18)				
172A	115-1814	1	Bolt-Stud (6X73)				
11009	93-8624	1	Gasket				
11060	93-8613	3	Gasket				
15004	115-1869	1	Carburetor ASM				
16060	93-8633	1	Pipe-Intake				
16073	94-9048	1	Insulator				
16183	94-6844	1	Float ASM				
16184	93-8625	1	Float Chamber ASM				
16185	94-9033	1	Throttle Valve ASM				
16186	115-1870	1	Choke Valve ASM				
23013	93-8626	1	Screw ASM				
23013A	93-8619	1	Screw ASM				
39076	94-9034	1	Limiter				
49121	115-1871	1	Nozzle-Main				
92009	94-6845	1	Screw				
92015	93-8631	2	Nut				
92037	94-6846	1	Clamp				
92037A	93-8629	1	Clamp				
92063	94-9036	1	Jet-Main (No.65)				
92064	94-9037	1	Jet-Pilot (No.40)				
92150	93-8627	1	Bolt				
92190	93-8630	1	Tube				

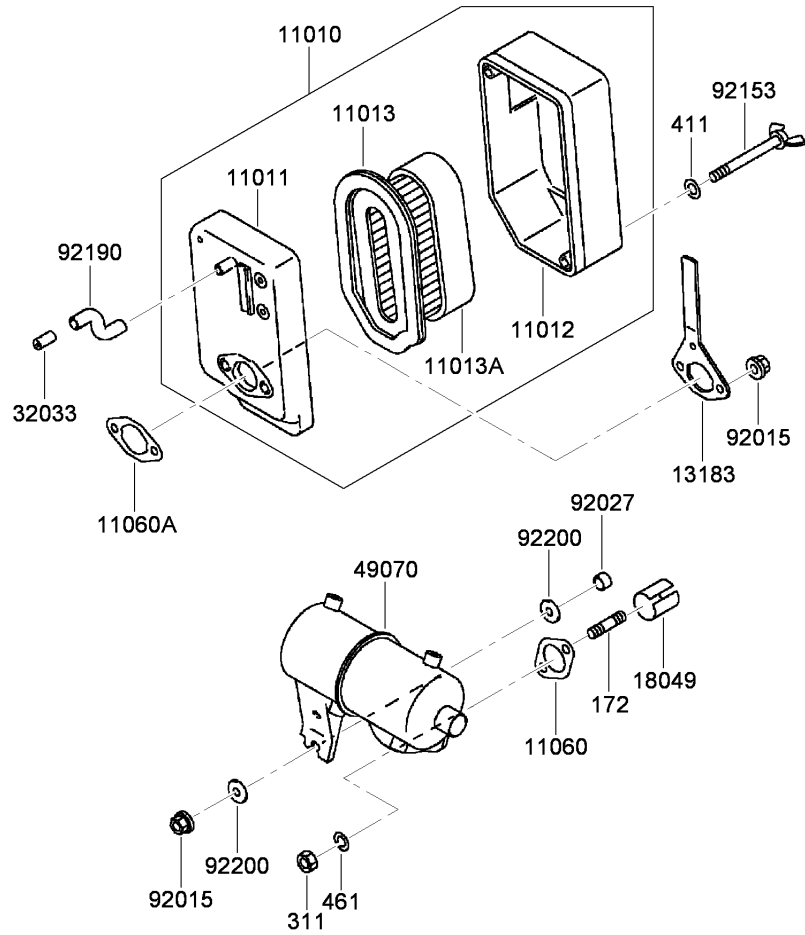

Air Filter and Muffler Assembly


Ref	Part No.	Qty.	Description				
172	115-1819	2	Bolt-Stud (6X16)				
311	93-8656	2	Nut-Hex (6Mm)				
411	115-1802	2	Washer-Plain				
461	115-1801	2	Washer-Spring				
11010	115-1872	1	Air Filter ASM				
11011	115-1873	1	Case-Filter, Air				
11012	93-8638	1	Cap-Filter, Air				
11013	93-8636	1	Element-Filter, Air				
11013A	93-8637	1	Element-Filter, Air				
11060	93-8654	1	Gasket-Muffler				
11060A	93-8657	1	Gasket-Filter, Air				
13183	93-8642	1	Plate-Filter, Air				
18049	93-8652	1	Pipe-Exhaust				
32033	93-8658	1	Pipe				
49070	115-1874	1	Muffler				
92015	93-8631	3	Nut				
92027	93-8651	1	Collar				
92153	93-8640	2	Bolt				
92190	93-8659	1	Tube				
92200	93-8650	2	Washer (.5X18X2.0)				

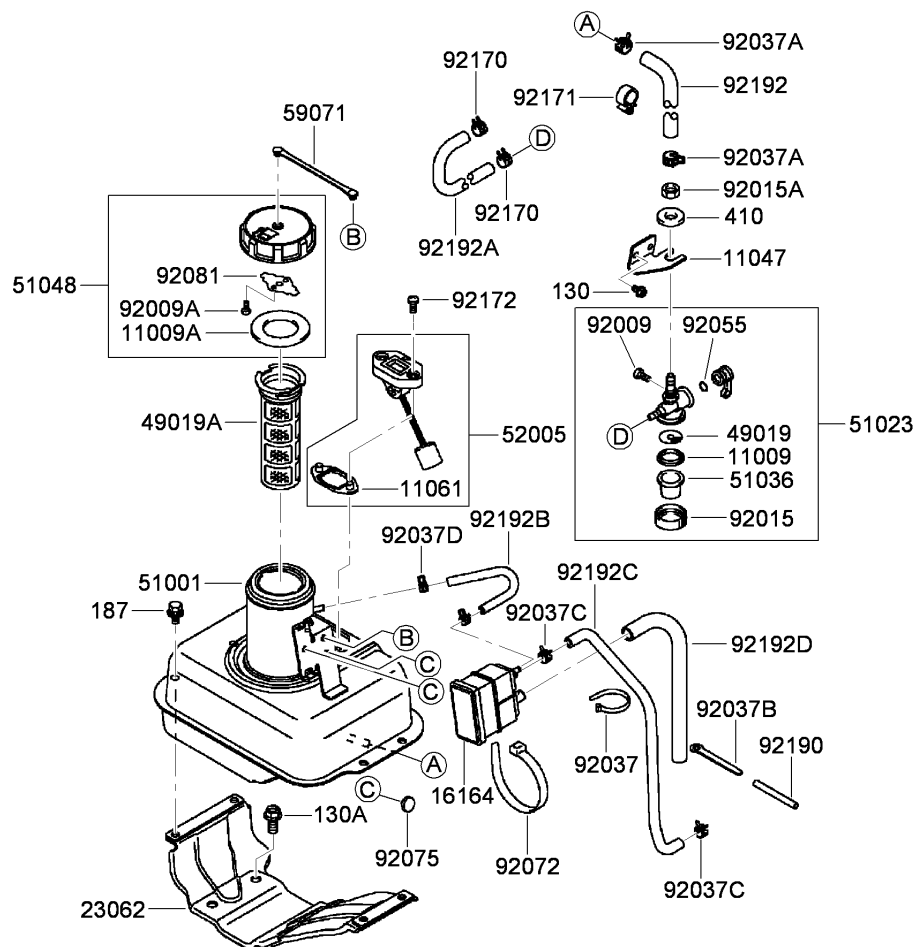

Fuel Tank and Fuel Valve Assembly

Ref	Part No.	Qty.	Description
130	115-1864	2	Bolt-Flanged (5X8)
130A	115-1867	4	Bolt-Flanged (8X18)
187	115-1760	4	Bolt-Upset, Wsp (6X16)
410	115-1885	1	Washer-Plain, Small
11009	93-8673	1	Gasket
11009A	93-8662	1	Gasket
11047	93-8681	1	Bracket
11061	104-2384	1	Gasket-Gauge, Fuel
16164	115-1859	1	Canister
23062	104-2383	1	Bracket-Tank
49019	94-6849	1	Filter-Tapper, Fuel
49019A	94-6826	1	Filter-Fuel
51001	115-1858	1	Fuel Tank ASM
51023	93-8669	1	Fuel Tapper ASM
51036	93-8674	1	Cup-Tapper, Fuel
51048	115-1857	1	Tank Cap ASM
52005	93-8685	1	Gauge-Fuel
59071	115-1856	1	Joint
92009	93-8670	1	Screw
92009A	93-8661	2	Screw
92015	93-8675	1	Nut
92015A	94-9042	1	Nut
92037	115-1855	1	Clamp
92037A	115-1861	2	Clamp-Clip, Hose

Ref	Part No.	Qty.	Description
92037B	115-1854	1	Clamp
92037C	93-8664	2	Clamp
92037D	93-8676	2	Clamp
92055	93-8671	1	O-Ring
92072	115-1853	1	Band
92075	115-1852	2	Damper
92081	93-8663	1	Spring
92170	115-1865	2	Clamp
92171	115-1862	1	Clamp
92172	115-1860	2	Screw (5X12)
92190	115-1851	1	Tube
92192	115-1863	1	Tube (6.2X13.2X200)
92192A	115-1866	1	Tube (4X11X160)
92192B	115-1889	1	Tube
92192C	115-1890	1	Tube
92192D	115-1891	1	Tube

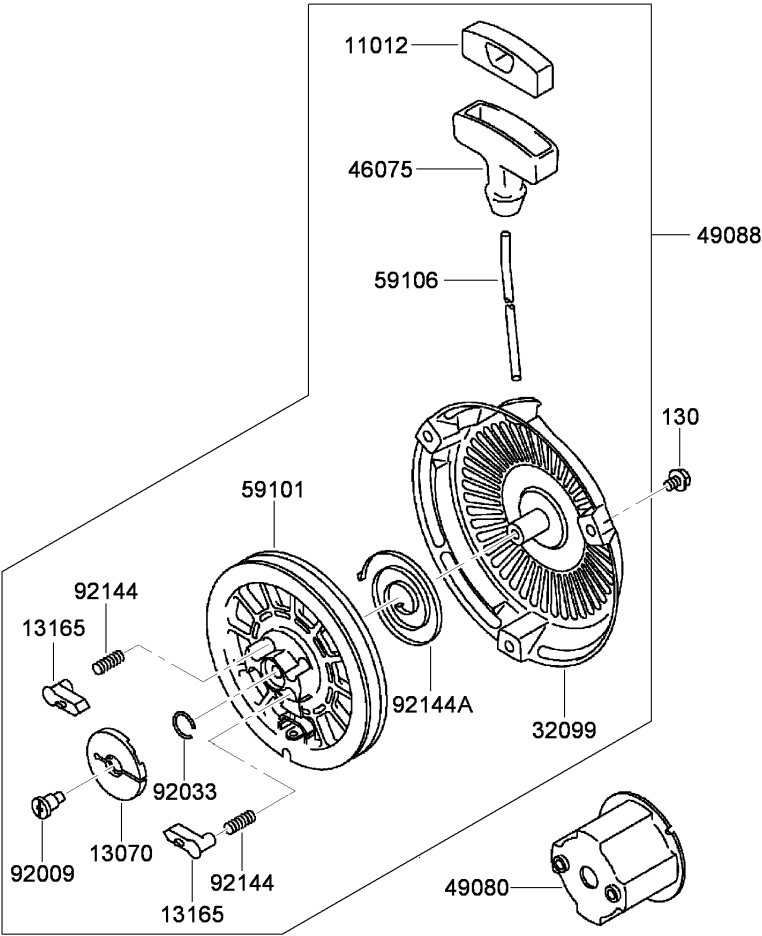

Starter Assembly

Ref	Part No.	Qty.	Description				
130	115-1765	3	Bolt-Flanged (6X8)				
11012	94-9044	1	Cap-Grip				
13070	93-8562	1	Guide-Pawl				
13165	93-8554	2	Pawl-Starter, Recoil				
32099	94-9046	1	Case-Starter, Recoil				
46075	94-9045	1	Grip-Starter, Recoil				
49080	93-8567	1	Pulley-Recoil				
49088	93-8552	1	Recoil Starter ASM				
59101	93-8556	1	Reel-Starter, Recoil				
59106	93-8560	1	Rope (4X1500)				
92009	93-8553	1	Screw				
92033	93-8561	1	Ring-Retaining				
92144	93-8555	2	Spring-Return				
92144A	93-8557	1	Spring				

Attachments and Accessories

For 04025 - Greensmaster Flex 21 Traction Unit

Product Name	Model/Part
Light Kit	04061
Out Front Brush Kit	04119
Wheel Kit	04123
11-Blade Cutting Unit	04202
14-Blade Cutting Unit	04208
Operator Presence Kit	112-9282

NOTES

NOTES

NOTES

