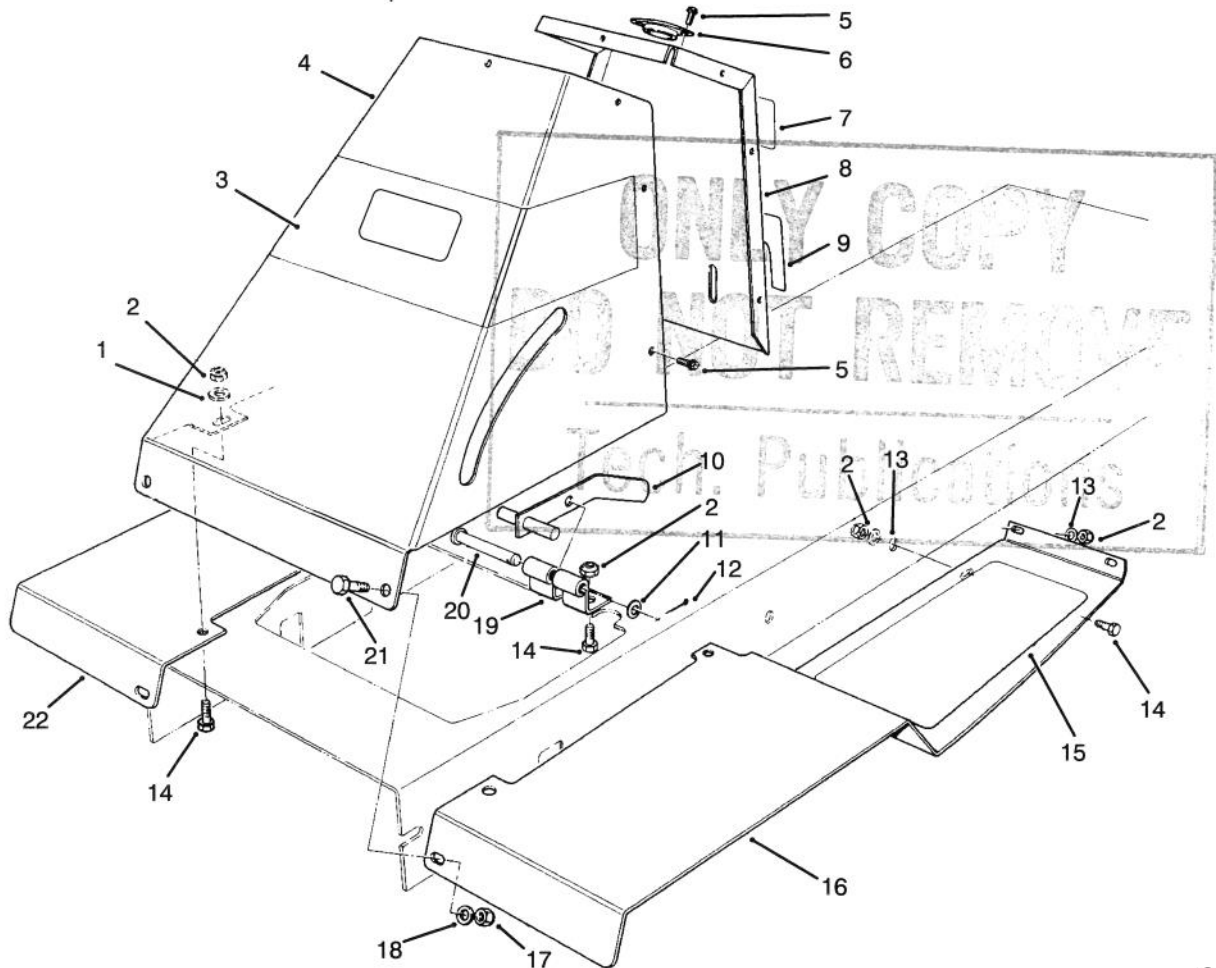



TORO®
MODEL NO. 70100-4900001 & UP
MODEL NO. 70141-4900001 & UP
PARTS
CATALOG
WHEEL HORSE®
10-32 & 12-32 RIDING MOWER


C-1933

FRONT TOWER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3256-35	Washer - Flat	4	14	322-5	Screw - Cap Hex. Hd.	10
2	3296-29	Nut - Lock	14	15	92-7975	Tread - Foot L.H.	1
3	92-7987	Decal - Recycler	1	*	92-7974	Tread - Foot R.H.	1
4	56-7130	Tower - Front	1	16	47-0940	Footrest - L.H.	1
5	32104-76	Screw - Self Tap Acorn Hd.	9	17	3296-42	Nut - Lock	2
6	56-7170	Guide - Shaft, Steering	1	18	3256-22	Washer - Flat	2
7	79-0370	Decal - Danger	1	19	47-2060	Bracket - Brake, Parking	1
8	56-7140	Tower - Rear	1	20	283-52	Pin - Clevis	1
9	56-7810	Decal - Brake, Parking	1	21	321-4	Screw - Cap Hex. Hd.	2
10	47-1290	Brake - Parking	1	22	47-0930	Footrest - R.H.	1
11	3256-24	Washer - Flat	1	*	12-8829	Loose Parts	1
12	3272-6	Pin - Cotter	1	*	12-8819	Loose Parts	1
13	3256-23	Washer - Flat	8			(Includes Steering Wheel)	1

*Not Illustrated

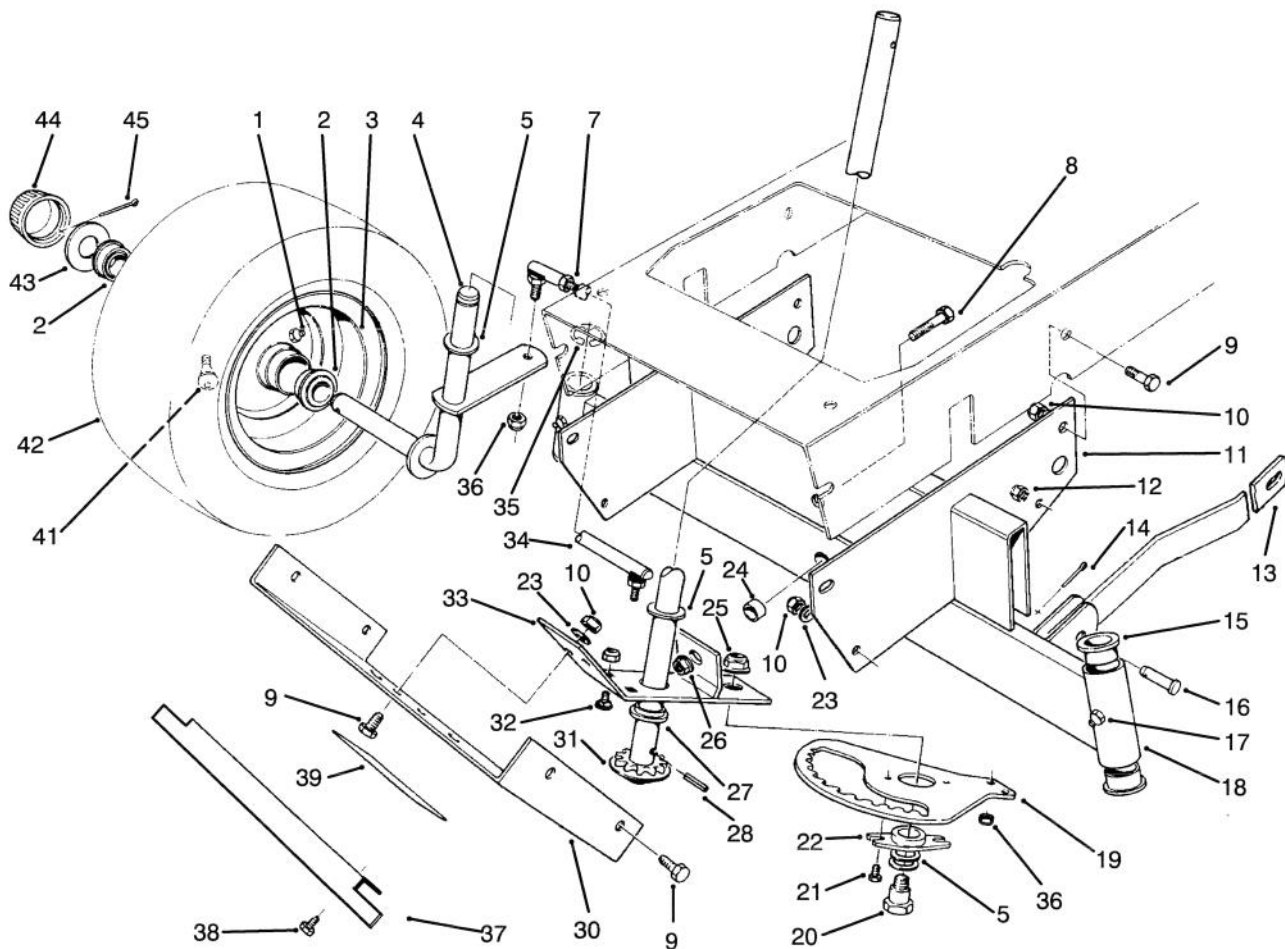

C-0438B


FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	302-5	Fitting - Grease	2
2	251-210	Bearing	4
3	217-80	Rim	2
4	47-0600	Spindle - R.H.	1
*	47-0590	Spindle - L.H.	1
5	3-6498	Washer - Thrust	5
7	3220-2	Nut - Hex. Jam	1
8	325-6	Screw - Cap Hex. Hd.	1
9	322-5	Screw - Cap Hex. Hd.	8
10	3296-29	Nut - Lock	8
11	47-0760	Support - Axle, Front	1
12	3296-8	Nut - Lock	1
13	47-0010	Arm - Suspension, Front	2
14	3272-6	Pin - Cotter	2
15	27-9080	Bearing - Flange	4
16	283-2	Pin - Clevis	2
17	302-49	Fitting - Grease	2
18	80-2430	Axle - Front (Incl. Ref. #15 & 17)	1
19	80-2450	Rack - Steering	1
20	56-7530	Bolt - Shoulder	1
21	32144-4	Screw - Special	2
22	56-7520	Bushing - Sector	1
23	3256-23	Washer - Flat	6

Ref. No.	Part No.	Description	No. Used
24	28-0380	Spacer - Axle, Front	1
25	32128-21	Nut - Lock, Flange Hd.	1
26	32128-23	Nut - Lock, Flange Hd.	1
27	47-0700	Bearing - Flange	1
28	32121-9	Pin - Roll	1
30	56-7180	Cover - Front	1
31	56-7500	Shaft - Steering	1
32	3230-18	Bolt - Carriage	2
33	56-7470	Bracket - Rack, Steering (Incl. Ref. #27)	1
34	47-0610	Tie Rod - Adjustable (Incl. Ref. #7)	1
*	80-2460	Tie Rod - Fixed	1
35	32151-48	Ring - Retaining, External	2
36	3296-4	Nut - Lock	4
37	92-0876	Guard - Front	1
38	32144-14	Screw - Thread Forming	2
39	92-7989	Decal - Important	1
41	232-27	Valve Stem w/Cap	2
42	231-116	Tire	2
43	28-2480	Washer	2
44	61-9780	Cap - Hub	2
45	3272-12	Pin - Cotter	2
†	232-44	Tube - Inner	2

*Not Illustrated

†Service Replacement Part

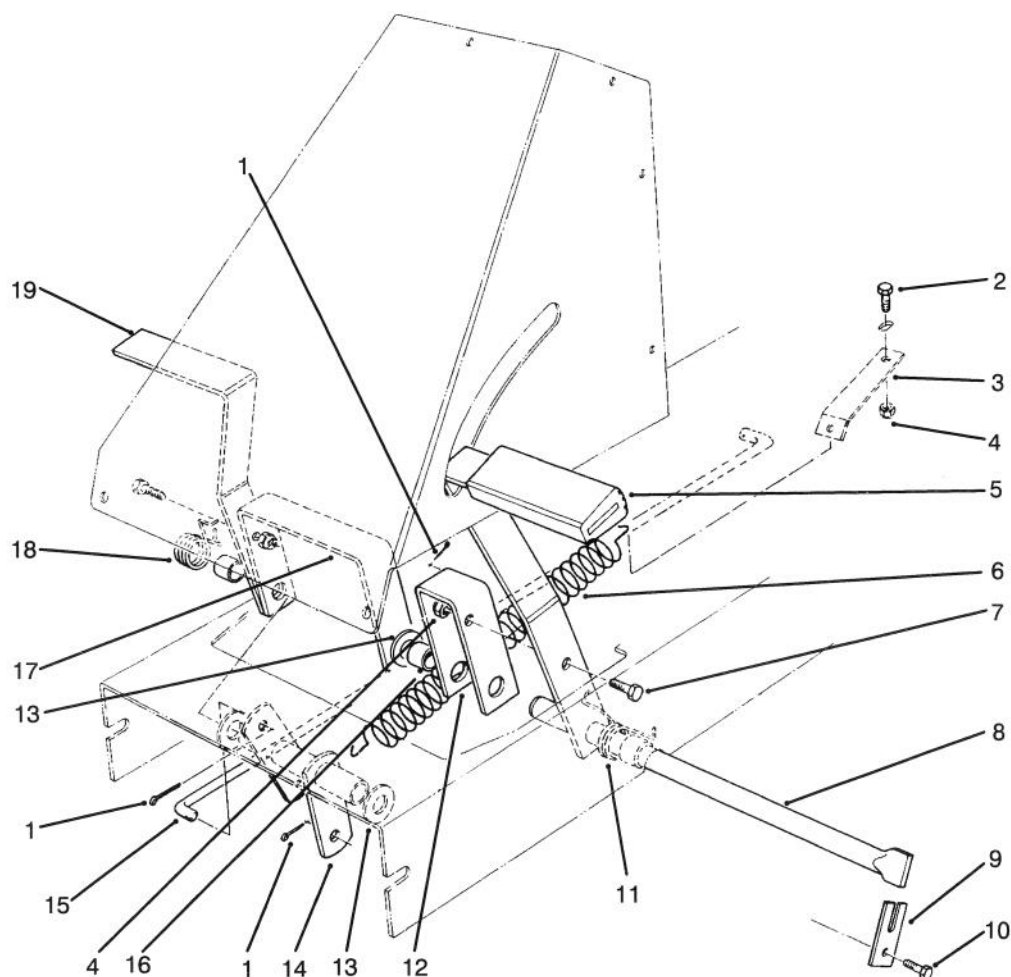


C-0439A

BRAKE & CLUTCH ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3272-6	Pin - Cotter	3
2	322-5	Screw - Cap Hex. Hd.	1
3	56-7240	Bracket - Retaining, Spring	1
4	3296-29	Nut - Lock	3
5	65-2920	Pad - Pedal, Foot	2
6	62-3930	Spring - Extension	1
7	322-5	Screw - Cap Hex. Hd.	2
8	47-0770	Shaft - Pivot, Pedal	1
9	47-0780	Retainer - Shaft	1
10	321-4	Screw - Cap Hex. Hd.	1

Ref. No.	Part No.	Description	No. Used
11	56-7070	Spring - Torsion, Clutch	1
12	47-0560	Bracket - Clutch, Pedal	1
13	3256-27	Washer - Flat	3
14	56-7650	Tube - Pivot	1
15	56-7570	Rod - Engagement	1
16	47-0570	Spacer - Pedal	3
17	47-0550	Bracket - Brake, Pedal	1
18	56-7080	Spring - Torsion, Brake	1
19	47-0540	Pedal	2

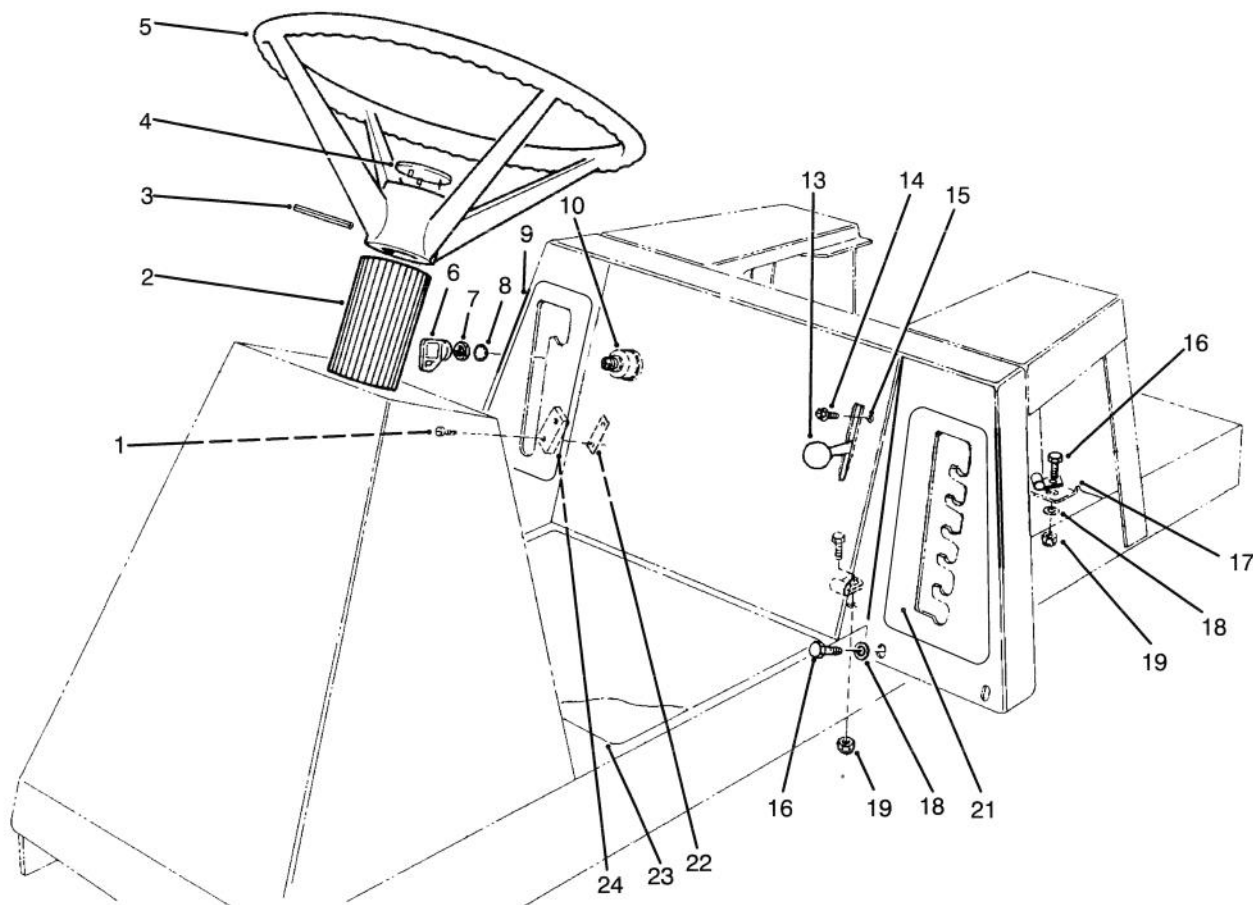


C-1934

STEERING WHEEL, SWITCHES & DECALS

Ref. No.	Part No.	Description	No. Used
1	147665	Screw - Phillips Head	2
2	66-6740	Cover - Shaft, Steering	1
3	32121-78	Pin - Roll	1
4	92-7990	Insert - Wheel, Steering	1
5	49-3242	Assy. - Wheel, Steering (Incl. Ref. #4)	1
6	63-8360	Key	1
7	218-461	Nut - Lock	1
8	3254-5	Washer - Lock, Int. Tooth	1
9	92-7983	Decal - Deck Engage	1
10	88-9830	Switch - Ignition (Incl. Ref. #6-8)	1

Ref. No.	Part No.	Description	No. Used
13	233-25	Knob	1
14	32104-76	Screw - Self-Tapping	2
15	92-0890	Control - Throttle (Incl. Ref. #13)	1
16	322-5	Screw - Cap Hex. Hd.	8
17	2412-68	Clamp	2
18	3256-23	Washer - Flat	7
19	3296-29	Nut - Lock	4
21	92-7984	Decal - H.O.C.	1
22	3290-354	Nut - Double	1
23	76-1090	Decal - Instructions	1
24	88-9931	Switch - Micro	1

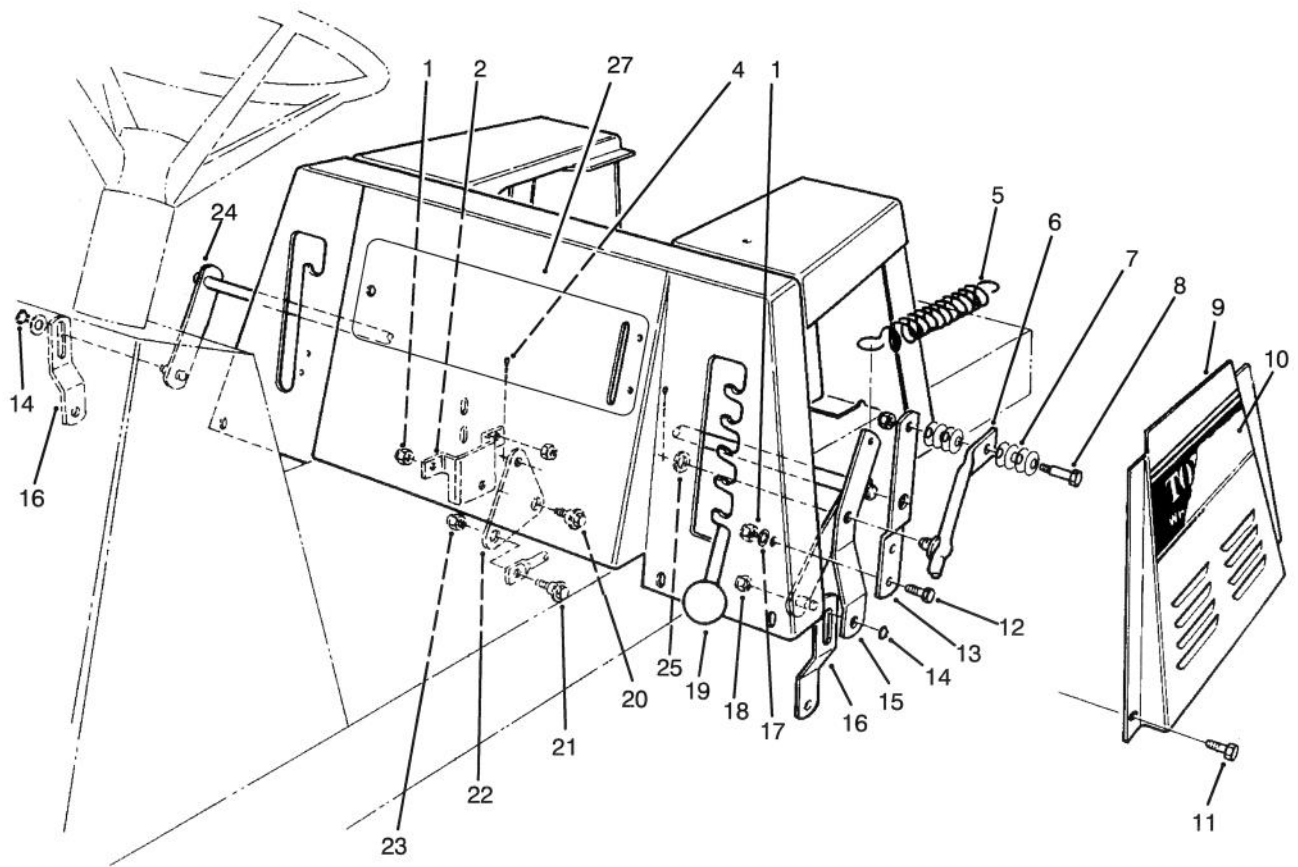


C-1935A

LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-29	Nut - Lock	7
2	80-2310	Bracket - Bell Crank Mount	1
4	3272-6	Pin - Cotter	2
5	62-3930	Spring - Extension	1
6	47-1850	Lever - Height-of-Cut	1
7	3290-413	Washer - Belleville	8
8	28-0540	Bolt - Shoulder	1
9	92-0878	Panel L.H. - Base, Seat	1
10	92-7986	Decal - L.H. (Model 70141)	1
10	92-7985	Decal - L.H. (Model 70100)	1
11	321-4	Screw - Cap Hex. Hd.	4
12	322-5	Screw - Cap Hex. Hd.	2
13	47-1840	Bracket - Height-of-Cut	1

Ref. No.	Part No.	Description	No. Used
14	32151-61	Ring - Retaining	2
15	80-2321	Bracket - H.O.C., Engage	1
16	63-5830	Link - Suspension, Deck	2
17	3256-23	Washer - Flat	4
18	3296-42	Nut - Lock	1
19	233-48	Knob	1
20	19-1470	Bolt - Shoulder	1
21	65-5670	Bolt - Shoulder	1
22	80-2360	Crank - Bell, Deck Engage	1
23	3296-8	Nut - Lock	1
24	56-7400	Arm - Lever, H.O.C.	1
25	3256-26	Washer - Flat	1
27	92-7982	Decal - Control Panel	1

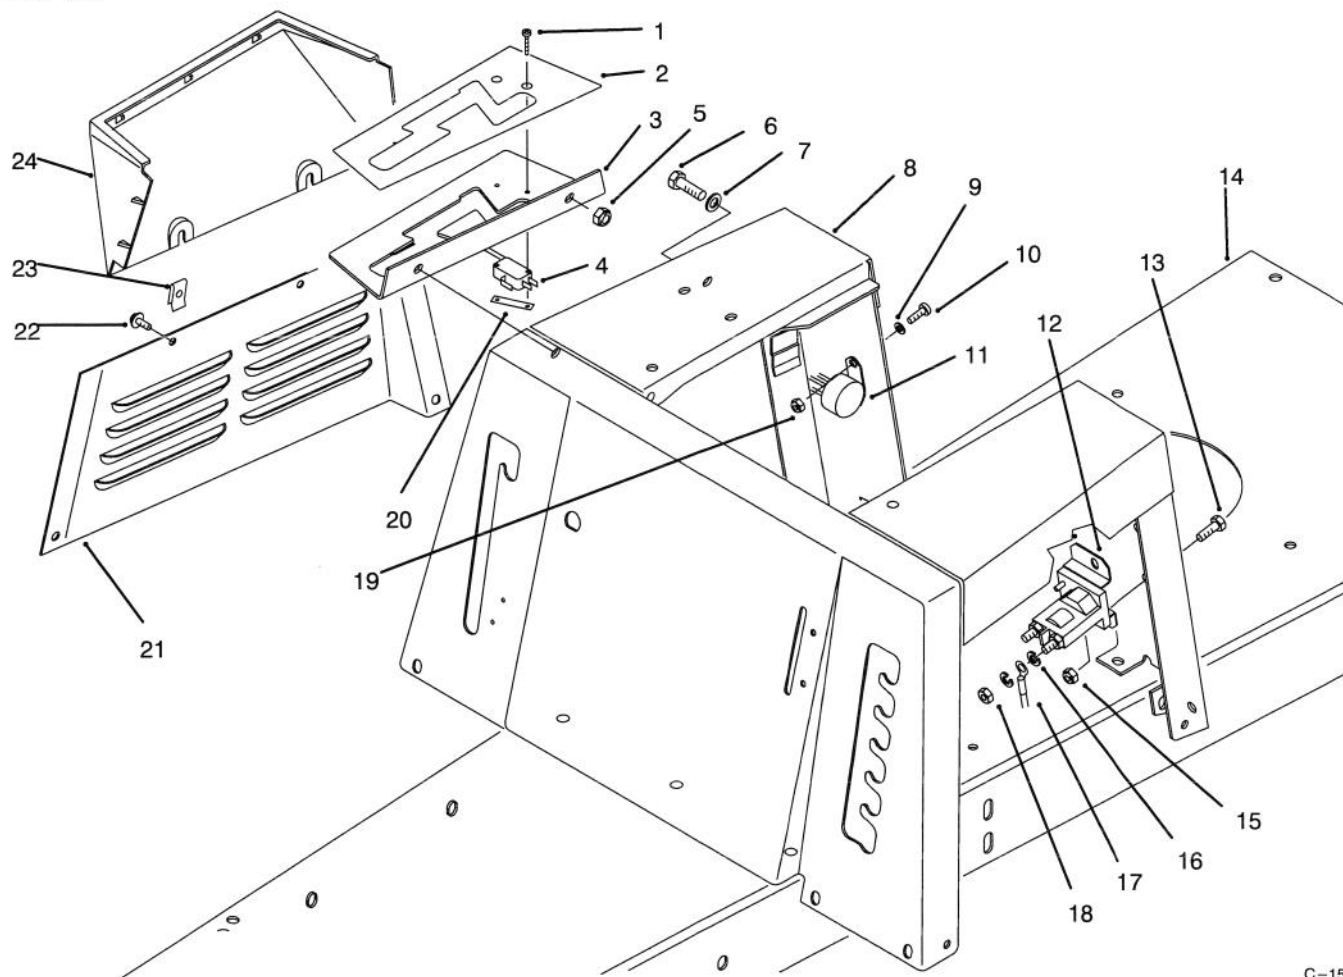


C-1587

SEAT BODY & SIDE PANEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	147665	Screw – Phillips Hd.	2
2	92-1751	Decal – Shift Pattern	1
3	92-0895	Gate – Shift	1
4	88-9930	Switch – Micro, Short	1
5	3296-29	Nut – Lock	2
6	322-5	Screw – Cap Hex. Hd.	2
7	3256-23	Washer – Flat	2
8	92-0866	Body W.A. – Seat Support	1
9	3256-14	Washer – Flat	1
10	3290-134	Screw – Machine	1
11	48-4700	Module – Interlock	1
12	47-1910	Solenoid	1
13	321-4	Screw – Cap Hex. Hd.	2

Ref. No.	Part No.	Description	No. Used
14	92-0860	Frame	1
15	3296-42	Nut – Lock	2
16	3253-3	Washer – Lock	4
17	56-7670	Cable – Positive	1
18	3218-1	Nut – Jam	2
19	3296-2	Nut – Lock	1
20	3290-354	Nut – Double	1
21	92-0877	Panel – Seat Base, R.H.	1
22	32144-112	Screw – Sems	2
23	3290-191	Nut – Speed	2
24	88-9800	Cover – Gate, Shift	1

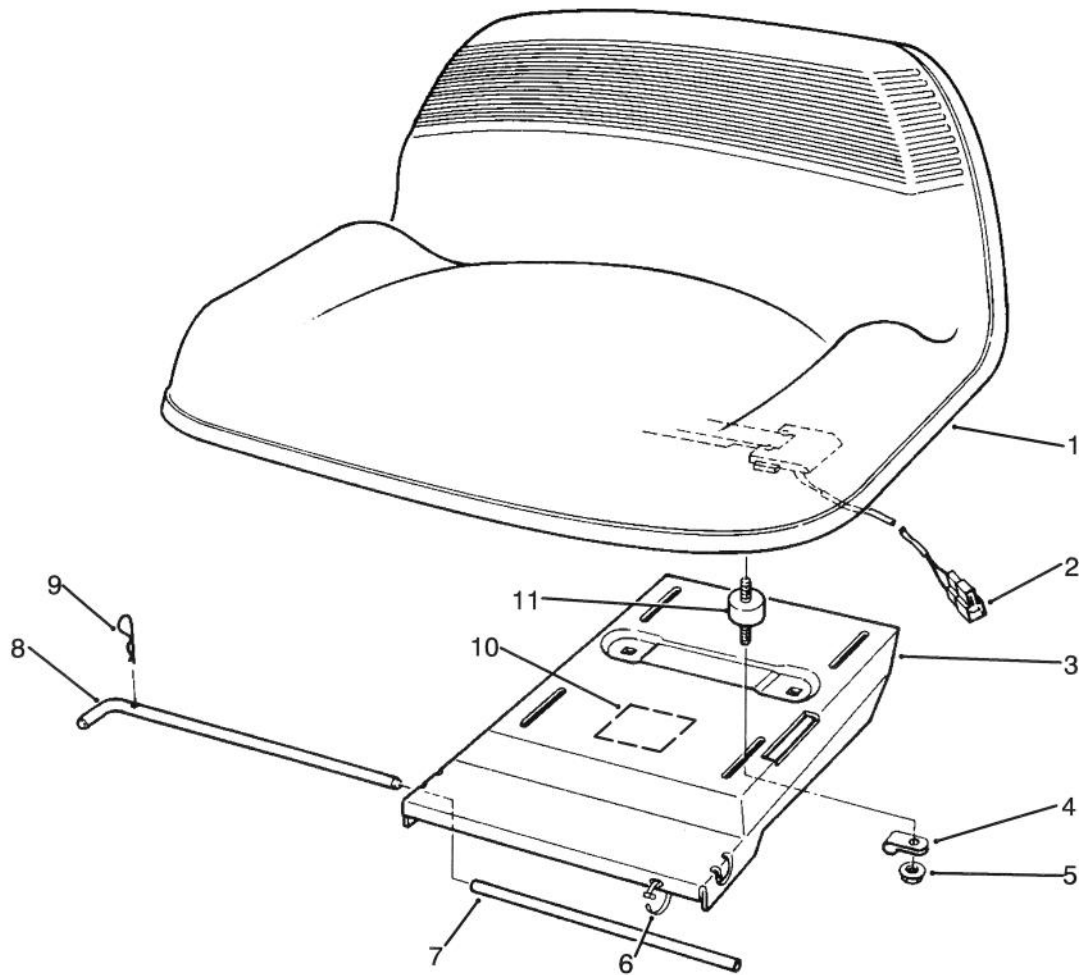


C-0745A

SEAT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88-3950	Assembly - Seat	1
2	38-1420	Switch - Interlock	1
3	63-5540	Base - Seat	1
4	2412-68	Clamp - Wire	1
5	32128-20	Nut - Flange Hd.	4
6	3290-378	Tie - Cable	1

Ref. No.	Part No.	Description	No. Used
7	63-5670	Tube - Bumper, Seat Rod	1
8	80-2620	Rod - Base, Seat	1
9	3290-307	Pin - Cotter, Hair	1
10	114621	Decal - Euro Noise	1
11	62-5480	Isolator - Seat	4

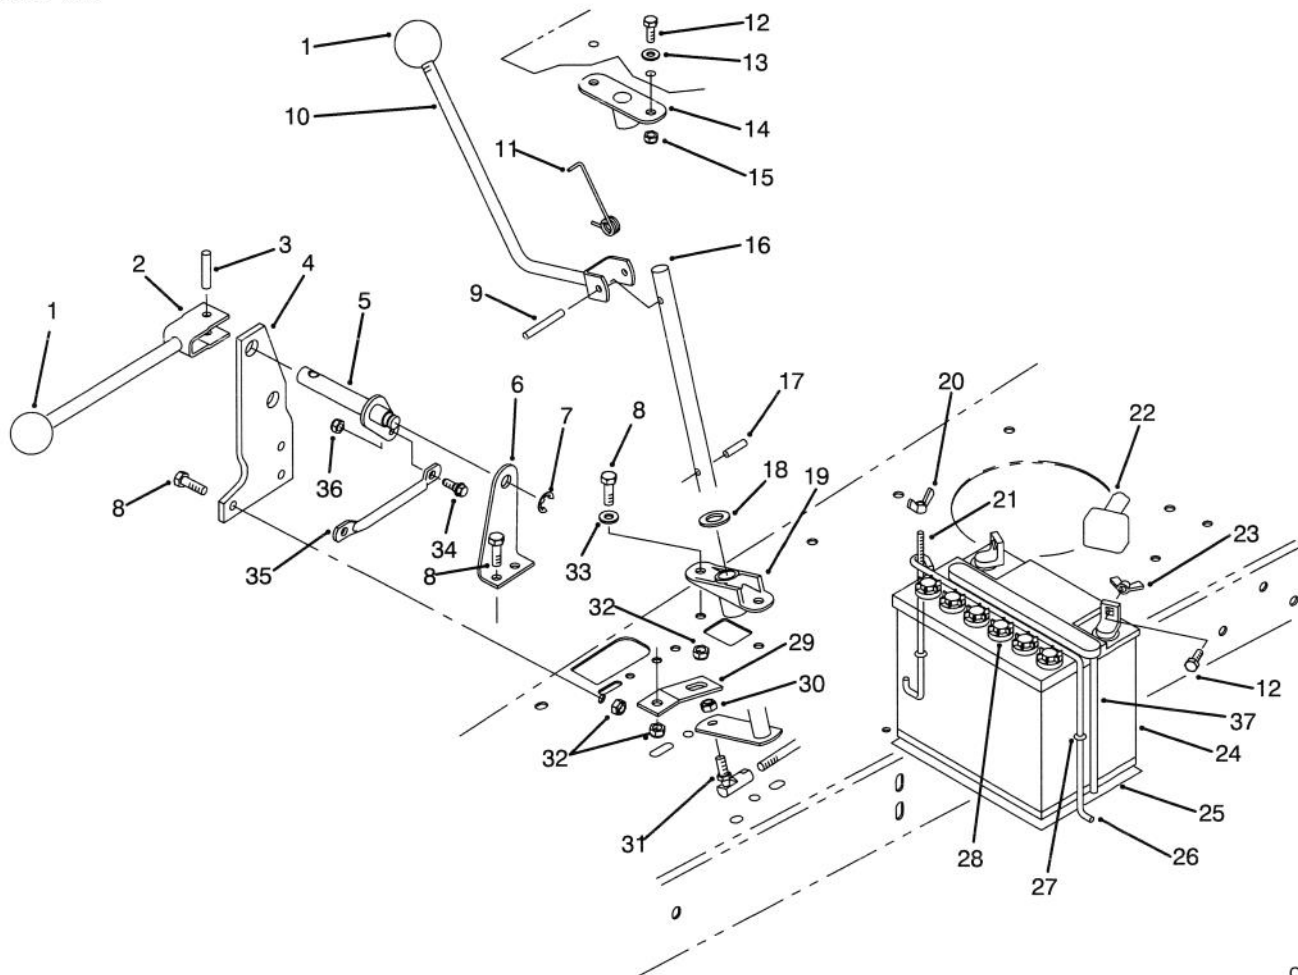


C-1601

TRANSMISSION LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	233-48	Knob	2
2	80-2400	Lever W.A. - Engage	1
3	32121-25	Pin - Roll	1
4	80-2350	Pivot - Outer	1
5	80-2370	Shaft W.A. - Pivot	1
6	80-2340	Bracket - Pivot, Inner	1
7	32120-47	Ring - Retaining	1
8	322-5	Screw - Cap Hex. Hd.	4
9	32121-78	Pin - Roll	1
10	92-0884	Lever W.A. - Shaft	1
11	92-0894	Spring - Torsion	1
12	321-4	Screw - Cap Hex. Hd.	2
13	3256-22	Washer - Flat	2
14	92-0888	Support - Shift, Upper	1
15	3296-42	Nut - Lock	2
16	92-0891	Shaft W. A. - Shift	1
17	32121-16	Pin - Roll	1
18	257-11	Washer	1
19	92-0887	Support - Shift, Lower	1

Ref. No.	Part No.	Description	No. Used
20	32103-12	Nut - Wing	1
21	56-7720	Post - Battery	1
22	28-8080	Boot - Terminal	1
23	32103-22	Nut - Wing	2
24	80-2600	Battery - 12 Volt (Incl. Ref. #28 & 37)	1
25	62-4300	Pad - Battery	1
26	56-7710	Hold Down - Battery	1
27	237-143	O-Ring	2
28	218-560	Cap - Battery	6
29	92-0896	Retainer - Spring	1
30	3296-4	Nut - Lock	1
31	2411-32	Ball Joint	1
32	3296-29	Nut - Lock	4
33	3256-23	Washer - Flat	2
34	65-5670	Screw - Shoulder	1
35	80-2330	Link - Bell Crank	1
36	3296-8	Nut - Lock	1
37	56-2540	Tube - Vent, Battery	1

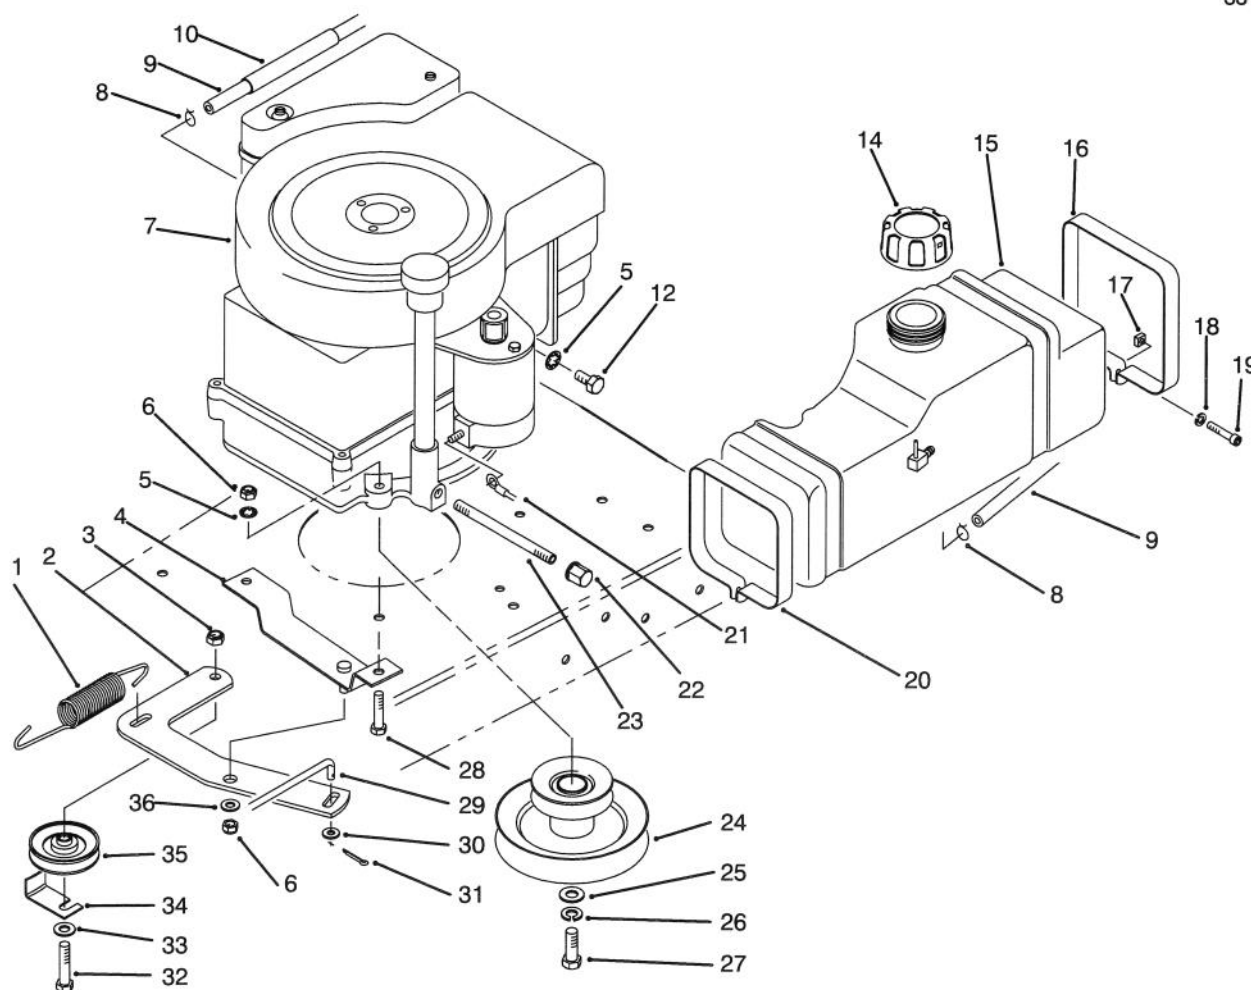


C-1937


ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-0879	Spring	1	18	3253-3	Washer - Lock	2
2	92-0883	Plate - Mounting, Idler	1	19	3274-51	Screw - Hex. Socket Hd.	2
3	3296-39	Nut - Lock	1	20	57-4070	Retainer - Rear	1
4	92-0881	Bracket W.A. - Traction	1	21	56-7670	Cable - Battery, Positive	1
5	3254-2	Washer - Lock, Int. Tooth	4	22	288-10	Cap - Pipe	1
6	3296-29	Nut - Lock	2	23	289-19	Nipple - Pipe	1
7		Engine - 10.5 H.P. Model 70100 (28B707-0122-01)	1	24	92-0873	Pulley - Engine	1
7		Engine - 12 H.P. Model 70141 (283707-0160-01)	1	25	3256-25	Washer - Flat	1
8	2412-98	Clamp - Hose	2	26	3253-6	Washer - Lock	1
9	47-2961	Hose - Fuel Line	1	27	62-3760	Screw - Cap Hex. Hd.	1
10	62-5490	Support - Fuel Line	1	28	322-7	Screw - Cap Hex. Hd.	1
12	32144-14	Screw	2	29	92-0871	Rod - Traction	1
14	55-3570	Cap - Fuel	1	30	3256-22	Washer - Flat	1
15	56-7050	Tank - Fuel	1	31	3272-6	Pin - Cotter	1
16	57-4060	Retainer - Front	1	32	323-9	Screw - Cap Hex. Hd.	1
17	32107-11	Nut - Square	2	33	3256-24	Washer - Flat	1
				34	12-9020	Retainer - Belt	1
				35	12-5820	Pulley - Idler	1
				36	3256-57	Washer - Flat	1
				*	88-4490	Reducer - Throttle	1

*Not Illustrated

ELECTRICAL SCHEMATIC

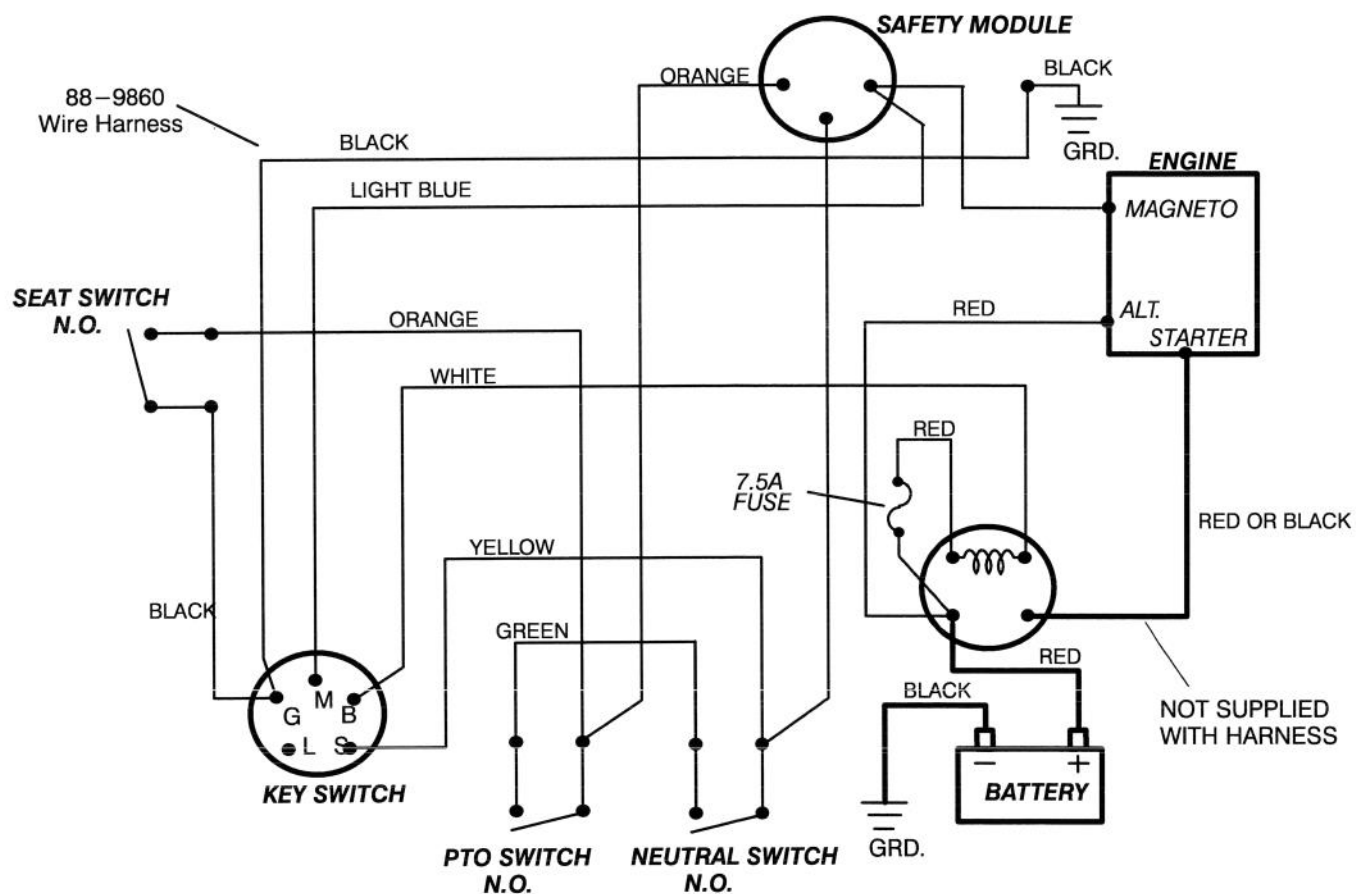


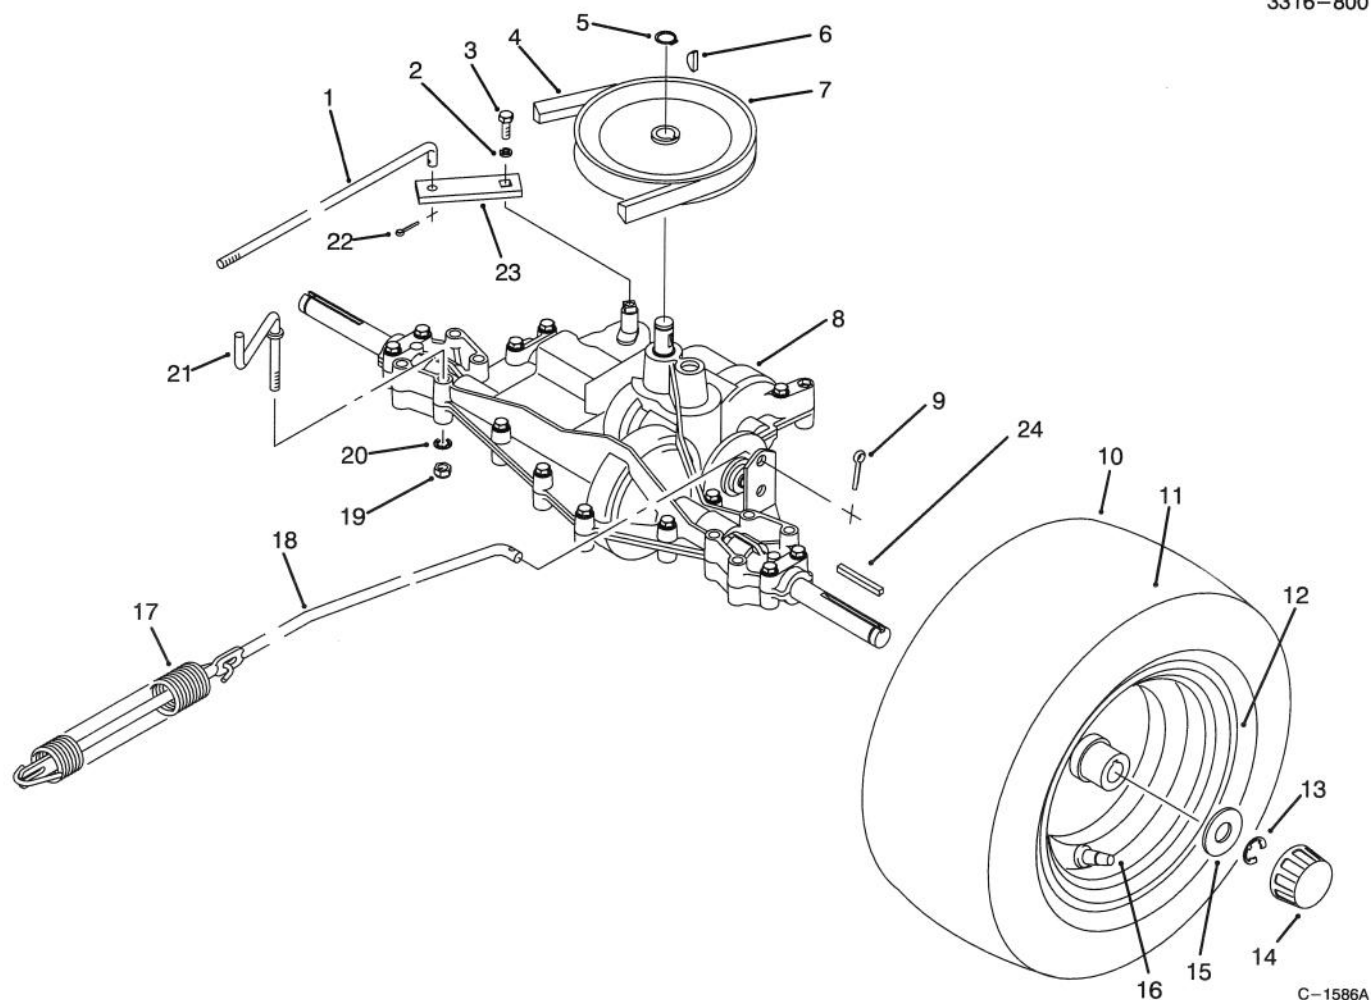

REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-0889	Link - Shift	1
2	3253-3	Washer - Lock	1
3	329-4	Screw - Cap Hex. Hd.	1
4	92-0870	V-Belt - Traction	1
5	32120-64	Ring - Retaining	1
6	3257-23	Key	1
7	92-0874	Pulley	1
8	92-0862	Transaxle	1
9	3272-16	Pin - Cotter	1
10	231-117	Tire	2
11	232-39	Tube - Inner	2
12	88-9730	Rim	2

Ref. No.	Part No.	Description	No. Used
13	32151-48	Ring - Retaining	2
14	61-9780	Cap - Hub	2
15	28-2480	Washer	2
16	232-27	Stem - Valve	2
17	57-9940	Spring - Brake	1
18	92-0872	Rod - Brake	1
19	3296-29	Nut - Lock	1
20	3254-2	Washer - Lock, Int. Tooth	1
21	92-0899	Guide - Belt, Lower	1
22	3272-6	Pin - Cotter	1
23	92-0880	Arm - Shift, Transaxle	1
24	7-0036	Key - Square	2

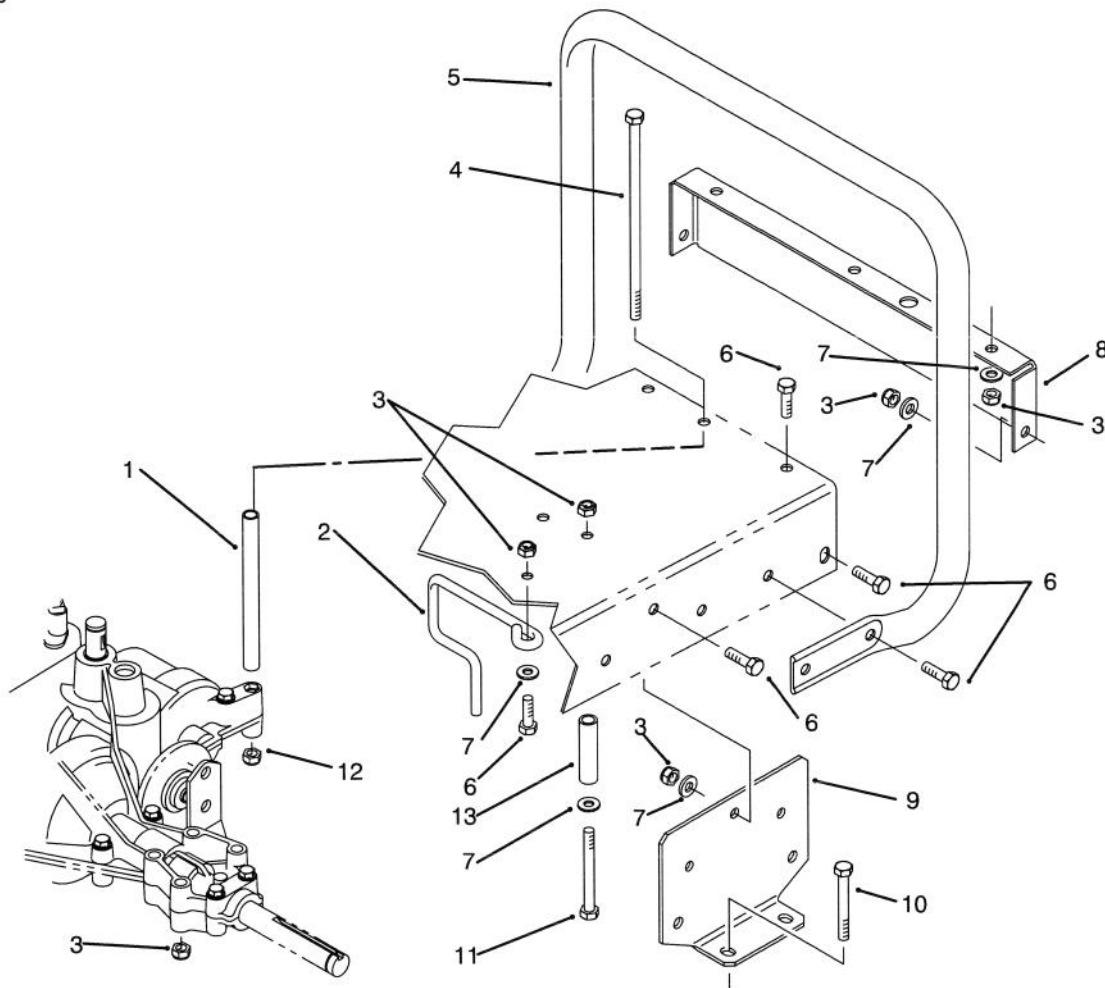


C-1602

STAND BAR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-0897	Spacer	1
2	92-0898	Guide - Belt	1
3	3296-29	Nut - Lock	17
4	322-50	Screw - Cap Hex. Hd.	1
5	92-0864	Standbar	1
6	322-5	Screw - Cap Hex. Hd.	15
7	3256-23	Washer - Flat	12

Ref. No.	Part No.	Description	No. Used
8	92-0861	Frame - Rear	1
9	92-0865	Support - Axle	2
10	322-12	Screw - Cap Hex. Hd.	4
11	322-14	Screw - Cap Hex. Hd.	2
12	3296-47	Nut - Lock	1
13	76-1560	Spacer	2

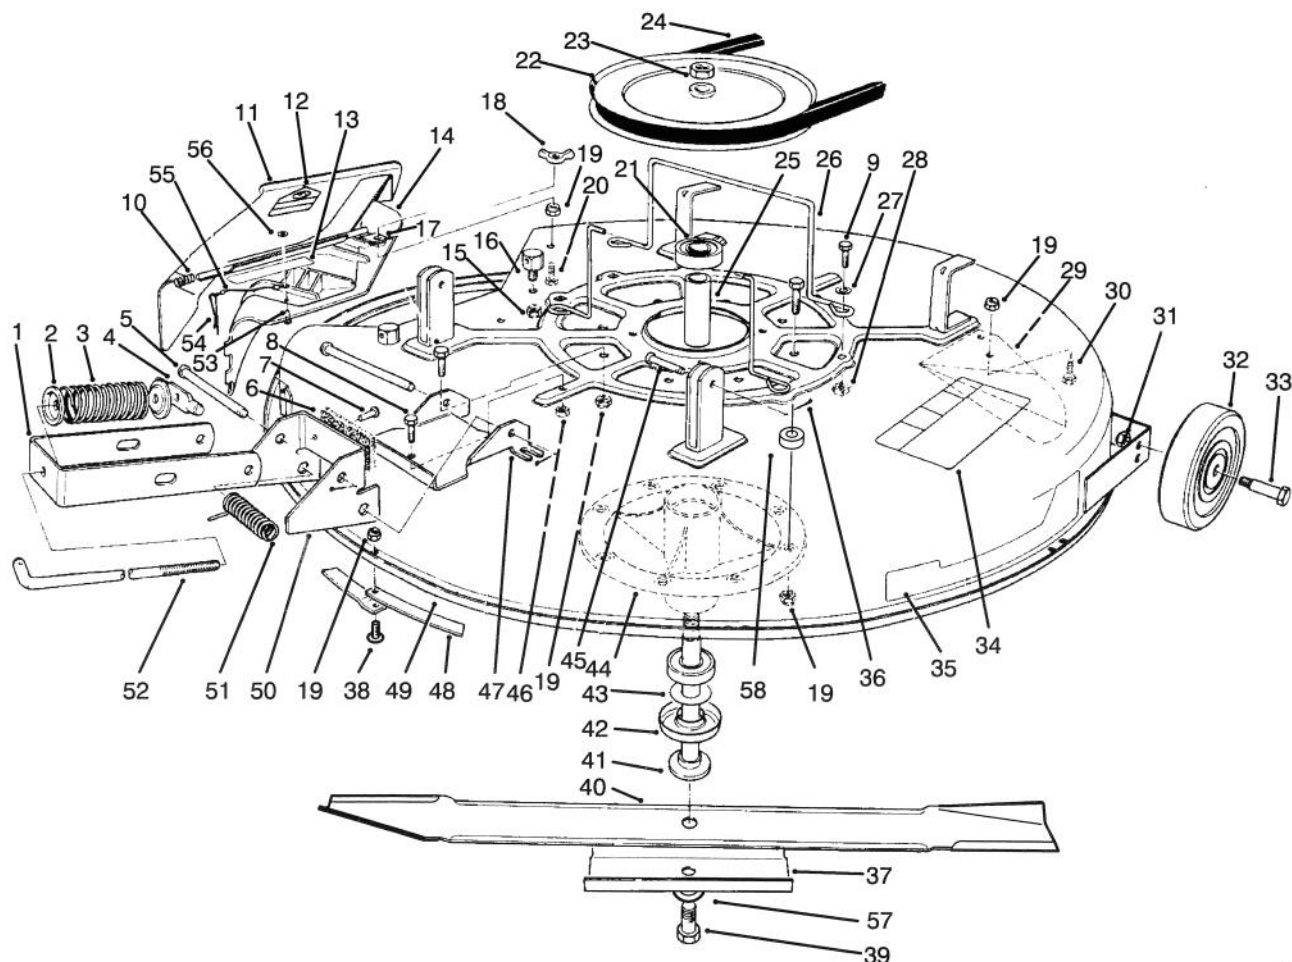


C-1939

MOWER ASSEMBLY – RECYCLER

Ref. No.	Part No.	Description	No. Used
1	47-1180	Bracket – Engagement	1
2	47-1140	Retainer – Spring, Top	2
3	47-0960	Spring – Compression	1
4	47-1200	Shaft – Adjusting	1
5	80-2570	Pin – Clevis	2
6	80-2550	Pad – Brake	1
7	3290-282	Rivet	2
8	321-4	Screw – Cap Hex. Hd.	1
9	322-5	Screw – Cap Hex. Hd.	10
10	28-8010	Spring – Torsion	1
11	44-5930	Assembly – Deflector (Incl. Ref. #12)	1
12	54-9220	Decal – Caution, Deflector	1
13	68-3650	Decal – Warning, Deflector	1
14	82-6150	Assy. – Cover, Discharge (Incl. Ref. #53-56)	1
15	3296-59	Nut – Lock	1
16	28-7350	Post – Pivot	1
17	83-7010	Brace – Cover, Rear	1
18	32103-2	Nut – Wing	1
19	3296-29	Nut – Lock	24
20	322-6	Screw – Cap Hex. Hd.	3
21	251-297	Bearing	2
22	80-4470	Pulley	1
23	3219-7	Nut – Hex. Hd.	1
24	92-0875	V-Belt	1
25	83-7020	Spacer – Bearing	1
26	60-9730	Guide – Belt	2
27	3256-23	Washer – Flat	8
28	3290-496	Nut – Retainer	4
29	80-2630	Kicker – 32"	4

Ref. No.	Part No.	Description	No. Used
30	322-3	Screw – Cap Hex. Hd.	7
31	3296-39	Nut – Lock	2
32	61-9760	Wheel – Deck	2
33	56-6590	Bolt – Wheel	2
34	66-1340	Decal – Danger	1
35	92-7988	Decal – Recycler	1
36	3272-6	Pin – Cotter	2
37	80-4570	Stiffener – Blade	1
38	32122-14	Screw – Truss, Phillips Hd.	8
39	26-0671	Bolt – Blade	1
40	33-4750	Blade – Recycler	1
41	80-4350	Shaft – Spindle	1
42	80-4370	Shield – Bearing	1
43	80-4390	Spacer – Hardened	1
44	56-7030	Body – Spindle	1
45	283-2	Pin – Clevis	2
46	3296-8	Nut – Lock	1
47	80-2560	Plate – Deck, Brake Mtg.	1
48	80-4490	Ring – Deck	4
49	14-9999	Deck – Cutting, Recycler	1
50	80-2530	Assembly – Brake (Incl. Ref. #6-7)	1
51	40-6230	Spring – Torsion	1
52	80-2580	Rod – Adjusting	1
53	3290-282	Rivet	2
54	28-8130	Pin – Chute, Locking	1
55	28-8070	Lanyard	1
56	3256-49	Washer – Flat	1
57	3290-465	Washer – Belleville	1
58	62-5480	Spacer	8


PEERLESS TRANSAXLE MODEL NO. 915-019

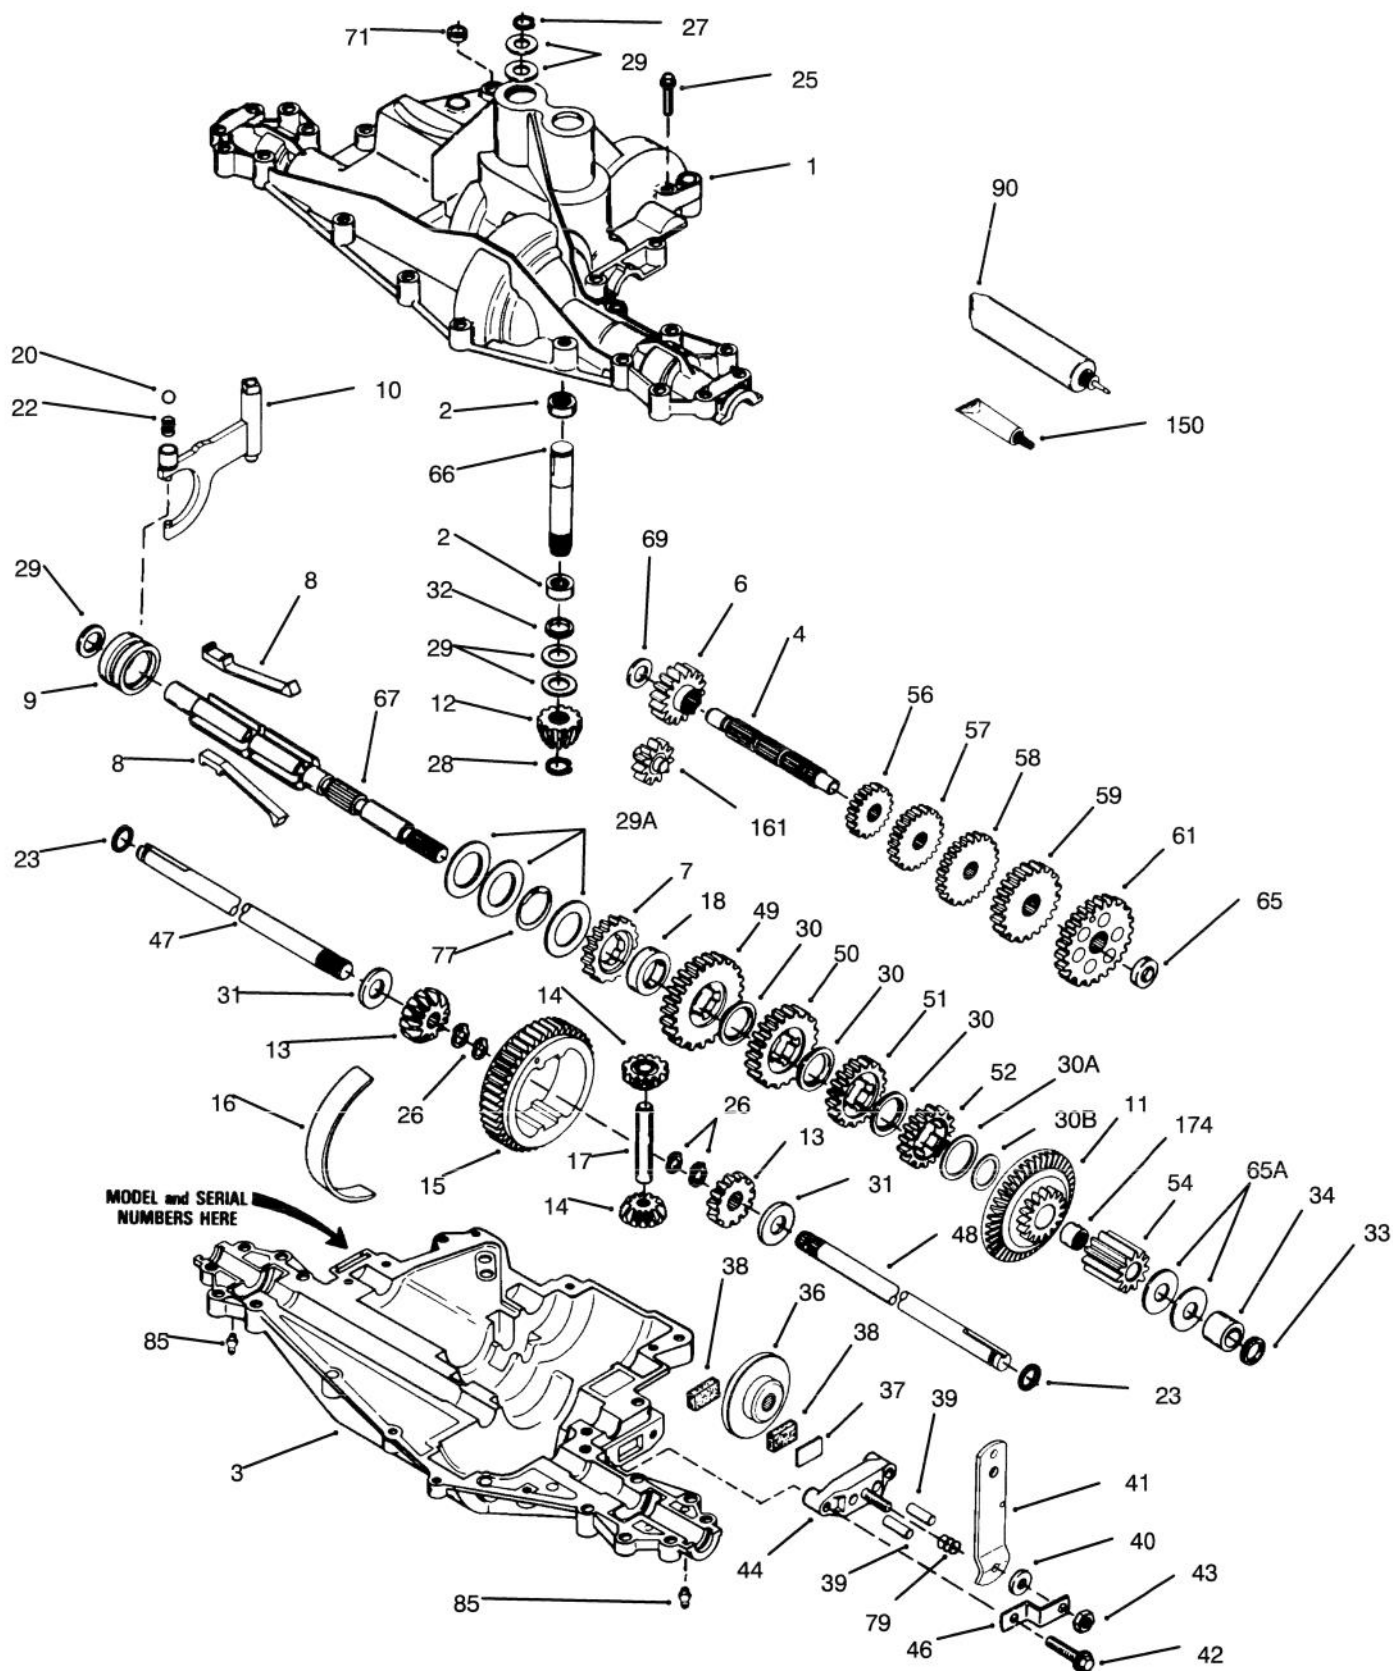

PEERLESS TRANSAXLE MODEL NO. 915-019

Ref. No.	Part No.	Description	No. Used
1	772117	Transaxle Cover	1
2	780086	Needle Bearing	2
3	770114	Transaxle Case	1
4	776300	Countershaft	1
6	778281	Spur Gear (16 Teeth)	1
7	778122A	Spur Gear (22 Teeth)	1
8	792133	Shift Key	4
9	784352	Shift Collar	1
10	784365	Shift Rod & Fork	1
11	778290	Bevel Gear & Bearing (44/16 Teeth) (Incl. Ref. #174)	1
12	778262	Bevel Pinion (14 Teeth)	1
13	778221	Bevel Gear (16 Teeth)	2
14	778068	Differential Pinion	2
15	778260	Ring Gear	1
16	786150	Bearing Strip	1
17	78139	Drive Pin	1
18	786147	Neutral Spacer	1
20	792139	Ball (3/8" dia.)	1
22	792142	Spring	1
23	788061	Seal Ring	2
25	792073	Screw	17
26	792125	Retaining Ring (pkg. of 2)	4
27	792035	Retaining Ring	1
28	788040	Retaining Ring	1
29	780072	Washer	5
29A	780090	Thrust Washer	3
30	780108	Washer	3
30A	789145	Washer	1
30B	780178	Washer	1
31	780001	Washer	2
32	792001	O-Ring	1
33	788076	O-Ring	1
34	780159	Bushing	1
36	790071	Brake Disk	1
37	790007	Brake Pad Plate	1

Ref. No.	Part No.	Description	No. Used
38	790006	Brake Pad	2
39	786026	Dowel Pin	2
40	792076	Washer	1
41	790045	Brake Lever	1
42	792073	Screw	2
43	792075	Locknut	1
44	790025	Brake Pad Holder	1
46	786086	Brake Lever Bracket	1
47	774930	Axle (16-3/4" lg.)	1
48	774931	Axle (11-9/16" lg.) (Incl. Ref. #26)	1
49	778124A	Spur Gear (30 Teeth)	1
50	778123A	Spur Gear (25 Teeth)	1
51	778122A	Spur Gear (22 Teeth)	1
52	778273	Spur Gear (19 Teeth)	1
54	778263	Spur Gear (11 Teeth)	1
56	778126A	Spur Gear (20 Teeth)	1
57	778127A	Spur Gear (25 Teeth)	1
58	778128A	Spur Gear (28 Teeth)	1
59	778129A	Spur Gear (30 Teeth)	1
61	778265	Spur Gear (34 Teeth)	1
65	780162	Washer	1
65A	780160	Washer	2
66	776299	Input Shaft (3.522" lg.)	1
67	776352	Shifter & Brake Shaft	1
69	780161	Thrust Washer	1
71	788069	Square Cut Ring	1
77	788078A	Inverted Retaining Ring (pkg. of 2)	1
79	792144	Spring	1
90	788067B	Grease (32 oz. btl. Bentonite grease)	1
150	510334	Gasket Eliminator (Loctite #515)	1
161	776302	Reverse Idler Assembly	1
174	780085	Needle Bearing	1

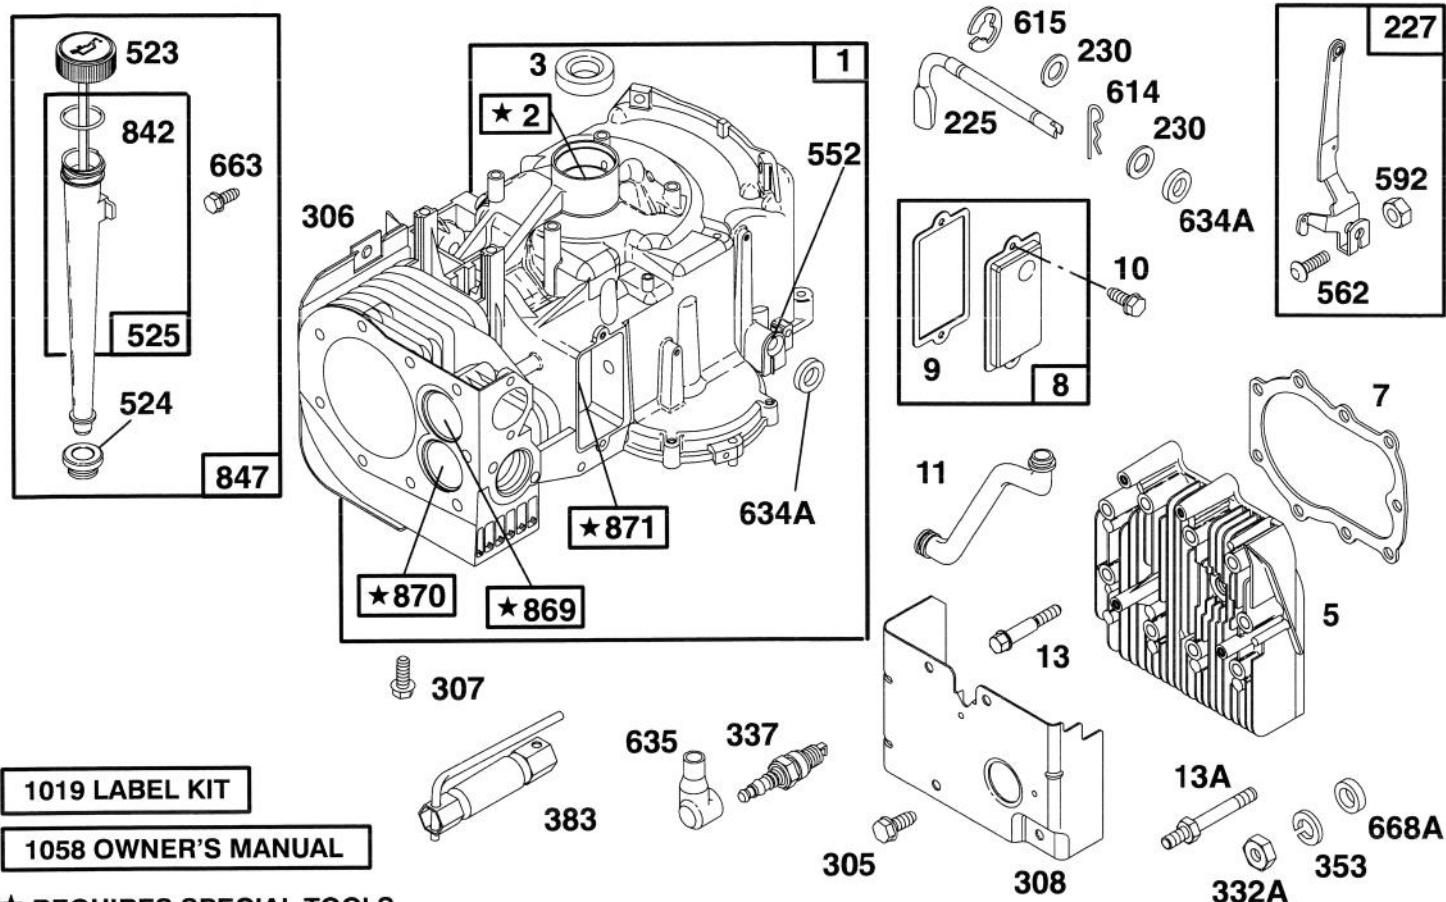

ENGINE BRIGGS & STRATTON MODEL 28B707-0122-01


Ref. No.	Part No.	Description	No. Used
1	496413	Cylinder Assembly	
2	399265	Bearing—Cylinder	
★3	391086	Seal—Oil	
5	494240	Head—Cylinder	
★7	271866	Gasket—Cylinder Head	
8	495735	Breather Assembly	
★9	27803	Gasket—Valve Cover	
10	94621	Screw—Sem	
11	281246	Tube—Breather	
13	94622	Screw—Cylinder Head	
13A	94776	Stud—Cylinder Head	
225	231058	Crank—Governor	
227	493935	Lever Assy.—Governor	
230	94742	Washer—Governor Lever	
305	94786	screw—Hex. Head	
306	224545	Shield—Cylinder	
307	94386	Screw—Self Tap	
308	491490	Cover—Cylinder Head	
332A	94314	Nut—Hex.	
337	802592	Plug—Spark	
353	94315	Washer—Lock	
383	89838	Wrench—Spark Plug	

Ref. No.	Part No.	Description	No. Used
523	495229	Cap—Oil Filler	
★524	281370	Seal—Filler Tube	
525	496068	Tube—Oil Filler	
552	231597	Bushing—Gov. Crank	
562	92613	Bolt—Governor Lever	
592	231082	Nut—Hex.	
614	93306	Pin—Cotter	
615	93307	Retainer—E-Ring	
★634A	491323	Seal—Governor	
635	66538	Elbow—Spark Plug	
663	94073	Screw—Hex. Head	
668A	231109	Spacer	
★842	270920	Seal—Oil Filler Cap	
847	496367	Fill Group—Oil	
869	261463	Seat—Intake Valve	
870	213316	Seat—Exhaust Valve	
871	261961	Guide—Exhaust Valve	
		Note: 231218 Guide—Intake Valve (Brass)	
1019	491254	Label Kit	
1058	272697	Owner's Manual	

★ Included in Gasket Set—Part No. 494241.

◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 496622.

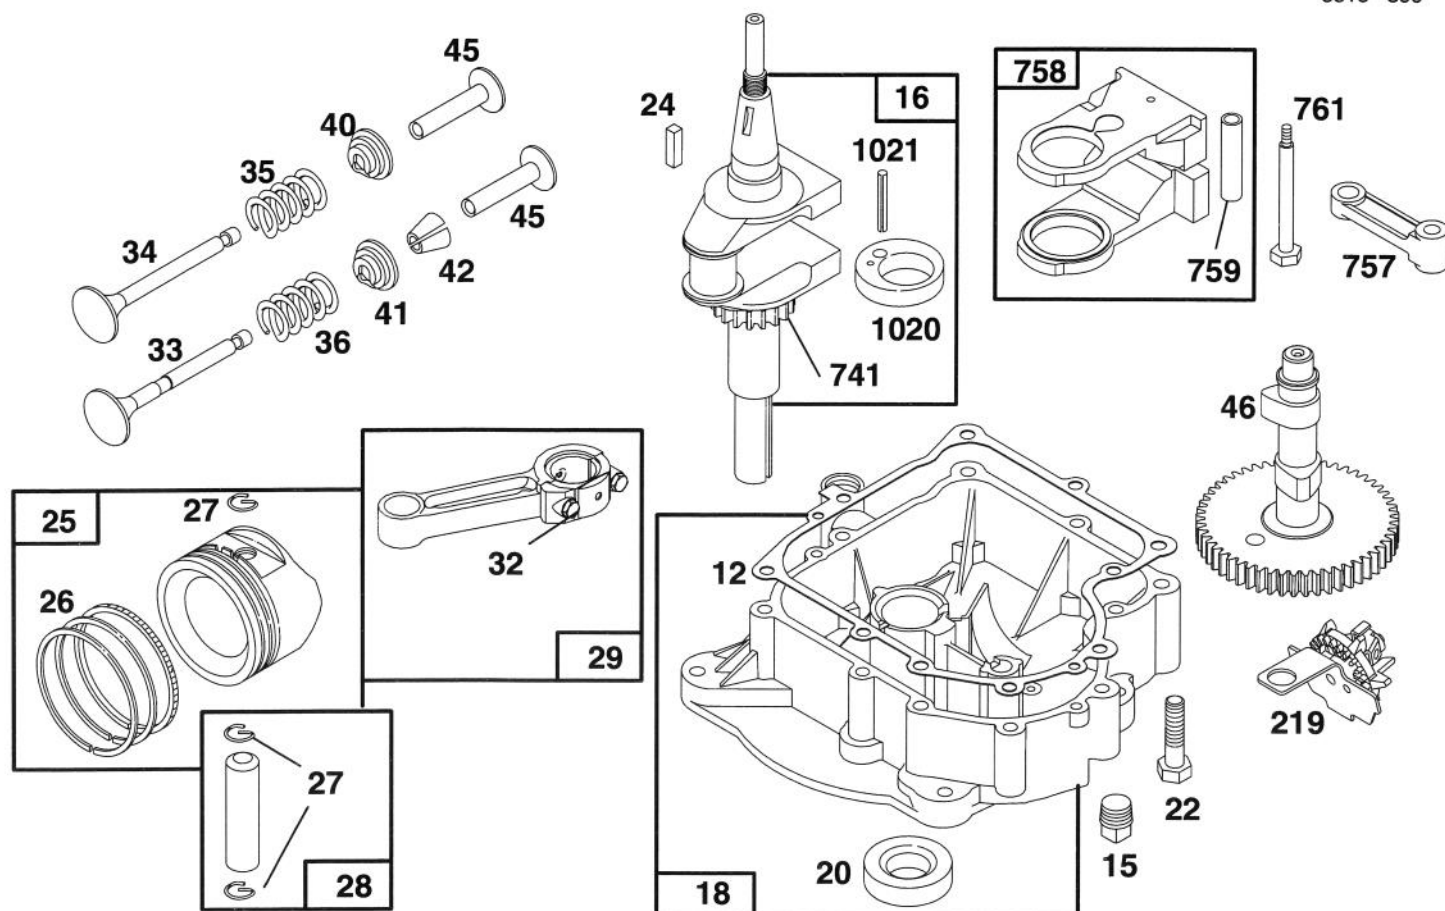

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28B707-0122-01


Ref. No.	Part No.	Description	No. Used
★12	271916	Gasket—Crankcase (.015" Thick)	
★	271997	Gasket—Crankcase (.005" Thick)	
★	271996	Gasket—Crankcase (.009" Thick)	
15	94239	Plug—Oil Drain	
16	495162	Crankshaft	
		Note: For Timing Gear Key—Order 94196.	
18	494238	Base—Engine	
★20	291675	Seal—Oil	
22	94624	Screw—Sem	
24	222698	Key—Flywheel	
25	394661	Piston Assembly (Standard)	
	394662	Piston Assy. (.010" O.S.)	
	394663	Piston Assy. (.020" O.S.)	
	394664	Piston Assy. (.030" O.S.)	
26	391780	Ring Set (Standard)	
	392331	Ring Set (Chrome Std.)	
	391781	Ring Set (.010" O.S.)	
	391782	Ring Set (.020" O.S.)	
	391783	Ring Set (.030" O.S.)	

Ref. No.	Part No.	Description	No. Used
27	260924	Lock—Piston Pin	
28	299691	Pin—Piston (Standard)	
	391286	Pin—Piston (.005" O.S.)	
29	490348	Rod—Connecting	
	490469	Rod—Conn. (.020" U.S.)	
32	94671	Screw—Conn. Rod	
33	262246	Valve—Exhaust	
34	262247	Valve—Intake	
35	65906	Spring—Valve	
36	26828	Spring—Valve	
40	221596	Retainer—Intake Valve	
41	292260	Rotocoil—Ex. Valve	
42	494553	Retainer—Rotocoil	
45	262248	Tappet—Valve	
46	212897	Gear—Cam	
219	490815	Gear—Gov.	
741	262932	Gear—Timing	
757	213998	Link—Counterweight	
758	399891	Counterweight Assy.	
759	298909	Pin—Counterweight	
761	94593	Screw—Counterweight	
1020	262243	Eccentric	
1021	94160	Pin—Eccentric	

★ Included in Gasket Set—Part No. 494241.

◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 496622.

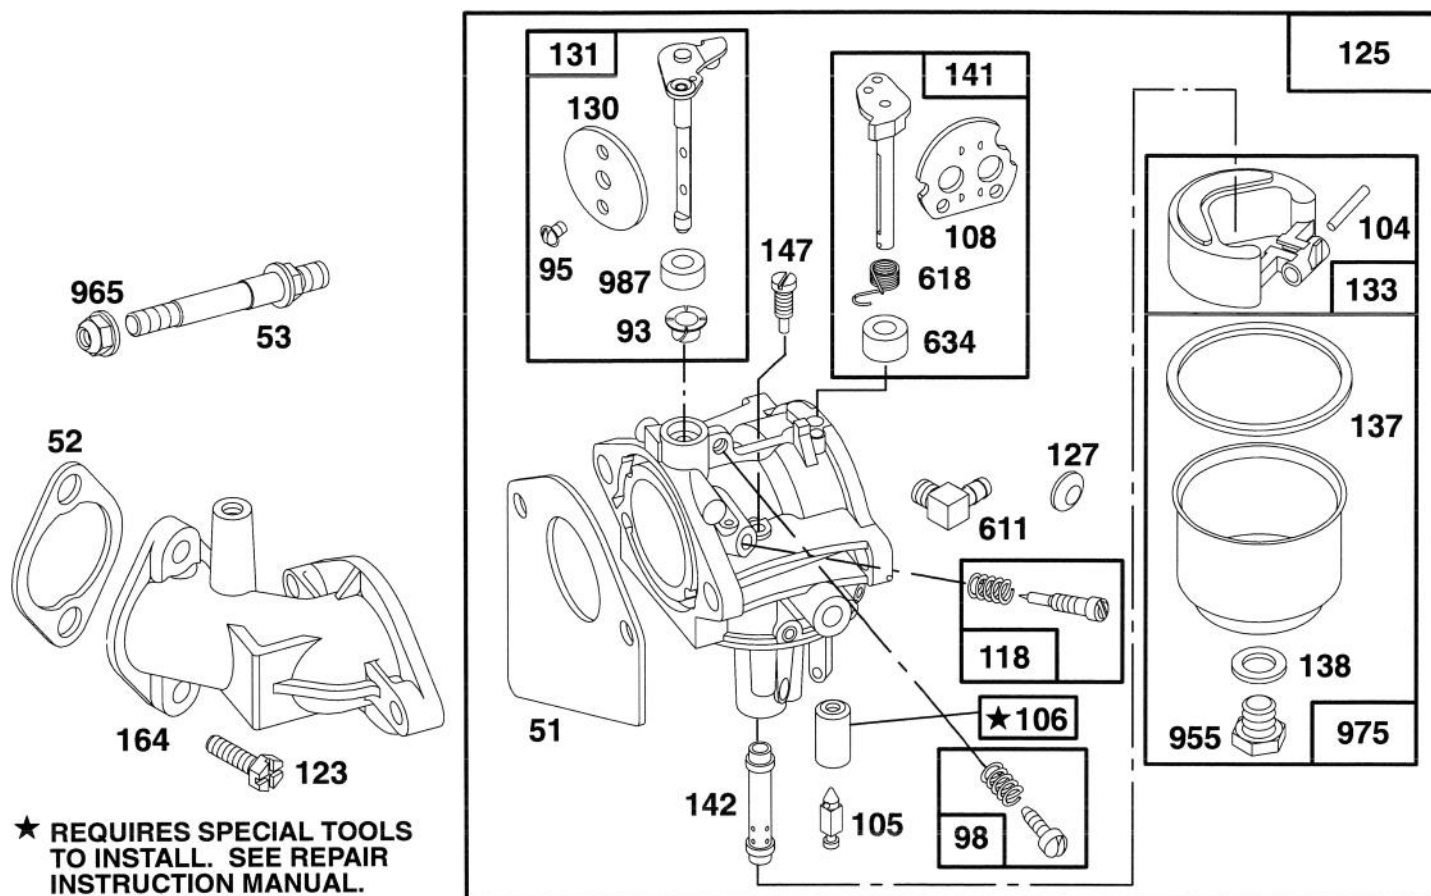

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28B707-0122-01


Ref. No.	Part No.	Description	No. Used
◆51	272465	Gasket—Carburetor	
★52	272554	Gasket—Carburetor	
53	94637	Stud—Carb. Mtg.	
●93	281346	Bushing—Throttle Shaft	
●95	94098	Screw—Throttle	
98	495800	Screw—Idle Adjust	
●104	231789	Pin—Float Hinge	
●105	231855	Valve—Inlet Needle	
●106	231854	Seat—Inlet	
108	224666	Valve—Choke	
118	496589	Valve—Needle	
123	94616	Screw—Elbow Mtg.	
125	496592	Carburetor	
●127		Plug—Welch (Sold in Kit Only).	
130	224668	Valve—Throttle	
131	494885	Shaft—Throttle	
133	494381	Float—Carburetor	

Ref. No.	Part No.	Description	No. Used
◆137	281165	Gasket—Float Bowl	
◆138	281164	Washer—Float Bowl	
141	495931	Shaft—Choke	
●142	496519	Nozzle—Carburetor	
		Note: 496623 Nozzle—Carb. (High Altitude)	
		Includes: 281164 Washer—Float Bowl	
●147	231794	Pilot—Jet	
164	213819	Carburetor—Elbow	
611	493496	Elbow—Fuel Pipe	
618	262803	Spring—Choke Return	
●634	281168	Seal—Choke Shaft	
955	94642	Screw—Fuel Bowl	
965	94010	Nut—Hex.	
975	494378	Bowl—Float	
●987	281166	Seal—Throttle Shaft	

★ Included in Gasket Set—Part No. 494241.

◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 496622.

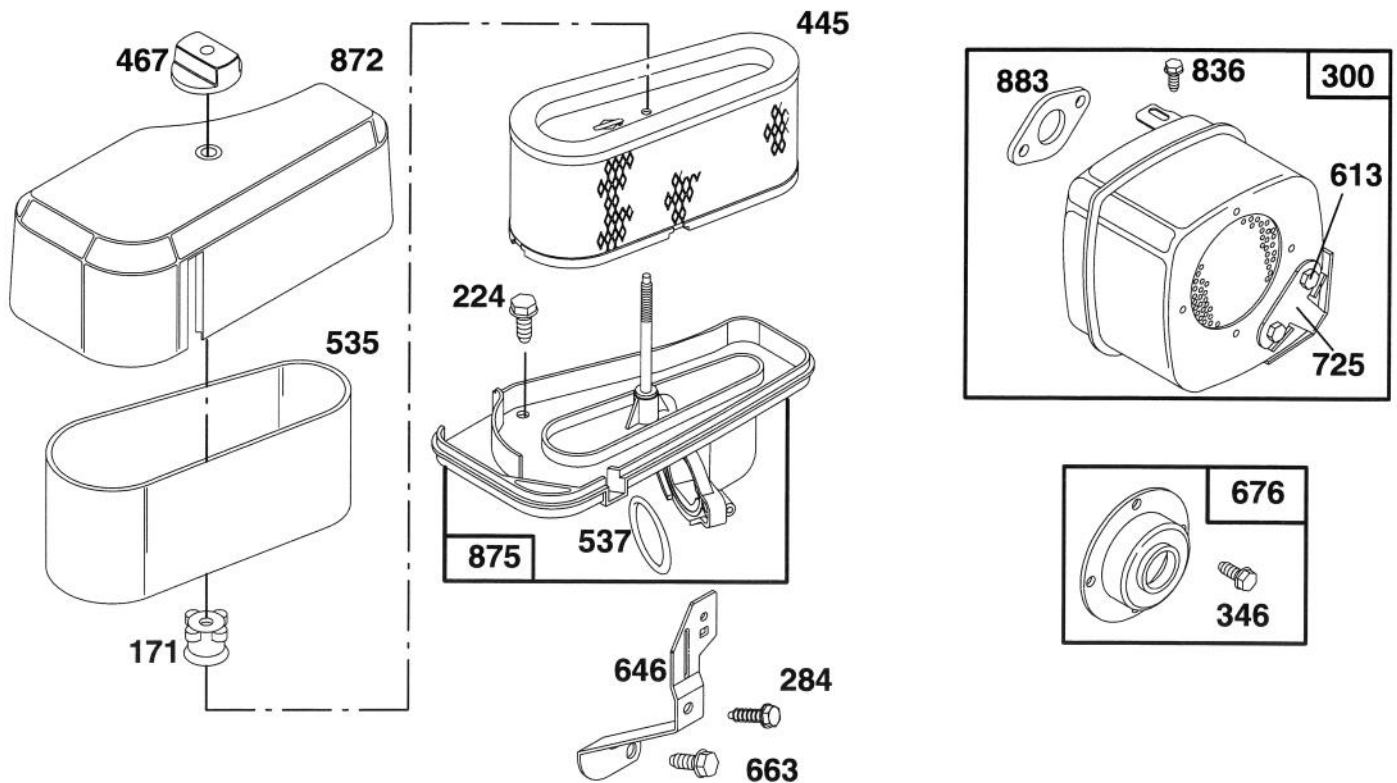

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28B707-0122-01


Ref. No.	Part No.	Description	No. Used
171	281051	Nut—Air Cleaner Mtg.	
224	94729	Screw—Air Cleaner Sem	
284	94704	Screw—Air Cleaner	
300	491413	Muffler—Exhaust	
346	93705	Screw—Hex. Head	
445	493910	Cartridge—Air Cleaner	
467	493903	Knob—Air Cleaner	
535	272477	Element—Air Cleaner	
★537	281106	Gasket—Air Cleaner	

Ref. No.	Part No.	Description	No. Used
613	93927	Screw—Hex. Hd.	
646	224546	Brace—Air Cleaner	
663	94620	Screw—Hex. Hd.	
676	396903	Deflector—Muffler	
725	223023	Shield—Muffler	
836	94786	Screw—Hex. Hd.	
872	281105	Cover—Air Cleaner	
875	496368	Body—Air Cleaner	
★883	272293	Gasket—Exhaust Pipe	

★ Included in Gasket Set—Part No. 494241.

◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 496622.

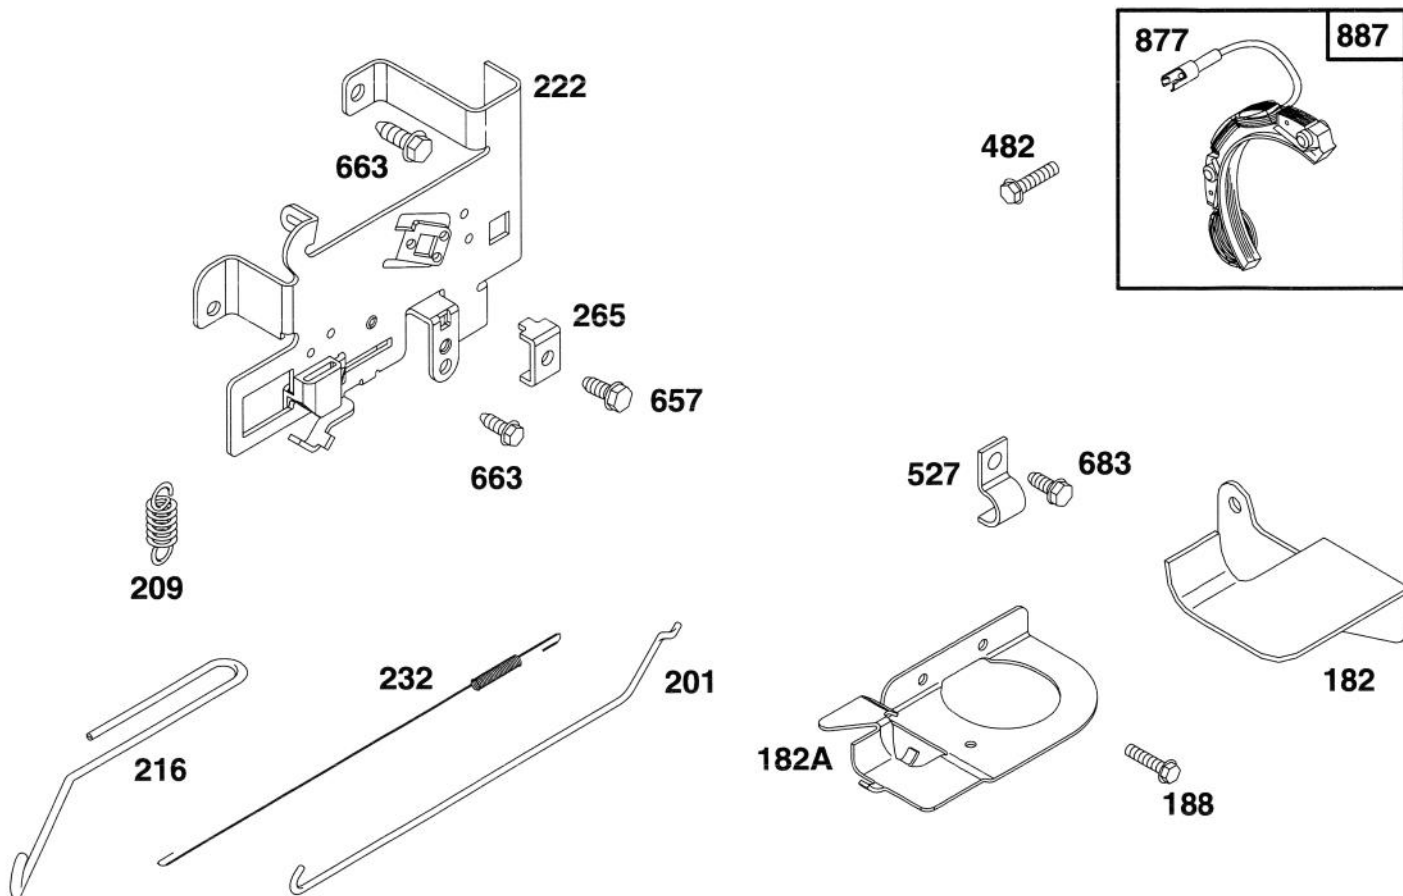

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28B707-0122-01


Ref. No.	Part No.	Description	No. Used
182	223925	Bracket-Fuel Tank (R.H.)	
182A	223866	Bracket-Fuel Tank (L.H.)	
188	94480	Screw-Sem	
201	262767	Link-Governor	
209	260871	Spring-Governor	
216	262766	Link-Choke	
222	495611	Plate-Gov. Control	
232	262785	Spring-Governor Link	

Ref. No.	Part No.	Description	No. Used
265	221535	Clamp-Casing	
482	93621	Screw-Sem	
527	221428	Clamp	
657	93496	Screw-Sem	
663	94620	Screw-Hex. Hd.	
683	93572	Screw-Hex. Hd.	
877	393814	Diode Assy.	
887	391529	Alternator	

★ Included in Gasket Set-Part No. 494241.

◆ Included in Carburetor Gasket Set-Part No. 494385.

● Included in Carburetor Kit-Part No. 496622.

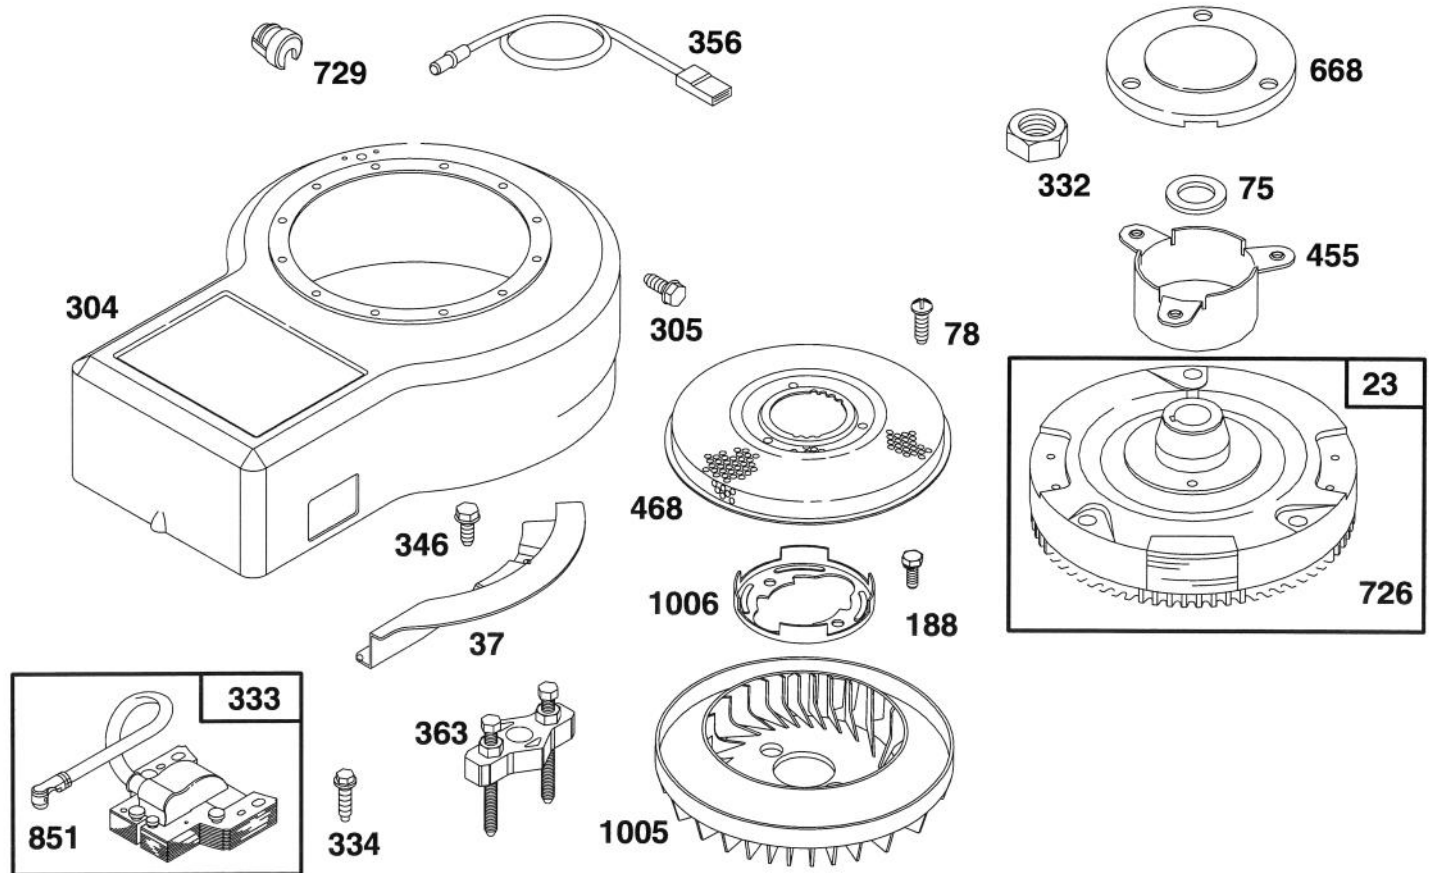

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28B707-0122-01


Ref. No.	Part No.	Description	No. Used
23	492326	Flywheel	
37	224502	Guard—Flywheel	
74	93758	Screw—Sem	
75	224061	Washer—Spring	
78	94626	Screw—Sem	
188	94627	Screw—Sem	
304	496319	Housing—Blower	
332	92284	Nut—Hex.	
333	492341	Armature—Magneto	
334	94731	Screw—Sem	
346	93705	Screw—Hex. Head	

Ref. No.	Part No.	Description	No. Used
356	494328	Wire—Ground	
363	19203	Puller—Flywheel	
455	222561	Cup—Screen Mounting	
468	224517	Screen—Rotating	
668	280848	Spacer	
726	392134	Gear—Ring (Includes Mtg. Hardware)	
729	281159	Clip—Lead Wire	
851	493880	Terminal—Ignition Cable	
1005	280687	Fan—Flywheel	
1006	224413	Retainer—Fan	

★ Included in Gasket Set—Part No. 494241.

◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 496622.

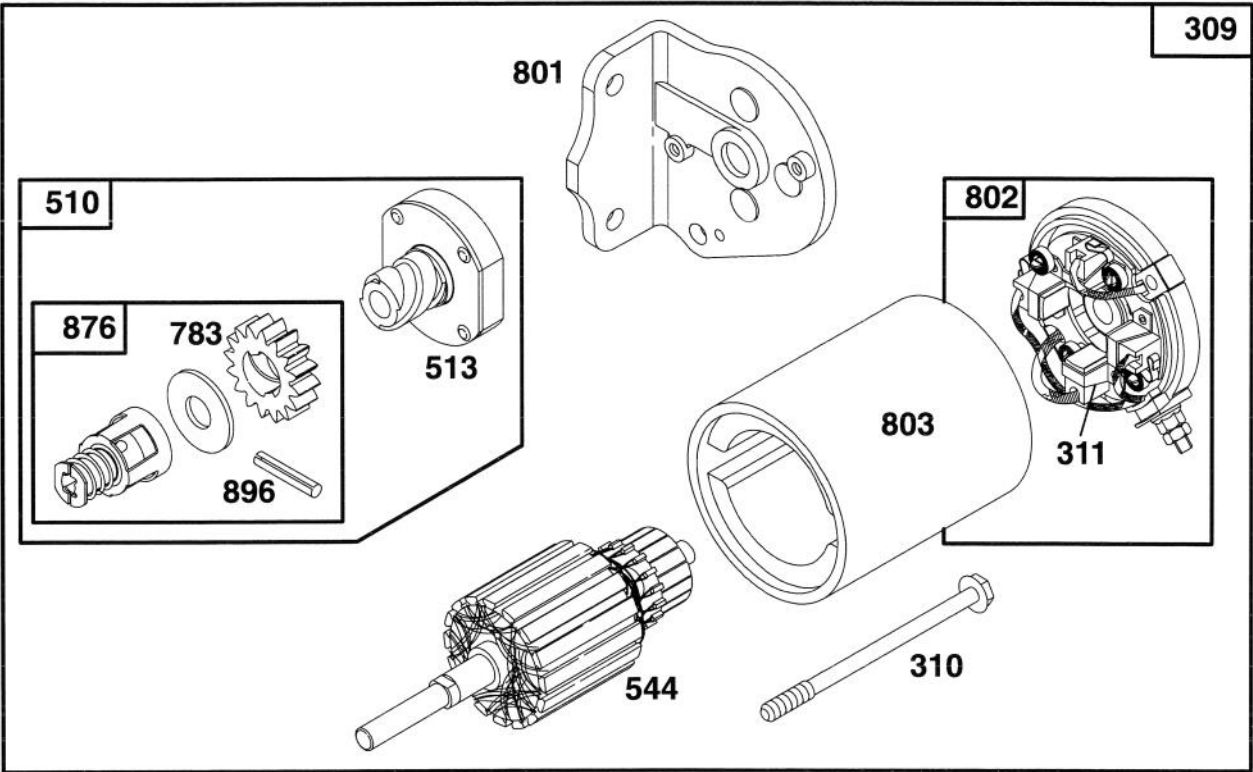

Assemblies include all parts shown in frames.




ENGINE BRIGGS & STRATTON MODEL 28B707-0122-01

Ref. No.	Part No.	Description	No. Used
309	394805	Motor-Starter	
310	94003	Bolt-Thru	
311	395538	Brush Set-Starter	
510	495878	Drive-Starter	
513	398003	Clutch Assembly	
544	390837	Armature-Starter	

Ref. No.	Part No.	Description	No. Used
783	280104	Gear	
801	394856	Cap-Drive	
802	395537	Cap-End	
803	398159	Housing-Starter	
876	495877	Kit-Spring	
896	94288	Pin-Roll	

★ Included in Gasket Set-Part No. 494241.
◆ Included in Carburetor Gasket Set-Part No. 494385.

● Included in Carburetor Kit-Part No. 496622.

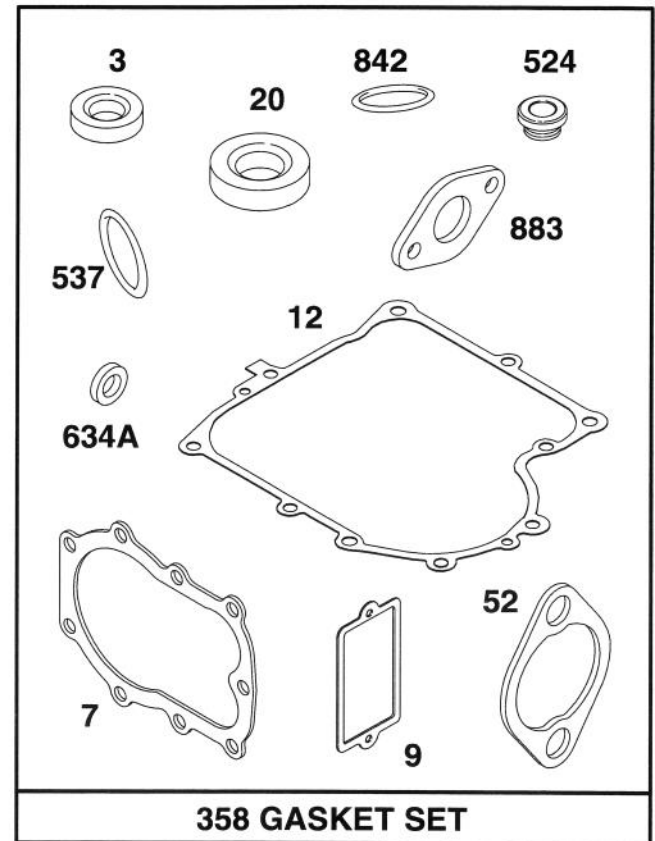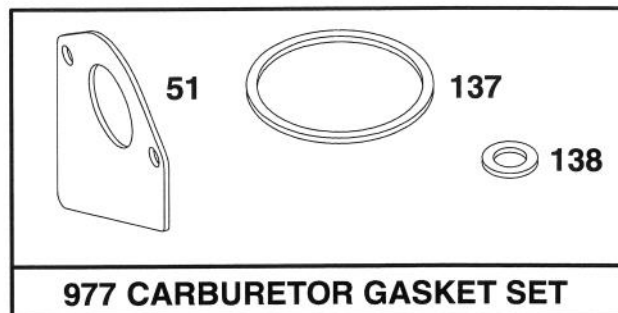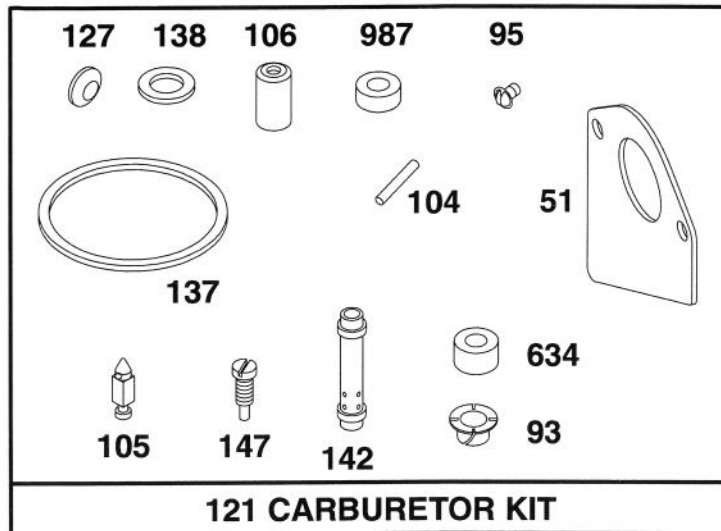

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 28B707-0122-01

Ref. No.	Part No.	Description	No. Used
★3	391086	Seal—Oil	
★7	271866	Gasket—Cylinder Head	
★9	27803	Gasket—Valve Cover	
★12	271916	Gasket—Crankcase (.015" Thick)	
★	271997	Gasket—Crankcase (.005" Thick)	
★	271996	Gasket—Crankcase (.009" Thick)	
★20	291675	Seal—Oil	
◆51	272465	Gasket—Carburetor	
★52	272554	Gasket—Carburetor	
●93	281346	Bushing—Throttle Shaft	
●95	94098	Screw—Throttle	
●104	231789	Pin—Float Hinge	
●105	231855	Valve—Inlet Needle	
●106	231854	Inlet Valve Seat	
121	496622	Carburetor Kit	
●127		Plug—Welch (Sold in Kit Only).	

Ref. No.	Part No.	Description	No. Used
◆137	281165	Gasket—Float Bowl	
◆138	281164	Washer—Float Bowl	
●142	496519	Nozzle—Carburetor Note: 496623 Nozzle—Carb. (High Altitude) Includes: 281164 Washer—Float Bowl	
●147	231794	Pilot—Jet	
358	494241	Gasket Set	
★524	281370	Seal—Filler Tube	
★537	281106	Gasket—Air Cleaner	
●634	281168	Seal—Choke Shaft	
★634A	491323	Seal—Governor	
★842	270920	Seal—Oil Filler Cap	
★883	272293	Gasket—Muffler	
977	494385	Carburetor Gasket Set	
●987	281166	Seal—Throttle	

★ Included in Gasket Set—Part No. 494241.
◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 496622.

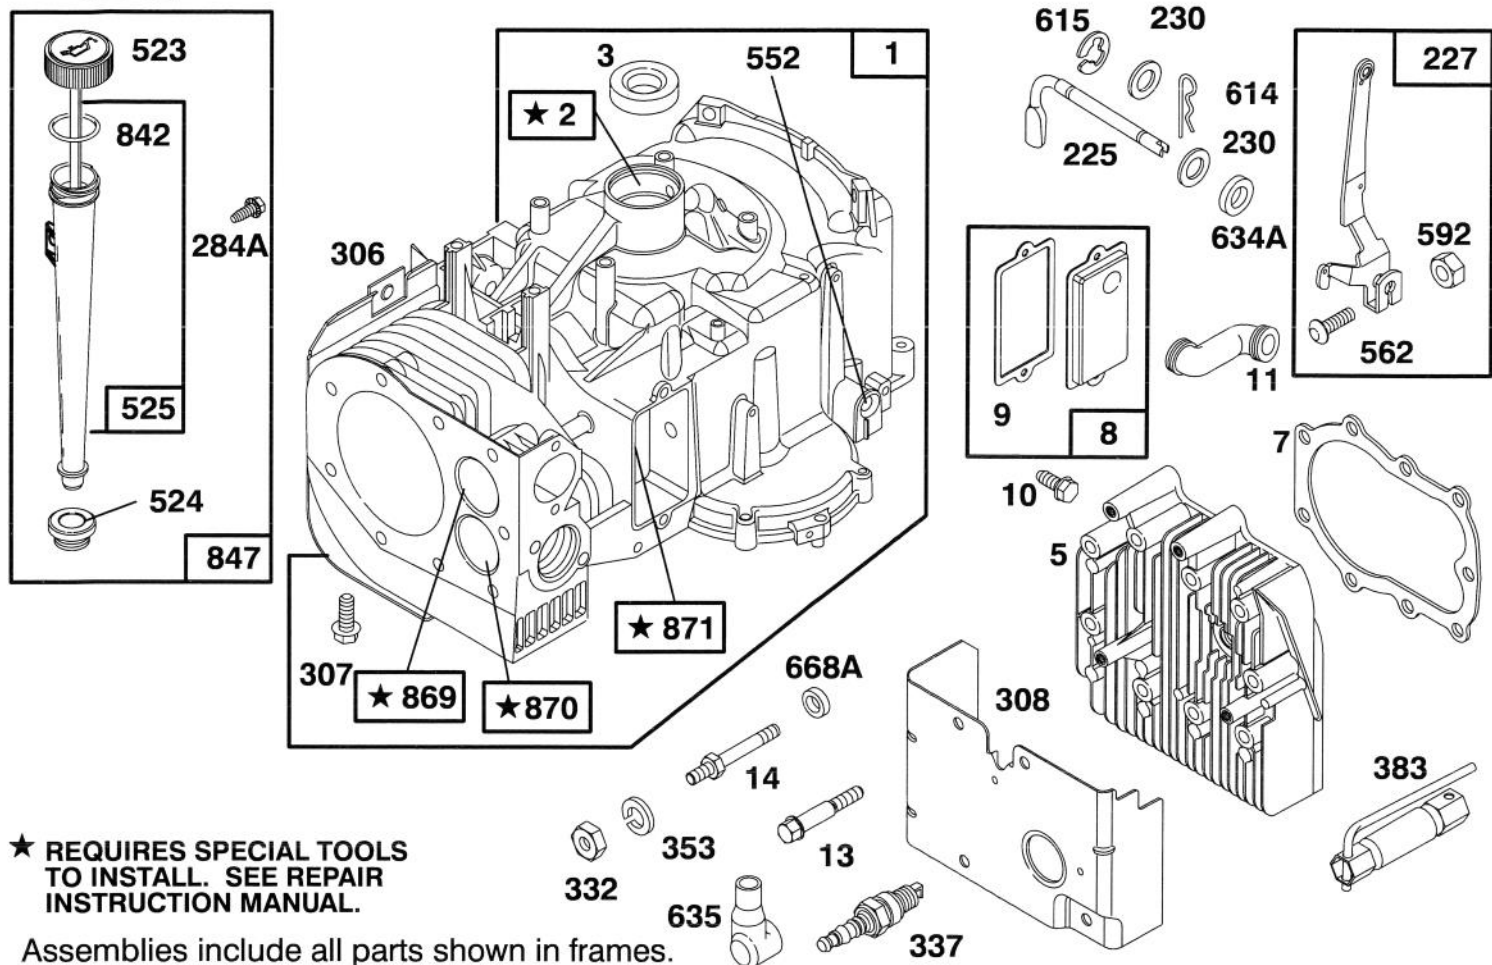

ENGINE BRIGGS & STRATTON MODEL 283707-0160-01


Ref. No.	Part No.	Description	No. Used
1	496413	Cylinder Assembly	
2	399265	Bearing—Cylinder	
★3	391086	Seal—Oil	
5	494240	Head—Cylinder	
★7	271866	Gasket—Cylinder Head	
8	495735	Breather Assembly	
★9	27803	Gasket—Valve Cover	
10	94621	Screw—Sem	
11	280100	Tube—Breather	
13	94622	Screw—Cylinder Head	
14	94776	Stud—Cyl. Head	
225	231058	Crank—Governor	
227	493935	Lever Assy.—Governor	
230	94742	Washer—Gov. Crank	
284A	94073	Screw—Hex Head	
306	224545	Shield—Cylinder	
307	94386	Screw—Cyl. Shield Mtg.	
308	491490	Cover—Cylinder Head	
332	94314	Nut—Hex.	
337	802592	Plug—Spark	

Ref. No.	Part No.	Description	No. Used
353	94315	Washer—Lock	
383	89838	Wrench—Spark Plug	
523	495230	Cap—Oil Filler	
★524	281370	Seal—Filler Tube	
525	496113	Tube—Oil Filler	
552	231597	Bushing—Gov. Crank	
562	92613	Bolt—Governor Lever	
592	231082	Nut—Hex.	
614	93306	Cotter—Hair Pin	
615	93307	Retainer—E-Ring	
★634A	491323	Seal—Governor	
635	66538	Elbow—Spark Plug	
668A	231109	Spacer	
★842	270920	Seal—Oil Filler Cap	
847	496415	Fill Group—Oil	
869	261463	Seat—Intake Valve (Std.)	
870	213316	Seat—Exhaust Valve (Std.)	
871	261961	Guide—Exhaust Valve	
		Note: 231218 Guide—Intake Valve	

★ Included in Gasket Set—Part No. 494241.

◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 494241.

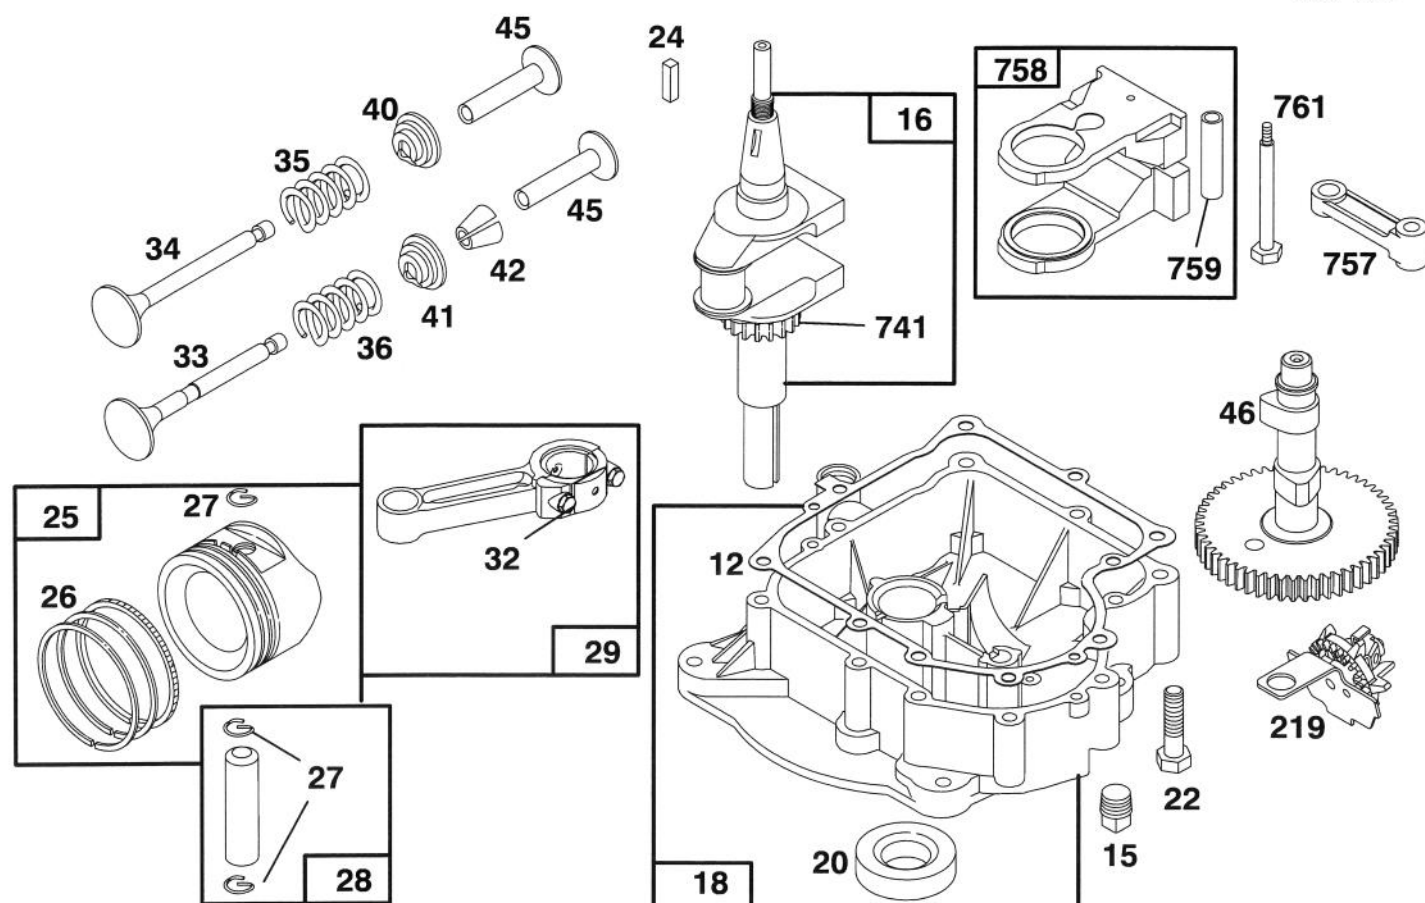

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 283707-0160-01

Ref. No.	Part No.	Description	No. Used
★12	271916	Gasket—Crankcase (.015" Thick)	
★	271997	Gasket—Crankcase (.005" Thick)	
★	271996	Gasket—Crankcase (.009" Thick)	
15	94239	Plug—Oil Drain	
16	495162	Crankshaft	
	94196	Key—Timing Gear	
18	494238	Base—Engine	
★20	291675	Seal—Oil	
22	94624	Screw—Base Mtg. Sem	
24	222698	Key—Flywheel	
25	394661	Piston Assy. (Std.)	
	394662	Piston Assy. (.010" O.S.)	
	394663	Piston Assy. (.020" O.S.)	
	394664	Piston Assy. (.030" O.S.)	
26	391780	Ring Set—Piston (Std.)	
	391781	Ring Set—Piston (.010" O.S.)	
	391782	Ring Set—Piston (.020" O.S.)	
	391783	Ring Set—Piston (.030" O.S.)	
27	260924	Lock—Piston Pin	



Ref. No.	Part No.	Description	No. Used
28	299691	Pin Assy.—Piston (Standard)	
	391286	Pin Assy.—Piston (.005" O.S.)	
29	490348	Rod Assembly—Connecting	
	490469	Rod—Connecting	
		(.020" U.S. Crankpin Bore)	
32	94671	Screw—Connecting Rod	
33	262246	Valve—Exhaust	
34	262247	Valve—Intake	
35	65906	Spring—Intake Valve	
36	26828	Spring—Exhaust Valve	
40	221596	Retainer—Intake Valve	
41	292260	Rotocoil—Exhaust Valve	
42	93630	Retainer—Ex. Valve Rotocoil	
45	262248	Tappet—Valve	
46	212897	Gear—Cam	
219	490815	Oil Slinger, Gov. Gear Assy.	
741	262932	Gear—Timing	
757	213998	Link—Counterweight	
758	399891	Counterweight Assy.	
759	298909	Pin—Counterweight	
761	94593	Screw—Counterweight	

★ Included in Gasket Set—Part No. 494241.

◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 494241.

1058 OWNER'S MANUAL

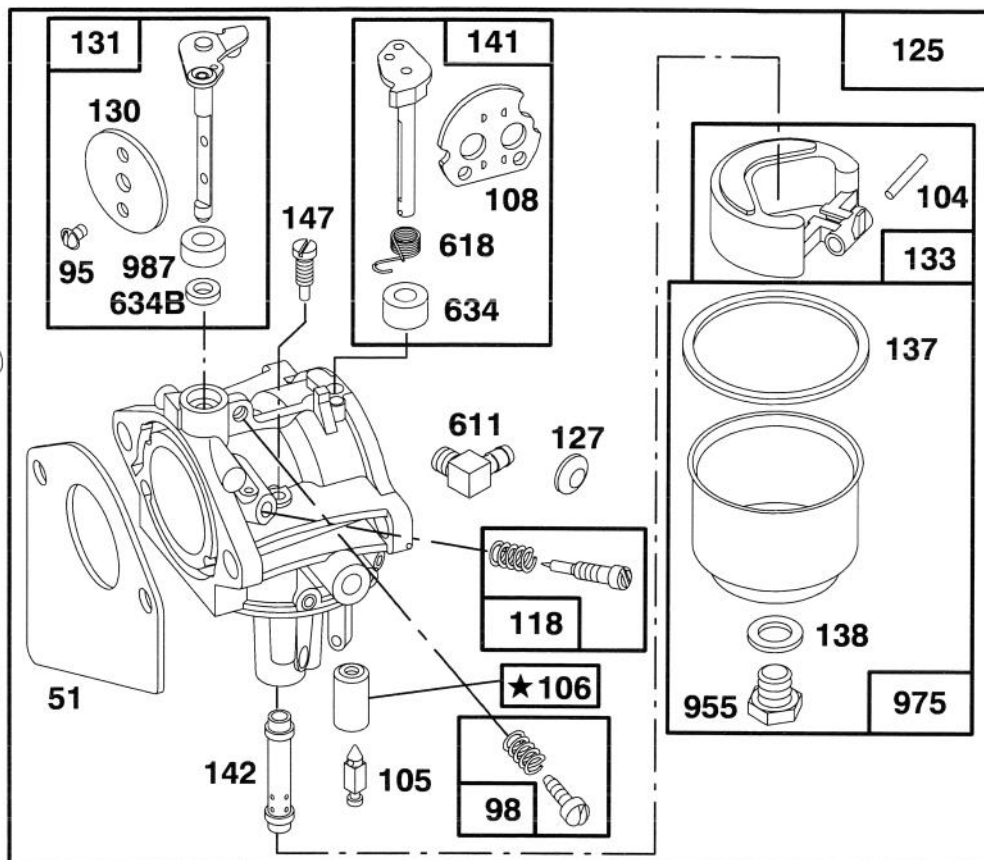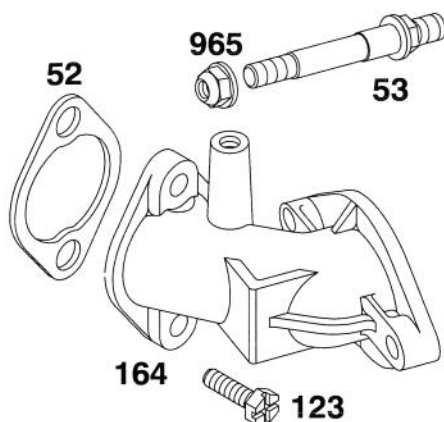

★ REQUIRES SPECIAL TOOLS
TO INSTALL. SEE REPAIR
INSTRUCTION MANUAL.

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 283707-0160-01


Ref. No.	Part No.	Description	No. Used
◆51	272465	Gasket—Carburetor (Carb. to Elbow)	
★52	272554	Gasket—Carburetor (Elbow to Cylinder)	
53	94637	Stud—Carb. Mtg.	
●95	94098	Screw—Throttle	
98	495800	Screw—Idle Speed	
●104	231789	Pin—Float Hinge	
●105	231855	Valve Assy.—Inlet Needle	
●106	231854	Inlet Valve Seat	
108	224540	Valve—Choke	
118	494383	Valve—Needle	
121	495799	Carburetor Kit	
123	94616	Screw—Elbow Mtg.	
125	495706	Carburetor Assembly	
●127		Plug—Welch (Sold in Kit Only).	
130	224539	Valve—Throttle	
131	494379	Shaft—Throttle	

Ref. No.	Part No.	Description	No. Used
133	494381	Float—Carburetor	
◆137	281165	Gasket—Float Bowl	
◆138	281164	Washer—Float Bowl Screw	
141	495931	Shaft—Choke	
●142	494537	Nozzle—Carburetor	
●147	231794	Pilot—Jet	
164	213819	Carburetor—Elbow	
611	494451	Fuel Inlet Tube	
618	262803	Spring—Choke Return	
●634	281168	Seal—Choke Shaft	
●634B	398970	Washer—Throttle Shaft	
955	94642	Screw—Fuel Bowl	
965	94010	Locknut—Air Cleaner Mtg.	
975	494378	Bowl Assy.—Carburetor	
977	494385	Carburetor Gasket Kit	
●987	281166	Seal—Throttle Shaft	
1058	272697	Owner's Manual	

★ Included in Gasket Set—Part No. 494241.

◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 494241.

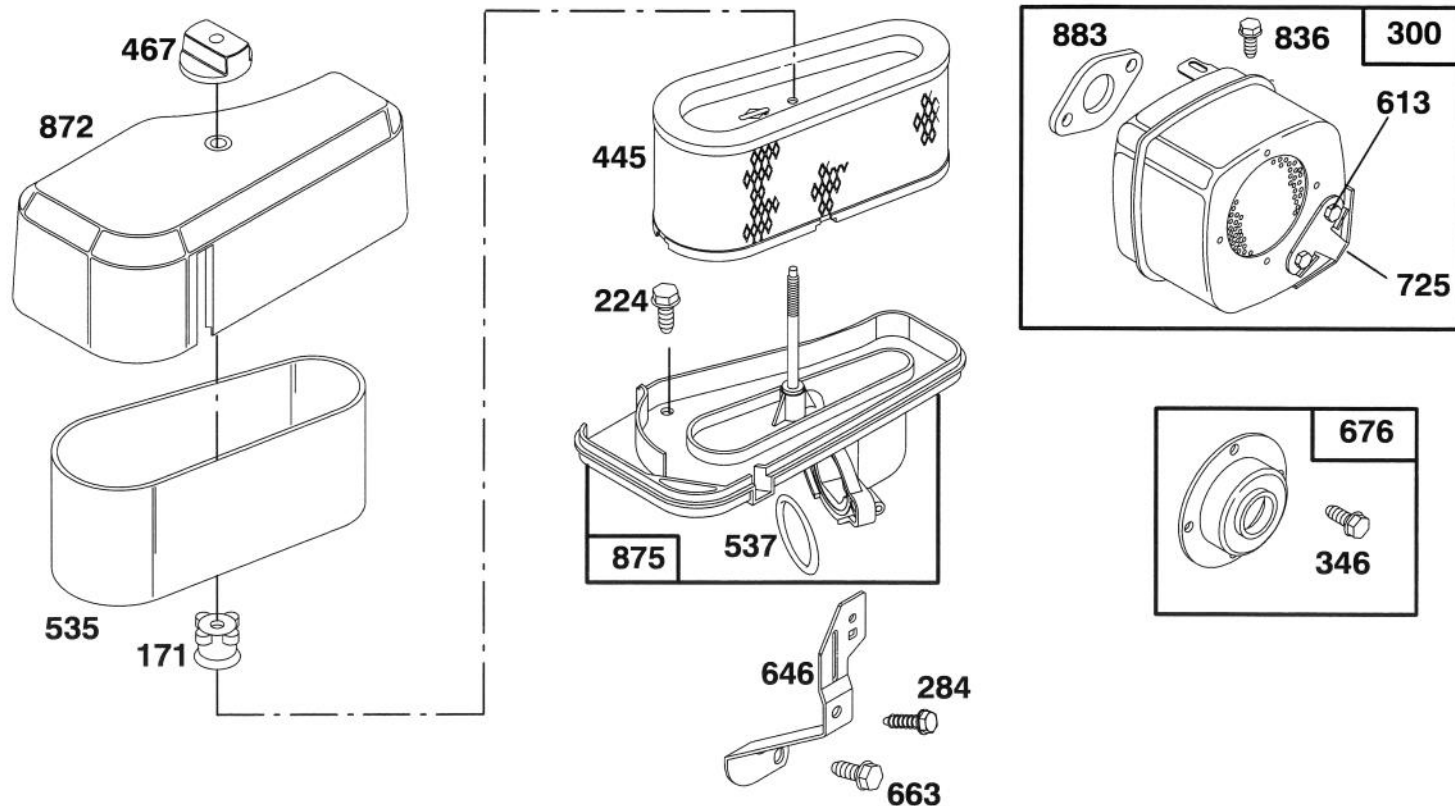

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 283707-0160-01


Ref. No.	Part No.	Description	No. Used
171	281051	Nut—Air Cleaner Mtg.	
224	94513	Screw—Air Cleaner Sem	
284	94704	Screw Hex. Head	
300	491413	Muffler—Exhaust	
346	93705	Screw—Hex. Head	
445	493909	Cartridge—Air Cleaner	
467	493903	Knob—Air Cleaner	
535	272403	Element—Air Cleaner	
★537	281106	O-Ring—Air Cleaner	

Ref. No.	Part No.	Description	No. Used
613	93927	Screw—Hex. Head	
646	224546	Brace—Air Cleaner	
663	94620	Screw—Hex. Hd.	
676	396903	Deflector—Muffler	
725	223023	Shield—Muffler	
836	94786	Screw—Hex. Head	
872	281104	Cover—Air Cleaner	
875	494237	Body—Air Cleaner	
★883	272293	Gasket—Exhaust Pipe	

★ Included in Gasket Set—Part No. 494241.

◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 494241.

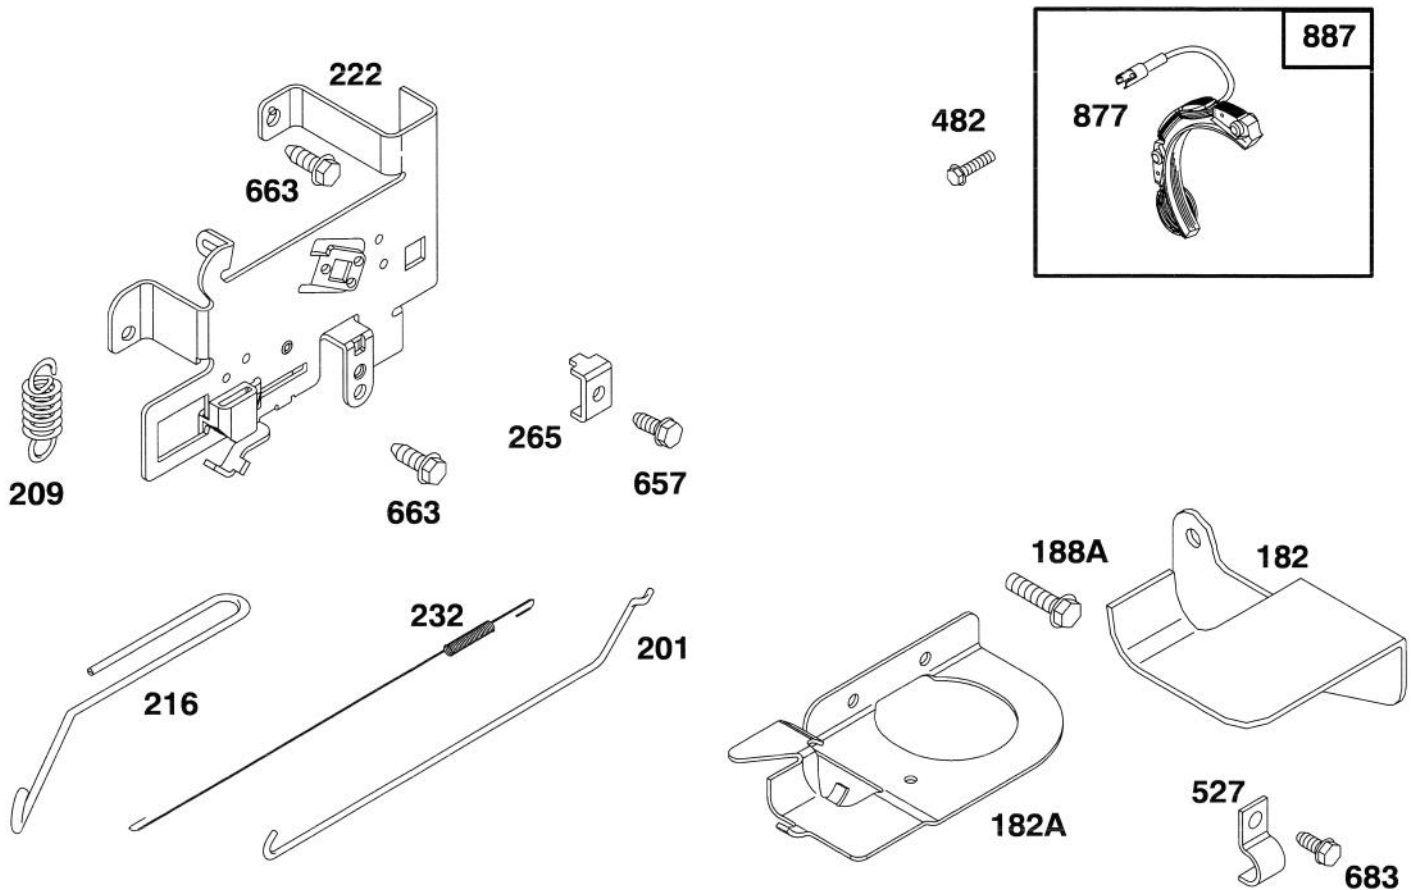

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 283707-0160-01


Ref. No.	Part No.	Description	No. Used
182	223925	Bracket—Fuel Tank	
182A	223866	Bracket—Fuel Tank	
188A	94480	Screw—Sem	
201	262767	Link—Governor	
209	260871	Spring—Governor	
216	262766	Link—Choke	
222	495611	Plate—Governor Control	
232	262785	Spring—Governor Link	

Ref. No.	Part No.	Description	No. Used
265	221535	Clamp—Casing	
482	93621	Screw—Sem	
527	221428	Clamp	
657	93496	Screw—Sem	
663	94620	Screw—Hex. Head	
683	93572	Screw—Hex. Head	
877	393814	Diode and Connector Assy.	
887	391529	Alternator	

★ Included in Gasket Set—Part No. 494241.

◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 494241.

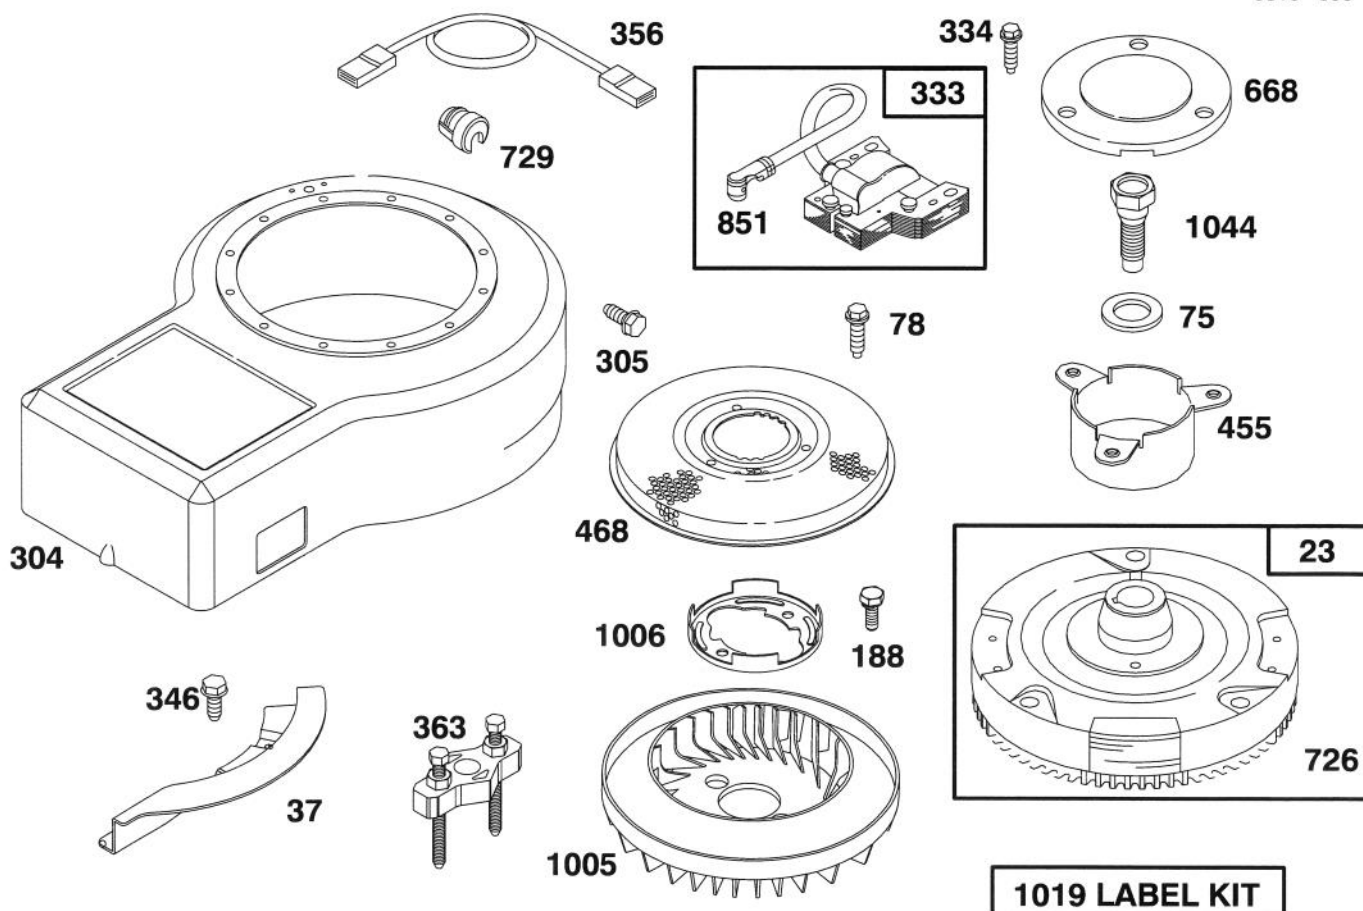

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 283707-0160-01


Ref. No.	Part No.	Description	No. Used
23	492326	Flywheel	
37	224502	Guard-Flywheel	
75	224061	Washer-Spring	
78	93805	Screw-Sem	
188	93535	Screw-Sem	
304	496319	Housing-Blower	
305	94619	Screw-Blower Housing Mtg.	
333	492341	Armature-Magneto	
334	93381	Screw-Armature Mtg.	
346	93705	Screw-Hex. Head	
356	494328	Wire Assembly	
363	19203	Puller-Flywheel	

Ref. No.	Part No.	Description	No. Used
455	222561	Cup-Screen Mounting	
468	222562	Screen-Flush Rotating	
668	280848	Spacer	
726	392134	Gear-Ring	
		(Includes Mtg Hardware)	
729	281159	Clip-Lead Wire	
851	493880	Terminal-Ignition Cable	
1005	280687	Fan-Flywheel	
1006	224413	Retainer-Fan	
1019	491255	Label Kit	
1044	94673	Screw-Hex. Head	

★ Included in Gasket Set-Part No. 494241.

◆ Included in Carburetor Gasket Set-Part No. 494385.

● Included in Carburetor Kit-Part No. 494241.

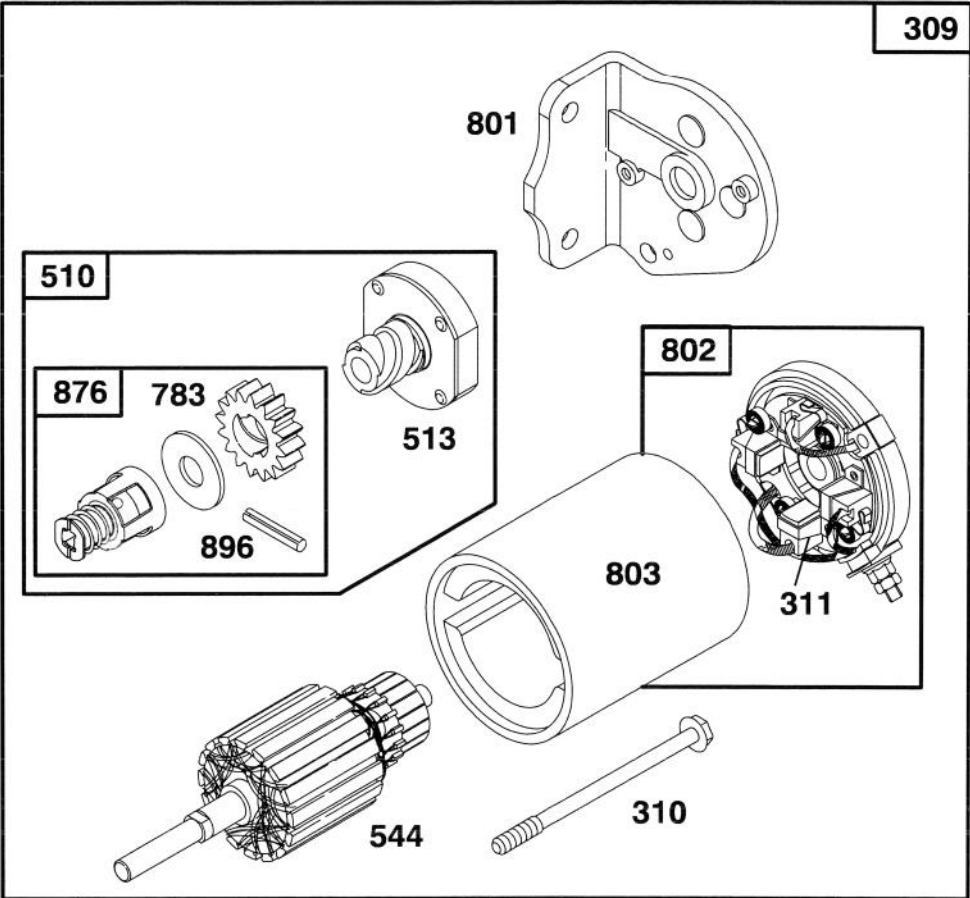

Assemblies include all parts shown in frames.




ENGINE BRIGGS & STRATTON MODEL 283707-0160-01

Ref. No.	Part No.	Description	No. Used
309	394805	Motor-Starter	
310	94003	Bolt-Hex. Hd.	
311	395538	Brush Assy.	
510	495878	Starter Drive Assy.	
513	398003	Clutch Assy.	
544	390837	Armature Assy.	

Ref. No.	Part No.	Description	No. Used
783	280104	Gear	
801	394856	Drive End Cap Assy.	
802	395537	End Cap Assy.-Commutator	
803	398159	Housing Assy.	
876	495877	Retainer And Pin	
896	94288	Pin-Roll	

★ Included in Gasket Set-Part No. 494241.
◆ Included in Carburetor Gasket Set-Part No. 494385.

● Included in Carburetor Kit-Part No. 494241.

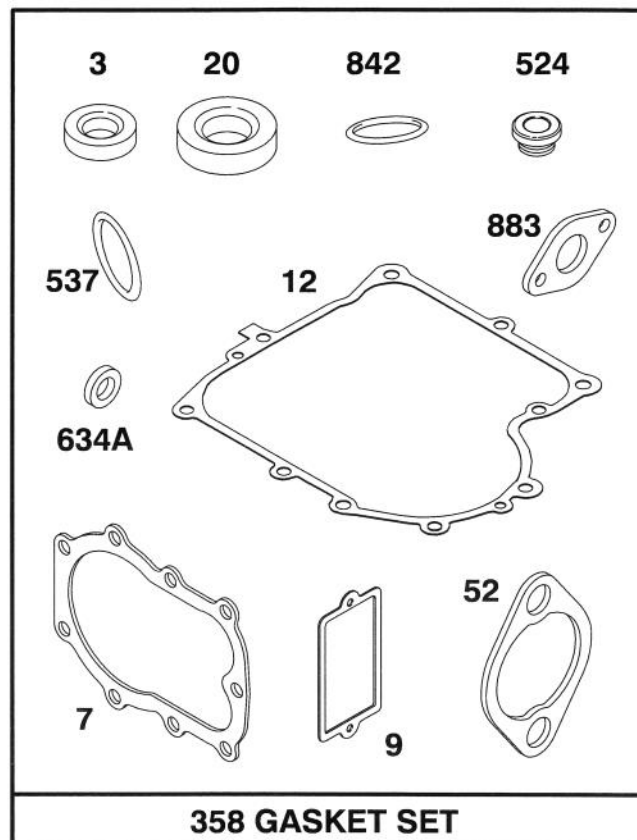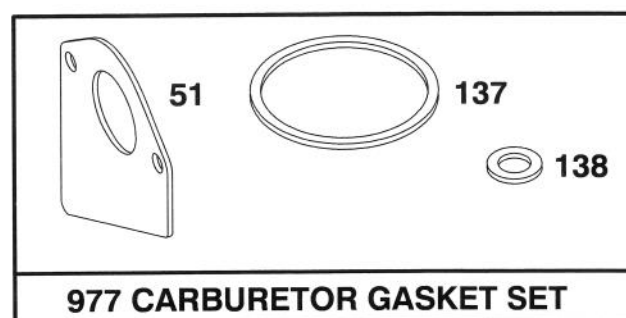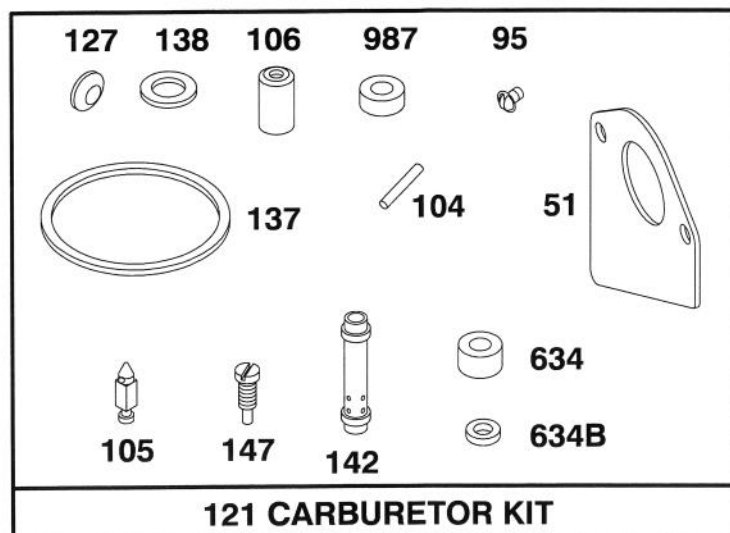

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 283707-0160-01

Ref. No.	Part No.	Description	No. Used
★3	391086	Seal—Oil	
★7	271866	Gasket—Cylinder Head	
★9	27803	Gasket—Valve Cover	
★12	271916	Gasket—Crankcase Cover (.015" Thick)	
★	271997	Gasket—Crankcase Cover (.005" Thick)	
★	271996	Gasket—Crankcase Cover (.009" Thick)	
★20	291675	Seal—Oil	
◆★51	272465	Gasket—Carburetor (Carb. to Elbow)	
★52	272554	Gasket—Carburetor (Elbow to Cylinder)	
●95	94098	Screw—Throttle	
●104	231789	Pin—Float Hinge	
●105	231855	Valve Assy.—Inlet Needle	
●106	231854	Inlet Valve Seat	

Ref. No.	Part No.	Description	No. Used
121	495799	Carburetor Kit	
●127		Plug—Welch (Sold in Kit Only).	
◆●137	281165	Gasket—Float Bowl	
◆●138	281164	Washer—Float Bowl Screw	
●142	494537	Nozzle—Carburetor	
●147	231794	Pilot—Jet	
358	494241	Gasket Set	
★524	281370	Seal—Filler Tube	
★537	281106	O-Ring—Air Cleaner	
●634	281168	Seal—Choke Shaft	
★634A	491323	Seal—Governor	
●634B	394970	Washer—Throttle Shaft	
★842	270920	Seal—Oil Filler Cap	
★883	272293	Gasket—Exhaust Pipe	
977	494358	Carburetor Gasket Set	
●987	281166	Seal—Throttle Shaft	

★ Included in Gasket Set—Part No. 494241.

◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 494241.

TORO PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
114621	Decal - Euro Noise	7 10 1	56-7240	Bracket - Retaining, Spring	3 3 1
147665	Screw - Phillips Hd.	6 1 2	56-7400	Arm - Lever, H.O.C.	5 24 1
147665	Screw - Phillips Head	4 1 2	56-7470	Bracket - Rack, Steering	2 33 1
3-6498	Washer - Thrust	2 5 5	56-7500	Shaft - Steering	2 31 1
7-0036	Key - Square	11 24 2	56-7520	Bushing - Sector	2 22 1
12-5820	Pulley - Idler	9 35 1	56-7530	Bolt - Shoulder	2 20 1
12-8819	Loose Parts	1 * 1	56-7570	Rod - Engagement	3 15 1
12-8829	Loose Parts	1 * 1	56-7650	Tube - Pivot	3 14 1
12-9020	Retainer - Belt	9 34 1	56-7670	Cable - Battery, Positive	9 21 1
14-9999	Deck - Cutting, Recycler	13 49 1	56-7670	Cable - Positive	6 17 1
19-1470	Bolt - Shoulder	5 20 1	56-7710	Hold Down - Battery	8 26 1
26-0671	Bolt - Blade	13 39 1	56-7720	Post - Battery	8 21 1
27-9080	Bearing - Flange	2 15 4	56-7810	Decal - Brake, Parking	1 9 1
28-0380	Spacer - Axle, Front	2 24 1	57-4060	Retainer - Front	9 16 1
28-0540	Bolt - Shoulder	5 8 1	57-4070	Retainer - Rear	9 20 1
28-2480	Washer	11 15 2	57-9940	Spring - Brake	11 17 1
28-2480	Washer	2 43 2	60-9730	Guide - Belt	13 26 2
28-7350	Post - Pivot	13 16 1	61-9760	Wheel - Deck	13 32 2
28-8010	Spring - Torsion	13 10 1	61-9780	Cap - Hub	11 14 2
28-8070	Lanyard	13 55 1	61-9780	Cap - Hub	2 44 2
28-8080	Boot - Terminal	8 22 1	62-3760	Screw - Cap Hex. Hd.	9 27 1
28-8130	Pin - Chute, Locking	13 54 1	62-3930	Spring - Extension	5 5 1
33-4750	Blade - Recycler	13 40 1	62-3930	Spring - Extension	3 6 1
38-1420	Switch - Interlock	7 2 1	62-4300	Pad - Battery	8 25 1
40-6230	Spring - Torsion	13 51 1	62-5480	Spacer	13 58 8
44-5930	Assembly - Deflector	13 11 1	62-5480	Isolator - Seat	7 11 4
47-0010	Arm - Suspension, Front	2 13 2	62-5490	Support - Fuel Line	9 10 1
47-0540	Pedal	3 19 2	63-5540	Base - Seat	7 3 1
47-0550	Bracket - Brake, Pedal	3 17 1	63-5670	Tube - Bumper, Seat Rod	7 7 1
47-0560	Bracket - Clutch, Pedal	3 12 1	63-5830	Link - Suspension, Deck	5 16 2
47-0570	Spacer - Pedal	3 16 3	63-8360	Key	4 6 1
47-0590	Spindle - L.H.	2 * 1	65-2920	Pad - Pedal, Foot	3 5 2
47-0600	Spindle - R.H.	2 4 1	65-5670	Bolt - Shoulder	5 21 1
47-0610	Tie Rod - Adjustable	2 34 1	65-5670	Screw - Shoulder	8 34 1
47-0700	Bearing - Flange	2 27 1	66-1340	Decal - Danger	13 34 1
47-0760	Support - Axle, Front	2 11 1	66-6740	Cover - Shaft, Steering	4 2 1
47-0770	Shaft - Pivot, Pedal	3 8 1	68-3650	Decal - Warning, Deflector	13 13 1
47-0780	Retainer - Shaft	3 9 1	76-1090	Decal - Instructions	4 23 1
47-0930	Footrest - R.H.	1 22 1	76-1560	Spacer	12 13 2
47-0940	Footrest - L.H.	1 16 1	79-0370	Decal - Danger	1 7 1
47-0960	Spring - Compression	13 3 1	80-2310	Bracket - Bell Crank Mount	5 2 1
47-1140	Retainer - Spring, Top	13 2 2	80-2321	Bracket - H.O.C., Engage	5 15 1
47-1180	Bracket - Engagement	13 1 1	80-2330	Link - Bell Crank	8 35 1
47-1200	Shaft - Adjusting	13 4 1	80-2340	Bracket - Pivot, Inner	8 6 1
47-1290	Brake - Parking	1 10 1	80-2350	Pivot - Outer	8 4 1
47-1840	Bracket - Height-of-Cut	5 13 1	80-2360	Crank - Bell, Deck Engage	5 22 1
47-1850	Lever - Height-of-Cut	5 6 1	80-2370	Shaft W.A. - Pivot	8 5 1
47-1910	Solenoid	6 12 1	80-2400	Lever W.A. - Engage	8 2 1
47-2060	Bracket - Brake, Parking	1 19 1	80-2430	Axle - Front	2 18 1
47-2961	Hose - Fuel Line	9 9 1	80-2450	Rack - Steering	2 19 1
48-4700	Module - Interlock	6 11 1	80-2460	Tie Rod - Fixed	2 * 1
49-3242	Assy. - Wheel, Steering	4 5 1	80-2530	Assembly - Brake	13 50 1
54-9220	Decal - Caution, Deflector	13 12 1	80-2550	Pad - Brake	13 6 1
55-3570	Cap - Fuel	9 14 1	80-2560	Plate - Deck, Brake Mtg.	13 47 1
56-2540	Tube - Vent, Battery	8 37 1	80-2570	Pin - Clevis	13 5 2
56-6590	Bolt - Wheel	13 33 2	80-2580	Rod - Adjusting	13 52 1
56-7030	Body - Spindle	13 44 1	80-2600	Battery - 12 Volt	8 24 1
56-7050	Tank - Fuel	9 15 1	80-2620	Rod - Base, Seat	7 8 1
56-7070	Spring - Torsion, Clutch	3 11 1	80-2630	Kicker - 32	13 29 4
56-7080	Spring - Torsion, Brake	3 18 1	80-4350	Shaft - Spindle	13 41 1
56-7130	Tower - Front	1 4 1	80-4370	Shield - Bearing	13 42 1
56-7140	Tower - Rear	1 8 1	80-4390	Spacer - Hardened	13 43 1
56-7170	Guide - Shaft, Steering	1 6 1	80-4470	Pulley	13 22 1
56-7180	Cover - Front	2 30 1	80-4490	Ring - Deck	13 48 4

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3316-800

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
80-4570	Stiffener - Blade	13 37 1	233-48	Knob	8 1 2
82-6150	Assy. - Cover, Discharge	13 14 1	233-48	Knob	5 19 1
83-7010	Brace - Cover, Rear	13 17 1	237-143	O-Ring	8 27 2
83-7020	Spacer - Bearing	13 25 1	2411-32	Ball Joint	8 31 1
88-3950	Assembly - Seat	7 1 1	2412-68	Clamp	4 17 2
88-4490	Reducer - Throttle	9 * 1	2412-68	Clamp - Wire	7 4 1
88-9730	Rim	11 12 2	2412-98	Clamp - Hose	9 8 2
88-9800	Cover - Gate, Shift	6 24 1	251-210	Bearing	2 2 4
88-9830	Switch - Ignition	4 10 1	251-297	Bearing	13 21 2
88-9930	Switch - Micro, Short	6 4 1	257-11	Washer	8 18 1
88-9931	Switch - Micro	4 24 1	283-2	Pin - Clevis	2 16 2
92-0860	Frame	6 14 1	283-2	Pin - Clevis	13 45 2
92-0861	Frame - Rear	12 8 1	283-52	Pin - Clevis	1 20 1
92-0862	Transaxle	11 8 1	288-10	Cap - Pipe	9 22 1
92-0864	Standbar	12 5 1	289-19	Nipple - Pipe	9 23 1
92-0865	Support - Axle	12 9 2	302-5	Fitting - Grease	2 1 2
92-0866	Body W.A. - Seat Support	6 8 1	302-49	Fitting - Grease	2 17 2
92-0870	V-Belt - Traction	11 4 1	321-4	Screw - Cap Hex. Hd.	13 8 1
92-0871	Rod - Traction	9 29 1	321-4	Screw - Cap Hex. Hd.	3 10 1
92-0872	Rod - Brake	11 18 1	321-4	Screw - Cap Hex. Hd.	5 11 4
92-0873	Pulley - Engine	9 24 1	321-4	Screw - Cap Hex. Hd.	8 12 2
92-0874	Pulley	11 7 1	321-4	Screw - Cap Hex. Hd.	6 13 2
92-0875	V-Belt	13 24 1	321-4	Screw - Cap Hex. Hd.	1 21 2
92-0876	Guard - Front	2 37 1	322-5	Screw - Cap Hex. Hd.	3 2 1
92-0877	Panel - Seat Base, R.H.	6 21 1	322-5	Screw - Cap Hex. Hd.	12 6 15
92-0878	Panel L.H. - Base, Seat	5 9 1	322-5	Screw - Cap Hex. Hd.	6 6 2
92-0879	Spring	9 1 1	322-5	Screw - Cap Hex. Hd.	3 7 2
92-0880	Arm - Shift, Transaxle	11 23 1	322-5	Screw - Cap Hex. Hd.	8 8 4
92-0881	Bracket W.A. - Traction	9 4 1	322-5	Screw - Cap Hex. Hd.	13 9 10
92-0883	Plate - Mounting, Idler	9 2 1	322-5	Screw - Cap Hex. Hd.	2 9 8
92-0884	Lever W.A. - Shaft	8 10 1	322-5	Screw - Cap Hex. Hd.	5 12 2
92-0887	Support - Shift, Lower	8 19 1	322-5	Screw - Cap Hex. Hd.	1 14 10
92-0888	Support - Shift, Upper	8 14 1	322-5	Screw - Cap Hex. Hd.	4 16 8
92-0889	Link - Shift	11 1 1	322-6	Screw - Cap Hex. Hd.	13 20 3
92-0890	Control - Throttle	4 15 1	322-7	Screw - Cap Hex. Hd.	9 28 1
92-0891	Shaft W. A. - Shift	8 16 1	322-12	Screw - Cap Hex. Hd.	12 10 4
92-0894	Spring - Torsion	8 11 1	322-14	Screw - Cap Hex. Hd.	12 11 2
92-0895	Gate - Shift	6 3 1	322-50	Screw - Cap Hex. Hd.	12 4 1
92-0896	Retainer - Spring	8 29 1	323-9	Screw - Cap Hex. Hd.	9 32 1
92-0897	Spacer	12 1 1	325-6	Screw - Cap Hex. Hd.	2 8 1
92-0898	Guide - Belt	12 2 1	329-4	Screw - Cap Hex. Hd.	11 3 1
92-0899	Guide - Belt, Lower	11 21 1	3218-1	Nut - Jam	6 18 2
92-1751	Decal - Shift Pattern	6 2 1	3219-7	Nut - Hex. Hd.	13 23 1
92-7974	Tread - Foot R.H.	1 * 1	3220-2	Nut - Hex. Jam	2 7 1
92-7975	Tread - Foot L.H.	1 15 1	3230-18	Bolt - Carriage	2 32 2
92-7982	Decal - Control Panel	5 27 1	3253-3	Washer - Lock	11 2 1
92-7983	Decal - Deck Engage	4 9 1	3253-3	Washer - Lock	6 16 4
92-7984	Decal - H.O.C.	4 21 1	3253-3	Washer - Lock	9 18 2
92-7985	Decal - L.H. (Model 70100)	5 10 1	3253-6	Washer - Lock	9 26 1
92-7986	Decal - L.H. (Model 70141)	5 10 1	3254-2	Washer - Lock, Int. Tooth	9 5 4
92-7987	Decal - Recycler	1 3 1	3254-2	Washer - Lock, Int. Tooth	11 20 1
92-7988	Decal - Recycler	13 35 1	3254-5	Washer - Lock, Int. Tooth	4 8 1
92-7989	Decal - Important	2 39 1	3256-14	Washer - Flat	6 9 1
92-7990	Insert - Wheel, Steering	4 4 1	3256-22	Washer - Flat	8 13 2
217-80	Rim	2 3 2	3256-22	Washer - Flat	1 18 2
218-461	Nut - Lock	4 7 1	3256-22	Washer - Flat	9 30 1
218-560	Cap - Battery	8 28 6	3256-23	Washer - Flat	12 7 12
231-116	Tire	2 42 2	3256-23	Washer - Flat	6 7 2
231-117	Tire	11 10 2	3256-23	Washer - Flat	1 13 8
232-27	Stem - Valve	11 16 2	3256-23	Washer - Flat	5 17 4
232-27	Valve Stem w/Cap	2 41 2	3256-23	Washer - Flat	4 18 7
232-39	Tube - Inner	11 11 2	3256-23	Washer - Flat	2 23 6
232-44	Tube - Inner	2 2 2	3256-23	Washer - Flat	13 27 8
233-25	Knob	4 13 1	3256-23	Washer - Flat	8 33 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3256-24	Washer - Flat	1 11 1	3296-29	Nut - Lock	11 19 1
3256-24	Washer - Flat	9 33 1	3296-29	Nut - Lock	13 19 24
3256-25	Washer - Flat	9 25 1	3296-29	Nut - Lock	4 19 4
3256-26	Washer - Flat	5 25 1	3296-29	Nut - Lock	8 32 4
3256-27	Washer - Flat	3 13 3	3296-39	Nut - Lock	9 3 1
3256-35	Washer - Flat	1 1 4	3296-39	Nut - Lock	13 31 2
3256-49	Washer - Flat	13 56 1	3296-42	Nut - Lock	6 15 2
3256-57	Washer - Flat	9 36 1	3296-42	Nut - Lock	8 15 2
3257-23	Key	11 6 1	3296-42	Nut - Lock	1 17 2
3272-6	Pin - Cotter	3 1 3	3296-42	Nut - Lock	5 18 1
3272-6	Pin - Cotter	5 4 2	3296-47	Nut - Lock	12 12 1
3272-6	Pin - Cotter	1 12 1	3296-59	Nut - Lock	13 15 1
3272-6	Pin - Cotter	2 14 2	32103-2	Nut - Wing	13 18 1
3272-6	Pin - Cotter	11 22 1	32103-12	Nut - Wing	8 20 1
3272-6	Pin - Cotter	9 31 1	32103-22	Nut - Wing	8 23 2
3272-6	Pin - Cotter	13 36 2	32104-76	Screw - Self Tap Acorn Hd.	1 5 9
3272-12	Pin - Cotter	2 45 2	32104-76	Screw - Self-Tapping	4 14 2
3272-16	Pin - Cotter	11 9 1	32107-11	Nut - Square	9 17 2
3274-51	Screw - Hex. Socket Hd.	9 19 2	32120-47	Ring - Retaining	8 7 1
3290-134	Screw - Machine	6 10 1	32120-64	Ring - Retaining	11 5 1
3290-191	Nut - Speed	6 23 2	32121-9	Pin - Roll	2 28 1
3290-282	Rivet	13 7 2	32121-16	Pin - Roll	8 17 1
3290-282	Rivet	13 53 2	32121-25	Pin - Roll	8 3 1
3290-307	Pin - Cotter, Hair	7 9 1	32121-78	Pin - Roll	4 3 1
3290-354	Nut - Double	6 20 1	32121-78	Pin - Roll	8 9 1
3290-354	Nut - Double	4 22 1	32122-14	Screw - Truss, Phillips Hd.	13 38 8
3290-378	Tie - Cable	7 6 1	32128-20	Nut - Flange Hd.	7 5 4
3290-413	Washer - Belleville	5 7 8	32128-21	Nut - Lock, Flange Hd.	2 25 1
3290-465	Washer - Belleville	13 57 1	32128-23	Nut - Lock, Flange Hd.	2 26 1
3290-496	Nut - Retainer	13 28 4	32144-4	Screw - Special	2 21 2
3295-43	Rivet	13 7 2	32144-14	Screw	9 12 2
3296-2	Nut - Lock	6 19 1	32144-14	Screw - Thread Forming	2 38 2
3296-4	Nut - Lock	8 30 1	32144-112	Screw - Sems	6 22 2
3296-4	Nut - Lock	2 36 4	32151-48	Ring - Retaining	11 13 2
3296-8	Nut - Lock	2 12 1	32151-48	Ring - Retaining, External	2 35 2
3296-8	Nut - Lock	5 23 1	32151-61	Ring - Retaining	5 14 2
3296-8	Nut - Lock	8 36 1			
3296-8	Nut - Lock	13 46 1			
3296-29	Nut - Lock	5 1 7			
3296-29	Nut - Lock	1 2 14			
3296-29	Nut - Lock	12 3 17			
3296-29	Nut - Lock	3 4 3			
3296-29	Nut - Lock	6 5 2			
3296-29	Nut - Lock	9 6 2			
3296-29	Nut - Lock	2 10 8			

OPTIONAL EQUIPMENT

Easy Empty Bagging Kit Model No. 79095

Twin Bag Bagger Kit Model No. 79085

Tire Chains Part No. 23-2340

Wet Grass Bagging Kit Part No. 38-5730

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's

service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]

[illegible]