



## Groundsmaster®7200 and 7210 Mower

Model No. 30360—Serial No. 270000001 and Up  
 Model No. 30360TE—Serial No. 270000001 and Up  
 Model No. 30361—Serial No. 270000001 and Up  
 Model No. 30362—Serial No. 270000001 and Up  
 Model No. 30363—Serial No. 270000001 and Up  
 Model No. 30363TC—Serial No. 270000001 and Up  
 Model No. 30363TE—Serial No. 270000001 and Up  
 Model No. 30364—Serial No. 270000001 and Up  
 Model No. 30364TC—Serial No. 270000001 and Up  
 Model No. 30365—Serial No. 270000001 and Up  
 Model No. 30461—Serial No. 280000001 and Up  
 Model No. 30462—Serial No. 280000001 and Up  
 Model No. 30464—Serial No. 280000001 and Up  
 Model No. 30464TC—Serial No. 280000001 and Up  
 Model No. 30465—Serial No. 280000001 and Up  
 Model No. 30467—Serial No. 280000001 and Up  
 Model No. 30468—Serial No. 280000001 and Up

### Addendum

## Select the Proper Height-of-Cut Setting to Suit Conditions

Remove approximately 1 inch (25 mm) or no more than 1/3 of the grass blade when cutting. In exceptionally lush and dense grass, you may have to slow down the forward speed and/or raise the height-of-cut to the next higher setting.

**Important:** If cutting more than 1/3 of the grass blade off, or in sparse long grass or dry conditions, the use of flat sail blades is recommended to reduce air-borne chaff, debris, and deck drive component strain.

## Keep the Mower Clean

Clean clippings and dirt from the underside of the mower after each use. If grass and dirt build up inside the mower, cutting quality will eventually become unsatisfactory.

To reduce the risk of fire hazard, keep the engine, muffler, battery compartment, parking brake, cutting units, and fuel storage compartment free of grass, leaves, or excessive grease. Clean up any spilled oil or fuel.