



HAYTER

MAKERS OF THE FINEST MOWERS

Parts Catalogue

R53A Recycling Mower

Contents

Description	Page	Description	Page
Housing Component Assembly	 3	Air Cleaner Assembly Briggs and Stratton 126T05-0239-B1	 14
Rear Wheel, Transmission and Side Discharge Chute Assembly	 4	Governor, Controls and Ignition Assembly Briggs and Stratton 126T05-0239-B1	 15
Upper Handle Assembly	 5	Muffler and Fuel Tank Assembly Briggs and Stratton 126T05-0239-B1	 16
Lower Handle Assembly	 6	Blower Housing and Flywheel Assembly Briggs and Stratton 126T05-0239-B1	 17
Blade and Engine Assembly	 7	Rewind Starter Assembly Briggs and Stratton 126T05-0239-B1	 18
Electrical Assembly	 8	Electric Starter Assembly Briggs and Stratton 126T05-0239-B1	 19
Bag Assembly	 9	Engine and Valve Gasket Sets Briggs and Stratton 126T05-0239-B1	 20
Cylinder and Cylinder Head Assembly Briggs and Stratton 126T05-0239-B1	 10	Carburetor Overhaul Kit Briggs and Stratton 126T05-0239-B1	 21
Crankshaft, Piston, Ring and Connecting Rod Assembly Briggs and Stratton 126T05-0239-B1	 11		
Crankcase Cover and Sump Assembly Briggs and Stratton 126T05-0239-B1	 12		
Carburetor Assembly Briggs and Stratton 126T05-0239-B1	 13		


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- | | |
|---|--|
| ❶ Not illustrated | ❷ Not serviced separately |
| ❸ Obtain from your local Briggs & Stratton dealer | ❹ Included in Carburetor Overhaul Kit (Ref. No. 121) |
| ❺ Included in Engine Gasket Set (Ref. No. 358) | ❻ Included in Valve Gasket Set (Ref. No. 1095) |

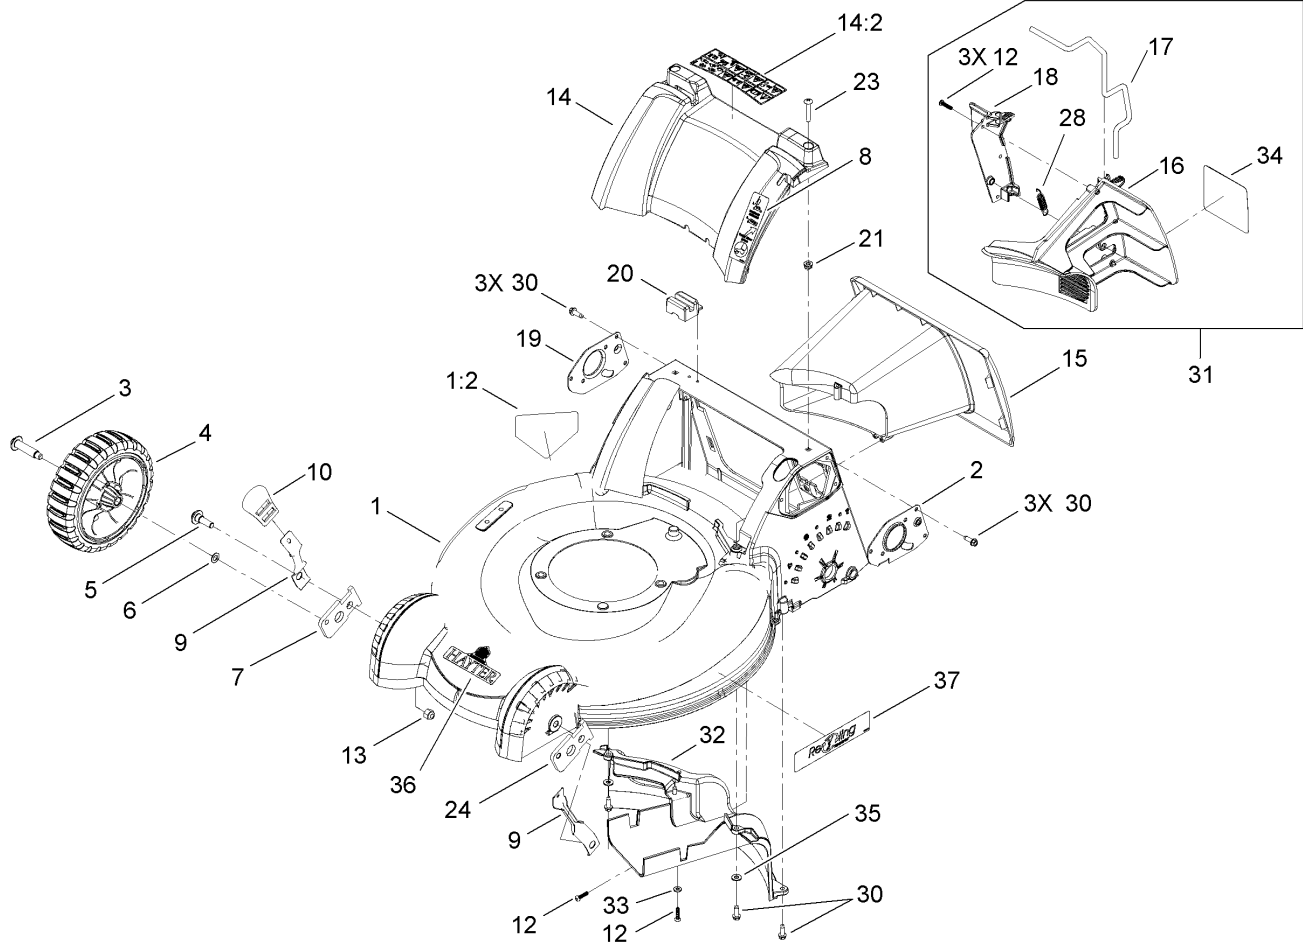

Housing Component Assembly

Ref	Part No.	Qty.	Description
1	117-4111	1	Housing ASM
1:2	112-8760	1	Decal-Danger
2	110-9415-03	1	Mount-Handle, LH
3	614650	2	Bolt-Shoulder
4	117-4103	2	8 Inch Wheel ASM
5	614672	2	Bolt-Shoulder
6	40-1940	2	Washer
7	110-9421	1	Arm-Pivot, RH
8	111-2210	1	Decal-Handle Adjust, Hayter
9	110-9434	2	Arm-Spring, Front
10	110-7125	2	Knob-HOC
12	108-7476	6	Screw-Plastite
13	3296-39	2	Nut-Lock, NI
14	115-3177	1	Cover-Rear
14:2	114-2820	1	Decal-Warning
15	110-9456	1	Tunnel
16	110-9446	1	Plug-Mulch, LH
17	110-9448	1	Latch-Plug, Mulch
18	110-9447	1	Plug-Mulch, RH
19	110-9416-03	1	Mount-Handle, RH
20	110-1787	1	Module-Switch
21	94-1610	2	Nut-Clip
23	108-0965	2	Screw-PTH
24	110-9420	1	Arm-Pivot, LH


Ref	Part No.	Qty.	Description
28	110-9458	1	Spring-Extension
30	49-2040	11	Screw-HWHTF
31	110-9468	1	Mulch Plug ASM
32	110-9413	1	Baffle-Rear
33	3256-14	1	Washer-Flat
34	110-9457	1	Decal-Plug, Mulch
35	3256-22	2	Washer-Flat
36	410087	1	Decal-Hayter
37	114-3233	1	Decal-Recycling

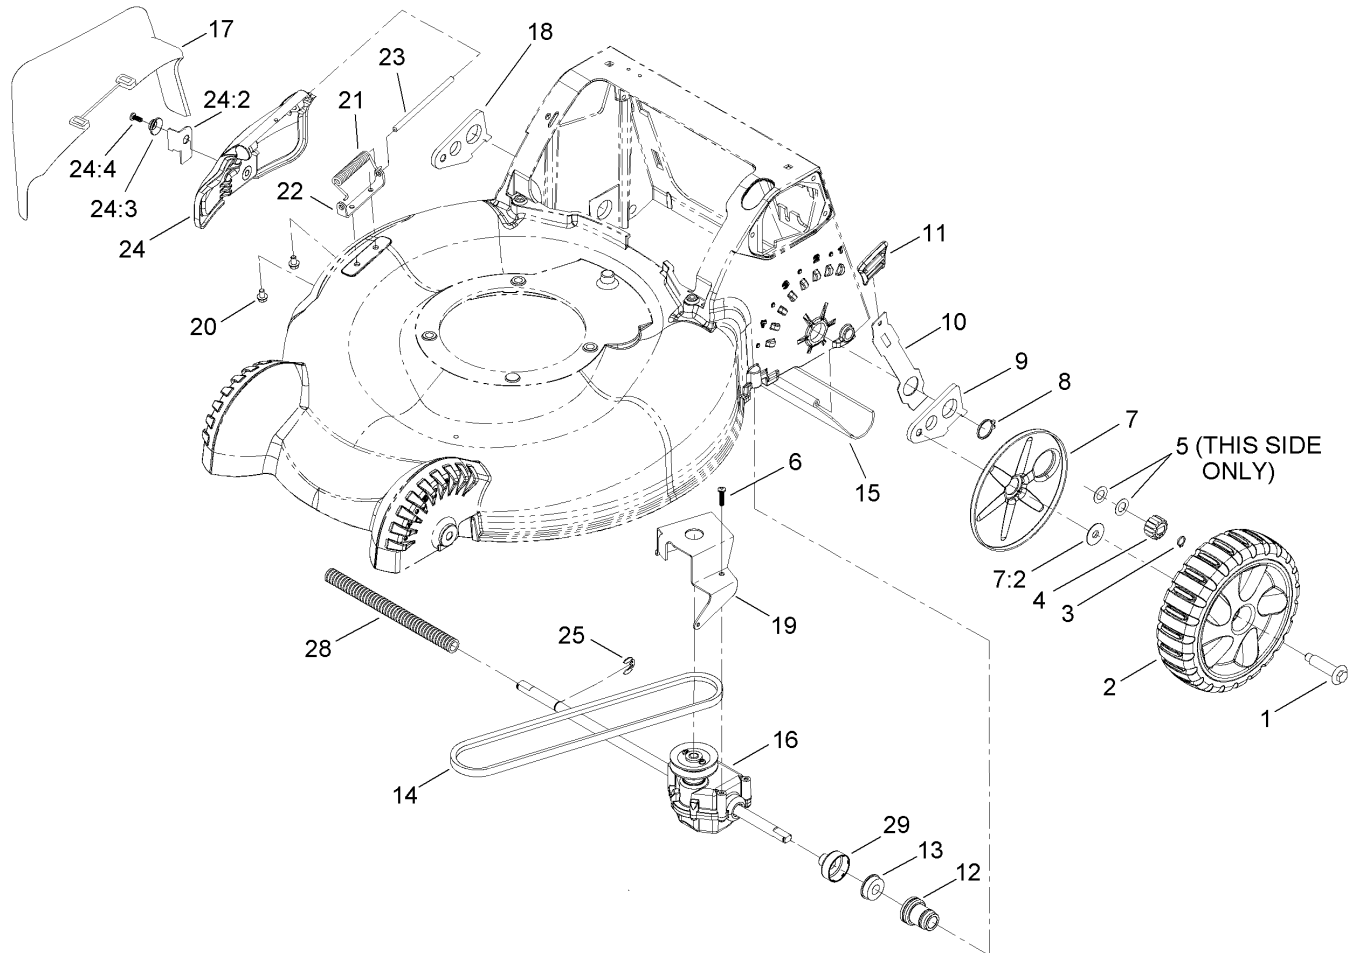

Rear Wheel, Transmission and Side Discharge Chute Assembly


Ref	Part No.	Qty.	Description
1	614650	2	Bolt-Shoulder
2	117-4104	2	Rear Wheel ASM
3	32151-61	2	Ring-Retaining
4	110-9417	2	Pinion
5	36-4780	2	Washer-Plain
6	108-7476	3	Screw-Plastite
7	117-4197	2	Wheel Cover ASM
7:2	614426	1	Washer-Stepped
8	32151-36	2	Ring-Retaining
9	108-9344	1	Arm-Rear Pivot, LH
10	110-9445	2	Arm-Spring, Rear
11	110-7125	2	Knob-HOC
12	110-9422	2	Retainer-Bearing
13	104-8699	2	Bearing-Ball
14	110-9429	1	V-Belt
15	112-8768	1	Shield-Trailing
16	114-2812	1	Transmission ASM
17	105-3028	1	Chute-Discharge, Side
18	108-9343	1	Arm-Rear Pivot, RH
19	114-7977-03	1	Bracket-Transmission
20	99-8445	2	Screw-HWH
21	99-5293	1	Spring-Torsion
22	112-6416	1	Bracket-Cover
23	99-5291	1	Rod-Cover

Ref	Part No.	Qty.	Description
24	106-8376	1	Discharge Door ASM
24:2	107-0795	1	Latch-Door
24:3	107-7456	1	Cap-Door
24:4	107-7461	1	Screw-Plastite
25	65-2720	1	Ring-Clip, Locking
28	24-7922	1	Cover-Shaft, Drive
29	114-2755	2	Cap-Bearing

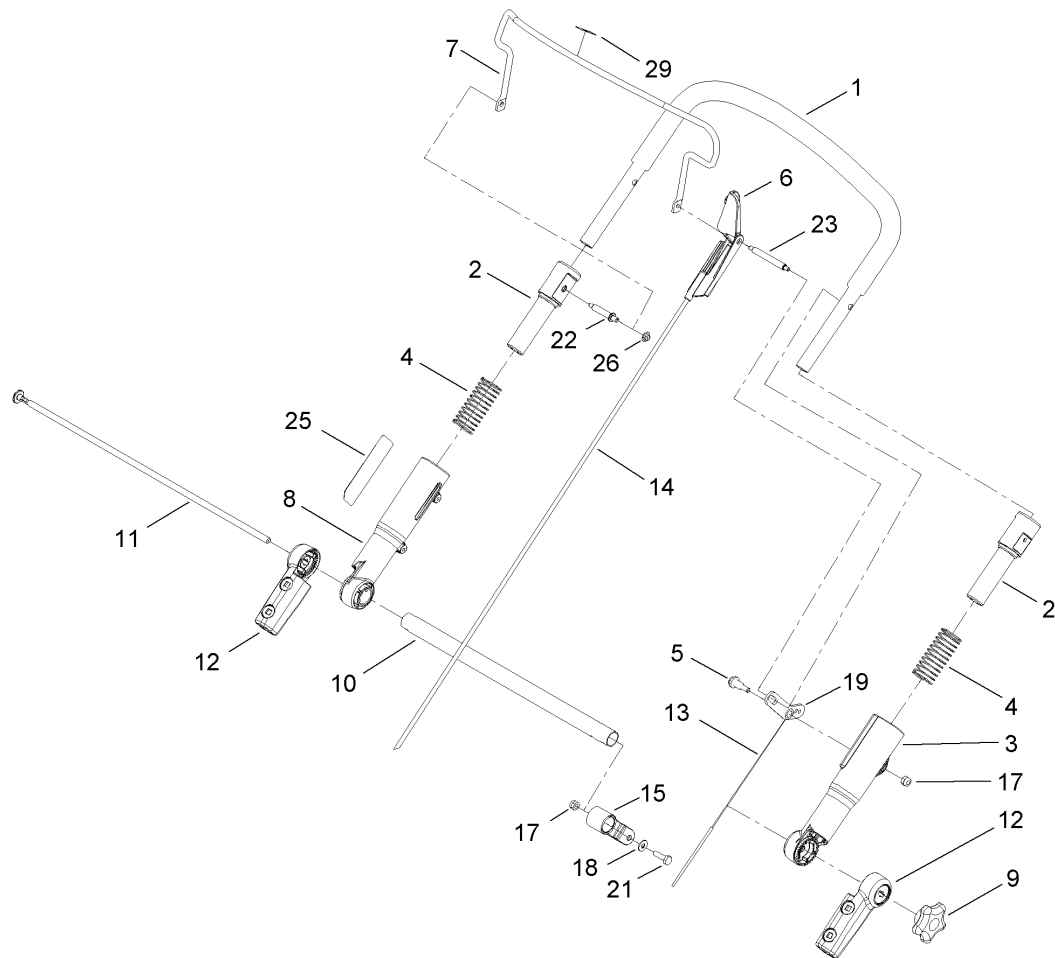


Upper Handle Assembly

Ref	Part No.	Qty.	Description				
1	108-0974	1	Upper Handle ASM				
2	112-8754	2	Sleeve-Inner				
3	112-1544	1	Sleeve-Outer, LH				
4	107-3869	2	Spring-Compression				
5	104-0858	1	Bolt-Shoulder				
6	112-8764	1	Stop-Pivot				
7	110-1819-03	1	Bail-Brake				
8	112-1545	1	Sleeve-Outer, RH				
9	106-4161	1	Knob-Handle				
10	107-3867-03	1	Tube-Cross				
11	107-3871	1	Rod-Threaded				
12	107-3865	2	Mount-Handle, Lower				
13	110-9465	1	Cable-Traction				
14	107-3903	1	Cable-Brake				
15	112-8801	1	Clamp-Cable				
17	3296-73	2	Nut-Lock, NI				
18	3256-1	1	Washer-Flat				
19	107-3893	1	Lever-Traction				
21	321-5	1	Screw-HH				
22	108-0959	1	Pin-Handle				
23	108-1008	1	Pin-Bail, LH				
25	111-2209	1	Decal-Sas, Hayter				
26	108-9378	1	Retainer-Push On				
29	117-4157	1	Decal-Engine Stop				

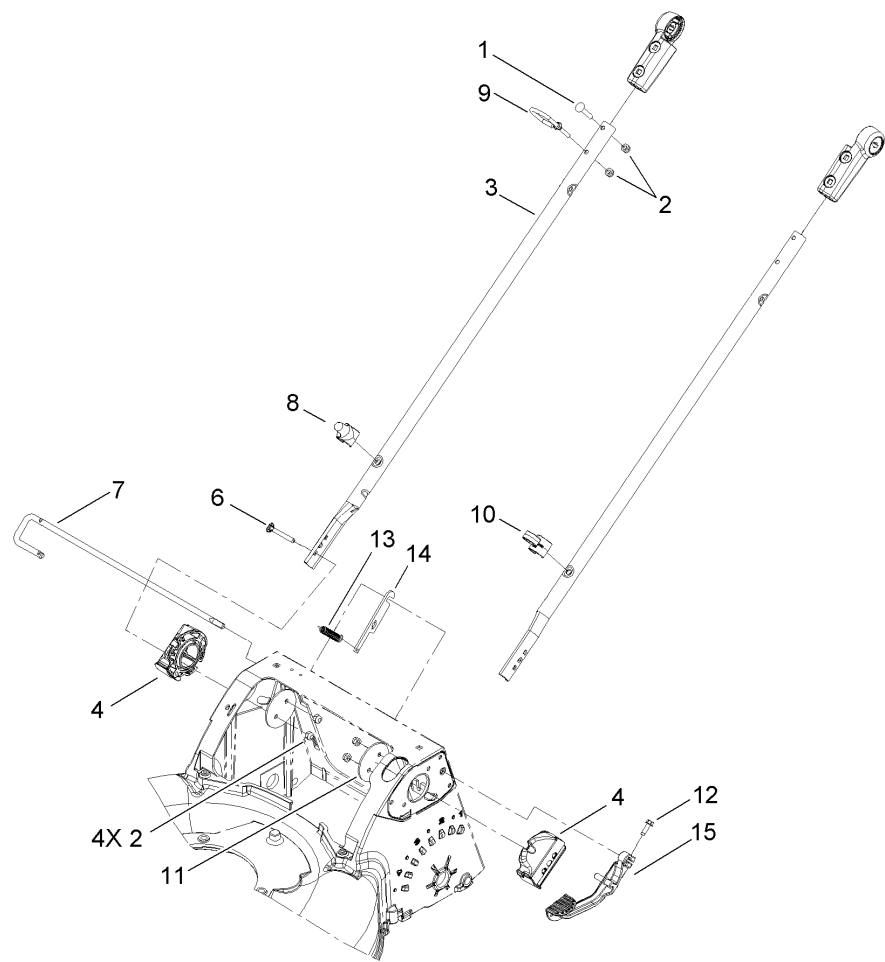


Lower Handle Assembly

Ref	Part No.	Qty.	Description				
1	108-0988	3	Screw-CARR				
2	3296-73	8	Nut-Lock, NI				
3	107-3887-03	2	Tube-Lower				
4	114-2791	2	Mount-Handle, Lower				
6	95-4453	4	Screw				
7	112-8755	1	Rod-Release, Handle				
8	117-4141	1	Guide-Rope, Lower				
9	107-3908	1	Guide-Rope, Upper				
10	106-6805	1	Guide-Cable				
11	107-3944-03	2	Plate				
12	49-2040	1	Screw-HWHTF				
13	112-1542	1	Spring-Extension				
14	112-1539	1	Plate-Rod, Release				
15	110-1823-03	1	Lever-Release				

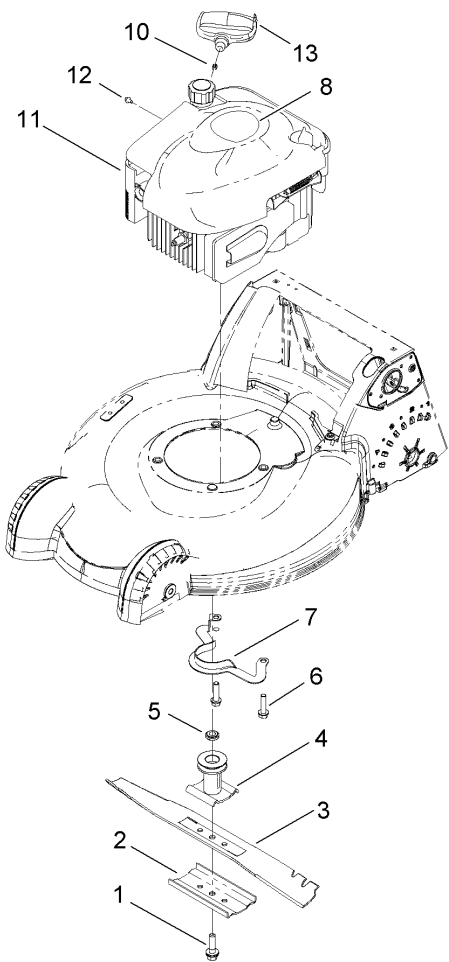


Blade and Engine Assembly

Ref	Part No.	Qty.	Description				
1	105-8579	1	Bolt-Blade				
2	108-3766-03	1	Support-Blade				
3	108-0954-03	1	Blade-21 Inch				
4	106-3987	1	Blade Driver ASM				
5	106-3999	1	Spacer-Driver				
6	32144-102	3	Screw-HWH				
7	108-8110-03	1	Guide-Belt				
8	111-2207	1	Decal				
10	2210-316	1	Stop-Rope				
11		1	Engine-Quantum, 126T05-0239-B1				
12	98-1394	1	Screw-HWH				
13	117-4142	1	Handle-Recoil				

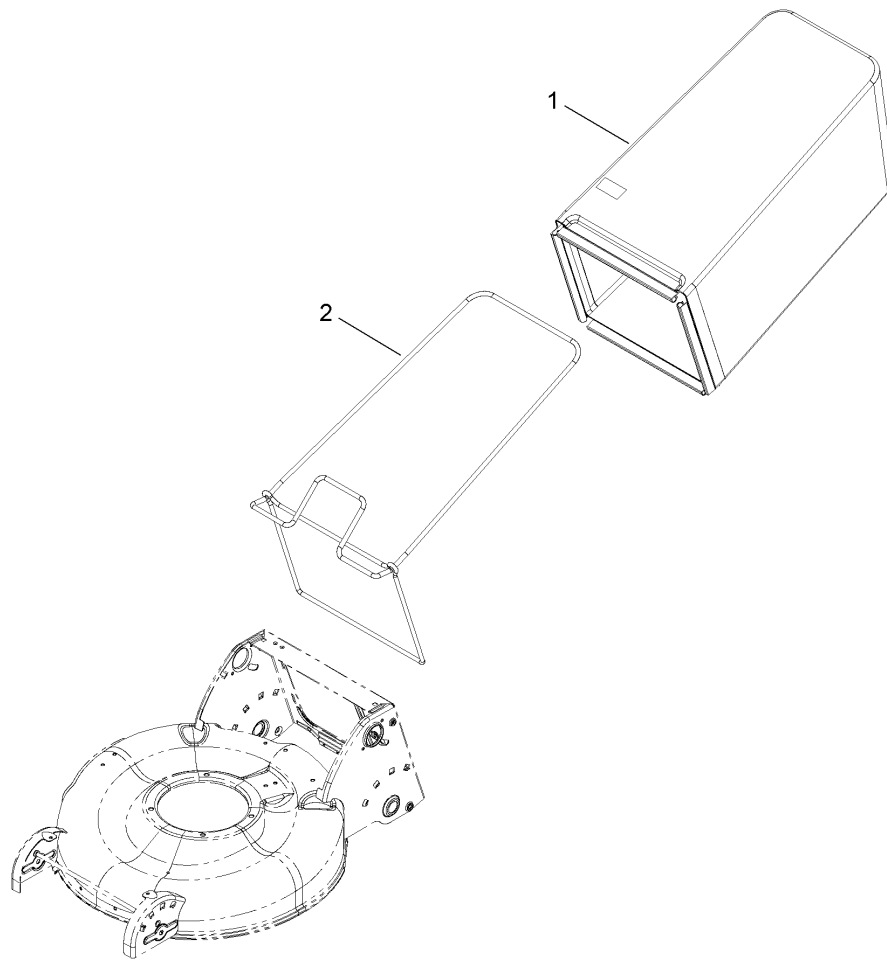

Bag Assembly

Ref	Part No.	Qty.	Description
1	117-4105	1	Grass Bag ASM
2	112-8750-03	1	Frame-Bag




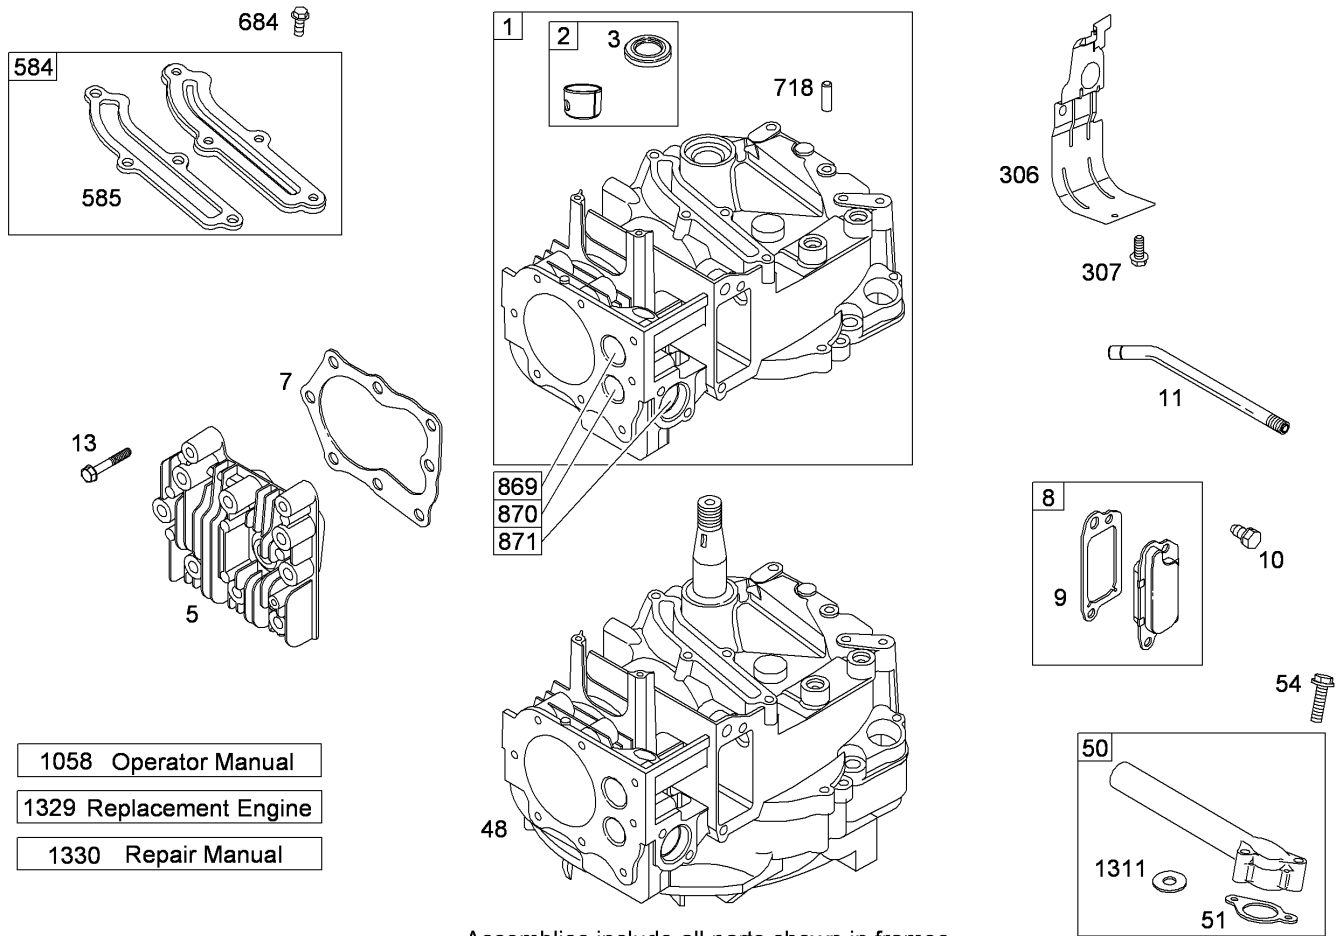


Cylinder and Cylinder Head Assembly

Briggs and Stratton 126T05-0239-B1

Ref	Part No.	Qty.	Description
1	697322	1	Cylinder ASM
2	399269	1	Bushing And Seal Kit
3	299819s	1	Seal-Oil (Magneto Side)
5	691160	1	Head-Cylinder
7	692249	1	Gasket-Head, Cylinder
8	695250	1	Breather ASM
9	699472	1	Gasket-Breather
10	691125	1	Screw (Breather ASM)
11	691781	1	Tube-Breather
13	690912	1	Screw (Cylinder Head)
48	792742	1	Block-Short
50	794305	1	Manifold-Intake
51	794306	1	Gasket-Intake
54	691650	1	Screw (Intake Manifold)
306	790836	1	Shield-Cylinder
307	690345	1	Screw (Cylinder Shield)
584	697734	1	Cover-Passage, Breather
585	691879	1	Gasket-Passage, Breather
684	690345	1	Screw (Breather Passage Cover)
718	690959	1	Pin-Locating
869	691155	1	Seat-Valve (Intake)
870	690380	1	Seat-Valve (Exhaust)


Ref	Part No.	Qty.	Description
871	262001	1	Bushing-Guide (Exhaust)
871	63709	1	Bushing-Guide (Intake)
1058	277039	1	Operator Manual
1311	690390	1	Washer (Intake Manifold)
1329	126T070660 B1	1	Replacement Engine
1330	270962	1	Repair Manual

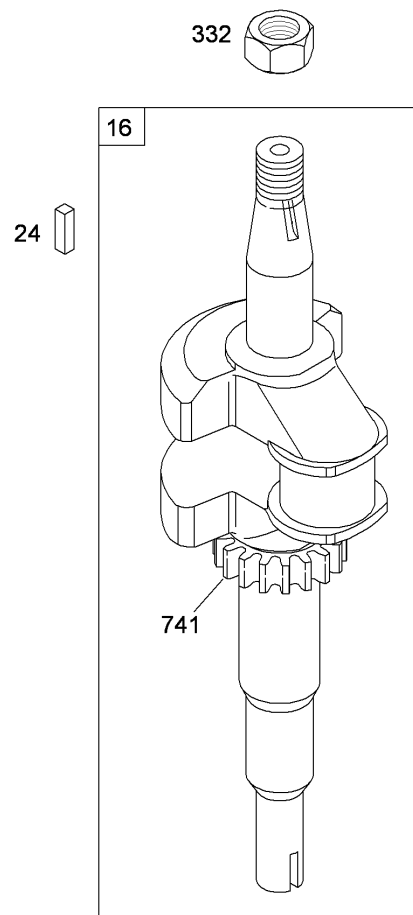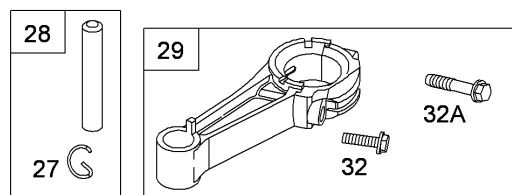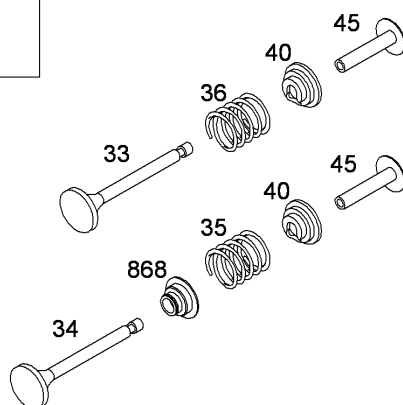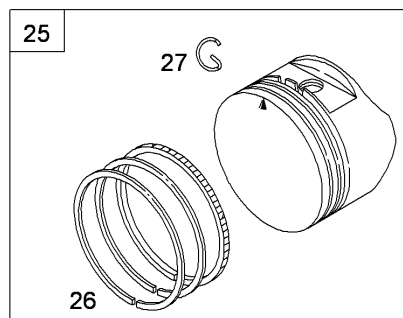


Assemblies include all parts shown in frames

Crankshaft, Piston, Ring and Connecting Rod Assembly Briggs and Stratton 126T05-0239-B1

Ref	Part No.	Qty.	Description				
③16	696009	1	Crankshaft				
③24	222698s	1	Key-Flywheel				
③25	795429	1	Piston ASM (STD)				
③25	795430	1	Piston ASM (.020 Oversize)				
③26	795431	1	Ring Set (STD)				
③26	795432	1	Ring Set (.020 Oversize)				
③27	691866	1	Lock-Pin, Piston				
③28	499423	1	Pin-Piston (STD)				
③29	499424	1	Rod-Connecting				
③32	691664	1	Screw (Connecting Rod)				
③32A	695759	1	Screw (Connecting Rod)				
③33	262651s	1	Valve-Exhaust				
③34	262652s	1	Valve-Intake				
③35	691270	1	Spring-Valve (Intake)				
③36	691270	1	Spring-Valve (Exhaust)				
③40	692194	1	Retainer-Valve				
③45	690548	1	Tappet-Valve				
③332	690662	1	Nut (Flywheel)				
③741	795755	1	Gear-Timing				
③868	697338	1	Seal-Valve				

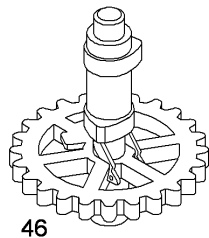



46

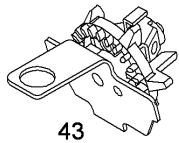

43




287

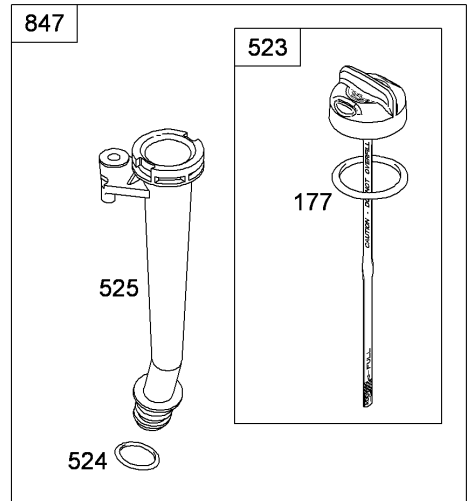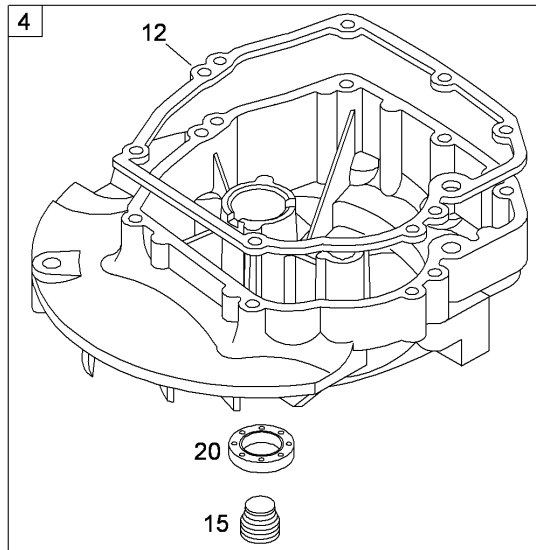


847

 523




525

 524



177

 


22

Assemblies include all parts shown in frames

Crankcase Cover and Sump Assembly

Briggs and Stratton 126T05-0239-B1

Ref	Part No.	Qty.	Description				
4	493279	1	Sump-Engine				
12	692232	1	Gasket-Crankcase (.015 STD)				
15	691680	1	Plug-Drain, Oil				
20	399781s	1	Seal-Oil (PTO Side)				
22	691092	1	Screw (Crankcase Cover To Sump)				
43	691997	1	Slinger-Oil, Governor				
46	691449	1	Camshaft				
177	691031	1	Seal-O Ring (Dipstick)				
287	690940	1	Screw (Dipstick Tube)				
523	499621	1	Dipstick				
524	692296	1	Seal-O Ring (Dipstick Tube)				
525	495265	1	Tube-Dipstick				
847	692047	1	Dipstick Tube ASM				


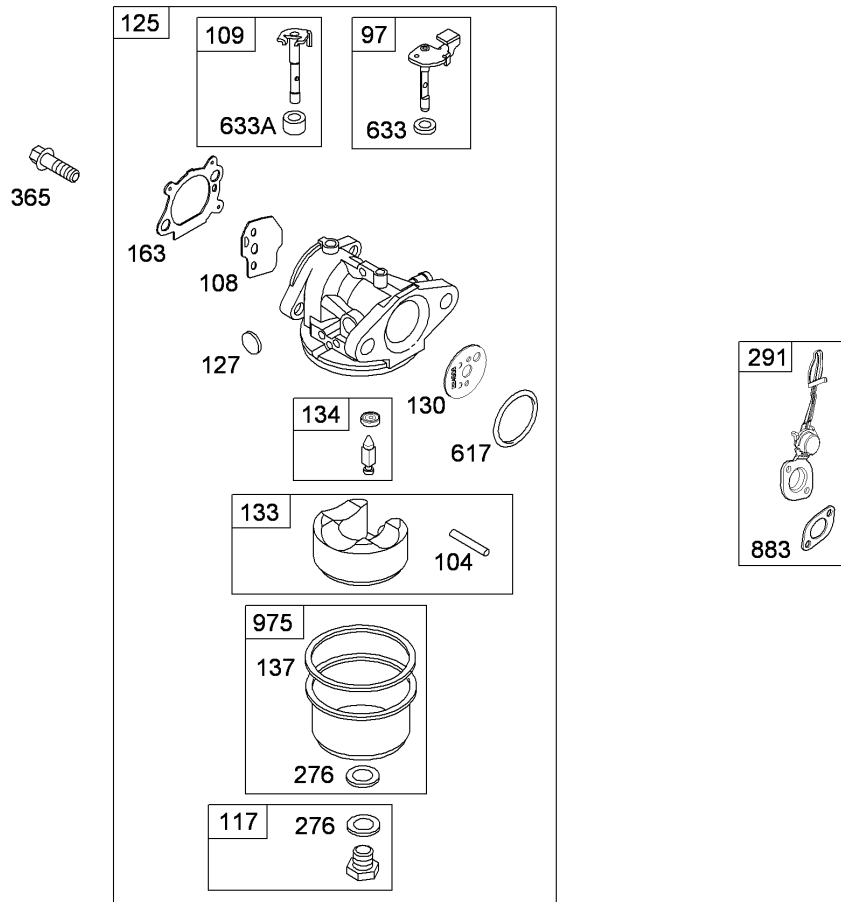


Assemblies include all parts shown in frames

Carburetor Assembly

Briggs and Stratton 126T05-0239-B1

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
③ 97	696565	1	Shaft-Throttle	③ ⑤ 883	691881	1	Gasket-Exhaust
③ ④ 104	691242	1	Pin-Hinge, Float	⑤			
③ 108	795935	1	Valve-Choke	③ 975	493640	1	Bowl-Float
③ 109	795936	1	Shaft-Choke				
③ 117	695042	1	Jet-Main (STD)				
③ 125	794304	1	Carburetor				
③ ④ 127	694468	1	Plug-Welch				
③ 130	696564	1	Valve-Throttle				
③ 133	398187	1	Float-Carburetor				
③ ④ 134	398188	1	Needle And Seat Kit				
③ ④ 137	796610	1	Gasket-Bowl, Float (Used After Date Code 08120100)				
③ ④ 137	693981	1	Gasket-Bowl, Float (Used Before Date Code 08120200)				
③ ④ 163	795629	1	Gasket-Cleaner, Air				
⑤							
③ ④ 276	271716	1	Washer-Sealing				
③ 291	790830	1	Thermostat				
③ 365	691688	1	Screw (Carburetor)				
③ ④ 617	270344s	1	Seal-O Ring (Intake Manifold)				
⑤							
③ ④ 633	691321	1	Seal-Shaft, Choke Throttle (Throttle Shaft)				
③ 633A	693867	1	Seal-Shaft, Choke Throttle (Choke Shaft)				

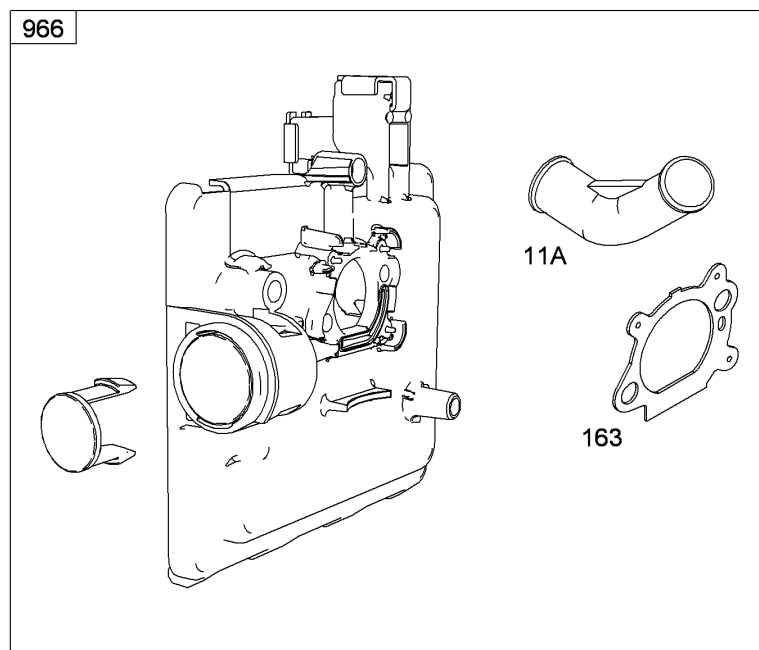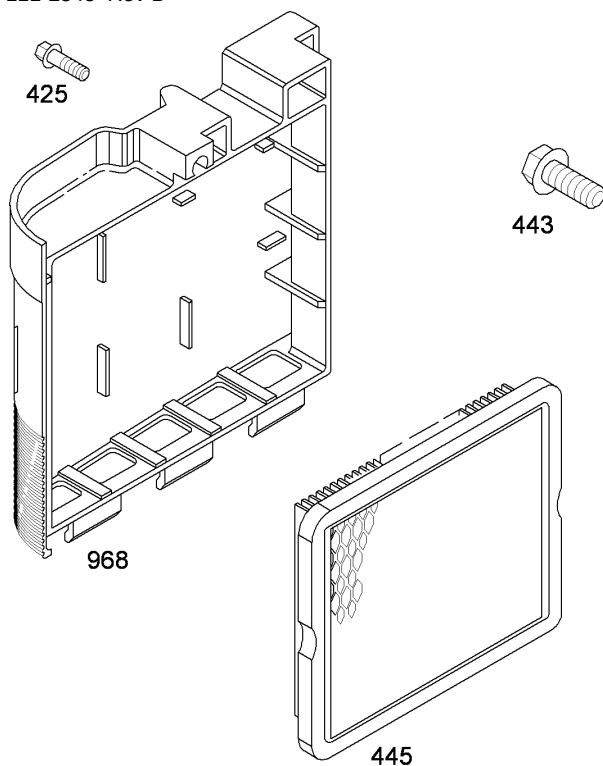


Assemblies include all parts shown in frames

Air Cleaner Assembly

Briggs and Stratton 126T05-0239-B1







Ref	Part No.	Qty.	Description				
③ 11A	691923	1	Tube-Breather (Air Cleaner Primer Base)				
③ ④ 163 ⑤	795629	1	Gasket-Cleaner, Air				
③ 425	690670	1	Screw (Air Cleaner Cover)				
③ 443	692523	1	Screw (Air Cleaner Primer Base)				
③ 445	491588s	1	Filter-Cartridge, Air Cleaner				
③ 966	795259	1	Base-Primer, Air Cleaner				
③ 968	692298	1	Cover-Cleaner, Air				

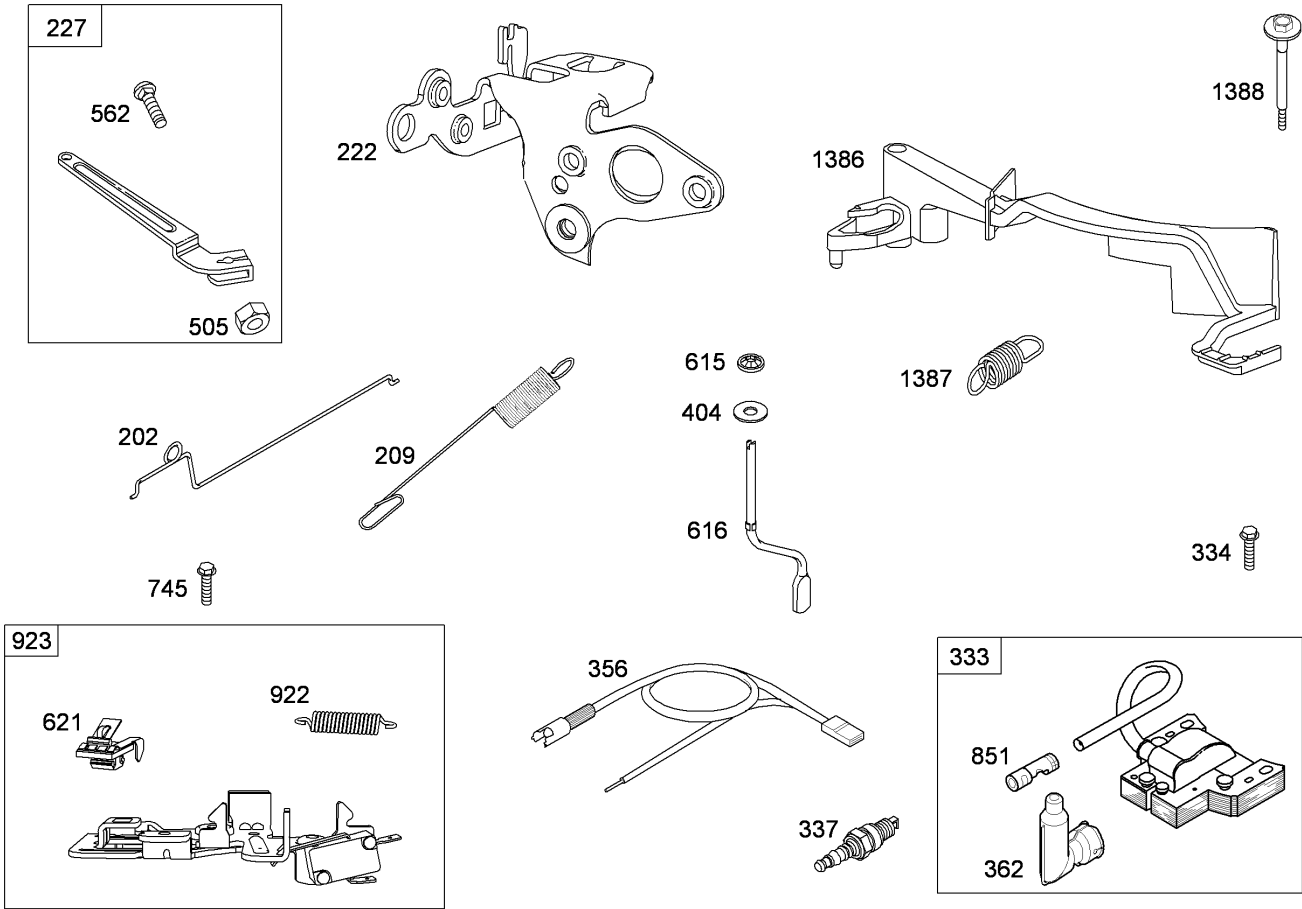

Assemblies include all parts shown in frames

Governor, Controls and Ignition Assembly
Briggs and Stratton 126T05-0239-B1


Ref	Part No.	Qty.	Description				
③ 202	691829	1	Link-Governor, Mechanical				
③ 209	691292	1	Spring-Governor (Black)				
③ 222	795937	1	Bracket-Control				
③ 227	690783	1	Lever-Control, Governor				
③ 333	793353	1	Armature-Magneto				
③ 334	691061	1	Screw (Magneto Armature)				
③ 337	802592s	1	Spark Plug				
③ 356	695283	1	Wire-Stop				
③ 362	793351	1	Shield-Spark Plug				
③ 404	690272	1	Washer (Governor Crank)				
③ 505	691251	1	Nut (Governor Control Lever)				
③ 562	691119	1	Bolt (Governor Control Lever)				
③ 615	690340	1	Retainer-Shaft, Governor				
③ 616	698801	1	Crank-Governor				
③ 621	692310	1	Switch-Stop				
③ 745	691648	1	Screw (Brake)				
③ 851	692424	1	Terminal-Spark Plug				
③ 922	692135	1	Spring-Brake				
③ 923	796387	1	Brake				
③ 1386	790848	1	Vane-Air				
③ 1387	790849	1	Spring-Vane, Air				
③ 1388	790850	1	Screw (Air Vane)				

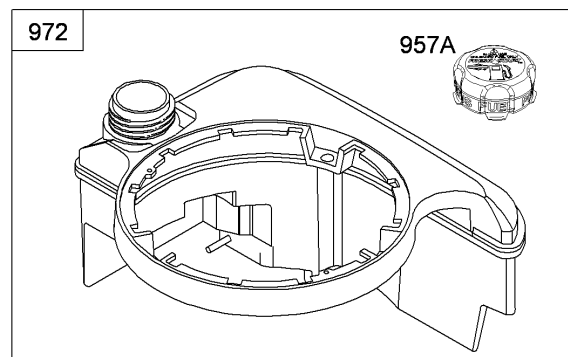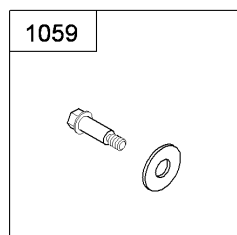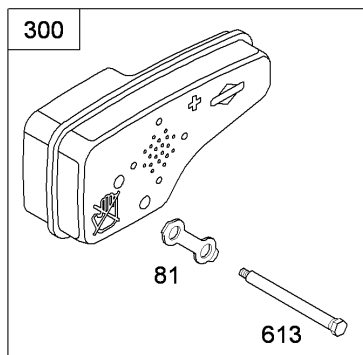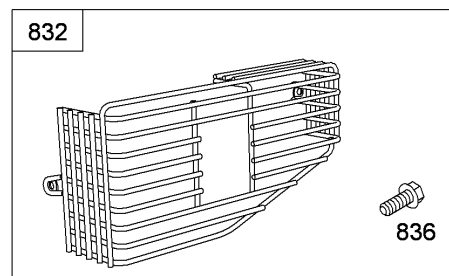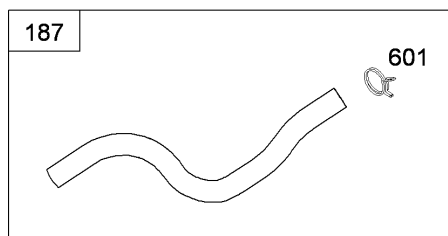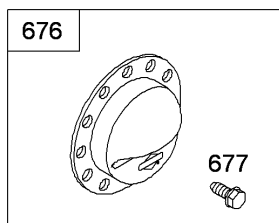

Assemblies include all parts shown in frames

Muffler and Fuel Tank Assembly Briggs and Stratton 126T05-0239-B1


Ref	Part No.	Qty.	Description
③81	691740	1	Lock-Screw, Muffler
③187	791873	1	Line-Fuel (Molded)
③190	690940	1	Screw (Fuel Tank)
③300	790828	1	Muffler
③601	791850	1	Clamp-Hose
③613	790833	1	Screw (Muffler)
③676	396548	1	Deflector-Muffler
③677	690661	1	Screw (Muffler Deflector)
③832	793568	1	Guard-Muffler
③836	790745	1	Screw (Muffler Guard)
③⑤883 ⑤	691881	1	Gasket-Exhaust
③957	793606	1	Cap-Tank, Fuel
③957A	796654	1	Cap-Tank, Fuel
③972	699374	1	Tank-Fuel
③1059	692311	1	Screw And Washer Kit

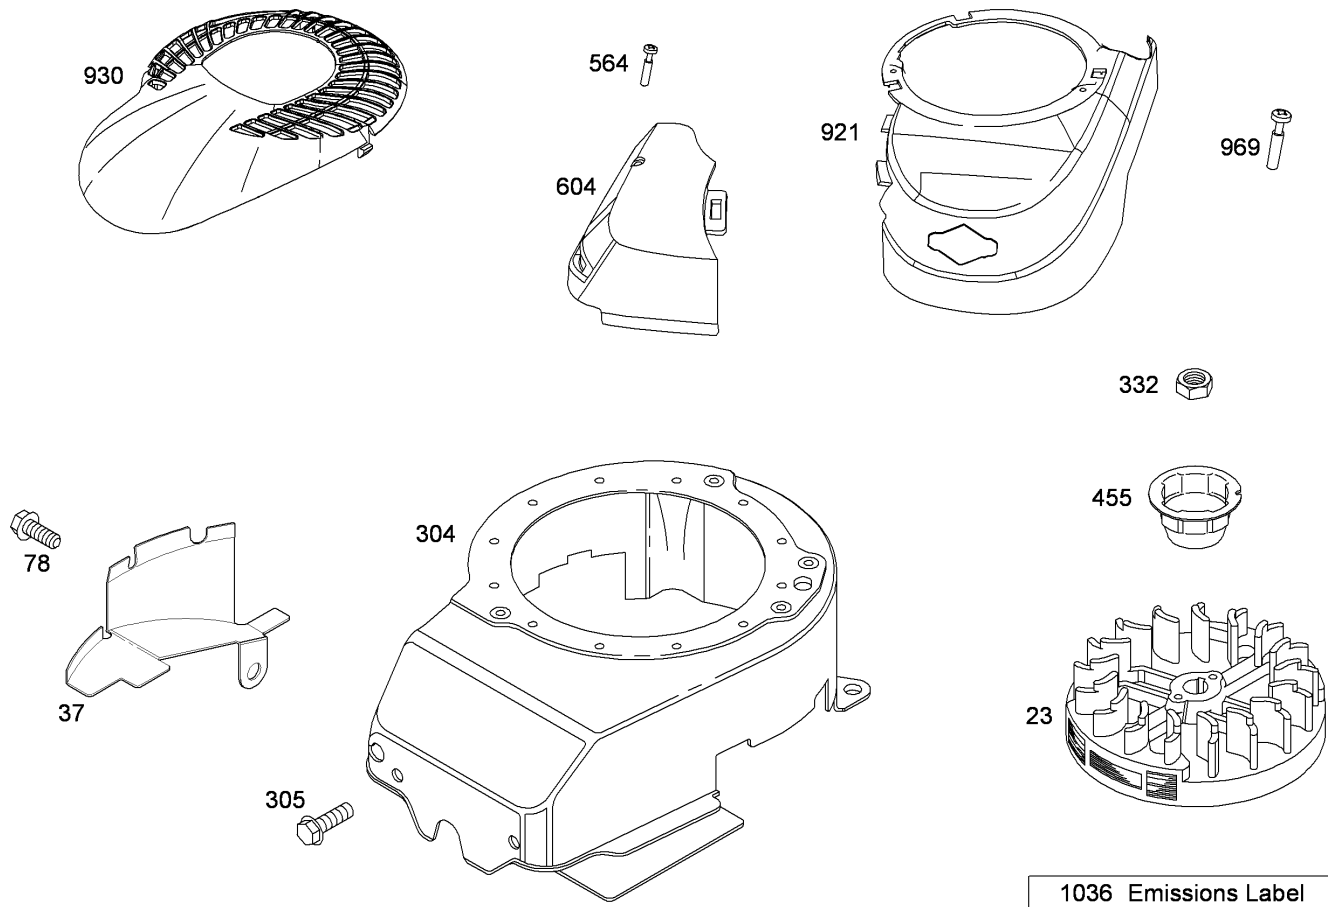

Assemblies include all parts shown in frames

Blower Housing and Flywheel Assembly
Briggs and Stratton 126T05-0239-B1


Ref	Part No.	Qty.	Description				
❶ 23	691987	1	Flywheel				
❶ 37	793756	1	Guard-Flywheel				
❶ 78	691108	1	Screw (Flywheel Guard)				
❶ 304	790826	1	Housing-Blower				
❶ 305	691108	1	Screw (Blower Housing)				
❶ 332	690662	1	Nut (Flywheel)				
❶ 455	791760	1	Gasket-Passage, Breather				
❶ 564	691142	1	Screw (Control Cover)				
❶ 604	691344	1	Cover-Control				
❶ 921	695886	1	Cover-Housing, Blower				
❶ 930	691345	1	Guard-Rewind				
❶ 969	691138	1	Screw (Blower Housing Cover)				
❷ ❶ 1036		1	Label-Emissions				

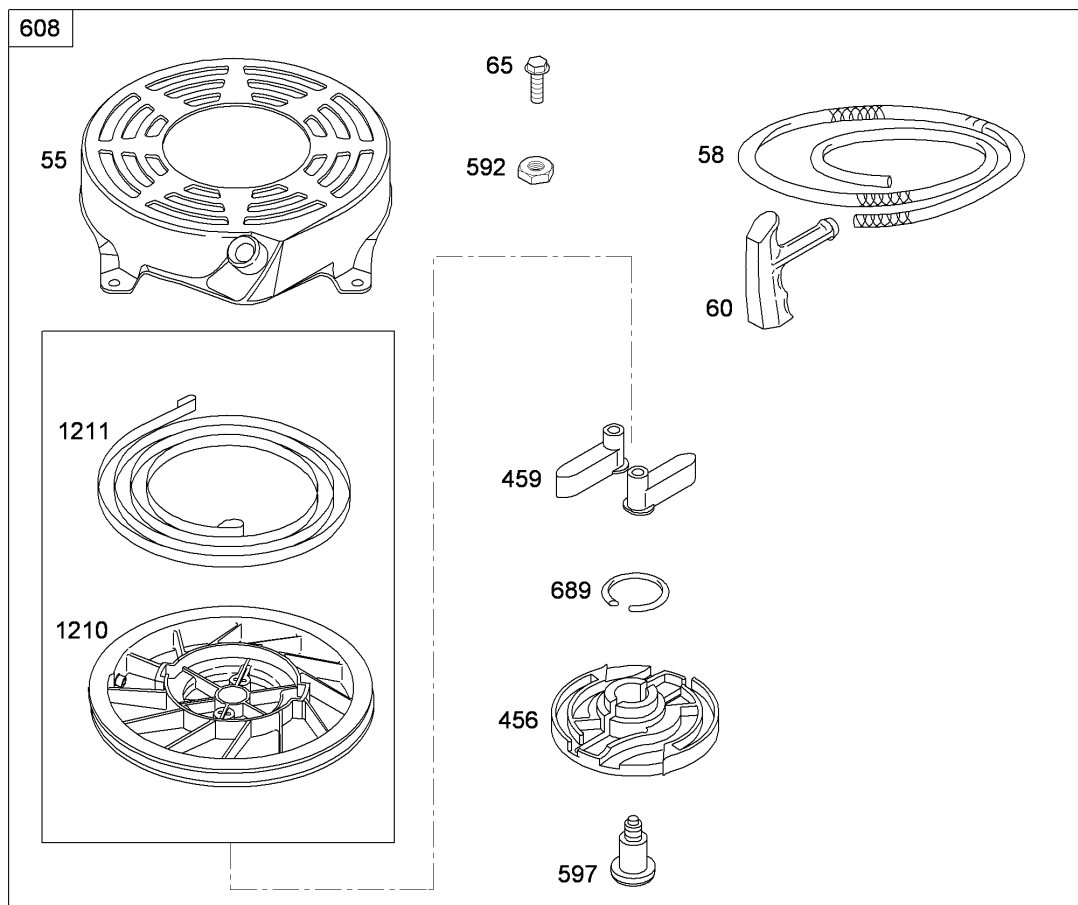

Assemblies include all parts shown in frames

Rewind Starter Assembly Briggs and Stratton 126T05-0239-B1



Ref	Part No.	Qty.	Description				
③55	691421	1	Housing-Starter, Rewind				
③58	697316	1	Rope-Starter (Cut To Required Length)				
③60	281434s	1	Grip-Rope, Starter				
③65	690837	1	Screw (Rewind Starter)				
③456	692299	1	Plate-Friction, Pawl				
③459	281505s	1	Ratchet-Pawl				
③592	690800	1	Nut (Rewind Starter)				
③597	691696	1	Screw (Pawl Friction Plate)				
③608	791363	1	Starter-Rewind				
③689	691855	1	Spring-Friction				
③1210	498144	1	Pulley And Spring ASM (Pulley)				
③1211	498144	1	Pulley And Spring ASM (Spring)				

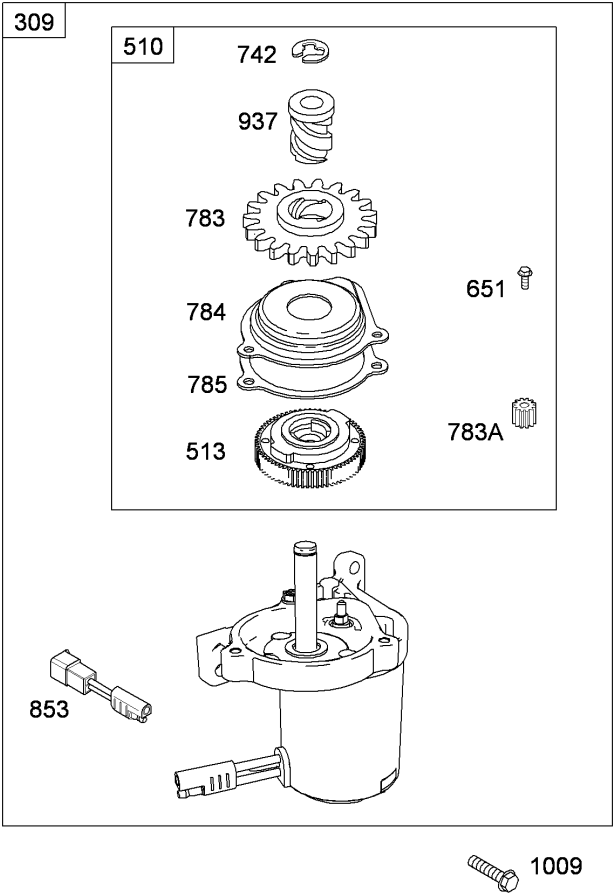

Assemblies include all parts shown in frames

Electric Starter Assembly
Briggs and Stratton 126T05-0239-B1


Ref	Part No.	Qty.	Description				
❸309	795092	1	Motor-Starter				
❸510	795093	1	Drive-Starter				
❸513	795100	1	Clutch-Drive				
❸651	690345	1	Screw (Starter Gear Cover)				
❸742	795094	1	Retainer-E Ring				
❸783	795096	1	Gear-Pinion				
❸783A	795099	1	Gear-Pinion				
❸784	795095	1	Cover-Gear, Starter				
❸785	795097	1	Gasket-Cover, Starter				
❸853	695268	1	Adapter-Wire				
❸937	795098	1	Spline-Starter				
❸1009	691127	1	Screw (Starter Motor)				

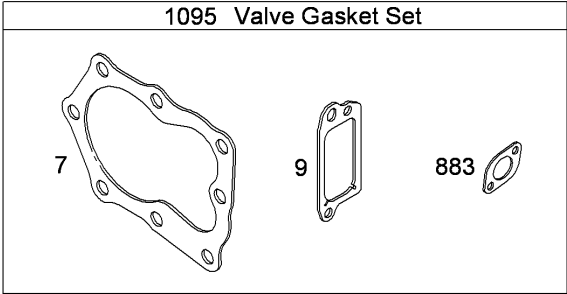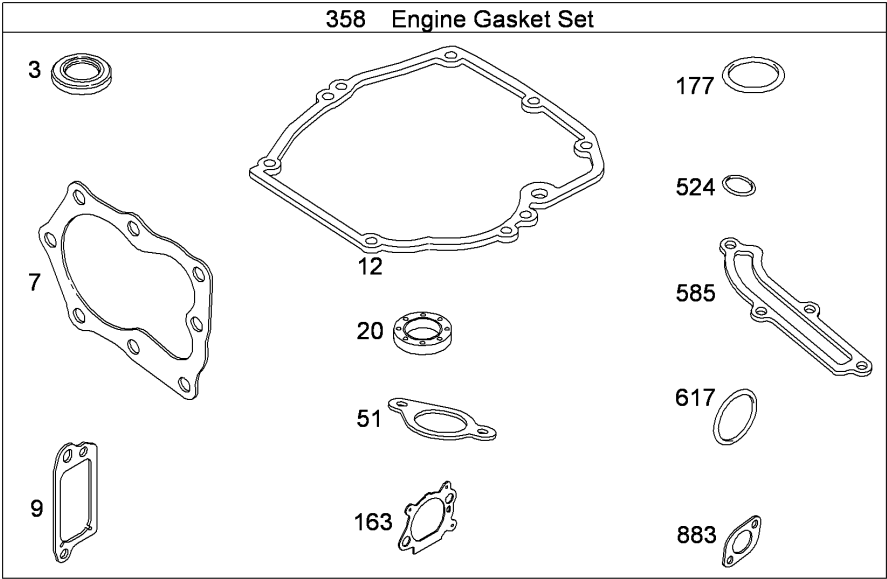

Assemblies include all parts shown in frames

Engine and Valve Gasket Sets
Briggs and Stratton 126T05-0239-B1

Ref	Part No.	Qty.	Description				
353	299819s	1	Seal-Oil (Magneto Side)				
357	692249	1	Gasket-Head, Cylinder				
6							
359	699472	1	Gasket-Breather				
6							
3512	692232	1	Gasket-Crankcase (.015 STD)				
3520	399781s	1	Seal-Oil (PTO Side)				
3551	272199s	1	Gasket-Intake				
34163	795629	1	Gasket-Cleaner, Air				
5							
35177	691031	1	Seal-O Ring (Dipstick)				
3358	497316	1	Engine Gasket Set				
35524	692296	1	Seal-O Ring (Dipstick Tube)				
35585	691879	1	Gasket-Passage, Breather				
34617	270344s	1	Seal-O Ring (Intake Manifold)				
5							
35883	691881	1	Gasket-Exhaust				
6							
31095	498528	1	Valve Gasket Set				

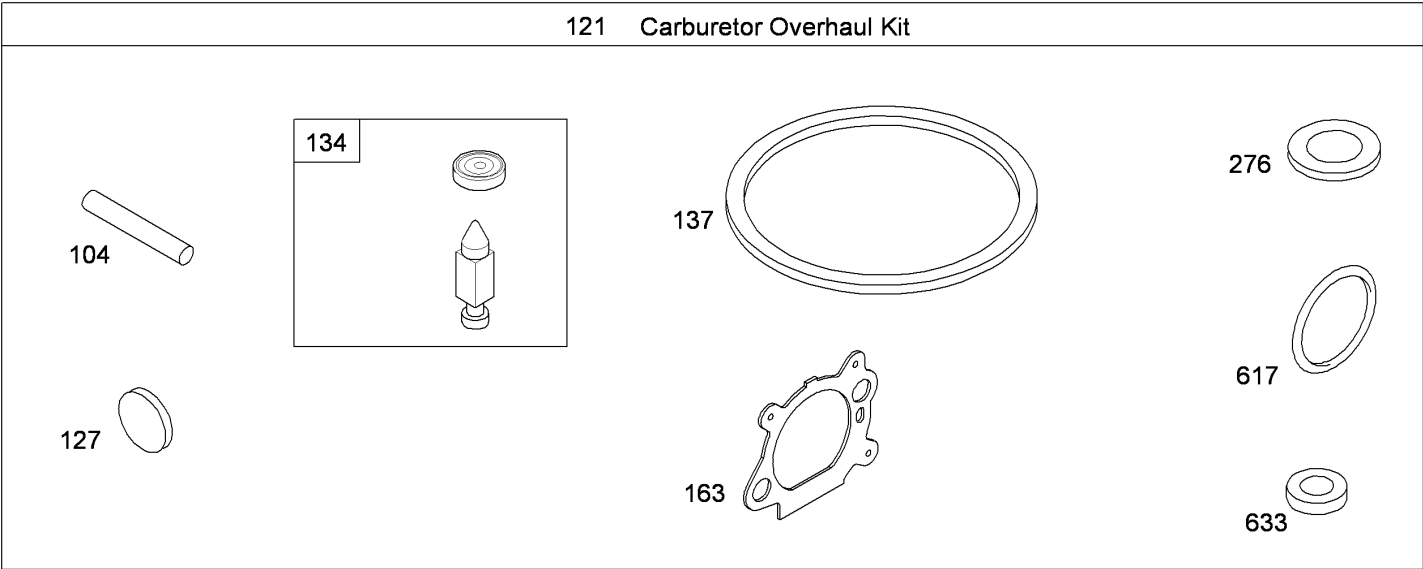

Assemblies include all parts shown in frames

Carburetor Overhaul Kit
Briggs and Stratton 126T05-0239-B1

Ref	Part No.	Qty.	Description				
③④104	691242	1	Pin-Hinge, Float				
③121	498260	1	Carburetor Overhaul Kit				
③④127	694468	1	Plug-Welch				
③④134	398188	1	Needle And Seat Kit				
③④137	796610	1	Gasket-Bowl, Float (Used After Date Code 08120100)				
③④137	693981	1	Gasket-Bowl, Float (Used Before Date Code 08120200)				
③④163	795629	1	Gasket-Cleaner, Air				
③④276	271716	1	Washer-Sealing				
③④617	270344s	1	Seal-O Ring (Intake Manifold)				
③④633	691321	1	Seal-Shaft, Choke Throttle (Throttle Shaft)				

NOTES

NOTES

