



Count on it.

Form No. 3362-566 Rev A

Parts Catalog

1800 Power Curve® Snowthrower

Model No. 38025—Serial No. 310000001 and Up

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

 
AR: as required	HLH: hex lag head	PTO: power-take-off
ASM: assembly	HOC: height-of-cut	RH: right hand
BBC: blade brake clutch	HSBH: hex socket button head	ROPS: roll-over protection system
CARR: carriage	HSFH: hex socket flat head	SFH: slotted fillister head
CCW: counter clock wise	HSH: hex socket head	SHH: slotted hex head
CW: clockwise	HWH: hex washer head	SHWH: slotted hex washer head
DEG: degrees	HWHTF: hex washer head thread forming	SPH: slotted pan head
ECM: electronic control module	HYD: hydraulic	SQH: square head
EXT: external	LH: left hand	SRH: slotted round head
FH: flat head	NI: nylon insert	STD: standard
GA: gauge	NPTF: national pipe thread fine	TAP: self tapping
HD: heavy-duty	PFH: phillips flat head	TTH: torx truss head
HF: hex flange	PPH: phillips pan head	
HH: hex head	PPHTF: phillips pan head thread forming	
HHF: hex head flange	PRH: phillips round head	
HHFTF: hex head flange thread forming	PTH: phillips truss head	
HJ: hex jam		

Contents

Housing and Rotor Assembly 4

Handle Assembly 5


Chute Assembly 6

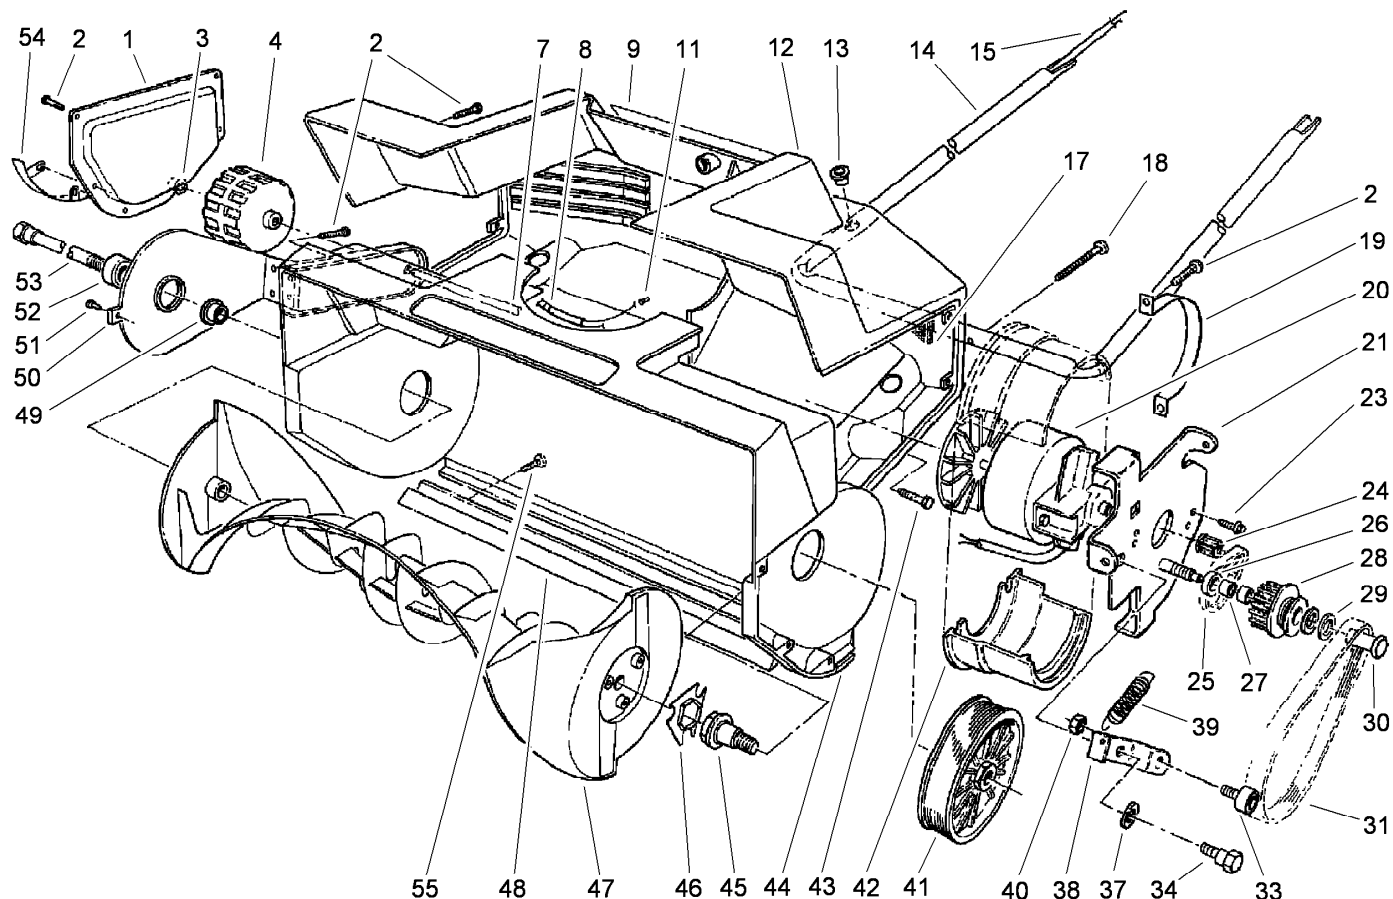

Housing and Rotor Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	73-9370	2	Plate-Side	30	73-3530	1	Bolt-Idler
2	94-4496	19	Screw-PPH	31	61-8802	1	Belt-Drive
3	32112-1	2	Pushnut-Cap, Washer	33	73-5730	1	Bearing ASM (Incl. Ref. #40)
4	73-5720	2	Wheel	34	27-0411	1	Screw-Shoulder
7	73-0370	1	Shaft-Axle	37	25-5641	1	Washer
8	64-5820	1	Relief-Strain	38	73-3600	1	Bracket-Idler
9	73-0450	1	Decal-Danger	39	73-3680	1	Spring
11	218-511	2	Connector	40	3296-47	1	Nut-Lock, NI
12	73-9320	1	Shroud-Housing	41	73-3550	1	Pulley-Driven
13	256-307	1	Bushing	42	73-3650	2	Clamp-Motor Bracket
14	73-0280	1	Tube-Lower Handle	43	32104-97	2	Screw-HH
15	73-3630	1	Wire Harness	44	73-3640	1	Housing-Rotor
17	73-1800	1	Filter-Foam	45	73-0990	1	Shaft-Driver, Rotor
18	32144-88	4	Screw-Pan Head	46	73-0860	1	Coupler-Rotor
19	73-0120	1	Strap-Motor	47	73-8590	1	Rotor
20	73-3520	1	Motor	48	73-3690	1	Scraper
21	73-8680	1	Motor Plate ASM	49	73-8580	1	Bushing
23	32144-100	2	Screw-Hex Washer Hd.	50	73-0010	2	Wheel Bracket ASM (Incl. Ref. #52)
24	73-3660	1	Pulley-Driver	51	3290-271	2	Rivet-Pop
25	73-0160	1	Belt-Timing	52	61-8780	2	Bearing-Ball
26	73-3580	1	Washer	53	73-0020	1	Shaft-Rotor
27		2	Bearing-Needle ●	54	73-1570	2	Skid-Housing
28	73-3570	1	Idler Pulley ASM (Incl. Ref. #27)	55	32144-108	2	Screw-Pan Head
29	73-0041	2	Washer-Thrust				

 ● Not serviced separately

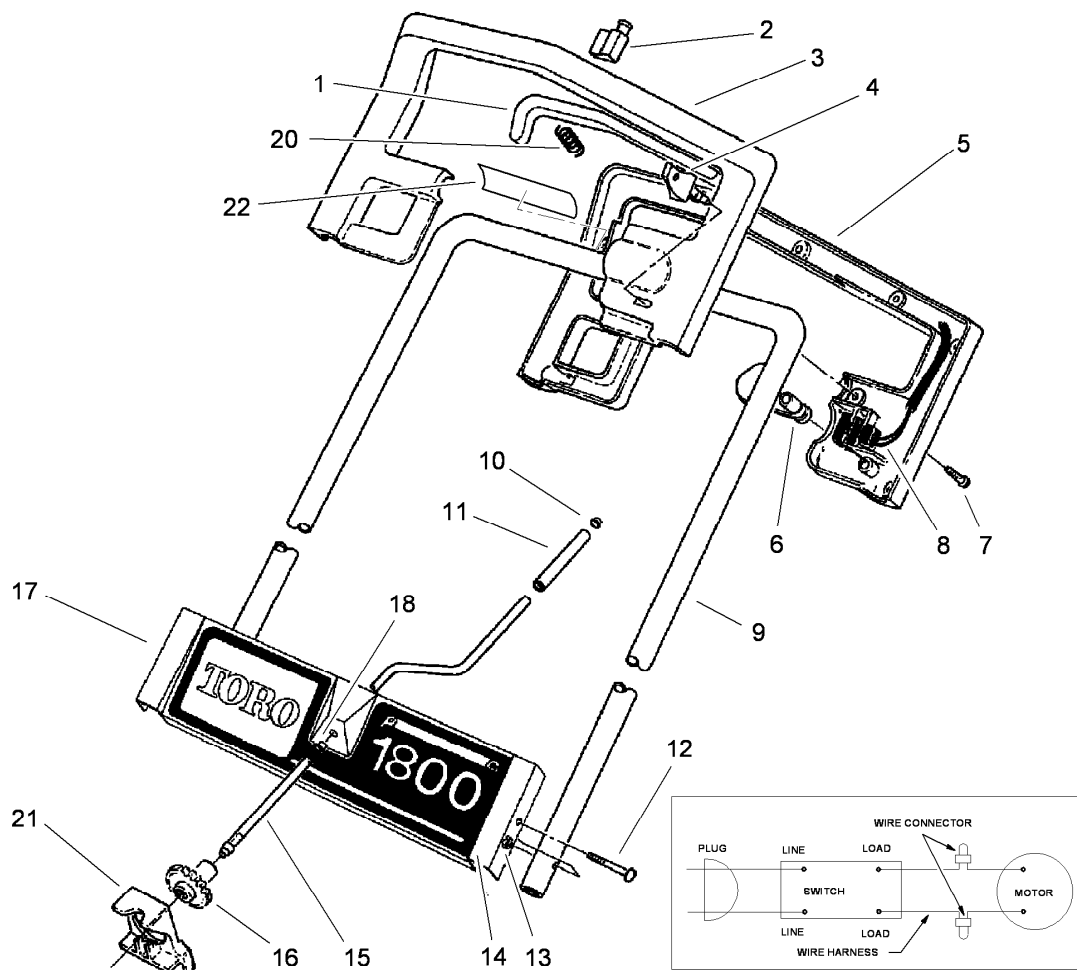

Handle Assembly

Ref.	Part Number	Qty.	Description
1	73-3510	1	Bar-Switch
2	64-4930	1	Switch
3	73-5700	1	Handle-Control, Upper
4	73-5190	1	Key
5	73-5710	1	Handle-Control, Lower
6	73-5690	1	Tab-Lock
7	94-4496	11	Screw-PPH
8	73-5642	1	Cord-Supply
9	73-3460	1	Tube-Handle, Upper
10	32112-1	1	Pushnut-Cap, Washer
11	73-0251	1	Sleeve-Crank, Chute
12	33-8951	2	Screw-HH
13	3296-12	2	Nut-Lock, NI
14	98-1822	1	Decal-Escutcheon
15	73-0240	1	Rod-Crank, Chute
16	73-0230	1	Gear-Crank, Chute
17	73-0310	1	Plate-Escutcheon
18	256-306	1	Bushing-Nyliner
20	73-3450	2	Spring
21	73-3710	1	Brake-Gear
22	114-8986	1	Decal-Operation

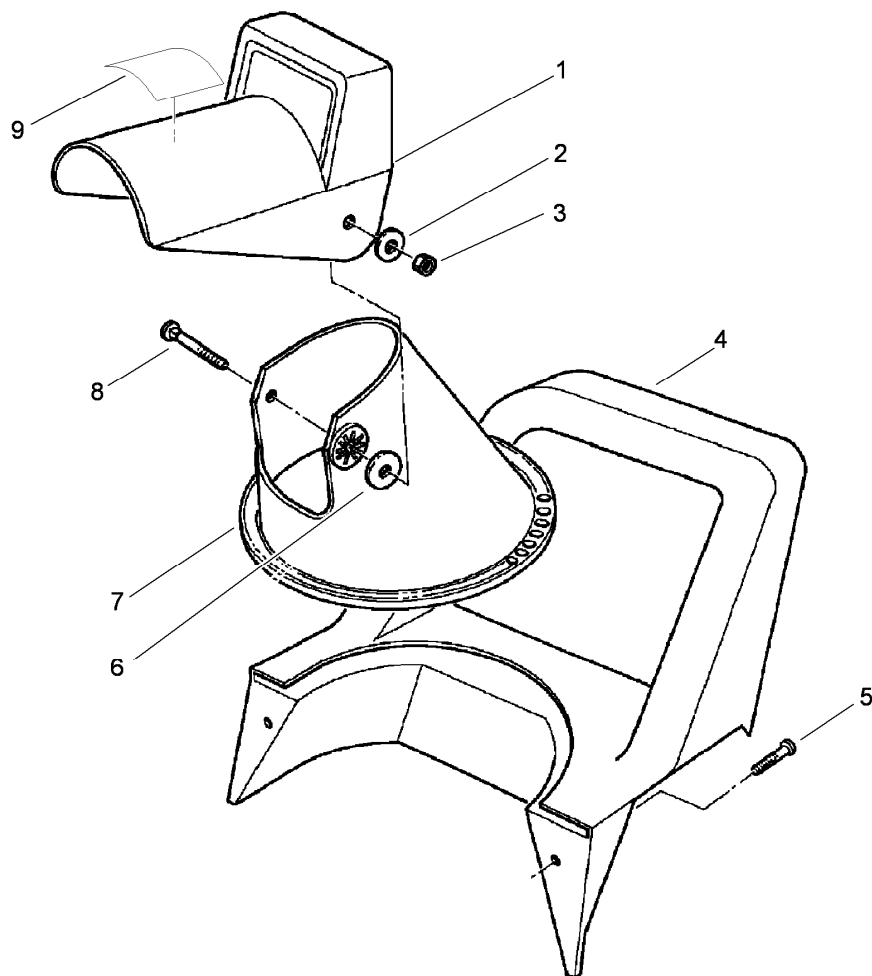 

Chute Assembly

Ref.	Part Number	Qty.	Description
1	73-0190	1	Chute-Deflector
2	3256-68	2	Washer-Flat
3	3296-29	2	Nut-Lock, NI
4	73-0260	1	Handle-Middle
5	94-4496	4	Screw-PPH
6	20-4320	2	Washer-Rubber
7	73-0180	1	Chute-Lower
8	3230-2	2	Bolt-CARR
9	114-9286	1	Decal-Danger
	73-0520	1	Loose Parts (Incl. Ref. #2, 3, 6, & 8, Page 4)(Incl. Ref. #12, & 13 Page 3) ●

● Not illustrated

Notes:



Count on it.