




PART NO. 93-3169

PARTS CATALOG

AUXILIARY VALVE KIT (For Groundsmaster® 300 Series)

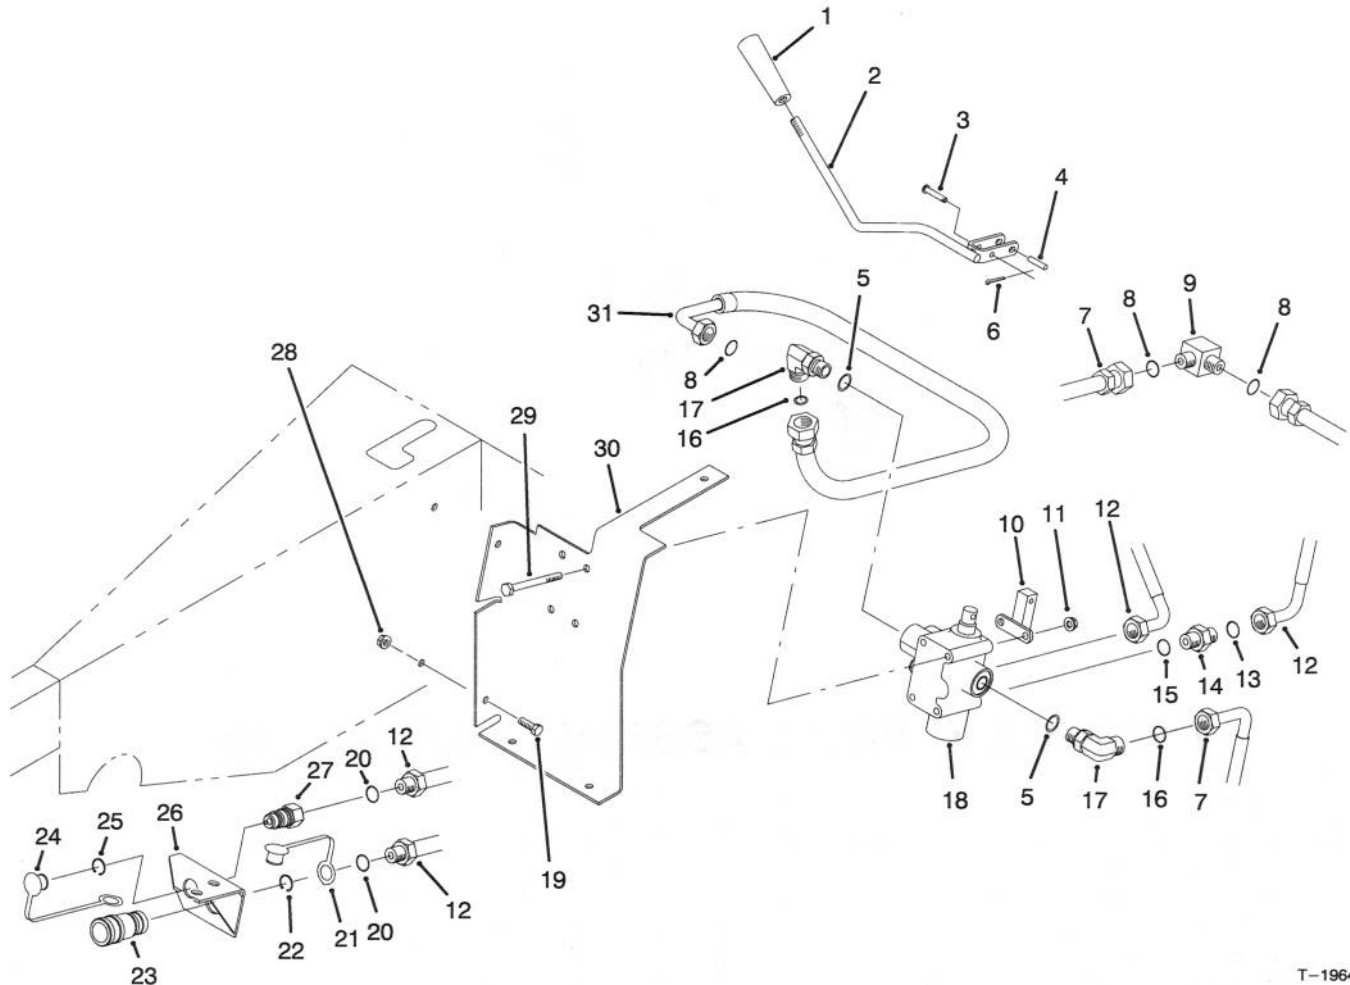


T-1964

AUXILIARY VALVE INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	233-39	Knob	1
2	93-3171	Lever - Valve	1
3	283-17	Pin - Clevis	1
4	32121-5	Pin - Spring	1
5	237-79	Seal - O-Ring	2
6	3272-4	Pin - Cotter	1
7	93-3173	Hose - Hydraulic	1
8	237-30	Seal - O-Ring	3
9	340-163	Fitting - Hydraulic 90° (Incl. Ref. #8)	1
10	80-3360	Pivot - Lever	1
11	32128-33	Nut - Flange Lock	4
12	63-1270	Hose - Hydraulic (Incl. Ref. #20)	2
13	237-21	Seal - O-Ring	2
14	340-92	Fitting - Hydraulic Straight (Incl. Ref. #13 & 15)	2
15	237-78	Seal - O-Ring	2

Ref. No.	Part No.	Description	No. Used
16	237-22	Seal - O-Ring	2
17	340-77	Fitting - Hydraulic 90° (Incl. Ref. #5 & 16)	2
18	43-1950	Hydraulic Valve Assembly	1
19	321-4	Screw - Cap Hex. Hd.	5
20	237-42	Seal - O-Ring	2
21	353-984	Plug - Dust	1
22	32151-83	Ring - Retaining	1
23	63-1220	Coupler - Quick Disconnect	1
24	353-985	Cap - Dust	1
25	32151-79	Ring - Retaining	1
26	93-4265	Bracket - Hose	1
27	63-1240	Nipple - Quick Disconnect	1
28	32152-4	Nut - Flange Lock	5
29	321-14	Screw - Cap Hex. Hd.	4
30	93-3170	Bracket - Valve	1
31	93-3174	Hose - Hydraulic	1

TPS

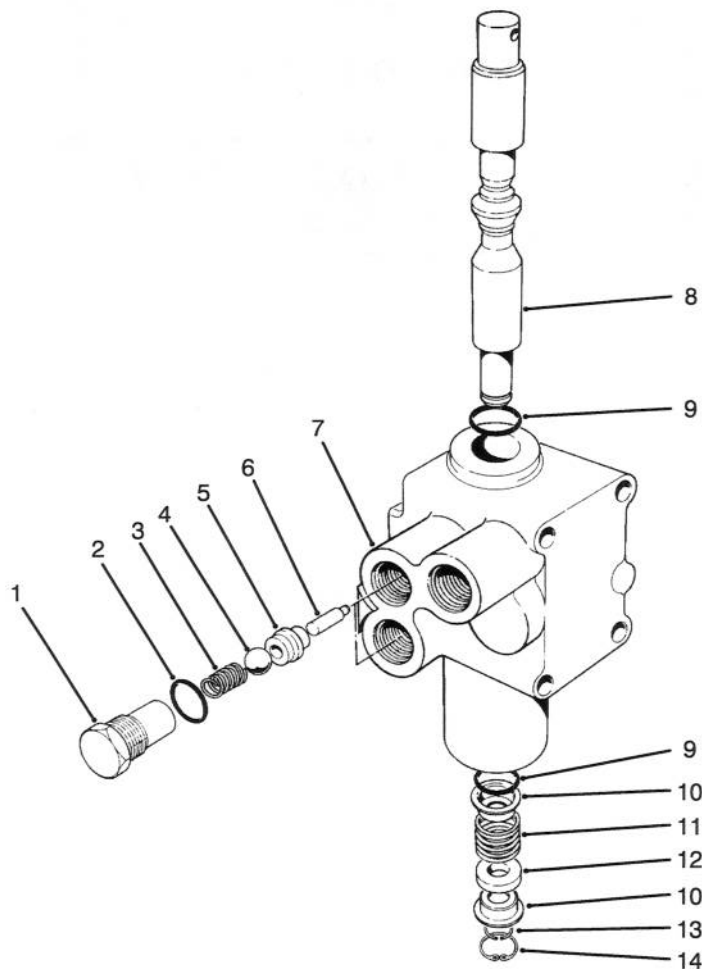

T-0280

HYDRAULIC VALVE ASSEMBLY NO. 43-1950

Ref. No.	Part No.	Description	No. Used
1	22-8330	Plug	2
2	237-42	Seal - O-Ring	2
3	22-8340	Spring	2
4	22-8350	Ball	2
5	22-8370	Seat - Check Valve	2
6	22-8360	Pin - Cam	2
7		Body	1

Ref. No.	Part No.	Description	No. Used
8	22-8420	Spool	1
9	22-8500	Seal - O-Ring	2
10	22-8380	Retainer - Spring	2
11	22-8410	Spring	1
12	23-3030	Spacer	1
13	22-8480	Ring - Retaining	1
14	22-8490	Ring - Retaining	1