



Super Bagger Lawn Mower

Model No. 20192 - 290000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Deck Housing, Front Wheel and Rear Door Assembly	 3	Camshaft Pulley Assembly Honda GCV160L AS3A	 13
Side Discharge, Transmission and Rear Wheel Assembly	 4	Recoil Starter Assembly Honda GCV160L AS3A	 14
Upper Handle Assembly	 5	Carburetor Assembly Honda GCV160L AS3A	 15
Lower Handle Assembly	 6	Fan Cover and Fuel Tank Assembly Honda GCV160L AS3A	 16
Engine and Blade Assembly	 7	Air Cleaner Assembly Honda GCV160L AS3A	 18
Rear Bag Assembly	 8	Muffler Assembly Honda GCV160L AS3A	 19
Cylinder Barrel Assembly Honda GCV160L AS3A	 9	Flywheel Assembly Honda GCV160L AS3A	 20
Oil Pan Assembly Honda GCV160L AS3A	 10	Control Assembly Honda GCV160L AS3A	 21
Crankshaft Assembly Honda GCV160L AS3A	 11	Choke Base Assembly Honda GCV160L AS3A	 22
Piston and Connecting Rod Assembly Honda GCV160L AS3A	 12	Label Assembly Honda GCV160L AS3A	 23
		Attachments and Accessories List	 24

 
Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HWHTF. hex washer head thread forming
ASM. assembly	HYD. hydraulic
BBC. blade brake clutch	LH. left hand
CARR. carriage	NI. nylon insert
CCW. counter clock wise	NPTF. national pipe thread fine
CW. clockwise	PFH. phillips flat head
DEG. degrees	PPH. phillips pan head
ECM. electronic control module	PPHTF. phillips pan head thread forming
EXT. external	PRH. phillips round head
FH. flat head	PTH. phillips truss head
GA. gauge	PTO. power-take-off
HD. heavy-duty	RH. right hand
HF. hex flange	ROPS. roll-over protection system
HH. hex head	SFH. slotted fillister head
HHF. hex head flange	SHH. slotted hex head
HHFTF. hex head flange thread forming	SHWH. slotted hex washer head
HJ. hex jam	SPH. slotted pan head
HLH. hex lag head	SQH. square head
HOC. height-of-cut	SRH. slotted round head
HSBH. hex socket button head	STD. standard
HSFH. hex socket flat head	TAP. self tapping
HS. hex socket head	TTH. torx truss head
HWH. hex washer head	

Footnotes


- ① Obtain parts from www.honda-engines.com

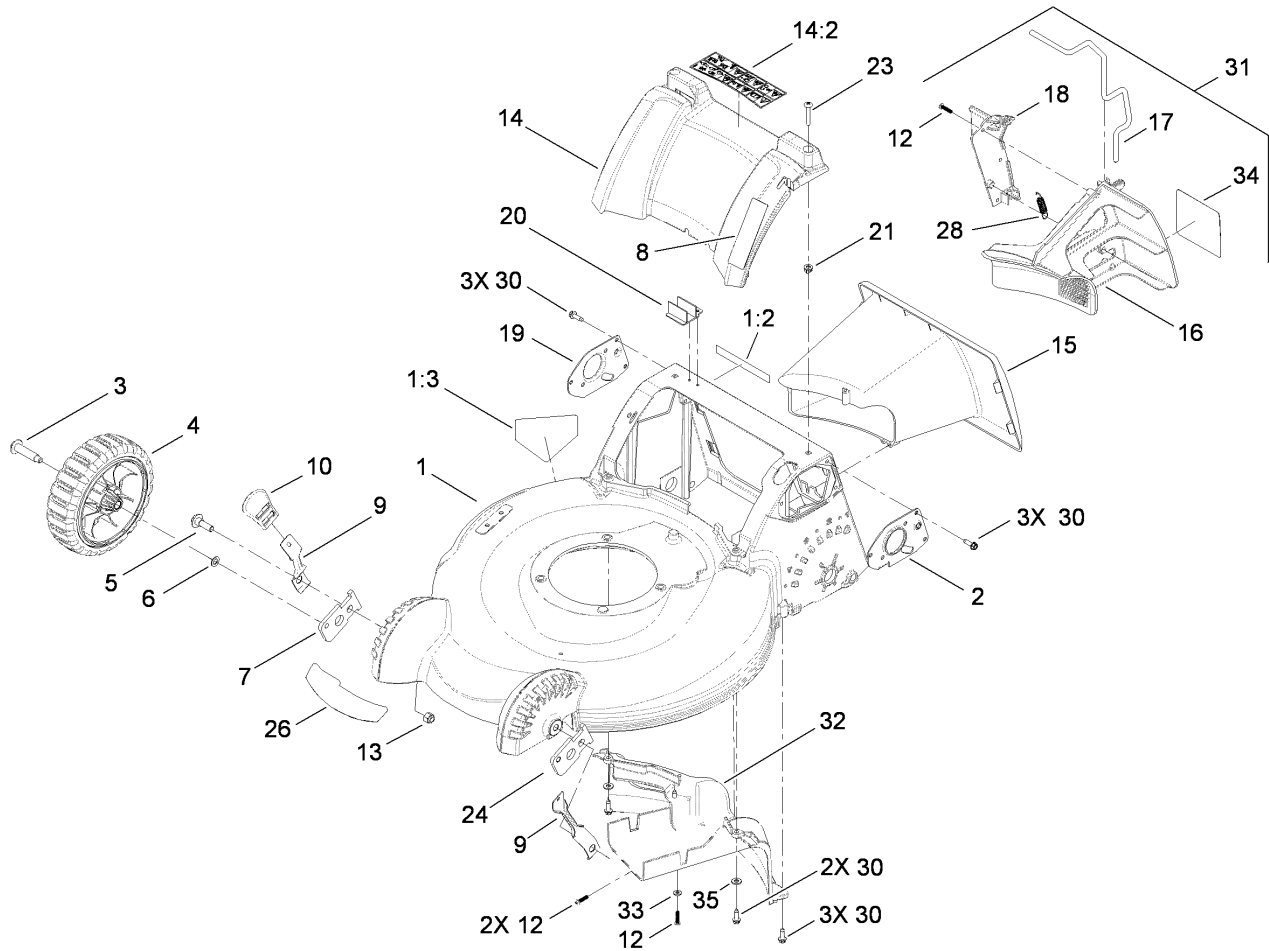

Deck Housing, Front Wheel and Rear Door Assembly

Ref	Part No.	Qty.	Description
1	117-4167	1	Housing ASM
1:2	107-3889	1	Decal-Safety
1:3	94-8072	1	Decal-Danger
2	110-9415-03	1	Mount-Handle, LH
3	614650	2	Bolt-Shoulder
4	117-4103	2	8 Inch Wheel ASM
5	614672	2	Bolt-Shoulder
6	40-1940	2	Washer
7	110-9421	1	Arm-Pivot, RH
8	117-5902	1	Decal-Quick Stow
9	110-9434	2	Arm-Spring, Front
10	110-0549	2	Knob-HOC
12	108-7476	6	Screw-Plastite
13	3296-39	2	Nut-Lock, NI
14	115-3177	1	Cover-Rear
14:2	114-2820	1	Decal-Warning
15	110-9455	1	Tunnel
16	110-9446	1	Plug-Mulch, LH
17	110-9448	1	Latch-Plug, Mulch
18	110-9447	1	Plug-Mulch, RH
19	110-9416-03	1	Mount-Handle, RH
20	110-1786	1	Module-Switch
21	94-1610	2	Nut-Clip
23	108-0965	2	Screw-PTH


Ref	Part No.	Qty.	Description
24	110-9420	1	Arm-Pivot, LH
26	117-4164	1	Decal-Super Bagger
28	110-9458	1	Spring-Extension
30	49-2040	11	Screw-HWHTF
31	110-9468	1	Mulch Plug ASM
32	110-9413	1	Baffle-Rear
33	3256-14	1	Washer-Flat
34	110-9457	1	Decal-Plug, Mulch
35	3256-22	2	Washer-Flat

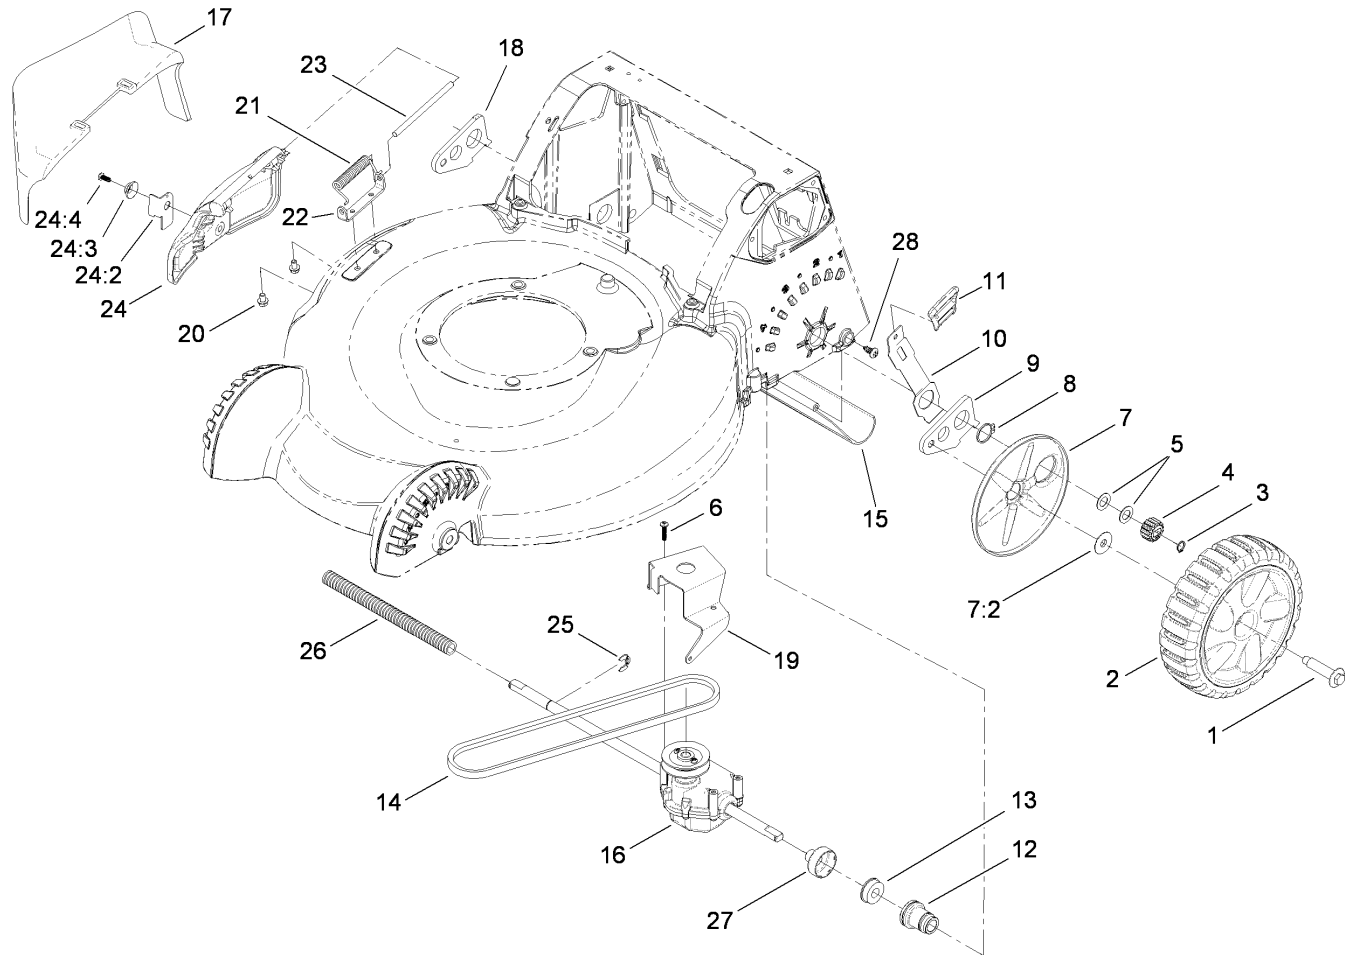 

Side Discharge, Transmission and Rear Wheel Assembly


Ref	Part No.	Qty.	Description
1	614650	2	Bolt-Shoulder
2	117-4104	2	Rear Wheel ASM
3	32151-61	2	Ring-Retaining
4	110-9417	2	Pinion
5	36-4780	2	Washer-Plain
6	108-7476	3	Screw-Plastite
7	117-4197	2	Wheel Cover ASM
7:2	614426	1	Washer-Stepped
8	32151-36	2	Ring-Retaining
9	108-9344	1	Arm-Rear Pivot, LH
10	110-9445	2	Arm-Spring, Rear
11	110-0549	2	Knob-HOC
12	110-9422	2	Retainer-Bearing
13	104-8699	2	Bearing-Ball
14	110-9429	1	V-Belt
15	112-8768	1	Shield-Trailing
16	114-2812	1	Transmission ASM
17	105-3028	1	Chute-Discharge, Side
18	108-9343	1	Arm-Rear Pivot, RH
19	114-7977-03	1	Bracket-Transmission
20	99-8445	2	Screw-HWH
21	99-5293	1	Spring-Torsion
22	112-6416	1	Bracket-Cover
23	99-5291	1	Rod-Cover

Ref	Part No.	Qty.	Description
24	106-8376	1	Discharge Door ASM
24:2	107-0795	1	Latch-Door
24:3	107-7456	1	Cap-Door
24:4	107-7461	1	Screw-Plastite
25	65-2720	1	Ring-Clip, Locking
26	24-7922	1	Cover-Shaft, Drive
27	114-2755	2	Cap-Bearing
28	117-1092	2	Screw-PTH

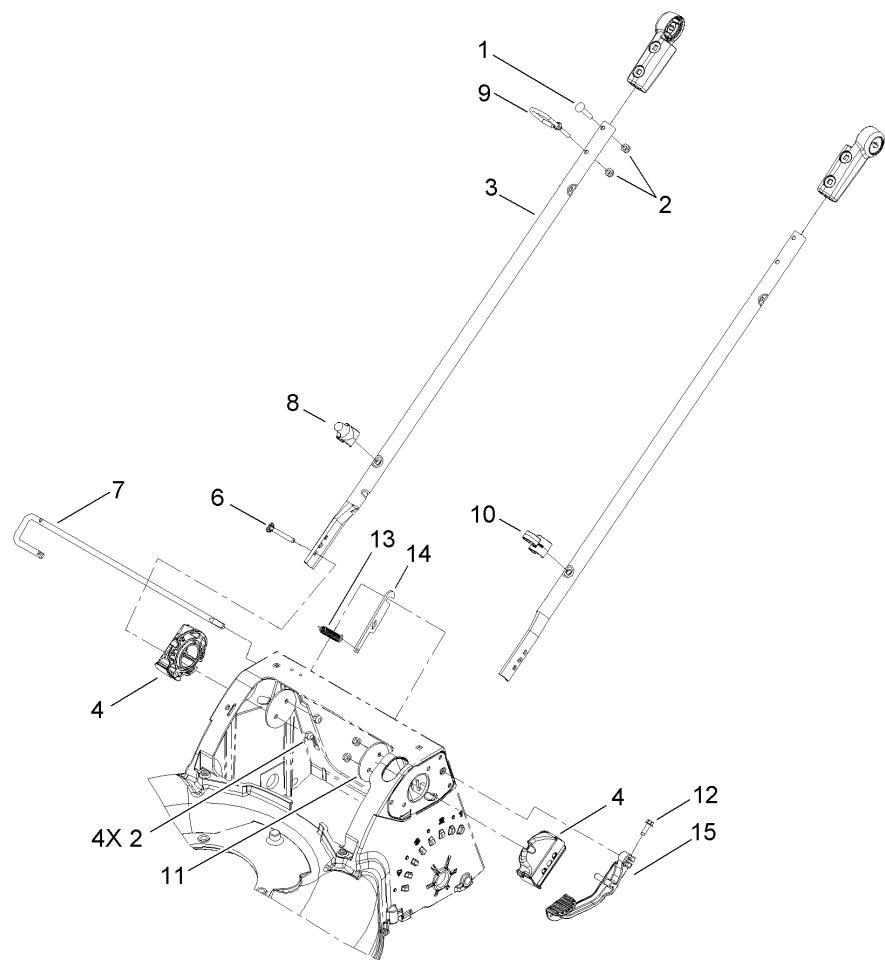 


Lower Handle Assembly

Ref	Part No.	Qty.	Description				
1	108-0988	3	Screw-CARR				
2	3296-73	8	Nut-Lock, NI				
3	107-3887-03	2	Tube-Lower				
4	114-2791	2	Mount-Handle, Lower				
6	95-4453	4	Screw				
7	112-8755	1	Rod-Release, Handle				
8	117-4141	1	Guide-Rope, Lower				
9	107-3908	1	Guide-Rope, Upper				
10	106-6805	1	Guide-Cable				
11	107-3944-03	2	Plate				
12	49-2040	1	Screw-HWHTF				
13	112-1542	1	Spring-Extension				
14	112-1539	1	Plate-Rod, Release				
15	110-1823-03	1	Lever-Release				

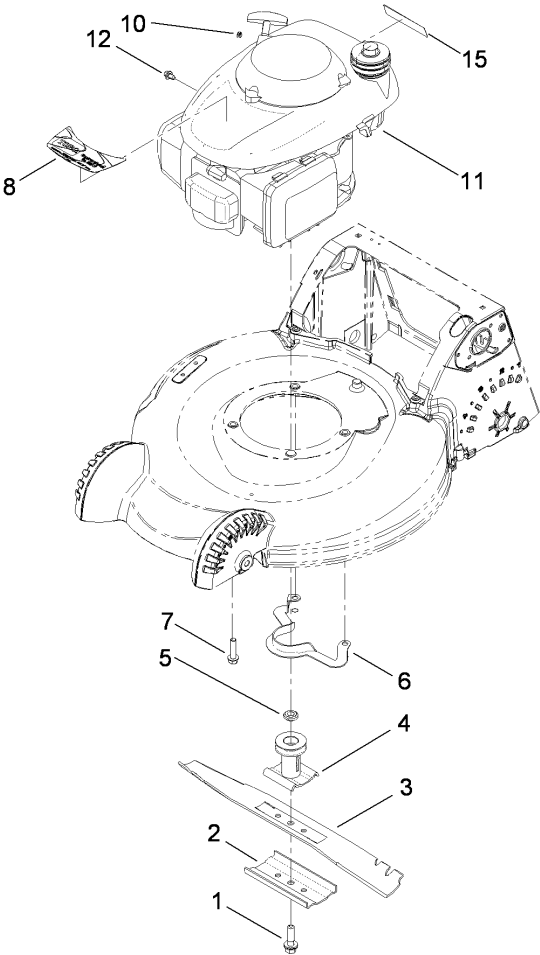 


Engine and Blade Assembly

Ref	Part No.	Qty.	Description				
1	112-8789	1	Bolt-Shoulder				
2	108-3766-03	1	Support-Blade				
3	108-0954-03	1	Blade-21 Inch				
4	114-2774	1	Driver-Blade				
5	106-3999	1	Spacer-Driver				
6	108-8110-03	1	Guide-Belt				
7	32144-102	3	Screw-HWH				
8	117-5955	1	Decal-Engine				
10	92-1701	1	Stop-Rope				
11	117-5903	1	Engine-Honda, Gcv160L As3A				
12	98-1394	1	Screw-HWH				
15	117-2718	1	Decal-Arrester, Spark				

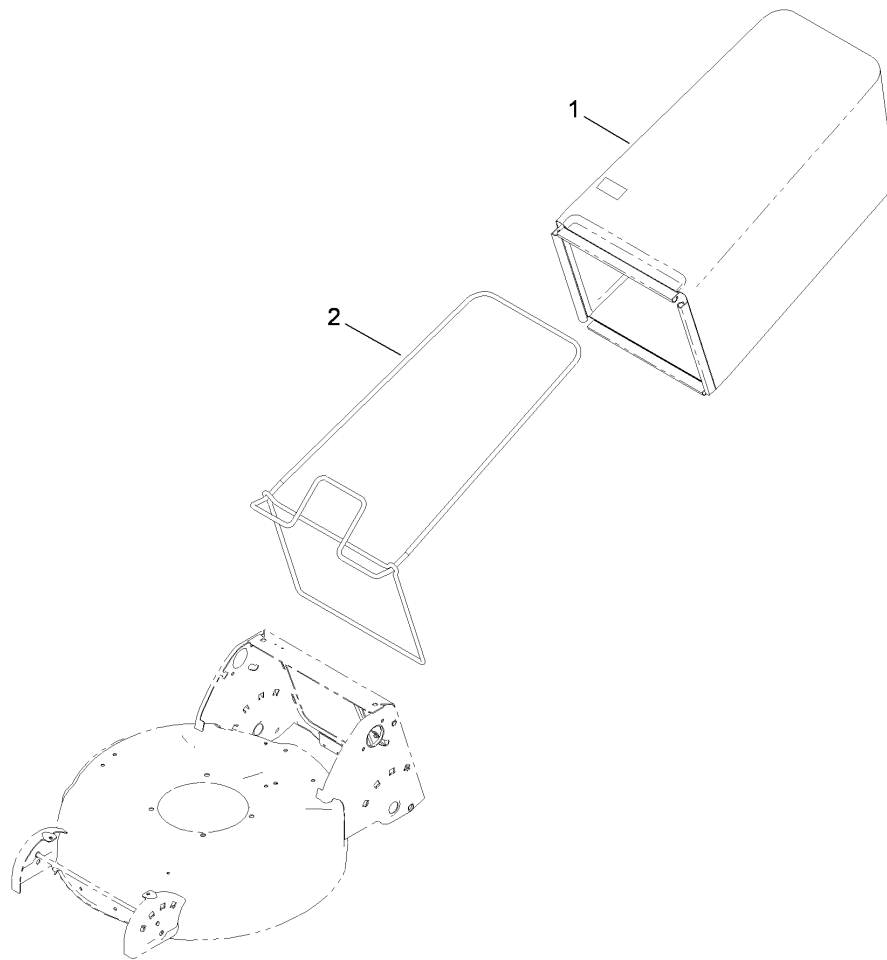 

Rear Bag Assembly

Ref	Part No.	Qty.	Description
1	117-4191	1	Grass Bag ASM
2	112-8750-03	1	Frame-Bag

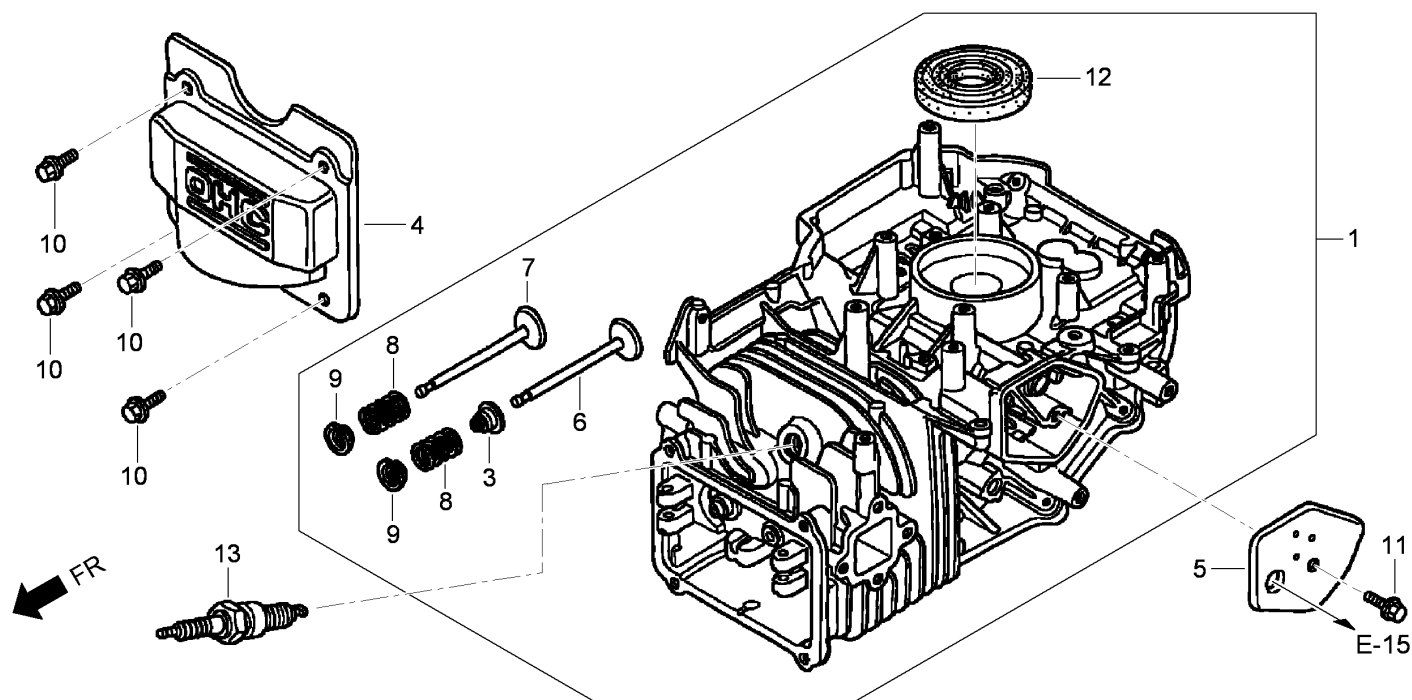 


E-3

Cylinder Barrel Assembly

Honda GCV160L AS3A

Ref	Part No.	Qty.	Description
❶1	12000-Z0L-840	1	Cylinder ASM
❶3	12209-ZM0-003	1	Seal-Stem, Valve
❶4	12310-Z0J-000	1	Cover-Head, Cylinder
❶4	12311-ZL8-D00	1	Cover-Head
❶4	12311-ZL8-000	1	Cover-Head
❶5	12355-ZL8-000	1	Cover-Breather (Breather Valve ASM)
❶6	14711-Z0J-000	1	Valve-Intake (Rocknel) (Engine Serial Numbers Up To 6330748)
❶6	14711-Z0J-800	1	Valve-Intake (Engine Serial Numbers Starting At 6330749)
❶7	14721-ZL8-000	1	Valve-Exhaust
❶8	14751-ZL8-000	2	Spring-Valve
❶9	14771-Z0J-000	2	Retainer-Spring, Valve
❶10	90013-883-000	4	Bolt-Flange (6X12) (C T200)
❶11	90014-952-000	1	Bolt-Flange (6X14) (C T200)

Ref	Part No.	Qty.	Description
❶ 12	91201-ZL8-003	1	Seal (25.4X62X6)
❶ 13	98079-56846	1	Spark Plug (B P R 6E S) (N G K)

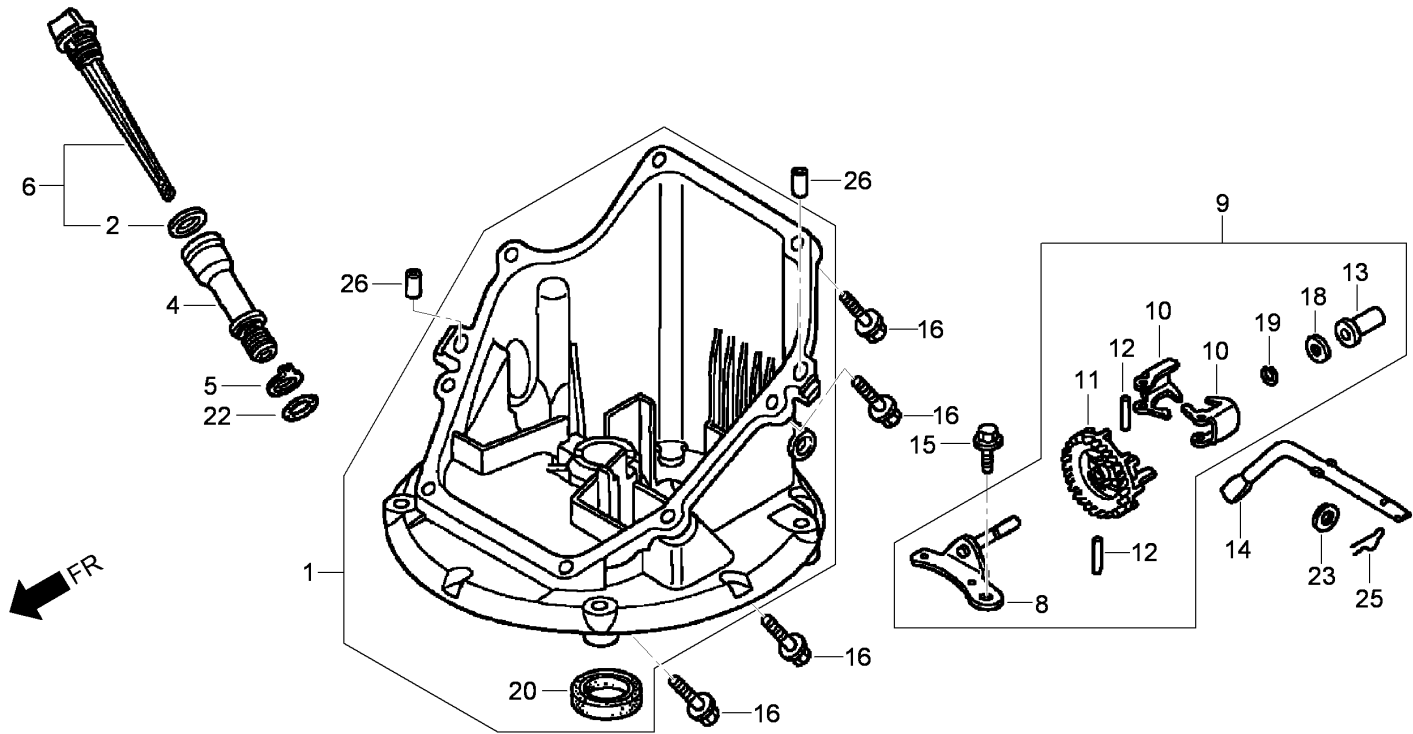 


E-6

Oil Pan Assembly Honda GCV160L AS3A

Ref	Part No.	Qty.	Description
❶1	11300-ZM0-811	1	Oil Pan ASM
❶2	15625-ZE6-000	1	Gasket-Cap, Oil Filler
❶4	15631-ZM0-000	1	Extension-Filler, Oil
❶5	15639-ZM0-000	1	Washer-Lock, Extension
❶6	15650-ZM0-801	1	Oil Level Gauge ASM
❶8	16508-ZM0-010	1	Shaft-Holder, Governor
❶9	16510-ZM0-010	1	Governor ASM
❶10	16511-ZL8-000	2	Weight-Governor
❶11	16512-ZM0-000	1	Holder-Weight, Governor
❶12	16513-ZE1-000	2	Pin-Weight, Governor
❶13	16531-ZE1-000	1	Slider-Governor
❶14	16541-ZM0-000	1	Shaft-Arm, Governor
❶15	90014-952-000	1	Bolt-Flange (6X14) (C T200)

Ref	Part No.	Qty.	Description
❶16	90121-952-000	8	Bolt-Flange (6X25) (C T 200)
❶18	90451-ZE1-000	1	Washer-Thrust (6Mm)
❶19	90602-ZE1-000	1	Clip-Holder, Governor
❶20	91202-ZL8-003	1	Seal-Oil (28X41.25X6)
❶22	91356-MA6-005	1	O-Ring (14.8X24) (N O K)
❶23	94101-06800	1	Washer-Plain (6Mm)
❶25	94251-08000	1	Pin-Lock (8Mm)
❶26	94301-08200	2	Pin-Dowel (8X20)

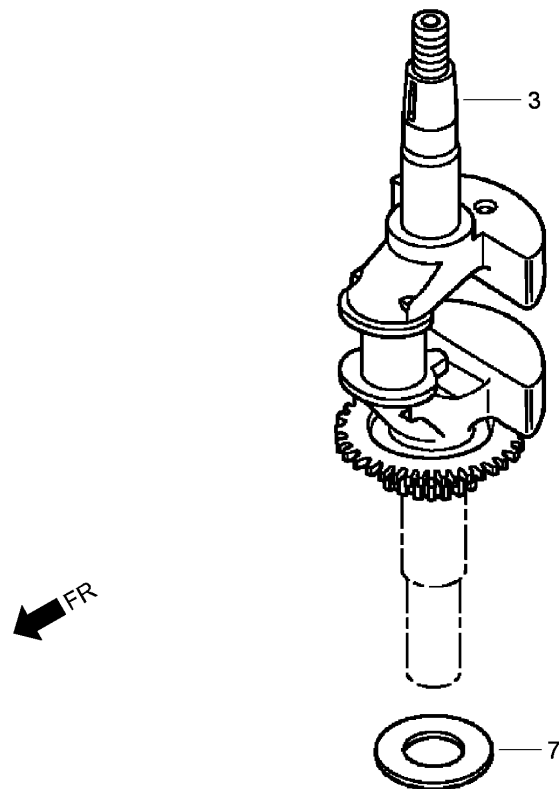 


E-7

Crankshaft Assembly

Honda GCV160L AS3A


Ref	Part No.	Qty.	Description
❶3	13310-ZM0-610	1	Crankshaft
❶7	90402-ZL8-000	1	Washer-Thrust

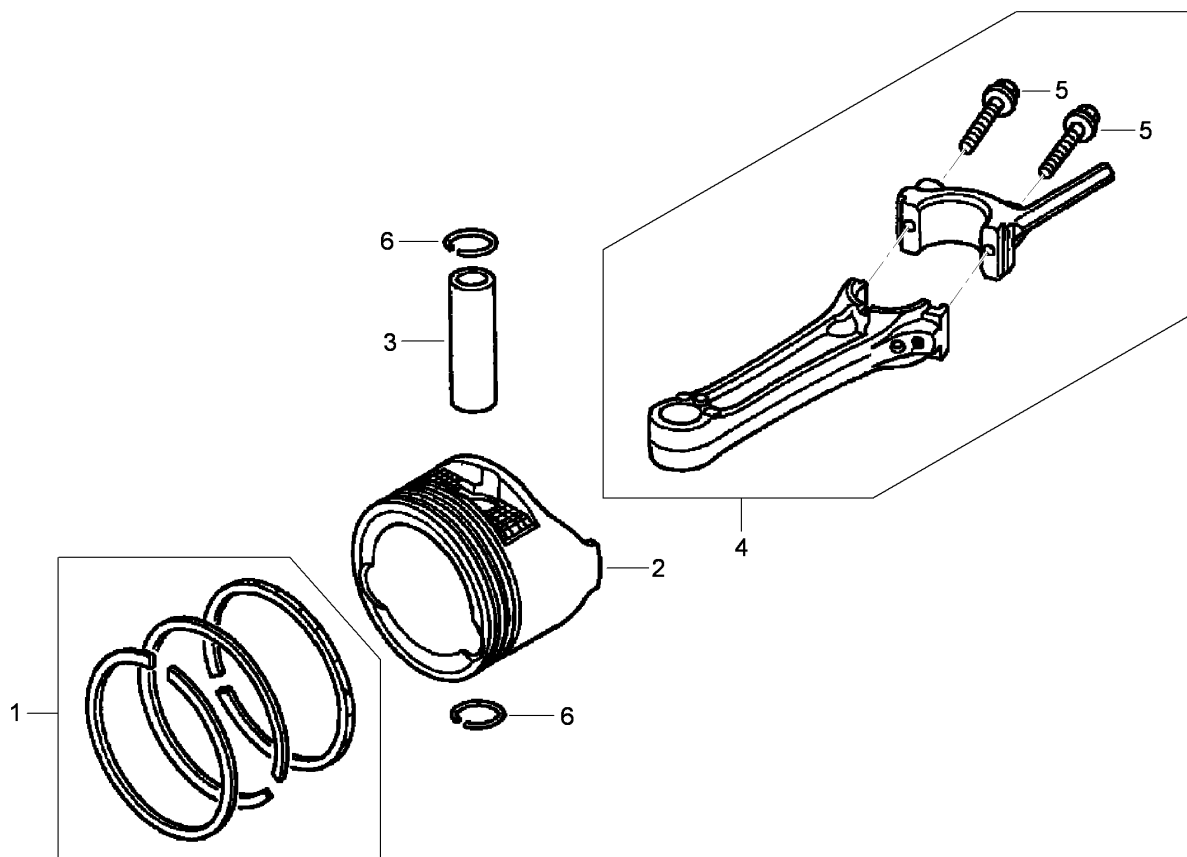 

E-8

Piston and Connecting Rod Assembly Honda GCV160L AS3A


Ref	Part No.	Qty.	Description
❶1	13010-Z0L-014	1	Piston Ring Set (STD) (Teikoku)
❶2	13101-Z2A-010	1	Piston
❶3	13111-ZE0-000	1	Pin-Piston
❶4	13200-Z0J-000	1	Connecting Rod ASM
❶5	90001-ZE1-000	2	Bolt-Rod, Connecting
❶6	90551-ZE0-000	2	Clip-Pin, Piston (13Mm)

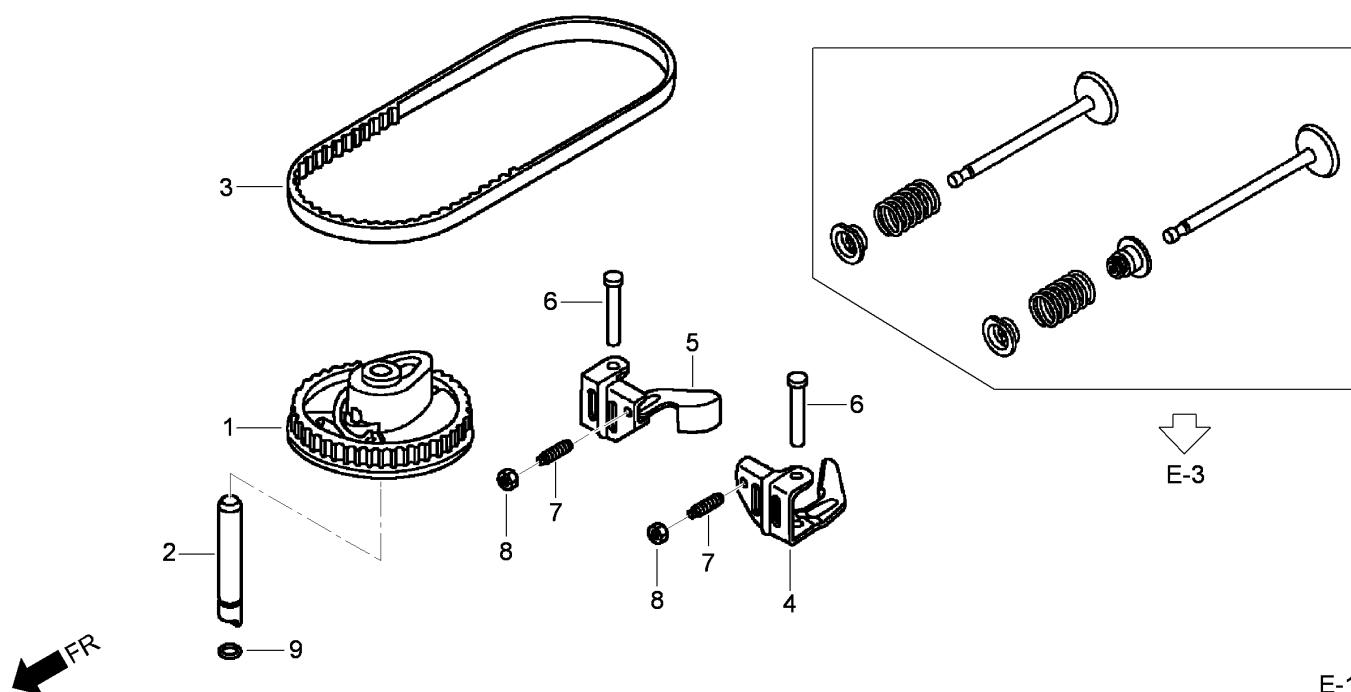 

E-10

Camshaft Pulley Assembly Honda GCV160L AS3A

Ref	Part No.	Qty.	Description				
❶1	14320-ZL8-010	1	Pulley-Camshaft				
❶2	14324-ZL8-000	1	Shaft-Pulley, Cam				
❶3	14400-Z0J-014	1	Belt-Timing (84H U7 G-200)				
❶4	14431-Z0J-000	1	Arm-Rocker, Intake Valve				
❶5	14441-Z0J-000	1	Arm-Rocker, Exhaust Valve				
❶6	14461-ZL8-000	2	Shaft-Arm, Rocker				
❶7	90012-333-000	2	Screw-Adjusting, Tappet				
❶8	90206-001-000	2	Nut-Adjusting, Tappet				
❶9	91301-ZM0-V31	1	O-Ring (6.8X19) (Arai)				

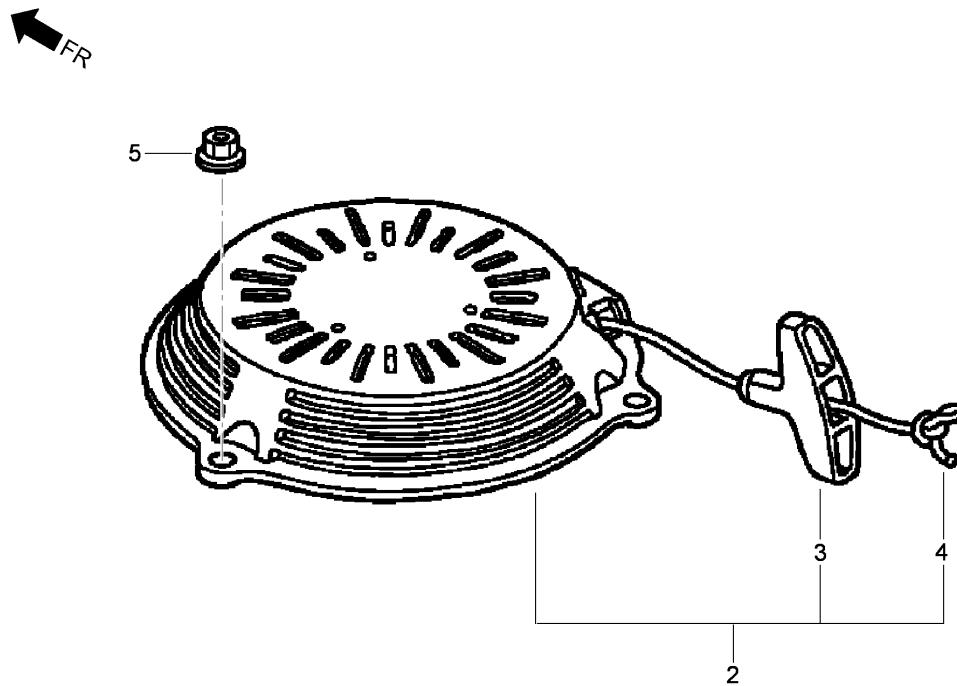 


E-11

Recoil Starter Assembly

Honda GCV160L AS3A

Ref	Part No.	Qty.	Description				
❶2	28400-Z0L-V20ZA	1	Recoil Starter ASM (N H1) (Long Rope) (Black)				
❶2	28400-Z0L-V20ZC	1	Recoil Starter ASM (T98) (Long Rope) (Mtd Red)				
❶3	28461-ZL8-003	1	Grip-Starter				
❶4	28462-Z0L-V20	1	Rope-Starter, Recoil (Black) (Long Type)				
❶5	90201-ZM0-000	3	Nut-Flange (6Mm)				

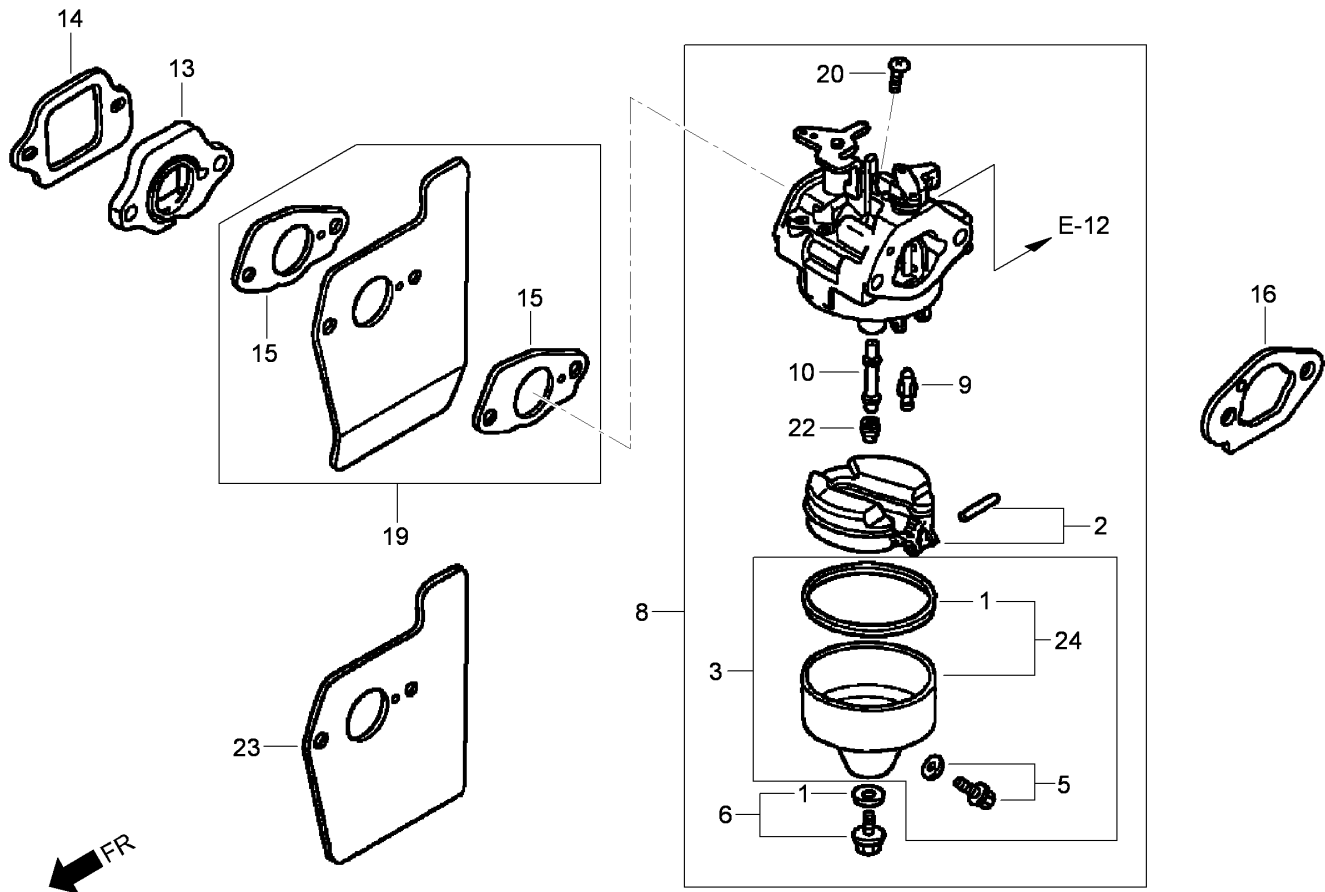 

E-14



Carburetor Assembly Honda GCV160L AS3A

Ref	Part No.	Qty.	Description
❶1	16010-883-015	1	Gasket Set
❶2	16013-ZL1-003	1	Float Set
❶3	16015-887-782	1	Float Chamber Set (Engine Serial Numbers Up To B B62Z A)
❶5	16024-ZE1-811	1	Drain Screw Set (Engine Serial Numbers Up To B B62Z A)
❶6	16028-ZE0-005	1	Screw Set
❶6	16028-ZK7-S91	1	Screw Set
❶8	16100-Z0L-851	1	Carburetor Assy (B B62Z A) (Engine Serial Numbers Up To 7161134)
❶8	16100-Z0L-852	1	Carburetor Assy (B B62Z B) (Engine Serial Numbers Starting At 7161135)
❶9	16155-ZM0-013	1	Valve-Float
❶10	16166-ZM0-003	1	Nozzle-Main
❶13	16211-ZL8-000	1	Insulator-Carburetor
❶14	16212-ZL8-000	1	Gasket-Insulator
❶15	16221-883-800	2	Gasket-Carburetor (Engine Serial Numbers Up To 6349022)

Ref	Part No.	Qty.	Description
❶16	16228-ZL8-000	1	Gasket-Carburetor
❶19	19650-ZM0-000	1	Guide-Air (Engine Serial Numbers Up To 6349022)
❶20	93500-05006-0H	1	Screw-Pan (5X6)
❶22	99101-124-0600	1	Jet-Main (No.60) (Optional Equipment)
❶22	99101-124-0620	1	Jet-Main (No.62) (Optional Equipment)
❶22	99101-124-0650	1	Jet-Main (No.65)
❶23	19651-Z0L-000	1	Guide-Air (Engine Serial Numbers Starting At 6349023)
❶24	16015-Z0L-881	1	Float Chamber Set (Engine Serial Numbers Starting At B B62Z B)

Fan Cover and Fuel Tank Assembly

  
Honda GCV160L AS3A

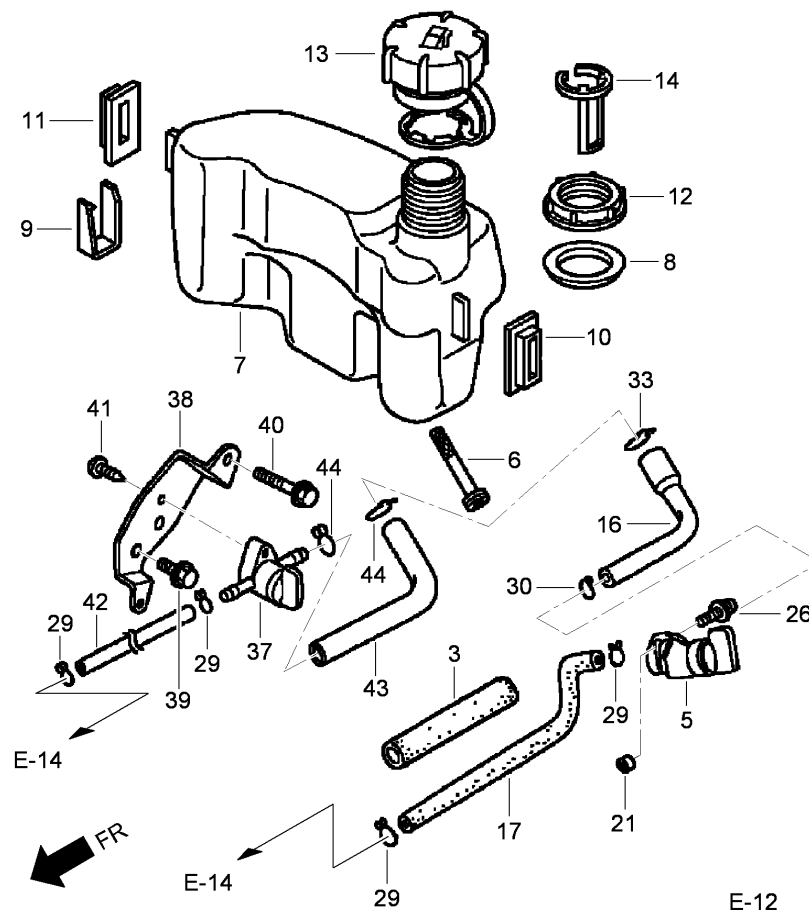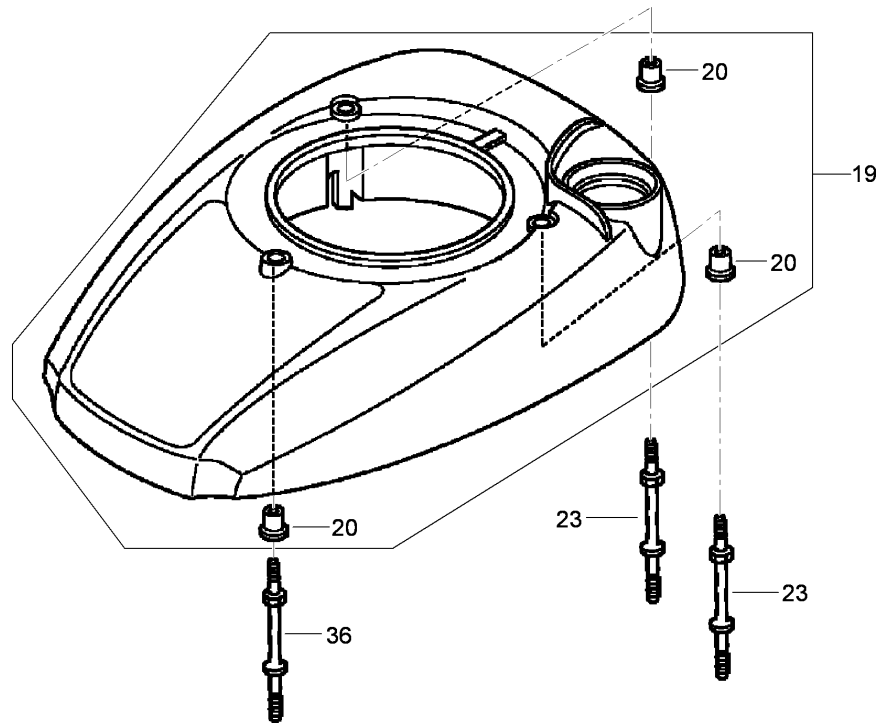

Fan Cover and Fuel Tank Assembly

Honda GCV160L AS3A


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
❶3	16854-ZH8-000	1	Supporter-Rubber (107Mm) (Engine Serial Numbers Up To 6901760)	❶29	95002-02080	2	Clip-Tube (B8)
❶5	16950-ZM0-003	1	Petcock ASM (Engine Serial Numbers Up To 6901760)	❶30	95002-02100	1	Clip-Tube (B10) (Engine Serial Numbers Up To 6901760)
❶6	16952-ZA8-800	1	Filter-Fuel	❶33	95002-70000	1	Clip-Tube (C11) (Engine Serial Numbers Up To 6901760)
❶7	17511-Z0L-000	1	Tank-Fuel (Engine Serial Numbers Up To 6183839)	❶36	90043-ZL8-000	1	Bolt-Stud (H=42.5Mm)
❶7	17511-Z0L-010	1	Tank-Fuel (Engine Serial Numbers Starting At 6183840)	❶37	16950-Z0Y-003	1	Petcock ASM (Engine Serial Numbers Starting At 6901761)
❶8	17514-Z0L-000	1	Seal-Neck, Fuel Filler	❶38	16961-Z0L-900	1	Stay-Petcock (Engine Serial Numbers Starting At 6901761)
❶9	17516-Z0L-000	1	Clip-Mounting, Tank	❶39	90013-883-000	1	Bolt-Flange (6X12) (C T200) (Engine Serial Numbers Starting At 6901761)
❶10	17532-Z0L-000	1	Rubber A-Mounting, Tank	❶40	90015-883-000	1	Bolt-Flange (6X28) (C T200) (Engine Serial Numbers Starting At 6901761)
❶11	17533-Z0L-000	1	Rubber B-Mounting, Tank	❶41	93913-25220	1	Screw-Tapping (5X12) (P O) (Engine Serial Numbers Starting At 6901761)
❶12	17534-Z0L-000	1	Nut-Mounting, Tank	❶42	95001-45003-50M	1	Fuel-Hose, Bulk (4.5X3000) (4.5X110) (Engine Serial Numbers Starting At 6901761)
❶13	17620-Z0J-800	1	Fuel Tank Cap ASM	❶43	95001-75008-60M	1	Fuel-Hose, Bulk (7.5X8000) (7.3X160) (Engine Serial Numbers Starting At 6901761)
❶14	17636-Z0L-000	1	Gauge-Level, Fuel	❶44	95002-02120	2	Clip-Tube (B12) (Engine Serial Numbers Starting At 6901761)
❶16	17701-Z0L-810	1	Tube-Tank, Fuel (Engine Serial Numbers Up To 6901760)				
❶17	17702-ZM0-800	1	Tube-Fuel (Engine Serial Numbers Starting At 6901760)				
❶19	19610-Z0L-860ZA	1	Cover-Fan (Nh1) (Black) (Engine Serial Numbers Up To 6702082)				
❶19	19610-Z0L-860ZC	1	Cover-Fan (T89) (Craftsman Red) (Engine Serial Numbers Up To 6702082)				
❶19	19610-Z0L-860ZD	1	Cover-Fan (T93) (Husqvarna Gray) (Engine Serial Numbers Up To 6702082)				
❶19	19610-Z0L-860ZE	1	Cover-Fan (T98) (M T D Red) (Engine Serial Numbers Up To 6702082)				
❶19	19610-Z0L-861ZA	1	Cover-Fan (Nh1) (Black) (Engine Serial Numbers Starting At 6702083)				
❶19	19610-Z0L-861ZC	1	Cover-Fan (T89) (Craftsman Red) (Engine Serial Numbers Starting At 6702083)				
❶19	19610-Z0L-861ZD	1	Cover-Fan (T93) (Husqvarna Gray) (Engine Serial Numbers Starting At 6702083)				
❶19	19610-Z0L-861ZE	1	Cover-Fan (T98) (M T D Red) (Engine Serial Numbers Starting At 6702083)				
❶20	19619-ZL8-300	3	Collar-Cover, Fan				
❶21	91501-Z0L-800	1	Collar-Petcock, Fuel (Engine Serial Numbers Up To 6901760)				
❶23	90043-ZL8-000	2	Bolt-Stud (H=42.5Mm)				
❶26	93891-05010-08	1	Screw-Washer (5X10) (Engine Serial Numbers Up To 6901760)				

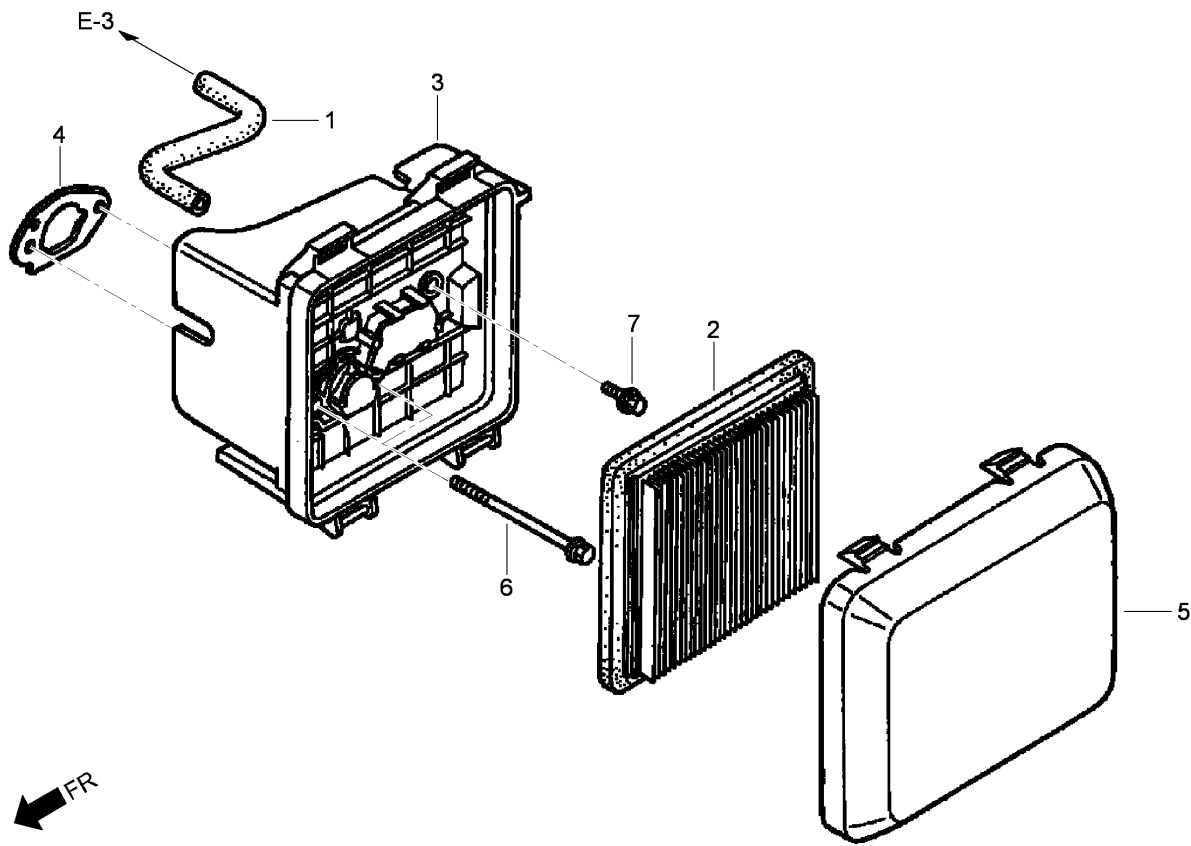 

E-15

Air Cleaner Assembly
Honda GCV160L AS3A

Ref	Part No.	Qty.	Description				
❶1	15721-ZM0-000	1	Tube-Breather				
❷2	17211-ZL8-023	1	Element-Cleaner, Air				
❸3	17220-ZM0-000	1	Air Cleaner Case ASM (Engine Serial Numbers Up To 6624355)				
❸3	17220-ZM0-010	1	Air Cleaner Case ASM				
❹4	17228-ZM0-000	1	Gasket-Cleaner, Air				
❺5	17231-Z0L-030	1	Cover-Cleaner, Air				
❻6	90003-ZM0-000	2	Bolt-Flange (6X86) (C T200) (Engine Serial Numbers Up To 6349022)				
❻6	90003-ZM0-010	2	Bolt, Flange (6X85) (C T200)				
❼7	95701-06014-08	1	Bolt-Flange (6X14) (Engine Serial Numbers Up To 6624355)				

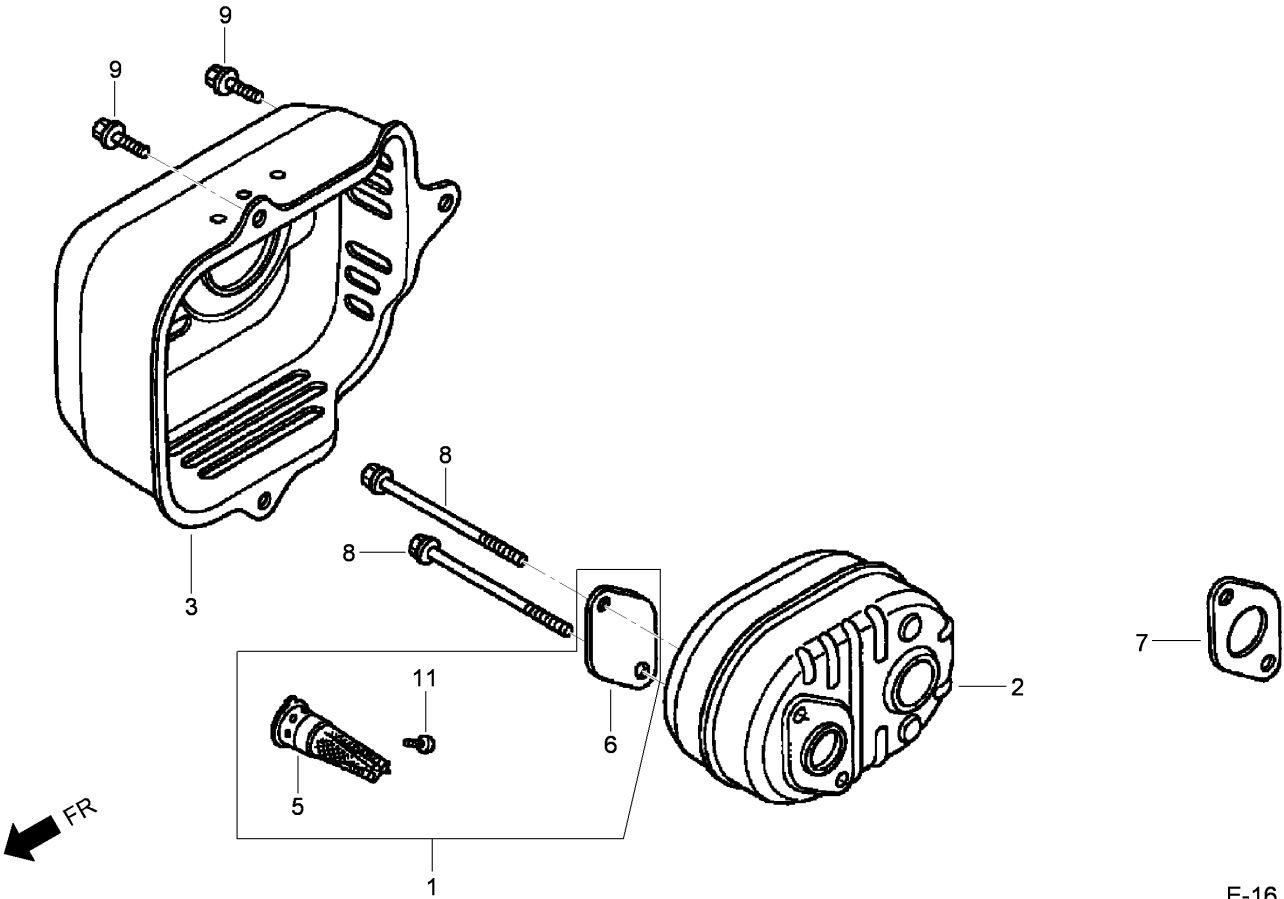 


E-16

Muffler Assembly

Honda GCV160L AS3A

Ref	Part No.	Qty.	Description				
❶1	06180-Z0J-000	1	Spark Arrester Kit (Optional Equipment)				
❷2	18310-ZM0-000	1	Muffler				
❸3	18321-Z0L-J00	1	Protector-Muffler				
❹5	18350-ZL8-000	1	Arrester-Spark (Optional Equipment)				
❺6	18356-ZL8-000	1	Plate-Number, Arrester (Optional Equipment)				
❻7	18381-ZL8-305	1	Gasket-Muffler (Optional Equipment)				
❼8	90004-ZL8-000	2	Bolt-Flange (6X79) (C T200)				
❽9	90013-883-000	3	Bolt-Flange (6X12) (C T200)				
❿11	90055-ZE1-000	1	Screw-Tapping (4X6) (Optional Equipment)				

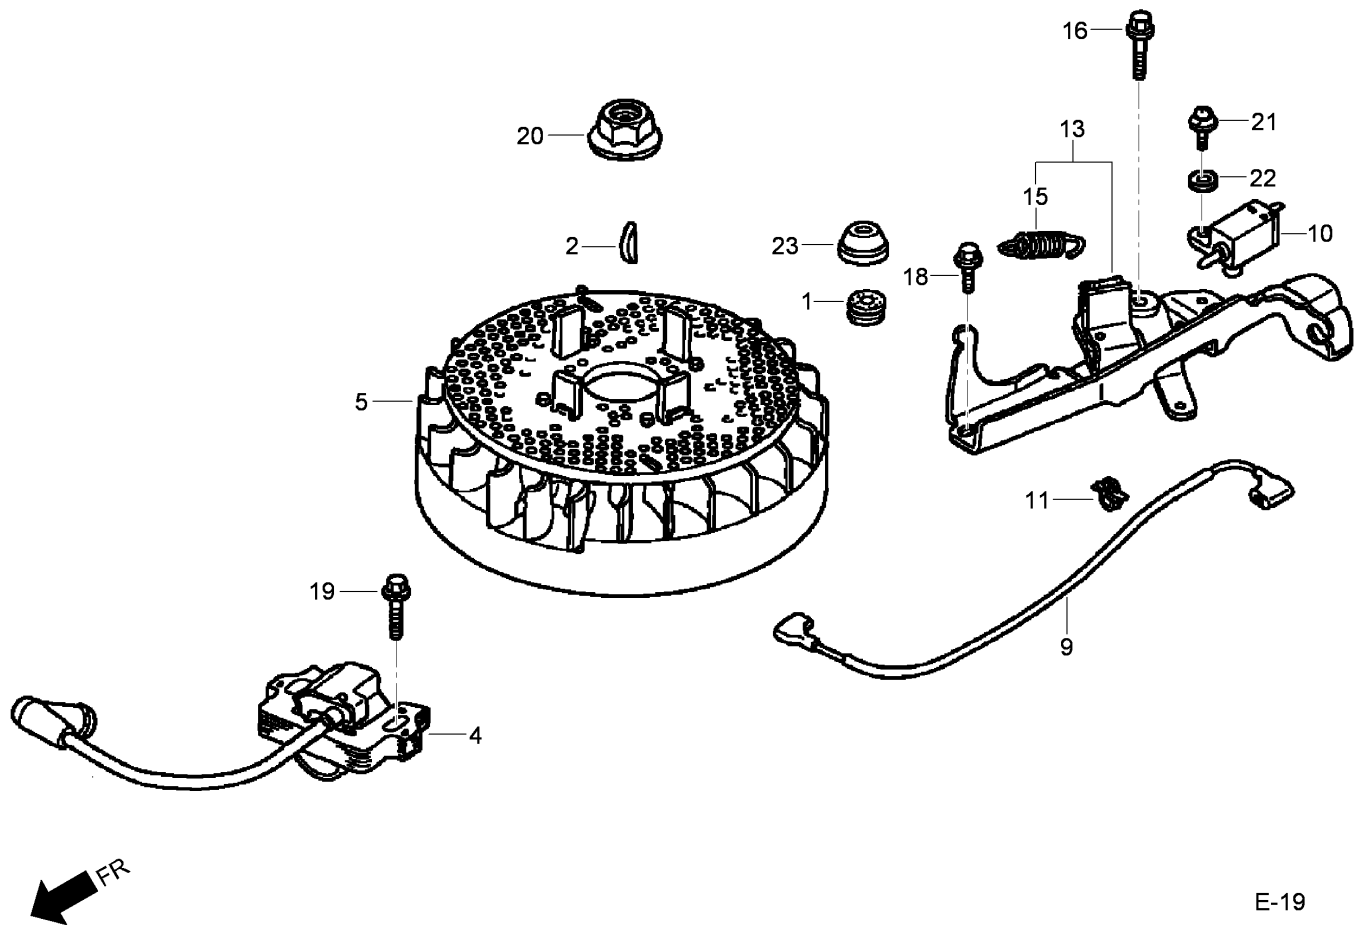 


E-19

Flywheel Assembly
Honda GCV160L AS3A

Ref	Part No.	Qty.	Description
❶1	11344-MB0-000	1	Grommet A-Cover, Rear (8X16X6.6) (Engine Serial Numbers Up To 7132770)
❶1	11344-Z0L-800	1	Grommet A-Cover, Rear (8X16X8) (Engine Serial Numbers Up To 7132770)
❷2	13331-357-000	1	Key-Woodruff, Special (25X18)
❹4	30500-ZL8-004	1	Ignition Coil ASM (Use For Flywheel Of Tec)
❺5	31105-ZM0-000	1	Flywheel ASM (Use For Ignition Coil Of Tec)
❹9	32195-ZM0-800	1	Wire-Switch, Stop
❶10	35120-ZM0-003	1	Engine Stop Switch ASM (N C)
❶11	51125-Z0L-003	1	Holder-Wire (Fastex)
❶11	90681-959-003	1	Clip A-Cable (3.8Mm Black) (Nifco)
❶13	75110-Z0L-800	1	Brake ASM (Engine Serial Numbers Up To 7132770)
❶13	75110-Z0Y-000	1	Brake ASM (Engine Serial Numbers Starting At 7132771)
❶15	75113-ZM0-000	1	Spring-Lever, Brake
❶16	90018-ZE1-000	1	Bolt-Flange (6X23) (C T200)


Ref	Part No.	Qty.	Description
❶18	90014-952-000	1	Bolt-Flange (6X14) (C T200)
❶19	90018-ZE1-000	1	Bolt-Flange (6X23) (C T200) (Engine Serial Numbers Starting At 6702083)
❶19	90022-888-010	1	Bolt-Flange (6X20) (C T200) (Engine Serial Numbers Up To 6702082)
❶20	90201-878-003	1	Nut-Special (14 Mm)
❶21	93892-04012-00	1	Screw-Washer (4X12)
❶22	94103-04000	1	Washer-Plain (4Mm)
❶23	91601-Z0L-300	1	Grommet-Plate, Brake (Engine Serial Numbers Starting At 7132771)

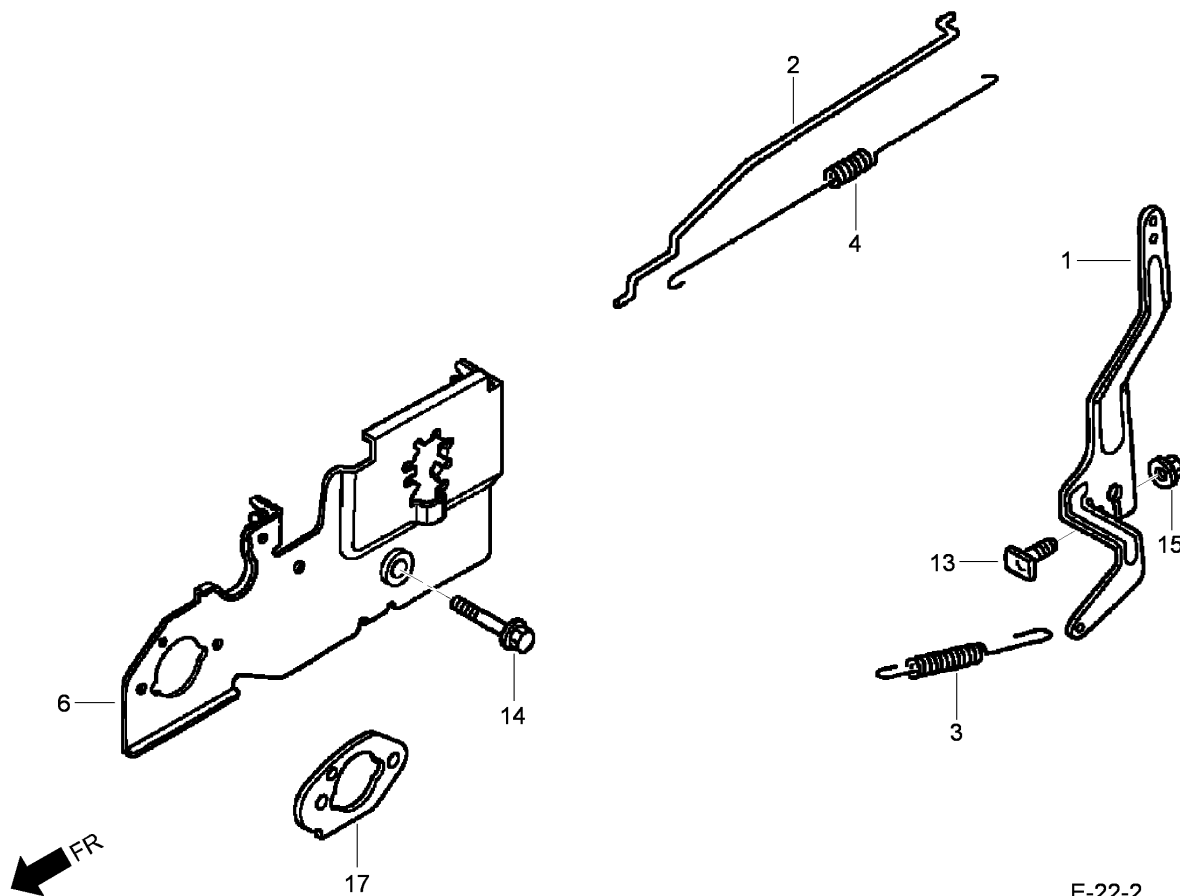 

E-22-2

Control Assembly Honda GCV160L AS3A


Ref	Part No.	Qty.	Description				
❶1	16551-ZM0-010	1	Arm-Governor				
❶2	16555-Z0L-800	1	Rod-Governor (Engine Serial Numbers Up To 6349022)				
❶2	16555-Z0L-801	1	Rod-Governor (Engine Serial Numbers Starting At 6349023)				
❶3	16561-Z0L-000	1	Spring-Governor				
❶4	16562-ZM0-000	1	Spring-Return, Throttle				
❶6	16580-Z0L-810	1	Base-Control (Engine Serial Numbers Up To 6901760)				
❶13	90015-ZE5-010	1	Bolt-Arm, Governor				
❶14	90016-ZE8-000	1	Bolt-Flange (6X45) (C T200) (Engine Serial Numbers Up To 6901760)				
❶15	94050-06000	1	Nut-Flange (6 Mm)				
❶17	16221-Z0L-900	1	Spacer-Carburetor (Engine Serial Numbers Starting At 6901761)				

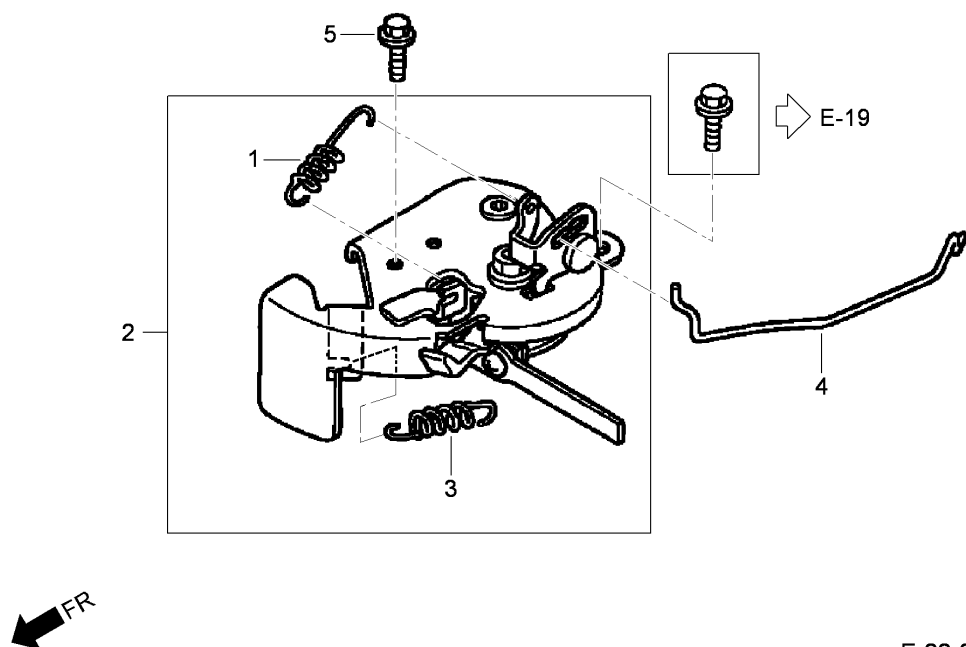 

E-22-3

Choke Base Assembly Honda GCV160L AS3A

Ref	Part No.	Qty.	Description				
❶1	16592-Z2D-800	1	Spring-Return				
❶2	16610-Z2D-801	1	Choke Lever ASM				
❶3	16614-Z2D-800	1	Spring-Lever, Choke				
❶4	16632-Z0L-800	1	Rod-Stop				
❶5	90022-888-010	1	Bolt-Flange (6X20) (C T200)				

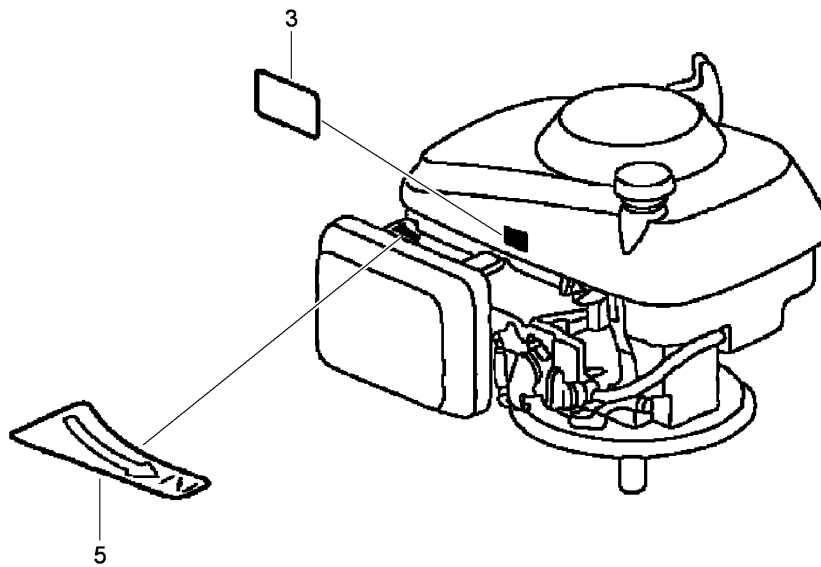 

E-29

Label Assembly

Honda GCV160L AS3A

Ref	Part No.	Qty.	Description				
❶3	87114-ZH7-821	1	Label-Warning (Not Certified For Sale)				
❶5	87528-Z0L-V20	1	Mark-Indication, Choke				

Attachments and Accessories

For 20192 - Super Bagger Lawn Mower

Product Name	Model/Part
Cruise Control Kit	89919

NOTES

NOTES

NOTES

