



Super Bagger Lawn Mower

Model No. 20192 - 290000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Deck Housing, Front Wheel and Rear Door Assembly 3	Camshaft Pulley Assembly Honda GCV160L AS3A 13
Side Discharge, Transmission and Rear Wheel Assembly 4	Recoil Starter Assembly Honda GCV160L AS3A 14
Upper Handle Assembly 5	Carburetor Assembly Honda GCV160L AS3A 15
Lower Handle Assembly 6	Fan Cover and Fuel Tank Assembly Honda GCV160L AS3A 16
Engine and Blade Assembly 7	Air Cleaner Assembly Honda GCV160L AS3A 18
Rear Bag Assembly 8	Muffler Assembly Honda GCV160L AS3A 19
Cylinder Barrel Assembly Honda GCV160L AS3A 9	Flywheel Assembly Honda GCV160L AS3A 20
Oil Pan Assembly Honda GCV160L AS3A 10	Control Assembly Honda GCV160L AS3A 21
Crankshaft Assembly Honda GCV160L AS3A 11	Choke Base Assembly Honda GCV160L AS3A 22
Piston and Connecting Rod Assembly Honda GCV160L AS3A 12	Label Assembly Honda GCV160L AS3A 23
		Attachments and Accessories List 24


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HWHTF. hex washer head thread forming
ASM. assembly	HYD. hydraulic
BBC. blade brake clutch	LH. left hand
CARR. carriage	NI. nylon insert
CCW. counter clock wise	NPTF. national pipe thread fine
CW. clockwise	PFH. phillips flat head
DEG. degrees	PPH. phillips pan head
ECM. electronic control module	PPHTF. phillips pan head thread forming
EXT. external	PRH. phillips round head
FH. flat head	PTH. phillips truss head
GA. gauge	PTO. power-take-off
HD. heavy-duty	RH. right hand
HF. hex flange	ROPS. roll-over protection system
HH. hex head	SFH. slotted fillister head
HHF. hex head flange	SHH. slotted hex head
HHFTF. hex head flange thread forming	SHWH. slotted hex washer head
HJ. hex jam	SPH. slotted pan head
HLH. hex lag head	SQH. square head
HOC. height-of-cut	SRH. slotted round head
HSBH. hex socket button head	STD. standard
HSFH. hex socket flat head	TAP. self tapping
HSH. hex socket head	TTH. torx truss head
HWH. hex washer head	

Footnotes


- ❶ Obtain parts from www.honda-engines.com

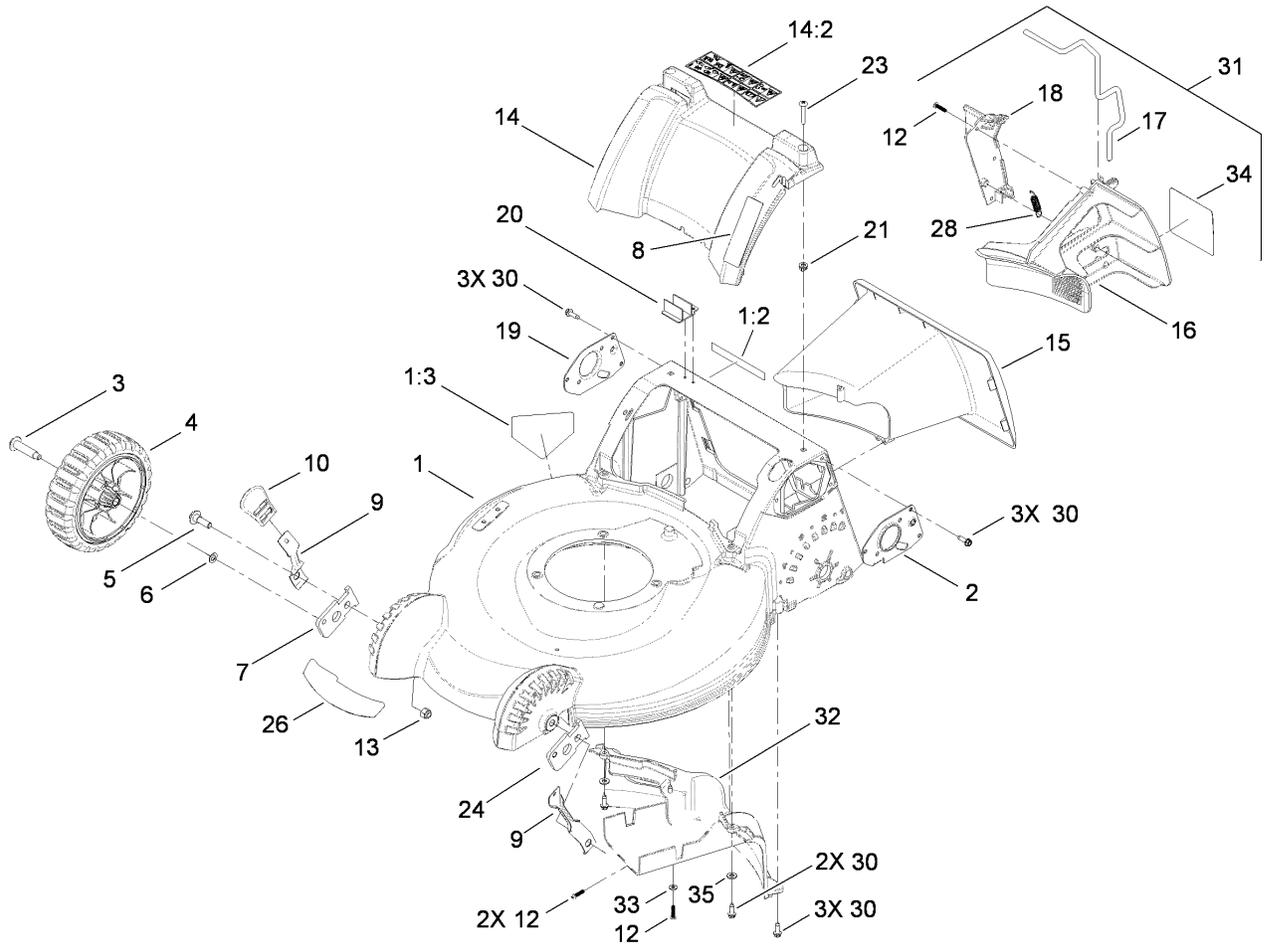

Deck Housing, Front Wheel and Rear Door Assembly

Ref	Part No.	Qty.	Description
1	117-4167	1	Housing ASM
1:2	107-3889	1	Decal-Safety
1:3	94-8072	1	Decal-Danger
2	110-9415-03	1	Mount-Handle, LH
3	614650	2	Bolt-Shoulder
4	117-4103	2	8 Inch Wheel ASM
5	614672	2	Bolt-Shoulder
6	40-1940	2	Washer
7	110-9421	1	Arm-Pivot, RH
8	117-5902	1	Decal-Quick Stow
9	110-9434	2	Arm-Spring, Front
10	110-0549	2	Knob-HOC
11	94-8072	1	Decal-Danger
12	108-7476	6	Screw-Plastite
13	3296-39	2	Nut-Lock, NI
14	115-3177	1	Cover-Rear
14:2	114-2820	1	Decal-Warning
15	110-9455	1	Tunnel
16	110-9446	1	Plug-Mulch, LH
17	110-9448	1	Latch-Plug, Mulch
18	110-9447	1	Plug-Mulch, RH
19	110-9416-03	1	Mount-Handle, RH
20	110-1786	1	Module-Switch
21	94-1610	2	Nut-Clip
22	108-0965	2	Screw-PTH


Ref	Part No.	Qty.	Description
23	108-0965	2	Screw-PTH
24	110-9420	1	Arm-Pivot, LH
26	117-4164	1	Decal-Super Bagger
28	110-9458	1	Spring-Extension
30	49-2040	11	Screw-HWHTF
31	110-9468	1	Mulch Plug ASM
32	110-9413	1	Baffle-Rear
33	3256-14	1	Washer-Flat
34	110-9457	1	Decal-Plug, Mulch
35	3256-22	2	Washer-Flat

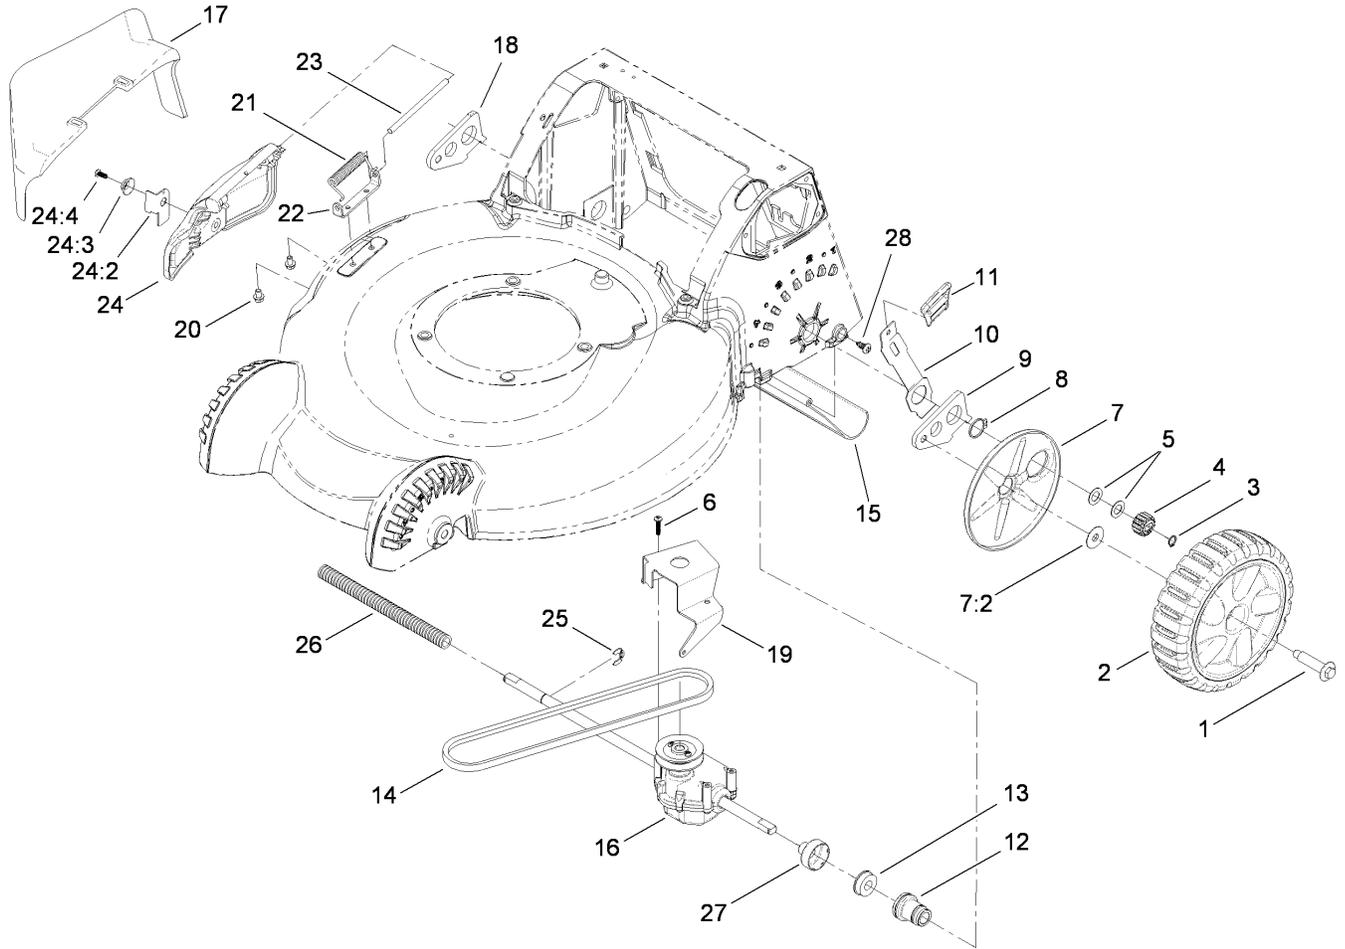

Side Discharge, Transmission and Rear Wheel Assembly


Ref	Part No.	Qty.	Description
1	614650	2	Bolt-Shoulder
2	117-4104	2	Rear Wheel ASM
3	32151-61	2	Ring-Retaining
4	110-9417	2	Pinion
5	36-4780	2	Washer-Plain
6	108-7476	3	Screw-Plastite
7	117-4197	2	Wheel Cover ASM
7:2	614426	1	Washer-Stepped
8	32151-36	2	Ring-Retaining
9	108-9344	1	Arm-Rear Pivot, LH
10	110-9445	2	Arm-Spring, Rear
11	110-0549	2	Knob-HOC
12	110-9422	2	Retainer-Bearing
13	104-8699	2	Bearing-Ball
14	110-9429	1	V-Belt
15	112-8768	1	Shield-Trailing
16	114-2812	1	Transmission ASM
17	105-3028	1	Chute-Discharge, Side
18	108-9343	1	Arm-Rear Pivot, RH
19	114-7977-03	1	Bracket-Transmission
20	99-8445	2	Screw-HWH
21	99-5293	1	Spring-Torsion
22	112-6416	1	Bracket-Cover
23	99-5291	1	Rod-Cover

Ref	Part No.	Qty.	Description
24	106-8376	1	Discharge Door ASM
24:2	107-0795	1	Latch-Door
24:3	107-7456	1	Cap-Door
24:4	107-7461	1	Screw-Plastite
25	65-2720	1	Ring-Clip, Locking
26	24-7922	1	Cover-Shaft, Drive
27	114-2755	2	Cap-Bearing
28	117-1092	2	Screw-PTH

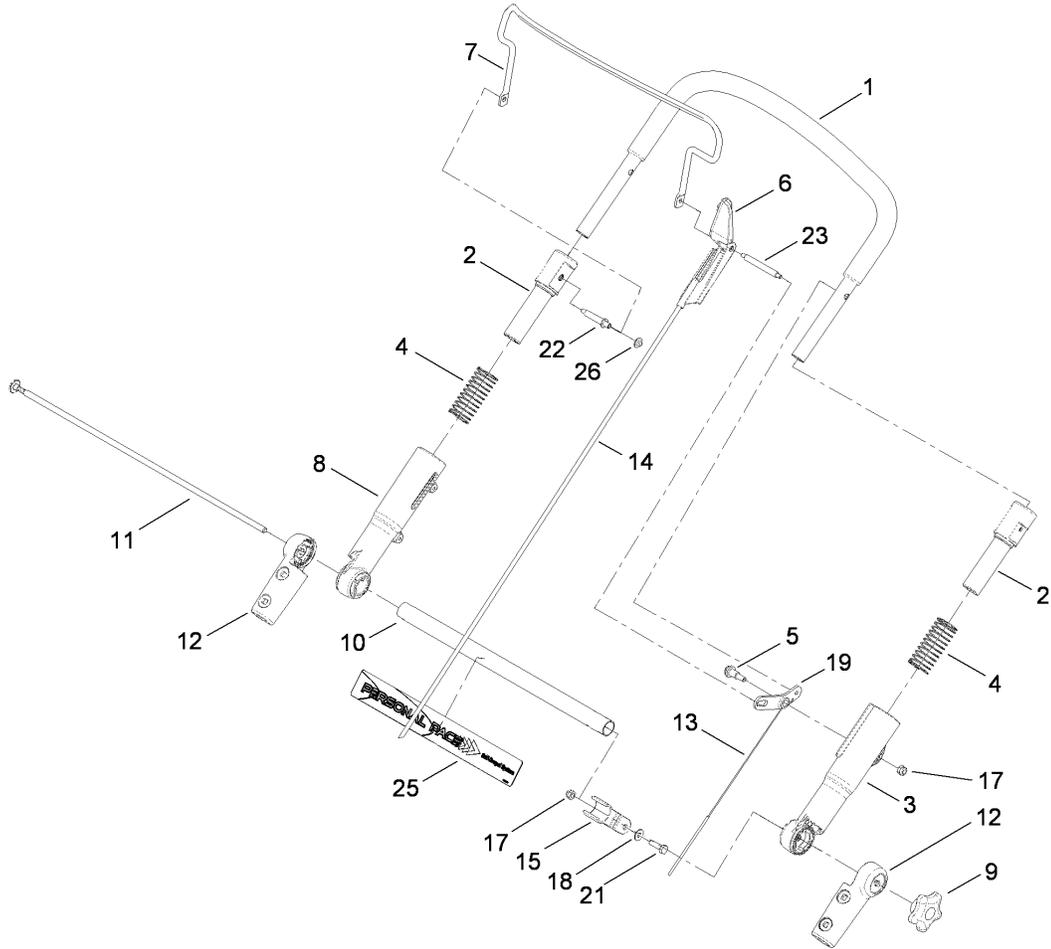

Upper Handle Assembly


Ref	Part No.	Qty.	Description
1	108-0974	1	Upper Handle ASM
2	112-8754	2	Sleeve-Inner
3	112-1544	1	Sleeve-Outer, LH
4	107-3869	2	Spring-Compression
5	104-0858	1	Bolt-Shoulder
6	112-8764	1	Stop-Pivot
7	110-1819-03	1	Bail-Brake
8	112-1545	1	Sleeve-Outer, RH
9	106-4161	1	Knob-Handle
10	107-3867-03	1	Tube-Cross
11	107-3871	1	Rod-Threaded
12	107-3865	2	Mount-Handle, Lower
13	110-9465	1	Cable-Traction
14	107-3903	1	Cable-Brake
15	112-8801	1	Clamp-Cable
17	3296-73	2	Nut-Lock, NI
18	3256-1	1	Washer-Flat
19	107-3893	1	Lever-Traction
21	321-5	1	Screw-HH
22	108-0959	1	Pin-Handle
23	108-1008	1	Pin-Bail, LH
25	117-5901	1	Decal-Personal Pace
26	108-9378	1	Retainer-Push On

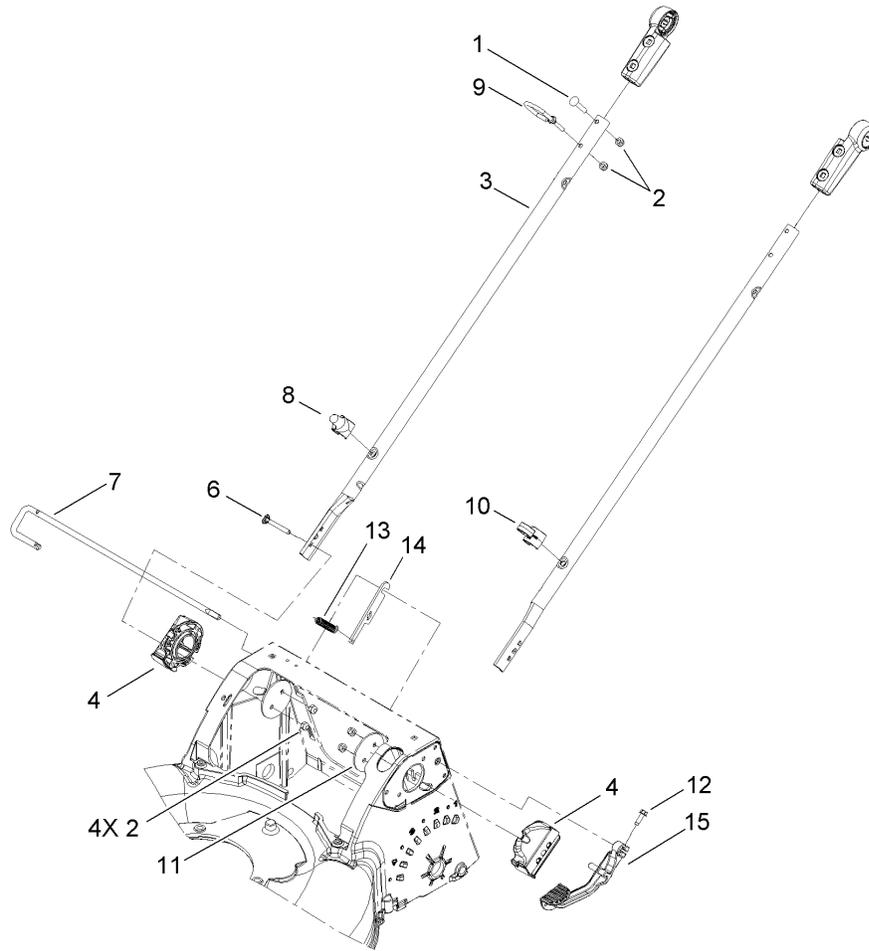

Lower Handle Assembly


Ref	Part No.	Qty.	Description
1	108-0988	3	Screw-CARR
2	3296-73	8	Nut-Lock, NI
3	107-3887-03	2	Tube-Lower
4	114-2791	2	Mount-Handle, Lower
6	95-4453	4	Screw
7	112-8755	1	Rod-Release, Handle
8	117-4141	1	Guide-Rope, Lower
9	107-3908	1	Guide-Rope, Upper
10	106-6805	1	Guide-Cable
11	107-3944-03	2	Plate
12	49-2040	1	Screw-HWHTF
13	112-1542	1	Spring-Extension
14	112-1539	1	Plate-Rod, Release
15	110-1823-03	1	Lever-Release

--	--	--	--

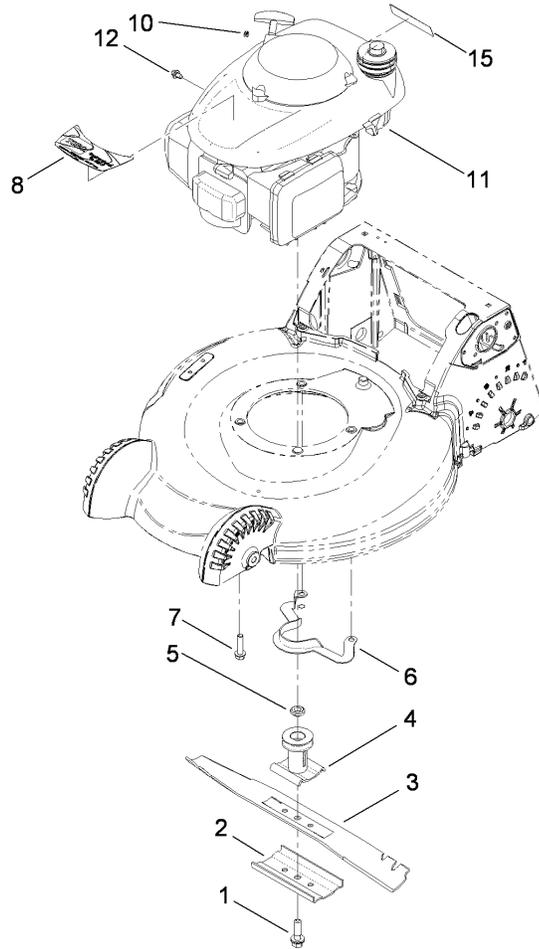

Engine and Blade Assembly


Ref	Part No.	Qty.	Description				
1	112-8789	1	Bolt-Shoulder				
2	108-3766-03	1	Support-Blade				
3	108-0954-03	1	Blade-21 Inch				
4	114-2774	1	Driver-Blade				
5	106-3999	1	Spacer-Driver				
6	108-8110-03	1	Guide-Belt				
7	32144-102	3	Screw-HWH				
8	117-5955	1	Decal-Engine				
10	92-1701	1	Stop-Rope				
11	117-5903	1	Engine-Honda, Gcv160L As3A				
12	98-1394	1	Screw-HWH				
15	117-2718	1	Decal-Arrester, Spark				

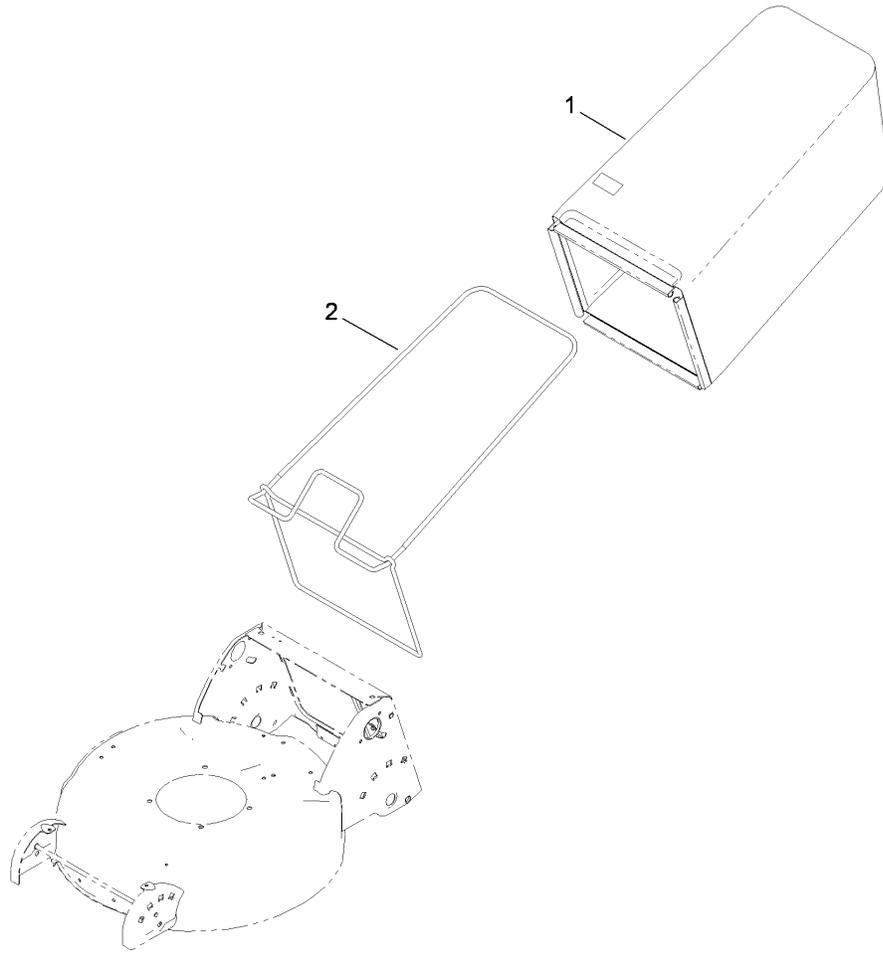

Rear Bag Assembly

Ref	Part No.	Qty.	Description
1	117-4191	1	Grass Bag ASM
2	112-8750-03	1	Frame-Bag

--	--	--	--

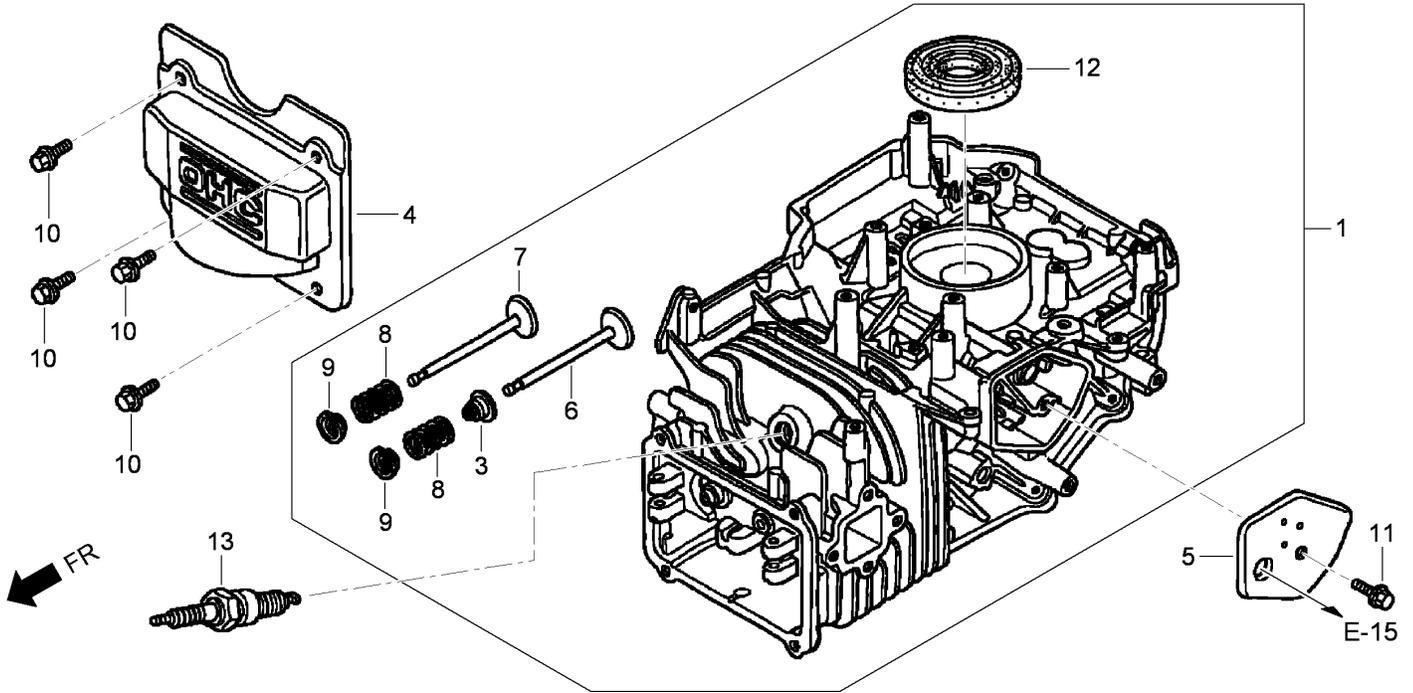


E-3

Cylinder Barrel Assembly Honda GCV160L AS3A

Ref	Part No.	Qty.	Description
●1	12000-Z0L-840	1	Cylinder ASM
●3	12209-ZM0-003	1	Seal-Stem, Valve
●4	12310-Z0J-000	1	Cover-Head, Cylinder
●4	12311-ZL8-D00	1	Cover-Head
●4	12311-ZL8-000	1	Cover-Head
●5	12355-ZL8-000	1	Cover-Breather (Breather Valve ASM)
●6	14711-Z0J-000	1	Valve-Intake (Rocknel) (Engine Serial Numbers Up To 6330748)
●6	14711-Z0J-800	1	Valve-Intake (Engine Serial Numbers Starting At 6330749)
●7	14721-ZL8-000	1	Valve-Exhaust
●8	14751-ZL8-000	2	Spring-Valve
●9	14771-Z0J-000	2	Retainer-Spring, Valve
●10	90013-883-000	4	Bolt-Flange (6X12) (C T200)
●11	90014-952-000	1	Bolt-Flange (6X14) (C T200)

Ref	Part No.	Qty.	Description
●12	91201-ZL8-003	1	Seal (25.4X62X6)
●13	98079-56846	1	Spark Plug (B P R 6E S) (N G K)

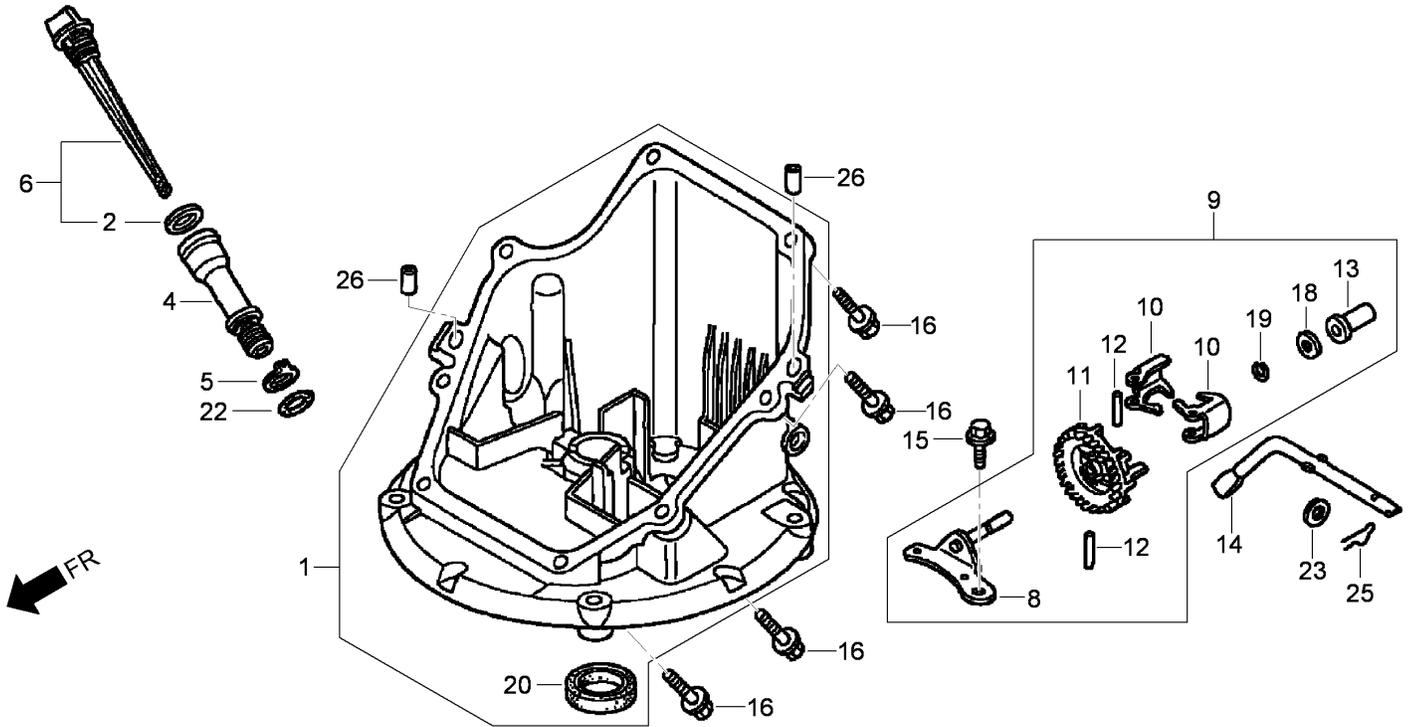


E-6

Oil Pan Assembly Honda GCV160L AS3A

Ref	Part No.	Qty.	Description
❶	11300-ZM0-811	1	Oil Pan ASM
❷	15625-ZE6-000	1	Gasket-Cap, Oil Filler
❹	15631-ZM0-000	1	Extension-Filler, Oil
❺	15639-ZM0-000	1	Washer-Lock, Extension
❻	15650-ZM0-801	1	Oil Level Gauge ASM
❸	16508-ZM0-010	1	Shaft-Holder, Governor
❾	16510-ZM0-010	1	Governor ASM
❿	16511-ZL8-000	2	Weight-Governor
⓫	16512-ZM0-000	1	Holder-Weight, Governor
⓬	16513-ZE1-000	2	Pin-Weight, Governor
⓭	16531-ZE1-000	1	Slider-Governor
⓮	16541-ZM0-000	1	Shaft-Arm, Governor
⓯	90014-952-000	1	Bolt-Flange (6X14) (C T200)


Ref	Part No.	Qty.	Description
⓰	90121-952-000	8	Bolt-Flange (6X25) (C T 200)
⓱	90451-ZE1-000	1	Washer-Thrust (6Mm)
⓲	90602-ZE1-000	1	Clip-Holder, Governor
⓳	91202-ZL8-003	1	Seal-Oil (28X41.25X6)
⓴	91356-MA6-005	1	O-Ring (14.8X24) (N O K)
⓵	94101-06800	1	Washer-Plain (6Mm)
⓶	94251-08000	1	Pin-Lock (8Mm)
⓷	94301-08200	2	Pin-Dowel (8X20)

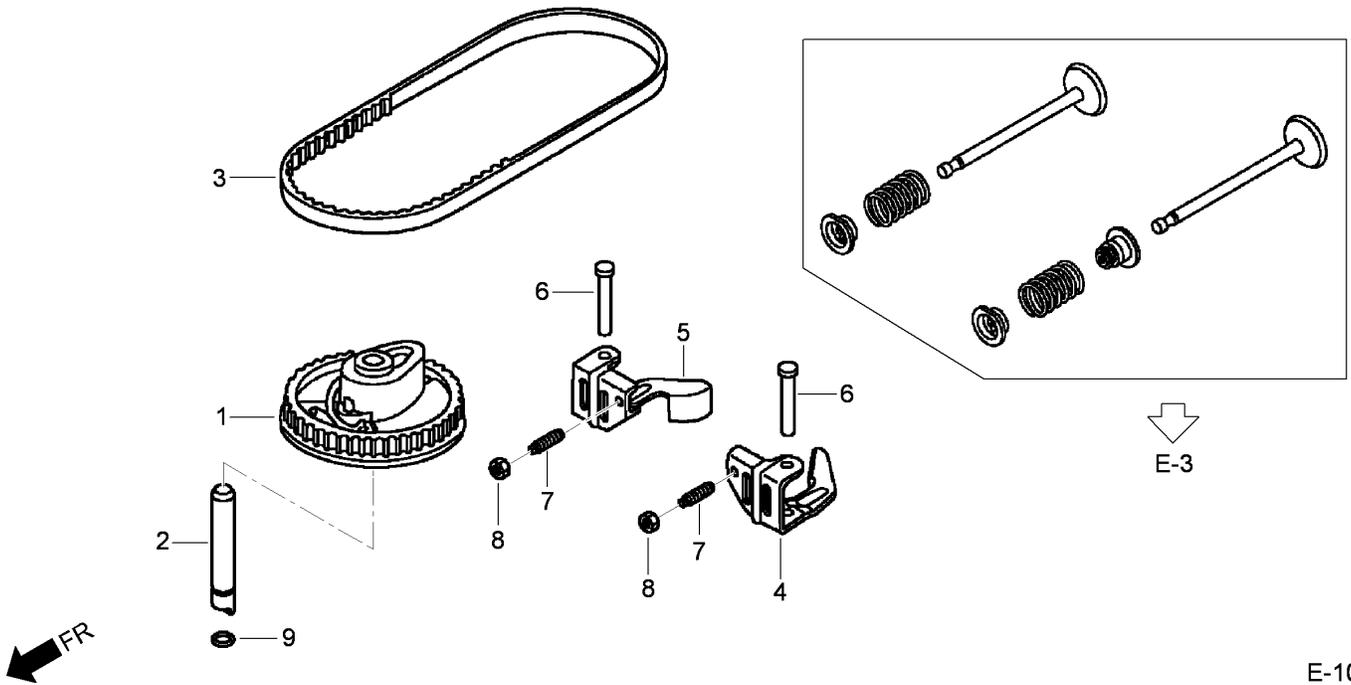

E-10

Camshaft Pulley Assembly Honda GCV160L AS3A

Ref	Part No.	Qty.	Description
❶	14320-ZL8-010	1	Pulley-Camshaft
❷	14324-ZL8-000	1	Shaft-Pulley, Cam
❸	14400-Z0J-014	1	Belt-Timing (84H U7 G-200)
❹	14431-Z0J-000	1	Arm-Rocker, Intake Valve
❺	14441-Z0J-000	1	Arm-Rocker, Exhaust Valve
❻	14461-ZL8-000	2	Shaft-Arm, Rocker
❼	90012-333-000	2	Screw-Adjusting, Tappet
❽	90206-001-000	2	Nut-Adjusting, Tappet
❾	91301-ZM0-V31	1	O-Ring (6.8X19) (Arai)

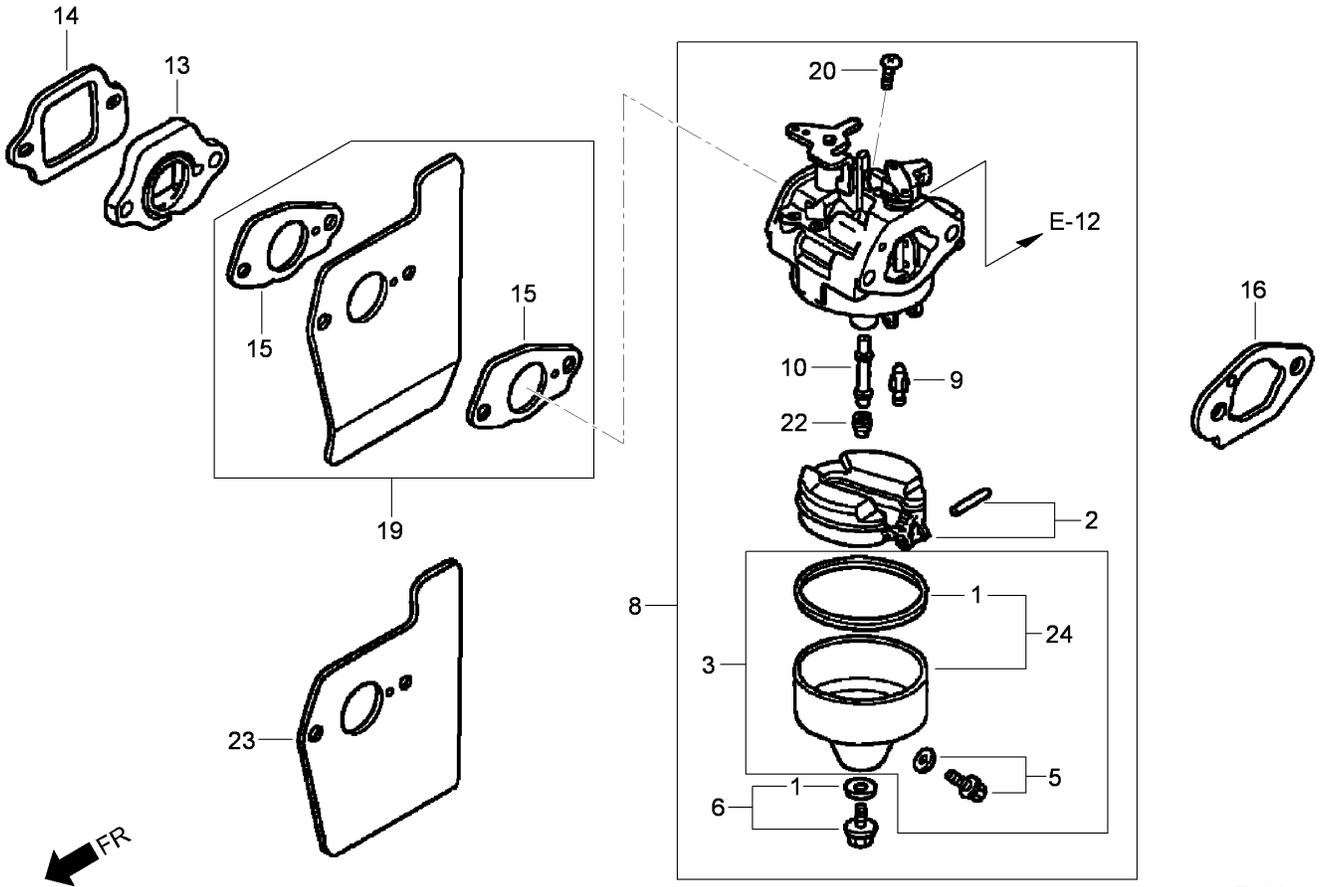

E-14


Carburetor Assembly Honda GCV160L AS3A

Ref	Part No.	Qty.	Description
●1	16010-883-015	1	Gasket Set
●2	16013-ZL1-003	1	Float Set
●3	16015-887-782	1	Float Chamber Set (Engine Serial Numbers Up To B B62Z A)
●5	16024-ZE1-811	1	Drain Screw Set (Engine Serial Numbers Up To B B62Z A)
●6	16028-ZE0-005	1	Screw Set
●6	16028-ZK7-S91	1	Screw Set
●8	16100-Z0L-851	1	Carburetor Assy (B B62Z A) (Engine Serial Numbers Up To 7161134)
●8	16100-Z0L-852	1	Carburetor Assy (B B62Z B) (Engine Serial Numbers Starting At 7161135)
●9	16155-ZM0-013	1	Valve-Float
●10	16166-ZM0-003	1	Nozzle-Main
●13	16211-ZL8-000	1	Insulator-Carburetor
●14	16212-ZL8-000	1	Gasket-Insulator
●15	16221-883-800	2	Gasket-Carburetor (Engine Serial Numbers Up To 6349022)

Ref	Part No.	Qty.	Description
●16	16228-ZL8-000	1	Gasket-Carburetor
●19	19650-ZM0-000	1	Guide-Air (Engine Serial Numbers Up To 6349022)
●20	93500-05006-0H	1	Screw-Pan (5X6)
●22	99101-124-0600	1	Jet-Main (No.60) (Optional Equipment)
●22	99101-124-0620	1	Jet-Main (No.62) (Optional Equipment)
●22	99101-124-0650	1	Jet-Main (No.65)
●23	19651-Z0L-000	1	Guide-Air (Engine Serial Numbers Starting At 6349023)
●24	16015-Z0L-881	1	Float Chamber Set (Engine Serial Numbers Starting At B B62Z B)

Fan Cover and Fuel Tank Assembly Honda GCV160L AS3A

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
❶3	16854-ZH8-000	1	Supporter-Rubber (107Mm) (Engine Serial Numbers Up To 6901760)	❶29	95002-02080	2	Clip-Tube (B8)
❶5	16950-ZM0-003	1	Petcock ASM (Engine Serial Numbers Up To 6901760)	❶30	95002-02100	1	Clip-Tube (B10) (Engine Serial Numbers Up To 6901760)
❶6	16952-ZA8-800	1	Filter-Fuel	❶33	95002-70000	1	Clip-Tube (C11) (Engine Serial Numbers Up To 6901760)
❶7	17511-Z0L-000	1	Tank-Fuel (Engine Serial Numbers Up To 6183839)	❶36	90043-ZL8-000	1	Bolt-Stud (H=42.5Mm)
❶7	17511-Z0L-010	1	Tank-Fuel (Engine Serial Numbers Starting At 6183840)	❶37	16950-Z0Y-003	1	Petcock ASM (Engine Serial Numbers Starting At 6901761)
❶8	17514-Z0L-000	1	Seal-Neck, Fuel Filler	❶38	16961-Z0L-900	1	Stay-Petcock (Engine Serial Numbers Starting At 6901761)
❶9	17516-Z0L-000	1	Clip-Mounting, Tank	❶39	90013-883-000	1	Bolt-Flange (6X12) (C T200) (Engine Serial Numbers Starting At 6901761)
❶10	17532-Z0L-000	1	Rubber A-Mounting, Tank	❶40	90015-883-000	1	Bolt-Flange (6X28) (C T200) (Engine Serial Numbers Starting At 6901761)
❶11	17533-Z0L-000	1	Rubber B-Mounting, Tank	❶41	93913-25220	1	Screw-Tapping (5X12) (P O) (Engine Serial Numbers Starting At 6901761)
❶12	17534-Z0L-000	1	Nut-Mounting, Tank	❶42	95001-45003-50M	1	Fuel-Hose, Bulk (4.5X3000) (4.5X110) (Engine Serial Numbers Starting At 6901761)
❶13	17620-Z0J-800	1	Fuel Tank Cap ASM	❶43	95001-75008-60M	1	Fuel-Hose, Bulk (7.5X8000) (7.3X160) (Engine Serial Numbers Starting At 6901761)
❶14	17636-Z0L-000	1	Gauge-Level, Fuel	❶44	95002-02120	2	Clip-Tube (B12) (Engine Serial Numbers Starting At 6901761)
❶16	17701-Z0L-810	1	Tube-Tank, Fuel (Engine Serial Numbers Up To 6901760)				
❶17	17702-ZM0-800	1	Tube-Fuel (Engine Serial Numbers Starting At 6901760)				
❶19	19610-Z0L-860ZA	1	Cover-Fan (Nh1) (Black) (Engine Serial Numbers Up To 6702082)				
❶19	19610-Z0L-860ZC	1	Cover-Fan (T89) (Craftsman Red) (Engine Serial Numbers Up To 6702082)				
❶19	19610-Z0L-860ZD	1	Cover-Fan (T93) (Husqvarna Gray) (Engine Serial Numbers Up To 6702082)				
❶19	19610-Z0L-860ZE	1	Cover-Fan (T98) (M T D Red) (Engine Serial Numbers Up To 6702082)				
❶19	19610-Z0L-861ZA	1	Cover-Fan (Nh1) (Black) (Engine Serial Numbers Starting At 6702083)				
❶19	19610-Z0L-861ZC	1	Cover-Fan (T89) (Craftsman Red) (Engine Serial Numbers Starting At 6702083)				
❶19	19610-Z0L-861ZD	1	Cover-Fan (T93) (Husqvarna Gray) (Engine Serial Numbers Starting At 6702083)				
❶19	19610-Z0L-861ZE	1	Cover-Fan (T98) (M T D Red) (Engine Serial Numbers Starting At 6702083)				
❶20	19619-ZL8-300	3	Collar-Cover, Fan				
❶21	91501-Z0L-800	1	Collar-Petcock, Fuel (Engine Serial Numbers Up To 6901760)				
❶23	90043-ZL8-000	2	Bolt-Stud (H=42.5Mm)				
❶26	93891-05010-08	1	Screw-Washer (5X10) (Engine Serial Numbers Up To 6901760)				

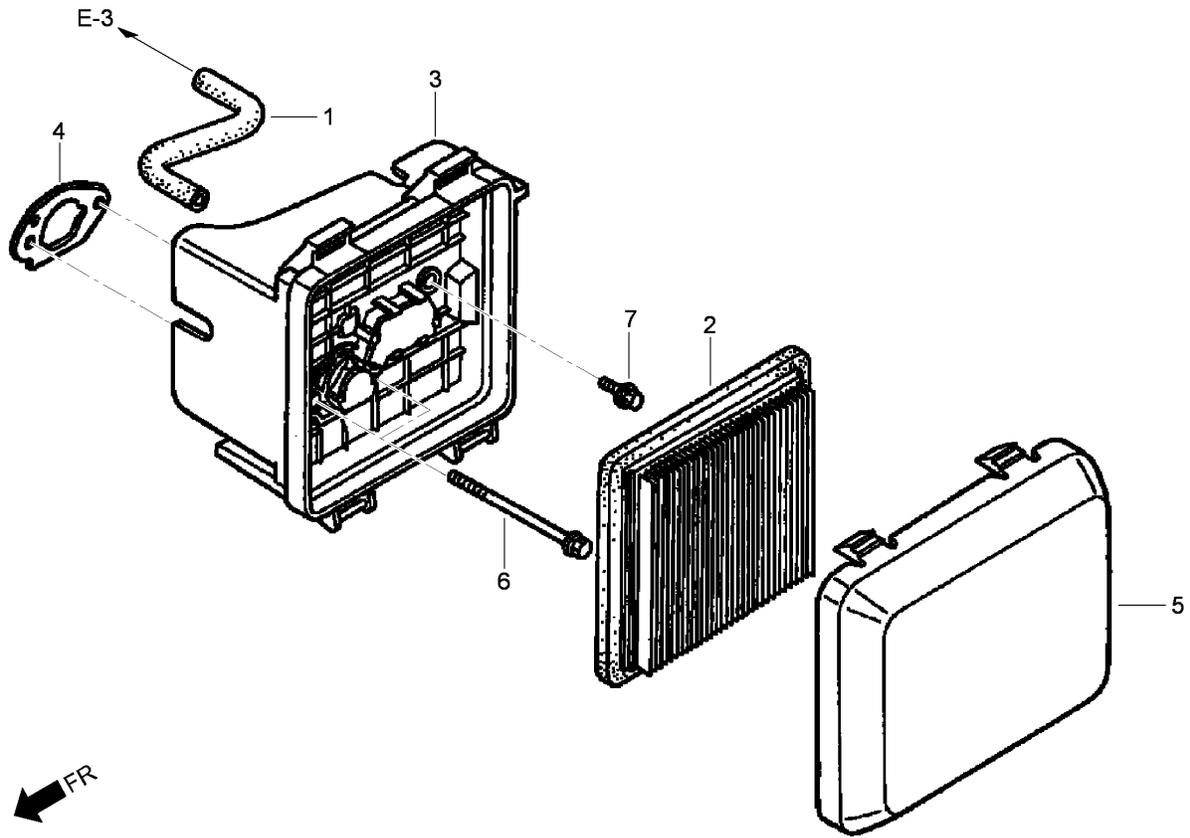


E-15

Air Cleaner Assembly Honda GCV160L AS3A

Ref	Part No.	Qty.	Description
❶	15721-ZM0-000	1	Tube-Breather
❷	17211-ZL8-023	1	Element-Cleaner, Air
❸	17220-ZM0-000	1	Air Cleaner Case ASM (Engine Serial Numbers Up To 6624355)
❸	17220-ZM0-010	1	Air Cleaner Case ASM
❹	17228-ZM0-000	1	Gasket-Cleaner, Air
❺	17231-Z0L-030	1	Cover-Cleaner, Air
❻	90003-ZM0-000	2	Bolt-Flange (6X86) (C T200) (Engine Serial Numbers Up To 6349022)
❻	90003-ZM0-010	2	Bolt, Flange (6X85) (C T200)
❼	95701-06014-08	1	Bolt-Flange (6X14) (Engine Serial Numbers Up To 6624355)

--	--	--	--

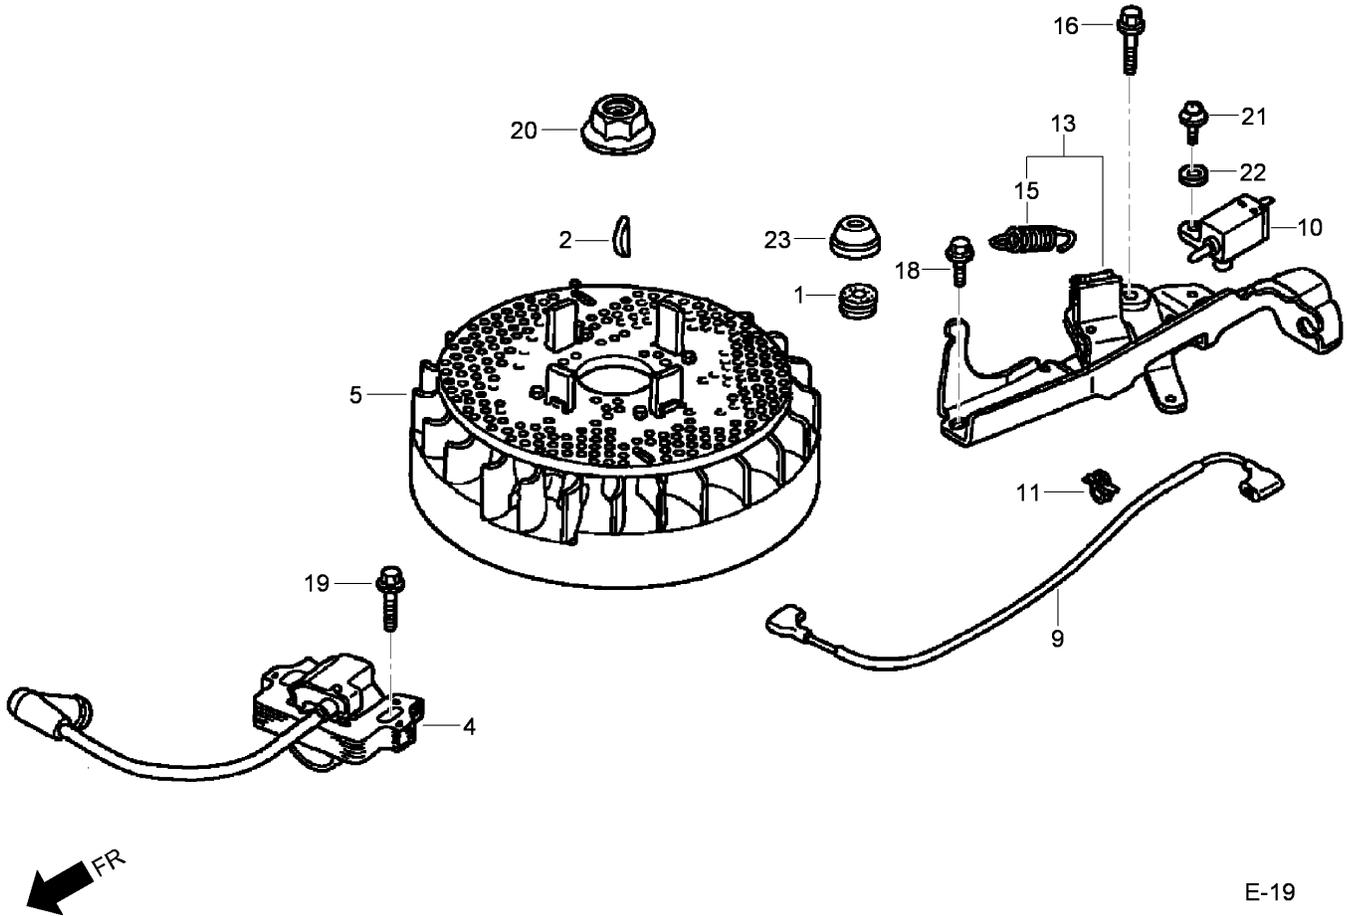

E-19

Flywheel Assembly Honda GCV160L AS3A

Ref	Part No.	Qty.	Description
❶1	11344-MB0-000	1	Grommet A-Cover, Rear (8X16X6.6) (Engine Serial Numbers Up To 7132770)
❶1	11344-Z0L-800	1	Grommet A-Cover, Rear (8X16X8) (Engine Serial Numbers Up To 7132770)
❷2	13331-357-000	1	Key-Woodruff, Special (25X18)
❹4	30500-ZL8-004	1	Ignition Coil ASM (Use For Flywheel Of Tec)
❺5	31105-ZM0-000	1	Flywheel ASM (Use For Ignition Coil Of Tec)
❹9	32195-ZM0-800	1	Wire-Switch, Stop
❶10	35120-ZM0-003	1	Engine Stop Switch ASM (N C)
❶11	51125-Z0L-003	1	Holder-Wire (Fastex)
❶11	90681-959-003	1	Clip A-Cable (3.8Mm Black) (Nifco)
❶13	75110-Z0L-800	1	Brake ASM (Engine Serial Numbers Up To 7132770)
❶13	75110-Z0Y-000	1	Brake ASM (Engine Serial Numbers Starting At 7132771)
❶15	75113-ZM0-000	1	Spring-Lever, Brake
❶16	90018-ZE1-000	1	Bolt-Flange (6X23) (C T200)

Ref	Part No.	Qty.	Description
❶18	90014-952-000	1	Bolt-Flange (6X14) (C T200)
❶19	90018-ZE1-000	1	Bolt-Flange (6X23) (C T200) (Engine Serial Numbers Starting At 6702083)
❶19	90022-888-010	1	Bolt-Flange (6X20) (C T200) (Engine Serial Numbers Up To 6702082)
❶20	90201-878-003	1	Nut-Special (14 Mm)
❶21	93892-04012-00	1	Screw-Washer (4X12)
❶22	94103-04000	1	Washer-Plain (4Mm)
❶23	91601-Z0L-300	1	Grommet-Plate, Brake (Engine Serial Numbers Starting At 7132771)

Attachments and Accessories

For 20192 - Super Bagger Lawn Mower

Product Name

Model/Part

Cruise Control Kit 89919

NOTES

NOTES

NOTES

