



Super Bagger Lawn Mower

Model No. 20194 - 290000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Deck Housing, Front Wheel and Rear Door Assembly	 3	Camshaft Pulley Assembly Honda GCV160A NBL1	 15
Side Discharge, Transmission and Rear Wheel Assembly	 4	Recoil Starter Assembly Honda GCV160A NBL1	 16
Upper Handle Assembly	 5	Fan Cover Assembly Honda GCV160A NBL1	 17
Lower Handle Assembly	 6	Carburetor Assembly Honda GCV160A NBL1	 18
Engine and Blade Assembly	 7	Air Cleaner Assembly Honda GCV160A NBL1	 19
Brake System Assembly	 8	Muffler Assembly Honda GCV160A NBL1	 20
Brake System Handle Assembly	 9	Flywheel Assembly Honda GCV160A NBL1	 21
Rear Bag Assembly	 10	Control Assembly Honda GCV160A NBL1	 22
Cylinder Assembly Honda GCV160A NBL1	 11	Top Cover Assembly Honda GCV160A NBL1	 23
Oil Pan Assembly Honda GCV160A NBL1	 12	Label Assembly Honda GCV160A NBL1	 24
Crankshaft Assembly Honda GCV160A NBL1	 13	Attachments and Accessories List	 25
Piston and Connecting Rod Assembly Honda GCV160A NBL1	 14		

Part Description Abbreviations

 
Part descriptions in this catalog may include the following abbreviations.

AR. as required	HWHTF. hex washer head thread forming
ASM. assembly	HYD. hydraulic
BBC. blade brake clutch	LH. left hand
CARR. carriage	NI. nylon insert
CCW. counter clock wise	NPTF. national pipe thread fine
CW. clockwise	PFH. phillips flat head
DEG. degrees	PPH. phillips pan head
ECM. electronic control module	PPHTF. phillips pan head thread forming
EXT. external	PRH. phillips round head
FH. flat head	PTH. phillips truss head
GA. gauge	PTO. power-take-off
HD. heavy-duty	RH. right hand
HF. hex flange	ROPS. roll-over protection system
HH. hex head	SFH. slotted fillister head
HHF. hex head flange	SHH. slotted hex head
HHFTF. hex head flange thread forming	SHWH. slotted hex washer head
HJ. hex jam	SPH. slotted pan head
HLH. hex lag head	SQH. square head
HOC. height-of-cut	SRH. slotted round head
HSBH. hex socket button head	STD. standard
HSFH. hex socket flat head	TAP. self tapping
HS. hex socket head	TTH. torx truss head
HWH. hex washer head	

Footnotes

❶ Not serviced separately


❷ Obtain parts from www.honda-engines.com

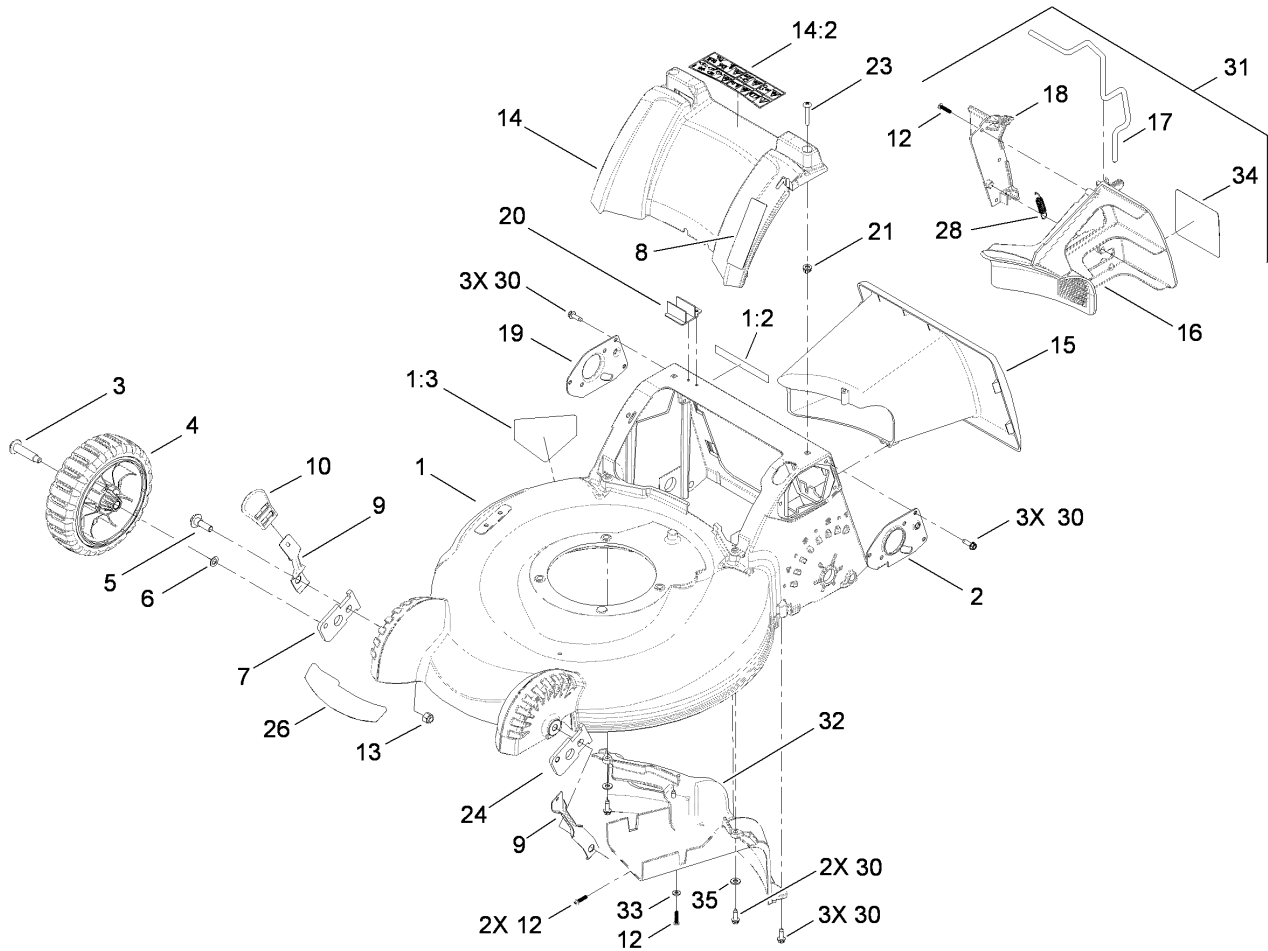

Deck Housing, Front Wheel and Rear Door Assembly

Ref	Part No.	Qty.	Description
1	117-4167	1	Housing ASM
1:2	107-3889	1	Decal-Safety
1:3	94-8072	1	Decal-Danger
2	110-9415-03	1	Mount-Handle, LH
3	614650	2	Bolt-Shoulder
4	117-4103	2	8 Inch Wheel ASM
5	614672	2	Bolt-Shoulder
6	40-1940	2	Washer
7	110-9421	1	Arm-Pivot, RH
8	117-5902	1	Decal-Quick Stow
9	110-9434	2	Arm-Spring, Front
10	110-0549	2	Knob-HOC
12	108-7476	6	Screw-Plastite
13	3296-39	2	Nut-Lock, NI
14	115-3177	1	Cover-Rear
14:2	114-2820	1	Decal-Warning
15	110-9455	1	Tunnel
16	110-9446	1	Plug-Mulch, LH
17	110-9448	1	Latch-Plug, Mulch
18	110-9447	1	Plug-Mulch, RH
19	110-9416-03	1	Mount-Handle, RH
20	117-5905	1	Module-Switch
21	94-1610	2	Nut-Clip
23	108-0965	2	Screw-PTH


Ref	Part No.	Qty.	Description
24	110-9420	1	Arm-Pivot, LH
26	117-4164	1	Decal-Super Bagger
28	110-9458	1	Spring-Extension
30	49-2040	11	Screw-HWHTF
31	110-9468	1	Mulch Plug ASM
32	110-9423	1	Baffle-Rear
33	3256-14	1	Washer-Flat
34	110-9457	1	Decal-Plug, Mulch
35	3256-22	2	Washer-Flat

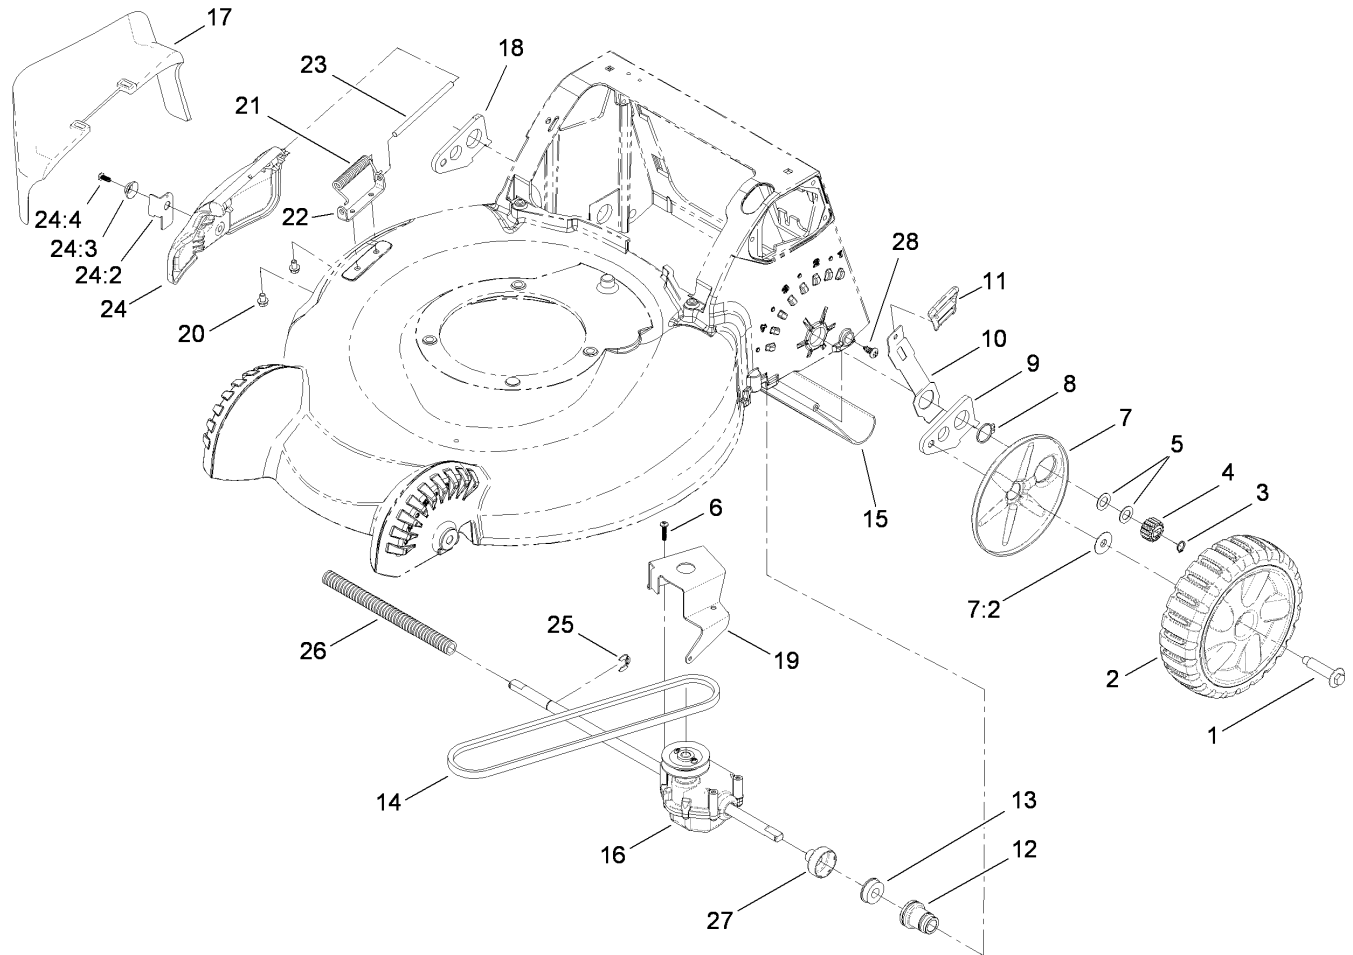 

Side Discharge, Transmission and Rear Wheel Assembly


Ref	Part No.	Qty.	Description
1	614650	2	Bolt-Shoulder
2	117-4104	2	Rear Wheel ASM
3	32151-61	2	Ring-Retaining
4	110-9417	2	Pinion
5	36-4780	2	Washer-Plain
6	108-7476	3	Screw-Plastite
7	117-4197	2	Wheel Cover ASM
7:2	614426	1	Washer-Stepped
8	32151-36	2	Ring-Retaining
9	108-9344	1	Arm-Rear Pivot, LH
10	110-9445	2	Arm-Spring, Rear
11	110-0549	2	Knob-HOC
12	110-9422	2	Retainer-Bearing
13	104-8699	2	Bearing-Ball
14	110-9429	1	V-Belt
15	112-8768	1	Shield-Trailing
16	114-2812	1	Transmission ASM
17	105-3028	1	Chute-Discharge, Side
18	108-9343	1	Arm-Rear Pivot, RH
19	114-7977-03	1	Bracket-Transmission
20	99-8445	2	Screw-HWH
21	99-5293	1	Spring-Torsion
22	112-6416	1	Bracket-Cover
23	99-5291	1	Rod-Cover

Ref	Part No.	Qty.	Description
24	106-8376	1	Discharge Door ASM
24:2	107-0795	1	Latch-Door
24:3	107-7456	1	Cap-Door
24:4	107-7461	1	Screw-Plastite
25	65-2720	1	Ring-Clip, Locking
26	24-7922	1	Cover-Shaft, Drive
27	114-2755	2	Cap-Bearing
28	117-1092	2	Screw-PTH

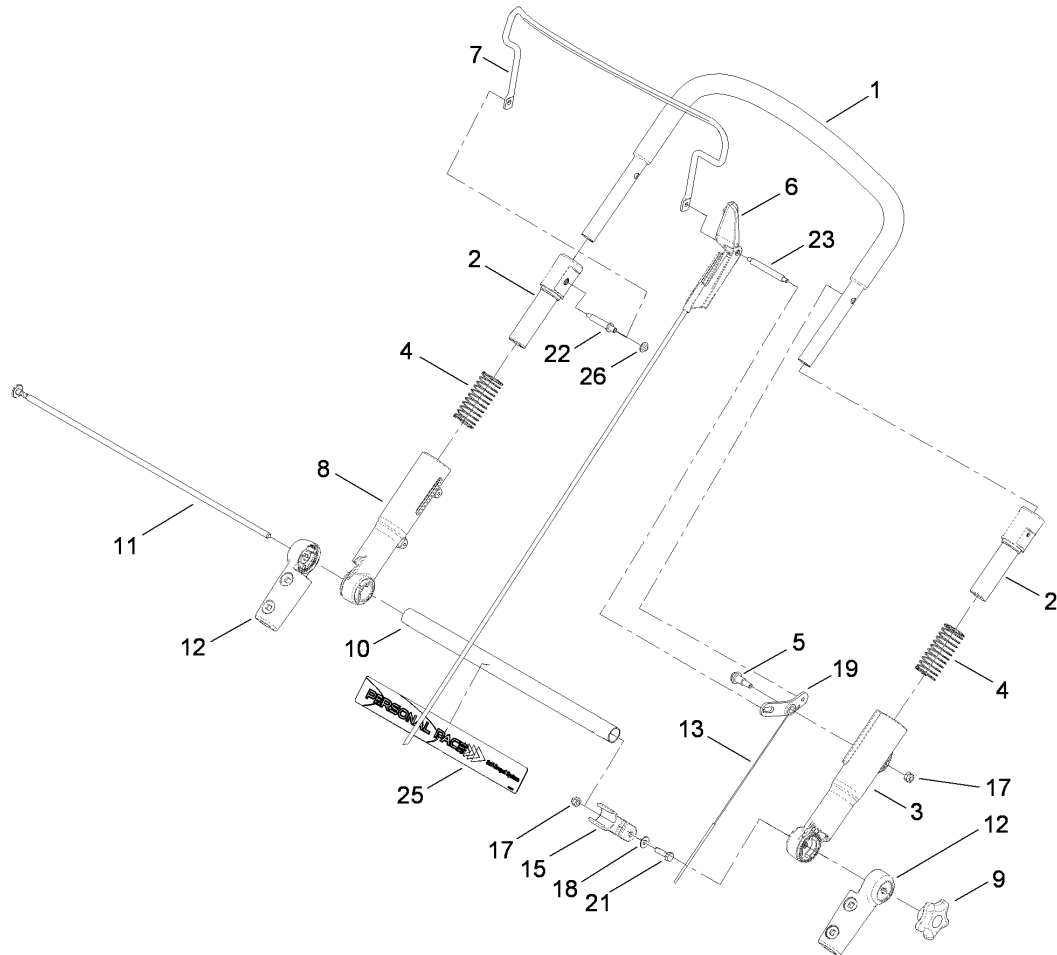 

Upper Handle Assembly


Ref	Part No.	Qty.	Description				
1	108-0974	1	Upper Handle ASM				
2	112-8754	2	Sleeve-Inner				
3	112-1544	1	Sleeve-Outer, LH				
4	107-3869	2	Spring-Compression				
5	104-0858	1	Bolt-Shoulder				
6	112-8764	1	Stop-Pivot				
7	110-1819-03	1	Bail-Brake				
8	112-1545	1	Sleeve-Outer, RH				
9	106-4161	1	Knob-Handle				
10	107-3867-03	1	Tube-Cross				
11	107-3871	1	Rod-Threaded				
12	107-3865	2	Mount-Handle, Lower				
13	110-9465	1	Cable-Traction				
15	112-8801	1	Clamp-Cable				
17	3296-73	2	Nut-Lock, NI				
18	3256-1	1	Washer-Flat				
19	107-3893	1	Lever-Traction				
21	321-5	1	Screw-HH				
22	108-0959	1	Pin-Handle				
23	108-1008	1	Pin-Bail, LH				
25	117-5901	1	Decal-Personal Pace				
26	108-9378	1	Retainer-Push On				

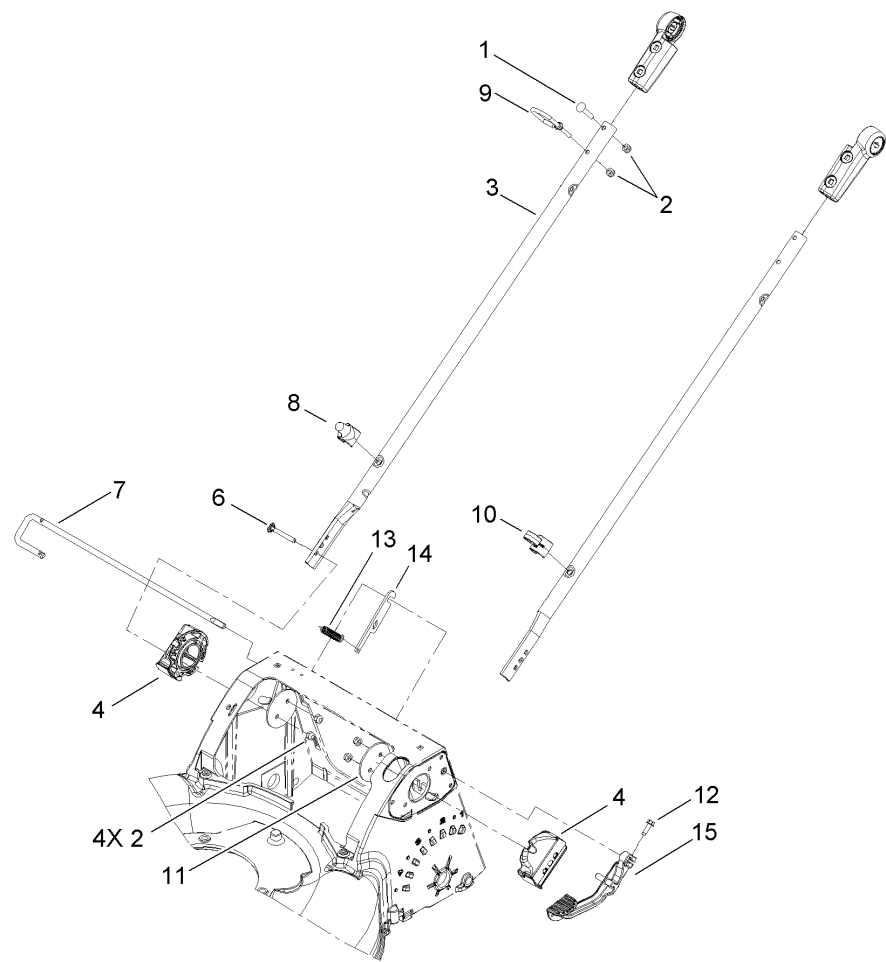 

Lower Handle Assembly

Ref	Part No.	Qty.	Description				
1	108-0988	3	Screw-CARR				
2	3296-73	8	Nut-Lock, NI				
3	107-3887-03	2	Tube-Lower				
4	114-2791	2	Mount-Handle, Lower				
6	95-4453	4	Screw				
7	112-8755	1	Rod-Release, Handle				
8	117-4141	1	Guide-Rope, Lower				
9	107-3908	1	Guide-Rope, Upper				
10	106-6805	1	Guide-Cable				
11	107-3944-03	2	Plate				
12	49-2040	1	Screw-HWHTF				
13	112-1542	1	Spring-Extension				
14	112-1539	1	Plate-Rod, Release				
15	110-1823-03	1	Lever-Release				

 
7

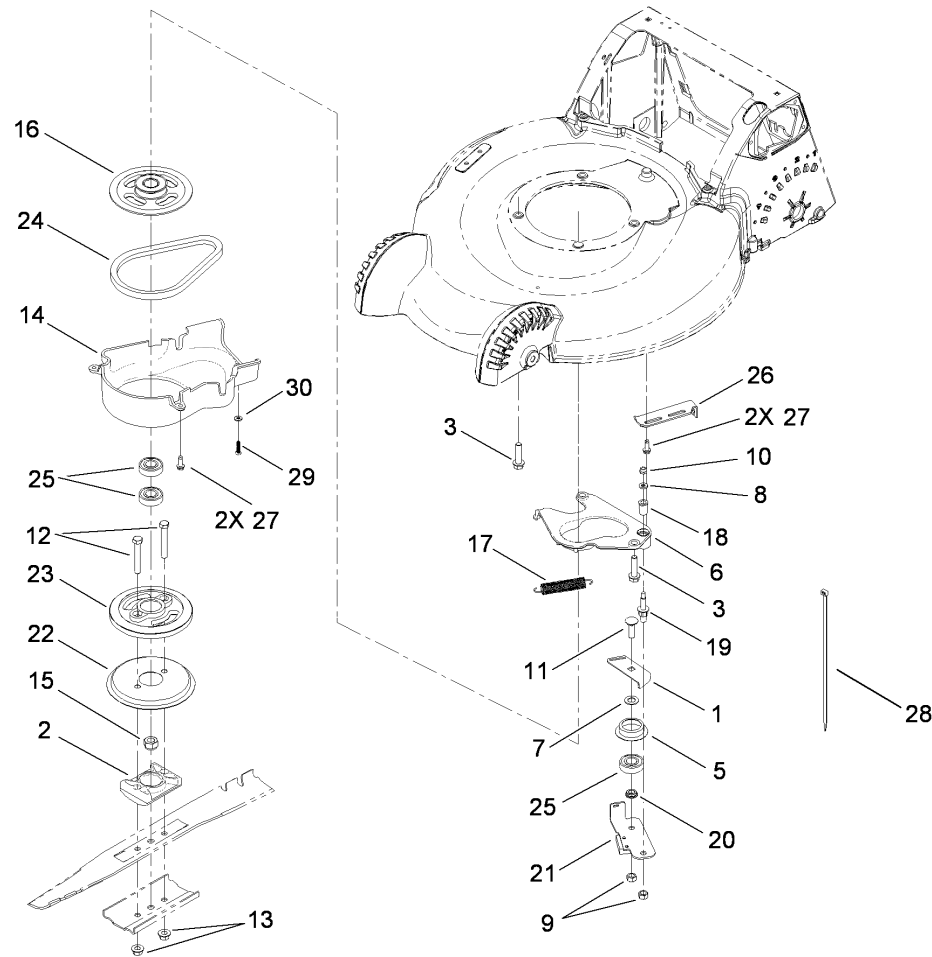

Brake System Assembly


Ref	Part No.	Qty.	Description
1	107-7471	1	Plate-Guide
2	107-7487	1	Support-Blade
3	32144-102	3	Screw-HWH
5	108-3790	1	Retainer-Belt
6	107-0761	1	Plate-Anchor
7	605256	1	Washer
8	3256-16	1	Washer-Flat
9	603773	2	Nut
10	3296-73	1	Nut-Lock, NI
11	3231-25	1	Screw-CARR
12	3211-42	2	Screw-HH
13	54-9190	2	Nut-Lock
14	107-7488	1	Cover
15	108-9342	1	Nut-Hex
16	110-7456	1	Pulley
17	108-3792	1	Spring-Tension, Brake
18	107-0797	1	Bushing
19	107-0759	1	Bolt-Shoulder
20	107-0758	1	Spacer-Bearing
21	107-7477	1	Brake Arm ASM
22	108-3787	1	Disc
23	107-0754	1	Drum
24	110-1790	1	Belt-BBC
25	100-1048	3	Bearing-Ball

Ref	Part No.	Qty.	Description
26	110-9425-03	1	Bracket-Cable
27	49-2040	4	Screw-HWHTF
28	614249	1	Strap-Tie
29	108-7476	1	Screw-Plastite
30	3256-14	1	Washer-Flat

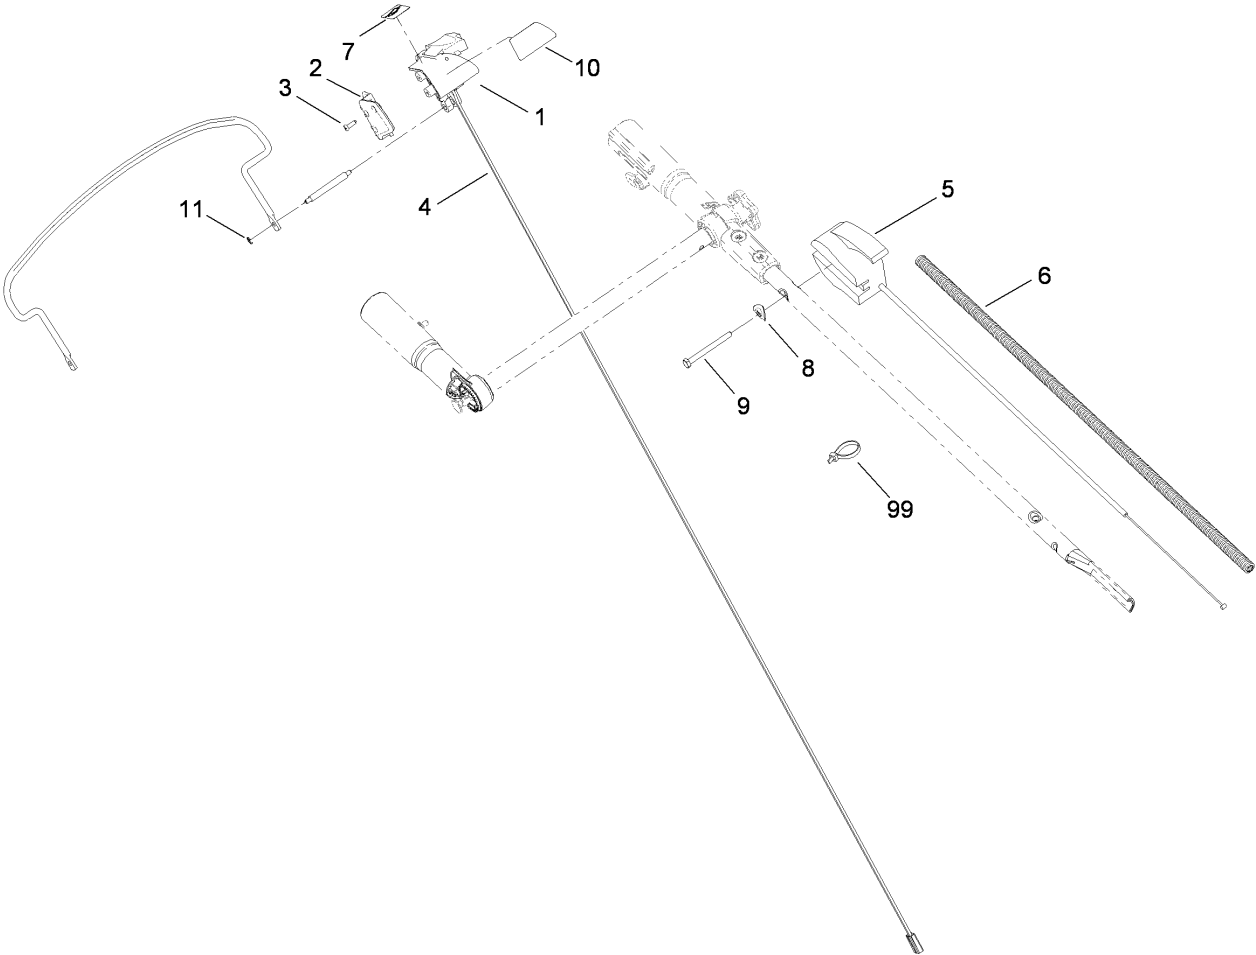 


Brake System Handle Assembly

Ref	Part No.	Qty.	Description				
1	117-5908	1	Saftey Switch ASM				
2	108-7532	1	Cover-Switch				
3	32144-111	3	Screw-PPH				
4	112-1536	1	Cable-Bcs				
5	117-5906	1	Cable-Throttle				
6	110-1761	1	Conduit				
7	108-9393	1	Decal-Blade				
8	107-3844	1	Washer				
9	321-57	1	Screw-HH				
10	117-5910	1	Decal-Control, Blade				
11	110-1758	1	Ring-Retaining				
99	614249	4	Strap-Tie				

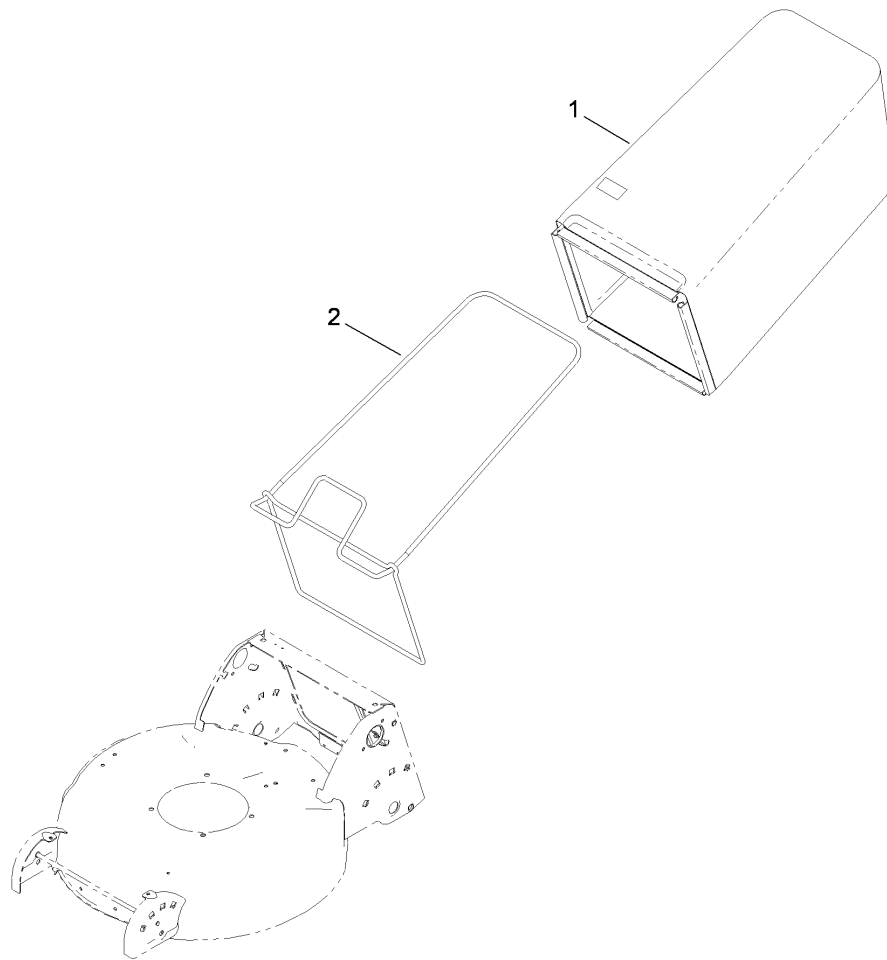 

Rear Bag Assembly

Ref	Part No.	Qty.	Description
1	117-4191	1	Grass Bag ASM
2	112-8750-03	1	Frame-Bag

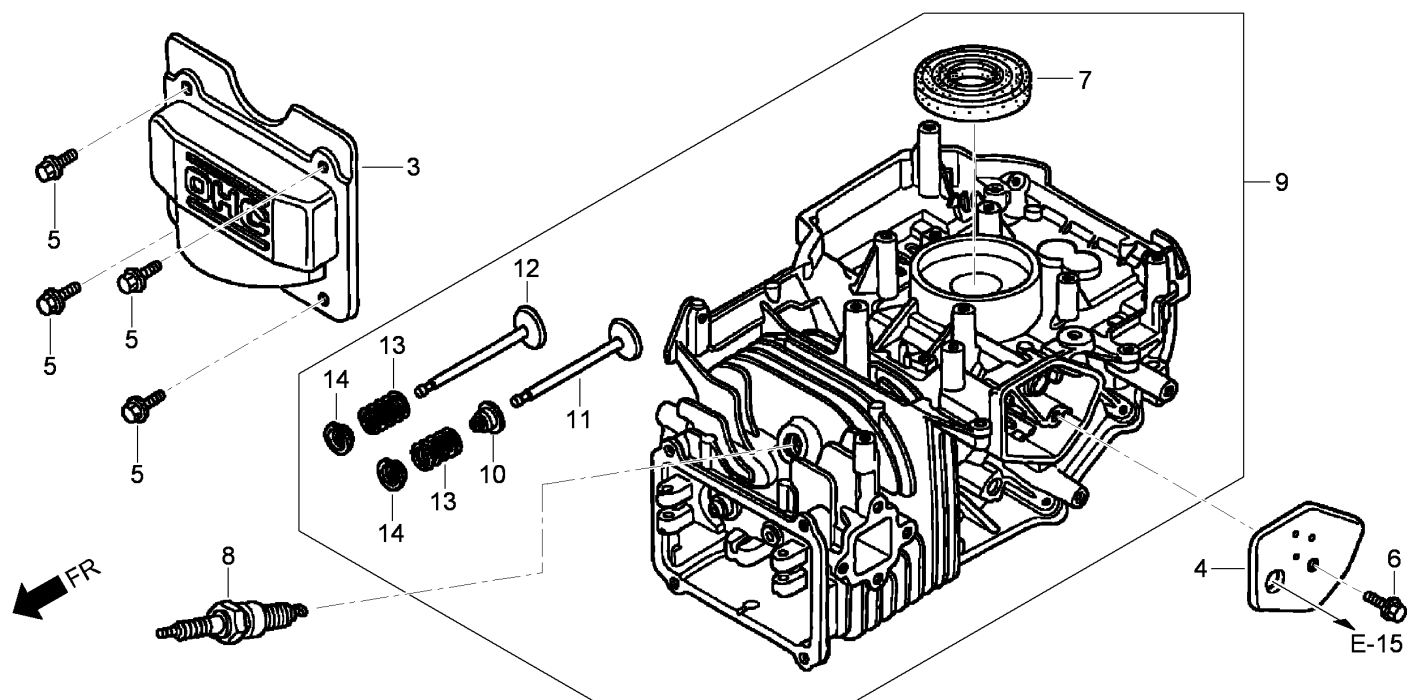 


E-3

Cylinder Assembly

Honda GCV160A NBL1

Ref	Part No.	Qty.	Description
23	12310-Z0J-000	1	Cover-Head, Cylinder
23	12311-ZL8-D00	1	Cover-Head
23	12311-ZL8-000	1	Cover-Head
24	12355-ZL8-000	1	Cover-Breather (Breather Valve ASM)
25	90013-883-000	4	Bolt-Flange (6X12) (C T200)
26	90014-952-000	1	Bolt-Flange (6X14) (C T200)
27	91201-ZL8-003	1	Seal (25.4X62X6)
28	98079-56846	1	Spark Plug (B P R 6E S) (N G K)
29	12000-Z0L-840	1	Cylinder ASM
210	12209-ZM0-003	1	Seal-Stem, Valve
211	14711-Z0J-000	1	Valve-Intake (Rocknel) (Engine Serial Numbers Up To 6330748)
211	14711-Z0J-800	1	Valve-Intake (Engine Serial Numbers Starting At 6330749)
212	14721-ZL8-000	1	Valve-Exhaust
213	14751-ZL8-000	2	Spring-Valve

Ref	Part No.	Qty.	Description
② 14	14771-Z0J-000	2	Retainer-Spring, Valve

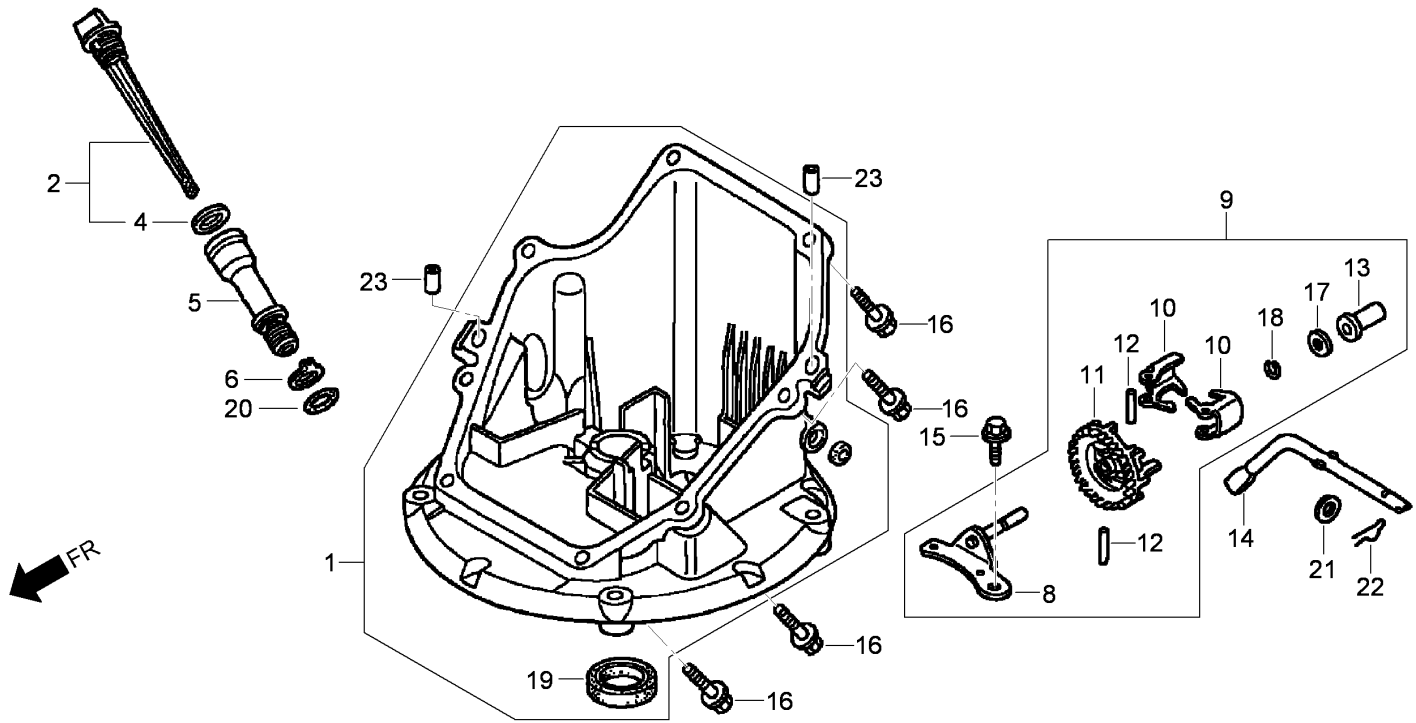 


E-6

Oil Pan Assembly

Honda GCV160A NBL1

Ref	Part No.	Qty.	Description
1	11300-ZM0-811	1	Oil Pan ASM
2	15650-ZM0-801	1	Oil Level Gauge ASM
4	15625-ZE6-000	1	Gasket-Cap, Oil Filler
5	15631-ZM0-000	1	Extension-Filler, Oil
6	15639-ZM0-000	1	Washer-Lock, Extension
8	16508-ZM0-010	1	Shaft-Holder, Governor
9	16510-ZM0-010	1	Governor ASM
10	16511-ZL8-000	2	Weight-Governor
11	16512-ZM0-000	1	Holder-Weight, Governor
12	16513-ZE1-000	2	Pin-Weight, Governor
13	16531-ZE1-000	1	Slider-Governor
14	16541-ZM0-000	1	Shaft-Arm, Governor
15	90014-952-000	1	Bolt-Flange (6X14) (C T200)

Ref	Part No.	Qty.	Description
16	90121-952-000	8	Bolt-Flange (6X25) (C T 200)
17	90451-ZE1-000	1	Washer-Thrust (6Mm)
18	90602-ZE1-000	1	Clip-Holder, Governor
19	91202-ZL8-003	1	Seal-Oil (28X41.25X6)
20	91356-MA6-005	1	O-Ring (14.8X24) (N O K)
21	94101-06800	1	Washer-Plain (6Mm)
22	94251-08000	1	Pin-Lock (8Mm)
23	94301-08200	2	Pin-Dowel (8X20)

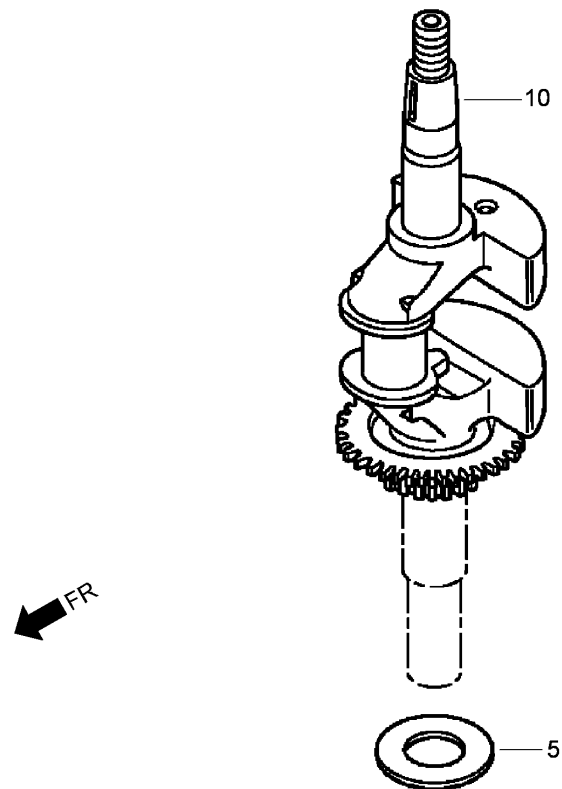 


E-7

Crankshaft Assembly

Honda GCV160A NBL1


Ref	Part No.	Qty.	Description				
25	90402-ZL8-000	1	Washer-Thrust				
210	13310-Z0L-S20	1	Crankshaft				

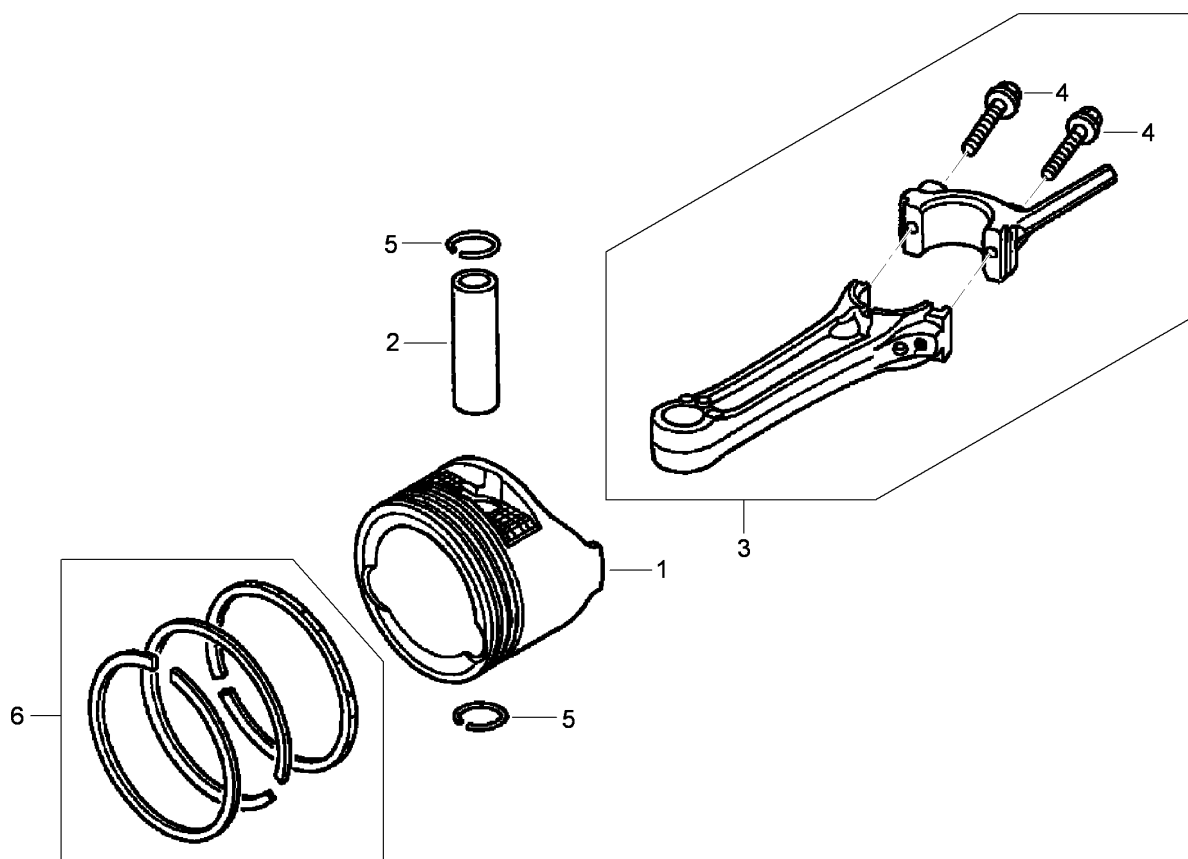 

E-8


Piston and Connecting Rod Assembly Honda GCV160A NBL1

Ref	Part No.	Qty.	Description				
21	13101-ZL8-000	1	Piston (Engine Serial Numbers Up To 5383514)				
21	13101-Z2A-000	1	Piston (Engine Serial Numbers Up To 5383514)				
21	13101-Z2A-010	1	Piston (Engine Serial Numbers Starting At 5383515)				
22	13111-ZE0-000	1	Pin-Piston				
23	13200-ZL8-000	1	Connecting Rod ASM				
24	90001-ZE1-000	2	Bolt-Rod, Connecting				
25	90551-ZE0-000	2	Clip-Pin, Piston (13Mm)				
26	13010-ZL8-003	1	Piston Ring Set (Riken) (Engine Serial Numbers Up To 5383514)				
26	13010-ZL8-024	1	Piston Ring Set (Teikoku) (Engine Serial Numbers Up To 5383514)				
26	13010-Z0L-003	1	Piston Ring Set (Riken) (Engine Serial Numbers Up To 5383514)				
26	13010-Z0L-004	1	Piston Ring Set (STD) (Teikoku) (Engine Serial Numbers Up To 5383514)				
26	13010-Z0L-014	1	Piston Ring Set (STD) (Teikoku) (Engine Serial Numbers Starting At 5383515)				

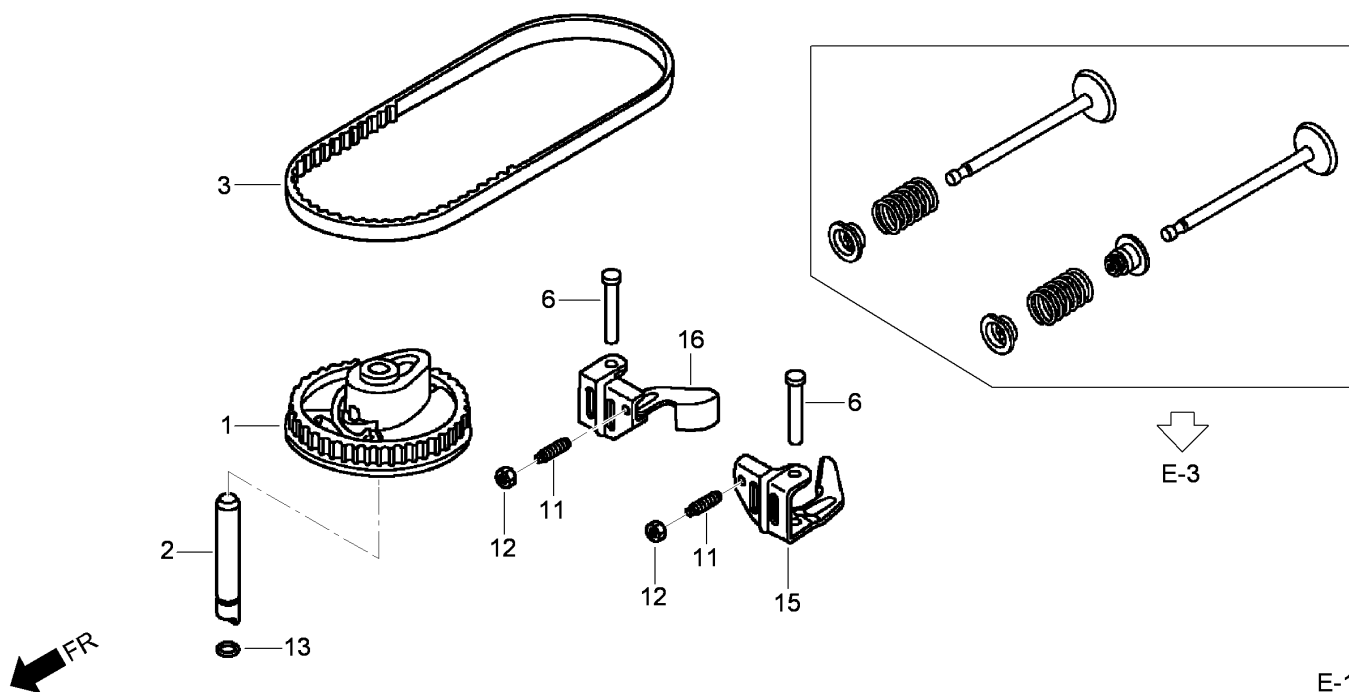 

Camshaft Pulley Assembly Honda GCV160A NBL1


Ref	Part No.	Qty.	Description				
❷1	14320-ZL8-010	1	Pulley-Camshaft				
❷2	14324-ZL8-000	1	Shaft-Pulley, Cam				
❷3	14400-Z0J-014	1	Belt-Timing (84H U7 G-200)				
❷6	14461-ZL8-000	2	Shaft-Arm, Rocker				
❷11	90012-333-000	2	Screw-Adjusting, Tappet				
❷12	90206-001-000	2	Nut-Adjusting, Tappet				
❷13	91301-ZM0-V31	1	O-Ring (6.8X19) (Arai)				
❷15	14431-Z0J-000	1	Arm-Rocker, Intake Valve				
❷16	14441-Z0J-000	1	Arm-Rocker, Exhaust Valve				

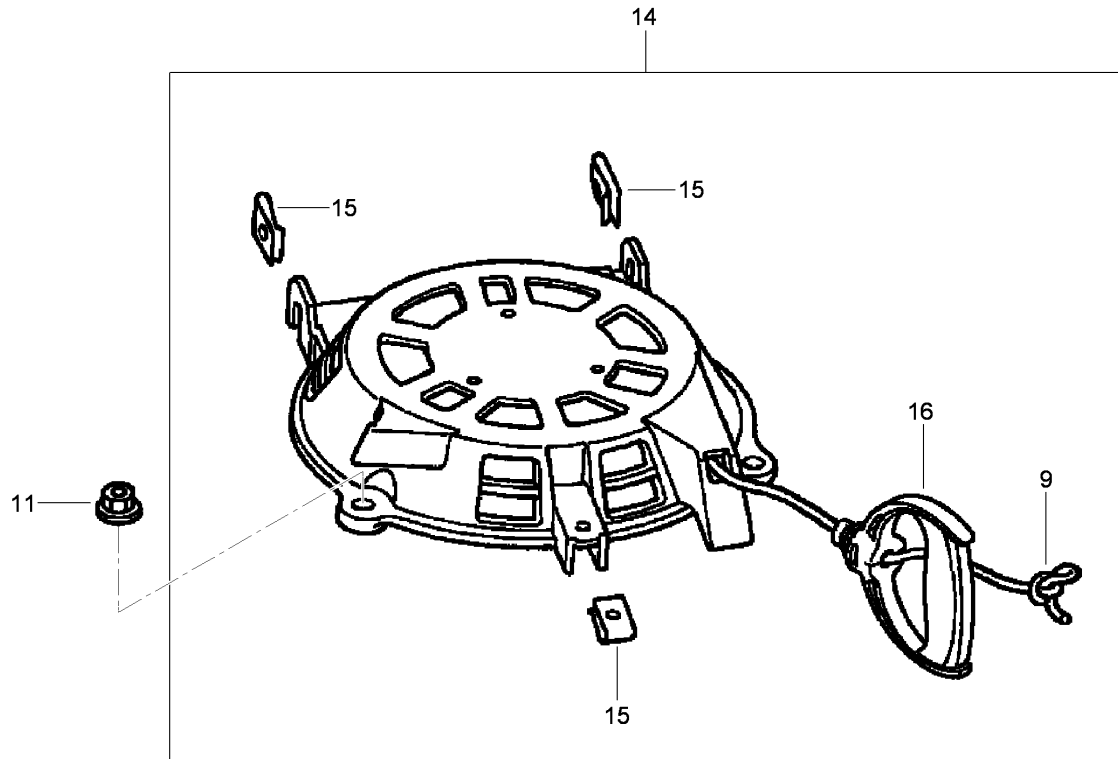 

E-11

Recoil Starter Assembly Honda GCV160A NBL1


Ref	Part No.	Qty.	Description				
29	28462-Z0L-V71	1	Rope-Starter, Recoil (Long Type)				
211	90201-ZM0-000	3	Nut-Flange (6Mm)				
214	28400-Z0L-V72	1	Recoil Starter ASM (Long Rope)				
215	66871-KY2-700	3	Nut-Cowl				
216	28461-Z0L-V71	1	Knob-Starter, Recoil				

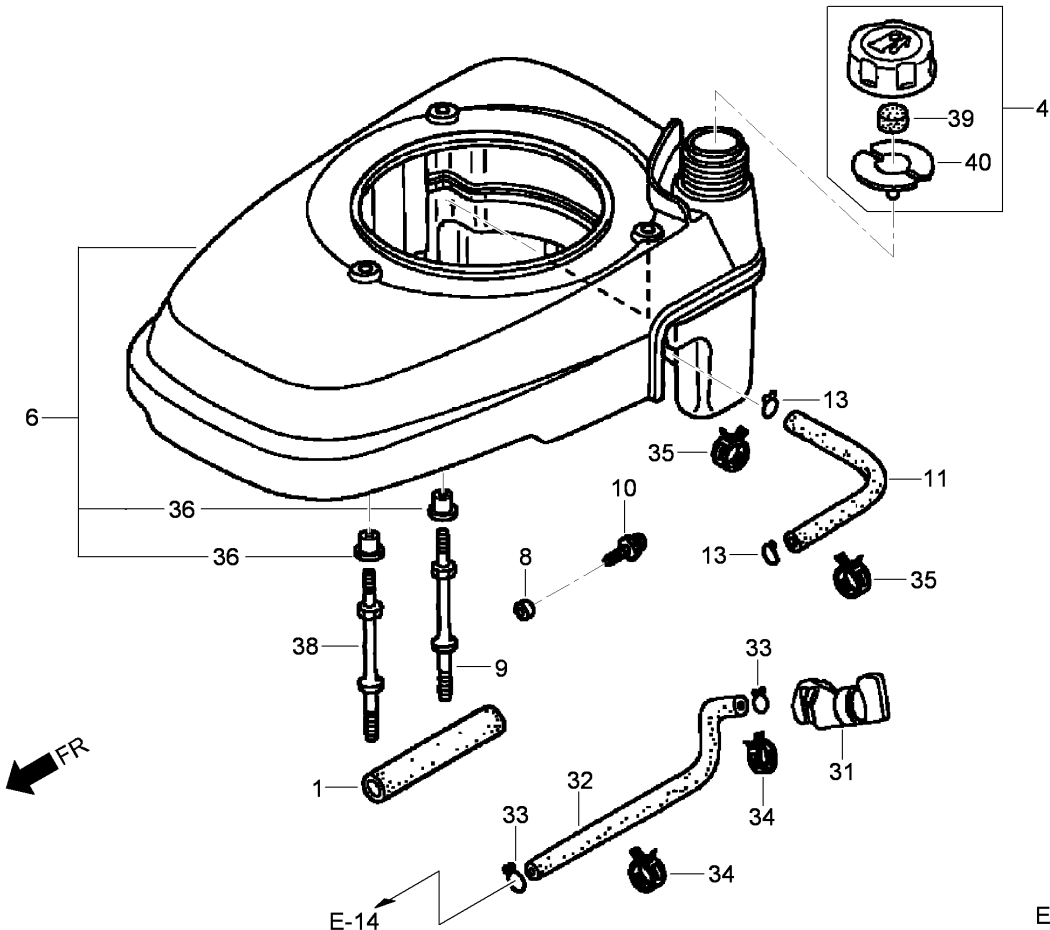 

Fan Cover Assembly
Honda GCV160A NBL1

Ref	Part No.	Qty.	Description
❶1	16854-ZH8-000	1	Supporter-Rubber (107 Mm)
❷4	17620-ZL8-013	1	Fuel Tank Cap ASM
❸6	19610-Z0L-000ZA	1	Cover-Fan, N H1 (Black)
❹8	33609-GK4-620	1	Collar-Turn Signal, Front
❹9	90043-ZL8-000	2	Bolt-Stud (H=42.5Mm)
❹10	93891-05010-08	1	Screw-Washer (5X10)
❹11	91425-Z0L-801	1	Tube-Fuel (5.3X150) (Fkm) (Engine Serial Numbers Starting At 3698327)
❹11	95001-55003-60M	1	Hose-Fuel, Bulk (5.5X3000) (5.5X100) (Engine Serial Numbers Up To 3698326)
❹13	95002-02100	2	Clip-Tube (B10) (Engine Serial Numbers Up To 3698326)
❹31	16950-ZM0-003	1	Petcock ASM
❹32	17702-ZM0-800	1	Tube-Fuel (Engine Serial Numbers Up To 3698326)
❹32	17702-Z0L-801	1	Tube-Fuel (Fkm) (Engine Serial Numbers Starting At 3698327)
❹33	95002-02080	2	Clip-Tube (B8) (Engine Serial Numbers Up To 3698326)

Ref	Part No.	Qty.	Description
❹34	95002-40800-08	2	Clamp-Tube (D8) (Engine Serial Numbers Starting At 3698327)
❹35	95002-41000-08	2	Clamp-Tube (D10) (Engine Serial Numbers Starting At 3698327)
❹36	19619-ZL8-300	3	Collar-Cover, Fan
❹38	90043-ZL8-000	1	Bolt-Stud (H=42.5Mm)
❹39	17622-ZL8-003	1	Sponge-Breather, Fuel Cap
❹40	17624-ZL8-003	1	Gasket-Cap, Fuel

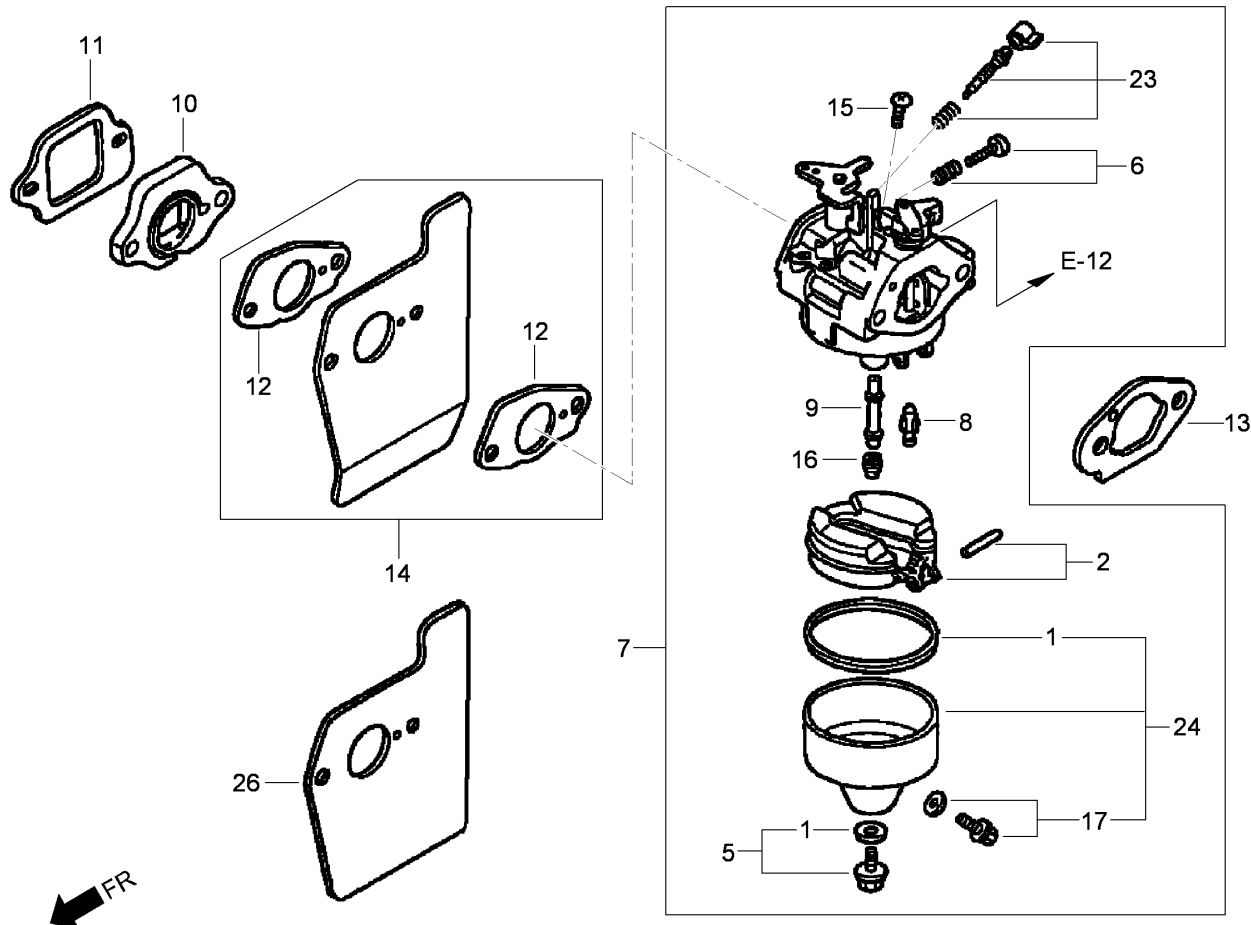 


E-14

Carburetor Assembly

Honda GCV160A NBL1

Ref	Part No.	Qty.	Description
21	16010-883-015	1	Gasket Set
22	16013-ZL1-003	1	Float Set
25	16028-ZE0-005	1	Screw Set
25	16028-ZK7-S91	1	Screw Set
26	16029-ZG0-901	1	Screw Set (Throttle Stop)
27	16100-ZM0-804	1	Carburetor ASM (B B62B E) (Engine Serial Numbers Up To 3698326)
27	16100-Z0L-003	1	Carburetor ASM (B B62W A) (Engine Serial Numbers Starting At 3698327)
28	16155-ZM0-013	1	Valve-Float
29	16166-ZM0-003	1	Nozzle-Main
210	16211-ZL8-000	1	Insulator-Carburetor
211	16212-ZL8-000	1	Gasket-Insulator
212	16221-883-800	2	Gasket-Carburetor (Engine Serial Numbers Up To 6349022)
213	16228-ZL8-000	1	Gasket-Carburetor

Ref	Part No.	Qty.	Description
214	19650-ZM0-000	1	Guide-Air (Engine Serial Numbers Up To 6349022)
215	93500-05006-0H	1	Screw-Pan (5X6)
216	99101-124-0600	1	Jet-Main (No.60) (Optional Equipment)
216	99101-124-0620	1	Jet-Main (No.62) (Optional Equipment)
216	99101-124-0650	1	Jet-Main (No.65)
217	16024-ZE1-811	1	Drain Screw Set
223	16016-ZG0-W00	1	Screw Set
224	16015-887-782	1	Float Chamber Set
226	19651-Z0L-000	1	Guide-Air (Engine Serial Numbers Starting At 6349023)

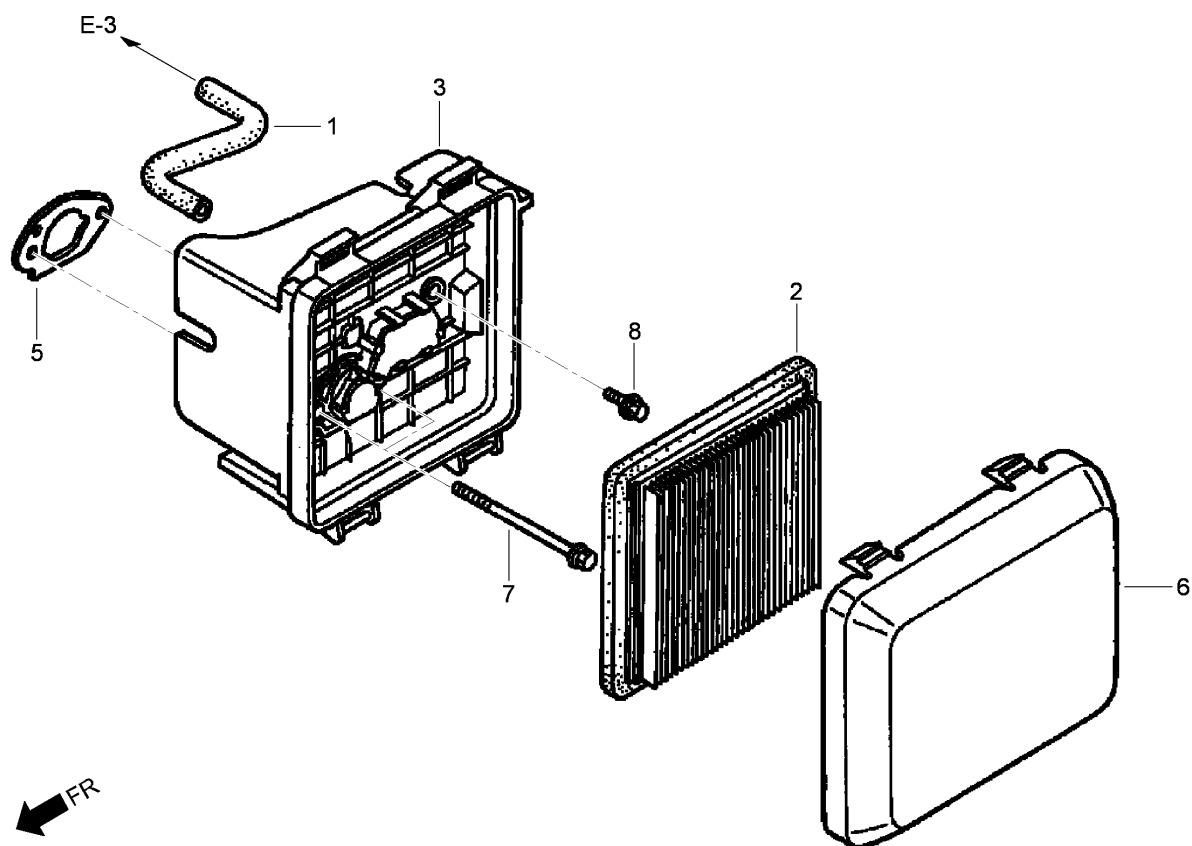 


E-15

Air Cleaner Assembly

Honda GCV160A NBL1

Ref	Part No.	Qty.	Description				
21	15721-ZM0-000	1	Tube-Breather				
22	17211-ZL8-023	1	Element-Cleaner, Air				
23	17220-ZM0-000	1	Air Cleaner Case ASM				
23	17220-ZM0-010	1	Air Cleaner Case ASM				
25	17228-ZM0-000	1	Gasket-Cleaner, Air				
26	17231-Z0L-030	1	Cover-Cleaner, Air				
27	90003-ZM0-000	2	Bolt-Flange (6X86) (C T200) (Engine Serial Numbers Up To 6349022)				
27	90003-ZM0-010	2	Bolt, Flange (6X85) (C T200)				
28	95701-06014-08	1	Bolt-Flange (6X14)				

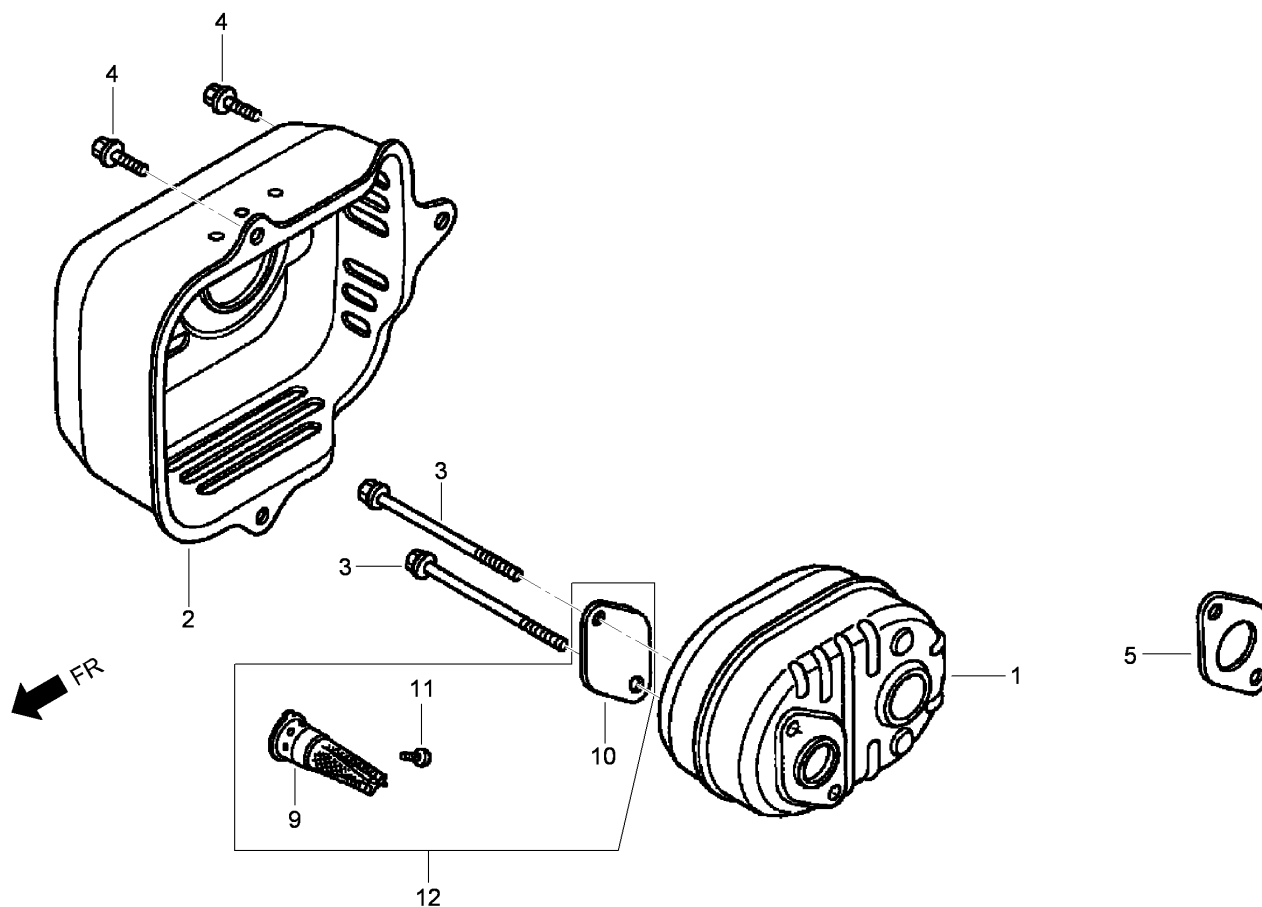 


E-16

Muffler Assembly

Honda GCV160A NBL1


Ref	Part No.	Qty.	Description				
21	18310-ZM0-000	1	Muffler				
22	18321-Z0L-J00	1	Protector-Muffler				
23	90004-ZL8-000	2	Bolt-Flange (6X79) (C T200)				
24	90013-883-000	3	Bolt-Flange (6X12) (C T200)				
25	18381-ZL8-305	1	Gasket-Muffler (Optional Equipment)				
29	18350-ZL8-000	1	Arrester-Spark (Optional Equipment)				
210	18356-ZL8-000	1	Plate-Number, Arrester (Optional Equipment)				
211	90055-ZE1-000	1	Screw-Tapping (4X6) (Optional Equipment)				
212	06180-Z0J-000	1	Spark Arrester Kit (Optional Equipment)				

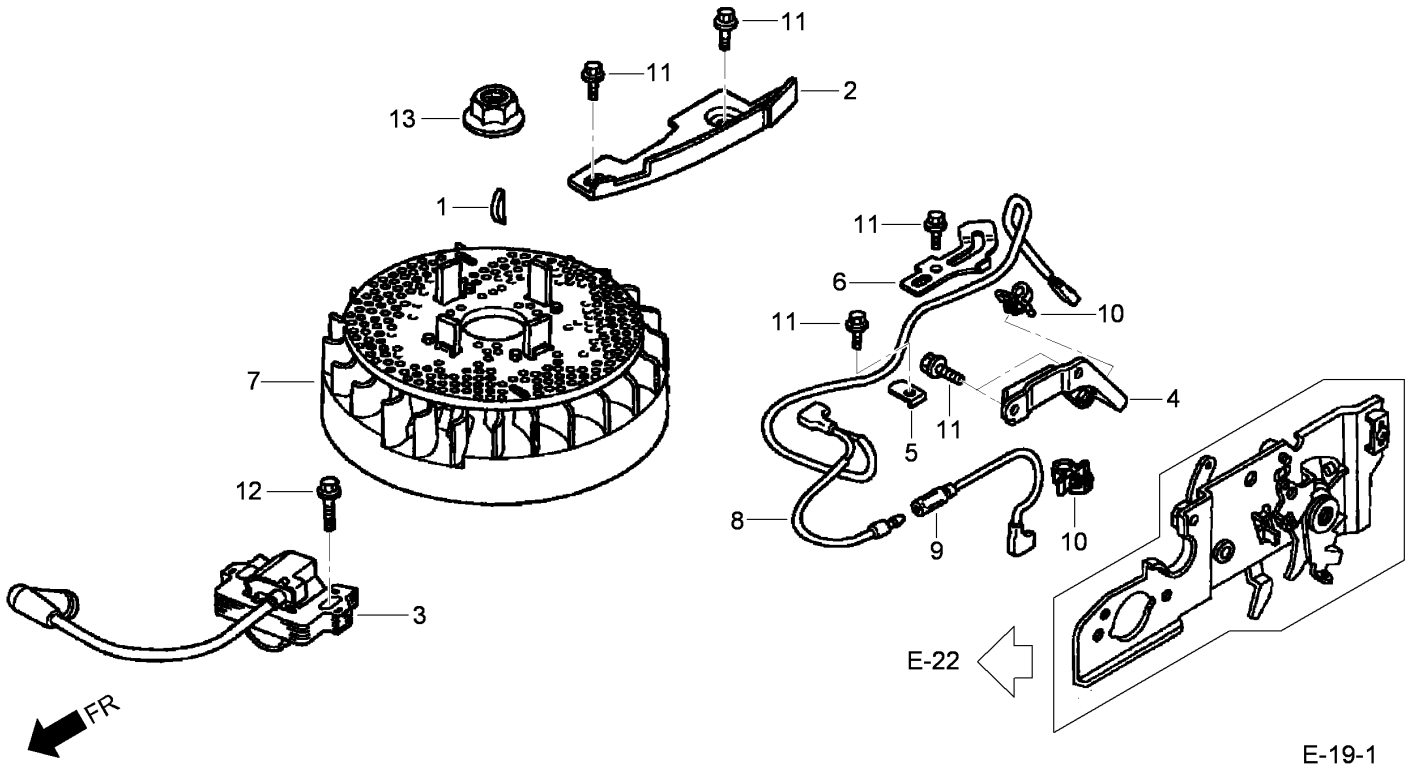 

Flywheel Assembly
Honda GCV160A NBL1

Ref	Part No.	Qty.	Description
❶1	13331-357-000	1	Key-Woodruff, Special (25X18)
❷2	19612-ZM0-J20	1	Plate-Side (Engine Serial Numbers Up To 5008780)
❷2	19612-Z0L-000	1	Plate-Side (Engine Serial Numbers Starting At 5008781)
❸3	30500-Z0J-003	1	Ignition Coil ASM (Phelon) (Use For Flywheel Of Phelon)
❹4	30547-Z0L-S00	1	Clamp-Wire, Stop Switch
❺5	30548-ZL8-000	1	Clamp-Wire, Stop Switch
❻6	30549-ZL8-000	1	Clamp-Wire
❼7	31105-Z0J-010	1	Flywheel ASM (Phelon) (Use For Ignition Coil Of Phelon)
❽8	32195-Z0L-S20	1	Wire-Switch, Stop
❽9	32196-Z0L-S20	1	Wire-Switch, Stop
❿10	51125-Z0L-003	2	Holder-Wire (Fastex)
❿10	90681-959-003	2	Clip A-Cable (3.8Mm Black) (Nifco)
❿11	90013-883-000	6	Bolt-Flange (6X12) (C T200)

Ref	Part No.	Qty.	Description
❿12	90022-888-010	1	Bolt-Flange (6X20) (C T200)
❿13	90201-878-003	1	Nut-Special (14 Mm)

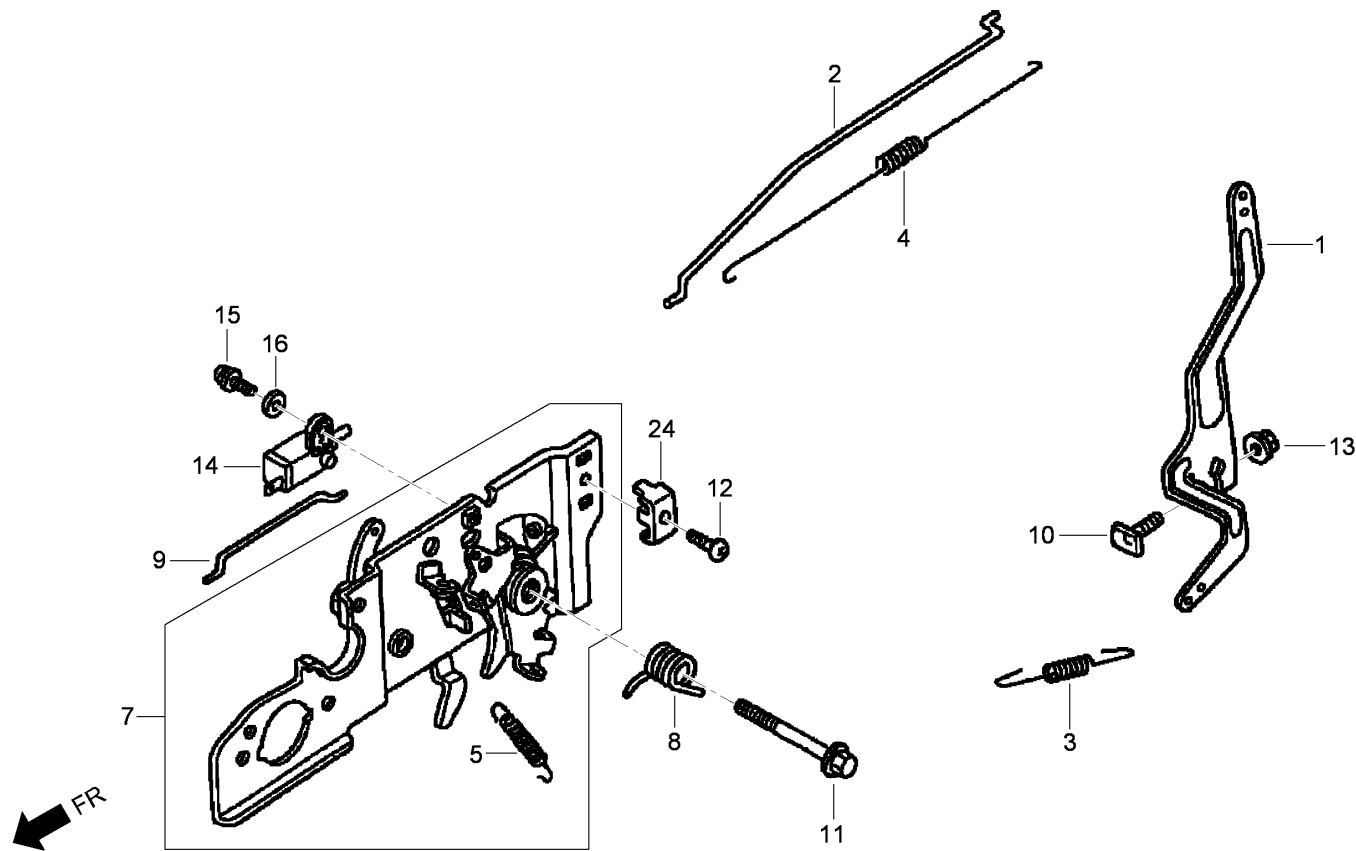 


E-22

Control Assembly
Honda GCV160A NBL1

Ref	Part No.	Qty.	Description
❶1	16551-ZM0-010	1	Arm-Governor
❷2	16555-Z0L-800	1	Rod-Governor (Engine Serial Numbers Up To 6349022)
❷2	16555-Z0L-801	1	Rod-Governor (Engine Serial Numbers Starting At 6349023)
❸3	16561-Z0L-000	1	Spring-Governor
❹4	16562-ZM0-000	1	Spring-Return, Throttle
❺5	16576-ZE7-300	1	Spring-Lever
❻7	16580-ZM0-J23	1	Base-Control
❽8	16593-ZM0-000	1	Spring-Return, Control Lever
❾9	16674-ZM0-000	1	Rod-Choke
❿10	90015-ZE5-010	1	Bolt-Arm, Governor
❿11	90016-ZM0-000	1	Bolt-Flange (6X45) (Ct200)
❿12	93500-05016-0A	1	Screw-Pan (5X16)
❿13	94050-06000	1	Nut-Flange (6 Mm)
❿14	35120-ZL8-003	1	Engine Stop Switch ASM



Ref	Part No.	Qty.	Description
❶15	93892-04012-00	1	Screw-Washer (4X12)
❶16	94103-04000	1	Washer-Plain (4Mm)
❶24	16617-VG3-000	1	Holder-Cable

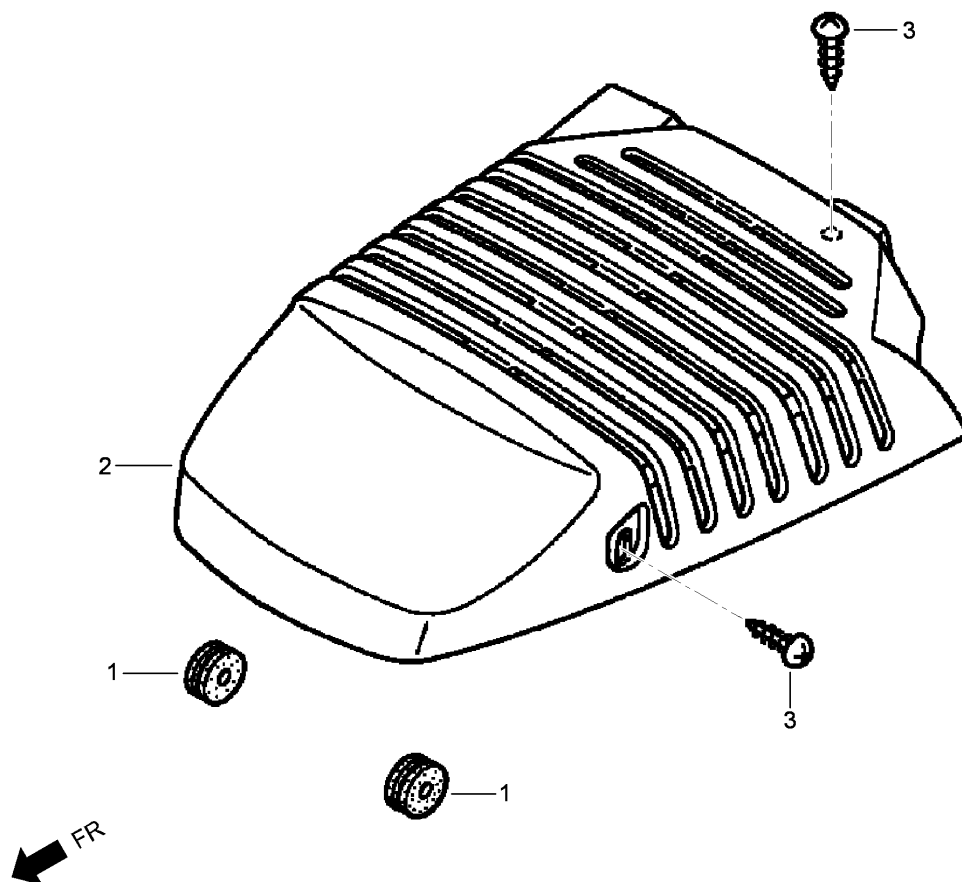 

E-27

Top Cover Assembly Honda GCV160A NBL1

Ref	Part No.	Qty.	Description
②1	16613-883-610	2	Grommet-Rod, Choke
②2	19721-Z0L-000ZA	1	Cover-Top (N H1) (Black)
②3	90137-SH3-000	3	Screw-Tapping (4X16)

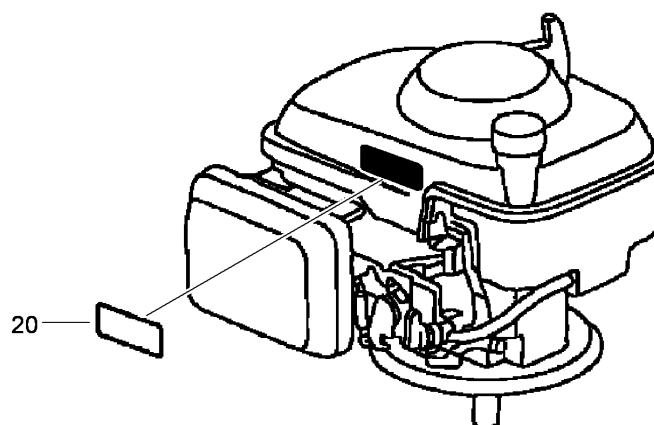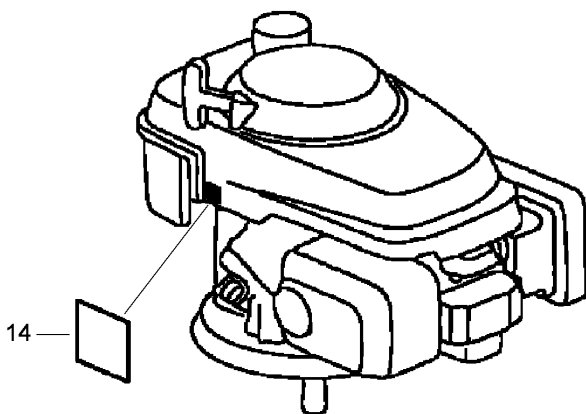  

E-28

Label Assembly

Honda GCV160A NBL1

Ref	Part No.	Qty.	Description				
② 14	87594-VG3-010	1	Mark-Caution, Oil				
② 20	87114-ZH7-821	1	Label-Warning (Not Certified For Sale)				

Attachments and Accessories

For 20194 - Super Bagger Lawn Mower

Product Name	Model/Part
Cruise Control Kit	89919

NOTES

NOTES

