



# Rear Roller Scraper Kit

## 22in Rotary Cutting Unit

Model No. 117-0149

Form No. 3362-682 Rev A

### Installation Instructions

**Note:** Determine the left and right sides of the machine from the normal operating position.

## Loose Parts

Use the chart below to verify that all parts have been shipped.

| Description           | Qty. | Use                |
|-----------------------|------|--------------------|
| Scraper               | 1    | Prepare the mower. |
| Scraper plate         | 2    |                    |
| Bolt (3/8 x 3/4 inch) | 2    |                    |

## Preparing the Mower

1. Position the machine on a level surface, lower the cutting decks, stop the engine, engage the parking brake and remove the key from the ignition switch.
2. Remove the grease zerk/bolt from the roller mount. Keep the grease zerk/bolt for assembly.
3. Loosely mount each end of the scraper and a scraper plate to each roller mount with the previously removed grease zerk/bolt and a bolt (3/8 x 3/4 inch) (Figure 1).
4. Slide the scraper up or down until a gap of .020-.040 inches is achieved between the rod and the roller. Tighten the grease fittings to lock adjustment. Torque them to 30 ft.-lb. (41 N-m).

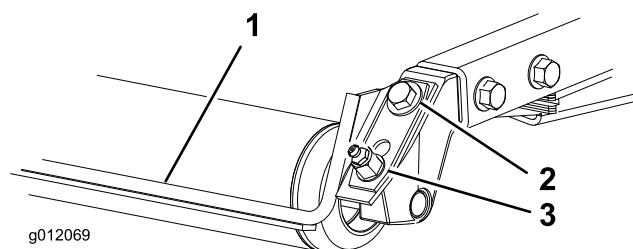


Figure 2

1. Roller scraper
2. Mounting screw
3. Grease fitting

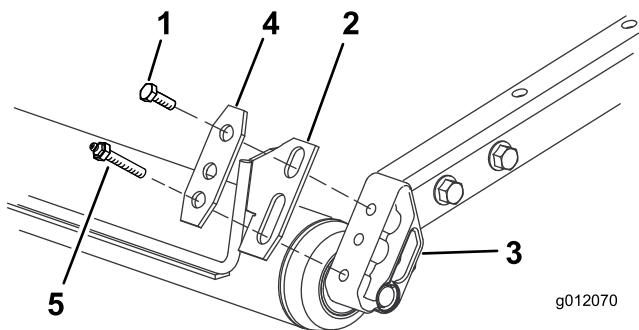


Figure 1

1. Rear roller
2. Scraper
3. Roller mount
4. Scraper plate
5. Grease zerk/bolt