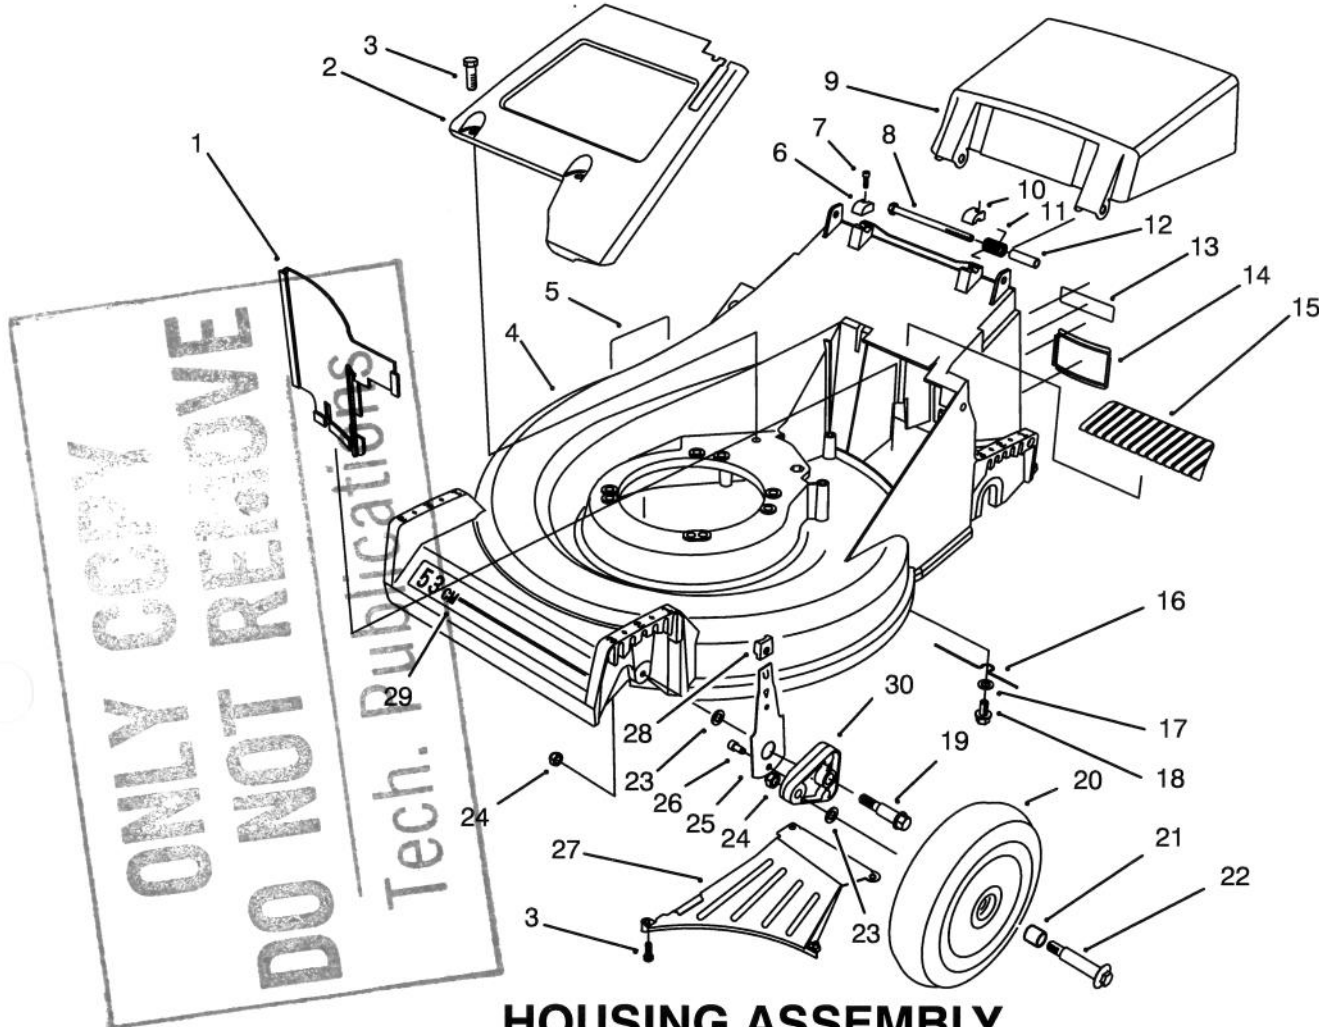


TORO®


MODEL NO. 26635BC-4900001 & UP

**PARTS
CATALOG****53cm KEY-LECTRIC®**
Rear Bagging Mower

C-1568

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	66-0020	Panel - Vertical	1	15	71-9920	Cover - Top	1
2	65-5660	Panel - Screen	1	16	66-0620	Retainer - Belt	1
3	32144-70	Screw - Cap Hex. Hd.	6	17	3256-24	Washer - Flat	1
4	16-1769	Housing - 53cm (Incl. Ref. #5 & 29)	1	18	32144-15	Screw - Hex Flange Hd.	1
5	92-9077	Decal - DIN	1	19	66-0560	Screw - Shoulder	2
6	71-7910	Cap - Hinge Bolt R.H.	1	20	14-9949	Wheel & Tire Assembly (Incl. Ref. #21)	2
7	65-5210	Screw - Thread Forming	2	21	27-6250	Bushing - Wheel	4
8	322-29	Screw - Hex Hd. Cap	2	22	27-6231	Bolt - Wheel	2
9	71-9800	Door - Discharge	1	23	40-1940	Washer - Wheel Bolt	4
10	71-7900	Cap - Hinge Bolt L.H.	1	24	3296-6	Nut - Lock	4
11	71-9840	Spring - Door	2	25	66-0540	Arm - Spring Front	2
12	71-8580	Spacer - Door	2	26	65-5220	Screw - Cap Socket Hd.	2
13	66-0680	Decal - French Regulation	1	27	71-9640	Ramp - Discharge	1
14	71-9650	Access - Cover	1	28	25-7740	Knob - Arm	2

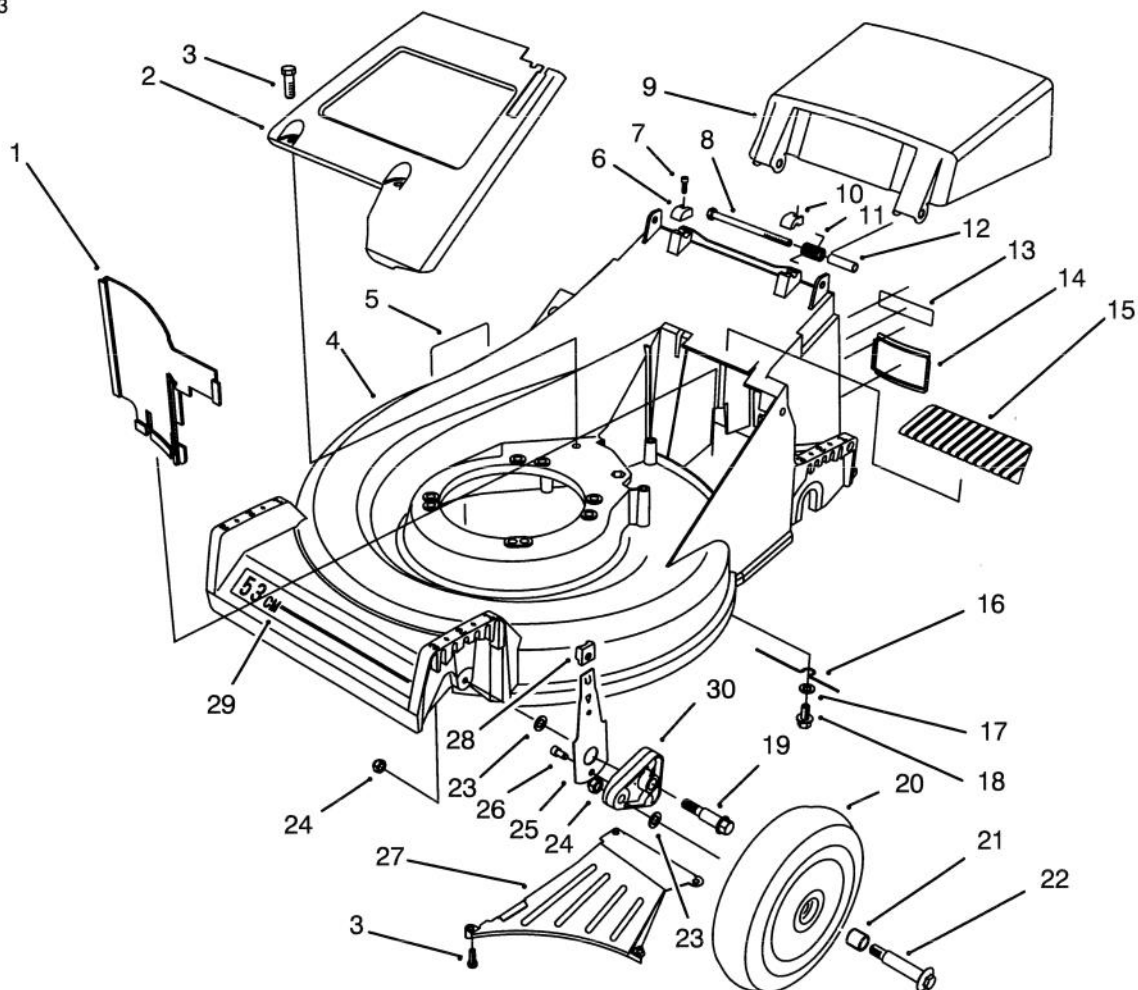


C-1568

HOUSING ASSEMBLY (Continued)[illegible]

Ref. No.	Part No.	Description	No. Used


*Not Illustrated

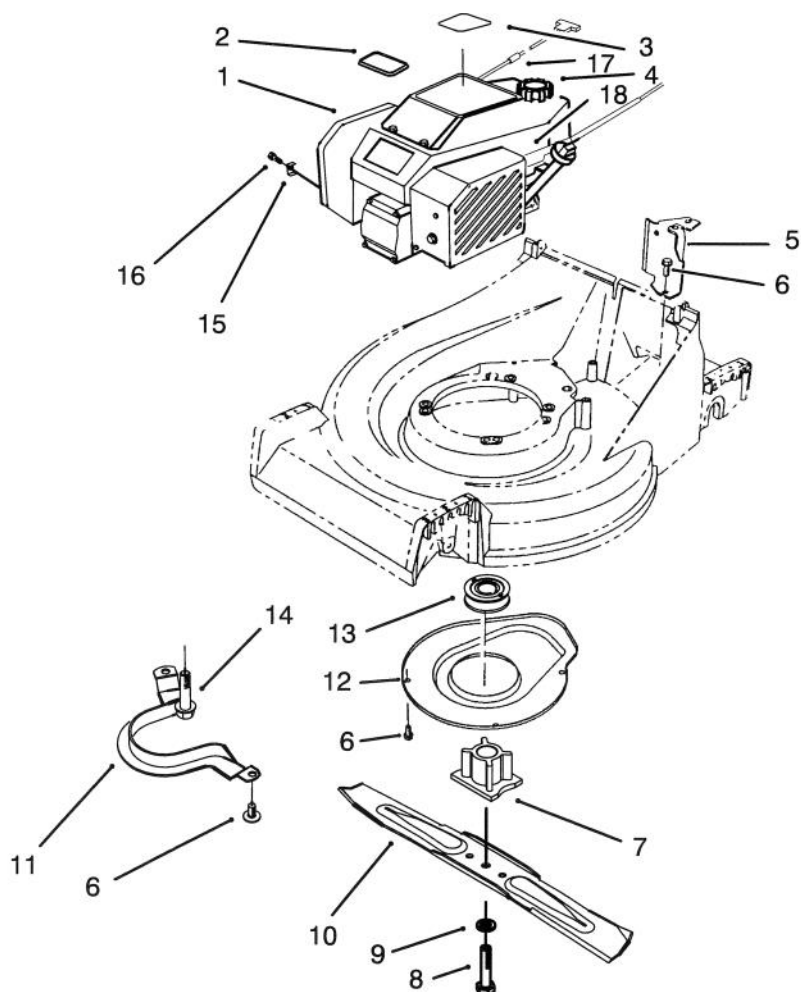

C-2084

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	77-8953	Engine	1	10	62-7700	Blade - 21"	1
2	92-2289	Plate - TORO Logo	1	11	66-0570	Guide - Belt	1
3	92-7857	Decal - Recoil	1	12	65-5200	Cover	1
4	55-3570	Gas Cap Assembly	1	13	62-7550	Pulley - Engine	1
5	66-0030	Bracket - Cable Support	1	14	32144-102	Screw - Thread Forming	3
6	32144-70	Screw - Hex Hd. Cap	7	15	2210-249	Clamp - Throttle	1
7	62-7540	Retainer - Blade	1	16	86-7990	Screw - Clamp	1
8	26-0670	Bolt - Blade	1	17	2210-316	Stop - Rope	1
9	3253-22	Washer - Blade	1	18	77-7120	Cover - Brake	1

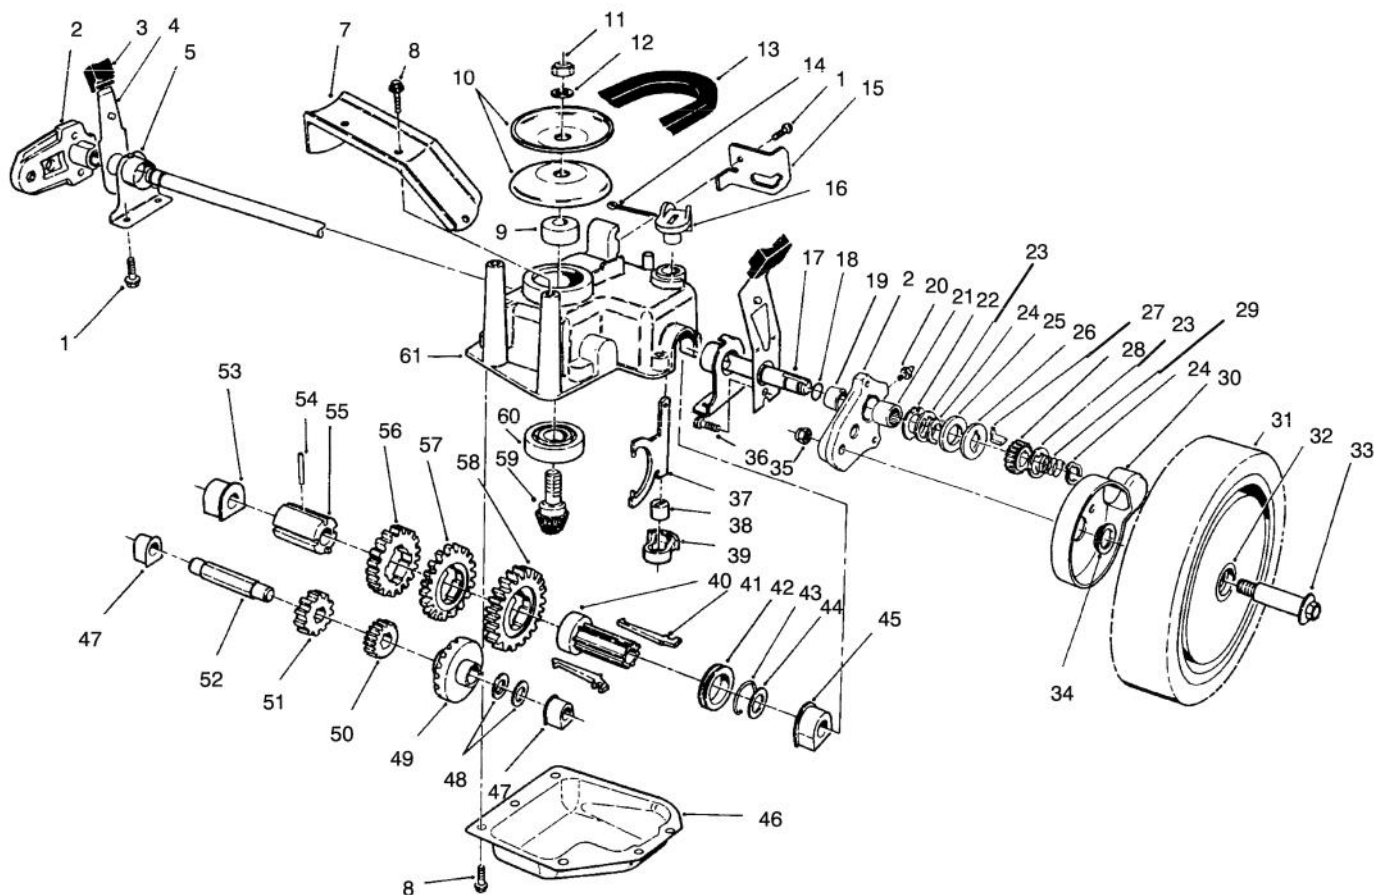


C-1555

GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-70	Screw - Hex. Washer Hd.	3
2	65-5042	Pivot Arm Assembly (Incl. Ref. #19-21)	2
3	25-7740	Knob - Arm	2
4	65-5440	Spring Arm Assembly	2
5	66-0360	Cap - End	2
7	65-5190	Bracket - Belt Guide	1
8	49-2040	Screw - Self Tapping	8
9	62-6660	Spacer	1
10	60-8840	Pulley - Half	2
11	3296-5	Nut - Lock	1
12	3256-24	Washer - Flat	1
13	66-0210	V-Belt	1
14	3272-5	Pin - Cotter	1
15	76-2930	Retainer - Cable	1
16	76-0920	Lever - Shift	1
17	65-4770	Shaft - Output	1
18	237-153	Seal - "O"Ring	2
19	70-9760	Bushing - Sleeve	2
20	302-56	Fitting - Grease	2
21	48-2060	Bearing - Needle	2
22	65-4730	Washer - Thrust (Inner)	2
23	65-4740	Washer - Thrust (Keyed)	4

Ref. No.	Part No.	Description	No. Used
24	65-2720	Ring - Retaining	4
25	65-4710	Ring - Friction	2
26	65-4760	Washer - Clutch	2
27	66-6050	Key - Rocking (L.H.)	1
*	66-6040	Key - Rocking (R.H.)	1
28	65-4750	Pinion	2
29	65-4720	Spring - Compression	2
30	74-1660	Cover - Wheel	2
31	14-9959	Wheel Tire & Gear Assy. (Incl. Ref. #32)	2
32	27-6250	Bushing - Wheel	4
33	27-6231	Bolt - Wheel	2
34	74-1671	Spacer - Wheel Cover	2
35	3296-6	Nut - Lock	2
36	65-5220	Screw - Socket Hd. Cap	2
37	60-8870	Yoke - Shift	1
38	29-9570	Bushing - Yoke	1
39	60-8810	Retainer - Shift Fork	1
40	76-0780	Sleeve - Shift Key	1
41	76-0760	Key - Shift	2
42	76-0770	Collar - Shift	1
43	65-5250	Clip - Spring	1
44	36-4780	Washer - Thrust	1

*Not Illustrated

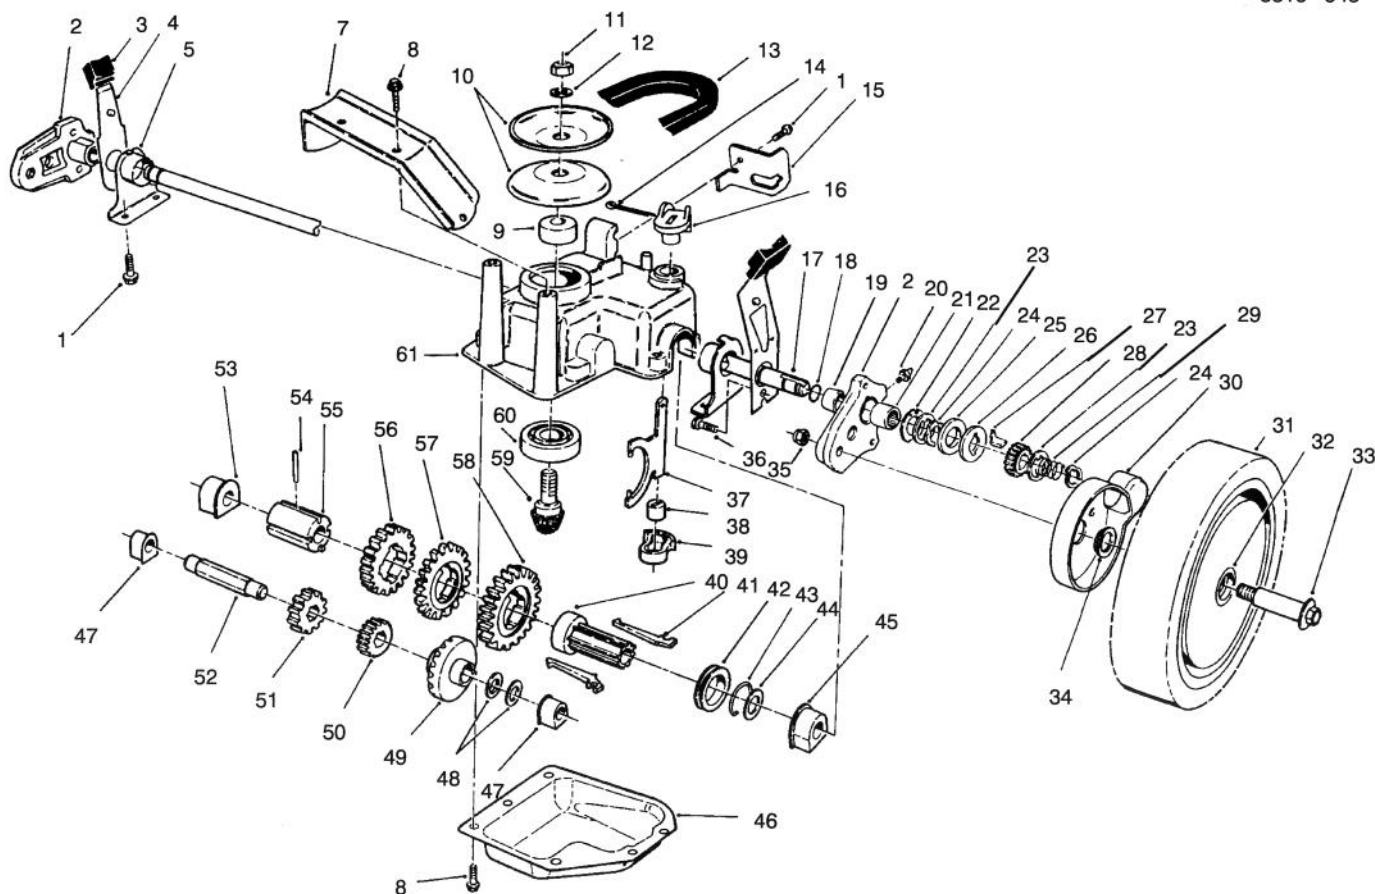


C-1555

GEAR CASE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
45	60-8770	Bushing - Output Shaft	1	54	32121-120	Pin - Coil	1
46	60-8730	Cover - Gear Case	1	55	60-8790	Sleeve - Gear	1
47	60-8750	Bushing - Intrmdt. Shaft	2	56	55-3810	Gear - 39T (3rd Gear)	1
48	36-4791	Washer - Thrust	2	57	55-3790	Gear - 44T (2nd Gear)	1
49	55-3760	Gear - Pinion 15T	1	58	55-3770	Gear - 49T (1st Gear)	1
50	55-3780	Gear - Pinion 20T	1	59	60-8890	Pinion - Bevel	1
51	55-3800	Gear - Pinion 25T	1	60	38-7820	Bearing - Ball	1
52	60-8800	Shaft - Intermediate	1	61	60-8710	Case - Gear (Upper)	1
53	60-8850	Bushing - Output Shaft	1	*	62-6673	Gear Case Assy. Complete	1

*Not Illustrated

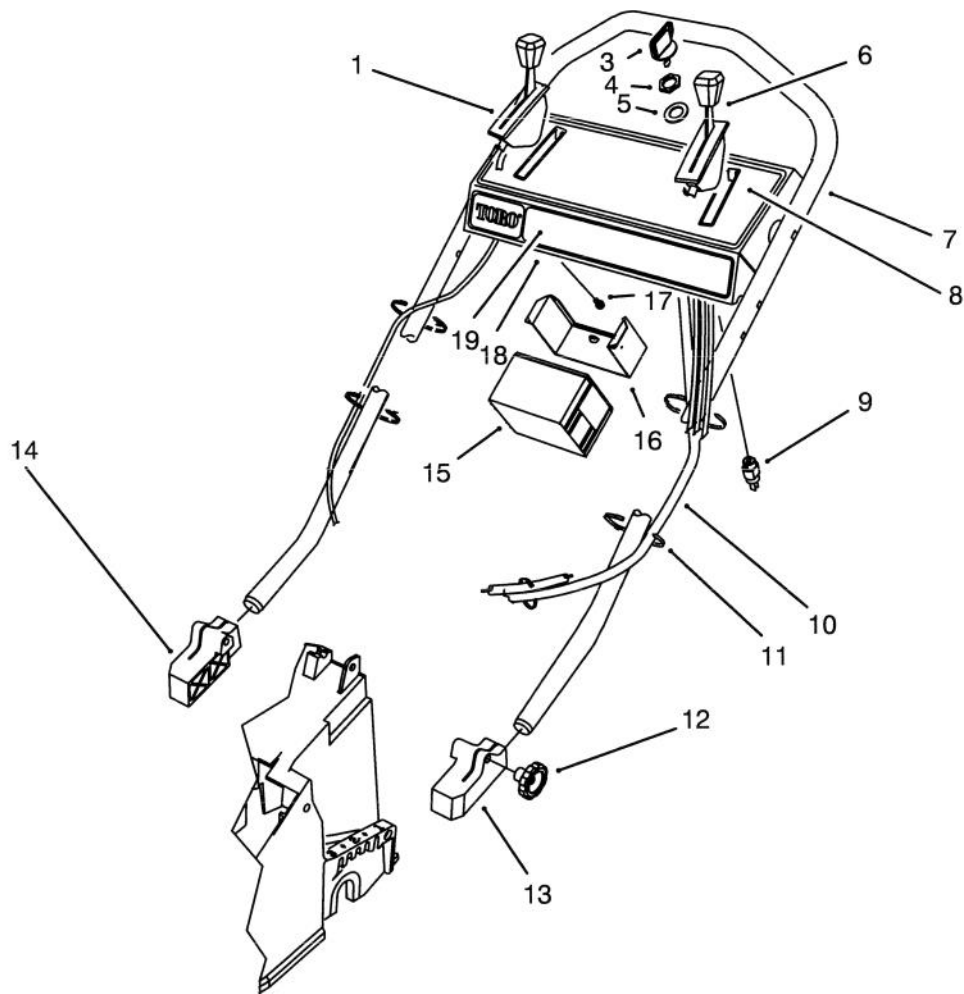


C-1583

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	76-2713	Control - Ground Speed	1	11	3290-378	Tie - Cable	5
3	63-8360	Key - Ignition	1	12	19-4050	Knob - Handle Release	2
4	218-461	Nut - Lock	1	13	71-8090	Mount - Handle L.H.	1
5	3254-5	Washer - Lock	1	14	71-8100	Mount - Handle R.H.	1
6	93-1111	Control - Throttle		15	55-7520	Battery	1
		Bend Type #3		16	55-8180	Retainer - Battery	1
		Sheath Lg. (57") (145cm)	1	17	32104-76	Screw - Self Tapping	5
		Wire Lg. (2 1/8")	1	18	16-1739	Panel - Control	1
7	71-9690	Handle	1			(Incl. Ref. #8 & 19)	
8	93-0149	Decal - Instruction	1	19	71-9871	Decal - TORO	1
9	46-5780	Switch - Starter	1	*	22-4710	Charger - Battery (220V)	1
		(Incl. Ref. #4 & 5)	1				
10	80-4791	Harness - Wire	1				


*Not Illustrated

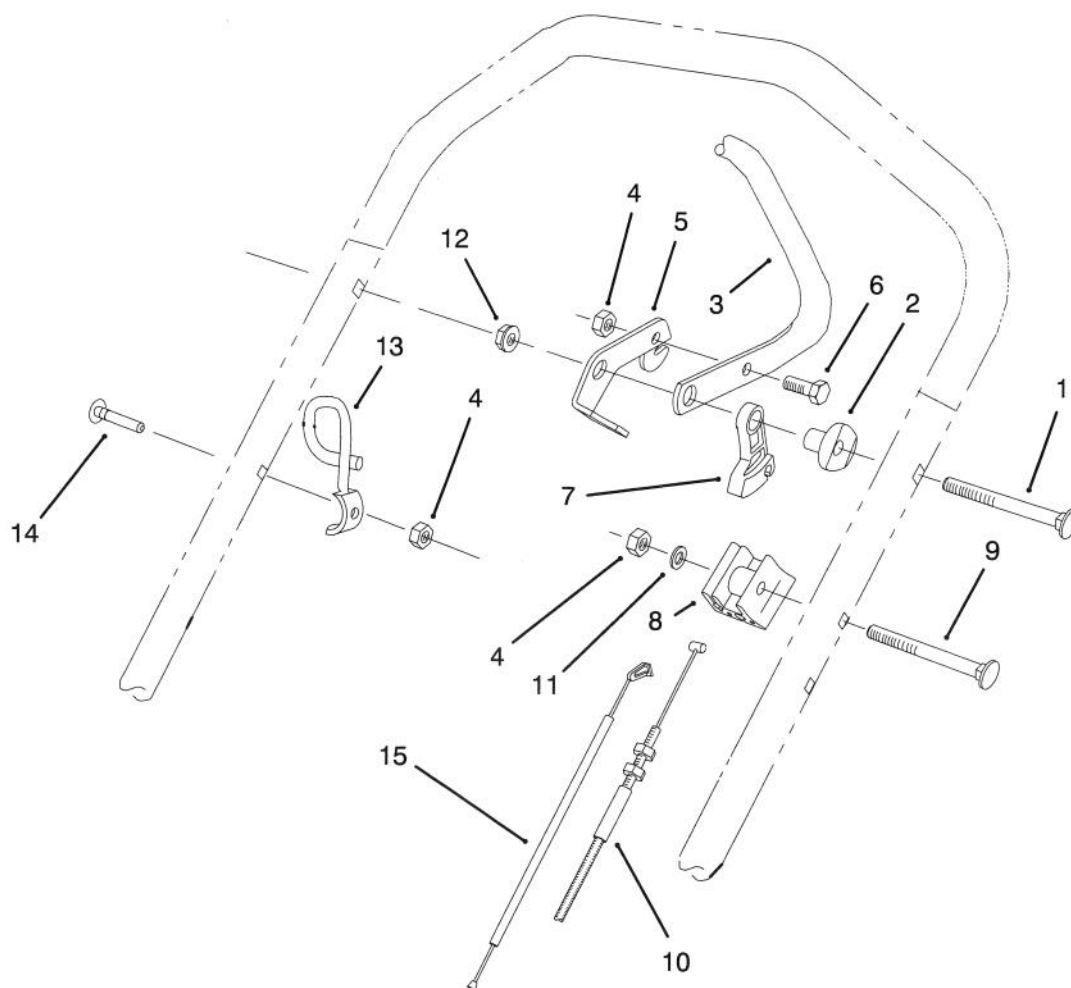

C-2083

TRACTION CONTROL ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	17-9426	Screw - Handle	2	9	46-6432	Screw - Handle	1
2	66-0330	Support - Spacer	2	10	71-0620	Cable - Traction	1
3	52-7430	Control Bar Assembly	1	11	3256-22	Washer - Flat	1
4	3296-42	Nut - Lock	3	12	3296-58	Nut - Lock	2
5	66-5350	Lever - Control	1	13	46-8081	Guide - Rope	1
6	321-3	Screw - Cap Hex. Hd.	1	14	46-6435	Screw - Handle	1
7	46-5520	Lever - Traction	1	15	93-1112	Cable - Brake	1
8	71-0960	Support - Cable	1				

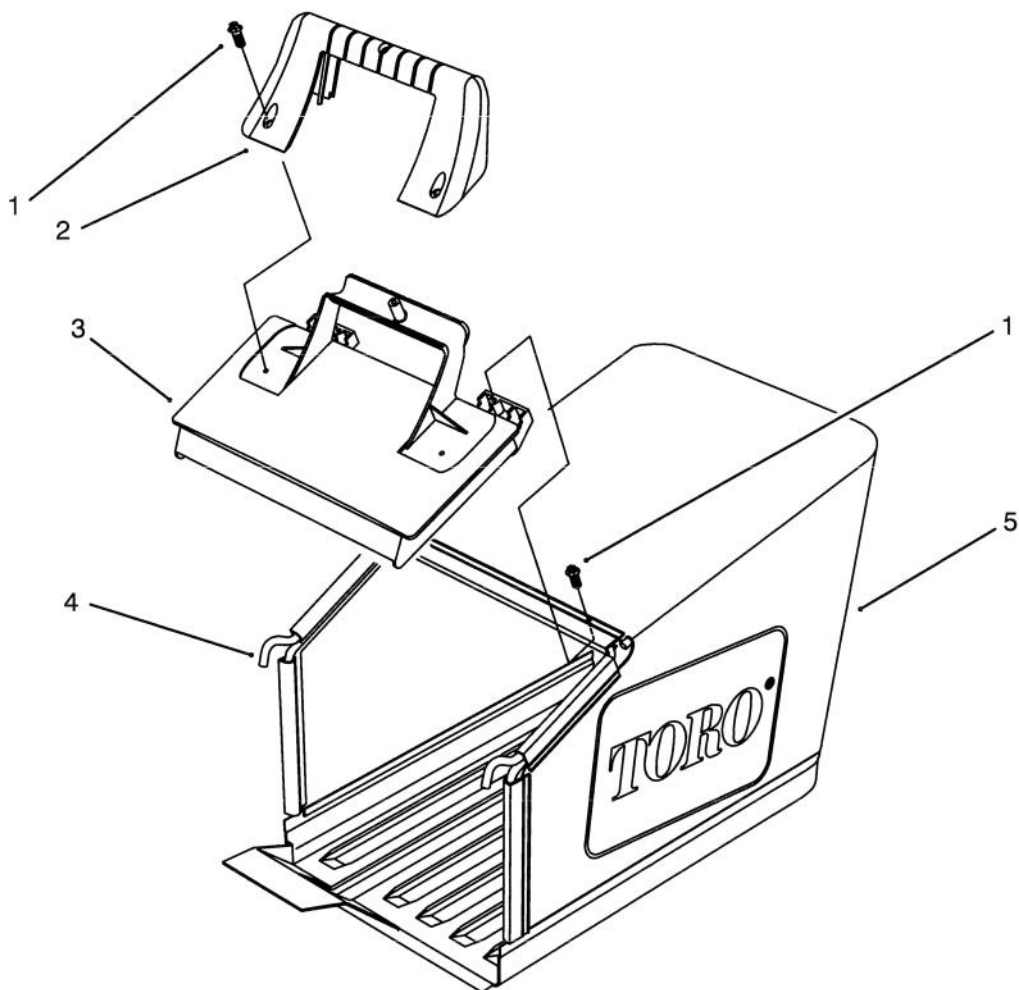


C-1570

GRASS BAG ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-111	Screw - Index Hex Washer Head	5
2	71-9480	Handle - Door	1

Ref. No.	Part No.	Description	No. Used
3	71-9470	Door - Bag	1
4	71-9930	Frame - Grass Bag	1
5	71-9680	Bag - Grass 53cm	1

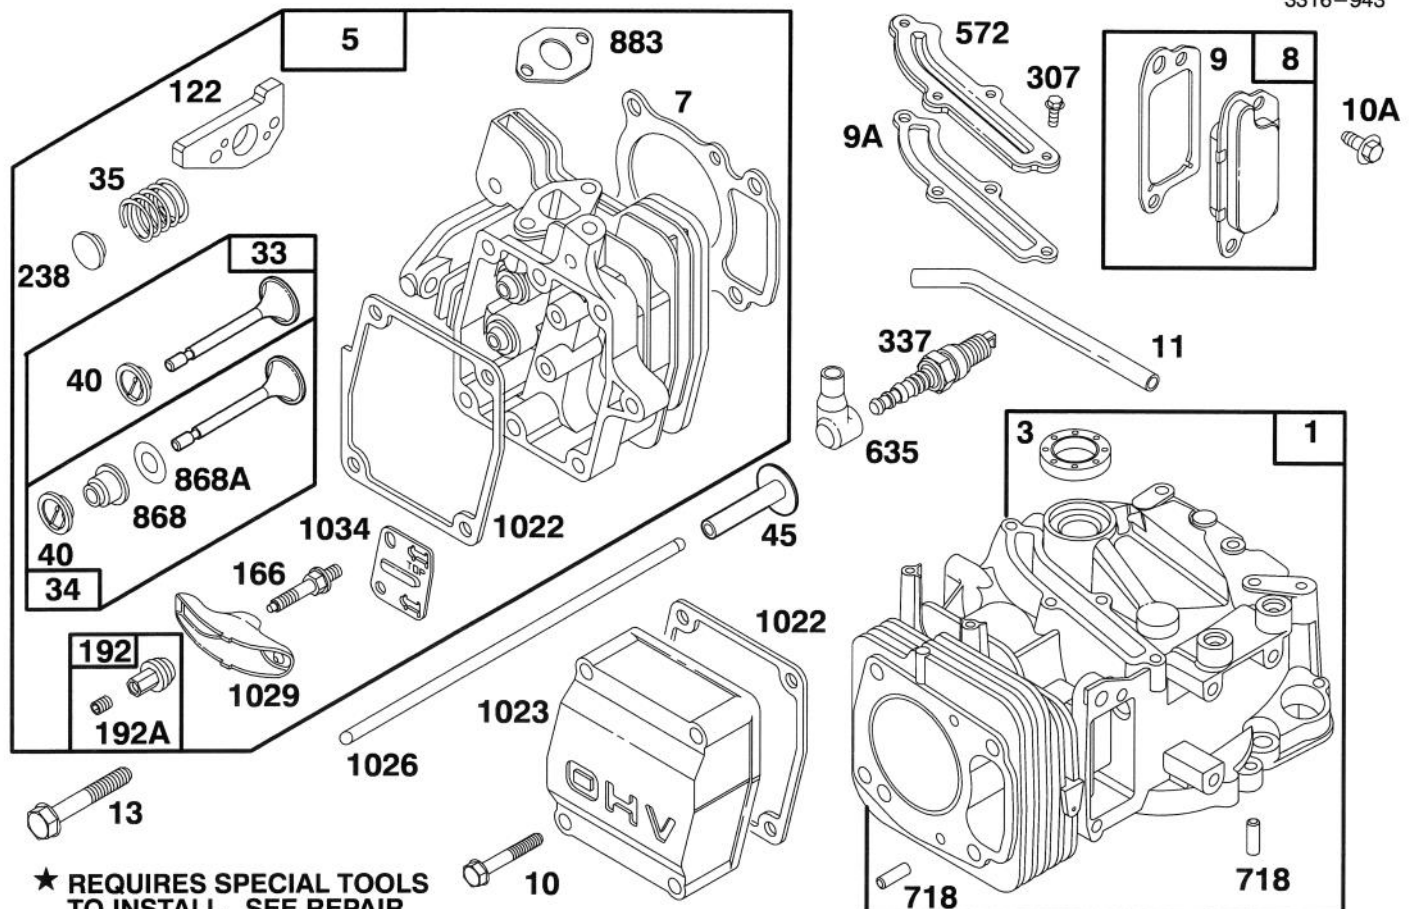


ENGINE GTS-150

Ref. No.	Part No.	Description	No. Used
1	77-7590	Cylinder Ass'y	1
★3	77-9060	Seal - Oil	1
5	77-7730	Head - Cylinder	1
★7	77-7740	Gasket - Cylinder Head	1
8	77-9300	Breather Ass'y	1
★9	77-9250	Gasket - Breather	1
★9A	77-7410	Gasket - Breather	1
10	77-7360	Screw - Hex Head (Valve Cover)	1
10A	77-9200	Screw - Hex Head	1
11	77-9410	Tube - Breather	1
13	77-7630	Screw - Cylinder Head	1
33	77-7860	Valve - Exhaust	1
34	77-7880	Valve - Intake	1
35	77-7810	Spring - Valve	1
40	77-7870	Retainer - Spring	1
45	77-7610	Tappet - Valve	1
●122	77-7820	Adapter Ass'y	1
166	77-7780	Stud - Rocker Arm	1

Ref. No.	Part No.	Description	No. Used
192	77-7910	Ball & Screw - Rocker Arm	1
192A	77-9310	Screw - Set	1
238	77-7800	Cap - Valve	1
307	77-7420	Screw - Breather Cover Mtg.	1
337	77-7330	Plug - Spark	1
572	77-7400	Cover - Breather	1
635	77-7340	Elbow - Spark Plug	1
718	77-7600	Pin - Cylinder	1
★868	77-7890	Seal Ass'y - Valve	1
★868A	77-7900	Gasket - Valve	1
★883	77-7760	Gasket - Exhaust	1
★1022	77-7320	Gasket - Rocker Cover	1
1023	77-9320	Cover - Valve	1
1026	77-7620	Rod - Push	1
1029	77-7790	Arm - Rocker	1
1034	77-7770	Guide - Push Rod	1
	77-9020	Short Block	1

★ Included in Gasket Set-Part No. 77-8900

● Included in Carburetor Overhaul Kit-Part No. 77-8920

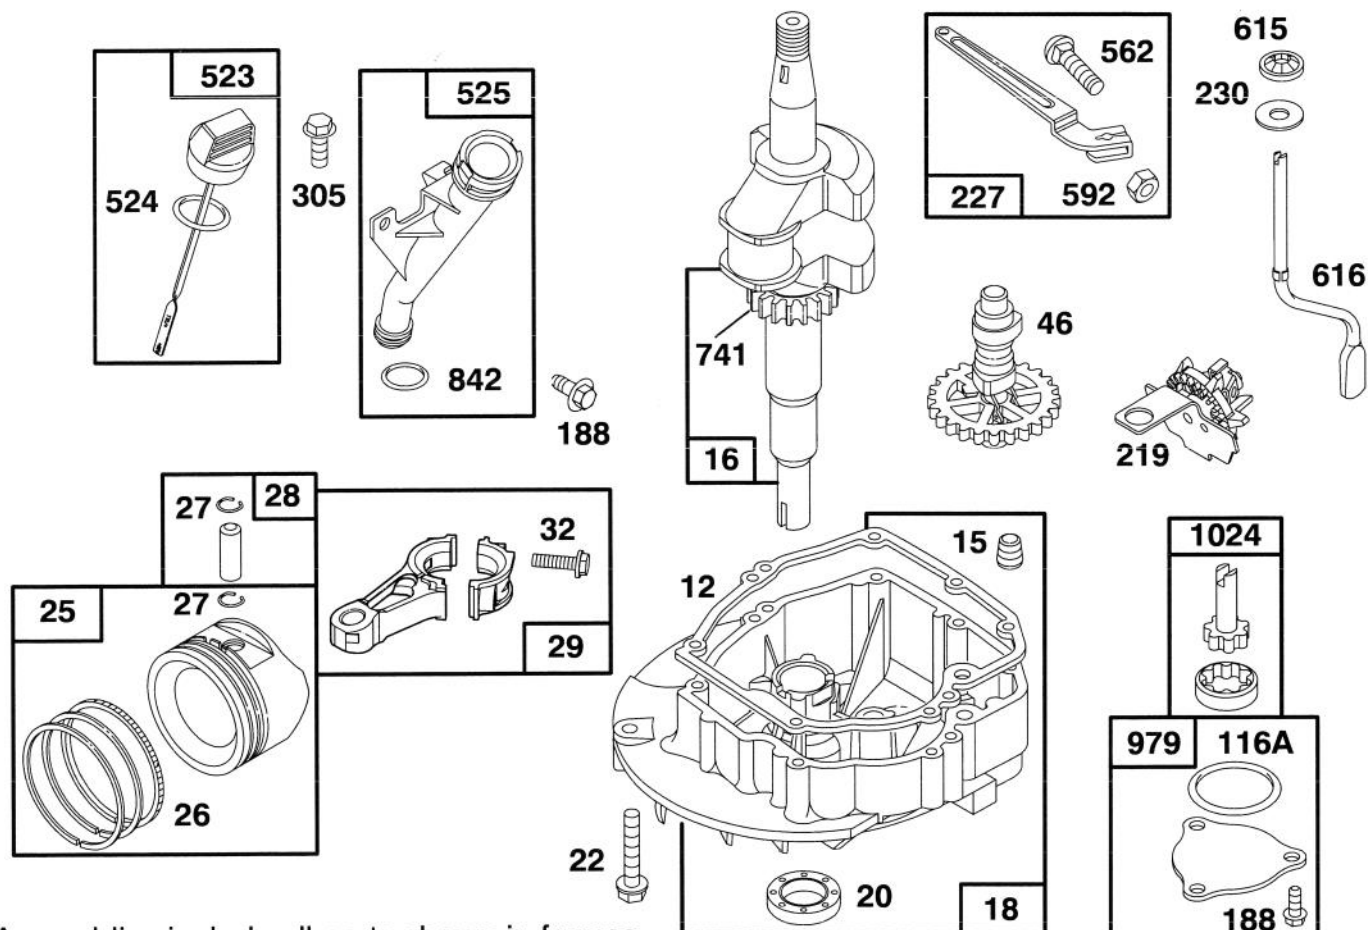


Assemblies include all parts shown in frames.

ENGINE GTS-150

Ref. No.	Part No.	Description	No. Used
★12	77-7550	Gasket – Engine Base	1
15	77-9240	Plug – Pipe	1
16	77-9330	Crankshaft	1
		Note: Order Part No. 77-7540 For Timing Gear Key	
18	77-7560	Base – Engine	1
★20	77-7570	Seal – Oil	1
22	77-9070	Screw – Engine Base	1
25	77-7690	Piston Ass'y (Std.)	1
26	77-7700	Ring Set (Std.)	1
27	77-7710	Lock – Piston Pin	1
28	77-9340	Pin Ass'y – Piston	1
29	77-7670	Rod – Connecting	1
32	77-9350	Screw – Conn. Rod	1
46	77-7490	Gear – Cam	1
★116A	77-7660	O-Ring	1

Ref. No.	Part No.	Description	No. Used
188	77-9360	Screw – Hex Head	1
219	77-7500	Gear – Governor	1
227	77-7370	Lever Ass'y – Governor	1
230	77-7470	Washer	1
305	77-8310	Screw – Hex Head	1
523	77-7260	Dipstick – Oil	1
★524	77-7270	Seal – O-Ring	1
525	77-7280	Tube – Oil Filler	1
562	77-7380	Bolt – Governor Lever	1
592	77-7390	Nut – Hex	1
615	77-7480	Pushnut	1
616	77-7460	Crank – Governor	1
741	77-7530	Gear – Timing	1
★842	77-7300	Seal – O-Ring	1
979	77-7650	Cover – Oil Pump	1
1024	77-7640	Pump – Oil	1

★ Included in Gasket Set – Part No. 77-8900

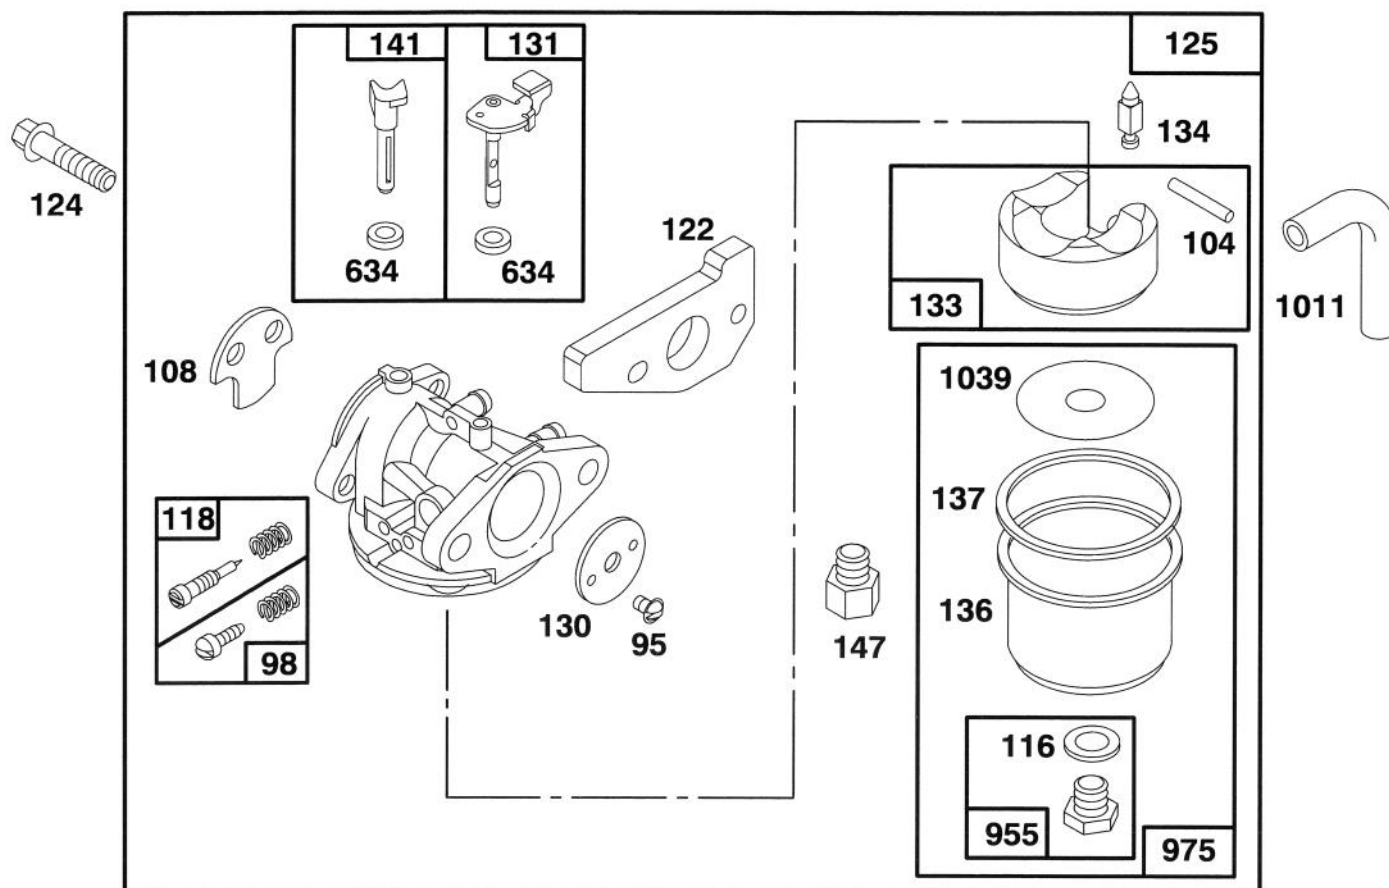

Assemblies include all parts shown in frames.



ENGINE GTS-150

Ref. No.	Part No.	Description	No. Used
95	77-8090	Screw - Valve Mtg.	1
98	77-8240	Screw - Idle Adj.	1
●104	77-8180	Pin - Float Hinge	1
108	77-8070	Valve - Choke	1
●◆116	77-8210	Sealing - Gasket	1
●118	77-8230	Valve & Spring - Needle	1
●122	77-7820	Adapter Ass'y	1
124	77-7970	Screw - Hex Head (Carb. Mtg.)	1
125	77-8050	Carburetor Ass'y	1
130	77-8080	Valve - Throttle	1
131	77-8160	Shaft - Throttle	1
133	77-8170	Float - Carburetor	1
●134	77-8110	Valve - Inlet (Includes Seat)	1

Ref. No.	Part No.	Description	No. Used
136	77-7240	Bowl - Fuel	1
●◆137	77-8200	Gasket - Float Bowl	1
141	77-8130	Shaft - Choke	1
147	77-8120	Adapter - Jet	1
		Note: For High Altitude Jet Order Part No. 77-9000	
◆634	77-8150	Washer - Seal	1
955	77-8220	Screw - Hex Head	1
975	77-8190	Bowl Ass'y - Carburetor	1
1011	77-8040	Tube - Vent	1
●1039	77-7250	Limiter - Float	1

● Incl. in Carburetor Overhaul Kit-Part No. 77-8920

◆ Included in Carburetor Gasket Set-Part No. 77-8930

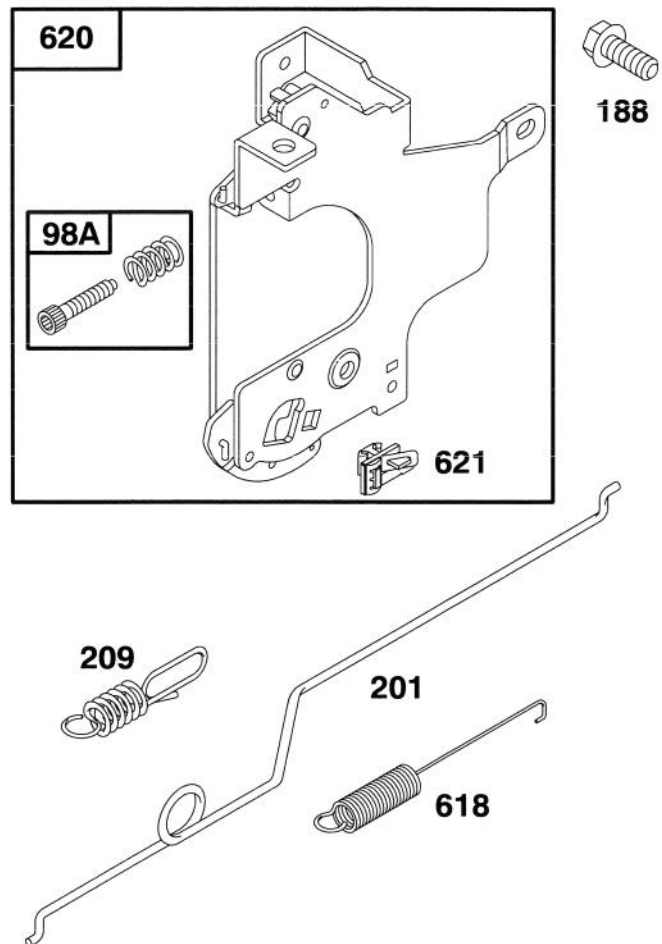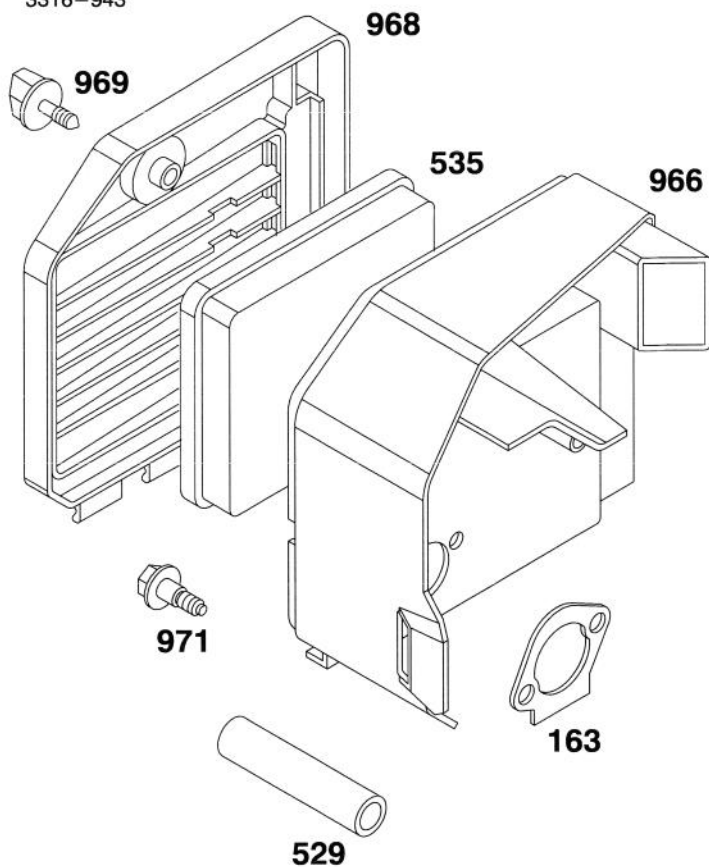


Assemblies include all parts shown in frames.

ENGINE GTS-150

Ref. No.	Part No.	Description	No. Used
98A	77-8020	Screw Ass'y - Speed Adj.	1
★163	77-7960	Gasket - Air Cleaner	1
188	77-9360	Screw - Hex. Head	1
201	77-7980	Link - Governor	1
209	77-7990	Spring - Governor	1
529	77-9470	Tube - Breather	1
535	77-7950	Element - Filter	1

Ref. No.	Part No.	Description	No. Used
618	77-8140	Spring - Choke	1
620	77-8000	Bracket - Carburetor	1
621	77-8010	Switch - Stop	1
966	77-7940	Base - Air Cleaner	1
968	77-7040	Cover - Air Cleaner	1
969	77-7920	Screw - Air Cleaner	1
971	77-7930	Screw - Air Cleaner	1

★ Included in Gasket Set - Part No. 77-8900

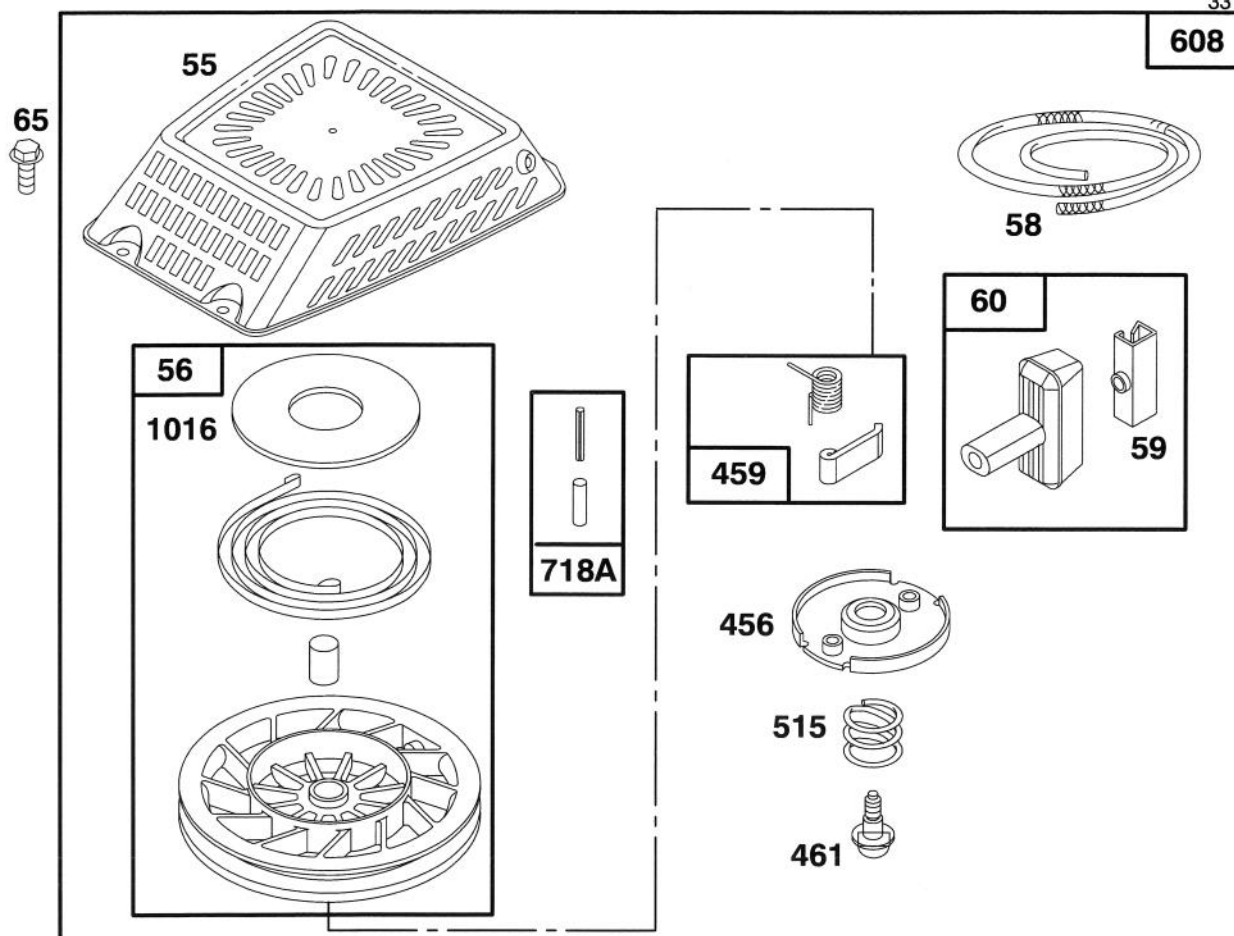


Assemblies include all parts shown in frames.

ENGINE GTS-150

Ref. No.	Part No.	Description	No. Used
55	77-8890	Housing - Rewind Starter	1
56	77-9270	Pulley - Rewind Starter	1
58	77-8480	Rope - Starter (Cut To Suit)	1
59	77-7210	Insert - Rewind Handle	1
60	77-8520	Handle - Rewind Starter	1
65	77-8300	Screw - Hex Head	1

Ref. No.	Part No.	Description	No. Used
456	77-8470	Retainer - Rewind Starter	1
459	77-8530	Pawl - Starter	1
461	77-8490	Screw - Rewind Starter	1
515	77-8500	Spring - Torsion	1
608	77-8840	Starter Ass'y - Rewind	1
718A	77-8550	Pin - Spring	1
1016	77-8570	Cover - Spring	1

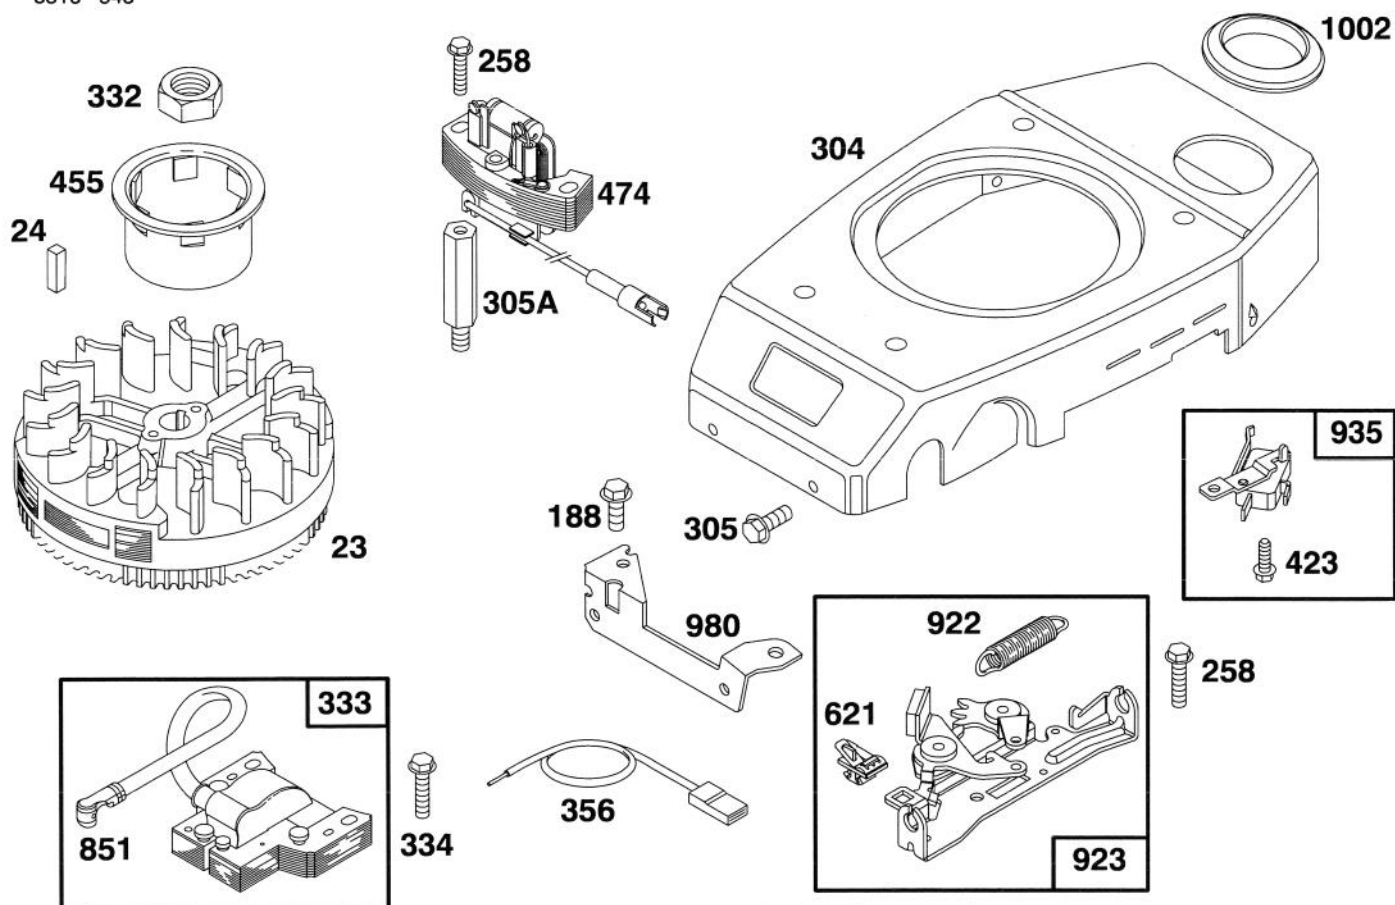


Assemblies include all parts shown in frames.

ENGINE GTS-150

Ref. No.	Part No.	Description	No. Used
23	77-8320	Flywheel	1
24	77-8340	Key - Flywheel	1
188	77-9360	Screw - Hex Head	1
258	77-8870	Screw - Hex Head	1
304	77-9480	Housing - Blower	1
305	77-8310	Screw - Hex Head	1
305A	77-8390	Stud	1
332	77-8360	Nut - Flywheel	1
333	77-8420	Armature - Magneto	1
334	77-7420	Screw - Armature Mtg.	1
356	77-8400	Wire - Ground	1

Ref. No.	Part No.	Description	No. Used
423	77-9520	Screw - Hex Head	1
455	77-8350	Cup - Starter	1
474	77-8370	Alternator	1
621	77-8010	Switch - Stop	1
851	77-9450	Terminal - Spark Plug	1
922	77-8860	Spring - Brake	1
923	77-9460	Brake Ass'y	1
935	77-9530	Switch - Starter	1
980	77-7140	Bracket - Blower Housing	1
1002	77-7180	Grommet	1

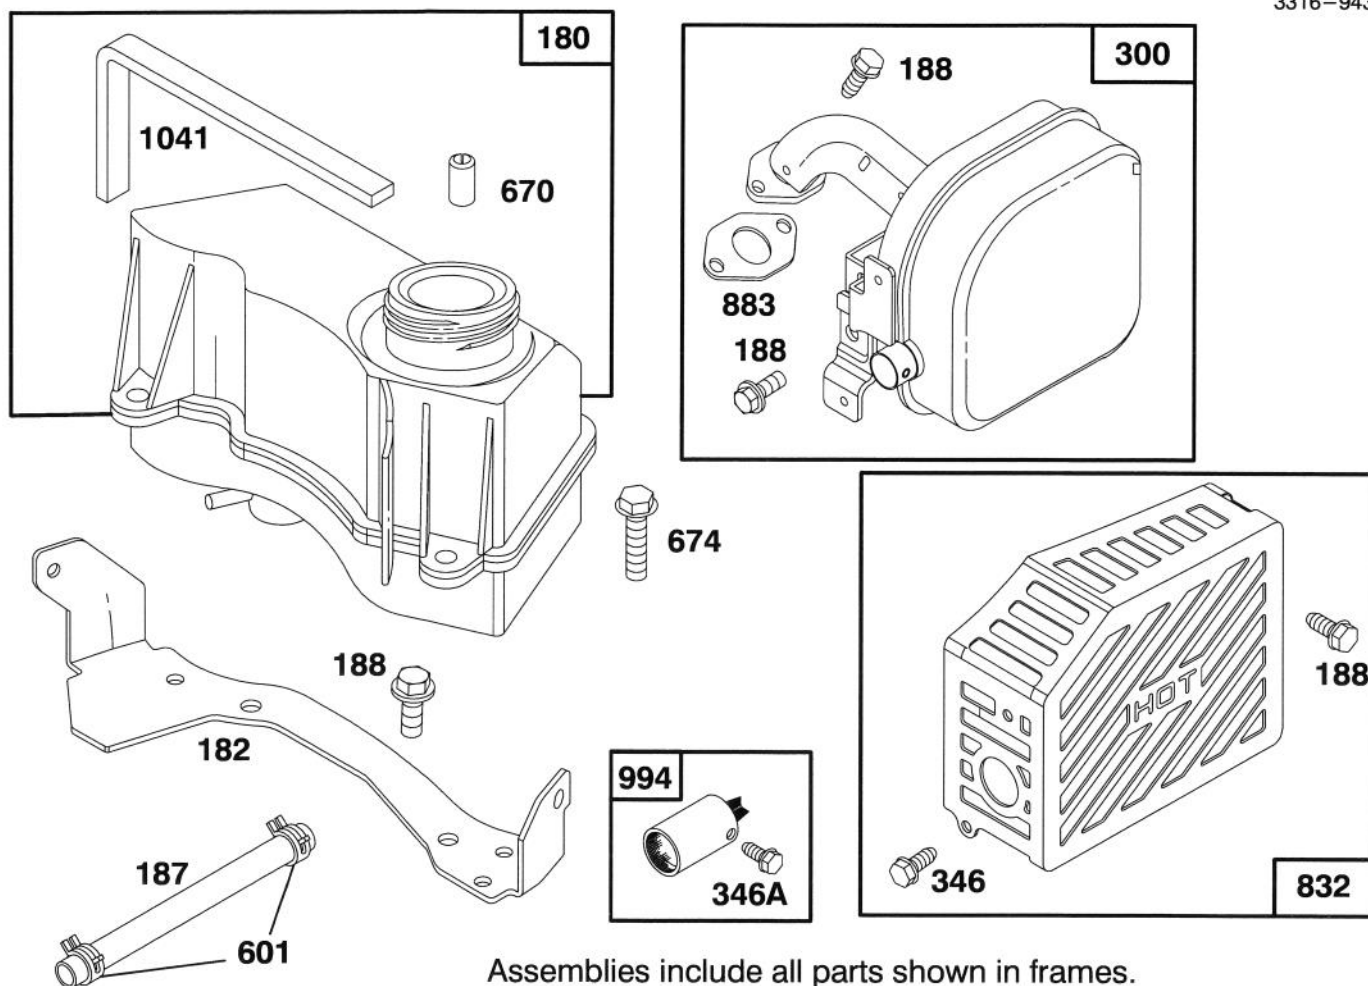


Assemblies include all parts shown in frames.

ENGINE GTS-150

Ref. No.	Part No.	Description	No. Used
180	77-7580	Tank Ass'y - Fuel	1
182	77-7170	Bracket - Fuel Tank	1
187	77-8620	Hose - Fuel (Cut To Suit)	1
188	77-9360	Screw - Hex Head	1
300	77-8640	Muffler - Exhaust	1
346	77-9430	Screw - Hex	1
346A	77-9050	Screw - Arrestor Mtg.	1

Ref. No.	Part No.	Description	No. Used
601	77-8630	Clamp - Fuel Hose	1
670	77-9030	Spacer - Fuel Tank (Includes 2)	1
674	77-8600	Screw - Tank Mtg.	1
832	77-8660	Guard - Muffler	1
★883	77-7760	Gasket - Exhaust	1
994	77-9040	Arrester - Spark	1
★1041	77-8590	Seal - Foam	1

★ Included in Gasket Set-Part No. 77-8900

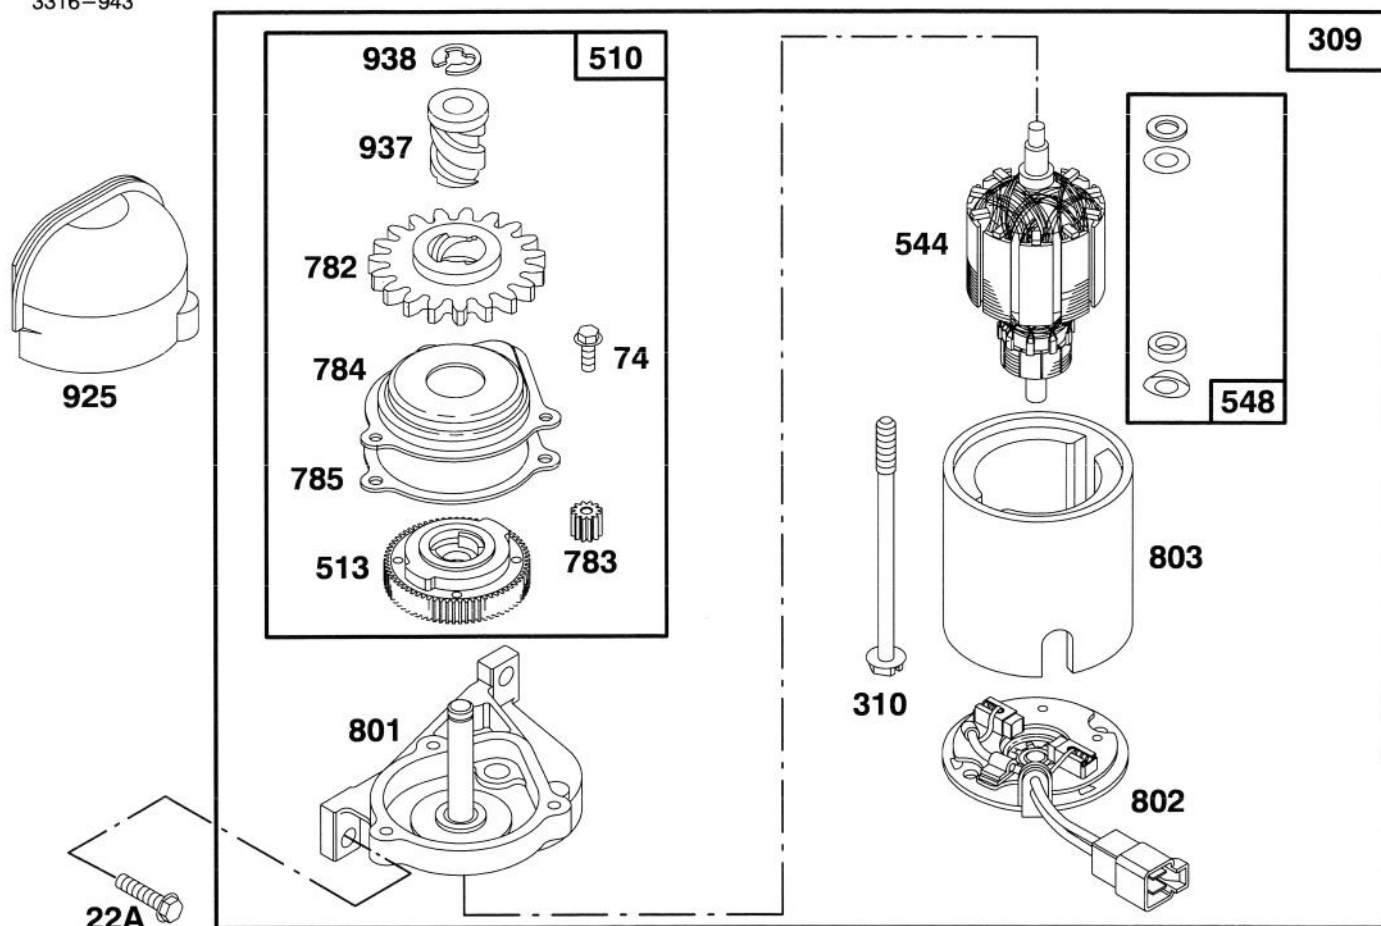




Assemblies include all parts shown in frames.

ENGINE GTS-150

Ref. No.	Part No.	Description	No. Used
22A	77-8720	Screw-Hex Head	1
74	77-8800	Screw-Hex Head	1
309	77-8670	Motor-Starter	1
310	77-8710	Screw-Hex Head	1
510	77-8910	Drive Kit	1
513	77-8770	Clutch Assembly	1
544	77-8730	Armature Assembly	1
548	77-8740	Washer Set	1
782	77-8810	Pinion-Starter	1

Ref. No.	Part No.	Description	No. Used
783	77-9540	Gear - Pinion	1
784	77-8780	Cover-Gear	1
785	77-8790	Gasket-Cover	1
801	77-8680	Bracket Assembly	1
802	77-8690	Head Assembly	1
803	77-8700	Shell and Magnet Ass'y	1
925	77-7200	Cover-Starter	1
937	77-8820	Spline-Starter	1
938	77-8830	Retainer-Lock	1

* Included in Gasket Set-Part No. 77-8900

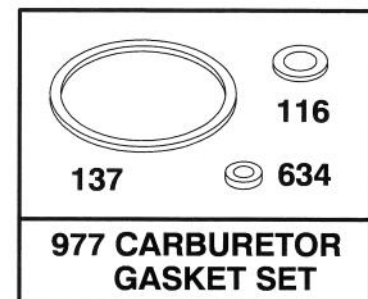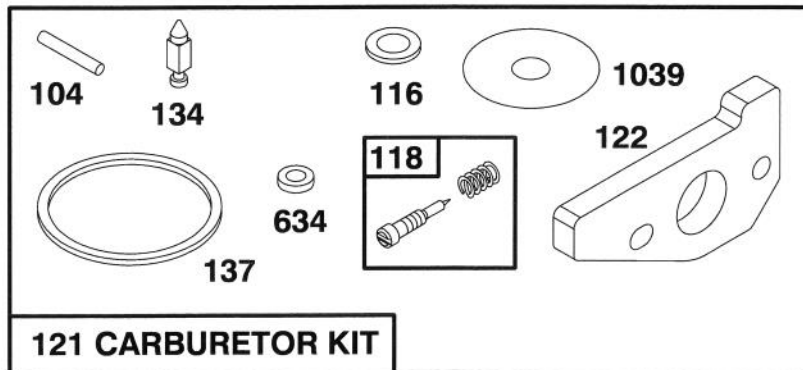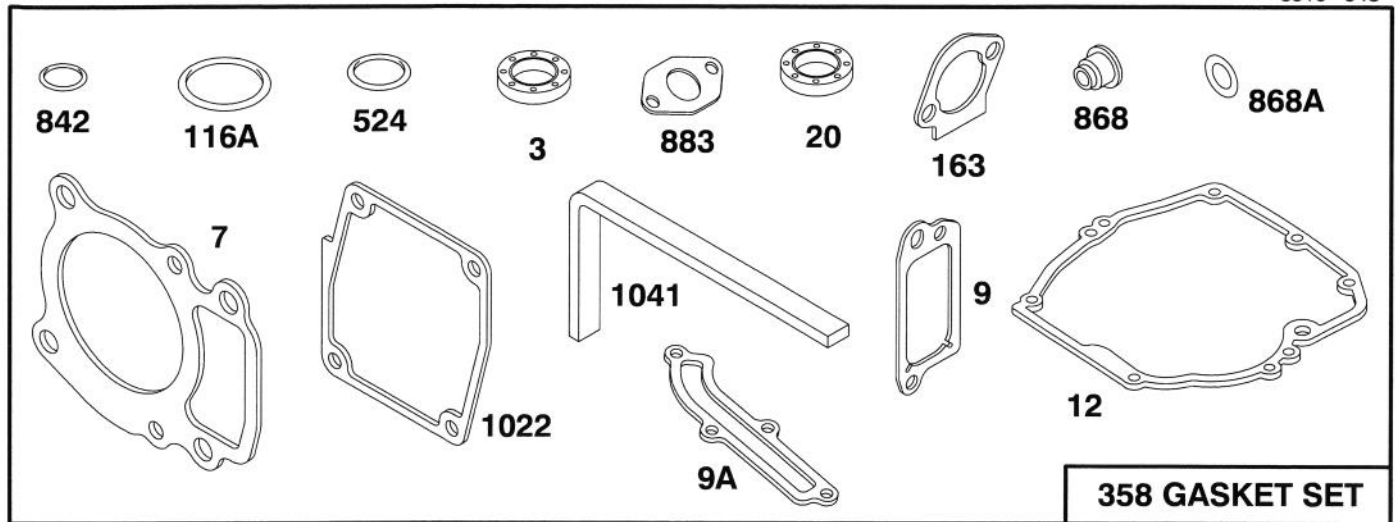

Assemblies include all parts shown in frames.

ENGINE GTS-150

Ref. No.	Part No.	Description	No. Used
★3	77-9060	Seal - Oil	1
★7	77-7740	Gasket - Cylinder Head	1
★9	77-9250	Gasket - Breather	1
★9A	77-7410	Gasket - Breather	1
★12	77-7550	Gasket - Engine Base	1
★20	77-7570	Seal - Oil	1
●104	77-8180	Pin - Float Hinge	1
●◆116	77-7660	Gasket - Sealing	1
★116A	77-8210	O-Ring	1
●118	77-8230	Valve and Spring - Needle	1
121	77-8920	Carburetor Kit	1
●122	77-7820	Adapter Assembly	1
●134	77-8110	Valve - Inlet (Includes Seat)	1

Ref. No.	Part No.	Description	No. Used
●◆137	77-8200	Gasket - Float Bowl	1
★163	77-7960	Gasket - Air Cleaner	1
358	77-8900	Gasket Set	1
★524	77-7270	Seal - O-Ring	1
◆634	77-8150	Washer - Seal	1
★842	77-7300	Seal - O-Ring	1
★868	77-7890	Seal Assy. - Valve	1
★868A	77-7900	Seal - Valve	1
★883	77-7760	Gasket - Exhaust	1
977	77-8930	Carburetor Gasket Set	1
★1022	77-7320	Gasket - Rocker Cover	1
●1039	77-7250	Limiter - Float	1
★1041	77-8590	Seal - Foam	1

● Included in Carburetor Kit - Part No. 77-8920

◆ Incl. in Carburetor Gasket Set - Part No. 77-8930

★ Included in Gasket Set - Part No. 77-8900

TORO PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
14-9949	Wheel & Tire Assembly	1 20 2	65-5210	Screw - Thread Forming	1 7 2
14-9959	Wheel Tire & Gear Assy.	4 31 2	65-5220	Screw - Cap Socket Hd.	1 26 2
16-1739	Panel - Control	6 18 1	65-5220	Screw - Socket Hd. Cap	4 36 2
16-1769	Housing - 53cm	1 4 1	65-5250	Clip - Spring	4 43 1
17-9426	Screw - Handle	7 1 2	65-5440	Spring Arm Assembly	4 4 2
19-4050	Knob - Handle Release	6 12 2	65-5660	Panel - Screen	1 2 1
22-4710	Charger - Battery (220V)	6 * 1	66-0020	Panel - Vertical	1 1 1
25-7740	Knob - Arm	4 3 2	66-0030	Bracket - Cable Support	3 5 1
25-7740	Knob - Arm	1 28 2	66-0210	V-Belt	4 13 1
26-0670	Bolt - Blade	3 8 1	66-0330	Support - Spacer	7 2 2
27-6231	Bolt - Wheel	1 22 2	66-0360	Cap - End	4 5 2
27-6231	Bolt - Wheel	4 33 2	66-0540	Arm - Spring Front	1 25 2
27-6250	Bushing - Wheel	1 21 4	66-0560	Screw - Shoulder	1 19 2
27-6250	Bushing - Wheel	4 32 4	66-0570	Guide - Belt	3 11 1
29-9570	Bushing - Yoke	4 38 1	66-0580	Arm - Pivot	2 30 2
36-4780	Washer - Thrust	4 44 1	66-0620	Retainer - Belt	1 16 1
36-4791	Washer - Thrust	5 48 2	66-0680	Decal - French Regulation	1 13 1
38-7820	Bearing - Ball	5 60 1	66-5350	Lever - Control	7 5 1
40-1940	Washer - Wheel Bolt	1 23 4	66-6040	Key - Rocking (R.H.)	4 * 1
46-5520	Lever - Traction	7 7 1	66-6050	Key - Rocking (L.H.)	4 27 1
46-5780	Switch - Starter	6 9 1	70-9760	Bushing - Sleeve	4 19 2
46-6432	Screw - Handle	7 9 1	71-0620	Cable - Traction	7 10 1
46-6435	Screw - Handle	7 14 1	71-0960	Support - Cable	7 8 1
46-8081	Guide - Rope	7 13 1	71-7900	Cap - Hinge Bolt L.H.	1 10 1
48-2060	Bearing - Needle	4 21 2	71-7910	Cap - Hinge Bolt R.H.	1 6 1
49-2040	Screw - Self Tapping	4 8 8	71-8090	Mount - Handle L.H.	6 13 1
52-7430	Control Bar Assembly	7 3 1	71-8100	Mount - Handle R.H.	6 14 1
55-3570	Gas Cap Assembly	3 4 1	71-8580	Spacer - Door	1 12 2
55-3760	Gear - Pinion 15T	5 49 1	71-9470	Door - Bag	8 3 1
55-3770	Gear - 49T (1st Gear)	5 58 1	71-9480	Handle - Door	8 2 1
55-3780	Gear - Pinion 20T	5 50 1	71-9640	Ramp - Discharge	1 27 1
55-3790	Gear - 44T (2nd Gear)	5 57 1	71-9650	Access - Cover	1 14 1
55-3800	Gear - Pinion 25T	5 51 1	71-9680	Bag - Grass 53cm	8 5 1
55-3810	Gear - 39T (3rd Gear)	5 56 1	71-9690	Handle	6 7 1
55-7520	Battery	6 15 1	71-9800	Door - Discharge	1 9 1
55-8180	Retainer - Battery	6 16 1	71-9840	Spring - Door	1 11 2
60-8710	Case - Gear (Upper)	5 61 1	71-9870	Decal - Deck 53cm	2 29 1
60-8730	Cover - Gear Case	5 46 1	71-9871	Decal - TORO	6 19 1
60-8750	Bushing - Intrmdt. Shaft	5 47 2	71-9920	Cover - Top	1 15 1
60-8770	Bushing - Output Shaft	5 45 1	71-9930	Frame - Grass Bag	8 4 1
60-8790	Sleeve - Gear	5 55 1	74-1660	Cover - Wheel	4 30 2
60-8800	Shaft - Intermediate	5 52 1	74-1671	Spacer - Wheel Cover	4 34 2
60-8810	Retainer - Shift Fork	4 39 1	76-0760	Key - Shift	4 41 2
60-8840	Pulley - Half	4 10 2	76-0770	Collar - Shift	4 42 1
60-8850	Bushing - Output Shaft	5 53 1	76-0780	Sleeve - Shift Key	4 40 1
60-8870	Yoke - Shift	4 37 1	76-0920	Lever - Shift	4 16 1
60-8890	Pinion - Bevel	5 59 1	76-2713	Control - Ground Speed	6 1 1
62-6660	Spacer	4 9 1	76-2930	Retainer - Cable	4 15 1
62-6673	Gear Case Assy. Complete	5 * 1	77-7120	Cover - Brake	3 18 1
62-7540	Retainer - Blade	3 7 1	77-8953	Engine	3 1 1
62-7550	Pulley - Engine	3 13 1	80-4791	Harness - Wire	6 10 1
62-7700	Blade - 21	3 10 1	86-7990	Screw - Clamp	3 16 1
63-8360	Key - Ignition	6 3 1	92-2289	Plate - TORO Logo	3 2 1
65-2720	Ring - Retaining	4 24 4	92-7857	Decal - Recoil	3 3 1
65-4710	Ring - Friction	4 25 2	92-9077	Decal - DIN	1 5 1
65-4720	Spring - Compression	4 29 2	93-0149	Decal - Instruction	6 8 1
65-4730	Washer - Thrust (Inner)	4 22 2	93-1111	Control - Throttle	6 6 1
65-4740	Washer - Thrust (Keyed)	4 23 4	93-1112	Cable - Brake	7 15 1
65-4750	Pinion	4 28 2	218-461	Nut - Lock	6 4 1
65-4760	Washer - Clutch	4 26 2	2210-249	Clamp - Throttle	3 15 1
65-4770	Shaft - Output	4 17 1	2210-316	Stop - Rope	3 17 1
65-5042	Pivot Arm Assembly	4 2 2	237-153	Seal - ORing	4 18 2
65-5190	Bracket - Belt Guide	4 7 1	302-56	Fitting - Grease	4 20 2
65-5200	Cover	3 12 1	321-3	Screw - Cap Hex. Hd.	7 6 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3316-943

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
322-29	Screw - Hex Hd. Cap	1 8 2	3296-42	Nut - Lock	7 4 3
3253-22	Washer - Blade	3 9 1	3296-58	Nut - Lock	7 12 2
3254-5	Washer - Lock	6 5 1	32104-76	Screw - Self Tapping	6 17 5
3256-22	Washer - Flat	7 11 1	32121-120	Pin - Coil	5 54 1
3256-24	Washer - Flat	4 12 1	32144-15	Screw - Hex Flange Hd.	1 18 1
3256-24	Washer - Flat	1 17 1	32144-70	Screw - Cap Hex. Hd.	1 3 6
3272-5	Pin - Cotter	4 14 1	32144-70	Screw - Hex Hd. Cap	3 6 7
3290-378	Tie - Cable	6 11 5	32144-70	Screw - Hex. Washer Hd.	4 1 3
3296-5	Nut - Lock	4 11 1	32144-102	Screw - Thread Forming	3 14 3
3296-6	Nut - Lock	1 24 4	32144-111	Screw - Index Hex Washer	8 1 5
3296-6	Nut - Lock	4 35 2			

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's

service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]