 





MODEL NO. 73401-4900001 & UP

PARTS
CATALOG

 WHEEL HORSE[®]
314-H Garden Tractor

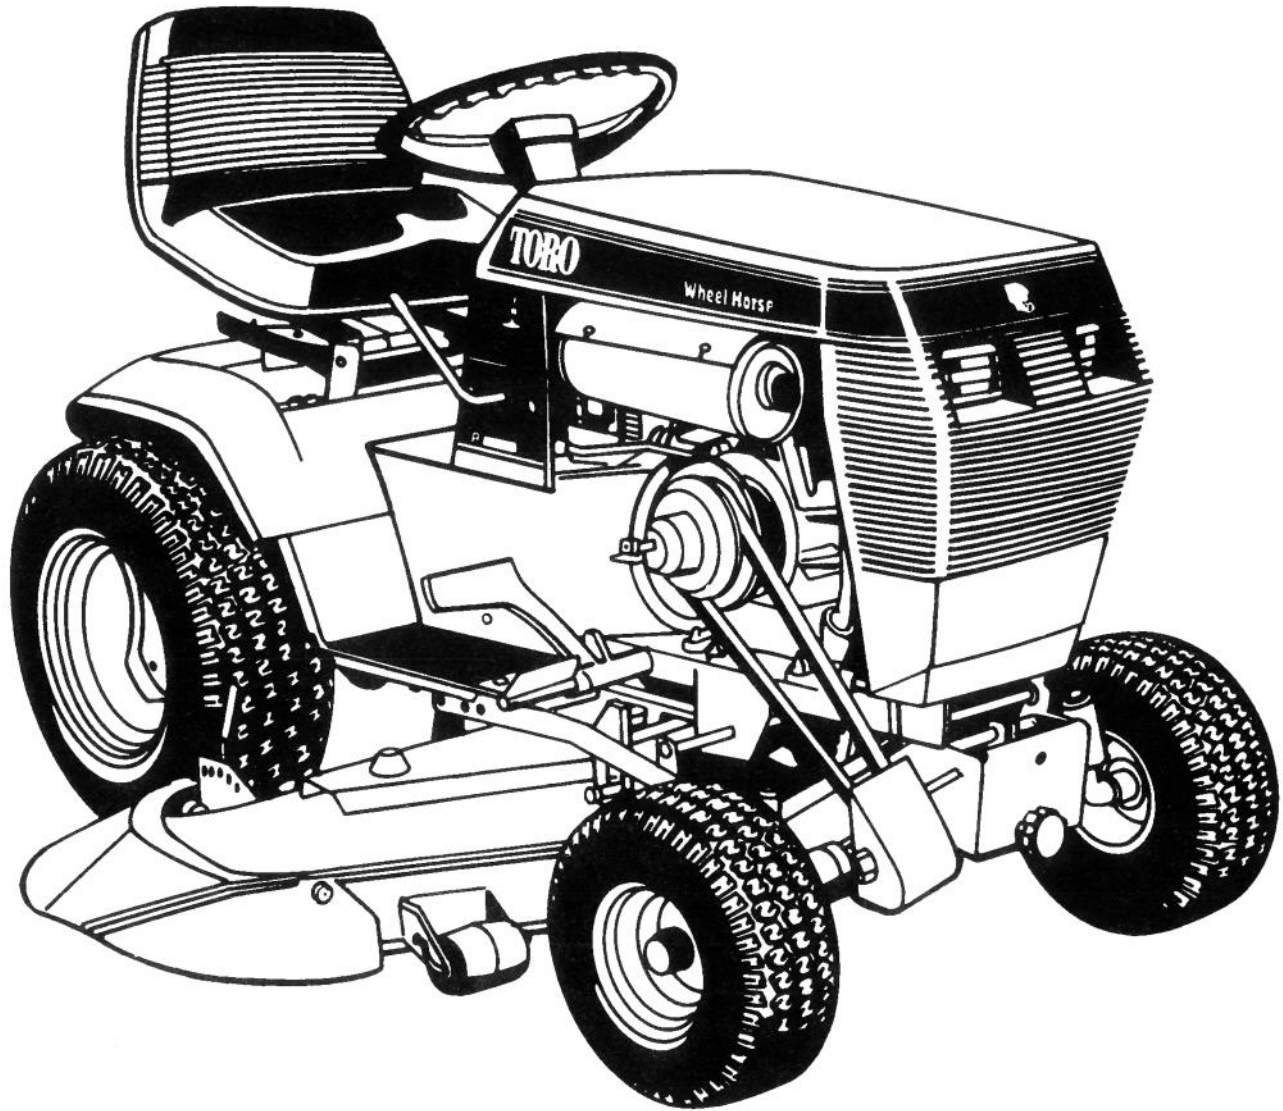

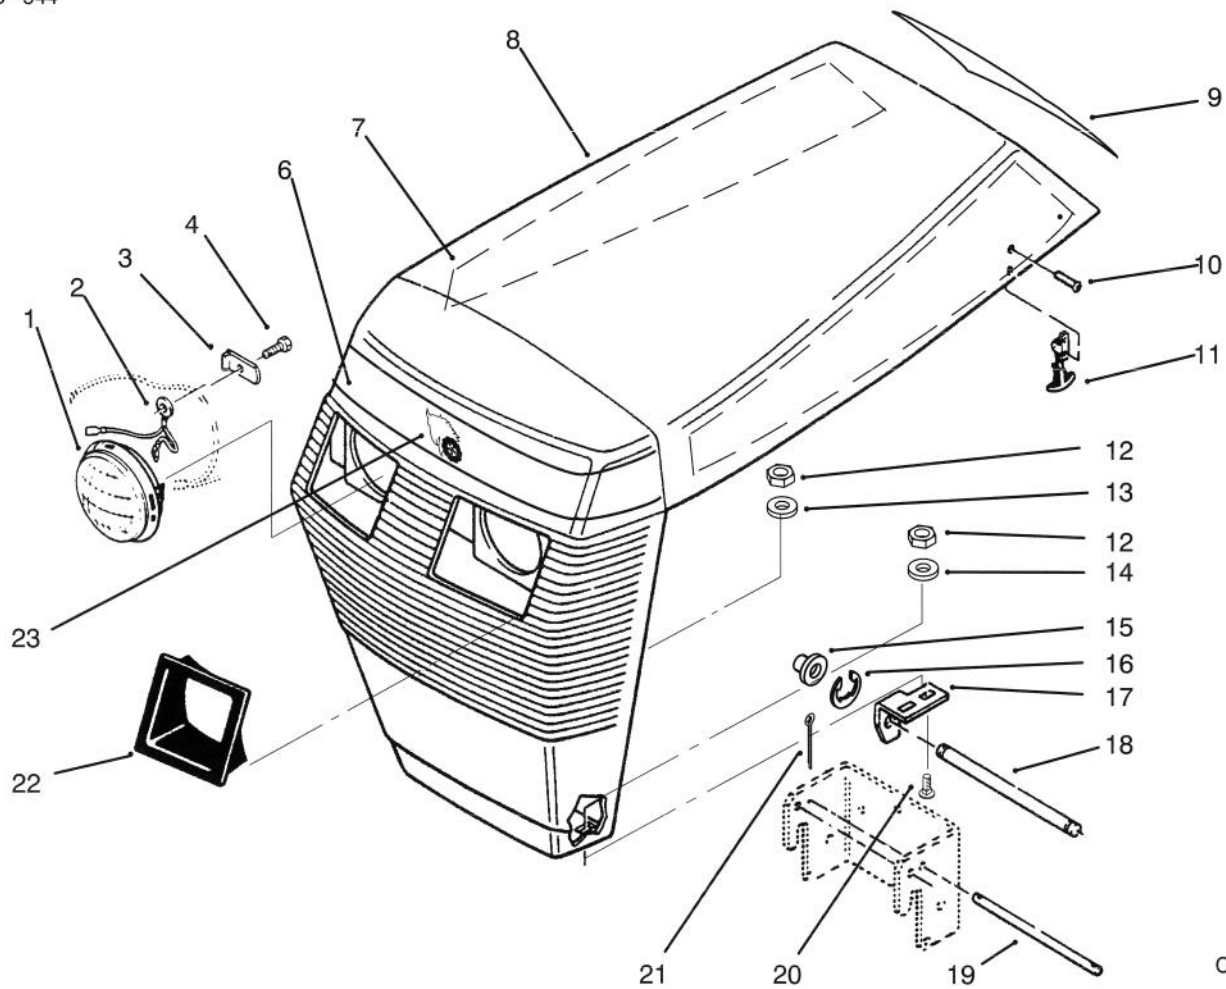


C-1481

HOOD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	102881	Headlight	2
2	108130	Wire - Headlight Ground	1
3	109459	Clamp	2
4	926671	Bolt	2
6	92-9826	Decal - Hood, Front	1
7	92-9825	Decal - Hood RH	1
*	92-9824	Decal - Hood LH	1
8	88-2782	Hood	1
9	92-9837	Decal - Danger (Incl. Ref. # 9)	1
10	117432	Rivet - Pop	4
11	117344	Handle Assembly	2
12	3296-42	Nut	4


Ref. No.	Part No.	Description	No. Used
13	3254-2	Washer - Intl. T	1
14	3256-22	Washer	3
15	5979	Bushing - Hood Pivot	2
16	105797	Ring - Retaining	2
17	116747	Bracket - LH	1
*	116746	Bracket - RH	1
18	116745	Rod - Pivot	1
19	101850	Rod - Hood Stop	1
20	3229-25	Bolt - Carriage	4
21	3272-1	Pin - Cotter	2
22	109495	Retainer - Headlight LH	1
*	109494	Retainer - Headlight RH	1
23	92-9836	Decal - Logo	1

 *Not Illustrated

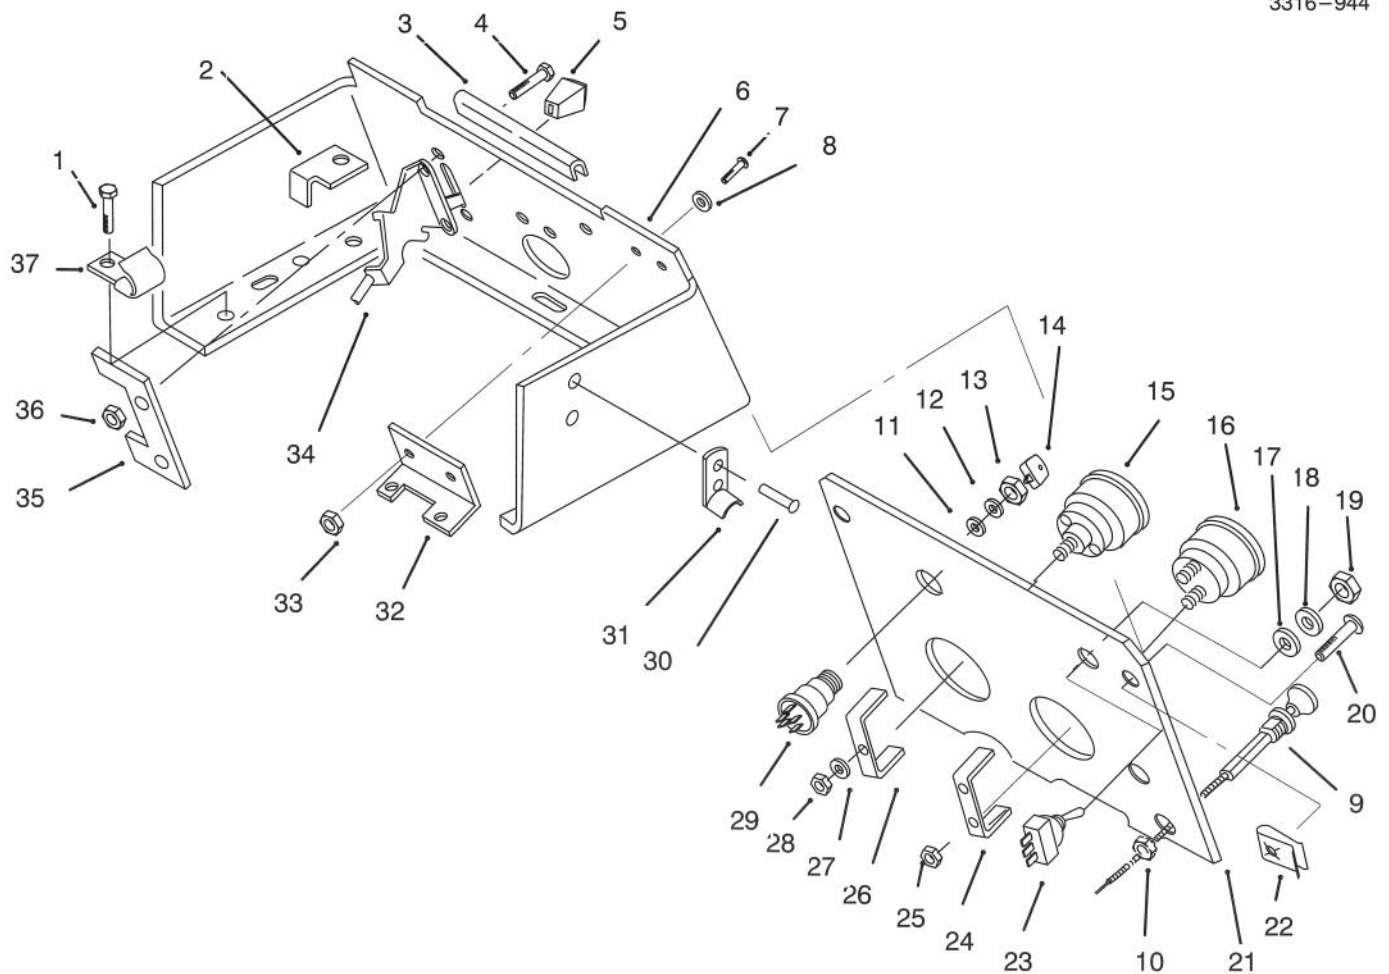

CONTROL PANEL

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	926694	Screw - Hex. Washer Hd.	3	20	910837	Screw	7
2	112415	Stop - PTO	1	21	78-5620	Plate - Hood Stand	1
3	111757	Edging - Console	1	22	8830	"J"Clip	2
4	910792	Screw	6	23	102138	Switch - Light (Incl. Ref. #17-19)	1
5	66-0120	Knob - Control	1	24	78-0080	Clamp - Volt Meter	1
6	78-5610	Console	1	25	5924	Nut	2
7	910762	Screw	2	26	78-3320	Clamp - Steel	1
8	920150	Washer - Lock	2	27	3255-25	Washer - Lock	1
9	112214	Control - Choke	1	28	3217-27	Nut - Hex	1
10	109530	Nut	1	29	116338	Switch - Ignition (Incl. Ref.#11-13)	1
11	920262	Washer - Special	1	30	117431	Rivet - Pop	4
12	920160	Washer - IntL. T	1	31	117343	Latch - Hood	2
13	101884	Nut - Special	1	32	112506	Bracket - Indicator Lights	1
14	62-7770	Key - Ignition, Padded	1	33	915960	Nut	2
15	78-0020	Meter - Hour (Incl. Ref.# 27-28)	1	34	115854	Control - Throttle	1
16	79-0060	Meter - Volt (Incl. Ref.# 24-25)	1	35	120590	Stop - Throttle	1
17	920259	Washer - Special	1	36	915740	Nut - Lock	2
18	102950	Ring - Retaining	1	37	111392	"J"Clip	1
19	113179	Nut	1				

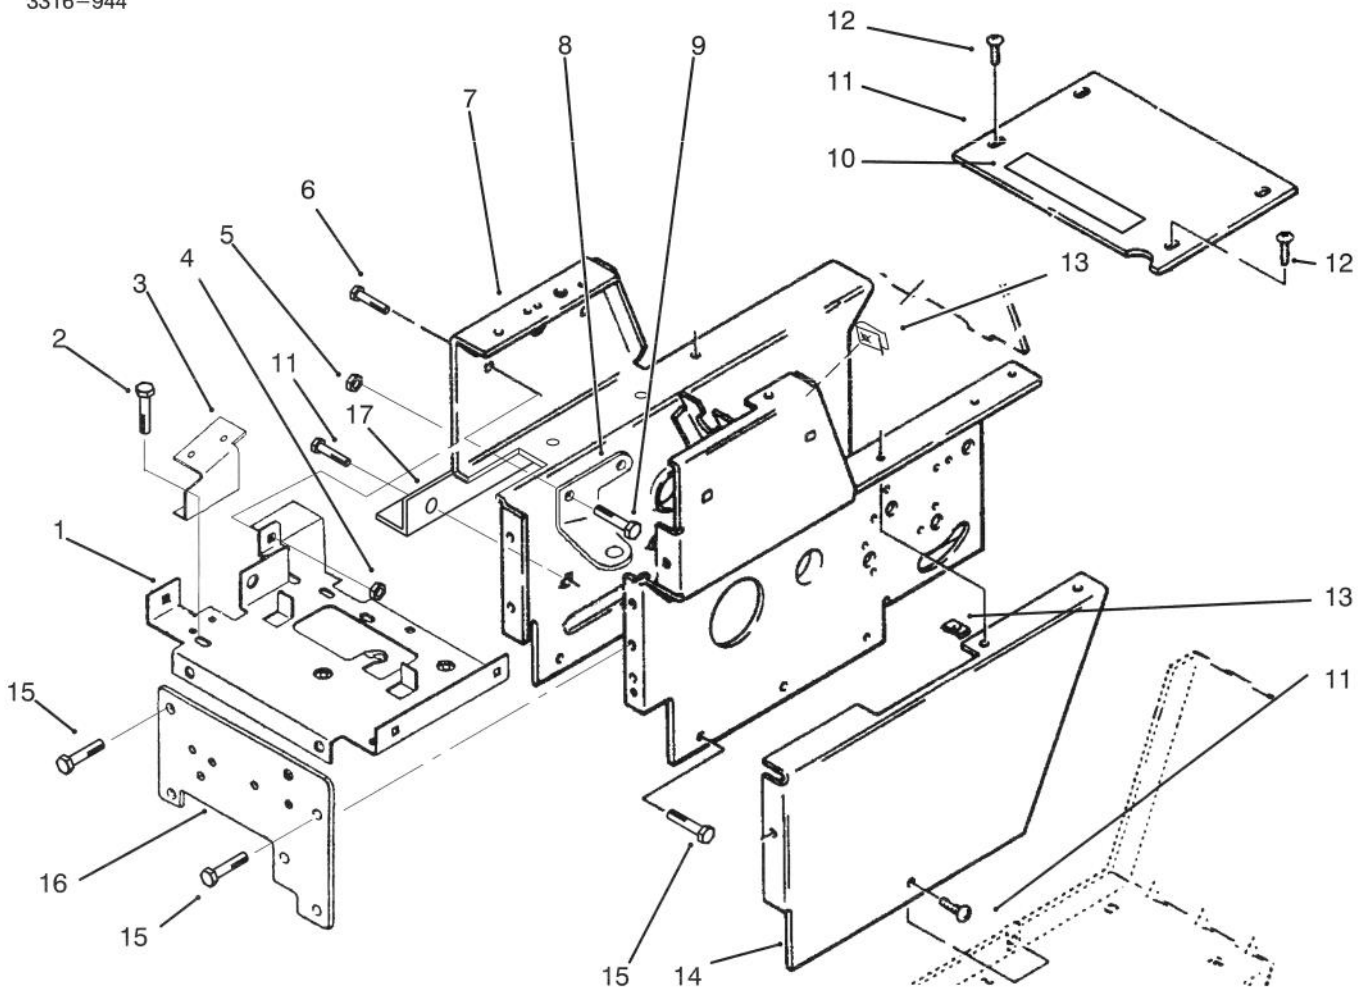 


HOOD STAND AND SUPPORTS

Ref. No.	Part No.	Description	No. Used
1	78-3010	Bracket - Battery Support	1
2	926671	Screw - Hex. Hd..	13
3	115411	Support - Switch	1
4	9151126	Nut	4
5	3296-29	Nut - Lock	2
6	117371	Bolt - Carriage	4
7	92-1525	Hoodstand	1
8	78-1540	Bracket - Lower Control	1
9	322-3	Screw - Hex. Hd.	2

Ref. No.	Part No.	Description	No. Used
10	92-8946	Decal - Danger	1
11	92-7294	Plate - Shift Cover (Incl. Ref.#10)	1
12	910837	Screw	7
13	107069	Nut - Speed	7
14	113935	Cover - Side, LH	1
15	926694	Screw - Hex. Hd.	11
16	78-3020	Plate - Front	1
17	106209	Angle - Belt Guard	1

 
*Not Illustrated

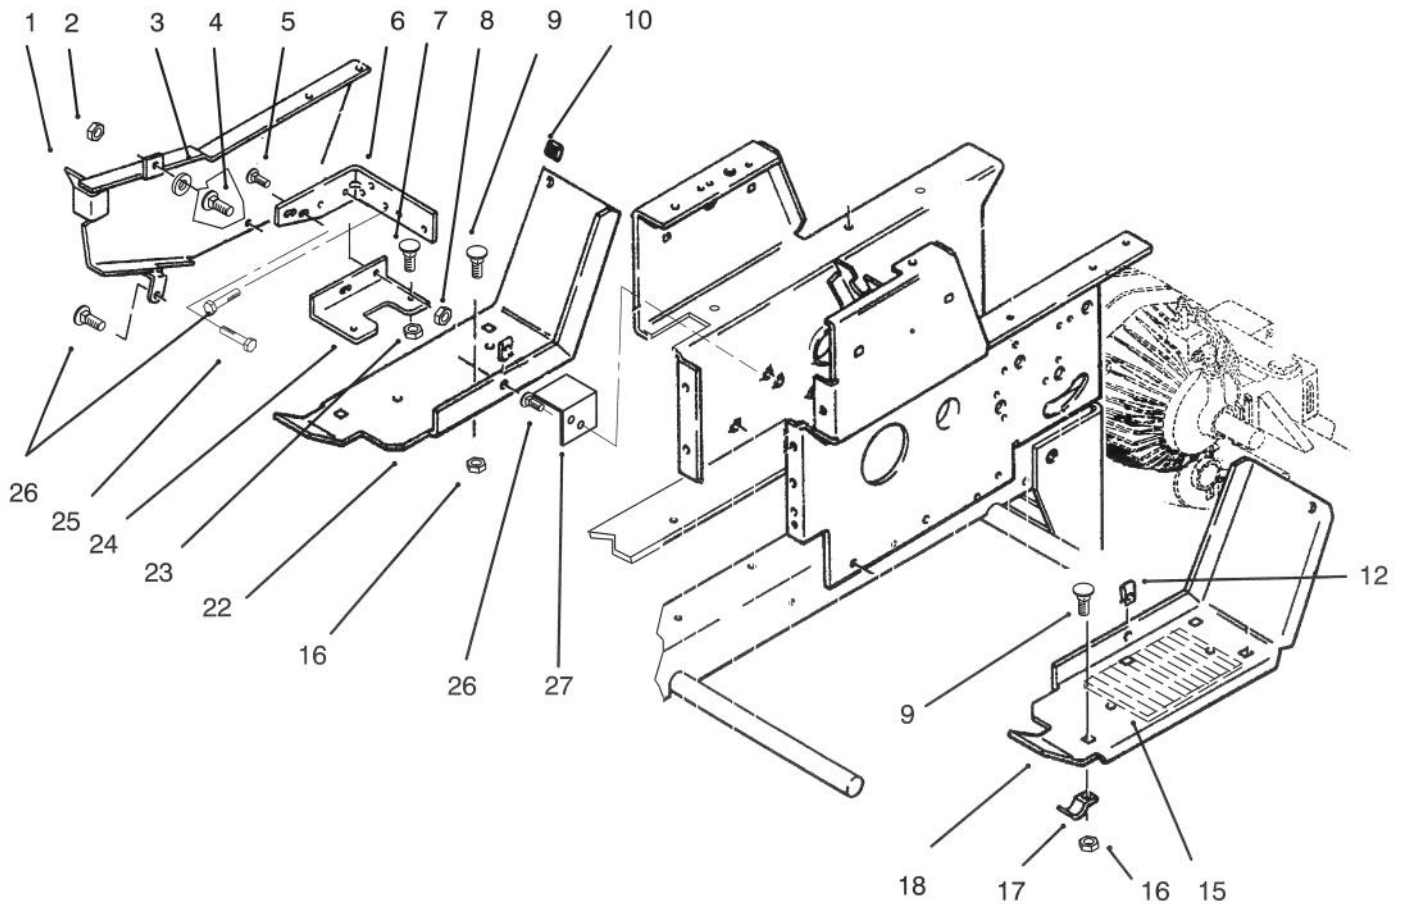

BELT GUARD & FOOTRESTS

Ref. No.	Part No.	Description	No. Used
1	107975	Belt Guard Asm	1
2	3296-29	Nut - Lock	7
3	108457	Nut - Push	1
4	910837	Bolt - Carriage	9
5	321-4	Bolt	2
6	109554	Bracket - Belt Guard	1
7	910794	Screw - Machine	2
8	3296-42	Nut	1
9	116000	Bolt - Carriage	6
10	518211	Bumper	2
12	107069	Clip	3

Ref. No.	Part No.	Description	No. Used
15	110636	Pad - Footrest	2
16	3296-29	Nut	11
17	7456	Clamp	4
18	106223	Footrest - LH	1
22	106222	Footrest - RH	1
23	915740	Nut	4
24	118280	Bracket - Fuse Holder	1
25	3230-1	Bolt	1
26	926694	Bolt	6
27	108537	Bracket Belt	1

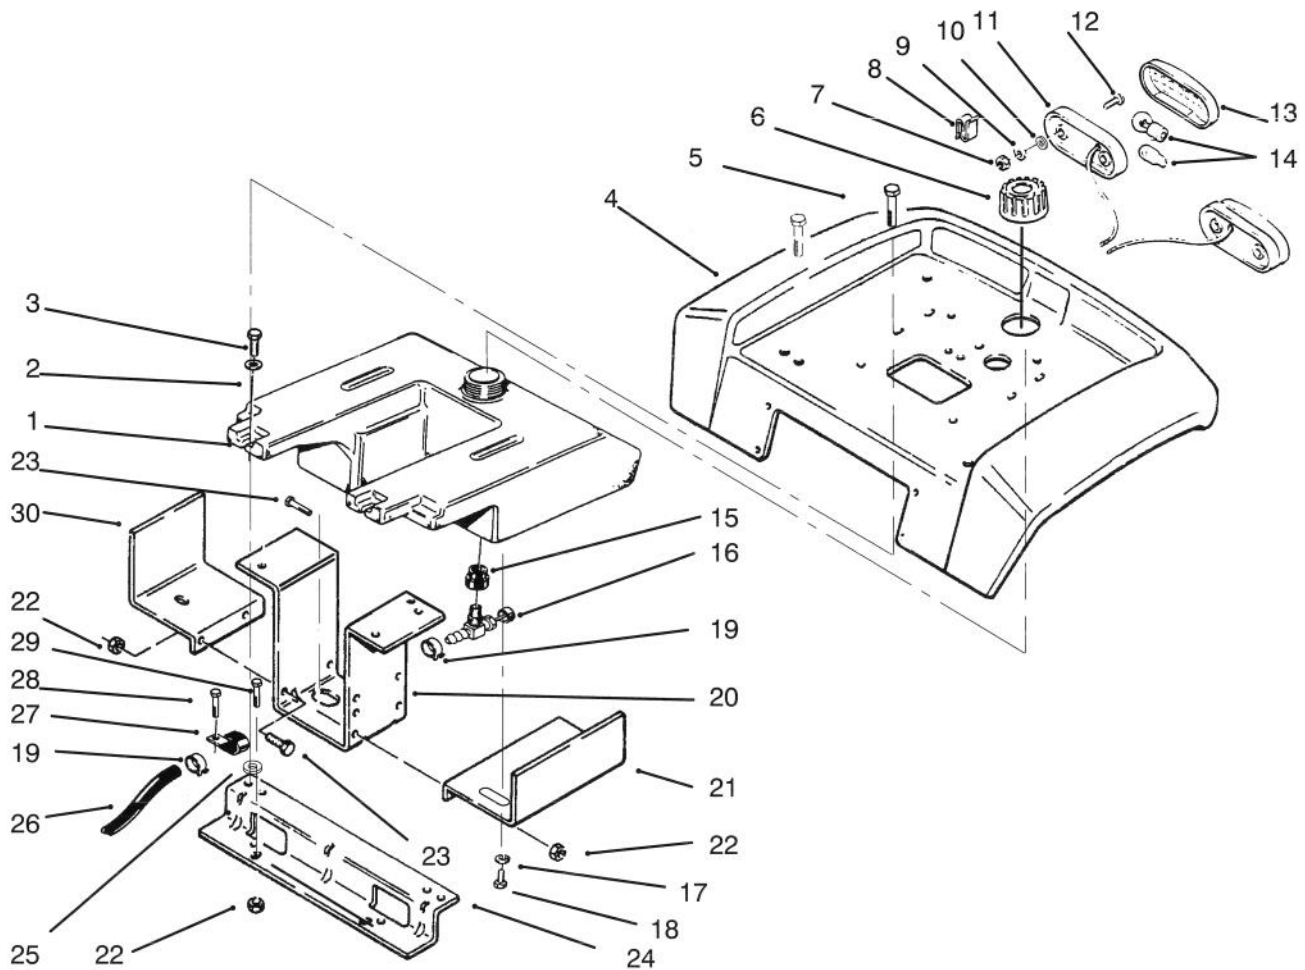 


FENDER, FENDER SUPPORTS AND FUEL TANK

Ref. No.	Part No.	Description	No. Used
1	106234	Tank - Fuel	1
2	3256-4	Washer	2
3	926697	Bolt	2
4	110960	Fender	1
5	926694	Bolt	2
6	55-3570	Fuel Cap	1
7	3296-27	Nut	4
8	3023	Clip - Small	1
9	3256-21	Washer	4
10	3254-1	Washer - Lock	4
11	105202	Base - Taillight, w/Bulb	2
12	910808	Screw	4
13	112564	Lens - Taillight	2
14	8043	Bulb - Light, Metal Base	2
*	109045	Bulb - Light, All Glass	2
15	104047	Bushing	1

Ref. No.	Part No.	Description	No. Used
16	104048	Valve - Fuel Shut-Off	1
17	3253-4	Washer - Lock	1
18	322-2	Bolt	5
19	2412-98	Clamp	2
20	79-4990	Bracket - Fender Support	1
21	108464	Support - Fuel Tank, LH	1
22	3296-29	Nut	6
23	322-3	Bolt	6
24	107951	Bracket - Fender Front	1
25	3256-23	Washer	2
26	92-9511	Line - Fuel 62"	1
27	8830	"J"Clip	1
28	3235-22	Screw - Hex. Hd.	1
29	322-5	Screw - Hex. Hd.	2
30	106236	Support - Fuel Tank, RH	1

 *Not Illustrated

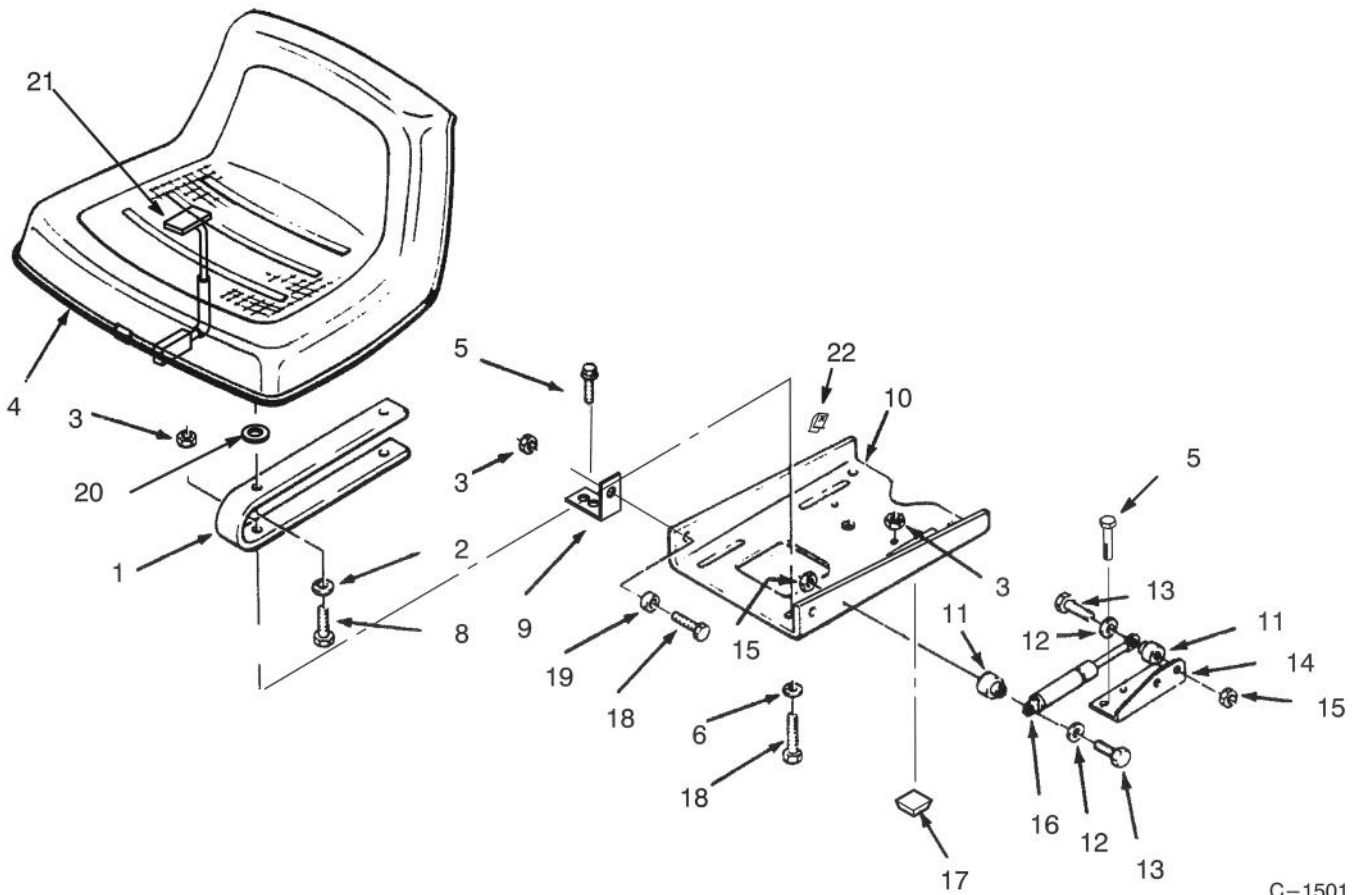

C-1501


SEAT

Ref. No.	Part No.	Description	No. Used
1	110920	Spring - Seat	2
2	3253-4	Washer - Lock	4
3	3296-29	Nut - Lock	6
4	78-0760	Seat	1
5	92-6697	Screw	4
6	3256-23	Washer	4
8	322-5	Screw - Hex. Hd.	4
9	105524	Bracket - Pivot	2
10	78-2990	Plate - Seat Pivot	1
11	114344	Spacer	2
12	3256-22	Washer	2

Ref. No.	Part No.	Description	No. Used
13	321-8	Screw - Hex. Hd.	2
14	114345	Bracket	1
15	3296-42	Nut - Lock	2
16	114343	Spring - Gas	1
17	111071	Bumper	2
18	322-4	Screw - Hex. Hd.	6
19	105503	Bushing	2
20	109989	Spacer	4
21	38-1420	Switch - Seat	1
22	3023	Clip - Speed	1

*Not Illustrated

 
FRONT AXLE AND STEERING

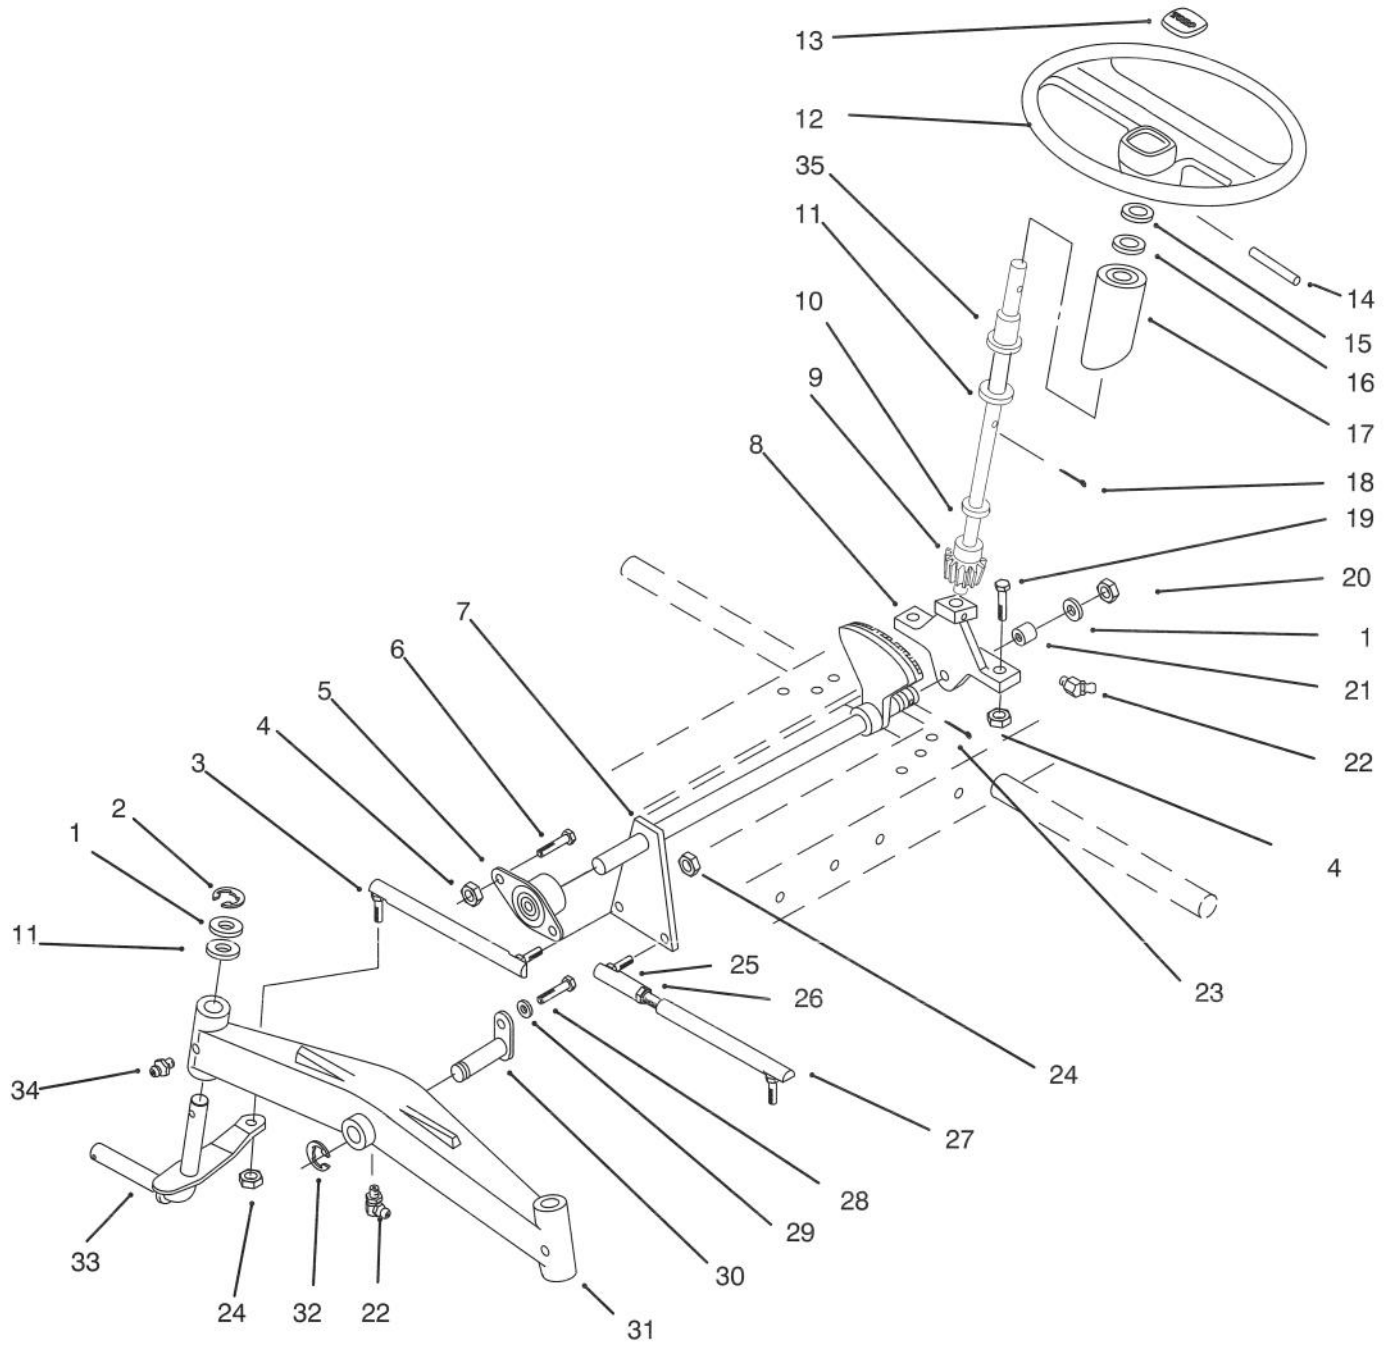

FRONT AXLE AND STEERING

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	1278	Washer – Shim	3	19	323-8	Bolt	2
2	32120-93	Ring – Retaining	2	20	32136-5	Nut – Slotted	1
3	102592	Tie Rod Asm, RH	1	21	6397	Bearing	1
4	3296-39	Nut – Lock	4	22	1481	Fitting – Grease, 45°	2
5	6472	Bearing – Flanged	1	23	3272-19	Pin – Cotter	1
6	323-6	Bolt	2	24	3296-6	Nut	4
7	78-2880	Shaft – Lower	1	25	78-2920	Tie Rod End	1
8	88-2710	Support – Steering Shaft	1	26	3219-3	Nut	1
9	92-4987	Shaft – Upper	1	27	78-2900	Tie Rod Assembly, LH (Incl. Ref. # 25 & 26)	1
10	237-69	"O"Ring	1	28	322-1	Bolt	1
11	5210	Washer – Shim	A/R	29	3253-4	Washer – Lock	1
12	76-1420	Steering Wheel (Incl. Ref. #13)	1	30	6216	Pin & Plate	1
13	78-0370	Insert	1	31	5638	Axle	1
14	32121-111	Pin – Spirol	1	32	5618	Ring – Retaining	1
15	7896	Washer – Bowed	1	33	113381	Spindle – LH	1
16	109262	Washer – Special	2	*	113382	Spindle – RH	1
17	113443	Tube – Steering	1	34	302-5	Fitting – Grease, Straight	2
18	3272-21	Pin – Cotter	1	35	109189	Bearing	1

 *Not Illustrated

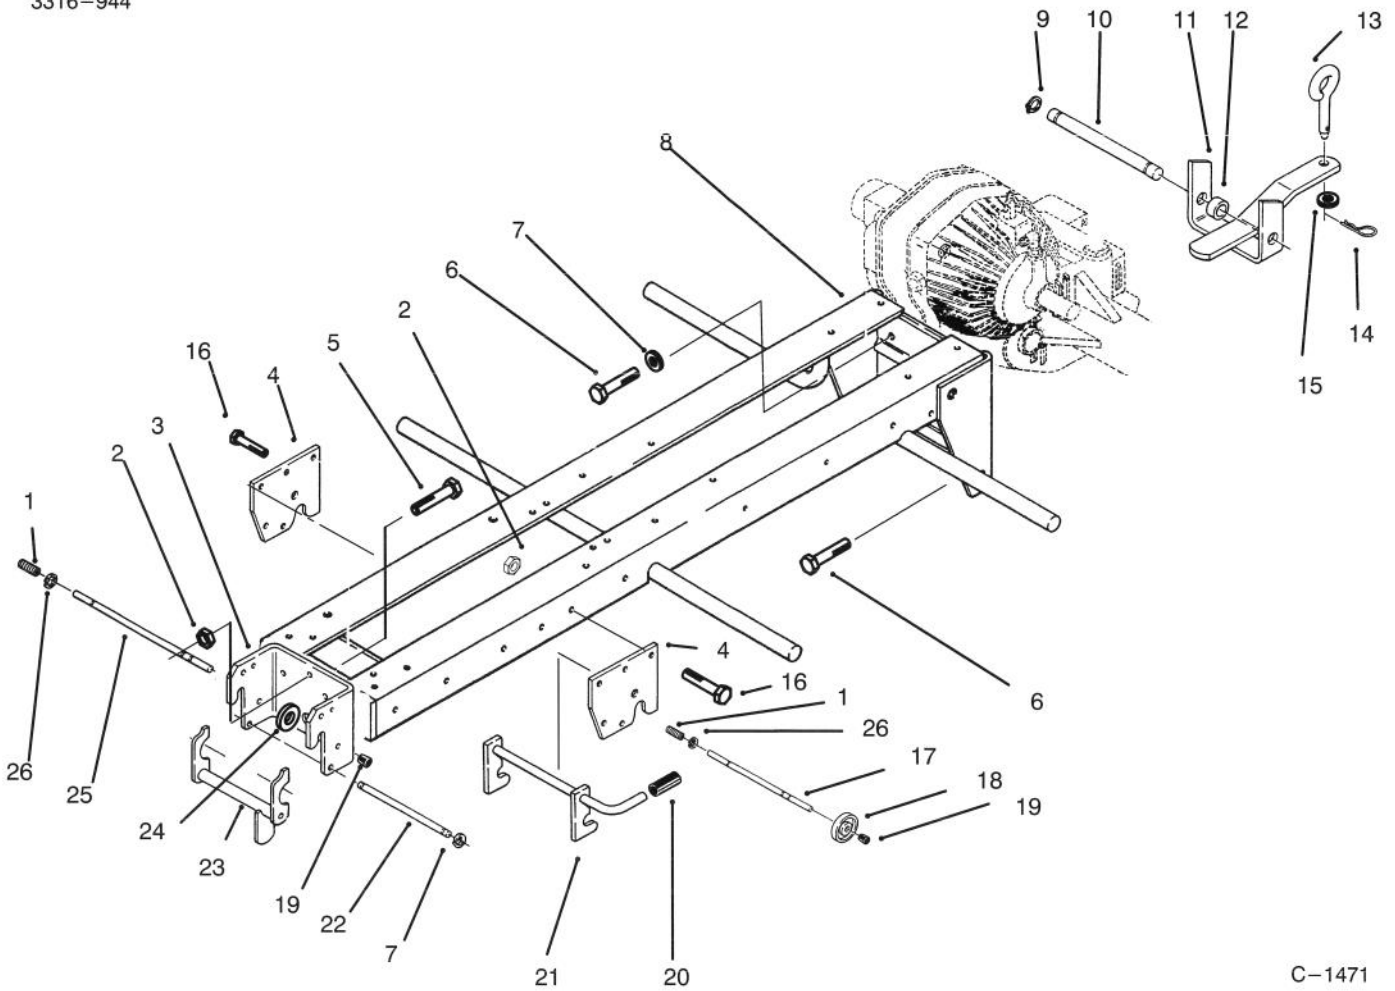


C-1471

FRAME & HITCHES

Ref. No.	Part No.	Description	No. Used
1	8616	Spring	2
2	3296-39	Nut	9
3	101711	Housing - Front Hitch	1
4	102644	Plate - Mid Hitch	2
5	3231-25	Bolt - Carriage	3
6	323-5	Bolt	4
7	3253-21	Washer - Lock	4
8	78-2680	Frame	1
9	5618	Ring - Retaining	2
10	105269	Shaft - Drawbar Hitch	1
11	1644	Hitch - Drawbar	1
12	979120	Spacer	2
13	106634	Pin - Hitch	1


Ref. No.	Part No.	Description	No. Used
14	933505	Pin - Cotter	1
15	3256-26	Washer - Flat	1
16	323-44	Screw - Hex. Hd..	6
17	101017	Rod - Mid Hitch Lock	1
18	83-6520	Rod - Lock	1
19	105316	Cap - Lock Rod	2
20	9038	Grip	1
21	117930	Latch - Mid Hitch	1
22	101750	Rod - Pivot Latch	1
23	93-1613	Latch - Front Hitch	1
24	101707	Lock - Attachment	1
25	101751	Rod - Lock	1
26	105797	Ring - Retaining	6

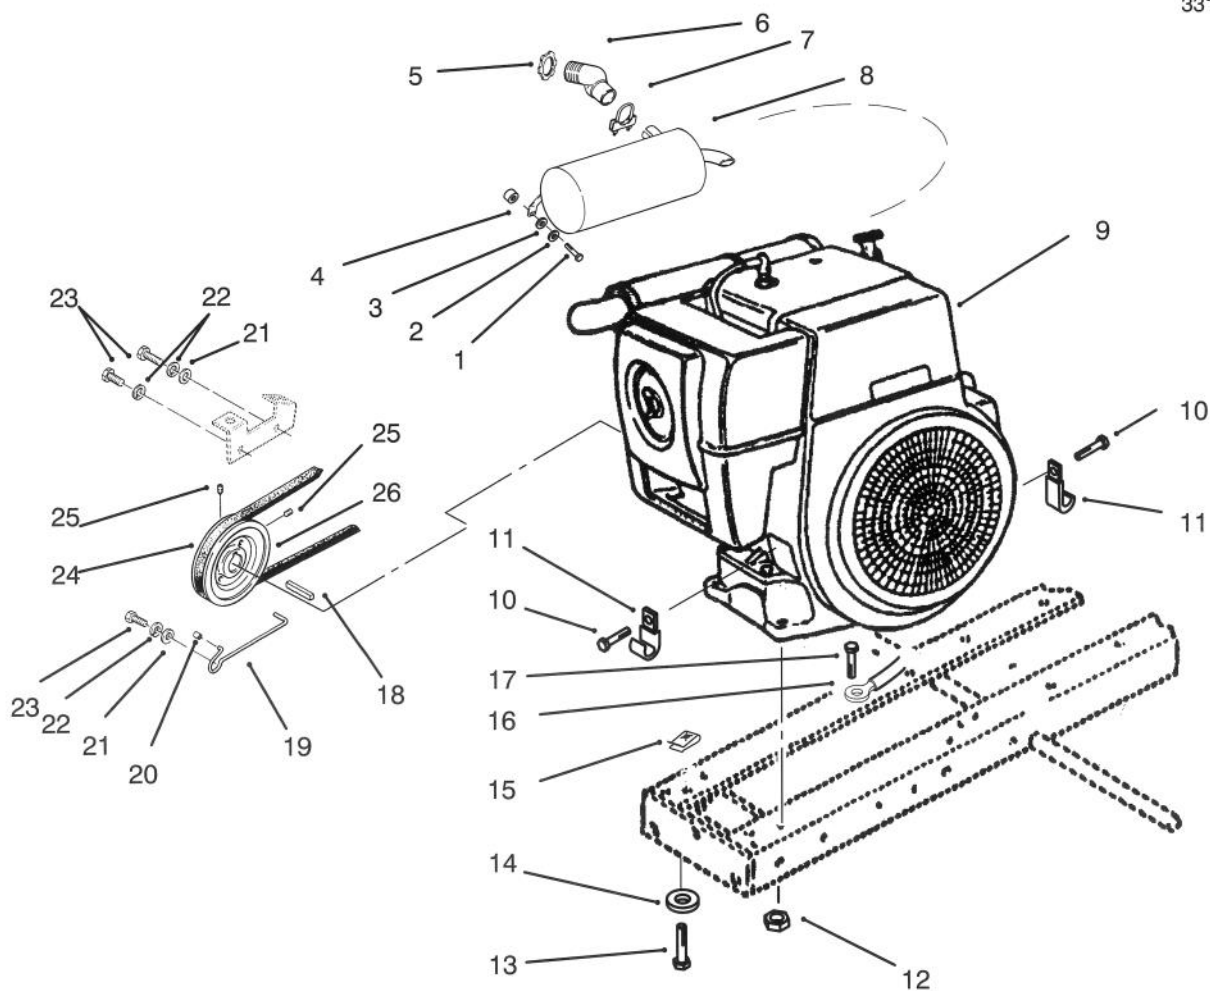 

ENGINE, MUFFLER, PULLEY & DRIVE BELT

Ref. No.	Part No.	Description	No. Used
1	322-7	Bolt	1
2	3253-4	Washer	1
3	3256-23	Washer	1
4	6876	Spacer	1
5	KH10535	Nut - Lock	1
6	KH10278	Elbow	1
7	106858	Clamp	1
8	112213	Muffler	1
9	92-1532	Engine - 14HP Kohler	1
10		Screw (Engine) Ref	
11	8830	"J"Clip	1
12	3296-39	Nut	2
13	323-6	Bolt	2

Ref. No.	Part No.	Description	No. Used
14	3253-21	Washer - Lock	1
15	3023	Clip - Wire	1
16	109910	Wire - Ground	1
17	323-8	Bolt	2
18	105453	Key	1
19	111242	Guide - Belt, Bottom	1
20	112841	Cap	1
21	3256-25	Washer	3
22	3253-6	Washer - Lock	3
23	324-5	Bolt	3
24	108501	Belt - Drive	1
25	3246-2	Screw - Set	2
26	7443	Pulley - Engine Drive	1

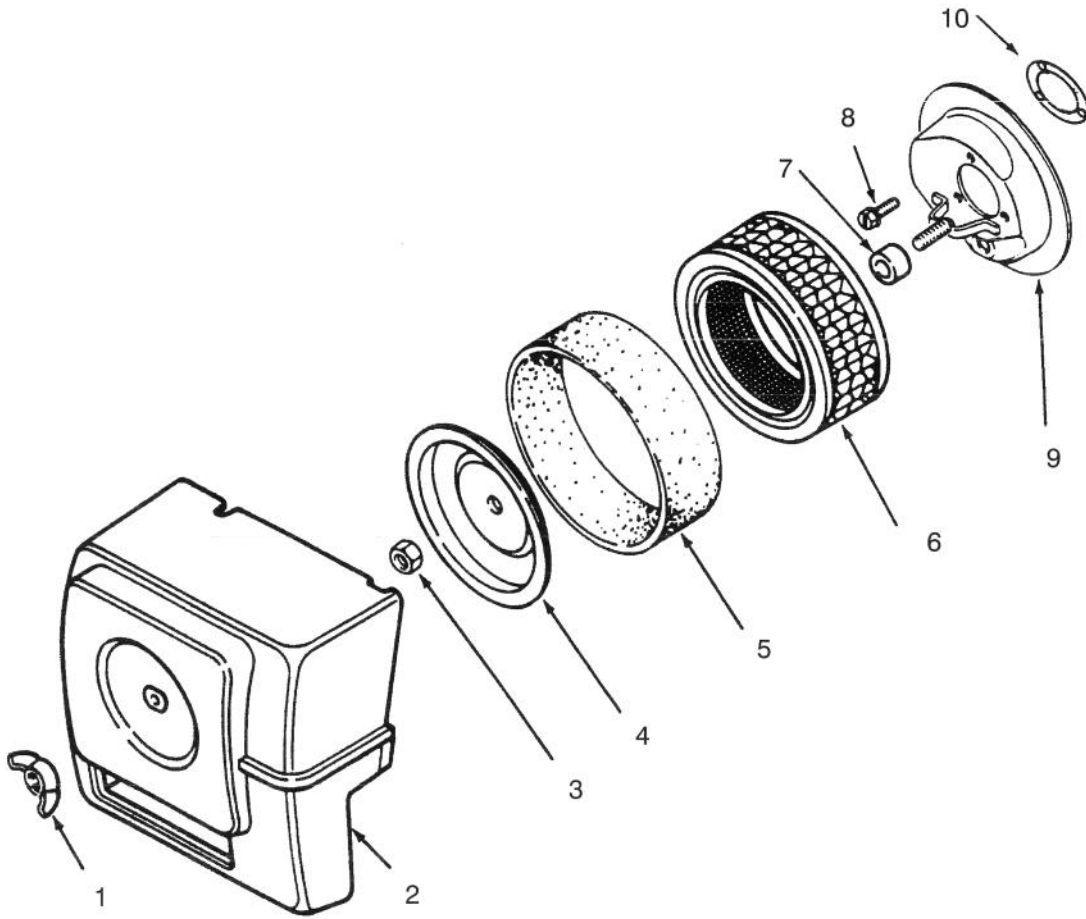 


C-1482

AIR INTAKE

Ref. No.	Part No.	Description	No. Used
1	KH10576	Nut – Wing	1
2	KH10299	Cover	1
3	KH10189	Nut	1
4	KH10412	Cover – Air Cleaner Element	1
5	KH10235	Element – Precleaner	1
6	KH10236	Element	1

Ref. No.	Part No.	Description	No. Used
7	KH10034	Seal	1
8	KH10609	Screw	3
9	KH10297	Base – Air Cleaner	1
10	KH10697	Gasket	1
*	KH10191	Decal – Air Cleaner	1

 
*Not Illustrated

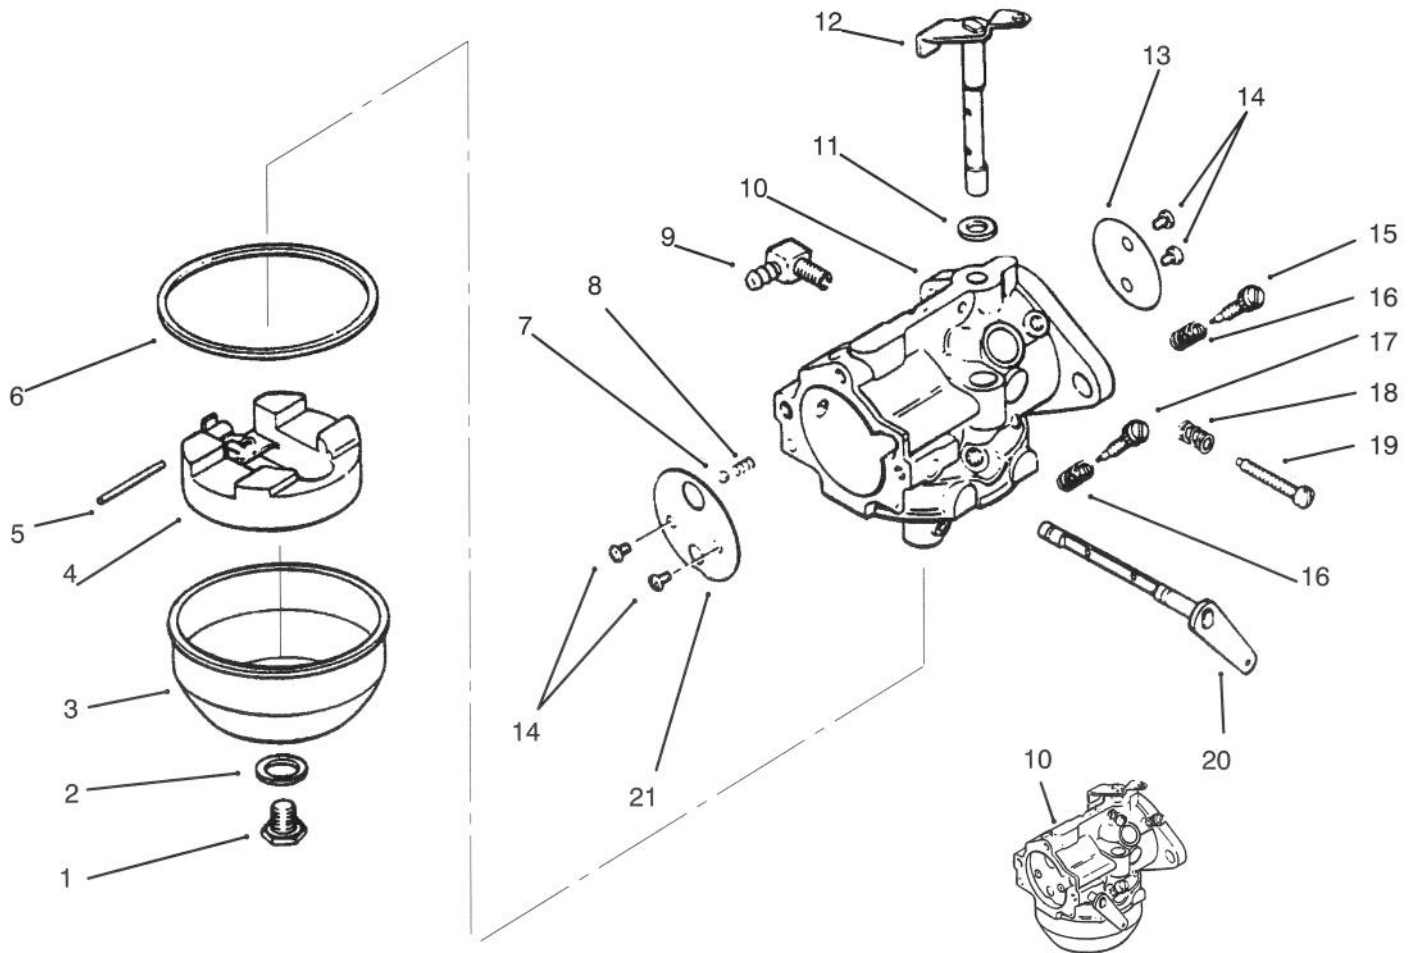

CARBURETOR

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	KH10116	Screw	1		KH10146	Gasket - Carburetor	
2	KH10093	Gasket	1		KH10733	Gasket	
3	KH10117	Bowl - Fuel	1		KH10093	Gasket - Bowl Screen	
4	KH10663	Kit - Float (Incl. Ref.#5)	1		KH10094	Gasket - Bowl	
5		Pin - Float	1		KH10677	Gasket - Air Cleaner	
6	KH10094	Gasket	1		KH10697	Gasket	
7	KH10128	Ball	1		KH10274	Gasket - Carburetor	
8	KH10113	Spring	1	*	KH10358	Kit - Choke & Throttle Repair	1
9		Connector 90°	1	*	KH10710	Kit - High Altitude Jet (Includes	
10	92-7252	Carburetor Assembly (Complete)	1		KH10682	Bushing	
11		Seal	1		KH10709	Jet - Main	1
12	92-7256	Shaft w/Lever & Seal (Incl. Ref# 11)	1	*	92-7251	Kit - Carburetor w/Linkage (Includes	
13	92-7257	Plate - Throttle	1		KH10682	Bushing &	
14	KH10110	Screw	4		KH10709	Main Jet	1
15	KH10132	Needle - Idle Fuel Adj.	1	*	KH10693	Kit - Adjustable Jet w/Linkage (Includes	
16	KH10112	Spring - Idle Fuel	1		KH10701	Carburetor Linkage	
17	KH10694	Main - Needle	1		KH10682	Bushing - Linkage Natural	
18	KH10114	Spring - Adj.	1		KH10686	Bushing Linkage Black	
19	KH10109	Screw - Idle Speed Adj.	1		KH10697	Gasket - Air Cleaner	
20	KH10702	Shaft - Choke	1		KH10693	Carburetor Assembly	
21	92-7255	Plate - Choke	1		KH10146	Gasket	
*	KH10696	Kit - Carburetor Repair (Includes			KH10274	Gasket	1
	KH10009	Gasket - Flange					

 
*Not Illustrated

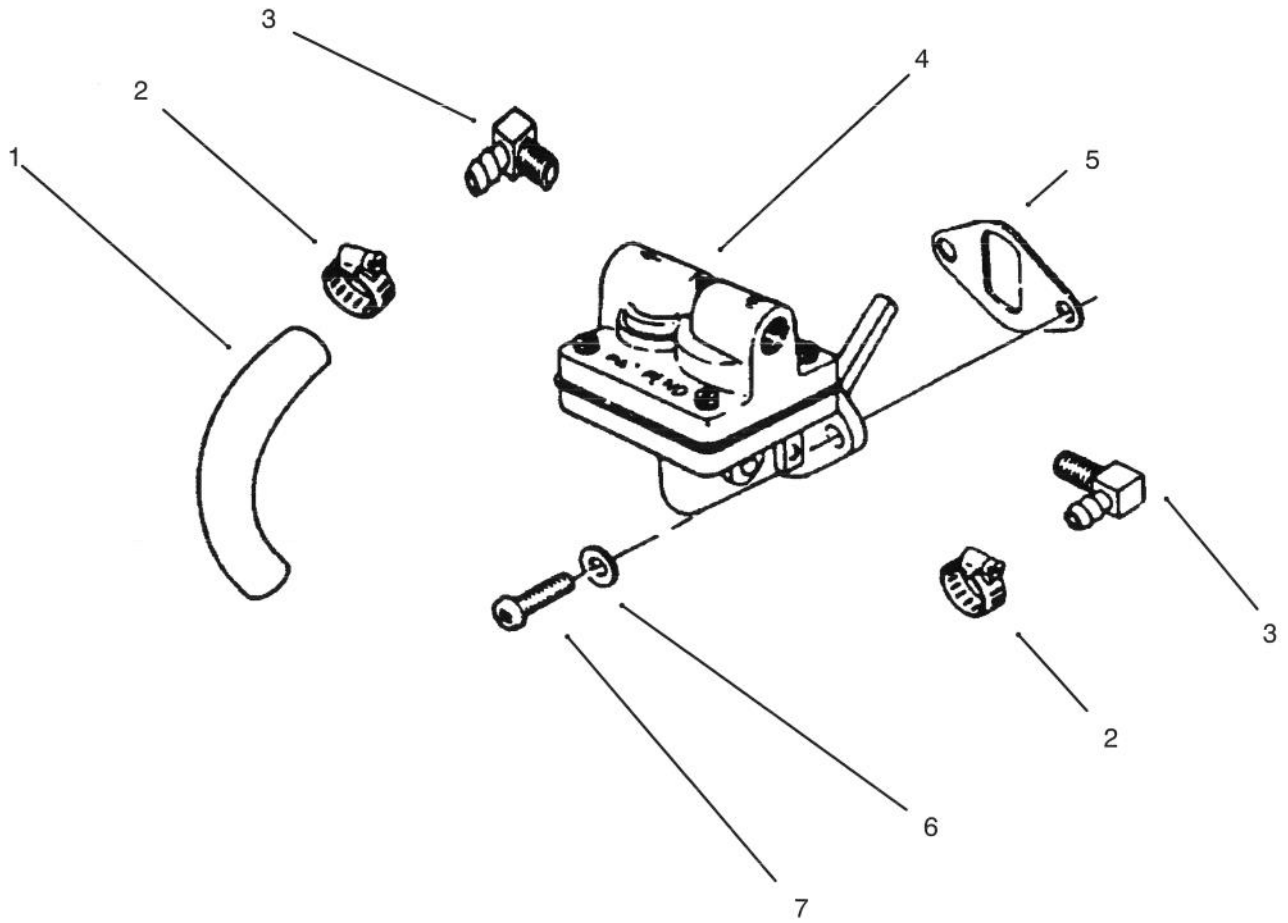

FUEL PUMP

Ref. No.	Part No.	Description	No. Used
1	KH10130	Line - Fuel	1
2	KH10586	Clamp	2
3	KH10123	Connector - 90°	2
4	KH10319	Pump Assy - Fuel (Incl. Ref.#5 &7)	1


Ref. No.	Part No.	Description	No. Used
5	KH10095	Gasket	1
6	KH10569	Washer	2
7	KH10552	Screw - Pozidrive	2

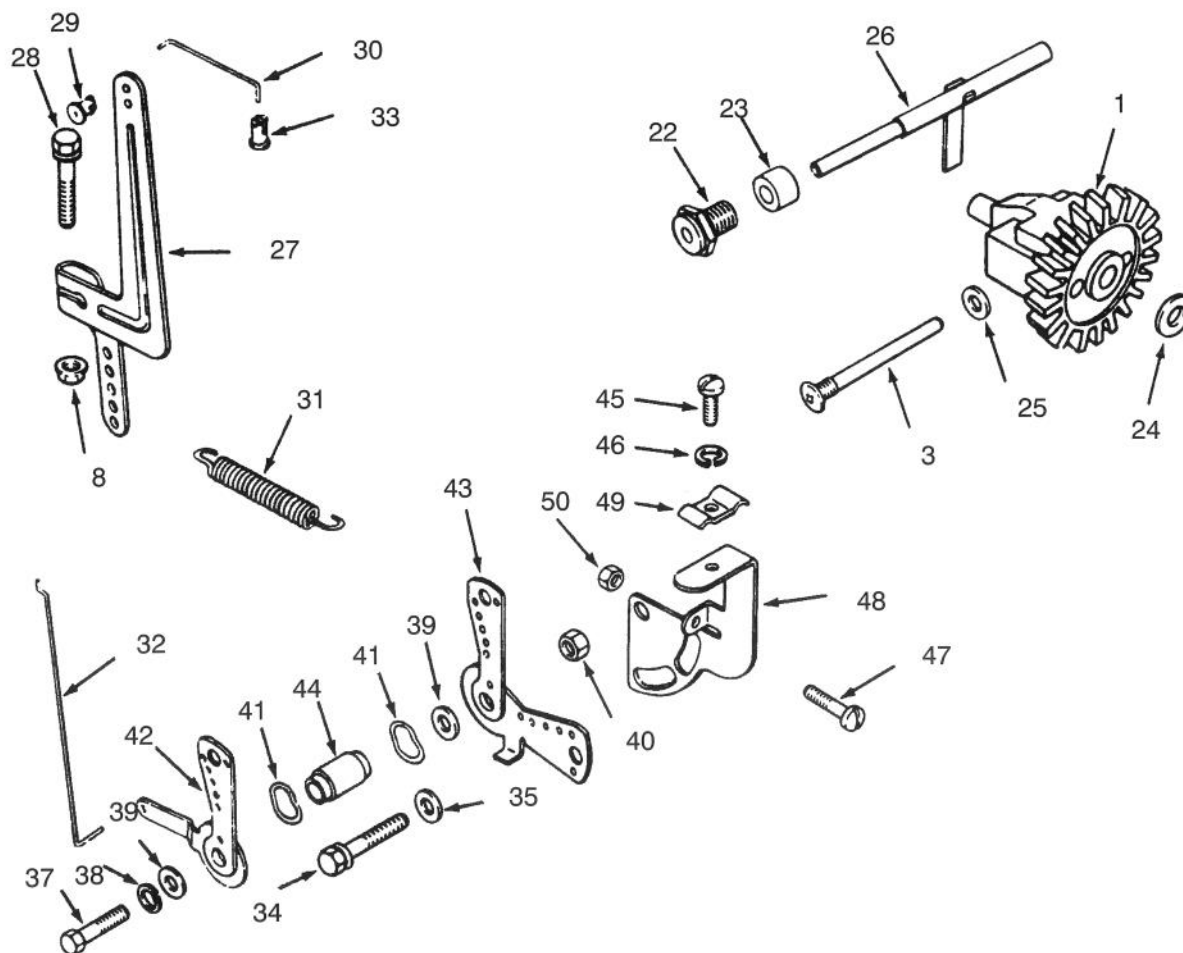 

C-1492

GOVERNOR LINKAGE

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	KH10660	Kit – Governor Gear (Includes 24)	1	35	KH10570	Washer	1
3	KH10035	Pin – Governor Stop	1	37	KH10600	Screw	1
8	KH10629	Nut – Pal	1	38	KH10556	Washer – Lock	1
22	KH10070	Bushing	1	39	KH10569	Washer	1
23	KH10585	Spacer	1	40	KH10624	Nut	1
24	KH10087	Washer	1	41	KH10152	Washer	2
25	KH10136	Washer	1	42	KH10293	Lever – Choke Control	1
26	92-7262	Kit – Governor Cross Shaft	1	43	KH10294	Lever – Throttle Control	1
27	KH10295	Lever – Governor	1	44	KH10302	Space	1
28	KH10626	Screw	1	45	KH10605	Screw	1
29	92-7254	Bushing	1	46	KH10695	Washer	1
30	KH10701	Linkage (Governor to Carb.)	1	47	KH10040	Screw	1
31	KH10296	Spring (Governor to Carb.)	1	48	KH10303	Bracket – Clutch Control	1
32	KH10287	Linkage – Choke (Carb. to Choke Shaft)	1	49	KH10308	Clamp	1
33	92-7253	Bushing	1	50	KH10619	Nut	1
34	KH10545	Screw	1	*	92-7263	Choke Lever Assembly (Incl. Ref. #37 thru 44)	1

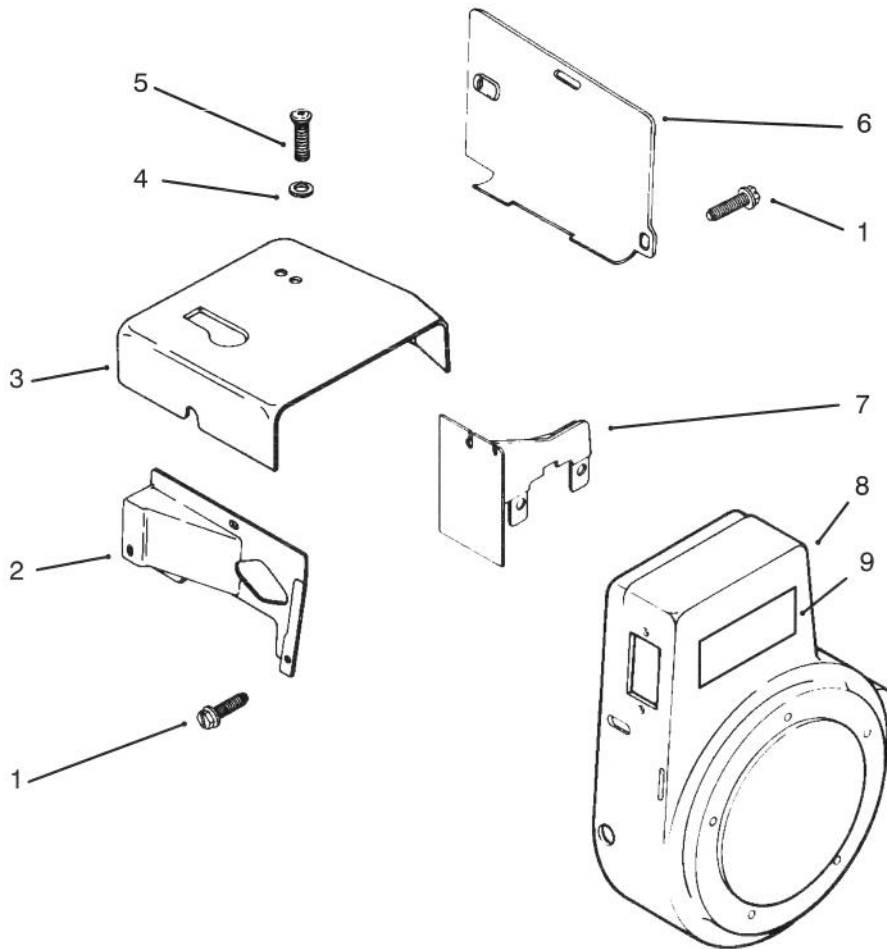 


C-1559

BAFFLES AND SHROUDS

Ref. No.	Part No.	Description	No. Used
1	KH10413	Screw - Hex .Hd.	6
2	KH10279	Baffle - Side Air	1
3	KH10231	Baffle - Head	1
4	KH10567	Washer	1
5	KH10289	Screw - Pozidrive T.H.	3

Ref. No.	Part No.	Description	No. Used
6	KH10282	Baffle - Cylinder	1
7	KH10280	Baffle - Inner	1
8	KH10265	Housing - Blower	1
9	92-7281	Decal - HP	1

 
*Not Illustrated

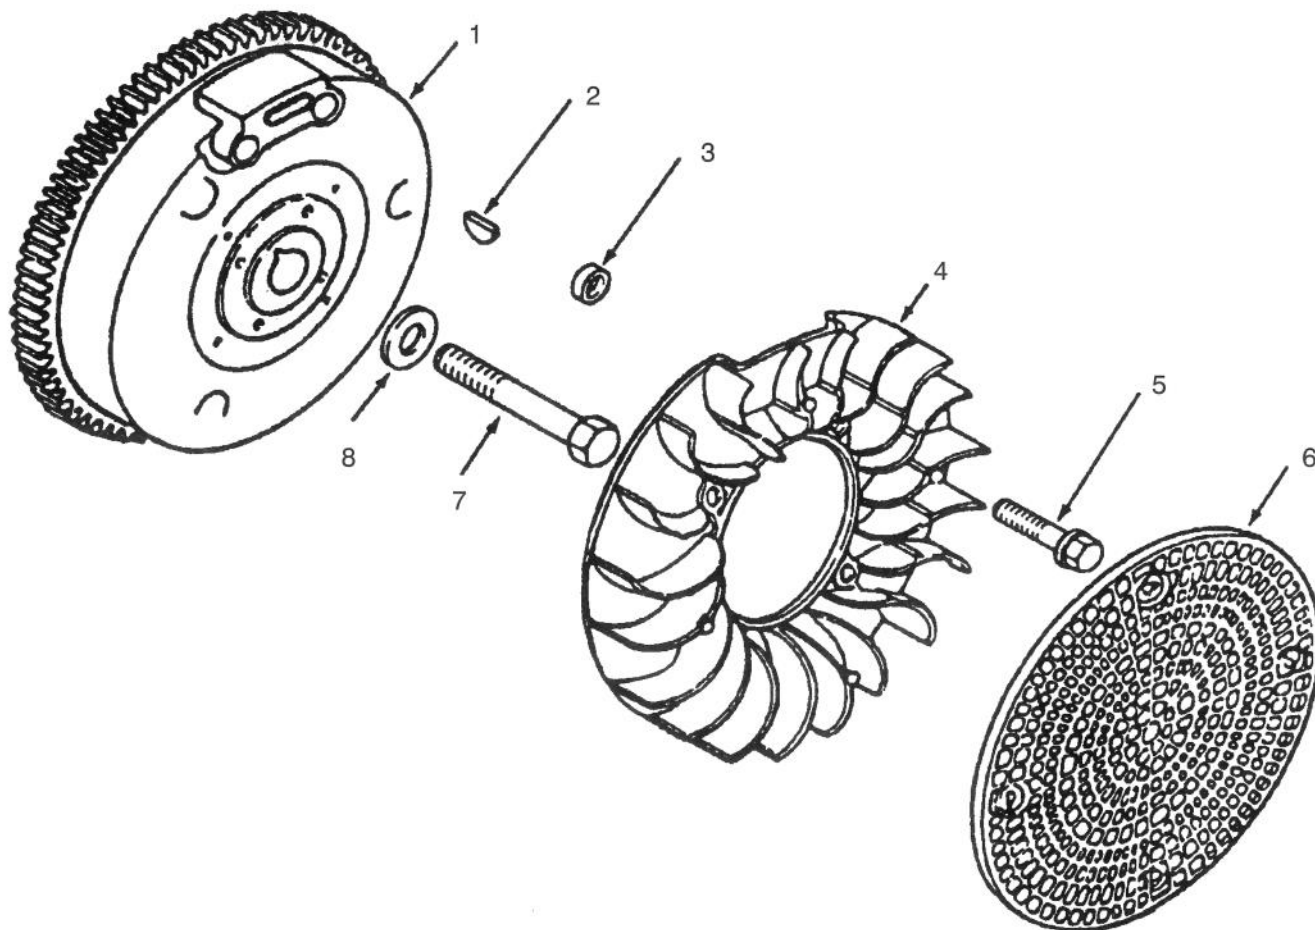

C-1491

FLYWHEEL

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	KH10263	Flywheel	1	5	KH10107	Screw – Hex. Hd.	4
2	KH10588	Key – Woodruff	1	6	KH10126	Screen	1
3	KH10188	Spacer	4	7	KH10108	Screw	1
4	KH10124	Fan	1	8	KH10666	Washer	1

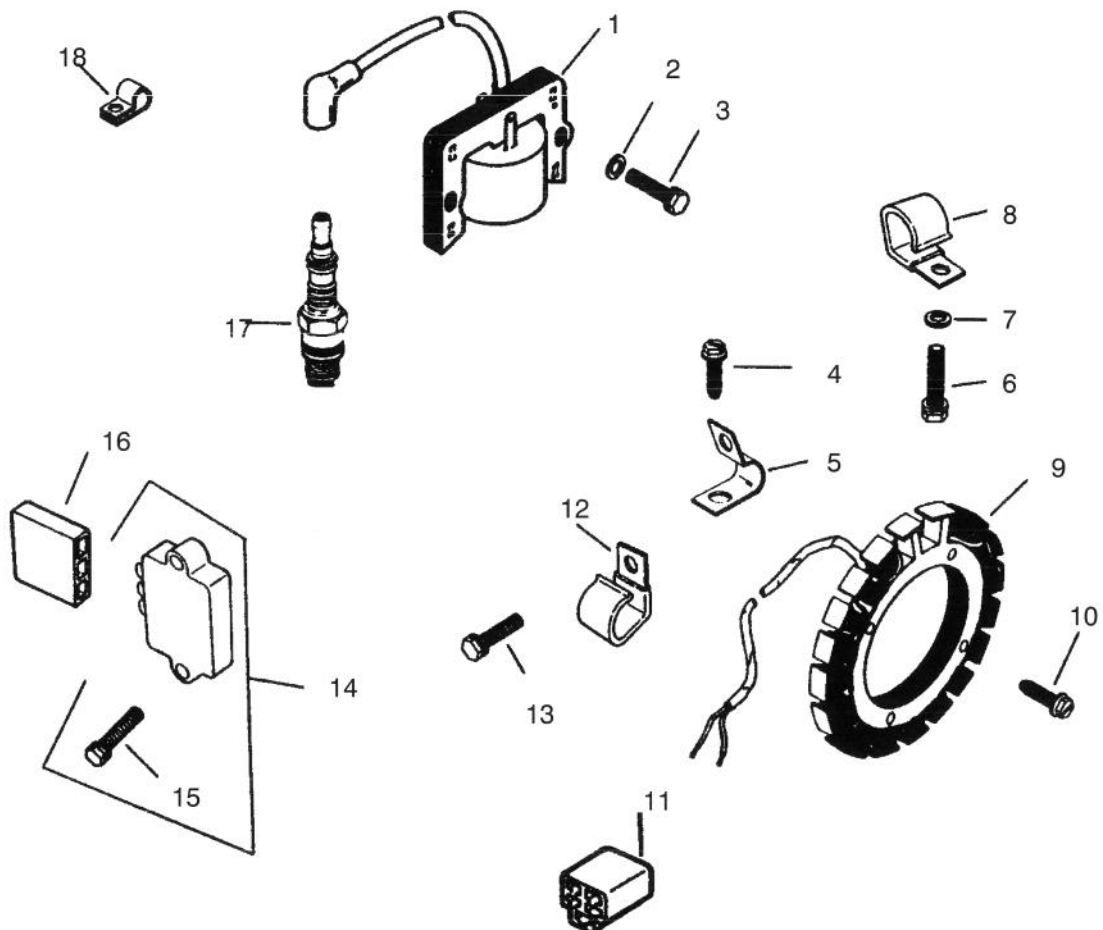 


C-1493

IGNITION SYSTEM

Ref. No.	Part No.	Description	No. Used
1	KH10321	Module – Ignition	1
2	KH10570	Washer	2
3	KH10548	Screw	2
4	KH10606	Screw – Hex. Hd.	1
5	KH10618	Clip	1
6	KH10610	Screw	1
7	KH10570	Washer – Flat	1
8	92-7264	Clip	1
9	KH10091	Kit – Stator 15 am (Incl. Ref.#8)	1
10	KH10605	Screw – Pozidrive	4
11	KH10345	Connector	1

Ref. No.	Part No.	Description	No. Used
12	8830	”J”Clip	1
13	321-2	Screw	1
14	KH10673	Regulator – Rectifier	2
15	92-7266	Screw	2
16	KH10082	Connector	1
17	92-7265	Plug – Spark	1
18	KH10010	Clip – Hi-Tension	1
*	KH10313	Lead – Violet, Regulator – Rectifier to Connector (23”)	1
*	KH10315	Lead – Wire, Module to Connector	1

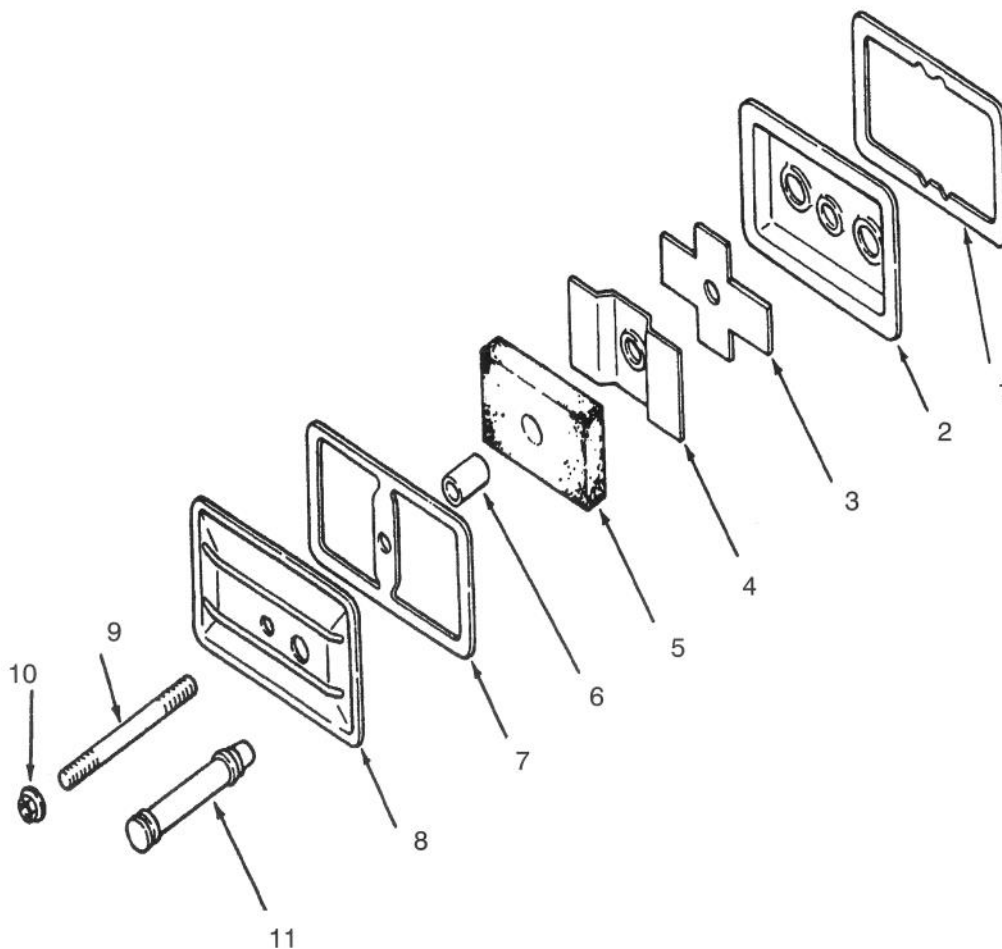 


C-1485

BREATHER AND VENT

Ref. No.	Part No.	Description	No. Used
1	KH10058	Gasket	1
2	KH10072	Plate	1
3	KH10057	Reed	1
4	KH10143	Baffle	1
5	KH10275	Filter	1
6	KH10034	Seal	1

Ref. No.	Part No.	Description	No. Used
7	KH10149	Gasket	1
8	KH10298	Cover	1
9	KH10150	Stud	1
10	KH10629	Nut	1
11	KH10309	Hose	1

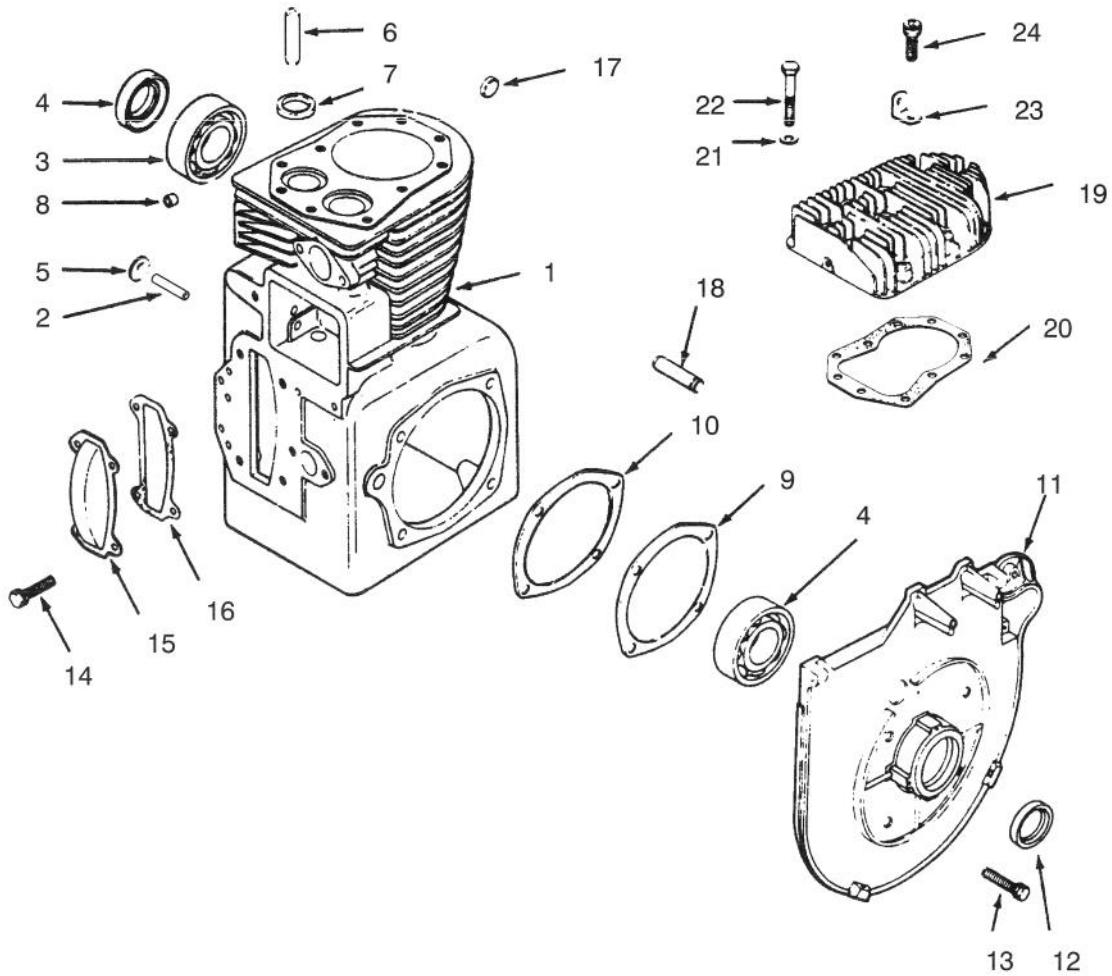 


C-1561

CRANKCASE AND CYLINDER HEAD

Ref. No.	Part No.	Description	No. Used
1	92-7279	Short Block (Includes Crankshaft)	1
	92-7280	Miniblock (w/Out Crankshaft)	1
2	92-7258	Shaft - Governor Gear	1
3	KH10067	Ball Bearing	2
4	KH10269	Seal	1
5	KH10562	Plug	1
6	92-7259	Guide - Valve	2
7	KH10029	Insert - Exhaust Valve	1
8	KH10049	Bearing	1
9	KH10272	Gasket	1
10	KH10311	Gasket	1
11	KH10687	Plate - Bearing	1
12	KH10268	Seal	1

Ref. No.	Part No.	Description	No. Used
13	KH10549	Screw	4
14	KH10545	Screw	4
15	KH10661	Cover	1
16	KH10055	Gasket	1
18	KH10081	Shaft - Balance Gear	1
19	KH10261	Head - Cylinder	1
20	KH10700	Gasket	1
21	KH10145	Washer	9
22	KH10144	Screw	8
23	KH10312	Strap - Lifting	1
24	KH10290	Screw	1
*	KH10325	Set - Gasket w/ Seals	1
*	KH10258	Set - Gasket w/o Seals	1

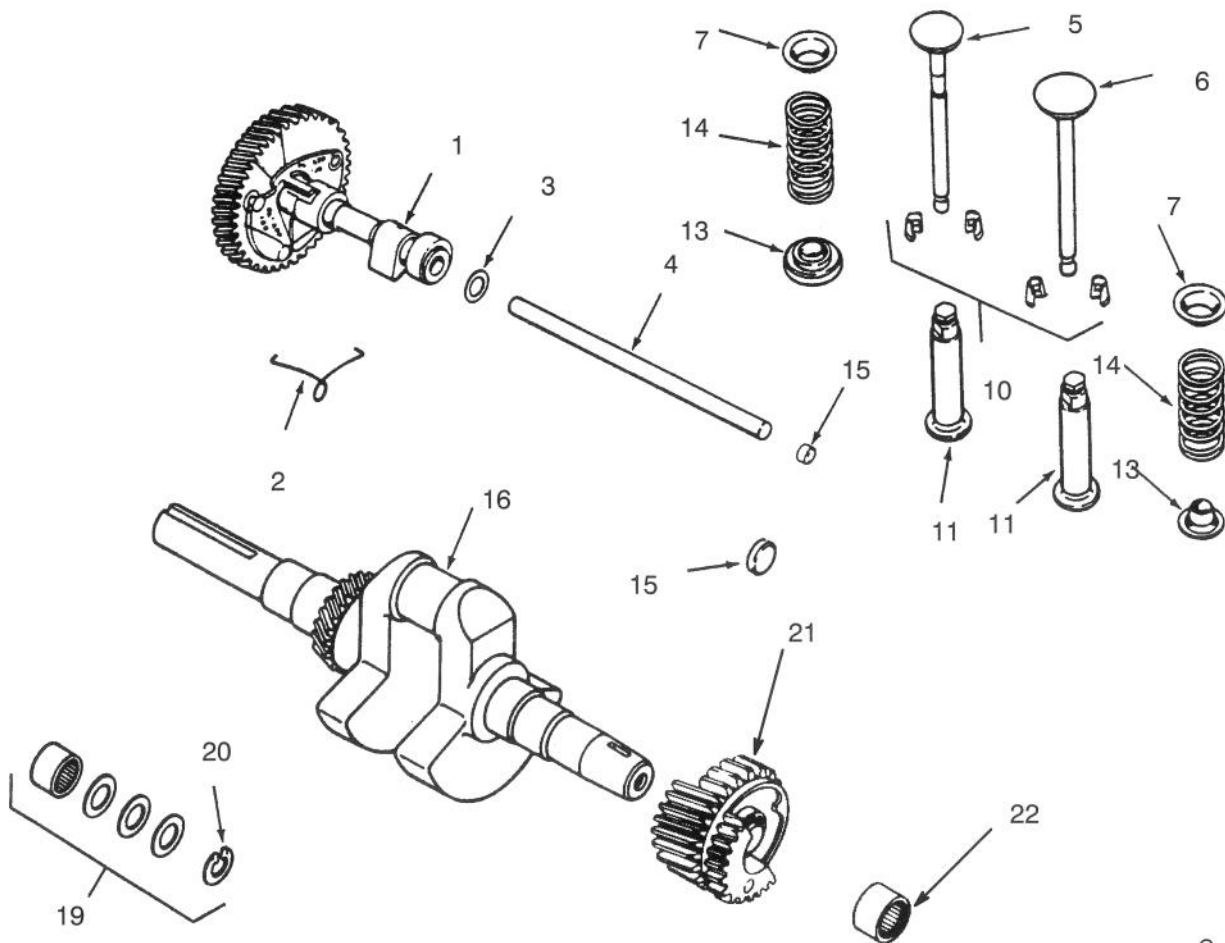 


C-1560

CAMSHAFT, CRANKSHAFT AND VALVES

Ref. No.	Part No.	Description	No. Used
1	KH10259	Camshaft Assy (Incl. Ref.# 2)	1
2	KH10292	Spring	1
3	KH10147	Spacer .005	1
*	KH10148	Spacer .010	1
4	KH10310	Pin - Camshaft	1
5	KH10090	Valve - Exhaust	1
6	KH10071	Valve - Intake	1
7	KH10054	Retainer - Upper Spring	2
10	KH10221	Kit - Retainer	2
11	KH10539	Tappet - Intake Valve	2

Ref. No.	Part No.	Description	No. Used
13	KH10496	Rotator - Valve	2
14	KH10062	Spring	2
15	KH10617	Plug - Cup	1
16	KH10245	Kit - Crankshaft (Includes Flywheel Hdwr.)	1
19	KH10322	Kit - Spacer (Incl. Ref.#20)	2
20	KH10574	Retainer	1
21	KH10228	Gear Assembly (Incl. Ref. #22)	2
22	KH10267	Bearing - Needle	2

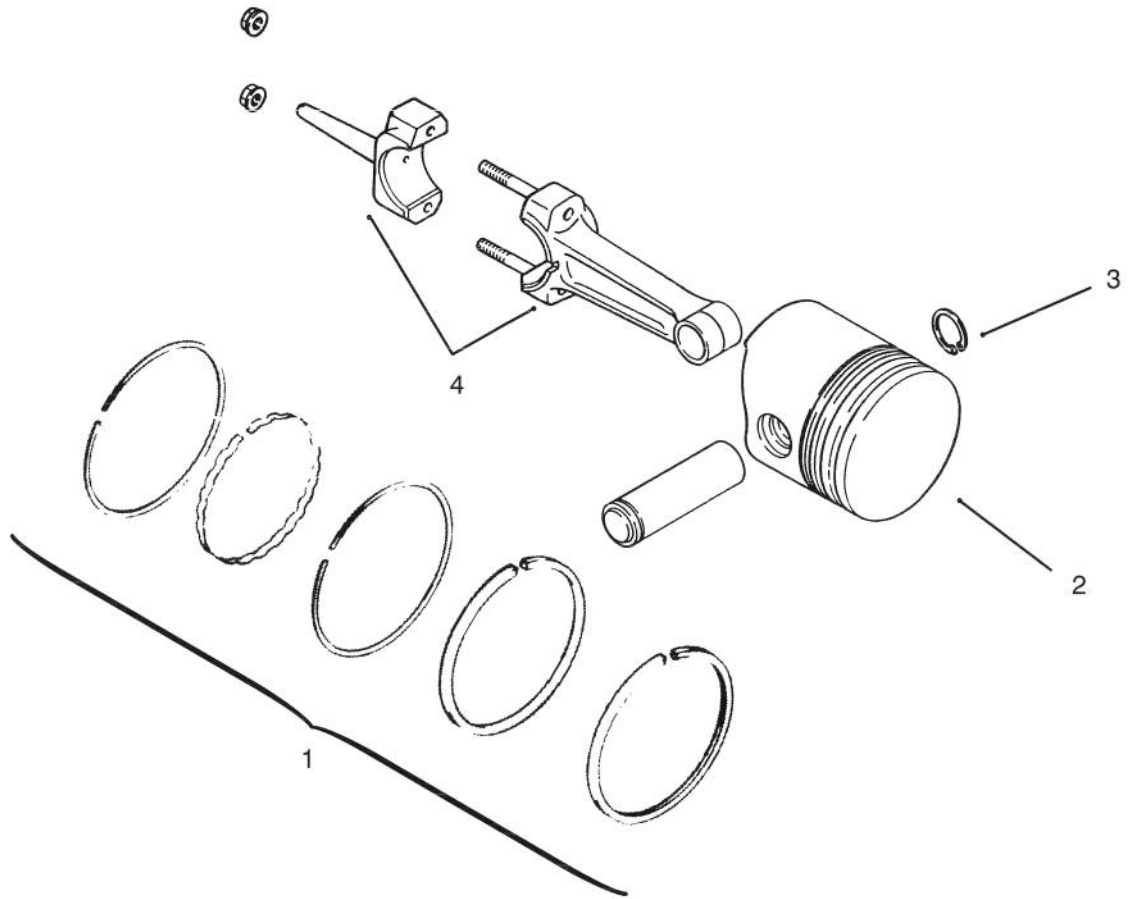 


C-1563

PISTON AND RINGS

Ref. No.	Part No.	Description	No. Used
1	92-7273	Set - Ring, Std. & .003	1
*	92-7274	Set - Ring .010	1
*	92-7275	Set - Ring .020	1
*	92-7276	Set - Ring .030	1
2	92-7268	Piston w/Ring Set Std.	1
*	92-7269	Piston w/Ring Set .003	1

Ref. No.	Part No.	Description	No. Used
*	92-7270	Piston w/Ring Set .010	1
*	92-7271	Piston w/Ring Set .020	1
*	92-7272	Piston w/Ring Set .030	1
3	KH10262	Retainer - Piston Pin	2
4	92-7267	Rod - Connecting Std.	1
*	KH10695	Rod - Connecting .010	1

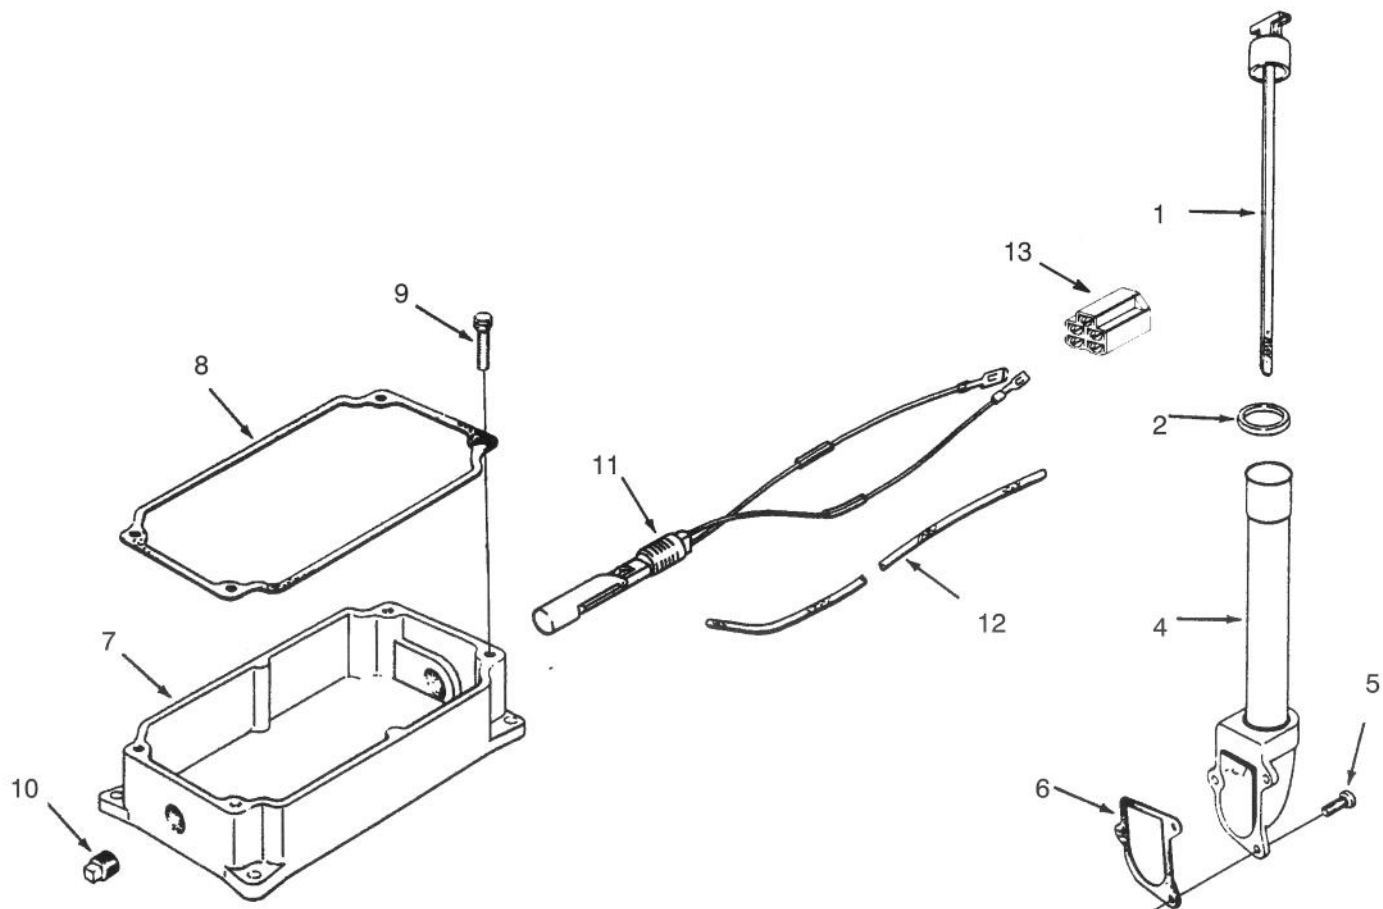 


C-1562

OIL PAN AND DIPSTICK

Ref. No.	Part No.	Description	No. Used
1	KH10270	Dipstick	1
2	KH10201	"O" Ring	1
4	KH10266	Adapter - Oil Fill	1
5	KH10541	Screw	3
6	KH10088	Gasket	1
7	KH10248	Pan - Oil	1
8	KH10059	Gasket	1
9	KH10550	Screw	4

Ref. No.	Part No.	Description	No. Used
10	KH10620	Plug	4
11	92-7278	Kit - Float Switch (Incl. Ref.#12 & Decal)	1
12	KH10134	Sleeve	1
13	KH10345	Connector - Female (5-Contact)	1
*	KH10119	Decal - Float Switch	1

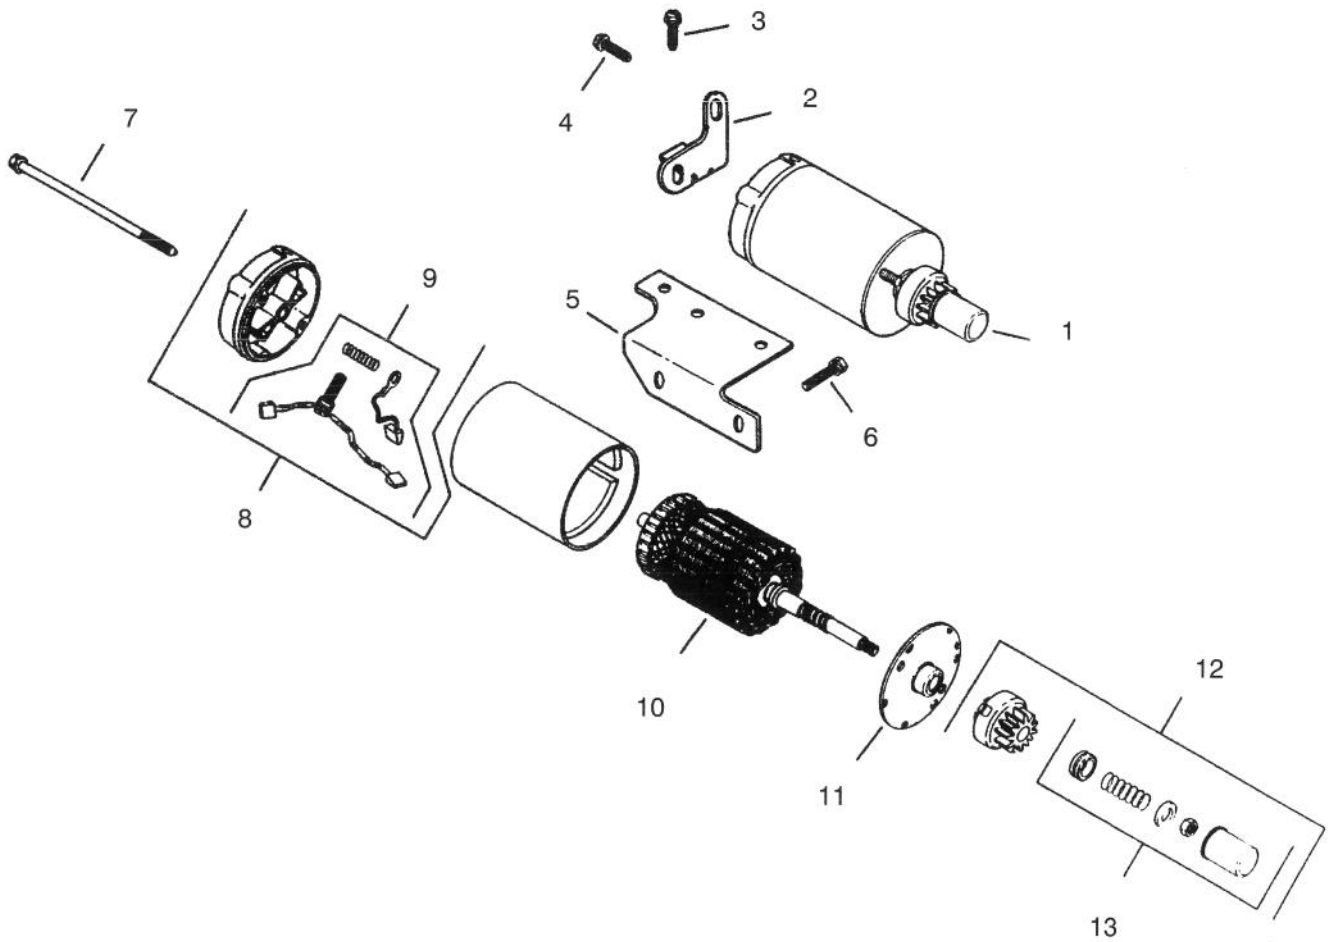 


C-1490

STARTER

Ref. No.	Part No.	Description	No. Used
1	92-7260	Starter Assembly (Includes Items 9 thru 15)	1
2	KH10244	Brace - Starter Tail	1
3	KH10607	Screw - Hex. Hd.	1
4	KH10610	Screw - Hex. Hd.	1
5	KH10304	Bracket - Starter	1
6	KH10549	Screw	2
7	KH10181	Bolt	2
8	KH10210	End Cap Ass'Y (Incl. Ref.#9)	1

Ref. No.	Part No.	Description	No. Used
9	KH10515	Kit - Brush	1
10	KH10247	Armature	1
11	KH10209	Cap - Drive End	1
12	KH10323	Kit - Drive (Incl. Ref. #15)	1
13	KH10324	Kit - Drive Parts	1
*	KH10135	Tag - Caution	1
*	KH10304	Bracket - Solenoid	1
*	KH10549	Screw	1

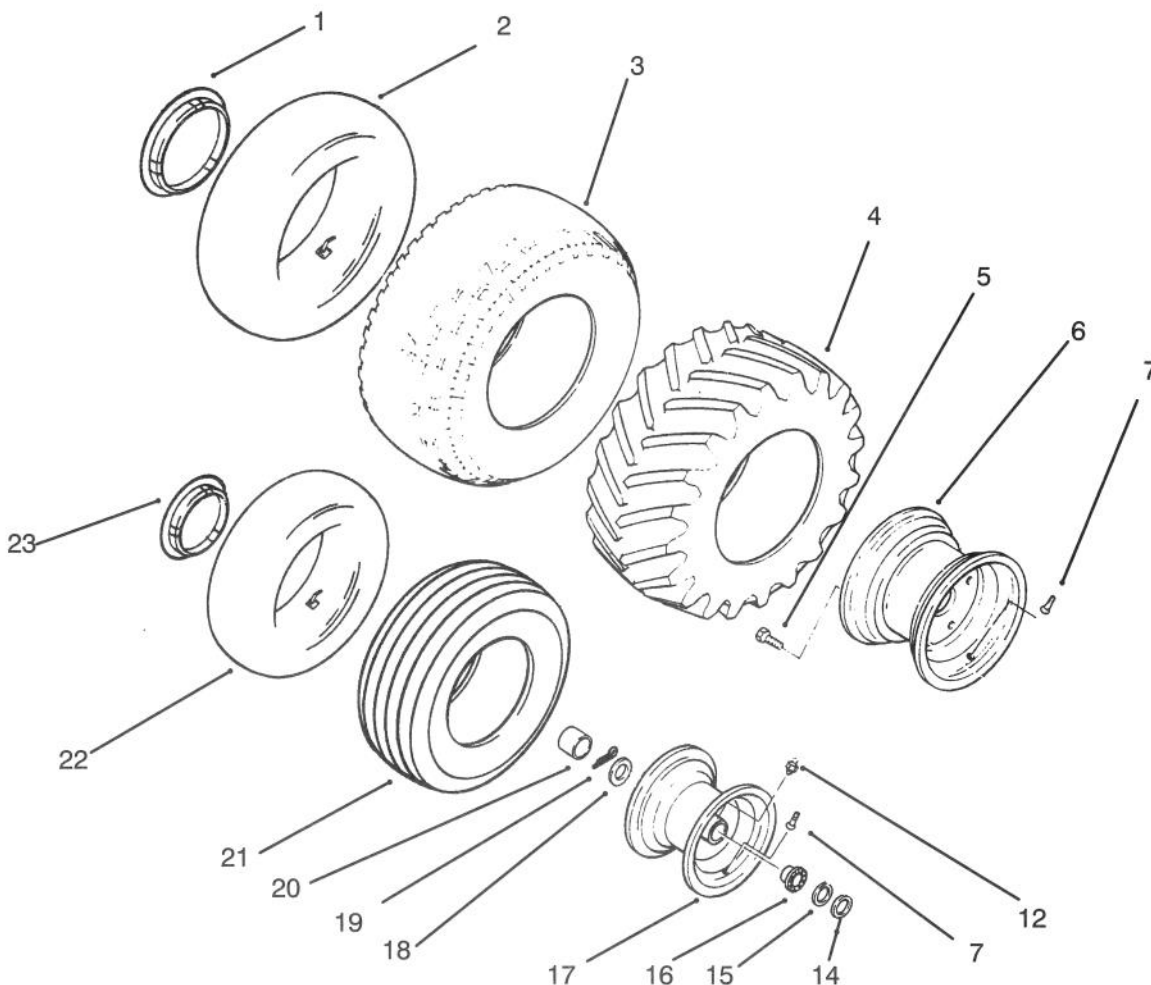 


WHEELS AND TIRES

Ref. No.	Part No.	Description	No. Used
1	114428	Logo - Hub Cap 12" (Opt.)	2
2	1645	Tube - Rear (Opt.)	2
*	100291	Tube - Cleat Tire (Opt.)	2
3	116744	Tire - Turf Trac, Rear	2
4	7607	Tire - Cleat, (Opt.)	2
5	83-2720	Bolt - Lug	10
6	111516	Wheel - Rear	2
*	110677	Wheel - Cleat (Opt.)	2
7	5108	Stem - Valve	4
12	109500	Fitting - Grease	2
14	5210	Washer - Shim .015	2

Ref. No.	Part No.	Description	No. Used
15	1278	Washer - Shim .050	4
16	110513	Bearing - Ball	4
17	117286	Rim - Front	2
18	11952	Washer - Special Hub Cap	2
19	3272-17	Pin - Cotter	2
20	109154	Hubcap	2
21	117127	Tire - Turf Trac, Front	2
22	100079	Tube - Front" (Opt.)	2
23	114426	Logo - Hub Cap 6" (Opt.)	2
*	78-7600	Wheel Assembly - Front (Incl. Ref.# 7,12, 16 & 21)	2

 *Not Illustrated

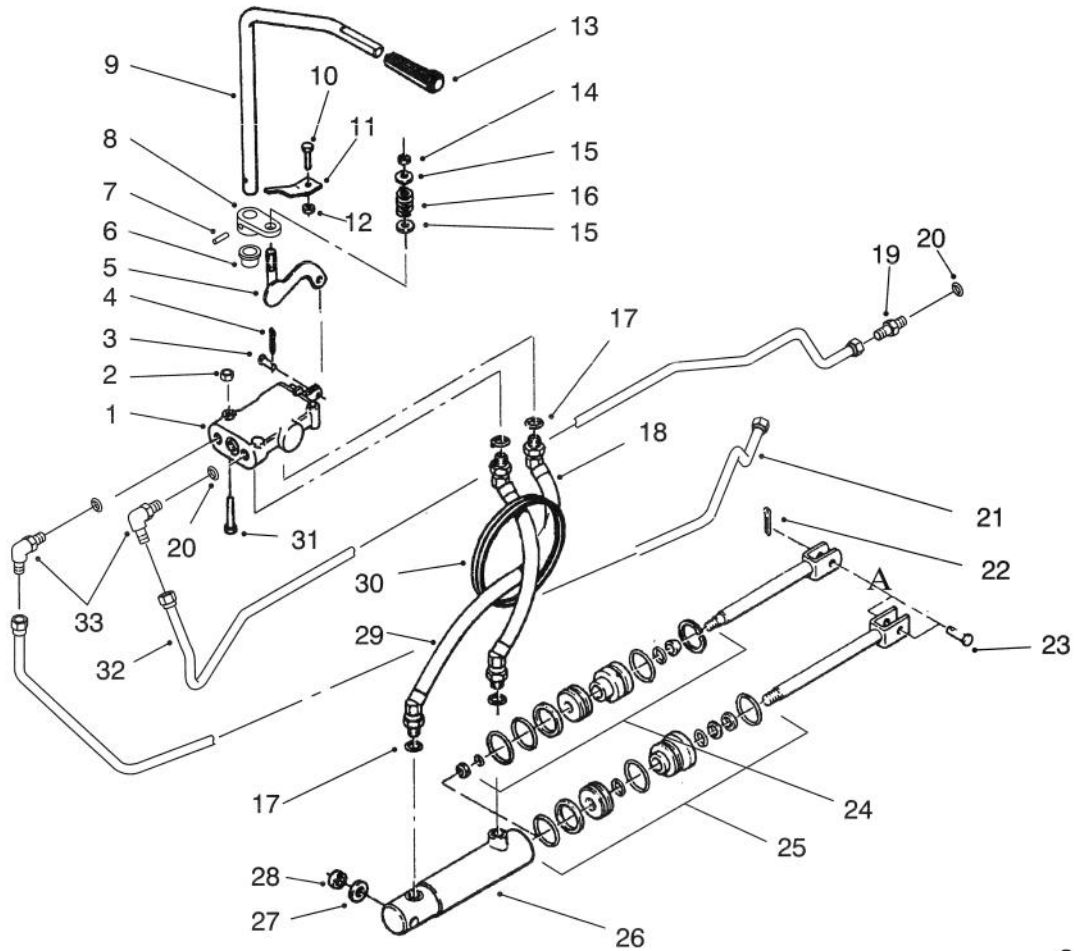

C-2051


HYDRAULIC CONTROL SYSTEM

Ref. No.	Part No.	Description	No. Used
1	114000	Valve - Hydraulic (Incl. Ref.#3-4)	1
2	3296-42	Nut	2
3	932120	Pin - Clevis	1
4	3272-1	Pin - Cotter	2
5	78-5640	Bar - Lift	1
6	5983	Bushing	1
7	933198	Pin - Spirol	1
8	116302	Arm - Control	1
9	78-5670	Rod - Lift Control	1
10	321-4	Screw	1
11	116305	Bracket - Control Rod	1
12	3296-42	Nut	1
13	116634	Knob - Hydraulic Lift	1
14	3296-29	Nut	1
15	3256-23	Washer - Flat	2
16	104841	Spring	1
17	973310	"O"Ring	4
18	110125	Hose - Valve To Cylinder	1
19	102628	Fitting - Straight Adapter (Incl. Ref. #20)	1

Ref. No.	Part No.	Description	No. Used
20	973370	"O"Ring	4
21	86-9280	Tube - Hydraulic (Pressure)	1
22	3272-11	Pin - Cotter	1
23	9329974	Pin - Clevis	1
24	101699	Kit - Service, Cylinder Repair	1
25	109088	Kit - Service, Cylinder Repair	1
26	119340	Cylinder - Hydraulic (Incl. Ref.#24-25)	1
27	9202324	Washer	1
28	101757	Spacer	1
29	110124	Hose - Valve To Cylinder	1
30	106267	Grommet - Rubber	1
31	321-11	Bolt	2
32	86-9290	Tube - Hydraulic (Return)	1
33	108365	Fitting - 90° (Incl. Ref. #20)	2
*	109081	Kit - Service, Valve Repair	1
*	100571	Tie - Cable	1


*Not Illustrated

 Note : In Illustration Center lines A Continue on next page

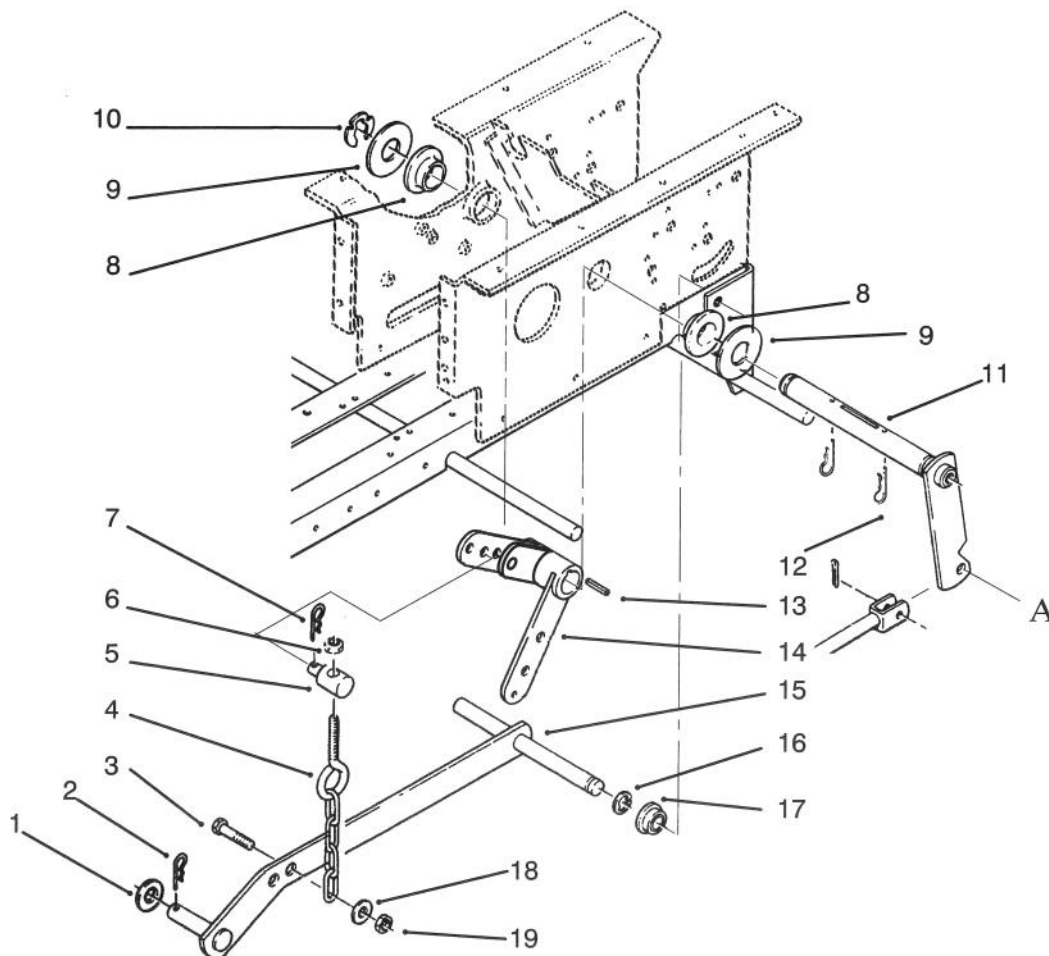

HYDROSTATIC LIFT LINKAGE

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3256-26	Washer	1	11	121100	Lever - Lift	1
2	9335054	Pin - Cotter	1	12	9335074	Pin - Cotter	2
3	322-5	Bolt	1	13	1121	Key - Sq.	1
4	106522	Chain - Lift	1	14	78-1550	Bellcrank	1
5	6739	Trunnion	1	15	113445	Bar - Lift	1
6	3296-39	Nut	1	16	32120-47	Ring - Retaining	1
7	9335054	Pin - Cotter	1	17	6229	Bearing	1
8	106269	Bearing - Flanged	2	18	3256-23	Washer	1
9	3256-62	Washer	3	19	3296-29	Nut	1
10	32151-91	Retainer	1				

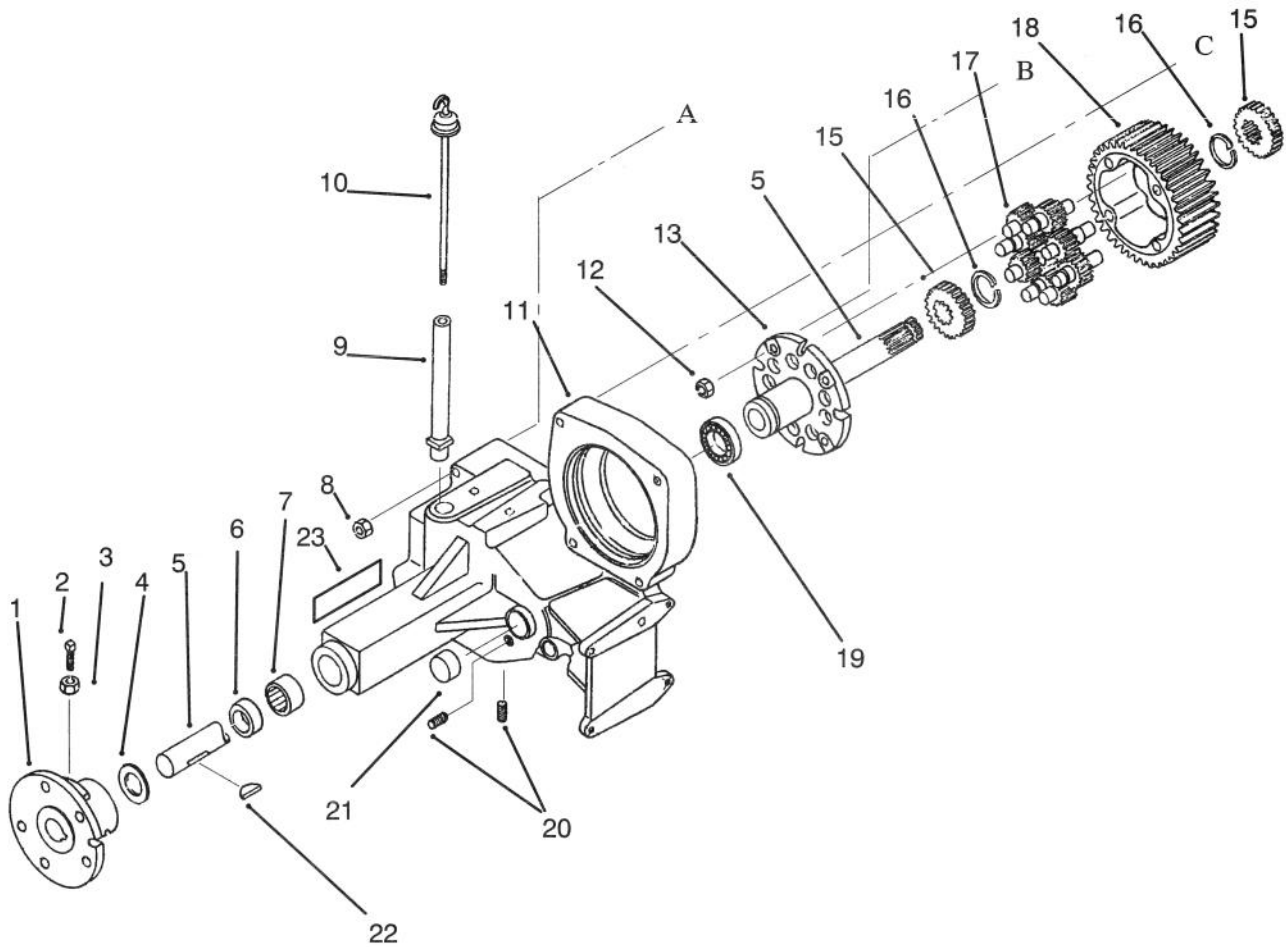 


TRANSAXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	105763	Hub - Rear	1
2	3243-5	Screw - Set	2
3	3218-3	Nut	2
4	106826	Washer - Thrust	1
5	108362	Axle - Rear, RH Long 13-1/8 in./33 cm	1
6	6449	Axle - Seal	1
7	9416	Bearing - Needle	1
8	3296-39	Nut	3
9	106448	Tube - Filler	1
10	110768	Dipstick	1
11	92-7298	Case - Transaxle, RH (Incl. Ref.#23)	1
12	108881	Nut	4

Ref. No.	Part No.	Description	No. Used
13	111196	Cap - Differential End	1
15	101889	Gear - Differential Axle 24 Tooth	2
16	105876	Ring - Retaining	2
17	101623	Gear - Differential Pinion 11 Tooth	8
18	105061	Gear - Differential Ring 43 Tooth	1
19	111199	Bearing - Ball	1
20	281-10	Plug - Pipe	2
21	1532	Bearing - Needle	2
22	937108	Key - Woodruff	1
*	92-7297	Transaxle (Incl. Ref. #23)	1
23	88-2790	Decal - Danger	1

 
Note : In Illustration Center lines A,B and C
Continue on next page

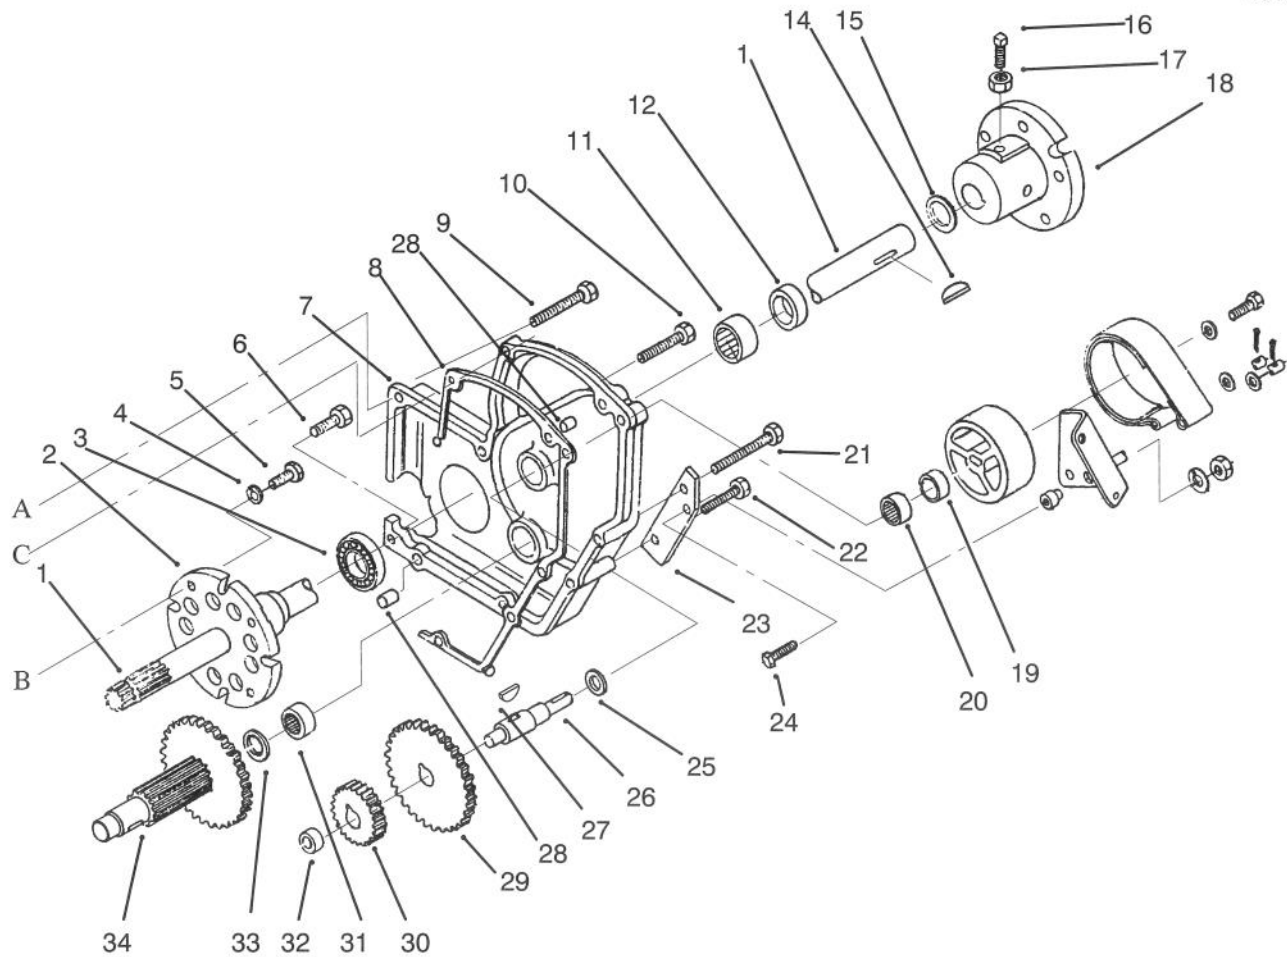

TRANSAXLE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
1	108361	Axle – Rear, LH Short 10-1/8 in./26 cm	1
2	111196	Cap – Differential End	1
3	111199	Bearing – Ball	1
4	107374	Washer – Special	4
5	911423	Bolt	4
6	9080356	Bolt	1
7	111201	Case – Transaxle, LH	1
8	108312	Gasket – Case	1
9	323-15	Bolt	2
10	9080406	Bolt	1
11	9416	Bearing – Needle	1
12	6449	Axle – Seal	1
14	937108	Key – Woodruff	1
15	106826	Washer – Thrust	1
16	3243-5	Screw – Set	2
17	106826	Washer – Thrust	1

Ref. No.	Part No.	Description	No. Used
18	105763	Hub – Rear	1
19	108357	Seal – Oil	1
20	1538	Bearing – Needle	1
21	323-26	Screw – Hex. Hd.	1
22	323-25	Screw – Hex. Hd.	3
23	109367	Bracket – Brake	1
24	323-9	Screw – Hex. Hd.	1
25	7956	Washer – Thrust	1
26	109370	Shaft	1
27	937099	Key – Woodruff	1
28	108363	Pin – Dowel	2
29	109752	Gear 46 Tooth	1
30	109742	Gear 20 Tooth	1
31	1532	Bearing – Needle	2
32	1518	Bearing – Needle	1
33	9547	Washer – Thrust	1
34	109703	Gear Assembly	1

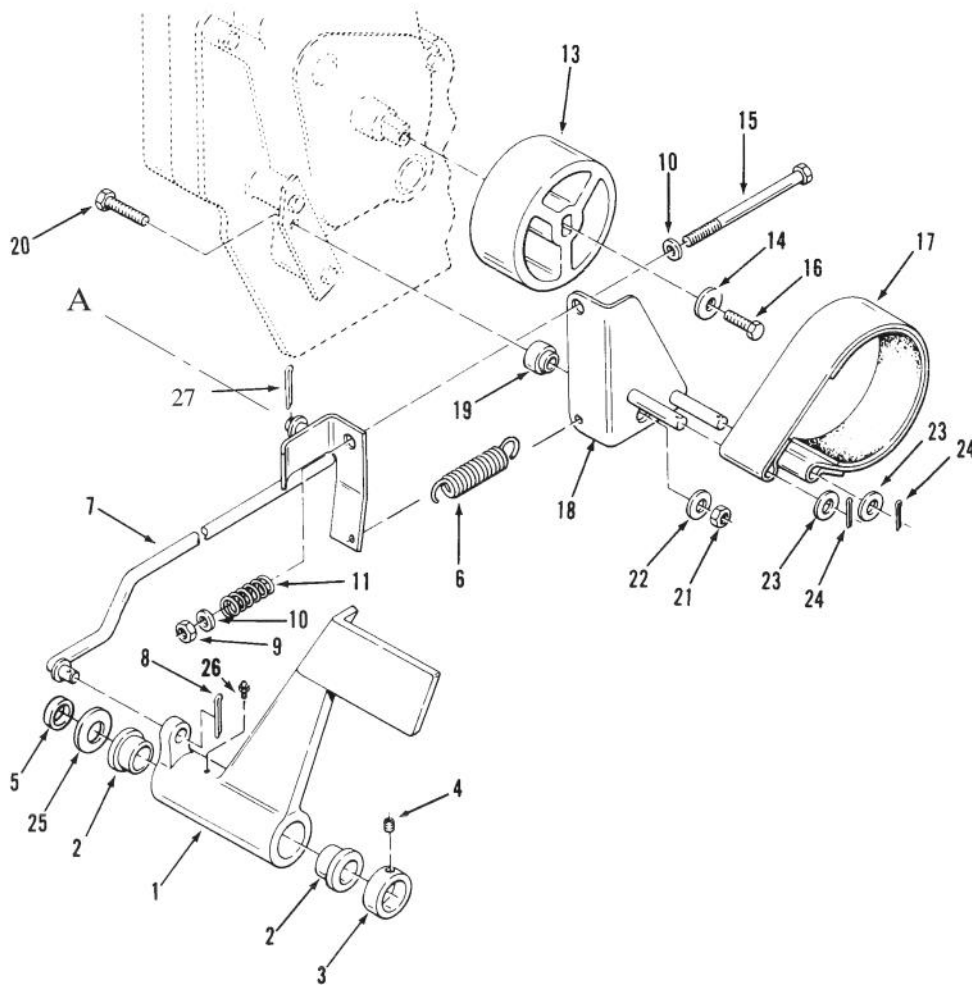 


CLUTCH, BRAKE AND SPEED CONTROL LINKAGE

Ref. No.	Part No.	Description	No. Used
1	79-1350	Pedal - Brake/Return To Neutral	1
2	6254	Bushing	2
3	111383	Collar	1
4	3245-32	Screw - Set	1
5	107691	Spacer	1
6	103125	Spring - Brake Return	1
7	109372	Rod - Brake, Front	1
8	3272-11	Pin - Cotter	2
9	3296-39	Nut	1
10	3256-24	Washer	2
11	108680	Spring	1
13	106719	Drum - Brake	1
14	2844	Special Washer	1

Ref. No.	Part No.	Description	No. Used
15	323-23	Bolt	1
16	3235-22	Bolt	1
17	109371	Band - Brake	1
18	78-7740	Arm - Brake Pivot	1
19	109356	Bushing	1
20	323-9	Bolt	1
21	3296-39	Nut	1
22	3256-4	Washer	1
23	3256-6	Washer	2
24	3272-6	Pin - Cotter	2
25	1278	Washer - Shim	1
26	302-5	Fitting - Grease	1
27	933504	Pin - Cotter	1

 Note : In Illustration Center lines A Continue on next page

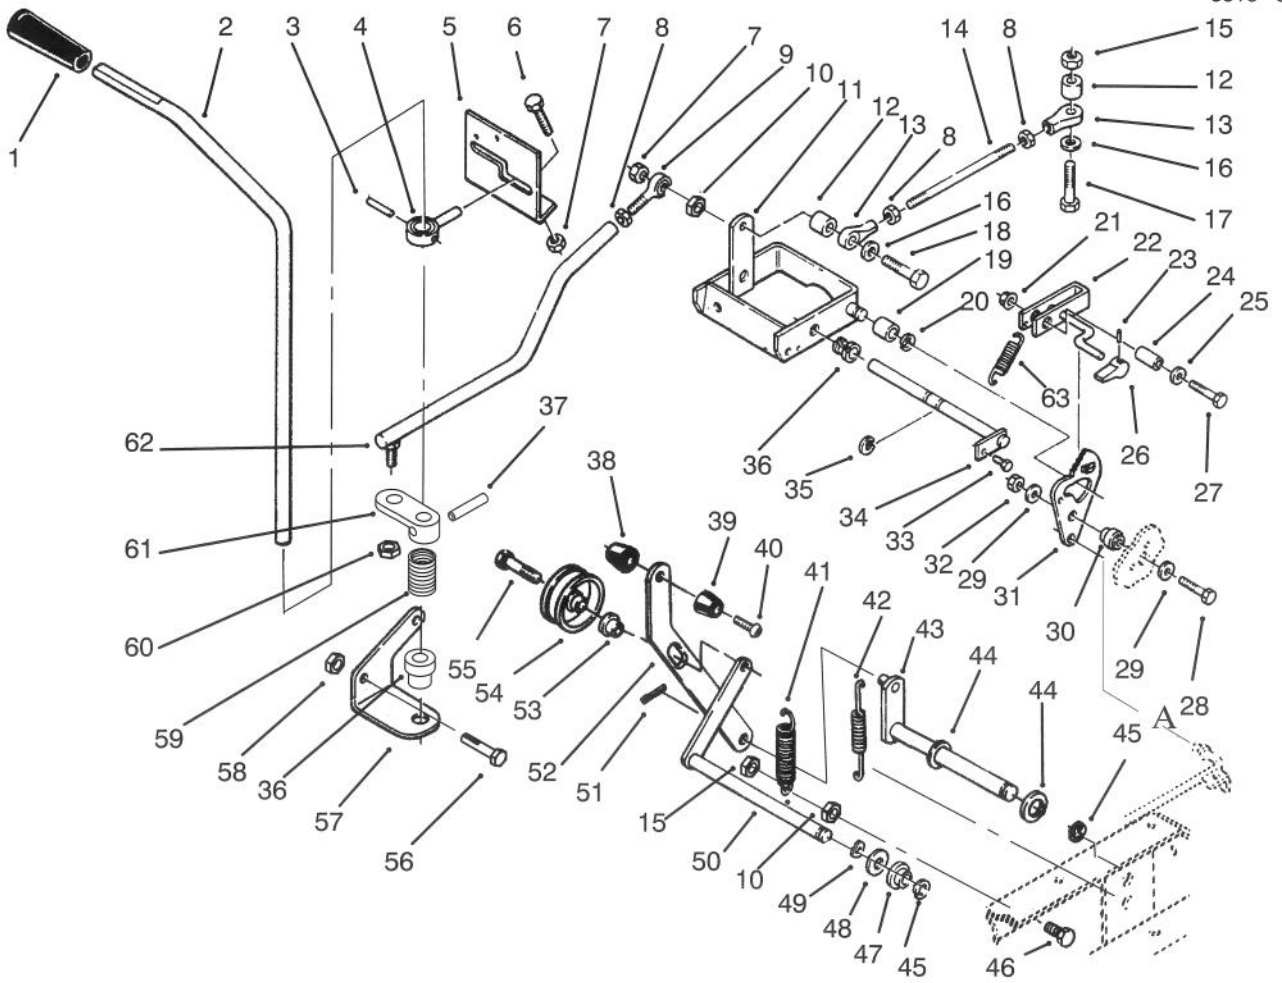


CLUTCH, BRAKE MOTION CONTROL LINKAGE

Ref. No.	Part No.	Description	No. Used
1	16635	Knob – Motion Control	1
2	78-5660	Lever – Motion Control	1
3	933198	Pin – Spirol	1
4	118660	Guide – Control	1
5	78-5631	Bracket – Control	1
6	321-4	Bolt	2
7	3296-42	Nut	4
8	3220-1	Nut	3
9	116407	Rod End	2
10	3217-5	Nut	2
11	113454	Control – Cam	1
12	100304	Spacer	2
13	110189	Rod End Asm	2
14	108904	Rod Control 9" Long	1
15	32146-17	Nut	1
16	3256-22	Washer	2

Ref. No.	Part No.	Description	No. Used
17	321-9	Screw – Hex. Hd.	1
18	9114584	Bolt	2
19	100656	Bearing – Cam	1
20	32120-47	Ring – Retaining	4
21	102809	Nut – Special, Flanged	1
22	78-8500	Lever – Parking Brake	1
23	933135	Pin – Spirol	1
24	102025	Spacer	1
25	9202414	Washer	1
26	128860	Knob – Parking Brake Lever	1
27	323-9	Bolt	1
28	323-8	Bolt	1
29	3256-4	Washer	2
30	108717	Spacer	1
31	108716	Plate – Cam	1
32	3296-39	Nut	1

 * Not Illustrated

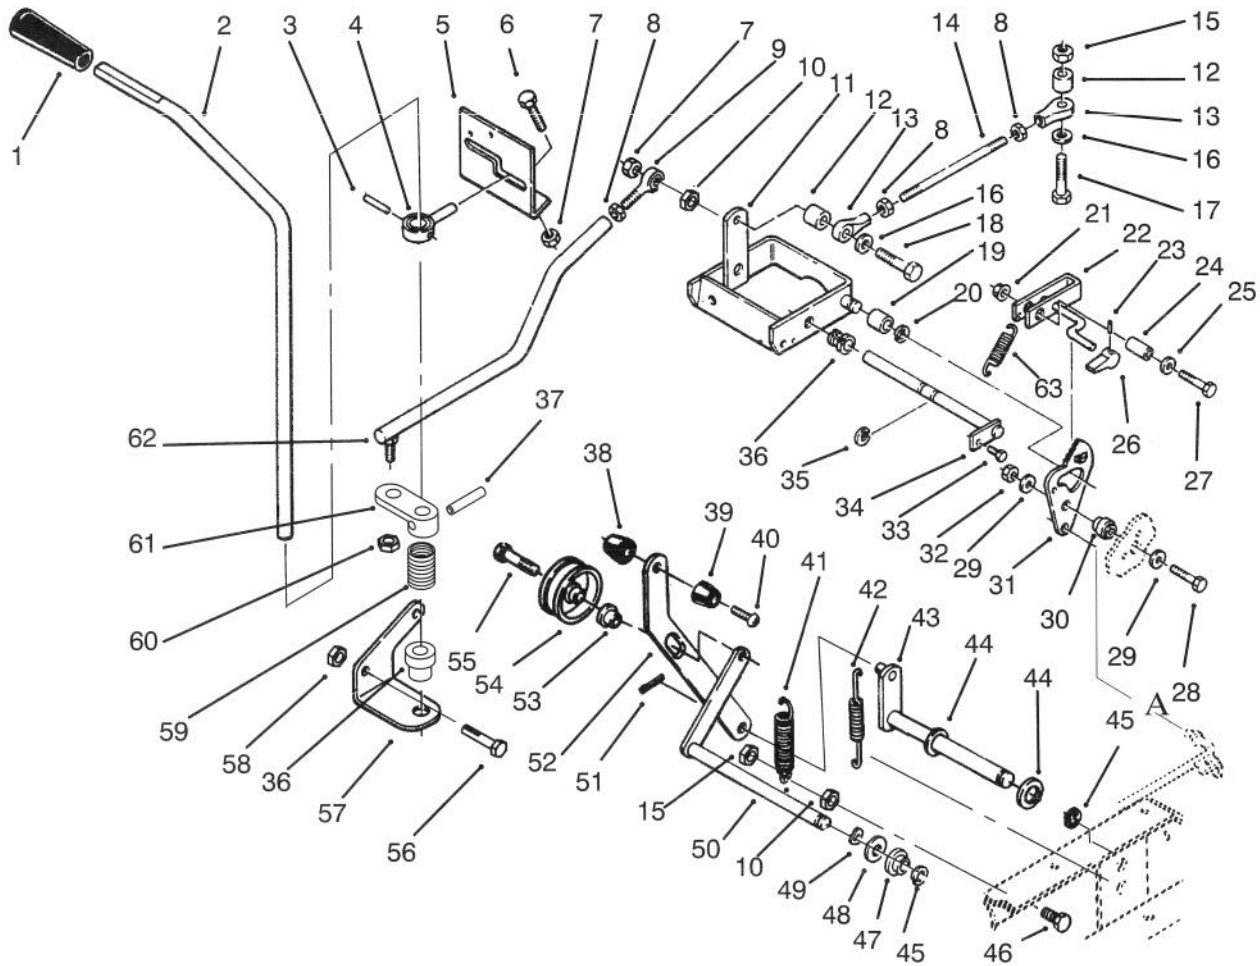


CLUTCH, BRAKE MOTION CONTROL LINKAGE

Ref. No.	Part No.	Description	No. Used
33	926694	Bolt	1
34	108496	Rod - Pivot	1
35	32120-47	Ring - Retaining	2
36	5983	Bushing	3
37	32312-94	Pin - Spirol	1
38	8722	Knob	1
39	8693	Knob	1
40	9117474	Screw	1
41	107938	Spring	1
42	110769	Spring	1
43	106369	Shaft	1
44	9202634	Washer	4
45	5701	Ring - Retaining	4
46	321-6	Bolt	1
47	7879	Bushing	1
48	3765	Washer - Shim	1

Ref. No.	Part No.	Description	No. Used
49	114823	Washer - Wave	2
50	78-6020	Rod - Pivot	1
51	3272-2	Pin - Cotter	1
52	110780	Handle	1
52	106368	Rod - Pivot	1
53	106450	Spacer	1
54	112426	Pulley - Idler	1
55	106193	Bolt - Special	1
56	322-3	Bolt	2
57	78-1540	Bracket - Control, Lower	1
58	3296-29	Nut	2
59	101938	Spring	1
60	3296-4	Nut	1
61	116321	Arm - Control	1
62	116324	Rod Assembly	1
63	83-2820	Spring	1

 * Not Illustrated

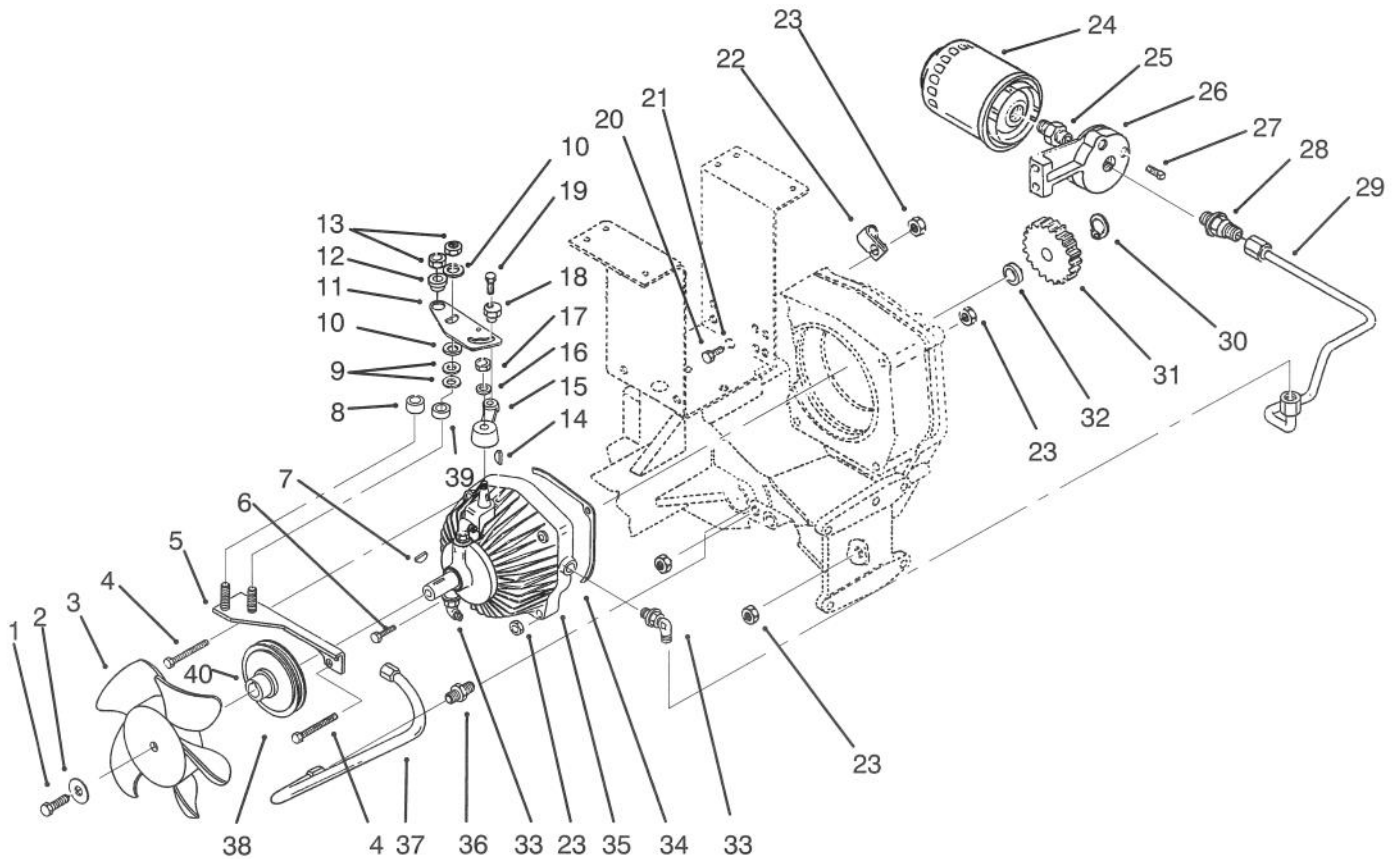


HYDROSTATIC TRANSMISSION

Ref. No.	Part No.	Description	No. Used
1	9080-26	Bolt	1
2	103995	Washer - Special	1
3	108393	Fan	1
4	323-25	Screw - Cap Hex. Hd.	2
5	108329	Assembly - Plate, Control	1
6	9080406	Screw - Cap Hex. Hd.	1
7	937089	Key - Hi-Pro	1
8	108326	Spacer - Pivot, Long	1
9	100365	Washer - Spring, Disc	2
10	100305	Washer - Friction	2
11	108333	Plate - Control, Speed	1
12	100309	Bushing - Pivot, Cam	1
13	108881	Nut	2
14	3257-24	Key - Woodruff	1
15	108325	Arm - Control, Speed	1
16	3256-26	Washer - Flat	1
17	3296-45	Nut - Lock	1
18	106661	Cam - Eccentric	1
19	9080196	Screw - Cap Hex. Hd.	1
20	322-3	Screw - Cap Hex. Hd.	2
21	3253-4	Washer - Lock	2

Ref. No.	Part No.	Description	No. Used
22	8830	"J"Clip	1
23	3296-39	Nut - Lock	4
24	79-5270	Filter - Oil	1
25	5991	Fitting - Filter	1
26	108323	Base - Filter	1
27	281-10	Plug - Pipe	3
28	102628	Fitting - Hyd., Straight (Incl. "O"Ring)	1
*	973370	"O"Ring	1
29	79-5020	Tube - Filter to Pump	1
30	32120-64	Ring - Retaining	1
31	109751	Gear - 20 Teeth	1
32	108366	Spacer - Drive, Gear	1
33	108365	Fitting - Hydraulic 90°	2
34	108319	Gasket - Pump	1
35	108368	Assembly - Pump & Motor	1
36	108364	Fitting - Hyd., Straight	1
37	111217	Tube - Suction	1
38	108316	Pulley - Transmission Drive	1
39	108327	Spacer - Pivot, Short	1
*40	3242-2	Screw - Set	2

* Not Illustrated

 TRANSMISSION ASSEMBLY

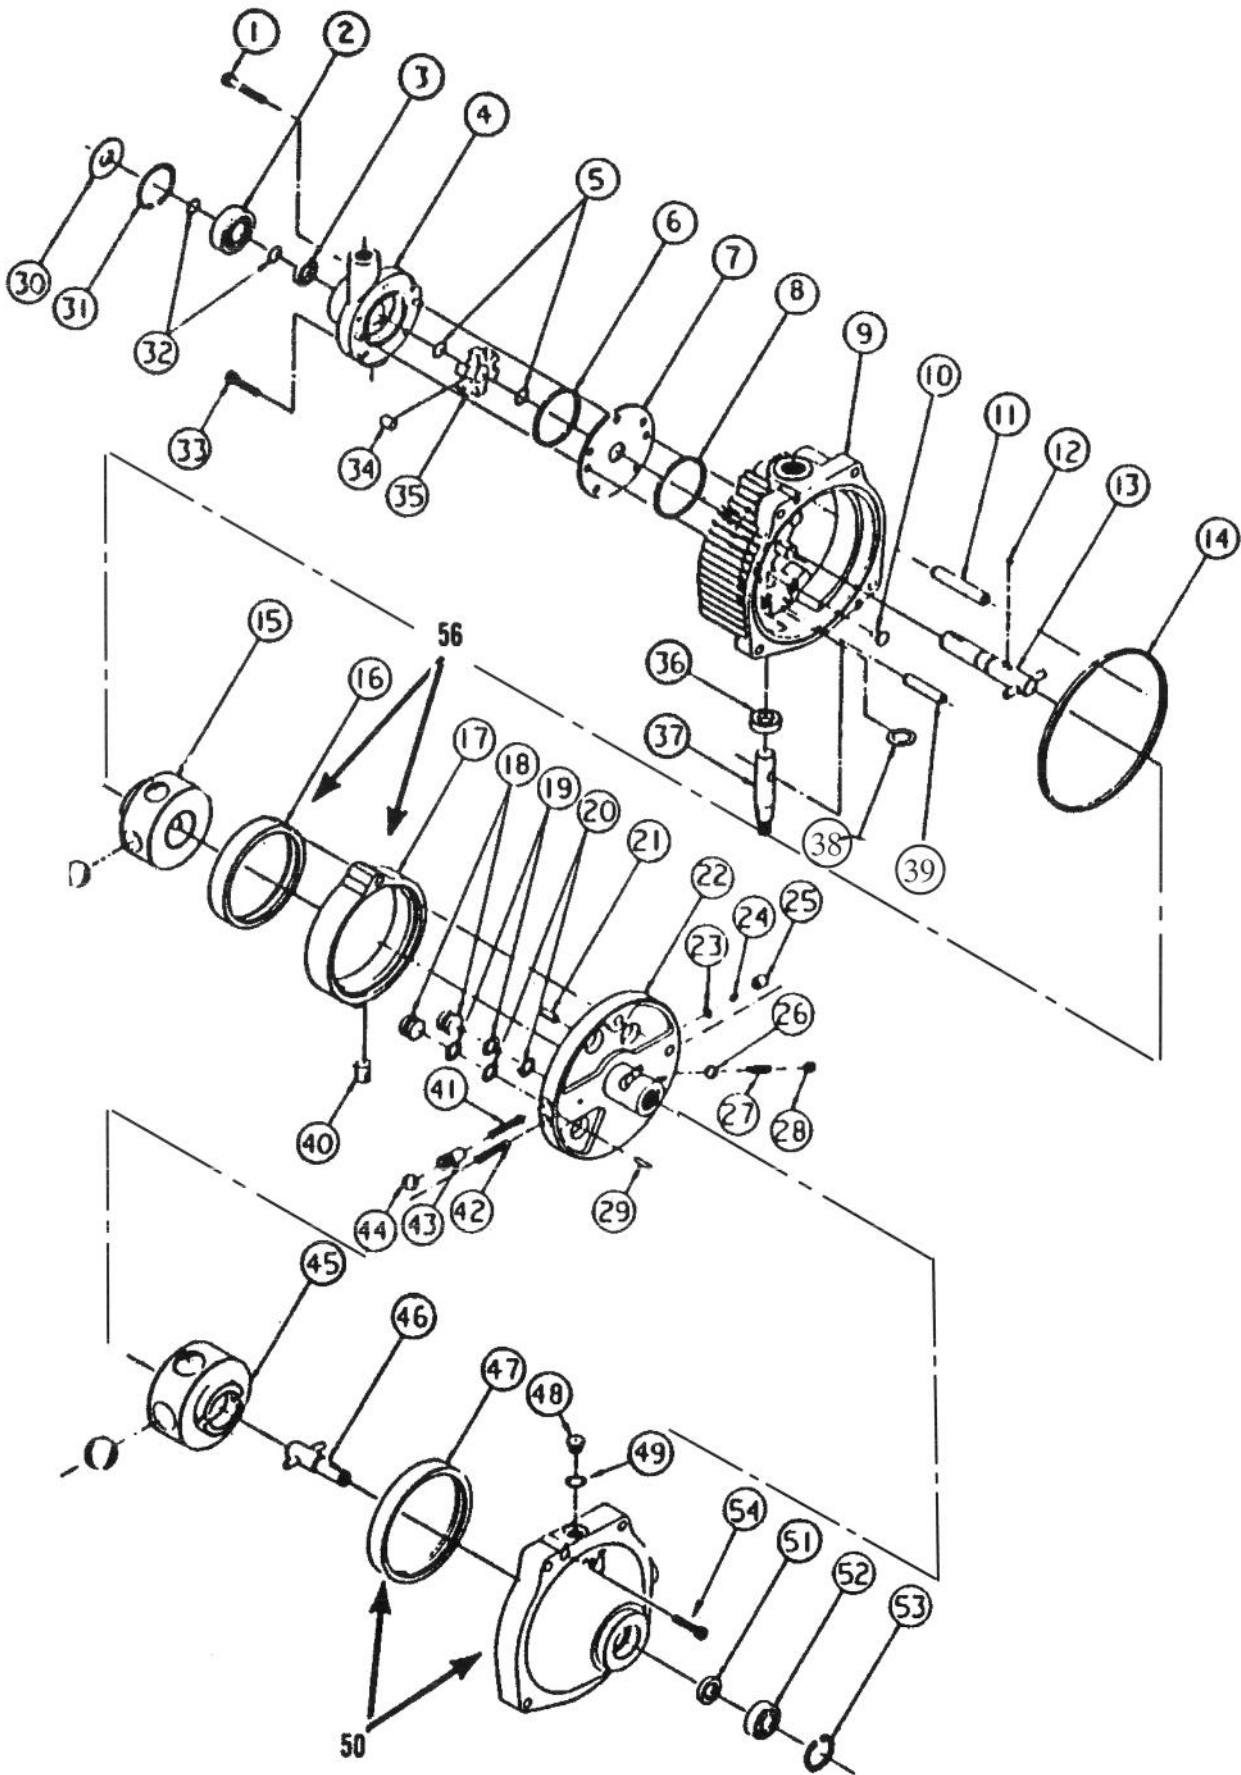


TRANSMISSION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	112635	Screw	1
2	112636	Bearing – Input	1
3	112604	Seal	2
4	112637	Housing – Pump Assembly (Incl. Ref.# 2)	1
5	112654	Ring – Retaining	2
6	112638	Ring – Seal	1
7	112639	Plate	1
8	112640	Ring – Seal	1
9	112641	Cover Assembly (Incl. Ref. #3, 6, 8,10, 11, 19, 20, 36–39, & 51)	1
10	112595	Button	2
11		Pin – Pivot	1
12	112642	Pin	1
13	112643	Shaft – Input	1
14	112644	Ring – Seal	1
15	112645	Rotor – Pump	1
16	113136	Race – Pump	1
17		Ring – Cam	1
18	113041	Piston	2
19		Ring – Back Up	2
20		"O"Ring	2
21	112608	Pin – Coil	1
22	112646	Pintle Assembly (Inc. Ref. #21, 23–29 &41–44)	1
23	112611	Ring – Retaining	2
24	112610	Ball	2
25	112647	Body – Check Valve	2
26	112648	Ball	1
27	112649	Spring – Relief Valve	1
28	112650	Plug – Relief Valve	1

Ref. No.	Part No.	Description	No. Used
29	112651	Pin	1
30	112652	Shield	1
31	112653	Ring – Retaining	1
32	112654	Ring – Retaining	2
33	112616	Screw	4
34	112656	Roller	6
35	112657	Carrier	1
36	112658	Seal	1
37	112659	Kit – Control Shaft	1
38		Washer	1
39		Dowel	1
40	112660	Insert – Cam Ring	1
41	112661	Spring – Acc. Valve	1
42	112661	Spring – Acc. Valve	1
43	112662	Body – Acc. Valve	2
44	112663	Ball	2
45	112664	Rotor – Motor	1
46	112665	Shaft – Output	1
47	113137	Race – Motor	1
48	112613	Plug – "O"Ring (incl. Ref. #49)	1
49	112614	"O"Ring	1
50	112669	Body Assembly (Incl. Ref. #51, 53 & 54)	1
51		Seal	1
52	112666	Bearing – Output	1
53	112600	Ring – Retaining	2
54	112616	Screw	2
55	112667	Kit – Seal, Overhaul (Incl. Ref.# 3, 6, 8, 14, 19, 20, 36, 49 & 51)	1
56	112668	Ring – Cam	1

 
ELECTRICAL SYSTEM

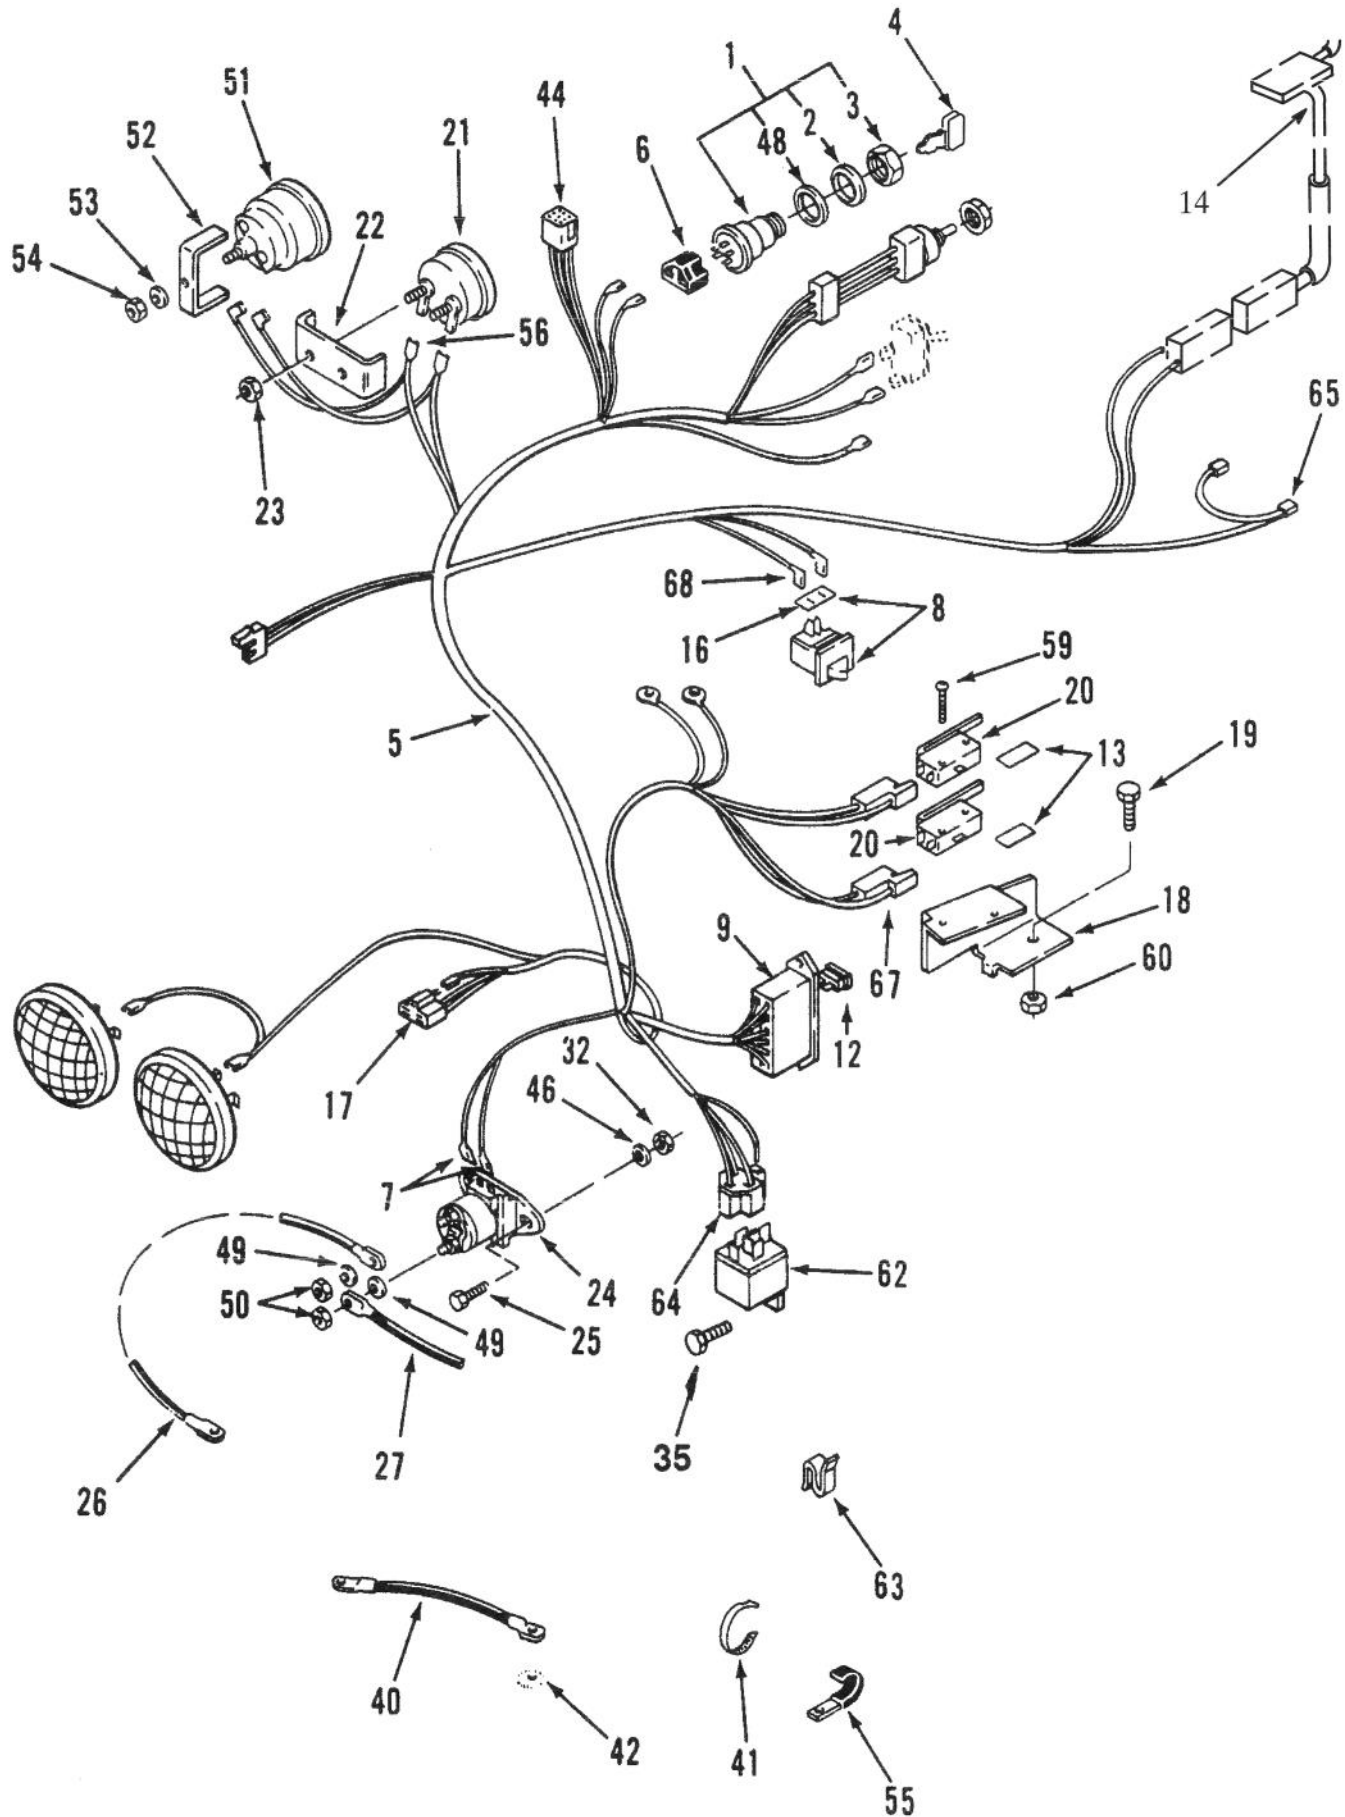

ELECTRICAL SYSTEM

Ref. No.	Part No.	Description	No. Used
1	116338	Switch – Ignition	1
	111216	Switch – Ignition	1
2	920160	Washer – Intl. T	1
3	101884	Nut – Special	1
4	62-7770	Key – Ignition, Padded	1
5	79-3590	Harness Assy – Wiring (Incl. Ref.#6,7,9,44 & 64-68)	1
6	104926	Switch – Connector Body Ignition	1
7	518105	Terminal	1
8	103480	Switch – Clutch Interlock, (Incl. Ref. #16)	1
9	120930	Body – Fuse	1
12	109355	Fuse 15 Amp ATO or ATC	1
	109102	Fuse 25 Amp ATO or ATC	1
	NN10277	Fuse 30 Amp ATO or ATC	1
13	111642	Barrier – Switch Insulator	2
14	38-1420	Switch – Seat	1
16	110502	Shield – Dirt	1
17	112185	Body – Connector	1
18	115411	Support – Switch	1
19	926671	Bolt	1
20	111332	Switch – PTO Interlock	3
21	79-0060	Voltmeter	1
22	78-0080	Clamp – Voltmeter, Back	1
23	5924	Nut	2

Ref. No.	Part No.	Description	No. Used
24	92-9845	Solenoid	1
25	960152	Bolt – Whizlock	2
26	111069	Cable – Solenoid To Starter	1
27	111074	Cable – Battery, Positive	1
32	116497	Nut	4
35	910794	Screw	1
40	109910	Cable – Ground	1
41	100571	Tie – Cable	1
42	3254-2	Washer – Intl. T	1
44	102651	Terminal – Female	8
48	920262	Washer – Special	1
49	3253-3	Washer – Lock	2
50	3218-1	Nut	2
51	78-0020	Meter – Hour (Incl. Ref.# 52-54)	1
52	114017	Clamp – Steel	1
53	920120	Washer – Lock	1
54	915962	Nut – Hex	1
55	8830	"J"Clip	1
59	910478	Screw	2
60	915732	Nut	2
62	116397	Relay	1
63	519337	Clip – Cable	1
64	518105	Terminal	1
65	6921	Terminal	1
68	518077	Terminal	2

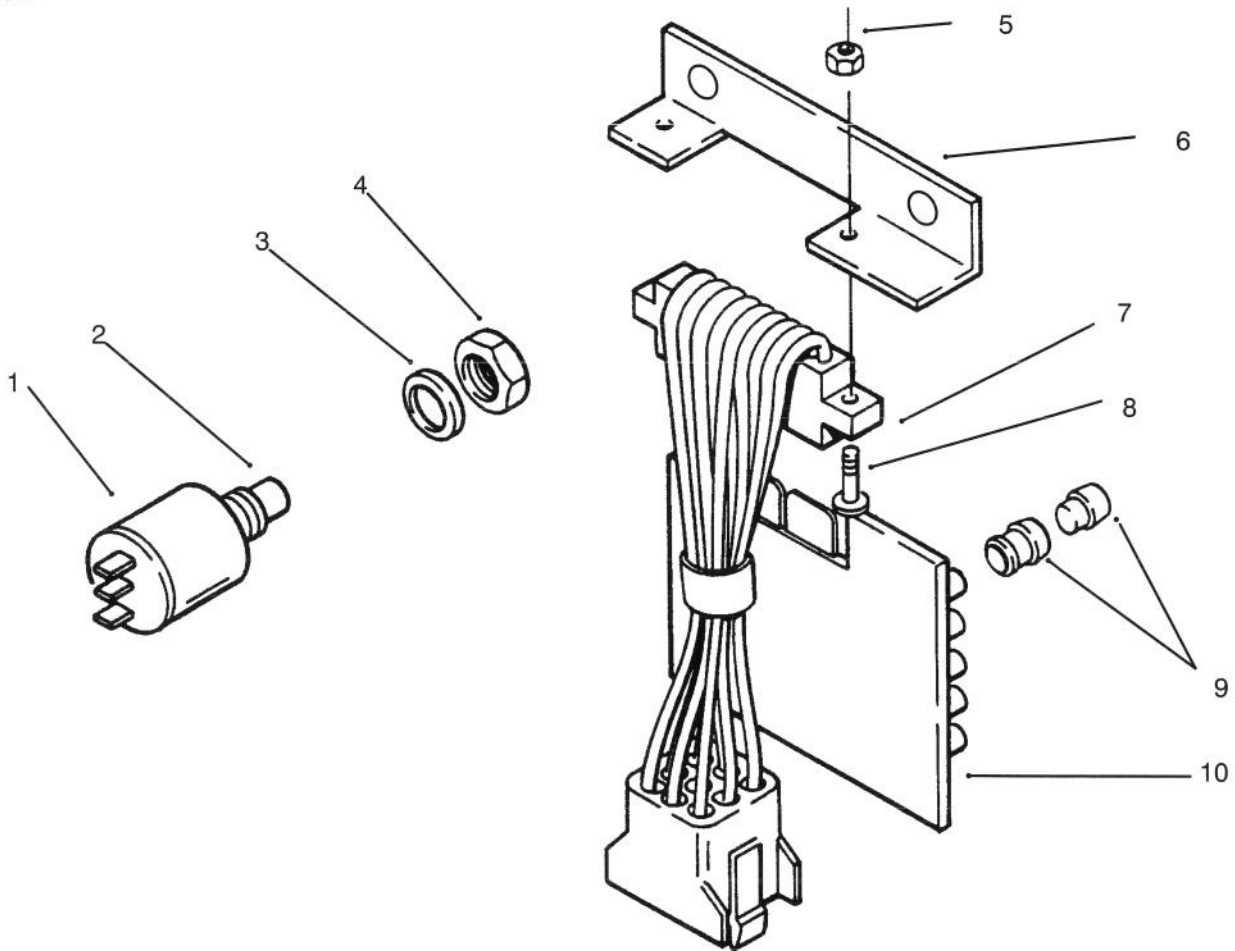 


C-1497

ELECTRICAL SYSTEM


Ref. No.	Part No.	Description	No. Used
1	116796	Test Switch	1
2	117217	Switch - Button (Incl. Ref. #2-4)	1
3	111767	Washer	1
4	111359	Nut - Hex	4
5	915732	Nut - Lock	2

Ref. No.	Part No.	Description	No. Used
6	112506	Bracket	1
7	116723	Harness - Wiring	1
8	9107562	Screw	2
9	111343	Bushing Assembly & Indicator Lens	5
10	114825	PC Board w/Lights	1

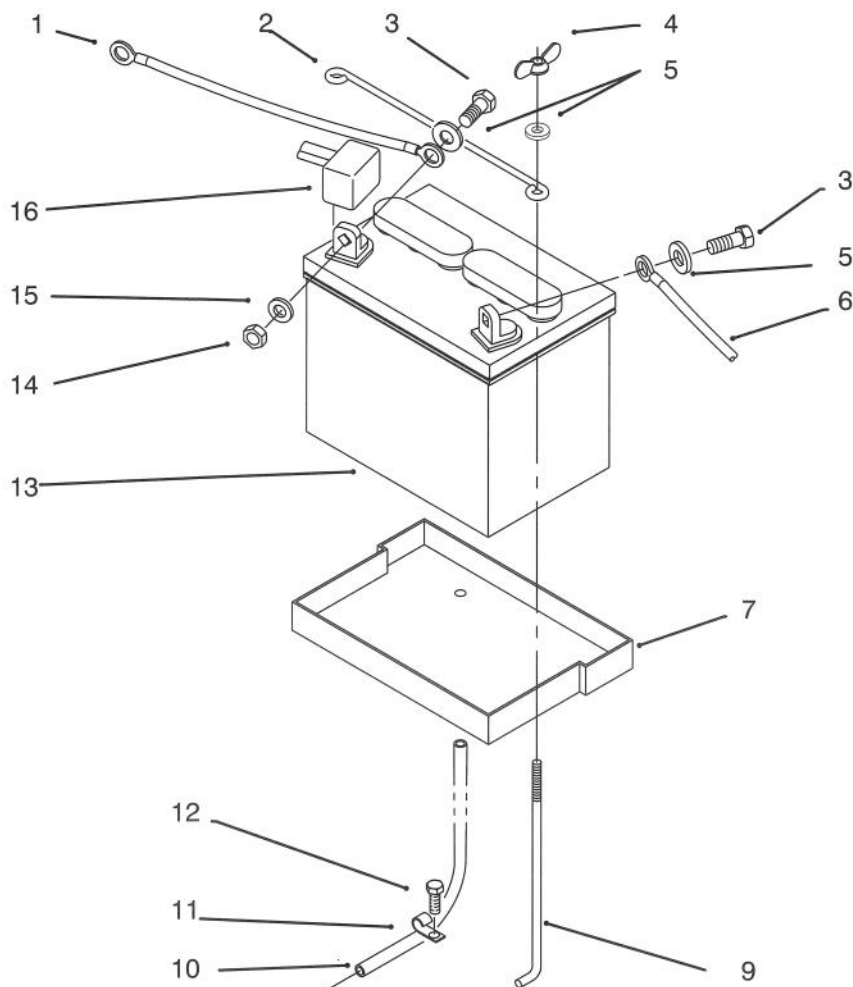 

BATTERY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	111074	Cable - Battery	1	10	114720	Tube - Battery	1
2	113010	Rod - Battery Hold Down	1	11	8830	"J"Clip	1
3	321-3	Screw - Hex. Hd.	2	12	322-2	Screw - Hex. Hd.	1
4	32103-22	Nut - Wing	4	13	104962	Battery	1
5	3256-22	Washer	4	14	3296-42	Nut	2
6	111069	Cable - Battery	1	15	3253-3	Washer - Lock	2
7	106948	Tray - Battery	1	16	109553	Boot - Battery Cable	1
9	113969	Hook - Battery	2				

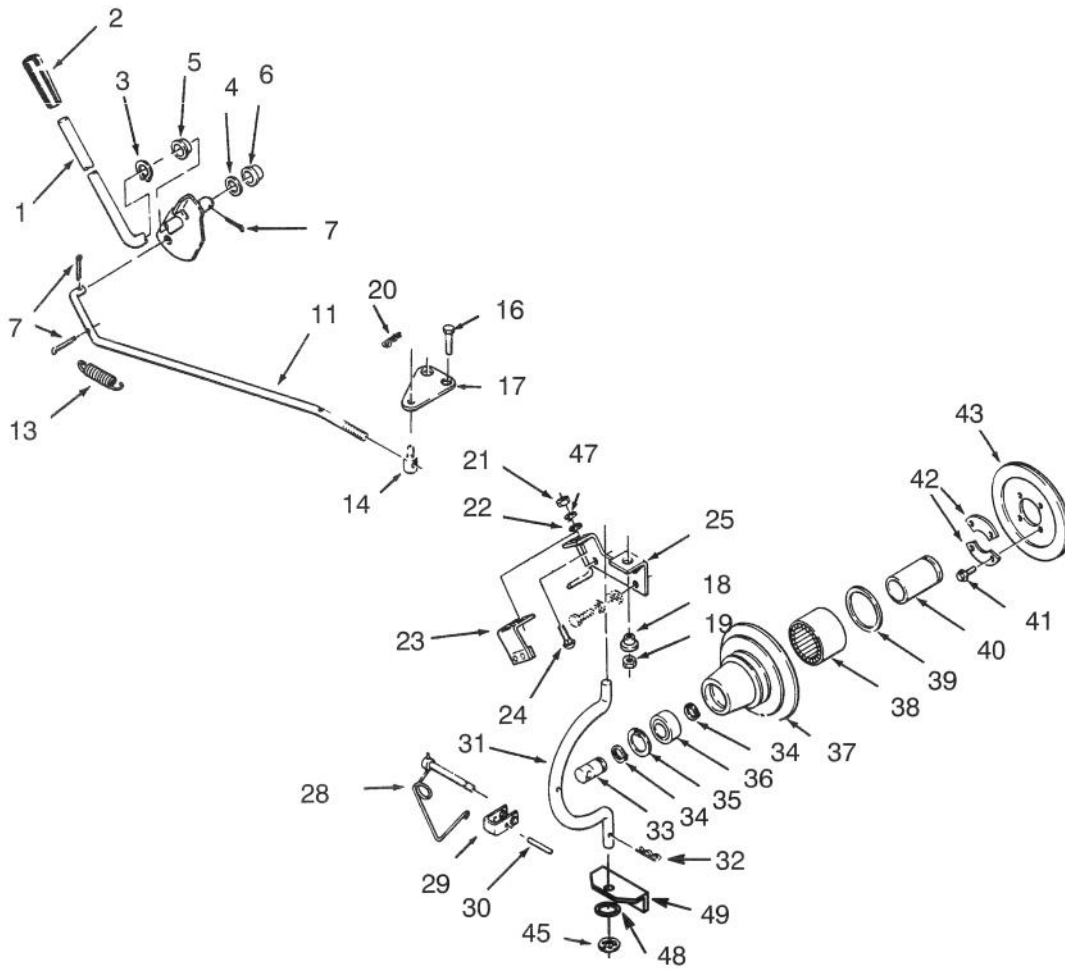 


C-1500

PTO CLUTCH AND CONTROL

Ref. No.	Part No.	Description	No. Used
1	111234	Lever - PTO Clutch	1
2	9038	Grip	1
3	32151-11	Ring - Grip	1
4	3765	Washer - Shim	2
5	5666	Bushing - Nyliner	1
6	5983	Bushing	1
7	3272-10	Pin - Cotter	3
11	111052	Rod - PTO Clutch	1
13	103125	Spring	1
14	110656	Trunnion	1
16	323-7	Screw - Hex. Hd.	1
17	110669	Plate - PTO	1
18	104859	Spacer	1
19	3296-39	Nut	1
20	933505	Pin - Cotter	1
21	3218-1	Nut	2
22	3256-22	Washer	2
23	110665	Brake Assembly - PTO	1
24	3229-25	Bolt - Carriage	2
25	111240	Bracket - Engine	1

Ref. No.	Part No.	Description	No. Used
28	111314	Pin - Locking	1
29	113107	Clevis	1
30	933274	Pin - Spirol	1
31	113108	Rod - PTO Housing	1
32	933506	Pin - Cotter	1
33	102872	Shaft - Stub	1
34	32120-72	Ring - Retaining	2
35	32120-62	Ring - Retaining	1
36	109842	Bearing - Ball	1
37	103478	Housing - Pulley	1
38	6662	Bearing - Needle	1
39	6663	Seal	1
40	6658	Race - Bearing	1
41	321-8	Bolt - Nylok	4
42	6659	Retainer	2
43	114881	Facing - Clutch Plate	1
45	106695	Push-On Ring	1
47	3253-3	Washer - Lock	1
48	3256-27	Washer	1
49	102870	Bracket Support	1

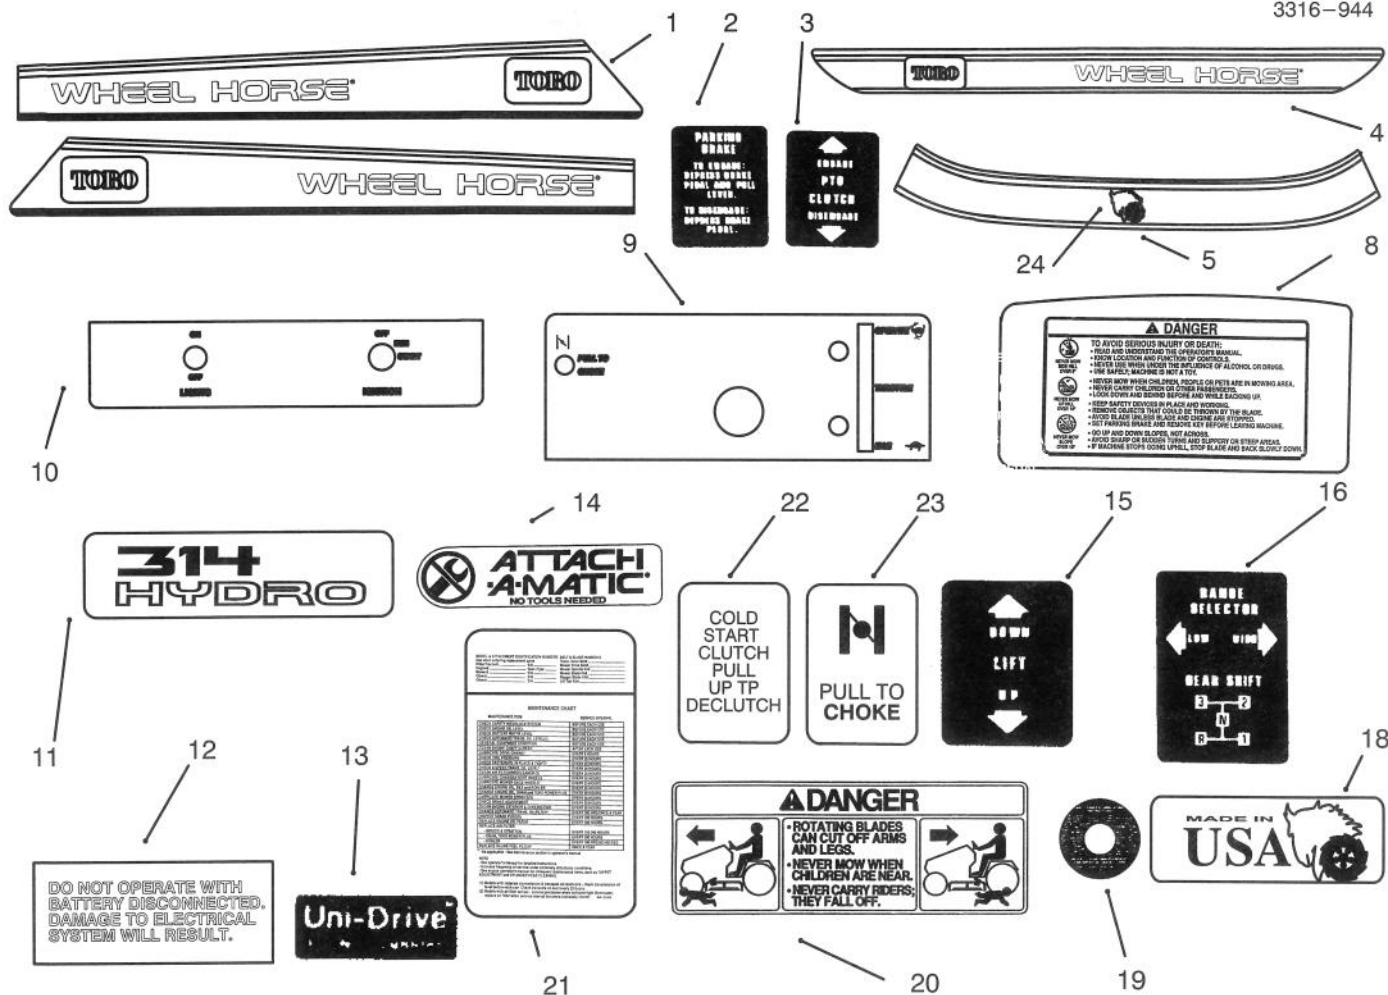 

DECALS

Ref. No.	Part No.	Description	No. Used
1	92-9825	Decal - Hood RH	1
	92-9824	Decal - Hood LH	1
2	116445	Decal - Parking Brake	1
3	111960	Decal - PTO Clutch	1
4	92-9827	Decal - Rear Fender	1
5	92-9826	Decal - Front Hood	1
8	92-9837	Decal - Rear Hood Danger	1
9	119190	Decal - Lower Dash	1
10	74-2470	Decal - Switch Plate	1
11	92-9830	Decal - 314-Hydro	2
12	111926	Decal - Electrical System	1
13	92-8749	Decal - Unidrive	1

Ref. No.	Part No.	Description	No. Used
14	92-8747	Decal - Attach-A-Matic	2
15	112168	Decal - Lift	1
16	111534	Decal - Hi-Low Shift	1
18	76-1340	Decal - Made in U.S.A.	1
19	KH10191	Decal - Air Cleaner/Lub	1
20	92-8946	Decal - Danger	1
21	88-3200	Decal - Maintenance	1
22	789130	Decal - Cold Start	1
23	78-7300	Decal - Choke	1
24	92-9836	Plate - Logo, Wheel Horse	1
*	92-1536	Loose Parts Package	1

TORO PART NUMBER INDEX

3316-944

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
1030	Fitting – grease	33	26	1	8830	"J"Clip	11	11	1
1085	Collar	33	3	1	8830	"J"Clip	39	11	1
1278	Washer – Shim	30	25	1	8830	"J"Clip	18	12	1
1278	Washer – Shim	33	25	1	8830	"J"Clip	3	22	2
1278	Washer – Shim	25	15	4	8830	"J"Clip	33	22	1
1121	Key – Sq.	27	13	1	8830	"J"Clip	6	27	1
1278	Washer – Shim	30	25	1	8830	"J"Clip	37	55	1
1278	Washer – Shim .050	25	15	4	9038	Grip	40	2	1
1481	Fitting – Grease, 45°	9	22	2	9038	Grip	10	20	1
1518	Bearing – Needle	29	32	1	9416	Bearing – Needle	28	7	1
1532	Bearing – Needle	28	21	2	9416	Bearing – Needle	29	11	1
1532	Bearing – Needle	29	31	2	9547	Washer – Thrust	29	33	1
1538	Bearing – Needle	29	20	1	11952	Washer – Special Hub Cap	25	18	2
1644	Hitch – Drawbar	10	11	1	16635	Knob – Motion Control	31	1	1
1645	Tube – Rear (Opt.)	25	2	2	100079	Tube – Front (Opt.)	25	22	2
2844	Special Washer	30	14	1	100291	Tube – Cleat Tire (Opt.)	25	*	2
3023	Clip – Small	6	8	1	100304	Spacer	31	12	2
3023	Clip – Speed	7	22	1	100305	Washer – Friction	33	10	2
3023	Clip – Wire	11	15	1	100309	Bushing – Pivot, Cam	33	12	1
3765	Washer – Shim	40	4	2	100365	Washer – Spring, Disc	33	9	2
3765	Washer – Shim	32	48	1	100571	Tie – Cable	26	*	1
5108	Stem – Valve	25	7	4	100571	Tie – Cable	37	41	1
5210	Washer – Shim	9	11A/R		100656	Bearing – Cam	31	19	1
5210	Washer – Shim .015	25	14	2	101017	Rod – Mid Hitch Lock	10	17	1
5618	Ring – Retaining	10	9	2	101623	Gear – Differential Pinion	28	17	8
5618	Ring – Retaining	9	32	1	101699	Kit – Service, Cylinder	26	24	1
5638	Axle	9	31	1	101707	Lock – Attachment	10	24	1
5666	Bushing – Nyloner	40	5	1	101711	Housing – Front Hitch	10	3	1
5701	Ring – Retaining	32	45	4	101750	Rod – Pivot Latch	10	22	1
5924	Nut	37	23	2	101751	Rod – Lock	10	25	1
5924	Nut	3	25	2	101757	Spacer	26	28	1
5979	Bushing – Hood Pivot	2	15	2	101850	Rod – Hood Stop	2	19	1
5983	Bushing	26	6	1	101884	Nut – Special	37	3	1
5983	Bushing	40	6	1	101884	Nut – Special	3	13	1
5983	Bushing	32	36	3	101889	Gear – Differential Axle	28	15	2
5991	Fitting – Filter	33	25	1	101938	Spring	32	59	1
6216	Pin & Plate	9	30	1	102025	Spacer	31	24	1
6229	Bearing	27	17	1	102138	Switch – Light	3	23	1
6254	Bushing	30	2	2	102592	Tie Rod Asm, RH	9	3	1
6397	Bearing	9	21	1	102628	Fitting – Hyd., Straight	33	28	1
6449	Axle – Seal	28	6	1	102628	Fitting – Straight Adapter	26	19	1
6449	Axle – Seal	29	12	1	102644	Plate – Mid Hitch	10	4	2
6472	Bearing – Flanged	9	5	1	102651	Terminal – Female	37	44	8
6658	Race – Bearing	40	40	1	102809	Nut – Special, Flanged	31	21	1
6659	Retainer	40	42	2	102870	Bracket Support	40	49	1
6662	Bearing – Needle	40	38	1	102872	Shaft – Stub	40	33	1
6663	Seal	40	39	1	102950	Ring – Retaining	3	18	1
6739	Trunnion	27	5	1	103125	Spring	40	13	1
6876	Spacer	11	4	1	103125	Spring – Brake Return	30	6	1
6921	Terminal	37	65	1	103478	Housing – Pulley	40	37	1
7443	Pulley – Engine Drive	11	26	1	103480	Switch – Clutch Interlock,	37	8	1
7456	Clamp	5	17	4	103995	Washer – Special	33	2	1
7607	Tire – Cleat, (Opt.)	25	4	2	104047	Bushing	6	15	1
7879	Bushing	32	47	1	104048	Valve – Fuel Shut-Off	6	16	1
7896	Washer – Bowed	9	15	1	104841	Spring	26	16	1
7956	Washer – Thrust	29	25	1	104859	Spacer	40	18	1
8043	Bulb – Light, Metal Base	6	14	2	104926	Switch – Connector Body	37	6	1
8616	Spring	10	1	2	104962	Battery	39	13	1
8693	Knob	32	39	1	105061	Gear – Differential Ring	28	18	1
8722	Knob	32	38	1	105202	Base – Taillight, w/Bulb	6	11	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
105269	Shaft – Drawbar Hitch	10 10 1	108496	Rod – Pivot	32 34 1
105316	Cap – Lock Rod	10 19 2	108501	Belt – Drive	11 24 1
105453	Key	11 18 1	108537	Bracket Belt	5 27 1
105503	Bushing	7 19 2	108680	Spring	30 11 1
105524	Bracket – Pivot	7 9 2	108716	Plate – Cam	31 31 1
105763	Hub – Rear	28 1 1	108717	Spacer	31 30 1
105763	Hub – Rear	29 18 1	108881	Nut	28 12 4
105797	Ring – Retaining	2 16 2	108881	Nut	33 13 2
105797	Ring – Retaining	10 26 6	108904	Rod Control 9 Long	31 14 1
105876	Ring – Retaining	28 16 2	109045	Bulb – Light, All Glass	6 * 2
106193	Bolt – Special	32 55 1	109081	Kit – Service, Valve	26 * 1
106209	Angle – Belt Guard	4 17 1	109088	Kit – Service, Cylinder	26 25 1
106222	Footrest – RH	5 22 1	109102	Fuse 25 Amp ATO or ATC	37 1
106223	Footrest – LH	5 18 1	109154	Hubcap	25 20 2
106234	Tank – Fuel	6 1 1	109189	Bearing	9 35 1
106236	Support – Fuel Tank, RH	6 30 1	109262	Washer – Special	9 16 2
106267	Grommet – Rubber	26 30 1	109355	Fuse 15 Amp ATO or ATC	37 12 1
106269	Bearing – Flanged	27 8 2	109356	Bushing	30 19 1
106368	Rod – Pivot	32 52 1	109367	Bracket – Brake	29 23 1
106369	Shaft	32 43 1	109370	Shaft	29 26 1
106448	Tube – Filler	28 9 1	109371	Band – Brake	30 17 1
106450	Spacer	32 53 1	109372	Rod – Brake, Front	30 7 1
106522	Chain – Lift	27 4 1	109459	Clamp	2 3 2
106634	Pin – Hitch	10 13 1	109494	Retainer – Headlight RH	2 * 1
106661	Cam – Eccentric	33 18 1	109495	Retainer – Headlight LH	2 22 1
106695	Push-On Ring	40 45 1	109500	Fitting – Grease	25 12 2
106719	Drum – Brake	30 13 1	109530	Nut	3 10 1
106826	Washer – Thrust	28 4 1	109553	Boot – Battery Cable	39 16 1
106826	Washer – Thrust	29 15 1	109554	Bracket – Belt Guard	5 6 1
106826	Washer – Thrust	29 17 1	109703	Gear Assembly	29 34 1
106858	Clamp	11 7 1	109742	Gear 20 Tooth	29 30 1
106948	Tray – Battery	39 7 1	109751	Gear – 20 Teeth	33 31 1
107069	Clip	5 12 3	109752	Gear 46 Tooth	29 29 1
107069	Nut – Speed	4 13 7	109842	Bearing – Ball	40 36 1
107374	Washer – Special	29 4 4	109910	Cable – Ground	37 40 1
107691	Spacer	30 5 1	109910	Wire – Ground	11 16 1
107938	Spring	32 41 1	109989	Spacer	7 20 4
107951	Bracket – Fender Front	6 24 1	110124	Hose – Valve To Cylinder	26 29 1
107975	Belt Guard Asm	5 1 1	110125	Hose – Valve To Cylinder	26 18 1
108130	Wire – Headlight Ground	2 2 1	110189	Rod End Asm	31 13 2
108312	Gasket – Case	29 8 1	110502	Shield – Dirt	37 16 1
108316	Pulley – Transmission Drive	33 38 1	110513	Bearing – Ball	25 16 4
108319	Gasket – Pump	33 34 1	110636	Pad – Footrest	5 15 2
108323	Base – Filter	33 26 1	110656	Trunnion	40 14 1
108325	Arm – Control, Speed	33 15 1	110665	Brake Assembly – PTO	40 23 1
108326	Spacer – Pivot, Long	33 8 1	110669	Plate – PTO	40 17 1
108327	Spacer – Pivot, Short	33 39 1	110677	Wheel – Cleat (Opt.)	25 * 2
108329	Assembly – Plate, Control	33 5 1	110768	Dipstick	28 10 1
108333	Plate – Control, Speed	33 11 1	110769	Spring	32 42 1
108357	Seal – Oil	29 19 1	110780	Handle	32 52 1
108361	Axle – Rear, LH Short	29 1 1	110920	Spring – Seat	7 1 2
108362	Axle – Rear, RH Long	28 5 1	110960	Fender	6 4 1
108363	Pin – Dowel	29 28 2	111052	Rod – PTO Clutch	40 11 1
108364	Fitting – Hyd., Straight	33 36 1	111069	Cable – Battery	39 6 1
108365	Fitting – Hydraulic 90°	33 33 2	111069	Cable – Solenoid To Starter	37 26 1
108366	Spacer – Drive, Gear	33 32 1	111071	Bumper	7 17 2
108368	Assembly – Pump & Motor	33 35 1	111074	Cable – Battery	39 1 1
108393	Fan	33 3 1	111074	Cable – Battery, Positive	37 27 1
108457	Nut – Push	5 3 1	111196	Cap – Differential End	29 2 1
108464	Support – Fuel Tank, LH	6 21 1	111196	Cap – Differential End	28 13 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref.			Part No.	Description	Pg. Ref.		
		No.	No.	Qty.			No.	No.	Qty.
111199	Bearing – Ball	29	3	1	112654	Ring – Retaining	35	32	2
111199	Bearing – Ball	28	19	1	112656	Roller	35	34	6
111201	Case – Transaxle, LH	29	7	1	112657	Carrier	35	35	1
111216	Switch – Ignition	37		1	112658	Seal	35	36	1
111217	Tube – Suction	33	37	1	112659	Kit – Control Shaft	35	37	1
111234	Lever – PTO Clutch	40	1	1	112660	Insert – Cam Ring	35	40	1
111240	Bracket – Engine	40	25	1	112661	Spring – Acc. Valve	35	41	1
111242	Guide – Belt, Bottom	11	19	1	112661	Spring – Acc. Valve	35	42	1
111314	Pin – Locking	40	28	1	112662	Body – Acc. Valve	35	43	2
111332	Switch – PTO Interlock	37	20	3	112663	Ball	35	44	2
111343	Bushing Assembly	38	9	5	112664	Rotor – Motor	35	45	1
111359	Nut – Hex	38	4	4	112665	Shaft – Output	35	46	1
111383	Collar	30	3	1	112666	Bearing – Output	35	52	1
111392	"J"Clip	3	37	1	112667	Kit – Seal, Overhaul	35	55	1
111516	Wheel – Rear	25	6	2	112668	Ring – Cam	35	56	1
111534	Decal – Hi-Low Shift	41	16	1	112669	Body Assembly	35	50	1
111642	Barrier – Switch Insulator	37	13	2	112841	Cap	11	20	1
111757	Edging – Console	3	3	1	113010	Rod – Battery Hold Down	39	2	1
111767	Washer	38	3	1	113041	Piston	35	18	2
111926	Decal – Electrical System	41	12	1	113107	Clevis	40	29	1
111960	Decal – PTO Clutch	41	3	1	113108	Rod – PTO Housing	40	31	1
112168	Decal – Lift	41	15	1	113136	Race – Pump	35	16	1
112185	Body – Connector	37	17	1	113137	Race – Motor	35	47	1
112213	Muffler	11	8	1	113179	Nut	3	19	1
112214	Control – Choke	3	9	1	113381	Spindle – LH	9	33	1
112415	Stop – PTO	3	2	1	113382	Spindle – RH	9	*	1
112426	Pulley – Idler	32	54	1	113443	Tube – Steering	9	17	1
112506	Bracket	38	6	1	113445	Bar – Lift	27	15	1
112506	Bracket – Indicator Lights	3	32	1	113454	Control – Cam	31	11	1
112564	Lens – Taillight	6	13	2	113935	Cover – Side, LH	4	14	1
112595	Button	35	10	2	113969	Hook – Battery	39	9	2
112600	Ring – Retaining	35	53	2	114017	Clamp – Steel	37	52	1
112604	Seal	35	3	2	114343	Spring – Gas	7	16	1
112608	Pin – Coil	35	21	1	114344	Spacer	7	11	2
112610	Ball	35	24	2	114345	Bracket	7	14	1
112611	Ring – Retaining	35	23	2	114426	Logo – Hub Cap 6 (Opt.)	25	23	2
112613	Plug – "O"Ring	35	48	1	114428	Logo – Hub Cap 12 (Opt.)	25	1	2
112614	"O"Ring	35	49	1	114720	Tube – Battery	39	10	1
112616	Screw	35	33	4	114823	Washer – Wave	32	49	2
112616	Screw	35	54	2	114825	PC Board w/Lights	38	10	1
112635	Screw	35	1	1	114881	Facing – Clutch Plate	40	43	1
112636	Bearing – Input	35	2	1	115411	Support – Switch	4	3	1
112637	Housing – Pump Assembly	35	4	1	115411	Support – Switch	37	18	1
112638	Ring – Seal	35	6	1	115854	Control – Throttle	3	34	1
112639	Plate	35	7	1	116000	Bolt – Carriage	5	9	6
112640	Ring – Seal	35	8	1	116302	Arm – Control	26	8	1
112641	Cover Assembly	35	9	1	116305	Bracket – Control Rod	26	11	1
112642	Pin	35	12	1	116321	Arm – Control	32	61	1
112643	Shaft – Input	35	13	1	116324	Rod Assembly	32	62	1
112644	Ring – Seal	35	14	1	116338	Switch – Ignition	3	29	1
112645	Rotor – Pump	35	15	1	116338	Switch – Ignition	37	1	1
112646	Pintle Assembly	35	22	1	116397	Relay	37	62	1
112647	Body – Check Valve	35	25	2	116407	Rod End	31	9	2
112648	Ball	35	26	1	116445	Decal – Parking Brake	41	2	1
112649	Spring – Relief Valve	35	27	1	116497	Nut	37	32	4
112650	Plug – Relief Valve	35	28	1	116634	Knob – Hydraulic Lift	26	13	1
112651	Pin	35	29	1	116723	Harness – Wiring	38	7	1
112652	Shield	35	30	1	116744	Tire – Turf Trac, Rear	25	3	2
112653	Ring – Retaining	35	31	1	116745	Rod – Pivot	2	18	1
112654	Ring – Retaining	35	5	2	116746	Bracket – RH	2	*	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
116747	Bracket - LH	2 17 1	933198	Pin - Spirol	26 7 1
116796	Test Switch	38 1 1	933274	Pin - Spirol	40 30 1
117127	Tire - Turf Trac, Front	25 21 2	933504	Pin - Cotter	30 27 1
117217	Switch - Button	38 2 1	933505	Pin - Cotter	10 14 1
117286	Rim - Front	25 17 2	933505	Pin - Cotter	40 20 1
117343	Latch - Hood	3 31 2	933506	Pin - Cotter	40 32 1
117344	Handle Assembly	2 11 2	937089	Key - Hi-Pro	33 7 1
117371	Bolt - Carriage	4 6 4	937099	Key - Woodruff	29 27 1
117431	Rivet - Pop	3 30 4	937108	Key - Woodruff	29 14 1
117432	Rivet - Pop	2 10 4	937108	Key - Woodruff	28 22 1
117930	Latch - Mid Hitch	10 21 1	960152	Bolt - Whizlock	37 25 2
118280	Bracket - Fuse Holder	5 24 1	973310	"O"Ring	26 17 4
118660	Guide - Control	31 4 1	973370	"O"Ring	33 * 1
119190	Decal - Lower Dash	41 9 1	973370	"O"Ring	26 20 4
119340	Cylinder - Hydraulic	26 26 1	979120	Spacer	10 12 2
120590	Stop - Throttle	3 35 1	9080196	Screw - Cap Hex. Hd.	33 19 1
120930	Body - Fuse	37 9 1	9080356	Bolt	29 6 1
121100	Lever - Lift	27 11 1	9080406	Bolt	29 10 1
128860	Knob - Parking Brake Lever	31 26 1	9080406	Screw - Cap Hex. Hd.	33 6 1
518077	Terminal	37 68 2	9107562	Screw	38 8 2
518105	Terminal	37 7 1	9114584	Bolt	31 18 2
518105	Terminal	37 64 1	9117474	Screw	32 40 1
518211	Bumper	5 10 2	9151126	Nut	4 4 4
519337	Clip - Cable	37 63 1	9202324	Washer	26 27 1
789130	Decal - Cold Start	41 22 1	9202414	Washer	31 25 1
910478	Screw	37 59 2	9202634	Washer	32 44 4
910762	Screw	3 7 2	9329974	Pin - Clevis	26 23 1
910792	Screw	3 4 6	9335054	Pin - Cotter	27 2 1
910794	Screw	37 35 1	9335054	Pin - Cotter	27 7 1
910794	Screw - Machine	5 7 2	9335074	Pin - Cotter	27 12 2
910808	Screw	6 12 4	KH10009	Gasket - Flange	13
910837	Bolt - Carriage	5 4 9	KH10010	Clip - Hi-Tension	18 18 1
910837	Screw	4 12 7	KH10029	Insert - Exhaust Valve	20 7 1
910837	Screw	3 20 7	KH10034	Seal	19 6 1
911423	Bolt	29 5 4	KH10034	Seal	12 7 1
915732	Nut	37 60 2	KH10035	Pin - Governor Stop	15 3 1
915732	Nut - Lock	38 5 2	KH10040	Screw	15 47 1
915740	Nut	5 23 4	KH10049	Bearing	20 8 1
915740	Nut - Lock	3 36 2	KH10054	Retainer - Upper Spring	21 7 2
915960	Nut	3 33 2	KH10055	Gasket	20 16 1
915962	Nut - Hex	37 54 1	KH10057	Reed	19 3 1
920120	Washer - Lock	37 53 1	KH10058	Gasket	19 1 1
920150	Washer - Lock	3 8 2	KH10059	Gasket	23 8 1
920160	Washer - IntL. T	37 2 1	KH10062	Spring	21 14 2
920160	Washer - IntL. T	3 12 1	KH10067	Ball Bearing	20 3 2
920259	Washer - Special	3 17 1	KH10070	Bushing	15 22 1
920262	Washer - Special	3 11 1	KH10071	Valve - Intake	21 6 1
920262	Washer - Special	37 48 1	KH10072	Plate	19 2 1
926671	Bolt	2 4 2	KH10081	Shaft - Balance Gear	20 18 1
926671	Bolt	37 19 1	KH10082	Connector	18 16 1
926671	Screw - Hex. Hd..	4 2 13	KH10087	Washer	15 24 1
926694	Bolt	6 5 2	KH10088	Gasket	23 6 1
926694	Bolt	5 26 6	KH10090	Valve - Exhaust	21 5 1
926694	Bolt	32 33 1	KH10091	Kit - Stator 15 am	18 9 1
926694	Screw - Hex. Hd.	4 15 11	KH10093	Gasket	13 2 1
926694	Screw - Hex. Washer Hd.	3 1 3	KH10093	Gasket - Bowl Screen	13
926697	Bolt	6 3 2	KH10094	Gasket	13 6 1
932120	Pin - Clevis	26 3 1	KH10094	Gasket - Bowl	13
933135	Pin - Spirol	31 23 1	KH10095	Gasket	14 5 1
933198	Pin - Spirol	31 3 1	KH10107	Screw - Hex. Hd.	17 5 4

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
KH10108	Screw	17 7 1	KH10278	Elbow	11 6 1
KH10109	Screw - Idle Speed Adj.	13 19 1	KH10279	Baffle - Side Air	16 2 1
KH10110	Screw	13 14 4	KH10280	Baffle - Inner	16 7 1
KH10112	Spring - Idle Fuel	13 16 1	KH10282	Baffle - Cylinder	16 6 1
KH10113	Spring	13 8 1	KH10287	Linkage - Choke (Carb. to	15 32 1
KH10114	Spring - Adj.	13 18 1	KH10289	Screw - Pozidrive T.H.	16 5 3
KH10116	Screw	13 1 1	KH10290	Screw	20 24 1
KH10117	Bowl - Fuel	13 3 1	KH10292	Spring	21 2 1
KH10119	Decal - Float Switch	23 * 1	KH10293	Lever - Choke Control	15 42 1
KH10123	Connector - 90°	14 3 2	KH10294	Lever - Throttle Control	15 43 1
KH10124	Fan	17 4 1	KH10295	Lever - Governor	15 27 1
KH10126	Screen	17 6 1	KH10296	Spring (Governor to Carb.)	15 31 1
KH10128	Ball	13 7 1	KH10297	Base - Air Cleaner	12 9 1
KH10130	Line - Fuel	14 1 1	KH10298	Cover	19 8 1
KH10132	Needle - Idle Fuel Adj.	13 15 1	KH10299	Cover	12 2 1
KH10134	Sleeve	23 12 1	KH10302	Space	15 44 1
KH10135	Tag - Caution	24 * 1	KH10303	Bracket - Clutch Control	15 48 1
KH10136	Washer	15 25 1	KH10304	Bracket - Solenoid	24 * 1
KH10143	Baffle	19 4 1	KH10304	Bracket - Starter	24 5 1
KH10144	Screw	20 22 8	KH10308	Clamp	15 49 1
KH10145	Washer	20 21 9	KH10309	Hose	19 11 1
KH10146	Gasket	13	KH10310	Pin - Camshaft	21 4 1
KH10146	Gasket - Carburetor	13	KH10311	Gasket	20 10 1
KH10147	Spacer .005	21 3 1	KH10312	Strap - Lifting	20 23 1
KH10148	Spacer .010	21 * 1	KH10313	Lead - Violet, Regulator-	18 * 1
KH10149	Gasket	19 7 1	KH10315	Lead - Wire, Module	18 * 1
KH10150	Stud	19 9 1	KH10319	Pump Assy - Fuel	14 4 1
KH10152	Washer	15 41 2	KH10321	Module - Ignition	18 1 1
KH10181	Bolt	24 7 2	KH10322	Kit - Spacer	21 19 2
KH10188	Spacer	17 3 4	KH10323	Kit - Drive	24 12 1
KH10189	Nut	12 3 1	KH10324	Kit - Drive Parts	24 13 1
KH10191	Decal - Air Cleaner	12 * 1	KH10325	Set - Gasket w/ Seals	20 * 1
KH10191	Decal - Air Cleaner/Lub	41 19 1	KH10345	Connector	18 11 1
KH10201	"O" Ring	23 2 1	KH10345	Connector - Female	23 13 1
KH10209	Cap - Drive End	24 11 1	KH10358	Kit - Choke & Throttle	13 * 1
KH10210	End Cap Ass'Y	24 8 1	KH10412	Cover - Air Cleaner Element	12 4 1
KH10221	Kit - Retainer	21 10 2	KH10413	Screw - Hex .Hd.	16 1 6
KH10228	Gear Assembly	21 21 2	KH10496	Rotator - Valve	21 13 2
KH10231	Baffle - Head	16 3 1	KH10515	Kit - Brush	24 9 1
KH10235	Element - Precleaner	12 5 1	KH10535	Nut - Lock	11 5 1
KH10236	Element	12 6 1	KH10539	Tappet - Intake Valve	21 11 2
KH10244	Brace - Starter Tail	24 2 1	KH10541	Screw	23 5 3
KH10245	Kit - Crankshaft	21 16 1	KH10545	Screw	20 14 4
KH10247	Armature	24 10 1	KH10545	Screw	15 34 1
KH10248	Pan - Oil	23 7 1	KH10548	Screw	18 3 2
KH10258	Set - Gasket w/o Seals	20 * 1	KH10549	Screw	24 * 1
KH10259	Camshaft Assy	21 1 1	KH10549	Screw	24 6 2
KH10261	Head - Cylinder	20 19 1	KH10549	Screw	20 13 4
KH10262	Retainer - Piston Pin	22 3 2	KH10550	Screw	23 9 4
KH10263	Flywheel	17 1 1	KH10552	Screw - Pozidrive	14 7 2
KH10265	Housing - Blower	16 8 1	KH10556	Washer - Lock	15 38 1
KH10266	Adapter - Oil Fill	23 4 1	KH10562	Plug	20 5 1
KH10267	Bearing - Needle	21 22 2	KH10567	Washer	16 4 1
KH10268	Seal	20 12 1	KH10569	Washer	14 6 2
KH10269	Seal	20 4 1	KH10569	Washer	15 39 1
KH10270	Dipstick	23 1 1	KH10570	Washer	18 2 2
KH10272	Gasket	20 9 1	KH10570	Washer	15 35 1
KH10274	Gasket	13 1	KH10570	Washer - Flat	18 7 1
KH10274	Gasket - Carburetor	13	KH10574	Retainer	21 20 1
KH10275	Filter	19 5 1	KH10576	Nut - Wing	12 1 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
KH10585	Spacer	15 23 1	78-0080	Clamp - Voltmeter, Back	37 22 1
KH10586	Clamp	14 2 2	78-0370	Insert	9 13 1
KH10588	Key - Woodruff	17 2 1	78-0760	Seat	7 4 1
KH10600	Screw	15 37 1	78-1540	Bracket - Control, Lower	32 57 1
KH10605	Screw	15 45 1	78-1540	Bracket - Lower Control	4 8 1
KH10605	Screw - Pozidrive	18 10 4	78-1550	Bellcrank	27 14 1
KH10606	Screw - Hex. Hd.	18 4 1	78-2680	Frame	10 8 1
KH10607	Screw - Hex. Hd.	24 3 1	78-2880	Shaft - Lower	9 7 1
KH10609	Screw	12 8 3	78-2900	Tie Rod Assembly, LH	9 27 1
KH10610	Screw	18 6 1	78-2920	Tie Rod End	9 25 1
KH10610	Screw - Hex. Hd.	24 4 1	78-2990	Plate - Seat Pivot	7 10 1
KH10617	Plug - Cup	21 15 1	78-3010	Bracket - Battery Support	4 1 1
KH10618	Clip	18 5 1	78-3020	Plate - Front	4 16 1
KH10619	Nut	15 50 1	78-3320	Clamp - Steel	3 26 1
KH10620	Plug	23 10 4	78-5610	Console	3 6 1
KH10624	Nut	15 40 1	78-5620	Plate - Hood Stand	3 21 1
KH10626	Screw	15 28 1	78-5631	Bracket - Control	31 5 1
KH10629	Nut - Pal	15 8 1	78-5640	Bar - Lift	26 5 1
KH10629	Palnut	19 10 1	78-5660	Lever - Motion Control	31 2 1
KH10660	Kit - Governor Gear	15 1 1	78-5670	Rod - Lift Control	26 9 1
KH10661	Cover	20 15 1	78-6020	Rod - Pivot	32 50 1
KH10663	Kit - Float	13 4 1	78-7300	Decal - Choke	41 23 1
KH10666	Washer	17 8 1	78-7600	Wheel Assembly - Front	25 * 2
KH10673	Regulator - Rectifier	18 14 2	78-7740	Arm - Brake Pivot	30 18 1
KH10677	Gasket - Air Cleaner	13	78-8500	Lever - Parking Brake	31 22 1
KH10682	Bushing &	13	79-0060	Meter - Volt	3 16 1
KH10682	Bushing	13	79-0060	Voltmeter	37 21 1
KH10682	Bushing - Linkage Natural	13	79-1350	Pedal - Brake/Return	30 1 1
KH10686	Bushing Linkage Black	13	79-3590	Harness Assy - Wiring	37 5 1
KH10687	Plate - Bearing	20 11 1	79-4990	Bracket - Fender Support	6 20 1
KH10693	Carburetor Assembly	13	79-5020	Tube - Filter to Pump	33 29 1
KH10693	Kit - Adjustable Jet	13 *	79-5270	Filter - Oil	33 24 1
KH10694	Main - Needle	13 17 1	83-2720	Bolt - Lug	25 5 10
KH10695	Rod - Connecting .010	22 * 1	83-2820	Spring	32 63 1
KH10695	Washer	15 46 1	83-6520	Rod - Lock	10 18 1
KH10696	Kit - Carburetor Repair	13 *	86-9280	Tube - Hydraulic (Pressure)	26 21 1
KH10697	Gasket	12 10 1	86-9290	Tube - Hydraulic (Return)	26 32 1
KH10697	Gasket	13	88-2710	Support - Steering Shaft	9 8 1
KH10697	Gasket - Air Cleaner	13	88-2782	Hood	2 8 1
KH10700	Gasket	20 20 1	88-2790	Decal - Danger	28 23 1
KH10701	Carburetor Linkage	13	88-3200	Decal - Maintenance	41 21 1
KH10701	Linkage (Governor to Carb.)	15 30 1	92-1525	Hoodstand	4 7 1
KH10702	Shaft - Choke	13 20 1	92-1532	Engine - 14HP Kohler	11 9 1
KH10709	Jet - Main	13 1	92-1536	Loose Parts Package	41 * 1
KH10709	Main Jet	13 1	92-4987	Shaft - Upper	9 9 1
KH10710	Kit - High Altitude Jet	13 *	92-6697	Screw	7 5 4
KH10733	Gasket	13	92-7251	Kit - Carburetor w/Linkage	13 *
NN10277	Fuse 30 Amp ATO or ATC	37 1	92-7252	Carburetor Assembly	13 10 1
38-1420	Switch - Seat	7 21 1	92-7253	Bushing	15 33 1
38-1420	Switch - Seat	37 14 1	92-7254	Bushing	15 29 1
55-3570	Fuel Cap	6 6 1	92-7255	Plate - Choke	13 21 1
62-7770	Key - Ignition, Padded	37 4 1	92-7256	Shaft w/Lever & Seal	13 12 1
62-7770	Key - Ignition, Padded	3 14 1	92-7257	Plate - Throttle	13 13 1
66-0120	Knob - Control	3 5 1	92-7258	Shaft - Governor Gear	20 2 1
74-2470	Decal - Switch Plate	41 10 1	92-7259	Guide - Valve	20 6 2
76-1340	Decal - Made in U.S.A.	41' 18 1	92-7260	Starter Assembly	24 1 1
76-1420	Steering Wheel	9 12 1	92-7262	Kit - Governor Cross Shaft	15 26 1
78-0020	Meter - Hour	3 15 1	92-7263	Choke Lever Assembly	15 * 1
78-0020	Meter - Hour	37 51 1	92-7264	Clip	18 8 1
78-0080	Clamp - Volt Meter	3 24 1	92-7265	Plug - Spark	18 17 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
92-7266	Screw	18	15	2	322-4	Screw - Hex. Hd.	7	18	6
92-7267	Rod - Connecting Std.	22	4	1	322-5	Bolt	27	3	1
92-7268	Piston w/Ring Set Std.	22	2	1	322-5	Screw - Hex. Hd.	7	8	4
92-7269	Piston w/Ring Set .003	22	*	1	322-5	Screw - Hex. Hd.	6	29	2
92-7270	Piston w/Ring Set .010	22	*	1	323-5	Bolt	10	6	4
92-7271	Piston w/Ring Set .020	22	*	1	323-6	Bolt	9	6	2
92-7272	Piston w/Ring Set .030	22	*	1	323-6	Bolt	11	13	2
92-7273	Set - Ring, Std. & .003	22	1	1	323-7	Screw - Hex. Hd.	40	16	1
92-7274	Set - Ring .010	22	*	1	323-8	Bolt	11	17	2
92-7275	Set - Ring .020	22	*	1	323-8	Bolt	9	19	2
92-7276	Set - Ring .030	22	*	1	323-8	Bolt	31	28	1
92-7278	Kit - Float Switch	23	11	1	323-9	Bolt	30	20	1
92-7279	Short Block	20	1	1	323-9	Bolt	31	27	1
92-7280	Miniblock (w/Out Crankshaft)	20		1	323-9	Screw - Hex. Hd.	29	24	1
92-7281	Decal - HP	16	9	1	323-15	Bolt	29	9	2
92-7294	Plate - Shift Cover	4	11	1	323-23	Bolt	30	15	1
92-7297	Transaxle	28	*	1	323-25	Screw - Cap Hex. Hd.	33	4	2
92-7298	Case - Transaxle, RH	28	11	1	323-25	Screw - Hex. Hd.	29	22	3
92-8747	Decal - Attach-A-Matic	41	14	2	323-26	Screw - Hex. Hd.	29	21	1
92-8749	Decal - Unidrive	41	13	1	323-44	Screw - Hex. Hd..	10	16	6
92-8946	Decal - Danger	4	10	1	324-5	Bolt	11	23	3
92-8946	Decal - Danger	41	20	1	3217-5	Nut	31	10	2
92-9511	Line - Fuel 62"	6	26	1	3217-27	Nut - Hex	3	28	1
92-9824	Decal - Hood LH	2	*	1	3218-1	Nut	40	21	2
92-9824	Decal - Hood LH	41		1	3218-1	Nut	37	50	2
92-9825	Decal - Hood RH	41	1	1	3218-3	Nut	28	3	2
92-9825	Decal - Hood RH	2	7	1	3219-3	Nut	9	26	1
92-9826	Decal - Front Hood	41	5	1	3220-1	Nut	31	8	3
92-9826	Decal - Hood, Front	2	6	1	3229-25	Bolt - Carriage	2	20	4
92-9827	Decal - Rear Fender	41	4	1	3229-25	Bolt - Carriage	40	24	2
92-9830	Decal - 314-Hydro	41	11	2	3230-1	Bolt	5	25	1
92-9836	Decal - Logo	2	23	1	3231-25	Bolt - Carriage	10	5	3
92-9836	Plate - Logo, Wheel Horse	41	24	1	3235-22	Bolt	30	16	1
92-9837	Decal - Danger	2	9	1	3235-22	Screw - Hex. Hd.	6	28	1
92-9837	Decal - Rear Hood Danger	41	8	1	3242-2	Screw - Set	33*40		2
92-9845	Solenoid	37	24	1	3243-5	Screw - Set	28	2	2
93-1613	Latch - Front Hitch	10	23	1	3243-5	Screw - Set	29	16	2
237-69	"O"Ring	9	10	1	3245-32	Screw - Set	30	4	1
2412-98	Clamp	6	19	2	3246-2	Screw - Set	11	25	2
281-10	Plug - Pipe	28	20	2	3253-3	Washer - Lock	39	15	2
281-10	Plug - Pipe	33	27	3	3253-3	Washer - Lock	40	47	1
302-5	Fitting - Grease	30	26	1	3253-3	Washer - Lock	37	49	2
302-5	Fitting - Grease, Straight	9	34	2	3253-4	Washer	11	2	1
321-2	Screw	18	13	1	3253-4	Washer - Lock	7	2	4
321-3	Screw - Hex. Hd.	39	3	2	3253-4	Washer - Lock	6	17	1
321-4	Bolt	5	5	2	3253-4	Washer - Lock	33	21	2
321-4	Bolt	31	6	2	3253-4	Washer - Lock	9	29	1
321-4	Screw	26	10	1	3253-6	Washer - Lock	11	22	3
321-6	Bolt	32	46	1	3253-21	Washer - Lock	10	7	4
321-8	Bolt - Nylok	40	41	4	3253-21	Washer - Lock	11	14	1
321-8	Screw - Hex. Hd.	7	13	2	3254-1	Washer - Lock	6	10	4
321-9	Screw - Hex. Hd.	31	17	1	3254-2	Washer - Intl. T	2	13	1
321-11	Bolt	26	31	2	3254-2	Washer - Intl. T	37	42	1
322-1	Bolt	9	28	1	3255-25	Washer - Lock	3	27	1
322-2	Bolt	6	18	5	3256-4	Washer	6	2	2
322-2	Screw - Hex. Hd.	39	12	1	3256-4	Washer	30	22	1
322-3	Bolt	6	23	6	3256-4	Washer	31	29	2
322-3	Bolt	32	56	2	3256-6	Washer	30	23	2
322-3	Screw - Cap Hex. Hd.	33	20	2	3256-21	Washer	6	9	4
322-3	Screw - Hex. Hd.	4	9	2	3256-22	Washer	39	5	4

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref.		Part No.	Description	Pg. Ref.	
		No.	Qty.			No.	Qty.
3256-22	Washer	7	2	3296-29	Nut - Lock	7	6
3256-22	Washer	2	3	3296-29	Nut - Lock	4	2
3256-22	Washer	31	2	3296-39	Nut	10	9
3256-22	Washer	40	2	3296-39	Nut	27	1
3256-23	Washer	11	1	3296-39	Nut	28	3
3256-23	Washer	7	4	3296-39	Nut	30	1
3256-23	Washer	27	1	3296-39	Nut	40	1
3256-23	Washer	6	2	3296-39	Nut	30	1
3256-23	Washer - Flat	26	2	3296-39	Nut	31	1
3256-24	Washer	30	2	3296-39	Nut	11	2
3256-25	Washer	11	3	3296-39	Nut - Lock	9	4
3256-26	Washer	27	1	3296-39	Nut - Lock	33	4
3256-26	Washer - Flat	10	1	3296-42	Nut	26	2
3256-26	Washer - Flat	33	1	3296-42	Nut	31	4
3256-27	Washer	40	1	3296-42	Nut	5	1
3256-62	Washer	27	3	3296-42	Nut	2	4
3257-24	Key - Woodruff	33	1	3296-42	Nut	39	2
3272-1	Pin - Cotter	2	2	3296-42	Nut	26	1
3272-1	Pin - Cotter	26	2	3296-42	Nut - Lock	7	2
3272-2	Pin - Cotter	32	1	3296-45	Nut - Lock	33	1
3272-6	Pin - Cotter	30	2	32103-22	Nut - Wing	39	4
3272-10	Pin - Cotter	40	3	32120-47	Ring - Retaining	27	1
3272-11	Pin - Cotter	30	2	32120-47	Ring - Retaining	32	2
3272-11	Pin - Cotter	26	1	32120-47	Ring - Retaining	31	4
3272-17	Pin - Cotter	25	2	32120-62	Ring - Retaining	40	1
3272-19	Pin - Cotter	9	1	32120-64	Ring - Retaining	33	1
3272-21	Pin - Cotter	9	1	32120-72	Ring - Retaining	40	2
3296-4	Nut	32	1	32120-93	Ring - Retaining	9	2
3296-6	Nut	9	4	32121-111	Pin - Spirol	9	1
3296-27	Nut	6	4	32136-5	Nut - Slotted	9	1
3296-29	Nut	5	11	32146-17	Nut	31	1
3296-29	Nut	27	1	32151-11	Ring - Grip	40	1
3296-29	Nut	6	6	32151-91	Retainer	27	1
3296-29	Nut	32	2	32312-94	Pin - Spirol	32	1
3296-29	Nut	26	1	9080-26	Bolt	33	1
3296-29	Nut - Lock	5	7				

*Not Illustrated

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame under the seat. In any correspondence concerning the Product, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number .
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Hood Assembly	2	Camshaft, Crankshaft And Valves	21
Control Panel	3	Piston And Rings	22
Hood Stand And Supports	4	Oil Pan And Dipstick	23
Belt Guard & Footrest	5	Starter	24
Fender, Fender Supports And Fuel Tank	6	Wheel And Tires	25
Seat	7	Hydraulic Control System	26
Front Axle and Steering	8	Hydrostatic Lift Linkage	27
Frame & Hitches	10	Transaxle Assembly	28
Engine, Muffler, Pulley And Drive Belt	11	Clutch, Brake and Speed Control Linkage	30
Air Intake	12	Clutch, Brake Motion Control Linkage	31
Carburetors	13	Hydrostatic Transmission	33
Fuel Pump	14	Transmission Assembly	34
Governor Linkage	15	Electrical System	36-38
Baffles And Shrouds	16	Battery	39
Flywheel	17	P.T.O. Clutch And Control	40
Ignition System	18	Decals	41
Breather And Vent	19	Numerical Parts List	42
Crankcase And Cylinder Head	20		

Optional Equipment

Description	Model / Part No.	Description	Model / Part No.
36" Rear Discharge Deck	78305	Wheel Weight, Rear Flush	81117
42" Side Discharge Deck	78345	Tire Chains	82522
42" Rear Discharge Deck	78350	Clevis Hitch	85518
42" Recycler	78355	Chrome Front LoGo Hub Cap	111427
36" Tiller	79370	Chrome Rear LoGo Hub Cap	114428
48" Dozer Blade	79350	Auxiliary Fuel Tank	*83300
50" Grader Blade	79351	Kits	
42" Single Stage Snowthrower	79360	H.D. Spindles, Wheels & Tires	80494
11 cu. ft. Twin Bagger (42" Mower)	79301	Recycler (42" R.D. Mower)	86001
Wheel Weight, Rear	81115	Leaf Baffle (42" S.D. Mower)	85501

* CAN NOT BE USED WITH CLEVIS HITCH OR REAR BAGGER

