



TimeCutter™ Z380 Riding Mower

Model No. 74402 - 250000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Frame Assembly	 3	Crankshaft Assembly Briggs and Stratton 280h07-0166-e1	 20
Seat Assembly	 4	Crankcase Assembly Briggs and Stratton 280h07-0166-e1	 21
Control Assembly	 5	Oil Filter, Tube and Pump Assembly Briggs and Stratton 280h07-0166-e1	 22
Hydro and Belt Drive Assembly	 6	Carburetor Assembly Briggs and Stratton 280h07-0166-e1	 23
LH Hydrostat Assembly Part No. 108-2394	 7	Governor Assembly Briggs and Stratton 280h07-0166-e1	 24
RH Hydrostat Assembly Part No. 108-2393	 9	Blower Housing Assembly Briggs and Stratton 280h07-0166-e1	 25
Engine Assembly	 11	Starter Assembly Briggs and Stratton 280h07-0166-e1	 26
Styling Assembly	 12	Gasket Assembly Briggs and Stratton 280h07-0166-e1	 27
38 Inch Deck Assembly	 13	Carburetor Overhaul Kit Assembly Briggs and Stratton 280h07-0166-e1	 28
38 Inch Deck Decal Assembly No. 107-9139	 14	Attachments and Accessories List	 29
38 Inch Deck Recycler Assembly	 15		
38 Inch Deck Spindle and Belt Drive Assembly	 16		
Electrical System Assembly	 17		
Cylinder Assembly Briggs and Stratton 280h07-0166-e1	 18		
Cylinder Head Assembly Briggs and Stratton 280h07-0166-e1	 19		

 
Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HWHTF. hex washer head thread forming
ASM. assembly	HYD. hydraulic
BBC. blade brake clutch	LH. left hand
CARR. carriage	NI. nylon insert
CCW. counter clock wise	NPTF. national pipe thread fine
CW. clockwise	PFH. phillips flat head
DEG. degrees	PPH. phillips pan head
ECM. electronic control module	PPHTF. phillips pan head thread forming
EXT. external	PRH. phillips round head
FH. flat head	PTH. phillips truss head
GA. gauge	PTO. power-take-off
HD. heavy-duty	RH. right hand
HF. hex flange	ROPS. roll-over protection system
HH. hex head	SFH. slotted fillister head
HHF. hex head flange	SHH. slotted hex head
HHFTF. hex head flange thread forming	SHWH. slotted hex washer head
HJ. hex jam	SPH. slotted pan head
HLH. hex lag head	SQH. square head
HOC. height-of-cut	SRH. slotted round head
HSBH. hex socket button head	STD. standard
HSFH. hex socket flat head	TAP. self tapping
HSH. hex socket head	TTH. torx truss head
HWH. hex washer head	

Footnotes


- | | |
|---|--|
| ❶ Not illustrated | ❷ Not serviced separately |
| ❸ Included in Engine Gasket Set-Ref. 358. | ❹ Included in Valve Gasket Set-Ref. 1095. |
| ❺ Included in Carburetor Overhaul Kit-Ref. 121. | ❻ Included in Carburetor Gasket Set-Ref. 977. |
| ❽ Optional Equipment | ❼ Obtain parts from www.briggsandstratton.com |

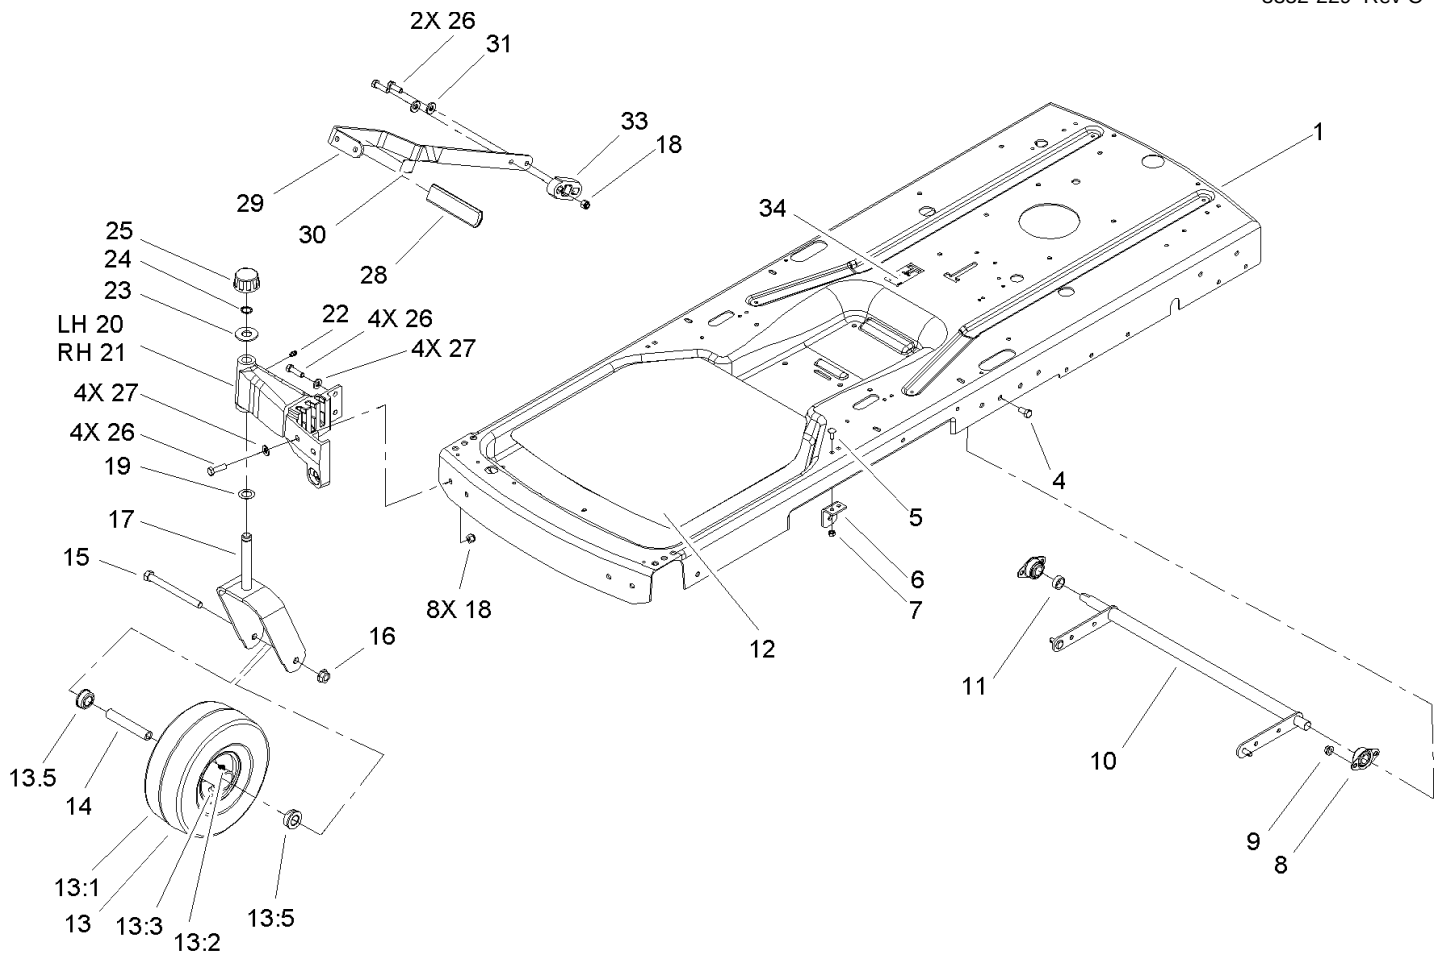

Frame Assembly


Ref	Part No.	Qty.	Description
1	108-2325-01	1	Frame
4	323-4	4	Screw-HH
5	3229-1	4	Screw-CARR
6	105-3439	2	Bracket-Lift
7	3296-42	4	Nut-Lock, NI
8	1-633102	2	Bearing-Flange, Side
9	3290-357	4	Nut-HHF, Whiz
10	105-3499-03	1	Lift Arm ASM
11	106-2222	1	Spacer
12	105-3460	1	Pad-Antiskid
13	105-3471	2	Front Wheel And Tire ASM
13:1	105-1943	1	Tire
13:2	302-11	1	Fitting-Lube, 45 DEG
13:3	232-27	1	Stem-Valve
13:5	114-1640	2	Bushing-Flange
13:99	93-4244	1	Tube-Inner (W/Valve)
14	104-3667	2	Spanner-Wheel
15	325-22	2	Screw-HH
16	32128-23	2	Nut-HF
17	107-9119-01	2	Castor Fork ASM
18	3296-39	9	Nut-Lock, NI
19	3-6498	2	Washer-Thrust
20	105-6986-01	1	Caster-LH
21	105-6985-01	1	Castor-RH

Ref	Part No.	Qty.	Description
22	302-5	2	Fitting-Grease
23	28-2480	2	Washer-Plain
24	32151-103	2	Ring-Retaining, EXT
25	61-9780	2	Cap-Hub
26	323-18	10	Screw-HH
27	3256-24	8	Washer-Flat
28	105-3450	1	Grip-Lever, Lift
29	108-2317-03	1	Lever-Lift
30	106-8743	1	Decal
31	98-5975	2	Washer-Belleville
33	106-2211	1	Block-Lift
34	108-6109	1	Decal-Transport, Ce

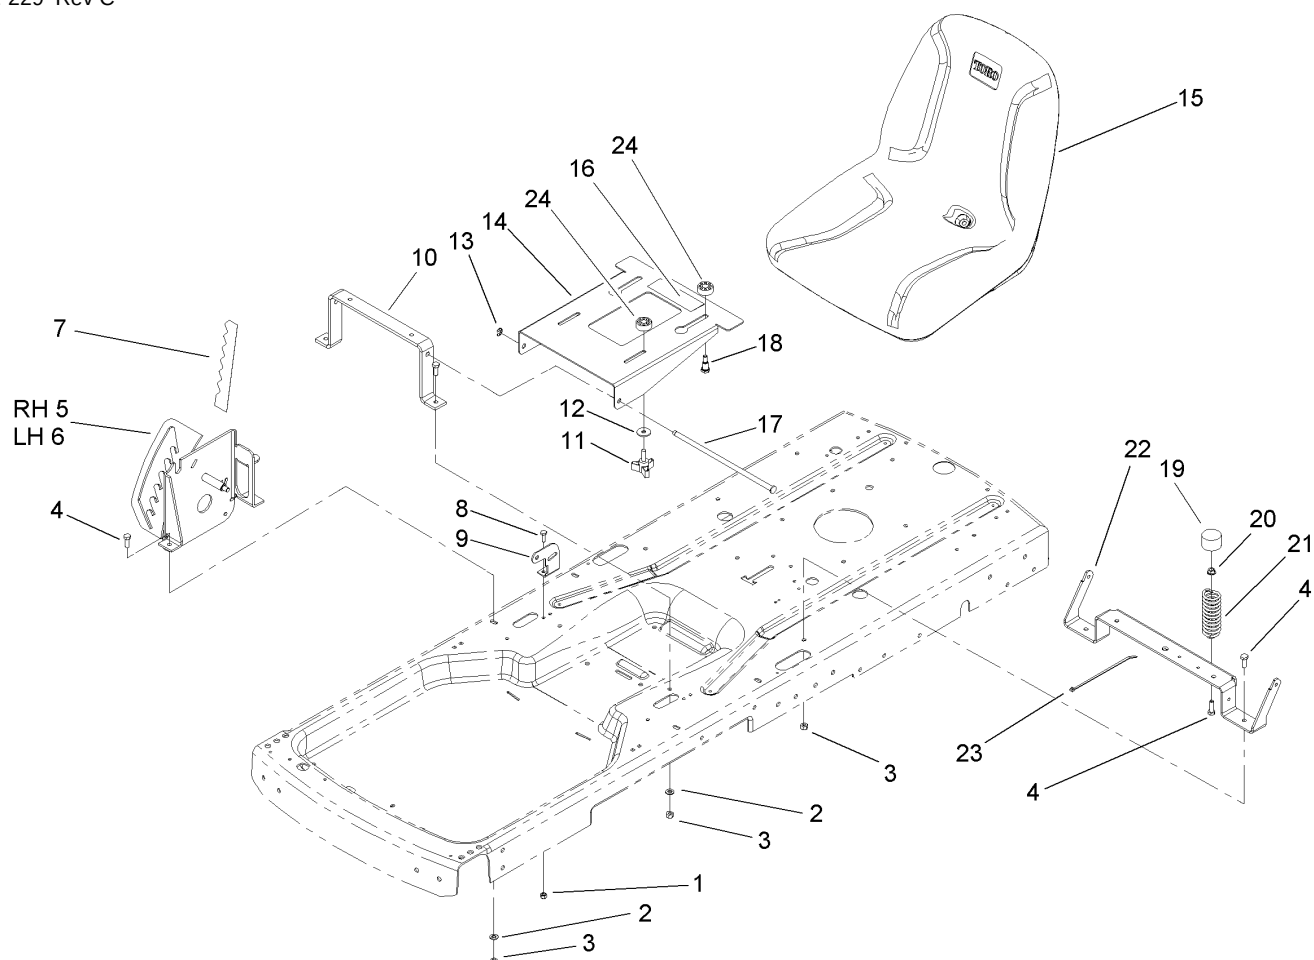 

Seat Assembly


Ref	Part No.	Qty.	Description				
1	3296-42	4	Nut-Lock, NI				
2	3256-23	6	Washer-Flat				
3	3296-29	12	Nut-Lock, NI				
4	322-4	14	Screw-HH				
5	106-2158-03	1	RH Plate ASM				
6	106-2159-03	1	LH Plate ASM				
7	106-2223	1	Decal-HOC				
8	321-4	4	Screw-HH				
9	106-2180	2	Bracket-Bellcrank				
10	105-6954-03	1	Brace-Seat, Front				
11	106-2240	2	Knob				
12	5-4460	2	Washer-Pivot				
13	105-7004	1	E-Ring				
14	105-6953-03	1	Bracket-Seat				
15	108-2329	1	Seat				
16	106-8717	1	Decal-Service				
17	105-6955	1	Pin-Pivot				
18	613529	2	Screw-Shoulder				
19	701178	2	Cap-Protector				
20	32128-25	2	Nut-HF				
21	92-7054	2	Spring-Compression				
22	108-2358-03	1	Brace-Seat, Rear				
23	614249	1	Strap-Tie				
24	107-4902	4	Spacer-Nylon				

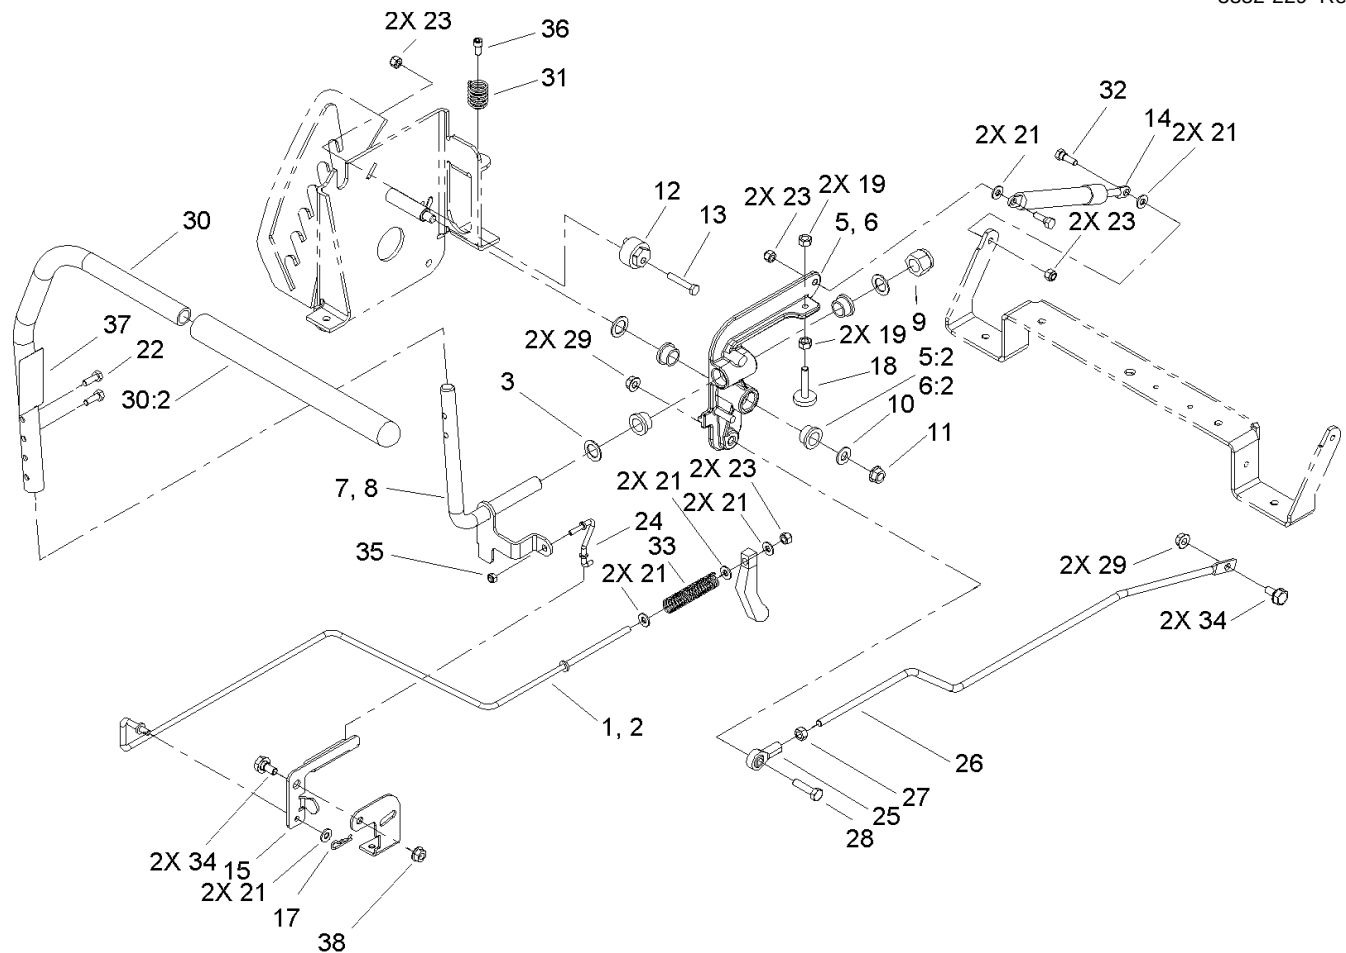 

Control Assembly


Ref	Part No.	Qty.	Description
1	105-7045	1	Rod-Brake, LH
2	105-7044	1	Rod-Brake, RH
3	105-3481	6	Washer-Thrust
①5	107-4909	1	LH Activator Arm ASM
①5:2	105-3455	4	Bushing
6	107-4910	1	RH Activator Arm ASM
6:2	105-3455	4	Bushing
①7	105-3488	1	LH Pivot Shaft ASM
8	105-3487	1	RH Pivot Shaft ASM
9	3296-53	2	Nut-Lock, NI
10	3256-24	2	Washer-Flat
11	3296-59	2	Nut-Lock, NI
12	107-4874	2	Eccentric
13	321-9	2	Screw-HH
14	103-2913	2	Damper-Control, Motion
15	106-2181	2	Bellcrank
17	1-806003	2	Pin-Cotter, Hair
18	105-3486	2	Stop-Adjustment
19	3217-6	4	Nut-Hex
21	3256-22	12	Washer-Flat
22	321-4	4	Screw-HH
23	3296-42	8	Nut-Lock, NI
24	106-2179	2	Link-Brake
25	1-543017	2	Balljoint-RH

Ref	Part No.	Qty.	Description
26	105-7048	2	Rod-Hydro
27	3219-2	2	Nut-Hex
28	322-6	2	Screw-HH
29	32128-20	4	Nut-HF
30	106-2242	2	Handle ASM
30:2	1-633257	1	Grip-Control, Motion
31	105-3469	2	Spring-Compression
32	106-2214	4	Bolt-Shoulder
33	105-3465	2	Spring-Compression
34	37-8771	4	Bolt-Shoulder
35	3296-2	2	Nut-Lock, NI
36	3274-52	2	Screw-HSH
37	106-8742	2	Decal
38	32128-25	2	Nut-HF

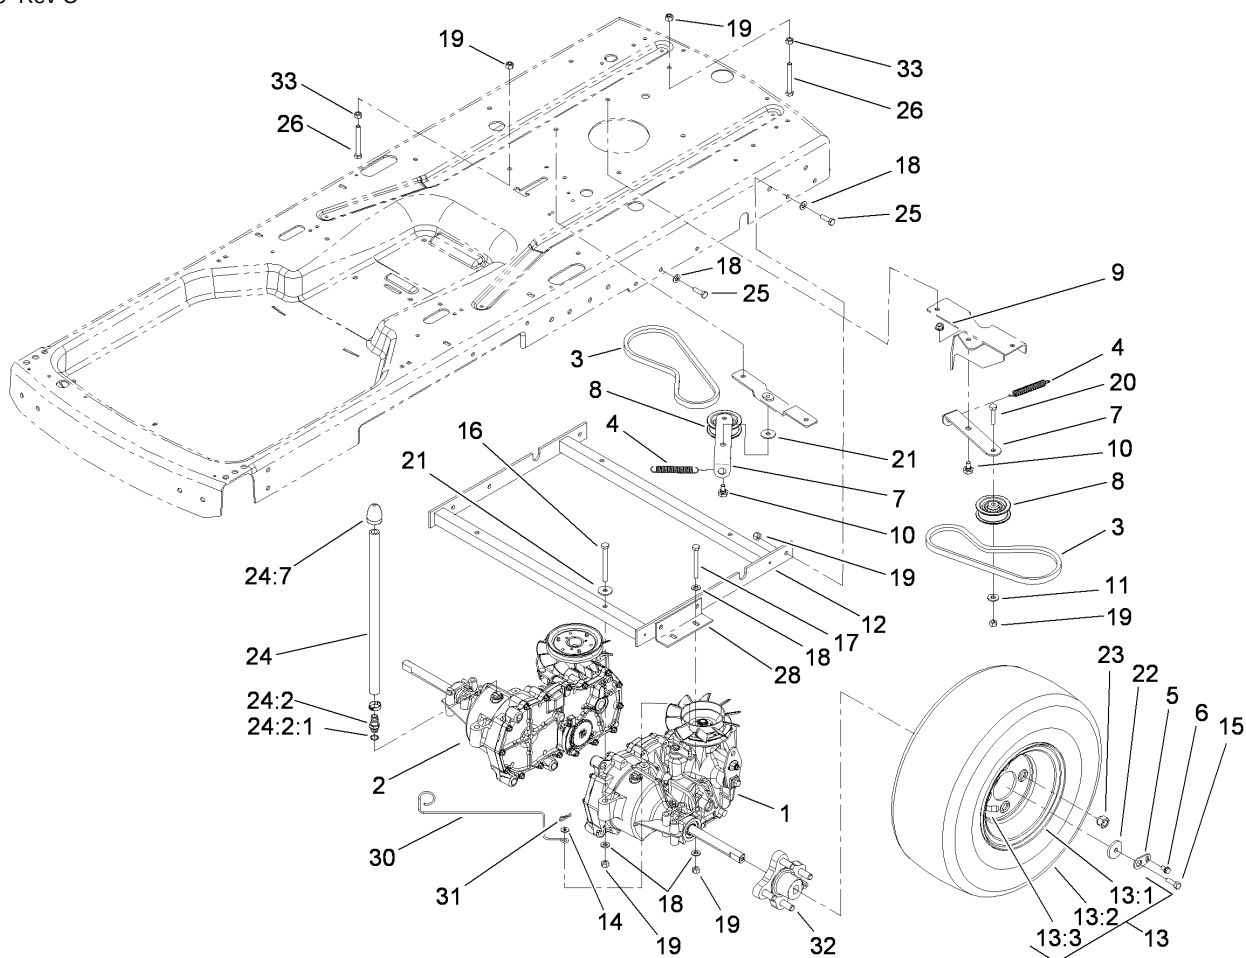 


Hydro and Belt Drive Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	108-2394	1	Transaxle-Hydro, LH	21	5-4460	5	Washer-Pivot
2	108-2393	1	Transaxle-Hydro, RH	22	106-7001	2	Washer-Wheel
3	106-2174	2	V-Belt	23	242-50	8	Nut-Lug
4	95-3805	2	Spring	24	106-7002	2	Vent Hose ASM
5	105-3438	2	Tab-Locking	24:2	93-3818	1	Fitting ASM
6	3234-13	2	Screw-HHF	24:2:1	93-3816	1	O-Ring
7	105-7047	2	Arm-Idler	24:7	107-1701	1	Cap Vent ASM
8	106-2176	2	Pulley-Idler	25	322-5	6	Screw-HH
9	32128-25	1	Nut-HF	26	322-13	2	Screw-HH
10	37-8770	2	Bolt-Shoulder	28	105-7039-03	2	Support-Hydro
11	3256-3	2	Washer-Flat	30	107-4875	2	Rod-Bypass
12	107-4878-03	1	Hydro Mount ASM	31	1-806003	2	Pin-Cotter, Hair
13	106-7003	2	Rear Wheel ASM	32	108-9533	2	Hub ASM
13:1	242-76	1	Rim	33	3217-6	2	Nut-Hex
13:2	105-3496	1	Tire				
13:3	232-27	1	Stem-Valve				
13:99	107-2491	1	Tube-Tire				
14	3256-1	2	Washer-Flat				
15	3210-5	2	Screw-HH				
16	322-20	4	Screw-HH				
17	322-13	4	Screw-HH				
18	3256-23	18	Washer-Flat				
19	3296-29	18	Nut-Lock, NI				
20	322-7	2	Screw-HH				

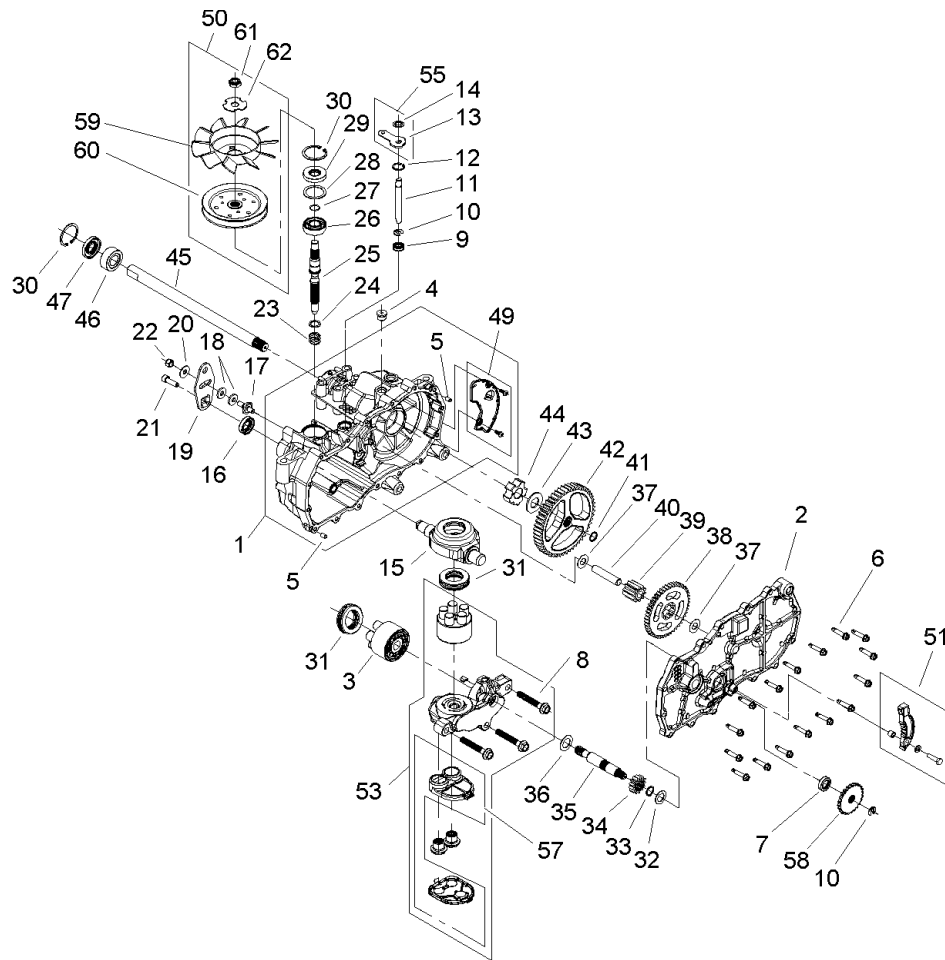 


LH Hydrostat Assembly Part No. 108-2394

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	106-8695	1	RH Main Housing ASM	24	94-1937	1	Washer-Thrust, Block
2	106-8696	1	RH Side ASM	25	104-5306	1	Shaft-Input
3	104-2106	1	Cylinder Block ASM	26	104-5311	1	Bearing-Ball
4	104-2189	1	Plug-Thread, Straight	27	104-5307	1	Ring-Retaining
5	9004800-2506	2	Pin-Hydrogear	28	104-5308	1	Spacer
6	104-5305	16	Screw-HHF	29	104-5310	1	Seal-Lip
7	104-5347	1	Seal-Oil	30	104-5309	2	Ring-Retaining
8	94-6926	3	Bolt	31	94-6922	2	Bearing-Thrust
9	106-8676	1	Seal-Lip	32	104-5339	1	Washer-Flat
10	106-8677	2	Ring-Retaining, EXT	33	104-5340	1	Ring-Retaining
11	106-8678	1	Rod-Bypass	34	104-5316	1	Gear-Pinnion, 13T
12	106-8679	1	Ring-Retaining, Int	35	106-8683	1	Shaft-Motor
13	107-2490	1	Arm-Bypass	36	104-5360	1	Washer-Shaft, Motor
14	106-8681	1	Ring-Retaining, EXT	37	94-1933	2	Washer
15	104-5304	1	Swashplate-Trunnion	38	104-5317	1	Gear
16	104-5313	1	Seal-Lip	39	104-5318	1	Gear-Jackshaft, 10T
17	104-2116	1	Stud	40	104-5329	1	Pin-Jackshaft
18	105-1873	2	Puck-Friction	41	104-5328	1	Ring-Retaining, Spiral
19	106-8747	1	Arm-Control	42	106-8684	1	Gear-Bull, 52T
20	5-4460	1	Washer-Pivot	43	94-1943	1	Washer
21	107-2488	1	Screw	44	104-5320	1	Bearing-Sleeve
22	105-1872	1	Nut	45	106-8685	1	Axle
23	94-1936	1	Spring-Block	46	104-5321	1	Bearing-Sleeve, Outboard
				47	104-5322	1	Seal-Lip

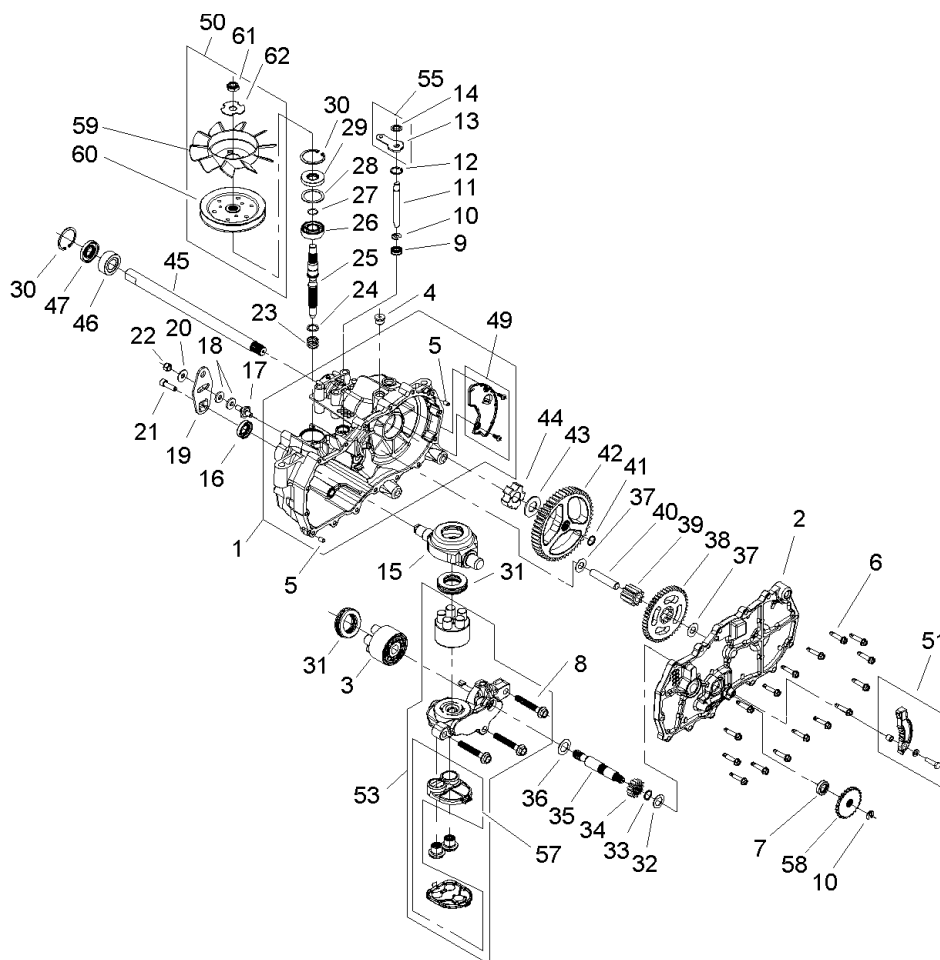 


LH Hydrostat Assembly Part No. 108-2394 (continued)

Ref	Part No.	Qty.	Description				
①48	106-8686	1	Seal Kit				
49	106-8697	1	RH Expansion Plate Kit				
50	106-8698	1	Fan Pulley Kit				
51	106-8688	1	Brake Arm Kit				
53	108-6190	1	RH 7-Piston Center Section Kit				
①54	104-2147	1	Sealant				
55	107-2489	1	Bypass Arm Kit				
57	106-8693	1	Filter Kit				
58	106-8694	1	Disc-Brake, Cog				
59	110-8566	1	Fan-6 Inch, 10 Blade				
60	104-1754	1	Pulley				
61	105-1875	1	Nut-Lock				
62	107-9122	3	Washer-Slotted				

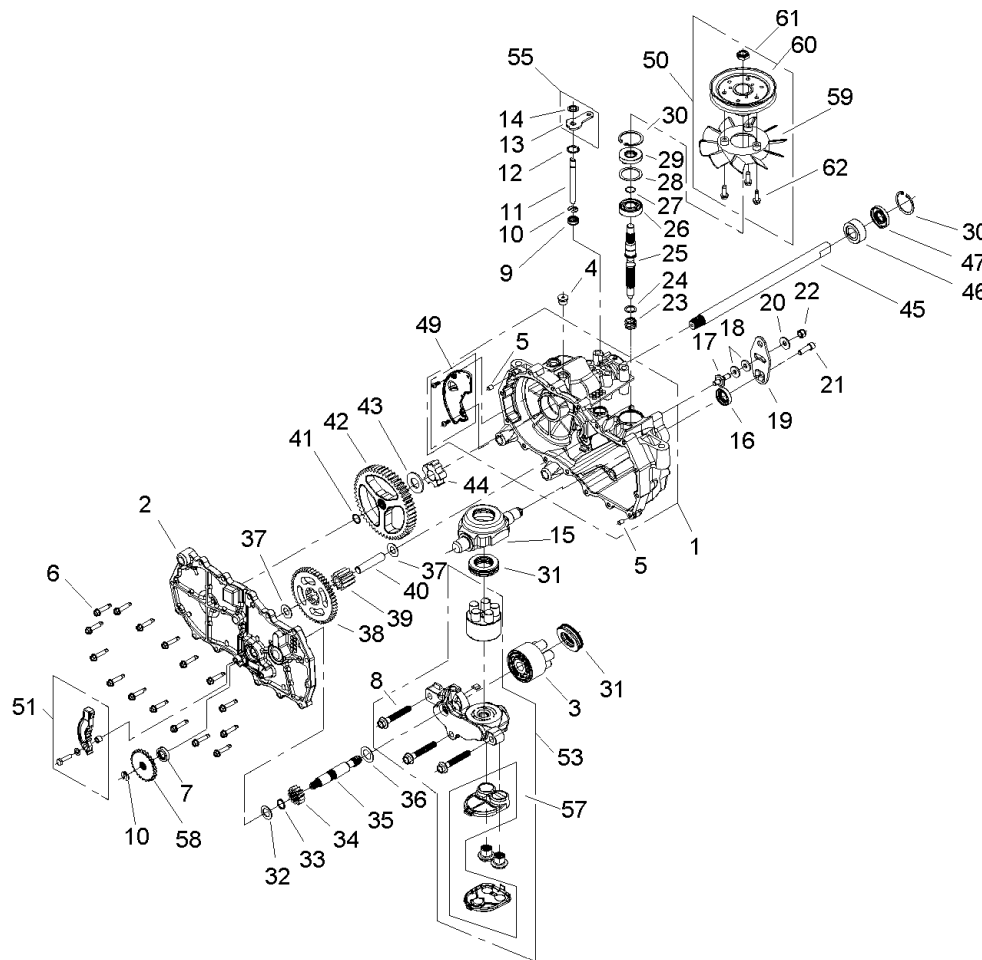 


RH Hydrostat Assembly Part No. 108-2393

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	106-8674	1	LH Main Housing ASM	24	94-1937	1	Washer-Thrust, Block
2	106-8675	1	LH Side ASM	25	104-5306	1	Shaft-Input
3	104-2106	1	Cylinder Block ASM	26	104-5311	1	Bearing-Ball
4	104-2189	1	Plug-Thread, Straight	27	104-5307	1	Ring-Retaining
5	9004800-2506	2	Pin-Hydrogear	28	104-5308	1	Spacer
6	104-5305	16	Screw-HHF	29	104-5310	1	Seal-Lip
7	104-5347	1	Seal-Oil	30	104-5309	2	Ring-Retaining
8	94-6926	3	Bolt	31	94-6922	2	Bearing-Thrust
9	106-8676	1	Seal-Lip	32	104-5339	1	Washer-Flat
10	106-8677	2	Ring-Retaining, EXT	33	104-5340	1	Ring-Retaining
11	106-8678	1	Rod-Bypass	34	104-5316	1	Gear-Pinnion, 13T
12	106-8679	1	Ring-Retaining, Int	35	106-8683	1	Shaft-Motor
13	107-2490	1	Arm-Bypass	36	104-5360	1	Washer-Shaft, Motor
14	106-8681	1	Ring-Retaining, EXT	37	94-1933	2	Washer
15	104-5304	1	Swashplate-Trunnion	38	104-5317	1	Gear
16	104-5313	1	Seal-Lip	39	104-5318	1	Gear-Jackshaft, 10T
17	104-2116	1	Stud	40	104-5329	1	Pin-Jackshaft
18	105-1873	2	Puck-Friction	41	104-5328	1	Ring-Retaining, Spiral
19	106-8747	1	Arm-Control	42	106-8684	1	Gear-Bull, 52T
20	5-4460	1	Washer-Pivot	43	94-1943	1	Washer
21	107-2488	1	Screw	44	104-5320	1	Bearing-Sleeve
22	105-1872	1	Nut	45	106-8685	1	Axle
23	94-1936	1	Spring-Block	46	104-5321	1	Bearing-Sleeve, Outboard
				47	104-5322	1	Seal-Lip

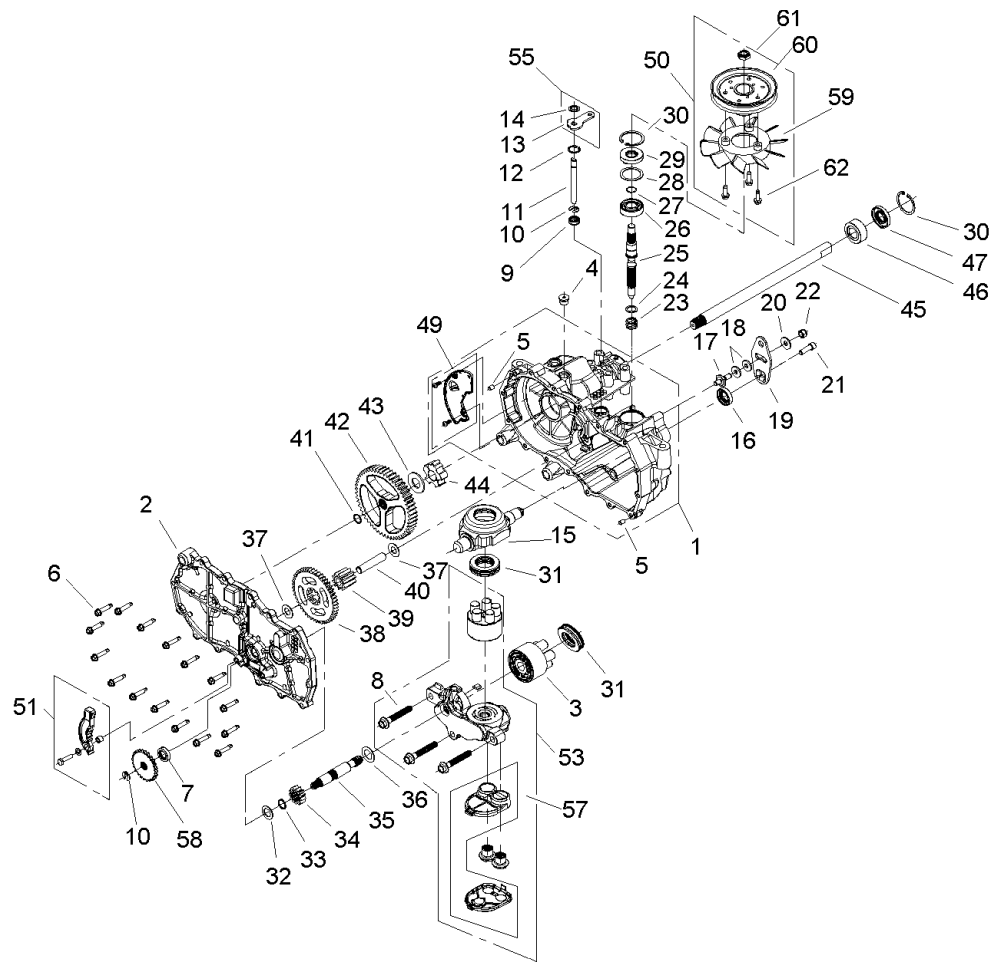 

RH Hydrostat Assembly Part No. 108-2393 (continued)


Ref	Part No.	Qty.	Description				
❶48	106-8686	1	Seal Kit				
49	106-8687	1	LH Expansion Plate Kit				
50	105-1928	1	Fan Pulley Kit				
51	106-8688	1	Brake Arm Kit				
53	108-6189	1	LH 7-Piston Center Section Kit				
❶54	104-2147	1	Sealant				
55	107-2489	1	Bypass Arm Kit				
57	106-8693	1	Filter Kit				
58	106-8694	1	Disc-Brake, Cog				
59	105-1927	1	Fan				
60	105-1896	1	Pulley				
61	105-1875	1	Nut-Lock				
62	104-2120	3	Screw				

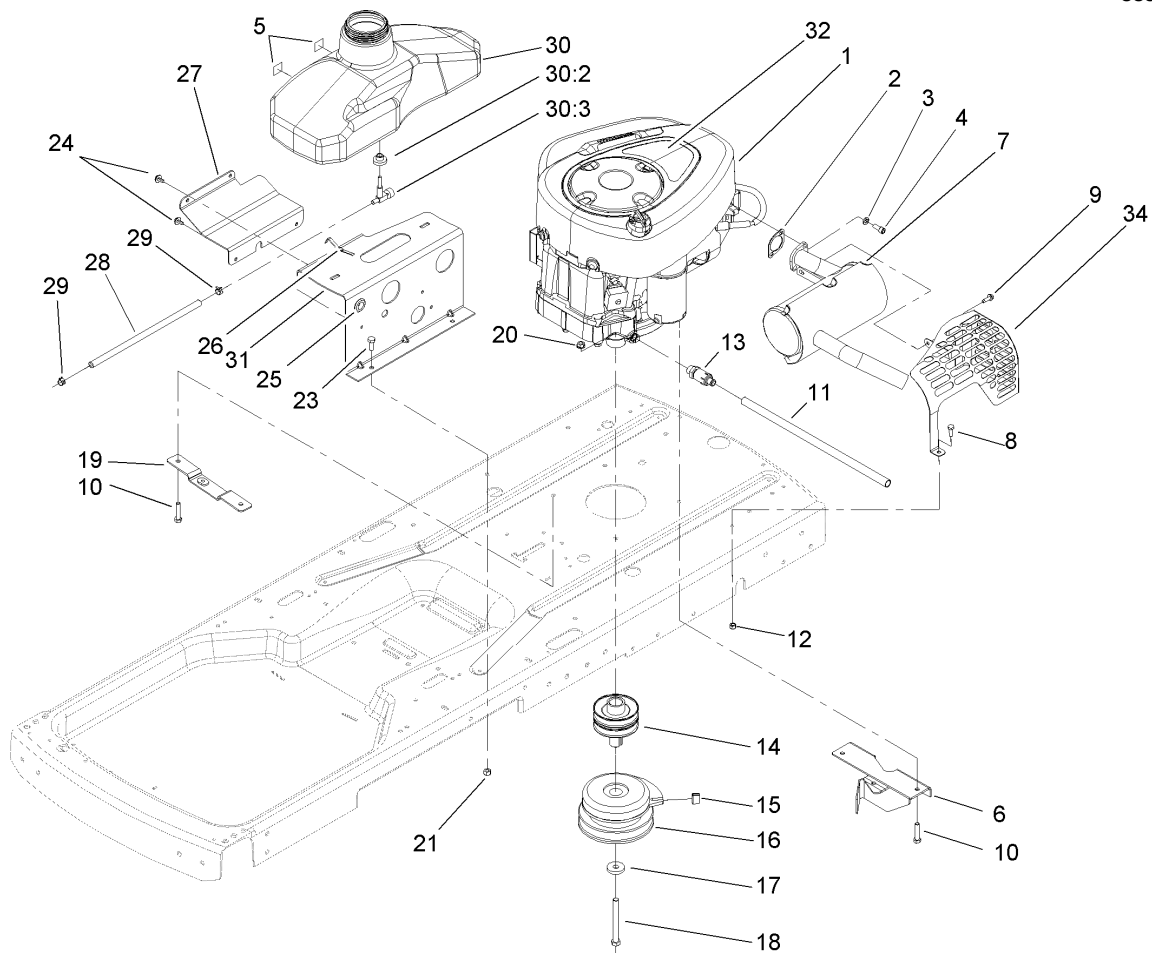 

Engine Assembly

Ref	Part No.	Qty.	Description
1		1	Engine-Briggs And Stratton, 280H07-0166-E1
2	88-4410	1	Gasket-Exhaust
3	3253-4	2	Washer-Lock
4	3274-10	2	Screw-HSH
5	104-2488	2	Foam-Switch, Seat
6	107-4873	1	Bracket-Pivot
7	106-7007	1	Muffler
8	321-4	1	Screw-HH
9	32144-44	2	Screw-HWH
10	322-7	4	Screw-HH
11	106-7022	1	Tube-Drain, Oil
12	3296-42	1	Nut-Lock, NI
13	92-6877	1	Valve-Drain, Oil
14	105-3472	1	Pulley-Engine
15	98-5023	1	Bumpon
16	105-3462	1	Clutch-Electric
17	112843	1	Washer
18	3212-16	1	Screw-HH
19	106-2156	1	Plate-Mount, Idler
20	32128-25	4	Nut-HF
21	3296-29	2	Nut-Lock, NI
23	322-4	2	Screw-HH
24	46-8560	4	Screw-HHF


Ref	Part No.	Qty.	Description
25	237-124	1	Grommet
26	609830	2	Spring
27	108-2315-03	1	Plate-Support
28	106-8720	1	Hose-Fuel
29	2412-98	2	Clamp
30	105-3464	1	Gas Tank ASM
30:2	46-6560	1	Bushing
30:3	104048	1	Valve-Fuel
31	108-2314-03	1	Plate-Tank
32	107-4924	1	Decal
34	106-7028-03	1	Guard-Muffler

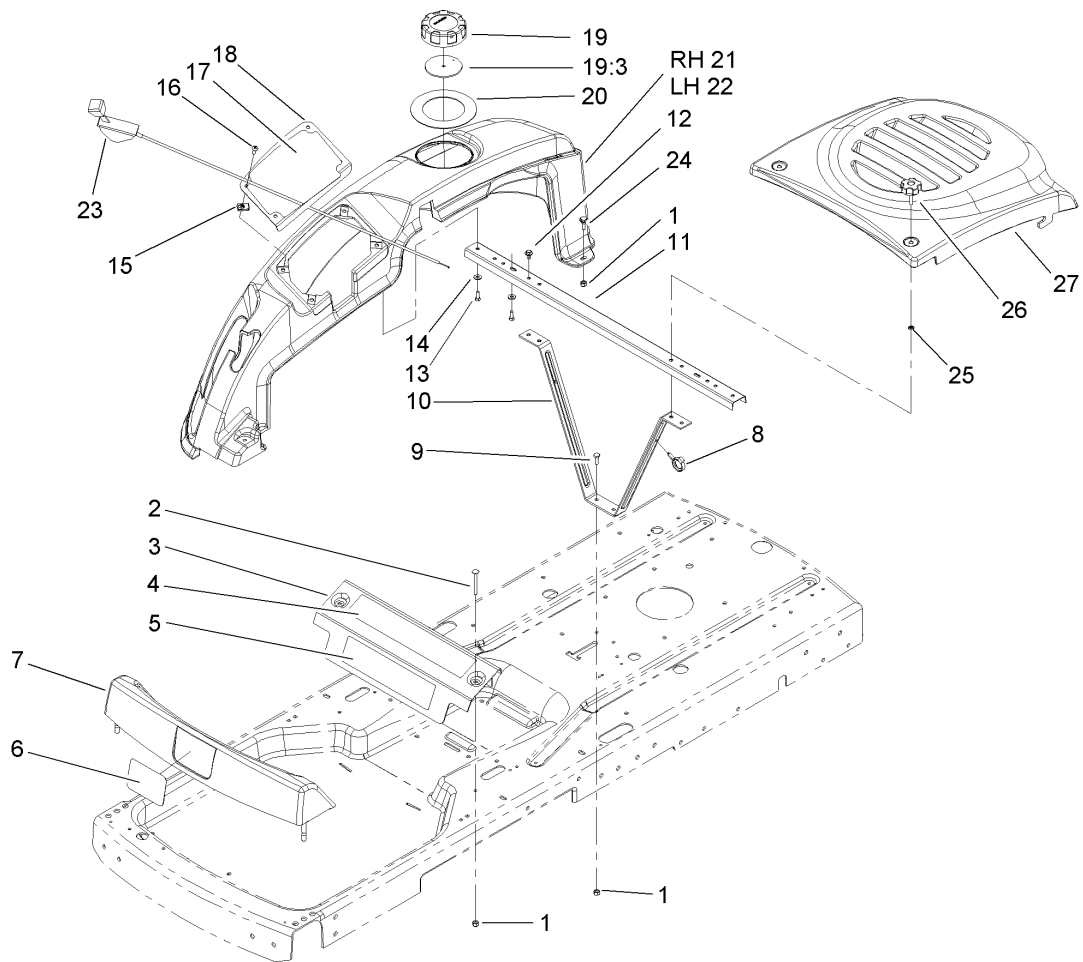 

Styling Assembly


Ref	Part No.	Qty.	Description
1	3296-42	6	Nut-Lock, NI
2	3229-7	2	Screw-CARR
3	106-2164-03	1	Bracket-Support, Front
4	107-2514	1	Decal-Danger
5	108-7127	1	Decal
6	105-6971	2	Decal
7	105-6965	1	Footrest ASM
8	105-1853	2	Clamp-Hose
9	321-4	2	Screw-HH
10	106-6994-03	1	Brace ASM
11	108-2313-03	1	Channel-Cross
12	46-8560	2	Screw-HHF
13	46-8090	4	Screw-Plastite
14	3256-22	4	Washer-Flat
15	107069	4	Clip
16	3258-166	4	Screw-PRH
17	106-2224	1	Decal-Control
18	106-2167-03	1	Panel-Control
19	88-3980	1	Gas Cap ASM
19:3	88-4010	1	Gasket-Cap, Gas
20	106-7042	1	Seal-Rubber
21	106-2161	1	Cover-Side, RH
22	106-2162	1	Cover-Side, LH
23	104-3626	1	Cable-Throttle

Ref	Part No.	Qty.	Description
24	11-9030	2	Screw-Shoulder
25	106-8737	2	Nut-Retainer
26	106-7017	2	Knob
27	106-2163	1	Cover-Hood

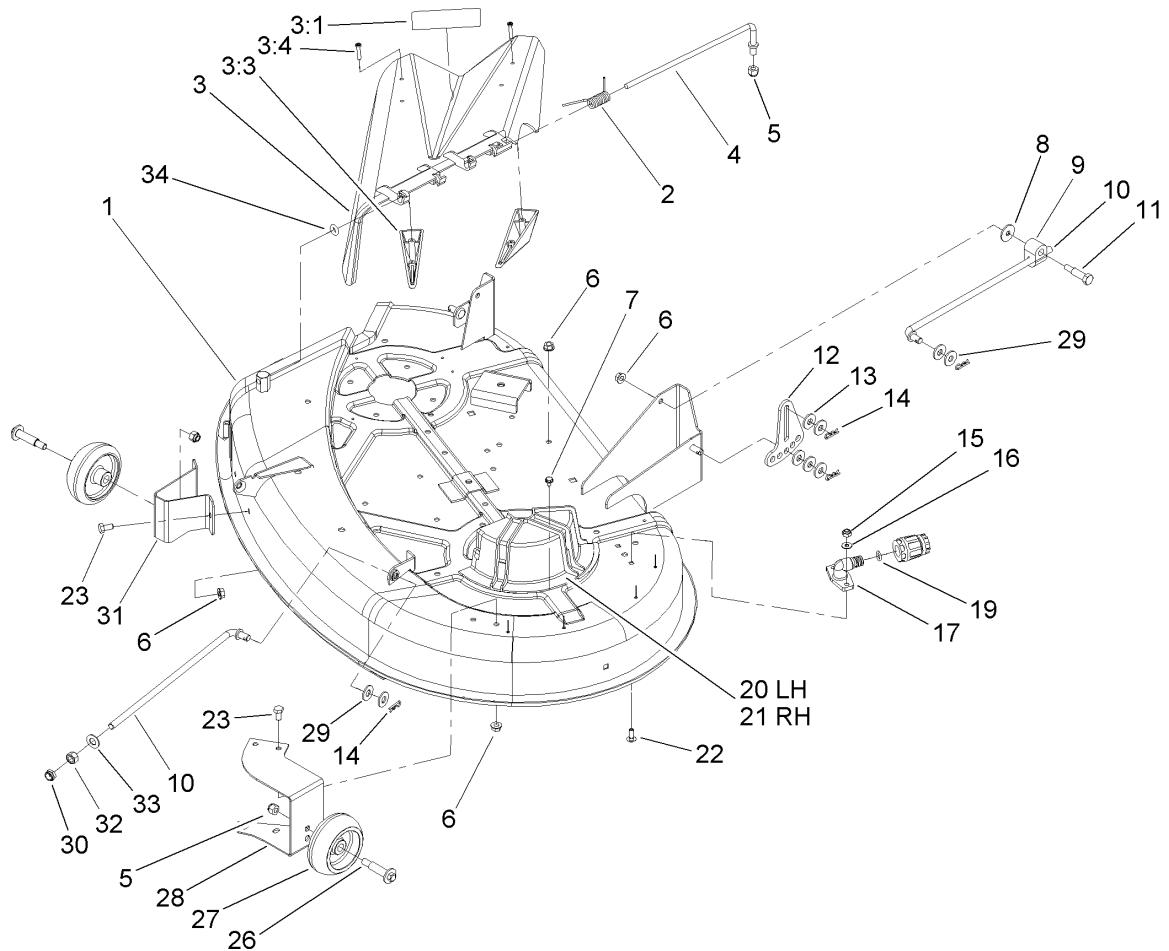 


38 Inch Deck Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	107-9139	1	38 Inch Deck ASM	23	322-2	6	Screw-HH
2	57-6950	1	Spring	26	56-6591	2	Screw-Shoulder, HWH
3	93-7695	1	Deflector ASM	27	701756	2	Wheel-Gage
3:1	93-7010	1	Decal-Danger	28	107-1717-01	1	Bracket-Wheel, Gage (Front, LH)
3:3	93-7696	2	Kicker	29	3256-4	8	Washer-Flat
3:4	93-0231	4	Screw-PPH	30	3296-38	2	Nut-Lock, NI
4	95-1661	1	Rod-Pivot	31	106-8704-01	1	Bracket-Wheel, Gage (Front, RH)
5	3296-39	3	Nut-Lock, NI	32	3219-4	2	Nut-Hex
6	32128-25	8	Nut-HF	33	3256-25	2	Washer-Flat
7	32104-76	5	Screw	34	106-8745	1	O-Ring
8	5-4460	2	Washer-Pivot				
9	88-4230	2	Trunnion-HOC				
10	105-3437	4	Rod-Hanger				
11	7-0030	2	Screw-Shoulder, HH				
12	88-5570-03	2	Link-Adjusting, HOC				
13	80-6990	10	Washer-Hardened				
14	9335054	8	Pin-Hair				
15	3296-16	2	Nut-Lock, NI				
16	3256-1	2	Washer-Flat				
17	95-2747	1	Fitting-Washout				
19	46-6290	1	O-Ring, Seal				
20	88-4030	1	Guide-Belt, LH				
21	88-4020	1	Guide-Belt, RH				
22	3229-1	2	Screw-CARR				

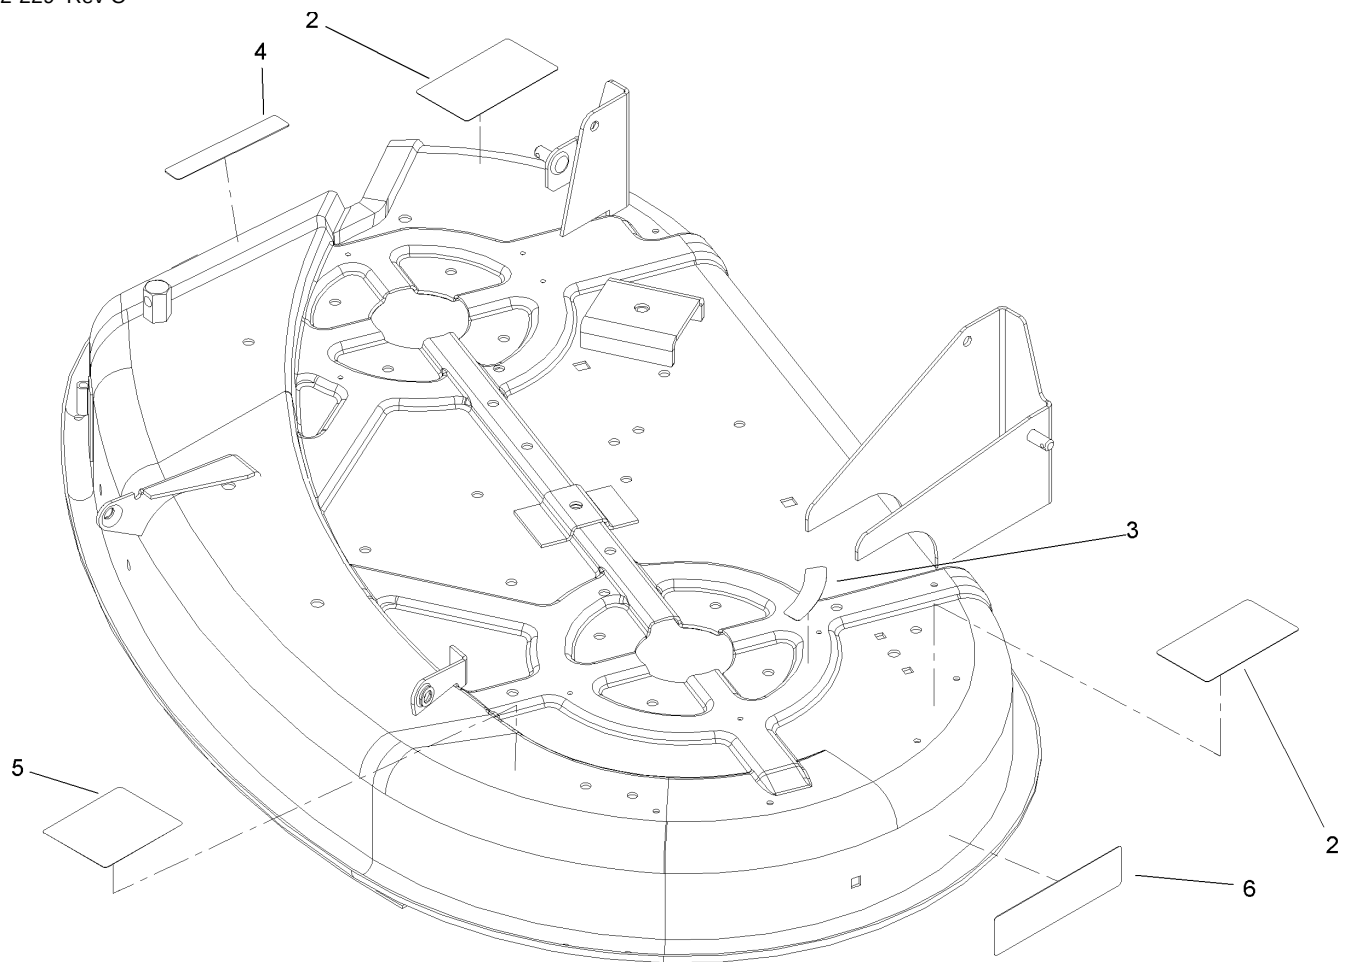 


38 Inch Deck Decal Assembly No. 107-9139

Ref	Part No.	Qty.	Description				
2	93-7010	2	Decal-Danger				
3	93-6677	1	Decal-Danger, Shield				
4	93-7009	1	Decal-Danger, Deflector				
5	105-7015	1	Decal-Routing, Belt				
6	106-6407	1	Decal				

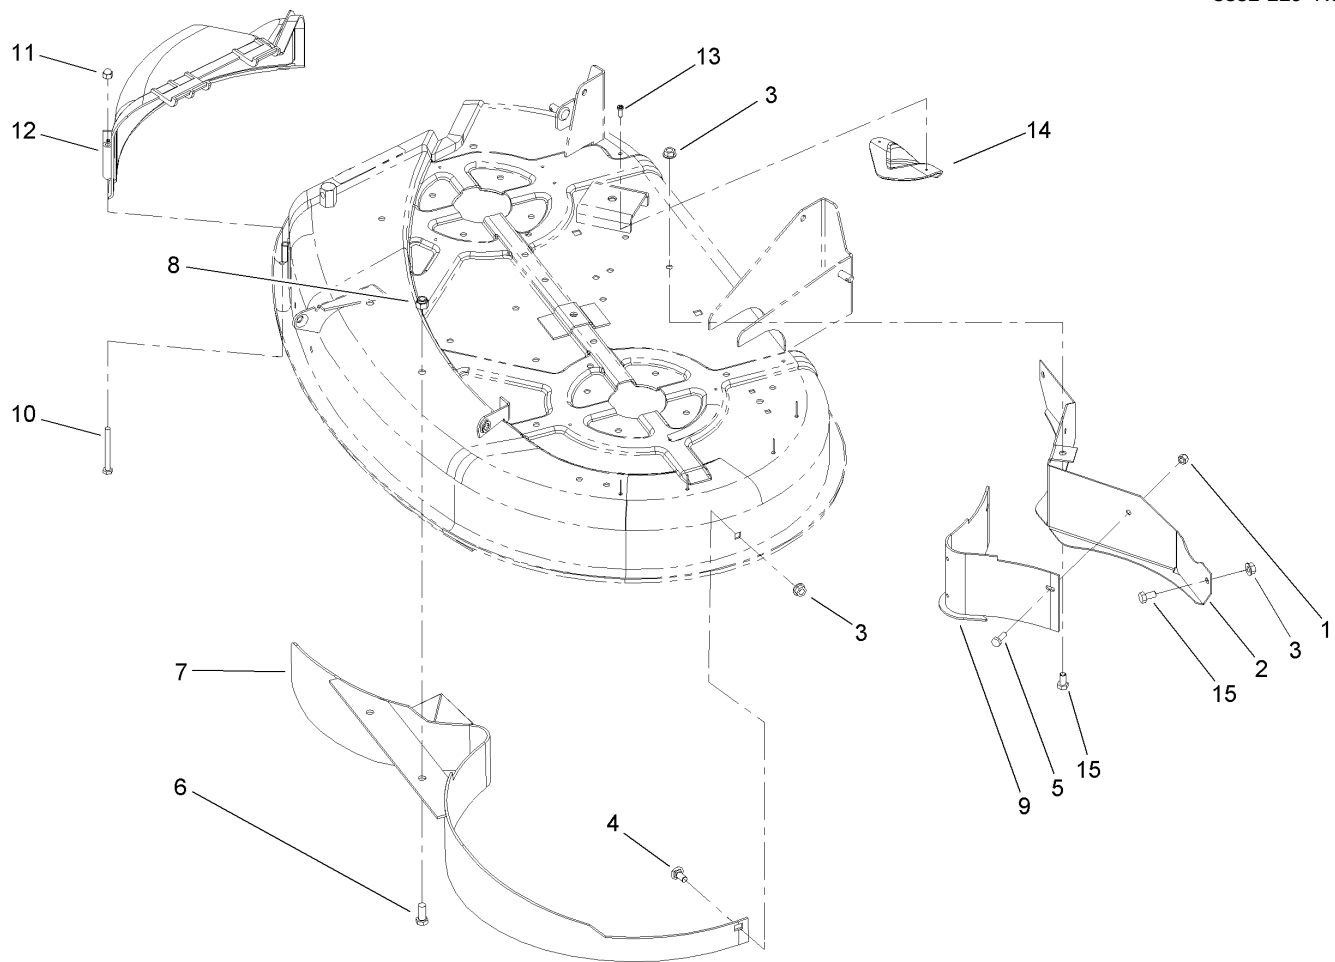 


38 Inch Deck Recycler Assembly

Ref	Part No.	Qty.	Description				
1	3296-42	2	Nut-Lock, NI				
2	107-2484-03	1	Baffle-Rear				
3	32128-25	4	Nut-HF				
4	3230-1	1	Bolt-CARR				
5	321-4	2	Screw-HH				
6	323-5	2	Screw-HH				
7	79-1600-03	1	Baffle ASM				
8	3296-39	2	Nut-Lock, NI				
9	79-1640-03	1	Baffle ASM				
10	321-55	2	Screw-HH				
11	32111-7	2	Nut-Cap				
12	88-4430	1	Cover-Recycler				
13	32144-111	8	Screw-PPH				
14	76-2160	4	Plate-Kicker				
15	322-2	3	Screw-HH				

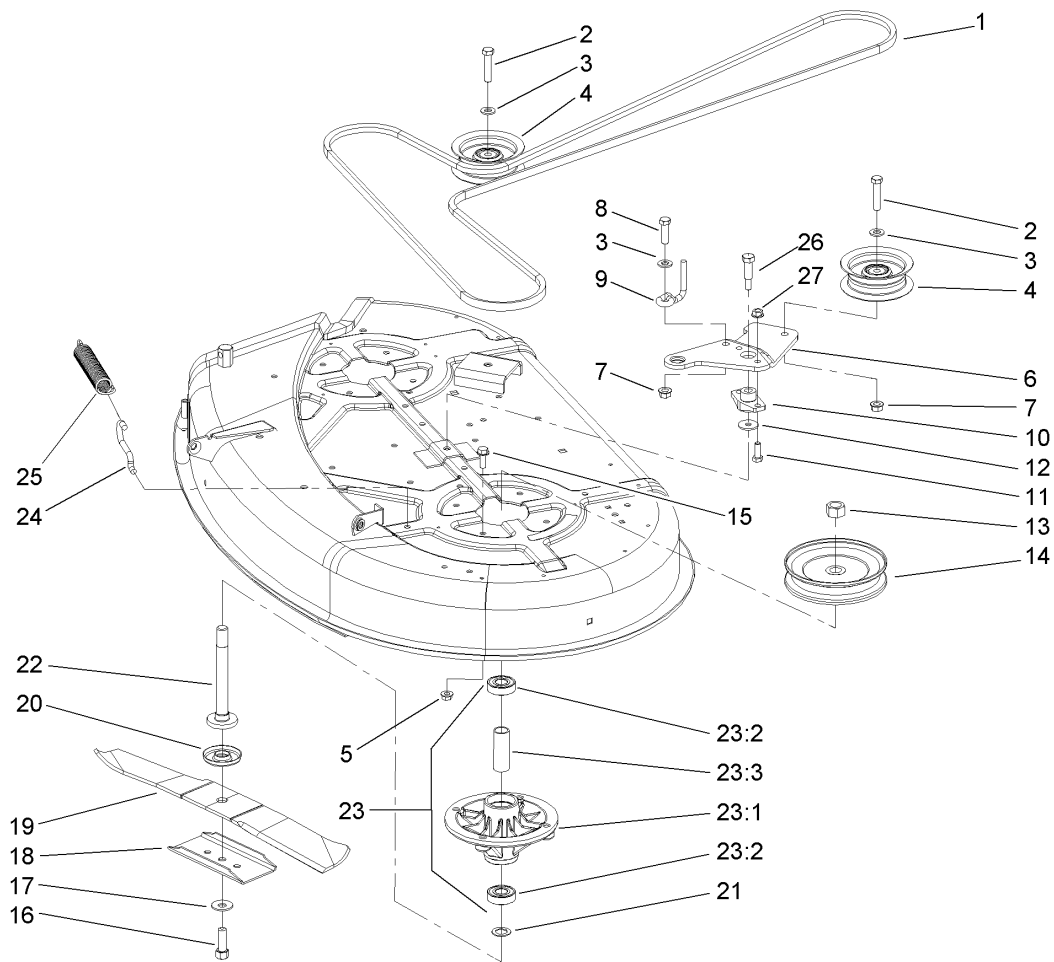 


38 Inch Deck Spindle and Belt Drive Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	106-2173	1	Belt-V	23:2	100-1048	2	Bearing-Ball
2	323-9	2	Screw-HH	23:3	62-3661	1	Spacer
3	3256-24	3	Washer-Flat	24	88-5970	1	Hook-Return, Spring
4	106-2175	2	Pulley-Idler, Flat	25	106-2177	1	Spring-Extension
5	32128-25	1	Nut-HF	26	7-0030	1	Screw-Shoulder, HH
6	107-2467-03	1	Arm-Idler	27	3296-29	2	Nut-Lock, NI
7	32128-21	2	Nut-HF				
8	323-7	1	Screw-HH				
9	107-7307	1	Guide-Idler, Belt				
10	88-4980	1	Bushing-Arm, Idler				
11	322-4	2	Screw-HH				
12	5-4460	1	Washer-Pivot				
13	3219-6	2	Nut-Hex				
14	88-5330	2	Pully ASM				
15	32144-41	8	Screw-Taptite				
16	26-0671	2	Screw-HH				
17	3290-465	2	Washer-Belleville				
18	80-0510-03	2	Stiffener-Blade				
19	79-3061-03	2	Blade-Recycling				
20	80-4360	2	Shield-Bearing				
21	80-4380	2	Spacer				
22	80-4341	2	Shaft-Spindle				
23		2	Spindle ASM				
23:1	88-4510	1	Housing-Spindle				

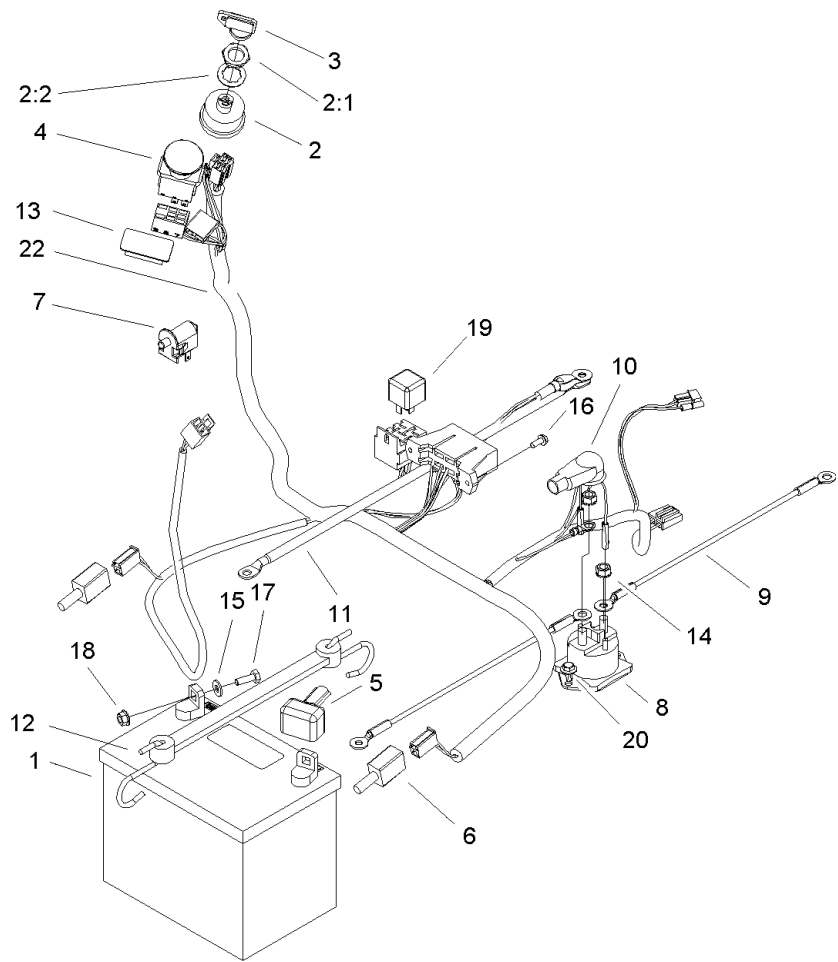 

Electrical System Assembly

Ref	Part No.	Qty.	Description				
1	104-2491	1	Battery				
2	88-9830	1	Key Switch ASM				
2:1	3254-5	1	Washer-Tooth				
2:2	218-461	1	Nut-HH				
3	63-8360	1	Key-Ignition				
4	95-7489	1	Switch-PTO				
5	28-8080	1	Boot-Terminal				
6	106-2216	2	Switch				
7	82-2190	1	Switch-Bail				
8	106-8245	1	Solenoid-Starter				
9	56-7670	2	Wire ASM				
10	93-3190	1	Boot-Insulator, Terminal				
11	95-7654	1	Cable-Negative, Black				
12	104-2466	1	Holddown-Battery				
13	99-7420	1	Plug-Hole				
14	32149-2	2	Nut-Keps				
15	3256-22	2	Washer-Flat				
16	32144-1	3	Screw-Taptite				
17	321-4	2	Screw-HH				
18	32128-33	3	Nut-HF				
19	98-7249	1	Relay				
20	46-8560	2	Screw-HHF				
22	107-2500	1	Harness-Wire, 9 Amp				

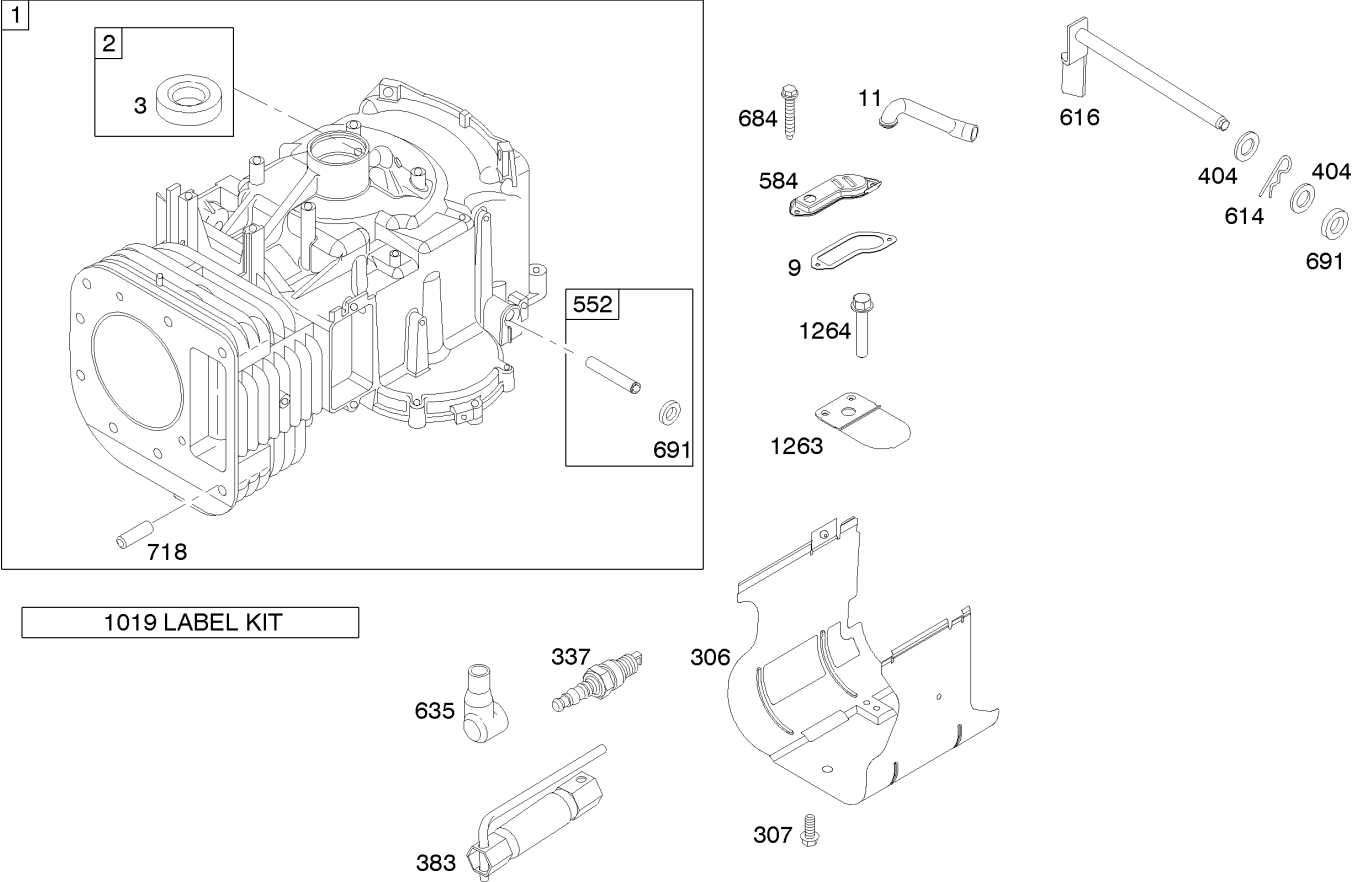 


Assemblies include all parts shown in frames.

Cylinder Assembly

Briggs and Stratton 280h07-0166-e1


Ref	Part No.	Qty.	Description				
1	697132	1	Cylinder ASM				
2	399265	1	Bushing And Seal Kit				
3	391086	1	Seal-Oil				
9	697109	1	Gasket-Breather				
11	697113	1	Tube-Breather				
48	697761	1	Short Block				
306	697107	1	Shield-Cylinder				
307	691003	1	Screw				
337	691043	1	Spark Plug				
383	89838	1	Wrench-Plug, Spark				
404	691691	1	Washer				
552	697144	1	Bushing-Crank, Governor				
584	697112	1	Cover-Passage, Breather				
614	691620	1	Pin-Cotter				
616	692012	1	Crank-Governor				
635	691909	1	Boot-Spark Plug				
684	697157	1	Screw				
691	692407	1	Seal-Shaft, Governor				
718	690959	1	Pin-Locating				
1019	697143	1	Label Kit				
1263	697124	1	Reed-Breather				
1264	697104	1	Screw				

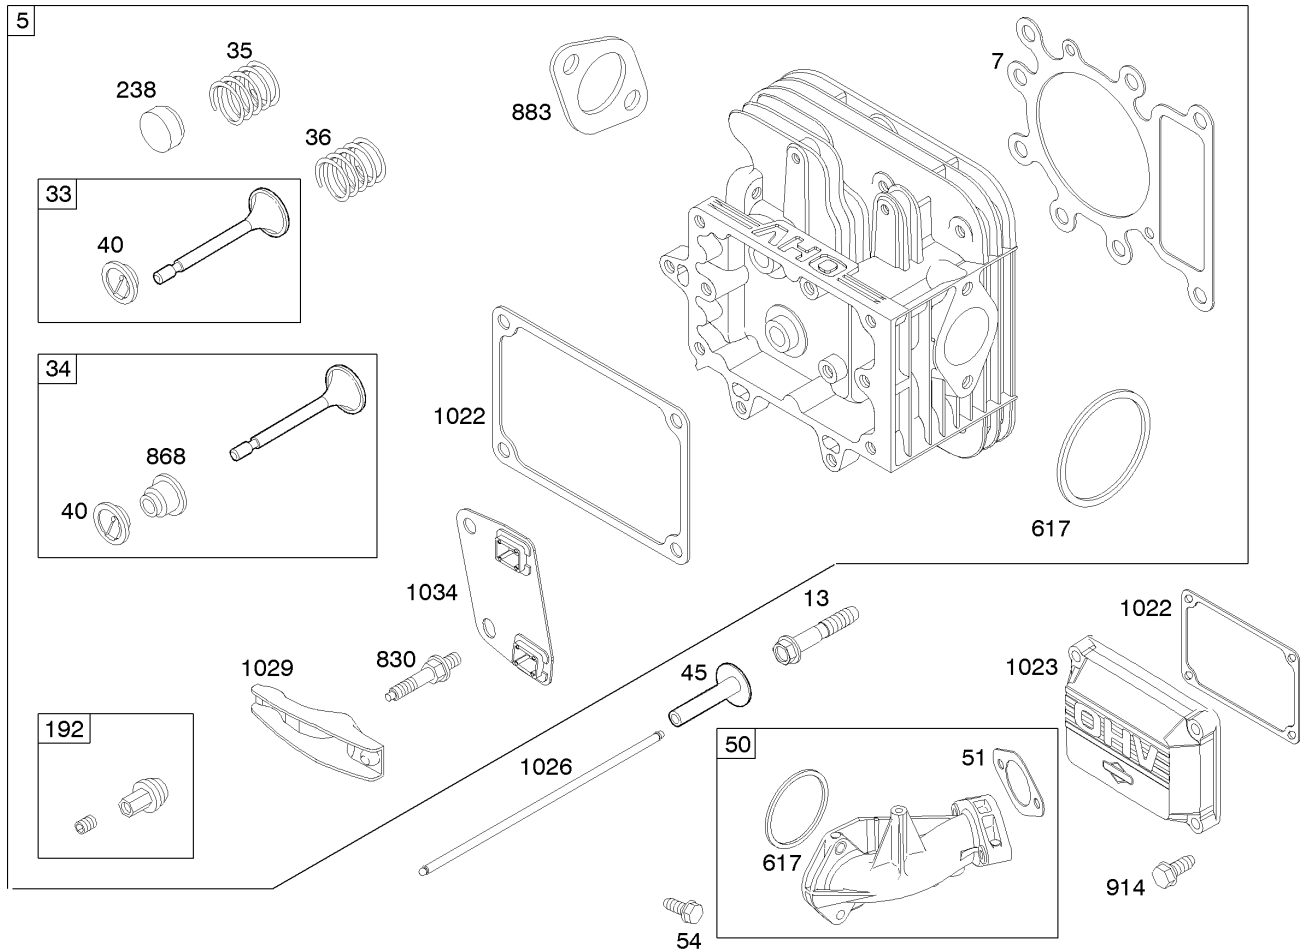 

Cylinder Head Assembly Briggs and Stratton 280h07-0166-e1

Ref	Part No.	Qty.	Description
5	698148	1	Head-Cylinder
37	273280	1	Gasket-Head, Cylinder
13	690360	1	Screw
33	695760	1	Valve-Exhaust
34	695761	1	Valve-Intake
35	691279	1	Spring-Valve
36	691279	1	Spring-Valve
40	691752	1	Retainer-Valve
45	690564	1	Tappet-Valve
50	690193	1	Manifold-Intake
451	692137	1	Gasket-Intake
54	691148	1	Screw
192	691986	1	Adjustor-Arm, Rocker
238	691843	1	Cap-Valve
5617	692138	1	Seal-O Ring
830	691095	1	Stud-Arm, Rocker
4868	690968	1	Seal-Valve
883	692236	1	Gasket-Exhaust
914	690960	1	Screw
1022	272475	1	Gasket-Cover, Rocker
1023	692492	1	Cover-Rocker

Ref	Part No.	Qty.	Description
1026	692003	1	Rod-Push
1026	692011	1	Rod-Push
1029	691751	1	Arm-Rocker
1034	690822	1	Guide-Rod, Push

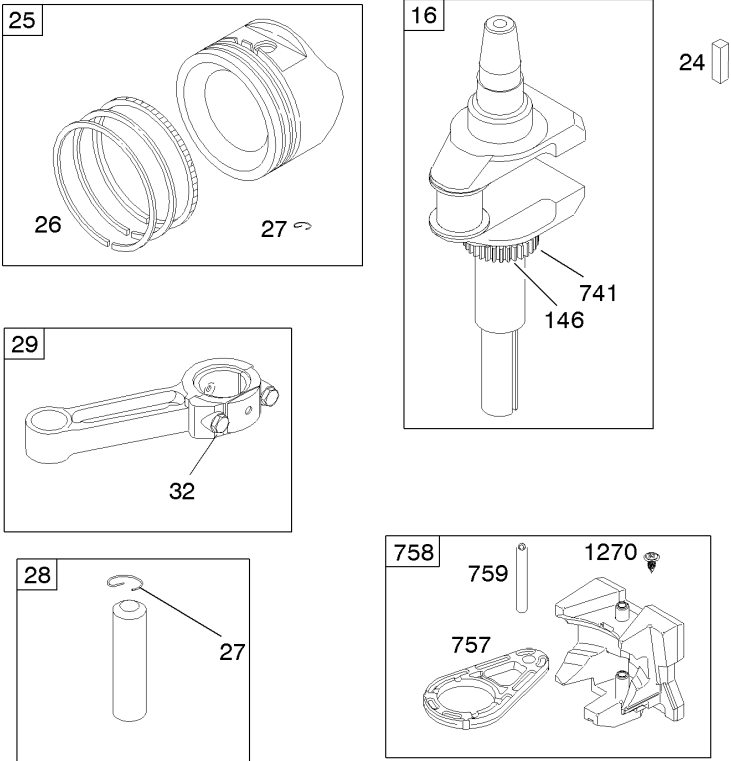 


Assemblies include all parts shown in frames.

Crankshaft Assembly

Briggs and Stratton 280h07-0166-e1

Ref	Part No.	Qty.	Description				
16	697127	1	Crankshaft				
24	222698	1	Key				
25	698371	1	Piston ASM (Standard)				
25	698393	1	Piston ASM (.010 Oversize)				
25	698394	1	Piston ASM (.020 Oversize)				
25	698395	1	Piston ASM (.030 Oversize)				
26	697375	1	Ring Set (Standard)				
26	698396	1	Ring Set (.010 Oversize)				
26	698397	1	Ring Set (.020 Oversize)				
26	698398	1	Ring Set (.030 Oversize)				
27	698469	1	Lock-Pin, Piston				
28	697099	1	Pin-Piston (STD)				
29	697126	1	Rod-Connecting (Standard)				
29	697263	1	Rod-Connecting (.020In Undersize)				
32	692852	1	Screw				
146	691639	1	Key-Timing				
741	697128	1	Gear-Timing				
757	697607	1	Link-Counterweight				
758	697134	1	Counterweight				
759	697392	1	Pin-Counterweight				
1270	697156	1	Plug-Counterweight, Avs				

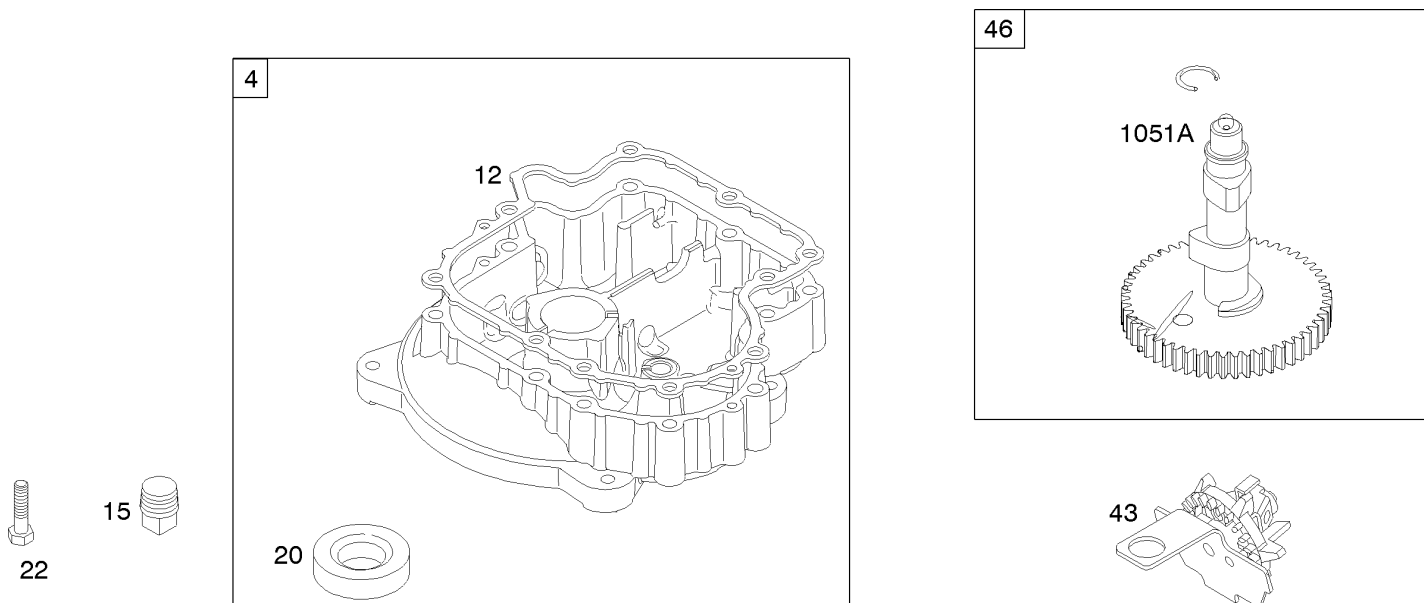 


Assemblies include all parts shown in frames.

Crankcase Assembly

Briggs and Stratton 280h07-0166-e1


Ref	Part No.	Qty.	Description				
④	697106	1	Sump-Engine				
④④12	697110	1	Gasket-Crankcase				
④15	690946	1	Plug-Drain, Oil				
④④20	690947	1	Seal-Oil				
④22	692125	1	Screw				
④43	691968	1	Slinger-Governor, Oil				
④46	698577	1	Camshaft				
④1051A	698802	1	Ring-Retaining				

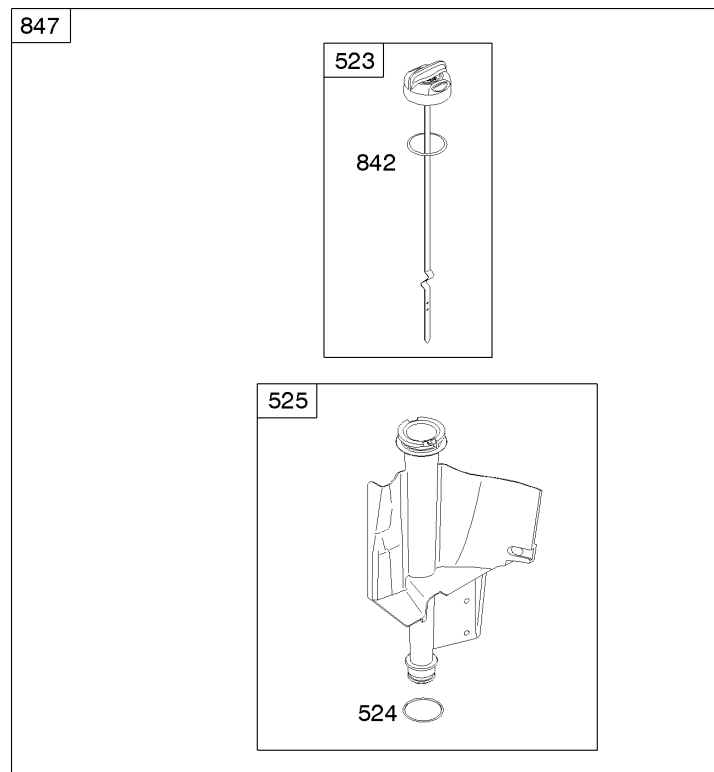 

Assemblies include all parts shown in frames.

Oil Filter, Tube and Pump Assembly Briggs and Stratton 280h07-0166-e1

Ref	Part No.	Qty.	Description
③523	697086	1	Dipstick
③③524	691032	1	Seal-O Ring
③525	697184	1	Tube-Dipstick
③③842	691031	1	Seal-O Ring
③847	697611	1	Dipstick And Tube ASM

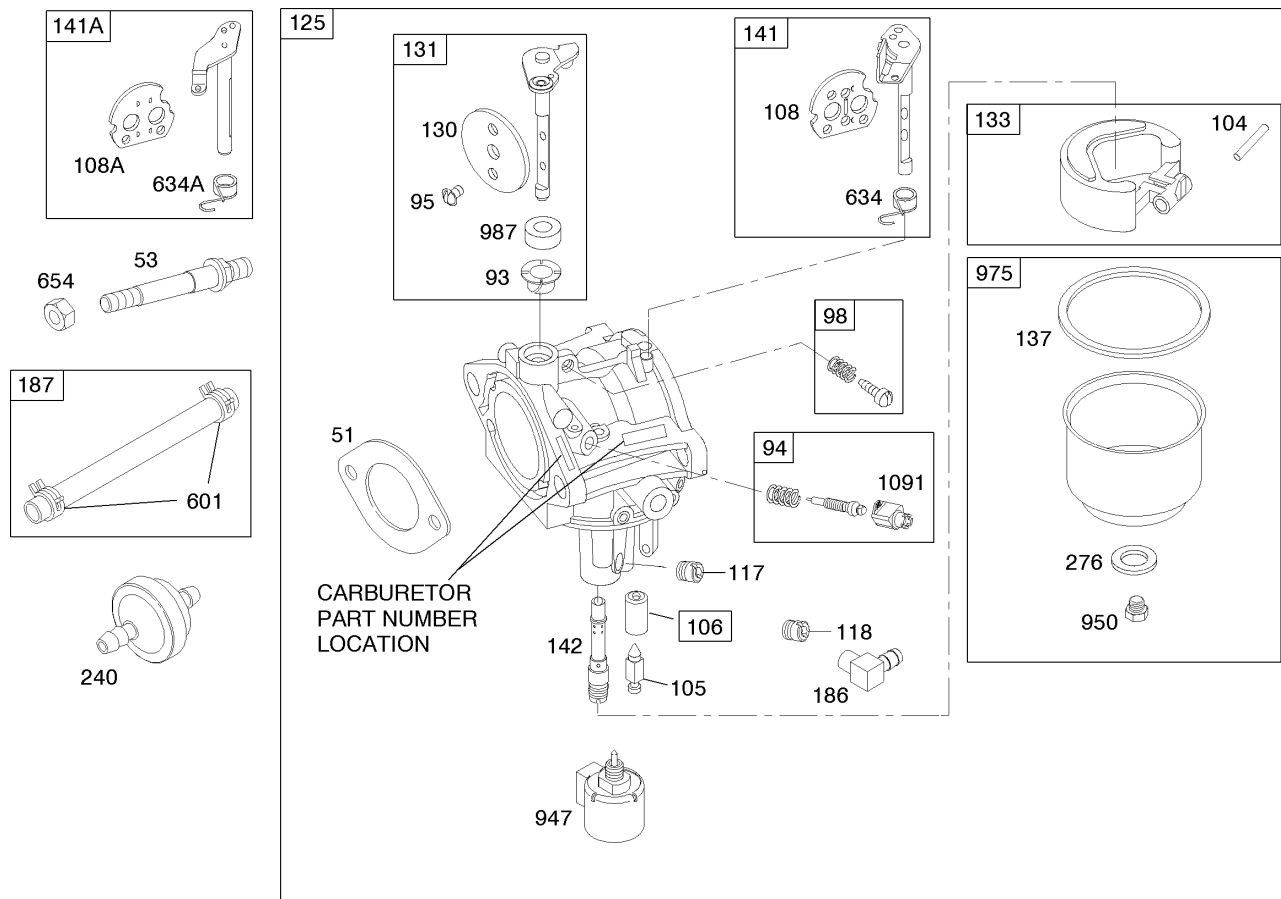 


Assemblies include all parts shown in frames.

Carburetor Assembly

Briggs and Stratton 280h07-0166-e1

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
⑤ ④ 51	692137	1	Gasket-Intake	⑤ 187	697098	1	Line-Fuel
⑤ ⑥				⑤ 240	394358	1	Filter-Fuel
⑤ 53	690227	1	Stud	⑤ ⑥ 276	692255	1	Washer-Sealing
⑤ ⑤ 93	690602	1	Bushing-Shaft, Throttle	⑤ 601	95162	1	Clamp-Hose
⑤ 94	498030	1	Idle Mixture Kit	⑤ ⑤ 634	690801	1	Spring / Seal ASM
⑤ ⑤ 95	691636	1	Screw	⑤ ⑤ 634A	690802	1	Spring And Seal ASM
⑤ 98	495800	1	Idle Speed Kit	⑤ 654	690958	1	Nut
⑤ ⑤ 104	690525	1	Pin-Hinge, Carburetor Float	⑤ 947	694393	1	Solenoid-Fuel
⑤ ⑤ 105	231855	1	Valve-Needle, Float	⑤ 950	691657	1	Screw
⑤ ⑤ 106	690577	1	Seat-Inlet	⑤ 975	495933	1	Bowl-Float
⑤ 108	690464	1	Valve-Choke	⑤ ⑤ 987	691326	1	Seal-Shaft, Throttle
⑤ 108A	692344	1	Valve-Choke	⑤ 1091	691333	1	Cap-Limiter
⑤ ⑤ 117	694352	1	Jet-Main (STD)				
⑤ 118	697228	1	Jet-Main (High Altitude)				
⑤ 125	697190	1	Carburetor				
⑤ 130	691750	1	Valve-Throttle				
⑤ 131	494379	1	Throttle Shaft Kit				
⑤ 133	494381	1	Float-Carburetor				
⑤ ⑥ 137	281165	1	Gasket-Bowl, Float				
⑤ ⑤							
⑤ 141	495097	1	Choke Shaft Kit				
⑤ 141A	495931	1	Choke Shaft Kit				
⑤ ⑤ 142	697140	1	Nozzle-Carburetor				
⑤ 186	692317	1	Connector-Hose				

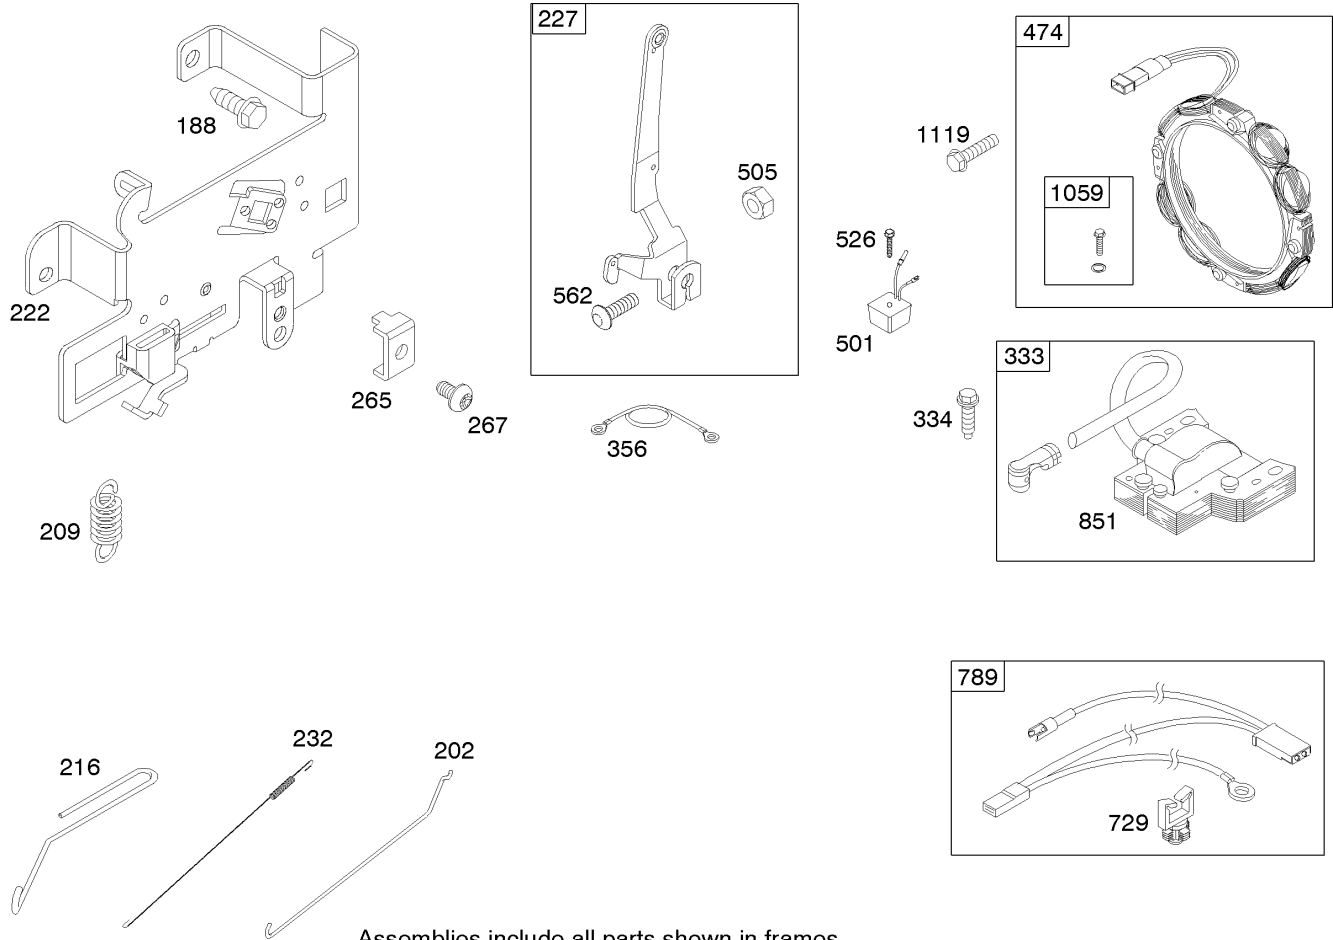 


Assemblies include all parts shown in frames.

Governor Assembly

Briggs and Stratton 280h07-0166-e1

Ref	Part No.	Qty.	Description
188	691693	1	Screw
202	691841	1	Link-Governor, Mechanical
209	692208	1	Spring-Governor
216	691840	1	Link-Choke
222	694042	1	Bracket-Control
227	691374	1	Lever-Control, Governor
232	691842	1	Spring-Link, Governor
265	691024	1	Clamp-Casing
267	695134	1	Screw
333	492341	1	Armature-Magneto
334	691061	1	Screw
356	697089	1	Stop-Wire
474	696457	1	Alternator
501	696458	1	Alternator
501	691188	1	Regulator
501	691185	1	Regulator
505	691251	1	Nut
526	697088	1	Screw
562	697348	1	Screw
562	691119	1	Screw
729	691335	1	Clip-Wire
789	692037	1	Wiring-Harness
851	692424	1	Terminal-Spark Plug
1059	698516	1	Screw And Washer Kit

Ref	Part No.	Qty.	Description
1119	691183	1	Screw

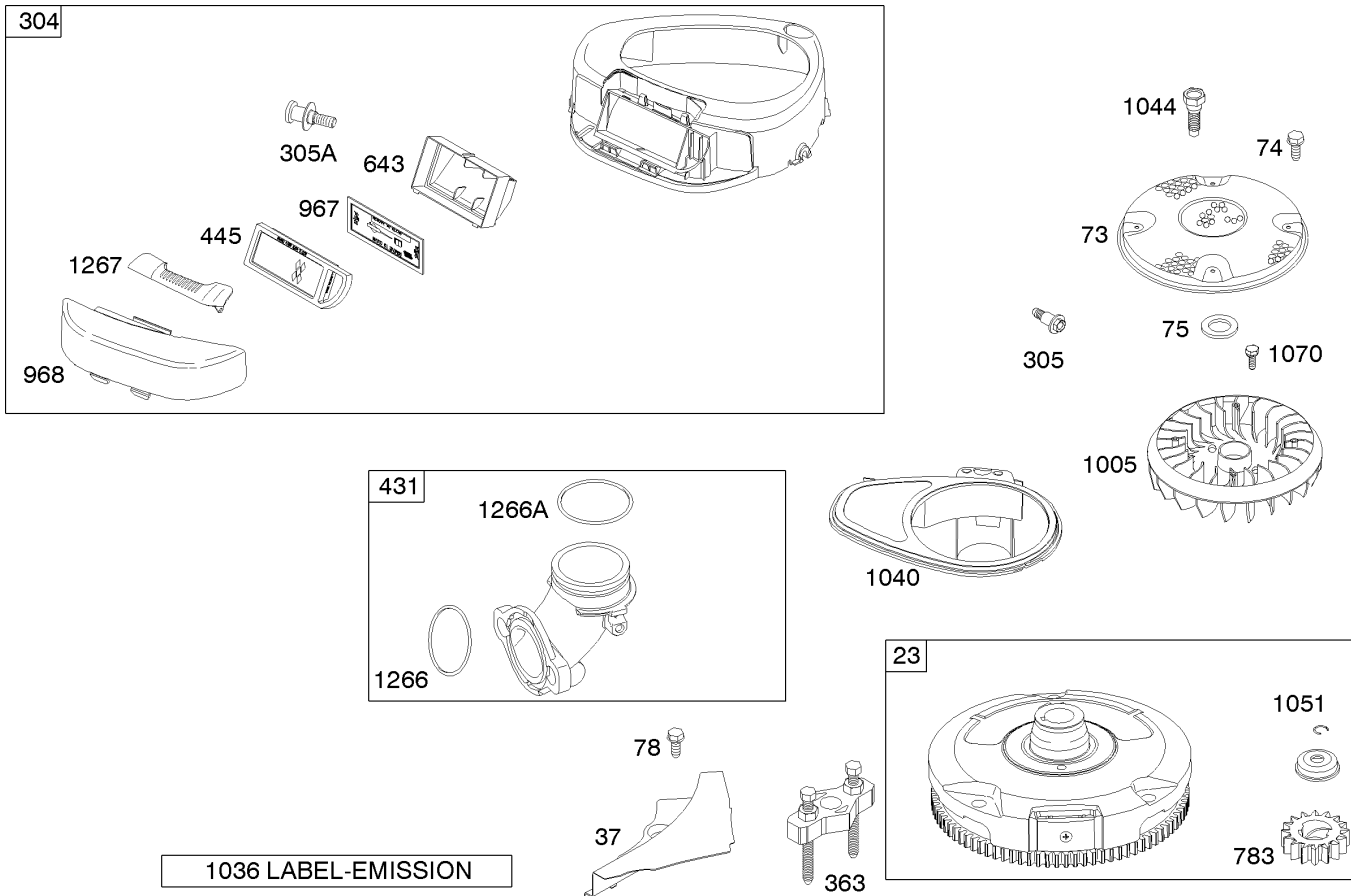 


Assemblies include all parts shown in frames.

Blower Housing Assembly

Briggs and Stratton 280h07-0166-e1

Ref	Part No.	Qty.	Description
③ 23	693556	1	Flywheel
③ 37	697352	1	Guard-Flywheel
③ 73	697384	1	Screen-Rotating
③ 74	697897	1	Screw
③ 75	690582	1	Washer-Flywheel
③ 78	691003	1	Screw
③ 304	698599	1	Housing-Blower
③ 305	697102	1	Screw
③ 305A	697103	1	Screw
③ 363	19203	1	Puller-Flywheel
③ 431	697122	1	Elbow-Intake
③ 445	698083	1	Filter-Cartridge, Air Cleaner
③ 643	698401	1	Retainer-Filter, Air
③ 783	693713	1	Gear-Pinion
③ 967	697015	1	Filter-Cleaner, Pre
③ 968	698403	1	Cover-Cleaner, Air
③ 1005	697853	1	Fan-Flywheel
③ 1036	695700	1	Label-Emission
③ 1040	698368	1	Plate-Trim
③ 1044	691658	1	Screw-Crankshaft Extension
③ 1051	691265	1	Ring-Retaining
③ 1070	690372	1	Screw
③ ③ 1266	691917	1	Seal-O Ring
③ ③ 1266A	697123	1	Seal-O Ring



Ref	Part No.	Qty.	Description
③ 1267	697419	1	Latch-Housing, Blower

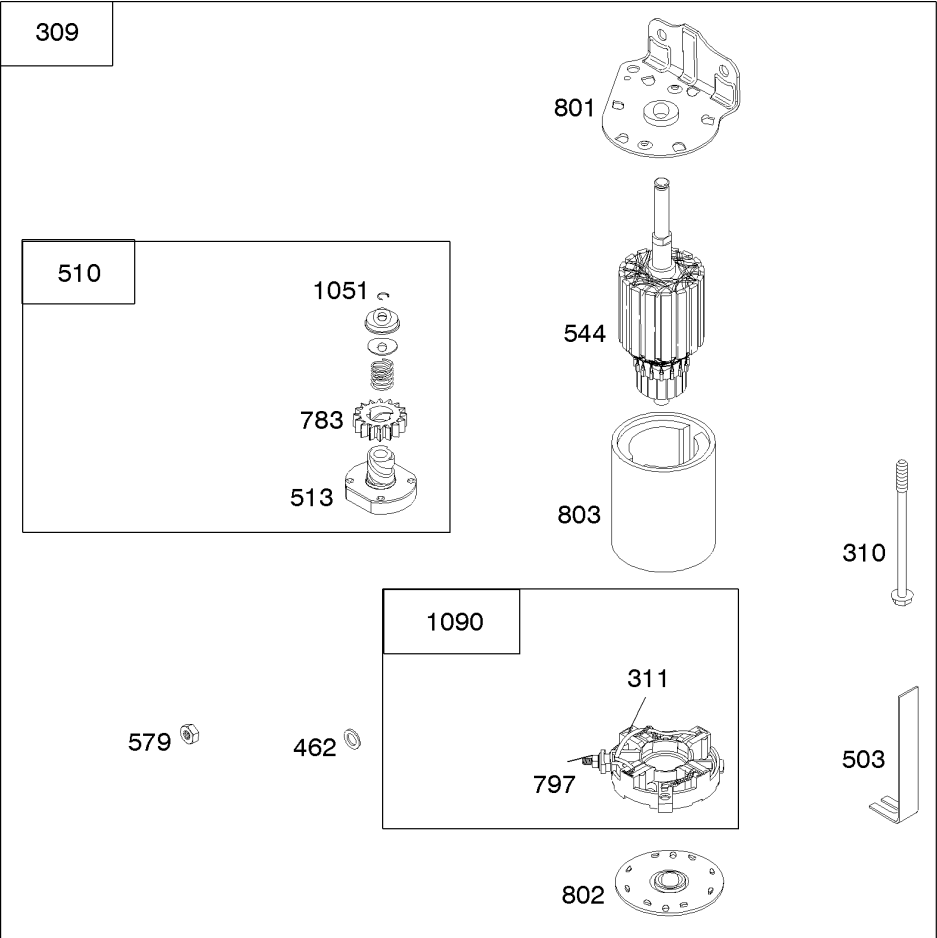 

Starter Assembly

Briggs and Stratton 280h07-0166-e1



Ref	Part No.	Qty.	Description				
309	693551	1	Motor-Starter				
310	690323	1	Bolt				
311	497608	1	Brush Set				
462	691261	1	Washer				
503	691532	1	Strap-Starter				
510	693699	1	Drive-Starter				
513	692024	1	Clutch-Drive				
544	692034	1	Armature-Starter				
579	691029	1	Nut				
697	690372	1	Screw				
729A	691224	1	Clip-Wire				
729B	694123	1	Clip-Wire				
783	693713	1	Gear-Pinion				
797	693167	1	Nut				
801	691283	1	Cap-Drive				
802	691286	1	Cap-End				
803	693757	1	Housing-Starter				
1051	691265	1	Ring-Retaining				
1090	691293	1	Retainer-Brush				

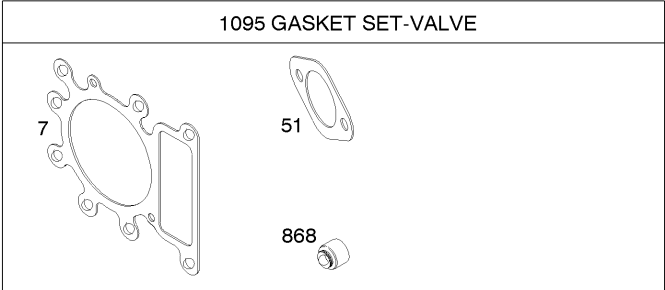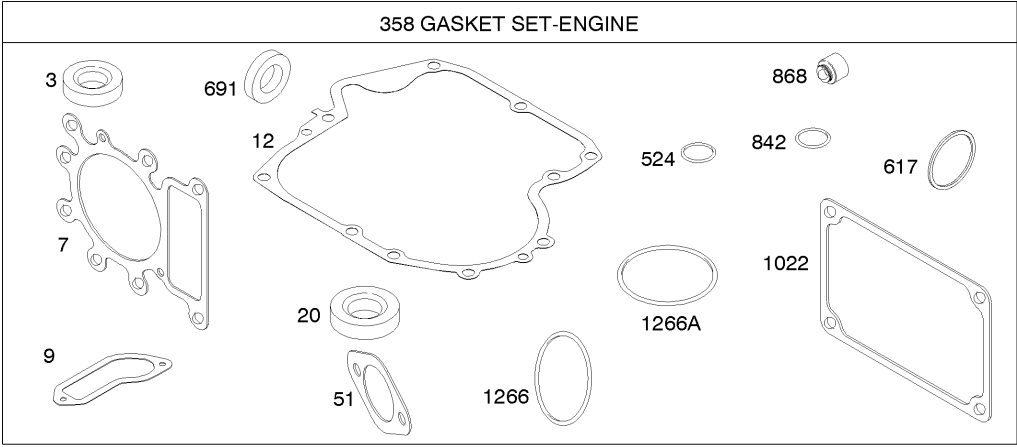  

Assemblies include all parts shown in frames.

Gasket Assembly
Briggs and Stratton 280h07-0166-e1

Ref	Part No.	Qty.	Description				
3 3 3	391086	1	Seal-Oil				
3 3 7	273280	1	Gasket-Head, Cylinder				
3 3 9	697109	1	Gasket-Breather				
3 3 12	697110	1	Gasket-Crankcase				
3 3 20	690947	1	Seal-Oil				
3 4 51	692137	1	Gasket-Intake				
3 6							
3 3 358	697151	1	Engine Gasket Set				
3 4 617	692138	1	Seal-O Ring				
3 3							
3 3 524	691032	1	Seal-O Ring				
3 3 691	692407	1	Seal-Shaft, Governor				
3 3 842	691031	1	Seal-O Ring				
3 4 868	690968	1	Seal-Valve				
3							
3 3 1022	272475	1	Gasket-Cover, Rocker				
3 1095	691581	1	Valve Gasket Set				
3 5 1266	691917	1	Seal-O Ring				
3							
3 5 1266A	697123	0	Seal-O Ring				
3							

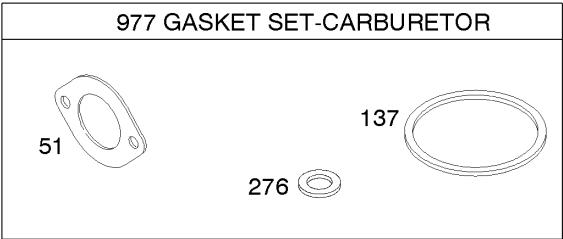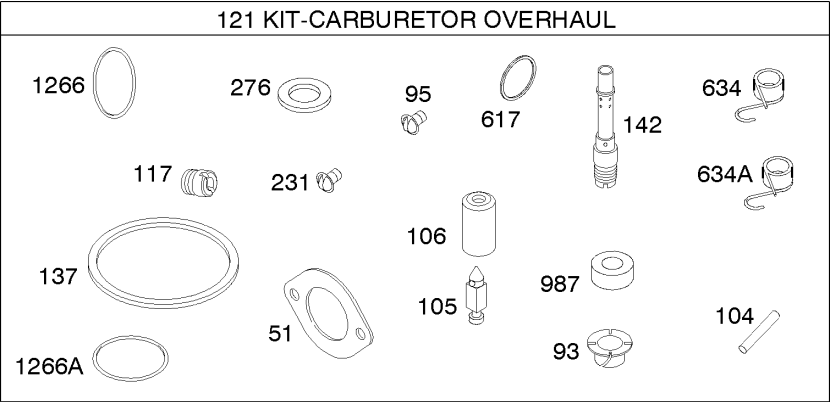  

Assemblies include all parts shown in frames.

Carburetor Overhaul Kit Assembly
Briggs and Stratton 280h07-0166-e1

Ref	Part No.	Qty.	Description				
3451 56	692137	1	Gasket-Intake				
5893	690602	1	Bushing-Shaft, Throttle				
5895	691636	1	Screw				
58104	690525	1	Pin-Hinge, Carburetor Float				
58105	231855	1	Valve-Needle, Float				
58106	690577	1	Seat-Inlet				
58117	694352	1	Jet-Main (STD)				
8121	697154	1	Carburetor Overhaul Kit				
56137 8	281165	1	Gasket-Bowl, Float				
58142	697140	1	Nozzle-Carburetor				
58231	691636	1	Screw				
56276 8	692255	1	Washer-Sealing				
55617 8	692138	1	Seal-O Ring				
58634	690801	1	Spring / Seal ASM				
58634A	690802	1	Spring And Seal ASM				
8977	690192	1	Carburetor Gasket Set				
58987	691326	0	Seal-Shaft, Throttle				
551266 8	691917	0	Seal-O Ring				
551266A 8	697123	1	Seal-O Ring				

Attachments and Accessories

For 74402 - TimeCutter Z380 Riding Mower

Product Name	Model/Part
Smooth Caster Wheel Kit	105-1856
Tire Chain Kit	107-1737
Armrest Kit	108-6163
38 Inch Twin Bagger	79215
48 Inch Snow Blade	79216

NOTES

NOTES

