




MODEL NO. 38191-590001 Thru
6900001 & UP
MODEL NO. 38196-590001 Thru
6900001 & UP

**PARTS
CATALOG**

CCR1000™ SNOWTHROWER

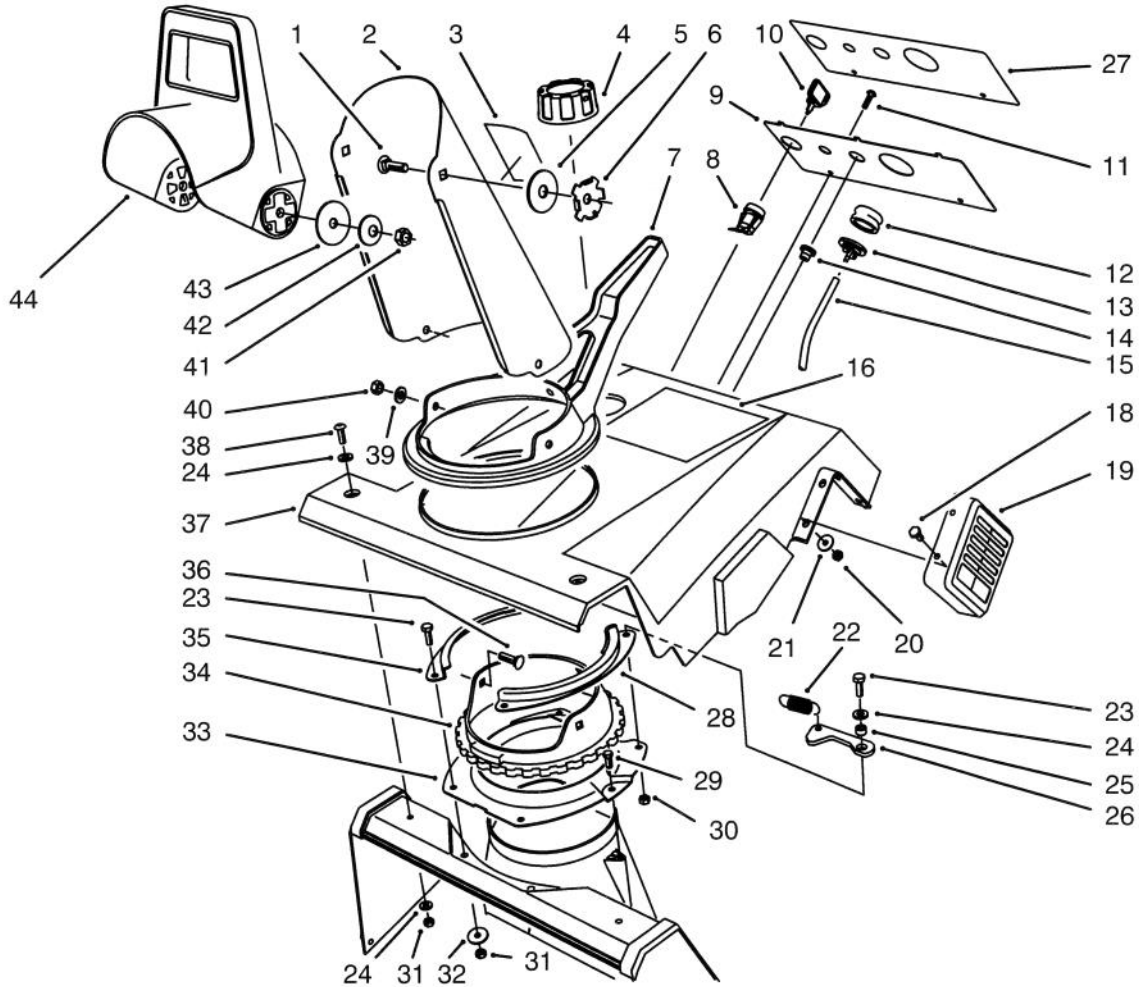


C-1740

UPPER SHROUD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3230-22	Bolt - Carriage	2
2	94-2791	Discharge Chute Assembly (Incl. Ref. #3)	1
3	94-2901	Decal - Danger	1
4	55-3573	Gas Cap Assembly	1
5	20-4320	Washer - Rubber	2
6	55-8950	Plate - Friction	2
7	71-4940	Handle - Chute	1
8	40-5940	Switch - On-Off	1
9	71-5240	Panel - Control (Model 38191)	1
9	71-5241	Panel - Control (Model 38196)	1
10	63-8360	Key - Ignition	1

Ref. No.	Part No.	Description	No. Used
11	32144-53	Screw - Slotted Flange Hd.	2
12	66-7460	Bulb - Primer	1
13	44-2750	Body - Primer	1
14	23-7470	Guide - Rope	1
15	44-3173	Hose - Primer	1
16	77-5210	Decal - CCR1000 E (Model 38196)	1
*	71-5490	Decal - Shroud (Model 38191)	1
18	3290-359	Screw - Hex. Hd.	4
19	71-5340	Guard - Muffler	1
20	3296-2	Nut - Lock	4
21	3256-61	Washer - Flat	4
22	80-4600	Spring - Extension	1

*Not Illustrated

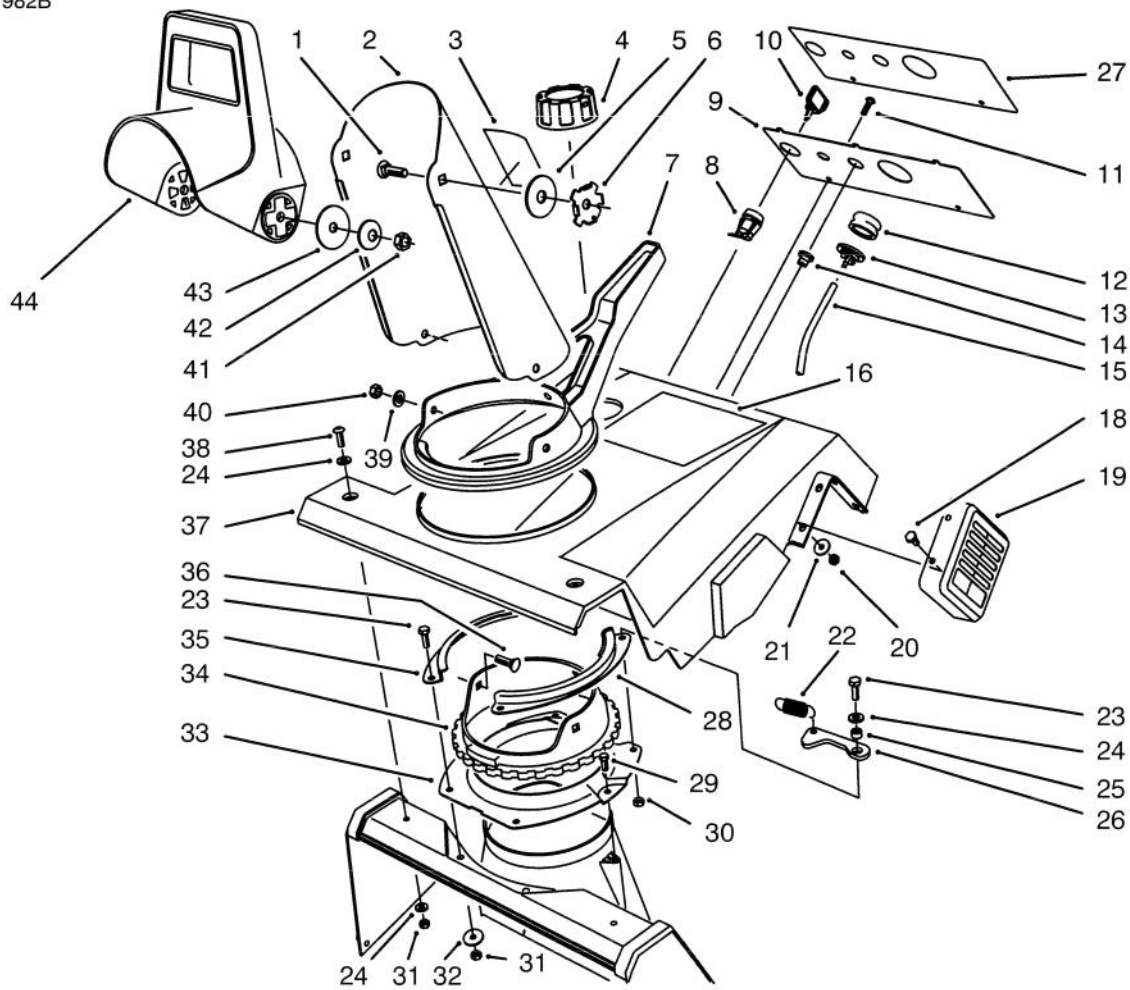


C-1740

UPPER SHROUD ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
23	321-4	Screw - Hex. Hd.	4
24	3256-22	Washer - Flat	5
25	55-9370	Spacer - Detent Arm	1
26	80-4610	Arm - Detent	1
27	94-2567	Decal - Control Panel (Model No. 38191)	1
*	94-2566	Decal - Control Panel (Model 38196)	1
28	71-4980	Retainer - Chute Ring L.H.	1
29	46-8092	Screw - Hex. Flange Hd.	2
30	3296-56	Nut - Lock	1
31	3296-42	Nut - Lock	4
32	3256-22	Washer - Flat	2
33	55-8921	Support - Chute Ring	1

Ref. No.	Part No.	Description	No. Used
34	94-2788	Ring - Chute (Model No. 38191 Only)	1
*	71-4950	Ring - Chute (Model 38196 Only)	1
35	71-4990	Retainer - Chute Ring R.H.	1
36	3230-16	Bolt - Carriage	3
37	80-4811	Shroud - Upper	1
38	3250-32	Screw - Pan Hd.	2
39	3256-70	Washer - Flat	3
40	32149-1	Nut - Keps	3
41	3296-29	Nut - Lock	2
42	3290-456	Washer - Belleville	2
43	3256-68	Washer - Flat	2
44	56-2680	Deflector - Discharge	1


*Not Illustrated

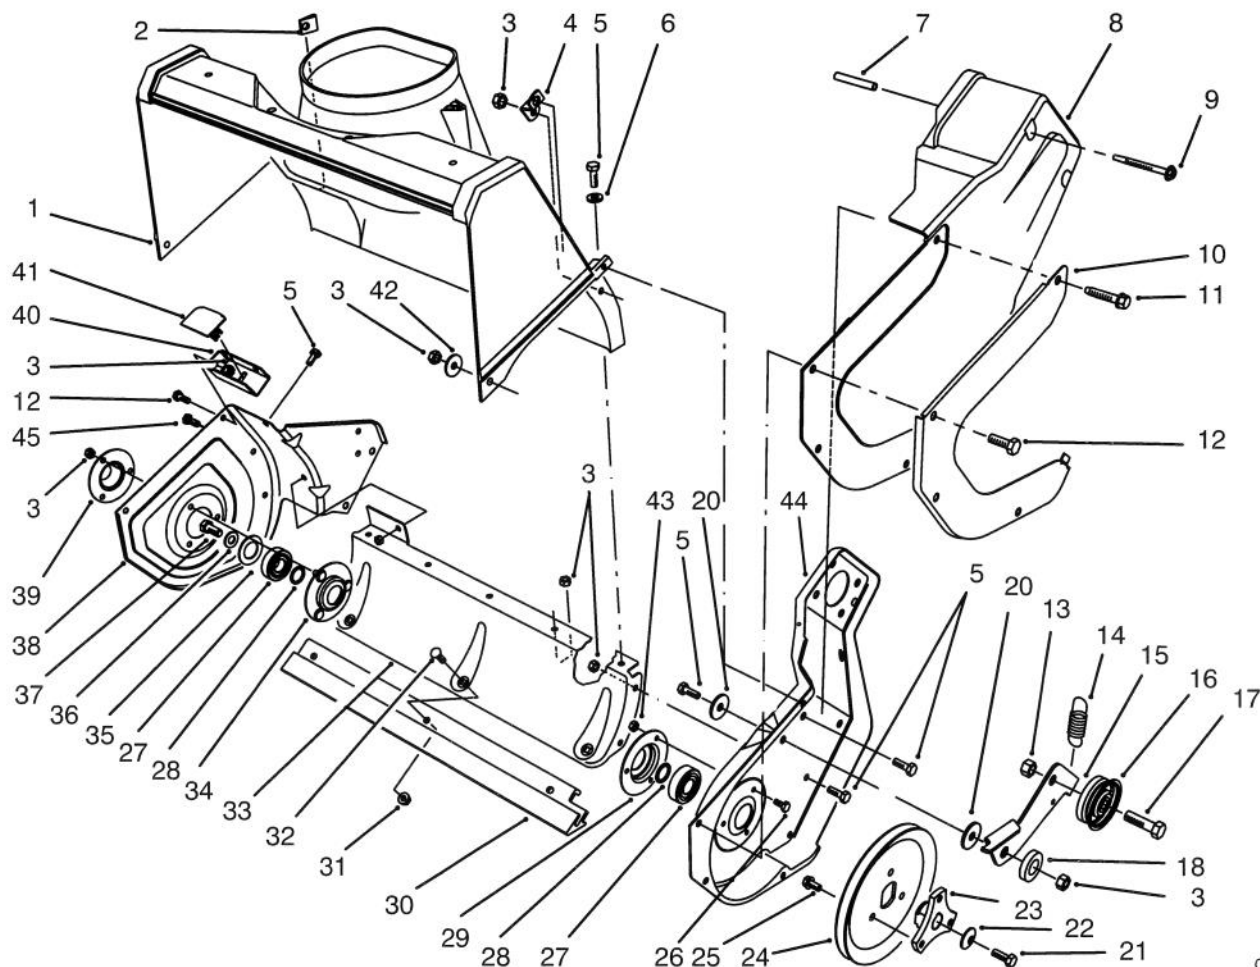

C-1741

ROTOR HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	55-8700	Housing - Rotor	1	24	71-5410	Pulley - Rotor	1
2	32115-14	Nut - U	1	25	12-3270	Screw - Hex. Flange Hd.	3
3	3296-42	Nut - Lock	21	26	32105-8	Screw - Hex. Hd.	3
4	55-9430	Bracket - Z	1	27	38-7820	Bearing - Ball	2
5	321-4	Screw - Hex. Hd.	11	28	52-7280	Washer - Thrust	2
6	3256-22	Washer - Flat	5	29	38-8620	Flange - Bearing	1
7	57-3830	Tube	2	30	71-5390	Scraper	1
8	71-5030	Cover - Drive	1	31	32128-10	Nut - Flange Lock	3
9	71-5350	Screw - Thread Forming	2	32	3229-11	Bolt - Carriage	3
10	71-5150	Guard - Drive Cover	1	33	71-4930	Housing - Lower	1
11	36-3860	Screw - Special	1	34	52-9110	Flange - Bearing	1
12	32105-15	Screw - Hex. Flange Hd.	7	35	52-7270	Washer - Rubber	1
13	3296-39	Nut - Lock	1	36	3256-24	Washer - Flat	1
14	71-5470	Spring - Brake	1	37	3234-25	Screw - Hex. Hd.	1
15	71-5160	Arm - Brake	1	38	71-4920	Sideplate - R.H.	1
16	71-5260	Pulley - Idler	1	39	52-7290	Retainer - Bearing	1
17	323-44	Screw - Hex. Hd.	1	40	71-5310	Bracket - Support	1
18	80-4620	Washer - Spacer	1	41	71-5270	Cover - Bracket	1
20	3256-55	Washer - Pivot	2	42	3256-67	Washer - Flat	2
21	321-30	Screw - Hex. Hd.	1	43	3296-2	Nut - Lock	3
22	3290-456	Washer - Belleville	1	44	71-4911	Sideplate - L.H.	1
23	71-5070	Hub - Pulley	1	45	321-39	Screw - Hex Washer Hd.	1

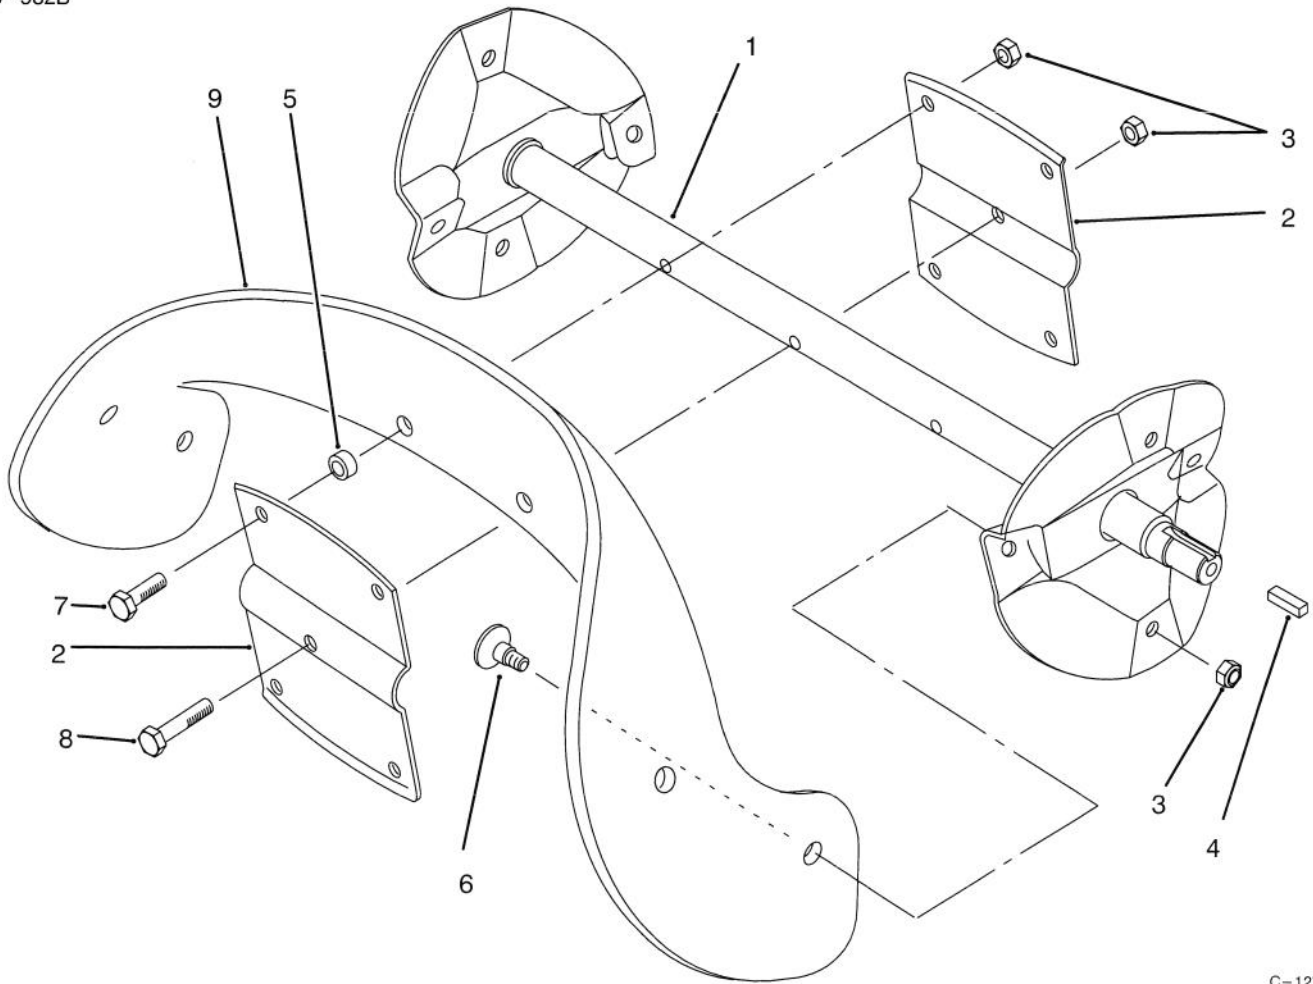


C-1273

ROTOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	55-9202	Rotor Shaft Assembly	1
2	66-6600	Plate - Rotor	2
3	3296-56	Nut - Lock	13
4	10-8040	Key - Square	1
5	55-9370	Spacer	4

Ref. No.	Part No.	Description	No. Used
6	84-1971	Screw - Countersunk	8
7	321-4	Screw - Hex. Hd.	4
8	321-8	Screw - Hex. Hd.	1
9	88-0781	Blade - Rotor	2

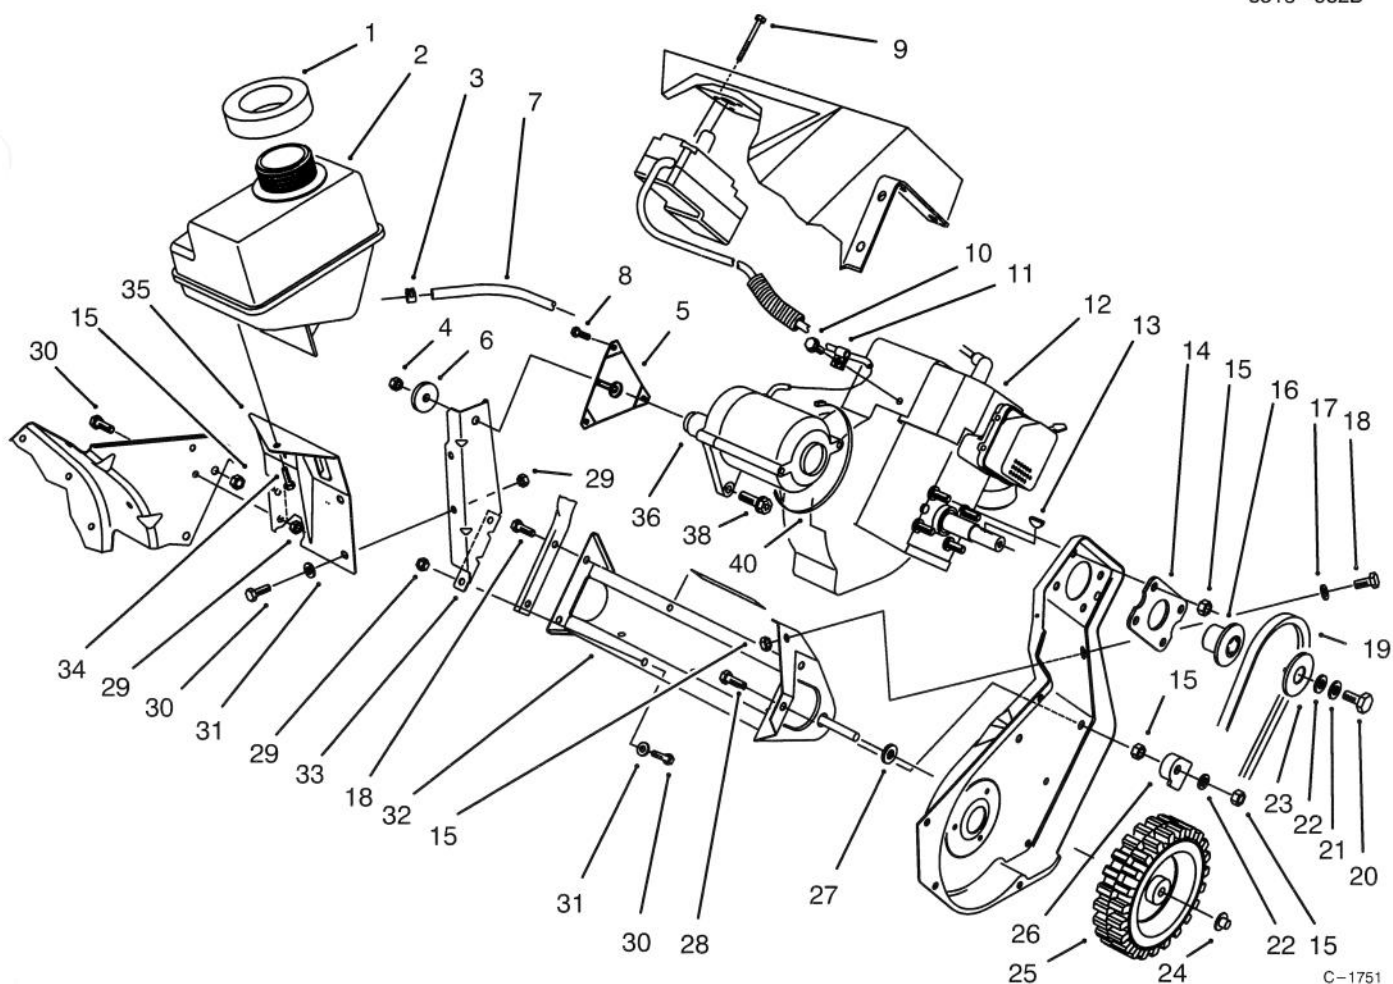


ENGINE & FRAME ASSEMBLY MODEL 38196 (ELECTRIC)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	55-9310	Seal - Fuel Tank	1	20	3235-6	Screw - Locking Hex. Hd.	1
2	71-5020	Tank - Fuel	1	21	3290-456	Washer - Belleville	1
3	2412-98	Clamp - Hose	2	22	3256-71	Washer - Flat	2
4	3296-16	Nut - Lock	1	23	71-5060	Cap - Sheave	1
5	92-6012	Bracket & Stud Assembly	1	24	3290-320	Nut - Push	2
6	71-5320	Washer - Engine Support	1	25	23-3250	Wheel	2
7	49-2482	Hose - Fuel	1	26	84-5610	Guide - Cable	1
8	92-6019	Screw - Thread Forming	3	27	71-5440	Spacer - Wheel	2
9	32144-27	Screw - Thread Forming	3	28	322-5	Screw - Hex. Hd.	1
10	32144-10	Screw - Thread Forming	1	29	3296-42	Nut - Lock	6
11	2412-91	Clamp - Cable	1	30	321-4	Screw - Hex. Hd.	6
†12		Engine - Tecumseh No. HSK600-1681S	1	31	3256-22	Washer - Flat	4
13	3257-3	Key - Woodruff	1	32	71-5200	Frame Assembly	1
14	71-5290	Plate - Engine	1	33	71-5210	Support - Engine	1
15	3296-29	Nut - Lock	9	34	32144-53	Screw - Thread Forming	1
16	71-5050	Hub - Sheave	1	35	71-5220	Bracket - Fuel Tank	1
17	3256-23	Washer - Flat	1	*36	77-0402	Starter Motor Assembly	1
18	322-3	Screw - Hex. Hd.	3	38	80-0700	Screw - Hex Torx	2
19	71-5381	Belt - Drive	1	40	250-7	Strap - Starter Tie Down	1

* Not Illustrated

† Obtain from your local Tecumseh dealer.

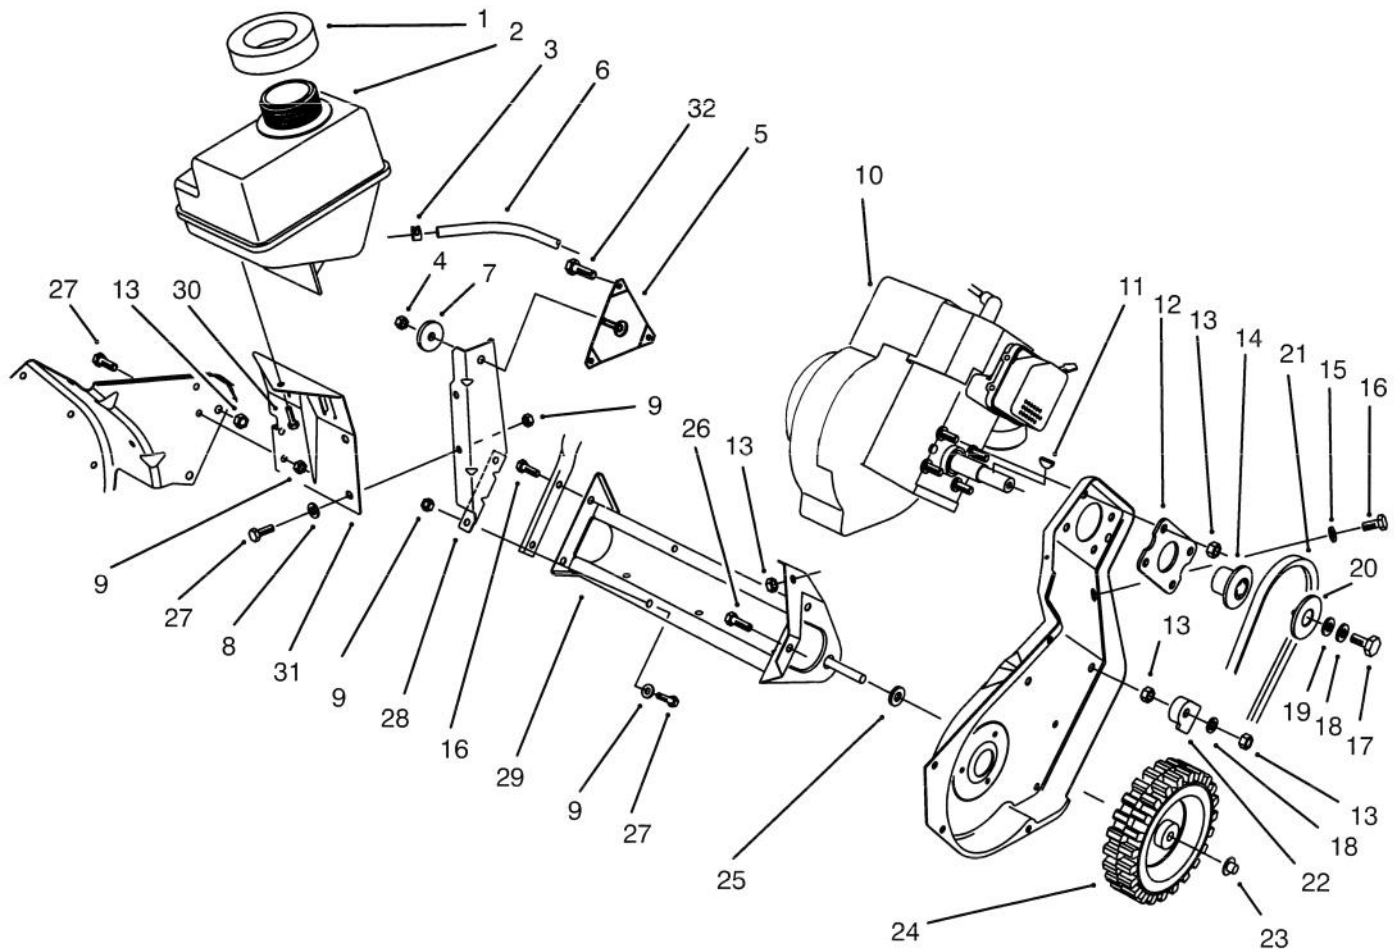

C-1742


ENGINE & FRAME ASSEMBLY MODEL 38191 (RECOIL)

Ref. No.	Part No.	Description	No. Used
1	55-9310	Seal - Fuel Tank	1
2	71-5020	Tank - Fuel	1
3	2412-86	Clamp - Hose	2
4	3296-16	Nut - Lock	1
5	92-6012	Bracket & Stud Assembly	1
6	49-2482	Hose - Fuel	1
7	71-5320	Washer - Engine Support	1
8	3256-22	Washer - Flat	4
9	3296-42	Nut - Lock	6
†10		Engine - Tecumseh No. HSK600-1681S	1
11	3257-3	Key - Woodruff	1
12	71-5290	Plate - Engine	1
13	3296-29	Nut - Lock	9
14	71-5050	Hub - Sheave	1
15	3256-23	Washer - Flat	1
16	322-3	Screw - Hex. Hd.	3

Ref. No.	Part No.	Description	No. Used
17	3235-6	Screw - Locking Hex. Hd.	1
18	3290-456	Washer - Belleville	1
19	3256-71	Washer - Flat	2
20	71-5060	Cap - Sheave	1
21	71-5381	Belt - Drive	1
22	84-5610	Guide - Cable	1
23	3290-320	Nut - Push	2
24	23-3250	Wheel	2
25	71-5440	Spacer - Wheel	2
26	322-5	Screw - Hex. Hd.	1
27	321-4	Screw - Hex. Hd.	6
28	71-5210	Support - Engine	1
29	71-5200	Frame Assembly	1
30	32144-53	Screw - Thread Forming	1
31	71-5220	Bracket - Fuel Tank	1
32	92-6019	Screw - Thr'd Form.	3

* Not Illustrated

† Obtain from your local Tecumseh dealer.

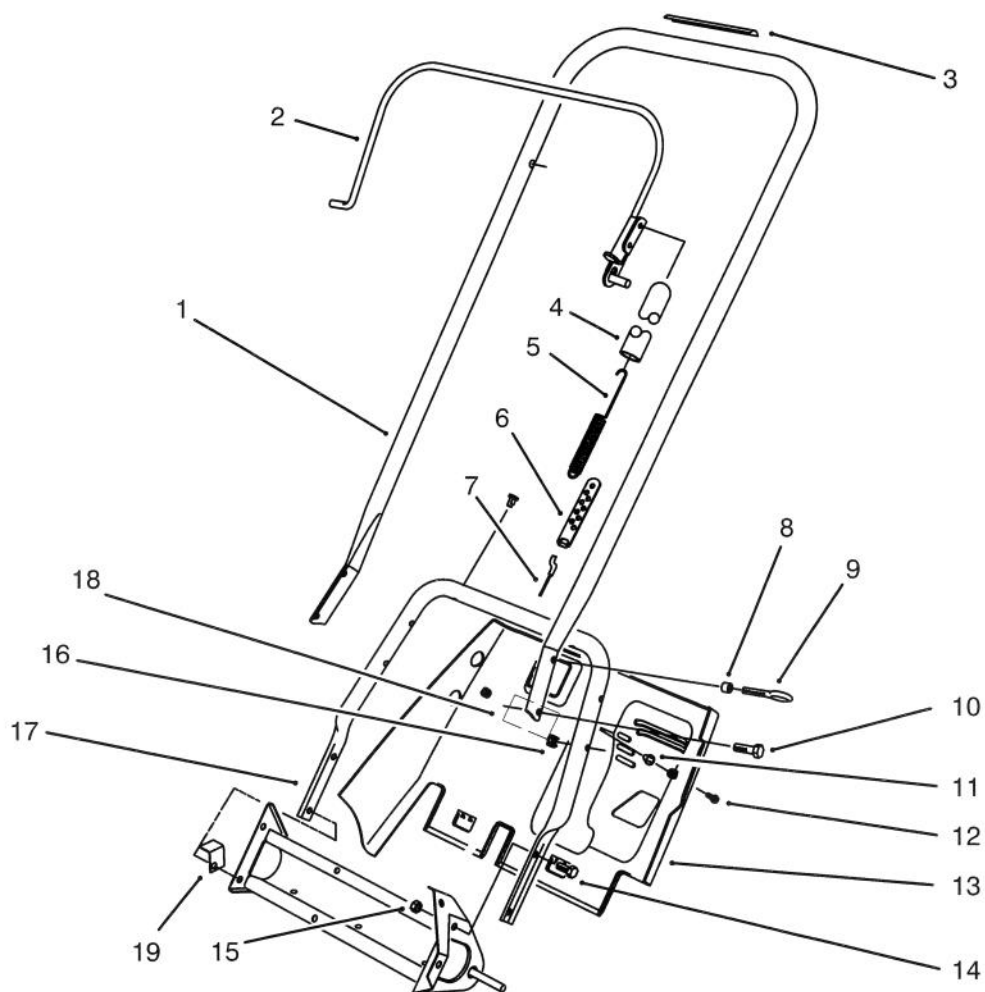


C-1752

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	71-5090	Handle - Upper	1	13	71-5040	Shroud - Lower (Model 38196)	1
2	71-5120	Bail Assembly	1	*	71-5041	Shroud - Lower (Model 38191)	1
3	94-2577	Decal - Rotor Drive	1	14	322-3	Screw - Hex. Hd.	2
4	71-5530	Cover - Spring	1	15	3296-29	Nut - Lock	2
5	71-5480	Spring - Extension	1	16	3290-225	Nut - Speed	4
6	71-5330	Adjuster - Cable	1	17	71-5370	Handle - Lower	1
7	55-9322	Cable - Clutch	1	18	94-2581	Decal - Warning (Model No. 38196)	1
8	55-9370	Spacer	1	19	71-5600	Bracket - Shroud	1
9	3299-1	Bolt - Eye	1				
10	32105-11	Screw - Hex. Hd.	3				
11	3290-486	Nut - Push	5				
12	32144-53	Screw - Thread Forming	3				

*Not Illustrated

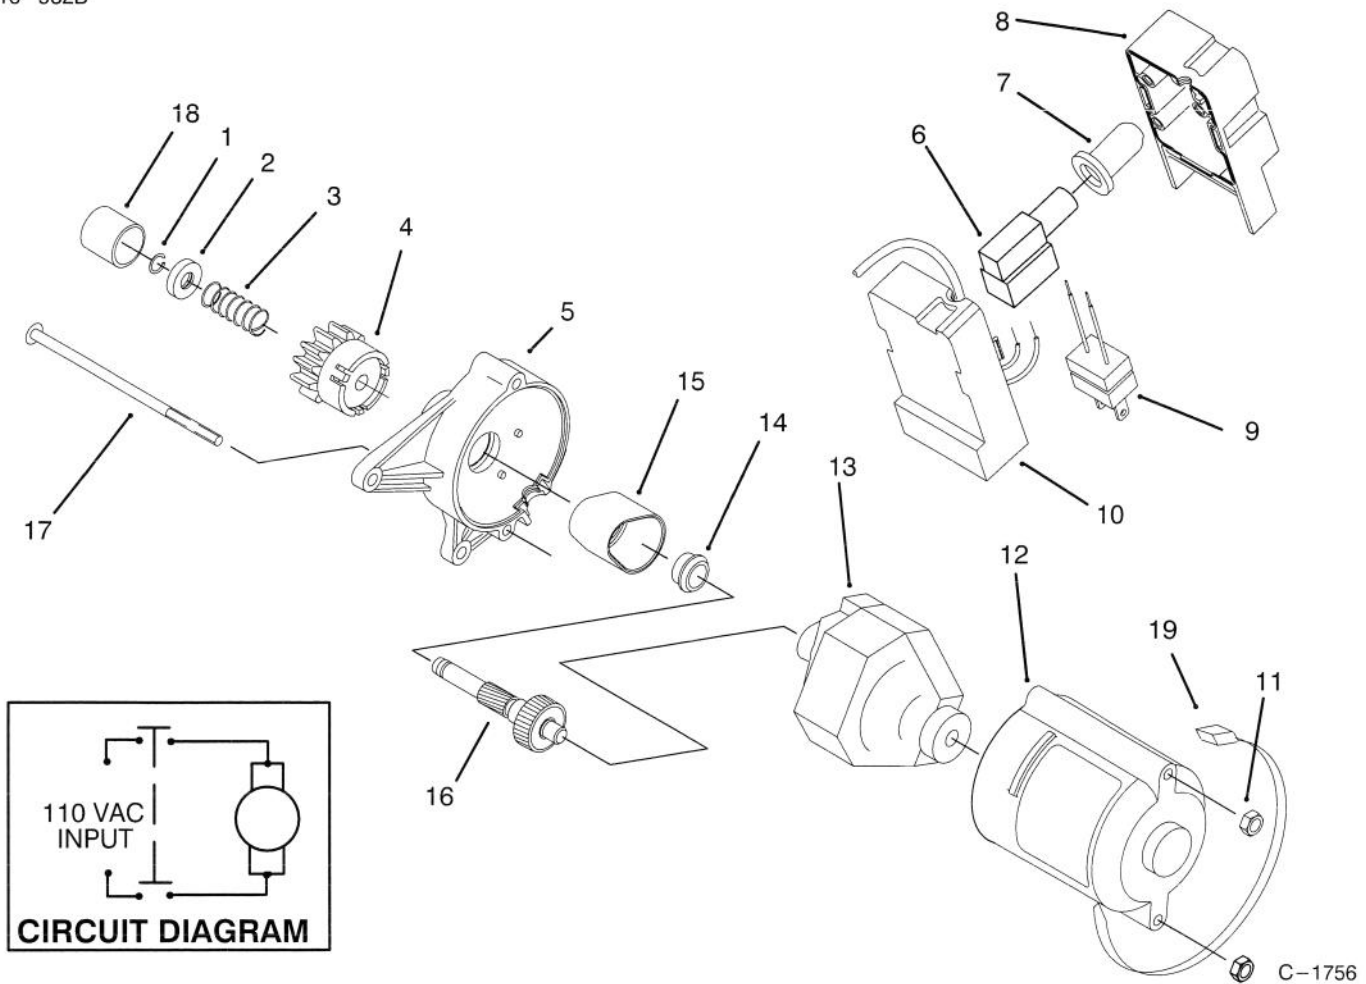


C-1756

STARTER MOTOR ASSEMBLY (MODEL 38196-ELECTRIC)

Ref. No.	Part No.	Description	No. Used
1	61-4680	Ring - Lock	1
2	61-4670	Stop - Pinion	1
3	61-4690	Spring - Anti Drift	1
4	84-5240	Pinion Assembly	1
5	70-7810	Housing - Upper Starter	1
6	61-4820	Switch - Starter	1
7	61-4810	Boot - Switch	1
8	80-3740	Cap - Switch Housing	1
9	36-8370	Plug - Power	1
10	80-3730	Base - Switch Housing	1
11	3296-2	Nut - Lock	2

Ref. No.	Part No.	Description	No. Used
12	70-7820	Housing - Lower Starter	1
13	70-7802	Motor	1
14	70-7900	Bushing - Upper	1
15	70-7850	Cover - Gear	1
16	92-6003	Gear & Shaft Assembly	1
17	32144-101	Screw - Machine	2
18	70-7890	Cap - Pinion	1
19	250-7	Cable Tie	1
*	77-0402	Starter Motor Assembly (Incl. Ref. #1-5,11-18 & 20)	1
*	28-9170	Cord - 7 Ft.	1

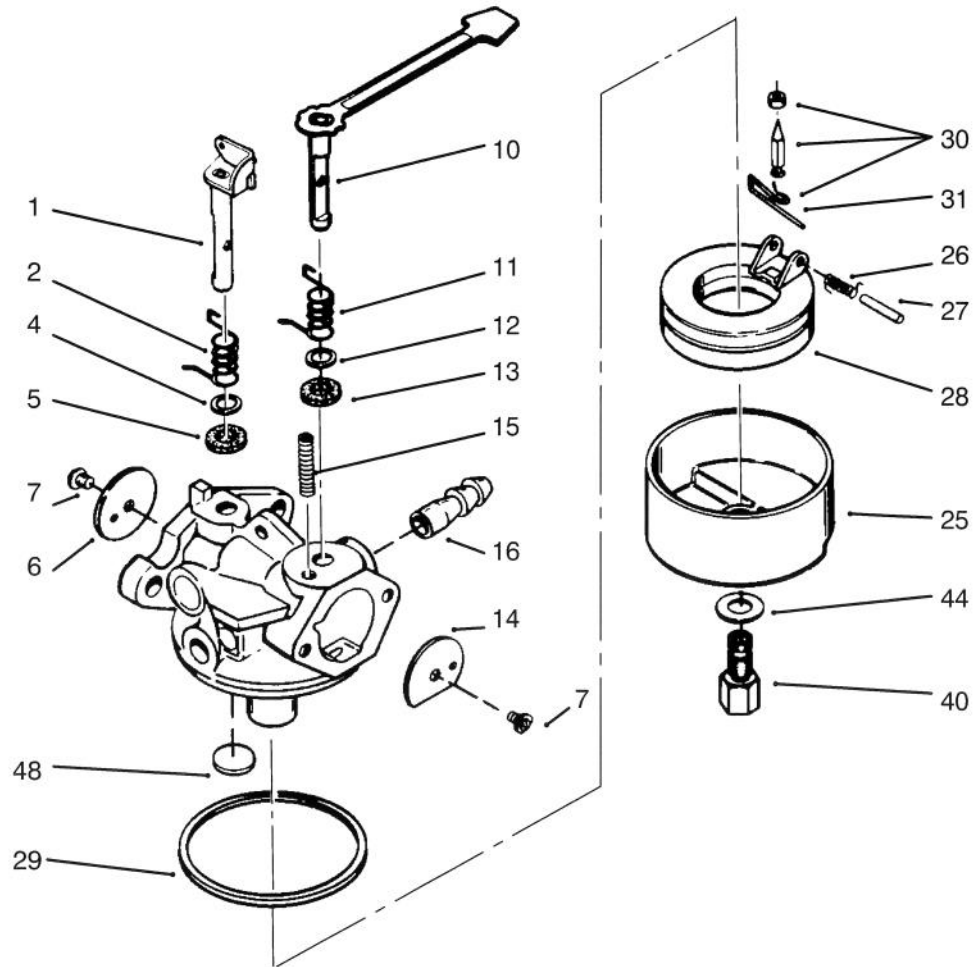


c-1748

CARBURETOR NO. 632641

Ref. No.	Part No.	Description	No. Used
1	632166	Throttle Shaft & Lever Ass'y	1
2	632169	Throttle Return Spring	1
4	6311844	Dust Seat Washer	1
5	631183	Dust Seat (Throttle)	1
6	631621	Throttle Shutter	1
7	650506	Shutter Screw	2
10	632553	Choke Shaft & Lever Asm. (Incl. Ref. # 11-13)	1
14	631815	Choke Shutter	1
15	630735	Choke Positioning Spring	1
16	632164	Fuel Fitting	1

Ref. No.	Part No.	Description	No. Used
25	631700	Float Bowl	1
26	632386	Float Dampening Spring	1
27	631024	Float shaft	1
28	632019	Float	1
29	631028	Float Bowl "O" Ring	1
30	631021	Inlet Needle, Seat & Clip (Incl. Ref. #31)	1
31	631022	Spring Clip	1
40	632385	High Speed Bowl Nut	1
44	631334	Bowl Nut Washer	1
48	631027	Welch Plug	1

ENGINE TECUMSEH MODEL NO. HSK600-1681S

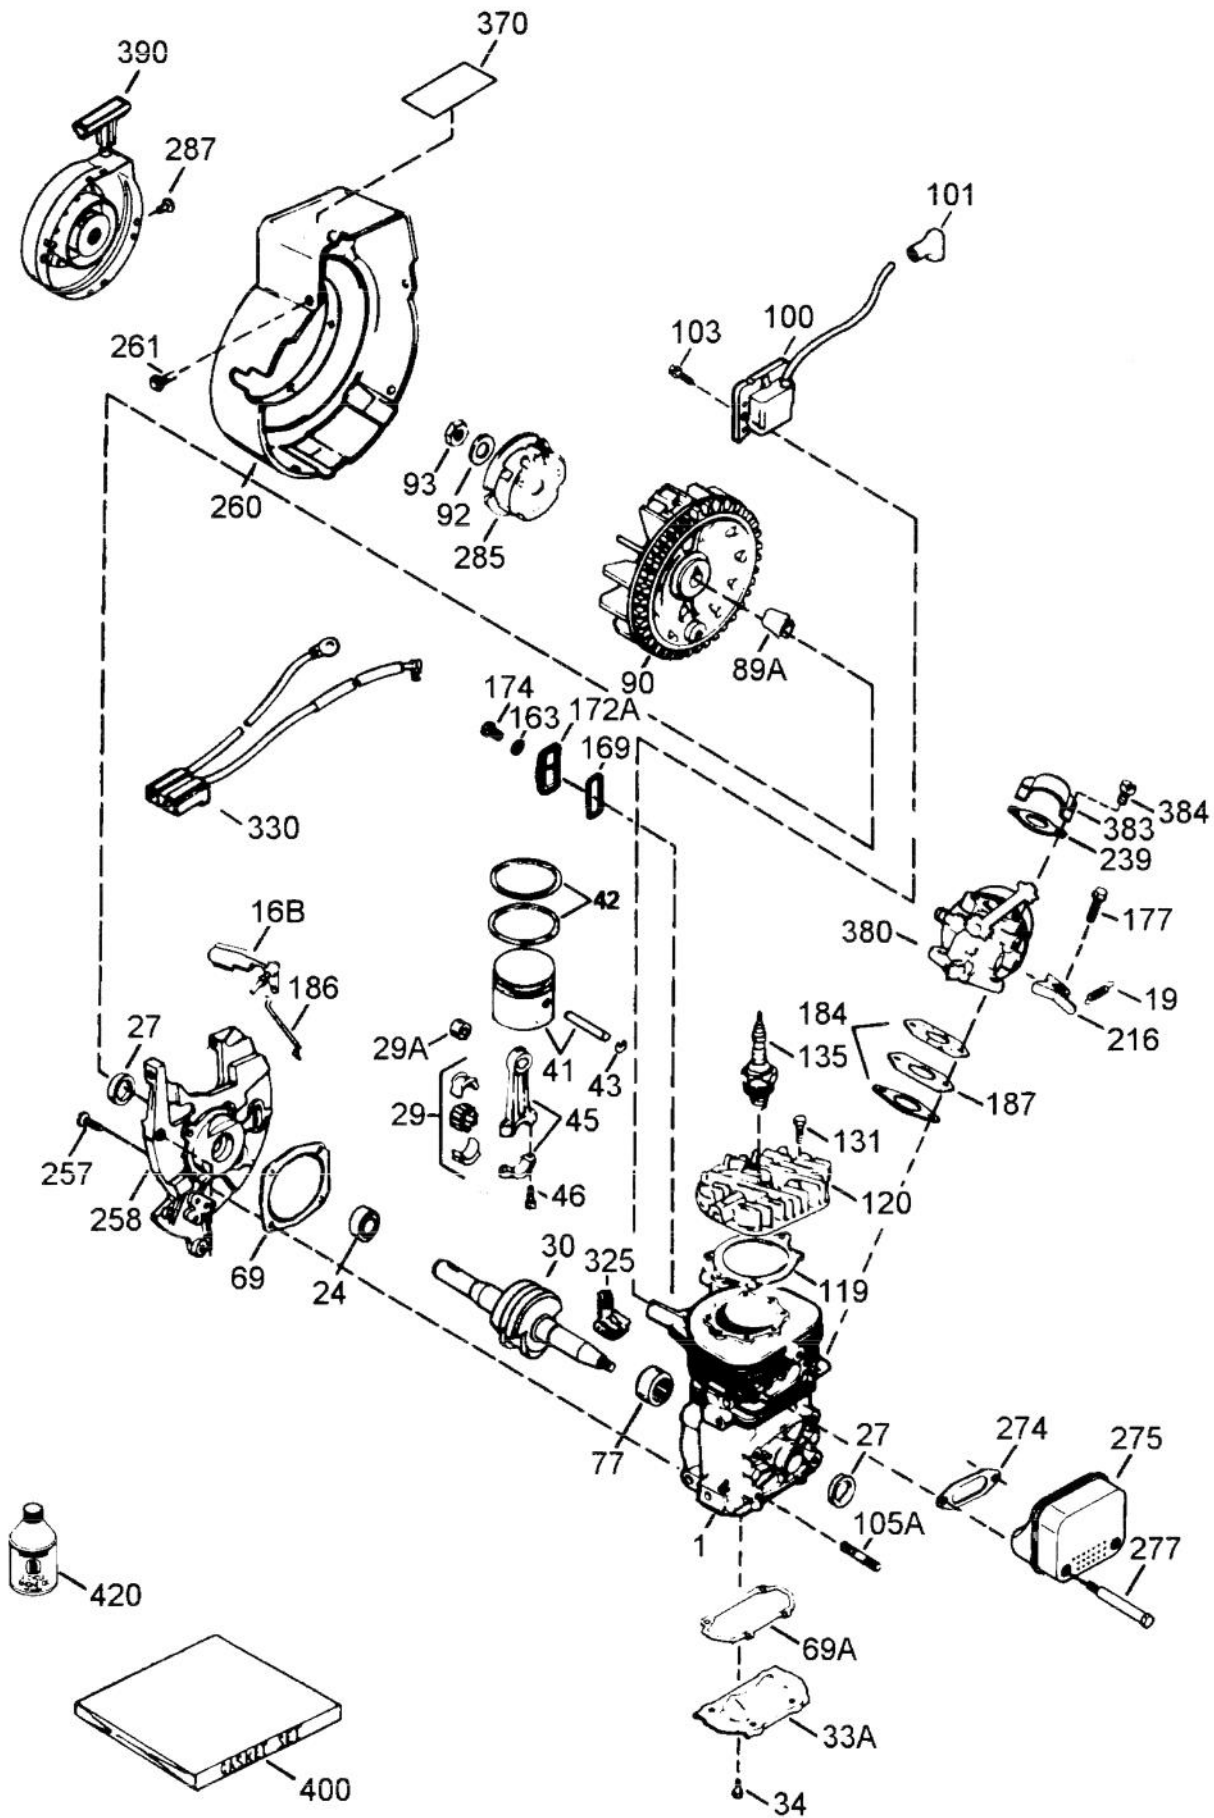


ENGINE TECUMSEH MODEL NO. HSK600-1681S

Ref. No.	Part No.	Description	No. Used
1		Cylinder (Order Short Block if Replacement is needed)	1
16B	490291A	Air Vane	1
19	570707	Extension Spring	1
24	530110	Ball Bearing	1
27	510319	Oil Seal	2
29	530150	Needle Bearing & Liner Set (37 Needles)	1
29A	530104A	Cartridge Bearing	1
30	290602	Crankshaft	1
33A	570644	Cover Plate	1
34	650579	Screw, Torx T-25	4
41	310283A	Piston & Pin Assembly	1
42	310190	Ring Set	2
43	310167	Piston Pin Retaining Ring	2
45	310235B	Connecting Rod Assembly (Incl. Ref. #29, 29A, & 46)	1
46	650633	Connecting Rod Bolt	4
*69	510292A	Cylinder Cover Gasket	1
*69A	510323A	Cover Plate Gasket	1
77	53-105	Cartridge Bearing	1
89	611032	Adapter Sleeve	1
90	611066	Flywheel	1
92	650815	Belleville Washer	1
93	650390	Flywheel Nutt	1
100	34443A	Solid State Ignition (Incl. Ref. #101)	1
101	610118	Spark Plug Cover	1
103	650814	Screw, Torx T-15	2
105A	650796	Stud	4
*119	510274A	Cylinder Head Gasket	1
120	250240B	Cylinder Head	1
131	650477	Screw, Torx T-30	5

Ref. No.	Part No.	Description	No. Used
135	611049	Resistor Spark Plug	1
163	650838	Washer	1
*169	510325A	Cover Plate Gasket	1
172A	570708	Compression Release Cover	1
174	650579	Screw, Torx T-25	1
177	650959	Screw	2
*184	510326A	Carburetor Gasket	2
186	490322	Governor Link	1
187	570428A	Spacer	1
216	570645	R.P.M. Adjusting Lever	1
239	35815	Air Cleaner Gasket	1
257	650911	Screw, Torx T-30	4
258	350422	Blower Housing Base (Incl. Ref. #27)	1
260	350437	Blower Housing	1
261	650737	Screw	4
*274	510346A	Exhaust Gasket	1
275	390330	Muffler (Incl. Ref. #274 & 277)	1
277	650869	Screw	2
285	590551	Starter Cup	1
287	650926	Screw	3
325	29443	Wire Clip	1
330	611153	Wire Harness	1
370	35977	Instruction Decal	1
380	632641	Carburetor (Incl. Ref. #184)	1
383	570434	Spit Cup	1
384	650229	Screw, Torx T-25	2
390	590652	Rewind Starter	1
400	510324	Gasket Set	1
420	730227A	2-Cycle Oil (8 oz.)	1

*Included in Gasket Set No. 510324.

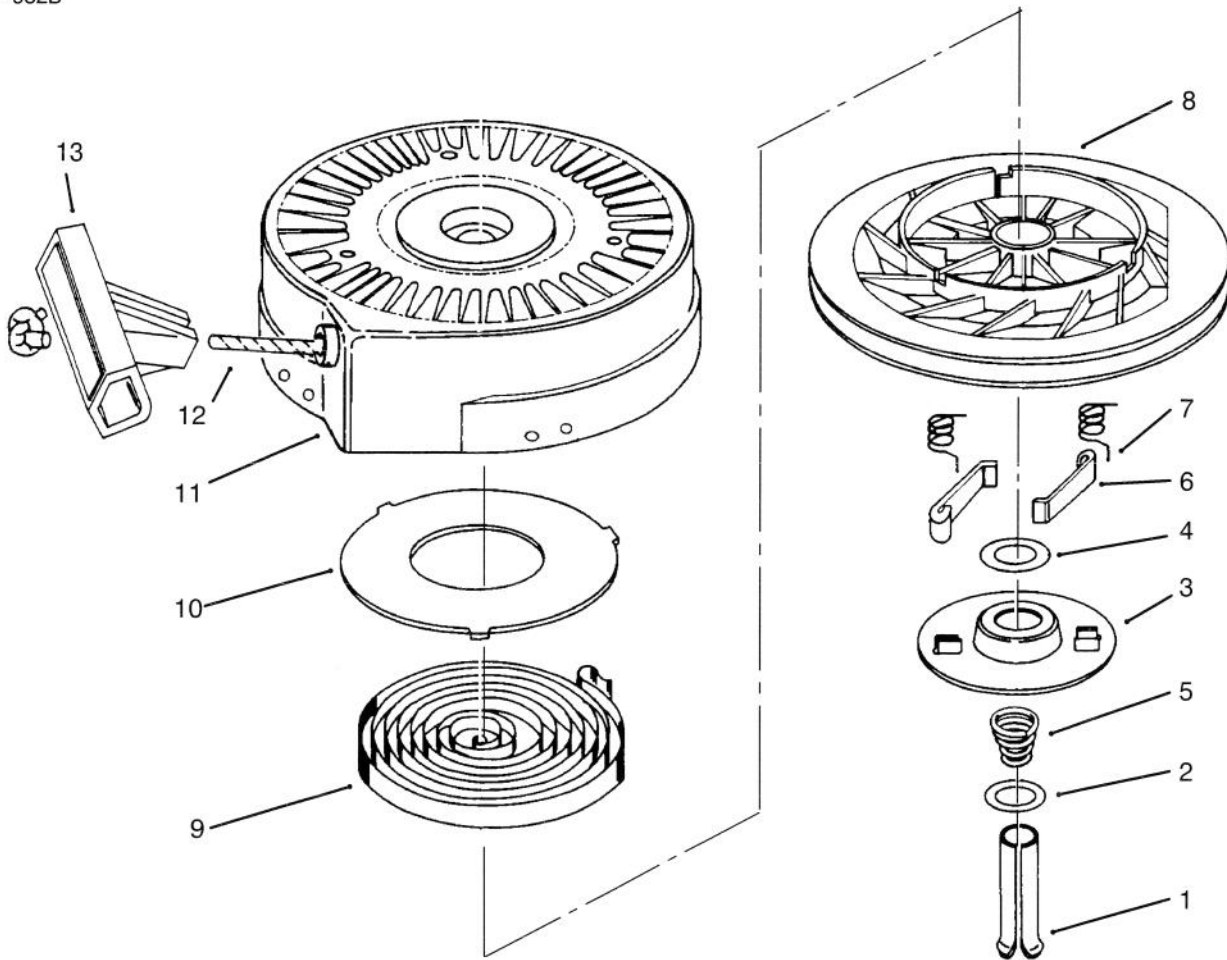

c-1750

RECOIL STARTER NO. 590652

Ref. No.	Part No.	Description	No. Used
1	590599A	Spring Pin (Incl. Ref. #4)	1
2	590600	Washer	1
3	590615	Retainer	1
4	590601	Washer	1
5	590598	Brake Spring	1
6	590616	Starter Dog	2
7	590617	Dog Spring	2

Ref. No.	Part No.	Description	No. Used
8	590645A	Pulley Assembly (Incl. Ref. #9 & 10)	1
9	590619	Rewind Spring	1
10	590620	Spring Cover	1
11	590643	Starter Housing Assembly	1
12	590535	Starter Rope	1
13	590452	Starter Handle	1

TORO PART NUMBER INDEX

3316-982B

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
10-8040	Key - Square	4 4 1	71-5050	Hub - Sheave	6 14 1
12-3270	Screw - Hex. Flange Hd.	3 25 3	71-5050	Hub - Sheave	5 16 1
20-4320	Washer - Rubber	1 5 2	71-5060	Cap - Sheave	6 20 1
23-3250	Wheel	6 24 2	71-5060	Cap - Sheave	5 23 1
23-3250	Wheel	5 25 2	71-5070	Hub - Pulley	3 23 1
23-7470	Guide - Rope	1 14 1	71-5090	Handle - Upper	7 1 1
28-9170	Cord - 7 Ft.	8 * 1	71-5120	Bail Assembly	7 2 1
36-3860	Screw - Special	3 11 1	71-5150	Guard - Drive Cover	3 10 1
36-8370	Plug - Power	8 9 1	71-5160	Arm - Brake	3 15 1
38-7820	Bearing - Ball	3 27 2	71-5200	Frame Assembly	6 29 1
38-8620	Flange - Bearing	3 29 1	71-5200	Frame Assembly	5 32 1
40-5940	Switch - On-Off	1 8 1	71-5210	Support - Engine	6 28 1
44-2750	Body - Primer	1 13 1	71-5210	Support - Engine	5 33 1
44-3173	Hose - Primer	1 15 1	71-5220	Bracket - Fuel Tank	6 31 1
49-2482	Hose - Fuel	6 6 1	71-5220	Bracket - Fuel Tank	5 35 1
49-2482	Hose - Fuel	5 7 1	71-5240	Panel - Control	1 9 1
52-7270	Washer - Rubber	3 35 1	71-5241	Panel - Control	1 9 1
52-7280	Washer - Thrust	3 28 2	71-5260	Pulley - Idler	3 16 1
52-7290	Retainer - Bearing	3 39 1	71-5270	Cover - Bracket	3 41 1
52-9110	Flange - Bearing	3 34 1	71-5290	Plate - Engine	6 12 1
55-3573	Gas Cap Assembly	1 4 1	71-5290	Plate - Engine	5 14 1
55-8700	Housing - Rotor	3 1 1	71-5310	Bracket - Support	3 40 1
55-8921	Support - Chute Ring	2 33 1	71-5320	Washer - Engine Support	5 6 1
55-8950	Plate - Friction	1 6 2	71-5320	Washer - Engine Support	6 7 1
55-9202	Rotor Shaft Assembly	4 1 1	71-5330	Adjuster - Cable	7 6 1
55-9310	Seal - Fuel Tank	5 1 1	71-5340	Guard - Muffler	1 19 1
55-9310	Seal - Fuel Tank	6 1 1	71-5350	Screw - Thread Forming	3 9 2
55-9322	Cable - Clutch	7 7 1	71-5370	Handle - Lower	7 17 1
55-9370	Spacer	4 5 4	71-5381	Belt - Drive	5 19 1
55-9370	Spacer	7 8 1	71-5381	Belt - Drive	6 21 1
55-9370	Spacer - Detent Arm	2 25 1	71-5390	Scraper	3 30 1
55-9430	Bracket - Z	3 4 1	71-5410	Pulley - Rotor	3 24 1
56-2680	Deflector - Discharge	2 44 1	71-5440	Spacer - Wheel	6 25 2
57-3830	Tube	3 7 2	71-5440	Spacer - Wheel	5 27 2
61-4670	Stop - Pinion	8 2 1	71-5470	Spring - Brake	3 14 1
61-4680	Ring - Lock	8 1 1	71-5480	Spring - Extension	7 5 1
61-4690	Spring - Anti Drift	8 3 1	71-5490	Decal - Shroud	1 * 1
61-4810	Boot - Switch	8 7 1	71-5530	Cover - Spring	7 4 1
61-4820	Switch - Starter	8 6 1	71-5600	Bracket - Shroud	7 19 1
63-8360	Key - Ignition	1 10 1	77-0402	Starter Motor Assembly	5*36 1
66-6600	Plate - Rotor	4 2 2	77-0402	Starter Motor Assembly	8 * 1
66-7460	Bulb - Primer	1 12 1	77-5210	Decal - CCR1000 E	1 16 1
70-7802	Motor	8 13 1	80-0700	Screw - Hex Torx	5 38 2
70-7810	Housing - Upper Starter	8 5 1	80-3730	Base - Switch Housing	8 10 1
70-7820	Housing - Lower Starter	8 12 1	80-3740	Cap - Switch Housing	8 8 1
70-7850	Cover - Gear	8 15 1	80-4600	Spring - Extension	1 22 1
70-7890	Cap - Pinion	8 18 1	80-4610	Arm - Detent	2 26 1
70-7900	Bushing - Upper	8 14 1	80-4620	Washer - Spacer	3 18 1
71-4911	Sideplate - L.H.	3 44 1	80-4811	Shroud - Upper	2 37 1
71-4920	Sideplate - R.H.	3 38 1	84-1971	Screw - Countersunk	4 6 8
71-4930	Housing - Lower	3 33 1	84-5240	Pinion Assembly	8 4 1
71-4940	Handle - Chute	1 7 1	84-5610	Guide - Cable	6 22 1
71-4950	Ring - Chute Model 38196	2 34 1	84-5610	Guide - Cable	5 26 1
71-4980	Retainer - Chute Ring L.H.	2 28 1	88-0781	Blade - Rotor	4 9 2
71-4990	Retainer - Chute Ring R.H.	2 35 1	92-6003	Gear & Shaft Assembly	8 16 1
71-5020	Tank - Fuel	5 2 1	92-6012	Bracket & Stud Assembly	5 5 1
71-5020	Tank - Fuel	6 2 1	92-6012	Bracket & Stud Assembly	6 5 1
71-5030	Cover - Drive	3 8 1	92-6019	Screw - Thr'd Form.	6 32 3
71-5040	Shroud - Lower	7 13 1	92-6019	Screw - Thread Forming	5 8 3
71-5041	Shroud - Lower	7 * 1	94-2566	Decal - Control Panel	2 * 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
94-2567	Decal - Control Panel	2 27 1	3256-70	Washer - Flat	2 39 3
94-2577	Decal - Rotor Drive	7 3 1	3256-71	Washer - Flat	6 19 2
94-2581	Decal - Warning	7 18 1	3256-71	Washer - Flat	5 22 2
94-2788	Ring - Chute Model 38191	2 34 1	3257-3	Key - Woodruff	6 11 1
94-2791	Discharge Chute Assembly	1 2 1	3257-3	Key - Woodruff	5 13 1
94-2901	Decal - Danger	1 3 1	3290-225	Nut - Speed	7 16 4
2412-86	Clamp - Hose	6 3 2	3290-320	Nut - Push	6 23 2
2412-91	Clamp - Cable	5 11 1	3290-320	Nut - Push	5 24 2
2412-98	Clamp - Hose	5 3 2	3290-359	Screw - Hex. Hd.	1 18 4
250-7	Cable Tie	8 19 1	3290-456	Washer - Belleville	6 18 1
250-7	Strap - Starter Tie Down	5 40 1	3290-456	Washer - Belleville	5 21 1
321-4	Screw - Hex. Hd.	3 5 11	3290-456	Washer - Belleville	3 22 1
321-4	Screw - Hex. Hd.	4 7 4	3290-456	Washer - Belleville	2 42 2
321-4	Screw - Hex. Hd.	6 27 6	3290-486	Nut - Push	7 11 5
321-4	Screw - Hex. Hd.	5 30 6	3296-2	Nut - Lock	8 11 2
321-4	Screw - Hex. Hd.	2 23 4	3296-2	Nut - Lock	1 20 4
321-8	Screw - Hex. Hd.	4 8 1	3296-2	Nut - Lock	3 43 3
321-30	Screw - Hex. Hd.	3 21 1	3296-16	Nut - Lock	5 4 1
321-39	Screw - Hex Washer Hd.	3 45 1	3296-16	Nut - Lock	6 4 1
322-3	Screw - Hex. Hd.	7 14 2	3296-29	Nut - Lock	6 13 9
322-3	Screw - Hex. Hd.	6 16 3	3296-29	Nut - Lock	5 15 9
322-3	Screw - Hex. Hd.	5 18 3	3296-29	Nut - Lock	7 15 2
322-5	Screw - Hex. Hd.	6 26 1	3296-29	Nut - Lock	2 41 2
322-5	Screw - Hex. Hd.	5 28 1	3296-39	Nut - Lock	3 13 1
323-44	Screw - Hex. Hd.	3 17 1	3296-42	Nut - Lock	3 3 21
3229-11	Bolt - Carriage	3 32 3	3296-42	Nut - Lock	6 9 6
3230-16	Bolt - Carriage	2 36 3	3296-42	Nut - Lock	5 29 6
3230-22	Bolt - Carriage	1 1 2	3296-42	Nut - Lock	2 31 4
3234-25	Screw - Hex. Hd.	3 37 1	3296-56	Nut - Lock	4 3 13
3235-6	Screw - Locking Hex. Hd.	6 17 1	3296-56	Nut - Lock	2 30 1
3235-6	Screw - Locking Hex. Hd.	5 20 1	3299-1	Bolt - Eye	7 9 1
3250-32	Screw - Pan Hd.	2 38 2	32105-8	Screw - Hex. Hd.	3 26 3
3256-22	Washer - Flat	3 6 5	32105-11	Screw - Hex. Hd.	7 10 3
3256-22	Washer - Flat	6 8 4	32105-15	Screw - Hex. Flange Hd.	3 12 7
3256-22	Washer - Flat	2 24 5	32115-14	Nut - U	3 2 1
3256-22	Washer - Flat	5 31 4	32128-10	Nut - Flange Lock	3 31 3
3256-22	Washer - Flat	2 32 2	32144-10	Screw - Thread Forming	5 10 1
3256-23	Washer - Flat	6 15 1	32144-27	Screw - Thread Forming	5 9 3
3256-23	Washer - Flat	5 17 1	32144-53	Screw - Slotted Flange Hd.	1 11 2
3256-24	Washer - Flat	3 36 1	32144-53	Screw - Thread Forming	7 12 3
3256-55	Washer - Pivot	3 20 2	32144-53	Screw - Thread Forming	6 30 1
3256-61	Washer - Flat	1 21 4	32144-53	Screw - Thread Forming	5 34 1
3256-67	Washer - Flat	3 42 2	32144-101	Screw - Machine	8 17 2
3256-68	Washer - Flat	2 43 2	32149-1	Nut - Keps	2 40 3

