




MODEL NO. 71184-590001 & UP

PARTS CATALOG

1238XL LAWN TRACTOR

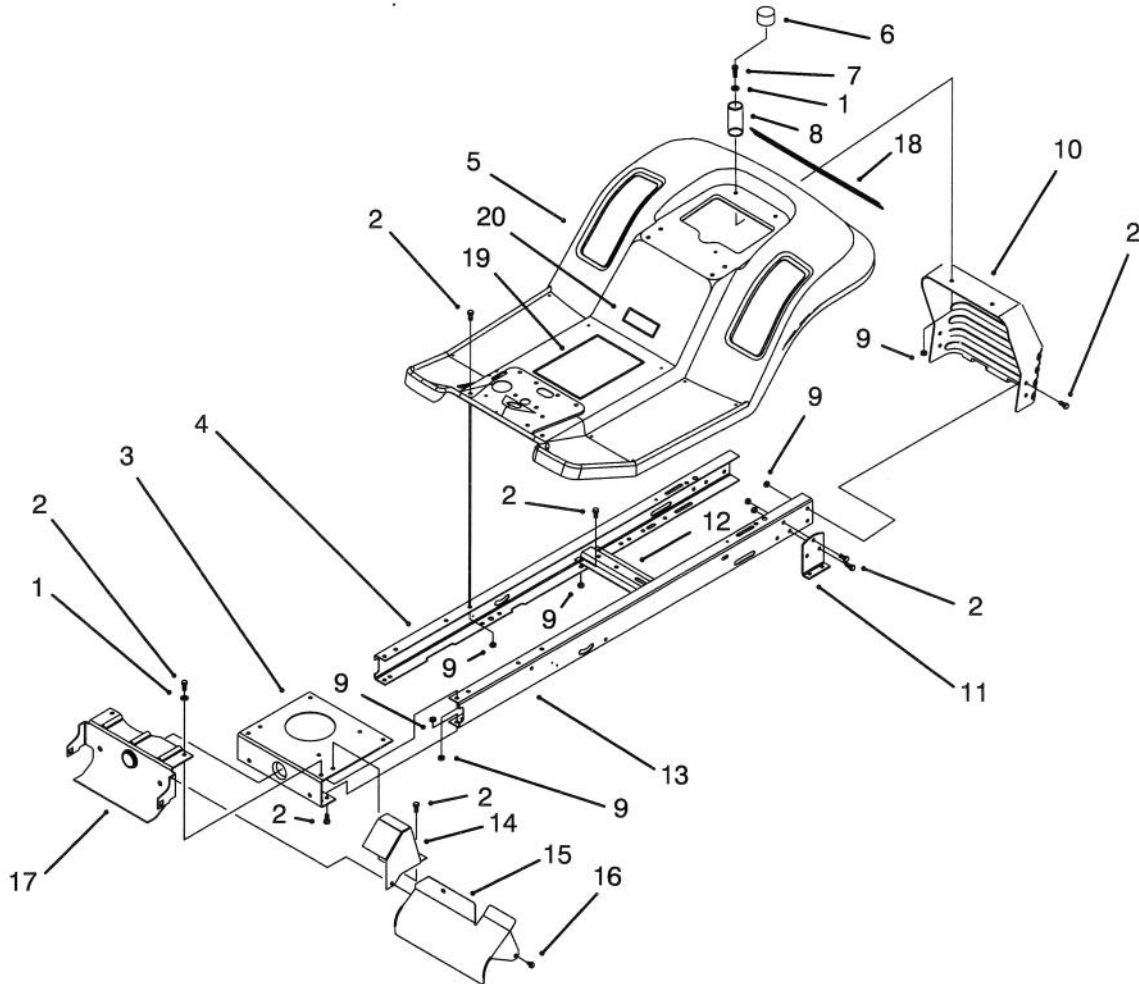


C-1307A

FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3256-23	Washer - Flat	4
2	322-3	Screw - Hex Hd. Cap	22
3	88-4630	Plate - Engine Mount	1
4	88-4650	Rail - R.H. Frame	1
5	88-3840-01	Body - Rear	1
6	701178	Cap - Protector	2
7	322-5	Screw - Hex Hd. Cap	2
8	88-6220	Spring - Compression	2
9	3296-29	Nut - Lock	24
10	88-3940	Panel - Rear Hitch	1

Ref. No.	Part No.	Description	No. Used
11	88-5260	Bracket - Transaxle Mt.	2
12	88-4620	Bracket - Idler Pivot	1
13	88-4660	Rail - L.H. Frame	1
14	88-4960	Shield - Exhaust Pipe	1
15	88-6290	Shield - Muffler	1
16	32104-76	Screw - Thread Tapping	1
17	88-5120	Support - Front Axle	1
18	92-2490	Decal - Rear Body	1
19	92-2484	Decal - Instruction	1
20	117242	Decal - Made in USA	1

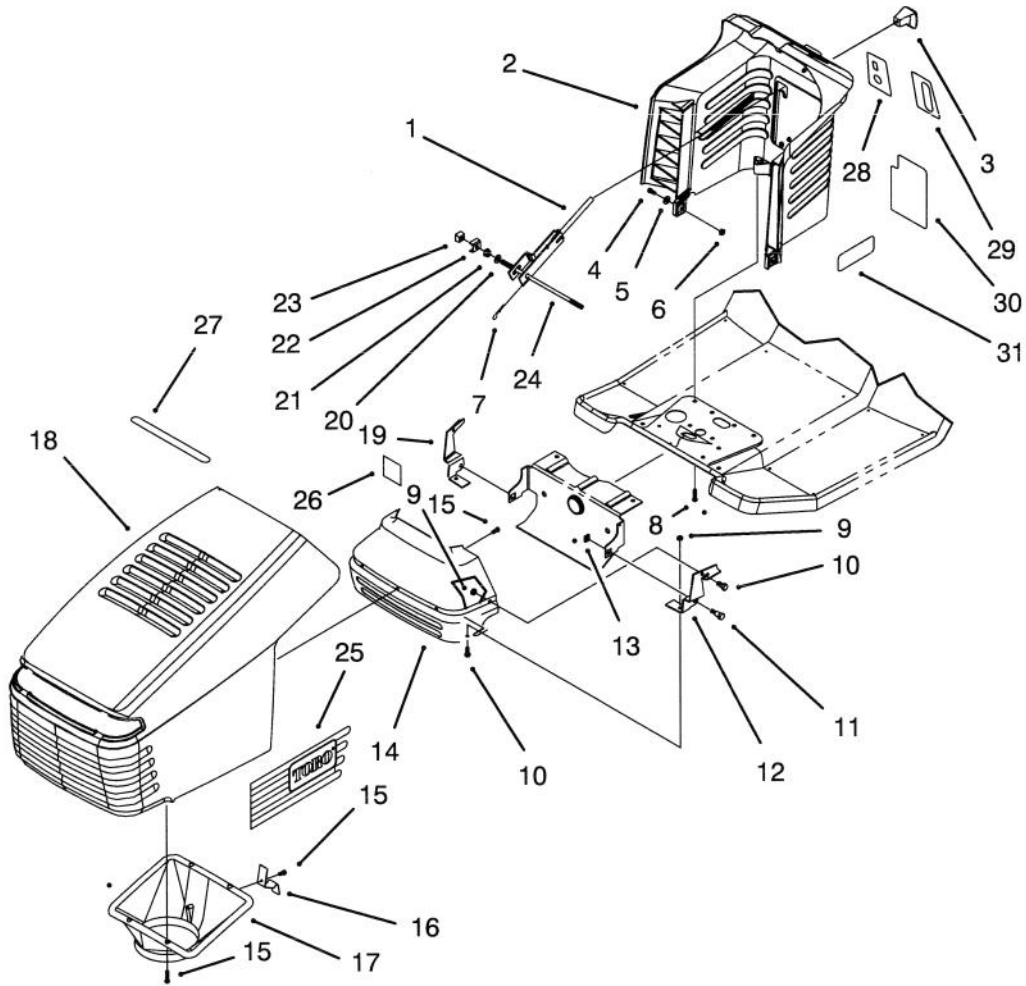


C-1308

### HOOD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88-5190	Lever - Deck Engage	1
2	93-0303	Tower - Steering	1
3	62-1292	Knob - Engage Lever	1
4	322-3	Screw - Hex Hd. Cap	2
5	3256-23	Washer - Flat	2
6	3296-29	Nut - Lock	2
7	3290-307	Pin - Cotter	2
8	46-8091	Screw - Plastite	2
9	3296-42	Nut - Lock	4
10	321-4	Screw - Hex Hd. Cap	4
11	28-0540	Bolt - Shoulder	2
12	88-6050	Bracket - Hood Pivot L.H.	1
13	3290-496	Nut - Retained	2
14	88-3930	Shield - Heat	1
15	46-8090	Screw - Plastite	8
16	88-4220	Latch - Hood	1

Ref. No.	Part No.	Description	No. Used
17	88-4050	Duct - Hood Air	1
18	92-8650	Hood	1
19	88-6040	Bracket - Hood Pivot R.H.	1
20	3256-24	Washer - Flat	2
21	32128-43	Nut - Flange	2
22	88-4160	Clamp - Pivot Rod	2
23	88-4140	Nut - Wedge	2
24	88-4170	Rod - Tower Pivot	1
25	92-2467	Decal - Hood R.H.	1
*	92-2468	Decal - Hood L.H.	1
26	92-5782	Patch - Heat Tape	1
27	92-5748	Decal - Air Duct	1
28	92-2460	Decal - Ignition/Lights	1
29	92-2461	Decal - Throttle	1
30	92-2462	Decal - Deck Engage	1
31	92-2474	Decal - Tower 1238XL	2

\*Not Illustrated

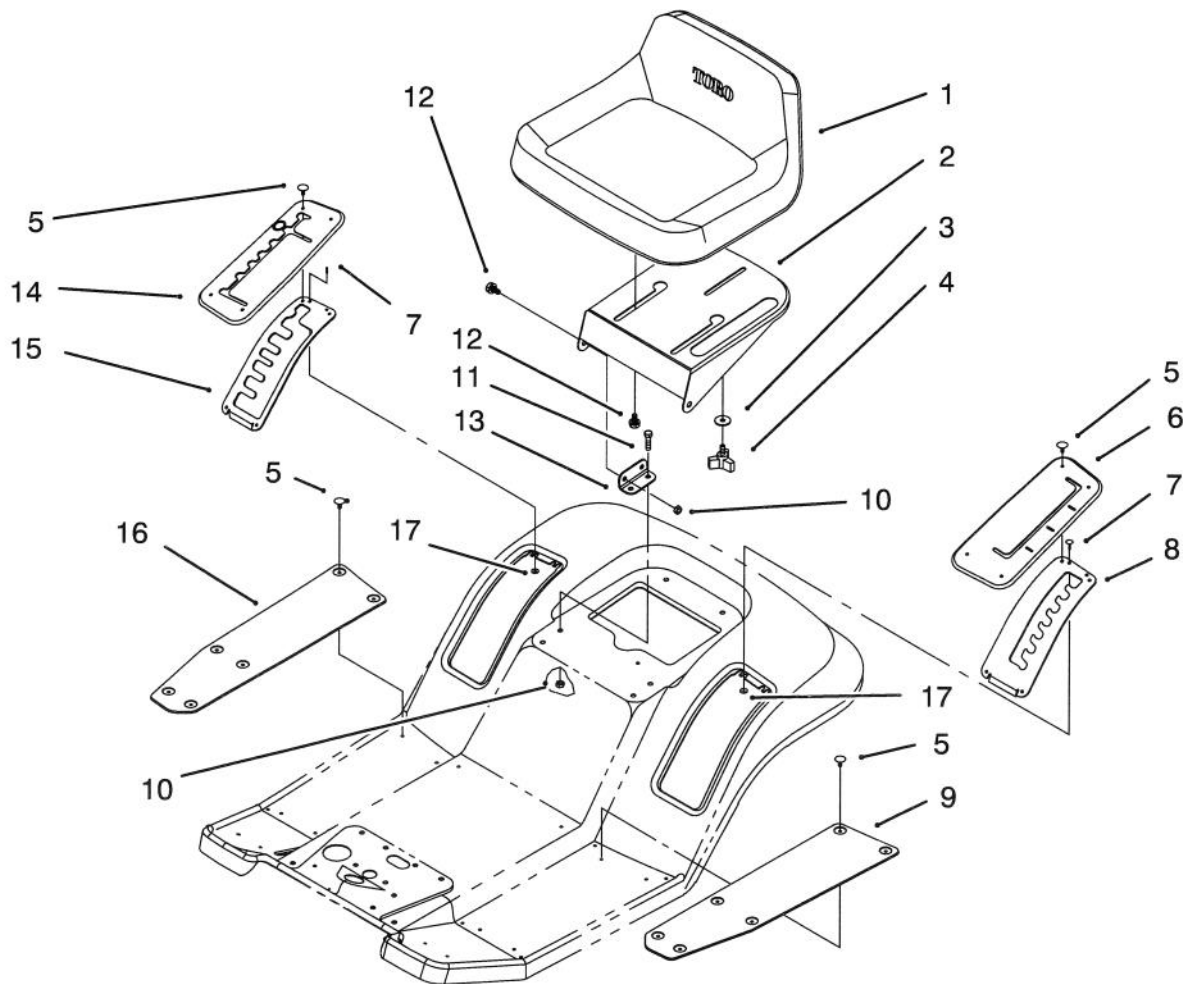


C-1830

## SEAT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88-3950	Seat	1
2	88-4910	Support - Seat	1
3	5-4460	Washer - Fender	1
4	92-9674	Knob - Studded	1
5	3290-479	Fastener - Panel	20
6	88-5170	Cover - H.O.C.	1
7	3290-282	Rivet - Pop	4
8	88-5030	Gate - H.O.C.	1
9	88-5240	Mat - L.H. Foot	1

Ref. No.	Part No.	Description	No. Used
10	3296-29	Nut - Lock	6
11	322-3	Screw - Hex Hd. Cap	4
12	37-8770	Bolt - Shoulder	4
13	88-4820	Bracket - Seat Hinge	2
14	88-5160	Cover - Shift Gate	1
15	88-5020	Gate - Shift	1
16	88-5220	Mat - R.H. Foot	1
17	3269-26	Washer - Backup	4

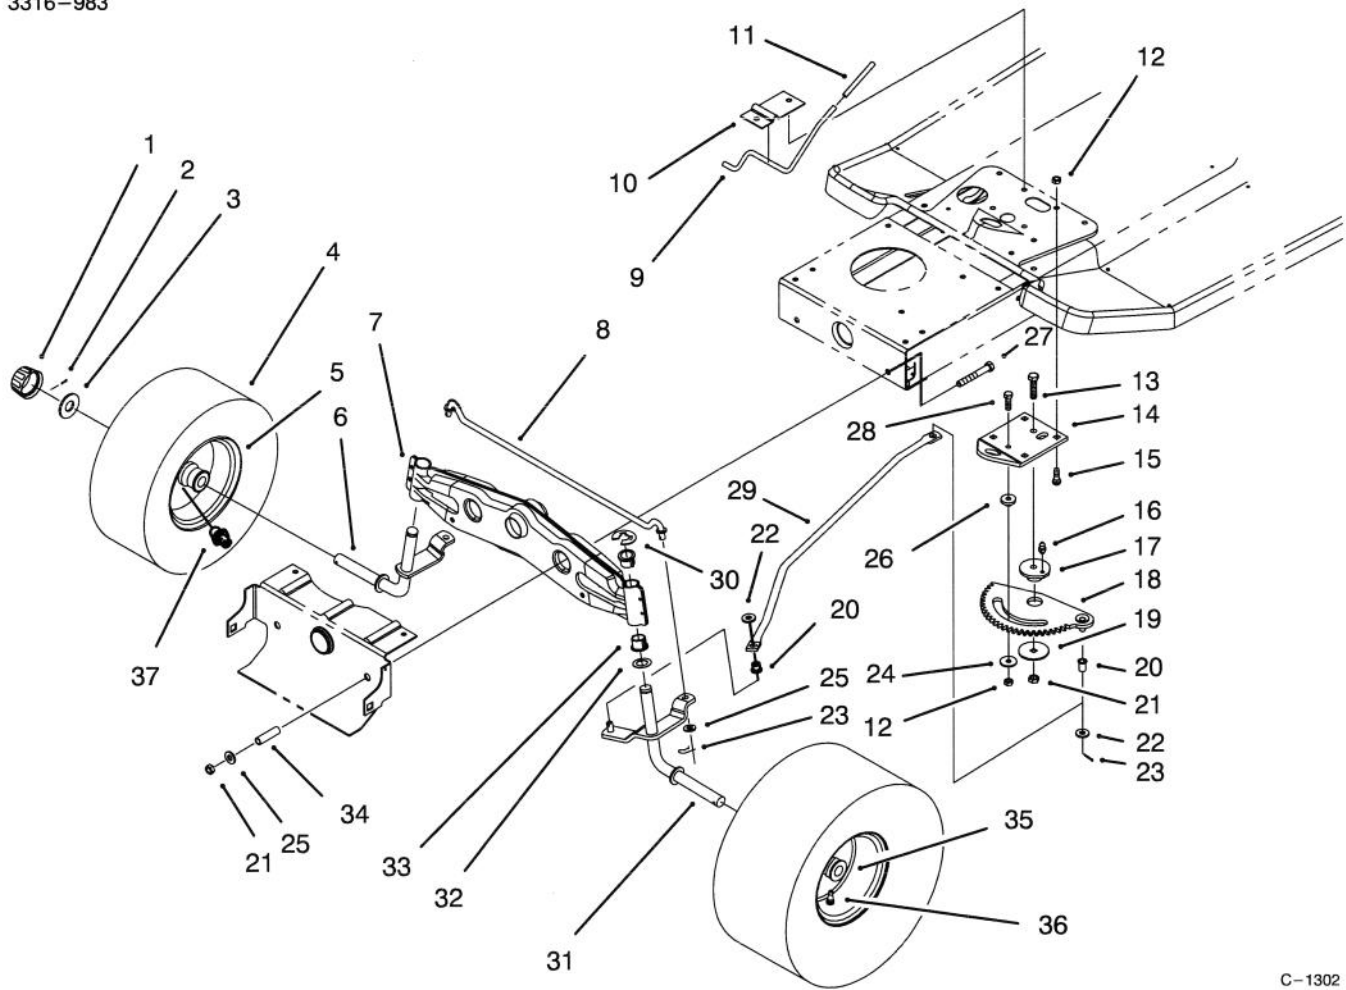


C-1302

## FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	61-9780	Cap - Hub	2
2	3272-12	Pin - Cotter	2
3	28-2480	Washer	2
4	88-4070	Tire - 13"	2
5	88-4370	Rim - Front Wheel	2
6	92-7889	Spindle - R.H.	1
7	88-4460	Axle - Front	1
8	88-5380	Rod - Steering Tie	1
9	88-5510	Rod - Parking Brake	1
10	88-5520	Bracket - Parking Brake	1
11	88-0890	Grip - Brake Rod	1
12	3296-29	Nut - Lock	5
13	3231-4	Screw - Carriage	1
14	88-5130	Bracket - Steering Rack	1
15	3230-1	Bolt - Carriage	4
16	302-26	Fitting - Grease	1
17	88-4670	Bushing - Eccentric	1
18	88-5200	Rack - Steering	1
19	111419	Washer - Fender	1
20	52-2891	Bushing - Steering Link	2
21	3296-39	Nut - Lock	3

Ref. No.	Part No.	Description	No. Used
22	3256-25	Washer - Flat	2
23	3272-10	Pin - Cotter	4
24	5-4460	Washer - Fender	1
25	3256-24	Washer - Flat	4
26	88-5010	Spacer - Steering Rack	1
27	323-13	Screw - Hex Hd. Cap	2
28	3230-3	Screw - Carriage	1
29	88-4830	Link - Drag	1
30	32151-48	E-Ring	2
31	92-7890	Spindle - L.H.	1
32	3-6498	Washer - Thrust	2
33	88-5800	Bushing - Steering Spindle	4
34	88-5470	Spacer - Front Axle	2
35	88-4400	Bearing - Wheel	4
36	232-27	Valve Stem w/Cap	2
37	302-5	Fitting - Grease	2
*	232-39	Inner Tube	2
*	88-4280	Wheel & Tire Assembly (Incl. Ref. #4 & 5)	2

\*Not Illustrated

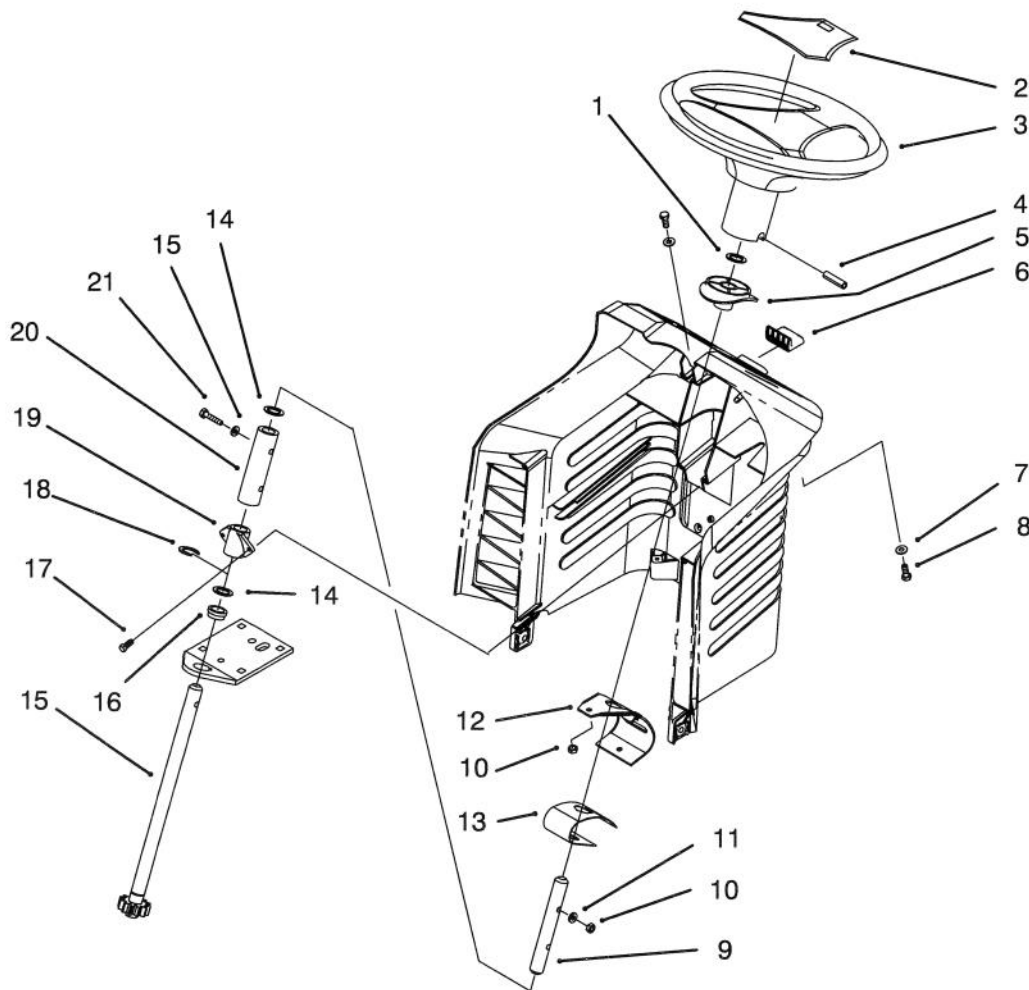


C-1344A

## STEERING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32151-81	Ring - Retaining	1
2	88-3870	Cover - Steering Wheel	1
3	88-3850	Wheel - Steering (Incl. Ref. #2)	1
4	32121-78	Pin - Roll	1
5	88-4190	Bushing - Sliding	1
6	88-4180	Button - Release	1
7	3256-22	Washer - Flat	2
8	321-4	Screw - Hex Hd. Cap	2
9	88-6300	Shaft - Steering Upper	1
10	3296-42	Nut - Lock	4

Ref. No.	Part No.	Description	No. Used
11	3-7501	Washer - Curved	4
12	88-5180	Bracket - Backup	1
13	88-4890	Spring - Leaf	1
14	3-6498	Washer - Thrust	2
15	88-6370	Shaft - Steering Short	1
16	88-5150	Bushing - Flange	1
17	27-0220	Screw - Plastite	2
18	32151-48	E-Ring	1
19	88-4210	Bushing - Stationary	1
20	88-6090	Coupling - Steering	1
21	321-9	Screw - Hex Hd. Cap	2

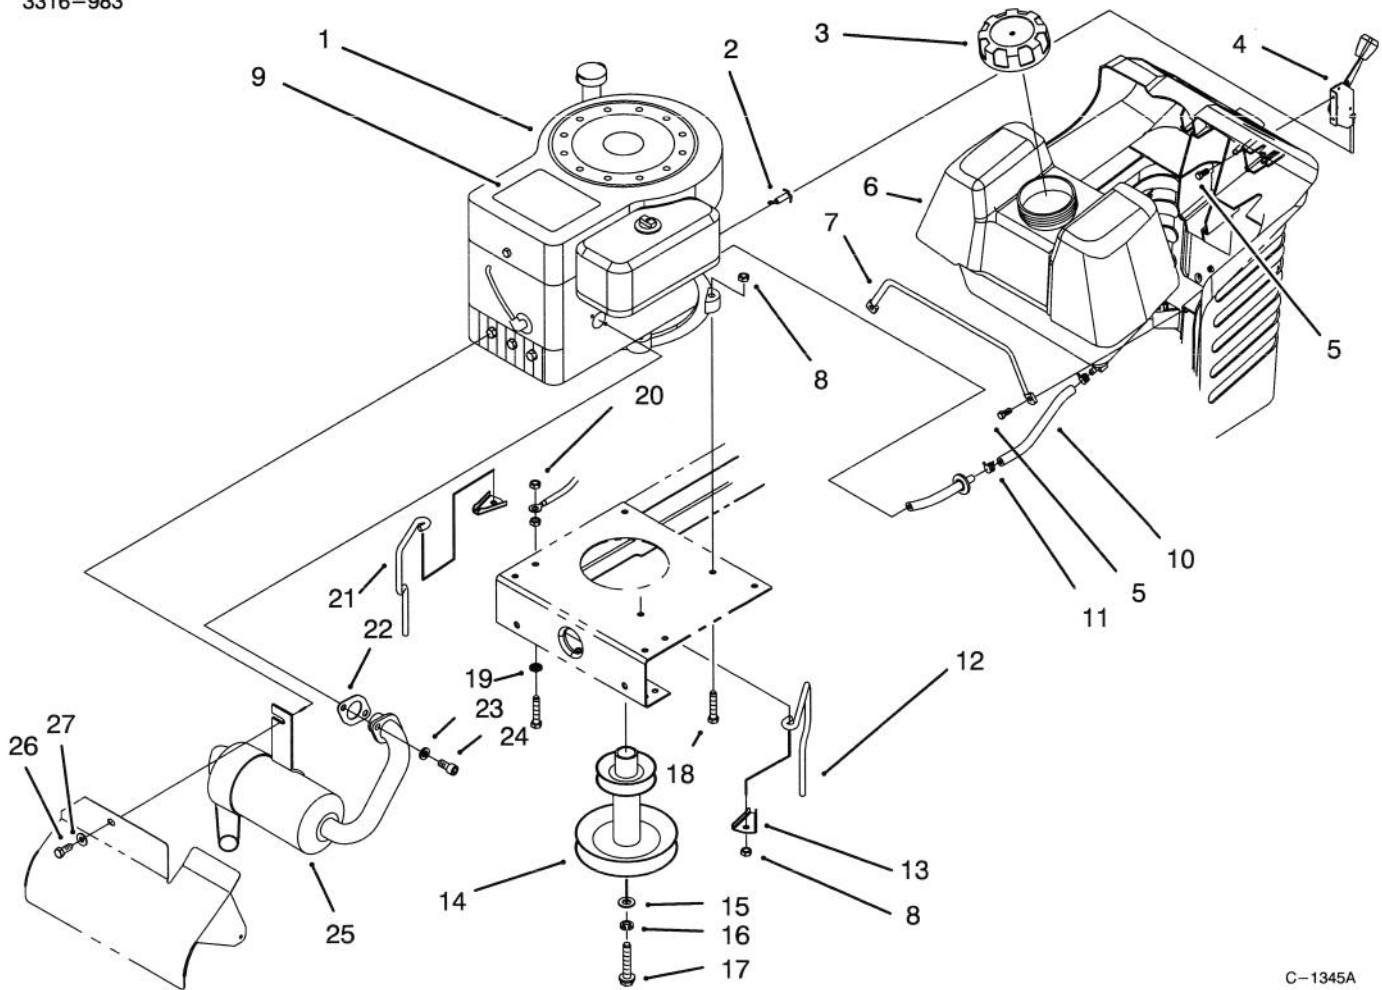


C-1345A

## ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1		Engine - 12.5 H.P.	1
2	88-4350	Cable - Throttle	1
3	88-3980	Cap - Gas	1
4	88-4340	Control - Throttle	1
5	27-0220	Screw - Plastite	4
6	88-3880	Tank - Gas	1
7	88-5920	Rod - Gas Tank	1
8	3296-29	Nut - Lock	3
9	92-2481	Decal - Engine 12.5)	1
10	47-2963	Line - Fuel	1
11	2412-98	Clamp - Hose	2
12	88-5830	Guide - Belt L.H.	1
13	76-3820	Anchor - Belt Guide	2
14	88-4850	Pulley - Engine	1

Ref. No.	Part No.	Description	No. Used
15	3256-25	Washer - Flat	1
16	3253-22	Washer - Lock	1
17	26-0671	Bolt - Blade	1
18	322-9	Screw - Hex Hd. Cap	4
19	3255-8	Washer - Ext. Tooth Lock	1
20	32149-1	Nut - Keps	2
21	88-5840	Guide - Belt R.H.	1
22	88-4410	Gasket - Muffler	1
23	3253-4	Washer - Lock	2
24	3274-12	Screw - Hex Soc. Hd.	2
25	88-6480	Muffler	1
26	321-4	Screw - Hex Hd. Cap	1
27	3253-3	Washer - Lock	1

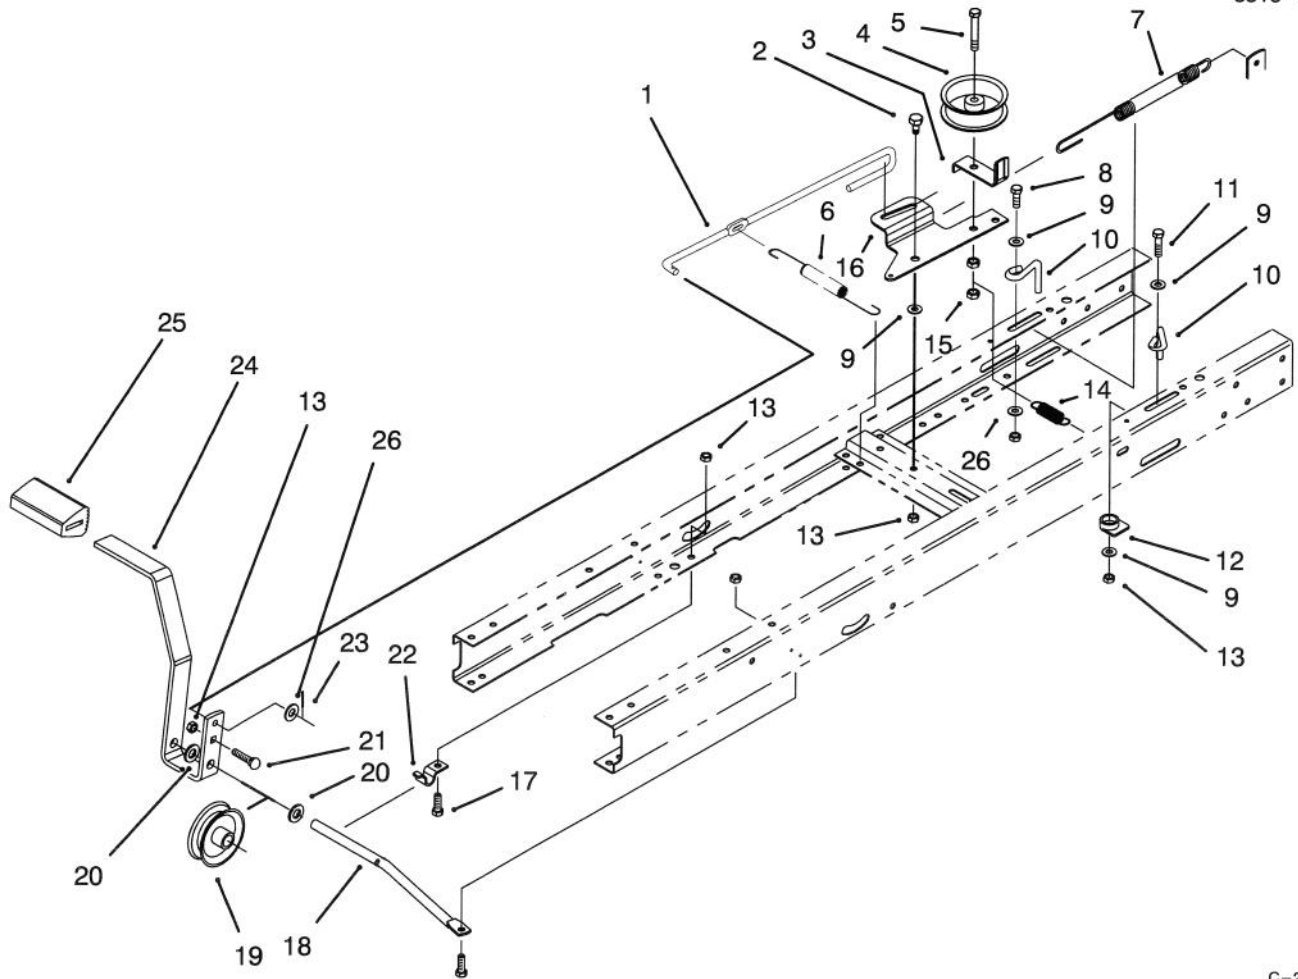


C-2103

## CLUTCH ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88-5270	Rod - Clutch/Brake	1
2	37-8770	Bolt - Shoulder	1
3	88-5560	Guide - Idler Belt	1
4	88-5680	Pulley - Flat Idler	1
5	323-11	Screw - Hex Hd. Cap	1
6	27-8890	Spring - Pedal Return	1
7	88-6140	Spring - Brake	1
8	322-5	Screw - Hex Hd. Cap	1
9	5-4460	Washer - Flat	4
10	88-5460	Guide - Trans. Belt	2
11	322-7	Screw - Hex Hd. Cap	1
12	84-5610	Guide - Cable	2
13	3296-29	Nut - Lock	6

Ref. No.	Part No.	Description	No. Used
14	88-6330	Spring - Extension	1
15	3296-59	Nut - Lock	2
16	88-6070	Arm - Idler	1
17	322-3	Screw - Hex Hd. Cap	2
18	88-5500	Rod - Pedal Pivot	1
19	88-4700	Pulley - Cable	1
20	3256-26	Washer - Flat	2
21	3230-3	Bolt - Carriage	1
22	88-4810	Clamp - Shift Pivot	1
23	3272-10	Pin - Cotter	1
24	88-5000	Pedal - Clutch/Brake	1
25	65-2920	Pad - Pedal	1
26	3256-23	Washer - Flat	2

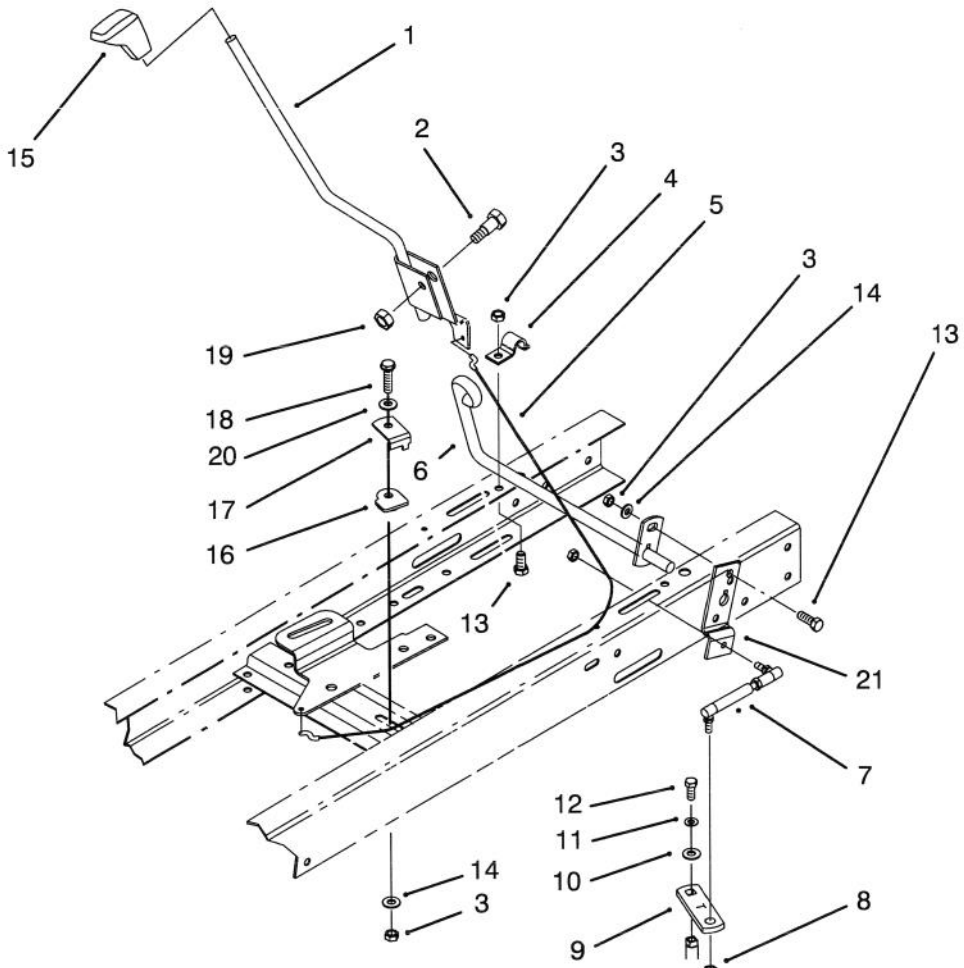


C-1317

### SHIFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88-5300	Lever - Shift	1
2	5-4015	Bolt - Shoulder	1
3	3296-29	Nut - Lock	4
4	88-4810	Clamp - Shift Pivot	2
5	55-9321	Cable - Shotgo	1
6	92-5796	Pivot - Shift	1
7	88-5530	Rod - Shift Tie	1
8	3296-3	Nut - Lock	2
9	88-5340	Lever - Trans. Shift	1
10	7-5461	Washer - Hardened	1
11	3253-3	Washer - Lock	1

Ref. No.	Part No.	Description	No. Used
12	329-23	Screw - Hex Hd. Cap	1
13	322-3	Screw - Hex Hd. Cap	3
14	3256-23	Washer - Flat	2
15	62-1292	Knob - Shift	1
16	84-5610	Guide - Cable	2
17	88-5930	Keeper - Cable	1
18	3230-3	Bolt - Carriage	1
19	3296-39	Nut - Lock	1
20	3256-25	Washer - Flat	1
21	92-5794	Lever - Shift Pivot	1

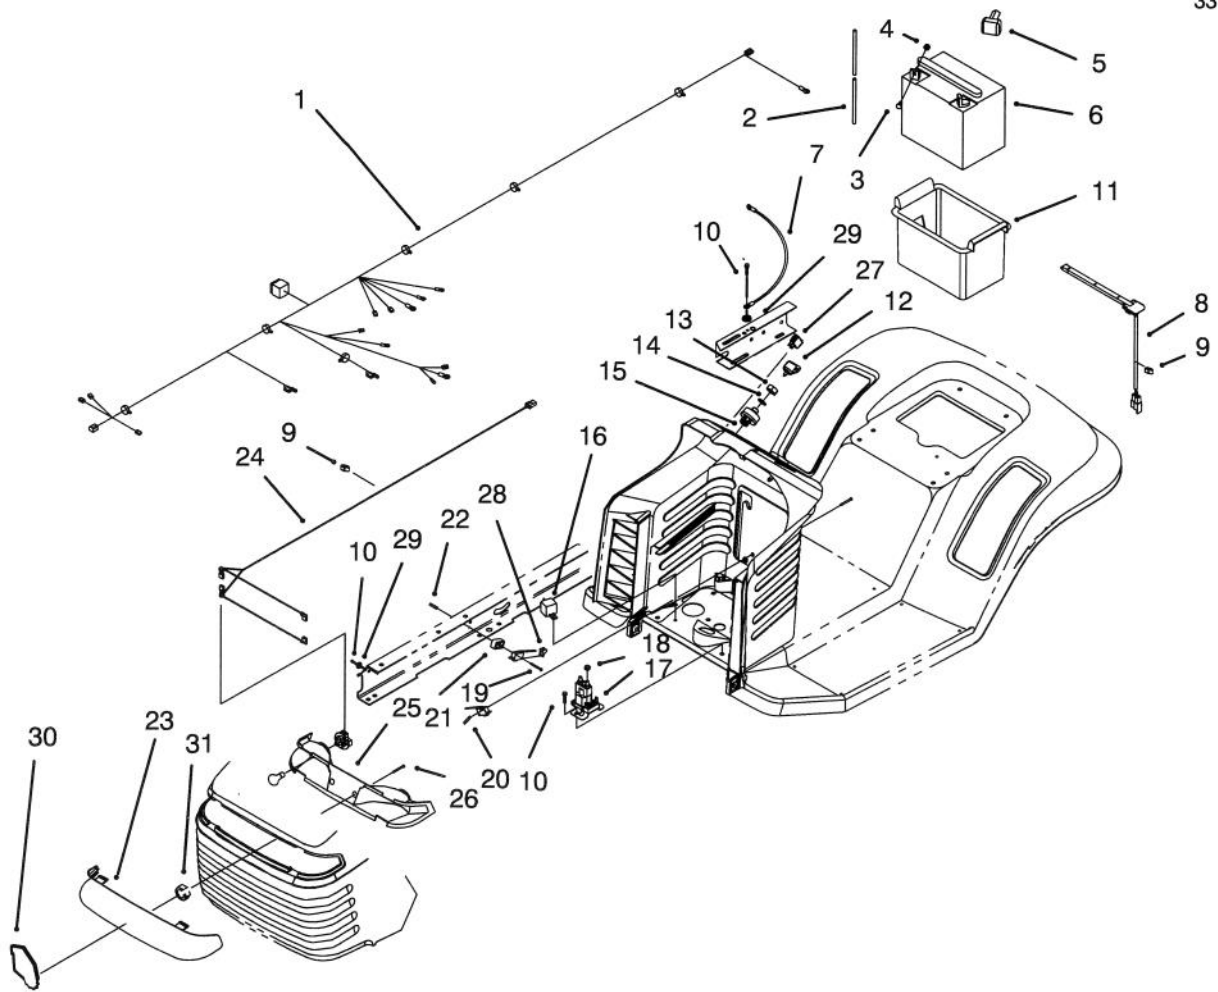


C-1831

## ELECTRICAL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88-4310	Harness - Wire	1
2	56-2540	Vent - Tube	1
3	321-4	Screw - Hex Hd. Cap	2
4	32103-22	Nut - Wing	2
5	28-8080	Boot - Battery Terminal	1
6	80-2600	Battery - 7 Plate	1
7	44-8110	Cable - Battery Negative	1
8	38-1420	Switch - Seat	1
9	702366	Clip - Wire Retainer	3
10	32144-4	Screw - Hex Hd. Thr'd Form.	4
11	88-4040	Box - Battery	1
12	63-8360	Key - Ignition	1
13	218-461	Nut - Hex	1
14	3254-5	Washer - Lock	1
15	88-9830	Switch - Ignition	1

Ref. No.	Part No.	Description	No. Used
16	116397	Relay	1
17	92-9845	Solenoid	1
18	32149-2	Nut - Keps	2
19	910478	Screw - Phillips Hd.	4
20	88-9932	Switch - Micro	2
21	88-4880	Spacer - Microswitch	1
22	3290-354	Speednut	2
23	88-3960	Lens - Headlights	1
24	88-4320	Harness - Wire	1
25	88-3970	Reflector & Lamp	1
26	32144-32	Screw - Plastite	2
27	92-8875	Switch - Rocker	1
28	93-3240	Seal - Plunger	2
29	3255-7	Washer - Ext. Tooth Lock	2
30	80-2240	Plate - Grille Panel	1
31	3290-299	Nut - Tinnerman	1

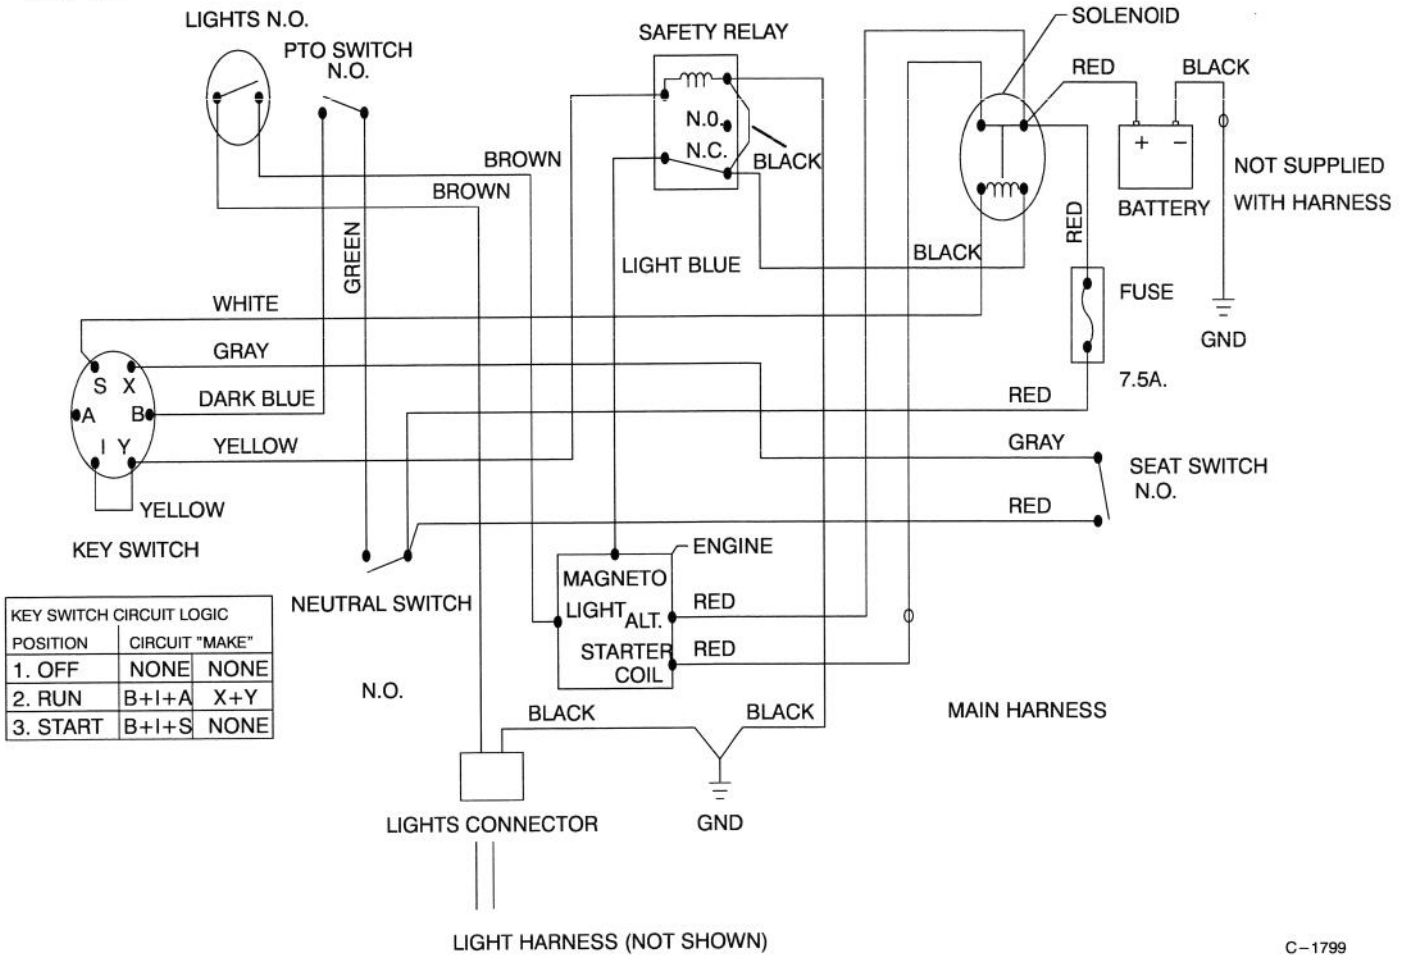


C-1799

## ELECTRICAL SCHEMATIC

Ref. No.	Part No.	Description	No. Used

Ref. No.	Part No.	Description	No. Used

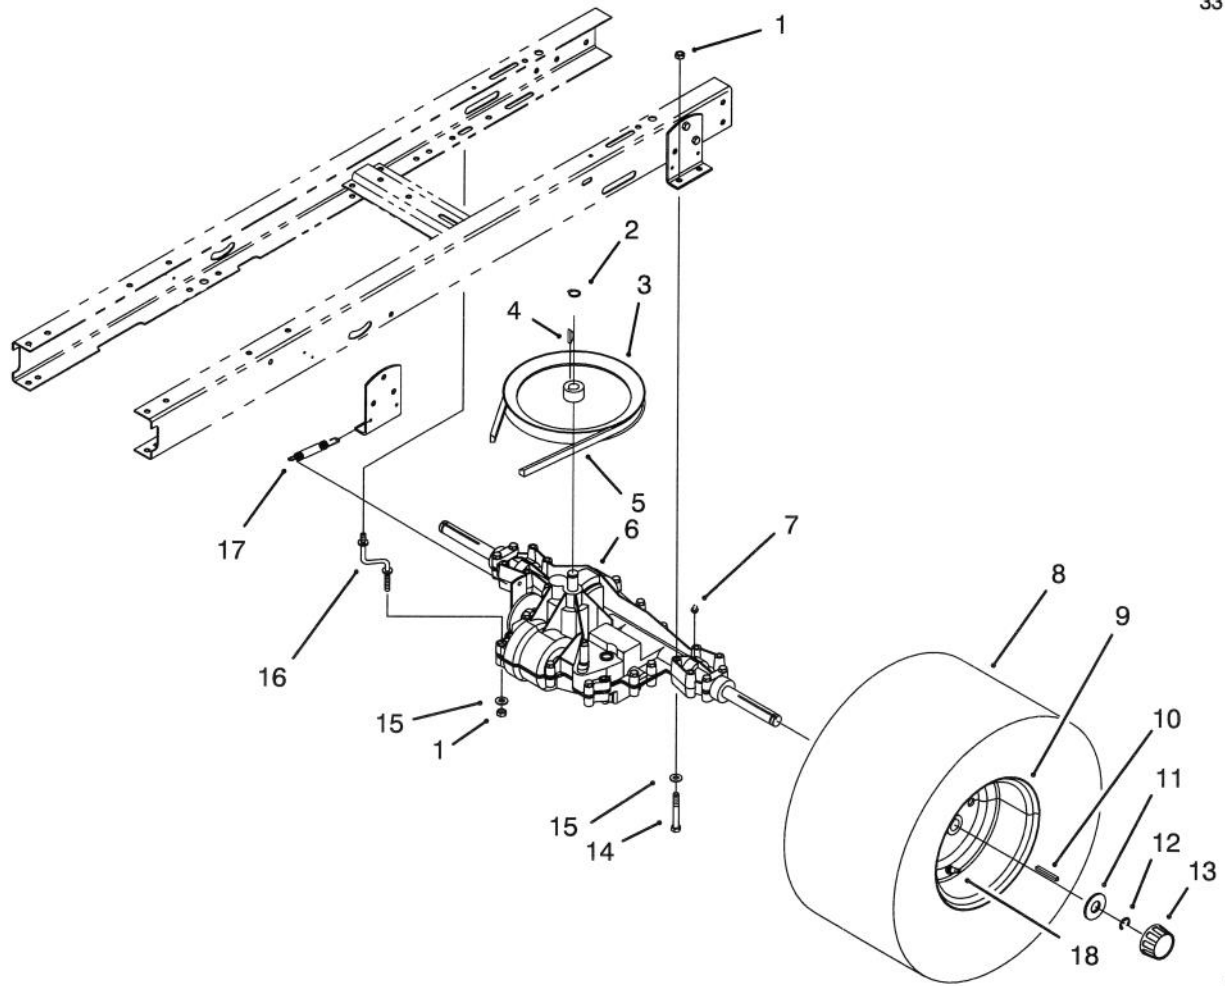


C-1305

## TRANSAXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-29	Nut - Lock	8
2	32120-64	Ring - Snap	1
3	88-4840	Pulley - Transmission	1
4	3257-23	Key - Woodruff	1
5	88-6240	V-Belt - Traction	1
6	88-6450	Transaxle	1
7	302-11	Fitting - Grease	2
8	88-4090	Tire	2
9	88-4390	Rim	2
10	7-0036	Key - Square	2
11	28-2480	Washer	2

Ref. No.	Part No.	Description	No. Used
12	32151-48	E-Ring	2
13	61-9780	Cap - Hub	2
14	322-12	Screw - Hex Hd. Cap	4
15	3256-23	Washer - Flat	8
16	88-5350	Strap - Torque	2
17	26-6700	Spring - Brake Return	1
18	232-27	Valve Stem w/Cap	2
*	232-41	Inner Tube (Optional)	2
*	88-4300	Wheel & Tire Assembly (Incl. Ref. #8 & 9)	2


\*Not Illustrated

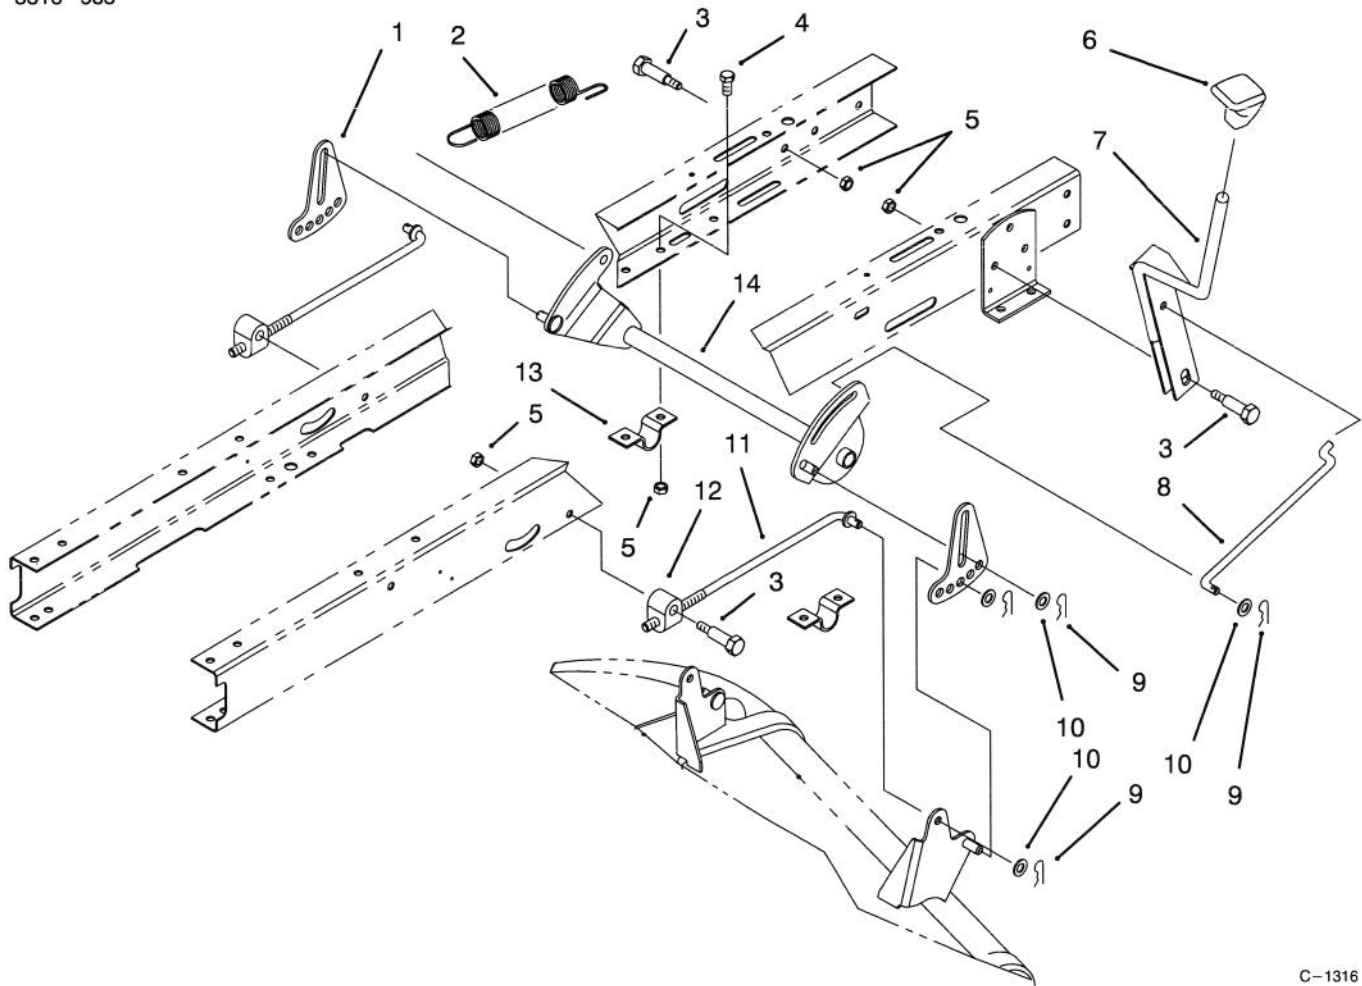

C-1316

## HEIGHT OF CUT ASSEMBLY


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	88-5570	Link - Adjusting H.O.C.	2	8	88-5900	Link - H.O.C.	1
2	88-6460	Spring - Extension	1	9	3290-307	Pin - Hair Cotter	7
3	7-0030	Bolt - Shoulder	4	10	3256-24	Washer - Flat	7
4	322-3	Screw - Hex Hd. Cap	4	11	88-5450	Rod - Hanger Rear	2
5	3296-29	Nut - Lock	8	12	88-4230	Trunnion - H.O.C. Rear	2
6	62-1292	Knob - Shift	1	13	88-4730	Clamp - H.O.C. Pivot	2
7	88-5310	Lever - H.O.C.	1	14	88-5110	Pivot - H.O.C.	1

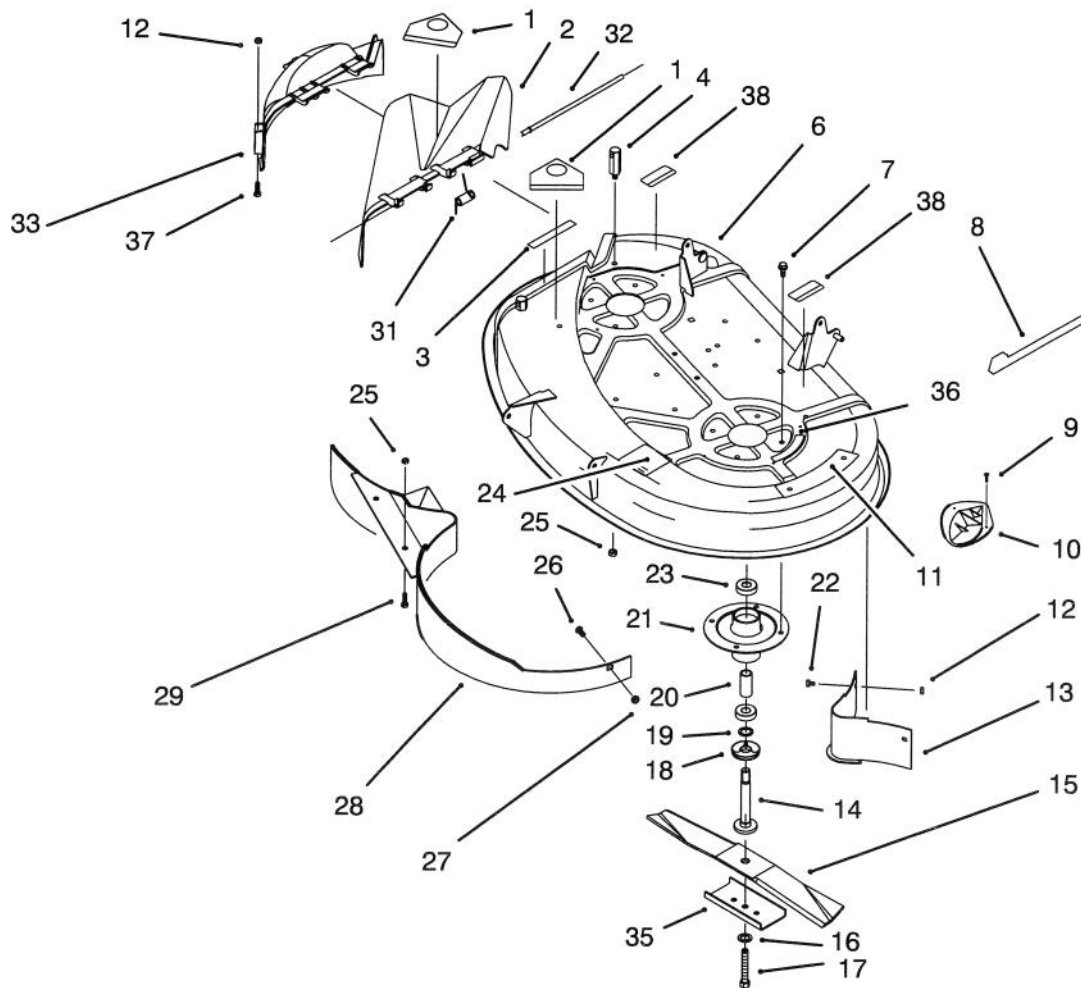

C-1320A

## HOUSING & SPINDLE ASSEMBLY (38" CUTTING UNIT)


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-1122	Decal - Danger	2	19	80-4380	Spacer - Hardened	2
2	93-0317	Deflector Ass'y (Incl. Ref. #1)	1	20	62-3661	Spacer - Bearing	2
3	68-3650	Decal - Deflector Danger	1	21	88-4510	Housing - Spindle	2
4	57-4360	Post - Rear Pivot	1	22	321-4	Screw - Hex Hd. Cap	2
6	88-5780-01	Deck - 38"	1	23	38-7820	Bearing - Spindle	4
7	32144-41	Screw - Taptite	8	24	117137	Decal - Belt Guide	1
8	92-9520	Decal - Recycler	1	25	3296-39	Nut - Lock	3
9	32144-111	Screw - Plastic	8	26	3230-1	Bolt - Carriage	1
10	76-2160	Plate - Kicker	4	27	3296-29	Nut - Lock	1
11	79-3140	Decal - Danger	1	28	79-1600	Baffle - Recycler	1
12	3296-42	Nut - Lock	4	29	323-5	Screw - Hex Hd. Cap	2
13	79-1640	Baffle - Rear	1	31	57-6950	Spring - Torsion	1
14	80-4341	Shaft - Spindle	2	32	57-4380	Rod - Deflector Hinge	1
15	79-3061	Blade - Recycler	2	33	88-4430	Cover - Recycler	1
16	3290-465	Washer - Belleville	2	35	80-0510	Stiffener - Blade	2
17	26-0671	Bolt - Blade	2	36	68-3660	Decal - Shield Danger	1
18	80-4360	Shield - Bearing	2	37	321-14	Screw - Hex Hd. Cap	2
				38	55-4300	Decal - Caution Spring	2

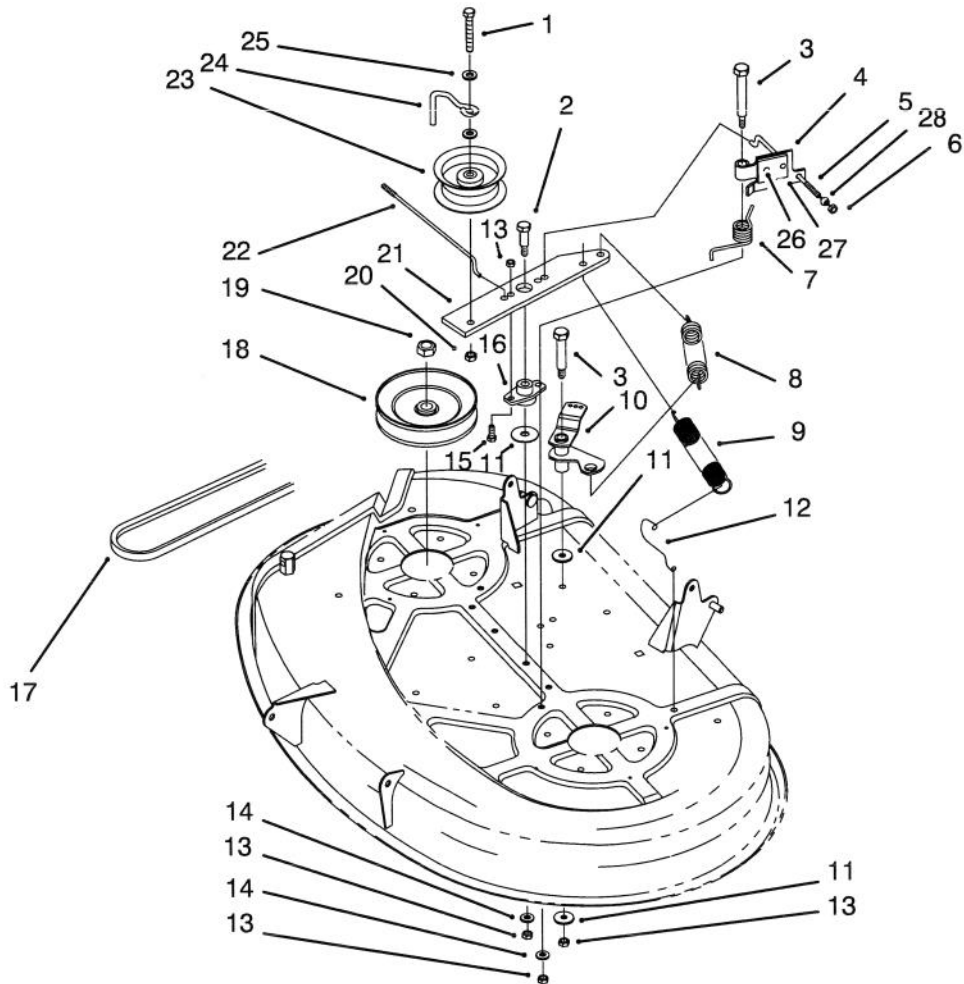

C-1347

## BRAKE ASSEMBLY (38" CUTTING UNIT)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	323-12	Screw - Hex Hd. Cap	1	15	322-5	Screw - Hex Hd. Cap	2
2	7-0030	Bolt - Shoulder	1	16	88-4980	Bushing - Idler Arm	1
3	88-4590	Bolt - Shoulder	3	17	88-6250	V-Belt - Deck	1
4	88-6100	Brake - Deck (Incl. Ref. #26 & 27)	2	18	88-5330	Puiley - Deck	2
5	88-5550	Rod - Deck Brake L.H.	1	19	3219-6	Nut - Lock	2
6	3296-42	Nut - Lock	2	20	3296-39	Nut - Lock	1
7	88-5910	Spring - Torsion	2	21	88-4870	Arm - Idler	1
8	88-6130	Spring - Deck Engage	1	22	88-5540	Rod - Deck Brake R.H.	1
9	92-8934	Spring - Extension	1	23	88-5630	Pulley - Idler	1
10	88-5390	Bellcrank	1	24	88-5070	Guide - Idler Belt	1
11	3256-68	Washer - Fender	3	25	3256-24	Washer - Flat	2
12	88-5970	Hook - Spring Return	1	26	3290-282	Rivet - Pop	4
13	3296-29	Nut - Lock	6	27	56-9830	Pad - Brake	2
14	3256-23	Washer - Flat	3	28	67-0710	Ball - Swivel	2

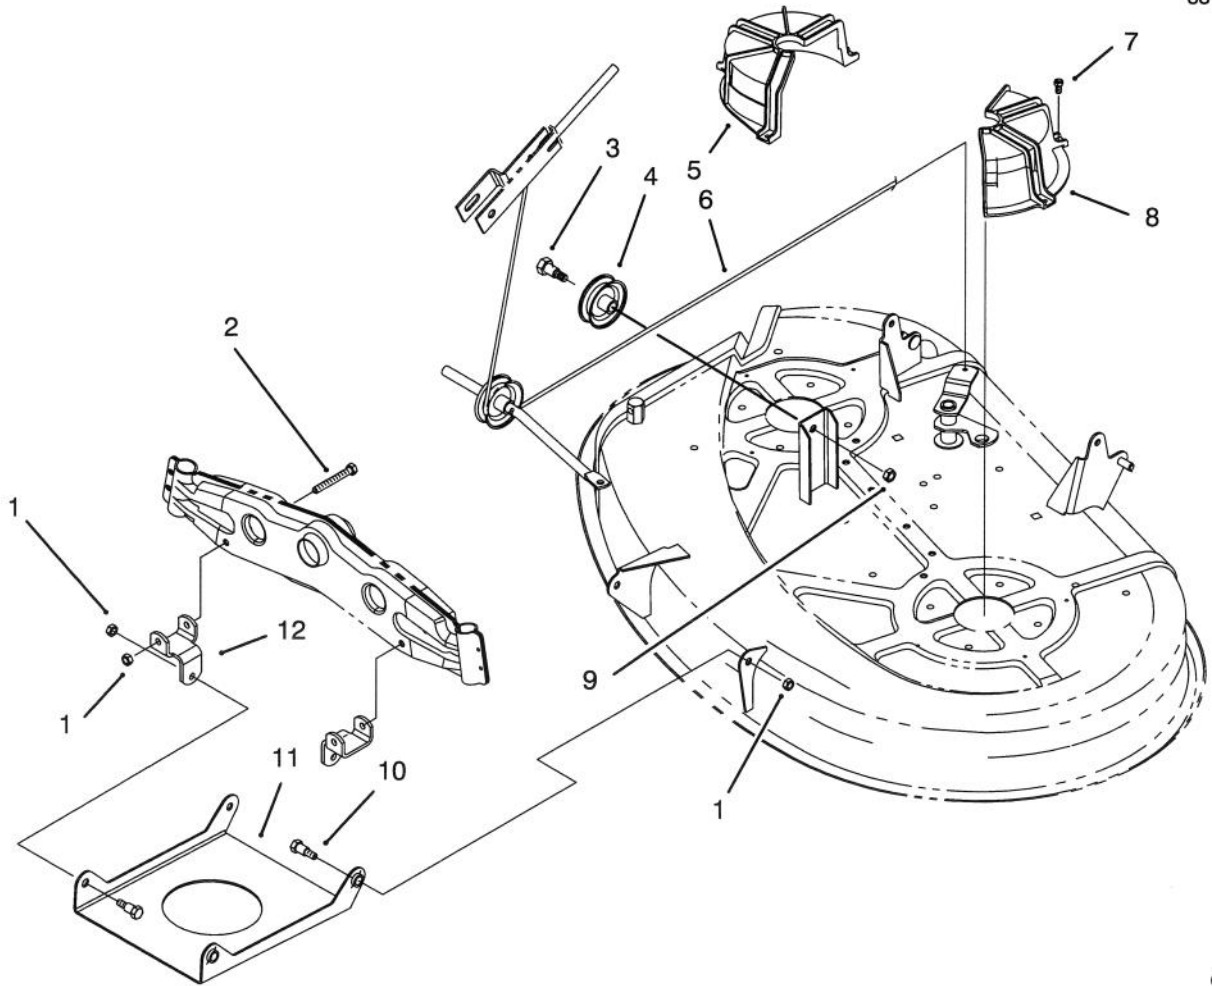


C-1348

### CABLE & COVER ASSEMBLY (38" CUTTING UNIT)

Ref. No.	Part No.	Description	No. Used
1	3296-29	Nut - Lock	6
2	322-12	Screw - Hex Hd. Cap	2
3	23-0310	Bolt - Shoulder	1
4	88-4700	Pulley - Cable	1
5	88-4020	Guide - Deck Belt R.H.	1
6	88-6410	Cable - Deck Engage	1
7	32104-76	Screw - Thread Cutting	5

Ref. No.	Part No.	Description	No. Used
8	88-4030	Guide - Deck Belt L.H.	1
9	3296-39	Nut - Lock	1
10	28-0540	Bolt - Shoulder	4
11	88-4900	Pan - Front Deck Suspension	1
12	88-4640	Bracket - Deck Suspension	2

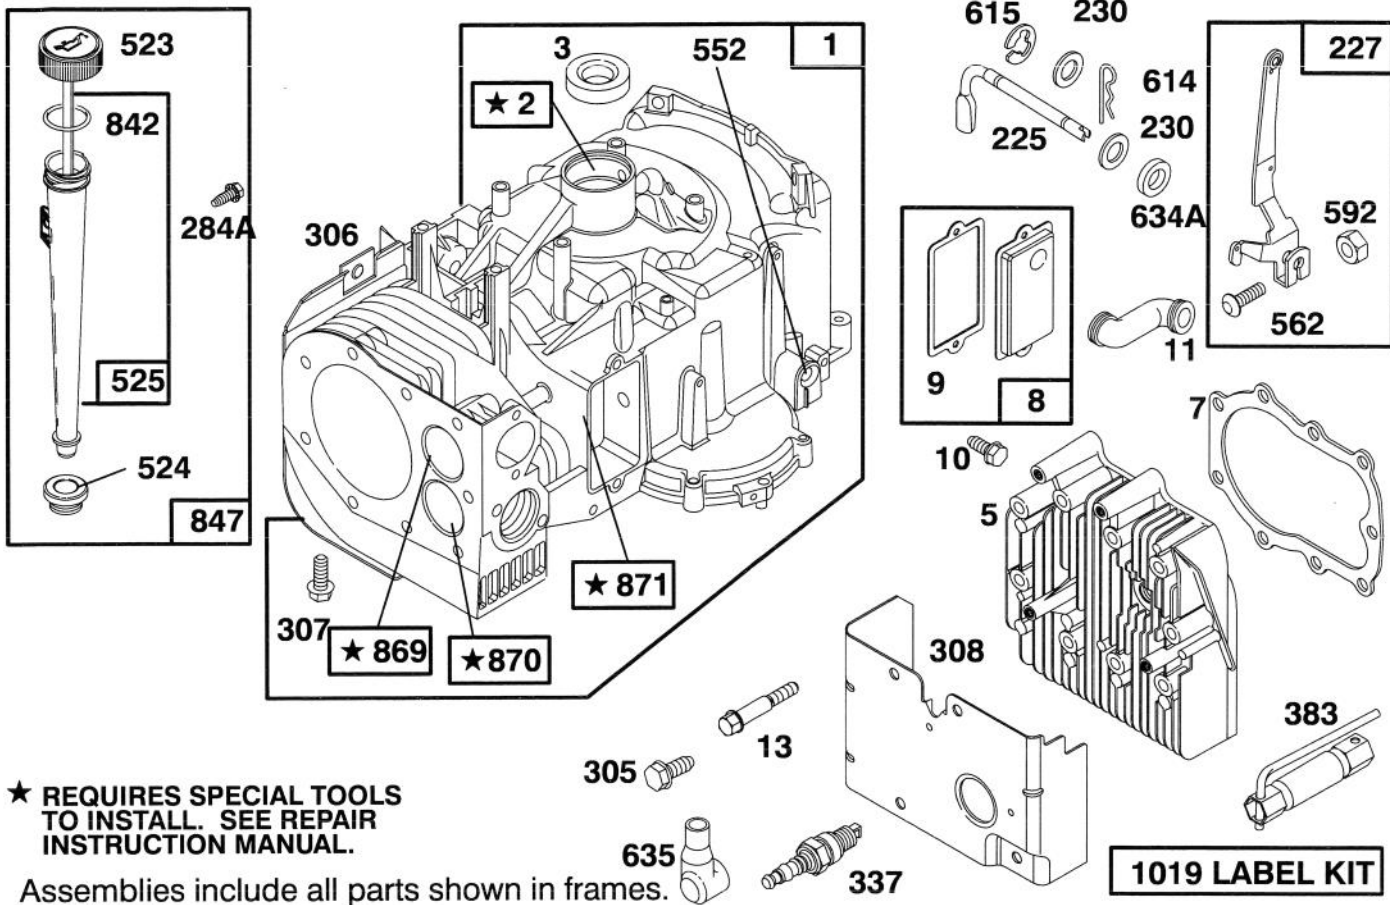

★ REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.


Assemblies include all parts shown in frames.

## ENGINE BRIGGS & STRATTON MODEL 286707-0453-01

Ref. No.	Part No.	Description	No. Used
★12	271916	Gasket-Crkcse. (1/64" Thick)	1
★	271997	Gasket-Crkcse. (.005" Thick)	1
★	271996	Gasket-Crkcse. (.009" Thick)	1
15	94239	Plug-Oil Drain	1
16	495162	Crankshaft	1
	94196	Key-Timing Gear	1
18	494238	Base-Engine	1
★20	291675	Seal-Oil	1
22	94624	Screw-Base Mtg. Sem	1
24	222698	Key-Flywheel	1
25	394661	Piston Assy. (Std.)	1
	394662	Piston Assy. (.010" O.S.)	1
	394663	Piston Assy. (.020" O.S.)	1
	394664	Piston Assy. (.030" O.S.)	1
26	391780	Ring Set-Piston (Std.)	1
	391781	Ring Set-Piston (.010" O.S.)	1
	391782	Ring Set-Piston (.020" O.S.)	1
	391783	Ring Set-Piston (.030" O.S.)	1

Ref. No.	Part No.	Description	No. Used
27	260924	Lock-Piston Pin	1
28	299691	Pin Assy.-Piston (Std.)	1
	391286	Pin Assy.-Piston (.005" O.S.)	1
29	490348	Rod Assembly-Connecting	1
	490469	Rod-Connecting (020" U.S. Crankpin Bore)	1
32	94671	Screw-Connecting Rod	1
33	262246	Valve-Exhaust	1
34	262247	Valve-Intake	1
35	65906	Spring-Intake Valve	1
36	26828	Spring-Exhaust Valve	1
40	221596	Retainer-Intake Valve	1
41	292260	Rotocoil-Exhaust Valve	1
42	93630	Retainer-Ex. Valve Rotocoil	1
45	262248	Tappet-Valve	1
46	212897	Gear-Cam	1
219	490815	Oil Slinger, Gov. Gear Assy.	1
741	262932	Gear-Timing	1
757	212359	Link-Counterweight	1
758	399891	Counterweight Assy.	1
759	298909	Pin-Counterweight	1
761	93875	Screw-Counterweight	1

★ Included in Gasket Set-Part No. 494241.

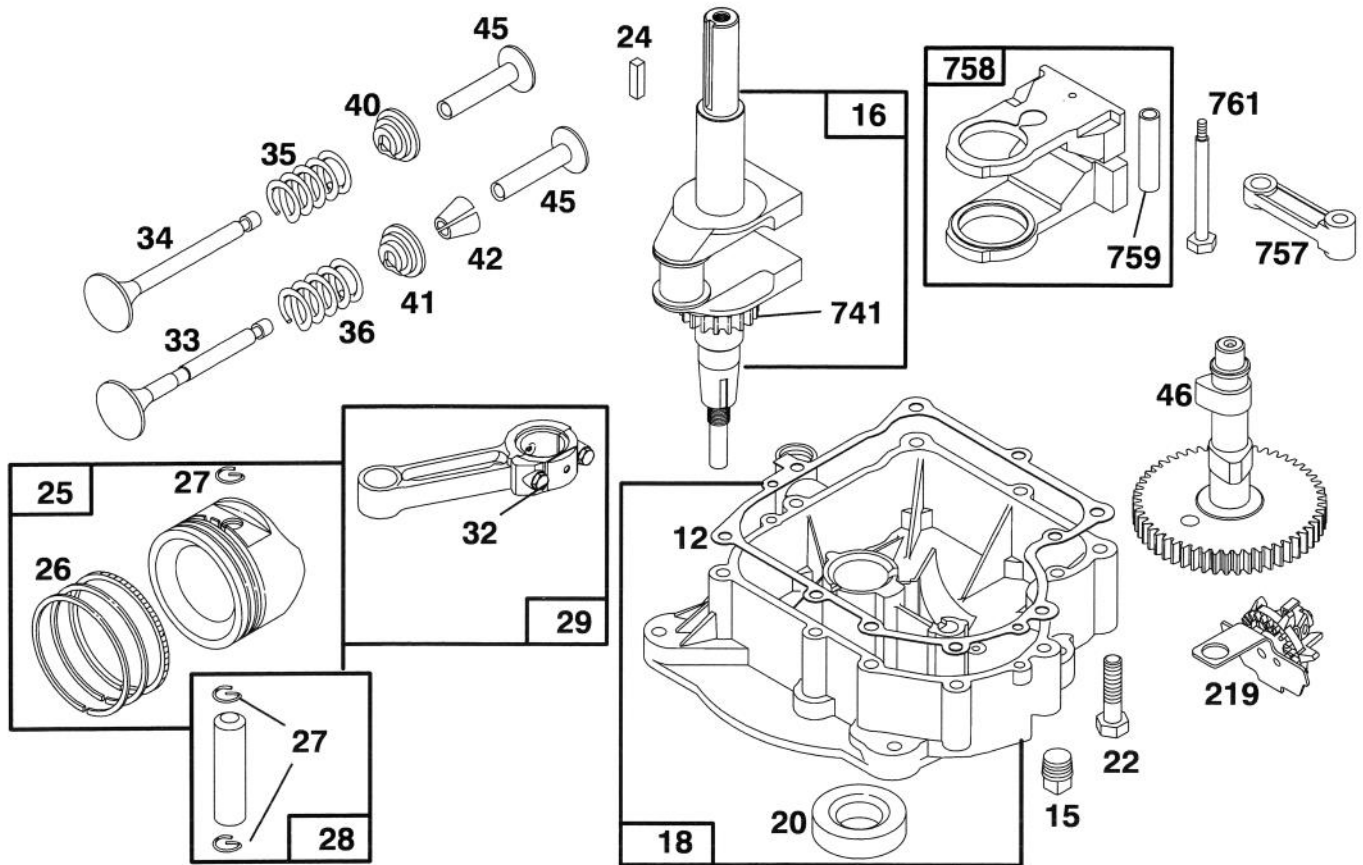


Assemblies include all parts shown in frames.

## ENGINE BRIGGS & STRATTON MODEL 286707-0453-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
★12	271916	Gasket-Crkcse. (1/64" Thick)	1	27	260924	Lock-Piston Pin	1
★	271997	Gasket-Crkcse. (.005" Thick)	1	28	299691	Pin Assy.-Piston (Std.)	1
★	271996	Gasket-Crkcse. (.009" Thick)	1	391286	Pin Assy.-Piston (.005" O.S.)	1	
15	94239	Plug-Oil Drain	1	29	490348	Rod Assembly-Connecting	1
16	495162	Crankshaft	1	490469	Rod-Connecting (020" U.S. Crankpin Bore)	1	
	94196	Key-Timing Gear	1	32	94671	Screw-Connecting Rod	1
18	494238	Base-Engine	1	33	262246	Valve-Exhaust	1
★20	291675	Seal-Oil	1	34	262247	Valve-Intake	1
22	94624	Screw-Base Mtg. Sem	1	35	65906	Spring-Intake Valve	1
24	222698	Key-Flywheel	1	36	26828	Spring-Exhaust Valve	1
25	394661	Piston Assy. (Std.)	1	40	221596	Retainer-Intake Valve	1
	394662	Piston Assy. (.010" O.S.)	1	41	292260	Rotocoil-Exhaust Valve	1
	394663	Piston Assy. (.020" O.S.)	1	42	93630	Retainer-Ex. Valve Rotocoil	1
	394664	Piston Assy. (.030" O.S.)	1	45	262248	Tappet-Valve	1
26	391780	Ring Set-Piston (Std.)	1	46	212897	Gear-Cam	1
	391781	Ring Set-Piston (.010" O.S.)	1	219	490815	Oil Slinger, Gov. Gear Assy.	1
	391782	Ring Set-Piston (.020" O.S.)	1	741	262932	Gear-Timing	1
	391783	Ring Set-Piston (.030" O.S.)	1	757	212359	Link-Counterweight	1
				758	399891	Counterweight Assy.	1
				759	298909	Pin-Counterweight	1
				761	93875	Screw-Counterweight	1

★ Included in Gasket Set-Part No. 494241.

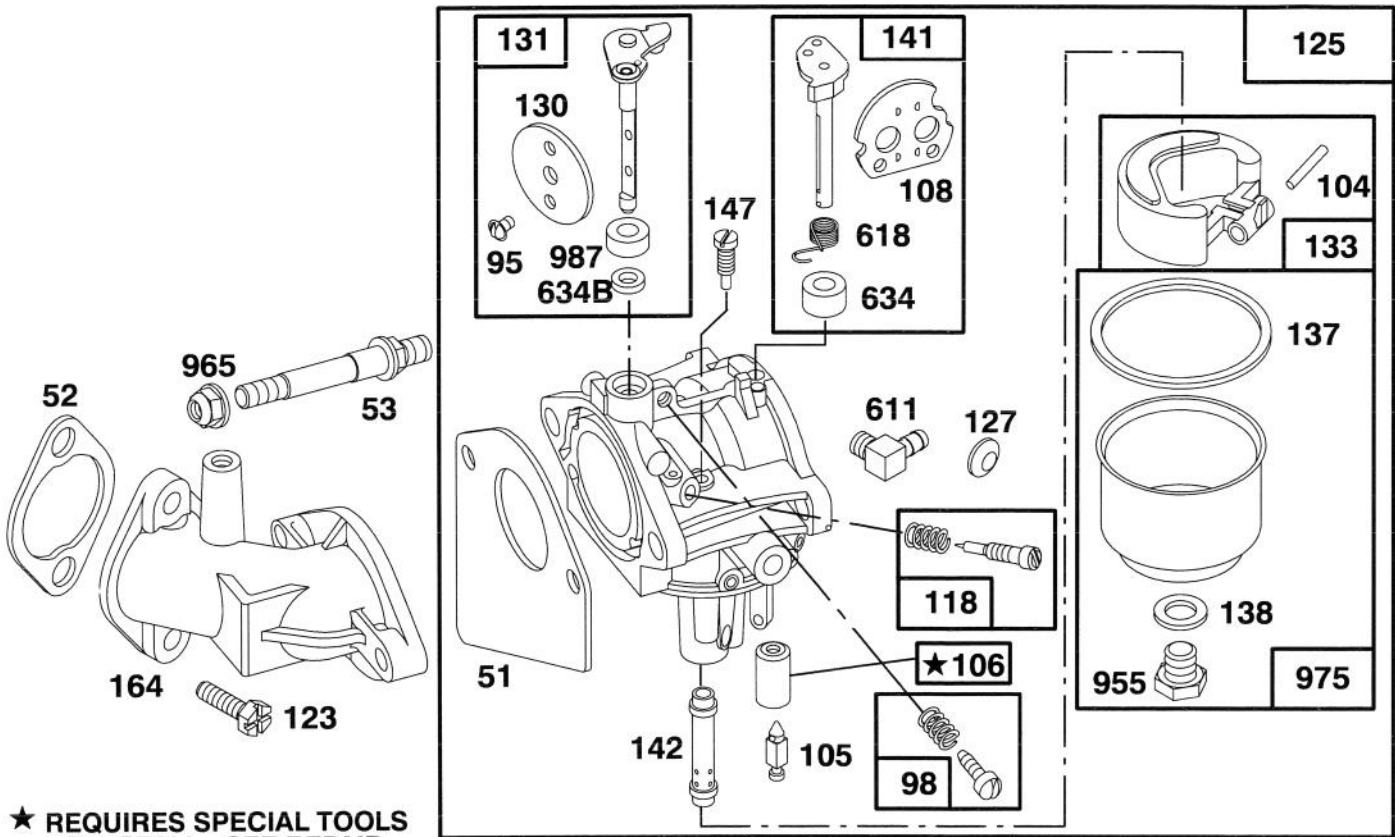

Assemblies include all parts shown in frames.

★ REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.

## ENGINE BRIGGS & STRATTON MODEL 286707-0453-01


Ref. No.	Part No.	Description	No. Used
●51	272465	Gasket-Carburetor (Carb. to Elbow)	1
★52	272554	Gasket-Carburetor (Elbow to Cylinder)	1
53	94637	Stud-Carb. Mtg.	1
●95	94098	Screw-Throttle	1
98	495800	Screw-Idle Speed	1
●104	231789	Pin-Float Hinge	1
●105	231855	Valve Assy.-Inlet Needle	1
●106	231854	Inlet Valve Seat	1
108	224540	Valve-Choke	1
118	494383	Valve-Needle	1
121	495799	Carburetor Overhaul Kit	1
123	94616	Screw-Elbow Mtg.	1
125	495706	Carburetor Assembly	1
●127		Plug-Welch (Sold in Kit Only).	1
130	224539	Valve-Throttle	1

Ref. No.	Part No.	Description	No. Used
131	494379	Shaft and Lever-Throttle	1
133	494381	Float-Carburetor	1
●◆137	281165	Gasket-Float Bowl	1
●◆138	281164	Washer-Float Bowl Screw	1
141	495931	Shaft and Lever-Choke	1
●142	494537	Nozzle-Carburetor	1
●147	231794	Pilot-Jet	1
164	213819	Carburetor-Elbow	1
611	494451	Fuel Inlet Tube	1
618	262803	Spring-Choke Return	1
●634	281168	Seal-Choke Shaft	1
●634B	398970	Washer-Throttle Shaft	1
955	94642	Screw-Fuel Bowl	1
965	94010	Locknut-Air Cleaner Mtg.	1
975	494378	Bowl Assy.-Carburetor	1
977	494385	Carburetor Gasket Kit	1
●987	281166	Seal-Throttle Shaft	1

◆ Included in Carburetor Gasket Set-Part No.494385.

★ Included in Gasket Set-Part No. 494241.

● Included in Carburetor Overhaul Kit-Part No. 495799.

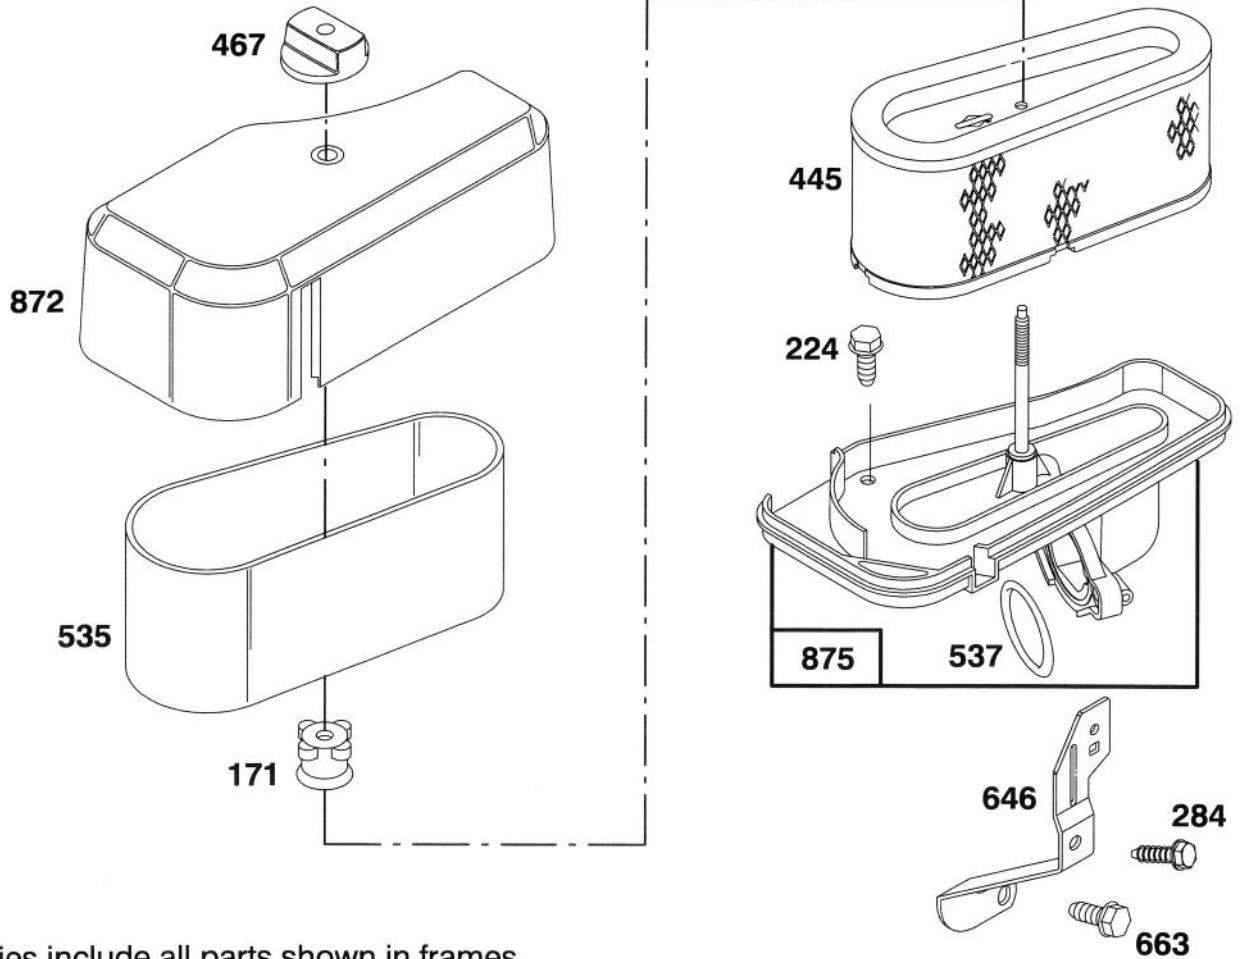


Assemblies include all parts shown in frames.

## ENGINE BRIGGS & STRATTON MODEL 286707-0453-01

Ref. No.	Part No.	Description	No. Used
171	281051	Nut-Air Cleaner Mtg.	1
224	94513	Screw-Air Cleaner Sem	1
284	94704	Screw Hex. Head	1
445	493909	Cartridge-Air Cleaner	1
467	493903	Knob-Air Cleaner	1
535	272403	Element-Air Cleaner	1

Ref. No.	Part No.	Description	No. Used
★537	281106	O-Ring-Air Cleaner	1
646	224546	Brace-Air Cleaner	1
663	94620	Screw-Hex. Hd.	1
872	281104	Cover-Air Cleaner	1
875	494237	Body-Air Cleaner	1

★ Included in Gasket Set-Part No. 494241.

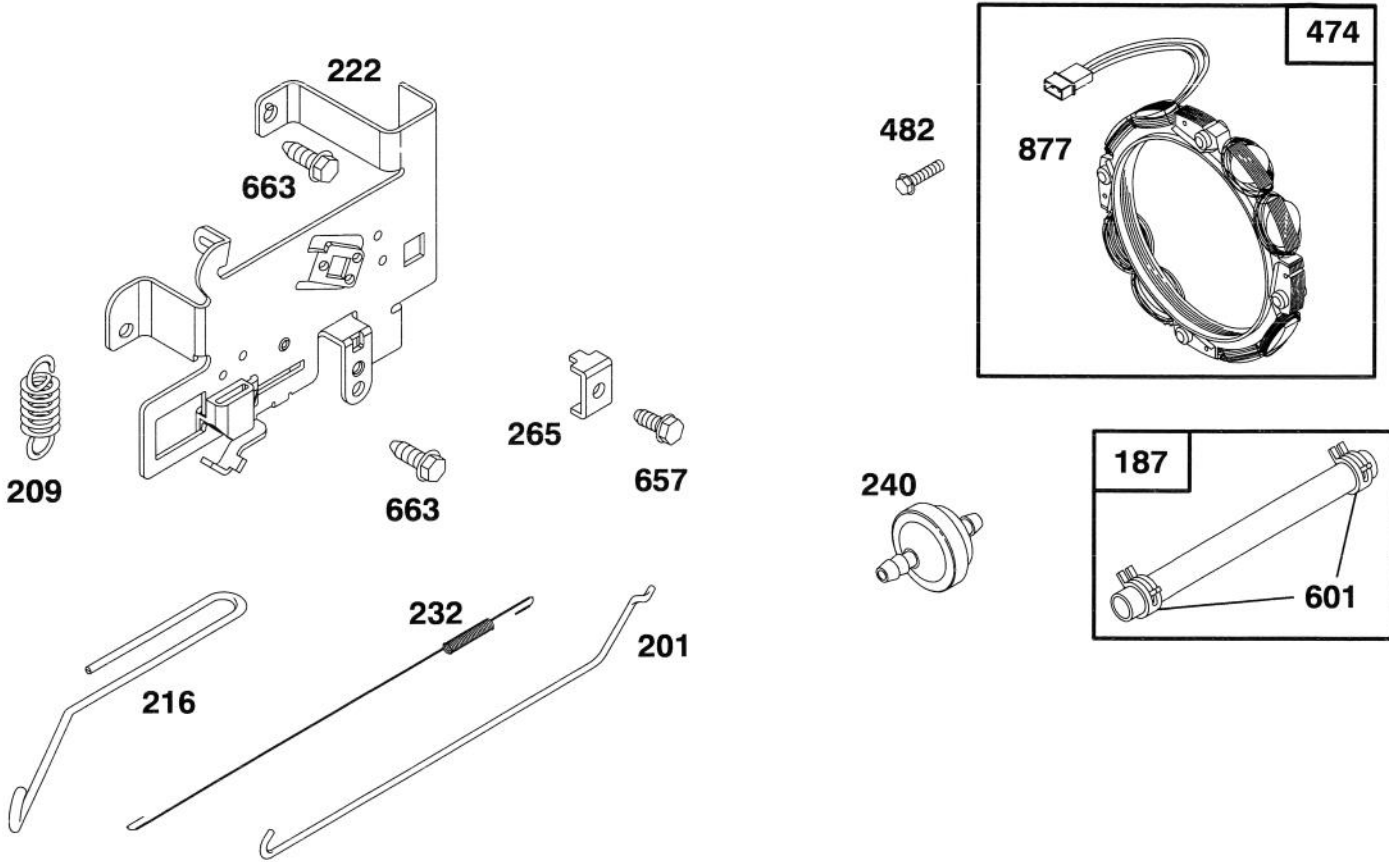


Assemblies include all parts shown in frames.

## ENGINE BRIGGS & STRATTON MODEL 286707-0453-01

Ref. No.	Part No.	Description	No. Used
187	393815	Line-Fuel (11" Long, Cut to Suit)	1
201	262767	Link-Governor	1
209	260871	Spring-Governor	1
216	262766	Link-Choke	1
222	495611	Plate-Governor Control	1
232	262785	Spring-Governor Link	1
240	394358	Filter-Fuel	1
265	221535	Clamp-Casing	1

Ref. No.	Part No.	Description	No. Used
474	393474	Stator-Alternator (Dual Circuit)	1
482	93621	Screw-Sem	1
601	93053	Clamp-Fuel Pipe	1
657	93496	Screw-Sem	1
663	94620	Screw-Hex. Hd.	1
877	393456	Diode and Connector Assy. (Dual Circuit)	1

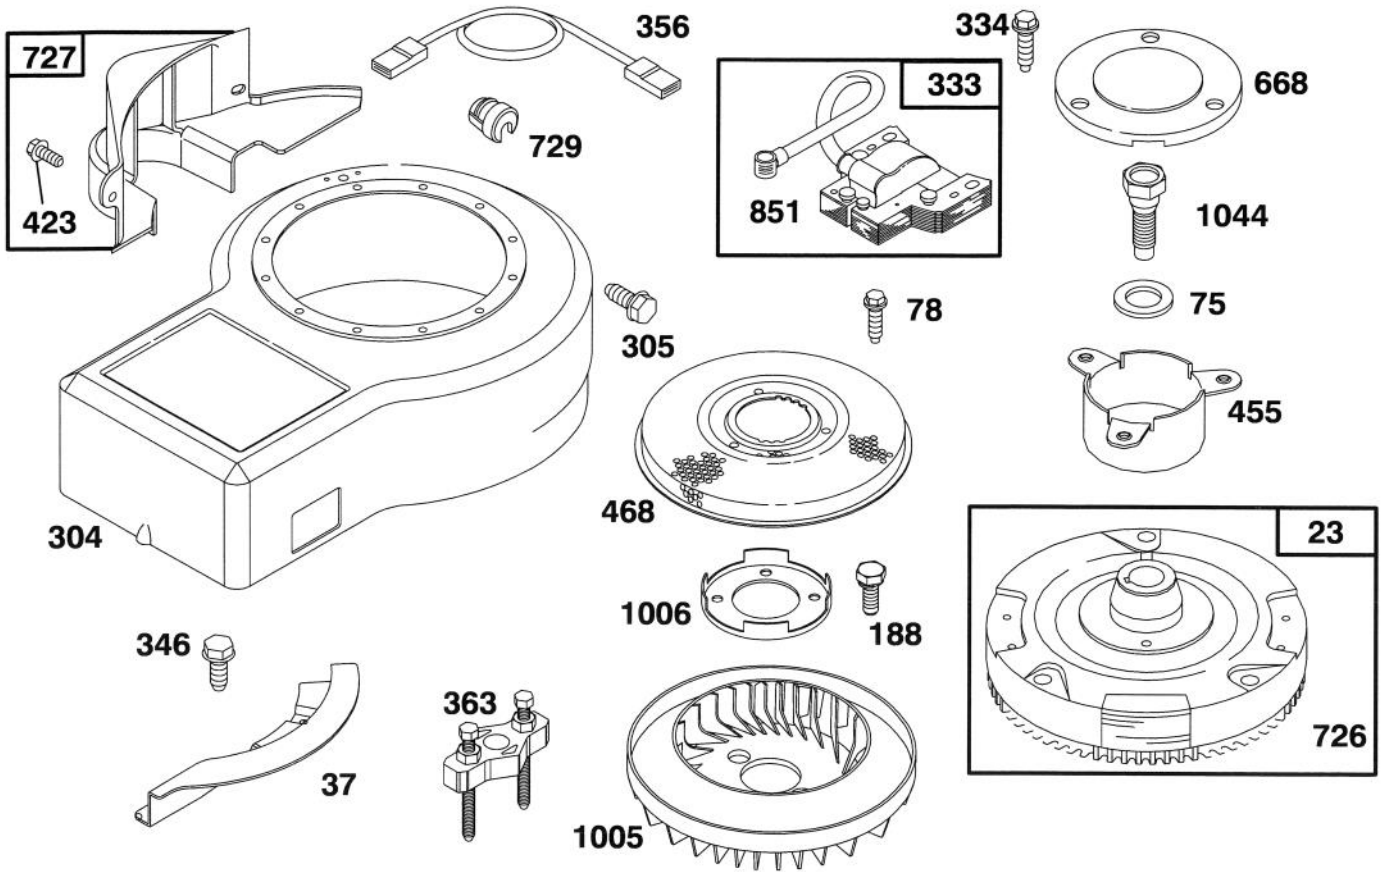

Assemblies include all parts shown in frames.

## ENGINE BRIGGS & STRATTON MODEL 286707-0453-01


Ref. No.	Part No.	Description	No. Used
23	492326	Flywheel and Ring Gear Assy. - Magneto	1
37	224502	Guard - Flywheel	1
75	224061	Washer - Spring	1
78	93805	Screw - Sem	1
188	93535	Screw - Sem (3/4" Long)	1
304	496319	Housing - Blower	1
305	94619	Screw - Blower Housing Mounting	1
333	492341	Armature - Magneto	1
334	93381	Screw - Armature Mtg.	1
346	93705	Screw - Hex. Head	1
356	494328	Wire Assembly	1

Ref. No.	Part No.	Description	No. Used
363	19203	Puller - Flywheel	1
423	94073	Screw - Sem	1
455	222561	Cup - Screen Mounting	1
468	222562	Screen - Flush Rotating	1
668	280848	Spacer	1
726	392134	Gear - Ring (Includes Mtg Hardware)	1
727	490324	Cover - Starter	1
729	281159	Clip - Lead Wire	1
851	221798	Terminal - Ignition Cable	1
1005	280687	Fan - Flywheel	1
1006	224413	Retainer - Fan	1
1044	94673	Screw - Hex. Head	1

729A



728



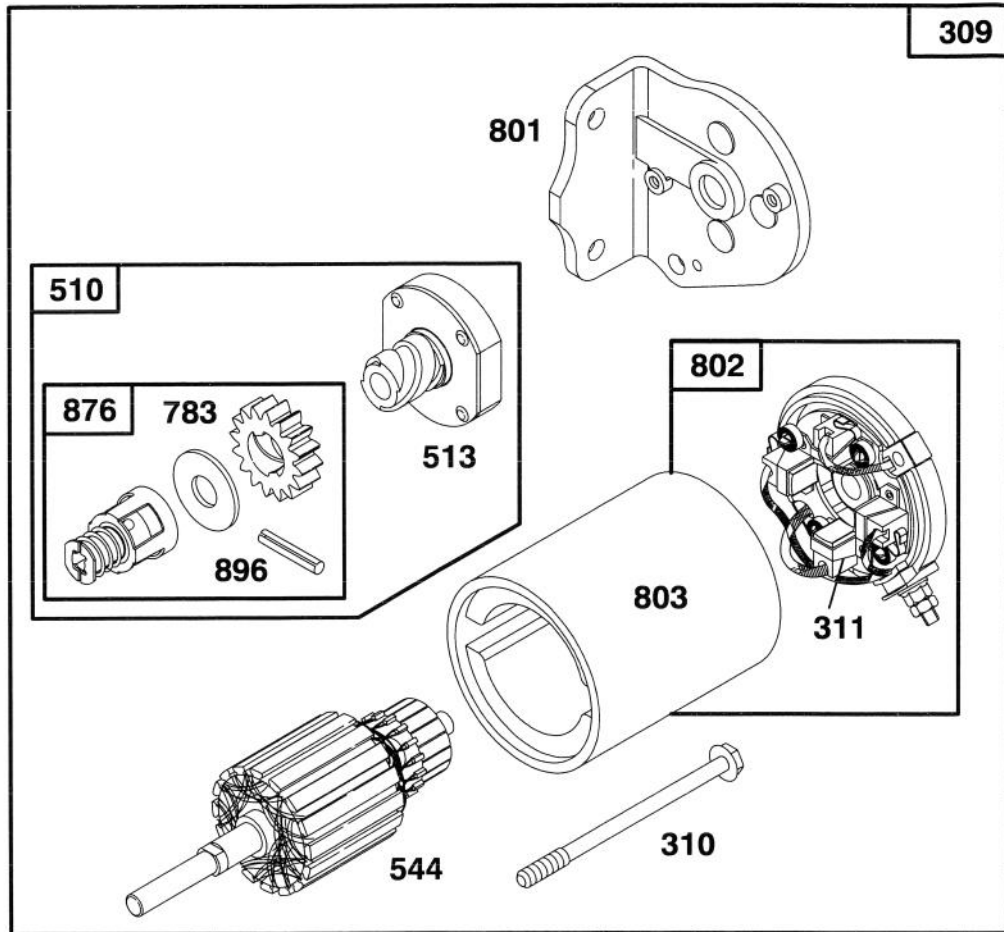


Assemblies include all parts shown in frames.

## ENGINE BRIGGS & STRATTON MODEL 286707-0453-01

Ref. No.	Part No.	Description	No. Used
309	394805	Motor and Drive Assy.	1
310	94003	Bolt Hex. Hd.	1
311	395538	Brush Assy.	1
510	495878	Starter Drive Assy.	1
513	398003	Clutch Assy.	1
544	390837	Armature Assy.	1
728	94627	Screw-Hex. Hd.	1
729A	224723	Retainer-Wire	1

Ref. No.	Part No.	Description	No. Used
783	280104	Gear	1
801	394856	Drive End Cap Assy.	1
802	395537	End Cap Assy Commutator	1
803	398159	Housing Assy.	1
876	495877	Retainer And Pin	1
896	94288	Pin-Roll	1

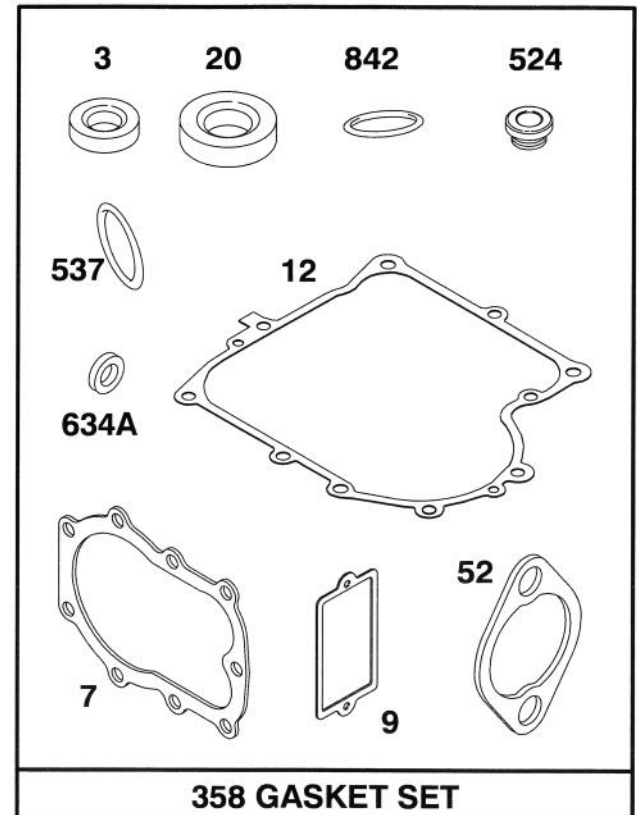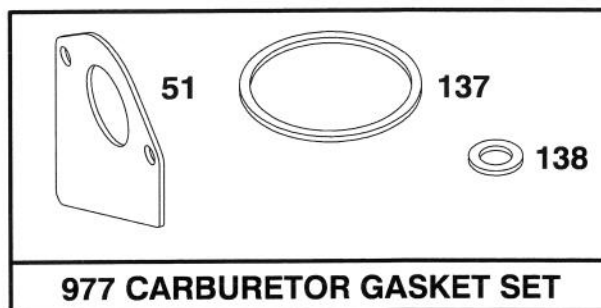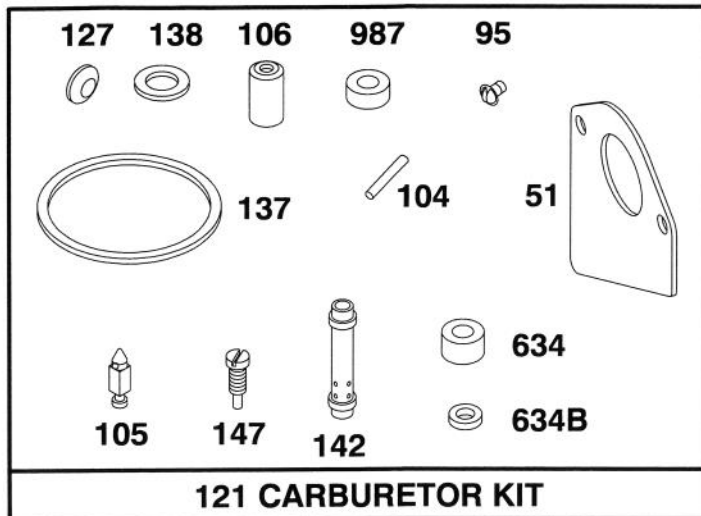

Assemblies include all parts shown in frames.

## ENGINE BRIGGS & STRATTON MODEL 286707-0453-01


Ref. No.	Part No.	Description	No. Used
★3	391086	Seal—Oil	1
★7	271866	Gasket—Cylinder Head	1
★9	27803	Gasket—Valve Cover	1
★12	271916	Gasket—Crankcase Cover (1/64" Thick)	1
★	271997	Gasket—Crankcase Cover (.005" Thick)	1
★	271996	Gasket—Crankcase Cover (.009" Thick)	1
★20	291675	Seal—Oil	1
◆●51	272465	Gasket—Carburetor (Carb. to Elbow)	1
★52	272554	Gasket—Carburetor (Elbow to Cylinder)	1
●95	94098	Screw—Throttle	1
●104	231789	Pin—Float Hinge	1
●105	231855	Valve Assy.—Inlet Needle	1
●106	231854	Inlet Valve Seat	1

Ref. No.	Part No.	Description	No. Used
121	495799	Carburetor Kit	1
●127		Plug—Welch (Sold in Kit Only).	1
◆●137	281165	Gasket—Float Bowl	1
◆●138	281164	Washer—Float Bowl Screw	1
●142	494537	Nozzle—Carburetor	1
●147	231794	Pilot—Jet	1
358	494241	Gasket Set	1
★524	68838	Seal—Filler Tube	1
★537	281106	O-Ring—Air Cleaner	1
●634	281168	Seal—Choke Shaft	1
★634A	491323	Seal—Governor	1
●634B	394970	Washer—Throttle Shaft	1
★842	270920	Seal—Oil Filler Cap	1
977	494358	Carburetor Gasket Set	1
●987	281166	Seal—Throttle Shaft	1

★ Included in Gasket Set—Part No. 494241.

● Included in Carburetor Kit—Part No. 495799.


◆ Included in Carburetor Gasket Set—Part No. 494385.

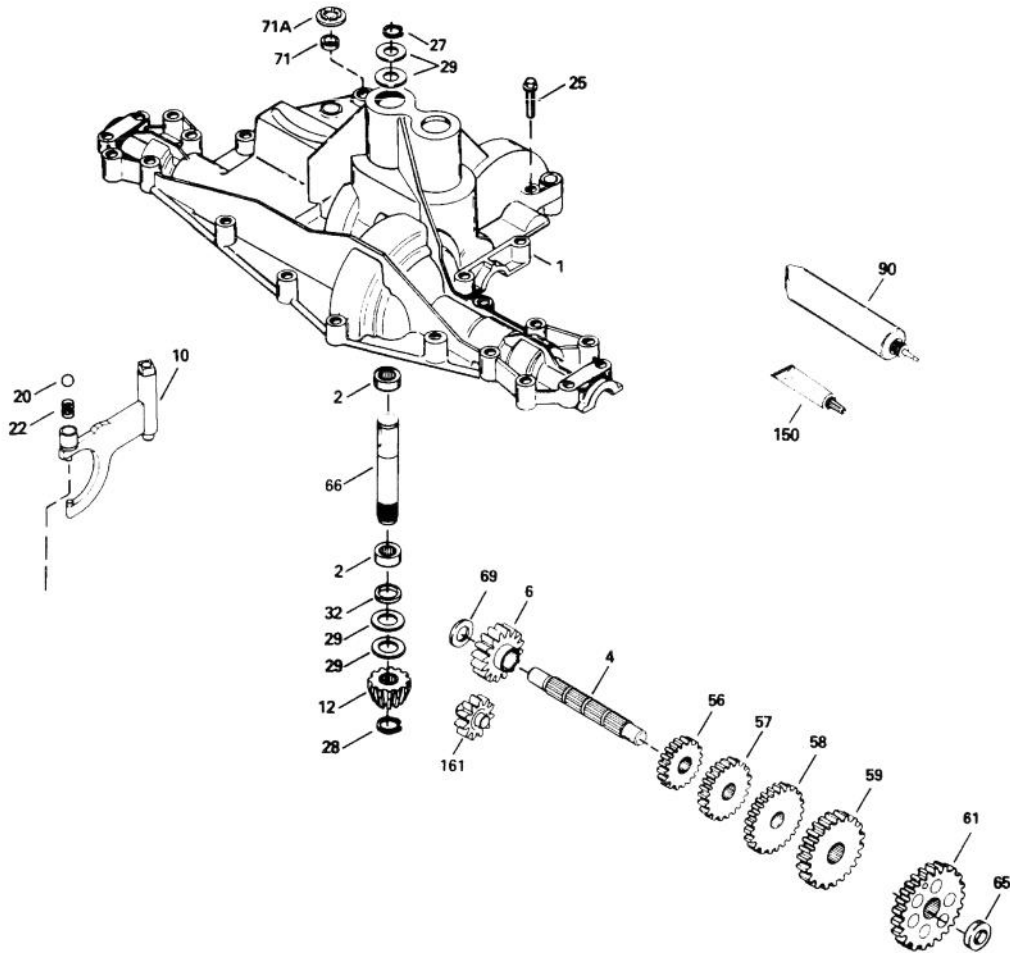

## PEERLESS TRANSAXLE MODEL NO. 915-020

Ref. No.	Part No.	Description	No. Used
1	772128	Transaxle Cover	1
4	776300	Countershaft	1
6	778281	Spur Gear (16 Teeth)	1
10	784370	Shift Rod & Fork	1
12	778262	Bevel Pinion (14 Teeth)	1
20	792139	Ball (3/8" dia.)	1
22	792142	Spring	1
25	792073	Screw	17
27	792035	Retaining Ring	1
28	788040	Retaining Ring	1
29	780072	Washer	4
32	792001	O-Ring	1
56	778151	Spur Gear (15 Teeth)	1
57	778249	Spur Gear (23 Teeth)	1

Ref. No.	Part No.	Description	No. Used
58	778314	Spur Gear (21 Teeth)	1
59	778129A	Spur Gear (30 Teeth)	1
61	778265	Spur Gear (34 Teeth)	1
65	780162	Washer	1
66	776299	Input Shaft (3.522" lg.)	1
69	780161	Thrust Washer	1
71	788069	Square Cut Ring	1
71A	792145	Pushnut	1
90	788067B	Grease (32 oz. btl. Bentonite grease)	1
150	510334	Gasket Eliminator (Loctite #515)	1
161	776302	Reverse Idler Assembly	1

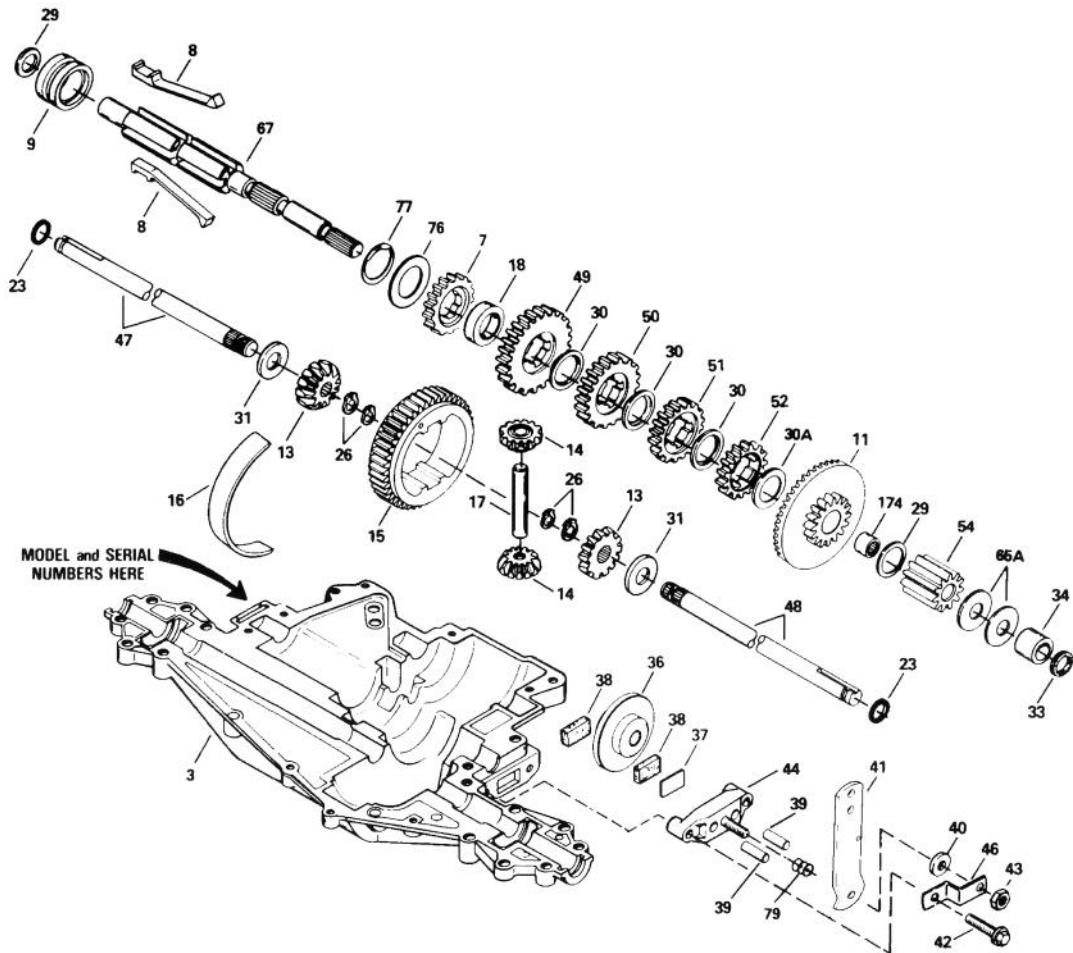

## PEERLESS TRANSAXLE MODEL NO. 915-020 (Cont.)

Ref. No.	Part No.	Description	No. Used
3	770110	Transaxle Case	1
7	778122A	Spur Gear (22 Teeth)	1
8	792133	Shift Key	4
9	784352	Shift Collar	1
11	778261	Bevel Gear & Bearing (44/16 Teeth) (Incl. Ref. #174)	1
13	778221	Bevel Gear (16 Teeth)	2
14	778068	Differential Pinion	2
15	778260	Ring Gear	1
16	786150	Bearing Strip	1
17	78139	Drive Pin	1
18	786147	Neutral Spacer	1
23	788061	Seal Ring	2
26	792125	Retaining Ring (pkg. of 2)	4
29	780072	Washer	2
30	780108	Washer	3
30A	789145	Washer	1
31	780001	Washer	2
33	788076	O-Ring	1
34	780159	Bushing	1
36	790071	Brake Disk	1
37	790007	Brake Pad Plate	1

Ref. No.	Part No.	Description	No. Used
38	790006	Brake Pad	2
39	786026	Dowel Pin	2
40	792076A	Washer	1
41	790045	Brake Lever	1
42	792073	Screw	2
43	792075	Locknut	1
44	790025	Brake Pad Holder	1
46	786086	Brake Lever Bracket	1
47	774869	Axle (16-13/16" lg.)	1
48	774688	Axle (11-5/8" lg.) (Incl. Ref. #26)	1
49	778125	Spur Gear (35 Teeth)	1
50	778250	Spur Gear (17 Teeth)	1
51	778313	Spur Gear (19 Teeth)	1
52	778121A	Spur Gear (20 Teeth)	1
54	778263	Spur Gear (11 Teeth)	1
65A	780160	Washer	2
67	776352	Shifter & Brake Shaft	1
76	780090	Washer	1
77	788078A	Inverted Retaining Ring (pkg. of 2)	1
79	792144	Spring	1
174	780085	Needle Bearing	1

# TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
111419	Washer - Fender	4	19	1	80-2240	Plate - Grille Panel	9	30	1
116397	Relay	9	16	1	80-2600	Battery - 7 Plate	9	6	1
117137	Decal - Belt Guide	13	24	1	80-4341	Shaft - Spindle	13	14	2
117242	Decal - Made in USA	1	20	1	80-4360	Shield - Bearing	13	18	2
701178	Cap - Protector	1	6	2	80-4380	Spacer - Hardened	13	19	2
702366	Clip - Wire Retainer	9	9	3	84-5610	Guide - Cable	7	12	2
910478	Screw - Phillips Hd.	9	19	4	84-5610	Guide - Cable	8	16	2
3-6498	Washer - Thrust	5	14	2	88-0890	Grip - Brake Rod	4	11	1
3-6498	Washer - Thrust	4	32	2	88-3840-01	Body - Rear	1	5	1
3-7501	Washer - Curved	5	11	4	88-3850	Wheel - Steering	5	3	1
5-4015	Bolt - Shoulder	8	2	1	88-3870	Cover - Steering Wheel	5	2	1
5-4460	Washer - Fender	3	3	1	88-3880	Tank - Gas	6	6	1
5-4460	Washer - Fender	4	24	1	88-3930	Shield - Heat	2	14	1
5-4460	Washer - Flat	7	9	4	88-3940	Panel - Rear Hitch	1	10	1
7-0030	Bolt - Shoulder	14	2	1	88-3950	Seat	3	1	1
7-0030	Bolt - Shoulder	12	3	4	88-3960	Lens - Headlights	9	23	1
7-0036	Key - Square	11	10	2	88-3970	Reflector & Lamp	9	25	1
7-5461	Washer - Hardened	8	10	1	88-3980	Cap - Gas	6	3	1
23-0310	Bolt - Shoulder	15	3	1	88-4020	Guide - Deck Belt R.H.	15	5	1
26-0671	Bolt - Blade	13	17	2	88-4030	Guide - Deck Belt L.H.	15	8	1
26-0671	Bolt - Blade	6	17	1	88-4040	Box - Battery	9	11	1
26-6700	Spring - Brake Return	11	17	1	88-4050	Duct - Hood Air	2	17	1
27-0220	Screw - Plastite	6	5	4	88-4070	Tire - 13	4	4	2
27-0220	Screw - Plastite	5	17	2	88-4090	Tire	11	8	2
27-8890	Spring - Pedal Return	7	6	1	88-4140	Nut - Wedge	2	23	2
28-0540	Bolt - Shoulder	15	10	4	88-4160	Clamp - Pivot Rod	2	22	2
28-0540	Bolt - Shoulder	2	11	2	88-4170	Rod - Tower Pivot	2	24	1
28-2480	Washer	4	3	2	88-4180	Button - Release	5	6	1
28-2480	Washer	11	11	2	88-4190	Bushing - Sliding	5	5	1
28-8080	Boot - Battery Terminal	9	5	1	88-4210	Bushing - Stationary	5	19	1
37-8770	Bolt - Shoulder	7	2	1	88-4220	Latch - Hood	2	16	1
37-8770	Bolt - Shoulder	3	12	4	88-4230	Trunnion - H.O.C. Rear	12	12	2
38-1420	Switch - Seat	9	8	1	88-4280	Wheel & Tire Assembly	4	*	2
38-7820	Bearing - Spindle	13	23	4	88-4300	Wheel & Tire Assembly	11	*	2
44-8110	Cable - Battery Negative	9	7	1	88-4310	Harness - Wire	9	1	1
46-8090	Screw - Plastite	2	15	8	88-4320	Harness - Wire	9	24	1
46-8091	Screw - Plastite	2	8	2	88-4340	Control - Throttle	6	4	1
47-2963	Line - Fuel	6	10	1	88-4350	Cable - Throttle	6	2	1
52-2891	Bushing - Steering Link	4	20	2	88-4370	Rim - Front Wheel	4	5	2
55-4300	Decal - Caution Spring	13	38	2	88-4390	Rim	11	9	2
55-9321	Cable - Shotgo	8	5	1	88-4400	Bearing - Wheel	4	35	4
56-2540	Vent - Tube	9	2	1	88-4410	Gasket - Muffler	6	22	1
56-9830	Pad - Brake	14	27	2	88-4430	Cover - Recycler	13	33	1
57-4360	Post - Rear Pivot	13	4	1	88-4460	Axle - Front	4	7	1
57-4380	Rod - Deflector Hinge	13	32	1	88-4510	Housing - Spindle	13	21	2
57-6950	Spring - Torsion	13	31	1	88-4590	Bolt - Shoulder	14	3	3
61-9780	Cap - Hub	4	1	2	88-4620	Bracket - Idler Pivot	1	12	1
61-9780	Cap - Hub	11	13	2	88-4630	Plate - Engine Mount	1	3	1
62-1292	Knob - Engage Lever	2	3	1	88-4640	Bracket - Deck	15	12	2
62-1292	Knob - Shift	12	6	1	88-4650	Rail - R.H. Frame	1	4	1
62-1292	Knob - Shift	8	15	1	88-4660	Rail - L.H. Frame	1	13	1
62-3661	Spacer - Bearing	13	20	2	88-4670	Bushing - Eccentric	4	17	1
63-8360	Key - Ignition	9	12	1	88-4700	Pulley - Cable	15	4	1
65-2920	Pad - Pedal	7	25	1	88-4700	Pulley - Cable	7	19	1
67-0710	Ball - Swivel	14	28	2	88-4730	Clamp - H.O.C. Pivot	12	13	2
68-3650	Decal - Deflector Danger	13	3	1	88-4810	Clamp - Shift Pivot	8	4	2
68-3660	Decal - Shield Danger	13	36	1	88-4810	Clamp - Shift Pivot	7	22	1
76-2160	Plate - Kicker	13	10	4	88-4820	Bracket - Seat Hinge	3	13	2
76-3820	Anchor - Belt Guide	6	13	2	88-4830	Link - Drag	4	29	1
79-1600	Baffle - Recycler	13	28	1	88-4840	Pulley - Transmission	11	3	1
79-1640	Baffle - Rear	13	13	1	88-4850	Pulley - Engine	6	14	1
79-3061	Blade - Recycler	13	15	2	88-4870	Arm - Idler	14	21	1
79-3140	Decal - Danger	13	11	1	88-4880	Spacer - Microswitch	9	21	1
80-0510	Stiffener - Blade	13	35	2	88-4890	Spring - Leaf	5	13	1

\*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

3316-983

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
88-4900	Pan - Front Deck	15	11	1	88-6370	Shaft - Steering Short	5	15	1
88-4910	Support - Seat	3	2	1	88-6410	Cable - Deck Engage	15	6	1
88-4960	Shield - Exhaust Pipe	1	14	1	88-6450	Transaxle	11	6	1
88-4980	Bushing - Idler Arm	14	16	1	88-6460	Spring - Extension	12	2	1
88-5000	Pedal - Clutch/Brake	7	24	1	88-6480	Muffler	6	25	1
88-5010	Spacer - Steering Rack	4	26	1	88-9830	Switch - Ignition	9	15	1
88-5020	Gate - Shift	3	15	1	88-9932	Switch - Micro	9	20	2
88-5030	Gate - H.O.C.	3	8	1	92-2460	Decal - Ignition/Lights	2	28	1
88-5070	Guide - Idler Belt	14	24	1	92-2461	Decal - Throttle	2	29	1
88-5110	Pivot - H.O.C.	12	14	1	92-2462	Decal - Deck Engage	2	30	1
88-5120	Support - Front Axle	1	17	1	92-2467	Decal - Hood R.H.	2	25	1
88-5130	Bracket - Steering Rack	4	14	1	92-2468	Decal - Hood L.H.	2	*	1
88-5150	Bushing - Flange	5	16	1	92-2474	Decal - Tower 1238XL	2	31	2
88-5160	Cover - Shift Gate	3	14	1	92-2481	Decal - Engine 12.5)	6	9	1
88-5170	Cover - H.O.C.	3	6	1	92-2484	Decal - Instruction	1	19	1
88-5180	Bracket - Backup	5	12	1	92-2490	Decal - Rear Body	1	18	1
88-5190	Lever - Deck Engage	2	1	1	92-5748	Decal - Air Duct	2	27	1
88-5200	Rack - Steering	4	18	1	92-5782	Patch - Heat Tape	2	26	1
88-5220	Mat - R.H. Foot	3	16	1	92-5794	Lever - Shift Pivot	8	21	1
88-5240	Mat - L.H. Foot	3	9	1	92-5796	Pivot - Shift	8	6	1
88-5260	Bracket - Transaxle Mt.	1	11	2	92-7889	Spindle - R.H.	4	6	1
88-5270	Rod - Clutch/Brake	7	1	1	92-7890	Spindle - L.H.	4	31	1
88-5300	Lever - Shift	8	1	1	92-8650	Hood	2	18	1
88-5310	Lever - H.O.C.	12	7	1	92-8875	Switch - Rocker	9	27	1
88-5330	Pulley - Deck	14	18	2	92-8934	Spring - Extension	14	9	1
88-5340	Lever - Trans. Shift	8	9	1	92-9520	Decal - Recycler	13	8	1
88-5350	Strap - Torque	11	16	2	92-9674	Knob - Studded	3	4	1
88-5380	Rod - Steering Tie	4	8	1	92-9845	Solenoid	9	17	1
88-5390	Bellcrank	14	10	1	93-0303	Tower - Steering	2	2	1
88-5450	Rod - Hanger Rear	12	11	2	93-0317	Deflector Ass'y	13	2	1
88-5460	Guide - Trans. Belt	7	10	2	93-1122	Decal - Danger	13	1	2
88-5470	Spacer - Front Axle	4	34	2	93-3240	Seal - Plunger	9	28	2
88-5500	Rod - Pedal Pivot	7	18	1	218-461	Nut - Hex	9	13	1
88-5510	Rod - Parking Brake	4	9	1	232-27	Valve Stem w/Cap	11	18	2
88-5520	Bracket - Parking Brake	4	10	1	232-27	Valve Stem w/Cap	4	36	2
88-5530	Rod - Shift Tie	8	7	1	232-39	Inner Tube	4	*	2
88-5540	Rod - Deck Brake R.H.	14	22	1	232-41	Inner Tube (Optional)	11	*	2
88-5550	Rod - Deck Brake L.H.	14	5	1	2412-98	Clamp - Hose	6	11	2
88-5560	Guide - Idler Belt	7	3	1	302-5	Fitting - Grease	4	37	2
88-5570	Link - Adjusting H.O.C.	12	1	2	302-11	Fitting - Grease	11	7	2
88-5630	Pulley - Idler	14	23	1	302-26	Fitting - Grease	4	16	1
88-5680	Pulley - Flat Idler	7	4	1	321-4	Screw - Hex Hd. Cap	9	3	2
88-5780-01	Deck - 38	13	6	1	321-4	Screw - Hex Hd. Cap	5	8	2
88-5800	Bushing -	4	33	4	321-4	Screw - Hex Hd. Cap	2	10	4
88-5830	Guide - Belt L.H.	6	12	1	321-4	Screw - Hex Hd. Cap	13	22	2
88-5840	Guide - Belt R.H.	6	21	1	321-4	Screw - Hex Hd. Cap	6	26	1
88-5900	Link - H.O.C.	12	8	1	321-9	Screw - Hex Hd. Cap	5	21	2
88-5910	Spring - Torsion	14	7	2	321-14	Screw - Hex Hd. Cap	13	37	2
88-5920	Rod - Gas Tank	6	7	1	322-3	Screw - Hex Hd. Cap	1	2	22
88-5930	Keeper - Cable	8	17	1	322-3	Screw - Hex Hd. Cap	12	4	4
88-5970	Hook - Spring Return	14	12	1	322-3	Screw - Hex Hd. Cap	2	4	2
88-6040	Bracket - Hood Pivot R.H.	2	19	1	322-3	Screw - Hex Hd. Cap	3	11	4
88-6050	Bracket - Hood Pivot L.H.	2	12	1	322-3	Screw - Hex Hd. Cap	8	13	3
88-6070	Arm - Idler	7	16	1	322-3	Screw - Hex Hd. Cap	7	17	2
88-6090	Coupling - Steering	5	20	1	322-5	Screw - Hex Hd. Cap	1	7	2
88-6100	Brake - Deck	14	4	2	322-5	Screw - Hex Hd. Cap	7	8	1
88-6130	Spring - Deck Engage	14	8	1	322-5	Screw - Hex Hd. Cap	14	15	2
88-6140	Spring - Brake	7	7	1	322-7	Screw - Hex Hd. Cap	7	11	1
88-6220	Spring - Compression	1	8	2	322-9	Screw - Hex Hd. Cap	6	18	4
88-6240	V-Belt - Traction	11	5	1	322-12	Screw - Hex Hd. Cap	15	2	2
88-6250	V-Belt - Deck	14	17	1	322-12	Screw - Hex Hd. Cap	11	14	4
88-6290	Shield - Muffler	1	15	1	323-5	Screw - Hex Hd. Cap	13	29	2
88-6300	Shaft - Steering Upper	5	9	1	323-11	Screw - Hex Hd. Cap	7	5	1
88-6330	Spring - Extension	7	14	1	323-12	Screw - Hex Hd. Cap	14	1	1

\*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
323-13	Screw - Hex Hd. Cap	4 27 2	3296-29	Nut - Lock	8 3 4
329-23	Screw - Hex Hd. Cap	8 12 1	3296-29	Nut - Lock	12 5 8
3219-6	Nut - Lock	14 19 2	3296-29	Nut - Lock	2 6 2
3230-1	Bolt - Carriage	4 15 4	3296-29	Nut - Lock	6 8 3
3230-1	Bolt - Carriage	13 26 1	3296-29	Nut - Lock	1 9 24
3230-3	Bolt - Carriage	8 18 1	3296-29	Nut - Lock	3 10 6
3230-3	Bolt - Carriage	7 21 1	3296-29	Nut - Lock	4 12 5
3230-3	Screw - Carriage	4 28 1	3296-29	Nut - Lock	14 13 6
3231-4	Screw - Carriage	4 13 1	3296-29	Nut - Lock	7 13 6
3253-3	Washer - Lock	8 11 1	3296-29	Nut - Lock	13 27 1
3253-3	Washer - Lock	6 27 1	3296-39	Nut - Lock	15 9 1
3253-4	Washer - Lock	6 23 2	3296-39	Nut - Lock	8 19 1
3253-22	Washer - Lock	6 16 1	3296-39	Nut - Lock	14 20 1
3254-5	Washer - Lock	9 14 1	3296-39	Nut - Lock	4 21 3
3255-7	Washer - Ext. Tooth Lock	9 29 2	3296-39	Nut - Lock	13 25 3
3255-8	Washer - Ext. Tooth Lock	6 19 1	3296-42	Nut - Lock	14 6 2
3256-22	Washer - Flat	5 7 2	3296-42	Nut - Lock	2 9 4
3256-23	Washer - Flat	1 1 4	3296-42	Nut - Lock	5 10 4
3256-23	Washer - Flat	2 5 2	3296-42	Nut - Lock	13 12 4
3256-23	Washer - Flat	14 14 3	3296-59	Nut - Lock	7 15 2
3256-23	Washer - Flat	8 14 2	32103-22	Nut - Wing	9 4 2
3256-23	Washer - Flat	11 15 8	32104-76	Screw - Thread Cutting	15 7 5
3256-23	Washer - Flat	7 26 2	32104-76	Screw - Thread Tapping	1 16 1
3256-24	Washer - Flat	12 10 7	32120-64	Ring - Snap	11 2 1
3256-24	Washer - Flat	2 20 2	32121-78	Pin - Roll	5 4 1
3256-24	Washer - Flat	14 25 2	32128-43	Nut - Flange	2 21 2
3256-24	Washer - Flat	4 25 4	32144-4	Screw - Hex Hd. Thr'd	9 10 4
3256-25	Washer - Flat	6 15 1	32144-32	Screw - Plastite	9 26 2
3256-25	Washer - Flat	8 20 1	32144-41	Screw - Taptite	13 7 8
3256-25	Washer - Flat	4 22 2	32144-111	Screw - Plastic	13 9 8
3256-26	Washer - Flat	7 20 2	32149-1	Nut - Keps	6 20 2
3256-68	Washer - Fender	14 11 3	32149-2	Nut - Keps	9 18 2
3257-23	Key - Woodruff	11 4 1	32151-48	E-Ring	11 12 2
3269-26	Washer - Backup	3 17 4	32151-48	E-Ring	5 18 1
3272-10	Pin - Cotter	4 23 4	32151-48	E-Ring	4 30 2
3272-10	Pin - Cotter	7 23 1	32151-81	Ring - Retaining	5 1 1
3272-12	Pin - Cotter	4 2 2			
3274-12	Screw - Hex Soc. Hd.	6 24 2			
3290-282	Rivet - Pop	3 7 4			
3290-282	Rivet - Pop	14 26 4			
3290-299	Nut - Tinnerman	9 31 1			
3290-307	Pin - Cotter	2 7 2			
3290-307	Pin - Hair Cotter	12 9 7			
3290-354	Speednut	9 22 2			
3290-465	Washer - Belleville	13 16 2			
3290-479	Fastener - Panel	3 5 20			
3290-496	Nut - Retained	2 13 2			
3296-3	Nut - Lock	8 8 2			
3296-29	Nut - Lock	11 1 8			
3296-29	Nut - Lock	15 1 6			

### OPTIONAL EQUIPMENT

Easy Empty Bagger Kit	Model No. 79116
Twin Bagger	Model No. 79101
Anti-Scalp Kit	Model No. 79181
Recycler Kit (Standard)	Model No. 79170
Wheel Weight Kit	Model No. 59159
42" Snowblade Kit	Model No. 79150
Tire Chains	Part No. 11-0430
Hi-Sail Bagging Blade	Part No. 57-4700
Headlight Kit (Standard)	Model No. 79180

\*Not Illustrated