 




MODEL NO. 70040-5900001 & UP

PARTS CATALOG

WHEEL HORSE®
8-25 RECYCLER® RIDING MOWER

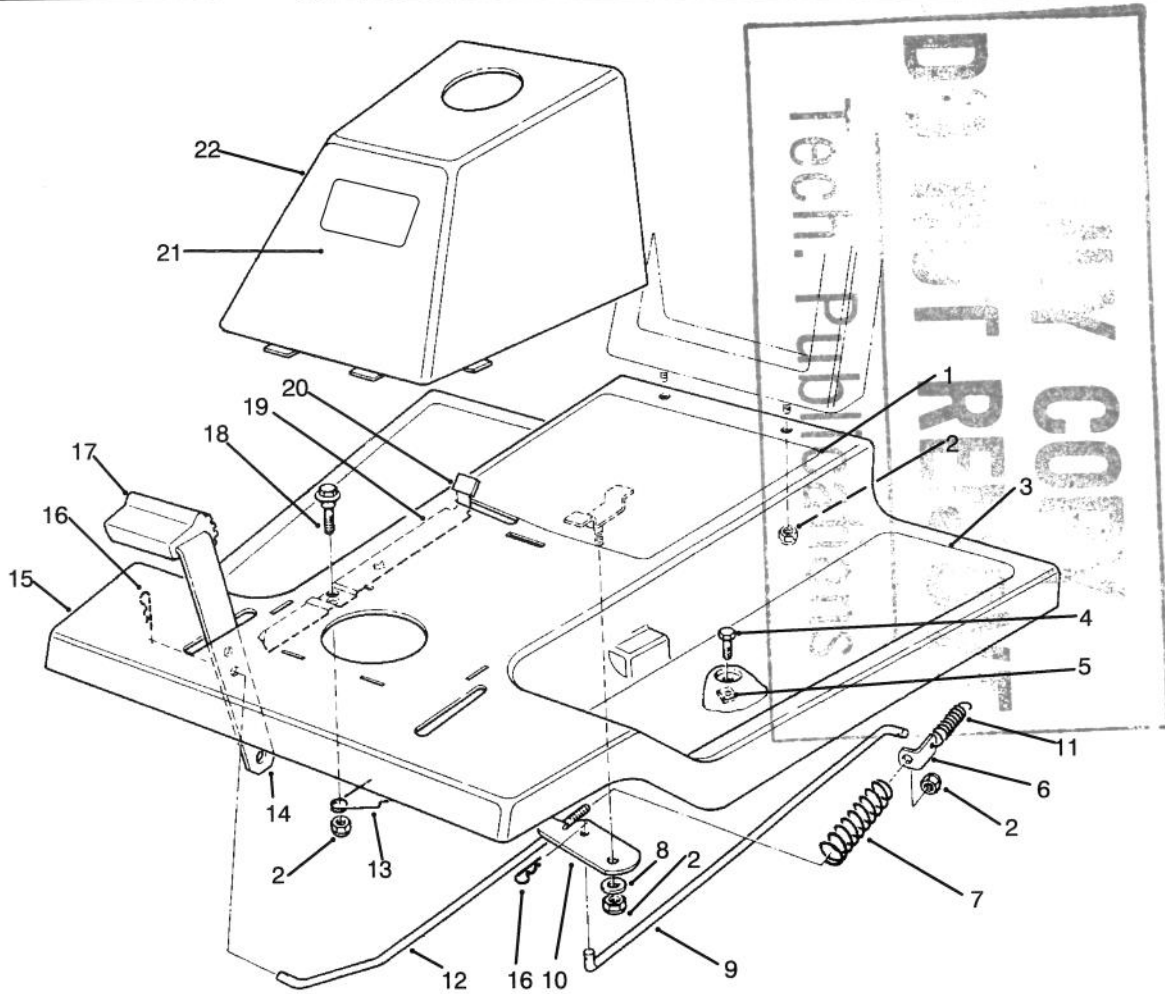


C-1940

FRONT BODY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-1620	Decal - Instruction	1
2	3296-29	Nut - Lock	5
3	44-7030	Tread - Foot Rest	2
4	32104-110	Screw - Cap Hex. Hd.	4
5	3290-347	Nut - U-Type	4
6	67-1590	Bracket - Brake Return	1
7	67-1430	Spring - Compression	1
8	26-9530	Washer - Pivot	1
9	67-1340	Rod - Brake, Transmission	1
10	67-1330-03	Lever - Brake, Bellcrank	1
11	67-1450	Spring - Extension	1
12	67-1350	Rod - Front, Brake	1

Ref. No.	Part No.	Description	No. Used
13	19-1970	Spring - Brake, Parking	1
14	67-1130-03	Pedal - Brake & Clutch	2
15	67-1070-01	Body W.A. - Front	1
16	3290-250	Pin - Hair, Cotter	2
17	65-2920	Pad - Pedal	2
18	19-1470	Bolt - Shoulder	1
19	19-1610-03	Lever - Brake, Parking	1
20	19-2200	Tip - Brake, Parking	1
21	92-7981	Decal - Toro	1
22	55-7101	Tower (Incl. Ref. #21)	1

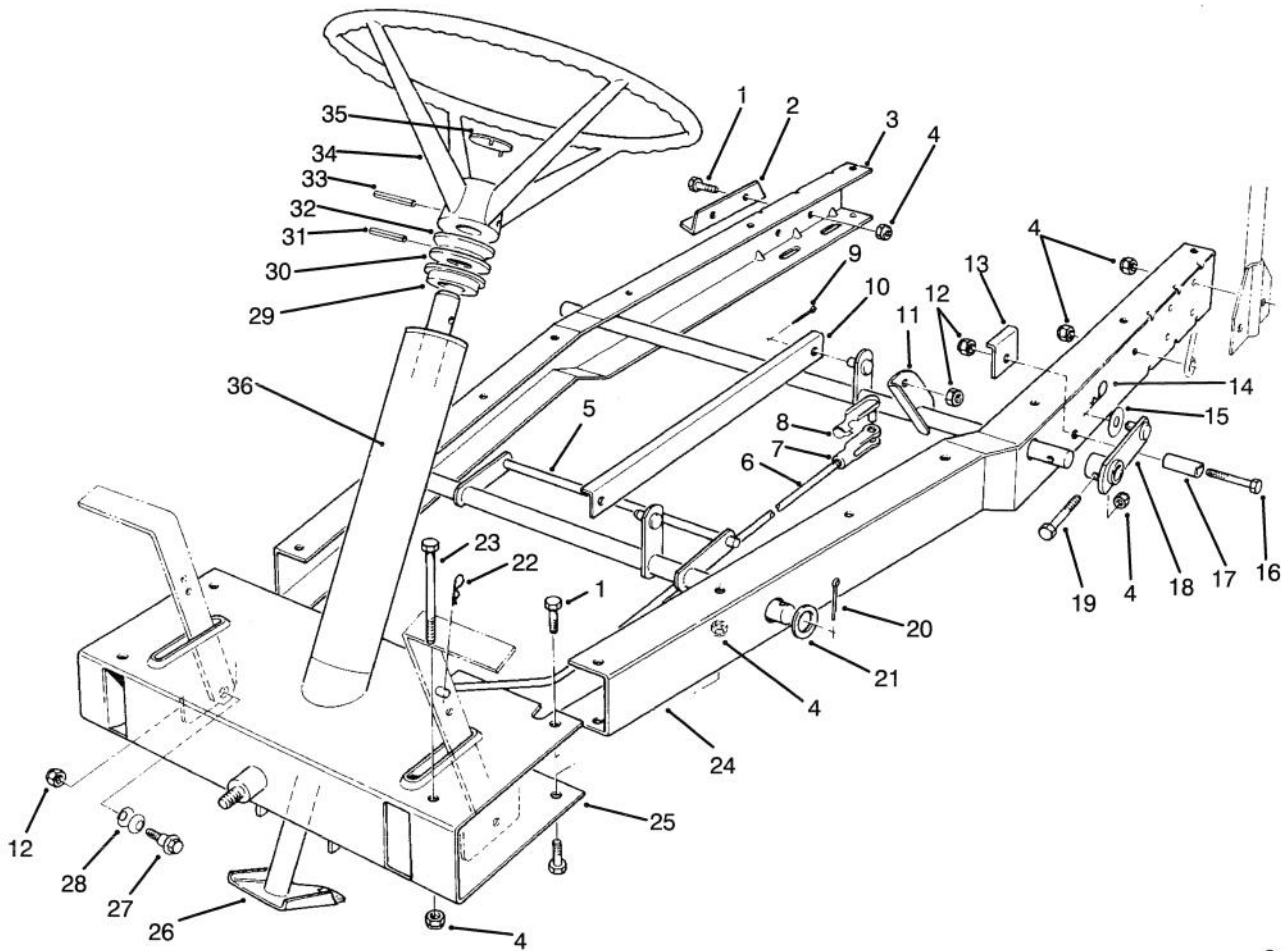 


C-0005

FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	322-3	Screw - Cap Hex. Hd.	6
2	44-7140-01	Mount - Bearing, Axle	1
3	67-0520-01	Channel - R.H.	1
4	3296-29	Nut - Lock	16
5	67-0010-03	Lift W.A. - Front, Deck	1
6	67-0430	Rod - Clutch	1
7	282-27	Clevis	1
8		Assembly - Pin, Clevis	1
9	3272-6	Pin - Cotter	2
10	67-0090-03	Bracket - Link, H.O.C.	1
11	67-0050-01	Tube W.A. - Support, Rear	1
12	3296-39	Nut - Lock	5
13	67-1510-03	Brace - Stop, Deck	2
14	3290-355	Pin - Hair, Cotter	2
15	67-1460	Washer - Flat	2
16	323-10	Screw - Cap Hex. Hd.	2
17	68-8380	Spacer - Stop, Deck	2
18	67-0300-01	Lever W.A. - H.O.C.	2
19	46-2511	Bolt - Mounting, Axle	2

Ref. No.	Part No.	Description	No. Used
20	3272-23	Pin - Cotter	2
21	3256-29	Washer - Flat	2
22	3290-250	Pin - Hair, Cotter	1
23	322-14	Screw - Cap Hex. Hd.	2
24	67-0530-01	Channel - L.H.	1
25	67-0450-01	Frame W.A. - Front	1
26	67-0830-03	Shaft W.A. - Steering	1
27	67-0870	Bolt - Shoulder	2
28	3290-413	Washer - Belleville	4
29	67-0850	Bushing - Steering	2
30	67-0860	Washer - Steering	1
31	32121-32	Pin - Roll	1
32	67-0440	Spacer - Steering	1
33	32121-78	Pin - Roll	1
34	49-3242	Wheel - Steering	1
35	88-9840	Insert - Wheel, Steering	1
36	76-4080	Decal	1
*	13-6049	Kit - Loose parts	1

 *Not Illustrated

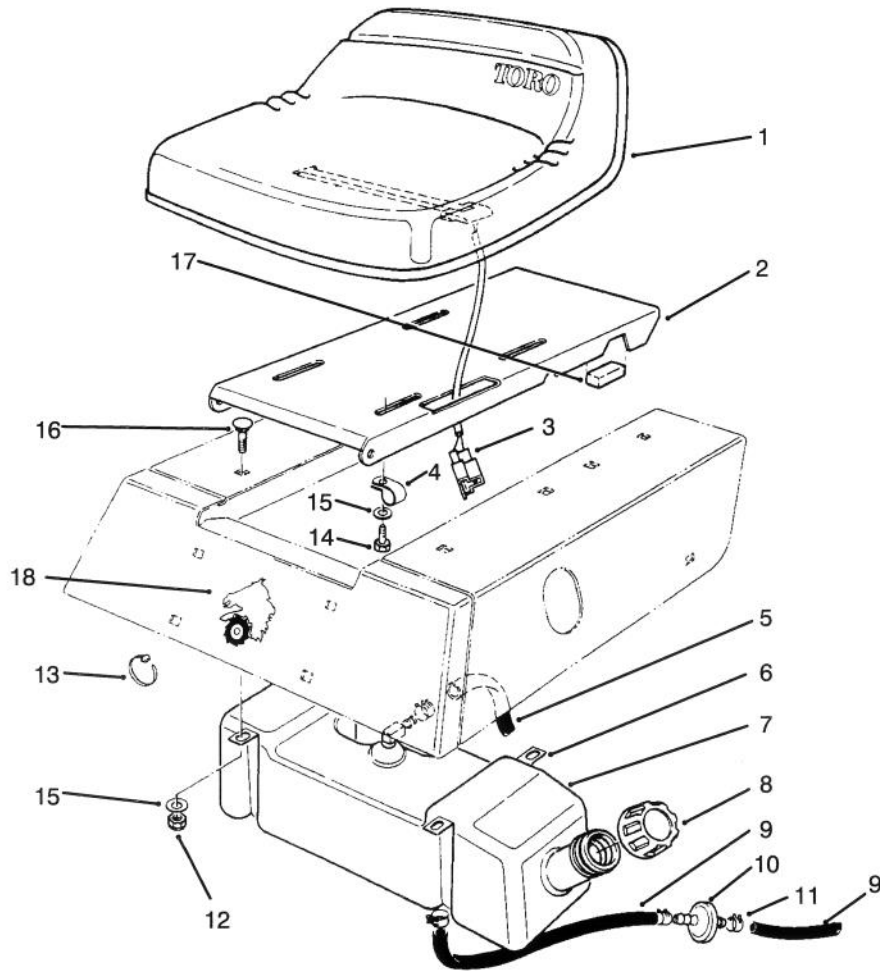


C-1941

SEAT & GAS TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	66-6680	Seat	1
2	67-1241	Base - Seat	1
3	38-1420	Switch - Seat	1
4	18-2970	R-Clamp	1
5	47-2986	Hose - Gas	1
6	67-0950	Strap - Tank, Gas	2
7	80-4580	Tank - Gas	1
8	55-3576	Assembly - Cap, Gas	1
9	47-2964	Hose - Gas	2

Ref. No.	Part No.	Description	No. Used
10	56-6360	Filter	1
11	2412-98	Clamp - Hose	5
12	3296-29	Nut - Lock	4
13	3290-378	Tie - Cable	1
14	322-3	Screw - Cap Hex. Hd.	4
15	3256-23	Washer - Flat	8
16	3230-20	Bolt - Carriage	6
17	66-6920	Pad - Isolator	2
18	92-7978	Decal - Horsehead	1

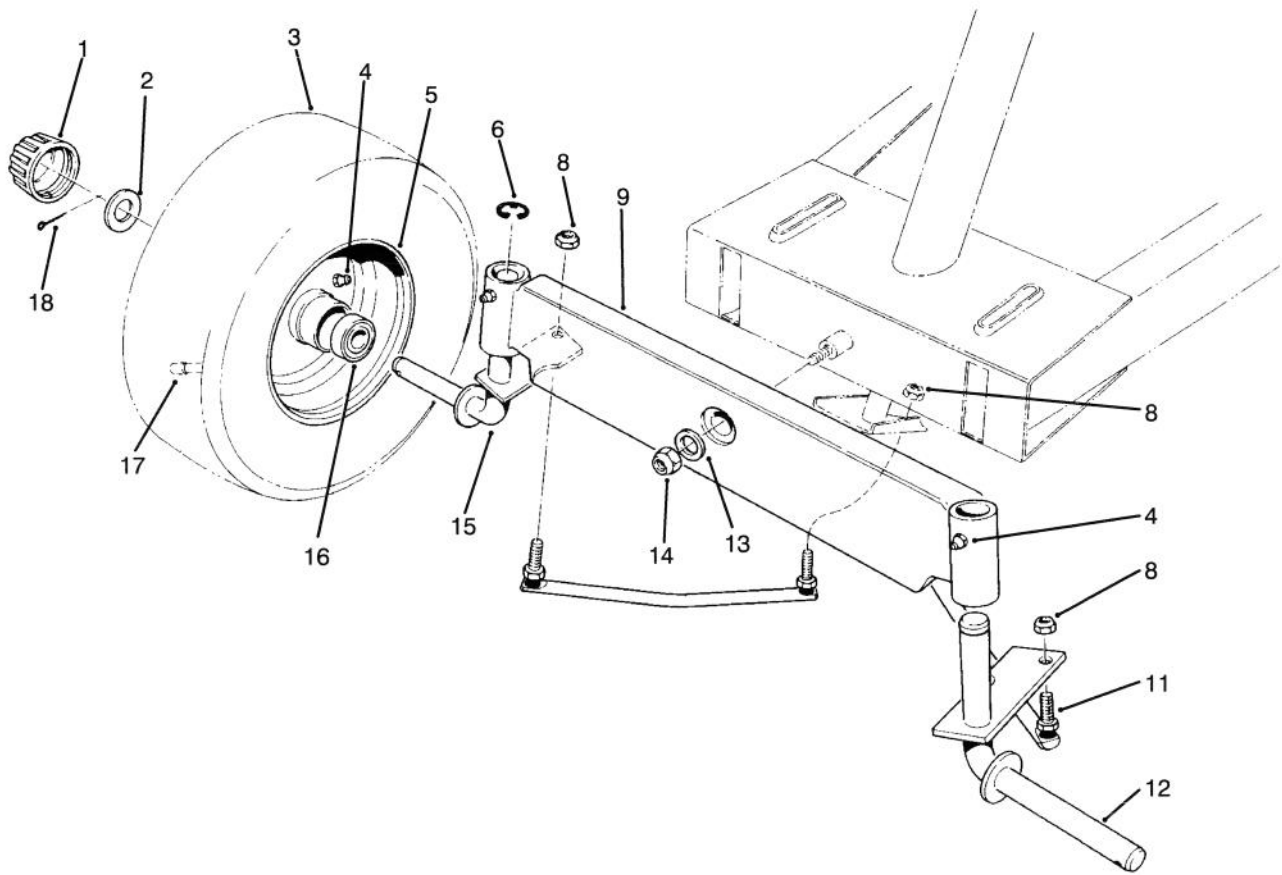 


C-0003A

FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	61-9780	Cap - Hub	2
2	28-2480	Washer - Flat	2
3	231-116	Tire	2
4	302-5	Fitting - Grease	4
5	217-80	Rim	2
6	32151-48	Ring - Retaining	2
8	3296-4	Nut - Lock	4
9	67-0990	Axle - Front	1

Ref. No.	Part No.	Description	No. Used
11	67-0880	Assembly - Tie Rod	2
12	67-0810-01	Spindle - L.H.	1
13	3256-26	Washer - Flat	1
14	3296-25	Nut - Lock	1
15	67-0800-01	Spindle - R.H.	1
16	110513	Bearing	4
17	232-27	Valve Stem w/Cap	2
18	3272-12	Pin - Cotter	2

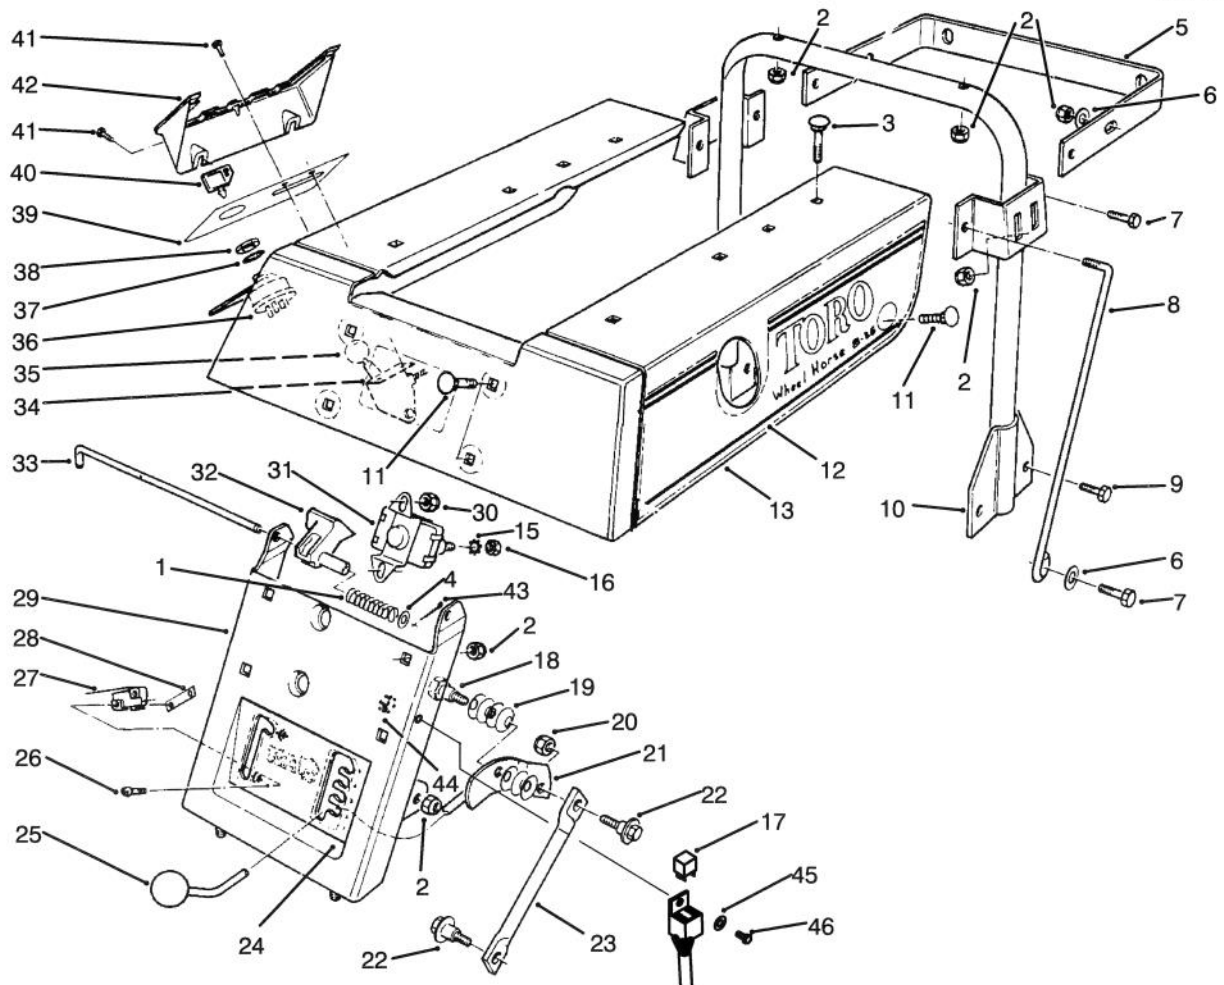 


C-1942

REAR BODY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-8310	Spring - Prop, Seat	1
2	3296-29	Nut - Lock	11
3	3230-3	Bolt - Carriage	2
4	3256-22	Washer - Flat	1
5	67-1500-03	Bar - Stand	1
6	3256-23	Washer - Flat	4
7	322-5	Screw - Cap Hex. Hd.	4
8	67-1480	Brace - Support, Seat	2
9	322-3	Screw - Cap Hex. Hd.	4
10	67-0790-03	Support W.A. - Seat	1
11	3230-20	Bolt - Carriage	1
12	92-7979	Decal - Toro L.H.	1
*	92-7980	Decal - Toro R.H.	1
13	67-0231-01	Body W.A. - Rear	1
15	3255-7	Washer - Lock, Int. Tooth	2
16	3218-1	Nut - Jam	2
17	48-4700	Relay	1
18	28-0540	Bolt - Shoulder	1
19	3290-413	Washer - Belleville	7
20	3296-39	Nut - Lock	1
21	67-0270	Handle W.A. - H.O.C.	1
22	67-0870	Bolt - Shoulder	2
23	67-0080	Link - H.O.C.	1
24	76-3920	Decal - H.O.C./Deck Engage.	1

Ref. No.	Part No.	Description	No. Used
25	233-22	Knob	1
26	3290-313	Screw - Pan Head	2
27	40-8200	Switch - Micro	1
28	3290-354	Nut - Double	1
29	67-1090-01	Support W.A. - Seat	1
30	3296-42	Nut - Lock	2
31	92-9845	Solenoid	1
32	80-4330	Prop - Seat	1
33	80-4550	Rod - Base, Seat	1
34	66-6640	Control - Throttle	1
35	233-59	Knob	1
36	23-0660	Switch - Ignition (Incl. Ref. #37 & 38)	1
37	3254-5	Washer - Lock, Int. Tooth	1
38	218-461	Nut - Hex.	1
39	67-1270	Decal - Panel, Control	1
40	63-8360	Key	2
41	32144-42	Screw - Hex. Hd. Tapping	4
42	67-1030	Cover - Panel, Control	1
43	3274-4	Pin - Cotter	1
44	3296-2	Nut - Lock	1
45	3256-14	Washer - Flat	1
46	3290-134	Screw - Cap Mach. Hd.	1

 *Not Illustrated

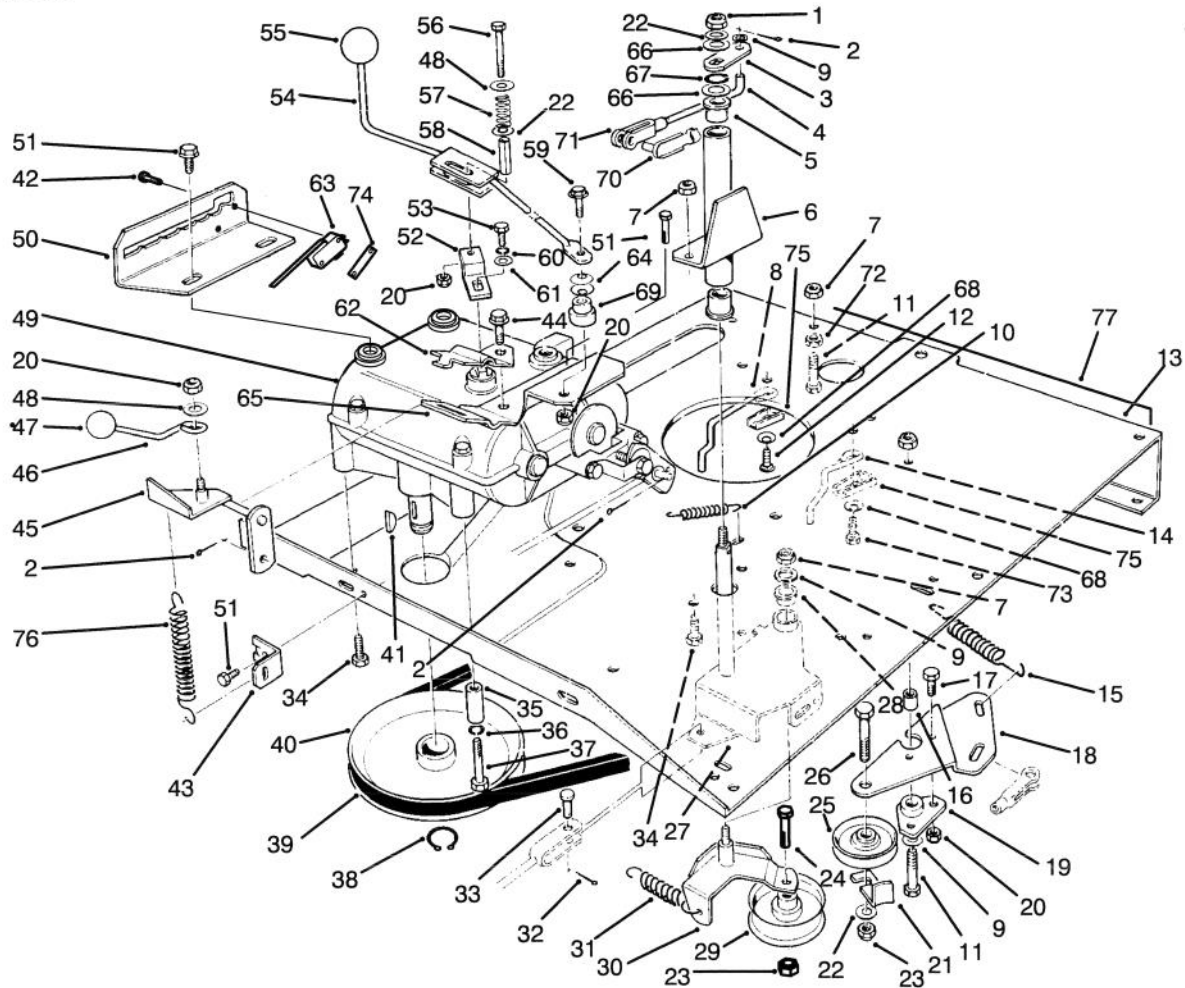


C-1506A

TRANSMISSION & LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-39	Nut - Lock	1
2	3272-6	Pin - Cotter	1
3	67-0690-03	Flat - Deck Engage	1
4	68-8370	Link - Deck Engage	1
5	256-90	Bushing	3
6	67-0540-03	Tube W.A. - Pivot (Incl. Ref. #5)	1
7	3296-29	Nut - Lock	8
8	67-0930	Guide R.H. - Belt, Engine	1
9	3256-23	Washer - Flat	3
10	26-6700	Spring - Return, Brake	1
11	322-6	Screw - Cap Hex. Hd.	1
12	3230-2	Bolt - Carriage	1
13	76-4090-01	Plate - Engine	1
14	67-0940	Guide L.H. - Belt, Engine	1
15	68-9950	Spring - Traction	1
16	67-0410	Spacer - Pivot	1
17	321-4	Screw - Cap Hex. Hd.	2
18	67-0420-03	Plate - Mount, Idler	1
19	67-0400	Mount - Pivot	1
20	3296-42	Nut - Lock	5
21	12-9020	Retainer - Belt	1
22	3256-24	Washer - Flat	3
23	3296-59	Nut - Lock	2

Ref. No.	Part No.	Description	No. Used
24	323-9	Screw - Cap Hex. Hd.	1
25	12-5820	Pulley - Idler, Traction	1
26	323-8	Screw - Cap Hex. Hd.	1
27	67-0360	Bracket - Arm, Idler (Incl. Ref. #28)	1
28	256-155	Bushing	1
29	56-9870	Pulley - Idler, Deck	1
30	67-0330-03	Idler - Plate, Mount	1
31	67-9170	Spring	1
32	3274-4	Pin - Cotter	1
33	283-67	Pin - Clevis	1
34	322-3	Screw - Cap Hex. Hd.	5
35	67-0920	Guide - Belt	1
36	3253-4	Washer - Lock	1
37	322-10	Screw - Cap Hex. Hd.	1
38	32120-64	Ring - Retaining	1
39	67-0900	Belt - Traction	1
40	82-6450	Pulley - Transmission	1
41	3257-23	Key	1
42	147665	Screw - Tapping	2
43	67-0750	Bracket - Mount, Spring	1
44	32144-70	Screw - Hex. Hd. Tapping	1
45	67-0600-03	Lever W.A. - Deck Engage	1
46	67-0640	Handle - Deck Engage	1

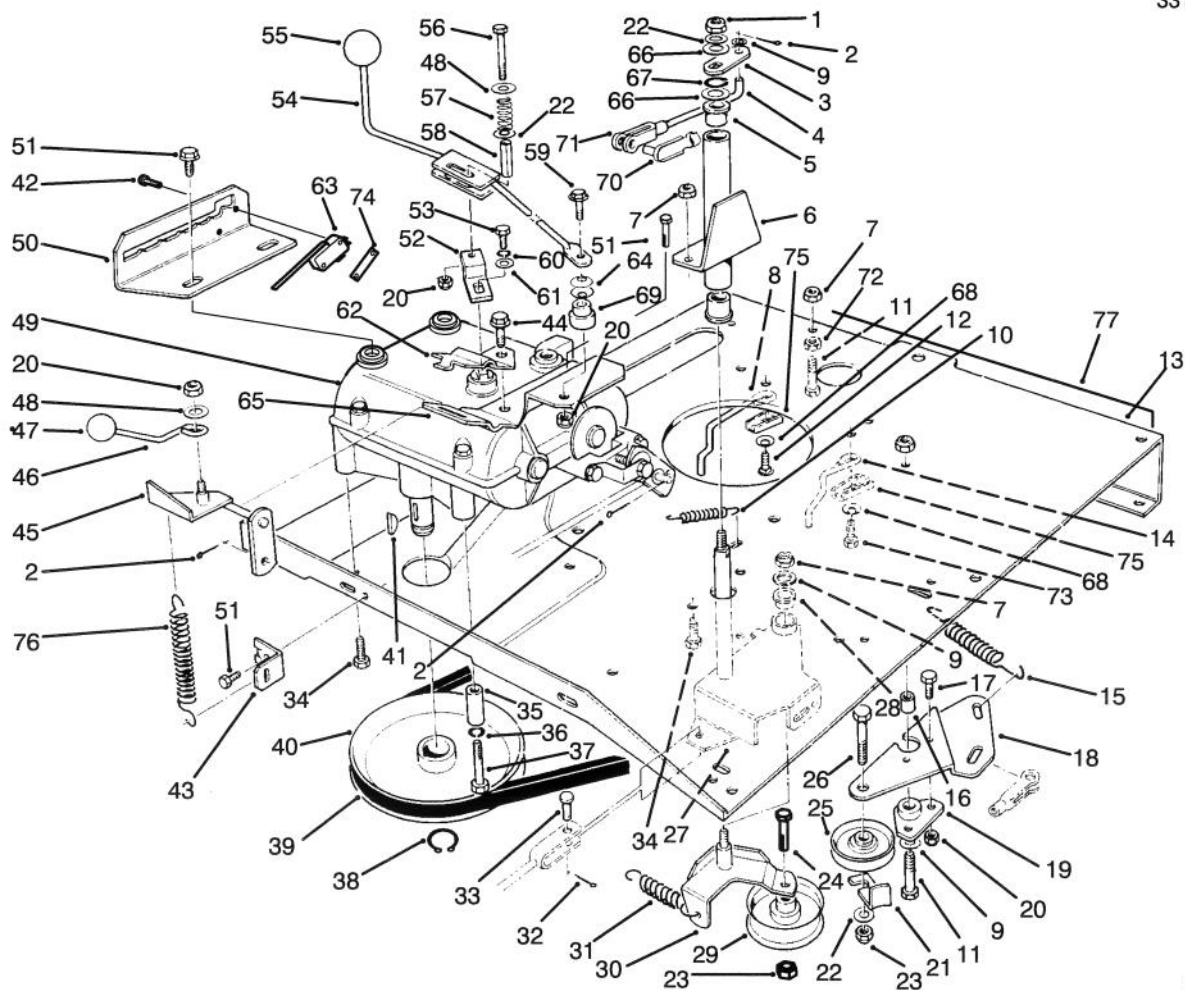 


C-1506A

TRANSMISSION & LINKAGE ASSEMBLY (CONTINUED)

Ref. No.	Part No.	Description	No. Used
47	233-22	Knob	1
48	3256-55	Washer - Fender	2
49	67-1400	Transmission	1
50	88-9810-03	Gate - Shift	1
51	32144-14	Screw - Wash. Hd., Tap.	4
52	56-7620	Lever - Shift	1
53	329-4	Screw - Cap Hex. Hd.	1
54	76-3940-03	Lever W.A. - Shift	1
55	233-48	Knob	1
56	321-15	Screw - Cap Hex. Hd.	1
57	56-7730	Spring	1
58	56-7740	Spacer	1
59	321-8	Screw - Cap Hex. Hd.	1
60	3253-3	Washer - Lock	1
61	3256-22	Washer - Flat	5
62	67-0670	Bracket - Engage, Deck	1

Ref. No.	Part No.	Description	No. Used
63	88-9930	Switch - Micro	1
64	3290-478	Washer - Belleville	2
65	67-0660	Bracket - Mount, Shifter	1
66	20-3220	Washer - Flat	2
67	32151-62	Ring - Retaining	1
68	3290-456	Washer - Belleville	2
69	76-3970	Spacer - Pivot	1
70	67-1530	Assembly - Pin, Clevis	1
71	282-27	Clevis	1
72	3218-2	Nut - Jam	1
73	32144-26	Screw - Thread Forming	1
74	3290-354	Nut - Double	1
75	76-3820	Anchor - Guide, Belt	2
76	76-4660	Spring	1
77	76-3860	Decal	1

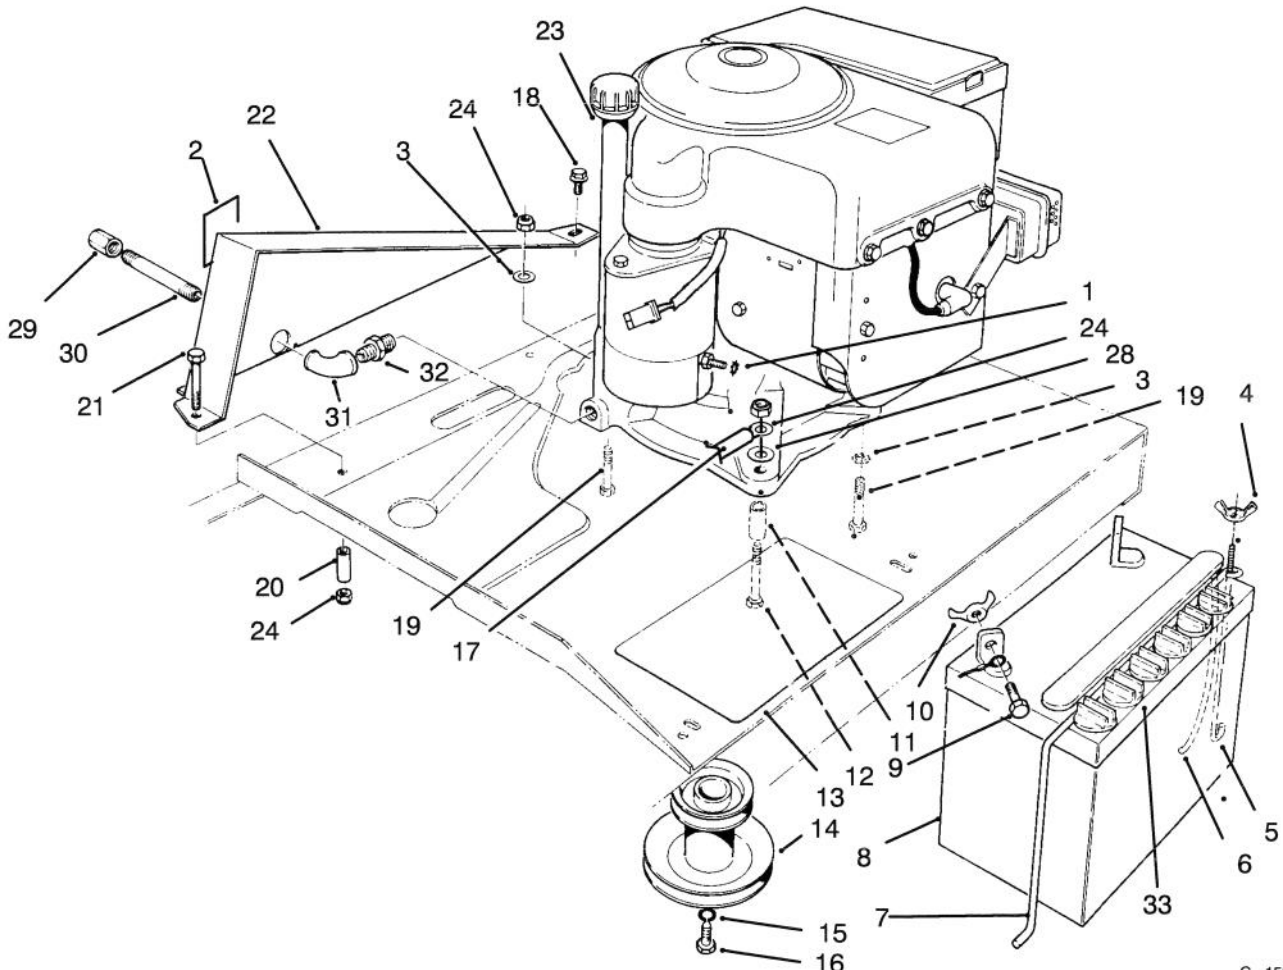 


C-1525B

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3255-7	Washer - Lock, Int. Tooth	1
3	3256-23	Washer - Flat	4
4	32103-14	Nut - Wing	1
5	56-7720	Post - Hold Down, Battery	1
6	56-2540	Tube - Drain	1
7	56-7710	Hold Down - Battery	1
8	80-2600	Battery 12V	1
9	321-4	Screw - Cap Hex. Hd.	2
10	32103-22	Nut - Wing	2
11	80-4560	Spacer	1
12	322-12	Screw - Cap Hex. Hd.	1
13	62-4300	Pad - Anti-Skid	1
14	83-4840	Pulley - Engine	1
15	3256-25	Washer - Flat	1
16	62-3760	Screw - Cap Hex. Hd.	1

Ref. No.	Part No.	Description	No. Used
17	54-3091	Assembly - Wire Battery to Ground	2
18	32144-14	Screw - Self Tapping	1
19	322-7	Screw - Cap Hex. Hd.	3
20	67-0920	Guide - Belt	1
21	322-10	Screw - Cap Hex. Hd.	1
22	67-0962-01	Guard - Chain	1
23		Engine - 8 H.P. B & S	1
24	3296-29	Nut - Lock	5
28	3255-8	Washer - Lock	4
29	288-2	Cap - Pipe	1
30	289-34	Nipple - Pipe	1
31	2811-17	Elbow - Street	1
32	2812-1	Reducer	1
33	84-8470	Cap - Battery	6

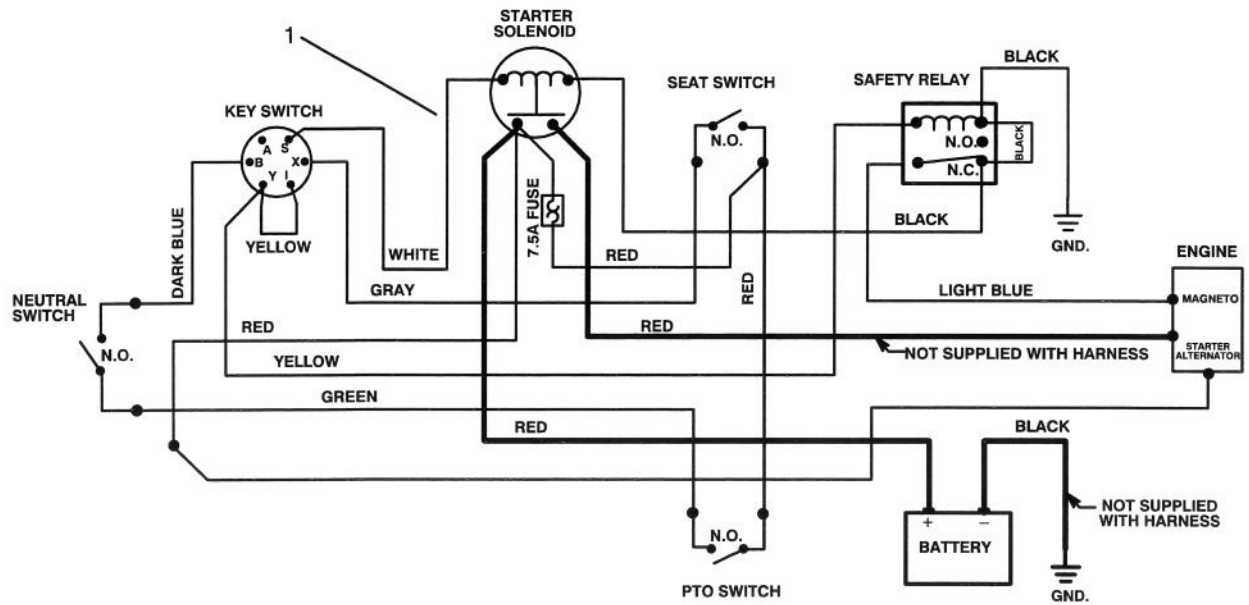 


C-1578

ELECTRICAL SCHEMATIC

Ref. No.	Part No.	Description	No. Used
1	88-9870	Harness - Wire	1

Ref. No.	Part No.	Description	No. Used

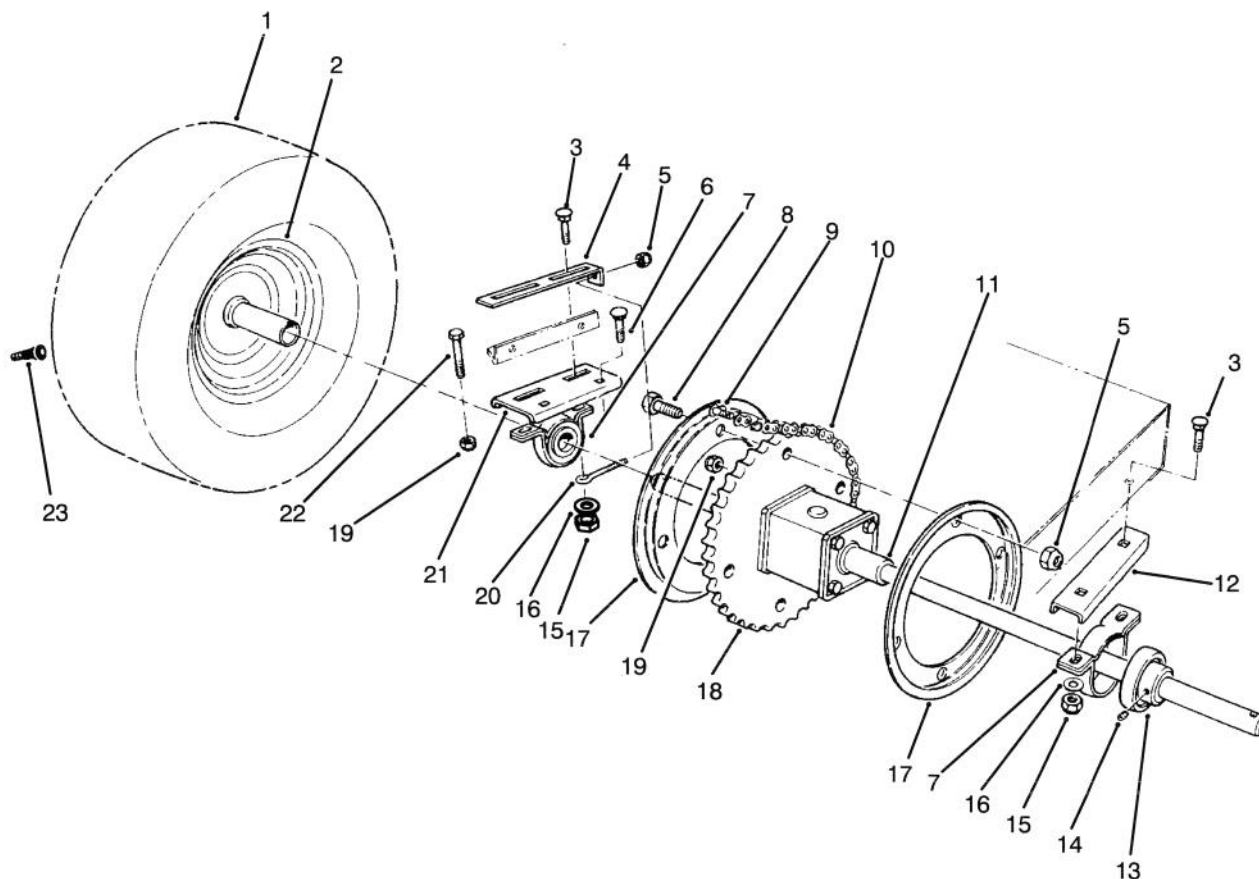 


C-0008A

REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	231-115	Tire	2
2	44-9760	Rim	2
3	3231-4	Bolt - Carriage	2
4	61-9990	Plate - Adjusting	1
5	3296-42	Nut - Lock	5
6	3231-25	Bolt - Carriage	4
7	47-1480	Mount - Bearing	2
8	321-4	Screw - Cap Hex. Hd.	4
9	2710-11	Link - Connecting	1
10	67-0910	Chain (Incl. Ref. #9)	1
11	56-9960	Differential	1
12	66-6630-03	Support L.H.	1

Ref. No.	Part No.	Description	No. Used
13	47-1490	Bearing (Incl. Ref. #14)	2
14	3245-32	Screw - Set	4
15	3296-39	Nut - Lock	6
16	3256-24	Washer - Flat	4
17	76-1580-03	Guide - Chain	2
18	76-4010	Sprocket	1
19	3296-29	Nut - Lock	6
20	61-9980	Screw - Adjusting	1
21	66-6620-03	Support R.H.	1
22	46-2511	Bolt - Axle	2
23	232-27	Valve Stem w/Cap	2

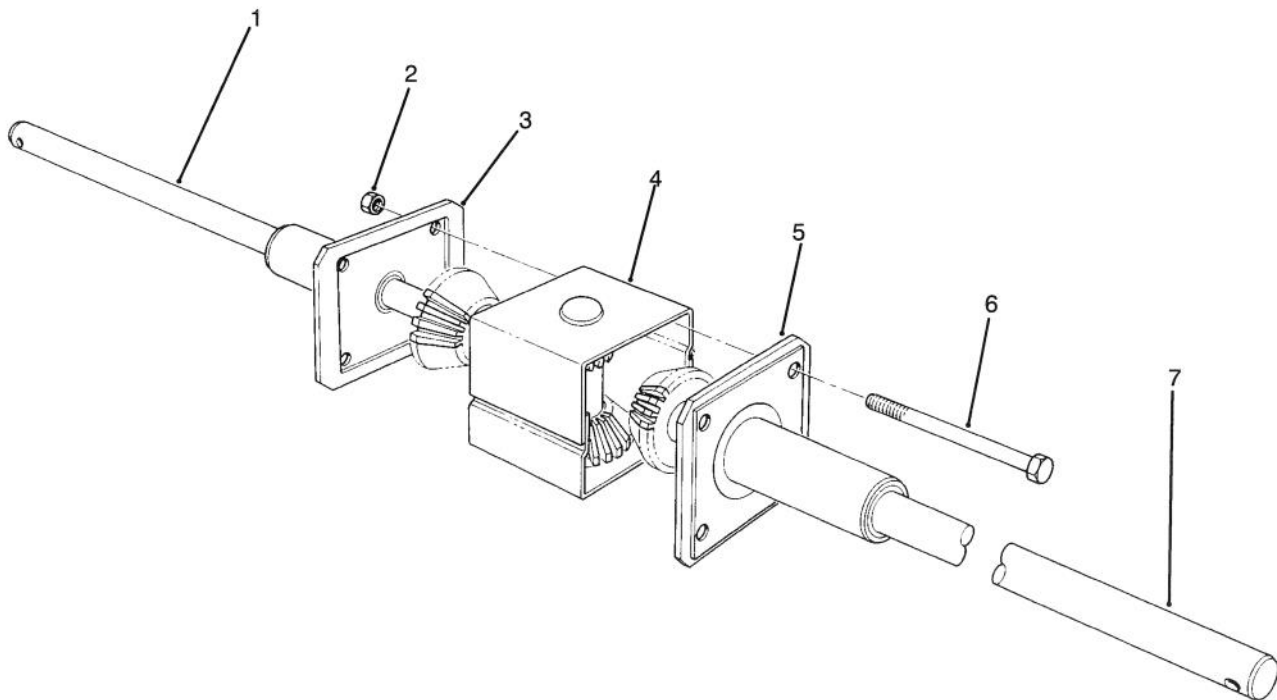 


C-0010

DIFFERENTIAL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	55-7762	Axle - R.H.	1
2	32152-1	Nut - Lock	4
3	55-7770	Cap - End, R.H.	1
4	55-7780	Case - Gear, Transfer	1

Ref. No.	Part No.	Description	No. Used
5	55-7771	Cap - End, L.H.	1
6	322-22	Screw - Cap Hex. Hd.	4
7	55-7763	Axle - L.H.	1
*	56-9960	Differential - Complete	1

 *Not Illustrated

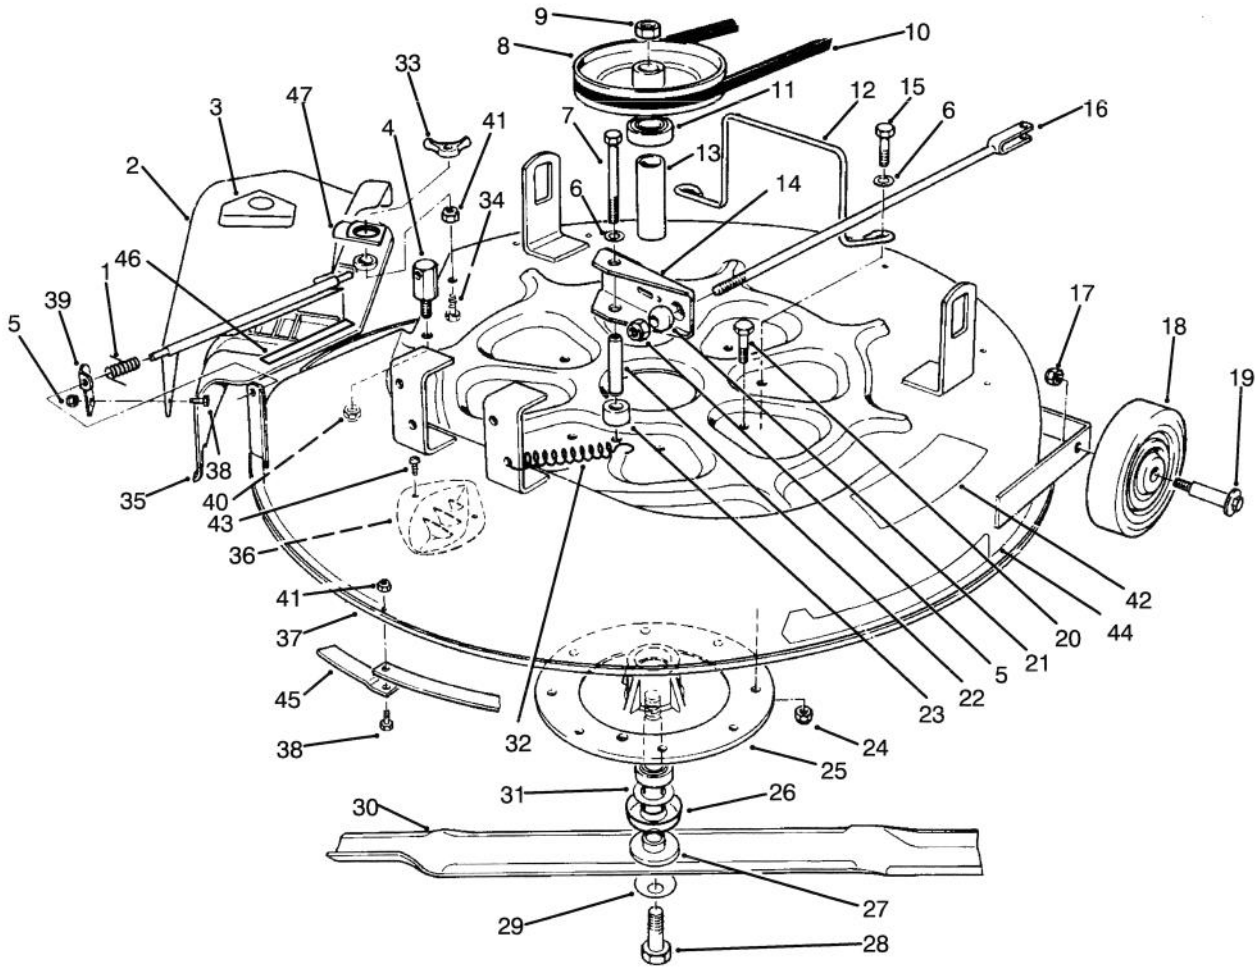


C-1943

CUTTING UNIT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	28-8010	Spring	1
2	67-1151	Deflector (Incl. Ref. #3)	1
3	54-9220	Decal - Danger	1
4	67-0140	Post - Pivot	1
5	3296-8	Nut - Lock	2
6	3256-23	Washer - Lock	3
7	322-22	Screw - Cap Hex. Hd.	1
8	80-4460	Pulley - Deck	1
9	3219-6	Nut - Hex.	1
10	67-1390	V-Belt	1
11	38-7820	Bearing - Ball	2
12	80-4520	Guide - Belt	1
13	62-3660	Spacer - Bearing	1
14	67-1370	Assy. - Brake, Deck	1
15	322-6	Screw - Cap Hex. Hd.	2
16	67-0570	Rod W.A. - Brake, Deck	1
17	3296-39	Nut - Lock	2
18	61-9760	Wheel - Deck	2
19	56-6590	Bolt - Wheel	2
20	322-3	Screw - Cap Hex. Hd.	6
21	67-0710	Ball - Swivel	1
22	67-0730	Post - Mount, Brake	1
23	67-0740	Spacer - Brake, Deck	1
24	3296-29	Nut - Lock	9

Ref. No.	Part No.	Description	No. Used
25	67-0970	Hub - Spindle	1
26	80-4360	Shield - Bearing	1
27	80-4340	Shaft - Spindle	1
28	26-0671	Bolt - Blade	1
29	3290-465	Washer - Belleville	1
30	80-4530	Blade	1
31	80-4380	Spacer - Spindle	1
32	67-1440	Spring - Brake	1
33	32109-14	Nut - Wing	1
34	3234-21	Screw - Cap Hex. Hd.	1
35	80-4450	Cover - Recycler	1
36	80-4510	Kicker	4
37	16-2199	Deck (Incl. Ref. #42)	1
38	321-4	Screw - Cap Hex. Hd.	9
39	67-1600-01	Bracket - Deflector	1
40	3296-59	Nut - Lock	1
41	3296-42	Nut - Lock	9
42	76-4070	Decal - Danger	1
43	32144-111	Screw - Special	8
44	92-9522	Decal - Recycler	1
45	80-4540-03	Ring - Deck, Recycler	4
46	68-3650	Decal - Warning	1
47	83-6610	Tab - Hold Down	1

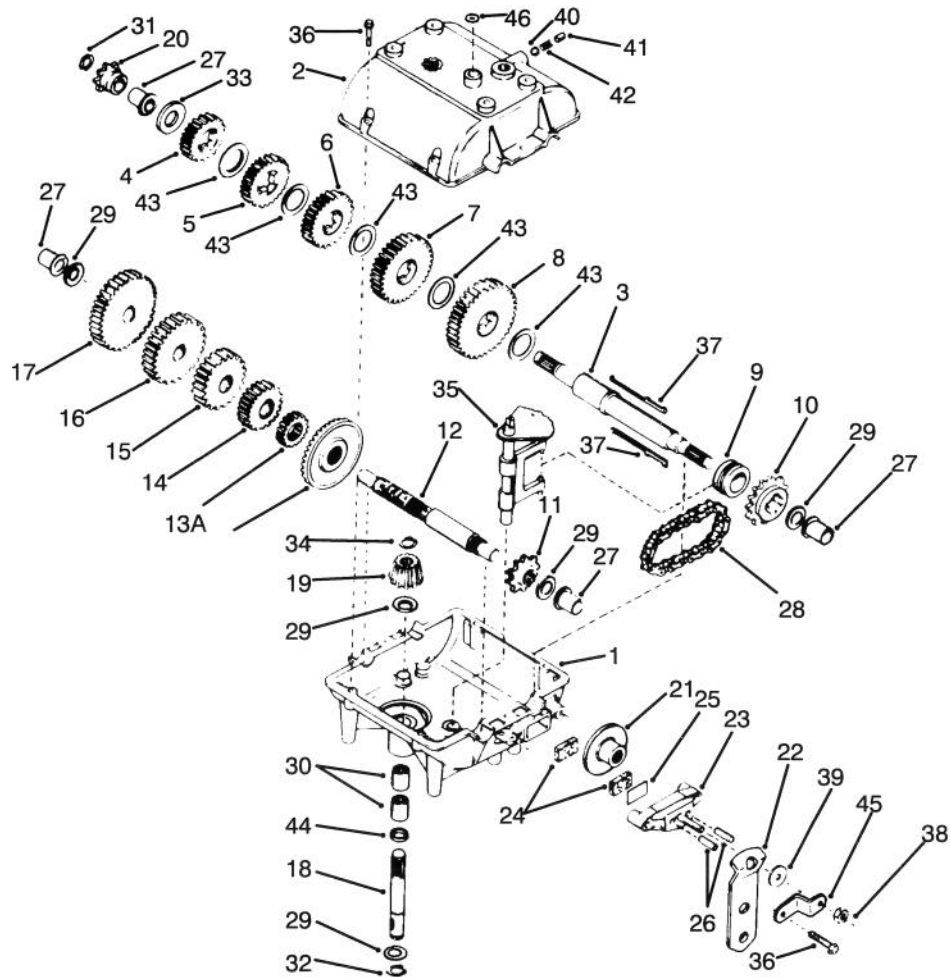 


C-0441

TRANSMISSION PEERLESS MODEL 700-025

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	770061	Case - Transmission	1	24	790006	Pad - Brake	2
2	772083	Cover - Transmission	1	25	790007	Plate - Pad, Brake	1
3	776217	Shaft - Output	1	26	786026	Pin - Dowel	2
4	778121A	Gear - Spur (20 Teeth)	1	27	780105A	Bushing - Flange	4
5	778122A	Gear - Spur (22 Teeth)	1	28	786081	Chain - Roller (No. 41 Chain, 24 Links)	1
6	778123A	Gear - Spur (25 Teeth)	1	29	780072	Washer - Thrust	5
7	778124A	Gear - Spur (30 Teeth)	1	30	780086	Bearing - Needle	2
8	778125	Gear - Spur (35 Teeth)	1	31	792072	Ring - Retaining	1
9	784266	Collar - Shift	1	32	792035	Ring - Retaining	1
10	786083	Sprocket (18 Teeth)	1	33	780109	Washer	1
11	786082	Sprocket (9 Teeth)	1	34	788040	Ring - Retaining	1
12	776134	Shaft - Counter	1	35	784267	Assy. Rod & Fork - Shift	1
13	788137A	Gear - Bevel (42 Teeth)	1	36	792073	Screw - Thread Forming	8
13A	778136	Gear - Spur (15 Teeth)	1	37	792089A	Key	2
14	778126A	Gear - Spur (20 Teeth)	1	38	792075	Nut - Lock	1
15	778127A	Gear - Spur (25 Teeth)	1	39	792076	Washer	1
16	778128A	Gear - Spur (28 Teeth)	1	40	792077	Ball - Steel	1
17	778129A	Gear - Spur (30 Teeth)	1	41	792078	Screw - Set	1
18	776135	Shaft - Input	1	42	792079	Spring	1
19	778113A	Bevel - Pinion, Input	1	43	780108	Washer - Thrust	5
20	786047	Sprocket (8 Teeth)	1	44	792001	O-Ring	1
21	790003	Disk - Brake	1	45	786086	Bracket - Lever, Brake	1
22	790008A	Lever - Brake	1	46	788069	Seal - Square Cut	1
23	790025	Holder - Pad, Brake	1				

 BRIGGS & STRATTON MODEL NO. 195707-0121-01

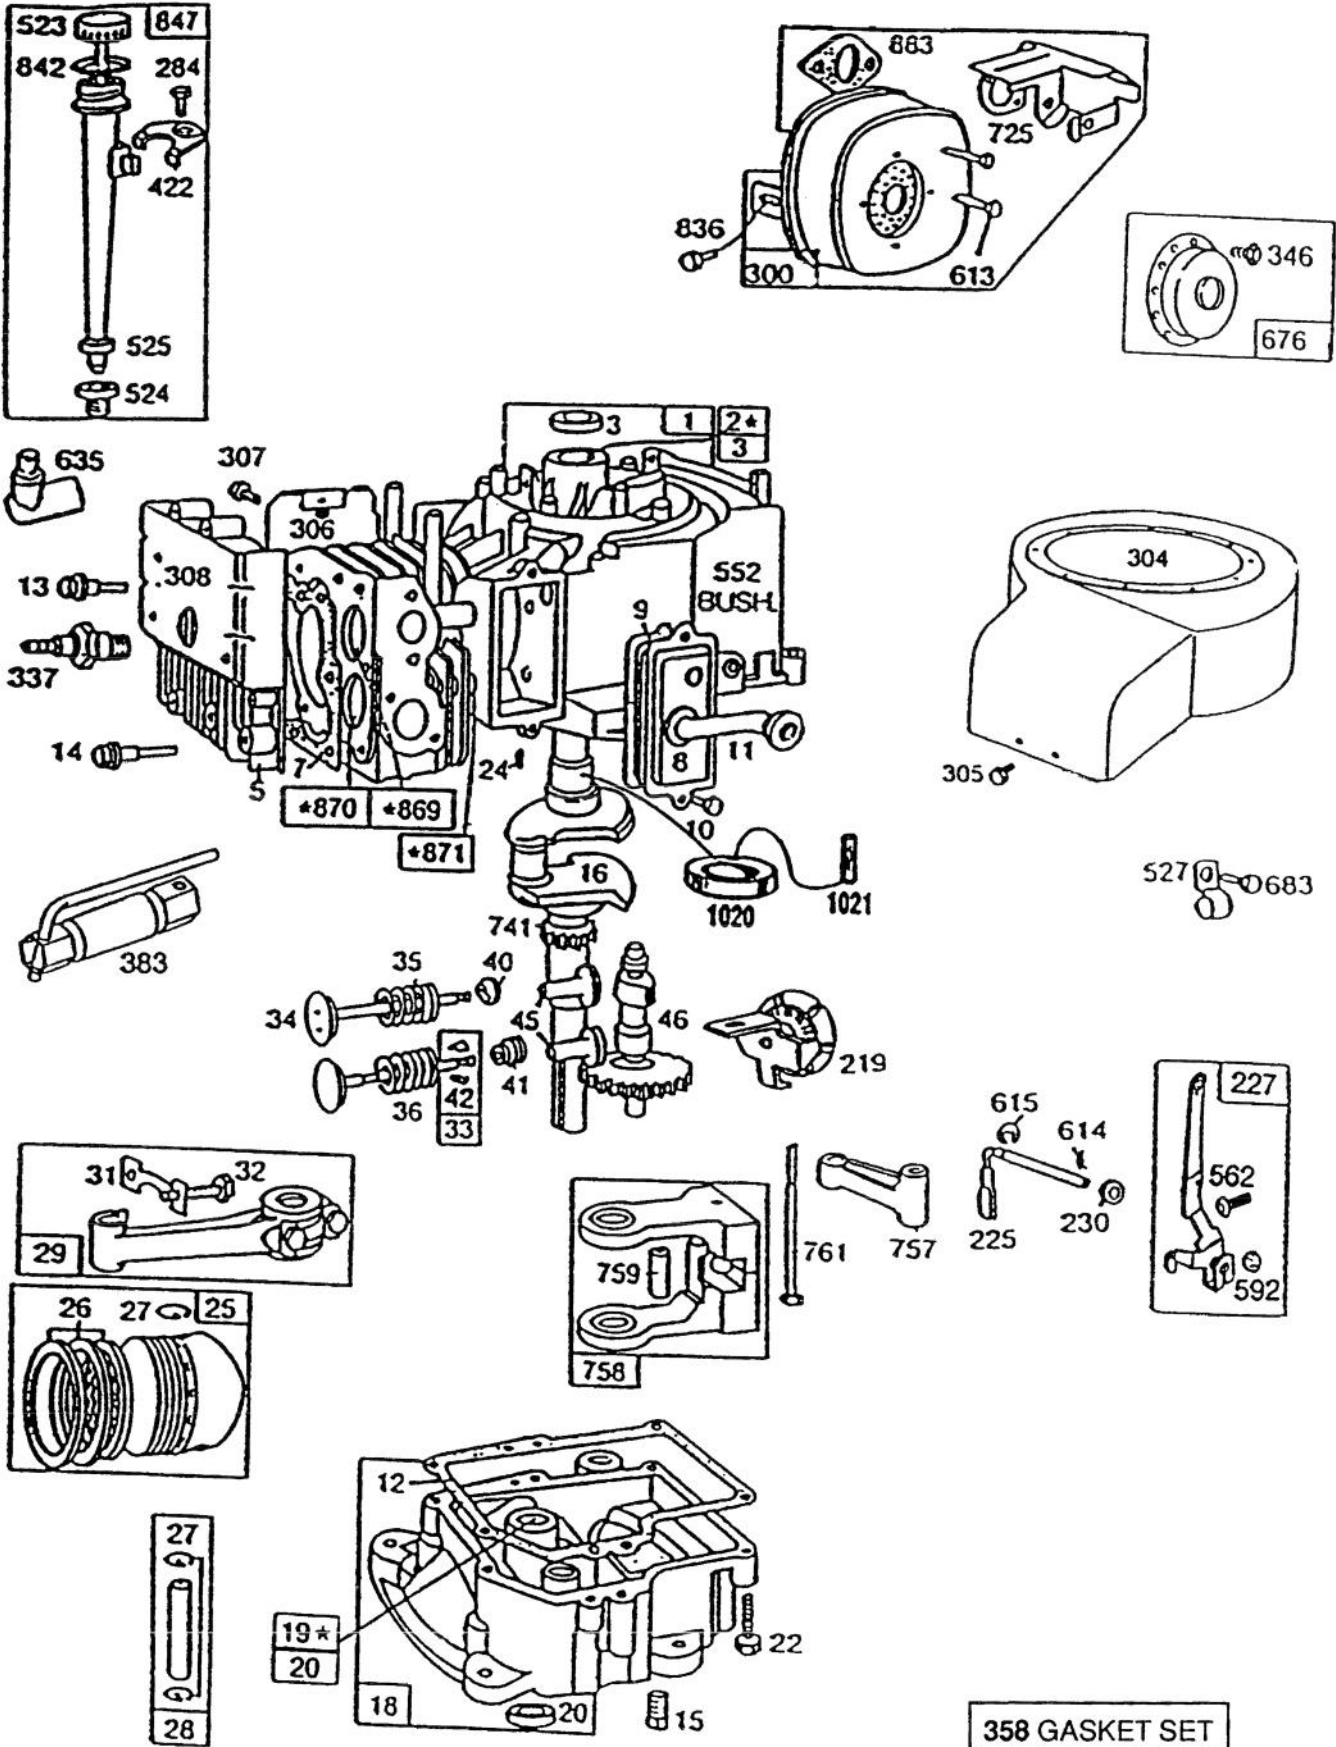

* REQUIRES SPECIAL TOOLS TO INSTALL.
SEE REPAIR INSTRUCTION MANUAL.

Assemblies include all parts shown in frames.

BRIGGS & STRATTON MODEL NO. 195707-0121-01

Ref. No.	Part No.	Description	No. Used
1	396269	Assembly - Cylinder	1
2	399267	Bearing - Cylinder Note: Requires special tools for installation.	1
3	294606	Seal - Oil	1
5	212286	Head - Cylinder	1
*7	272163	Gasket - Head, Cylinder	1
8	391406	Assembly - Breather	1
*9	27803	Gasket - Cover, Valve	1
10	94621	Screw	1
11	280005	Tube - Breather	1
*12	271701	Gasket - Cover, Crankcase 1/64" Thick	1
*	27876	Gasket - Cover, Crankcase .005" Thick	1
*	27877	Gasket - Cover, Crankcase .009" Thick	1
13	94565	Screw - Head, Cylinder	1
14	93723	Screw - Head, Cylinder (3" Long)	1
15	94239	Plug - Drain, Oil	1
16	396876	Crankshaft Note: Order Part 94388 for timing gear pin replacement.	1
18	392548	Base - Engine	1
19	295963	Bushing - Base, Engine Note: Requires special tool for installation.	1
20	391086	Seal - Oil	1
22	93585	Screw - Base, Mounting	1
24	222698	Key - Flywheel	1
25	391673	Assy. - Piston, Std.	1
	391674	Assy. - Piston, .010" O.S.	1
	391675	Assy. - Piston, .020" O.S.	1
	391676	Assy. - Piston, .030" O.S. PISTON RING SETS Note: For Chrome Piston Ring Set - Standard Size - Order No. 299743.	1
26	391669	Ring Set - Piston, Std.	1
	391670	Ring Set - Piston, .010" O.S.	1
	391671	Ring Set - Piston, .020" O.S.	1
	391672	Ring Set - Piston, .030" O.S.	1
27	68546	Lock - Piston Pin	1
28	295840	Assy. - Piston Pin, Std.	1
	295841	Assy. - Piston Pin, .005" O.S.	1
29	390402	Assy. - Rod, Connecting Note: For Connecting Rod with .020" Undersize Crankpin Bore - Order No. 390773.	1
31	222114	Lock - Screw, Conn. Rod	1

Ref. No.	Part No.	Description	No. Used
32	92659	Screw - Connecting Rod	1
33	390419	Valve - Exhaust	1
34	261055	Valve - Intake	1
35	65906	Spring - Valve, Intake	1
36	26828	Spring - Valve, Exhaust	1
40	221596	Retainer - Valve, Intake	1
41	292260	Rotocoil - Valve, Exhaust	1
42	93630	Retainer - Valve, Exhaust Rotocoil	2
45	260933	Tappet - Valve	1
46	211689	Gear - Cam	1
225	231058	Crank - Gov. (1/4" Dia.)	1
227	43935	Assy. Lever - Governor for 1/4" Dia. Crank	1
230	222450	Washer - Lever, Governor (1/4" Inside Diameter)	1
284	94419	Screw - Clamp, Mounting	1
300	398507	Muffler - Exhaust	1
304	494084	Housing - Blower	1
305	94608	Screw - Blower Hsg., Sems	1
306	224543	Shield - Cylinder	1
307	93949	Screw - Shield, Cylinder	1
308	222636	Cover - Head, Cylinder	1
337	802592	Plug - Spark	1
346	93705	Screw	1
358	299577	Gasket Set	1
383	89838	Wrench - Spark Plug	1
422	223394	Clamp - Tube, Oil Filler	1
523	391840	Cap & Dipstick - Oil Filler	1
524	68838	Seal - Tube, Filler	1
525	280133	Tube - Filler, Oil	1
527	221428	Clamp	1
552	491986	Bushing - Crank, Gov.	1
562	92613	Bolt - Lever, Governor	1
592	231082	Nut - Hex.	1
613	94042	Screw - Muffler	1
614	93306	Pin - Hair, Cotter	1
615	93307	Retainer - E-Ring	1
635	66538	Elbow - Plug, Spark	1
676	395700	Deflector - Exhaust	1
683	93572	Screw	1
725	223540	Shield - Muffler	1
741	262479	Gear - Timing	1
757	212359	Link - Counterweight	1
758	390172	Assy. - Counterweight	1
759	298909	Pin - Counterweight	1
761	93874	Screw - Counterweight	1
836	93559	Screw	1
842	270920	Seal - Cap, Filler	1
847	392066	Filler Group - Oil	1
869	211661	Seat - Valve, Intake (Std.)	1
870	211661	Seat - Valve, Exhaust (Std.)	1
871	231218	Guide - Exhaust or Intake Valve, See repair manual	1
883	272309	Gasket - Pipe, Exhaust	1
1020	261190	Eccentric	1
1021	94160	Pin - Eccentric	1

*Included in Gasket Set - Part No. 299577.

BRIGGS & STRATTON MODEL NO. 195707-0121-01


Ref. No.	Part No.	Description	No. Used
223	391983	Flywheel and Ring Gear Assy. - Magneto (Incl. Aluminum Ring Gear)	1
*#51	272465	Gasket - Carburetor (Carb. to Elbow)	1
‡52	270824	Gasket - Carb. Mtg.	1
53	94637	Stud - Gasket Mtg.	1
75	224061	Washer - Spring	1
78	93805	Screw - Sem	1
*95	94098	Screw - Throttle	1
98	494382	Screw - Idle Speek	1
*104	231789	Pin - Float Hinge	1
*105	231790	Valve Assy. - Inlet Needle	1
*106	281169	Inlet Valve Seat	1
108	224540	Valve - Choke	1
118	494383	Valve - Needle	1
121	494880	Carburetor Overhaul Kit	1
123	94616	Screw - Carburetor Mtg.	1
125	494894	Carburetor Assembly	1
*127		Plug - Welch (Kit Only)	1
130	224668	Valve - Throttle	1
131	494885	Shaft & Lever - Throttle	1
133	494381	Float - Carburetor	1
*#137	281165	Gasket - Float Bowl	1
*#138	281164	Washer - Float Bowl	1
141	494380	Shaft & Lever - Choke	1
*142	494877	Nozzle - Carburetor	1
*147	231794	Screw - Nozzle	1
164	213819	Carburetor Elbow	1
201	262769	Link - Governor	1
209	260871	Spring - Governor	1
216	262768	Link - Choke	1
222	493896	Plate - Gov. Plate	1
224	94513	Screw - Sem	1
232	262787	Spring - Governor Link	1
258	94620	Screw - Hex. Tapping	1
265	221535	Clamp - Casing	1
284A	94326	Screw - Brace Mtg.	1

Ref. No.	Part No.	Description	No. Used
309		Motor - Starting (12 Volt) See Chart for Replacement Parts for Starting Motor on Illustrated Pages	1
332	92284	Nut - Flywheel	1
333	398811	Armature Assembly	1
334	93381	Screw - Armature Mtg. Sem	1
356	494328	Wire - Ground	1
363	19165	Puller - Flywheel	1
423	94073	Screw - Sem	1
455	222561	Cup - Screen Mounting	1
468	222562	Screen - Flush Rotating	1
482	93621	Screw - Sem	1
535	272405	Element - Foam Air Cleaner	1
537	281106	O-Ring - Air Cleaner	1
611	494451	Fuel Inlet Tube	1
618	262803	Spring - Choke Return	1
*634	281168	Seal - Choke Shaft	1
*634A	281167	Washer - Throttle Shaft	1
646	224614	Brace - Air Cleaner	1
657	93496	Screw - Sem	1
663	94419	Screw	1
726	392134	Gear - Ring (Aluminum) (Incl. Mtg. Parts)	1
727	395405	Cover - Starter (Incl. Mtg. Screws)	1
728	93535	Screw - Sem	1
729	281159	Clip - Lead Wire	1
851	221798	Terminal - Ignition Cable	1
872	281108	Cover - Air Cleaner	1
875	494745	Body - Air Cleaner	1
877	393814	Diode & Connector Assy.	1
887	391529	Stator Assembly - Alternator (D.C.)	1
955	94642	Screw - Fuel Bowl	1
965	94108	Nut - Lock	1
975	494378	Bowl Assy. - Carburetor	1
*987	281166	Seal - Throttle Shaft	1

*Included in Carburetor Overhaul Set - Part No. 494880.

‡Included in Carburetor Gasket Set - Part No. 494385.

 ‡Included in Gasket Set - Part No. 299577.

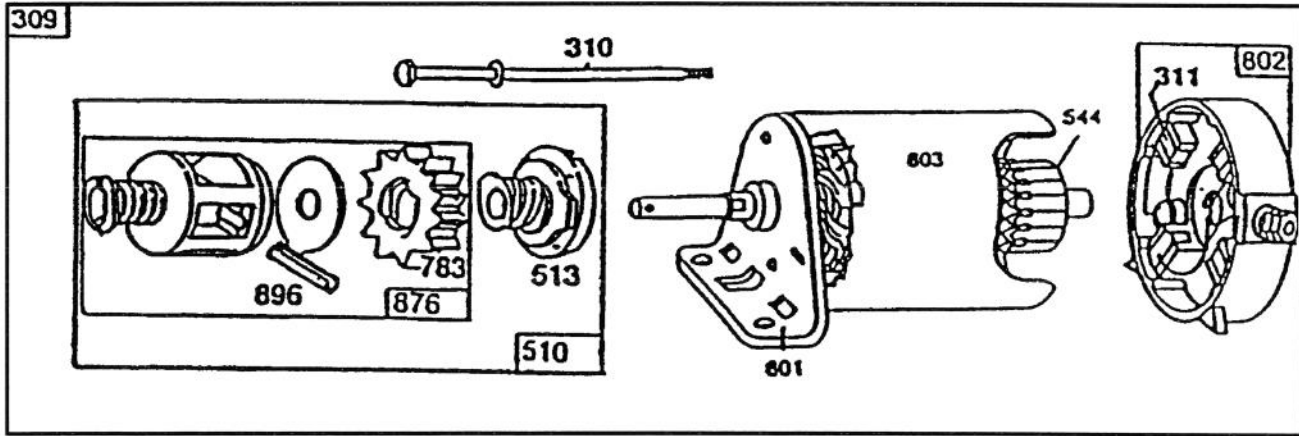

C-0784

STARTER – BRIGGS & STRATTON NO. 195707-0121-01

Ref. No.	Part No.	Description	No. Used
309	394805	Assembly – Motor & Drive	1
310	94003	Assembly – Thru Bolt	2
311	395538	Assembly – Brush	2
510	490421	Assembly – Drive (Incl. Ref. #513, 783, 876 & 896)	1
513	398003	Assembly – Clutch	1
544	390837	Assembly – Armature	1
783	280104	Gear	1

Ref. No.	Part No.	Description	No. Used
801	394856	Assembly – End Cap	1
802	395537	Assembly – Commutator, End Cap	1
803	398159	Assembly – Housing (3-21/32" Long)	1
876	490467	Kit – Retainer	1
896	94288	Pin – Roll	1

TORO PART NUMBER INDEX

3317-113

Part No.	Description	Pg. Ref. No. No.	Qty.	Part No.	Description	Pg. Ref. No. No.	Qty.
110513	Bearing	4 16	4	66-6630-03	Support L.H.	10 12	1
147665	Screw - Tapping	6 42	2	66-6640	Control - Throttle	5 34	1
11-0410	Kit - Tire Chains (Optional)	10 *	1	66-6680	Seat	3 1	1
12-5820	Pulley - Idler, Traction	6 25	1	66-6920	Pad - Isolator	3 17	2
12-9020	Retainer - Belt	6 21	1	67-0010-03	Lift W.A. - Front, Deck	2 5	1
13-6049	Kit - Loose parts	2 *	1	67-0050-01	Tube W.A. - Support, Rear	2 11	1
16-2199	Deck	12 37	1	67-0080	Link - H.O.C.	5 23	1
18-2970	R-Clamp	3 4	1	67-0090-03	Bracket - Link, H.O.C.	2 10	1
19-1470	Bolt - Shoulder	1 18	1	67-0140	Post - Pivot	12 4	1
19-1610-03	Lever - Brake, Parking	1 19	1	67-0231-01	Body W.A. - Rear	5 13	1
19-1970	Spring - Brake, Parking	1 13	1	67-0270	Handle W.A. - H.O.C.	5 21	1
19-2200	Tip - Brake, Parking	1 20	1	67-0300-01	Lever W.A. - H.O.C.	2 18	2
20-3220	Washer - Flat	7 66	2	67-0330-03	Idler - Plate, Mount	6 30	1
23-0660	Switch - Ignition	5 36	1	67-0360	Bracket - Arm, Idler	6 27	1
26-0671	Bolt - Blade	12 28	1	67-0400	Mount - Pivot	6 19	1
26-6700	Spring - Return, Brake	6 10	1	67-0410	Spacer - Pivot	6 16	1
26-9530	Washer - Pivot	1 8	1	67-0420-03	Plate - Mount, Idler	6 18	1
28-0540	Bolt - Shoulder	5 18	1	67-0430	Rod - Clutch	2 6	1
28-2480	Washer - Flat	4 2	2	67-0440	Spacer - Steering	2 32	1
28-8010	Spring	12 1	1	67-0450-01	Frame W.A. - Front	2 25	1
38-1420	Switch - Seat	3 3	1	67-0520-01	Channel - R.H.	2 3	1
38-7820	Bearing - Ball	12 11	2	67-0530-01	Channel - L.H.	2 24	1
40-8200	Switch - Micro	5 27	1	67-0540-03	Tube W.A. - Pivot	6 6	1
44-7030	Tread - Foot Rest	1 3	2	67-0570	Rod W.A. - Brake, Deck	12 16	1
44-7140-01	Mount - Bearing, Axle	2 2	1	67-0600-03	Lever W.A. - Deck Engage	6 45	1
44-9760	Rim	10 2	2	67-0640	Handle - Deck Engage	6 46	1
46-2511	Bolt - Axle	10 22	2	67-0660	Bracket - Mount, Shifter	7 65	1
46-2511	Bolt - Mounting, Axle	2 19	2	67-0670	Bracket - Engage, Deck	7 62	1
47-1480	Mount - Bearing	10 7	2	67-0690-03	Flat - Deck Engage	6 3	1
47-1490	Bearing	10 13	2	67-0710	Ball - Swivel	12 21	1
47-2964	Hose - Gas	3 9	2	67-0730	Post - Mount, Brake	12 22	1
47-2986	Hose - Gas	3 5	1	67-0740	Spacer - Brake, Deck	12 23	1
48-4700	Relay	5 17	1	67-0750	Bracket - Mount, Spring	6 43	1
49-3242	Wheel - Steering	2 34	1	67-0790-03	Support W.A. - Seat	5 10	1
54-3091	Assembly - Wire	8 17	2	67-0800-01	Spindle - R.H.	4 15	1
54-9220	Decal - Danger	12 3	1	67-0810-01	Spindle - L.H.	4 12	1
55-3576	Assembly - Cap, Gas	3 8	1	67-0830-03	Shaft W.A. - Steering	2 26	1
55-7101	Tower	1 22	1	67-0850	Bushing - Steering	2 29	2
55-7762	Axle - R.H.	11 1	1	67-0860	Washer - Steering	2 30	1
55-7763	Axle - L.H.	11 7	1	67-0870	Bolt - Shoulder	5 22	2
55-7770	Cap - End, R.H.	11 3	1	67-0870	Bolt - Shoulder	2 27	2
55-7771	Cap - End, L.H.	11 5	1	67-0880	Assembly - Tie Rod	4 11	2
55-7780	Case - Gear, Transfer	11 4	1	67-0900	Belt - Traction	6 39	1
56-2540	Tube - Drain	8 6	1	67-0910	Chain	10 10	1
56-6360	Filter	3 10	1	67-0920	Guide - Belt	8 20	1
56-6590	Bolt - Wheel	12 19	2	67-0920	Guide - Belt	6 35	1
56-7620	Lever - Shift	7 52	1	67-0930	Guide R.H. - Belt, Engine	6 8	1
56-7710	Hold Down - Battery	8 7	1	67-0940	Guide L.H. - Belt, Engine	6 14	1
56-7720	Post - Hold Down, Battery	8 5	1	67-0950	Strap - Tank, Gas	3 6	2
56-7730	Spring	7 57	1	67-0962-01	Guard - Chain	8 22	1
56-7740	Spacer	7 58	1	67-0970	Hub - Spindle	12 25	1
56-9870	Pulley - Idler, Deck	6 29	1	67-0990	Axle - Front	4 9	1
56-9960	Differential	10 11	1	67-1030	Cover - Panel, Control	5 42	1
56-9960	Differential - Complete	11 *	1	67-1070-01	Body W.A. - Front	1 15	1
61-9760	Wheel - Deck	12 18	2	67-1090-01	Support W.A. - Seat	5 29	1
61-9780	Cap - Hub	4 1	2	67-1130-03	Pedal - Brake & Clutch	1 14	2
61-9980	Screw - Adjusting	10 20	1	67-1151	Deflector	12 2	1
61-9990	Plate - Adjusting	10 4	1	67-1241	Base - Seat	3 2	1
62-3660	Spacer - Bearing	12 13	1	67-1270	Decal - Panel, Control	5 39	1
62-3760	Screw - Cap Hex. Hd.	8 16	1	67-1330-03	Lever - Brake, Bellcrank	1 10	1
62-4300	Pad - Anti-Skid	8 13	1	67-1340	Rod - Brake, Transmission	1 9	1
63-8360	Key	5 40	2	67-1350	Rod - Front, Brake	1 12	1
65-2920	Pad - Pedal	1 17	2	67-1370	Assy. - Brake, Deck	12 14	1
66-6620-03	Support R.H.	10 21	1	67-1390	V-Belt	12 10	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref.		Part No.	Description	Pg. Ref.	
		No.	Qty.			No.	Qty.
67-1400	Transmission	7	49	1	233-22	Knob	7 47 1
67-1430	Spring - Compression	1	7	1	233-48	Knob	7 55 1
67-1440	Spring - Brake	12	32	1	233-59	Knob	5 35 1
67-1450	Spring - Extension	1	11	1	2412-98	Clamp - Hose	3 11 5
67-1460	Washer - Flat	2	15	2	256-90	Bushing	6 5 3
67-1480	Brace - Support, Seat	5	8	2	256-155	Bushing	6 28 1
67-1500-03	Bar - Stand	5	5	1	2710-11	Link - Connecting	10 9 1
67-1510-03	Brace - Stop, Deck	2	13	2	282-27	Clevis	2 7 1
67-1530	Assembly - Pin, Clevis	7	70	1	282-27	Clevis	7 71 1
67-1590	Bracket - Brake Return	1	6	1	283-67	Pin - Clevis	6 33 1
67-1600-01	Bracket - Deflector	12	39	1	288-2	Cap - Pipe	8 29 1
67-9170	Spring	6	31	1	289-34	Nipple - Pipe	8 30 1
68-3650	Decal - Warning	12	46	1	2811-17	Elbow - Street	8 31 1
68-8370	Link - Deck Engage	6	4	1	2812-1	Reducer	8 32 1
68-8380	Spacer - Stop, Deck	2	17	2	302-5	Fitting - Grease	4 4 4
68-9950	Spring - Traction	6	15	1	321-4	Screw - Cap Hex. Hd.	10 8 4
71-8310	Spring - Prop, Seat	5	1	1	321-4	Screw - Cap Hex. Hd.	8 9 2
76-1580-03	Guide - Chain	10	17	2	321-4	Screw - Cap Hex. Hd.	6 17 2
76-1620	Decal - Instruction	1	1	1	321-4	Screw - Cap Hex. Hd.	12 38 9
76-3820	Anchor - Guide, Belt	7	75	2	321-8	Screw - Cap Hex. Hd.	7 59 1
76-3860	Decal	7	77	1	321-15	Screw - Cap Hex. Hd.	7 56 1
76-3920	Decal - H.O.C./Deck	5	24	1	322-3	Screw - Cap Hex. Hd.	2 1 6
76-3940-03	Lever W.A. - Shift	7	54	1	322-3	Screw - Cap Hex. Hd.	5 9 4
76-3970	Spacer - Pivot	7	69	1	322-3	Screw - Cap Hex. Hd.	3 14 4
76-4010	Sprocket	10	18	1	322-3	Screw - Cap Hex. Hd.	12 20 6
76-4070	Decal - Danger	12	42	1	322-3	Screw - Cap Hex. Hd.	6 34 5
76-4080	Decal	2	36	1	322-5	Screw - Cap Hex. Hd.	5 7 4
76-4090-01	Plate - Engine	6	13	1	322-6	Screw - Cap Hex. Hd.	6 11 1
76-4660	Spring	7	76	1	322-6	Screw - Cap Hex. Hd.	12 15 2
80-2600	Battery 12V	8	8	1	322-7	Screw - Cap Hex. Hd.	8 19 3
80-4330	Prop - Seat	5	32	1	322-10	Screw - Cap Hex. Hd.	6 37 1
80-4340	Shaft - Spindle	12	27	1	322-10	Screw - Cap Hex. Hd.	8 21 1
80-4360	Shield - Bearing	12	26	1	322-12	Screw - Cap Hex. Hd.	8 12 1
80-4380	Spacer - Spindle	12	31	1	322-14	Screw - Cap Hex. Hd.	2 23 2
80-4450	Cover - Recycler	12	35	1	322-22	Screw - Cap Hex. Hd.	11 6 4
80-4460	Pulley - Deck	12	8	1	322-22	Screw - Cap Hex. Hd.	12 7 1
80-4510	Kicker	12	36	4	323-8	Screw - Cap Hex. Hd.	6 26 1
80-4520	Guide - Belt	12	12	1	323-10	Screw - Cap Hex. Hd.	2 16 2
80-4530	Blade	12	30	1	323-9	Screw - Cap Hex. Hd.	6 24 1
80-4540-03	Ring - Deck, Recycler	12	45	4	329-4	Screw - Cap Hex. Hd.	7 53 1
80-4550	Rod - Base, Seat	5	33	1	3218-1	Nut - Jam	5 16 2
80-4560	Spacer	8	11	1	3218-2	Nut - Jam	7 72 1
80-4580	Tank - Gas	3	7	1	3219-6	Nut - Hex.	12 9 1
82-6450	Pulley - Transmission	6	40	1	3230-2	Bolt - Carriage	6 12 1
83-4840	Pulley - Engine	8	14	1	3230-3	Bolt - Carriage	5 3 2
83-6610	Tab - Hold Down	12	47	1	3230-20	Bolt - Carriage	5 11 1
84-8470	Cap - Battery	8	33	6	3230-20	Bolt - Carriage	3 16 6
88-9810-03	Gate - Shift	7	50	1	3231-4	Bolt - Carriage	10 3 2
88-9840	Insert - Wheel, Steering	2	35	1	3231-25	Bolt - Carriage	10 6 4
88-9870	Harness - Wire	9	1	1	3234-21	Screw - Cap Hex. Hd.	12 34 1
88-9930	Switch - Micro	7	63	1	3245-32	Screw - Set	10 14 4
92-7978	Decal - Horsehead	3	18	1	3253-3	Washer - Lock	7 60 1
92-7979	Decal - Toro L.H.	5	12	1	3253-4	Washer - Lock	6 36 1
92-7980	Decal - Toro R.H.	5	*	1	3254-5	Washer - Lock, Int. Tooth	5 37 1
92-7981	Decal - Toro	1	21	1	3255-7	Washer - Lock, Int. Tooth	8 1 1
92-9522	Decal - Recycler	12	44	1	3255-7	Washer - Lock, Int. Tooth	5 15 2
92-9845	Solenoid	5	31	1	3255-8	Washer - Lock	8 28 4
217-80	Rim	4	5	2	3256-14	Washer - Flat	5 45 1
218-461	Nut - Hex.	5	38	1	3256-22	Washer - Flat	5 4 1
231-115	Tire	10	1	2	3256-22	Washer - Flat	7 61 5
231-116	Tire	4	3	2	3256-23	Washer - Flat	8 3 4
232-27	Valve Stem w/Cap	4	17	2	3256-23	Washer - Flat	5 6 4
232-27	Valve Stem w/Cap	10	23	2	3256-23	Washer - Flat	6 9 3
233-22	Knob	5	25	1	3256-23	Washer - Flat	3 15 8

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3317-113

Part No.	Description	Pg. Ref.			Part No.	Description	Pg. Ref.		
		No.	No.	Qty.			No.	No.	Qty.
3256-23	Washer - Lock	12	6	3	3296-29	Nut - Lock	12	24	9
3256-24	Washer - Flat	10	16	4	3296-29	Nut - Lock	8	24	5
3256-24	Washer - Flat	6	22	3	3296-39	Nut - Lock	6	1	1
3256-25	Washer - Flat	8	15	1	3296-39	Nut - Lock	2	12	5
3256-26	Washer - Flat	4	13	1	3296-39	Nut - Lock	10	15	6
3256-29	Washer - Flat	2	21	2	3296-39	Nut - Lock	12	17	2
3256-55	Washer - Fender	7	48	2	3296-39	Nut - Lock	5	20	1
3257-23	Key	6	41	1	3296-42	Nut - Lock	10	5	5
3272-6	Pin - Cotter	6	2	1	3296-42	Nut - Lock	6	20	5
3272-6	Pin - Cotter	2	9	2	3296-42	Nut - Lock	5	30	2
3272-12	Pin - Cotter	4	18	2	3296-42	Nut - Lock	12	41	9
3272-23	Pin - Cotter	2	20	2	3296-59	Nut - Lock	6	23	2
3274-4	Pin - Cotter	5	43	1	3296-59	Nut - Lock	12	40	1
3274-4	Pin - Cotter	6	32	1	32103-14	Nut - Wing	8	4	1
3290-134	Screw - Cap Mach. Hd.	5	46	1	32103-22	Nut - Wing	8	10	2
3290-250	Pin - Hair, Cotter	2	22	1	32104-110	Screw - Cap Hex. Hd.	1	4	4
3290-250	Pin - Hair, Cotter	1	16	2	32109-14	Nut - Wing	12	33	1
3290-313	Screw - Pan Head	5	26	2	32120-64	Ring - Retaining	6	38	1
3290-347	Nut - U-Type	1	5	4	32121-32	Pin - Roll	2	31	1
3290-354	Nut - Double	5	28	1	32121-78	Pin - Roll	2	33	1
3290-354	Nut - Double	7	74	1	32144-14	Screw - Self Tapping	8	18	1
3290-355	Pin - Hair, Cotter	2	14	2	32144-14	Screw - Wash. Hd., Tap.	7	51	4
3290-378	Tie - Cable	3	13	1	32144-26	Screw - Thread Forming	7	73	1
3290-413	Washer - Belleville	5	19	7	32144-42	Screw - Hex. Hd. Tapping	5	41	4
3290-413	Washer - Belleville	2	28	4	32144-70	Screw - Hex. Hd. Tapping	6	44	1
3290-456	Washer - Belleville	7	68	2	32144-111	Screw - Special	12	43	8
3290-465	Washer - Belleville	12	29	1	32151-48	Ring - Retaining	4	6	2
3290-478	Washer - Belleville	7	64	2	32151-62	Ring - Retaining	7	67	1
3296-2	Nut - Lock	5	44	1	32152-1	Nut - Lock	11	2	4
3296-4	Nut - Lock	4	8	4					
3296-8	Nut - Lock	12	5	2					
3296-25	Nut - Lock	4	14	1					
3296-29	Nut - Lock	1	2	5					
3296-29	Nut - Lock	5	2	11					
3296-29	Nut - Lock	2	4	16					
3296-29	Nut - Lock	6	7	8					
3296-29	Nut - Lock	3	12	4					
3296-29	Nut - Lock	10	19	6					

OPTIONAL EQUIPMENT

- Easy Empty Bagging Kit Model No. 79090
- Twin Bag Bagger Kit Model No. 79080
- Tire Chains Part No. 11-0410
- Hi-Sail Blade Part No. 67-0200

