 




MODEL NO. 70142-5900001 & UP	PARTS CATALOG
WHEEL HORSE® 11-32 RIDING MOWER	

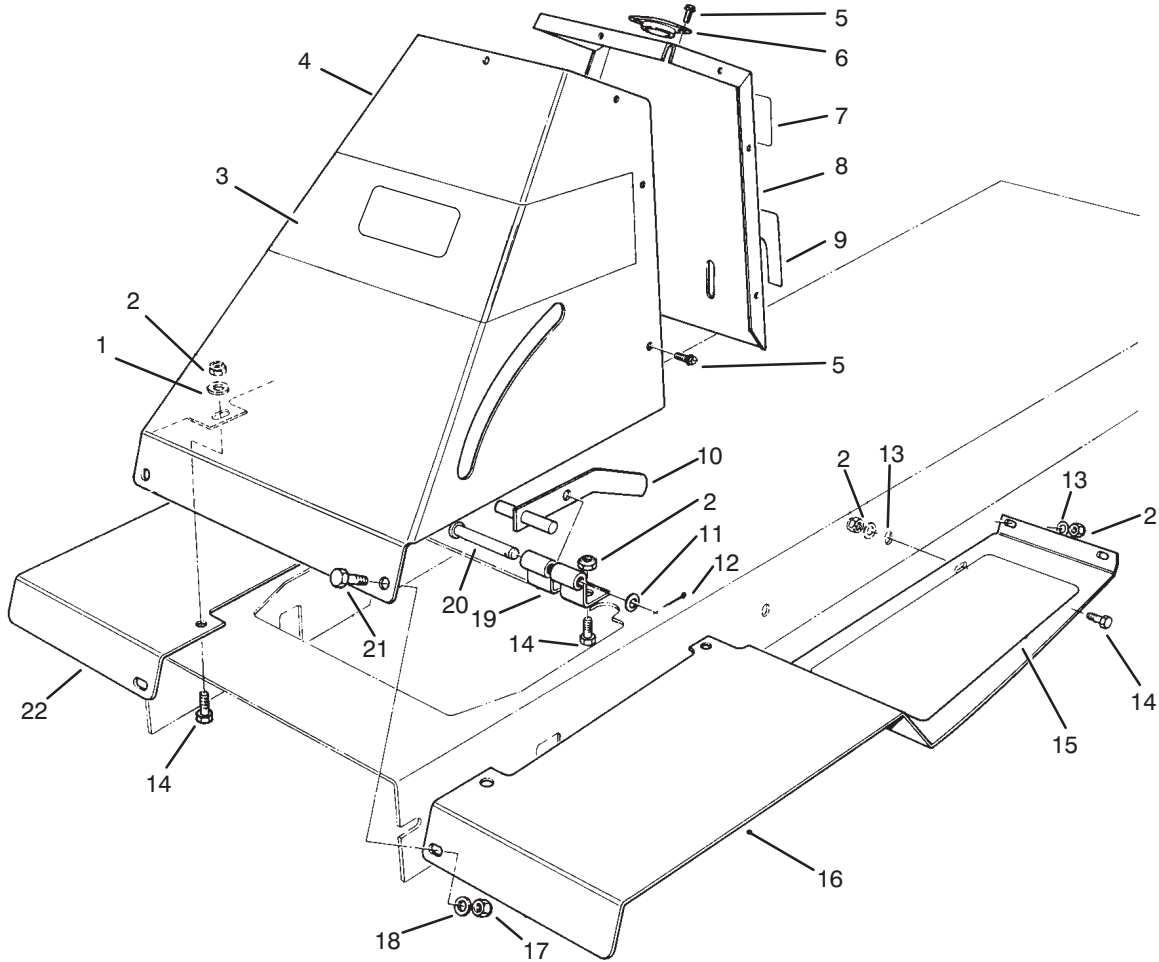


C-1933

FRONT TOWER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3256-35	Washer - Flat	4	14	322-5	Screw - Cap Hex. Hd.	10
2	3296-29	Nut - Lock	14	15	92-7975	Tread - Foot L.H.	1
3	92-7987	Decal - Recycler	1	*	92-7974	Tread - Foot R.H.	1
4	56-7130	Tower - Front	1	16	47-0940	Footrest - L.H.	1
5	32104-76	Screw - Self Tap Acorn Hd.	9	17	3296-42	Nut - Lock	2
6	56-7170	Guide - Shaft, Steering	1	18	3256-22	Washer - Flat	2
7	79-0370	Decal - Danger	1	19	47-2060	Bracket - Brake, Parking	1
8	56-7140	Tower - Rear	1	20	283-52	Pin - Clevis	1
9	56-7810	Decal - Brake, Parking	1	21	321-4	Screw - Cap Hex. Hd.	2
10	47-1290	Brake - Parking	1	22	47-0930	Footrest - R.H.	1
11	3256-24	Washer - Flat	1	*	12-8829	Loose Parts	1
12	3272-6	Pin - Cotter	1	*	12-8819	Loose Parts	1
13	3256-23	Washer - Flat	8			(Includes Steering Wheel)	1

 *Not Illustrated

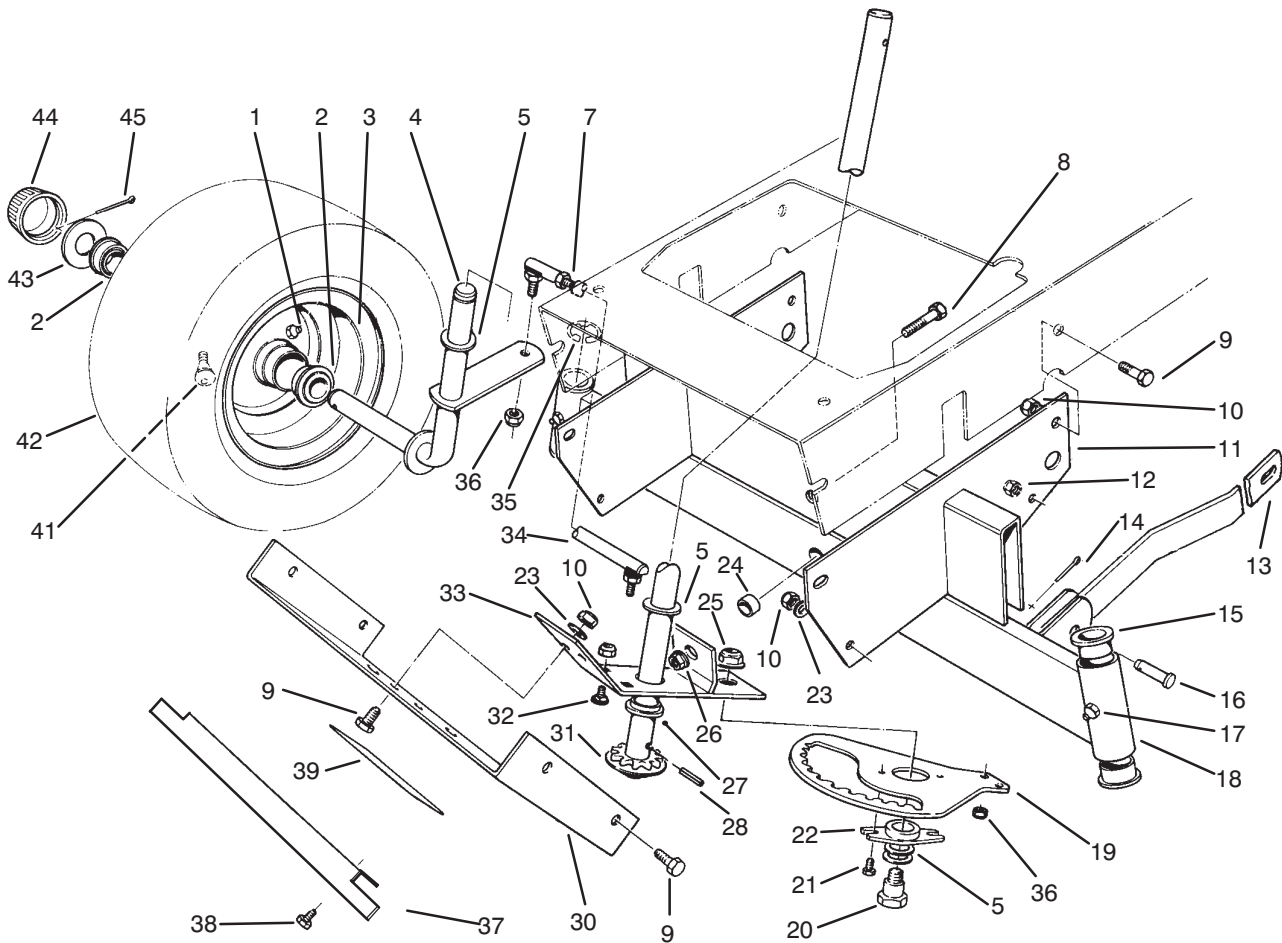

C-0438B


FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	302-5	Fitting - Grease	2
2	251-210	Bearing	4
3	217-80	Rim	2
4	47-0600	Spindle - R.H.	1
*	47-0590	Spindle - L.H.	1
5	3-6498	Washer - Thrust	5
7	3220-2	Nut - Hex. Jam	1
8	325-6	Screw - Cap Hex. Hd.	1
9	322-5	Screw - Cap Hex. Hd.	8
10	3296-29	Nut - Lock	8
11	47-0760	Support - Axle, Front	1
12	3296-8	Nut - Lock	1
13	47-0010	Arm - Suspension, Front	2
14	3272-6	Pin - Cotter	2
15	27-9080	Bearing - Flange	4
16	283-2	Pin - Clevis	2
17	302-49	Fitting - Grease	2
18	80-2430	Axle - Front (Incl. Ref. #15 & 17)	1
19	80-2450	Rack - Steering	1
20	56-7530	Bolt - Shoulder	1
21	32144-4	Screw - Special	2
22	56-7520	Bushing - Sector	1
23	3256-23	Washer - Flat	6

Ref. No.	Part No.	Description	No. Used
24	28-0380	Spacer - Axle, Front	1
25	32128-21	Nut - Lock, Flange Hd.	1
26	32128-23	Nut - Lock, Flange Hd.	1
27	47-0700	Bearing - Flange	1
28	32121-9	Pin - Roll	1
30	56-7180	Cover - Front	1
31	56-7500	Shaft - Steering	1
32	3230-18	Bolt - Carriage	2
33	56-7470	Bracket - Rack, Steering (Incl. Ref. #27)	1
34	47-0610	Tie Rod - Adjustable (Incl. Ref. #7)	1
*	80-2460	Tie Rod - Fixed	1
35	32151-48	Ring - Retaining, External	2
36	3296-4	Nut - Lock	4
37	92-0876	Guard - Front	1
38	32144-14	Screw - Thread Forming	2
39	92-7989	Decal - Important	1
41	232-27	Valve Stem w/Cap	2
42	231-116	Tire	2
43	28-2480	Washer	2
44	61-9780	Cap - Hub	2
45	3272-12	Pin - Cotter	2
†	232-44	Tube - Inner	2

*Not Illustrated

 †Service Replacement Part

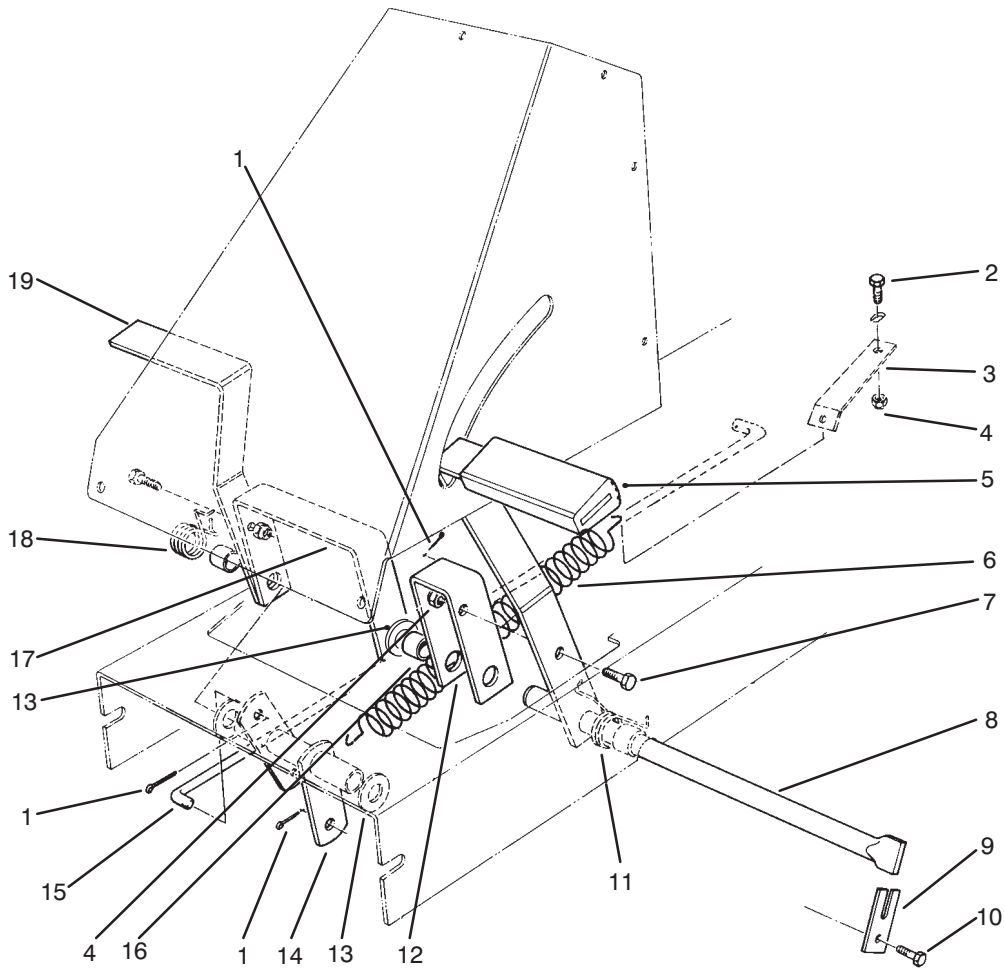


C-0439A

BRAKE & CLUTCH ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3272-6	Pin - Cotter	3
2	322-5	Screw - Cap Hex. Hd.	1
3	56-7240	Bracket - Retaining, Spring	1
4	3296-29	Nut - Lock	3
5	65-2920	Pad - Pedal, Foot	2
6	62-3930	Spring - Extension	1
7	322-5	Screw - Cap Hex. Hd.	2
8	47-0770	Shaft - Pivot, Pedal	1
9	47-0780	Retainer - Shaft	1
10	321-4	Screw - Cap Hex. Hd.	1

Ref. No.	Part No.	Description	No. Used
11	56-7070	Spring - Torsion, Clutch	1
12	47-0560	Bracket - Clutch, Pedal	1
13	3256-27	Washer - Flat	3
14	56-7650	Tube - Pivot	1
15	56-7570	Rod - Engagement	1
16	47-0570	Spacer - Pedal	3
17	47-0550	Bracket - Brake, Pedal	1
18	56-7080	Spring - Torsion, Brake	1
19	47-0540	Pedal	2

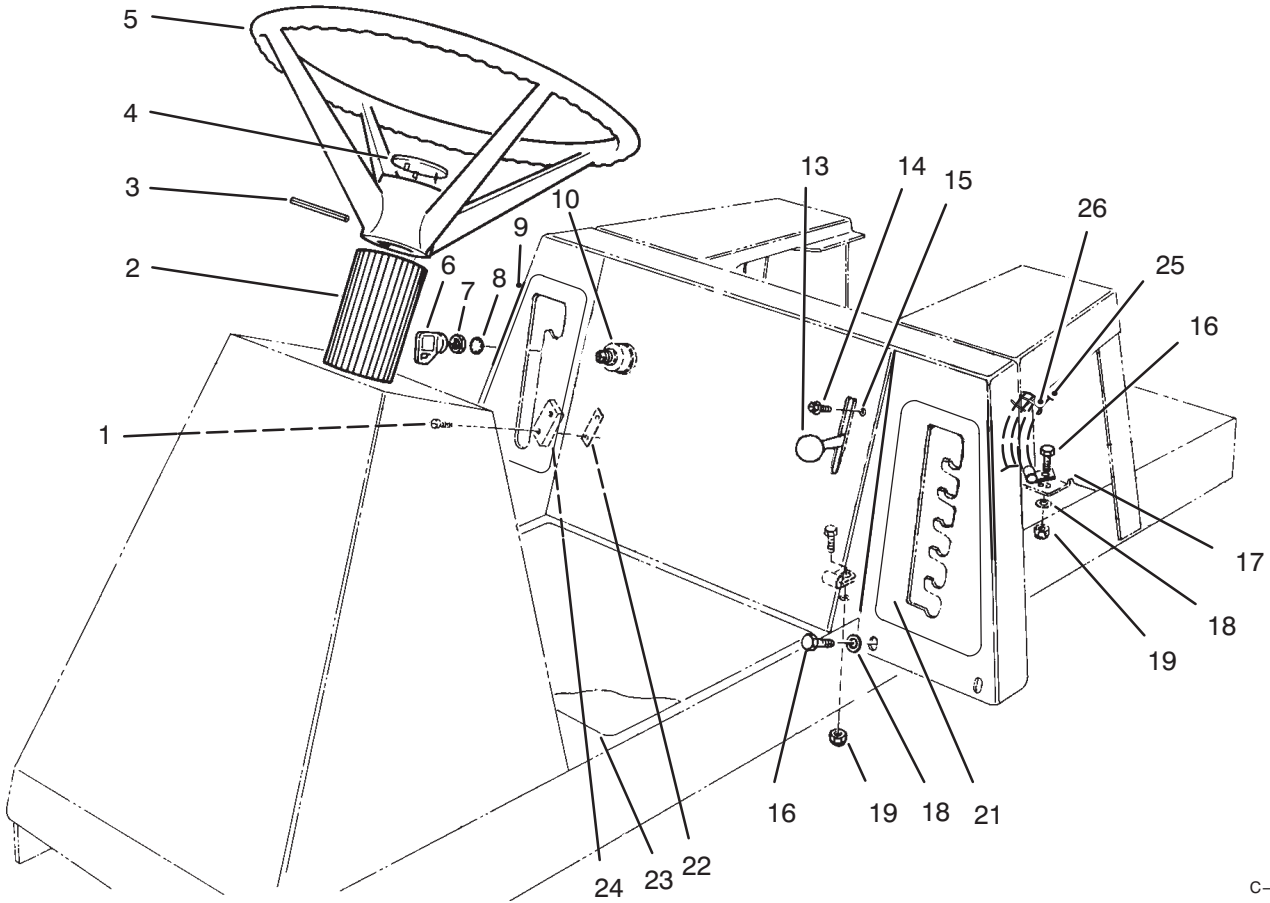 


C-2119

STEERING WHEEL, SWITCHES & DECALS

Ref. No.	Part No.	Description	No. Used
1	147665	Screw – Phillips Head	2
2	66-6740	Cover – Shaft, Steering	1
3	32121-78	Pin – Roll	1
4	92-7990	Insert – Wheel, Steering	1
5	49-3242	Assy. – Wheel, Steering (Incl. Ref. #4)	1
6	63-8360	Key	1
7	218-461	Nut – Lock	1
8	3254-5	Washer – Lock, Int. Tooth	1
9	92-7983	Decal – Deck Engage	1
10	88-9830	Switch – Ignition (Incl. Ref. #6-8)	1
13	233-25	Knob	1


Ref. No.	Part No.	Description	No. Used
14	32104-76	Screw – Self-Tapping	2
15	92-0890	Control – Throttle (Incl. Ref. #13)	1
16	322-5	Screw – Cap Hex. Hd.	8
17	8830	Clamp	2
18	3256-23	Washer – Flat	7
19	3296-29	Nut – Lock	4
21	92-7984	Decal – H.O.C.	1
22	3290-354	Nut – Double	1
23	76-1090	Decal – Instructions	1
24	88-9931	Switch – Micro	1
25	54-3090	Wire Assembly	1
26	3290-378	Tie – Cable	1

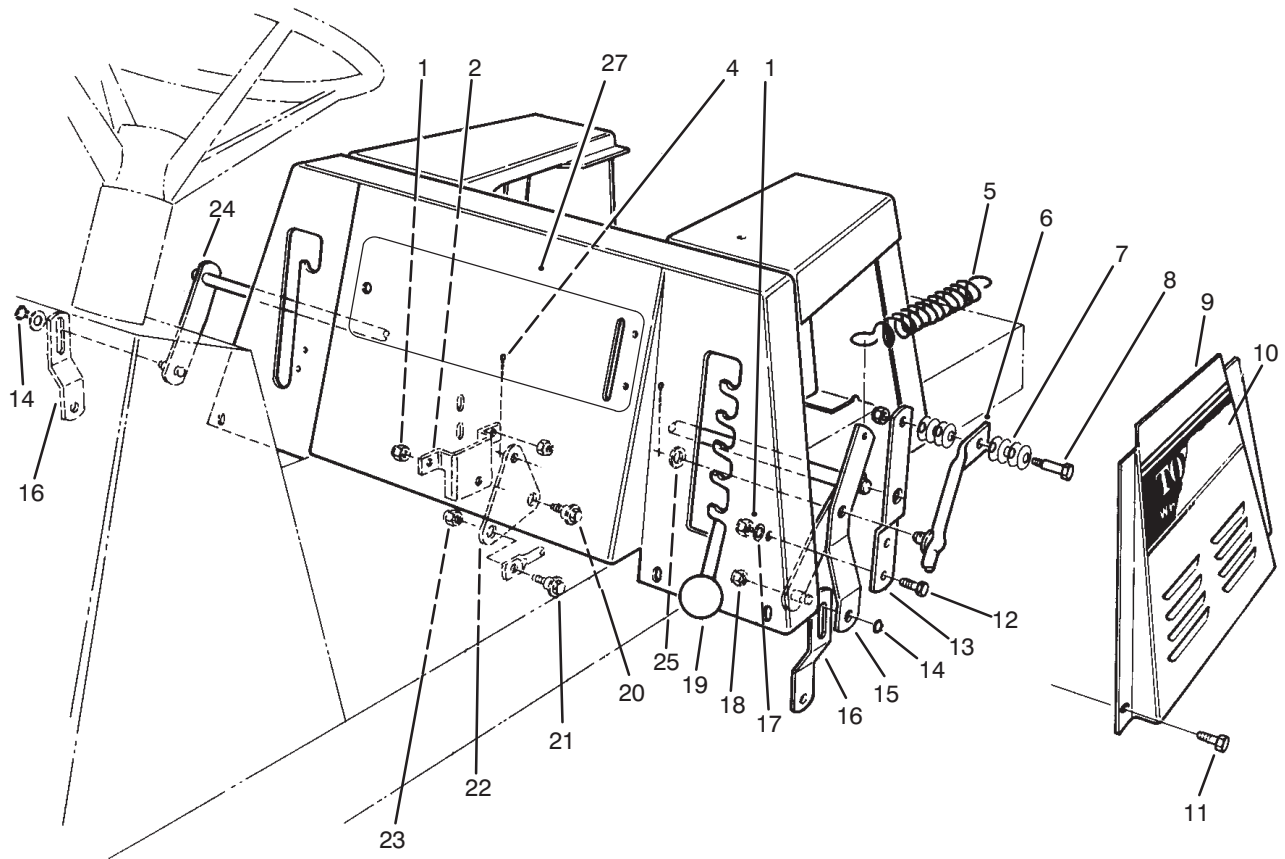 

C-1935A

LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3296-29	Nut - Lock	7	15	80-2321	Bracket - H.O.C., Engage	1
2	80-2310	Bracket - Bell Crank Mount	1	16	63-5830	Link - Suspension, Deck	2
4	3272-6	Pin - Cotter	2	17	3256-23	Washer - Flat	4
5	62-3930	Spring - Extension	1	18	3296-42	Nut - Lock	1
6	47-1850	Lever - Height-of-Cut	1	19	233-48	Knob	1
7	3290-413	Washer - Belleville	8	20	19-1470	Bolt - Shoulder	1
8	28-0540	Bolt - Shoulder	1	21	65-5670	Bolt - Shoulder	1
9	92-0878	Panel L.H. - Base, Seat	1	22	80-2360	Crank - Bell, Deck Engage	1
10	93-1194	Decal - L.H.	1	23	3296-8	Nut - Lock	1
11	321-4	Screw - Cap Hex. Hd.	4	24	56-7400	Arm - Lever, H.O.C.	1
12	322-5	Screw - Cap Hex. Hd.	2	25	3256-26	Washer - Flat	1
13	47-1840	Bracket - Height-of-Cut	1	27	92-7982	Decal - Control Panel	1
14	32151-61	Ring - Retaining	2				

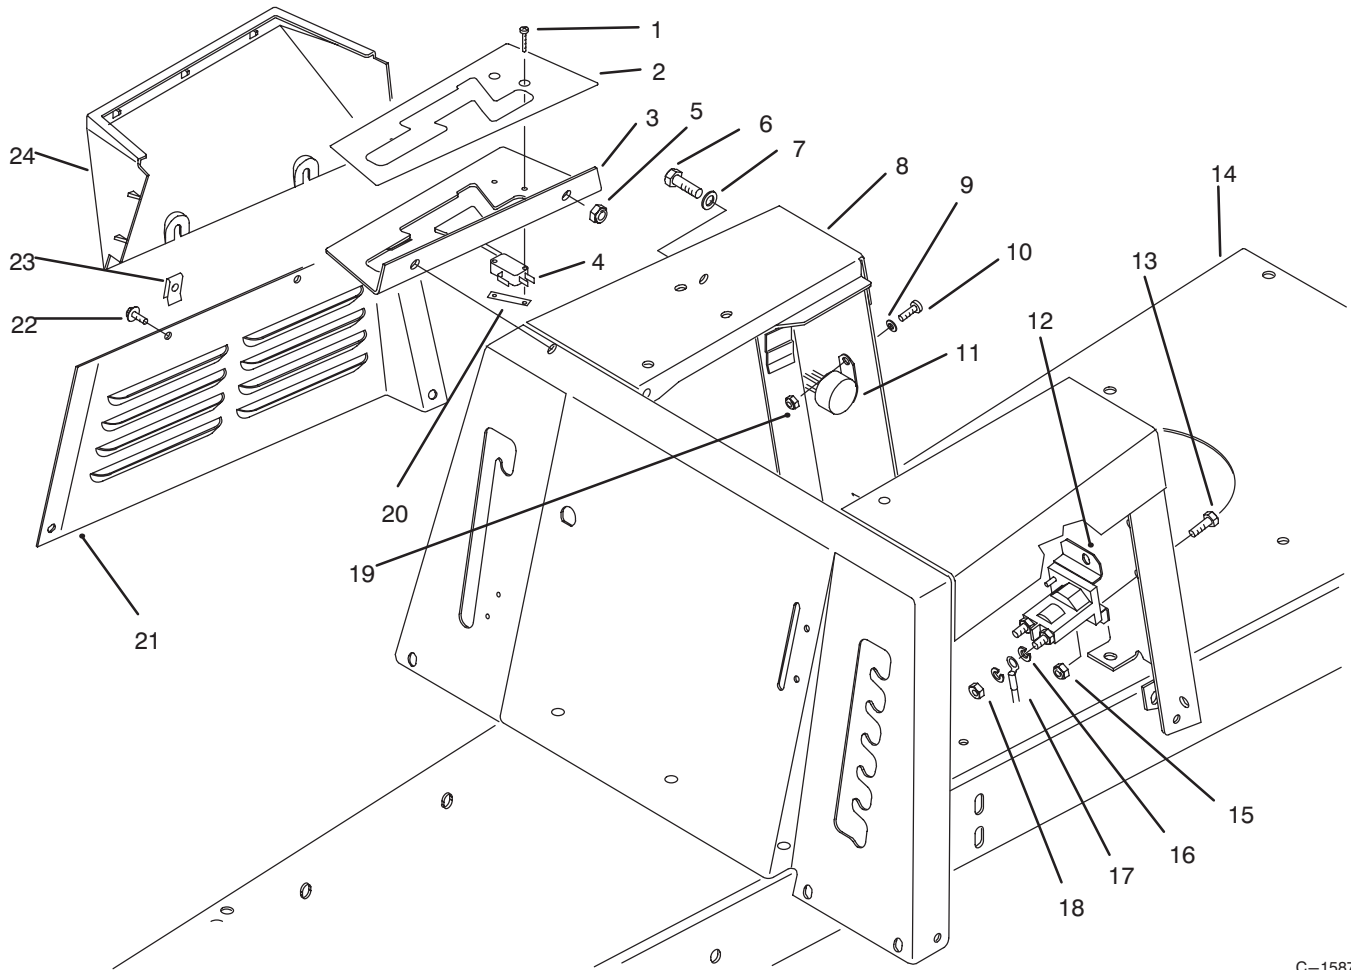 


C-1587

SEAT BODY & SIDE PANEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	147665	Screw – Phillips Hd.	2
2	92-1751	Decal – Shift Pattern	1
3	92-0895	Gate – Shift	1
4	88-9930	Switch – Micro, Short	1
5	3296-29	Nut – Lock	2
6	322-5	Screw – Cap Hex. Hd.	2
7	3256-23	Washer – Flat	2
8	92-0866	Body W.A. – Seat Support	1
9	3256-14	Washer – Flat	1
10	3290-134	Screw – Machine	1
11	48-4700	Module – Interlock	1
12	47-1910	Solenoid	1
13	321-4	Screw – Cap Hex. Hd.	2


Ref. No.	Part No.	Description	No. Used
14	92-0860	Frame	1
15	3296-42	Nut – Lock	2
16	3253-3	Washer – Lock	4
17	56-7670	Cable – Positive	1
18	3218-1	Nut – Jam	2
19	3296-2	Nut – Lock	1
20	3290-354	Nut – Double	1
21	92-0877	Panel – Seat Base, R.H.	1
22	32144-112	Screw – Sems	2
23	3290-191	Nut – Speed	2
24	88-9800	Cover – Gate, Shift	1

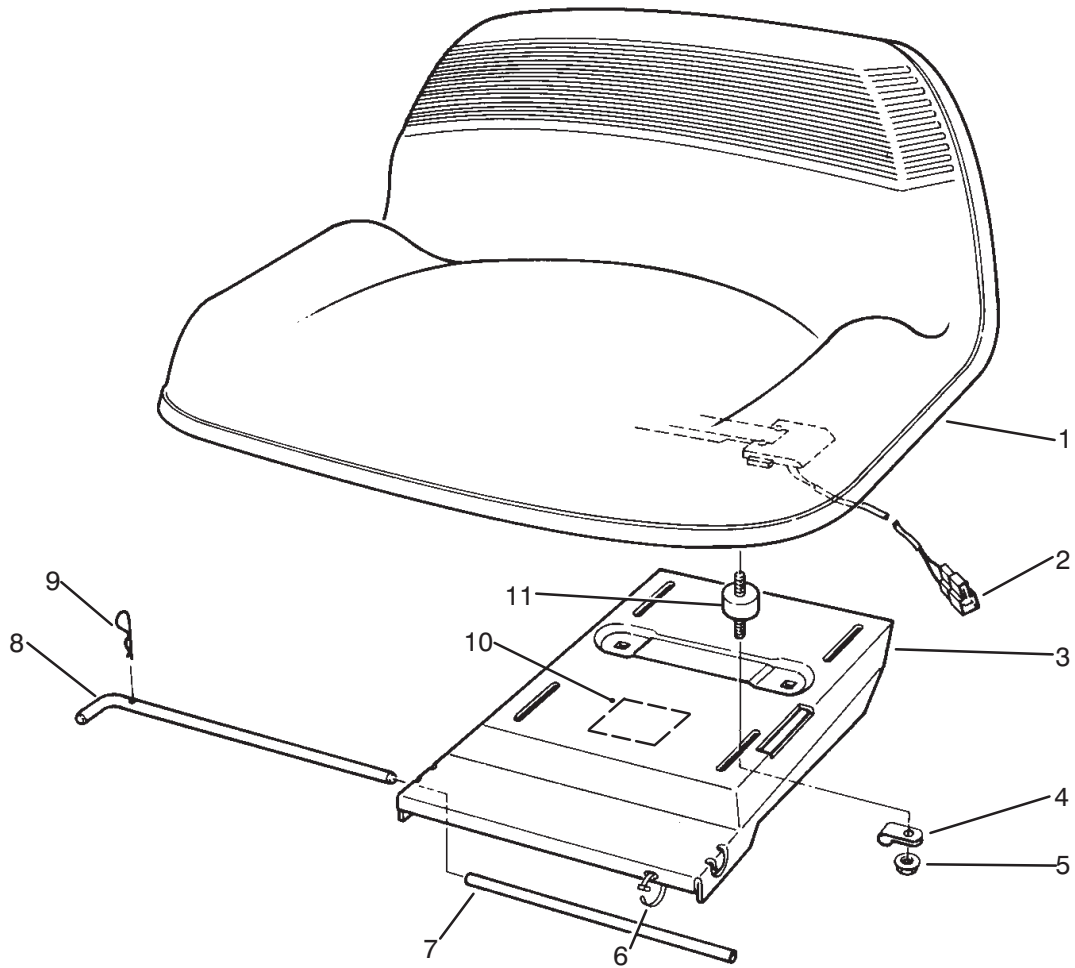 

C-0745A

SEAT ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	88-3950	Assembly - Seat	1	7	63-5670	Tube - Bumper, Seat Rod	1
2	38-1420	Switch - Interlock	1	8	80-2620	Rod - Base, Seat	1
3	63-5540	Base - Seat	1	9	3290-307	Pin - Cotter, Hair	1
4	2412-68	Clamp - Wire	1	10	114621	Decal - Euro Noise	1
5	32128-20	Nut - Flange Hd.	4	11	62-5480	Isolator - Seat	4
6	3290-378	Tie - Cable	1				

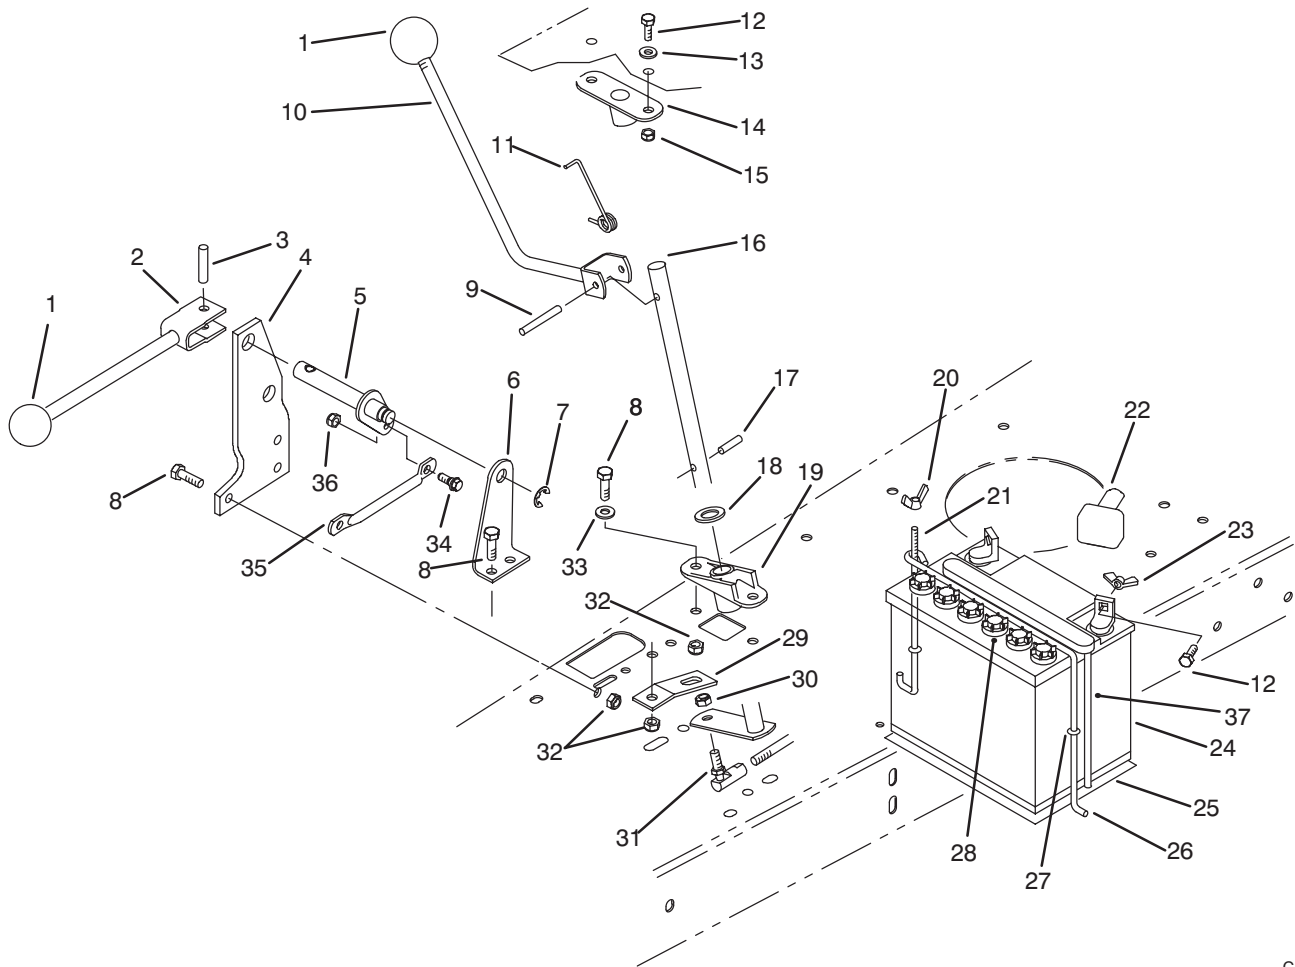 


C-1601

TRANSMISSION LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	233-48	Knob	2
2	80-2400	Lever W.A. - Engage	1
3	32121-25	Pin - Roll	1
4	80-2350	Pivot - Outer	1
5	80-2370	Shaft W.A. - Pivot	1
6	80-2340	Bracket - Pivot, Inner	1
7	32120-47	Ring - Retaining	1
8	322-5	Screw - Cap Hex. Hd.	4
9	32121-78	Pin - Roll	1
10	92-0884	Lever W.A. - Shaft	1
11	92-0894	Spring - Torsion	1
12	321-4	Screw - Cap Hex. Hd.	2
13	3256-22	Washer - Flat	2
14	92-0888	Support - Shift, Upper	1
15	3296-42	Nut - Lock	2
16	92-0891	Shaft W. A. - Shift	1
17	32121-16	Pin - Roll	1
18	257-11	Washer	1
19	92-0887	Support - Shift, Lower	1

Ref. No.	Part No.	Description	No. Used
20	32103-12	Nut - Wing	1
21	56-7720	Post - Battery	1
22	28-8080	Boot - Terminal	1
23	32103-22	Nut - Wing	2
24	80-2600	Battery - 12 Volt (Incl. Ref. #28 & 37)	1
25	62-4300	Pad - Battery	1
26	56-7710	Hold Down - Battery	1
27	237-143	O-Ring	2
28	218-560	Cap - Battery	6
29	92-0896	Retainer - Spring	1
30	3296-4	Nut - Lock	1
31	2411-32	Ball Joint	1
32	3296-29	Nut - Lock	4
33	3256-23	Washer - Flat	2
34	65-5670	Screw - Shoulder	1
35	80-2330	Link - Bell Crank	1
36	3296-8	Nut - Lock	1
37	56-2540	Tube - Vent, Battery	1

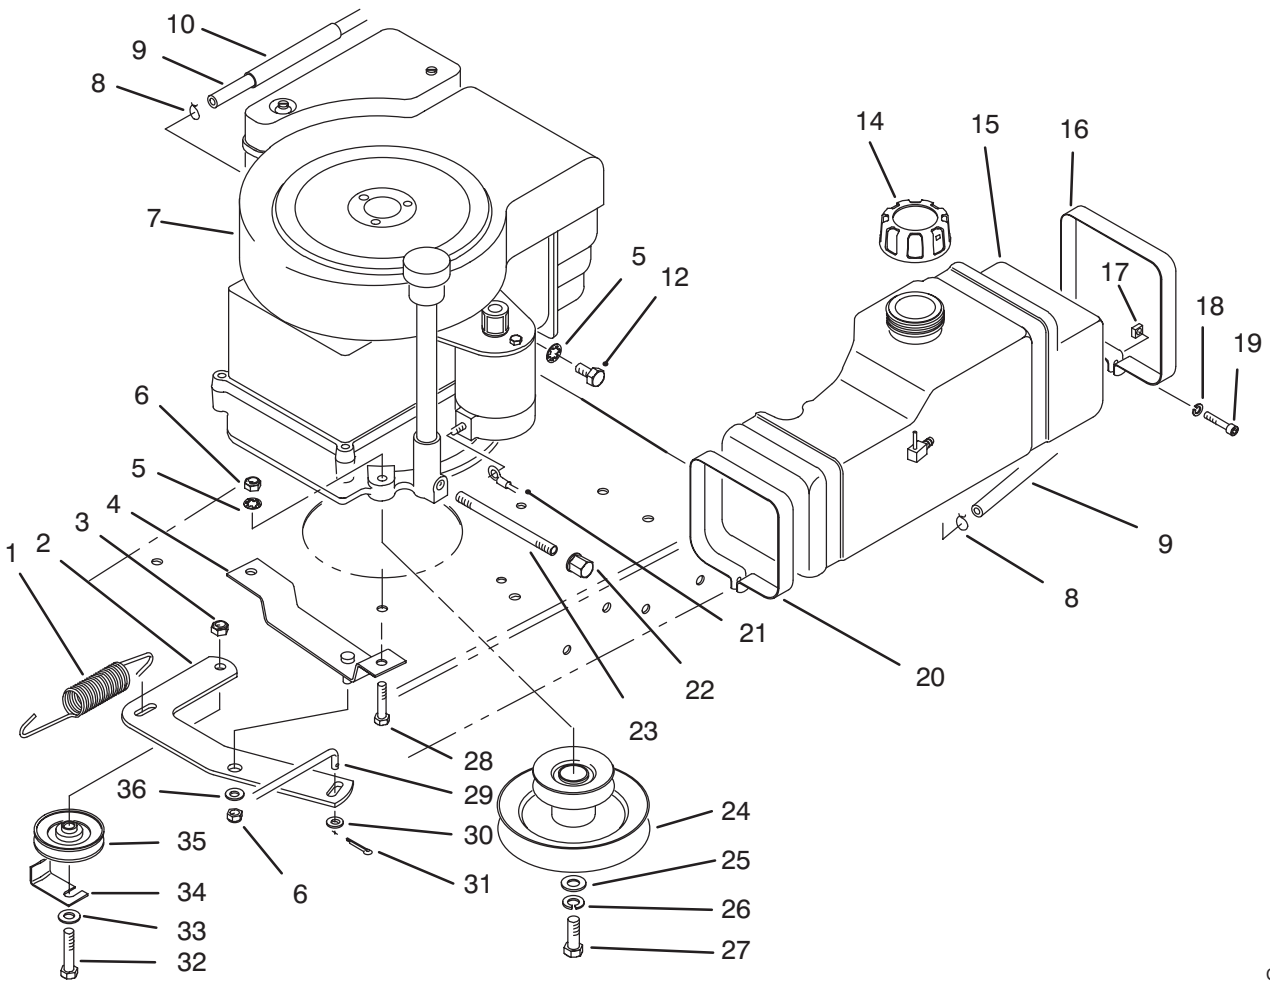 


C-1937


ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-0879	Spring	1	21	56-7670	Cable - Battery, Positive	1
2	92-0883	Plate - Mounting, Idler	1	22	288-10	Cap - Pipe	1
3	3296-39	Nut - Lock	1	23	289-19	Nipple - Pipe	1
4	92-0881	Bracket W.A. - Traction	1	24	92-0873	Pulley - Engine	1
5	3254-2	Washer - Lock, Int. Tooth	4	25	3256-25	Washer - Flat	1
6	3296-29	Nut - Lock	2	26	3253-6	Washer - Lock	1
7		Engine - 11.5 H.P.	1	27	62-3760	Screw - Cap Hex. Hd.	1
8	2412-98	Clamp - Hose	2	28	322-7	Screw - Cap Hex. Hd.	1
9	47-2961	Hose - Fuel Line	1	29	92-0871	Rod - Traction	1
10	62-5490	Support - Fuel Line	1	30	3256-22	Washer - Flat	1
12	32144-14	Screw	2	31	3272-6	Pin - Cotter	1
14	55-3570	Cap - Fuel	1	32	323-9	Screw - Cap Hex. Hd.	1
15	56-7050	Tank - Fuel	1	33	3256-24	Washer - Flat	1
16	57-4060	Retainer - Front	1	34	12-9020	Retainer - Belt	1
17	32107-11	Nut - Square	2	35	12-5820	Pulley - Idler	1
18	3253-3	Washer - Lock	2	36	3256-57	Washer - Flat	1
19	3274-51	Screw - Hex. Socket Hd.	2	*	88-4490	Reducer - Throttle	1
20	57-4070	Retainer - Rear	1				

*Not Illustrated

  ELECTRICAL SCHEMATIC

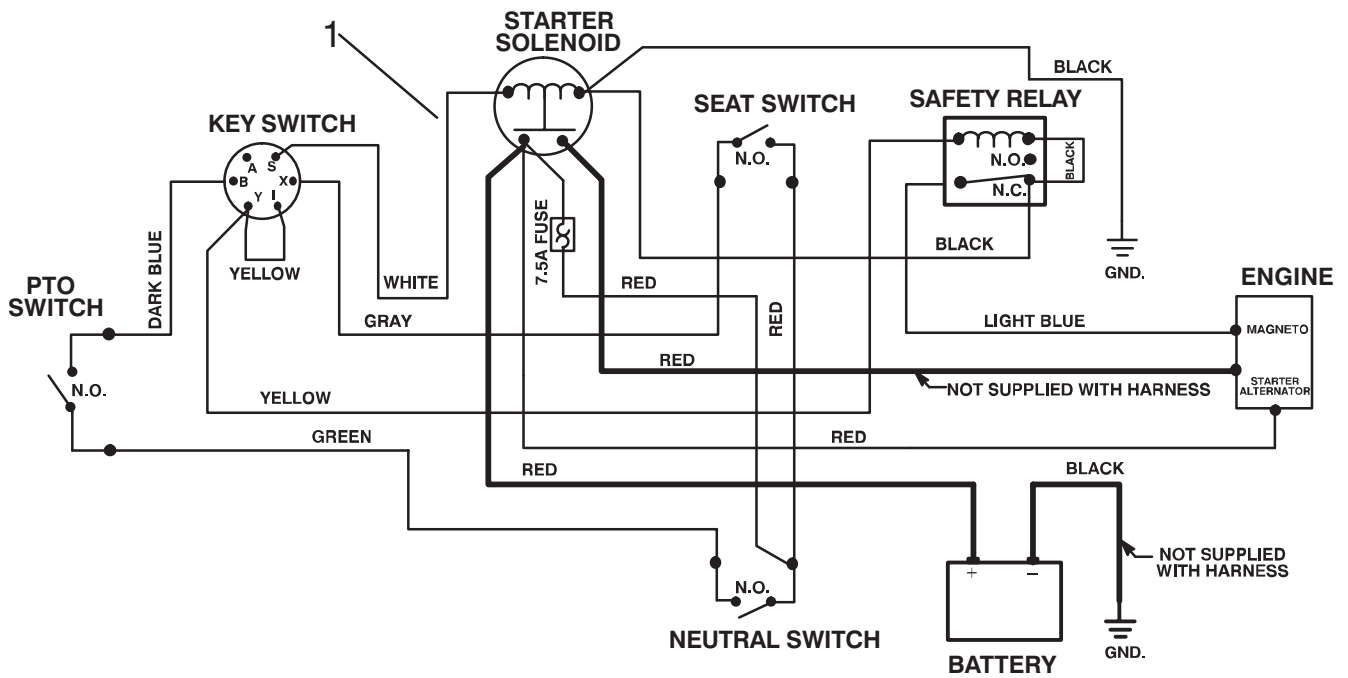


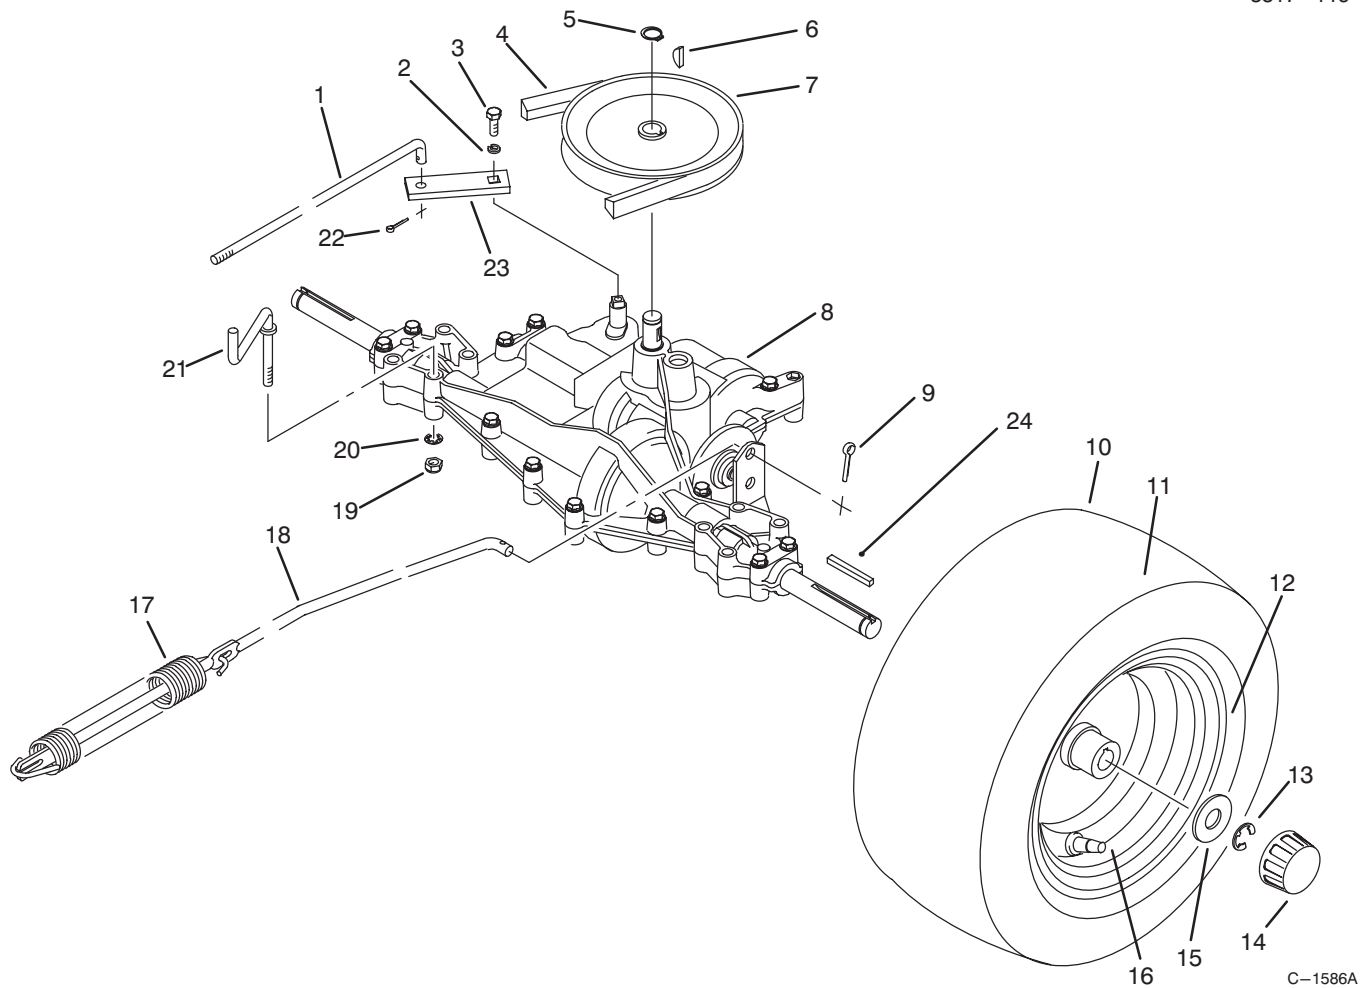

C-1586A

REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-0889	Link - Shift	1	13	32151-48	Ring - Retaining	2
2	3253-3	Washer - Lock	1	14	61-9780	Cap - Hub	2
3	329-4	Screw - Cap Hex. Hd.	1	15	28-2480	Washer	2
4	92-0870	V-Belt - Traction	1	16	232-27	Stem - Valve	2
5	32120-64	Ring - Retaining	1	17	57-9940	Spring - Brake	1
6	3257-23	Key	1	18	92-0872	Rod - Brake	1
7	92-0874	Pulley	1	19	3296-29	Nut - Lock	1
8	92-0862	Transaxle	1	20	3254-2	Washer - Lock, Int. Tooth	1
9	3272-16	Pin - Cotter	1	21	92-0899	Guide - Belt, Lower	1
10	231-117	Tire	2	22	3272-6	Pin - Cotter	1
11	232-39	Tube - Inner	2	23	92-0880	Arm - Shift, Transaxle	1
12	88-9730	Rim	2	24	7-0036	Key - Square	2

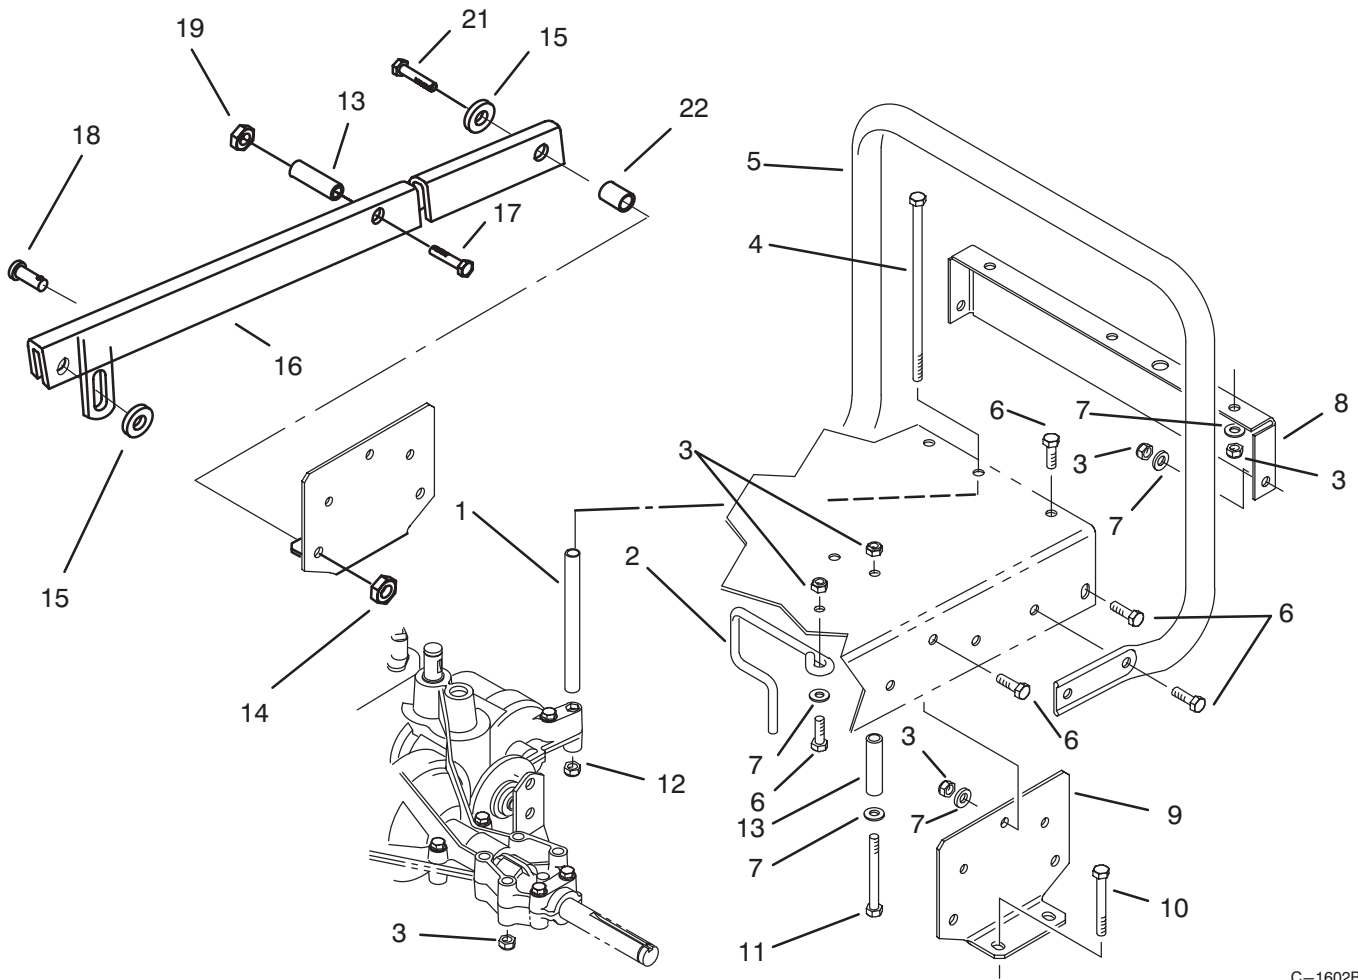 


C-1602B

STAND BAR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-0897	Spacer	1
2	92-0898	Guide - Belt	1
3	3296-29	Nut - Lock	17
4	322-50	Screw - Cap Hex. Hd.	1
5	92-0864	Standbar	1
6	322-5	Screw - Cap Hex. Hd.	15
7	3256-23	Washer - Flat	12
8	92-0861	Frame - Rear	1
9	92-0865	Support - Axle	2
10	322-12	Screw - Cap Hex. Hd.	4
11	322-14	Screw - Cap Hex. Hd.	2

Ref. No.	Part No.	Description	No. Used
12	3296-47	Nut - Lock	1
13	76-1560	Spacer	4
14	3296-59	Nut - Lock	3
15	3256-24	Washer - Flat	4
16	76-1540	Arm - Suspension R.H.	1
*	76-1550	Arm - Suspension L.H.	1
17	323-14	Screw - Hex Hd. Cap	2
18	283-42	Pin - Clevis	2
19	3296-39	Nut - Lock	2
21	323-9	Screw - Hex Hd. Cap	2
22	56-7430	Pin - Support	2

 *Not Illustrated

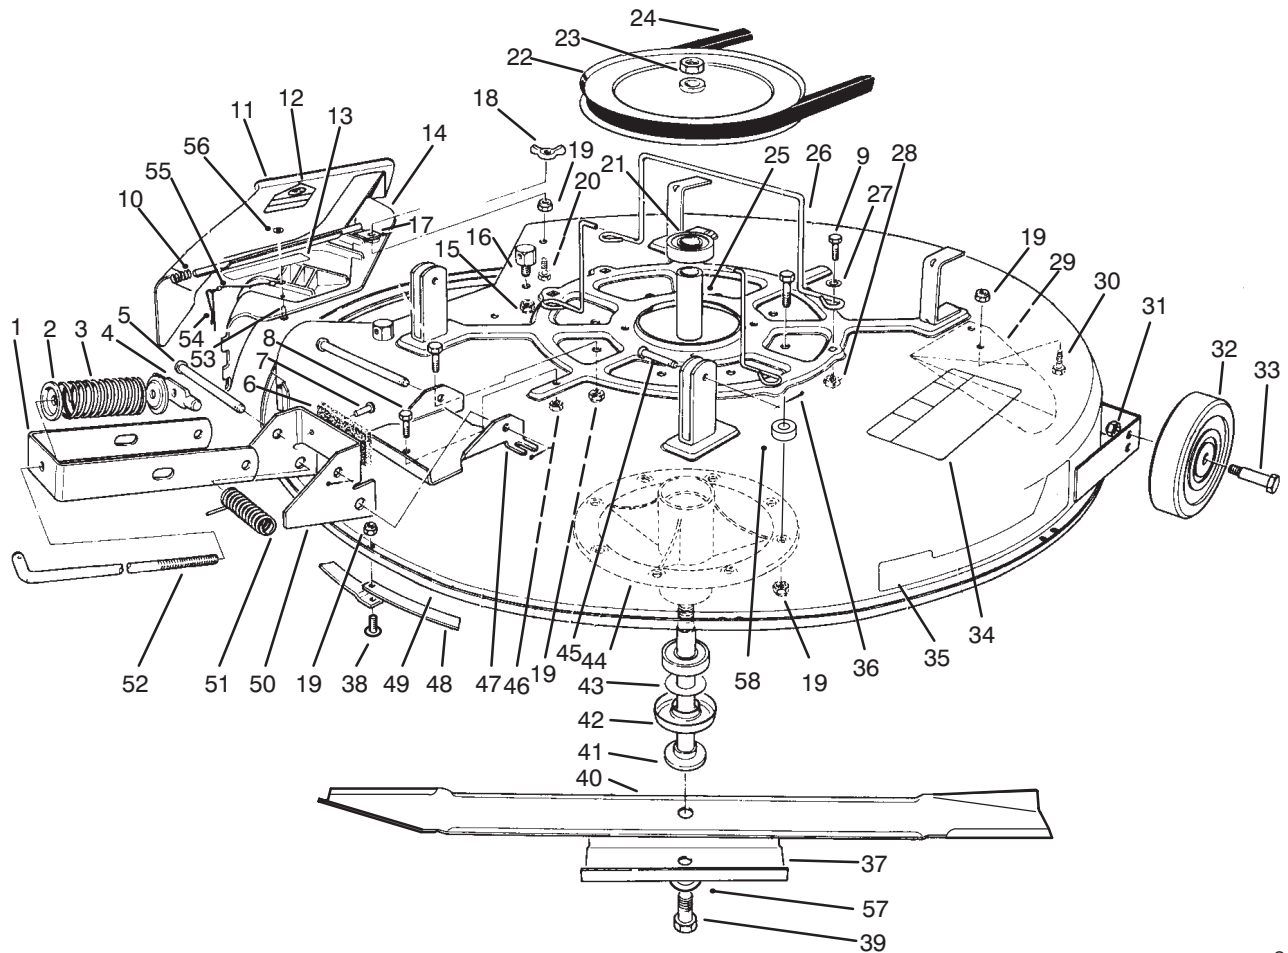


C-1939

MOWER ASSEMBLY – RECYCLER


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	47-1180	Bracket – Engagement	1	30	322-3	Screw – Cap Hex. Hd.	7
2	47-1140	Retainer – Spring, Top	2	31	3296-39	Nut – Lock	2
3	47-0960	Spring – Compression	1	32	61-9760	Wheel – Deck	2
4	47-1200	Shaft – Adjusting	1	33	56-6590	Bolt – Wheel	2
5	80-2570	Pin – Clevis	2	34	66-1340	Decal – Danger	1
6	80-2550	Pad – Brake	1	35	92-7988	Decal – Recycler	1
7	3290-282	Rivet	2	36	3272-6	Pin – Cotter	2
8	321-4	Screw – Cap Hex. Hd.	1	37	80-4570	Stiffener – Blade	1
9	322-5	Screw – Cap Hex. Hd.	10	38	32122-14	Screw – Truss, Phillips Hd.	8
10	28-8010	Spring – Torsion	1	39	26-0671	Bolt – Blade	1
11	44-5930	Assembly – Deflector (Incl. Ref. #12)	1	40	33-4750	Blade – Recycler	1
12	54-9220	Decal – Caution, Deflector	1	41	80-4350	Shaft – Spindle	1
13	68-3650	Decal – Warning, Deflector	1	42	80-4370	Shield – Bearing	1
14	82-6150	Assy. – Cover, Discharge (Incl. Ref. #53-56)	1	43	80-4390	Spacer – Hardened	2
15	3296-59	Nut – Lock	1	44	56-7030	Body – Spindle	1
16	28-7350	Post – Pivot	1	45	283-2	Pin – Clevis	2
17	83-7010	Brace – Cover, Rear	1	46	3296-8	Nut – Lock	1
18	32103-2	Nut – Wing	1	47	80-2560	Plate – Deck, Brake Mtg.	1
19	3296-29	Nut – Lock	24	48	80-4490	Ring – Deck	4
20	322-6	Screw – Cap Hex. Hd.	3	49	14-9999	Deck – Cutting, Recycler (Incl. Ref. #13 & 34)	1
21	251-297	Bearing	2	50	80-2530	Assembly – Brake (Incl. Ref. #6-7)	1
22	80-4470	Pulley	1	51	40-6230	Spring – Torsion	1
23	3219-7	Nut – Hex. Hd.	1	52	80-2580	Rod – Adjusting	1
24	92-0875	V-Belt	1	53	3290-282	Rivet	2
25	83-7020	Spacer – Bearing	1	54	28-8130	Pin – Chute, Locking	1
26	60-9730	Guide – Belt	2	55	28-8070	Lanyard	1
27	3256-23	Washer – Flat	8	56	3256-49	Washer – Flat	1
28	3290-496	Nut – Retainer	4	57	3290-465	Washer – Belleville	1
29	80-2630	Kicker – 32"	4	58	26-4840	Spacer – Isomount	8

 PEERLESS TRANSAXLE MODEL NO. 915-019

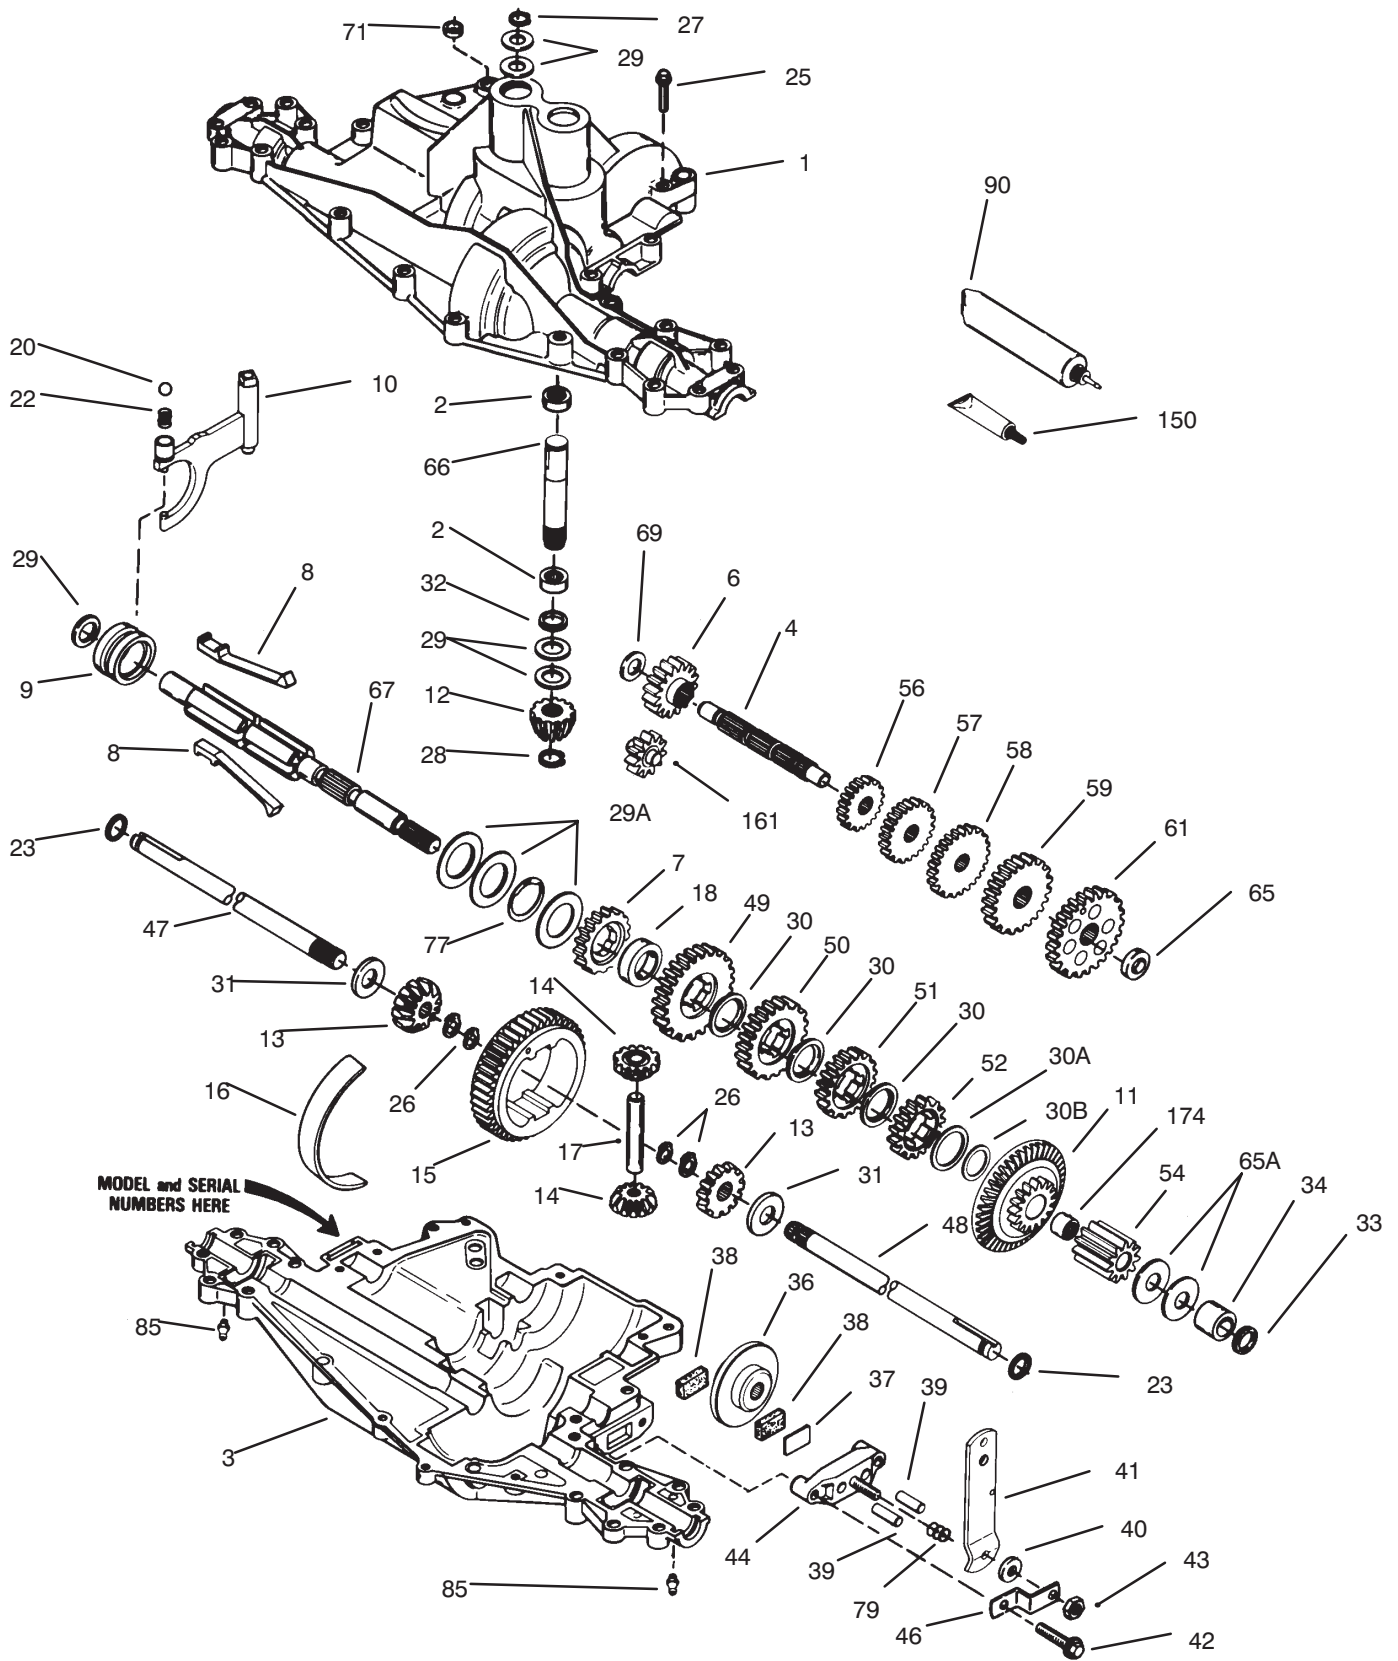

PEERLESS TRANSAXLE MODEL NO. 915-019

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	772117	Transaxle Cover	1	38	790006	Brake Pad	2
2	780086	Needle Bearing	2	39	786026	Dowel Pin	2
3	770114	Transaxle Case	1	40	792076	Washer	1
4	776300	Countershaft	1	41	790045	Brake Lever	1
6	778281	Spur Gear (16 Teeth)	1	42	792073	Screw	2
7	778122A	Spur Gear (22 Teeth)	1	43	792075	Locknut	1
8	792133	Shift Key	4	44	790025	Brake Pad Holder	1
9	784352	Shift Collar	1	46	786086	Brake Lever Bracket	1
10	784365	Shift Rod & Fork	1	47	774930	Axle (16-3/4" lg.)	1
11	778290	Bevel Gear & Bearing (44/16 Teeth) (Incl. Ref. #174)	1	48	774931	Axle (11-9/16" lg.) (Incl. Ref. #26)	1
12	778262	Bevel Pinion (14 Teeth)	1	49	778124A	Spur Gear (30 Teeth)	1
13	778221	Bevel Gear (16 Teeth)	2	50	778123A	Spur Gear (25 Teeth)	1
14	778068	Differential Pinion	2	51	778122A	Spur Gear (22 Teeth)	1
15	778260	Ring Gear	1	52	778273	Spur Gear (19 Teeth)	1
16	786150	Bearing Strip	1	54	778263	Spur Gear (11 Teeth)	1
17	78139	Drive Pin	1	56	778126A	Spur Gear (20 Teeth)	1
18	786147	Neutral Spacer	1	57	778127A	Spur Gear (25 Teeth)	1
20	792139	Ball (3/8" dia.)	1	58	778128A	Spur Gear (28 Teeth)	1
22	792142	Spring	1	59	778129A	Spur Gear (30 Teeth)	1
23	788061	Seal Ring	2	61	778265	Spur Gear (34 Teeth)	1
25	792073	Screw	17	65	780162	Washer	1
26	792125	Retaining Ring (pkg. of 2)	4	65A	780160	Washer	2
27	792035	Retaining Ring	1	66	776299	Input Shaft (3.522" lg.)	1
28	788040	Retaining Ring	1	67	776352	Shifter & Brake Shaft	1
29	780072	Washer	5	69	780161	Thrust Washer	1
29A	780090	Thrust Washer	3	71	788069	Square Cut Ring	1
30	780108	Washer	3	77	788078A	Inverted Retaining Ring (pkg. of 2)	1
30A	789145	Washer	1	79	792144	Spring	1
30B	780178	Washer	1	90	788067B	Grease (32 oz. btl. Bentonite grease)	1
31	780001	Washer	2	150	510334	Gasket Eliminator (Loctite #515)	1
32	792001	O-Ring	1	161	776302	Reverse Idler Assembly	1
33	788076	O-Ring	1	174	780085	Needle Bearing	1
34	780159	Bushing	1				
36	790071	Brake Disk	1				
37	790007	Brake Pad Plate	1				

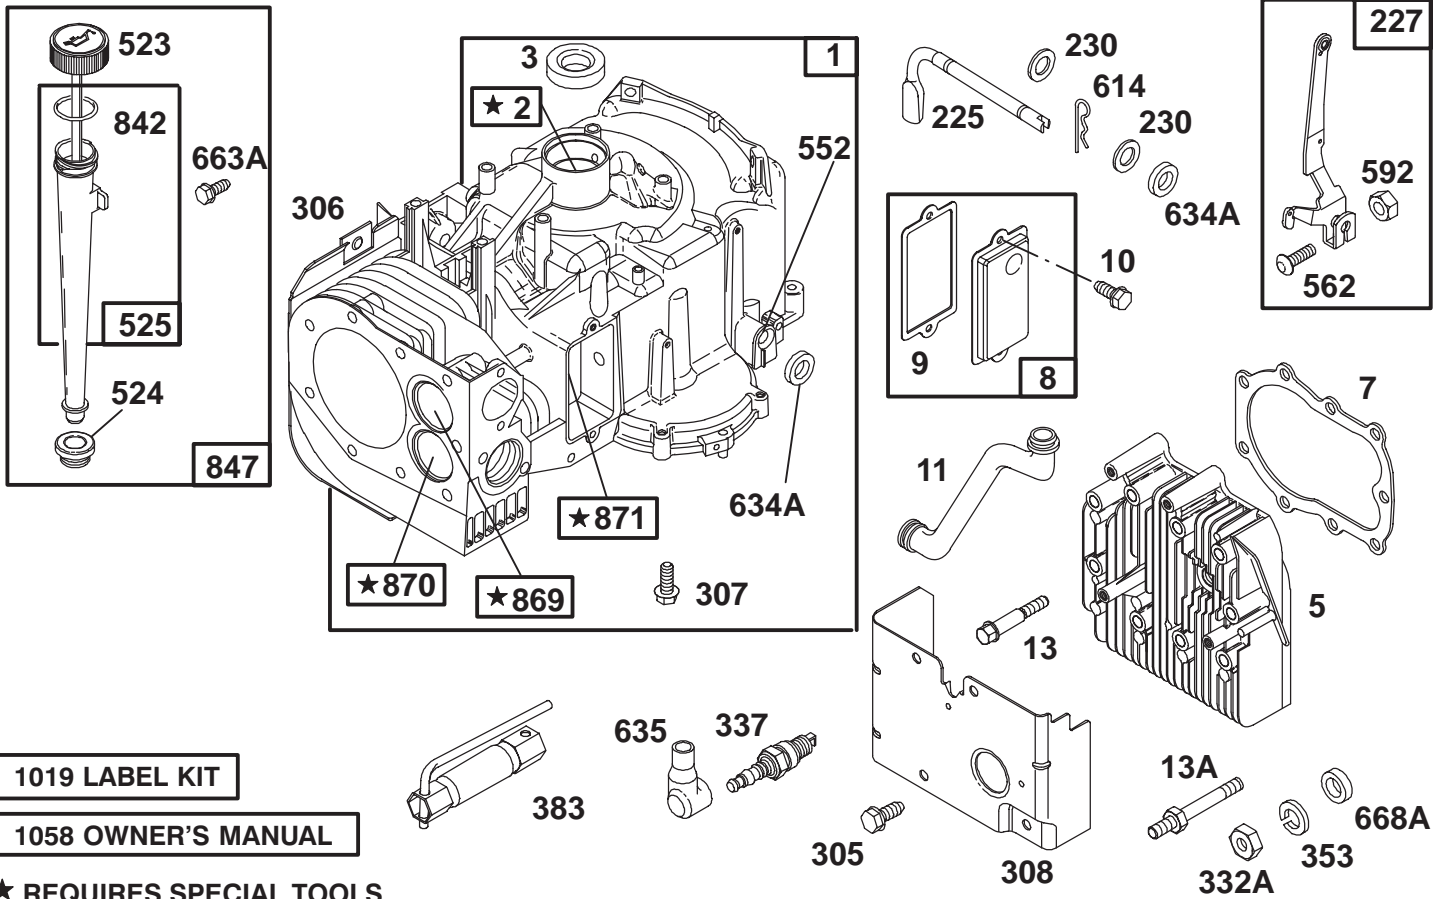 

Assemblies include all parts shown in frames.

★ REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.


ENGINE BRIGGS & STRATTON MODEL 28D707-0124-01

Ref. No.	Part No.	Description	No. Used
1	496413	Cylinder Assembly	
2	399265	Bearing—Cylinder	
★3	391086	Seal—Oil	
5	494240	Head—Cylinder	
★7	271866	Gasket—Cylinder Head	
8	495735	Breather Assembly	
★9	27803	Gasket—Valve Cover	
10	94621	Screw—Sem	
11	281246	Tube—Breather	
13	94622	Screw—Cylinder Head	
13A	94776	Stud—Cylinder Head	
225	495157	Crank—Governor	
227	493935	Lever Assy.—Governor	
230	94742	Washer—Governor Lever	
305	94786	Screw—Hex. Head	
306	224545	Shield—Cylinder	
307	94386	Screw—Self Tap	
308	491490	Cover—Cylinder Head	
332A	94314	Nut—Hex.	
337	802592	Plug—Spark	
353	94315	Washer—Lock	

Ref. No.	Part No.	Description	No. Used
383	89838	Wrench—Spark Plug	
523	495229	Cap—Oil Filler	
★524	68838	Seal—Filler Tube	
525	496068	Tube—Oil Filler	
552	231597	Bushing—Gov. Crank	
562	92613	Bolt—Governor Lever	
592	231082	Nut—Hex.	
614	93306	Pin—Cotter	
★634A	491323	Seal—Governor	
635	66538	Elbow—Spark Plug	
663A	94073	Screw—Hex. Head	
668A	231109	Spacer	
★842	270920	Seal—Oil Filler Cap	
847	496367	Fill Group—Oil	
869	261463	Seat—Intake Valve	
870	213316	Seat—Exhaust Valve	
871	261961	Guide—Exhaust Valve	
		Note: 231218 Guide—Intake Valve (Brass)	
1019	491254	Label Kit	
1058	272697	Owner's Manual	

★ Included in Gasket Set—Part No. 494241.
 ◆ Included in Carburetor Gasket Set—Part No. 494385.

 ● Included in Carburetor Kit—Part No. 497481.

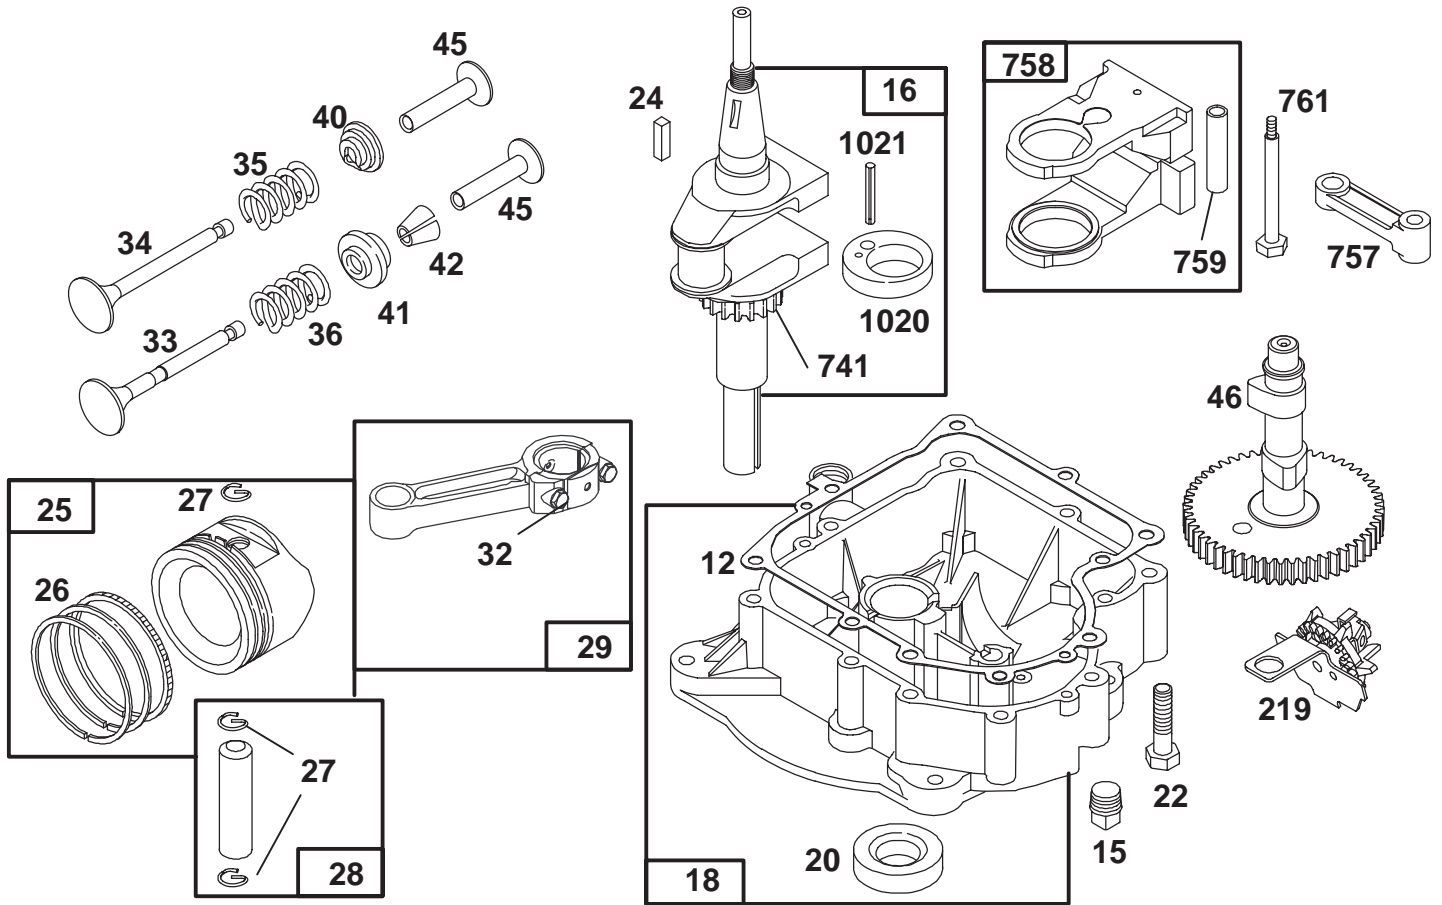

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 28D707-0124-01

Ref. No.	Part No.	Description	No. Used
★12	271916	Gasket—Crankcase (.015" Thick)	
★	271997	Gasket—Crankcase (.005" Thick)	
★	271996	Gasket—Crankcase (.009" Thick)	
15	94239	Plug—Oil Drain	
16	495162	Crankshaft	
		Note: For Timing Gear Key—Order 94196.	
18	494238	Base—Engine	
★20	291675	Seal—Oil	
22	94624	Screw—Sem	
24	222698	Key—Flywheel	
25	394661	Piston Assembly (Standard)	
	394662	Piston Assy. (.010" O.S.)	
	394663	Piston Assy. (.020" O.S.)	
	394664	Piston Assy. (.030" O.S.)	
26	391780	Ring Set (Standard)	
	392331	Ring Set (Chrome Std.)	
	391781	Ring Set (.010" O.S.)	
	391782	Ring Set (.020" O.S.)	
	391783	Ring Set (.030" O.S.)	

Ref. No.	Part No.	Description	No. Used
27	260924	Lock—Piston Pin	
28	299691	Pin—Piston (Standard)	
	391286	Pin—Piston (.005" O.S.)	
29	490348	Rod—Connecting	
	490469	Rod—Conn. (.020" U.S.)	
32	94671	Screw—Conn. Rod	
33	262246	Valve—Exhaust	
34	262247	Valve—Intake	
35	65906	Spring—Valve	
36	26828	Spring—Valve	
40	221596	Retainer—Intake Valve	
41	292260	Rotocoil—Ex. Valve	
42	494553	Retainer—Rotocoil	
45	262248	Tappet—Valve	
46	212897	Gear—Cam	
219	490815	Gear—Gov.	
741	262932	Gear—Timing	
757	213998	Link—Counterweight	
758	399891	Counterweight Assy.	
759	298909	Pin—Counterweight	
761	94593	Screw—Counterweight	
1020	262243	Eccentric	
1021	94853	Pin—Eccentric	

★ Included in Gasket Set—Part No. 494241.
 ◆ Included in Carburetor Gasket Set—Part No. 494385.

 ● Included in Carburetor Kit—Part No. 497481.

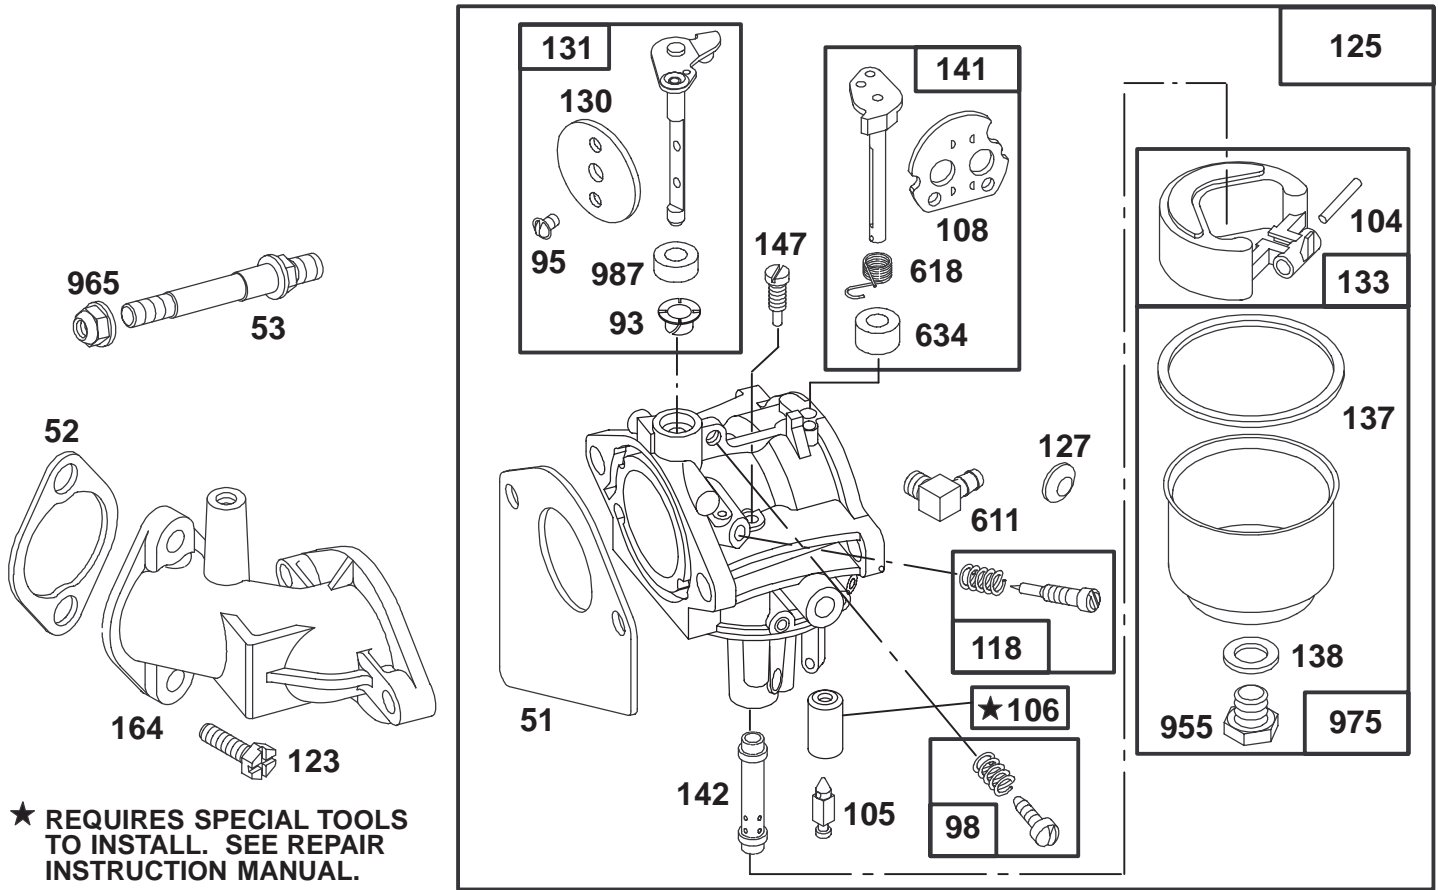

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 28D707-0124-01

Ref. No.	Part No.	Description	No. Used
◆51	272465	Gasket—Carburetor	
★52	272554	Gasket—Carburetor	
53	94637	Stud—Carb. Mtg.	
●93	281346	Bushing—Throttle Shaft	
●95	94098	Screw—Throttle	
98	495800	Screw—Idle Adjust	
●104	231789	Pin—Float Hinge	
●105	231855	Valve—Inlet Needle	
●106	231854	Seat—Inlet	
108	224666	Valve—Choke	
118	496589	Valve—Needle	
123	94616	Screw—Elbow Mtg.	
125	496592	Carburetor	
●127		Plug—Welch (Sold in Kit Only).	
130	224668	Valve—Throttle	
131	494885	Shaft—Throttle	
133	494381	Float—Carburetor	

Ref. No.	Part No.	Description	No. Used
◆137	281165	Gasket—Float Bowl	
◆138	281164	Washer—Float Bowl	
141	495931	Shaft—Choke	
●142	496519	Nozzle—Carburetor Note: 496623 Nozzle—Carb. (High Altitude) Includes: 281164 Washer—Float Bowl	
●147	497472	Pilot—Jet	
164	213819	Carburetor—Elbow	
611	493496	Elbow—Fuel Pipe	
618	262803	Spring—Choke Return	
●634	281168	Seal—Choke Shaft	
955	94642	Screw—Fuel Bowl	
965	94010	Nut—Hex.	
975	494378	Bowl—Float	
●987	281166	Seal—Throttle Shaft	

★ Included in Gasket Set—Part No. 494241.
◆ Included in Carburetor Gasket Set—Part No. 494385.

 ● Included in Carburetor Kit—Part No. 497481.

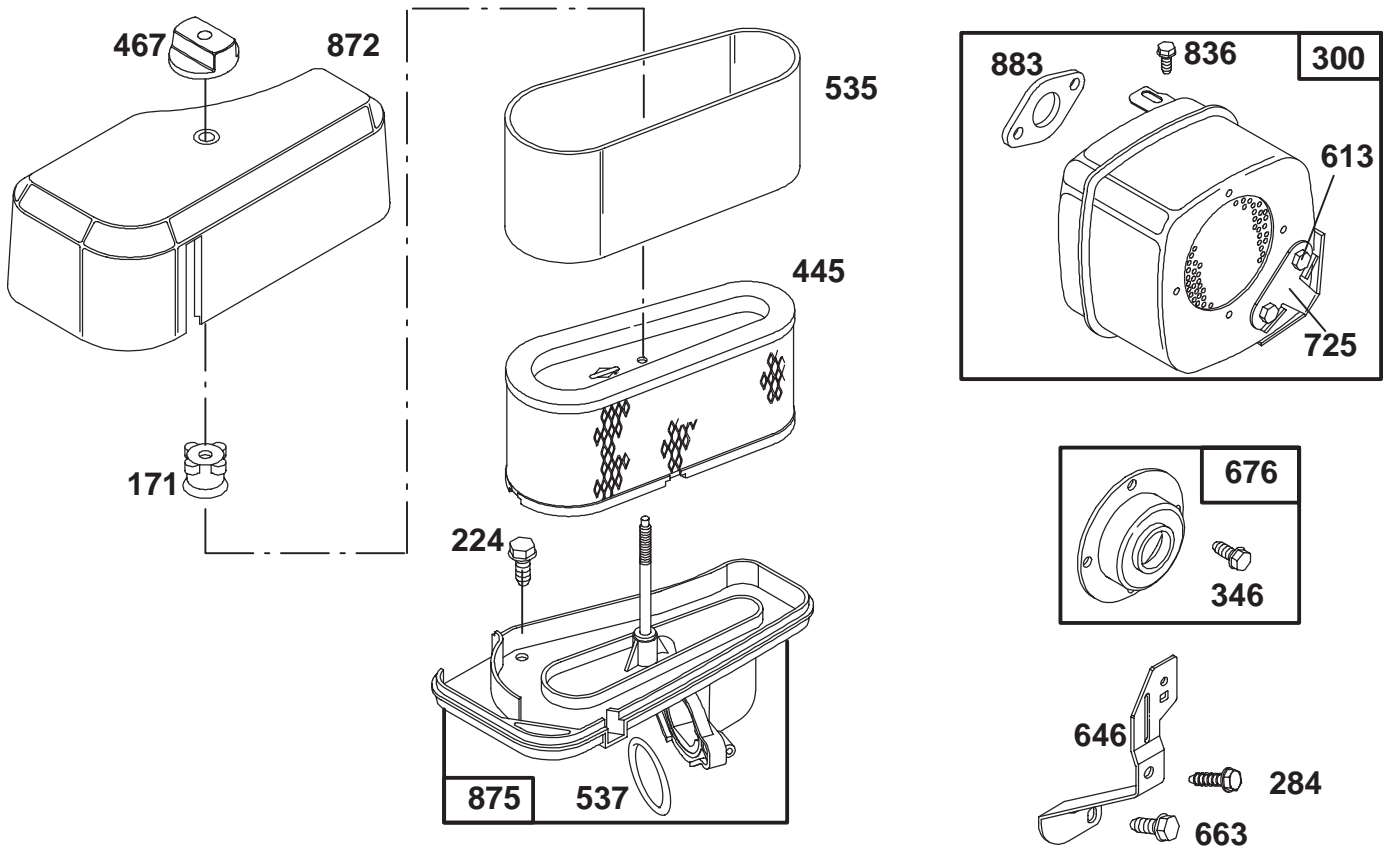

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28D707-0124-01


Ref. No.	Part No.	Description	No. Used
171	281051	Nut—Air Cleaner Mtg.	
224	94729	Screw—Air Cleaner Sem	
284	94704	Screw—Air Cleaner	
300	491413	Muffler—Exhaust	
346	93705	Screw—Hex. Head	
445	493910	Element—Air Cleaner	
467	493903	Knob—Air Cleaner	
535	272477	Element—Air Cleaner	
★537	281106	Gasket—Air Cleaner	

Ref. No.	Part No.	Description	No. Used
613	93927	Screw—Hex. Hd.	
646	224546	Brace—Air Cleaner	
663	94620	Screw—Hex. Hd.	
676	396903	Deflector—Muffler	
725	223023	Shield—Muffler	
836	94786	Screw—Hex. Hd.	
872	281105	Cover—Air Cleaner	
875	496368	Body—Air Cleaner	
★883	272293	Gasket—Exhaust Pipe	

★ Included in Gasket Set—Part No. 494241.

◆ Included in Carburetor Gasket Set—Part No. 494385.

 ● Included in Carburetor Kit—Part No. 497481.

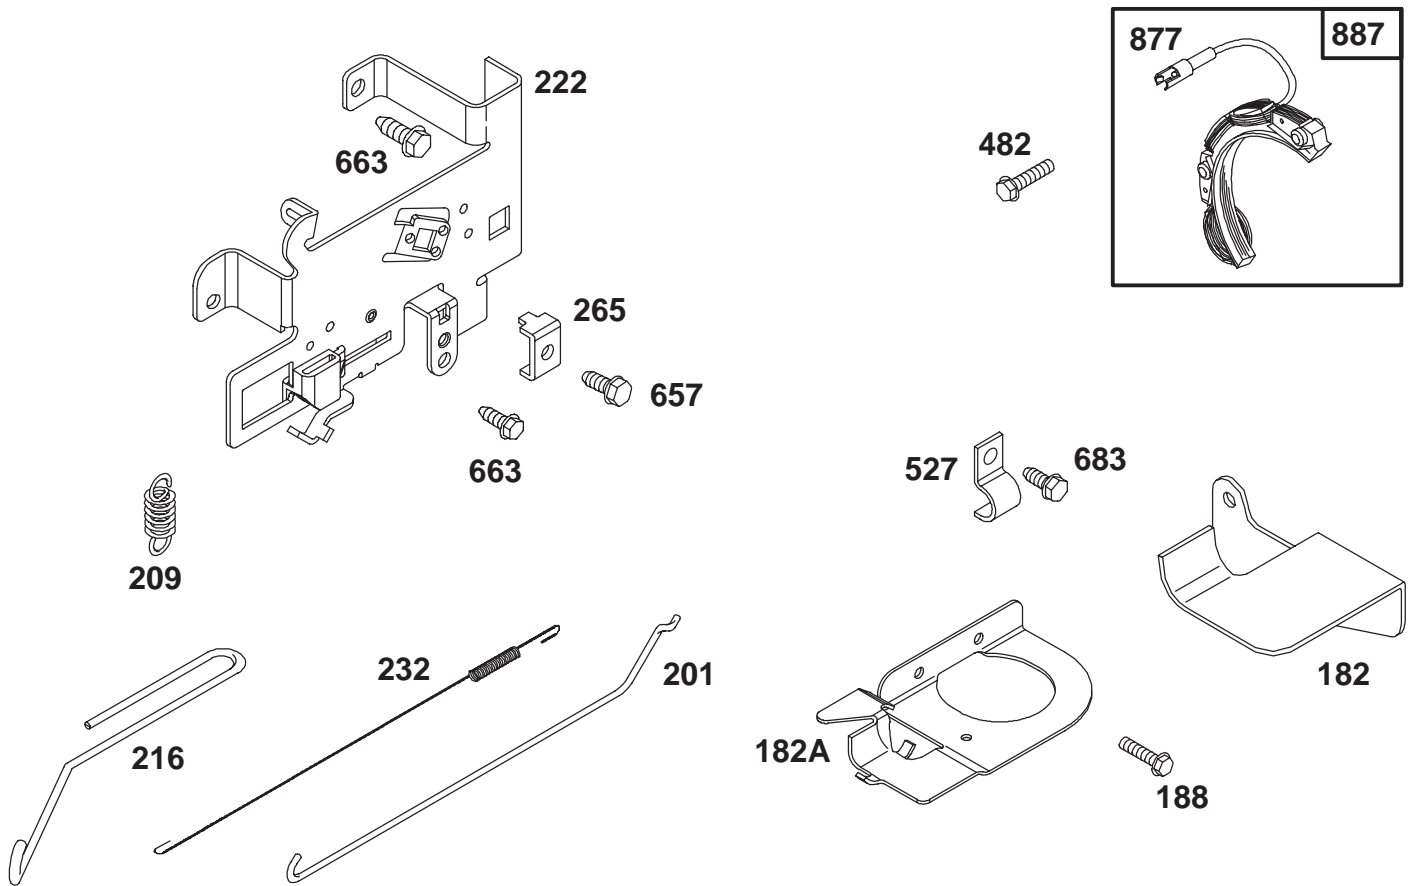

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 28D707-0124-01

Ref. No.	Part No.	Description	No. Used
182	223925	Bracket—Fuel Tank (R.H.)	
182A	223866	Bracket—Fuel Tank (L.H.)	
188	94480	Screw—Sem	
201	262767	Link—Governor	
209	260871	Spring—Governor	
216	262766	Link—Choke	
222	495611	Plate—Gov. Control	
232	262785	Spring—Governor Link	

Ref. No.	Part No.	Description	No. Used
265	221535	Clamp—Casing	
482	93621	Screw—Sem	
527	221428	Clamp	
657	93496	Screw—Sem	
663	94620	Screw—Hex. Hd.	
683	93572	Screw—Hex. Hd.	
877	393814	Diode Assy.	
887	391529	Alternator	

★ Included in Gasket Set—Part No. 494241.
 ◆ Included in Carburetor Gasket Set—Part No. 494385.

 ● Included in Carburetor Kit—Part No. 497481.

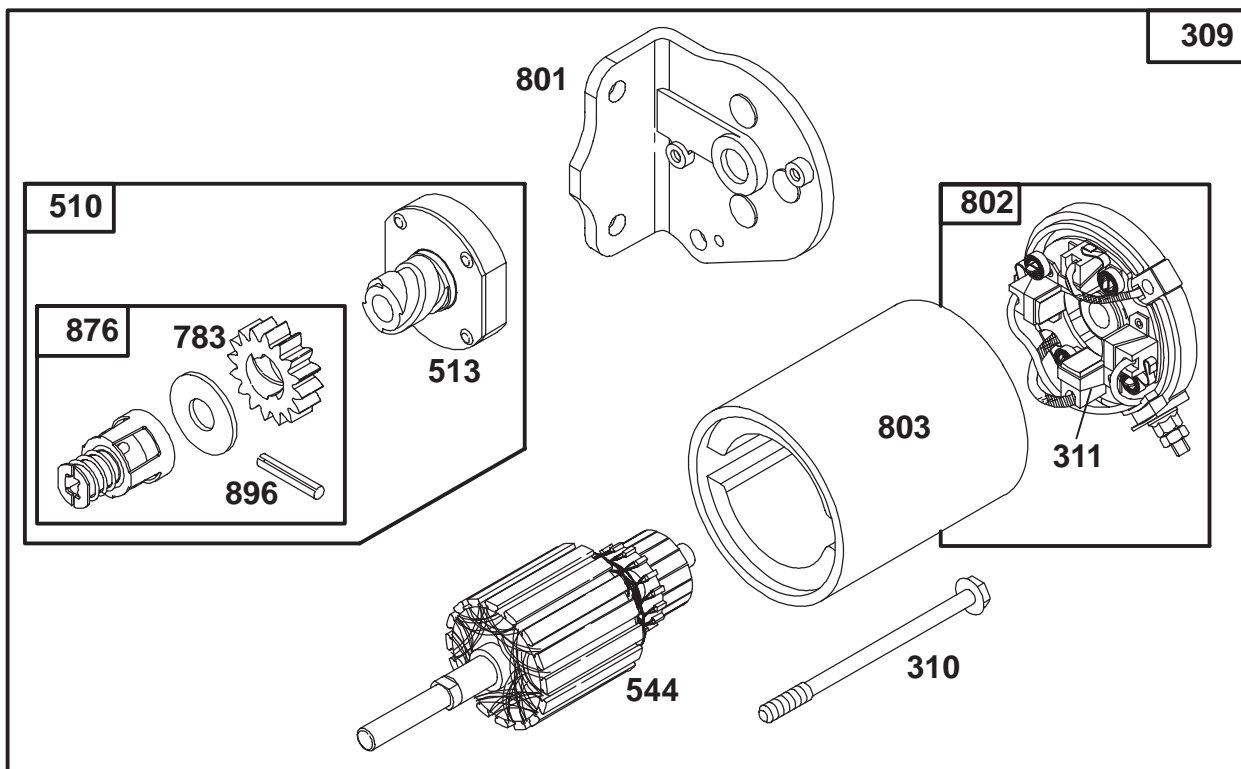

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 28D707-0124-01

Ref. No.	Part No.	Description	No. Used
309	394805	Motor—Starter	
310	94003	Bolt—Thru	
311	395538	Brush Set—Starter	
510	495878	Drive—Starter	
513	398003	Clutch Assembly	
544	390837	Armature—Starter	


Ref. No.	Part No.	Description	No. Used
783	280104	Gear	
801	394856	Cap—Drive	
802	395537	Cap—End	
803	398159	Housing—Starter	
876	495877	Kit—Spring	
896	94288	Pin—Roll	

★ Included in Gasket Set—Part No. 494241.
 ◆ Included in Carburetor Gasket Set—Part No. 494385.

 
● Included in Carburetor Kit—Part No. 497481.

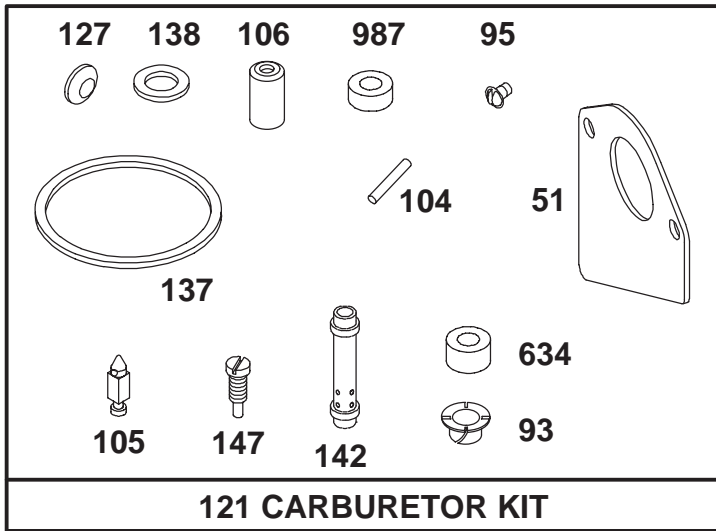

121 CARBURETOR KIT

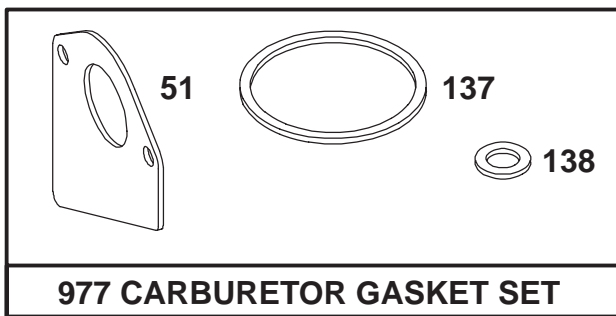 

977 CARBURETOR GASKET SET

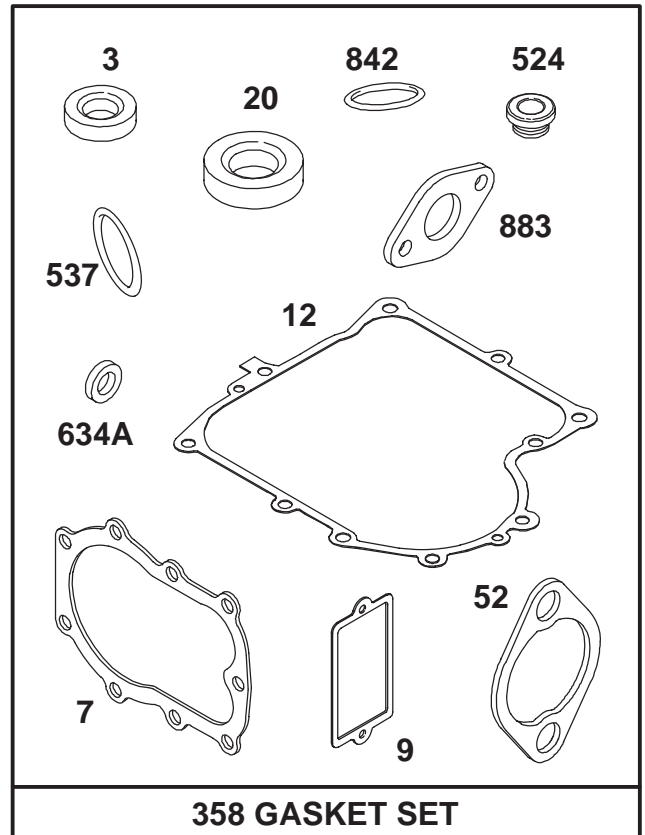 

358 GASKET SET

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28D707-0124-01

Ref. No.	Part No.	Description	No. Used
★3	391086	Seal—Oil	
★7	271866	Gasket—Cylinder Head	
★9	27803	Gasket—Valve Cover	
★12	271916	Gasket—Crankcase (.015" Thick)	
★	271997	Gasket—Crankcase (.005" Thick)	
★	271996	Gasket—Crankcase (.009" Thick)	
★20	291675	Seal—Oil	
◆51	272465	Gasket—Carburetor	
★52	272554	Gasket—Carburetor	
●93	281346	Bushing—Throttle Shaft	
●95	94098	Screw—Throttle	
●104	231789	Pin—Float Hinge	
●105	231855	Valve—Inlet Needle	
●106	231854	Inlet Valve Seat	
121	497481	Carburetor Kit	

Ref. No.	Part No.	Description	No. Used
●127		Plug—Welch (Sold in Kit Only).	
◆137	281165	Gasket—Float Bowl	
◆138	281164	Washer—Float Bowl	
●142	496519	Nozzle—Carburetor Note: 496623 Nozzle—Carb. (High Altitude) Includes: 281164 Washer—Float Bowl	
●147	497472	Pilot—Jet	
358	494241	Gasket Set	
★524	281370	Seal—Filler Tube	
★537	281106	Gasket—Air Cleaner	
●634	281168	Seal—Choke Shaft	
★634A	491323	Seal—Governor	
★842	270920	Seal—Oil Filler Cap	
★883	272293	Gasket—Muffler	
977	494385	Carburetor Gasket Set	
●987	281166	Seal—Throttle	

★ Included in Gasket Set—Part No. 494241.
◆ Included in Carburetor Gasket Set—Part No. 494385.

● Included in Carburetor Kit—Part No. 497481.

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
8830	Clamp	4	17	2	56-7080	Spring - Torsion, Brake	3	18	1
114621	Decal - Euro Noise	7	10	1	56-7130	Tower - Front	1	4	1
147665	Screw - Phillips Hd.	6	1	2	56-7140	Tower - Rear	1	8	1
147665	Screw - Phillips Head	4	1	2	56-7170	Guide - Shaft, Steering	1	6	1
3-6498	Washer - Thrust	2	5	5	56-7180	Cover - Front	2	30	1
7-0036	Key - Square	11	24	2	56-7240	Bracket - Retaining, Spring	3	3	1
12-5820	Pulley - Idler	9	35	1	56-7400	Arm - Lever, H.O.C.	5	24	1
12-8819	Loose Parts	1	*	1	56-7430	Pin - Support	12	22	2
12-8829	Loose Parts	1	*	1	56-7470	Bracket - Rack, Steering	2	33	1
12-9020	Retainer - Belt	9	34	1	56-7500	Shaft - Steering	2	31	1
14-9999	Deck - Cutting, Recycler	13	49	1	56-7520	Bushing - Sector	2	22	1
19-1470	Bolt - Shoulder	5	20	1	56-7530	Bolt - Shoulder	2	20	1
26-0671	Bolt - Blade		39	2	56-7570	Rod - Engagement	3	15	1
26-0671	Bolt - Blade	13	39	1	56-7650	Tube - Pivot	3	14	1
26-4840	Spacer - Isomount	13	58	8	56-7670	Cable - Battery, Positive	9	21	1
27-9080	Bearing - Flange	2	15	4	56-7670	Cable - Positive	6	17	1
28-0380	Spacer - Axle, Front	2	24	1	56-7710	Hold Down - Battery	8	26	1
28-0540	Bolt - Shoulder	5	8	1	56-7720	Post - Battery	8	21	1
28-2480	Washer	11	15	2	56-7810	Decal - Brake, Parking	1	9	1
28-2480	Washer	2	43	2	57-4060	Retainer - Front	9	16	1
28-7350	Post - Pivot	13	16	1	57-4070	Retainer - Rear	9	20	1
28-8010	Spring - Torsion	13	10	1	57-9940	Spring - Brake	11	17	1
28-8070	Lanyard	13	55	1	60-9730	Guide - Belt	13	26	2
28-8080	Boot - Terminal	8	22	1	61-9760	Wheel - Deck	13	32	2
28-8130	Pin - Chute, Locking	13	54	1	61-9780	Cap - Hub	11	14	2
33-4750	Blade - Recycler	13	40	1	61-9780	Cap - Hub	2	44	2
38-1420	Switch - Interlock	7	2	1	62-3760	Screw - Cap Hex. Hd.	9	27	1
40-6230	Spring - Torsion	13	51	1	62-3930	Spring - Extension	5	5	1
44-5930	Assembly - Deflector	13	11	1	62-3930	Spring - Extension	3	6	1
47-0010	Arm - Suspension, Front	2	13	2	62-4300	Pad - Battery	8	25	1
47-0540	Pedal	3	19	2	62-5480	Isolator - Seat	7	11	4
47-0550	Bracket - Brake, Pedal	3	17	1	62-5490	Support - Fuel Line	9	10	1
47-0560	Bracket - Clutch, Pedal	3	12	1	63-5540	Base - Seat	7	3	1
47-0570	Spacer - Pedal	3	16	3	63-5670	Tube - Bumper, Seat Rod	7	7	1
47-0590	Spindle - L.H.	2	*	1	63-5830	Link - Suspension, Deck	5	16	2
47-0600	Spindle - R.H.	2	4	1	63-8360	Key	4	6	1
47-0610	Tie Rod - Adjustable	2	34	1	65-2920	Pad - Pedal, Foot	3	5	2
47-0700	Bearing - Flange	2	27	1	65-5670	Bolt - Shoulder	5	21	1
47-0760	Support - Axle, Front	2	11	1	65-5670	Screw - Shoulder	8	34	1
47-0770	Shaft - Pivot, Pedal	3	8	1	66-1340	Decal - Danger	13	34	1
47-0780	Retainer - Shaft	3	9	1	66-6740	Cover - Shaft, Steering	4	2	1
47-0930	Footrest - R.H.	1	22	1	68-3650	Decal - Warning, Deflector	13	13	1
47-0940	Footrest - L.H.	1	16	1	76-1090	Decal - Instructions	4	23	1
47-0960	Spring - Compression	13	3	1	76-1540	Arm - Suspension R.H.	12	16	1
47-1140	Retainer - Spring, Top	13	2	2	76-1550	Arm - Suspension L.H.	12	*	1
47-1180	Bracket - Engagement	13	1	1	76-1560	Spacer	12	13	4
47-1200	Shaft - Adjusting	13	4	1	79-0370	Decal - Danger	1	7	1
47-1290	Brake - Parking	1	10	1	80-2310	Bracket - Bell Crank Mount	5	2	1
47-1420	V-Belt		24	1	80-2321	Bracket - H.O.C., Engage	5	15	1
47-1840	Bracket - Height-of-Cut	5	13	1	80-2330	Link - Bell Crank	8	35	1
47-1850	Lever - Height-of-Cut	5	6	1	80-2340	Bracket - Pivot, Inner	8	6	1
47-1910	Solenoid	6	12	1	80-2350	Pivot - Outer	8	4	1
47-2060	Bracket - Brake, Parking	1	19	1	80-2360	Crank - Bell, Deck Engage	5	22	1
47-2961	Hose - Fuel Line	9	9	1	80-2370	Shaft W.A. - Pivot	8	5	1
48-4700	Module - Interlock	6	11	1	80-2400	Lever W.A. - Engage	8	2	1
49-3242	Assy. - Wheel, Steering	4	5	1	80-2430	Axle - Front	2	18	1
54-3090	Wire Assembly	4	25	1	80-2450	Rack - Steering	2	19	1
54-9220	Decal - Caution, Deflector	13	12	1	80-2460	Tie Rod - Fixed	2	*	1
55-3570	Cap - Fuel	9	14	1	80-2530	Assembly - Brake	13	50	1
56-2540	Tube - Vent, Battery	8	37	1	80-2550	Pad - Brake	13	6	1
56-6590	Bolt - Wheel	13	33	2	80-2560	Plate - Deck, Brake Mtg.	13	47	1
56-7030	Body - Spindle	13	44	1	80-2570	Pin - Clevis	13	5	2
56-7050	Tank - Fuel	9	15	1	80-2580	Rod - Adjusting	13	52	1
56-7070	Spring - Torsion, Clutch	3	11	1	80-2600	Battery - 12 Volt	8	24	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3317-119

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
80-2620	Rod - Base, Seat	7	8	1	231-117	Tire	11	10	2
80-2630	Kicker - 32	13	29	4	232-27	Stem - Valve	11	16	2
80-4350	Shaft - Spindle	13	41	1	232-27	Valve Stem w/Cap	2	41	2
80-4370	Shield - Bearing	13	42	1	232-39	Tube - Inner	11	11	2
80-4390	Spacer - Hardened	13	43	2	232-44	Tube - Inner	2	{	2
80-4470	Pulley	13	22	1	233-25	Knob	4	13	1
80-4490	Ring - Deck	13	48	4	233-48	Knob	8	1	2
80-4570	Stiffener - Blade	13	37	1	233-48	Knob	5	19	1
82-6150	Assy. - Cover, Discharge	13	14	1	237-143	O-Ring	8	27	2
83-7010	Brace - Cover, Rear	13	17	1	2411-32	Ball Joint	8	31	1
83-7020	Spacer - Bearing	13	25	1	2412-68	Clamp - Wire	7	4	1
88-3950	Assembly - Seat	7	1	1	2412-98	Clamp - Hose	9	8	2
88-4490	Reducer - Throttle	9	*	1	251-210	Bearing	2	2	4
88-9730	Rim	11	12	2	251-297	Bearing	13	21	2
88-9800	Cover - Gate, Shift	6	24	1	257-11	Washer	8	18	1
88-9830	Switch - Ignition	4	10	1	283-2	Pin - Clevis	2	16	2
88-9930	Switch - Micro, Short	6	4	1	283-2	Pin - Clevis	13	45	2
88-9931	Switch - Micro	4	24	1	283-42	Pin - Clevis	12	18	2
92-0860	Frame	6	14	1	283-52	Pin - Clevis	1	20	1
92-0861	Frame - Rear	12	8	1	288-10	Cap - Pipe	9	22	1
92-0862	Transaxle	11	8	1	289-19	Nipple - Pipe	9	23	1
92-0864	Standbar	12	5	1	302-5	Fitting - Grease	2	1	2
92-0865	Support - Axle	12	9	2	302-49	Fitting - Grease	2	17	2
92-0866	Body W.A. - Seat Support	6	8	1	321-4	Screw - Cap Hex. Hd.	13	8	1
92-0870	V-Belt - Traction	11	4	1	321-4	Screw - Cap Hex. Hd.	3	10	1
92-0871	Rod - Traction	9	29	1	321-4	Screw - Cap Hex. Hd.	5	11	4
92-0872	Rod - Brake	11	18	1	321-4	Screw - Cap Hex. Hd.	8	12	2
92-0873	Pulley - Engine	9	24	1	321-4	Screw - Cap Hex. Hd.	6	13	2
92-0874	Pulley	11	7	1	321-4	Screw - Cap Hex. Hd.	1	21	2
92-0875	V-Belt	13	24	1	322-5	Screw - Cap Hex. Hd.	3	2	1
92-0876	Guard - Front	2	37	1	322-5	Screw - Cap Hex. Hd.	12	6	15
92-0877	Panel - Seat Base, R.H.	6	21	1	322-5	Screw - Cap Hex. Hd.	6	6	2
92-0878	Panel L.H. - Base, Seat	5	9	1	322-5	Screw - Cap Hex. Hd.	3	7	2
92-0879	Spring	9	1	1	322-5	Screw - Cap Hex. Hd.	8	8	4
92-0880	Arm - Shift, Transaxle	11	23	1	322-5	Screw - Cap Hex. Hd.	13	9	10
92-0881	Bracket W.A. - Traction	9	4	1	322-5	Screw - Cap Hex. Hd.	2	9	8
92-0883	Plate - Mounting, Idler	9	2	1	322-5	Screw - Cap Hex. Hd.	5	12	2
92-0884	Lever W.A. - Shaft	8	10	1	322-5	Screw - Cap Hex. Hd.	1	14	10
92-0887	Support - Shift, Lower	8	19	1	322-5	Screw - Cap Hex. Hd.	4	16	8
92-0888	Support - Shift, Upper	8	14	1	322-6	Screw - Cap Hex. Hd.	13	20	3
92-0889	Link - Shift	11	1	1	322-7	Screw - Cap Hex. Hd.	9	28	1
92-0890	Control - Throttle	4	15	1	322-12	Screw - Cap Hex. Hd.	12	10	4
92-0891	Shaft W. A. - Shift	8	16	1	322-14	Screw - Cap Hex. Hd.	12	11	2
92-0894	Spring - Torsion	8	11	1	322-50	Screw - Cap Hex. Hd.	12	4	1
92-0895	Gate - Shift	6	3	1	323-9	Screw - Cap Hex. Hd.	9	32	1
92-0896	Retainer - Spring	8	29	1	323-9	Screw - Hex Hd. Cap	12	21	2
92-0897	Spacer	12	1	1	323-14	Screw - Hex Hd. Cap	12	17	2
92-0898	Guide - Belt	12	2	1	325-6	Screw - Cap Hex. Hd.	2	8	1
92-0899	Guide - Belt, Lower	11	21	1	329-4	Screw - Cap Hex. Hd.	11	3	1
92-1751	Decal - Shift Pattern	6	2	1	3218-1	Nut - Jam	6	18	2
92-7974	Tread - Foot R.H.	1	*	1	3219-7	Nut - Hex. Hd.	13	23	1
92-7975	Tread - Foot L.H.	1	15	1	3220-2	Nut - Hex. Jam	2	7	1
92-7982	Decal - Control Panel	5	27	1	3230-18	Bolt - Carriage	2	32	2
92-7983	Decal - Deck Engage	4	9	1	3253-3	Washer - Lock	11	2	1
92-7984	Decal - H.O.C.	4	21	1	3253-3	Washer - Lock	6	16	4
92-7987	Decal - Recycler	1	3	1	3253-3	Washer - Lock	9	18	2
92-7988	Decal - Recycler	13	35	1	3253-6	Washer - Lock	9	26	1
92-7989	Decal - Important	2	39	1	3254-2	Washer - Lock, Int. Tooth	9	5	4
92-7990	Insert - Wheel, Steering	4	4	1	3254-2	Washer - Lock, Int. Tooth	11	20	1
93-1194	Decal - L.H.	5	10	1	3254-5	Washer - Lock, Int. Tooth	4	8	1
217-80	Rim	2	3	2	3256-14	Washer - Flat	6	9	1
218-461	Nut - Lock	4	7	1	3256-22	Washer - Flat	8	13	2
218-560	Cap - Battery	8	28	6	3256-22	Washer - Flat	1	18	2
231-116	Tire	2	42	2	3256-22	Washer - Flat	9	30	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
3256-23	Washer - Flat	12	7	12	3296-29	Nut - Lock	6	5	2
3256-23	Washer - Flat	6	7	2	3296-29	Nut - Lock	9	6	2
3256-23	Washer - Flat	1	13	8	3296-29	Nut - Lock	2	10	8
3256-23	Washer - Flat	5	17	4	3296-29	Nut - Lock	11	19	1
3256-23	Washer - Flat	4	18	7	3296-29	Nut - Lock	13	19	24
3256-23	Washer - Flat	2	23	6	3296-29	Nut - Lock	4	19	4
3256-23	Washer - Flat	13	27	8	3296-29	Nut - Lock	8	32	4
3256-23	Washer - Flat	8	33	2	3296-39	Nut - Lock	9	3	1
3256-24	Washer - Flat	1	11	1	3296-39	Nut - Lock	12	19	2
3256-24	Washer - Flat	12	15	4	3296-39	Nut - Lock	13	31	2
3256-24	Washer - Flat	9	33	1	3296-42	Nut - Lock	6	15	2
3256-25	Washer - Flat	9	25	1	3296-42	Nut - Lock	8	15	2
3256-26	Washer - Flat	5	25	1	3296-42	Nut - Lock	1	17	2
3256-27	Washer - Flat	3	13	3	3296-42	Nut - Lock	5	18	1
3256-35	Washer - Flat	1	1	4	3296-47	Nut - Lock	12	12	1
3256-49	Washer - Flat	13	56	1	3296-59	Nut - Lock	12	14	3
3256-57	Washer - Flat	9	36	1	3296-59	Nut - Lock	13	15	1
3257-23	Key	11	6	1	32103-2	Nut - Wing	13	18	1
3272-6	Pin - Cotter	3	1	3	32103-12	Nut - Wing	8	20	1
3272-6	Pin - Cotter	5	4	2	32103-22	Nut - Wing	8	23	2
3272-6	Pin - Cotter	1	12	1	32104-76	Screw - Self Tap Acorn Hd.	1	5	9
3272-6	Pin - Cotter	2	14	2	32104-76	Screw - Self-Tapping	4	14	2
3272-6	Pin - Cotter	11	22	1	32107-11	Nut - Square	9	17	2
3272-6	Pin - Cotter	9	31	1	32120-47	Ring - Retaining	8	7	1
3272-6	Pin - Cotter	13	36	2	32120-64	Ring - Retaining	11	5	1
3272-12	Pin - Cotter	2	45	2	32121-9	Pin - Roll	2	28	1
3272-16	Pin - Cotter	11	9	1	32121-16	Pin - Roll	8	17	1
3274-51	Screw - Hex. Socket Hd.	9	19	2	32121-25	Pin - Roll	8	3	1
3290-134	Screw - Machine	6	10	1	32121-78	Pin - Roll	4	3	1
3290-191	Nut - Speed	6	23	2	32121-78	Pin - Roll	8	9	1
3290-282	Rivet	13	7	2	32122-14	Screw - Truss, Phillips Hd.	13	38	8
3290-282	Rivet	13	53	2	32128-20	Nut - Flange Hd.	7	5	4
3290-307	Pin - Cotter, Hair	7	9	1	32128-21	Nut - Lock, Flange Hd.	2	25	1
3290-354	Nut - Double	6	20	1	32128-23	Nut - Lock, Flange Hd.	2	26	1
3290-354	Nut - Double	4	22	1	32144-4	Screw - Special	2	21	2
3290-378	Tie - Cable	7	6	1	32144-14	Screw	9	12	2
3290-378	Tie - Cable	4	26	1	32144-14	Screw - Thread Forming	2	38	2
3290-413	Washer - Belleville	5	7	8	32144-112	Screw - Sems	6	22	2
3290-465	Washer - Belleville	13	57	1	32151-48	Ring - Retaining	11	13	2
3290-496	Nut - Retainer	13	28	4	32151-48	Ring - Retaining, External	2	35	2
3296-2	Nut - Lock	6	19	1	32151-61	Ring - Retaining	5	14	2
3296-4	Nut - Lock	8	30	1					
3296-4	Nut - Lock	2	36	4					
3296-8	Nut - Lock	2	12	1					
3296-8	Nut - Lock	5	23	1					
3296-8	Nut - Lock	8	36	1					
3296-8	Nut - Lock	13	46	1					
3296-29	Nut - Lock	5	1	7					
3296-29	Nut - Lock	1	2	14					
3296-29	Nut - Lock	12	3	17					
3296-29	Nut - Lock	3	4	3					

OPTIONAL EQUIPMENT

Easy Empty Bagging Kit Model No. 79095
Twin Bag Bagger Kit Model No. 79085
Tire Chains Part No. 23-2340
Wet Grass Bagging Kit Part No. 38-5730

