 




MODEL NO. 03420-50001 & UP

PARTS CATALOG

REELMASTER® 216-D 2wd TRACTION UNIT

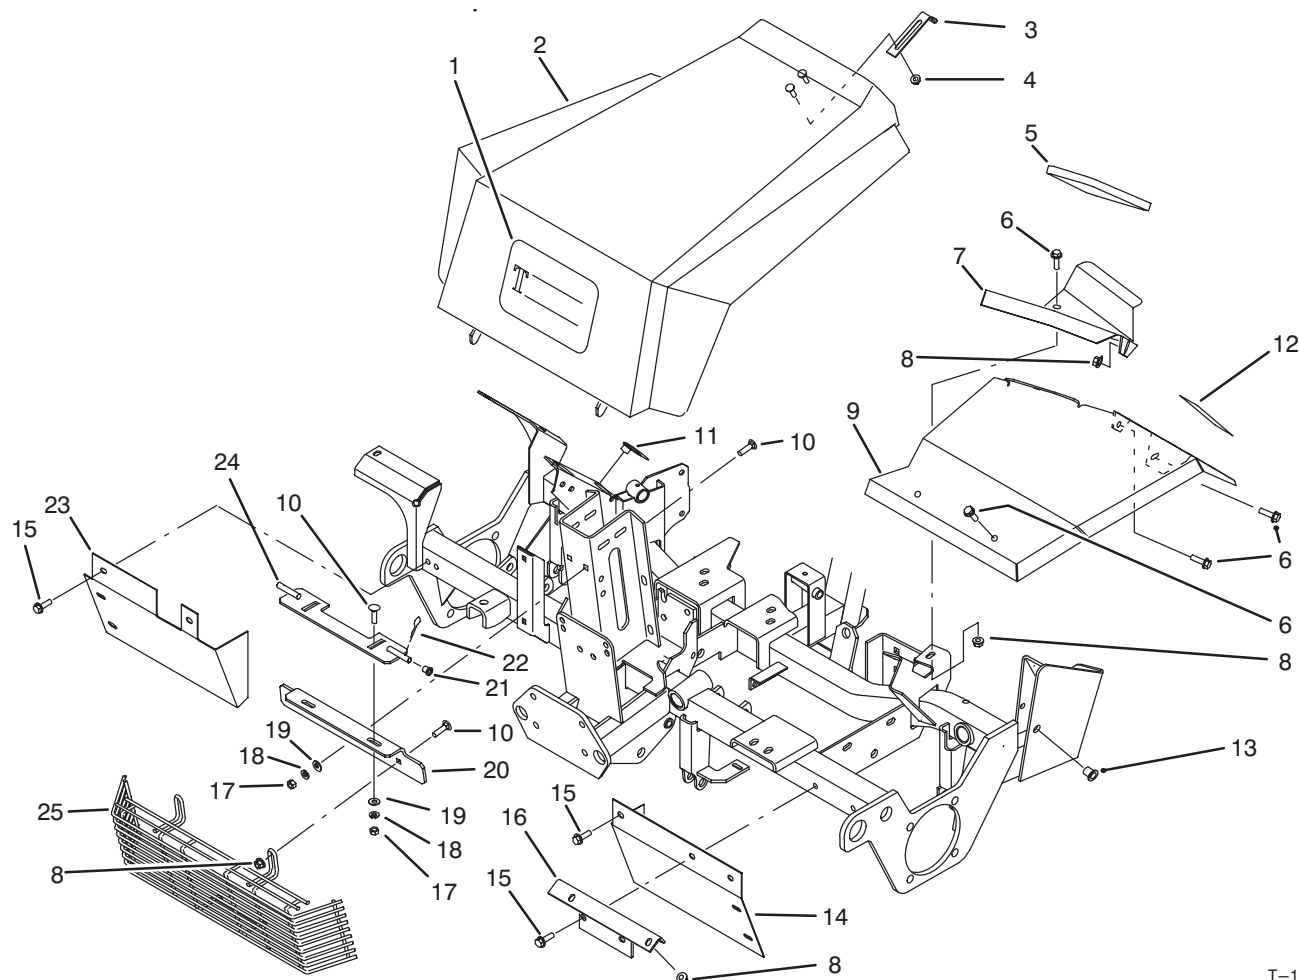

T-1347

HOOD & GRILLE ASSEMBLY


Ref. No.	Part No.	Description	No. Used
1	62-7400	Decal - TORO	1
2	14-5759	Hood	1
3	83-9970	Latch - Hood	1
4	32128-14	Nut - Flange Lock	2
5	83-9840	Pad - Footrest L.H.	1
6	3234-5	Screw - Hex. Washer Hd.	12
7	83-9710	Footrest - L.H.	1
8	32128-44	Nut - Flange Lock	10
9	83-9700	Fender - L.H.	1
10	3230-23	Screw - Carriage	6
11	32148-7	Insert - Threaded	3
†12	84-1650	Decal - Brake	1
13	32148-8	Insert - Threaded	1

Ref. No.	Part No.	Description	No. Used
14	83-9800	Shield - Grass Front L.H.	1
15	32104-82	Screw - Hex. Washer Hd.	5
16	83-8510	Bracket - Fender L.H.	1
17	3217-6	Nut - Hex.	4
18	3253-4	Washer - Lock	4
19	3256-23	Washer - Flat	4
20	85-4870	Support - Hinge	1
21	256-320	Bushing	2
22	3290-467	Pin - Cotter Hair	2
23	83-8860	Shield - Grass Front R.H.	1
24	85-4890	Hinge - Hood	1
25	83-8850	Grille - Front	1

†For different language versions of this part, see International Parts Reference.

The TORO Company -1994
All Rights Reserved

 TPS

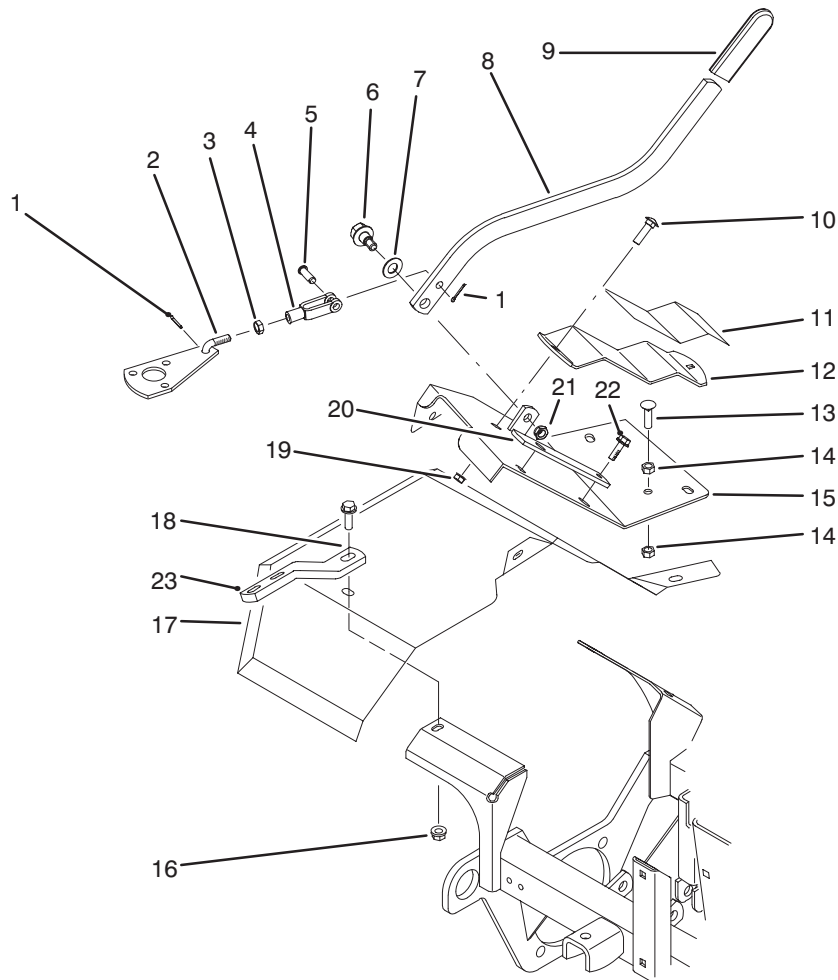


T-1816A

RIGHT FOOTREST & PUMP CLUTCH LEVER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3272-6	Pin - Cotter	2
2	92-7921	Rod - Link	1
3	3220-2	Nut - Jam	1
4	282-2	Clevis	1
5	283-1	Pin - Clevis	1
6	67-0870	Bolt - Shoulder	1
7	3290-413	Washer - Belleville	1
8	92-7923	Lever - Pump Clutch	1
9	62-9130	Grip - Handle	1
10	3229-1	Screw - Carriage	2
11	76-2260	Pad - Footrest	1
12	76-2200	Footrest - Traction	1

Ref. No.	Part No.	Description	No. Used
13	3230-27	Screw - Carriage	1
14	32128-20	Nut - Jam	2
15	83-9740	Footrest - RH	1
16	32128-44	Nut - Flange Lock	3
17	83-9720	Fender - RH	1
18	3234-5	Screw - Hex. Flange Hd.	1
19	32128-33	Nut - Flange Lock	2
20	92-7918	Bracket - Lever	1
21	3296-59	Nut - Lock	1
22	3234-17	Screw - Hex. Flange Hd.	2
23	93-0100	Bracket - Exhaust	1

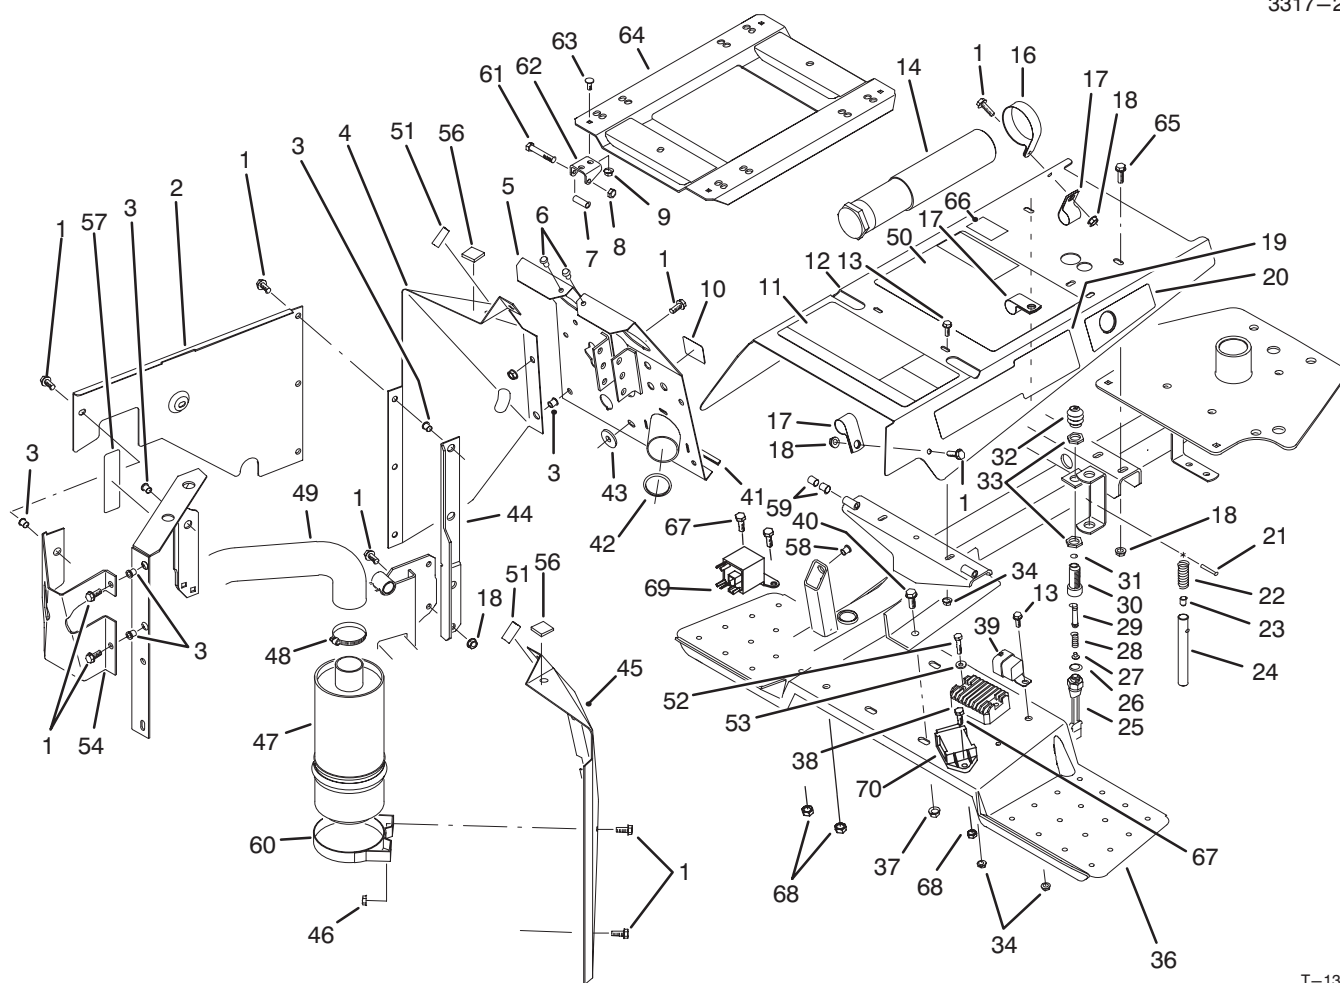 


T-1348A

SKIRT ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3234-5	Screw - Hex. Flange Hd.	24	29	43-8860	Plunger - Switch	1
2	83-8230	Panel - Right Front	1	30	43-8620	Guide - Pin	1
3	32148-7	Insert - Threaded	8	31	237-7	Seal - O-Ring	1
4	83-8120	Panel - Right Rear	1	32	43-8870	Boot - Switch	1
5	83-8190	Panel - Control	1	33	218-461	Nut - Hex.	2
6	237-37	Bumper - Rubber	2	34	32128-33	Nut - Flange Lock	5
7	85-5340	Tube - Seat Pivot	2	36	83-9730	Step - Foot	1
8	3296-42	Nut - Lock	2	37	32128-43	Nut - Flange Lock	4
9	32128-33	Nut - Flange Lock	2	†38	185516060	Regulator - Voltage	1
‡10	83-9150	Decal - Starting Fluid	1	39	70-1480	Relay	1
‡11	83-9550	Decal - Warning	1	40	3234-11	Screw - Hex. Flange Hd.	4
12	92-3182	Panel - Skirt	1	41	76-6471	Trim - Control Panel Bottom	1
13	3234-4	Screw - Hex. Flange Hd.	3	42	237-71	Seal - O-Ring	1
14	74-0720	Tube - Manual	1	43	62-7170	Spacer	1
16	2412-133	Clamp - R	2	44	83-9170	Right Channel Assembly (Incl. Ref. #3)	1
17	2412-39	Clamp - R	3	45	83-8110	Panel - Left	1
18	32128-44	Nut - Flange Lock	10	46	32128-20	Nut - Flange Lock	4
19	83-8890	Decal - Reelmaster 216-D	2	47	85-4910	Air Cleaner Assembly	1
21	32121-6	Pin - Roll	1	48	2412-92	Clamp - Hose	1
22	37-9590	Spring - Compression	1	49	83-8550	Hose - Air Cleaner	1
23	28-6180	Pin	1	‡50	83-8900	Decal - Service Information	1
24	27-9870	Pin - Seat	1	51	85-5180	Trim	2
25	72-4320	Switch - Seat	1	52	321-8	Screw - Cap Hex. Hd.	2
26	237-30	Seal - O-Ring	1	53	3256-22	Washer - Flat	2
27	43-8610	Guide - Spring	1	54	85-5010	Bracket - Right Front	1
28	43-8600	Spring - Compression	1				

†Obtain from your Local Perkins Dealer

 ‡For different language versions of this part, see International Parts Reference.

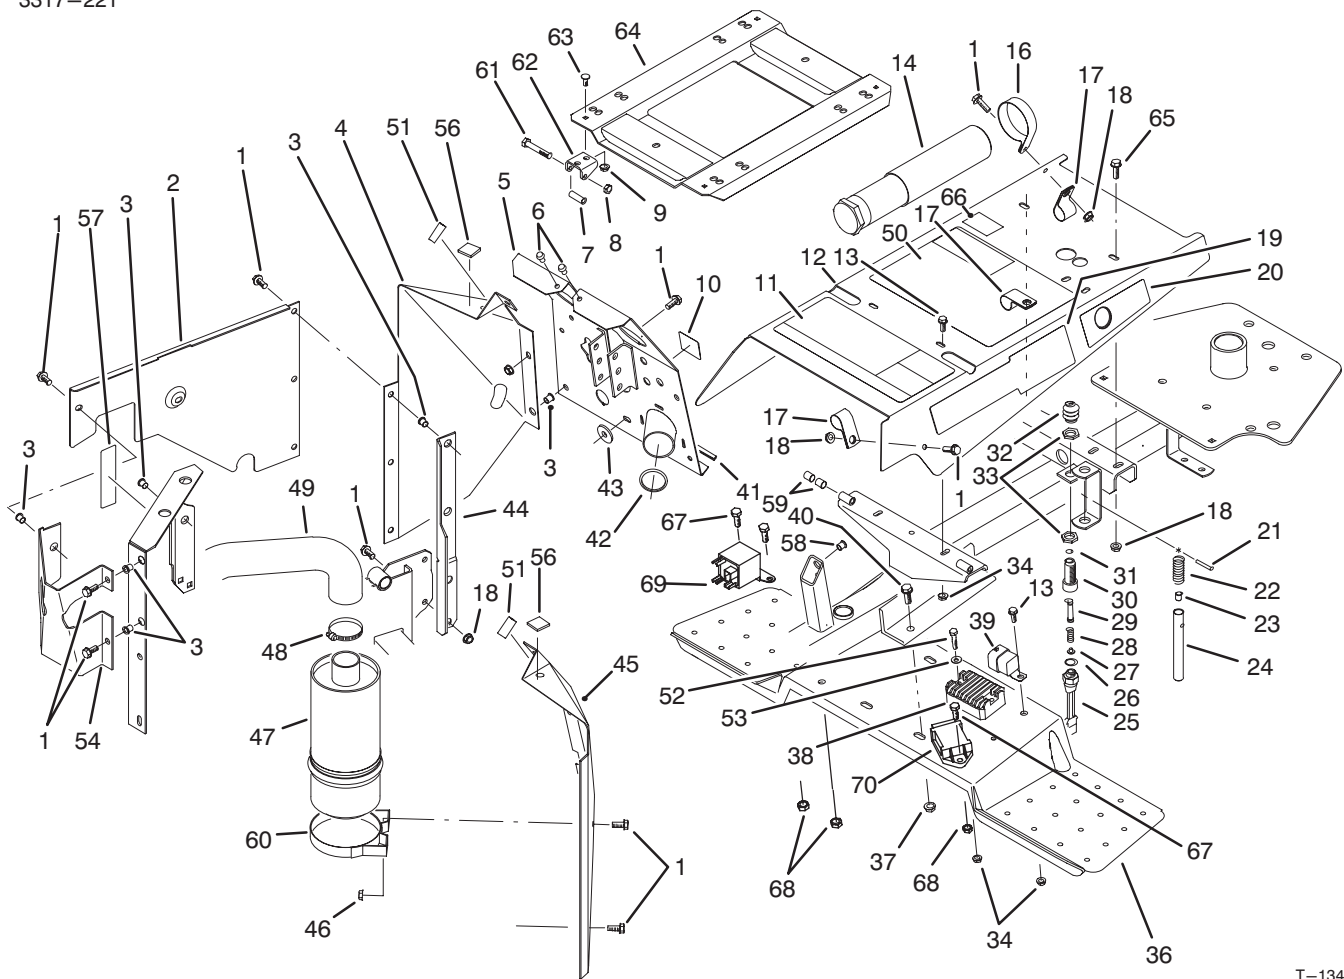


T-1348A

SKIRT ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
54	85-5140	Foam – Hood	2	65	3230-2	Bolt – Carriage	2
†57	67-5360	Decal – Danger	1	67	321-4	Screw – Cap Hex. Hd.	3
58	32148-8	Insert – Threaded	1	68	3296-56	Nut – Lock	3
59	256-321	Bushing – Sleeve	4	†69	385230120	Relay – Plug, Glow	1
60	33-1350	Clamp Assembly	2	†70	385870612	Controller – Plug, Glow	1
61	321-11	Screw – Cap Hex. Hd.	2	*	3290-379	Tie – Cable	1
62	85-5230	Bracket – Seat Pivot	2	*	43-9071	Seat Switch Assembly (Incl. Ref. #25-33)	1
63	3229-22	Bolt – Carriage	2				
64	85-5330	Plate – Seat Mounting	1				

*Not Illustrated

 †Obtain from your local Perkins Dealer.

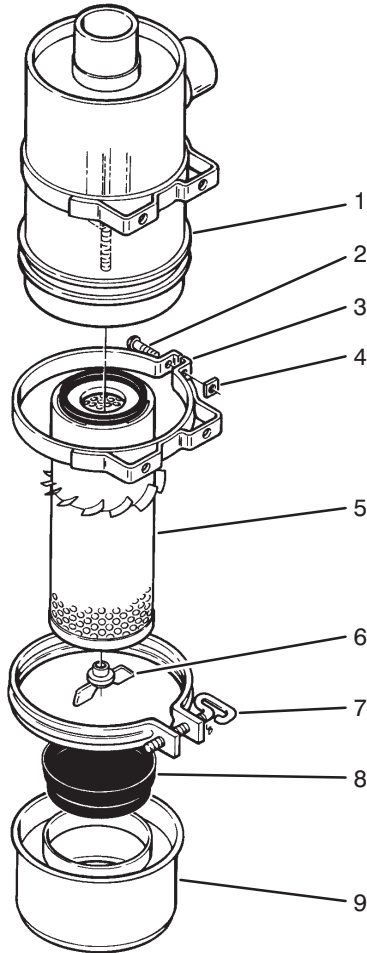


T-1349

AIR CLEANER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1		Body	1	6	33-1330	Nut Assembly	1
2	3258-19	Screw - Round Hd.	2	7	33-1340	Clamp Assembly	1
3	33-1350	Band Assembly (Incl. Ref. #2 & 4)	2	8	33-1310	Baffle	1
4	32107-11	Nut - Square	2	9	33-1320	Cup	1
5	33-1300	Element Assembly	1	*	85-4910	Air Cleaner (Complete) (Incl. Ref. #1 & 5-9)	1

 *Not Illustrated

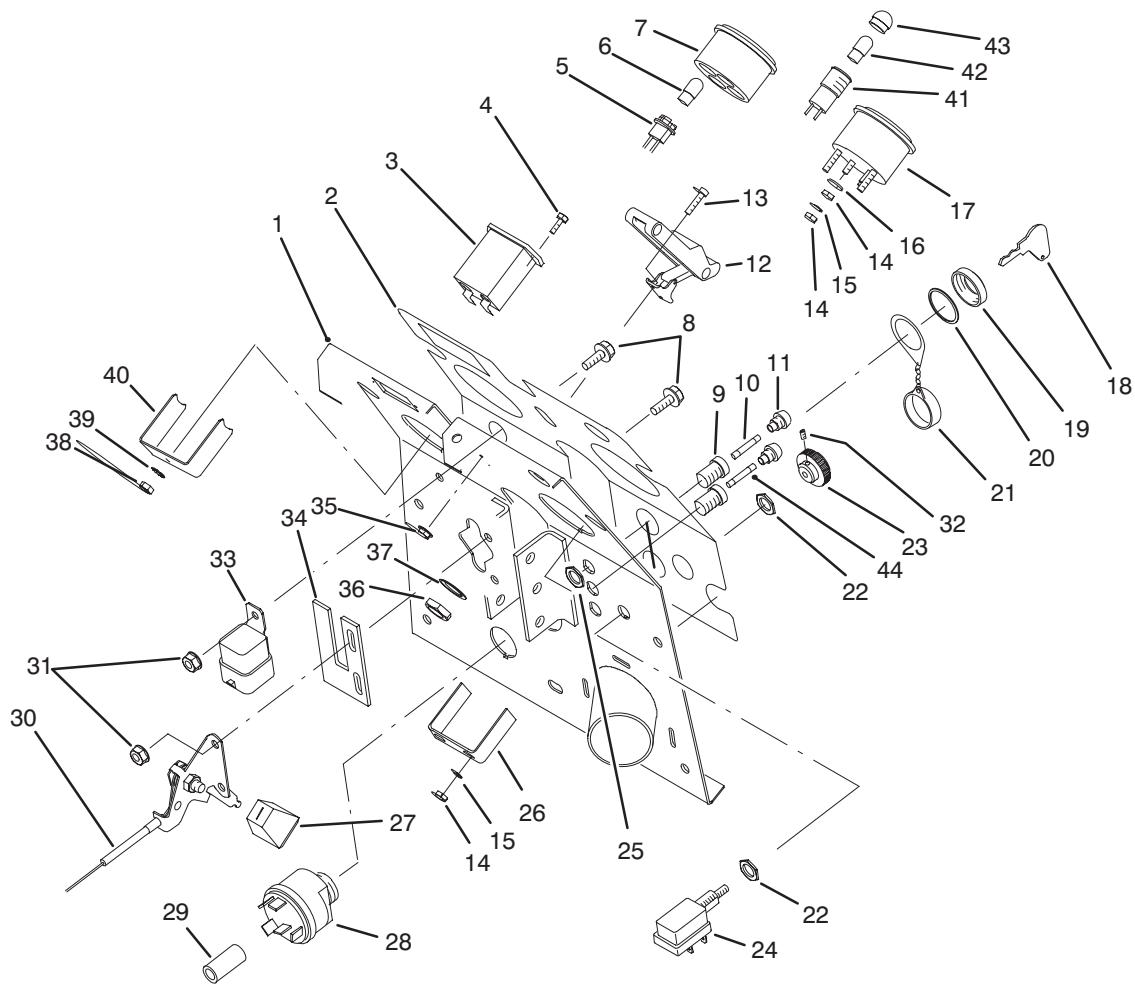

T-1350A


INSTRUMENT PANEL ASSEMBLY


Ref. No.	Part No.	Description	No. Used
1	93-4412	Panel - Instrument	1
2	93-4413	Decal - Instrument Panel	1
3	75-6820	Hourmeter	1
4	32144-18	Screw - Hex. Hd.	2
5	87-6270	Socket - Warning Light	1
6	219-17	Bulb - Light	4
7	92-9775	Warning Light Assembly (Incl. Ref. #5, 6 & 38-40)	1
8	3234-4	Screw - Hex. Washer Hd.	3
9	218-489	Fuse Holder Assembly (Incl. Ref. #11 & 25)	3
10	218-469	Fuse - 15 Amp.	2
11		Cap - Fuse Holder	2
12	80-6980	Latch - Hood	1
13	3274-90	Screw - Hex. Socket Hd.	2
14	3219-14	Nut - Hex.	6
15	3253-2	Washer - Lock	5
16	3256-14	Washer - Flat	2
17	93-4411	Temperature Gauge Assy. (Incl. Ref. #14-16 & 26)	1
18	85-5270	Key - Starter	2
†19		Nut - Retaining	1
†20	390190030	Seal - Switch	1
†21	385800010	Cover - Switch	1
22	3218-19	Nut - Hex.	2
23	92-3195	Knob	1

Ref. No.	Part No.	Description	No. Used
24	92-3194	Switch Assembly (Incl. Ref. #22, 23 & 32)	1
25		Nut - Hex.	2
26		Clamp - Gauge	1
27		Knob - Throttle	1
†28	385201160	Starter Switch Assembly (Incl. Ref. #18 & 19)	1
29	80-7345	Hose	1
30	92-3153	Throttle Assembly (Incl. Ref. #27)	1
31	32128-33	Nut - Flange Lock	3
32	3298-8	Screw - Set	1
33	70-1480	Relay	1
34	85-5000	Plate - Throttle	1
35	32149-9	Nut - Flange Lock	2
36		Nut - Hex.	1
37		Washer - Flat	1
38	3217-26	Nut - Hex.	1
39	3254-11	Washer - Lock ETLW	1
40		Clamp - Mounting	1
41	44-2212	Light Assembly (Incl. Ref. #36-37 & 42-43)	1
42	219-18	Bulb - Light	1
43	218-562	Lens - Light	1
44	93-4410	Fuse - 25 Amp (Slo-Blo)	1

†Obtain from your local Perkins Dealer.

  ELECTRICAL SCHEMATIC

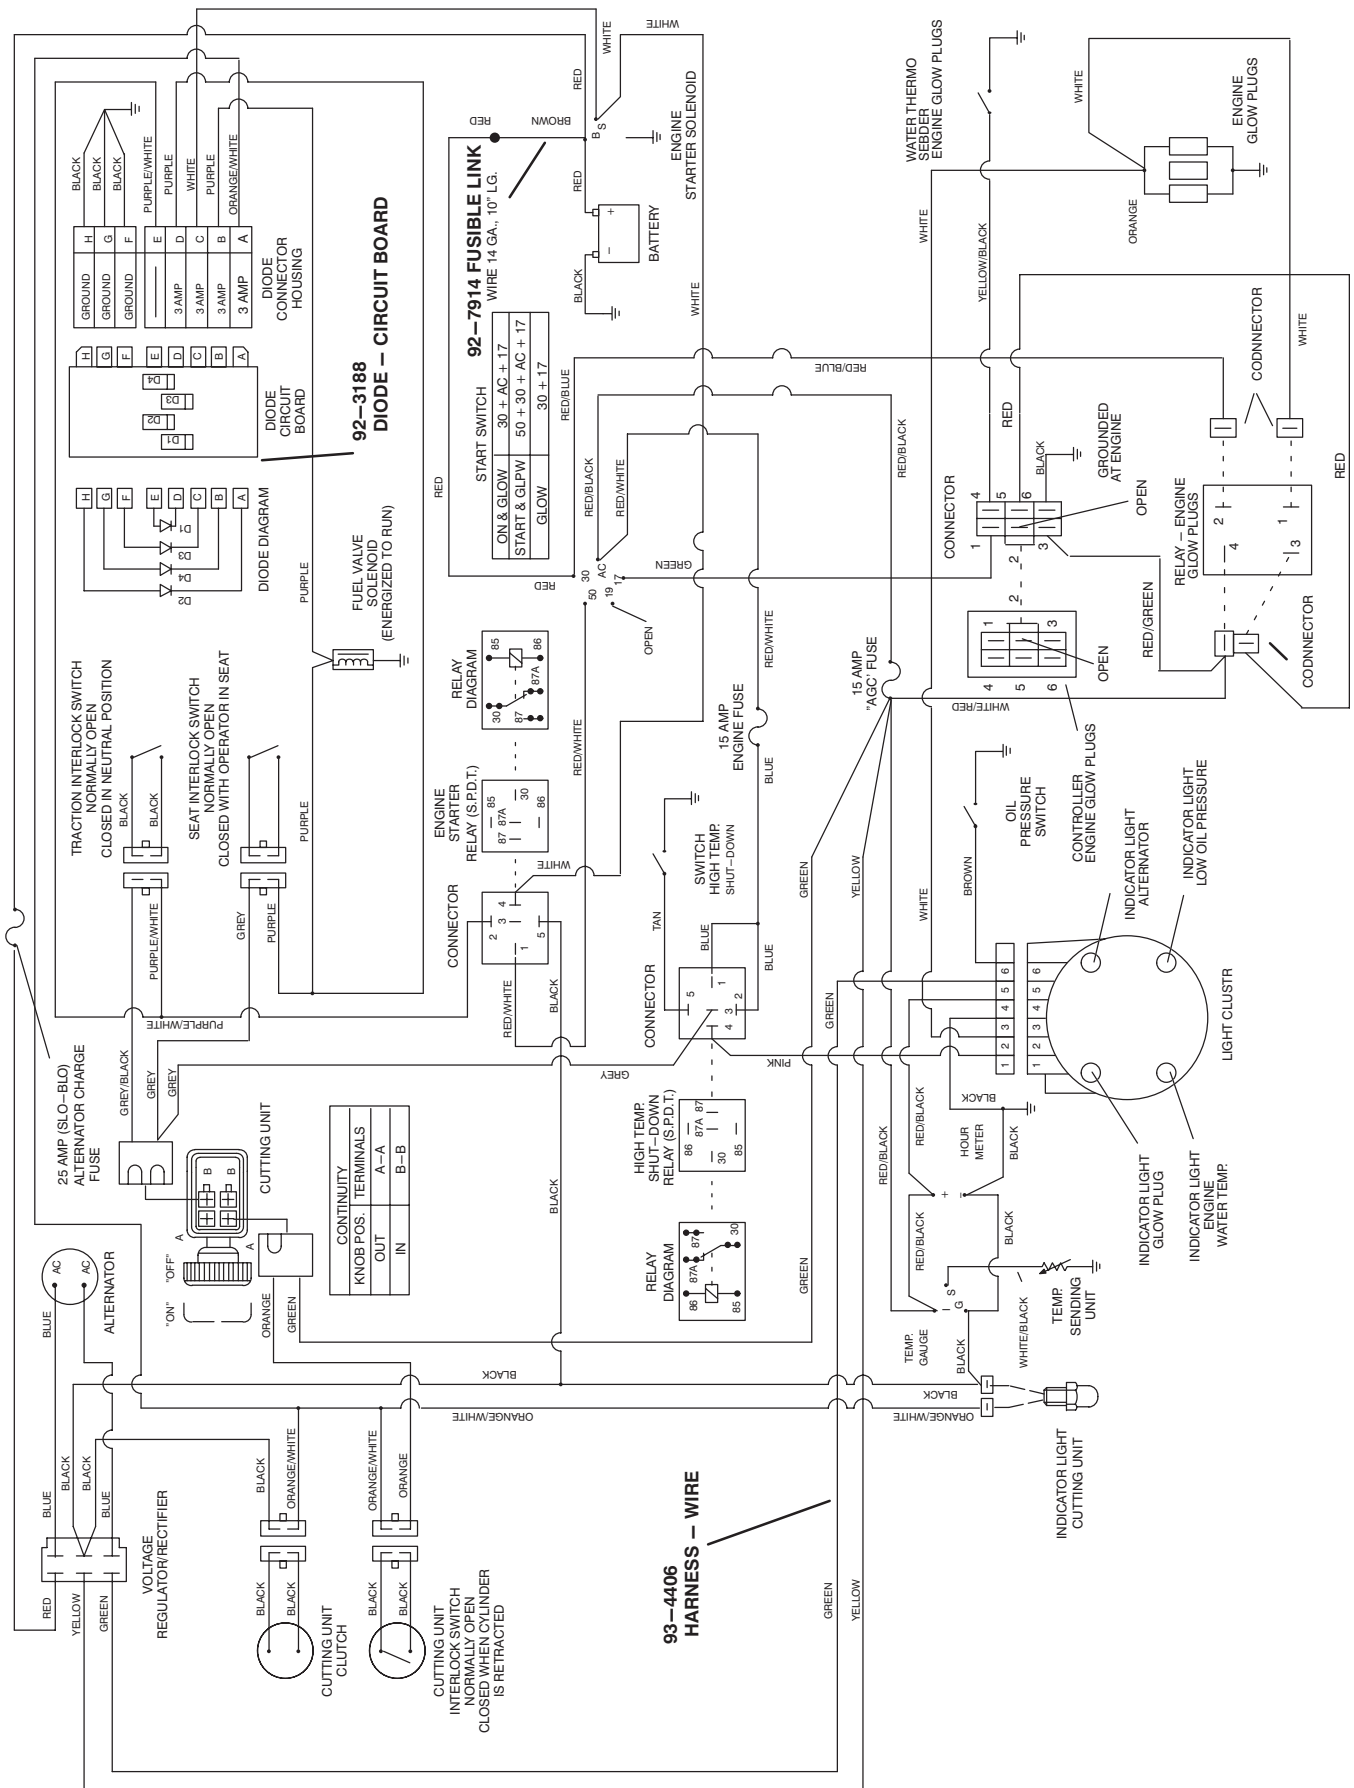


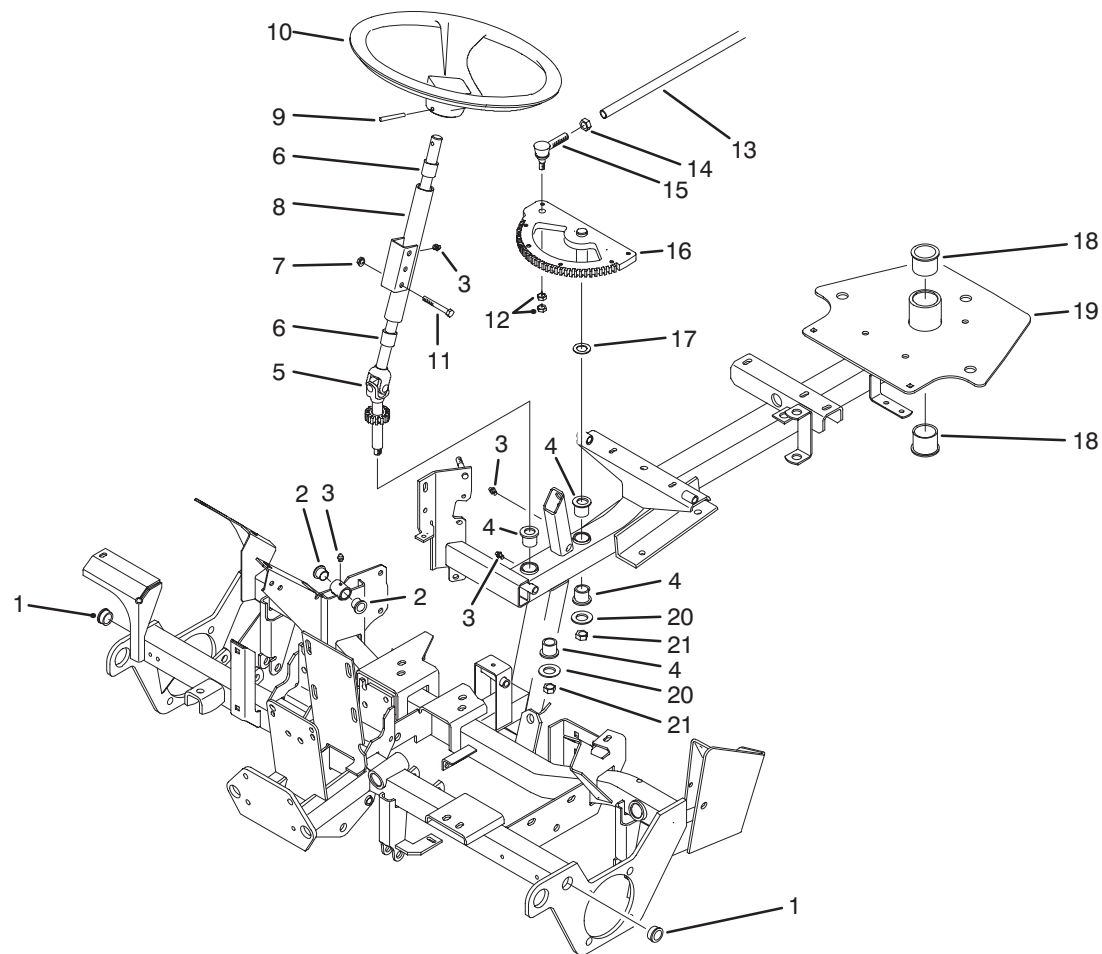

T-1351A

FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	256-247	Bushing - Flange	2	12	3220-3	Nut - Jam	2
2	75-2160	Bushing - Flange	2	13	61-2070	Rod - Steering	1
3	302-5	Fitting - Grease	4	14	3220-5	Nut - Jam	1
4	92-3162	Bushing - Flange	4	15	21-0150	Rod End Assembly (Incl. Ref. #12)	1
5	92-3165	Steering Shaft & Gear	1	16	92-3172	Gear - Steering	1
6	256-27	Bushing - Sleeve	2	17	3-6498	Washer - Thrust	A/R
7	3296-29	Nut - Flange Lock	1	18	256-245	Bushing - Flange	2
8	61-2090	Steering Column Assembly (Incl. Ref. #6)	1	19	92-2373	Frame	1
9	32121-10	Pin - Roll	1	21	3256-26	Washer - Flat	2
10	76-1420	Wheel - Steering	1	22	3296-28	Nut - Lock	2
11	322-12	Screw - Cap Hex. Hd.	1				

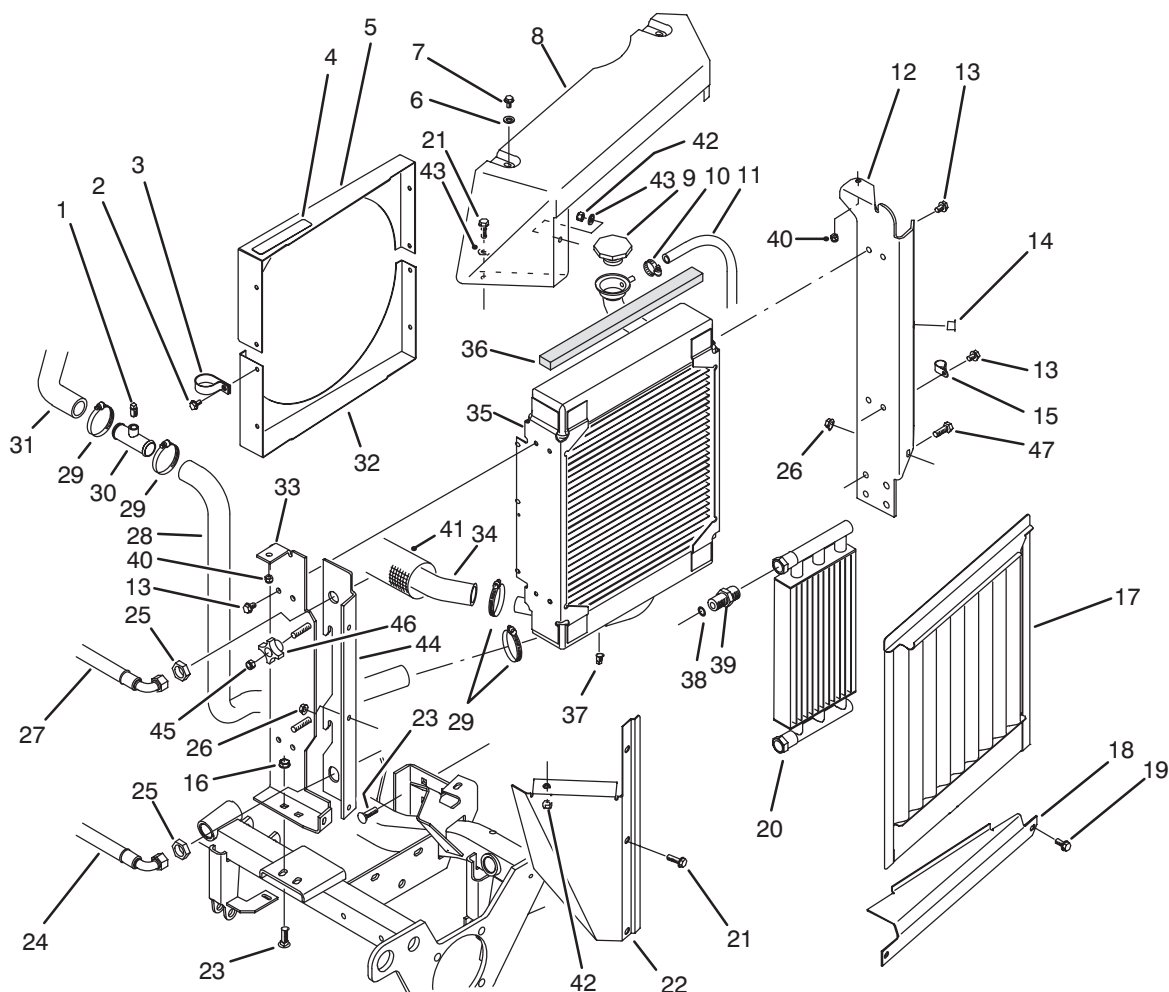 


T-1352

RADIATOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	281-7	Plug - Pipe	1	25	340-127	Nut - Bulkhead	2
2	32104-116	Screw - Hex. Washer Hd.	8	26	32128-44	Nut - Flange Lock	4
3	2412-74	Clamp - R	1	27	92-1177	Hose - Hydraulic	1
‡4	77-3100	Decal - Warning	1	28	83-9060	Hose - Radiator	1
5	16-1149	Top Shroud Assembly (Incl. Ref. #4)	1	29	2412-34	Clamp - Hose	5
6	3256-22	Washer - Flat	2	30	83-9080	Connector - Bleed	1
7	3234-4	Screw - Cap Hex. Hd.	2	31	83-9070	Hose - Radiator	1
8	83-8040	Cover - Left	1	32	83-7850	Shroud - Fan Bottom	1
9	66-3240	Cap - Radiator	1	33	88-6720	Bracket - Radiator Front	1
10	2412-108	Clamp - Hose	1	34	83-9050	Hose - Radiator	1
11	71-3382	Hose - Overflow	1	35	83-7550	Radiator Assembly (Incl. Ref. #37)	1
12	83-7980	Bracket - Radiator Rear	1	36	83-9030	Foam - Top	1
13	3234-28	Screw - Hex. Washer Hd.	8	37	281-1	Plug - Pipe	2
14	32148-8	Insert - Threaded	3	38	237-30	Seal - O-Ring	2
15	2412-41	Clamp - R	1	39	83-7970	Fitting - Hydraulic Bulkhead (Incl. Ref. #38)	2
16	32128-43	Nut - Flange Lock	6	40	3296-42	Nut - Lock	2
17	83-8150	Screen - Radiator	1	41	85-5170	Sleeve	1
18	83-8070	Bracket - Radiator Bottom	1	42	3296-29	Nut - Lock	2
19	3234-5	Screw - Hex. Washer Hd.	2	43	3256-23	Washer - Flat	2
20	24-0760	Cooler - Oil	1	44	88-6730	Bracket - Screen Front	1
21	3234-17	Screw - Hex. Washer Hd.	4	45	32153-3	Nut - Lock	2
22	83-8210	Panel - Front Left	1	46	92-2368	Knob - Clamp	2
23	3231-22	Bolt - Carriage	2	47	323-6	Screw - Cap Hex. Hd.	4
24	92-1583	Hose - Hydraulic	1				

 ‡For different language versions of this part, see International Parts Reference.

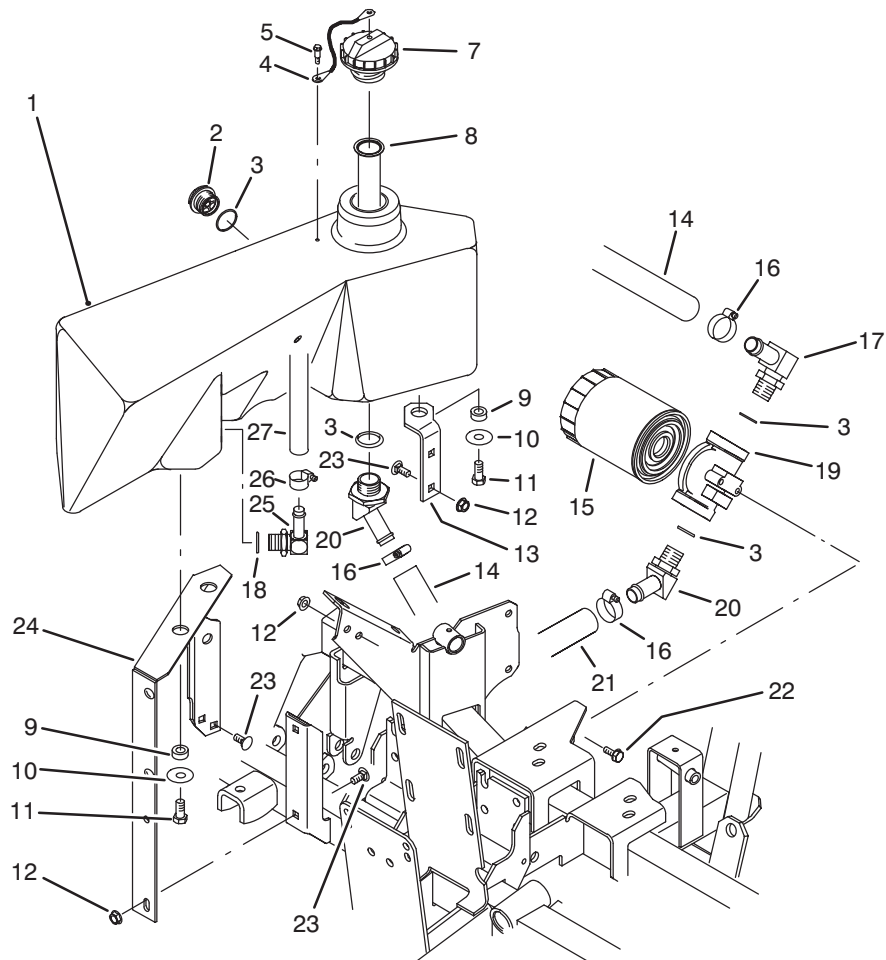


T-1353A

HYDRAULIC RESERVOIR & FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	83-7720	Reservoir – Hydraulic	1
2	69-1170	Glass – Sight (Incl. Ref. #3)	1
3	237-81	Seal – O-Ring	4
4	75-0540	Retainer	1
5	57-5420	Screw – Shoulder	1
7	93-3103	Cap – Hydraulic Reservoir (Incl Ref. #4 & 6)	1
8	61-2790	Screen – Filler	1
9	240-11	Grommet	3
10	63-8410	Washer – Flat	3
11	323-5	Screw – Cap Hex. Hd.	3
12	32128-44	Nut – Hex. Flange Hd.	6
13	83-9920	Bracket – Reservoir	1
14	83-9651	Hose – Hydraulic	1
15	54-0110	Element – Oil Filter	1

Ref. No.	Part No.	Description	No. Used
16	3212-34	Clamp – Hose	3
17	353-987	Fitting– Hydraulic 90° (Incl. Ref. #3)	1
18	237-79	Seal – O-Ring	1
19	68-8990	Head – Oil Filter	1
20	354-127	Fitting – Hydraulic 45° (Incl. Ref. #3)	2
21	83-9650	Hose – Hydraulic	1
22	3234-4	Screw – Hex. Washer Hd.	2
23	3230-23	Screw – Carriage	6
24	83-7780	Bracket – Support	1
25	354-120	Fitting – Hydraulic 90° (Incl. Ref. #18)	1
26	2412-36	Clamp – Hose	1
27	92-1178	Hose – Hydraulic	1

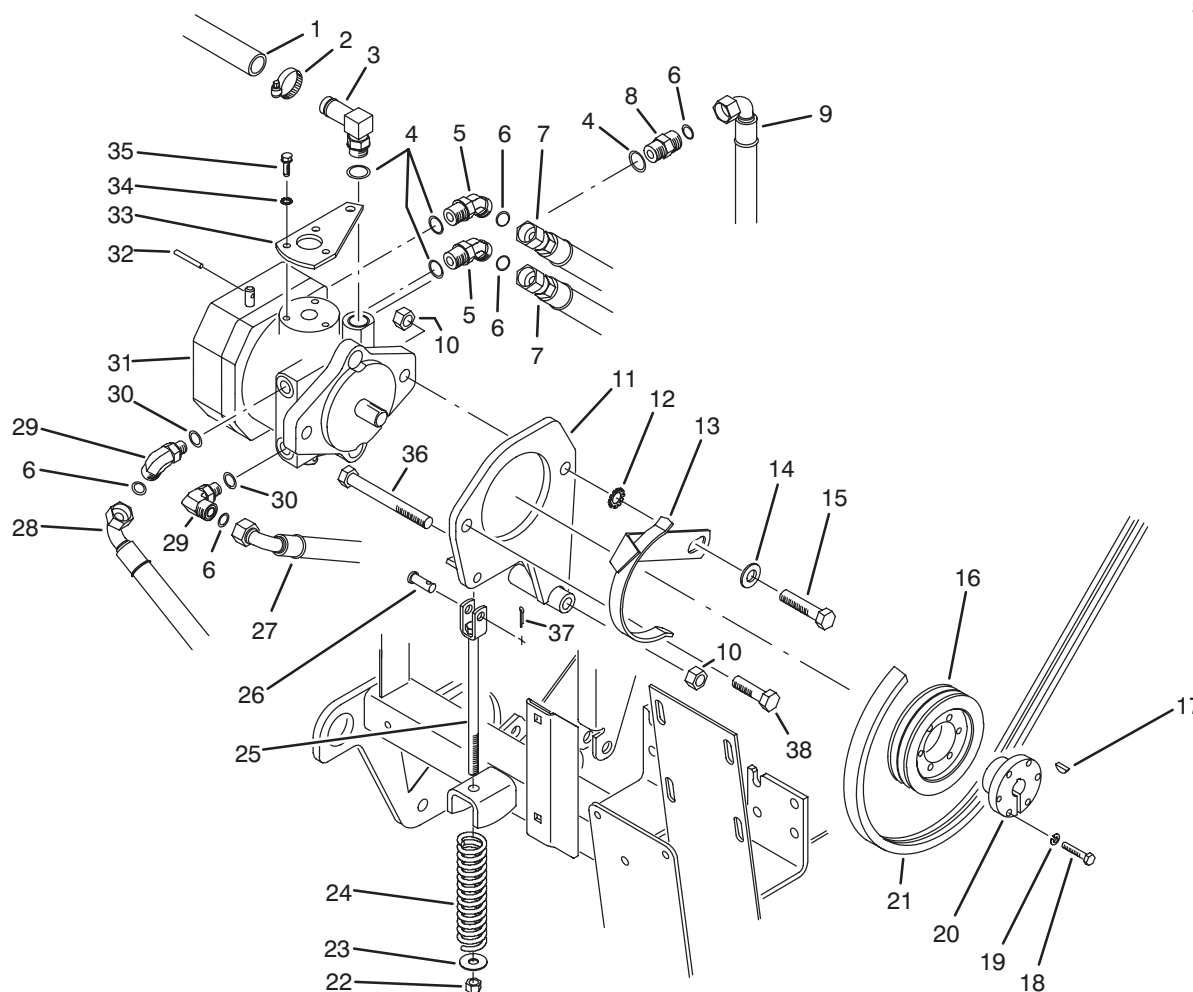 


T-1354

HYDRAULIC PUMP INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	83-9650	Hose – Hydraulic	1	21	92-3186	(Incl. Ref. #18 & 19) Belt – Pump Drive	1
2	2412-34	Clamp – Hose	1	22	3296-6	Nut – Lock	1
3	354-128	Fitting – Hydraulic 90° (Incl. Ref. #4)	1	23	52-2861	Washer – Flat	1
4	237-79	Seal – O-Ring	4	24	3-6692	Spring – Compression	1
5	340-101	Fitting – Hydraulic 45° (Incl. Ref. #4 & 6)	2	25	92-7917	Clevis	1
6	237-30	Seal – O-Ring	5	26	283-2	Pin – Clevis	1
7	83-9600	Hose – Hydraulic	2	27	83-9640	Hose – Hydraulic	1
8	340-4	Fitting – Hydraulic Straight (Incl. Ref. #4 & 6)	1	28	92-1583	Hose – Hydraulic	1
9	92-1178	Hose – Hydraulic	1	29	340-99	Fitting – Hydraulic 90° (Incl. Ref. #6 & 30)	2
10	3296-23	Nut – Lock	3	30	237-42	Seal – O-Ring	2
11	83-8320	Mount – Pump	1	31	92-9023	Hydraulic Pump Assembly (Incl. Ref. #17)	1
12	3255-2	Washer – Lock ETLW	1	32	32121-34	Pin – Dowel	1
13	92-7924	Retainer – Belt	1	33	92-7922	Plate – Pump Pivot	1
14	3256-26	Washer – Flat	1	34	3255-7	Washer – Lock ETLW	3
15	325-9	Screw – Cap Hex. Hd.	1	35	49-2040	Screw – Hex. Flange Hd.	3
16	61-3330	Pulley	1	36	325-18	Screw – Cap Hex. Hd.	1
17	3257-32	Key – Woodruff	1	37	3272-6	Pin – Cotter	1
18	321-13	Screw – Cap Hex. Hd.	3	38	325-8	Screw – Cap Hex. Hd.	1
19	3253-3	Washer – Lock	3	*	3290-378	Tie – Cable	1
20	59-2150	Taper Lock Bushing Assy.					

 *Not Illustrated

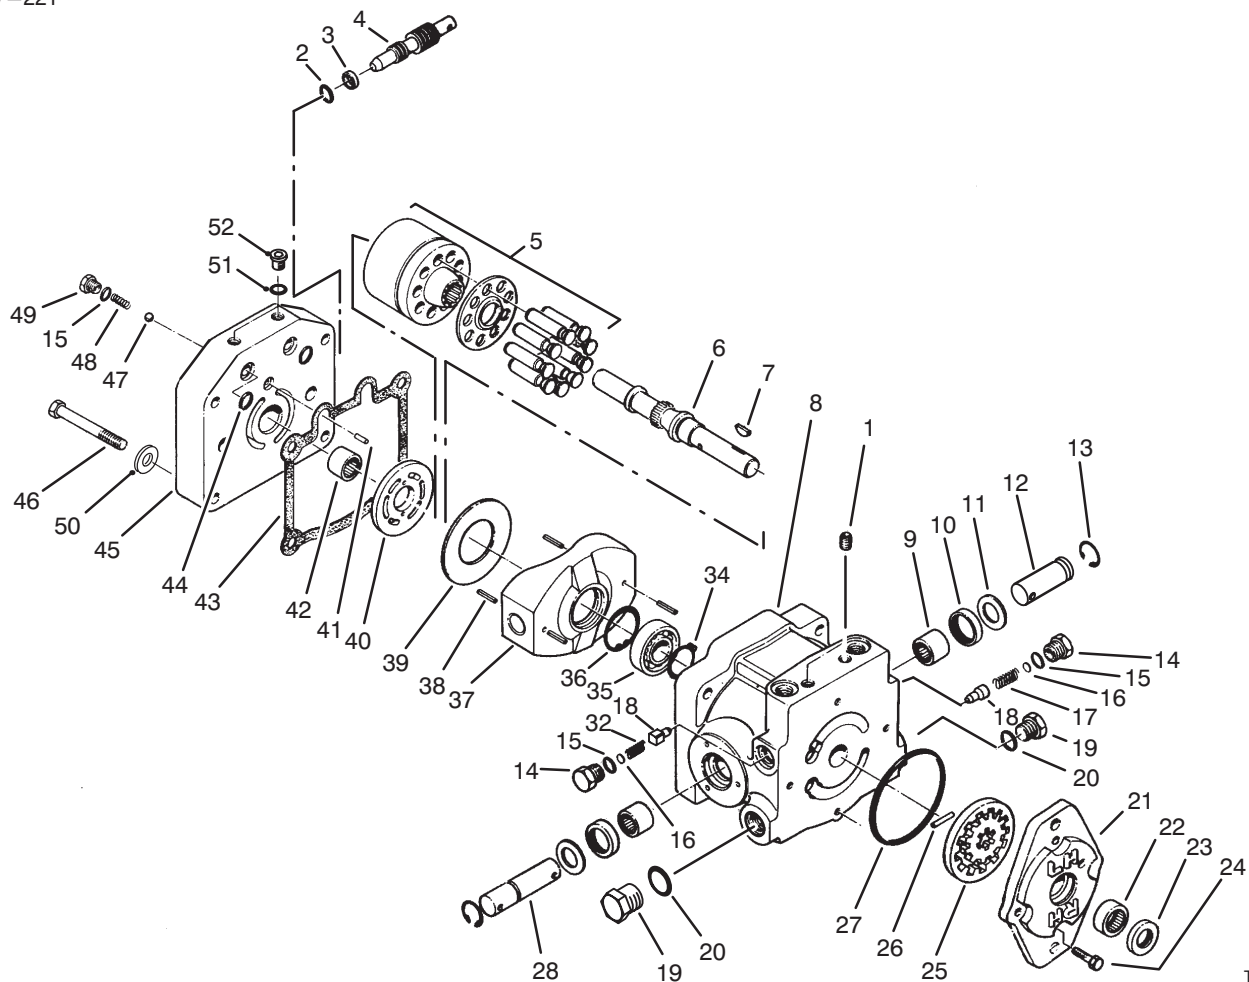


T-1809

HYDRAULIC PUMP ASSEMBLY NO. 92-9023

Ref. No.	Part No.	Description	No. Used
1	285-17	Plug - Pipe	6
2	237-22	O-Ring	1
3	25-2630	Ring	1
4	88-8220	Valve - By-Pass	1
5	48-1800	Cylinder Block Kit	1
6	67-8020	Shaft - Pump	1
7	3257-32	Key - Woodruff	1
8	92-9023	Hydraulic Pump Assembly (Complete)	1
9	252-82	Bearing - Needle	2
10	25-3210	Seal - Lip	2
11	25-2510	Washer	2
12	49-8480	Shaft - Trunion	1
13	32151-46	Ring - Retaining	2
14	25-2460	Plug	2
15	237-86	O-Ring	4
16	25-2470	Kit - Shim Pack	2
17	25-2570	Spring - Relief Valve	1
18	83-7260	Cone - Relief Valve	2
19	67-8030	Plug Assembly (Incl. Ref. #20)	2
20	67-8040	O-Ring	2
21	92-7940	Housing - Charge Pump	1
22	67-8050	Bearing - Needle	1
23	67-8060	Seal - Lip	1

Ref. No.	Part No.	Description	No. Used
24	322-4	Screw - Cap Hex. Hd.	4
25	25-2680	Gerotor Assembly	1
26	25-2530	Pin - Straight	1
27	237-95	O-Ring	1
28	28-3670	Shaft - Trunion	1
32	25-2480	Spring - Charge Relief	1
34	32120-15	Ring - Retaining	1
35	251-8	Bearing - Ball	1
36	32120-11	Ring - Retaining	1
37	25-2450	Swash/Plate	1
38	32121-91	Pin - Coiled Spring	3
39	25-2380	Plate - Thrust	1
40	25-2390	Plate - Valve	1
41	25-2430	Pin - Straight	1
42	46-8400	Bearing - Needle	1
43	25-2400	Gasket	1
44	62-4290	O-Ring	2
45		Cap - Pump End	1
46	323-11	Screw - Cap Hex. Hd.	4
47	25-2490	Ball - Check Valve	2
48	25-2640	Spring - Check Valve	2
49	25-2650	Plug - Check Valve	2
50	3256-24	Washer	1
51	92-8777	Seal - O-Ring	2

 *Not Illustrated

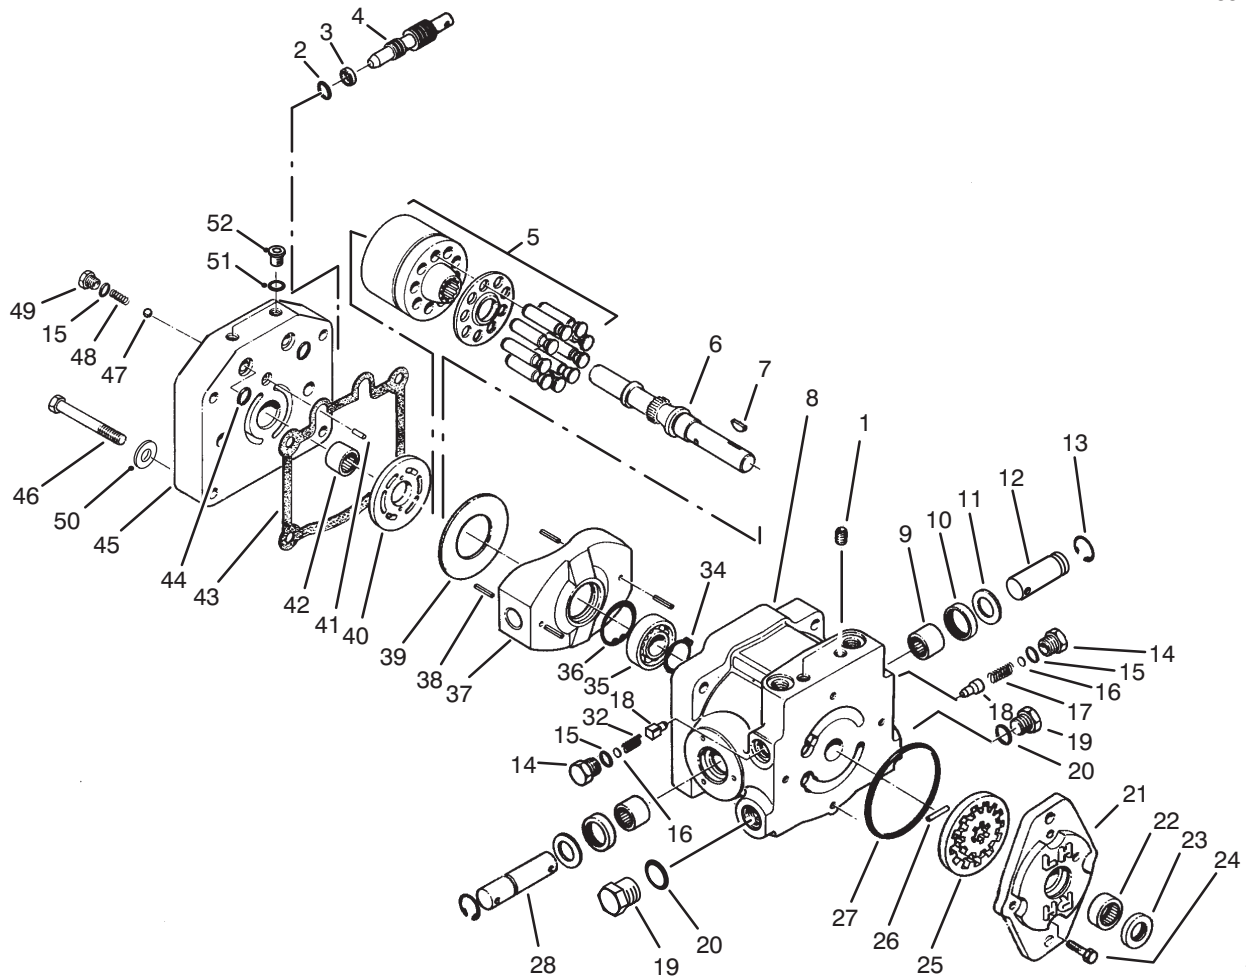


T-1809

HYDRAULIC PUMP ASSEMBLY NO. 92-9023 (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
52	92-8776	Plug Assembly (Incl. Ref. #51)	2	*	25-3180	Kit - Check Valve (Incl. Ref. #15, 47-49)	1
*	49-8510	Kit - Charge Relief (Incl. Ref. #14-16, 18 & 32)	1	*	49-8520	Kit - Implement Relief (Incl. Ref. #14-18)	1

*Not Illustrated

 3317-221

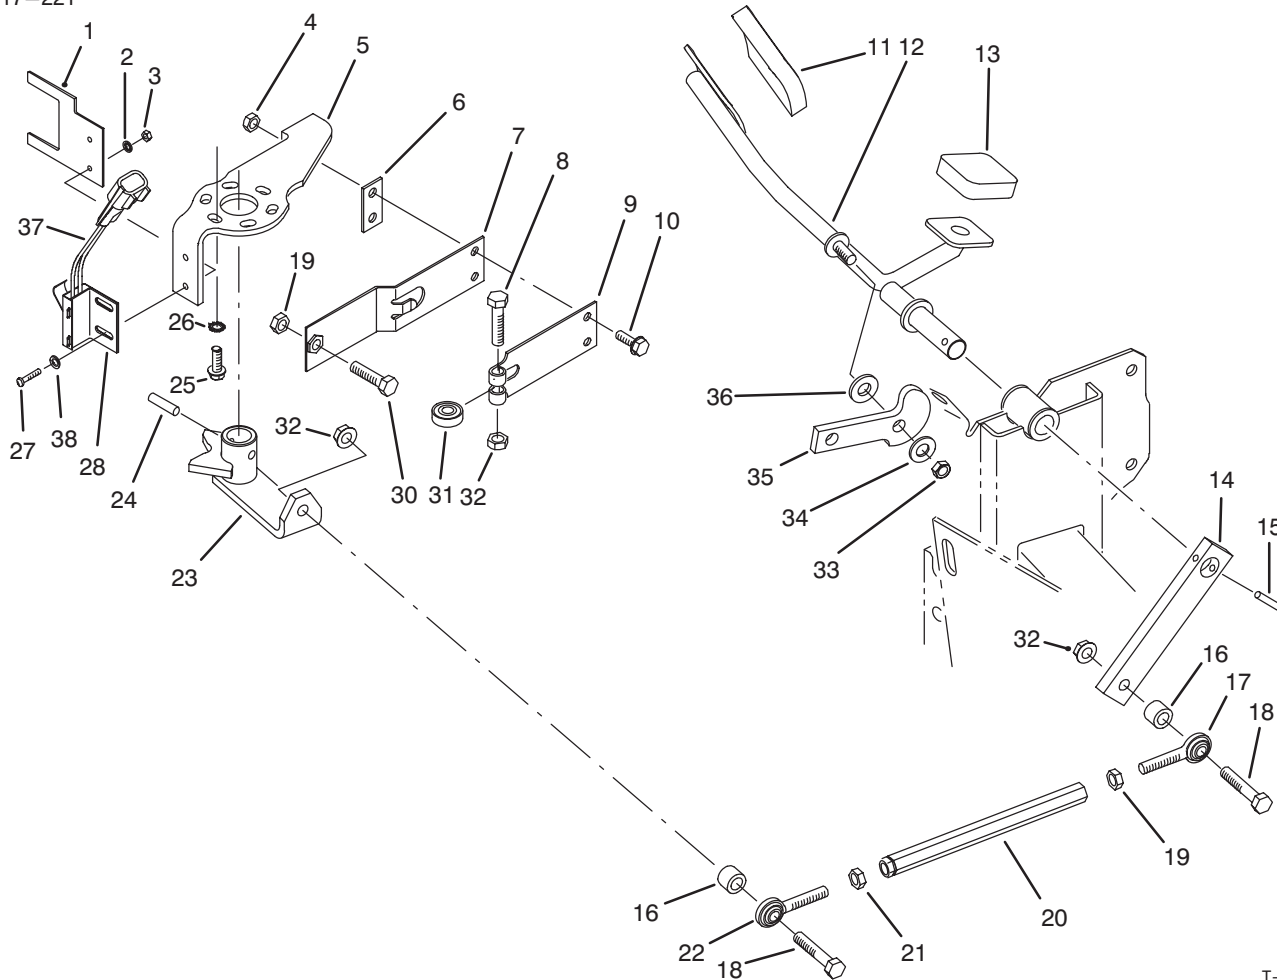


T-1355

TRACTION CONTROL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	46-8810	Stop - Spring	1
2	3254-9	Washer - ITLW	2
3	3217-29	Nut - Lock	2
4	3296-16	Nut - Lock	2
5	29-6120	Plate - Pump	1
6	51-3150	Shim - Spring	1
7	29-6170	Spring - Extended Leaf	1
8	322-17	Screw - Cap Hex. Hd.	1
9	29-6150	Spring - Leaf	1
10	321-6	Screw - Cap Hex. Hd.	2
11	74-9100	Pad - Forward	1
12	83-8270	Pedal - Traction	1
13	74-9110	Pad - Reverse	1
14	61-2610	Arm - Traction	1
15	32121-6	Pin - Roll	1
16	61-2370	Spacer	2
17	2411-52	End - Rod	1
18	322-9	Screw - Cap Hex. Hd.	2
19	3220-2	Nut - Jam	2
20	83-8760	Rod - Control	1

Ref. No.	Part No.	Description	No. Used
21	3220-20	Nut - Jam	1
22	2411-53	End - Rod	1
23	83-8770	Lever - Pump	1
24	32121-24	Pin - Roll	1
25	49-2040	Screw - Hex. Flange Hd.	3
26	3255-7	Washer - ETLW	3
27	3249-3	Screw - Round Hd.	2
28	92-7905	Switch Assembly (Incl. Ref. #37)	1
30	3210-7	Screw - Cap Hex. Hd.	1
31	251-259	Bearing - Ball	1
32	3296-29	Nut - Lock	3
33	3296-59	Nut - Lock	1
34	3256-24	Washer - Flat	1
35	74-6110	Cam - Stop	1
36	66-2920	Spacer	1
37	92-7906	Switch	1
38	3256-53	Washer - Flat	2
*	3290-378	Tie - Cable	1

 *Not Illustrated

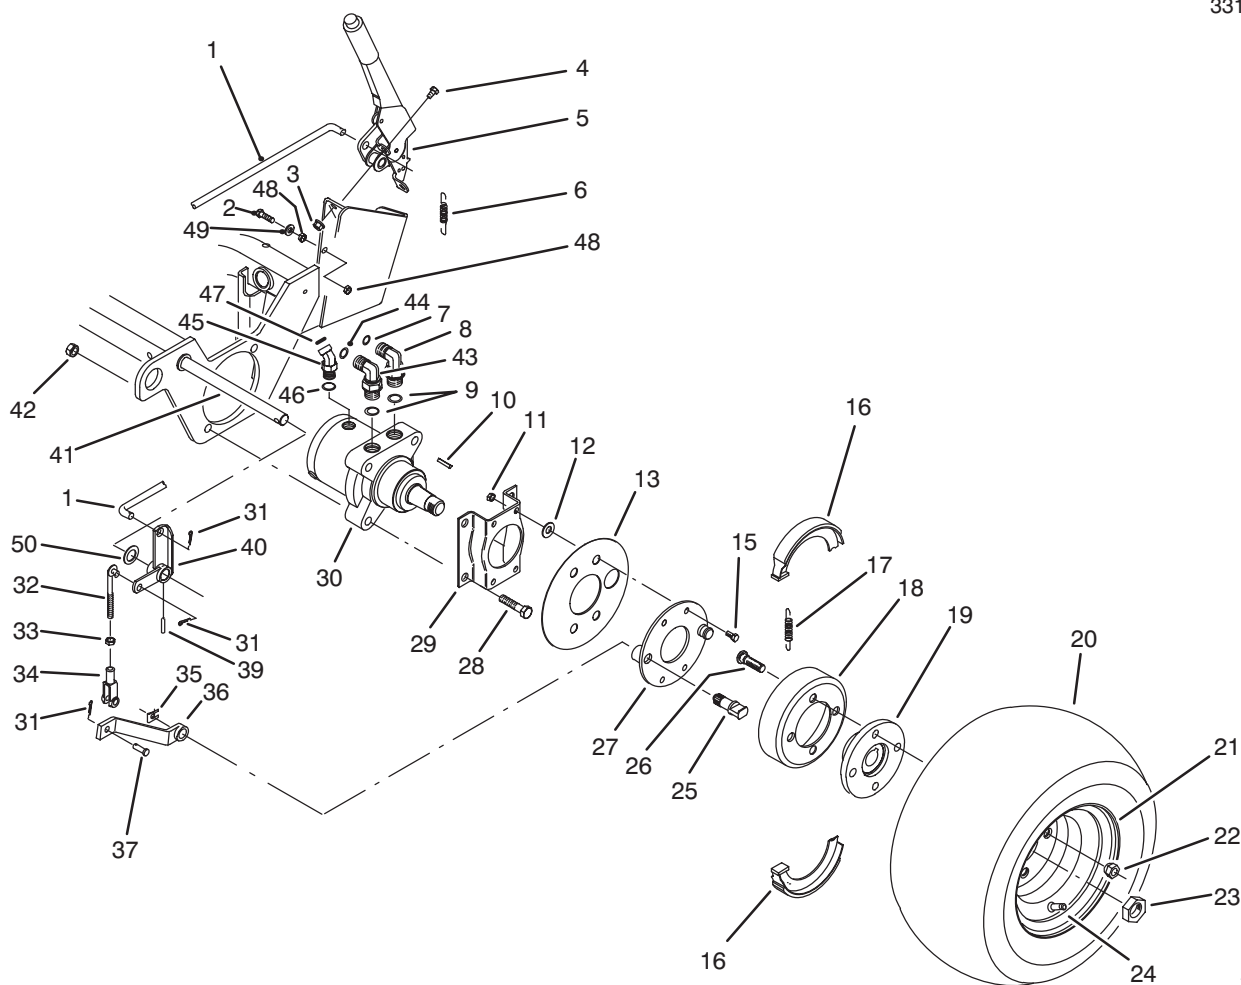


T-1356

FRONT WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	83-9350	Rod - Parking Brake	1	24	232-27	Valve - Stem	2
2	322-17	Screw - Cap Hex. Hd.	1	25	70-9860	Pin - Pivot Brake	2
3	32128-44	Nut - Lock	2	26	85-6540	Stud - Drive	8
4	3234-5	Screw - Hex. Washer Hd.	2	27	70-9870	Plate - Brake	2
5	61-3990	Parking Brake Assembly	1	28	325-11	Screw - Cap Hex. Hd.	8
6	5-7290	Spring - Extension	1	29	84-2000	Bracket - Brake	2
7	237-30	Seal - O-Ring	2	30	66-5291	Hydraulic Motor Assembly (Incl. Ref. #10)	2
8	340-105	Fitting - Hydraulic 90° (Incl. Ref. 7 & 9)	2	31	3272-6	Pin - Cotter	5
9	237-80	Seal - O-Ring	4	32	84-1990	Rod - Adjusting	2
10	3257-15	Key - Square	2	33	3220-2	Nut - Jam	2
11	3296-42	Nut - Lock	8	34	282-2	Clevis	2
12	3256-16	Washer - Flat	8	35	70-9850	Clip - Retaining	2
13	83-9340	Shield - Grass	2	36	83-9250	Lever - Brake	2
15	321-5	Screw - Cap Hex. Hd.	8	37	283-1	Pin - Clevis	2
16	70-9840	Shoe - Brake	4	39	32121-6	Pin - Roll	2
17	70-9880	Spring - Extension	4	40	83-9270	Pivot - Brake L.H.	1
18	10-6821	Brake Drum Assembly (Incl. Ref. #19 & 26)	2	*	83-9310	Pivot - Brake R.H.	1
19	10-6870	Hub - Wheel	2	41	83-9330	Shaft - Brake	1
20	231-127	Tire	2	42	3296-23	Nut - Lock	8
21	217-60	Rim	2	43	340-17	Fitting - Hydraulic 90° (Incl. Ref. #9 & 44)	2
22	242-50	Nut - Lug	8	44	237-65	Seal - O-Ring	2
23	26-3790	Nut - Lock	2				

 *Not Illustrated

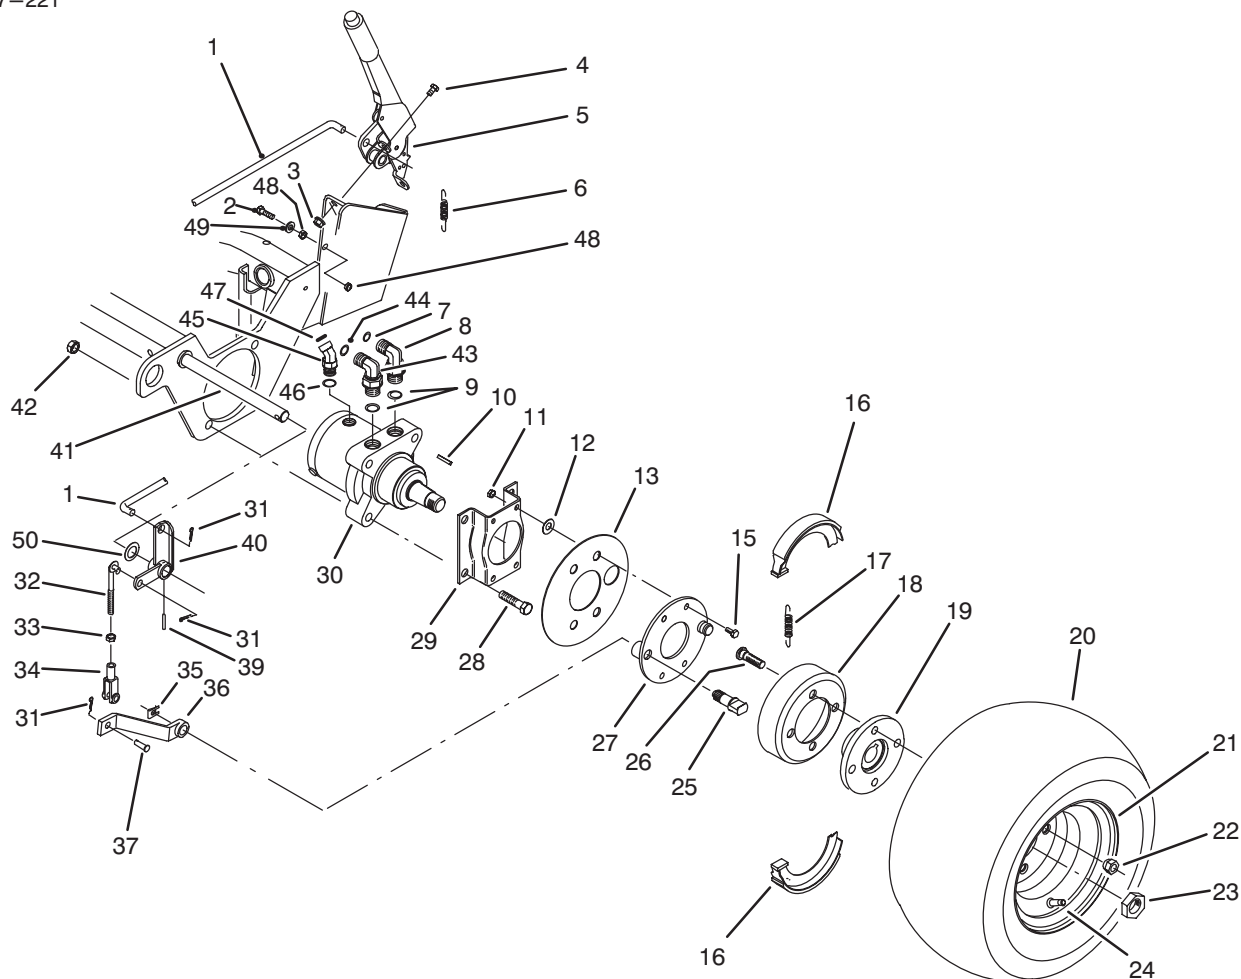


T-1356

FRONT WHEEL ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
45	340-103	Fitting – Hydraulic 45° (Incl. Ref. #46 & 47) (For Left Wheel Motor)	1
*	340-140	Fitting – Hydraulic Tee (Incl. Ref. #46 & 47) (For Right Wheel Motor)	1
46	237-78	Seal – O-Ring	2

Ref. No.	Part No.	Description	No. Used
47	237-21	Seal – O-Ring	3
48	32128-20	Nut – Lock	2
49	3256-23	Washer	1
50	3-6498	Washer	2
*	71-1500	Brake Assembly (Incl. Ref. #16, 17, 25, 27 & 35)	2

 *Not Illustrated

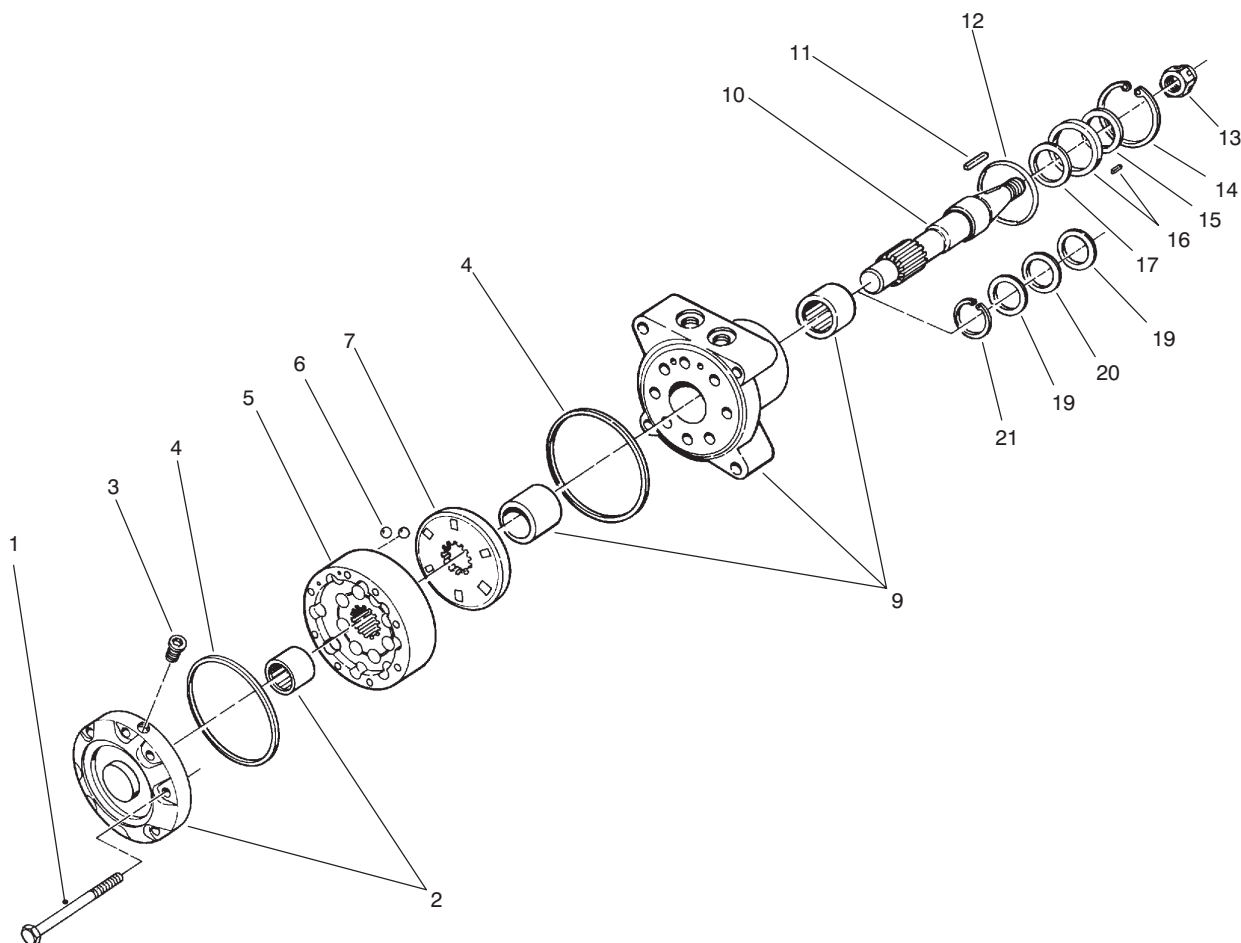


T-0274

HYDRAULIC DRIVE MOTOR ASSEMBLY NO. 66-5291

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	65-4580	Screw - Cap Hex Hd.	8	14	65-4500	Seal - Snap Ring	1
2	65-4680	Cover & Bearing Assembly	1	†15		Seal - Dust	1
3	65-4560	Plug - Hex (Hollow)	1	†16		Retainer/Pin	1
4	65-4570	Seal - Square Ring	2	†17		Seal - Lip	1
5	66-6110	IGR Assembly	1	*	76-2350	Seal/Retainer Assembly (Incl. Ref. #15-17)	1
6	65-4550	Valve - Check Ball	2	19	65-4600	Washer - Thrust	2
7	70-8150	Plate - Valve	1	20	65-4610	Bearing - Thrust	1
9	65-4670	Body & Bearing Assembly	1	21	65-4590	Ring - Snap	1
10	92-1157	Shaft	1	*	76-2360	Body Seal Kit (Incl. Ref. #4, 12 & 15-17)	1
11	3257-15	Key - Square	1				
12	65-4620	Seal - O-Ring	1				

*Not Illustrated

 †Not available from Toro as a replacement part.

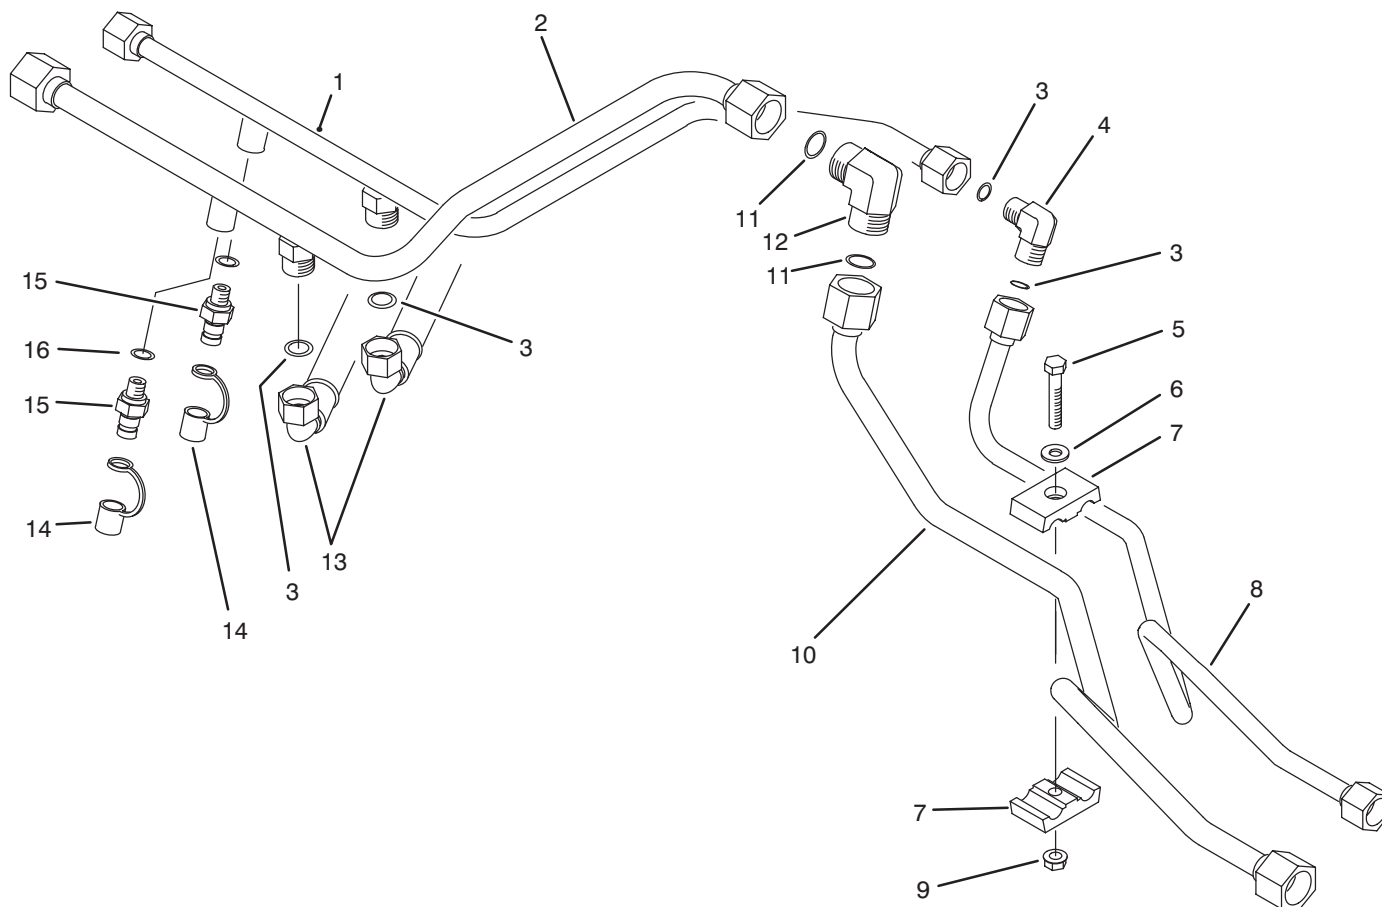


T-1357

DRIVE MOTOR PLUMBING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	83-9470	Hydraulic Tube Assembly (Incl. Ref. #3)	1
2	83-9440	Hydraulic Tube Assembly (Incl. Ref. #3)	1
3	237-30	Seal - O-Ring	4
4	340-163	Fitting - Hydraulic 90° (Incl. Ref. #3)	1
5	322-9	Screw - Cap Hex. Hd.	1
6	3256-3	Washer - Flat	1
7	56-7977	Clamp - Hydraulic Tube	2
8	83-9480	Tube - Hydraulic	1

Ref. No.	Part No.	Description	No. Used
9	3296-29	Nut - Lock	1
10	83-9450	Tube - Hydraulic	1
11	237-65	Seal - O-Ring	2
12	340-162	Fitting - Hydraulic 90° (Incl. Ref. #11)	1
13	83-9600	Hose - Hydraulic	2
14	354-79	Cap - Test Port	2
15	354-77	Hydraulic Test Port Fitting (Incl. Ref. #16)	2
16	237-78	Seal - O-Ring	2



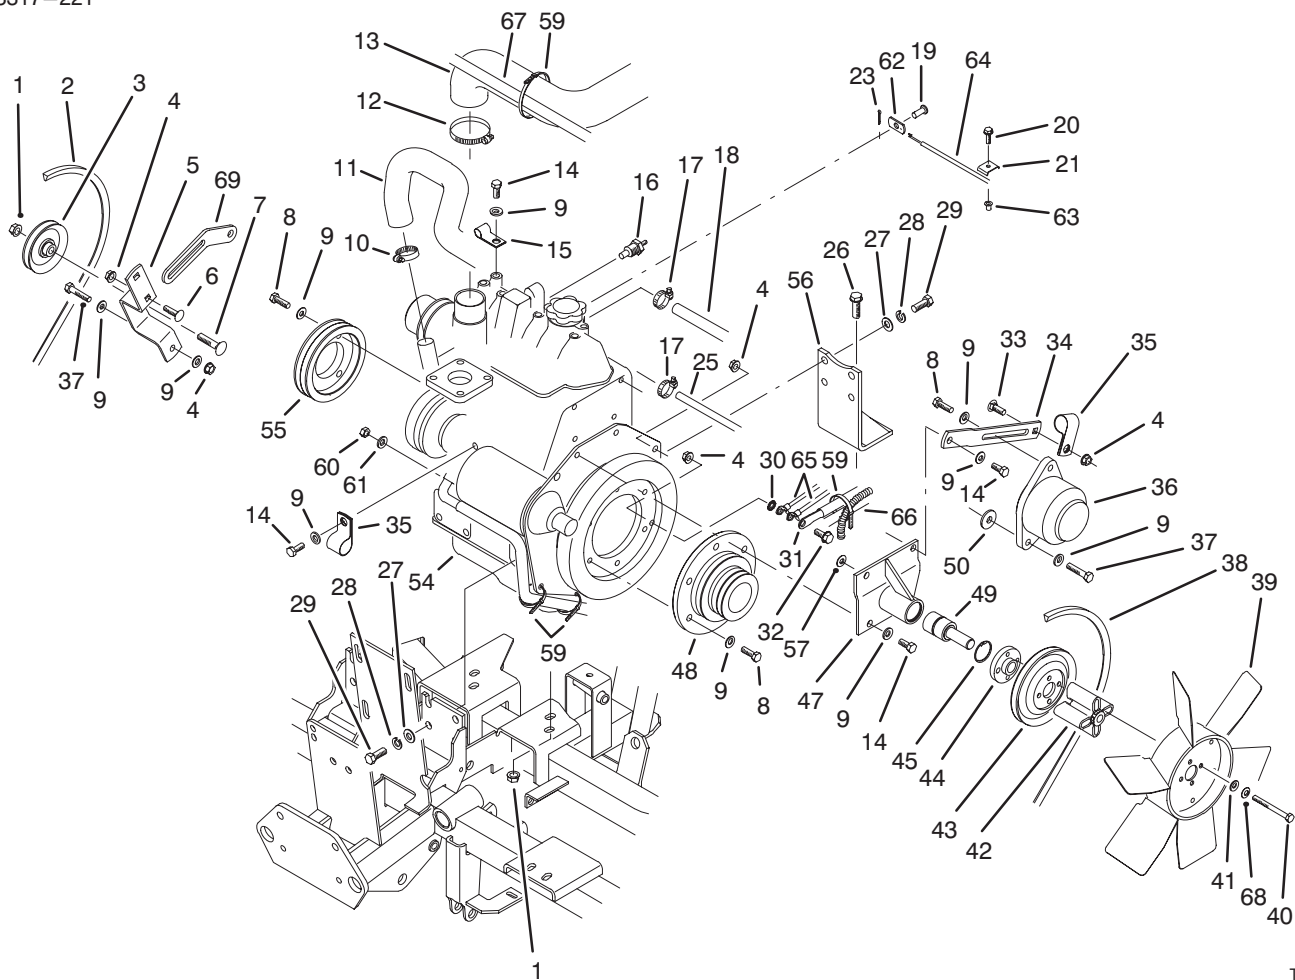 


T-1360

ENGINE INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	32128-43	Nut – Flange Lock	5	29	48-7780	Screw – Cap Hex. Hd.	16
2	37-9090	Belt – V	1	30	3255-8	Washer – Lock E.T.L.W.	1
3	63-8140	Pulley – Idler	1	31	83-9210	Cable – Ground	1
4	32128-44	Nut – Flange Lock	5	32	3234-5	Screw – Hex. Washer Hd.	1
5	83-7690	Bracket – Idler	1	33	3230-1	Screw – Carriage	1
6	3230-22	Screw – Carriage	1	34	83-7700	Bracket – Alternator	1
7	3231-26	Screw – Carriage	1	35	2412-39	Clamp – R	2
8	48-9460	Screw – Cap Hex. Hd.	14	†36	185046210	Alternator	1
9	3256-23	Washer – Flat	23	37	322-7	Screw – Cap Hex. Hd.	2
10	2412-34	Clamp – Hose	1	38	83-9020	Belt – V	1
11	83-9070	Hose – Coolant	1	†39	145306380	Fan	1
12	2412-92	Clamp – Hose	1	40	321-23	Screw – Cap Hex. Hd.	4
13	83-8550	Hose – Air Intake	1	41	48-8010	Washer – Flat	4
14	48-7700	Screw – Cap Hex. Hd.	6	42	92-3181	Spacer – Fan	1
15	2412-93	Clamp – R	1	43	83-7630	Pulley – Fan	1
16	82-3110	Sensor – Temp	1	44	83-7610	Hub – Fan	1
17	2412-108	Clamp – Hose	2	45	32120-10	Ring – Retaining	1
18	63-7620	Hose – Fuel	1	47	83-9880	Bracket – Fan Spindle	1
19	283-62	Pin – Clevis	1	48	92-3198	Pulley – Engine	1
20	3290-432	Screw – Hex. Hd.	1	49	36-7290	Spindle – Fan	1
21	81-1690	Clamp – Throttle Cable	1	50	62-9510	Washer – Flat	1
23	3272-10	Pin – Cotter	1	54		Engine Assembly	1
25	75-4703	Hose – Fuel	1	55	83-7590	Pulley – Engine	1
26	3234-24	Screw – Hex. Flange Hd.	4	56	83-8470	Bracket – Engine Mount	2
27	3256-24	Washer – Flat	16	57	65-8270	Washer	1
28	48-9590	Washer – Lock	16	59	3290-379	Tie – Cable	4

 †Obtain from your local Perkins Dealer.

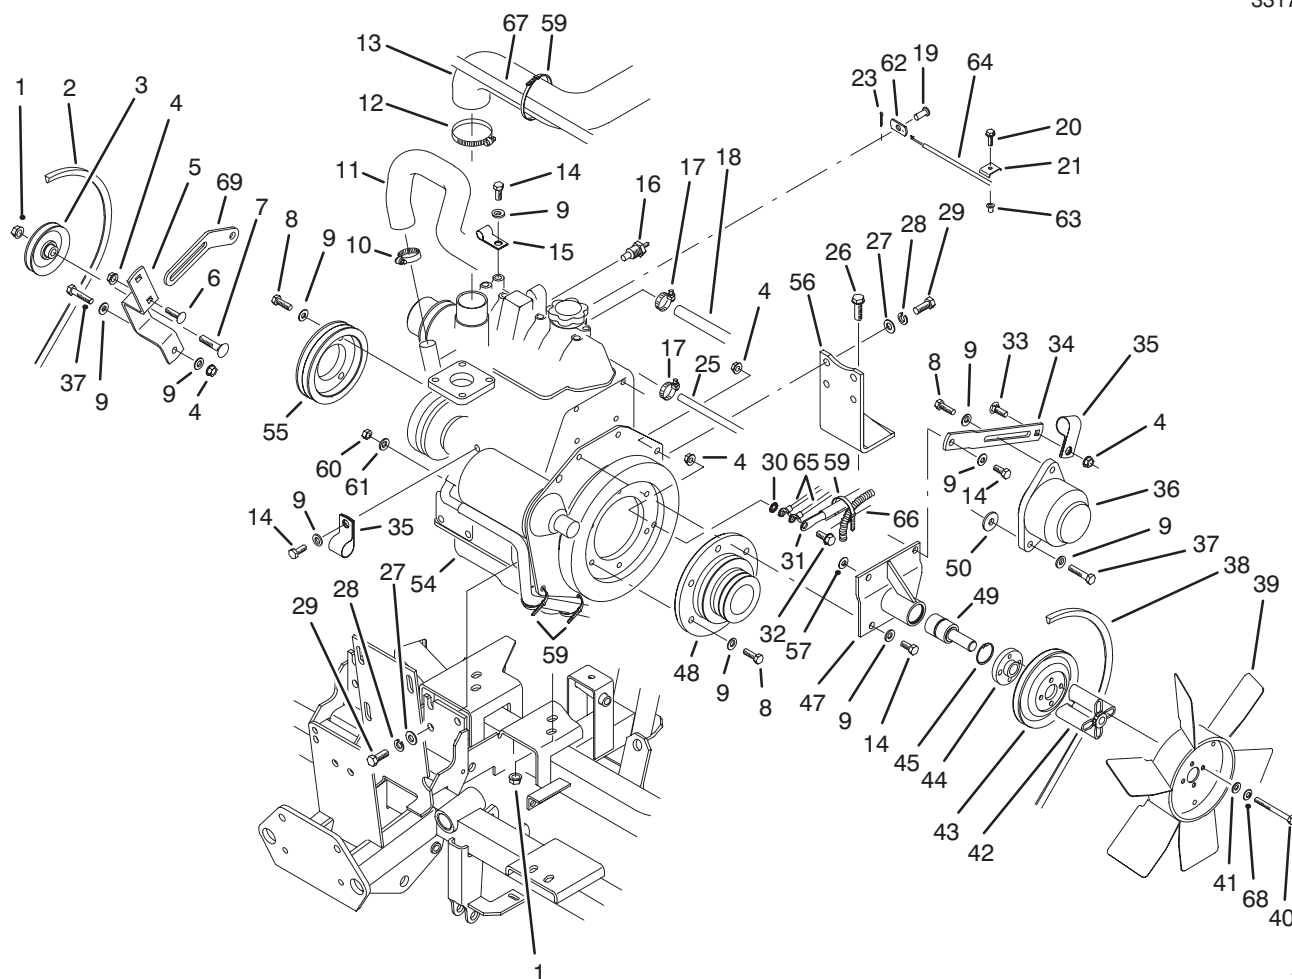


T-1360

ENGINE INSTALLATION ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
60	57-6390	Nut	1	65	93-4406	Harness - Wire	1
61	42-9850	Washer	1	66	83-9220	Cable - Battery Pos.	1
62	92-3154	Tab - Throttle	1	67	92-1177	Hose - Hydraulic	1
63	32148-14	Insert - Threaded	1	68	3253-3	Washer - Lock	4
64	92-3153	Cable - Throttle	1	†69	185726431	Strap - Adjustment	1

 
†Obtain from your local Perkins Dealer.

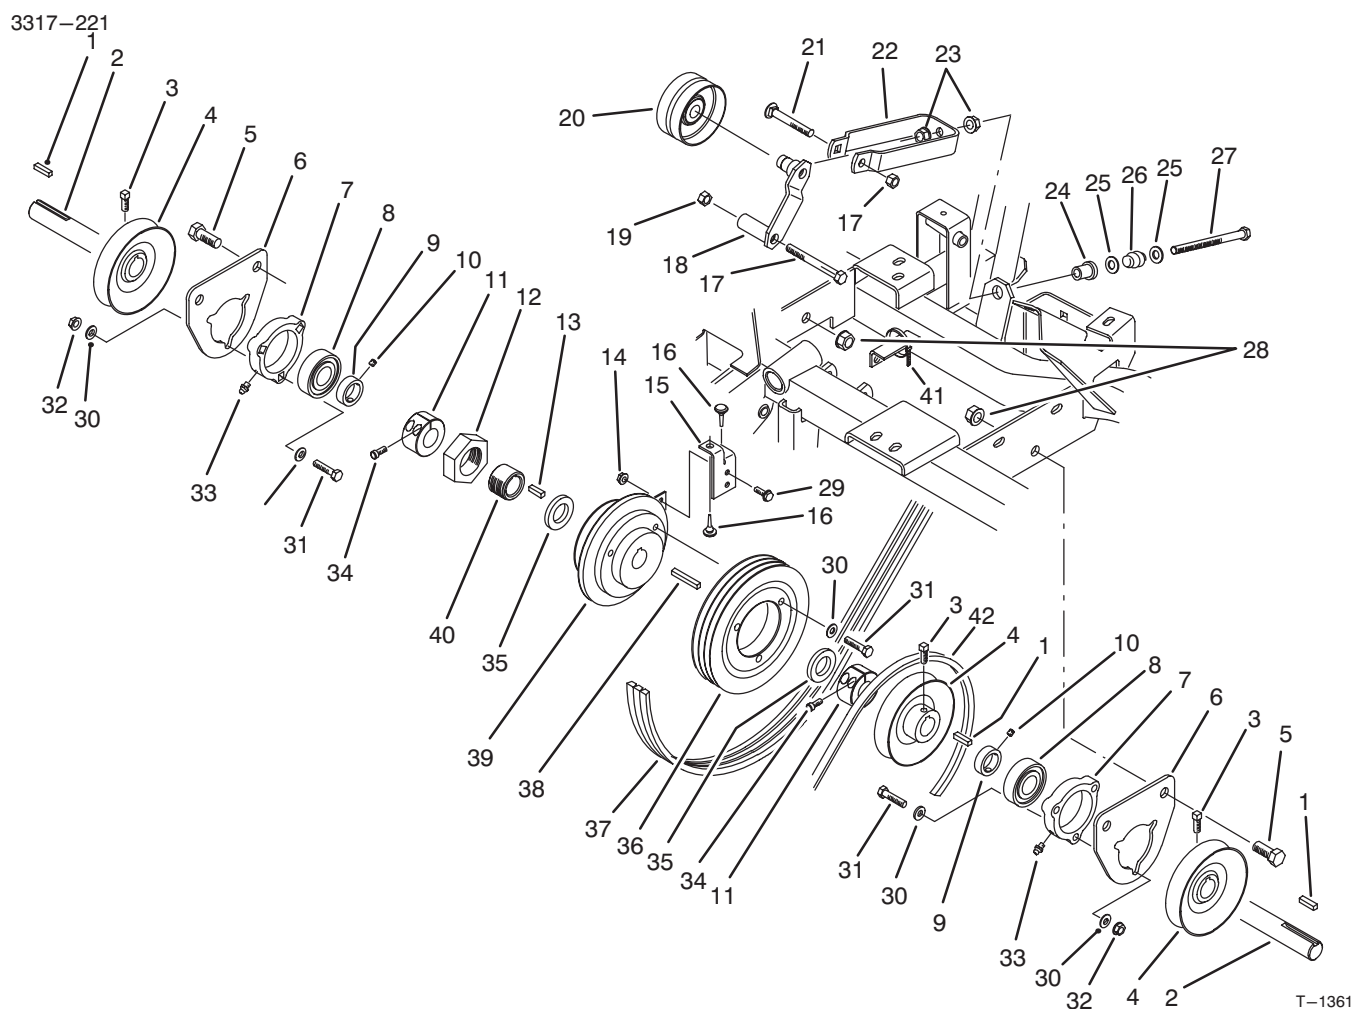

REEL DRIVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	5-7280	Key – Square	3
2	83-7820	Shaft – Drive	1
3	3242-4	Screw – Square Hd. Set	6
4	61-0140	Pulley – Reel	3
5	3234-32	Screw – Cap Hex. Hd.	4
6	92-3185	Support – Bearing	2
7	76-2460	Bearing Assembly (Incl. Ref. #7-10 & 33)	2
8	251-337	Bearing – Ball	2
9	251-77	Collar – Locking	2
10	3245-35	Screw – Set	4
11	83-7790	Collar	2
12	3218-17	Nut – Jam	1
13	10-7070	Key – Square	1
14	32128-33	Nut – Flange Lock	2
15	83-7830	Retainer – Clutch	1
16	240-13	Bumper	2
17	3296-39	Nut – Lock	2
18	83-8620	Bracket – Idler	1
19	323-15	Screw – Cap Hex. Hd.	1
20	83-8400	Pulley – Idler	1
21	3231-31	Bolt – Carriage	1

Ref. No.	Part No.	Description	No. Used
22	83-8630	Yoke – Belt Tension	1
23	32128-43	Nut – Flange Lock	2
24	83-9810	Bushing – Flange	1
25	3256-24	Washer – Flat	2
26	83-9690	Spring – Compression	1
27	83-9680	Screw – Cap Hex. Hd.	1
28	3296-23	Nut – Flange Lock	4
29	3234-4	Screw – Hex. Flange Hd.	2
30	3256-23	Washer – Flat	15
31	322-17	Screw – Cap Hex. Hd.	9
32	3296-29	Nut – Flange Lock	6
33	302-5	Fitting – Grease	2
34	3273-18	Screw – Hex. Socket Hd.	4
35	83-7810	Spacer	2
36	92-3199	Pulley – Clutch	1
37	92-3187	Belt – Drive (Set of 3)	1
38	83-8080	Key – Square	1
39	83-9140	Clutch Assembly	1
40	83-7800	Sleeve	1
41	3290-379	Tie – Cable	1
42	61-3380	Belt – Reel Drive	3

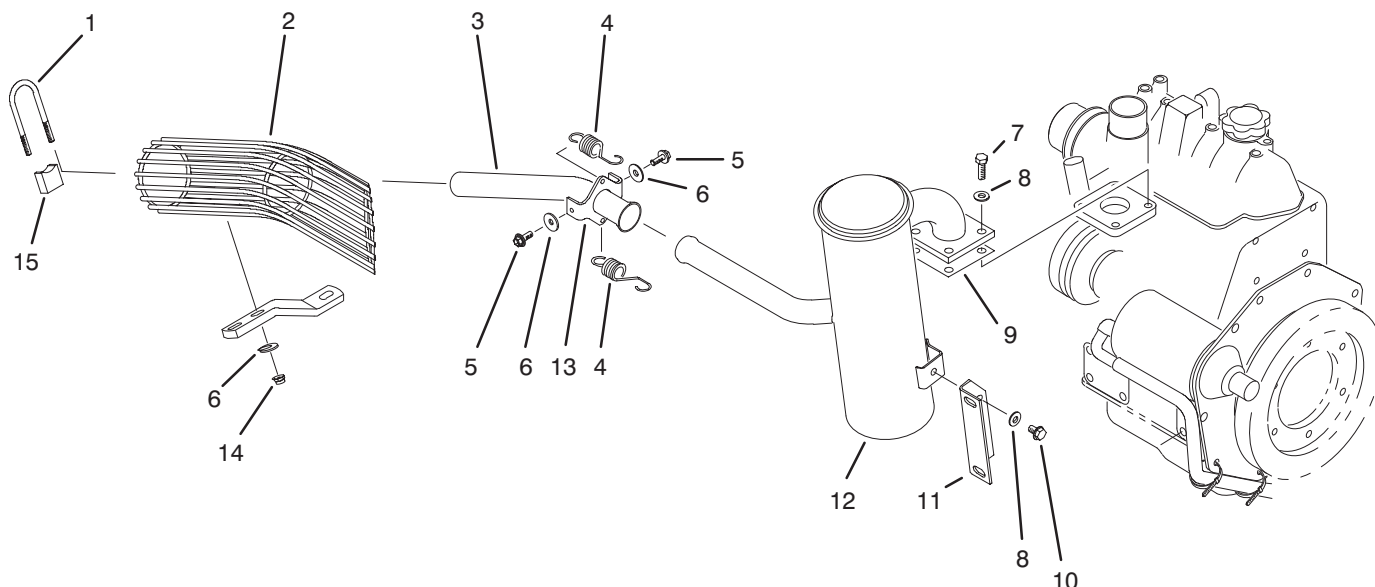 


T-1931

EXHAUST SYSTEM ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-9798	Bolt - U	1	†9	314990013	Gasket - Muffler	1
2	93-0152	Guard - Exhaust Pipe	1	10	3234-28	Screw - Hex. Flange Hd.	1
3	92-9799	Tube - Muffler	1	11	83-8220	Bracket - Muffler	1
4	92-9797	Spring - Extension	2	12	92-9776	Muffler	1
5	46-6811	Screw - Cap Hex. Hd.	2	13	93-0151	Bracket - Tube Support	1
6	3256-67	Washer - Flat	4	14	3296-16	Nut - Lock	2
7	48-9460	Screw - Cap Hex. Hd.	4	15	92-9796	Block - Support	1
8	3256-23	Washer - Flat	5				

 †Obtain from your local Perkins Dealer.

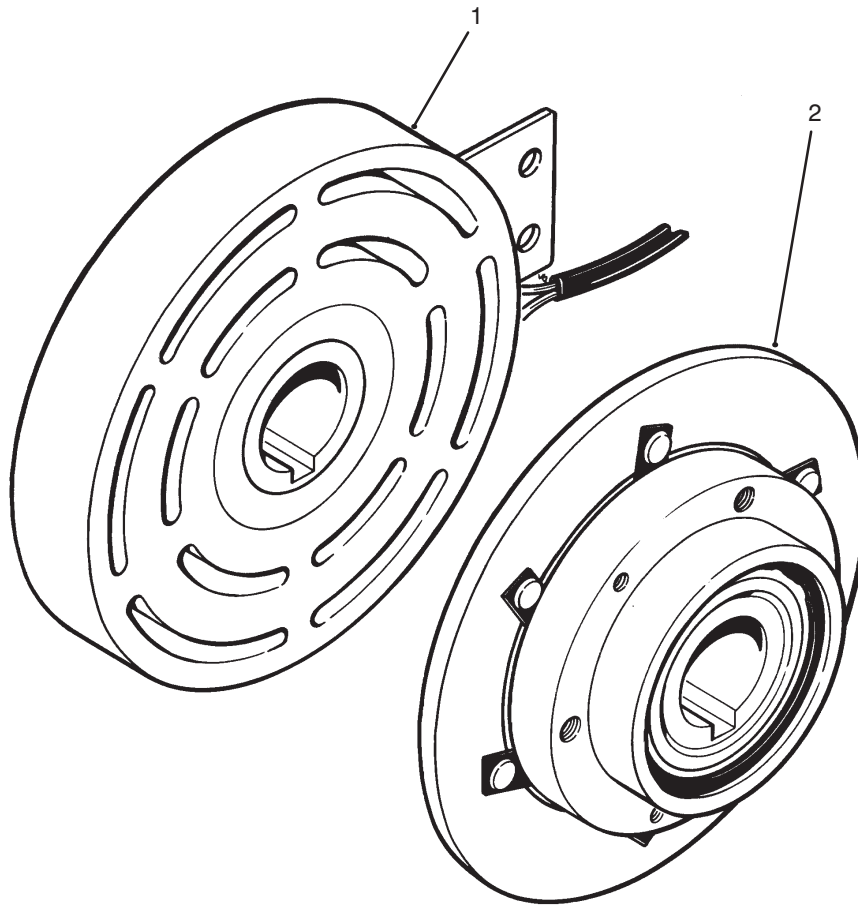


T-1362

ELECTRIC CLUTCH ASSEMBLY NO. 83-9140

Ref. No.	Part No.	Description	No. Used
1	84-7770	Field & Rotor Assembly	1


Ref. No.	Part No.	Description	No. Used
2	84-7780	Armature Assembly	1

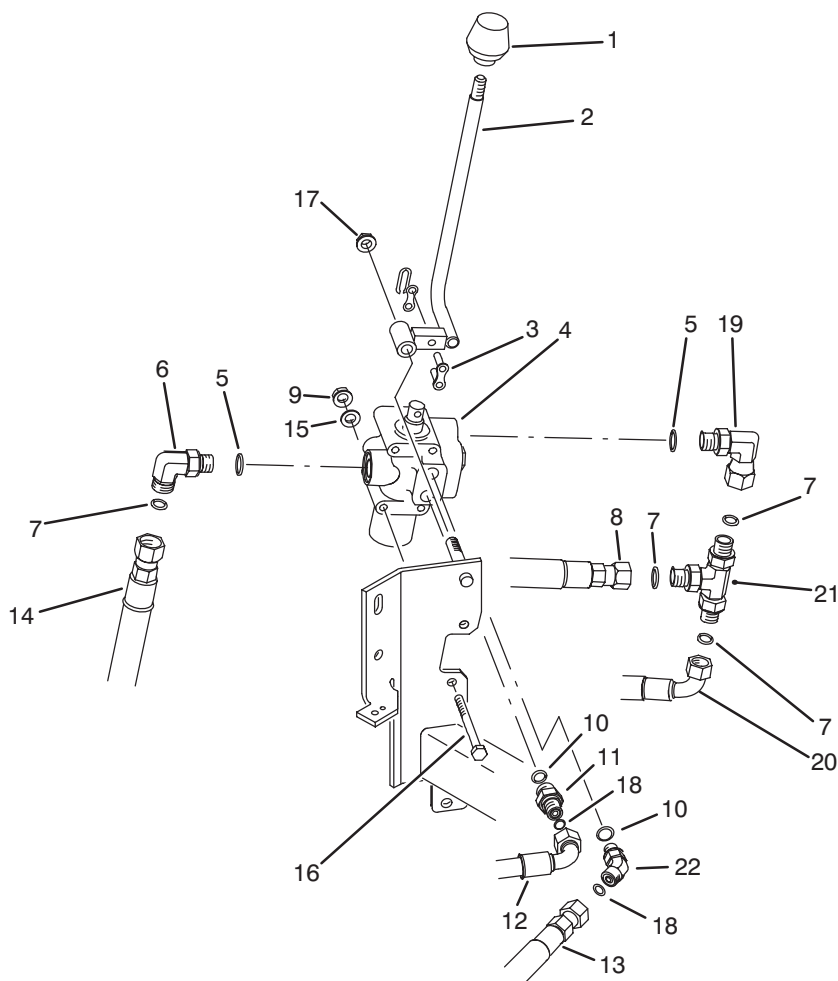 

T-1376

CUTTING UNIT LIFT VALVE INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	233-37	Knob	1	13	85-4990	Hose – Hydraulic	1
2	85-5160	Lever – Lift Valve	1	14	83-9640	Hose – Hydraulic	1
3	2710-16	Connecting Link Assembly	1	15	3256-22	Washer – Flat	2
4	43-1950	Lift Valve Assembly	1	16	321-23	Screw – Cap Hex. Hd.	2
5	237-42	Seal – O-Ring	1	17	3296-39	Nut – Flange Lock	1
6	340-77	Fitting – Hydraulic 90° (Incl. Ref. #5 & 7)	1	18	237-21	Seal – O-Ring	2
7	237-22	Seal – O-Ring	4	19	340-110	Fitting – Hydraulic 90° (Incl. Ref. #5)	1
8	92-1177	Hose – Hydraulic	1	20	85-4990	Hose – Hydraulic	1
9	3296-16	Nut – Flange Lock	2	21	340-20	Fitting – Hydraulic Tee (Incl. Ref. #7)	1
10	237-78	Seal – O-Ring	2	22	340-103	Fitting – Hydraulic 90° (Incl. Ref. #10 & 18)	1
11	340-92	Fitting – Hydraulic Straight (Incl. Ref. #10 & 18)	1				
12	83-9610	Hose – Hydraulic	1				

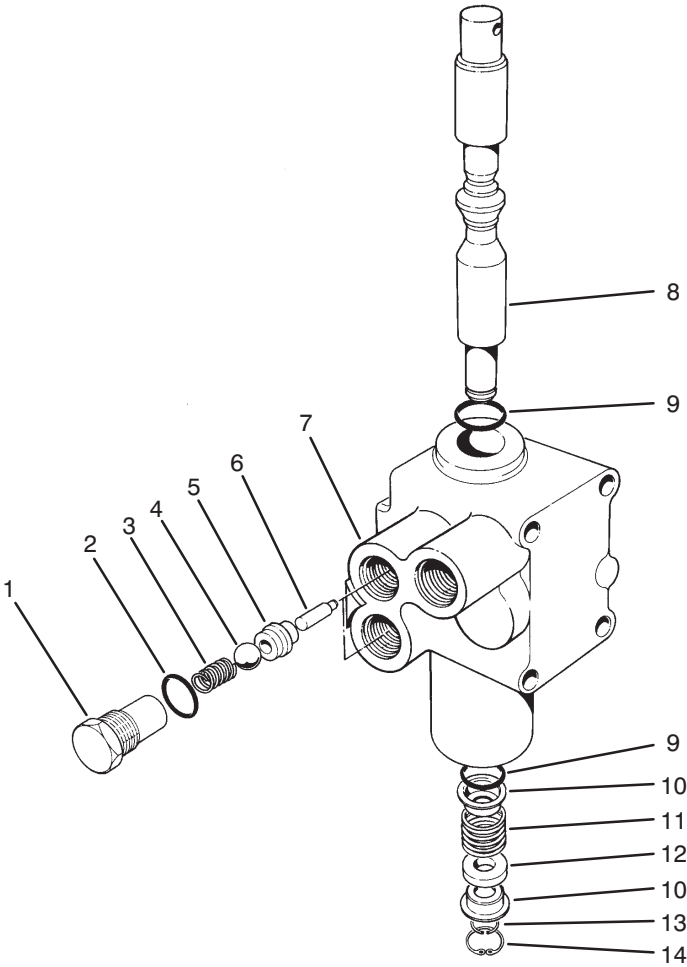 


T-0280

CONTROL VALVE ASSEMBLY NO. 43-1950

Ref. No.	Part No.	Description	No. Used
1	22-8330	Plug	2
2	237-42	Seal - O-Ring	2
3	22-8340	Spring	2
4	22-8350	Ball	2
5	22-8370	Seat - Check Valve	2
6	22-8360	Pin - Cam	2
7		Body	1


Ref. No.	Part No.	Description	No. Used
8	22-8420	Spool	1
9	22-8500	Seal - O-Ring	2
10	22-8380	Retainer - Spring	2
11	22-8410	Spring	1
12	23-3030	Spacer	1
13	22-8480	Snap Ring - Spool	1
14	22-8490	Snap Ring	1

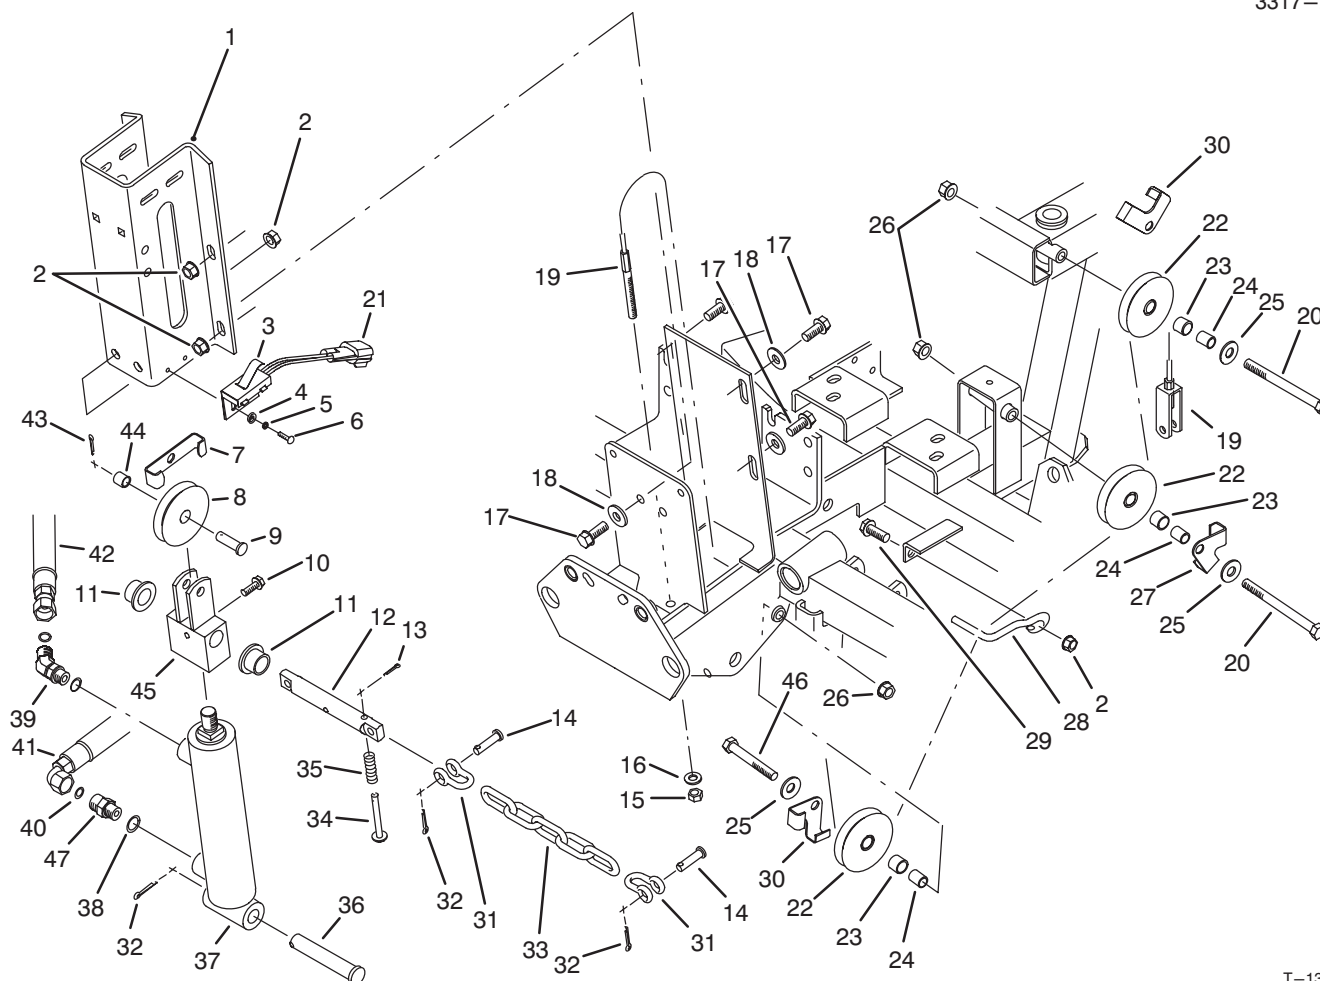 

T-1364

CUTTING UNIT LIFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	83-9760	Bracket - Cylinder Support	1	24	61-3230	Spacer	3
2	32128-43	Nut - Flange Lock	7	25	3256-24	Washer - Flat	3
3	92-7905	Switch Assembly (Incl. Ref. #21)	1	26	3296-39	Nut - Flange Lock	3
4	3256-23	Washer - Flat	2	27	83-9130	Keeper - Cable	1
5	3254-9	Washer - Lock Internal	2	28	63-1400	Guide - Cable	1
6	3249-3	Screw - Round Hd.	2	29	3234-11	Screw - Hex. Washer Hd.	1
7	5-2655	Keeper - Cable	1	30	5-2656	Keeper - Cable	2
8	5-2653	Cable Pulley Assembly (Incl. Ref. #44)	1	31	282-4	Clevis	4
9	283-42	Pin - Clevis	1	32	3272-11	Pin - Cotter	5
10	3234-4	Screw - Hex. Washer Hd.	1	33	61-3830	Chain - Lift	2
11	84-8440	Bushing - Flange	2	34	71-1380	Pin - Spring	1
12	72-4190	Pin - Cylinder Guide	1	35	71-1370	Spring - Compression	1
13	3272-4	Pin - Cotter	1	36	283-78	Pin - Clevis	1
14	283-6	Pin - Clevis	4	37	76-0020	Hydraulic Cylinder Assembly	1
15	3296-4	Nut - Lock	1	38	237-42	Seal - O-Ring	2
16	3256-23	Washer - Flat	1	39	340-87	Fitting - Hydraulic 45° (Incl. Ref. #38 & 40)	1
17	3234-25	Screw - Hex. Washer Hd.	6	40	237-22	Seal - O-Ring	2
18	80-6990	Washer	5	41	85-4990	Hose - Hydraulic	1
19	83-8590	Cable - Lift	1	42	83-9620	Hose - Hydraulic	1
20	323-23	Screw - Cap Hex. Hd.	2	43	3272-6	Pin - Cotter	1
21	92-7906	Switch	1	45	61-2430	Hub - Lift	1
22	61-3210	Cable Pulley Assembly (Incl. Ref. #23)	3	44	256-2	Bushing - Sleeve	1
23	256-1	Bushing - Sleeve	3	46	323-13	Screw - Cap Hex. Hd.	1
				47	340-2	Fitting - Hydraulic Straight (Incl. Ref. #38 & 40)	1

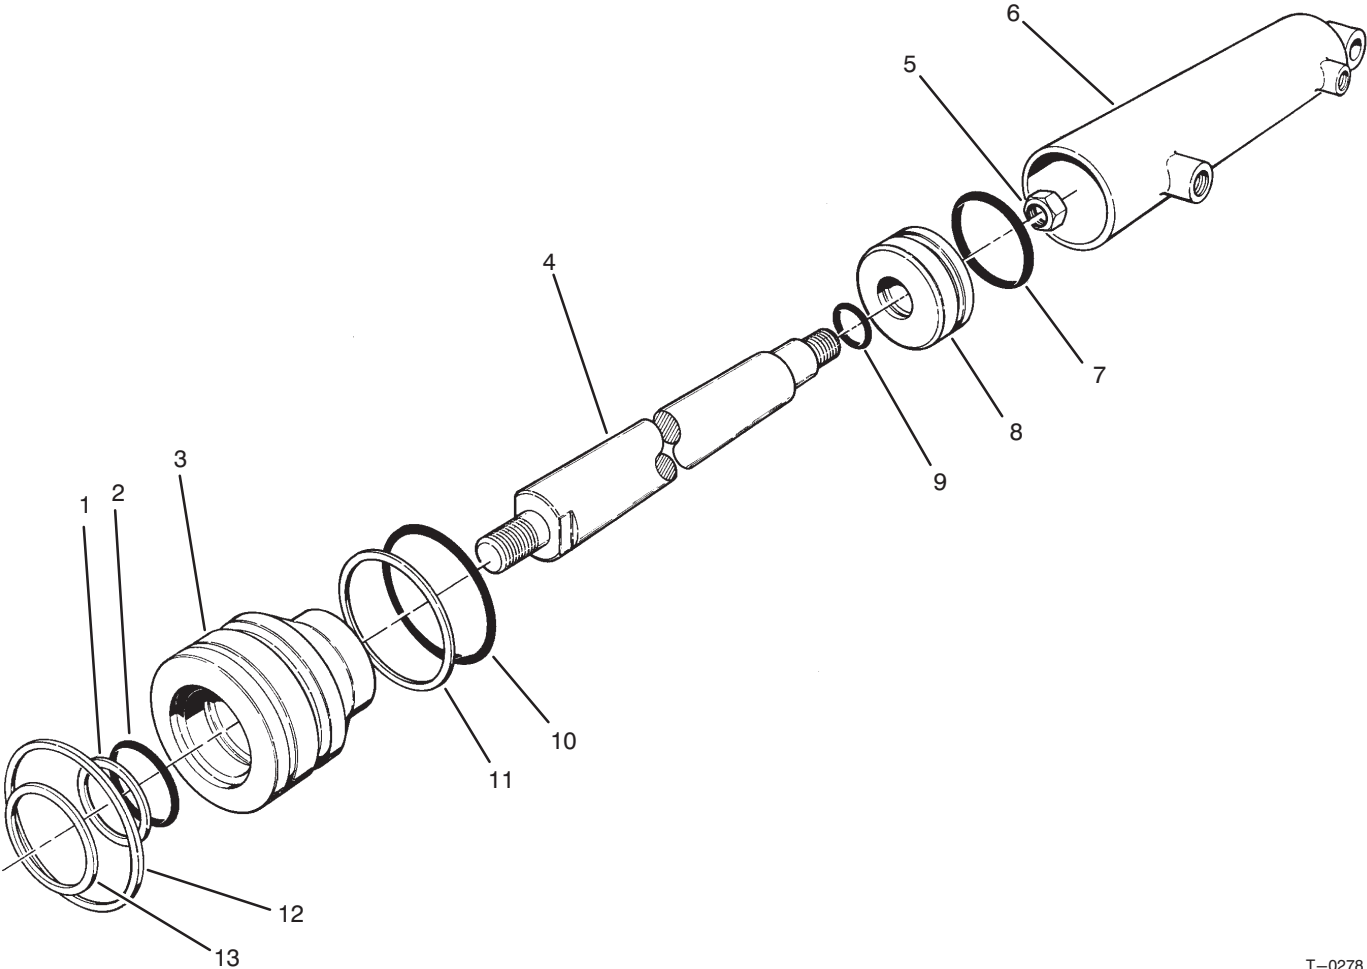 


T-0278

HYDRAULIC CYLINDER ASSEMBLY NO. 76-0020

Ref. No.	Part No.	Description	No. Used
1		Washer – Backup	1
2		Seal – O–Ring	1
3	76-0090	Head	1
4	76-2320	Shaft	1
5	76-2330	Nut – Lock	1
6		Barrel	1
7		Uniring	1
8	76-0040	Piston	1

Ref. No.	Part No.	Description	No. Used
9		Seal – O–Ring	1
10		Seal – O–Ring	1
11		Washer – Backup	1
12	76-0050	Ring – Retaining	1
13		Seal–Dust	1
*	76-0030	Repair Kit (Incl. Ref. #1-2, 7, 9-11 &13)	1

 *Not Illustrated

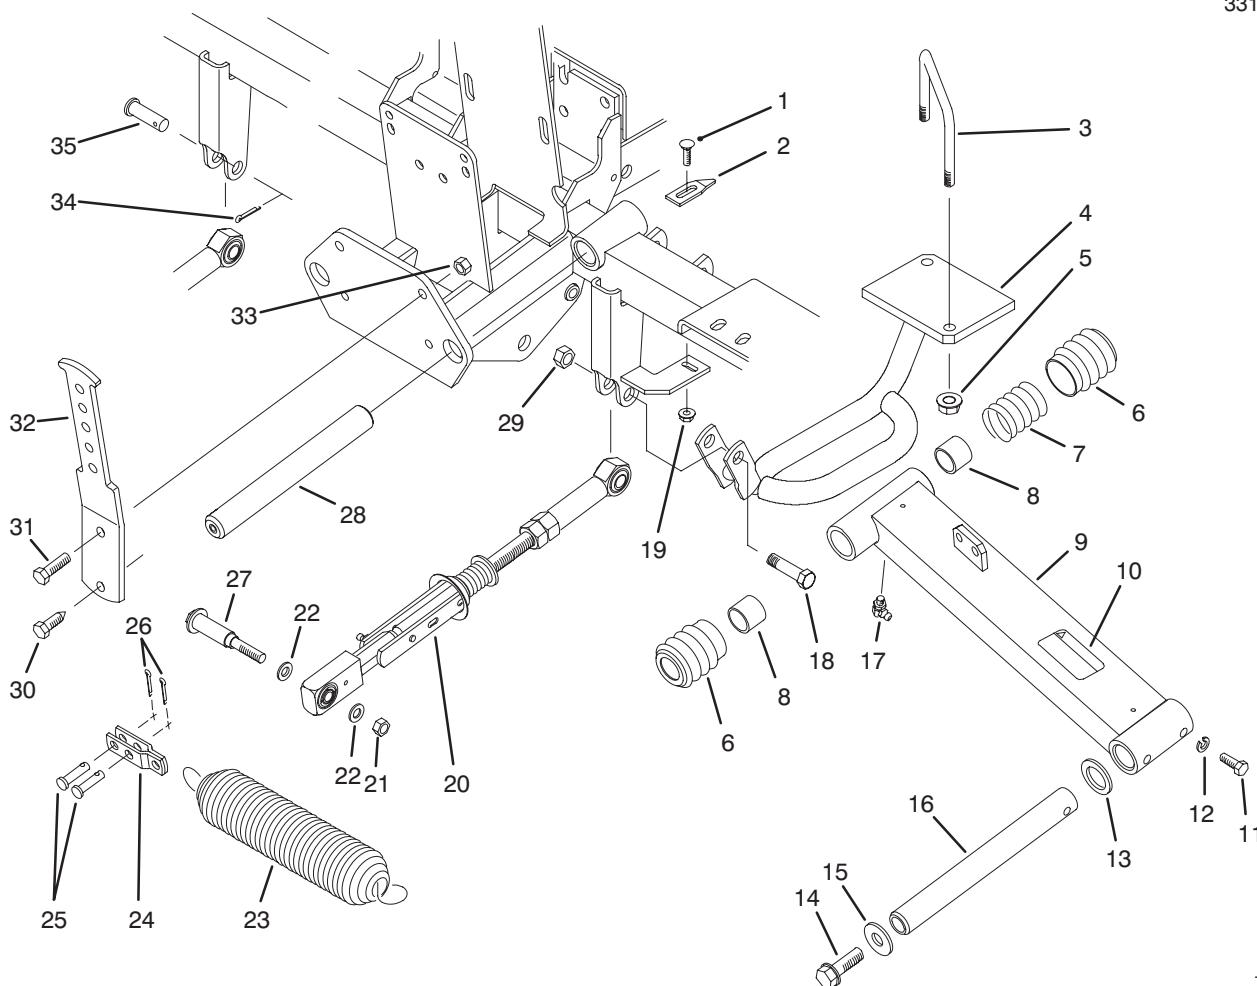


T-1365A

FRONT CUTTING UNIT LIFT ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3229-1	Bolt - Carriage	2	17	302-60	Fitting - Grease	2
2	76-2430	Scraper - Pulley	2	18	325-9	Screw - Cap Hex. Hd.	1
3	93-0153	Bolt - U	1	19	32128-33	Nut - Flange Lock	2
4	93-0160	Guard - Pulley	1	20	83-7900	Belt Tensioner Assembly	2
5	32128-19	Nut - Flange Lock	2	21	3296-59	Nut - Lock	2
6	61-7250	Boot	4	22	3256-45	Washer - Flat	4
7	61-3270	Spring - Compression	2	23	5-0743	Spring - Extension	2
8	3-0348	Bushing - Sleeve	4	24	92-1822	Shackle	2
9	16-1159	Lift Arm Assembly L.H. (Incl. Ref. #8, 10 & 17)	1	25	283-75	Pin - Clevis	4
*	16-1169	Lift Arm Assembly R.H. (Incl. Ref. #8, 10 & 17)	1	26	3272-10	Pin - Cotter	4
†10	55-4300	Decal - Warning	2	27	76-0370	Bolt - Shoulder	2
11	322-4	Screw - Cap Hex. Hd.	2	28	92-1812	Shaft - Lift Pivot	2
12	3253-4	Washer - Lock	2	29	3296-45	Nut - Lock	1
13	256-115	Washer - Thrust	2	30	32104-6	Screw - Cap Hex. Hd.	2
14	3234-32	Screw - Hex. Flange Hd.	2	31	323-7	Screw - Cap Hex. Hd.	2
15	3256-6	Washer - Flat	2	32	92-1818	Arm - Tension	2
16	92-1815	Rod - Pivot	2	33	3296-39	Nut - Lock	2
				34	3272-13	Pin - Cotter	1
				35	283-40	Pin - Clevis	1

*Not Illustrated

 †For different language versions of this part, see International Parts Reference.

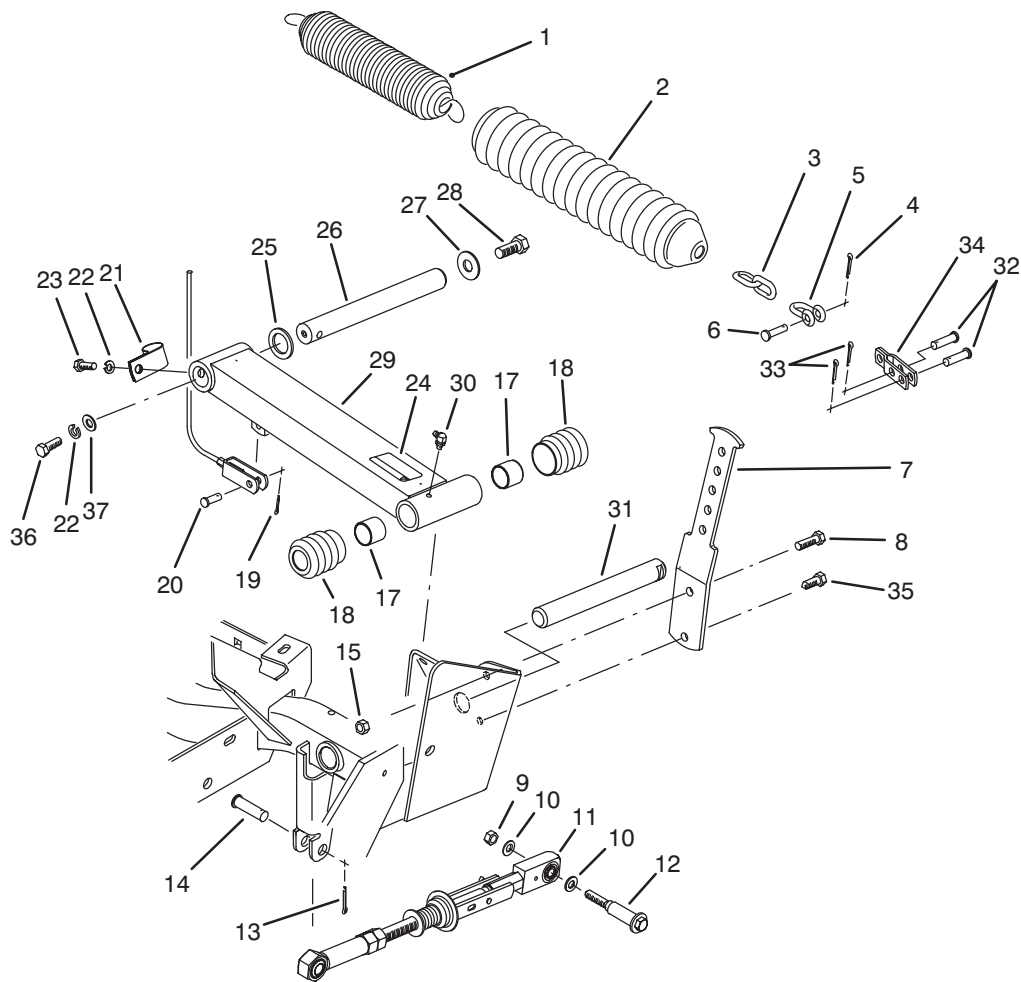


T-1366A

REAR CUTTING UNIT LIFT ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	5-0743	Spring – Extension	1	21	18-2970	Clamp – R	1
2	62-7240	Cover – Spring	1	22	3253-4	Washer – Lock	2
3	62-7300	Chain	1	23	322-4	Screw – Cap Hex. Hd.	1
4	3272-11	Pin – Cotter	1	‡24	55-4300	Decal – Warning	1
5	282-4	Clevis	1	25	256-115	Washer – Thrust	1
6	283-6	Pin – Clevis	1	26	92-1815	Rod – Pivot	1
7	92-1818	Arm – Tension	1	27	3256-6	Washer – Flat	1
8	323-7	Screw – Cap Hex. Hd.	1	28	3234-32	Screw – Cap Hex. Hd.	1
9	3296-59	Nut – Lock	2	29	16-1089	Lift Arm Assembly (Incl. Ref. #17, 24 & 30)	1
10	3256-45	Washer – Flat	4	30	302-60	Fitting – Grease	1
11	83-7900	Belt Tensioner Assembly	2	31	92-1812	Shaft – Lift Pivot	1
12	76-0370	Bolt – Shoulder	2	32	283-75	Pin – Clevis	2
13	3272-13	Pin – Cotter	2	33	3272-10	Pin – Cotter	2
14	283-40	Pin – Clevis	2	34	92-1822	Shackle	1
15	3296-39	Nut – Lock	1	35	32104-6	Screw – Cap Hex. Hd.	1
17	3-0348	Bushing – Sleeve	2	36	322-26	Screw – Cap Hex. Hd.	1
18	62-7250	Boot	2	37	3256-57	Washer – Flat	1
19	3272-6	Pin – Cotter	1				
20	283-1	Pin – Clevis	1				

 
‡For different language versions of this part, see International Parts Reference.

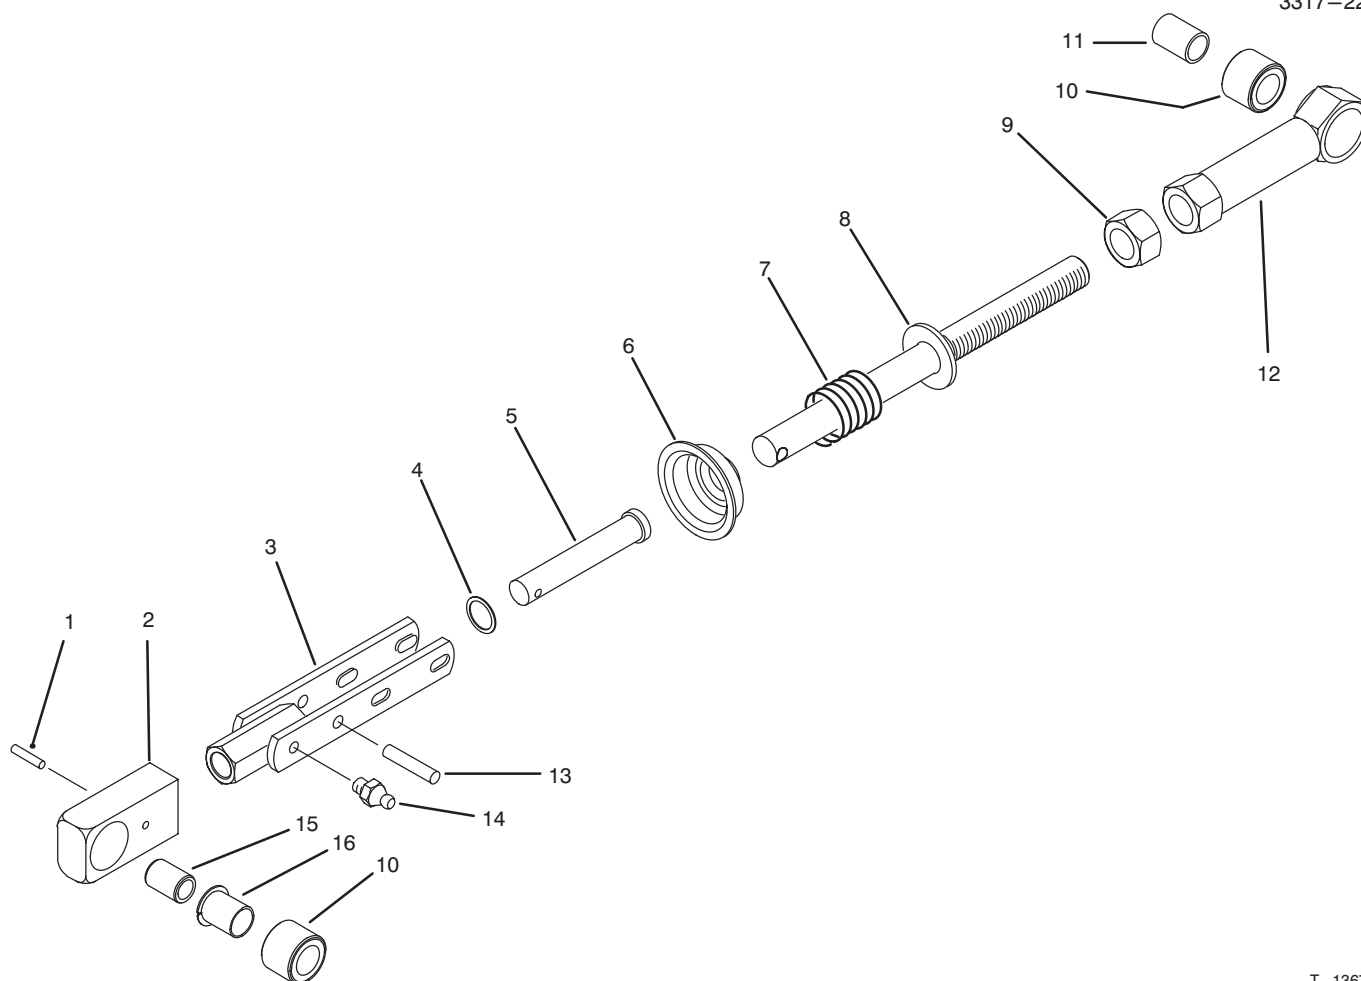

T-1367

BELT TENSIONER ASSEMBLY NO. 83-7900


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	32121-23	Pin - Roll	1	9	3218-6	Nut - Jam	1
2	76-0350	Housing - Bushing	1	10	56-9510	Bushing Assembly	2
3	83-7930	Yoke	1	11	256-173	Bushing - Sleeve	1
4	3256-54	Washer - Flat	1	12	76-0300	Housing - Bushing	1
5	283-55	Pin - Clevis	1	13	32121-9	Pin - Roll	1
6	76-0360	Cup - Retainer	1	14	302-5	Fitting - Grease	1
7	76-0410	Spring - Compression	1	15	76-0390	Spacer	1
8	83-7910	Rod	1	16	56-9520	Bushing - Nyliner	1

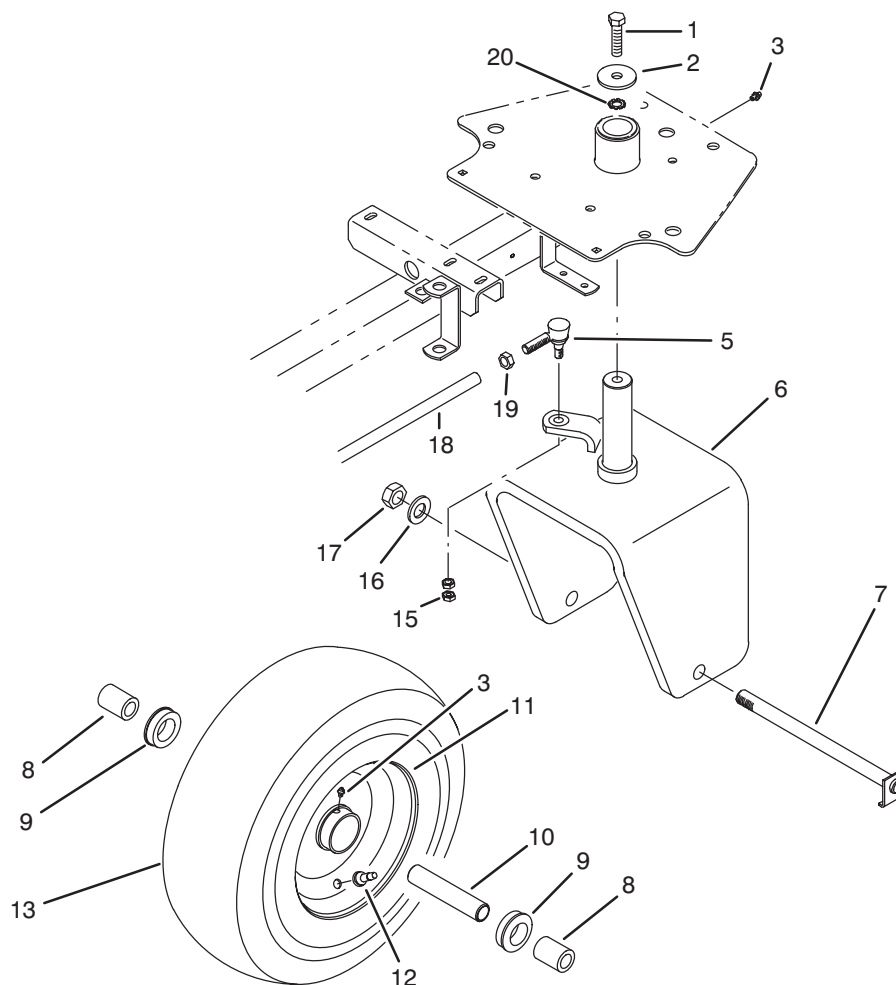 

T-1368A

REAR WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	325-6	Screw - Cap Hex. Hd.	1	11	241-129	Rim	1
2	75-7730	Spacer	1	12	232-47	Valve - Stem	1
3	302-5	Fitting - Grease	2	13	93-0166	Tire	1
5	20-0140	Rod End Assembly (Incl. Ref. #15)	1	15	3220-3	Nut - Jam	2
6	83-7340	Fork - Caster	1	16	3256-28	Washer - Flat	1
7	61-1960	Axle - Wheel	1	17	3296-51	Nut - Lock	1
8	68-4210	Spacer - Wheel	2	18	61-2070	Rod - Steering	1
9	251-321	Bearing - Wheel	2	19	3220-12	Nut - Jam	1
10	241-130	Spacer - Bearing	1	20	3255-2	Washer - Lock	1

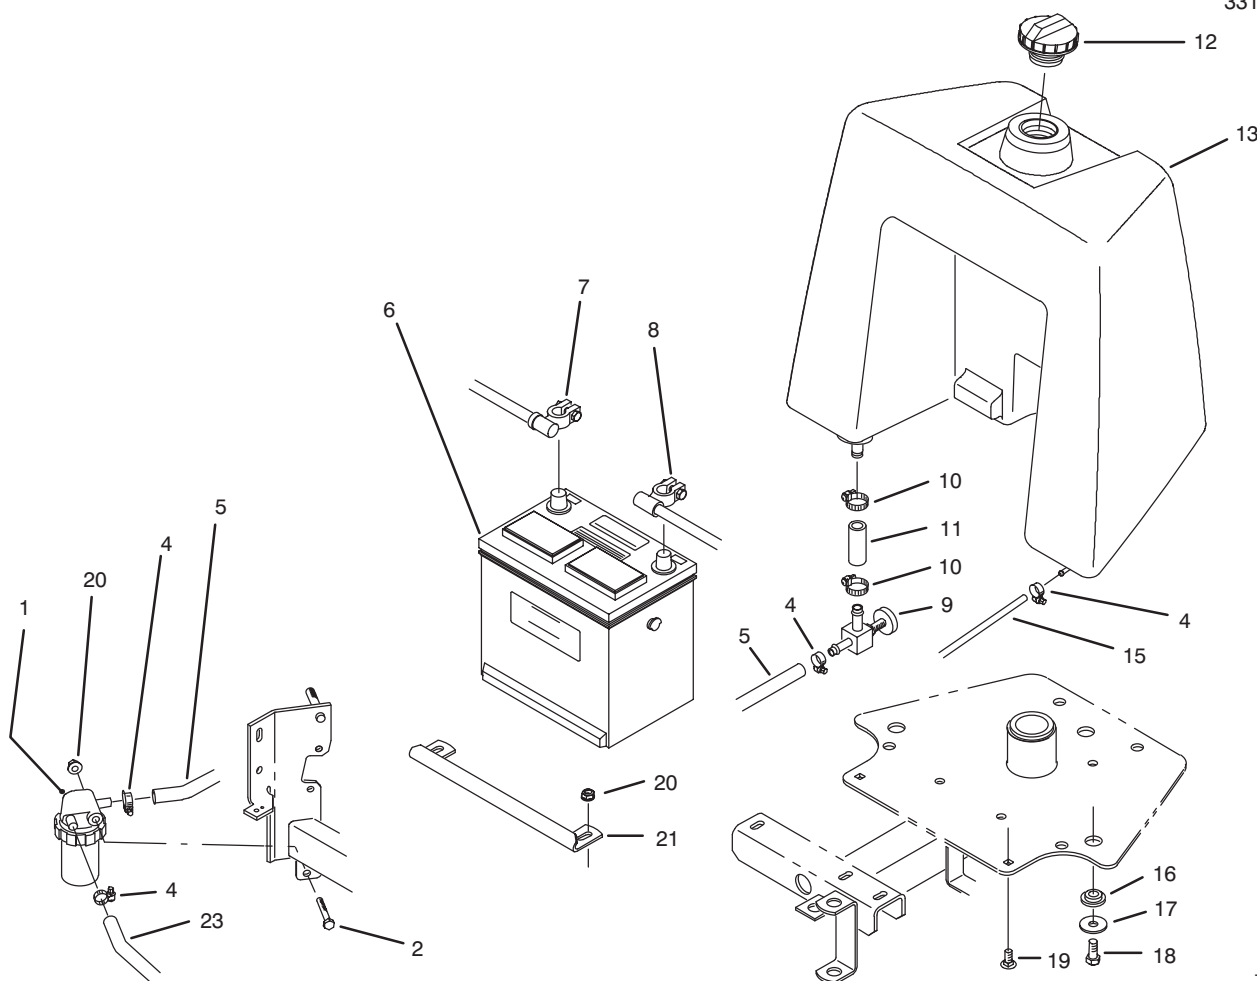 

T-1370


FUEL SYSTEM ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
†1	130366040	Filter – Fuel	1	12	93-3102	Cap – Fuel Tank	1
2	321-12	Screw – Cap Hex. Hd.	1	13	83-8720	Tank – Fuel	1
4	2412-108	Clamp – Hose	4	15	75-4703	Hose – Fuel	1
5	63-7620	Hose – Fuel	1	16	240-11	Grommet	3
6	83-9000	Battery	1	17	63-8410	Washer – Flat	3
7	83-9220	Cable – Battery Pos.	1	18	323-5	Screw – Cap Hex. Hd.	3
8	83-9210	Cable – Battery Neg.	1	19	3230-1	Screw – Carriage	2
9	56-2520	Valve – Fuel Shut-Off	1	20	32128-44	Nut – Flange Lock	3
10	2412-36	Clamp – Hose	2	21	83-9240	Hold-Down – Battery	1
11	56-2230	Hose – Fuel	1	23	23-2140	Hose – Fuel	1

†Obtain from your local Perkins Dealer.

SPECIAL TOOLS

 
DRIVE MOTOR SEAL INSTALLATION TOOL NO. *19-2660

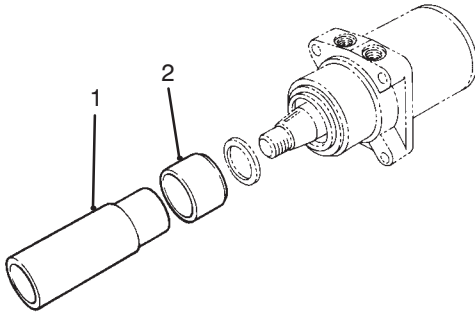

T-0728

Ref. No.	Part No.	Description	No. Used
1		Driver – Seal	1
2		Holder – Seal	1

 
BEDKNIFE SCREW TOOL NO. *TOR510880

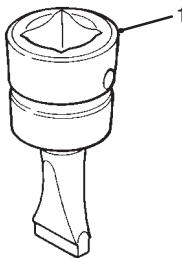

T-0729

Ref. No.	Part No.	Description	No. Used
1		Tool – Bedknife Screw	1

 
HYDRAULIC OIL RESERVOIR PLUG NO. *88-9220

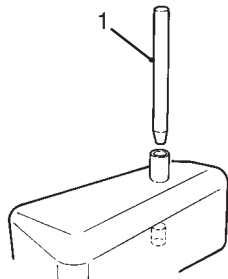

T-1213

Ref. No.	Part No.	Description	No. Used
1		Plug – Reservoir	1

 
GAUGE BAR ASSEMBLY NO. *TOR138199

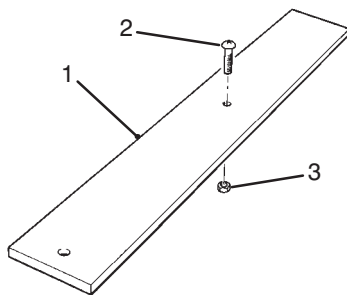

T-1151

Ref. No.	Part No.	Description	No. Used
1	65-8320	Bar – Height-Of-Cut	1
2	32122-2	Screw – Round Hd.	1
3	3219-14	Nut – Hex.	1

 
BACKLAPPING BRUSH ASSEMBLY NO. *TOR299100

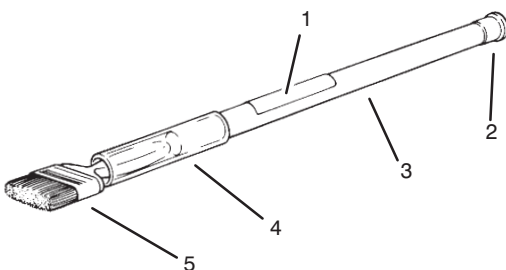

T-0731

Ref. No.	Part No.	Description	No. Used
1	12-9140	Decal	1
2	2410-18	Plug	1
3	29-9080	Handle	1
4	29-9090	Hose – Handle	1
5	36-4310	Brush	1

 *Obtain these items directly from OTC 2013 4th St. Owatonna, MN. 55060 1-800-533-0492
(in Minnesota and Canada 1-507-455-7050) Fax. 507-455-7011.

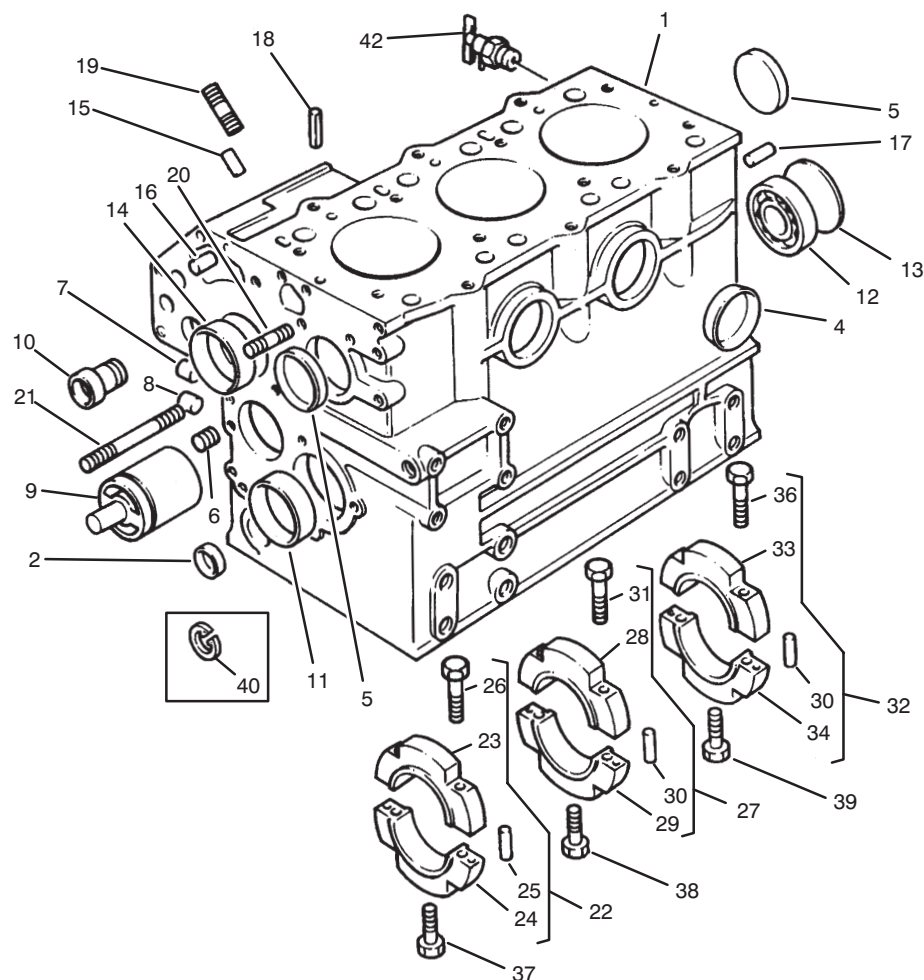


T-1377

CYLINDER BLOCK ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	110186030	Kit — Cylinder Block	1	23		Cap	1
2	064200015	Plug	1	24		Cap	1
4	064200040	Plug	2	25	030500612	Dowel	2
5	064200040	Plug	2	26	010810840	Screw	2
6	198466050	Plug	3	27	110156230	Holder	
7	198466010	Plug	4			Incl. Ref. #28 & 29)	1
8	198466070	Plug	2	28		Cap	1
9	165296160	Shaft	1	29		Cap	1
10	198517090	Bush	1	30	030500612	Dowel	2
11	198517300	Bush	1	31	010810840	Screw	2
*	198517304	Bush —.25mm	1	32	110156240	Holder	
*	198517307	Bush —.50mm	1			Incl. Ref. #33 & 34)	1
12	040106203	Bearing — Ball	1	33		Cap	1
13	064100045	Plug	1	34		Cap	1
14	042303015	Bush	1	36	010810840	Screw	2
15	030500512	Dowel	2	37	011310850	Screw	1
16	030500512	Dowel	2	38	011310850	Screw	1
17	030500820	Dowel	2	39	010700845	Screw	2
18	030309005	Pin	2	40	036509005	Circlip	1
19	012100620	Stud	2	41	064200018	Plug	2
20	012100635	Stud	1	42	198736052	Cock	1
21	012100660	Stud	1	*	110006330	Short Block Assembly	1
22	110156220	Holder		*	195906610	Kit — Gasket	1
		Incl. Ref. #23 & 24)	1				

NOTE: Obtain replacement parts from your local Perkins Dealer.

 *Not Illustrated

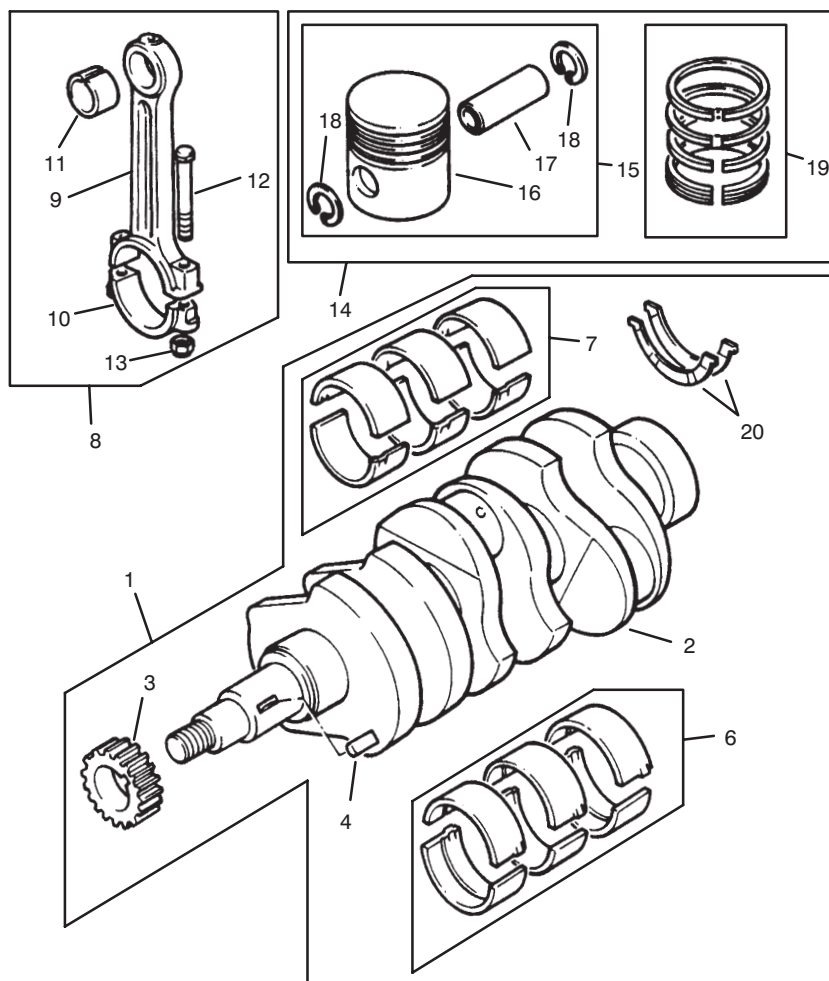


T-1378

CRANKSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	115236020	Kit – Crankshaft Inc. Ref. #2)	1	13	020109103	Nut	2
2		Crankshaft	1	14	115016670	Kit – Piston Std.	3
3	115276210	Gear	1	*	115016674	Kit – Piston +0.5mm	1
4	030509020	Key	1	*	115016677	Kit – Piston +1.0mm	1
6	198586030	Kit – Bearing Std.	1	15	115016770	Kit – Piston Std. Incl. Ref. #16)	1
*	198586034	Kit – Bearing –0.25mm	1	*	115016774	Kit – Piston +0.5mm Incl. Ref. #16)	1
*	198586037	Kit – Bearing –0.50mm	1	*	115016777	Kit – Piston +1.0mm Incl. Ref. #16)	1
7	198586060	Kit – Bearing Std.	1	16		Piston	1
*	198586064	Kit – Bearing –0.25mm	1	17	115326260	Pin	1
*	198586067	Kit – Bearing –0.50mm	1	18	03500019	Circlip	2
8	115026240	Connecting Rod Assembly Incl. Ref. # 9 & 10)	3	19	115107260	Kit – Piston Ring	1
9		Rod	1	*	115107263	Kit – Piston Ring +0.5mm	1
10		Cap	1	*	115107265	Kit – Piston Ring +1.0mm	1
11	198517325	Bush	1				
12	115176130	Screw	2				

NOTE: Obtain replacement parts from your local Perkins Dealer.

 *Not Illustrated

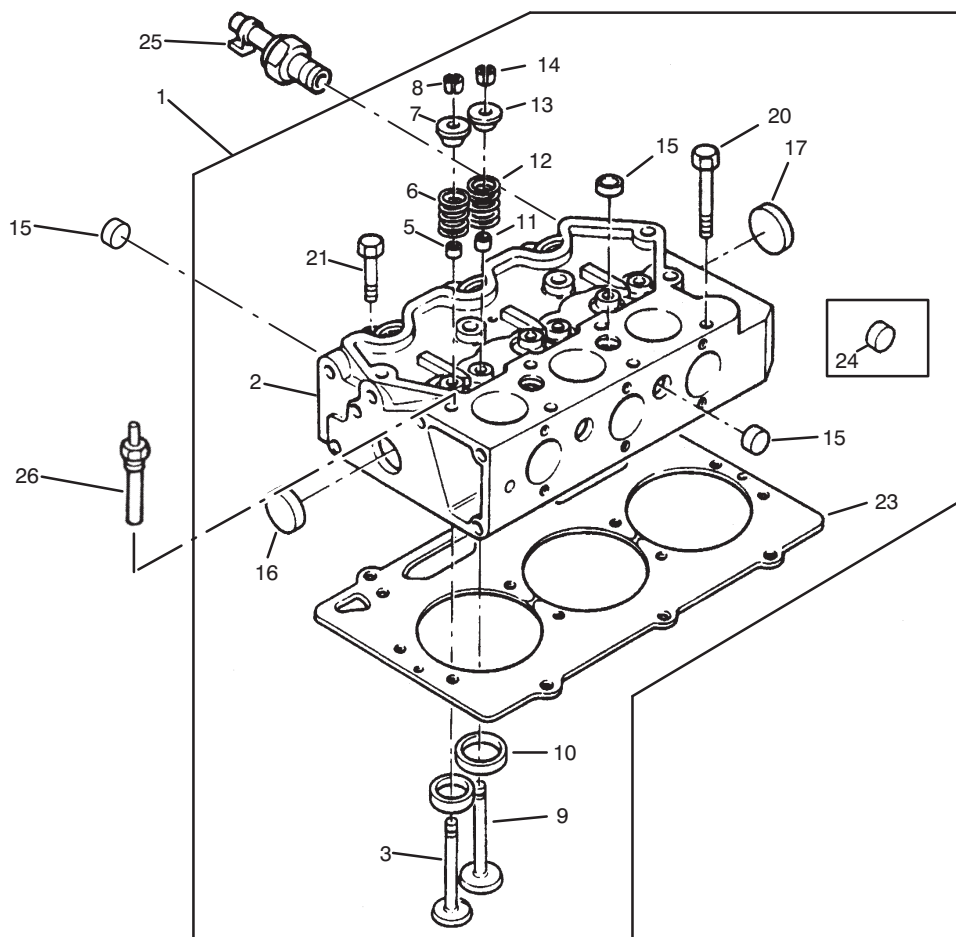


T-1379

CYLINDER HEAD ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	111016911	Kit – Cylinder Head	1	14	120226080	Cotter	6
2	111086030	Kit – Cylinder Head	1	15	198466070	Plug	4
3	120166280	Valve Inlet	3	16	064200022	Plug	3
5	120406080	Seal	3	17	064200022	Plug	3
6	198217070	Spring	3	20	111136340	Screw	11
7	120186100	Cap	3	21	111136350	Screw	3
8	120226080	Cotter	6	23	111147100	Gasket +1.2mm	1
9	120176290	Valve Exhaust	3	*	111147110	Gasket +1.3mm	1
10	110136290	Insert	3	24	064200018	Plug	2
11	120406080	Seal	3	25	185246060	Switch – Oil Pressure	1
12	198217070	Spring	3	26	385720101	Sender – Temperature	1
13	120186100	Cap	3				

NOTE: Obtain replacement parts from your local Perkins Dealer.

 *Not Illustrated

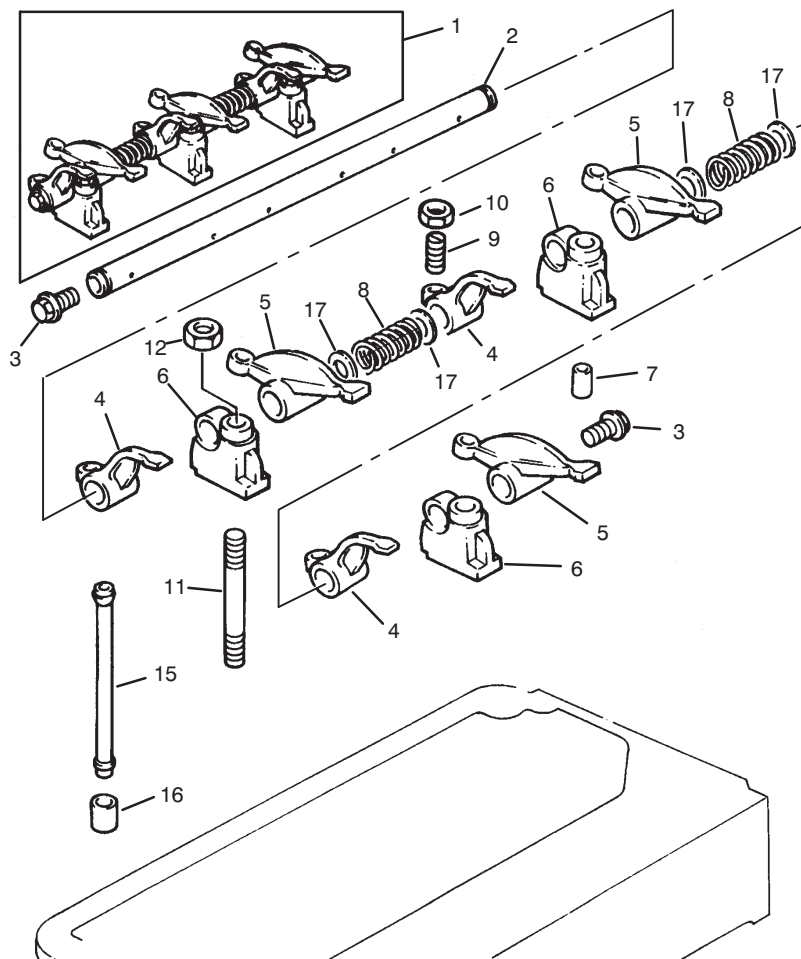


T-1380

ROCKER ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	120336020	Rocker Shaft Assembly	1	9	199486220	Adjusting Screw	6
2	120316190	Shaft	1	10	020109076	Nut	6
3	064609006	Plug	2	11	012109177	Stud	3
4	120356120	Lever	3	12	023100008	Nut	3
5	120356110	Lever	3	15	120456240	Rod	6
6	120346170	Bracket	3	16	120116100	Tappet	6
7	030300325	Pin	1	17	199280280	Washer	4
8	198217080	Spring	2				

 NOTE: Obtain replacement parts from your local Perkins Dealer.

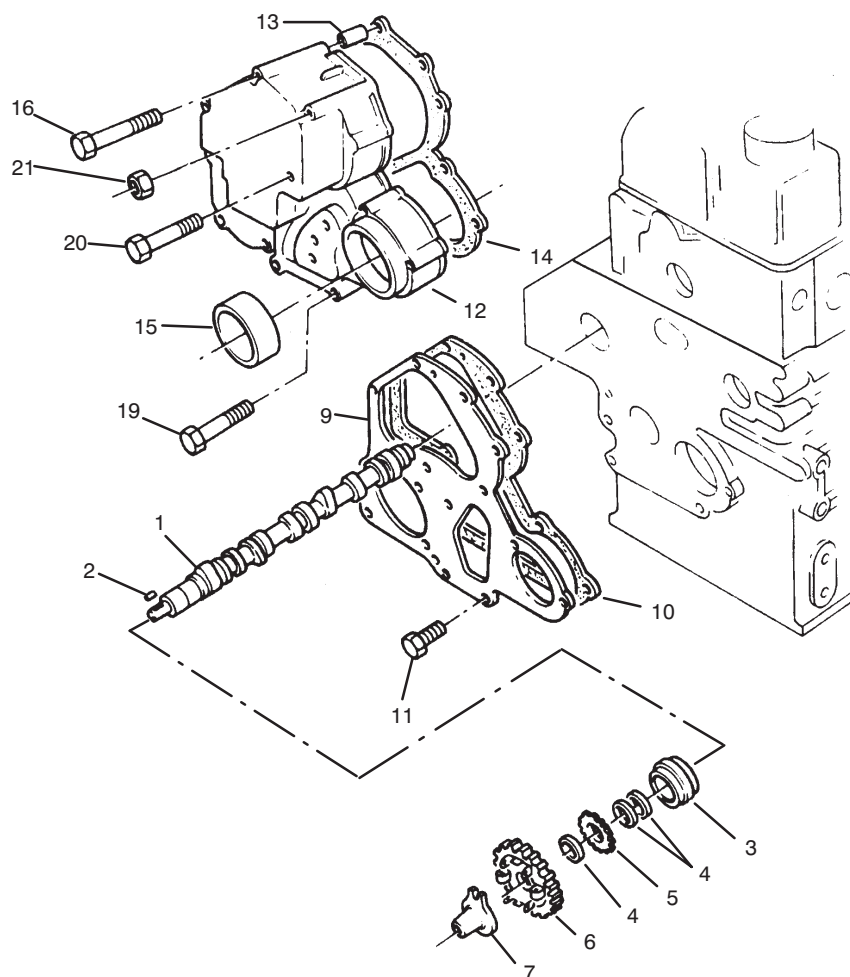


T-1381

CAMSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	120026120	Camshaft	1	11	011300612	Bolt	3
2	034100508	Key	1	12	165106130	Cover	1
3	040109059	Bearing	1	13	030300414	Pin	1
4	199216230	Spacer	3	14	165996410	Joint	1
5	120736081	Gear	1	15	198636090	Seal	1
6	120016030	Gear	1	16	011300680	Screw	2
7	125256120	Tappet	1	19	011300640	Screw	4
9	165166260	Plate	1	20	011300660	Screw	2
10	165996400	Joint	1	21	023100006	Nut	1

 NOTE: Obtain replacement parts from your local Perkins Dealer.

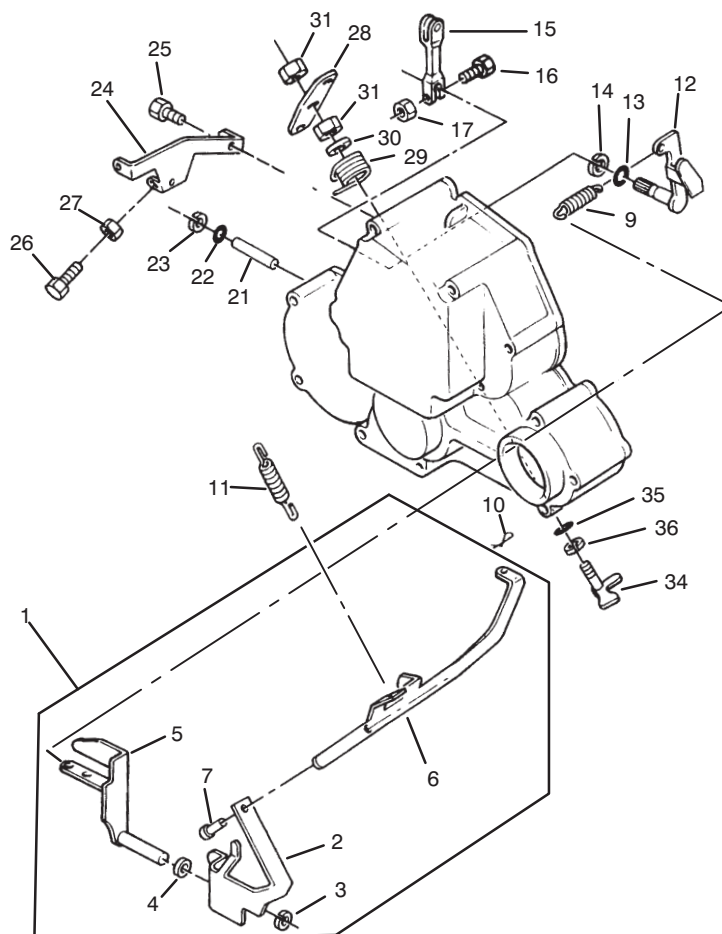


T-1382

TIMING COVER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	125046140	Lever (Incl. Ref. #2, 6 & 7)	1	17	023100006	Nut	1
2		Lever	1	21	125116130	Shaft	1
3	036800008	Circlip	1	22	052100030	Seal – O–Ring	1
4	026200010	Washer	1	23	036800005	Circlip	1
5	125406071	Lever	1	24	125976120	Stay	1
6		Link	1	25	011300618	Screw	2
7		Pin	1	26	010109264	Screw	2
9	198217220	Spring	1	27	023100006	Nut	2
10	031100004	Pin	1	28	125176080	Lever	1
11	198217420	Spring	1	29	198216760	Spring	1
12	125156170	Arm	1	30	026200008	Washer	1
13	052100070	O Ring	1	31	020300008	Nut	2
14	036800008	Circlip	1	34	125156180	Arm	1
15	125416020	Lever	1	35	052100050	O Ring	1
16	010110630	Screw	1	36	036800006	Circlip	1

 NOTE: Obtain replacement parts from your local Perkins Dealer.

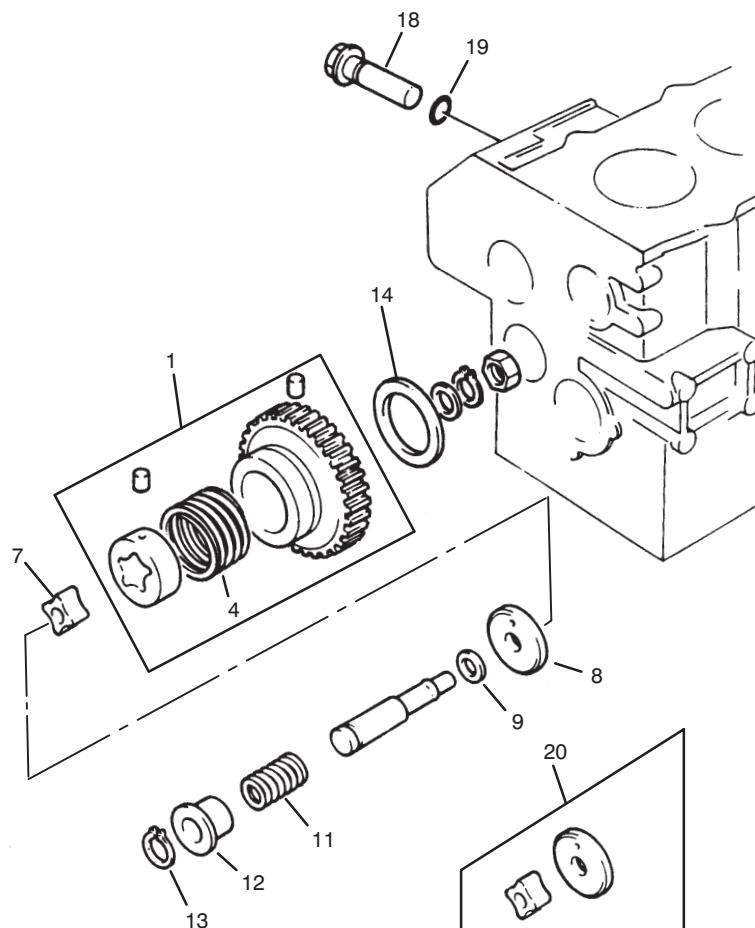


T-1383

OIL PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	165026110	Gear	1	11	198216720	Spring	1
4	198216821	Spring	1	12	199236540	Collar	1
7	140166130	Rotor	1	13	036800010	Circlip	1
8	140116140	Cover	1	14	199266180	Washer	1
9	199286150	Shim +0.10mm	1	18	140036120	Valve	1
*	199286160	Shim +0.15mm	1	19	052100150	Seal — O—Ring	1
*	199286170	Shim +0.20mm	1	20	140186010	Repair Kit	1
*	199286180	Shim +0.50mm	1				

NOTE: Obtain replacement parts from your local Perkins Dealer.

 *Not Illustrated

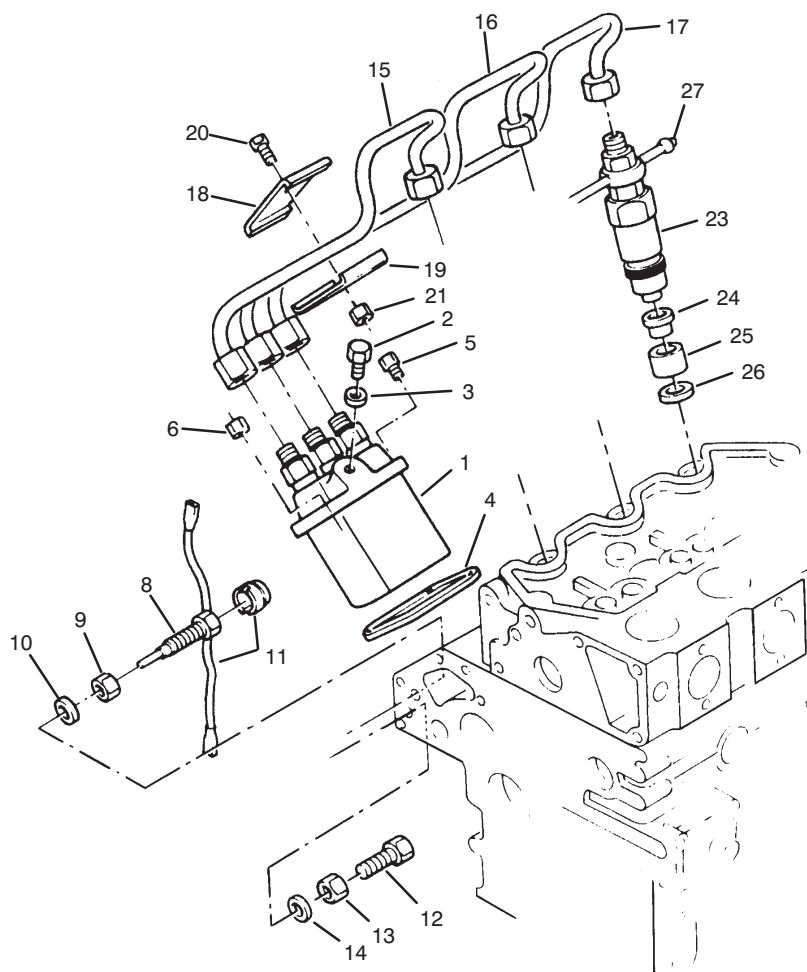


T-1384

FUEL INJECTION SYSTEM ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	131017340	Injection Pump	1	13	023109002	Nut	1
2	131236201	Screw	1	14	025100010	Washer	1
3	025100006	Washer	1	15	131507010	Injection Pipe No. 1 Cyl.	1
4	131437310	Shim +0.2mm	1	16	131507020	Injection Pipe No. 2 Cyl.	1
*	131437320	Shim +0.3mm	1	17	131507030	Injection Pipe No. 3 Cyl.	1
*	131437330	Shim +0.4mm	1	18	199106020	Damper	2
*	131437340	Shim +0.5mm	1	19	199106020	Damper	2
*	131437340	Shim +1.0mm	1	20	010100625	Screw	2
5	011300620	Screw	2	21	023100006	Nut	2
6	023100006	Nut	2	23	131406340	Atomiser	3
8	131046160	Screw	1	24	131426200	Gasket	3
9	023109002	Nut	1	25	111316280	Insert	3
10	025100010	Washer	1	26	198996090	Seal	3
11	198236030	Wire	1	27	131606260	Pipe	1
12	010109270	Screw	1				

NOTE: Obtain replacement parts from your local Perkins Dealer.

 *Not Illustrated

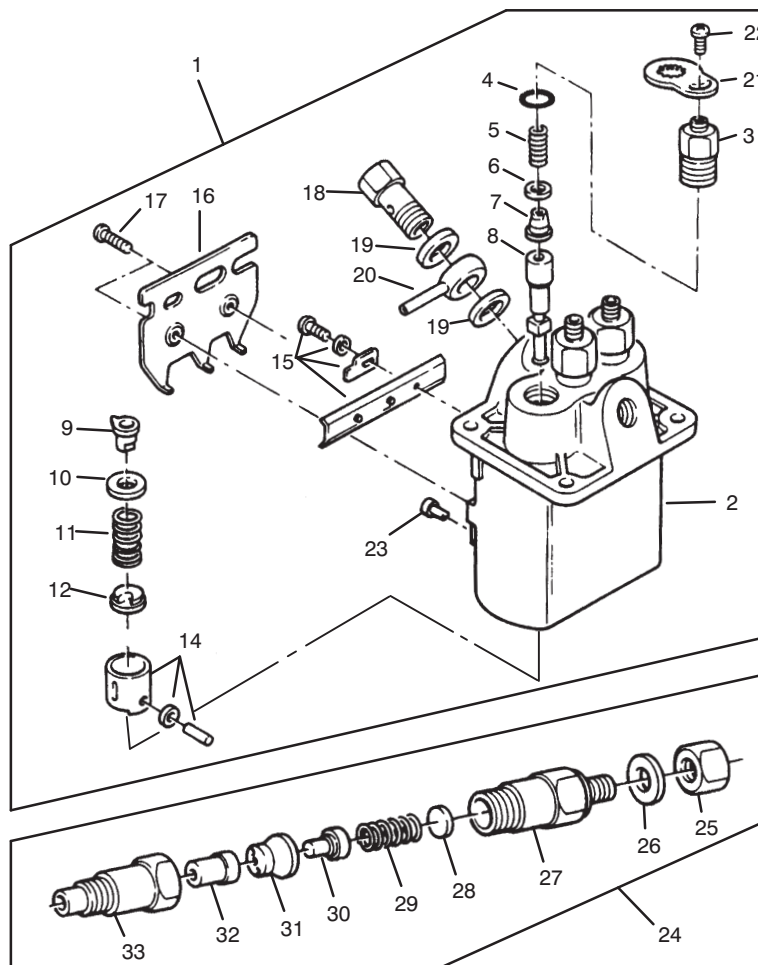


T-1385

INJECTION PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	131017340	Injection Pipe	1	15	131296636	Rack	1
2	131296665	Housing	1	16	131296650	Bracket	1
3	131196120	Holder	3	17	131136320	Screw	2
4	131226170	Seal – O–Ring	3	18	131236190	Bolt	1
5	131176430	Spring	3	19	131246180	Washer	2
6	131186050	Gasket	3	20	131246130	Nipple	1
7	131156160	Valve	3	21	131296662	Plate	3
8	131116410	Element	3	22	131136330	Screw	3
9	131296951	Sleeve	3	23	131296651	Pin	3
10	131296620	Seat	3	24	131406340	Atomiser	3
11	131176440	Spring	3	25	131446069	Nut	1
12	131296621	Seat	3	26	131426210	Washer	1
*	131296622	Plate +1.85mm	1	27	131446065	Body	1
*	131296623	Plate +1.90mm	1	28	131437250	Shim +0.90mm	1
*	131296625	Plate +2.00mm	1	*	131437251	Shim +0.925mm	1
*	131296626	Plate +2.05mm	1	*	131437252	Shim +0.95mm	1
*	131296627	Plate +2.10mm	1	*	131437253	Shim +0.975mm	1
*	131296628	Plate +2.15mm	1	*	131437354	Shim +1.00mm	1
*	131296629	Plate +2.20mm	1	*	131437255	Shim +1.025mm	1
*	131296630	Plate +2.25mm	1	*	131437256	Shim +1.05mm	1
*	131296631	Plate +2.30mm	1	*	131437257	Shim +1.075mm	1
*	131296632	Plate +2.35mm	1	*	131437258	Shim +1.10mm	1
*	131296633	Plate +2.40mm	1	*	131437259	Shim +1.125mm	1
*	131296634	Plate +2.45mm	1	*	131437260	Shim +1.15mm	1
*	131296635	Plate +2.50mm	1	*	131437261	Shim +1.175mm	1
14	131256120	Tappet	3	*	131437262	Shim +1.20mm	1

NOTE: Obtain replacement parts from your local Perkins Dealer.

 *Not Illustrated

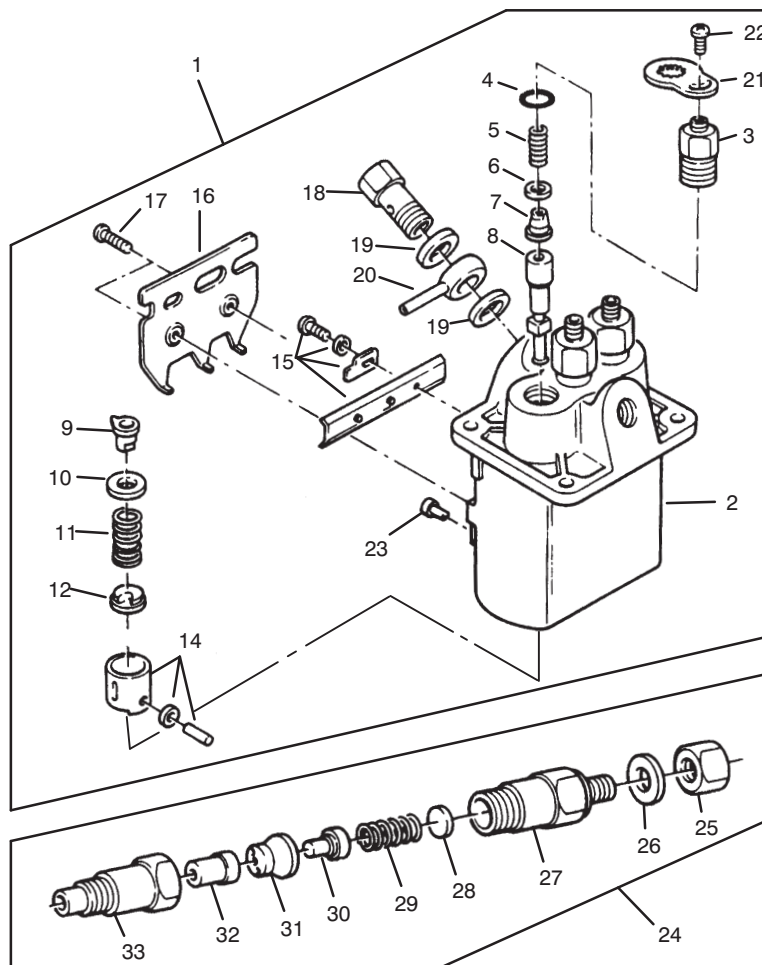


T-1385

INJECTION PUMP ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
28	131437263	Shim +1.225mm	1	29	131446066	Spring	1
*	131437264	Shim +1.250mm	1	30	131446070	Pin	1
*	131437265	Shim +1.275mm	1	31	131446068	Spacer	1
*	131437266	Shim +1.30mm	1	32	131416150	Nozzle	1
*	131437267	Shim +1.325mm	1	33	131446067	Nut	1
*	131437268	Shim +1.35mm	1				
*	131437269	Shim +1.375mm	1				
*	131437270	Shim +1.40mm	1				
*	131437271	Shim +1.425mm	1				
*	131437272	Shim +1.45mm	1				

NOTE: Obtain replacement parts from your local Perkins Dealer.

 *Not Illustrated

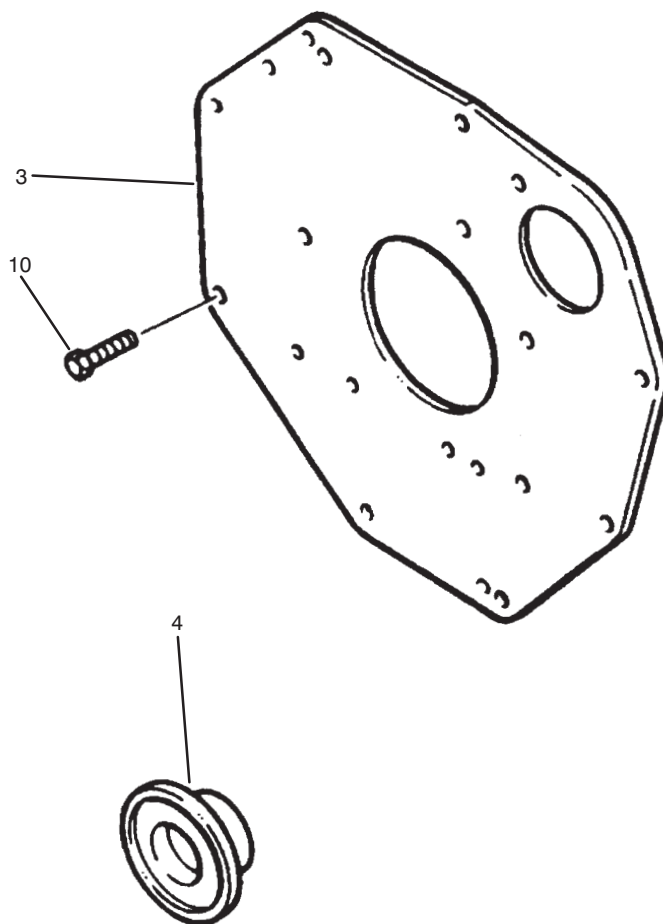


T-1386

FLYWHEEL HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
3	110366700	Plate	1
4	198636080	Seal	1

Ref. No.	Part No.	Description	No. Used
10	011310816	Screw	10

 NOTE: Obtain replacement parts from your local Perkins Dealer.

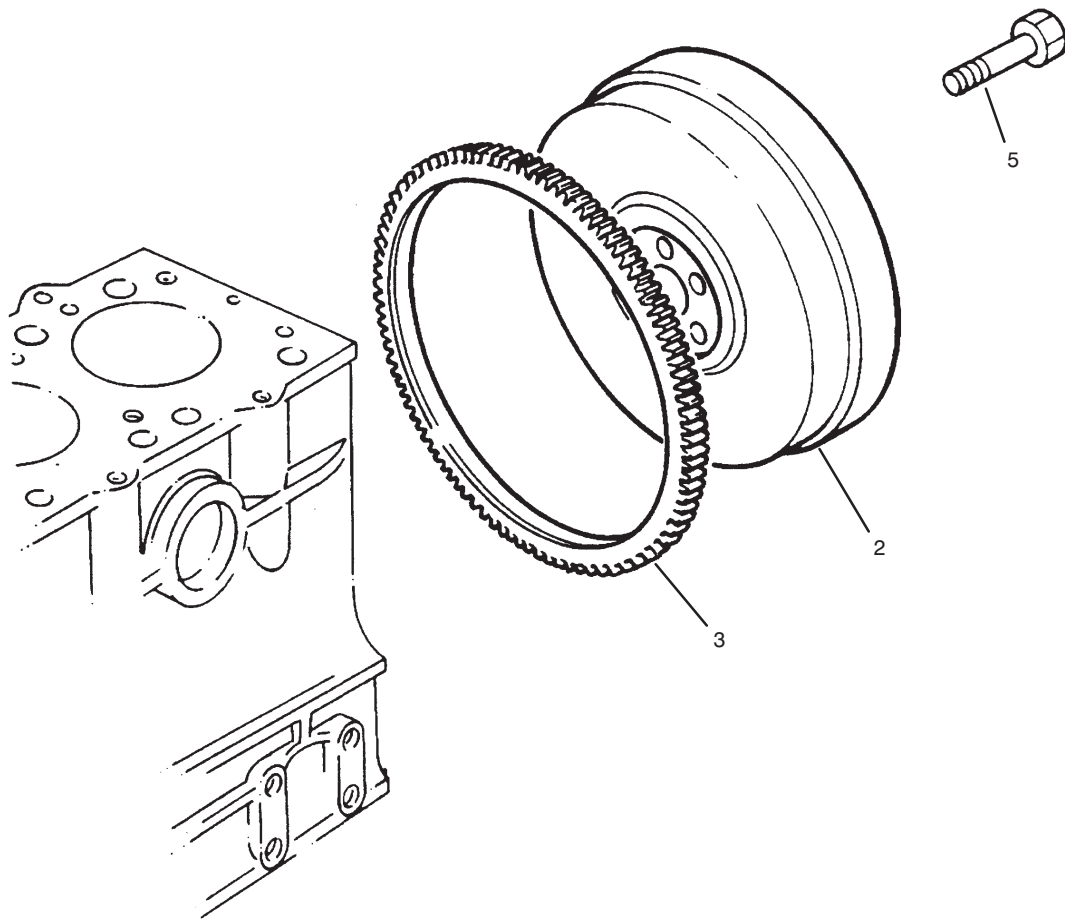


T-1387

FLYWHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
2	115356921	Flywheel	1
3	115376150	Gear – Ring	1

Ref. No.	Part No.	Description	No. Used
5	010109330	Screw	4

 NOTE: Obtain replacement parts from your local Perkins Dealer.

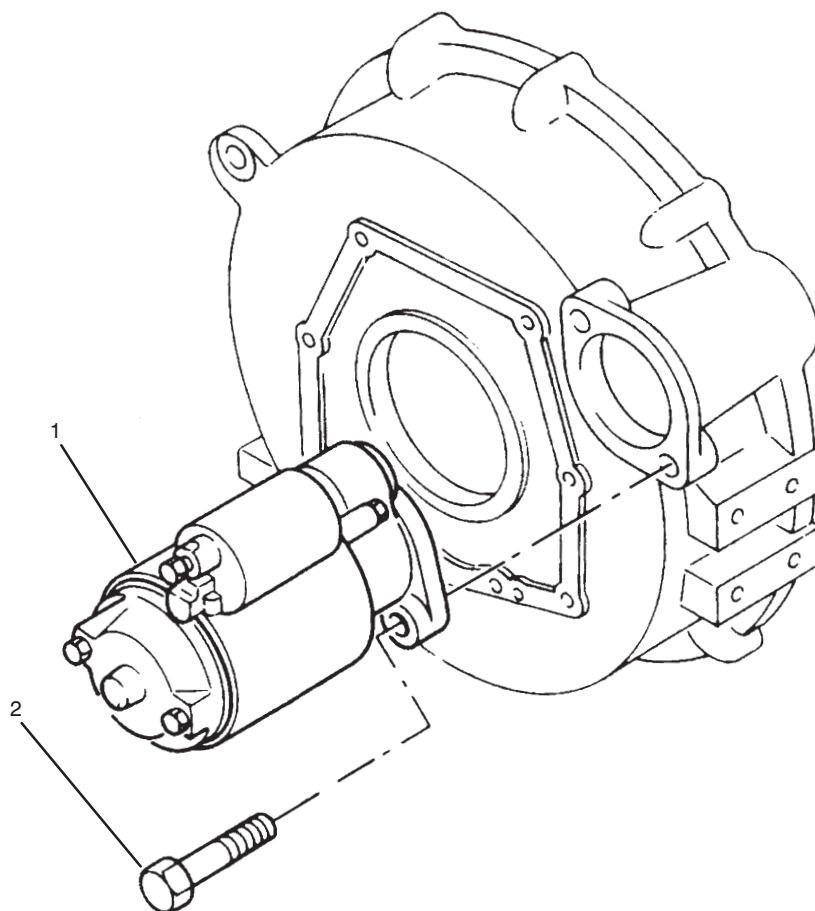


T-1388

STARTER INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	185086370	Startermotor	1

Ref. No.	Part No.	Description	No. Used
2	011601020	Screw	2

 NOTE: Obtain replacement parts from your local Perkins Dealer.

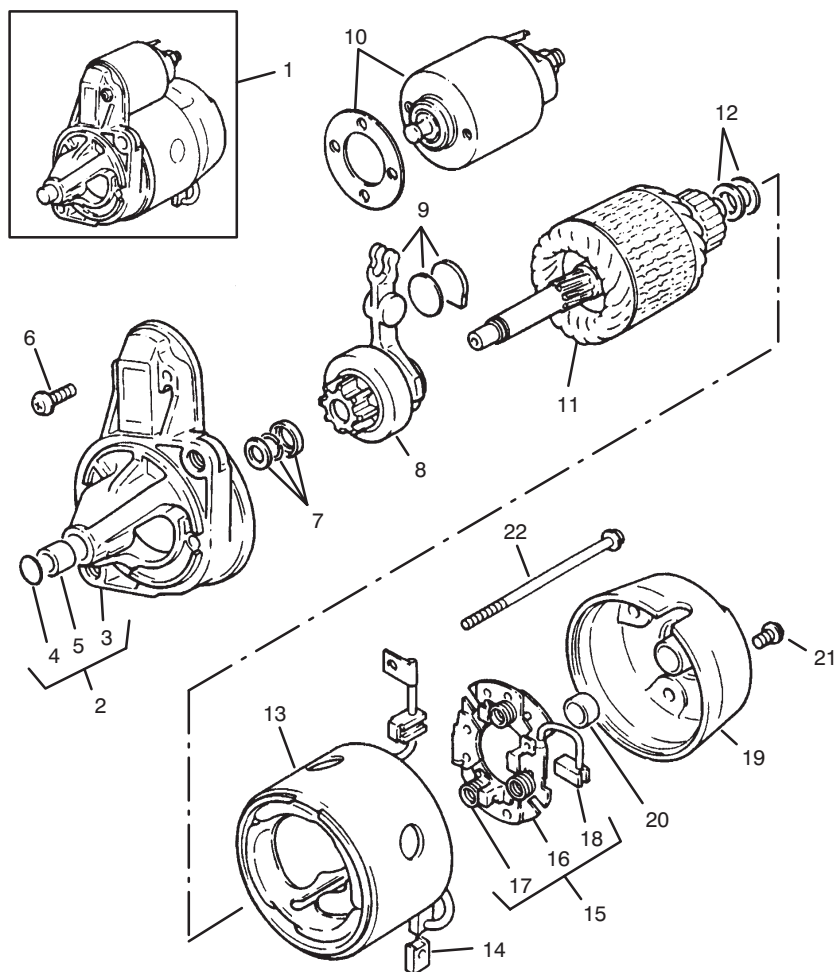


T-1389

STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	185086370	Startermotor	1	12	185846475	Washer	1
2	185846471	Cover (Incl. Ref. #3 & 4)	1	13	185846476	Yoke	1
3		Cover	1	14	185416400	Brush	1
4		Ring	1	15	185416390	Holder (Incl. Ref. #16)	1
5	185846472	Bush	2	16		Holder	1
6	185846468	Screw	2	17	185886010	Spring	1
7	185846473	Washer	1	18	185416410	Brush	1
8	185866240	Pinion	1	19	185846477	Cover	1
9	185846469	Lever	1	20	185846478	Bush	1
10	185816220	Switch	1	21	185846468	Screw	3
11	185846474	Armature	1	22	185846470	Screw	2

 NOTE: Obtain replacement parts from your local Perkins Dealer.

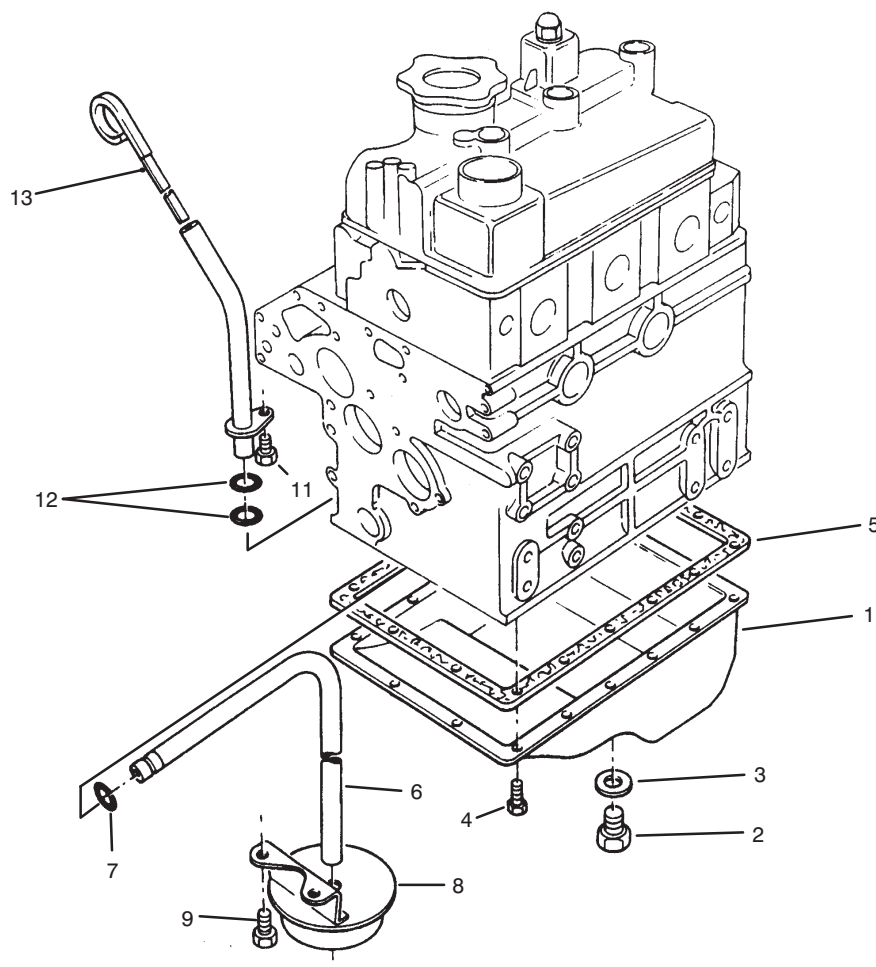


T-1390

OIL SUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	110706860	Sump	1	8	140406310	Strainer	1
2	010401212	Plug	2	9	011300612	Bolt	2
3	025100012	Washer	2	11	011300612	Bolt	1
4	010109235	Screw	18	*	011300812	Screw	1
5	110996590	Gasket	1	12	052100100	Seal – O–Ring	2
6	140986590	Pipe	1	13	198416371	Dipstick	1
7	052109076	Seal – O–Ring	1				

NOTE: Obtain replacement parts from your local Perkins Dealer.

 *Not Illustrated

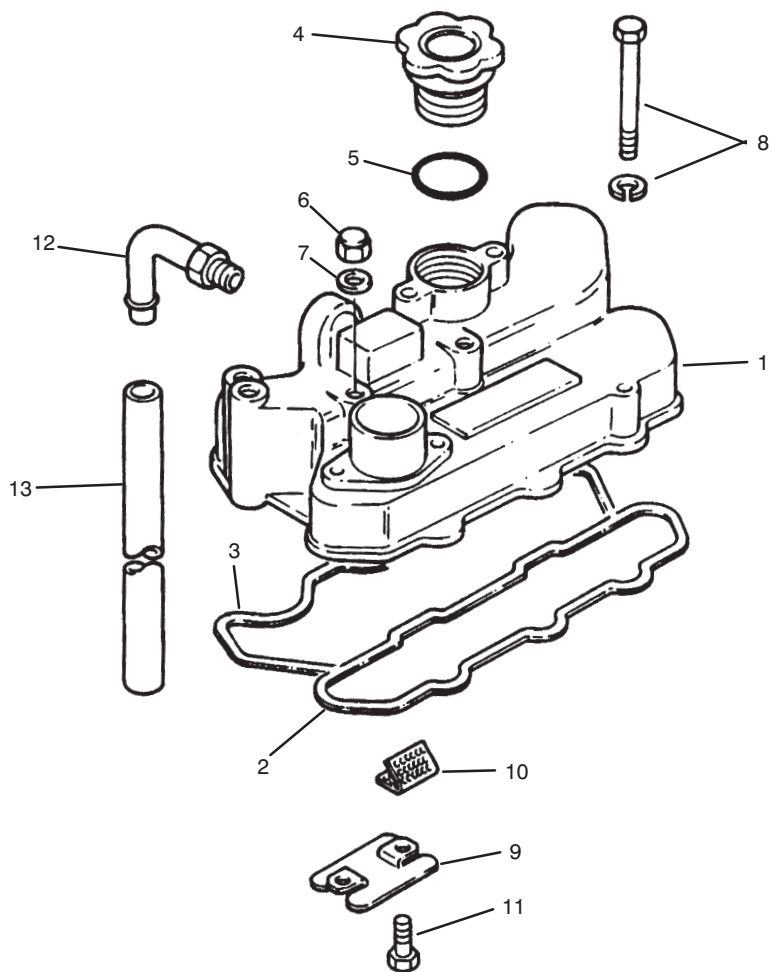


T-1391

VALVE COVER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	111216630	Cover	1	7	198996060	Washer	3
*	111026371	Cover	1	8	011300650	Screw	2
2	111996330	Gasket	1	9	110666110	Plate	1
3	111996060	Gasket	1	10	110666120	Gauze	1
4	198436010	Cap	1	11	011300612	Bolt	2
5	052100400	Seal	1	12	110986500	Pipe	1
6	024500008	Nut	3	13	068122560	Hose	1

NOTE: Obtain replacement parts from your local Perkins Dealer.

 *Not Illustrated

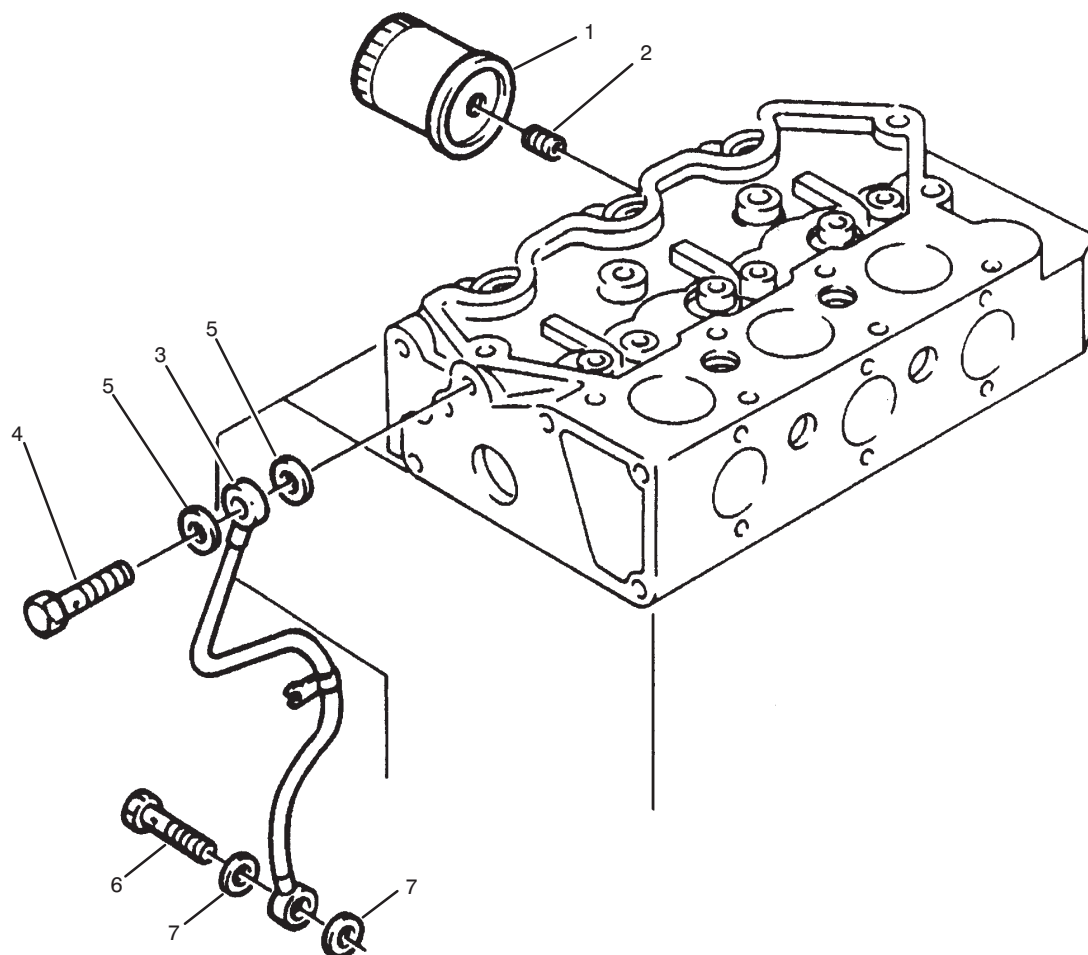


T-1392

OIL FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	140516190	Filter – Oil	1
2	140546020	Connection	1
3	140606680	Pipe	1
4	198486780	Bolt	1

Ref. No.	Part No.	Description	No. Used
5	198996060	Washer	2
6	198486780	Bolt	1
7	198996060	Washer	2

 NOTE: Obtain replacement parts from your local Perkins Dealer.

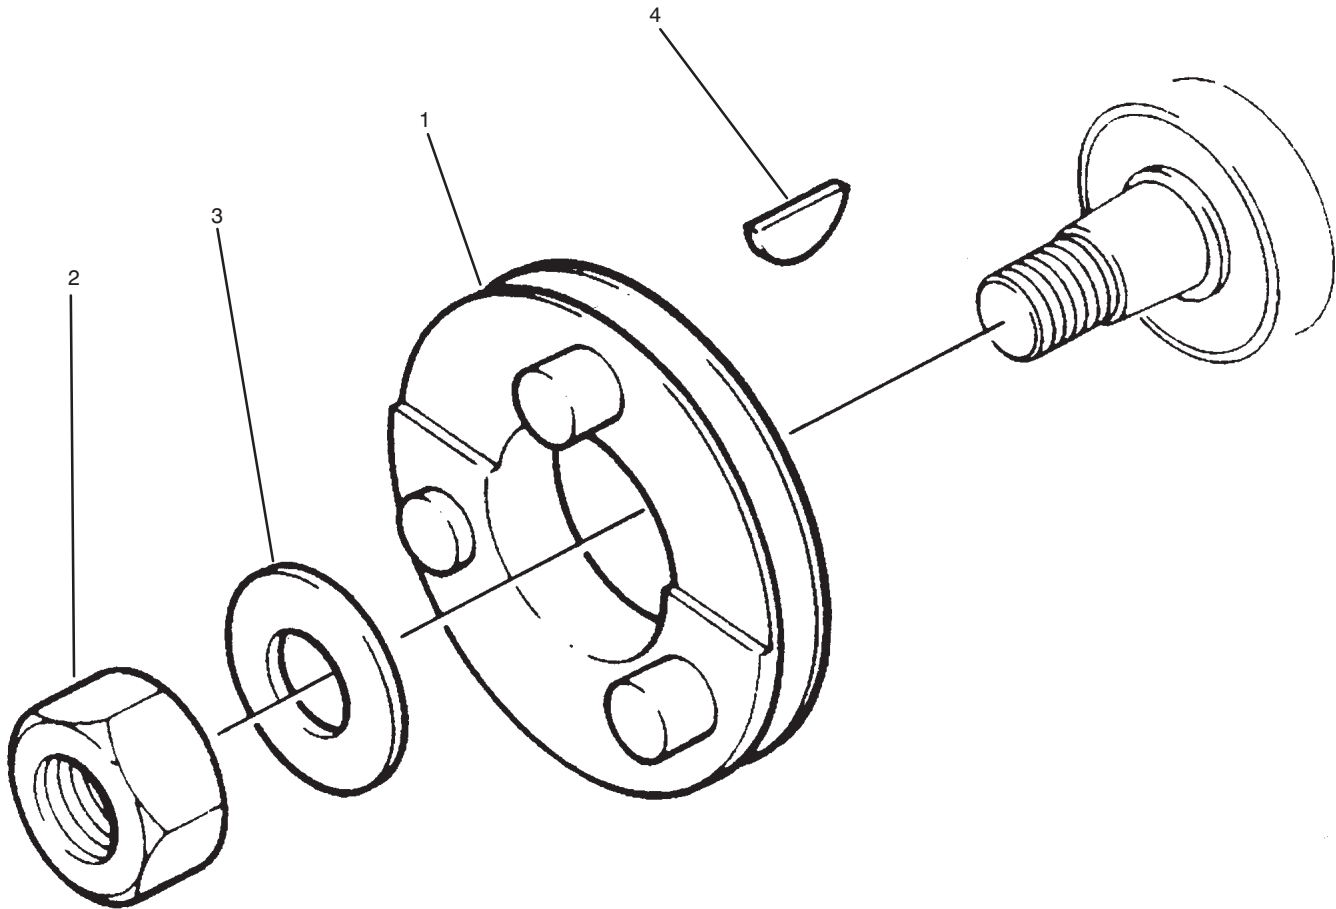


T-1393

FRONT DRIVE PULLEY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	115397550	Pulley	1
2	020800018	Nut	1

Ref. No.	Part No.	Description	No. Used
3	026200018	Washer	1
4	134100508	Key	1

 NOTE: Obtain replacement parts from your local Perkins Dealer.

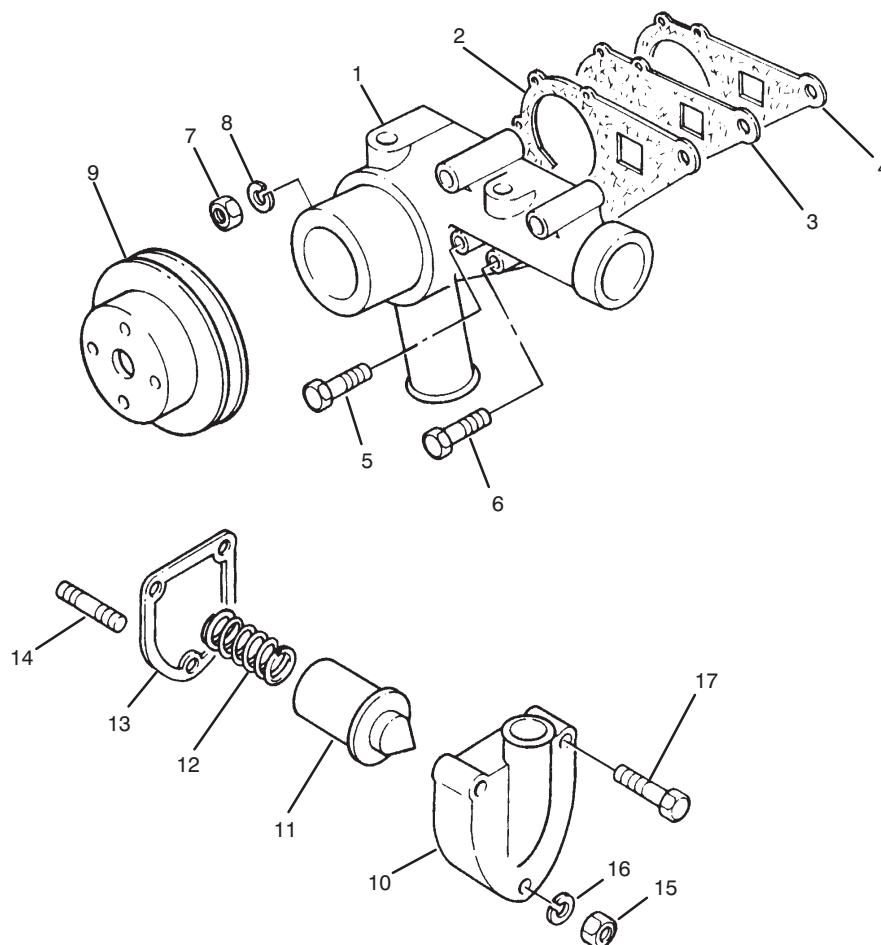


T-1394

WATER PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	145016840	Pump – Water	1	10	145216160	Housing	1
2	145996430	Gasket	1	11	145206061	Thermostat	1
3	145146270	Backplate	1	12	198217090	Spring	1
4	145996420	Gasket	1	13	145996440	Gasket	1
5	011300635	Screw	3	14	012100650	Stud	1
6	011300650	Screw	4	15	023100006	Nut	1
7	023100006	Nut	1	16	027100006	Washer	1
8	027100006	Washer	1	17	011300650	Screw	2
9	145336490	Pulley	1				

 NOTE: Obtain replacement parts from your local Perkins Dealer.

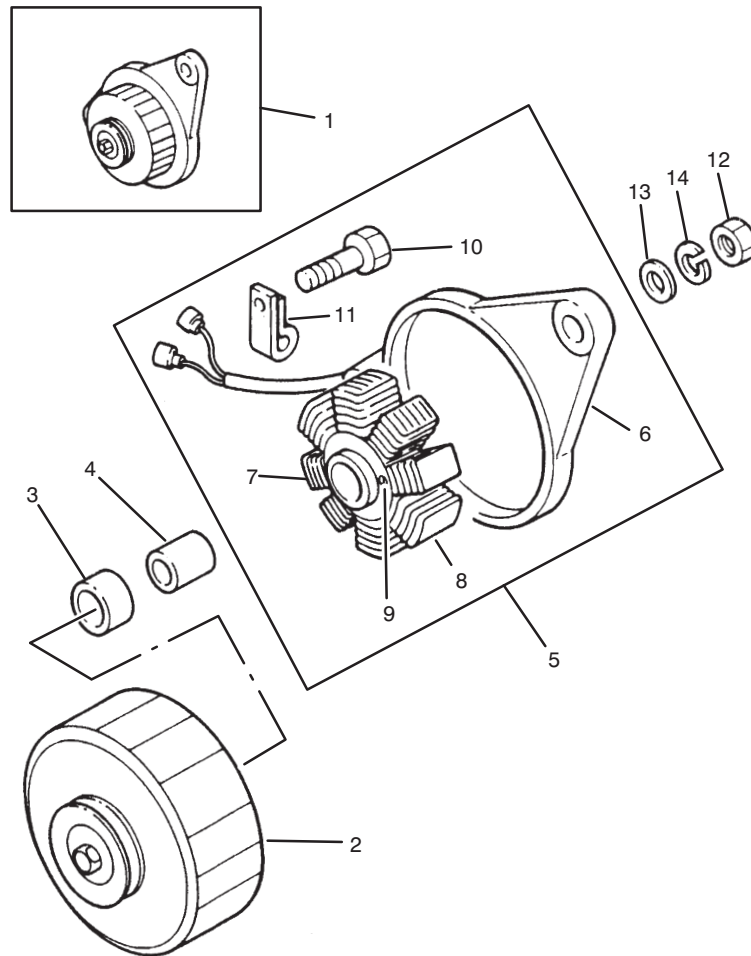


T-1397

ALTERNATOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	185046210	Alternator	1	8	185426218	Stator	1
2	185446219	Pulley	1	9	015140425	Screw	2
3	040126201	Bearing	1	10	015140408	Screw	1
4	199236510	Collar	1	11	185446220	Clip	1
5	185446217	Plate	1	12	020210010	Nut	1
6	185716200	Plate	1	13	026100010	Washer	1
7	040126201	Bearing	1	14	027100010	Washer	1

 NOTE: Obtain replacement parts from your local Perkins Dealer.

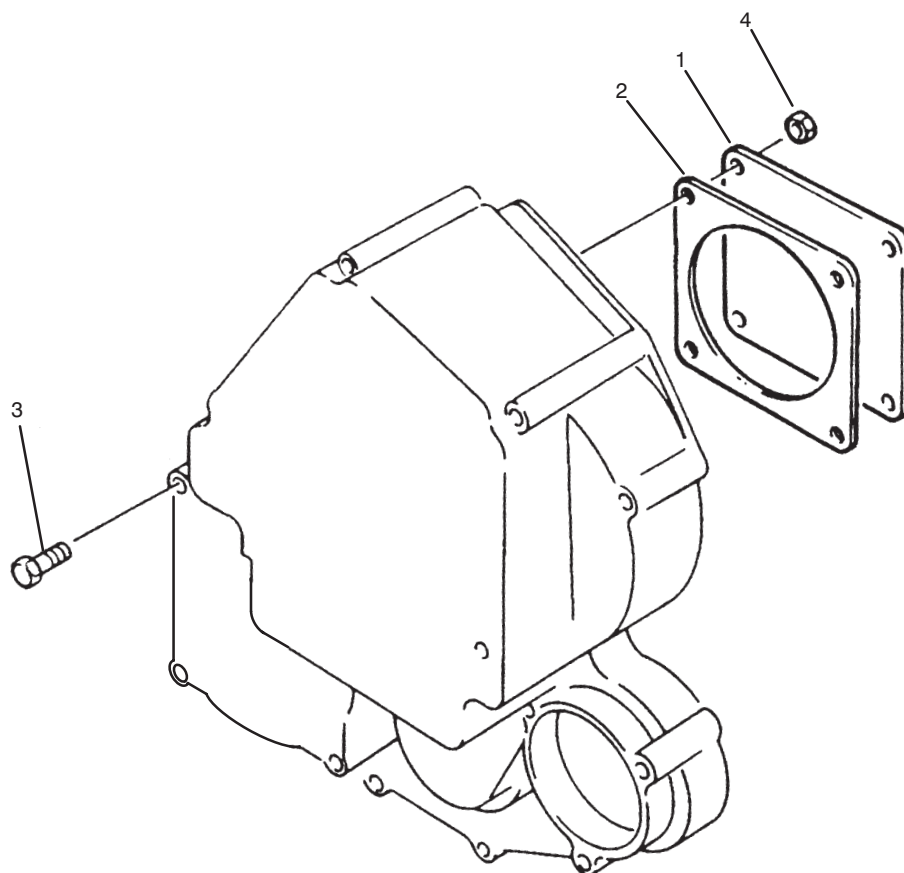


T-1398

TIMING COVER PLATE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	165206360	Plate	1
2	165996420	Gasket	1

Ref. No.	Part No.	Description	No. Used
3	010110850	Screw	4
4	023100008	Nut	4

 NOTE: Obtain replacement parts from your local Perkins Dealer.

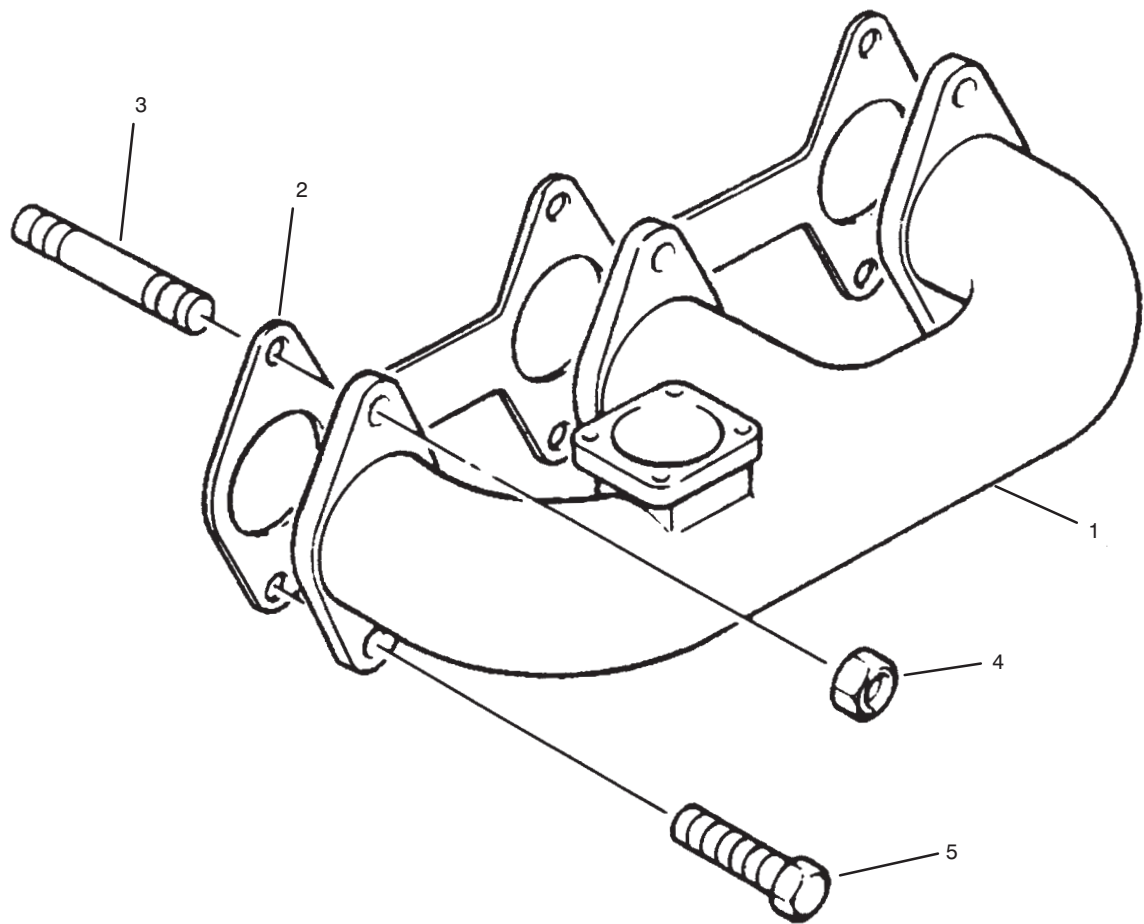


T-1399

EXHAUST MANIFOLD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	135616630	Manifold – Exhaust	1
2	135996520	Gasket	1
3	012110625	Stud	3

Ref. No.	Part No.	Description	No. Used
4	023100006	Nut	3
5	011310625	Screw	3

 NOTE: Obtain replacement parts from your local Perkins Dealer.

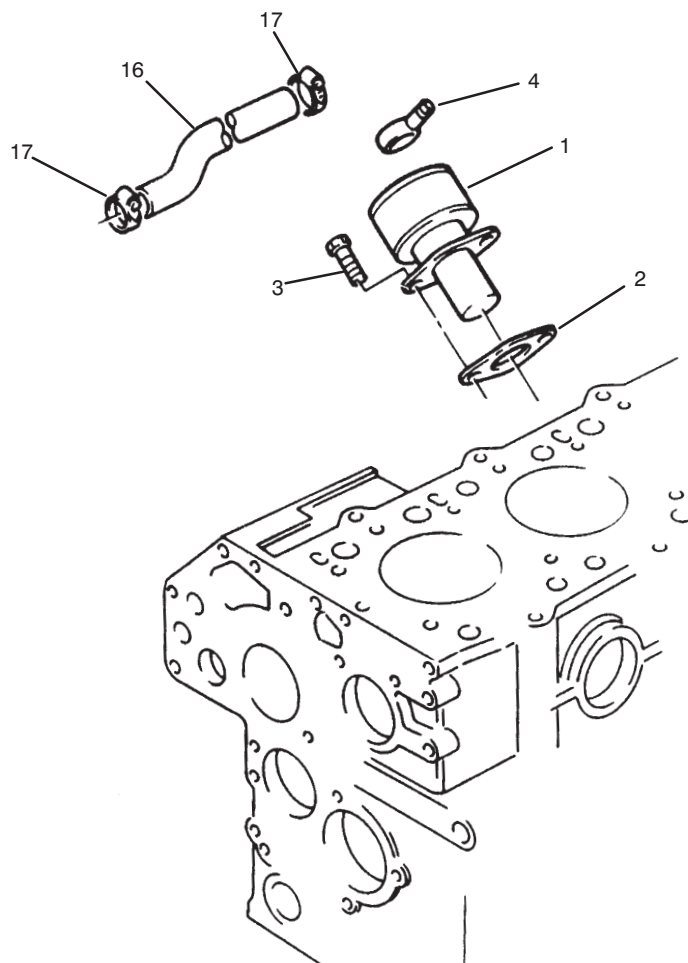


T-1400

LOW PRESSURE FUEL SYSYEM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	130506140	Pump – Lift	1
2	130996070	Gasket	1
3	011140616	Screw	2

Ref. No.	Part No.	Description	No. Used
4	198486840	Connection	2
16	068209084	Hose	1
17	067100015	Clip	2

 NOTE: Obtain replacement parts from your local Perkins Dealer.

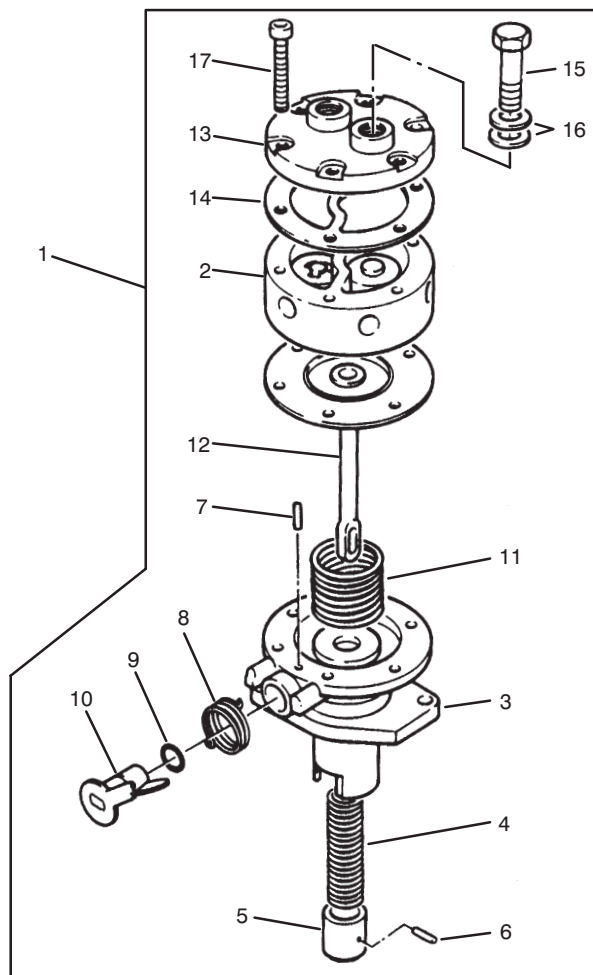


T-1401

LIFT PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	130506140	Lift Pump Assembly (Incl. Ref. #2)	1	9	131226180	Seal – O–Ring	1
2		Body	1	10	130516086	Lever	1
3	130516080	Body	1	11	130516087	Spring	1
4	130516081	Spring	1	12	130516084	Diaphragm	1
5	130516082	Plunger	1	13	130516090	Cap	1
6	130516085	Pin	1	14	130516089	Gasket	1
7	130516088	Pin	1	15	130516092	Bolt	2
8	130516083	Spring	1	16	130516069	Washer	4
				17	130516091	Screw	6

 NOTE: Obtain replacement parts from your local Perkins Dealer.

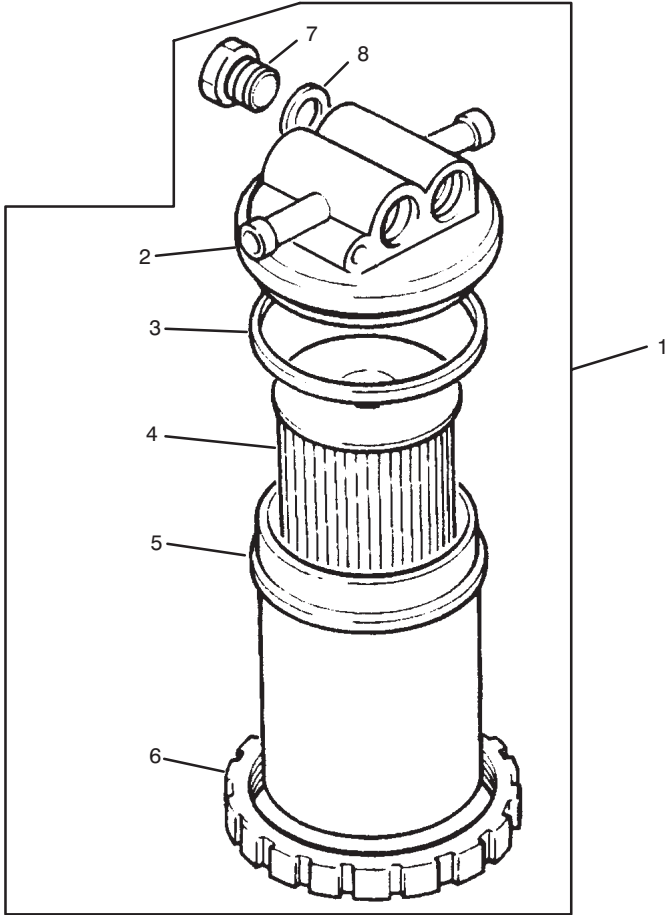


T-1402

FUEL FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	130306041	Fuel Filter Assembly (Incl. Ref. #2)	1	5	130336031	Container	1
2		Head	1	6	130446090	Seal – O–Ring	1
3	052100440	Seal – O–Ring	1	7	130446080	Plug	2
4	130366040	Element	1	8	130326120	Washer	2

 NOTE: Obtain replacement parts from your local Perkins Dealer.

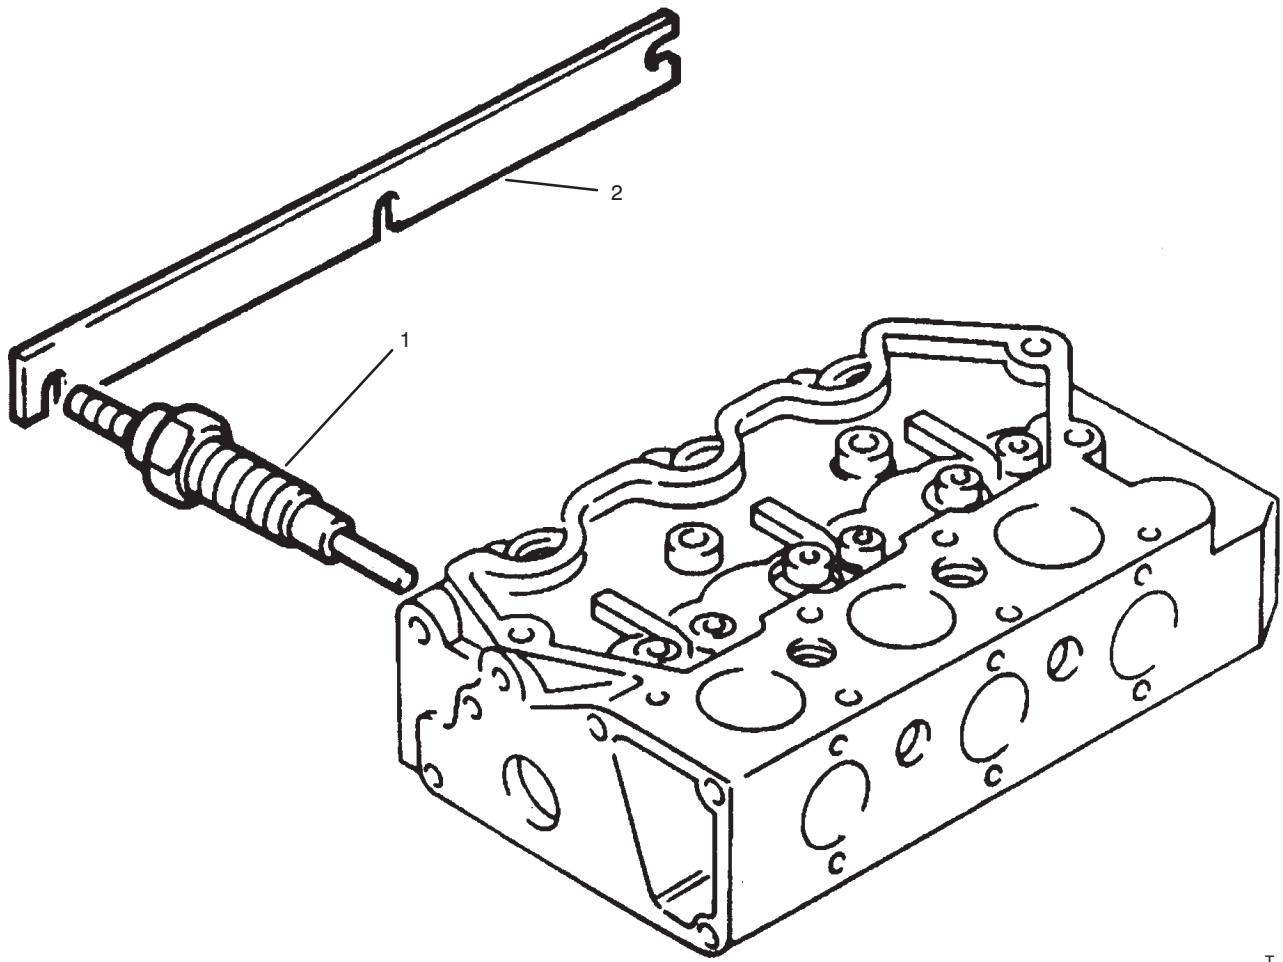


T-1403

COLD START SYSTEM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	185366190	Heater	3

Ref. No.	Part No.	Description	No. Used
2	185376170	Bar	1

 NOTE: Obtain replacement parts from your local Perkins Dealer.

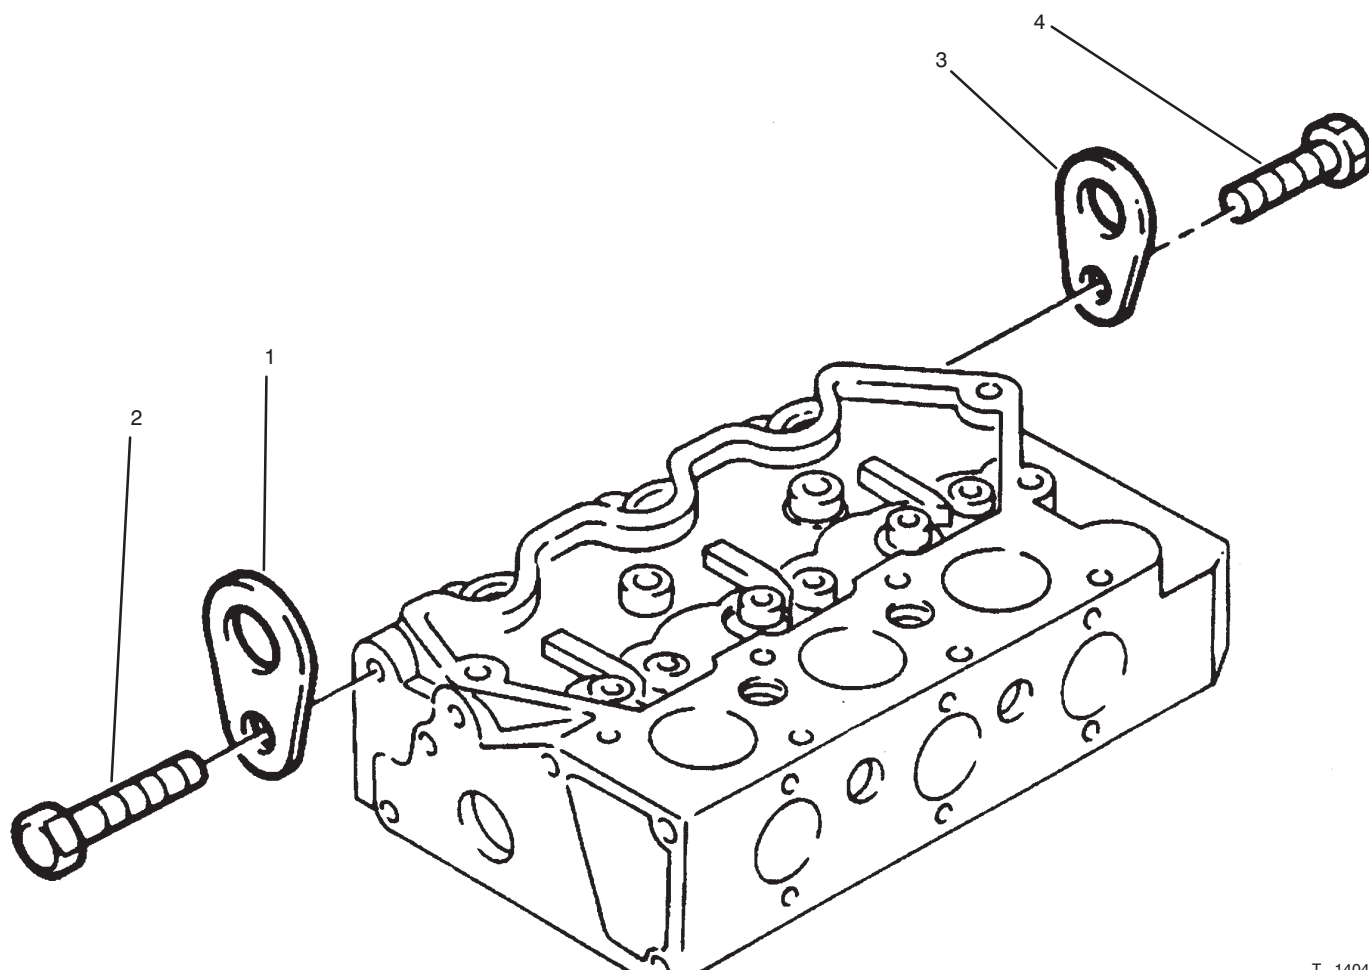


T-1404

ENGINE LIFTING TAB ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	195816200	Plate	1
2	011310816	Screw	1

Ref. No.	Part No.	Description	No. Used
3	195816200	Plate	1
4	011310816	Screw	1

 NOTE: Obtain replacement parts from your local Perkins Dealer.

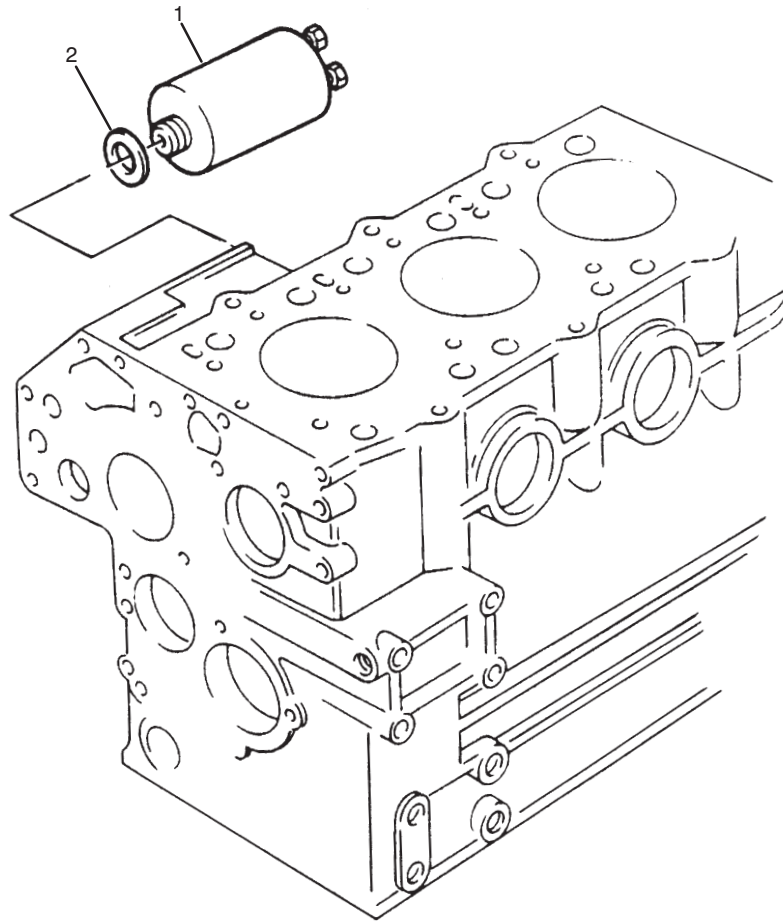


T-1405

THROTTLE STOP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	185206082	Solenoid	1

Ref. No.	Part No.	Description	No. Used
2	025100016	Washer	1

 NOTE: Obtain replacement parts from your local Perkins Dealer.

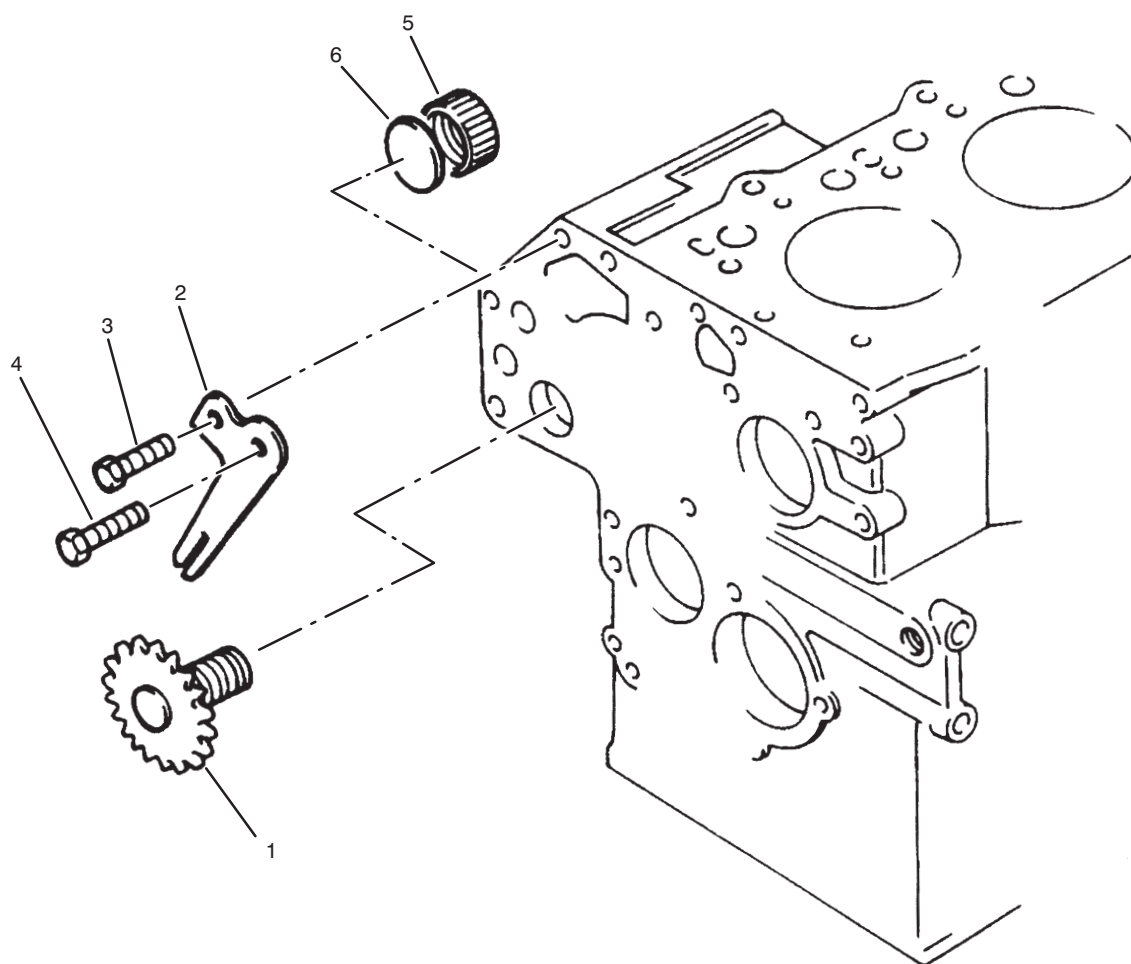


T-1406

RECORDER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	120076070	Shaft	1
2	199566651	Plate	1
3	011310612	Screw	1

Ref. No.	Part No.	Description	No. Used
4	010700610	Screw	1
5	199376230	Cap	1
6	120996060	Seal	1

 NOTE: Obtain replacement parts from your local Perkins Dealer.

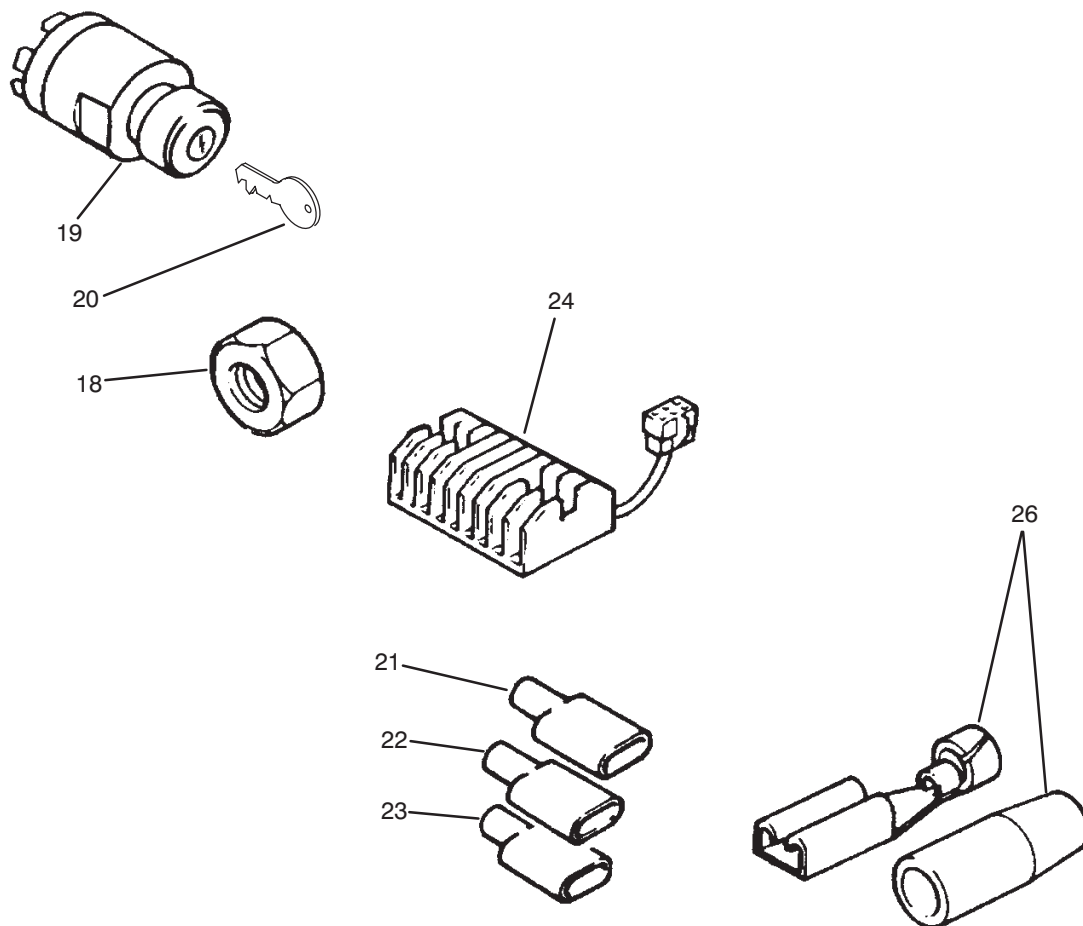


T-1407A

ELECTRICAL COMPONENT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
18	020100008	Nut	1
19	385201160	Switch	1
21	385620010	Connection	1
†20	385210060	Key	A/R

Ref. No.	Part No.	Description	No. Used
22	385620280	Connection	2
23	385620270	Connection	1
24	185516060	Regulator	1
26	385620200	Connection	2

 NOTE: Obtain replacement parts from your local Perkins Dealer.
†Also available from Toro. Part No.85-5270.

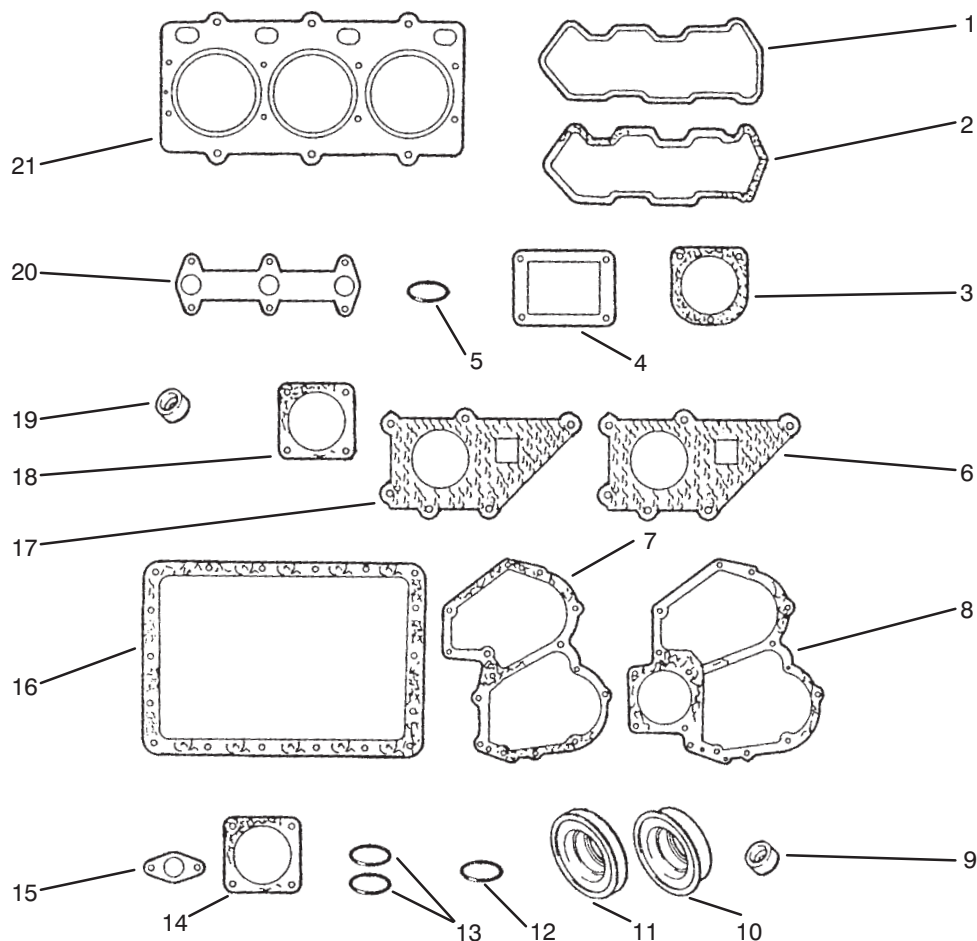

T-1970

GASKET AND SEALS

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	111996060	Gasket	1	13	052100100	O-Ring	2
2	111996330	Gasket	1	14	165996420	Gasket	1
3	145996440	Gasket	1	15	130996070	Gasket	1
4	130996070	Gasket	1	16	110996590	Gasket	1
5	052100400	Seal	1	17	145996420	Gasket	1
6	145996430	Gasket	1	18	314990013	Gasket	1
7	165996400	Gasket	1	19	120406080	Seal	3
8	165996410	Gasket	1	20	135996520	Gasket	1
9	131426200	Gasket	3	21	111147100	Gasket	1
10	198636080	Seal	1	*	195906610	Kit — Gasket & Seals (Incl. Ref. #1-21)	1
11	198636090	Seal	1				
12	052109076	O-Ring	1				

NOTE: Obtain replacement parts from your local Perkins Dealer.

*Not Illustrated

INTERNATIONAL PARTS REFERENCE

KIT NO. 93-4448

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	INTERNATIOAL
Decal Control	Skirt Panel	92-3179	93-7270
Decal Starting FLuid	Control Panel	83-9150	93-7275
Decal Brake	Left Fender	84-1650	93-7267
Decal Warning	Fan Top Shroud	77-3100	93-7272
Decal Warning	Skirt Panel	83-9550	93-7271
Decal Danger	Hydraulic Tank Support	67-5360	93-7273
Decal Warning	Cutting Unit Top Shields	62-5070	93-8064
Decal Warning	Cutting Unit Lift Arms	55-4300	93-6696
Decal Service	Skirt Panel	83-8900	DANISH 84-7120 DUTCH 84-7130 ITALIAN 84-7170 SPANISH 84-7200 GERMAN 84-7160 FRENCH 84-7150 SWEDISH 84-7210 PORTUGUESE 93-7279 NORWEGIAN 84-7190 FINNISH 84-7140 JAPANESE 84-7180

TORO PART NUMBER INDEX

3317—221

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3-0348	Bushing — Sleeve	29 8 4	33-1350	Band Assembly	5 3 2
3-0348	Bushing — Sleeve	30 17 2	33-1350	Clamp Assembly	4 60 2
3-6498	Washer	16 50 2	36-4310	Brush	34 5 1
3-6498	Washer — Thrust	8 17 A/R	36-7290	Spindle — Fan	20 49 1
3-6692	Spring — Compression	11 24 1	37-9090	Belt — V	20 2 1
5-0743	Spring — Extension	30 1 1	37-9590	Spring — Compression	3 22 1
5-0743	Spring — Extension	29 23 2	42-9850	Washer	21 61 1
5-2653	Cable Pulley Assembly	27 8 1	43-1950	Lift Valve Assembly	25 4 1
5-2655	Keeper — Cable	27 7 1	43-8600	Spring — Compression	3 28 1
5-2656	Keeper — Cable	27 30 2	43-8610	Guide — Spring	3 27 1
5-7280	Key — Square	22 1 3	43-8620	Guide — Pin	3 30 1
5-7290	Spring — Extension	15 6 1	43-8860	Plunger — Switch	3 29 1
10-6821	Brake Drum Assembly	15 18 2	43-8870	Boot — Switch	3 32 1
10-6870	Hub — Wheel	15 19 2	43-9071	Seat Switch Assembly	4 * 1
10-7070	Key — Square	22 13 1	44-2212	Light Assembly	6 41 1
12-9140	Decal	34 1 1	46-6811	Screw — Cap Hex. Hd.	23 5 2
14-5759	Hood	1 2 1	46-8400	Bearing — Needle	12 42 1
16-1089	Lift Arm Assembly	30 29 1	46-8810	Stop — Spring	14 1 1
16-1149	Top Shroud Assembly	9 5 1	48-1800	Cylinder Block Kit	12 5 1
16-1159	Lift Arm Assembly L.H.	29 9 1	48-7700	Screw — Cap Hex. Hd.	20 14 6
16-1169	Lift Arm Assembly R.H.	29 * 1	48-7780	Screw — Cap Hex. Hd.	20 29 16
18-2970	Clamp — R	30 21 1	48-8010	Washer — Flat	20 41 4
20-0140	Rod End Assembly	32 5 1	48-9460	Screw — Cap Hex. Hd.	23 7 4
21-0150	Rod End Assembly	8 15 1	48-9460	Screw — Cap Hex. Hd.	20 8 14
22-8330	Plug	26 1 2	48-9590	Washer — Lock	20 28 16
22-8340	Spring	26 3 2	49-2040	Screw — Hex. Flange Hd.	14 25 3
22-8350	Ball	26 4 2	49-2040	Screw — Hex. Flange Hd.	11 35 3
22-8360	Pin — Cam	26 6 2	49-8480	Shaft — Trunion	12 12 1
22-8370	Seat — Check Valve	26 5 2	49-8510	Kit — Charge Relief	13 * 1
22-8380	Retainer — Spring	26 10 2	49-8520	Kit — Implement Relief	13 * 1
22-8410	Spring	26 11 1	51-3150	Shim — Spring	14 6 1
22-8420	Spool	26 8 1	52-2861	Washer — Flat	11 23 1
22-8480	Snap Ring — Spool	26 13 1	54-0110	Element — Oil Filter	10 15 1
22-8490	Snap Ring	26 14 1	55-4300	Decal — Warning	29 10 2
22-8500	Seal — O-Ring	26 9 2	55-4300	Decal — Warning	30 24 1
23-2140	Hose — Fuel	33 23 1	56-2230	Hose — Fuel	33 11 1
23-3030	Spacer	26 12 1	56-2520	Valve — Fuel Shut-Off	33 9 1
24-0760	Cooler — Oil	9 20 1	56-7977	Clamp — Hydraulic Tube	18 7 2
25-2380	Plate — Thrust	12 39 1	56-9510	Bushing Assembly	31 10 2
25-2390	Plate — Valve	12 40 1	56-9520	Bushing — Nyliner	31 16 1
25-2400	Gasket	12 43 1	57-5420	Screw — Shoulder	10 5 1
25-2430	Pin — Straight	12 41 1	57-6390	Nut	21 60 1
25-2450	Swash/Plate	12 37 1	59-2150	Taper Lock Bushing Assy.	11 20 1
25-2460	Plug	12 14 2	61-0140	Pulley — Reel	22 4 3
25-2470	Kit — Shim Pack	12 16 2	61-1960	Axle — Wheel	32 7 1
25-2480	Spring — Charge Relief	12 32 1	61-2070	Rod — Steering	8 13 1
25-2490	Ball — Check Valve	12 47 2	61-2070	Rod — Steering	32 18 1
25-2510	Washer	12 11 2	61-2090	Steering Column Assembly	8 8 1
25-2530	Pin — Straight	12 26 1	61-2370	Spacer	14 16 2
25-2570	Spring — Relief Valve	12 17 1	61-2430	Hub — Lift	27 45 1
25-2630	Ring	12 3 1	61-2610	Arm — Traction	14 14 1
25-2640	Spring — Check Valve	12 48 2	61-2790	Screen — Filler	10 8 1
25-2650	Plug — Check Valve	12 49 2	61-3210	Cable Pulley Assembly	27 22 3
25-2680	Gerotor Assembly	12 25 1	61-3230	Spacer	27 24 3
25-3180	Kit — Check Valve	13 * 1	61-3270	Spring — Compression	29 7 2
25-3210	Seal — Lip	12 10 2	61-3330	Pulley	11 16 1
26-3790	Nut — Lock	15 23 2	61-3380	Belt — Reel Drive	22 42 3
27-9870	Pin — Seat	3 24 1	61-3830	Chain — Lift	27 33 2
28-3670	Shaft — Trunion	12 28 1	61-3990	Parking Brake Assembly	15 5 1
28-6180	Pin	3 23 1	61-7250	Boot	29 6 4
29-6120	Plate — Pump	14 5 1	62-4290	O-Ring	12 44 2
29-6150	Spring — Leaf	14 9 1	62-7170	Spacer	3 43 1
29-6170	Spring — Extended Leaf	14 7 1	62-7240	Cover — Spring	30 2 1
29-9080	Handle	34 3 1	62-7250	Boot	30 18 2
29-9090	Hose — Handle	34 4 1	62-7300	Chain	30 3 1
33-1300	Element Assembly	5 5 1	62-7400	Decal — TORO	1 1 1
33-1310	Baffle	5 8 1	62-9130	Grip — Handle	2 9 1
33-1320	Cup	5 9 1	62-9510	Washer — Flat	20 50 1
33-1330	Nut Assembly	5 6 1	63-1400	Guide — Cable	27 28 1
33-1340	Clamp Assembly	5 7 1	63-7620	Hose — Fuel	33 5 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
63-7620	Hose - Fuel	20 18 1	76-2320	Shaft	28 4 1
63-8140	Pulley - Idler	20 3 1	76-2330	Nut - Lock	28 5 1
63-8410	Washer - Flat	10 10 3	76-2350	Seal/Retainer Assembly	17 * 1
63-8410	Washer - Flat	33 17 3	76-2360	Body Seal Kit	17 * 1
65-4500	Seal - Snap Ring	17 14 1	76-2430	Scraper - Pulley	29 2 2
65-4550	Valve - Check Ball	17 6 2	76-2460	Bearing Assembly	22 7 2
65-4560	Plug - Hex (Hollow)	17 3 1	76-6471	Trim - Control Panel Bottom	3 41 1
65-4570	Seal - Square Ring	17 4 2	77-3100	Decal - Warning	9 4 1
65-4580	Screw - Cap Hex Hd.	17 1 8	80-6980	Latch - Hood	6 12 1
65-4590	Ring - Snap	17 21 1	80-6990	Washer	27 18 5
65-4600	Washer - Thrust	17 19 2	80-7345	Hose	6 29 1
65-4610	Bearing - Thrust	17 20 1	81-1690	Clamp - Throttle Cable	20 21 1
65-4620	Seal - O-Ring	17 12 1	82-3110	Sensor - Temp	20 16 1
65-4670	Body & Bearing Assembly	17 9 1	83-7260	Cone - Relief Valve	12 18 2
65-4680	Cover & Bearing Assembly	17 2 1	83-7340	Fork - Caster	32 6 1
65-8270	Washer	20 57 1	83-7550	Radiator Assembly	9 35 1
65-8320	Bar - Height-Of-Cut	34 1 1	83-7590	Pulley - Engine	20 55 1
66-2920	Spacer	14 36 1	83-7610	Hub - Fan	20 44 1
66-3240	Cap - Radiator	9 9 1	83-7630	Pulley - Fan	20 43 1
66-5291	Hydraulic Motor Assembly	15 30 2	83-7690	Bracket - Idler	20 5 1
66-6110	IGR Assembly	17 5 1	83-7700	Bracket - Alternator	20 34 1
67-0870	Bolt - Shoulder	2 6 1	83-7720	Reservoir - Hydraulic	10 1 1
67-5360	Decal - Danger	4 57 1	83-7780	Bracket - Support	10 24 1
67-8020	Shaft - Pump	12 6 1	83-7790	Collar	22 11 2
67-8030	Plug Assembly	12 19 2	83-7800	Sleeve	22 40 1
67-8040	O-Ring	12 20 2	83-7810	Spacer	22 35 2
67-8050	Bearing - Needle	12 22 1	83-7820	Shaft - Drive	22 2 1
67-8060	Seal - Lip	12 23 1	83-7830	Retainer - Clutch	22 15 1
68-4210	Spacer - Wheel	32 8 2	83-7850	Shroud - Fan Bottom	9 32 1
68-8990	Head - Oil Filter	10 19 1	83-7900	Belt Tensioner Assembly	30 11 2
69-1170	Glass - Sight	10 2 1	83-7900	Belt Tensioner Assembly	29 20 2
70-1480	Relay	6 33 1	83-7910	Rod	31 8 1
70-1480	Relay	3 39 1	83-7930	Yoke	31 3 1
70-8150	Plate - Valve	17 7 1	83-7970	Fitting - Hydraulic Bulkhead	9 39 2
70-9840	Shoe - Brake	15 16 4	83-7980	Bracket - Radiator Rear	9 12 1
70-9850	Clip - Retaining	15 35 2	83-8040	Cover - Left	9 8 1
70-9860	Pin - Pivot Brake	15 25 2	83-8070	Bracket - Radiator Bottom	9 18 1
70-9870	Plate - Brake	15 27 2	83-8080	Key - Square	22 38 1
70-9880	Spring - Extension	15 17 4	83-8110	Panel - Left	3 45 1
71-1370	Spring - Compression	27 35 1	83-8120	Panel - Right Rear	3 4 1
71-1380	Pin - Spring	27 34 1	83-8150	Screen - Radiator	9 17 1
71-1500	Brake Assembly	16 * 2	83-8190	Panel - Control	3 5 1
71-3382	Hose - Overflow	9 11 1	83-8210	Panel - Front Left	9 22 1
72-4190	Pin - Cylinder Guide	27 12 1	83-8220	Bracket - Muffler	23 11 1
72-4320	Switch - Seat	3 25 1	83-8230	Panel - Right Front	3 2 1
74-0720	Tube - Manual	3 14 1	83-8270	Pedal - Traction	14 12 1
74-6110	Cam - Stop	14 35 1	83-8320	Mount - Pump	11 11 1
74-9100	Pad - Forward	14 11 1	83-8400	Pulley - Idler	22 20 1
74-9110	Pad - Reverse	14 13 1	83-8470	Bracket - Engine Mount	20 56 2
75-0540	Retainer	10 4 1	83-8510	Bracket - Fender L.H.	1 16 1
75-2160	Bushing - Flange	8 2 2	83-8550	Hose - Air Cleaner	3 49 1
75-4703	Hose - Fuel	33 15 1	83-8550	Hose - Air Intake	20 13 1
75-4703	Hose - Fuel	20 25 1	83-8590	Cable - Lift	27 19 1
75-6820	Hourmeter	6 3 1	83-8620	Bracket - Idler	22 18 1
75-7730	Spacer	32 2 1	83-8630	Yoke - Belt Tension	22 22 1
76-0020	Hydraulic Cylinder Assembly	27 37 1	83-8720	Tank - Fuel	33 13 1
76-0030	Repair Kit	28 * 1	83-8760	Rod - Control	14 20 1
76-0040	Piston	28 8 1	83-8770	Lever - Pump	14 23 1
76-0050	Ring - Retaining	28 12 1	83-8850	Grille - Front	1 25 1
76-0090	Head	28 3 1	83-8860	Shield - Grass Front R.H.	1 23 1
76-0300	Housing - Bushing	31 12 1	83-8890	Decal - Reelmaster 216-D	3 19 2
76-0350	Housing - Bushing	31 2 1	83-8900	Decal - Service Information	3 50 1
76-0360	Cup - Retainer	31 6 1	83-9000	Battery	33 6 1
76-0370	Bolt - Shoulder	30 12 2	83-9020	Belt - V	20 38 1
76-0370	Bolt - Shoulder	29 27 2	83-9030	Foam - Top	9 36 1
76-0390	Spacer	31 15 1	83-9050	Hose - Radiator	9 34 1
76-0410	Spring - Compression	31 7 1	83-9060	Hose - Radiator	9 28 1
76-1420	Wheel - Steering	8 10 1	83-9070	Hose - Coolant	20 11 1
76-2200	Footrest - Traction	2 12 1	83-9070	Hose - Radiator	9 31 1
76-2260	Pad - Footrest	2 11 1	83-9080	Connector - Bleed	9 30 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3317-221

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
83-9130	Keeper - Cable	27 27 1	88-8220	Valve - By-Pass	12 4 1
83-9140	Clutch Assembly	22 39 1	92-1157	Shaft	17 10 1
83-9150	Decal - Starting Fluid	3 10 1	92-1177	Hose - Hydraulic	25 8 1
83-9170	Right Channel Assembly	3 44 1	92-1177	Hose - Hydraulic	9 27 1
83-9210	Cable - Battery Neg.	33 8 1	92-1177	Hose - Hydraulic	21 67 1
83-9210	Cable - Ground	20 31 1	92-1178	Hose - Hydraulic	11 9 1
83-9220	Cable - Battery Pos.	33 7 1	92-1178	Hose - Hydraulic	10 27 1
83-9220	Cable - Battery Pos.	21 66 1	92-1583	Hose - Hydraulic	9 24 1
83-9240	Hold-Down - Battery	33 21 1	92-1583	Hose - Hydraulic	11 28 1
83-9250	Lever - Brake	15 36 2	92-1812	Shaft - Lift Pivot	29 28 2
83-9270	Pivot - Brake L.H.	15 40 1	92-1812	Shaft - Lift Pivot	30 31 1
83-9310	Pivot - Brake R.H.	15 * 1	92-1815	Rod - Pivot	29 16 2
83-9330	Shaft - Brake	15 41 1	92-1815	Rod - Pivot	30 26 1
83-9340	Shield - Grass	15 13 2	92-1818	Arm - Tension	30 7 1
83-9350	Rod - Parking Brake	15 1 1	92-1818	Arm - Tension	29 32 2
83-9440	Hydraulic Tube Assembly	18 2 1	92-1822	Shackle	29 24 2
83-9450	Tube - Hydraulic	18 10 1	92-1822	Shackle	30 34 1
83-9470	Hydraulic Tube Assembly	18 1 1	92-2368	Knob - Clamp	9 46 2
83-9480	Tube - Hydraulic	18 8 1	92-2373	Frame	8 19 1
83-9550	Decal - Warning	3 11 1	92-3153	Cable - Throttle	21 64 1
83-9600	Hose - Hydraulic	11 7 2	92-3153	Throttle Assembly	6 30 1
83-9600	Hose - Hydraulic	18 13 2	92-3154	Tab - Throttle	21 62 1
83-9610	Hose - Hydraulic	25 12 1	92-3162	Bushing - Flange	8 4 4
83-9620	Hose - Hydraulic	27 42 1	92-3165	Steering Shaft & Gear	8 5 1
83-9640	Hose - Hydraulic	25 14 1	92-3172	Gear - Steering	8 16 1
83-9640	Hose - Hydraulic	11 27 1	92-3181	Spacer - Fan	20 42 1
83-9650	Hose - Hydraulic	11 1 1	92-3182	Panel - Skirt	3 12 1
83-9650	Hose - Hydraulic	10 21 1	92-3185	Support - Bearing	22 6 2
83-9651	Hose - Hydraulic	10 14 1	92-3186	Belt - Pump Drive	11 21 1
83-9680	Screw - Cap Hex. Hd.	22 27 1	92-3187	Belt - Drive (Set of 3)	22 37 1
83-9690	Spring - Compression	22 26 1	92-3194	Switch Assembly	6 24 1
83-9700	Fender - L.H.	1 9 1	92-3195	Knob	6 23 1
83-9710	Footrest - L.H.	1 7 1	92-3198	Pulley - Engine	20 48 1
83-9720	Fender - RH	2 17 1	92-3199	Pulley - Clutch	22 36 1
83-9730	Step - Foot	3 36 1	92-7905	Switch Assembly	27 3 1
83-9740	Footrest - RH	2 15 1	92-7905	Switch Assembly	14 28 1
83-9760	Bracket - Cylinder Support	27 1 1	92-7906	Switch	27 21 1
83-9800	Shield - Grass Front L.H.	1 14 1	92-7906	Switch	14 37 1
83-9810	Bushing - Flange	22 24 1	92-7917	Clevis	11 25 1
83-9840	Pad - Footrest L.H.	1 5 1	92-7918	Bracket - Lever	2 20 1
83-9880	Bracket - Fan Spindle	20 47 1	92-7921	Rod - Link	2 2 1
83-9920	Bracket - Reservoir	10 13 1	92-7922	Plate - Pump Pivot	11 33 1
83-9970	Latch - Hood	1 3 1	92-7923	Lever - Pump Clutch	2 8 1
84-1650	Decal - Brake	1 12 1	92-7924	Retainer - Belt	11 13 1
84-1990	Rod - Adjusting	15 32 2	92-7940	Housing - Charge Pump	12 21 1
84-2000	Bracket - Brake	15 29 2	92-8776	Plug Assembly	13 52 2
84-7770	Field & Rotor Assembly	24 1 1	92-8777	Seal - O-Ring	12 51 2
84-7780	Armature Assembly	24 2 1	92-9023	Hydraulic Pump Assembly	12 8 1
84-8440	Bushing - Flange	27 11 2	92-9023	Hydraulic Pump Assembly	11 31 1
85-4870	Support - Hinge	1 20 1	92-9775	Warning Light Assembly	6 7 1
85-4890	Hinge - Hood	1 24 1	92-9776	Muffler	23 12 1
85-4910	Air Cleaner (Complete)	5 * 1	92-9796	Block - Support	23 15 1
85-4910	Air Cleaner Assembly	3 47 1	92-9797	Spring - Extension	23 4 2
85-4990	Hose - Hydraulic	25 13 1	92-9798	Bolt - U	23 1 1
85-4990	Hose - Hydraulic	25 20 1	92-9799	Tube - Muffler	23 3 1
85-4990	Hose - Hydraulic	27 41 1	93-0100	Bracket - Exhaust	2 23 1
85-5000	Plate - Throttle	6 34 1	93-0151	Bracket - Tube Support	23 13 1
85-5010	Bracket - Right Front	3 54 1	93-0152	Guard - Exhaust Pipe	23 2 1
85-5140	Foam - Hood	4 54 2	93-0153	Bolt - U	29 3 1
85-5160	Lever - Lift Valve	25 2 1	93-0160	Guard - Pulley	29 4 1
85-5170	Sleeve	9 41 1	93-0166	Tire	32 13 1
85-5180	Trim	3 51 2	93-3102	Cap - Fuel Tank	33 12 1
85-5230	Bracket - Seat Pivot	4 62 2	93-3103	Cap - Hydraulic Reservoir	10 7 1
85-5270	Key - Starter	6 18 2	93-4406	Harness - Wire	21 65 1
85-5330	Plate - Seat Mounting	4 64 1	93-4410	Fuse - 25 Amp (Slo-Blo)	5 44 1
85-5340	Tube - Seat Pivot	3 7 2	93-4411	Temperature Gauge Assy.	6 17 1
85-6540	Stud - Drive	15 26 8	93-4412	Panel - Instrument	6 1 1
87-6270	Socket - Warning Light	6 5 1	93-4413	Decal - Instrument Panel	6 2 1
88-6720	Bracket - Radiator Front	9 33 1	217-60	Rim	15 21 2
88-6730	Bracket - Screen Front	9 44 1	218-461	Nut - Hex.	3 33 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
218-469	Fuse - 15 Amp.	6 10 2	256-27	Bushing - Sleeve	8 6 2
218-489	Fuse Holder Assembly	6 9 3	256-115	Washer - Thrust	29 13 2
218-562	Lens - Light	6 43 1	256-115	Washer - Thrust	30 25 1
219-17	Bulb - Light	6 6 4	256-173	Bushing - Sleeve	31 11 1
219-18	Bulb - Light	6 42 1	256-245	Bushing - Flange	8 18 2
231-127	Tire	15 20 2	256-247	Bushing - Flange	8 1 2
232-27	Valve - Stem	15 24 2	256-320	Bushing	1 21 2
232-47	Valve - Stem	32 12 1	256-321	Bushing - Sleeve	4 59 4
233-37	Knob	25 1 1	2710-16	Connecting Link Assembly	25 3 1
237-7	Seal - O-Ring	3 31 1	281-1	Plug - Pipe	9 37 2
237-21	Seal - O-Ring	25 18 2	281-7	Plug - Pipe	9 1 1
237-21	Seal - O-Ring	16 47 3	282-2	Clevis	2 4 1
237-22	O-Ring	12 2 1	282-2	Clevis	15 34 2
237-22	Seal - O-Ring	25 7 4	282-4	Clevis	30 5 1
237-22	Seal - O-Ring	27 40 2	282-4	Clevis	27 31 4
237-30	Seal - O-Ring	18 3 4	283-1	Pin - Clevis	2 5 1
237-30	Seal - O-Ring	11 6 5	283-1	Pin - Clevis	30 20 1
237-30	Seal - O-Ring	15 7 2	283-1	Pin - Clevis	15 37 2
237-30	Seal - O-Ring	3 26 1	283-2	Pin - Clevis	11 26 1
237-30	Seal - O-Ring	9 38 2	283-6	Pin - Clevis	30 6 1
237-37	Bumper - Rubber	3 6 2	283-6	Pin - Clevis	27 14 4
237-42	Seal - O-Ring	26 2 2	283-40	Pin - Clevis	30 14 2
237-42	Seal - O-Ring	25 5 1	283-40	Pin - Clevis	29 35 1
237-42	Seal - O-Ring	11 30 2	283-42	Pin - Clevis	27 9 1
237-42	Seal - O-Ring	27 38 2	283-55	Pin - Clevis	31 5 1
237-65	Seal - O-Ring	18 11 2	283-62	Pin - Clevis	20 19 1
237-65	Seal - O-Ring	15 44 2	283-75	Pin - Clevis	29 25 4
237-71	Seal - O-Ring	3 42 1	283-75	Pin - Clevis	30 32 2
237-78	Seal - O-Ring	25 10 2	283-78	Pin - Clevis	27 36 1
237-78	Seal - O-Ring	18 16 2	285-17	Plug - Pipe	12 1 6
237-78	Seal - O-Ring	16 46 2	302-5	Fitting - Grease	32 3 2
237-79	Seal - O-Ring	11 4 4	302-5	Fitting - Grease	8 3 4
237-79	Seal - O-Ring	10 18 1	302-5	Fitting - Grease	31 14 1
237-80	Seal - O-Ring	15 9 4	302-5	Fitting - Grease	22 33 2
237-81	Seal - O-Ring	10 3 4	302-60	Fitting - Grease	29 17 2
237-86	O-Ring	12 15 4	302-60	Fitting - Grease	30 30 1
237-95	O-Ring	12 27 1	321-4	Screw - Cap Hex. Hd.	4 67 3
240-11	Grommet	10 9 3	321-5	Screw - Cap Hex. Hd.	15 15 8
240-11	Grommet	33 16 3	321-6	Screw - Cap Hex. Hd.	14 10 2
240-13	Bumper	22 16 2	321-8	Screw - Cap Hex. Hd.	3 52 2
241-129	Rim	32 11 1	321-11	Screw - Cap Hex. Hd.	4 61 2
241-130	Spacer - Bearing	32 10 1	321-12	Screw - Cap Hex. Hd.	33 2 1
242-50	Nut - Lug	15 22 8	321-13	Screw - Cap Hex. Hd.	11 18 3
2410-18	Plug	34 2 1	321-23	Screw - Cap Hex. Hd.	25 16 2
2411-52	End - Rod	14 17 1	321-23	Screw - Cap Hex. Hd.	20 40 4
2411-53	End - Rod	14 22 1	322-4	Screw - Cap Hex. Hd.	29 11 2
2412-34	Clamp - Hose	11 2 1	322-4	Screw - Cap Hex. Hd.	30 23 1
2412-34	Clamp - Hose	20 10 1	322-4	Screw - Cap Hex. Hd.	12 24 4
2412-34	Clamp - Hose	9 29 5	322-7	Screw - Cap Hex. Hd.	20 37 2
2412-36	Clamp - Hose	33 10 2	322-9	Screw - Cap Hex. Hd.	18 5 1
2412-36	Clamp - Hose	10 26 1	322-9	Screw - Cap Hex. Hd.	14 18 2
2412-39	Clamp - R	3 17 3	322-12	Screw - Cap Hex. Hd.	8 11 1
2412-39	Clamp - R	20 35 2	322-17	Screw - Cap Hex. Hd.	15 2 1
2412-41	Clamp - R	9 15 1	322-17	Screw - Cap Hex. Hd.	14 8 1
2412-74	Clamp - R	9 3 1	322-17	Screw - Cap Hex. Hd.	22 31 9
2412-92	Clamp - Hose	20 12 1	322-26	Screw - Cap Hex. Hd.	30 36 1
2412-92	Clamp - Hose	3 48 1	323-5	Screw - Cap Hex. Hd.	10 11 3
2412-93	Clamp - R	20 15 1	323-5	Screw - Cap Hex. Hd.	33 18 3
2412-108	Clamp - Hose	33 4 4	323-6	Screw - Cap Hex. Hd.	9 47 4
2412-108	Clamp - Hose	9 10 1	323-7	Screw - Cap Hex. Hd.	30 8 1
2412-108	Clamp - Hose	20 17 2	323-7	Screw - Cap Hex. Hd.	29 31 2
2412-133	Clamp - R	3 16 2	323-11	Screw - Cap Hex. Hd.	12 46 4
251-8	Bearing - Ball	12 35 1	323-13	Screw - Cap Hex. Hd.	27 46 1
251-77	Collar - Locking	22 9 2	323-15	Screw - Cap Hex. Hd.	22 19 1
251-259	Bearing - Ball	14 31 1	323-23	Screw - Cap Hex. Hd.	27 20 2
251-321	Bearing - Wheel	32 9 2	325-6	Screw - Cap Hex. Hd.	32 1 1
251-337	Bearing - Ball	22 8 2	325-8	Screw - Cap Hex. Hd.	11 38 1
252-82	Bearing - Needle	12 9 2	325-9	Screw - Cap Hex. Hd.	11 15 1
256-1	Bushing - Sleeve	27 23 3	325-9	Screw - Cap Hex. Hd.	29 18 1
256-2	Bushing - Sleeve	27 44 1	325-11	Screw - Cap Hex. Hd.	15 28 8

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3317-221

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
325-18	Screw - Cap Hex. Hd.	11 36 1	3255-7	Washer - ETLW	14 26 3
3210-7	Screw - Cap Hex. Hd.	14 30 1	3255-7	Washer - Lock ETLW	11 34 3
3212-34	Clamp - Hose	10 16 3	3255-8	Washer - Lock E.T.L.W.	20 30 1
3217-6	Nut - Hex.	1 17 4	3256-3	Washer - Flat	18 6 1
3217-26	Nut - Hex.	6 38 1	3256-6	Washer - Flat	29 15 2
3217-29	Nut - Lock	14 3 2	3256-6	Washer - Flat	30 27 1
3218-6	Nut - Jam	31 9 1	3256-14	Washer - Flat	6 16 2
3218-17	Nut - Jam	22 12 1	3256-16	Washer - Flat	15 12 8
3218-19	Nut - Hex.	6 22 2	3256-22	Washer - Flat	9 6 2
3219-14	Nut - Hex.	34 3 1	3256-22	Washer - Flat	25 15 2
3219-14	Nut - Hex.	6 14 6	3256-22	Washer - Flat	3 53 2
3220-2	Nut - Jam	2 3 1	3256-23	Washer	16 49 1
3220-2	Nut - Jam	14 19 2	3256-23	Washer - Flat	27 4 2
3220-2	Nut - Jam	15 33 2	3256-23	Washer - Flat	23 8 5
3220-3	Nut - Jam	8 12 2	3256-23	Washer - Flat	20 9 23
3220-3	Nut - Jam	32 15 2	3256-23	Washer - Flat	27 16 1
3220-5	Nut - Jam	8 14 1	3256-23	Washer - Flat	1 19 4
3220-12	Nut - Jam	32 19 1	3256-23	Washer - Flat	22 30 15
3220-20	Nut - Jam	14 21 1	3256-23	Washer - Flat	9 43 2
3229-1	Bolt - Carriage	29 1 2	3256-24	Washer	12 50 1
3229-1	Screw - Carriage	2 10 2	3256-24	Washer - Flat	22 25 2
3229-22	Bolt - Carriage	4 63 2	3256-24	Washer - Flat	27 25 3
3230-1	Screw - Carriage	33 19 2	3256-24	Washer - Flat	20 27 16
3230-1	Screw - Carriage	20 33 1	3256-24	Washer - Flat	14 34 1
3230-2	Bolt - Carriage	4 65 2	3256-26	Washer - Flat	11 14 1
3230-22	Screw - Carriage	20 6 1	3256-26	Washer - Flat	8 21 2
3230-23	Screw - Carriage	1 10 6	3256-28	Washer - Flat	32 16 1
3230-23	Screw - Carriage	10 23 6	3256-45	Washer - Flat	30 10 4
3230-27	Screw - Carriage	2 13 1	3256-45	Washer - Flat	29 22 4
3231-22	Bolt - Carriage	9 23 2	3256-53	Washer - Flat	14 38 2
3231-26	Screw - Carriage	20 7 1	3256-54	Washer - Flat	31 4 1
3231-31	Bolt - Carriage	22 21 1	3256-57	Washer - Flat	30 37 1
3234-4	Screw - Cap Hex. Hd.	9 7 2	3256-67	Washer - Flat	23 6 4
3234-4	Screw - Hex. Flange Hd.	3 13 3	3257-15	Key - Square	15 10 2
3234-4	Screw - Hex. Flange Hd.	22 29 2	3257-15	Key - Square	17 11 1
3234-4	Screw - Hex. Washer Hd.	6 8 3	3257-32	Key - Woodruff	12 7 1
3234-4	Screw - Hex. Washer Hd.	27 10 1	3257-32	Key - Woodruff	11 17 1
3234-4	Screw - Hex. Washer Hd.	10 22 2	3258-19	Screw - Round Hd.	5 2 2
3234-5	Screw - Hex. Flange Hd.	3 1 24	3272-4	Pin - Cotter	27 13 1
3234-5	Screw - Hex. Flange Hd.	2 18 1	3272-6	Pin - Cotter	2 1 2
3234-5	Screw - Hex. Washer Hd.	15 4 2	3272-6	Pin - Cotter	30 19 1
3234-5	Screw - Hex. Washer Hd.	1 6 12	3272-6	Pin - Cotter	15 31 5
3234-5	Screw - Hex. Washer Hd.	9 19 2	3272-6	Pin - Cotter	11 37 1
3234-5	Screw - Hex. Washer Hd.	20 32 1	3272-6	Pin - Cotter	27 43 1
3234-11	Screw - Hex. Flange Hd.	3 40 4	3272-10	Pin - Cotter	20 23 1
3234-11	Screw - Hex. Washer Hd.	27 29 1	3272-10	Pin - Cotter	29 26 4
3234-17	Screw - Hex. Flange Hd.	2 22 2	3272-10	Pin - Cotter	30 33 2
3234-17	Screw - Hex. Washer Hd.	9 21 4	3272-11	Pin - Cotter	30 4 1
3234-24	Screw - Hex. Flange Hd.	20 26 4	3272-11	Pin - Cotter	27 32 5
3234-25	Screw - Hex. Washer Hd.	27 17 6	3272-13	Pin - Cotter	30 13 2
3234-28	Screw - Hex. Flange Hd.	23 10 1	3272-13	Pin - Cotter	29 34 1
3234-28	Screw - Hex. Washer Hd.	9 13 8	3273-18	Screw - Hex. Socket Hd.	22 34 4
3234-32	Screw - Cap Hex. Hd.	22 5 4	3274-90	Screw - Hex. Socket Hd.	6 13 2
3234-32	Screw - Cap Hex. Hd.	30 28 1	3290-378	Tie - Cable	11 * 1
3234-32	Screw - Hex. Flange Hd.	29 14 2	3290-378	Tie - Cable	14 * 1
3242-4	Screw - Square Hd. Set	22 3 6	3290-379	Tie - Cable	4 * 1
3245-35	Screw - Set	22 10 4	3290-379	Tie - Cable	22 41 1
3249-3	Screw - Round Hd.	27 6 2	3290-379	Tie - Cable	20 59 4
3249-3	Screw - Round Hd.	14 27 2	3290-413	Washer - Belleville	2 7 1
3253-2	Washer - Lock	6 15 5	3290-432	Screw - Hex. Hd.	20 20 1
3253-3	Washer - Lock	11 19 3	3290-467	Pin - Cotter Hair	1 22 2
3253-3	Washer - Lock	21 68 4	3296-4	Nut - Lock	27 15 1
3253-4	Washer - Lock	29 12 2	3296-6	Nut - Lock	11 22 1
3253-4	Washer - Lock	1 18 4	3296-16	Nut - Flange Lock	25 9 2
3253-4	Washer - Lock	30 22 2	3296-16	Nut - Lock	14 4 2
3254-9	Washer - ITLW	14 2 2	3296-16	Nut - Lock	23 14 2
3254-9	Washer - Lock Internal	27 5 2	3296-23	Nut - Flange Lock	22 28 4
3254-11	Washer - Lock ETLW	6 39 1	3296-23	Nut - Lock	11 10 3
3255-2	Washer - Lock	32 20 1	3296-23	Nut - Lock	15 42 8
3255-2	Washer - Lock ETLW	11 12 1	3296-28	Nut - Lock	8 22 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3296-29	Nut - Flange Lock	8 7 1	32128-33	Nut - Flange Lock	6 31 3
3296-29	Nut - Flange Lock	22 32 6	32128-33	Nut - Flange Lock	3 34 5
3296-29	Nut - Lock	18 9 1	32128-43	Nut - Flange Lock	20 1 5
3296-29	Nut - Lock	14 32 3	32128-43	Nut - Flange Lock	27 2 7
3296-29	Nut - Lock	9 42 2	32128-43	Nut - Flange Lock	9 16 6
3296-39	Nut - Flange Lock	25 17 1	32128-43	Nut - Flange Lock	22 23 2
3296-39	Nut - Flange Lock	27 26 3	32128-43	Nut - Flange Lock	3 37 4
3296-39	Nut - Lock	30 15 1	32128-44	Nut - Flange Lock	20 4 5
3296-39	Nut - Lock	22 17 2	32128-44	Nut - Flange Lock	1 8 10
3296-39	Nut - Lock	29 33 2	32128-44	Nut - Flange Lock	2 16 3
3296-42	Nut - Lock	3 8 2	32128-44	Nut - Flange Lock	3 18 10
3296-42	Nut - Lock	15 11 8	32128-44	Nut - Flange Lock	33 20 3
3296-42	Nut - Lock	9 40 2	32128-44	Nut - Flange Lock	9 26 4
3296-45	Nut - Lock	29 29 1	32128-44	Nut - Hex. Flange Hd.	10 12 6
3296-51	Nut - Lock	32 17 1	32128-44	Nut - Lock	15 3 2
3296-56	Nut - Lock	4 68 3	32144-18	Screw - Hex. Hd.	6 4 2
3296-59	Nut - Lock	30 9 2	32148-7	Insert - Threaded	3 3 8
3296-59	Nut - Lock	2 21 1	32148-7	Insert - Threaded	1 11 3
3296-59	Nut - Lock	29 21 2	32148-8	Insert - Threaded	1 13 1
3296-59	Nut - Lock	14 33 1	32148-8	Insert - Threaded	9 14 3
3298-8	Screw - Set	6 32 1	32148-8	Insert - Threaded	4 58 1
32104-6	Screw - Cap Hex. Hd.	29 30 2	32148-14	Insert - Threaded	21 63 1
32104-6	Screw - Cap Hex. Hd.	30 35 1	32149-9	Nut - Flange Lock	6 35 2
32104-82	Screw - Hex. Washer Hd.	1 15 5	32151-46	Ring - Retaining	12 13 2
32104-116	Screw - Hex. Washer Hd.	9 2 8	32153-3	Nut - Lock	9 45 2
32107-11	Nut - Square	5 4 2	340-2	Fitting - Hydraulic Straight	27 47 1
32120-10	Ring - Retaining	20 45 1	340-4	Fitting - Hydraulic Straight	11 8 1
32120-11	Ring - Retaining	12 36 1	340-17	Fitting - Hydraulic 90°	15 43 2
32120-15	Ring - Retaining	12 34 1	340-20	Fitting - Hydraulic Tee	25 21 1
32121-6	Pin - Roll	14 15 1	340-77	Fitting - Hydraulic 90°	25 6 1
32121-6	Pin - Roll	3 21 1	340-87	Fitting - Hydraulic 45°	27 39 1
32121-6	Pin - Roll	15 39 2	340-92	Fitting - Hydraulic Straight	25 11 1
32121-9	Pin - Roll	31 13 1	340-99	Fitting - Hydraulic 90°	11 29 2
32121-10	Pin - Roll	8 9 1	340-101	Fitting - Hydraulic 45°	11 5 2
32121-23	Pin - Roll	31 1 1	340-103	Fitting - Hydraulic 45°	16 45 1
32121-24	Pin - Roll	14 24 1	340-103	Fitting - Hydraulic 90°	25 22 1
32121-34	Pin - Dowel	11 32 1	340-105	Fitting - Hydraulic 90°	15 8 2
32121-91	Pin - Coiled Spring	12 38 3	340-110	Fitting - Hydraulic 90°	25 19 1
32122-2	Screw - Round Hd.	34 2 1	340-127	Nut - Bulkhead	9 25 2
32128-14	Nut - Flange Lock	1 4 2	340-140	Fitting - Hydraulic Tee	16 * 1
32128-19	Nut - Flange Lock	29 5 2	340-162	Fitting - Hydraulic 90°	18 12 1
32128-20	Nut - Flange Lock	3 46 4	340-163	Fitting - Hydraulic 90°	18 4 1
32128-20	Nut - Jam	2 14 2	353-987	Fitting - Hydraulic 90°	10 17 1
32128-20	Nut - Lock	16 48 2	354-77	Hydraulic Test Port Fitting	18 15 2
32128-33	Nut - Flange Lock	3 9 2	354-79	Cap - Test Port	18 14 2
32128-33	Nut - Flange Lock	22 14 2	354-120	Fitting - Hydraulic 90°	10 25 1
32128-33	Nut - Flange Lock	2 19 2	354-127	Fitting - Hydraulic 45°	10 20 2
32128-33	Nut - Flange Lock	29 19 2	354-128	Fitting - Hydraulic 90°	11 3 1

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Reelmaster 216-D has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame under the seat. In any correspondence concerning the Reelmaster 216-D, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the Reelmaster 216-D.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Hood & Grille Assembly	1	Crankshaft Assembly	36
Right Footrest & Pump Clutch Lever Assembly	2	Cylinder Head Assembly	37
Skirt Assembly	3-4	Rocker Arm Assembly	38
Air Cleaner Assembly	5	Camshaft Assembly	39
Instrument Panel Assembly	6	Timing Cover Assembly	40
Electrical Schematic	7	Oil Pump Assembly	41
Frame Assembly	8	Fuel Injection System Assembly	42
Radiator Assembly	9	Injection Pump Assembly	43-44
Hydraulic Reservoir & Filter Assembly	10	Flywheel Housing Assembly	45
Hydraulic Pump Installation Assembly	11	Flywheel Assembly	46
Hydraulic Pump Assembly No. 92-9023	12-13	Starter Installation Assembly	47
Traction Control Assembly	14	Starter Assembly	48
Front Wheel Assembly	15-16	Oil Sump Assembly	49
Hydraulic Drive Motor No. 66-5291	17	Valve Cover Assembly	50
Drive Motor Plumbing Assembly	18	Oil Filter Assembly	51
Hydraulic Schematic	19	Front Drive Pulley Assembly	52
Engine Installation Assembly	20-21	Water Pump Assembly	53
Reel Drive Assembly	22	Alternator Assembly	54
Exhaust System Assembly	23	Timing Cover Plate Assembly	55
Electric Clutch Assembly No. 83-9140	24	Exhaust Manifold Assembly	56
Cutting Unit Lift Valve Installation Assembly	25	Low Pressure Fuel System Assembly	57
Control Valve No. 43-1950	26	Lift Pump Assembly	58
Cutting Unit Lift Assembly	27	Fuel Filter Assembly	59
Hydraulic Cylinder No. 76-0020	28	Cold Start System Assembly	60
Front Cutting Unit Lift Arm Assembly	29	Engine Lifting Tab Assembly	61
Rear Cutting Unit Lift Arm Assembly	30	Throttle Stop Assembly	62
Belt Tensioner Assembly No. 83-7900	31	Recorder Assembly	63
Rear Wheel Assembly	32	Electrical Component Assembly	64
Fuel System Assembly	33	Gasket and Seals	65
Special Tools	34	International Decal Cross Reference	66
Cylinder Block Assembly	35	TORO Part Number Index	67-72

MAINTENANCE RECORD

[illegible]

[illegible]

MAINTENANCE RECORD

[illegible]