 


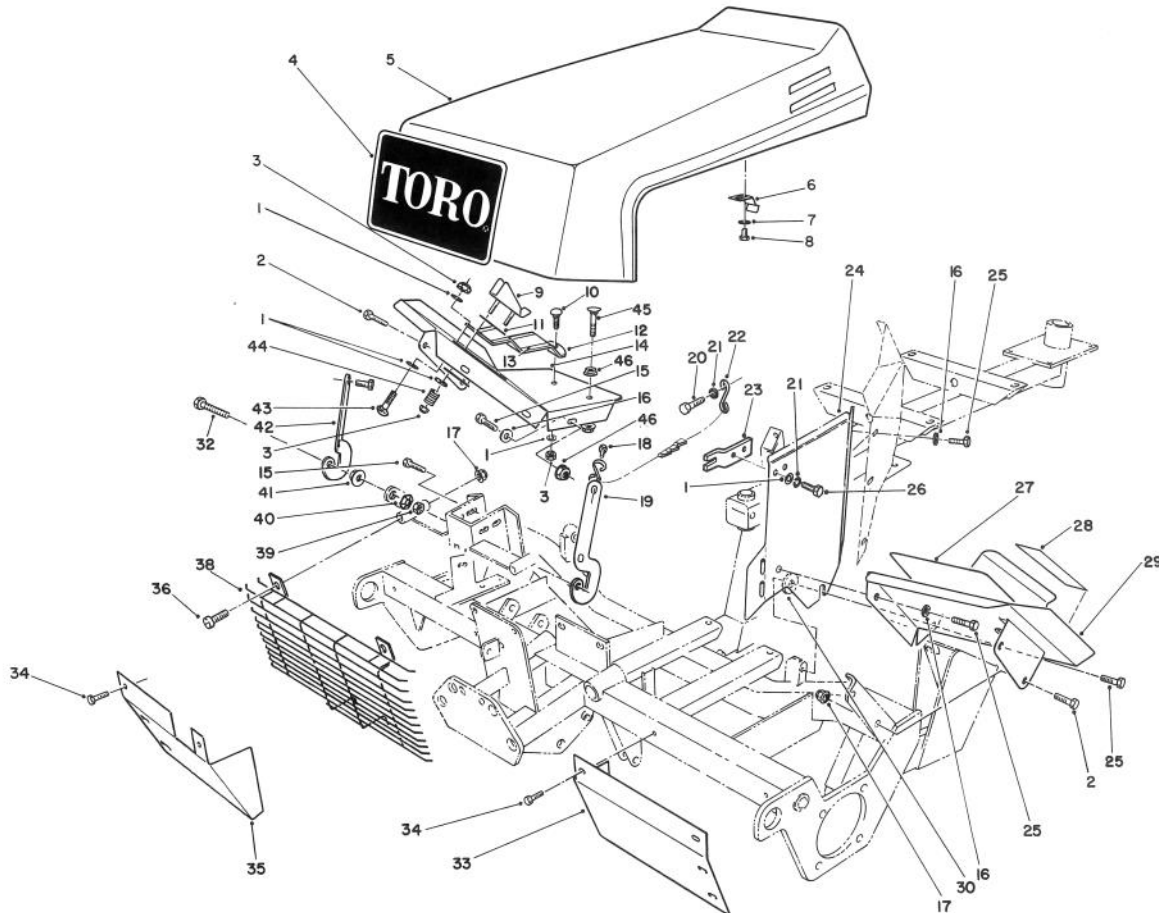


MODEL NO. 03430-50001 & UP

**PARTS
CATALOG**
REELMASTER® 216G – 3WD
Traction Unit


T-0881A

HOOD ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3256-22	Washer - Flat	8	17	32128-25	Nut - Flange Lock	5
2	3234-17	Screw - Cap Hex. Hd.	10	18	32144-22	Screw - Hex. Hd. Self-Tap	4
3	3296-16	Nut - Lock	5	19	28-0120	Bracket - Hinge L.H.	1
4	62-7400	Decal - Toro Logo	1	20	321-5	Screw - Cap Hex. Hd.	1
5	62-5400	Hood Assembly	1	21	3253-3	Washer - Lock	3
6	75-9310	Latch - Hood	1	22	76-0130	Hood Stop Chain Assembly	1
7	3256-21	Washer - Flat	2	23	72-9540	Bracket - Heat Shield	1
8	32104-77	Screw - Hex. Hd. Self-Tap	2	24	72-4150	Shield - Heat	1
9	62-7320	Stop - Traction Pedal	1	25	322-3	Screw - Cap Hex. Hd.	31
10	3229-1	Bolt - Carriage	2	26	321-2	Screw	2
11	62-7350	Slide - Pedal Stop	2	27	66-6120	Pad-Foot	1
12	76-2200	Footrest - Traction	1	28	84-1650	Decal - Brake	1
13	76-2260	Pad - Footrest	1	29	72-4360	Footrest - L.H.	1
14	80-4240	Footrest R.H.	1	30	62-7190	Spacer	1
15	3234-17	Screw - Cap Hex. Hd.	6	32	57-3210	Screw - Hex. Washer Hd.	2
16	3256-23	Washer - Flat	1	33	83-9800	Shield - Front Grass L.H.	1

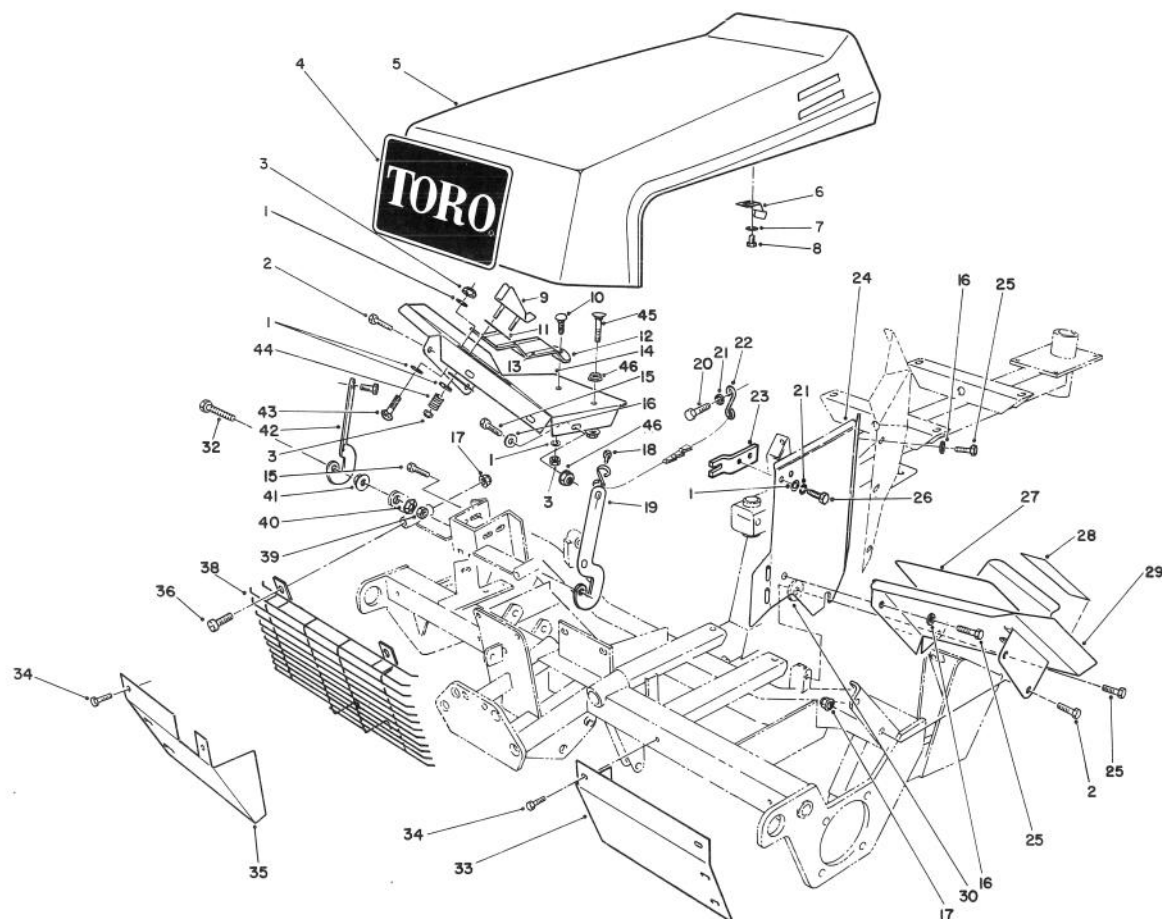 


T-0881A

HOOD ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
34	32104-82	Screw - Hex. Hd. Self-Tap	4
35	83-8860	Shield - Front R.H.	1
36	3250-50	Screw - Pan Hd.	2
38	66-5340	Grille - Front	1
39	3217-7	Nut - Hex.	2
40	3290-224	Washer - Lock Pyramidal	2


Ref. No.	Part No.	Description	No. Used
41	92-1841	Nut - Hood Pivot	2
42	28-0130	Bracket - Hinge R.H.	1
43	3229-22	Bolt - Carriage	1
44	10-4850	Spring - Compression	2
45	77-0480	Screw - Traction Stop	1
46	32128-20	Nut - Flange	3

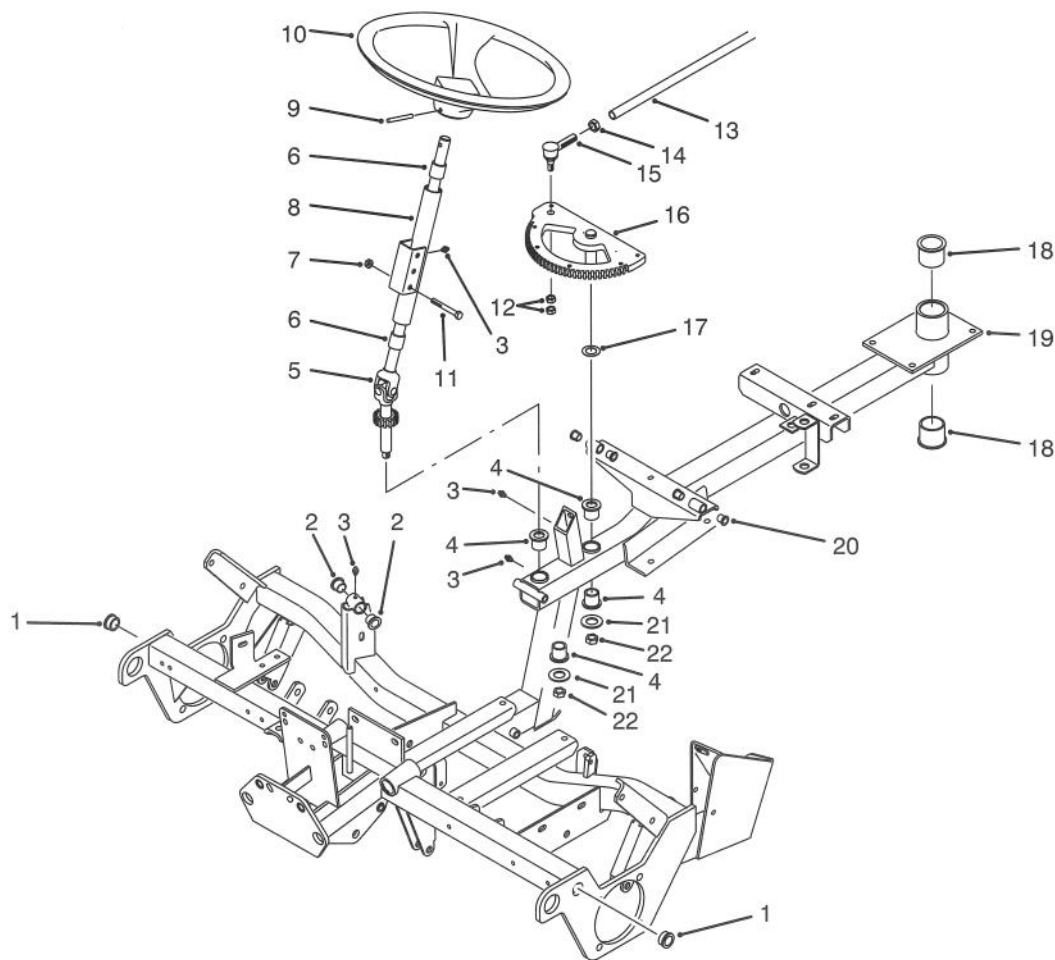 

T-1415

FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	256-247	Bushing - Flange	2	13	61-2070	Rod - Steering	1
2	256-287	Bushing - Flange	2	14	3220-5	Nut - Jam	1
3	302-5	Fitting - Grease	4	15	21-0141	Rod End Assembly (Incl. Ref. #12)	1
4	92-3162	Bushing - Flange	4	16	92-3172	Gear - Steering	1
5	92-3165	Steering Shaft & Gear	1	17	3-6498	Washer - Thrust	A/R
6	256-27	Bushing - Sleeve	2	18	256-245	Bushing - Flange	2
7	3296-29	Nut - Flange Lock	1	19	92-1820	Frame Assembly (Incl. Ref. #1, 2, 4, 19 & 20)	1
8	61-2090	Steering Column Assembly (Incl. Ref. #6)	1	20	256-321	Bushing - Flange	4
9	32121-10	Pin - Roll	1	21	3256-26	Washer - Flat	2
10	76-1420	Wheel - Steering	1	22	3296-28	Nut - Lock	2
11	322-12	Screw - Cap Hex. Hd.	1				
12	3220-3	Nut - Jam	2				

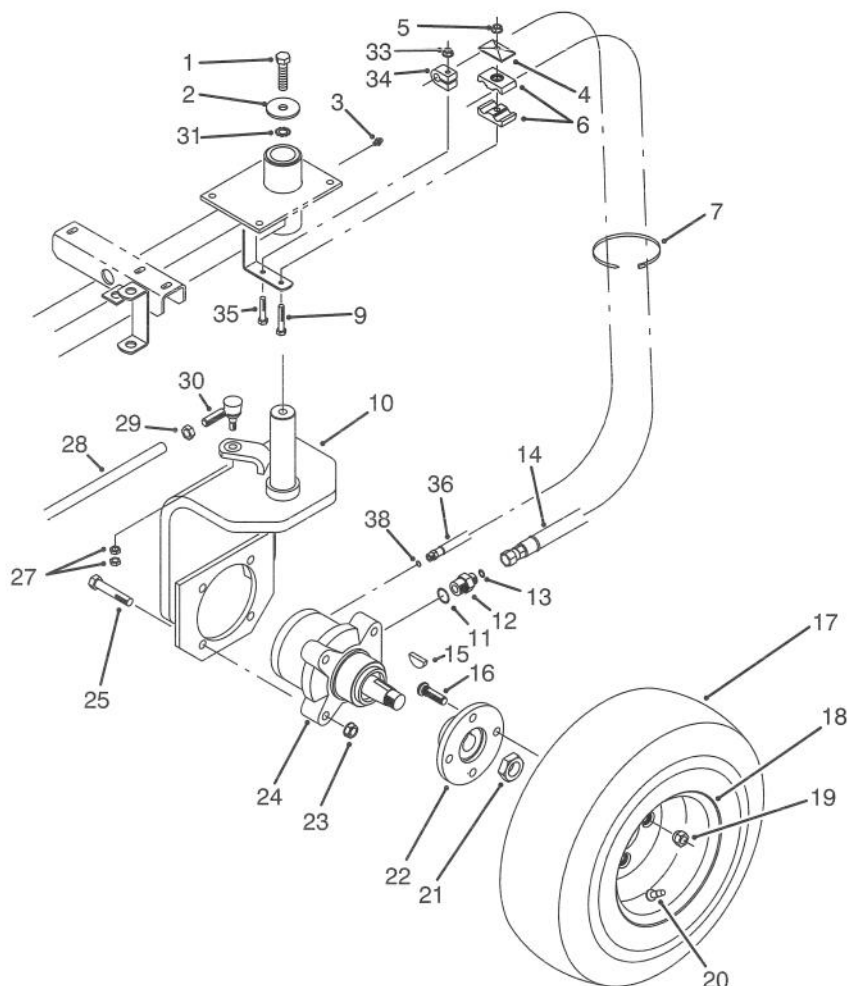 


T-1428

REAR WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	325-6	Screw - Cap Hex. Hd.	1
2	75-7730	Spacer	1
3	302-5	Fitting - Grease	1
4	69-9760	Plate - Cover	1
5	3296-29	Nut - Lock	1
6	56-7976	Clamp - Hose	2
7	3290-378	Tie - Cable	1
9	322-9	Screw - Cap Hex. Hd.	1
10	83-7270	Fork - Caster	1
11	237-80	Seal - O-Ring	2
12	340-141	Fitting - Hydraulic Straight (Incl. Ref. #11 & 13)	2
13	237-22	Seal - O-Ring	2
14	80-4090	Hose - Hydraulic	2
15	65-4640	Key - Woodruff	1
16	85-6540	Stud - Drive	4
17	93-0166	Tire	1
18	242-76	Rim	1
19	242-50	Nut - Lug	4


Ref. No.	Part No.	Description	No. Used
20	232-47	Valve Stem	1
21	26-3790	Nut - Lock	1
22	10-6870	Hub - Wheel	1
23	3296-23	Nut - Flange Lock	4
24	66-5291	Hydraulic Motor Assembly (Incl. Ref. #15)	1
25	325-11	Screw - Cap Hex. Hd.	4
27	3220-3	Nut - Jam	2
28	61-2070	Rod - Steering	1
29	3220-12	Nut - Jam	1
30	21-0151	Rod End Assembly (Incl. Ref. #27)	1
31	3255-2	Washer - Lock	1
33	3296-42	Nut - Lock	1
34	2412-114	Clamp	1
35	321-8	Screw - Cap Hex. Hd.	1
36	80-4080	Hydraulic Hose Assembly (Incl. Ref. #38)	1
38	237-78	Seal - O-Ring	1

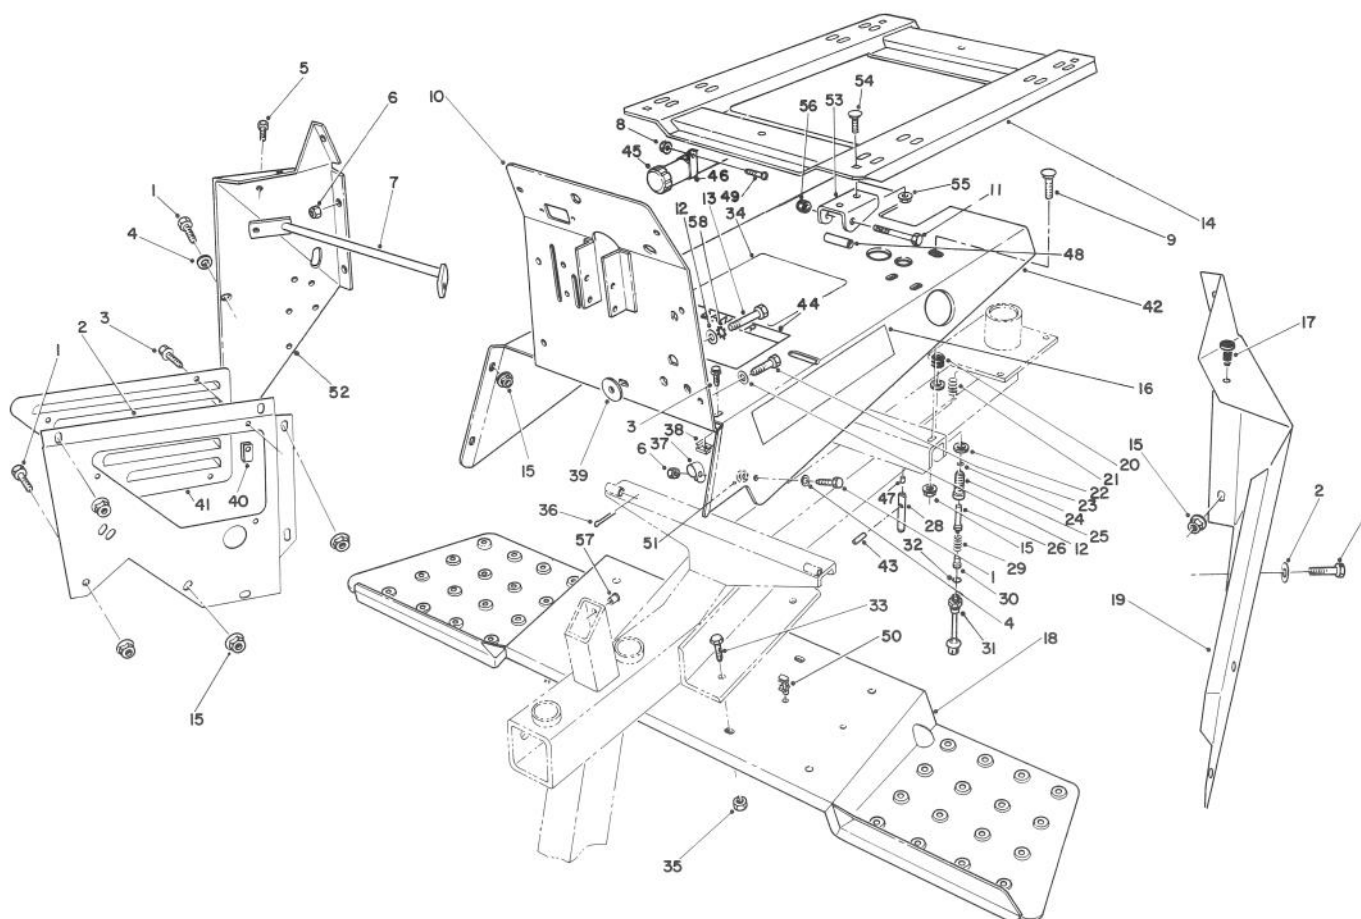 

T-1066A

SEAT SUPPORT ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	322-3	Screw - Hex. Hd. Cap	9	27	3234-17	Screw - Hex. Flange Hd.	2
2	75-9260	Support - Hydraulic Tank	1	28	27-9870	Pin - Seat Spring	1
3	3234-13	Screw - Hex. Flange Hd.	6	29	43-8600	Spring - Compression	1
4	3256-23	Washer - Flat	9	30	43-8610	Guide - Spring & Ball Seat	1
5	3234-14	Screw - Hex. Hd. Cap	2	31	72-4320	Switch - Neutral	1
6	3296-29	Nut - Lock	2	32	237-30	Seal - O-Ring	1
7	62-5330	Bracket - Side Panel	1	33	3255-8	Screw - Hex. Flange Hd.	4
8	32128-44	Nut - Flange	2	34	88-9550	Decal - Service Information	1
9	3230-15	Bolt - Carriage	2	35	32128-43	Nut - Flange Lock	4
10	93-4426	Panel W.A. - Instrument	1	36	3272-4	Pin - Cotter	2
11	321-11	Screw - Cap Hex. Hd.	2	37	2412-71	Clamp - R	1
12	3256-70	Washer - Flat	7	38	3290-196	Nut - Retainer	3
13	322-45	Screw - Hex. Hd. Cap	1	39	62-7170	Spacer	1
14	85-5330	Plate - Seat	1	40	3290-199	Nut - Speed	3
15	32128-25	Nut - Flange Lock	17	41	76-0500	Cover - Reservoir Support	1
16	61-3840	Decal - Reelmaster 216	2	42	92-3180	Panel	1
17	237-37	Bumper - Rubber	2	43	32121-6	Pin - Roll	1
18	83-9730	Step - Foot	1	44	83-9550	Decal - Warning	1
19	72-4350	Panel - Access L.H.	1	45	74-0720	Tube - Manual	1
20	43-8870	Boot - Switch	1	46	2412-133	Clamp - R	2
21	37-9590	Spring	1	47	28-6180	Pin	1
22	218-461	Nut - Jam	2	48	85-5340	Tube - Pivot	2
23	322-43	Screw - Cap Hex. Hd.	1	49	32122-14	Screw - Truss Hd.	2
24	237-7	Seal - O-Ring	1	50	80-3940	Clip - Rosebud	1
25	43-8620	Guide - Switch Pin	1	51	237-88	Grommet	1
26	43-8860	Plunger - Switch	1	52	61-3880	Panel - Access R.H.	1

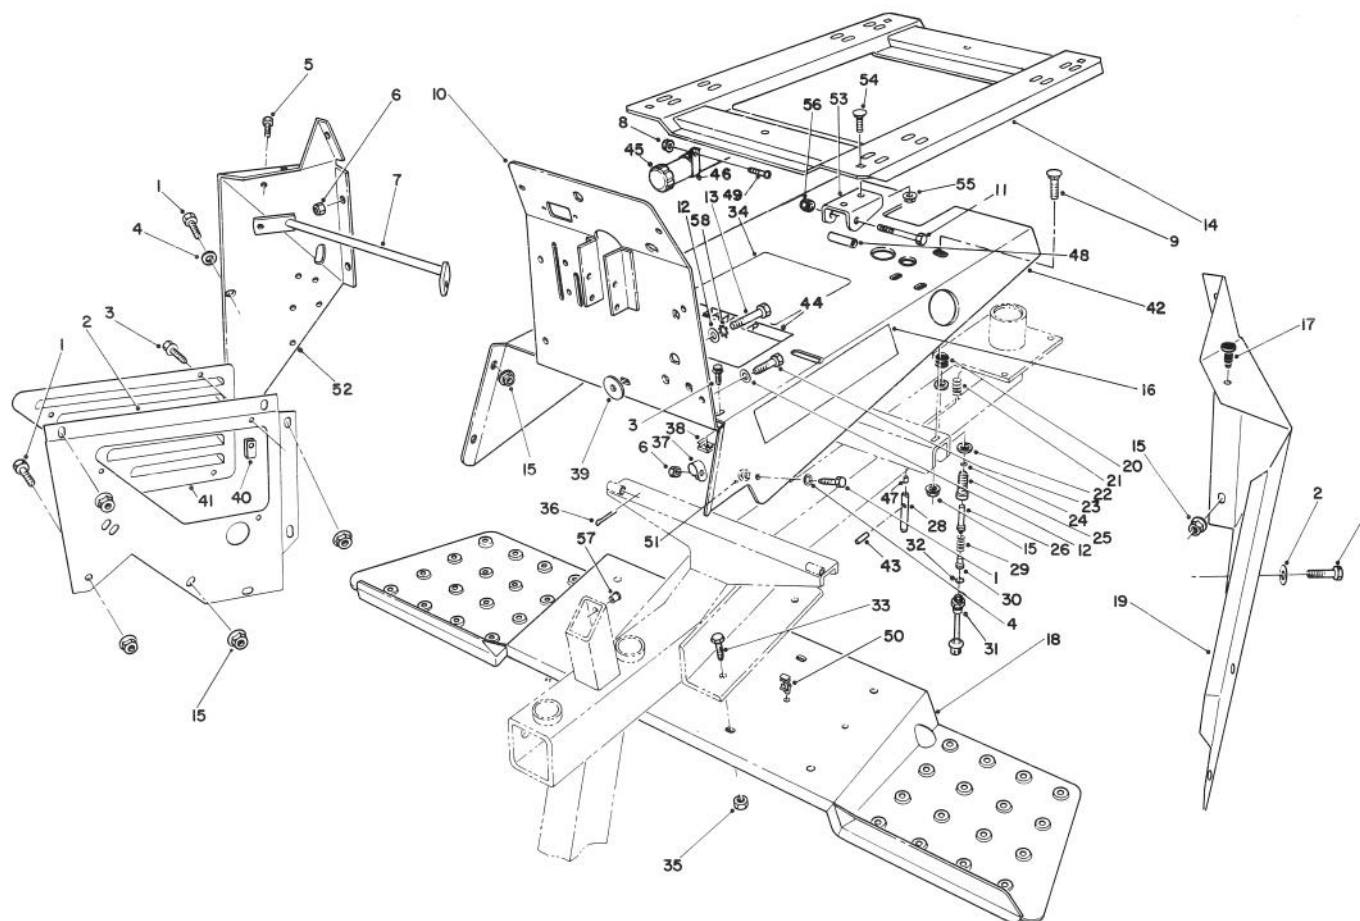 


T-1066A

SEAT SUPPORT ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
53	85-5230	Bracket - Seat Pivot	2
54	3229-22	Bolt - Carriage	2
55	32128-33	Nut - Flange Lock	2


Ref. No.	Part No.	Description	No. Used
56	3296-42	Nut - Lock	2
57	32148-8	Insert - Threaded	1
58	3255-8	Washer - Lock E.T.L.W.	1

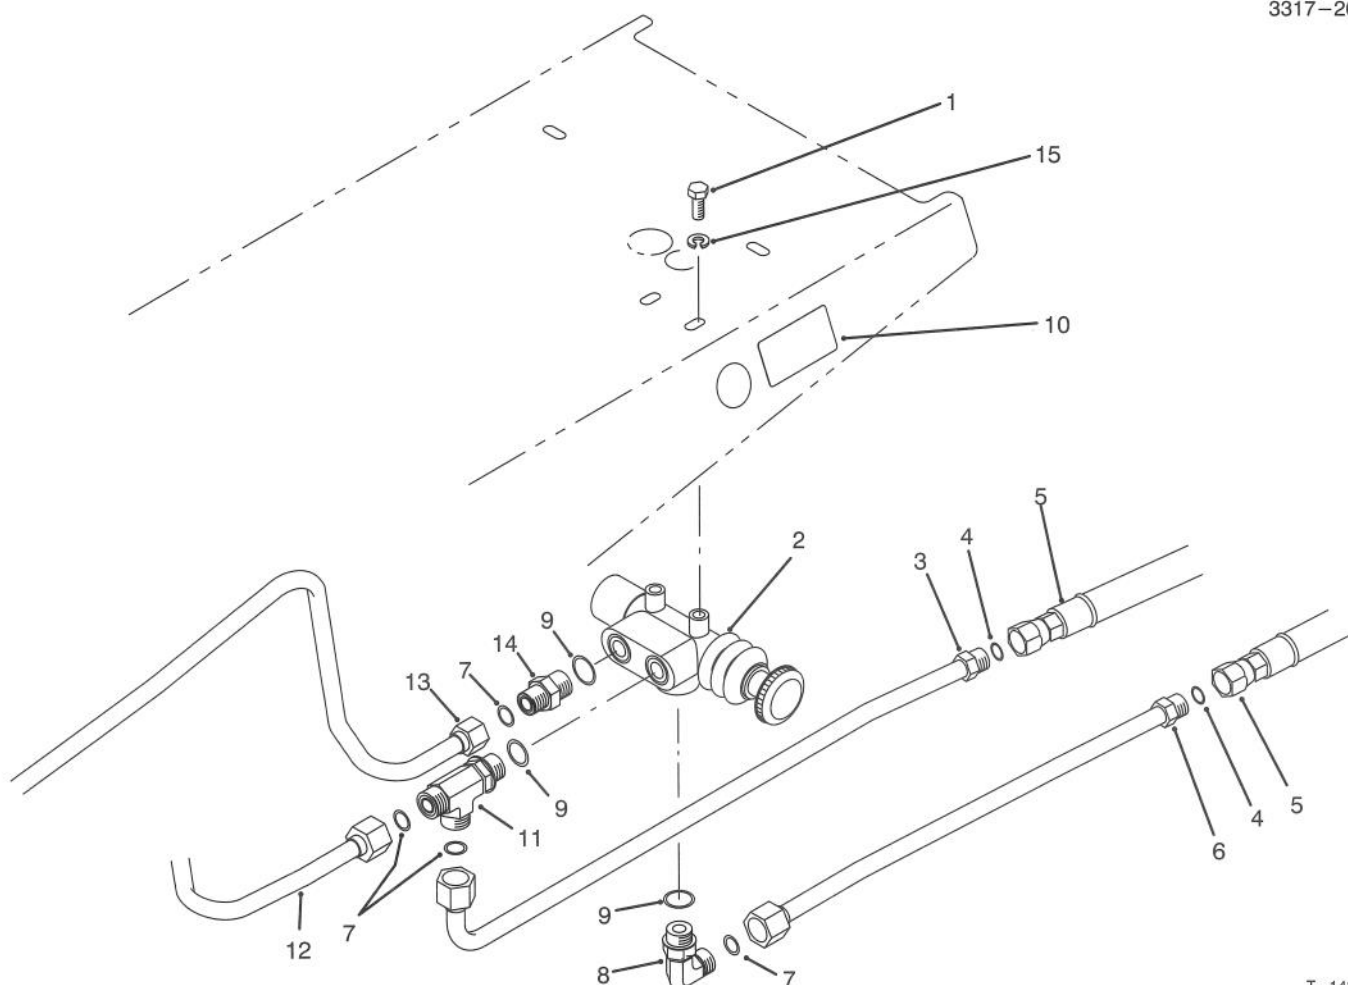 

T-1430

REAR WHEEL DRIVE VALVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	322-1	Screw - Cap Hex. Hd.	2	9	237-79	(Incl. Ref. #7 & 9) Seal - O-Ring	1
2	92-3196	2 Position Valve Assembly	1	10	92-3179	Decal - Control	1
3	71-0710	Hydraulic Tube Assembly (Incl. Ref. #4)	1	11	340-109	Fitting - Hydraulic Tee (Incl. Ref. #7 & 9)	1
4	237-22	Seal - O-Ring	2	12	83-9500	Tube - Hydraulic	1
5	80-4090	Hose - Hydraulic	2	13	83-9460	Tube - Hydraulic	1
6	71-0840	Hydraulic Tube Assembly (Incl. Ref. #4)	1	14	3253-4	Washer - Lock	2
7	237-30	Seal - O-Ring	4	15	340-4	Fitting - Hydraulic Straight (Incl. Ref. #7 & 9)	1
8	340-98	Fitting - Hydraulic 90°					

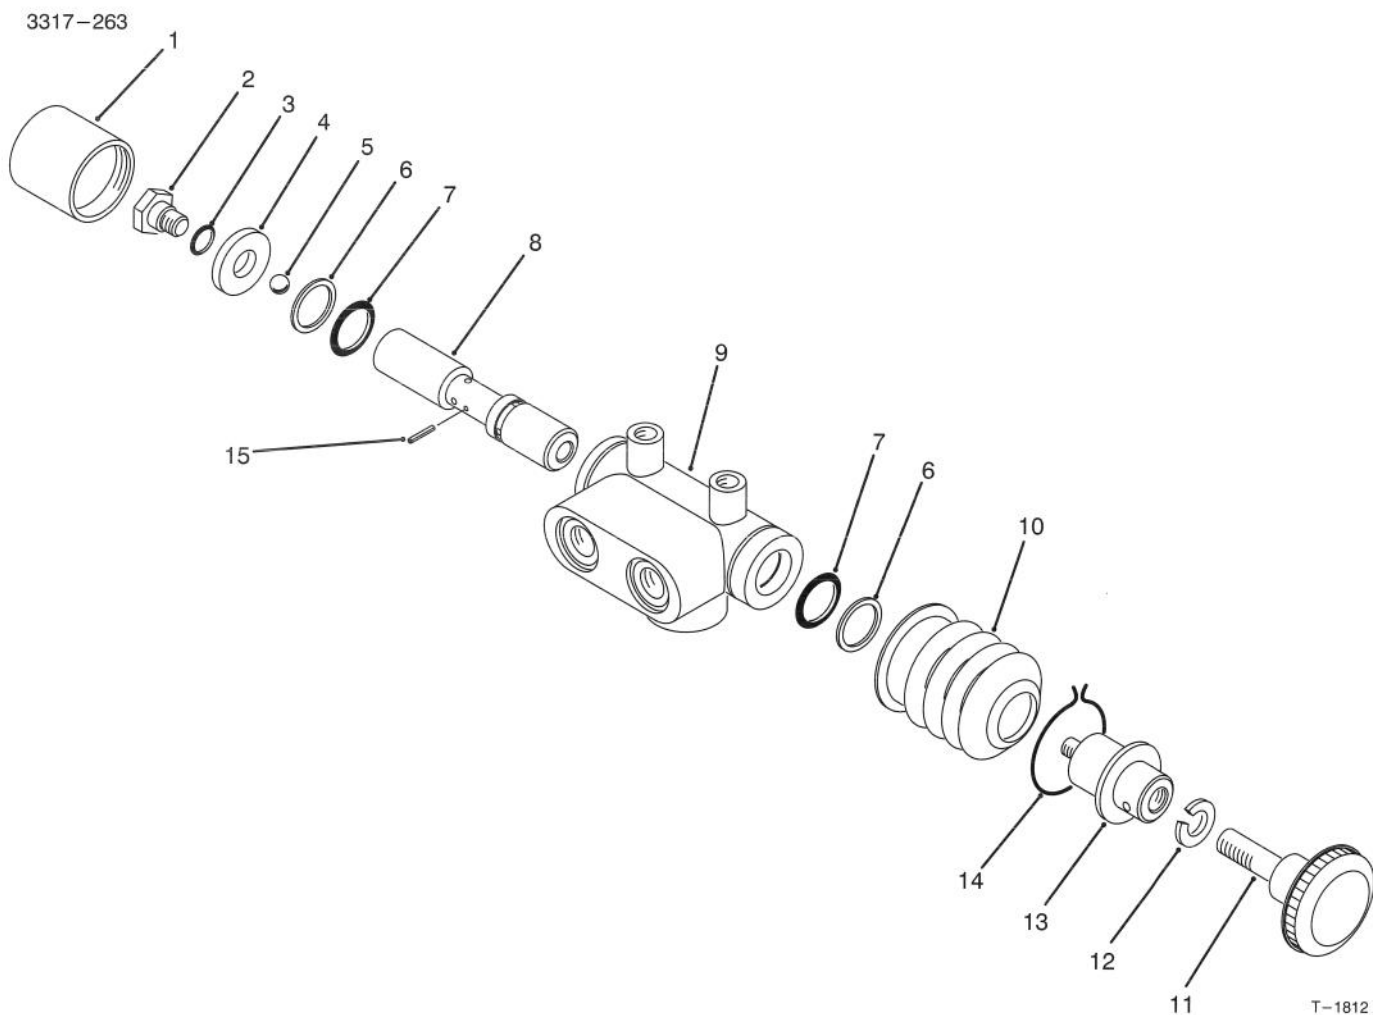 


TWO POSITION VALVE ASSEMBLY NO. 92-3196

Ref. No.	Part No.	Description	No. Used
1	92-7904	Cap - Valve	1
2	92-7907	Plug Assembly (Incl. Ref. #3)	1
3	237-22	Seal - O-Ring	1
4	92-7908	Washer - Valve	1
5	354-23	Ball	1
6		Ring - Back-Up	2
7		Seal - O-Ring	2
8		Spool - Valve	1
9		Housing - Valve	1

Ref. No.	Part No.	Description	No. Used
10	92-7911	Boot	1
11	233-46	Knob	1
12	3253-5	Washer - Lock	1
13	92-7909	Stop - Valve	1
14	92-7912	Retainer - Boot	1
15	32121-38	Pin - Spring	1
*	92-7913	Seal Repair Kit (Incl. Ref. #1, 3, 6, 7, 10 & 14)	1

 *Not Illustrated

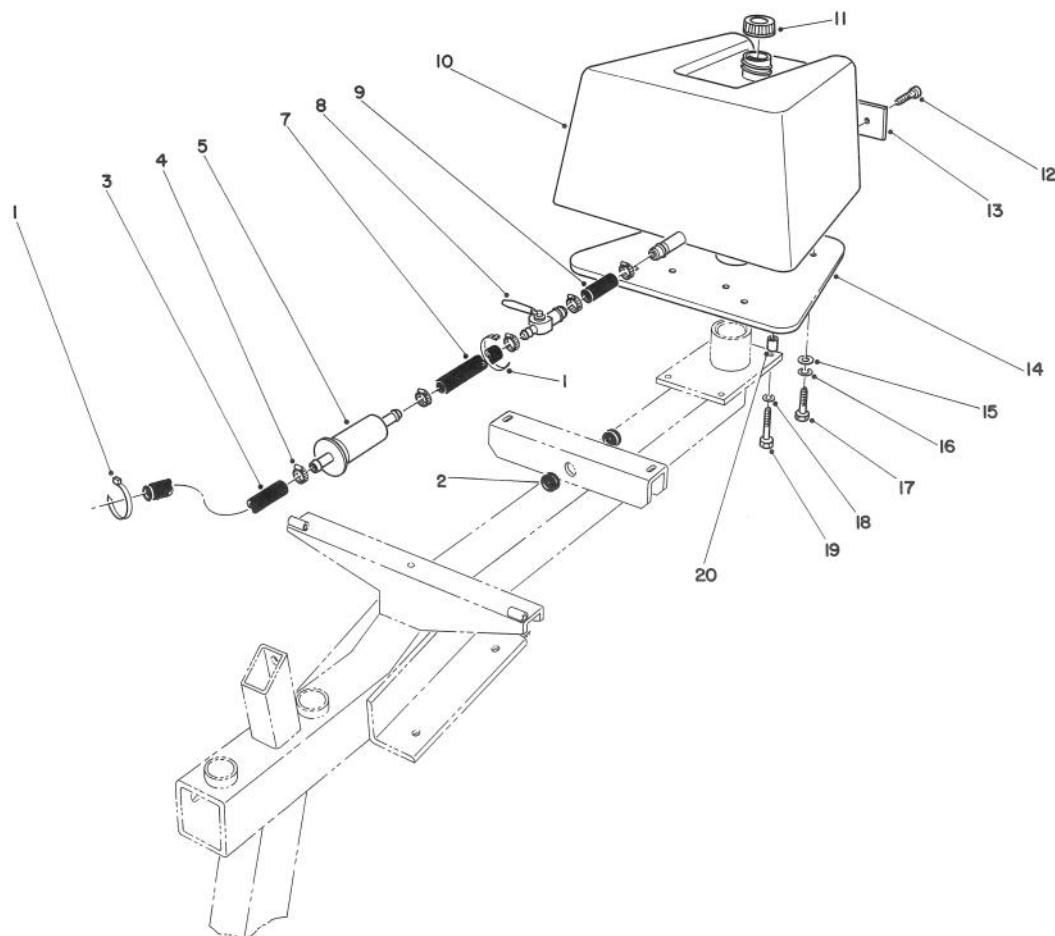


T-1067

FUEL TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3290-379	Tie - Cable	2	13	61-3310	Plate - Toro Logo	1
2	237-125	Grommet	2	14	61-2680	Weight - Standard	1
3	47-2980	Hose - Fuel	1		62-5140	Weight - 8 Blade (Optional)	1
4	2412-36	Clamp - Hose	6	15	3256-23	Washer - Flat	4
5	38-8000	Filter - Fuel	1	16	3253-4	Washer - Lock	4
7	47-2988	Hose - Fuel	1	17	322-3	Capscrew - Hex. Hd.	4
8	61-3550	Valve - Ball	1	18	3253-21	Washer - Lock	4
9	56-2230	Hose - Fuel	1	19	323-9	Capscrew - Hex. Hd.	4
10	61-0030	Tank - Fuel	1	†20	61-2220	Spacer	4
11	55-3570	Cap - Fuel	1				
12	3290-470	Screw - Machine	2				

*Not Illustrated

 †Use with 5 blade cutting units only.

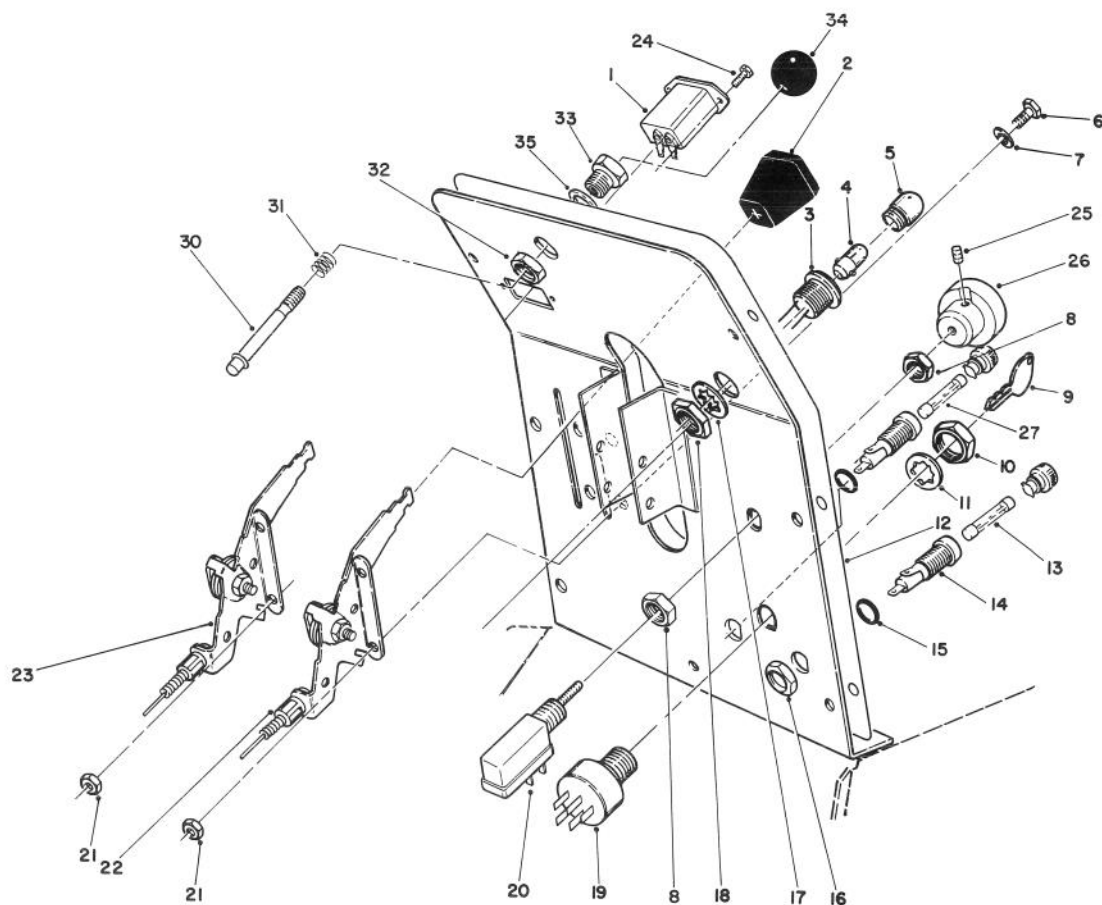


T-0264A

INSTRUMENT PANEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	75-6820	Meter - Hour	1	18	218-535	Nut	1
2	66-0120	Knob	2	19	23-0660	Switch - Key (Incl. Ref. #9-11)	1
3	44-2212	Lamp - Pilot (Incl. Ref. #4, 5 & 17-18)	1	20	92-3194	Switch - Clutch (Incl. Ref. #8, 25 & 26)	1
†4	219-18	Bulb - Light (GE #1893)	1	21	3296-42	Nut - Lock	4
5	218-562	Lens	1	22	80-4120	Control - Choke	1
6	321-39	Screw - Cap Hex. Hd.	4	23	80-4110	Control - Throttle	1
7	3256-1	Washer - Flat	4	24	32144-18	Screw - Cap Hex. Hd.	2
8	3218-19	Nut - Hex.	2	25	3298-8	Screw - Set	1
9	63-8360	Key	1	26	92-3195	Knob	1
10	218-461	Nut	1	27	93-4410	Fuse - 25 Amp. Slo-Blo	1
11	3254-5	Washer - Lock	1	30	75-9330	Pin - Hood Latch	1
12	93-4424	Decal - Instrument Panel	1	31	5-4723	Spring - Compression	1
†13		Fuse - 30 Amp.	1	32	3218-5	Nut - Hex. Jam	1
14	218-489	Fuse Holder Assembly (Incl. Ref. #15-16)	2	33	75-9320	Bushing - Hood Latch	1
15		Seal - O-Ring	2	34	233-17	Knob	1
16		Nut - Hex.	2	35	3256-26	Washer - Flat	1
17	218-536	Washer - Lock	1				

 †Obtain Locally

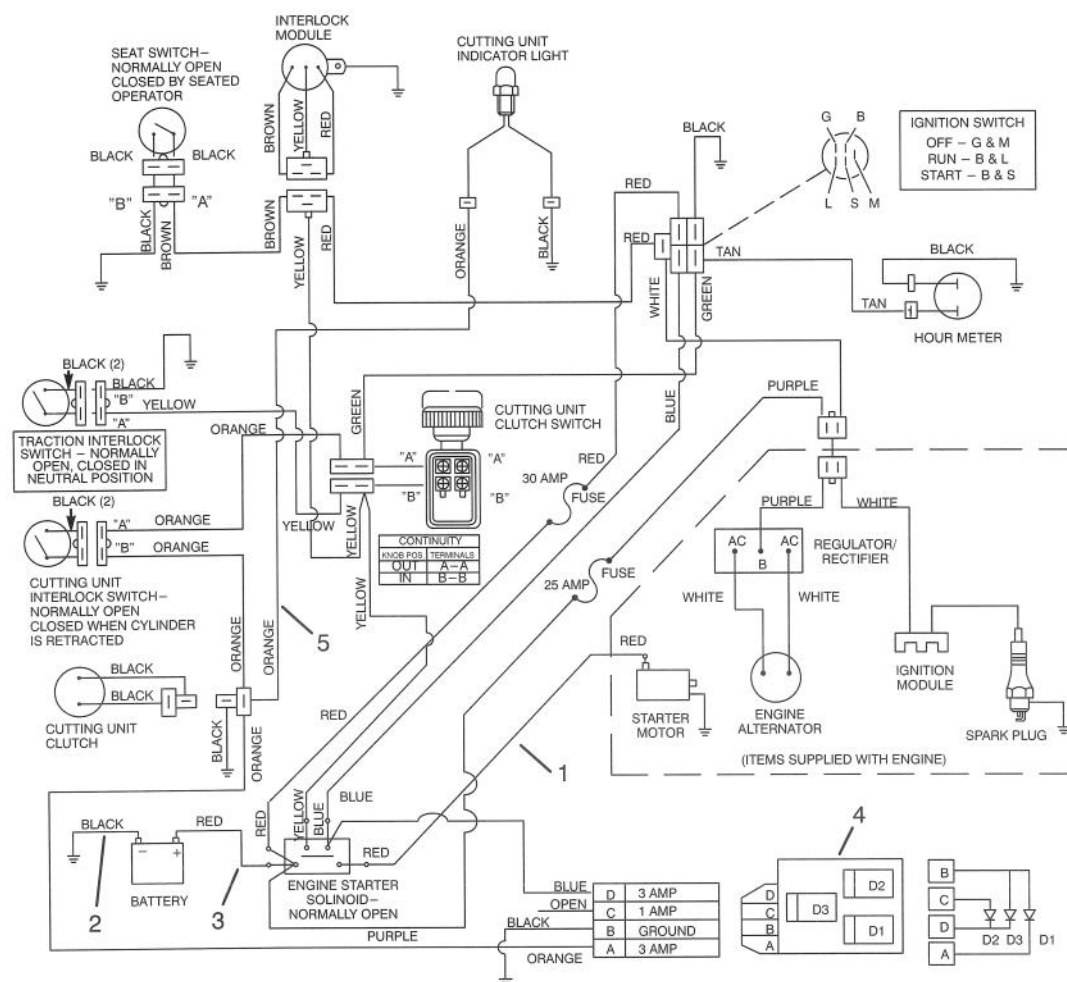


T-1068A

ELECTRICAL SCHEMATIC

Ref. No.	Part No.	Description	No. Used
1	61-2660	Wire - Solenoid/Starter	1
2	61-2670	Wire - Ground	1
3	10-7130	Wire - Battery/Solenoid	1

Ref. No.	Part No.	Description	No. Used
4	92-3191	Diode - Circuit Board	1
5	93-4423	Wire Harness Assembly	1

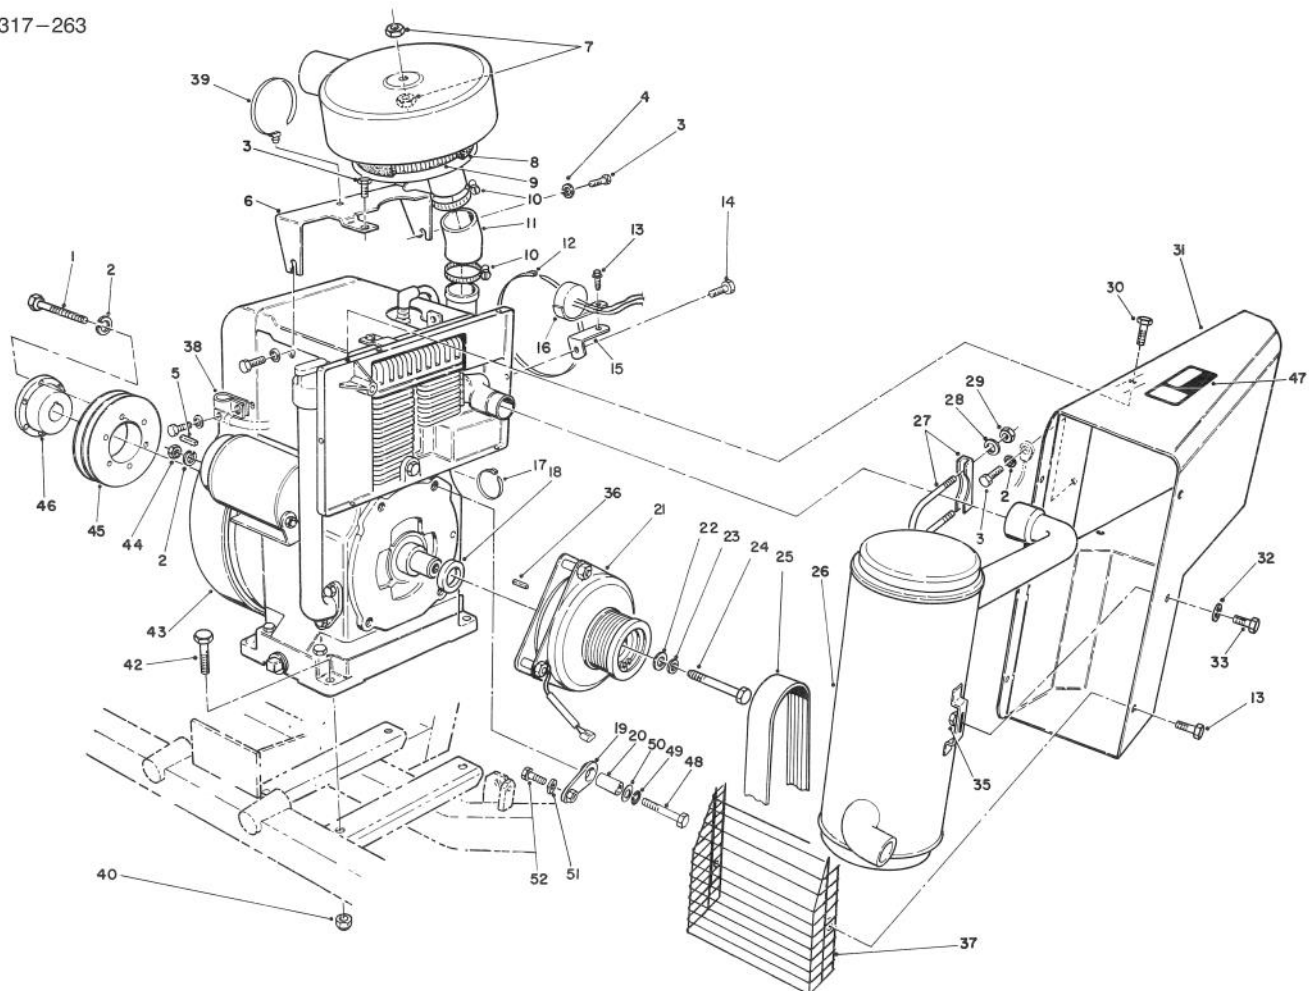 


T-0266

ENGINE & CLUTCH ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	321-13	Screw - Cap Hex. Hd.	3
2	3253-3	Washer - Lock	3
3	3234-4	Screw - Cap Hex. Hd.	3
4	3255-7	Washer - Lock	1
5	10-7070	Key - Square	1
6	61-2120	Bracket - Air Cleaner	1
7	3296-56	Nut - Lock	2
8		Precleaner - Air Cleaner	1
9		Element - Air Cleaner	1
10	2412-92	Clamp - Hose	2
11	61-3470	Hose	1
12	3333-975	Tie - Cable	1
13	49-2040	Screw - Tapping	5
14	3234-4	Screw - Cap Hex. Hd.	1
15	76-0070	Bracket - Interlock Module	1
16	59-9810	Module - Ignition	1
17	3290-378	Tie - Cable	1
18	70-7080	Spacer - Clutch	1
19	92-1810	Arm - Torque	1
20	92-1813	Spacer - Torque Arm	1
21	70-8020	Clutch Assembly	1
22	70-8040	Washer - Flat	1
23	3253-27	Washer - Lock	1
24	3213-9	Capscrew - Hex. Hd.	1
25	61-3390	Belt - Poly-V	1
26	92-7949	Muffler	1
27	2112-9	Clamp - Muffler (Incl. Ref. #28-29)	1


Ref. No.	Part No.	Description	No. Used
28	3253-4	Washer - Lock	2
29	3217-6	Nut - Hex.	2
30	12-3270	Screw - Cap Hex. Hd.	4
31	61-0020	Shroud - Muffler	1
32	3256-70	Washer - Flat	2
33	322-46	Screw - Cap Hex. Hd.	2
35	32128-25	Nut - Lock	2
36	70-8030	Key	1
37	84-1840	Grille - Muffler	1
38	2412-41	Clamp - R	1
39	3290-410	Tie - Push Mount	1
40	3296-39	Nut - Lock	4
42	323-8	Screw - Cap Hex. Hd.	4
43		Engine - Kohler Model No. M16 Spec. No. 711563	1
44	3218-1	Nut - Hex.	1
45	92-1819	Pulley - Engine	1
46	61-3340	Bushing - Taper (Incl. Ref. #1-2)	1
47	66-6840	Decal - Hot	1
48	324-7	Screw - Cap Hex. Hd.	1
49	3253-6	Washer - Lock	1
50	3256-25	Washer - Flat	1
51	92-1814	Spacer - Torque Arm	1
52	322-3	Screw - Cap Hex. Hd.	1

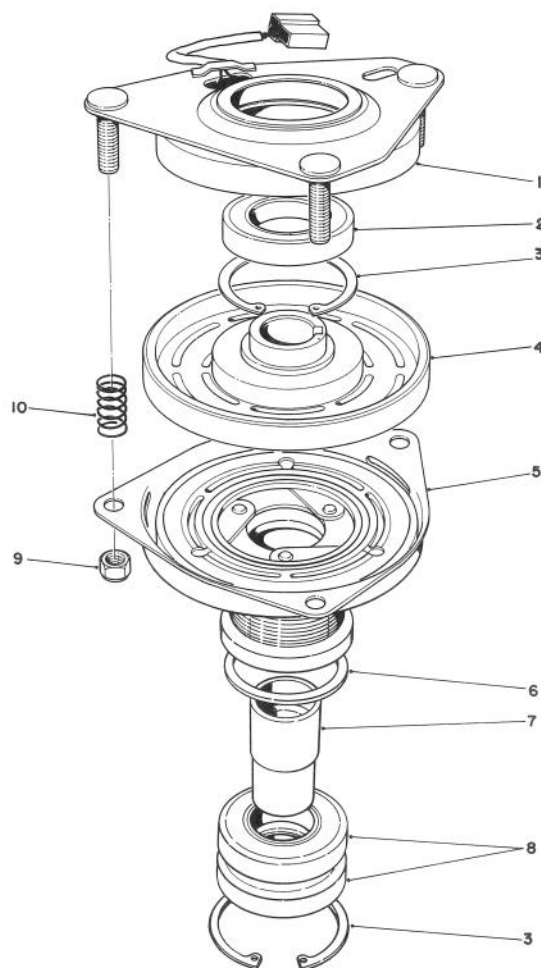 

T-0267

ELECTRIC CLUTCH ASSEMBLY NO. 70-8020

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	44-8350	Field Assembly (Incl. Ref. #2 & 3)	1	5	62-5250	Armature & Pulley Assembly (Incl. Ref. #3, 6, 7 & 8)	1
2	251-292	Bearing - Field	1	6	44-8330	Spacer - Pulley Bearing	1
3	44-8310	Ring - Retaining	2	7	76-0080	Collar - Bearing	1
4	44-8360	Field Coil, Rotor & Bearing Assembly (Incl. Ref. #1)	1	8	251-291	Bearing - Pulley	2
				9	3296-6	Nut - Lock	3
				10	44-8320	Spring - Compression	3

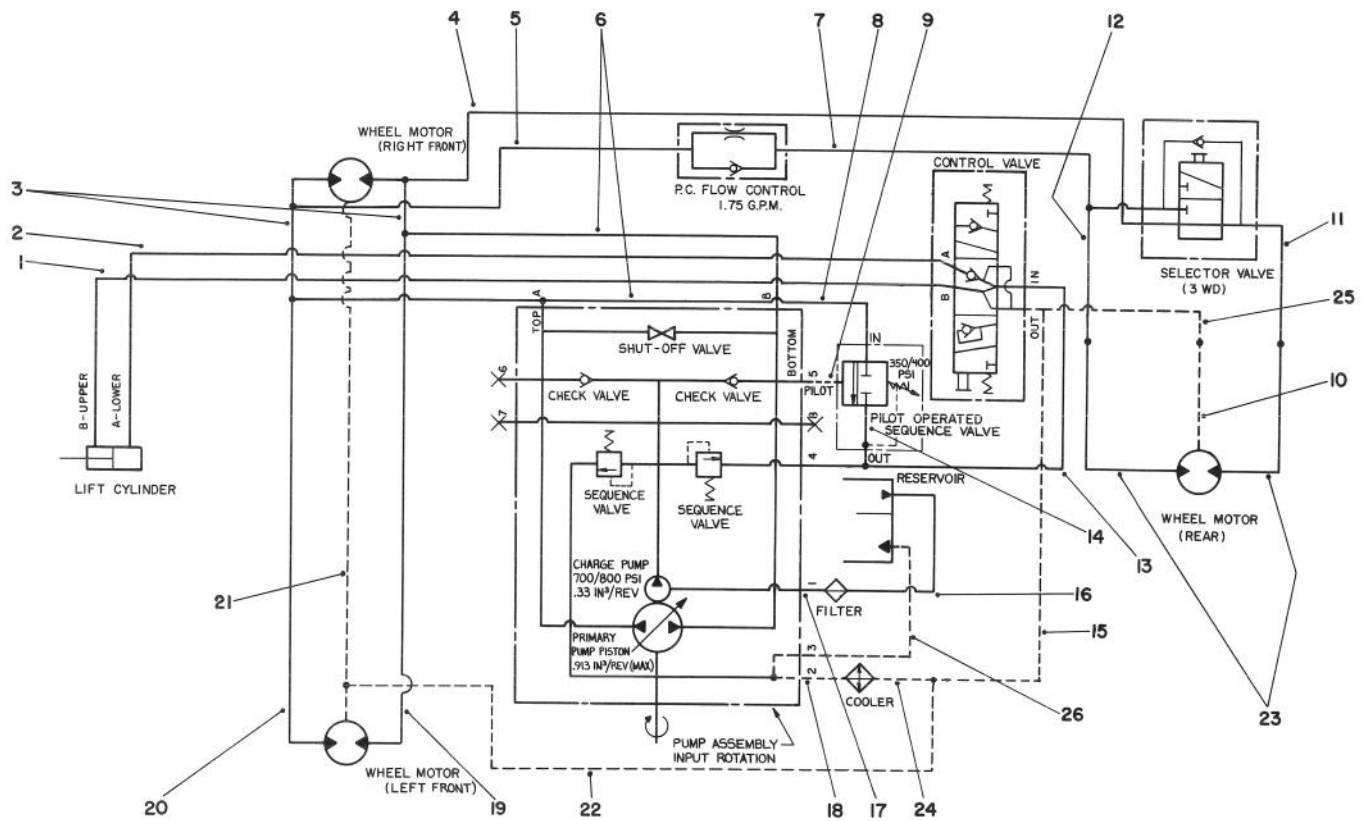 


T-0891

HYDRAULIC SCHEMATIC

Ref. No.	Part No.	Description	No. Used
1	61-2500	Hose Assembly	1
2	61-2490	Hose Assembly	1
3	71-0870	Tube Assembly	2
4	71-0910	Tube Assembly	1
5	71-0880	Tube Assembly	1
6	76-2520	Hose Assembly	2
7	71-0850	Tube Assembly	1
8	76-2530	Hose Assembly	1
9	63-4890	Hose Assembly	1
10	80-4080	Tube Assembly	1
11	71-0840	Tube Assembly	1
12	71-0710	Tube Assembly	1
13	61-2520	Hose Assembly	1

Ref. No.	Part No.	Description	No. Used
14	63-4880	Hose Assembly	1
15	61-2510	Hose Assembly	1
16	61-2550	Hose Assembly	1
17	61-2540	Hose Assembly	1
18	92-2407	Hose Assembly	1
19	61-3070	Tube Assembly	1
20	61-3080	Tube Assembly	1
21	76-2550	Hose Assembly	1
22	76-2540	Hose Assembly	1
23	80-4090	Hose Assembly	2
24	92-2406	Hose Assembly	1
25	71-0860	Tube Assembly	1
26	92-2408	Hose Assembly	1

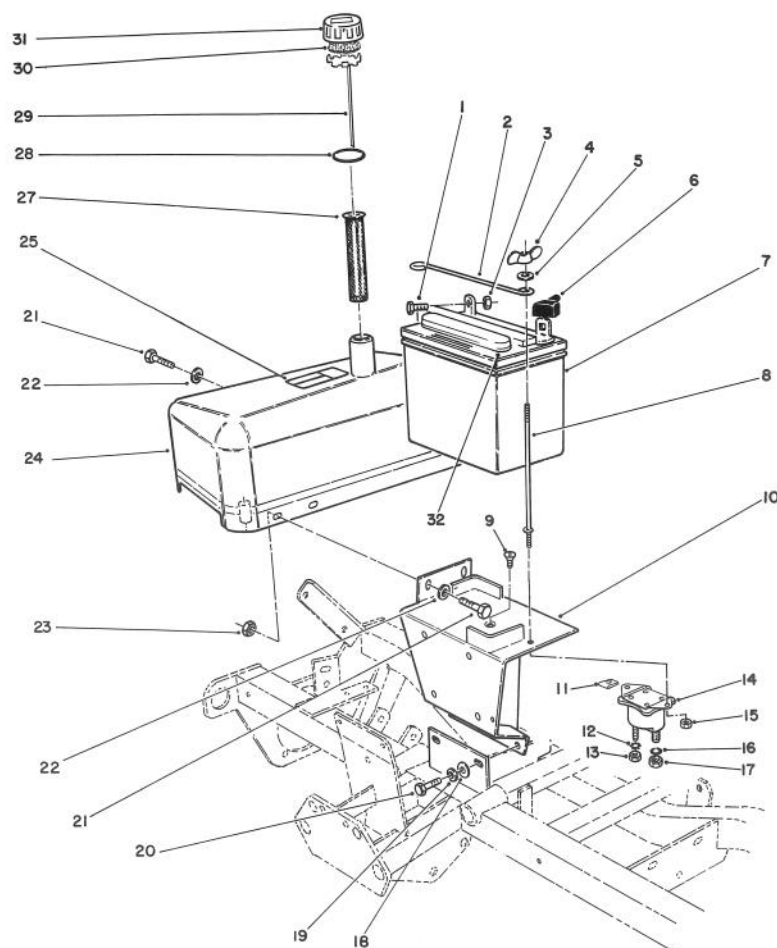 


T-0885

HYDRAULIC TANK & BATTERY ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	322-3	Screw - Cap Hex. Hd.	2	18	3256-24	Washer - Flat	2
2	72-4790	Clamp - Battery	1	19	3253-21	Washer - Lock	2
3	3217-6	Nut - Hex.	2	20	11-0590	Screw - Cap Hex. Hd.	2
4	32103-12	Nut - Wing	2	21	322-43	Screw - Cap Hex. Hd.	4
5	3256-1	Washer - Flat	2	22	3256-70	Washer - Flat	4
6	28-8080	Boot - Battery Terminal	1	23	32128-25	Nut - Lock	2
7	82-4640	Battery - 12 Volt	1	24	61-0100	Tank - Hydraulic	1
8	10-8120	Bolt - Battery	2	25	66-6840	Decal - Hot	1
9	32108-101	Screw - Flathead	1	27	61-2790	Screen - Filler	1
10	76-0440	Battery Support W.A.	1	28	237-71	O-Ring	1
11	3290-199	Nut - Speed	1	29	76-0240	Dipstick Assembly	1
12	3254-1	Washer - Lock	2	30	76-0220	Foam - Oil Filter	1
13	3219-14	Nut - Hex.	2	31	76-0190	Cap - Oil	1
14	28-4210	Solenoid - Starter	1	32	84-1830	Cap - Battery Vent	1
15	32149-2	Nut - Hex.	2	*	76-0200	Oil Cap Assembly (Incl. Ref. #28-31)	1
16	3253-4	Washer - Lock	2				
17	3218-13	Nut - Lock	2				

 *Not Illustrated

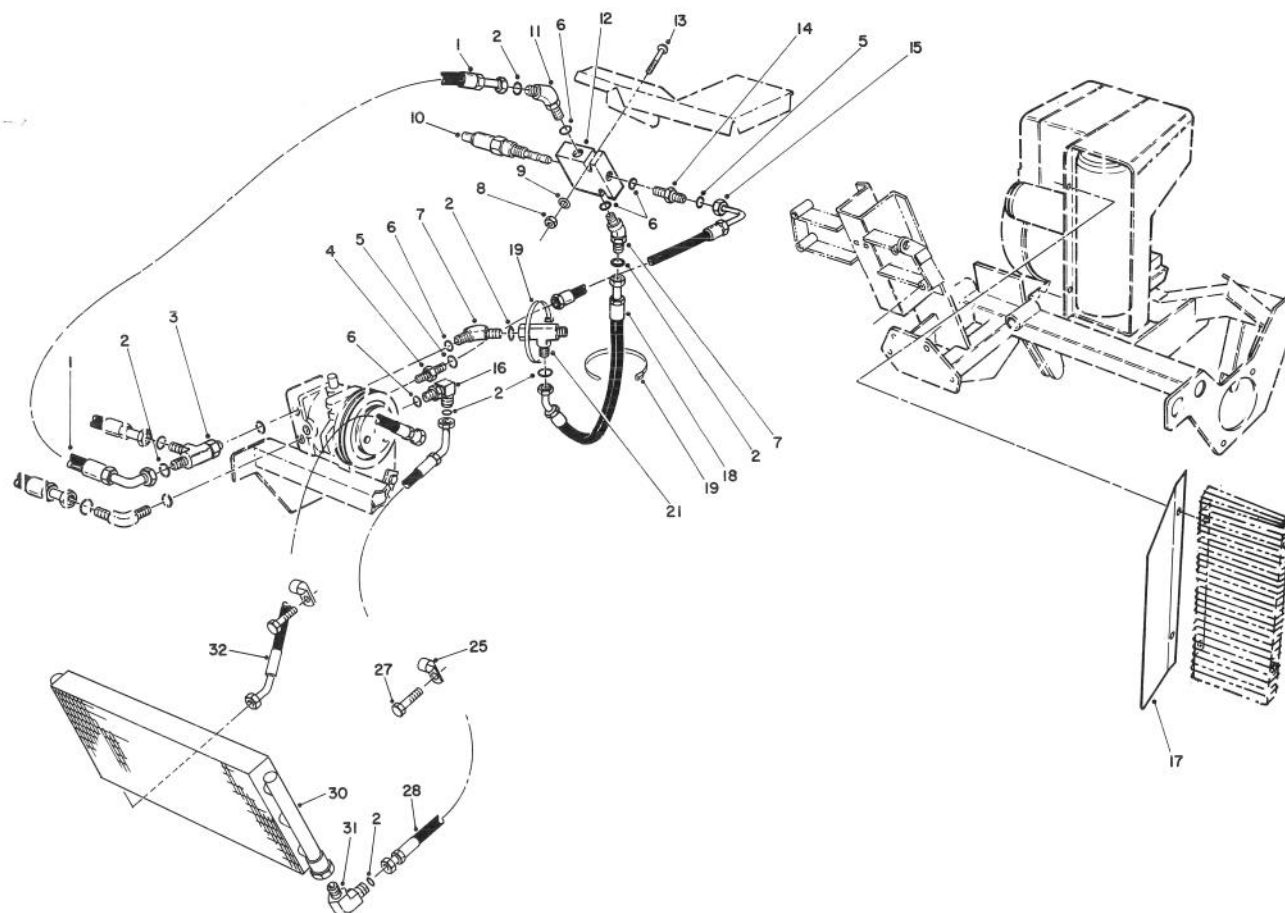


T-0886

HYDRAULIC OIL COOLER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	76-2530	Hydraulic Hose Assembly	1	15	63-4890	Hydraulic Hose Assembly	1
2	237-30	Seal - O-Ring	8	16	340-99	Fitting - Hydraulic 90° (Incl. Ref. #2)	1
3	340-109	Fitting - Male Tee (Incl. Ref. #2)	1	17	63-8940	Shield - Cooler	1
4	340-92	Fitting - Straight (Incl. Ref. #5)	1	18	63-4880	Hydraulic Hose Assembly	1
5	237-150	Seal - O-Ring	2	19	3290-379	Tie - Cable	2
6	237-22	Seal - O-Ring	5	21	340-104	Fitting - Male/Female Tee (Incl. Ref. #2)	1
7	340-96	Fitting - 45° Elbow (Incl. Ref. #2 & 6)	2	25	2412-81	Clamp - R	2
8	32128-32	Nut - Hex. Flange	2	27	32144-69	Screw - Self Tapping	2
9	3256-22	Washer - Flat	2	28	92-2407	Hydraulic Hose Assembly	1
10	63-8790	Cartridge Valve Assembly	1	30	63-5400	Exchanger - Heat	1
11	63-8770	Fitting - 45° Orifice (Incl. Ref. #2 & 6)	1	31	340-168	Fitting - 90° Male Elbow (Incl. Ref. #2)	2
12	63-5080	Pressure Sequence Valve (Incl. Ref. #10)	1	32	92-2406	Hydraulic Hose Assembly	1
13	321-11	Screw - Cap Hex. Hd.	2	*	63-8800	Seal Kit	1
14	340-1	Fitting - Straight (Incl. Ref. #5 & 6)	1			Pressure Sequence Valve (For Ref. #10 & 12)	1
				*	56-7982	Sleeve - Protective	1

 
*Not Illustrated

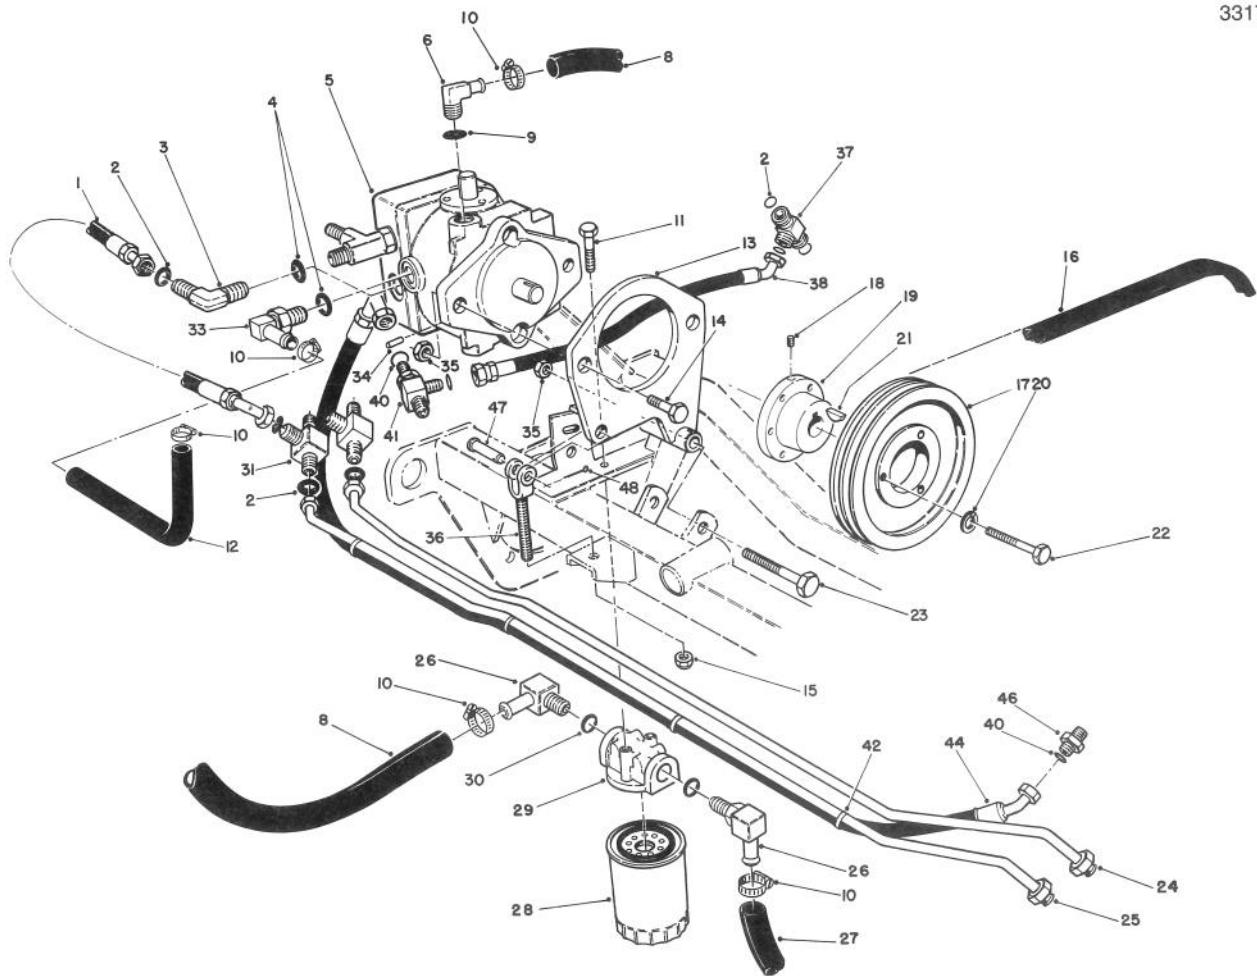

T-0887

HYDRAULIC DRIVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	76-2520	Hydraulic Hose	2	23	325-18	Screw - Cap Hex Hd.	1
2	237-30	O-Ring	12	24	61-3080	Tube - Hyd. L.H. (Front)	1
3	340-98	Fitting - 90° Elbow (Incl. Ref. #2 & 4)	1	25	61-3070	Tube - Hyd. L.H. (Rear)	1
4	237-79	O-Ring	2	26	23-8910	Fitting - 90° Hose Elbow (incl. Ref. #30)	2
5	92-9023	Pump Assembly (Incl. Ref. #21)	1	27	61-2550	Hose - Hydraulic	1
6	61-2710	Fitting - 90° Hose Elbow (Incl. Ref. #9)	1	28	54-0110	Filter - Oil	1
8	61-2540	Hose - Hydraulic	1	29	61-3770	Head - Filter	1
9	237-80	O-Ring	1	30	237-117	O-Ring	2
10	2412-24	Clamp - Hose	6	31	340-102	Fitting - Tee (Incl. Ref. #2)	2
11	3234-4	Screw - Hex Washer Hd.	2	33	353-954	Fitting - 90° Elbow (Incl. Ref. #4)	1
12	92-2408	Hose - Hydraulic	1	34	32121-34	Pin - Roll	1
13	61-2230	Plate - Pump Mount	1	35	3296-23	Nut - Lock	3
14	325-7	Screw - Cap Hex Hd.	2	36	76-2220	Adjustment Yoke Assembly	1
15	3296-6	Nut - Lock	1	37	340-102	T-Fitting	1
16	92-1821	V-Belt - Pump	1	38	76-2540	Hose Assembly - Hyd.	1
17	61-3320	Pulley - Pump	1	40	237-30	O-Ring	3
18	3245-9	Screw - Set	1	41	340-140	Fitting - Tee	1
19	61-3350	Bushing - Taper (Incl. Ref. #12, 18 & 22)	1	42	3290-379	Cable Tie	4
20	3253-3	Washer - Lock	3	44	76-2550	Hose Assembly	1
21	3257-32	Key - Woodruff	1	46	340-92	Fitting	1
22	321-13	Screw - Cap Hex Hd.	3	47	283-2	Pin - Yoke	1
				48	3272-6	Pin - Cotter	1

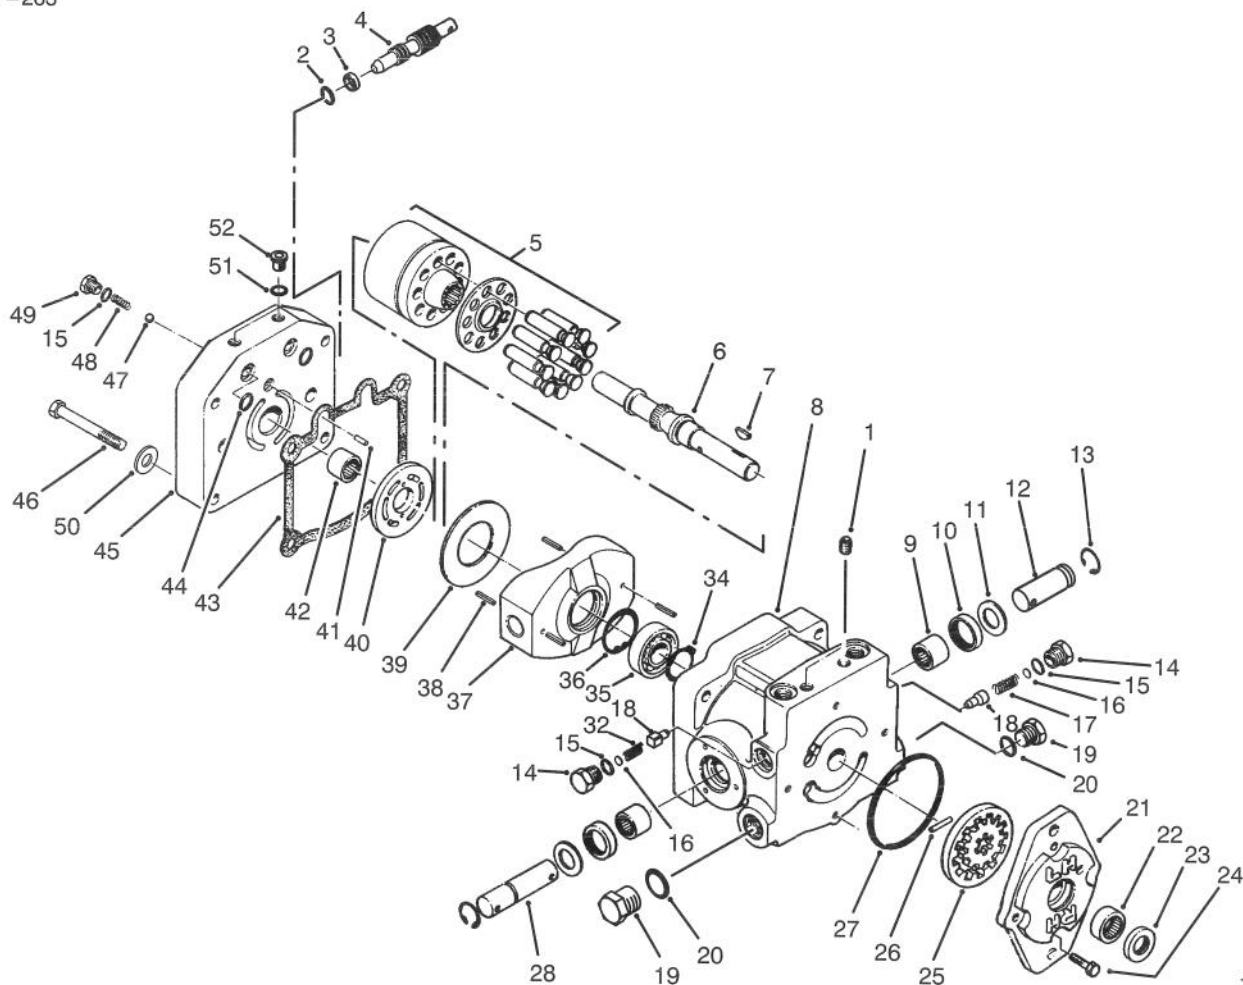 


T-1809

HYDRAULIC PUMP ASSEMBLY NO. 92-9023

Ref. No.	Part No.	Description	No. Used
1	285-17	Plug - Pipe	2
2	237-22	O-Ring	1
3	25-2630	Ring	1
4	88-8220	Valve - By-Pass	1
5	48-1800	Cylinder Block Kit	1
6	67-8020	Shaft - Pump	1
7	3257-32	Key - Woodruff	1
8	92-9023	Hydraulic Pump Assembly (Complete)	1
9	252-82	Bearing - Needle	2
10	25-3210	Seal - Lip	2
11	25-2510	Washer	2
12	49-8480	Shaft - Trunion	1
13	32151-46	Ring - Retaining	2
14	25-2460	Plug	2
15	237-86	O-Ring	4
16	25-2470	Kit - Shim Pack	2
17	25-2570	Spring - Relief Valve	1
18	83-7260	Cone - Relief Valve	2
19	67-8030	Plug Assembly (Incl. Ref. #20)	2
20	67-8040	O-Ring	2
21	92-7940	Housing - Charge Pump	1
22	67-8050	Bearing - Needle	1
23	67-8060	Seal - Lip	1

Ref. No.	Part No.	Description	No. Used
24	322-4	Screw - Cap Hex. Hd.	4
25	25-2680	Gerotor Assembly	1
26	25-2530	Pin - Straight	1
27	237-95	O-Ring	1
28	28-3670	Shaft - Trunion	1
32	25-2480	Spring - Charge Relief	1
34	32120-15	Ring - Retaining	1
35	251-8	Bearing - Ball	1
36	32120-11	Ring - Retaining	1
37	25-2450	Swash/Plate	1
38	32121-91	Pin - Coiled Spring	3
39	25-2380	Plate - Thrust	1
40	25-2390	Plate - Valve	1
41	25-2430	Pin - Straight	1
42	46-8400	Bearing - Needle	1
43	25-2400	Gasket	1
44	62-4290	O-Ring	2
45		Cap - Pump End	1
46	323-11	Screw - Cap Hex. Hd.	4
47	25-2490	Ball - Check Valve	2
48	25-2640	Spring - Check Valve	2
49	25-2650	Plug - Check Valve	2
50	3256-24	Washer	1
51	92-8777	Seal - O-Ring	2

 *Not Illustrated

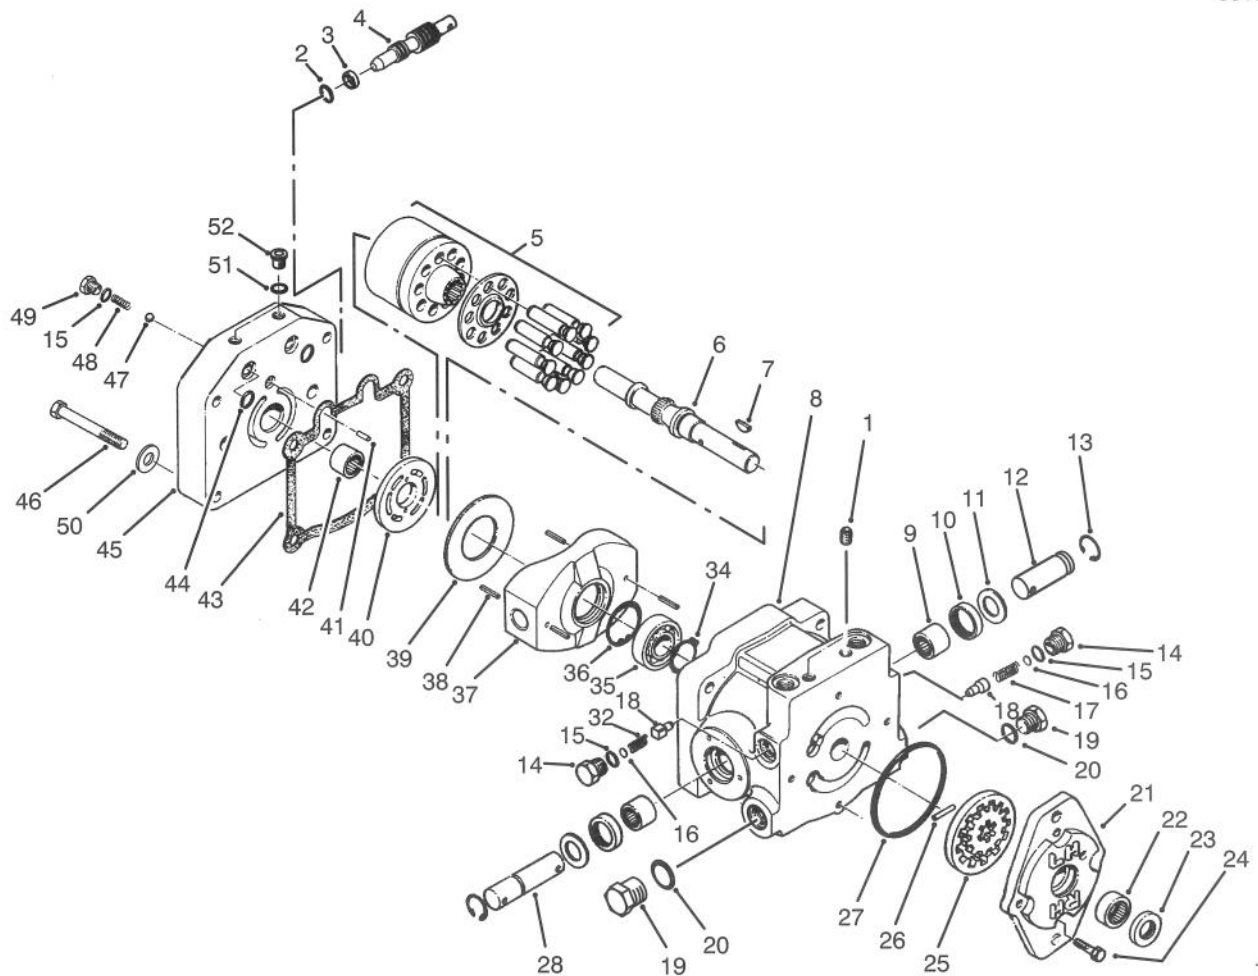


T-1809

HYDRAULIC PUMP ASSEMBLY NO. 92-9023 (Continued)

Ref. No.	Part No.	Description	No. Used
52	92-8776	Plug Assembly (Incl. Ref. #51)	2
*	49-8510	Kit - Charge Relief (Incl. Ref. #14-16, 18 & 32)	1

Ref. No.	Part No.	Description	No. Used
*	25-3180	Kit - Check Valve (Incl. Ref. #15, 47-49)	1
*	49-8520	Kit - Implement Relief (Incl. Ref. #14-18)	1

 *Not Illustrated

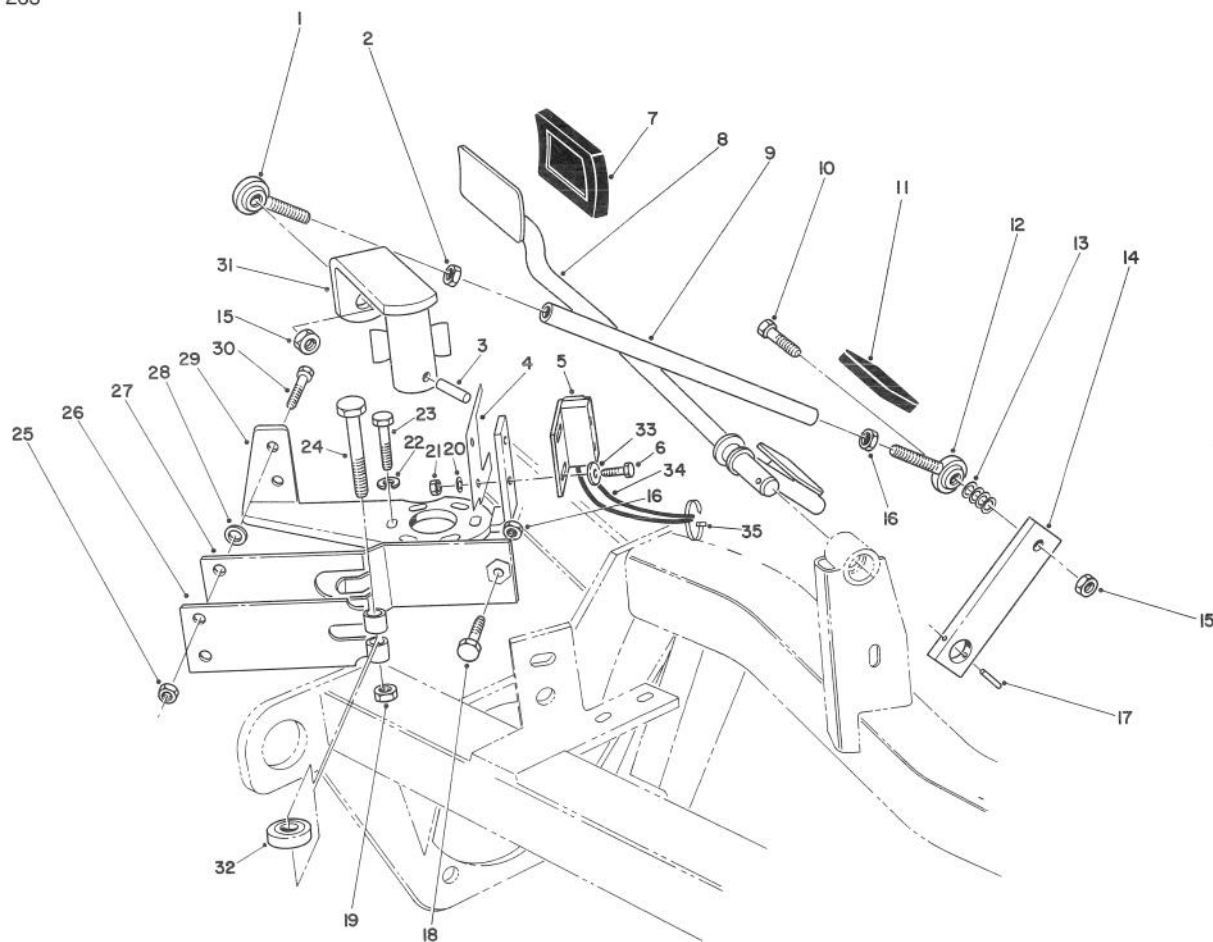


T-1069A

TRACTION CONTROLS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	2411-53	Bearing - Rod End L.H.	1
2	3220-20	Nut - Jam L.H.	1
3	32121-24	Pin - Roll	1
4	46-8810	Stop - Spring	1
5	92-7905	Neutral Switch Assembly (Incl. Ref. #34)	1
6	3249-3	Screw - Rd. Hd. Machine	2
7	74-9100	Pad - Pedal Forward	1
8	76-2170	Pedal - Traction	1
9	76-0420	Rod - Pump Control	1
10	322-7	Capscrew - Hex. Nd.	2
11	74-9110	Pad - Pedal Reverse	1
12	2411-52	Bear - Rod End R.H.	1
13	3256-74	Washer - Flat	8
14	61-2610	Arm - Traction	1
15	32153-3	Nut - Lock	2
16	3220-2	Nut - Jam R.H.	1
17	32121-6	Pin - Roll	1

Ref. No.	Part No.	Description	No. Used
18	3210-7	Capscrew - Hex. Hd.	1
19	3296-29	Nut - Lock	1
20	3254-9	Washer - Lock	2
21	3217-29	Nut - Lock	2
22	3255-7	Washer - Lock	3
23	42-2040	Screw - Hex. Hd. Self Tap	3
24	322-17	Capscrew - Hex. Hd.	1
25	3296-16	Nut - Lock	2
26	29-6150	Spring - Leaf	1
27	29-6170	Spring - Extended Leaf	1
28	51-3150	Shim - Spring Arm	1
29	29-6120	Plate - Pump	1
30	321-6	Screw - Cap Hex. Hd.	2
31	61-2940	Lever - Pump	1
32	251-259	Bearing - Ball	1
33	3256-53	Washer - Flat	2
34	92-7906	Switch - Neutral	1
35	3290-378	Tie - Cable	1

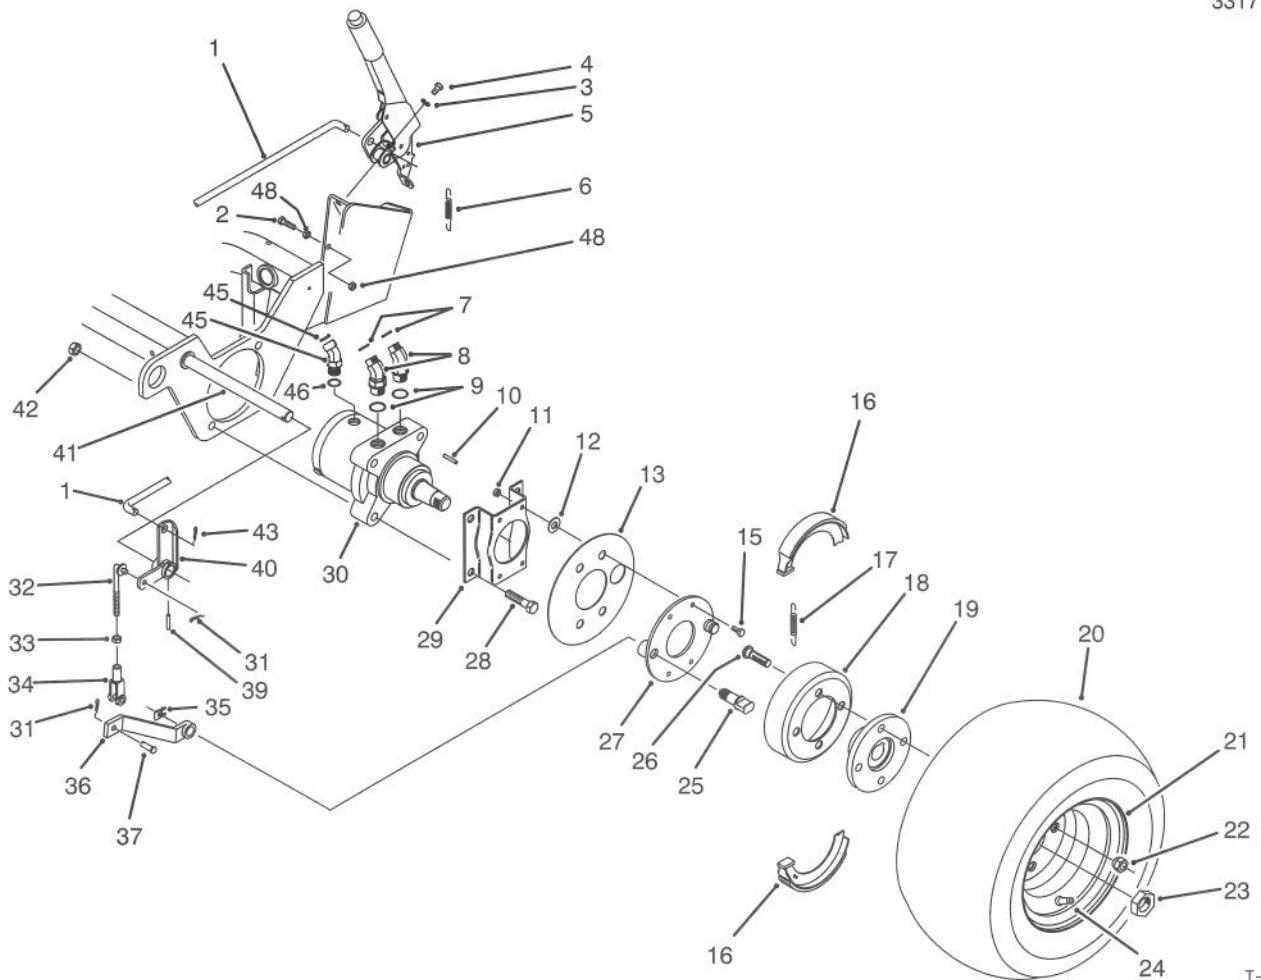 


T-1416

FRONT WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	83-9350	Rod - Parking Brake	1
2	322-17	Screw - Cap Hex. Hd.	1
3	3253-4	Washer - Lock	2
4	322-4	Screw - Hex. Washer Hd.	2
5	61-3990	Parking Brake Assembly	1
6	5-7290	Spring - Extension	1
7	237-30	Seal - O-Ring	4
8	340-89	Fitting - Hydraulic 45° (Incl. Ref. 7 & 9)	4
9	237-80	Seal - O-Ring	4
10	65-4640	Key - Square	2
11	3296-42	Nut - Lock	8
12	3256-16	Washer - Flat	8
13	83-9340	Shield - Grass	2
15	321-5	Screw - Cap Hex. Hd.	8
16	70-9840	Shoe - Brake	4
17	70-9880	Spring - Extension	4
18	10-6821	Brake Drum Assembly (Incl. Ref. #19 & 26)	2
19	10-6870	Hub - Wheel	2
20	231-127	Tire	2
21	217-60	Rim	2
22	242-50	Nut - Lug	8

Ref. No.	Part No.	Description	No. Used
23	26-3790	Nut - Lock	2
24	232-27	Valve - Stem	2
25	70-9860	Pin - Pivot Brake	2
26	85-6540	Stud - Drive	8
27	70-9870	Plate - Brake	2
28	325-11	Screw - Cap Hex. Hd.	8
29	84-2000	Bracket - Brake	2
30	66-5291	Hydraulic Motor Assembly (Incl. Ref. #10)	2
31	3272-6	Pin - Cotter	4
32	84-1990	Rod - Adjusting	2
33	3220-2	Nut - Jam	2
34	282-2	Clevis	2
35	70-9850	Clip - Retaining	2
36	83-9250	Lever - Brake	2
37	283-1	Pin - Clevis	2
39	32121-79	Pin - Roll	2
40	83-9270	Pivot - Brake L.H.	1
*	83-9310	Pivot - Brake R.H.	1
41	83-9330	Shaft - Brake	1
42	3296-23	Nut - Lock	8
43	3272-7	Pin - Cotter	1

 *Not Illustrated

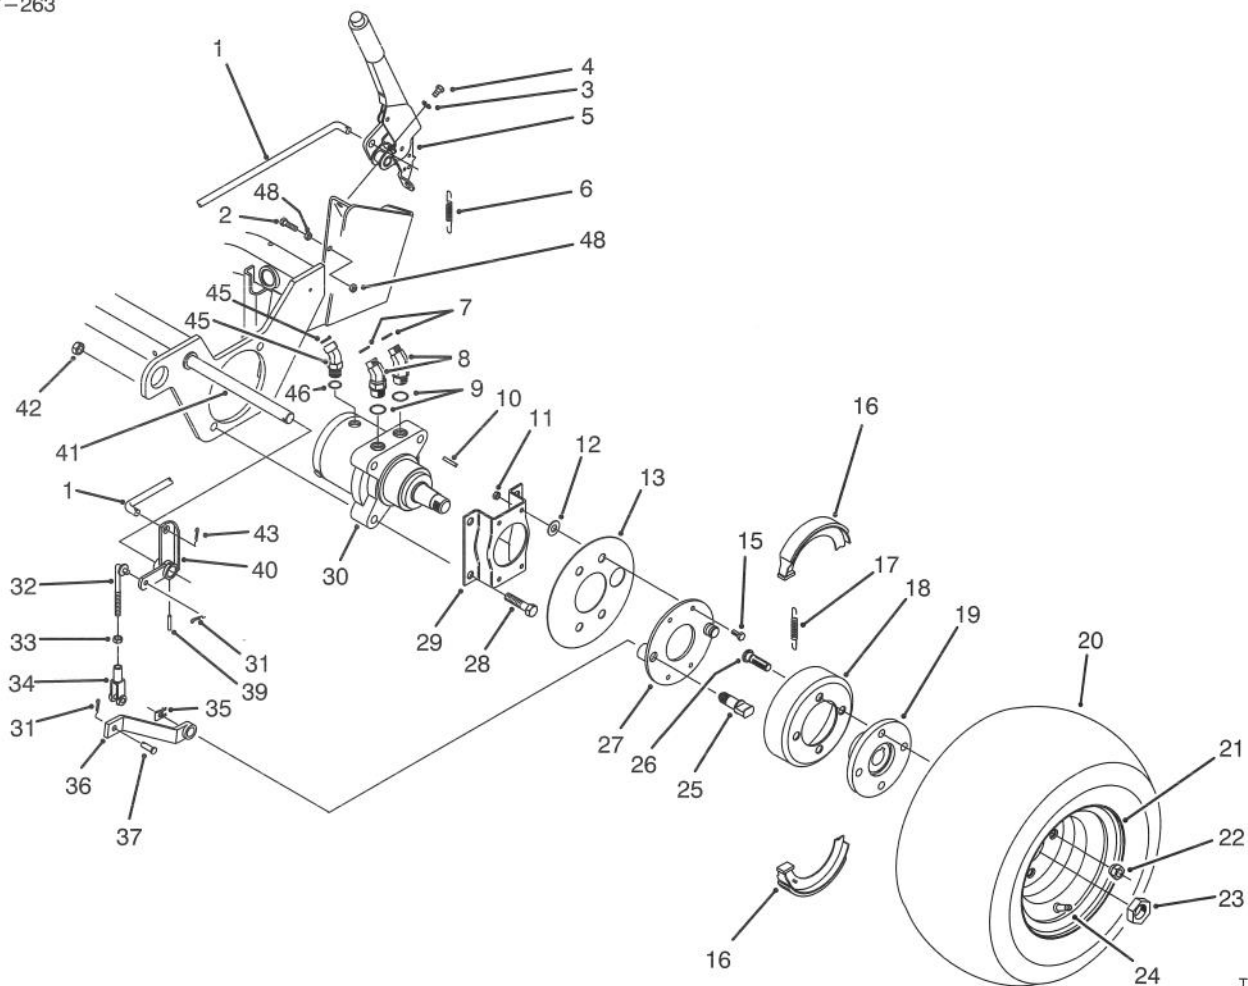


T-1416

FRONT WHEEL ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
45	340-103	Fitting - Hydraulic 45° (Incl. Ref. #46 & 47) (For Left Wheel Motor)	1
*	340-140	Fitting - Hydraulic Tee (Incl. Ref. #46 & 47) (For Right Wheel Motor)	1

Ref. No.	Part No.	Description	No. Used
46	237-78	Seal - O-Ring	2
47	237-21	Seal - O-Ring	3
48	32128-20	Nut - Lock	2
*	71-1500	Brake Assembly (Incl. Ref. #16, 17, 25, 27 & 35)	2

 *Not Illustrated

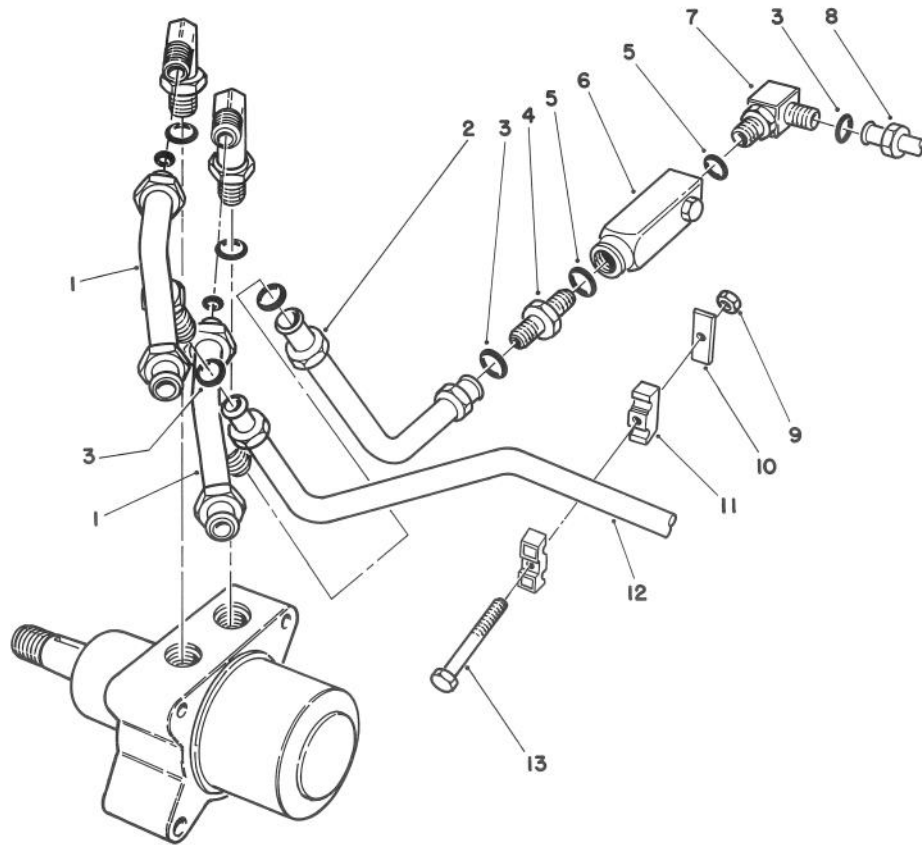


T-0889

RIGHT FRONT WHEEL PLUMBING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-0870	Tee - Tube Assembly (Incl. Ref. #3)	2
2	71-0880	Tube Assembly	1
3	237-30	O-Ring	4
4	340-5	Fitting (Incl. Ref. #3 & 5)	1
5	237-42	O-Ring	2
6	71-2960	Valve - Flow Control	1

Ref. No.	Part No.	Description	No. Used
7	340-99	Fitting (Incl. Ref. #3 & 5)	1
8	71-0850	Tube Assembly	1
9	32128-14	Flange Locknut	1
10	69-9760	Cover - Plate	1
11	56-7976	Clamp - Tube	2
12	71-0910	Tube Assembly	1
13	321-28	Screw - Cap Hex Hd.	1

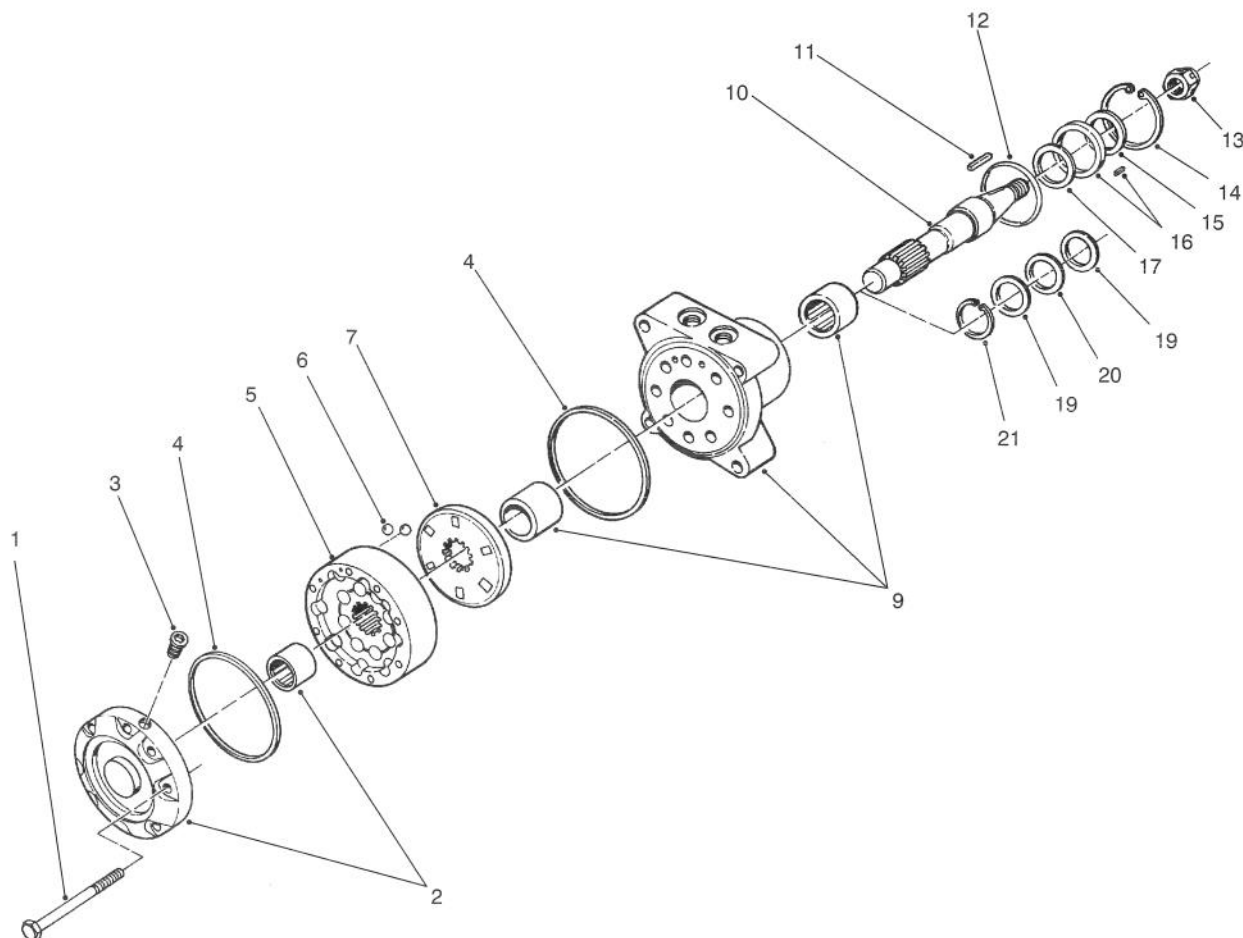 

T-0274


HYDRAULIC DRIVE MOTOR ASSEMBLY NO. 66-5291

Ref. No.	Part No.	Description	No. Used
1	65-4580	Screw - Cap Hex Hd.	8
2	65-4680	Cover & Bearing Assembly	1
3	65-4560	Plug - Hex (Hollow)	1
4	65-4570	Seal - Square Ring	2
5	66-6110	IGR Assembly	1
6	65-4550	Valve - Check Ball	2
7	70-8150	Plate - Valve	1
9	65-4670	Body & Bearing Assembly	1
10	92-1157	Shaft	1
11	3257-15	Key - Square	1
12	65-4620	Seal - O-Ring	1

Ref. No.	Part No.	Description	No. Used
14	65-4500	Seal - Snap Ring	1
†15		Seal - Dust	1
†16		Retainer/Pin	1
†17		Seal - Lip	1
*	76-2350	Seal/Retainer Assembly (Incl. Ref. #15-17)	1
19	65-4600	Washer - Thrust	2
20	65-4610	Bearing - Thrust	1
21	65-4590	Ring - Snap	1
*	76-2360	Body Seal Kit (Incl. Ref. #4, 12 & 15-17)	1

*Not Illustrated

 †Not available from Toro as a replacement part.

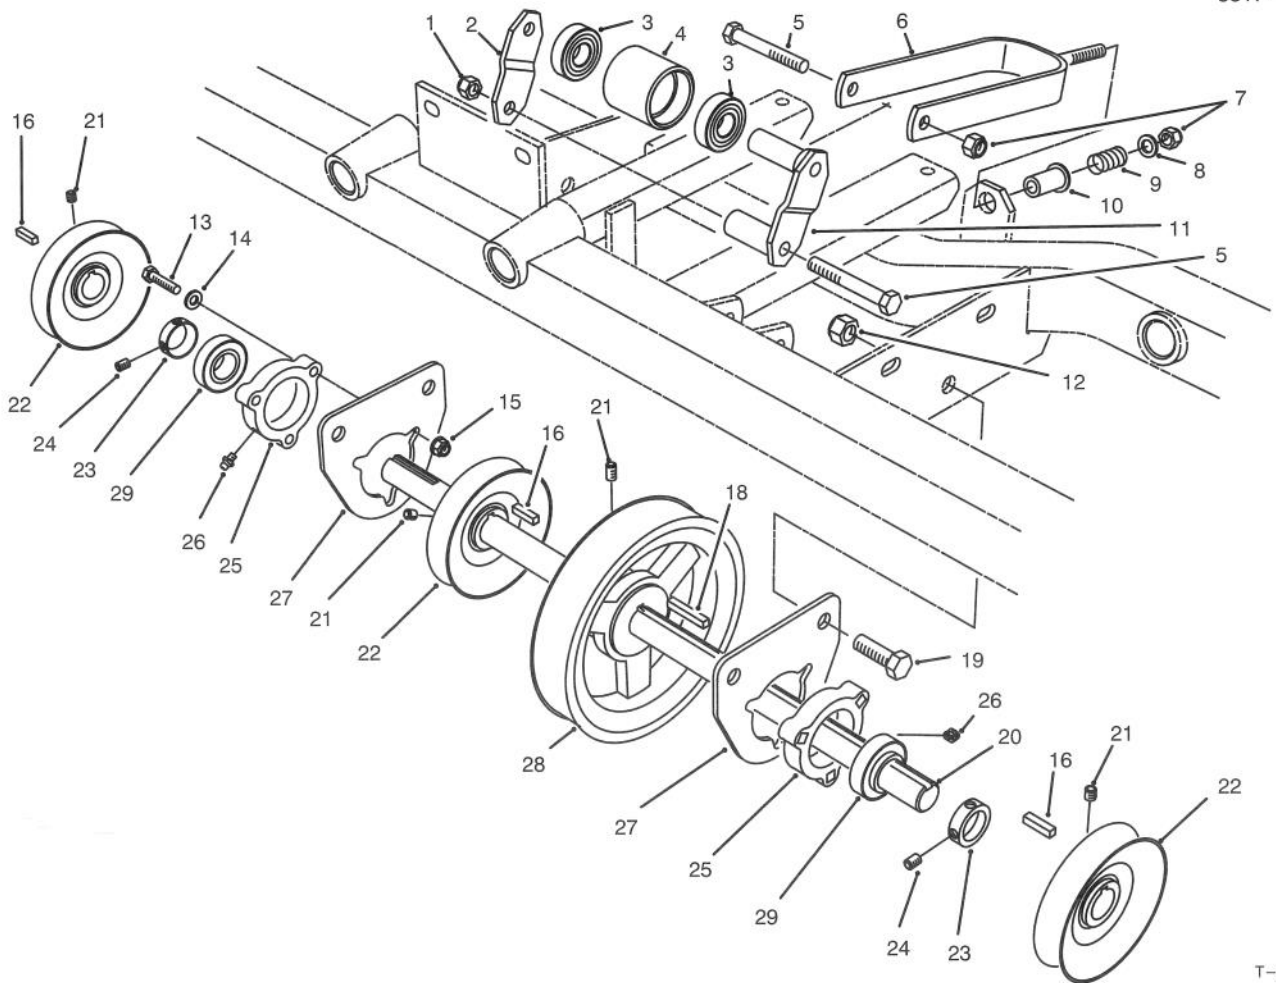


T-0276

JACKSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-39	Nut - Lock	2
2	67-7911	Strap - Idler Bracket	1
3	38-7820	Bearing - Idler	2
4	67-7750	Pulley - Idler	1
5	323-15	Screw - Cap Hex. Hd.	2
6	67-7890	Belt Tensioner W.A.	1
7	3296-59	Nut - Lock	1
8	3256-24	Washer - Flat	1
9	83-9690	Spring - Compression	1
10	83-9810	Bushing - Flange	1
11	67-7870	Idler Bracket W.A.	1
12	3296-23	Nut - Lock	4
13	322-17	Screw - Cap Hex. Hd.	6
14	3256-23	Washer - Flat	6
15	32128-25	Nut - Flange Lock	6
16	5-7280	Key - Square (Short)	3

Ref. No.	Part No.	Description	No. Used
18	67-7490	Key - Square (Long)	1
19	325-4	Screw - Cap Hex. Hd.	4
20	83-7820	Shaft - Drive	1
21	3242-4	Screw - Set	8
22	61-0140	Pulley - Jackshaft	3
23	251-77	Collar - Locking (Incl. Ref. #24)	2
24	3245-35	Screw - Set	4
25	76-2460	Bearing Assembly (Incl. Ref. #23, 26 & 29)	2
26	302-5	Fitting - Grease	2
27	61-2350	Mount - Bearing	2
28	61-0070	Pulley - Poly V	1
29	251-337	Bearing	2
*	13-1279	Idler Pulley Assembly (Incl. Ref. #3, 4 & 11)	1

 *Not Illustrated

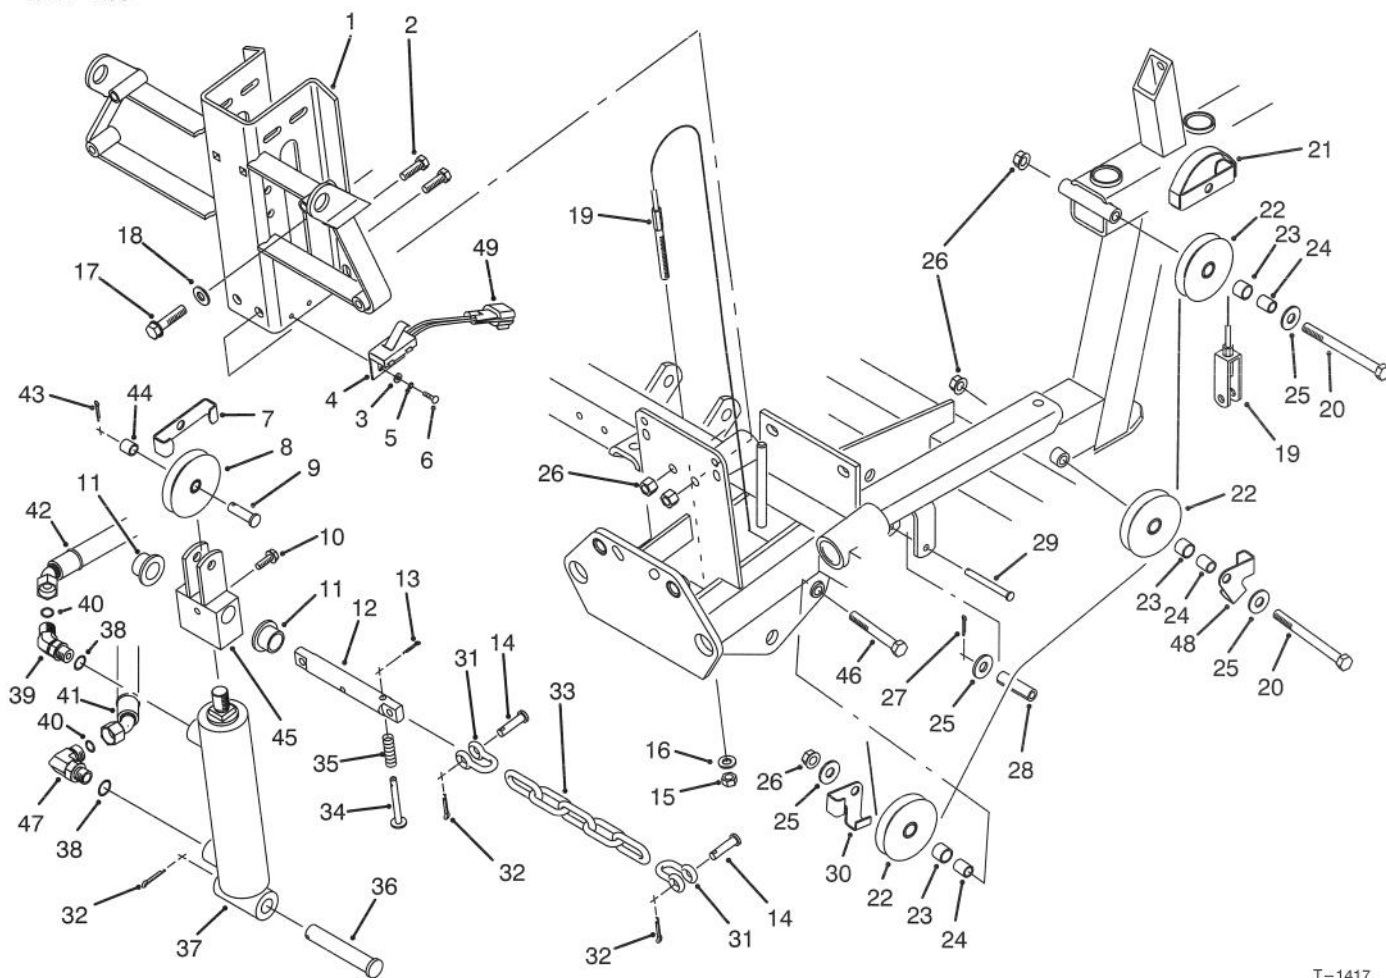


T-1417

CUTTING UNIT LIFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-1840	Bracket - Cylinder & Cooler	1
2	323-6	Screw - Cap Hex. Hd.	2
3	3256-53	Washer - Flat	2
4	92-7905	Lift Switch Assembly (Incl. Ref. #49)	1
5	3254-9	Washer - Lock Internal	2
6	3249-5	Screw - Round Hd.	2
7	5-2655	Keeper - Cable	1
8	5-2653	Cable Pulley Assembly (Incl. Ref. #44)	1
9	283-42	Pin - Clevis	1
10	3234-4	Screw - Hex. Washer Hd.	1
11	84-8440	Bushing - Flange	2
12	72-4190	Pin - Cylinder Guide	1
13	3272-4	Pin - Cotter	1
14	283-6	Pin - Clevis	4
15	3296-4	Nut - Lock	1
16	3256-23	Washer - Flat	1
17	11-0590	Screw - Thread Forming	4
18	3256-24	Washer - Flat	4
19	61-3260	Cable - Lift	1
20	323-23	Screw - Cap Hex. Hd.	2
21	61-3240	Keeper - Cable	1
22	61-3210	Cable Pulley Assembly (Incl. Ref. #23)	3
23	256-1	Bushing - Sleeve	3
24	61-3230	Spacer	3

Ref. No.	Part No.	Description	No. Used
25	3256-4	Washer - Flat	4
26	3296-39	Nut - Lock	5
27	3272-4	Pin - Cotter	1
28	32121-124	Pin - Roll	1
29	283-79	Pin - Clevis	1
30	5-2656	Keeper - Cable	1
31	282-4	Clevis	4
32	3272-11	Pin - Cotter	5
33	61-3830	Chain - Lift	2
34	71-1380	Pin - Spring	1
35	71-1370	Spring - Compression	1
36	283-78	Pin - Clevis	1
37	76-0020	Hydraulic Cylinder Assembly	1
38	237-42	Seal - O-Ring	2
39	340-87	Fitting - Hydraulic 45° (Incl. Ref. #38 & 40)	1
40	237-22	Seal - O-Ring	2
41	61-2500	Hose - Hydraulic	1
42	61-2490	Hose - Hydraulic	1
43	3272-6	Pin - Cotter	1
45	61-2430	Hub - Lift	1
44	256-2	Bushing - Sleeve	1
46	323-13	Screw - Cap Hex. Hd.	1
47	340-77	Fitting - Hydraulic 90° (Incl. Ref. #38 & 40)	1
48	83-9130	Keeper - Cable	1
49	92-7906	Switch - Lift	1

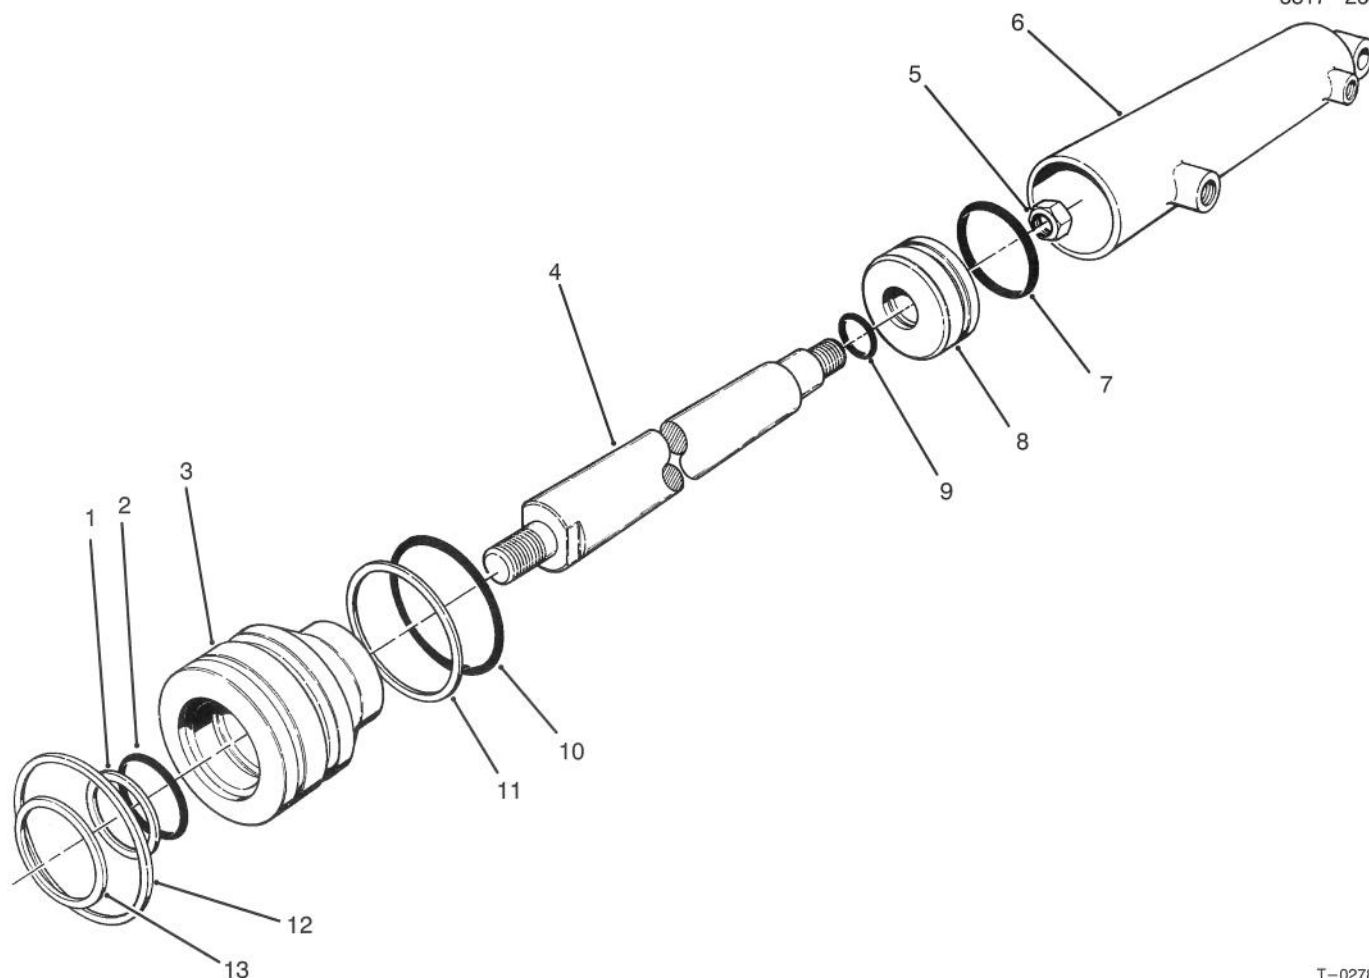 


T-0278

HYDRAULIC CYLINDER ASSEMBLY NO. 76-0020

Ref. No.	Part No.	Description	No. Used
1		Washer - Backup	1
2		O-Ring	1
3	76-0090	Head	1
4	76-2320	Shaft	1
5	76-2330	Nut - Lock	1
6		Barrel	1
7		Uniring	1
8	76-0040	Piston	1

Ref. No.	Part No.	Description	No. Used
9		O-Ring	1
10		O-Ring	1
11		Washer - Backup	1
12	76-0050	Ring - Retaining	1
13		Seal-Dust	1
*	76-0030	Repair Kit (Incl. Ref. #1-2, 7, 9-11 & 13)	1

 *Not Illustrated

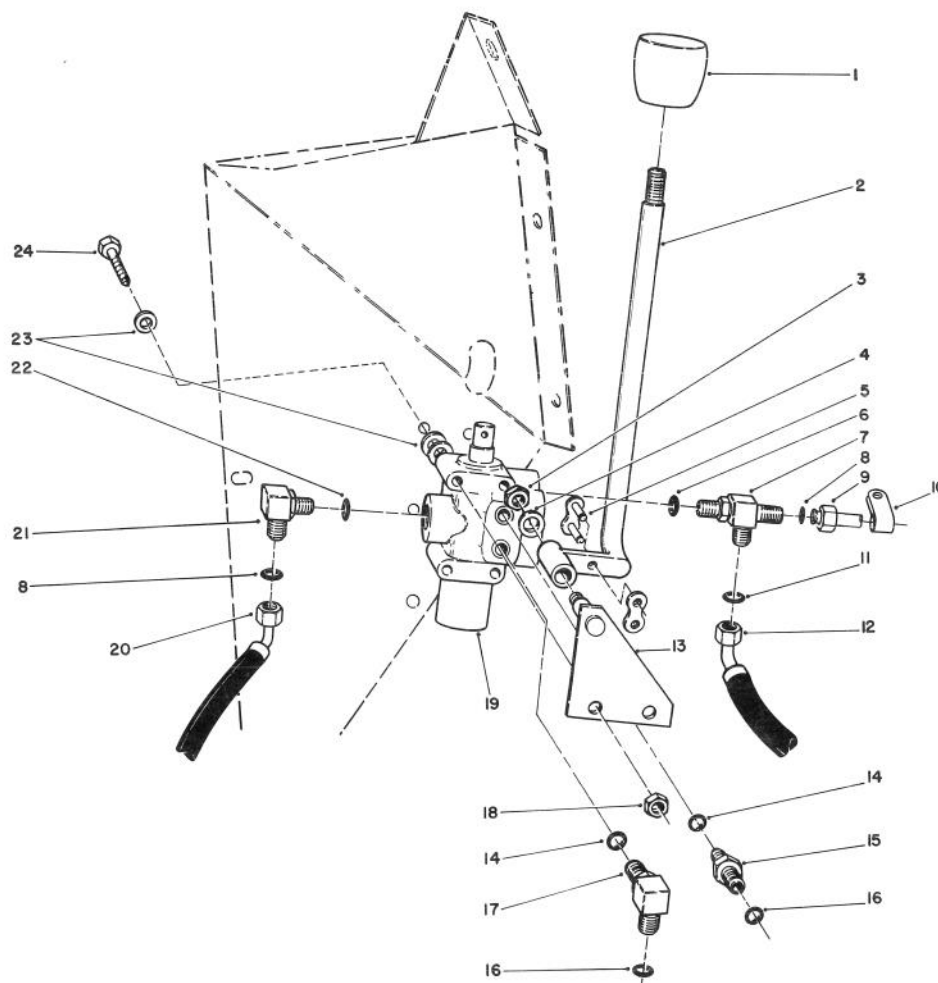


T-0890

CUTTING UNIT LIFT CONTROL VALVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	233-37	Knob	1
2	85-5160	Lever - Valve	1
3	3296-39	Nut Lock	1
4	3256-24	Washer	1
5	2710-16	Link - Chain	1
6	237-42	O-Ring	1
7	71-0770	Fitting (Incl. Ref. #6, 8 & 11)	1
8	237-22	O-Ring	2
9	71-0860	Tube Assembly	1
10	2412-113	Clamp-R	1
11	237-30	O-Ring	1
12	61-2520	Hydraulic Hose Assy. (Up)	1
13	61-2720	Bracket - Lever	1

Ref. No.	Part No.	Description	No. Used
14	237-78	O-Ring	2
15	340-88	Fitting - Straight (Incl. Ref. #14 & 16)	1
16	237-21	O-Ring	2
17	340-97	Fitting - 90° Elbow (Incl. Ref. #14 & 16)	1
18	3296-16	Nut - Lock	3
19	43-1950	Valve - Hydraulic	1
20	61-2510	Hydraulic Hose Assy. (Low)	1
21	340-99	Fitting - 90° Elbow (Incl. Ref. #8 & 22)	1
22	237-79	O-Ring	1
23	3256-22	Washer - Flat	9
24	321-23	Screw - Cap Hex.Hd.	3

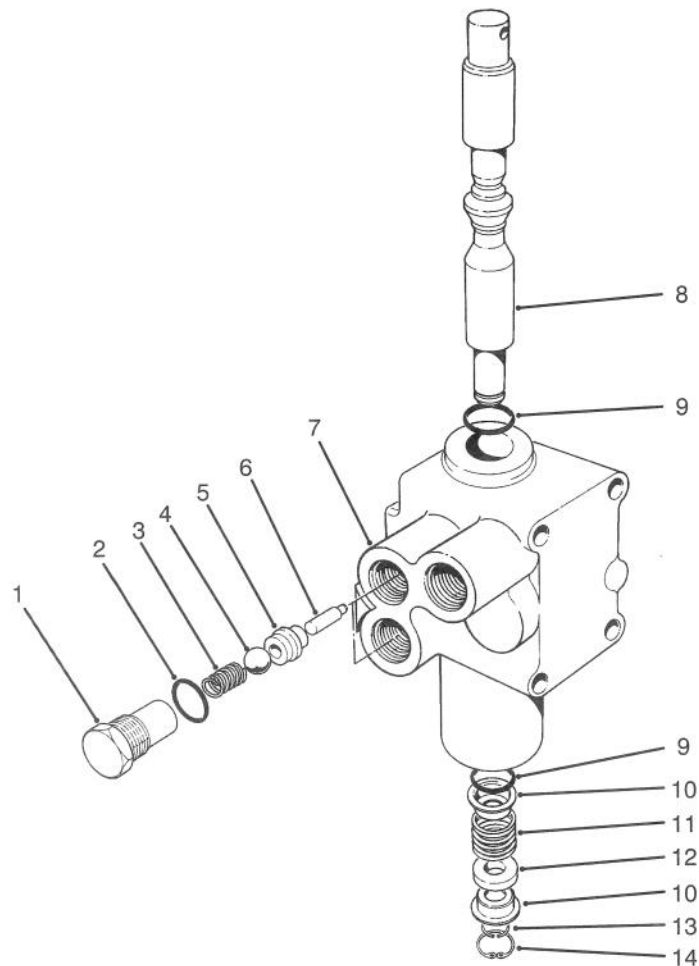 


T-0280

CONTROL VALVE ASSEMBLY NO. 43-1950

Ref. No.	Part No.	Description	No. Used
1	22-8330	Plug	2
2	237-42	O-Ring	2
3	22-8340	Spring	2
4	22-8350	Ball	2
5	22-8370	Seat - Check Valve	2
6	22-8360	Pin - Cam	2
7		Body	1

Ref. No.	Part No.	Description	No. Used
8	22-8420	Spool	1
9	22-8500	O-Ring	2
10	22-8380	Retainer - Spring	2
11	22-8410	Spring	1
12	23-3030	Spacer	1
13	22-8480	Snap Ring - Spool	1
14	22-8490	Snap Ring	1

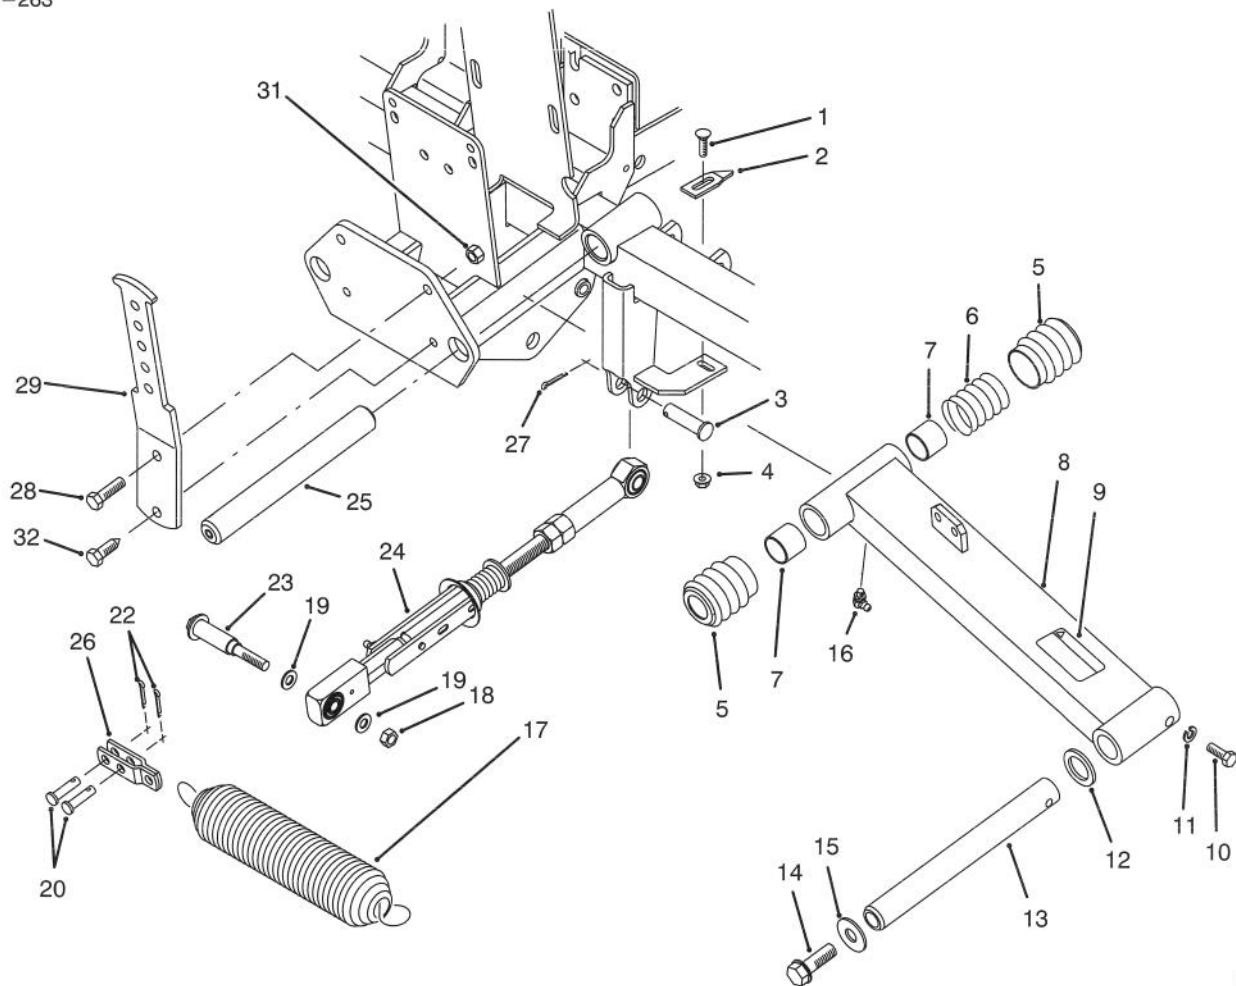 


T-1419

FRONT CUTTING UNIT LIFT ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3229-1	Bolt - Carriage	2
2	76-2430	Scraper - Pulley	2
3	283-40	Pin - Clevis	2
4	32128-33	Nut - Flange Lock	2
5	61-7250	Boot	4
6	61-3270	Spring - Compression	2
7	3-0348	Bushing - Sleeve	4
8	16-1159	Lift Arm Assembly L.H. (Incl. Ref. #7, 9 & 16)	1
*	16-1169	Lift Arm Assembly R.H. (Incl. Ref. #7, 9 & 16)	1
9	55-4300	Decal - Warning	2
10	322-4	Screw - Cap Hex. Hd.	2
11	3253-4	Washer - Lock	2
12	256-115	Washer - Thrust	2
13	92-1815	Rod - Pivot	2
14	3234-32	Screw - Hex. Flange Hd.	2

Ref. No.	Part No.	Description	No. Used
15	3256-6	Washer - Flat	2
16	302-60	Fitting - Grease	2
17	5-0743	Spring - Extension	2
18	3296-59	Nut - Lock	2
19	3256-45	Washer - Flat	4
20	283-75	Pin - Clevis	4
22	3272-10	Pin - Cotter	4
23	76-0370	Bolt - Shoulder	2
24	83-7900	Belt Tensioner Assembly	2
25	92-1812	Shaft - Lift Pivot	2
26	92-1822	Shackle	2
27	3272-13	Pin - Cotter	2
28	323-7	Screw - Cap Hex. Hd.	2
29	92-1818	Arm - Tension	2
31	3296-39	Nut - Lock	2
32	32104-6	Screw - Cap Hex. Hd.	2

 *Not Illustrated

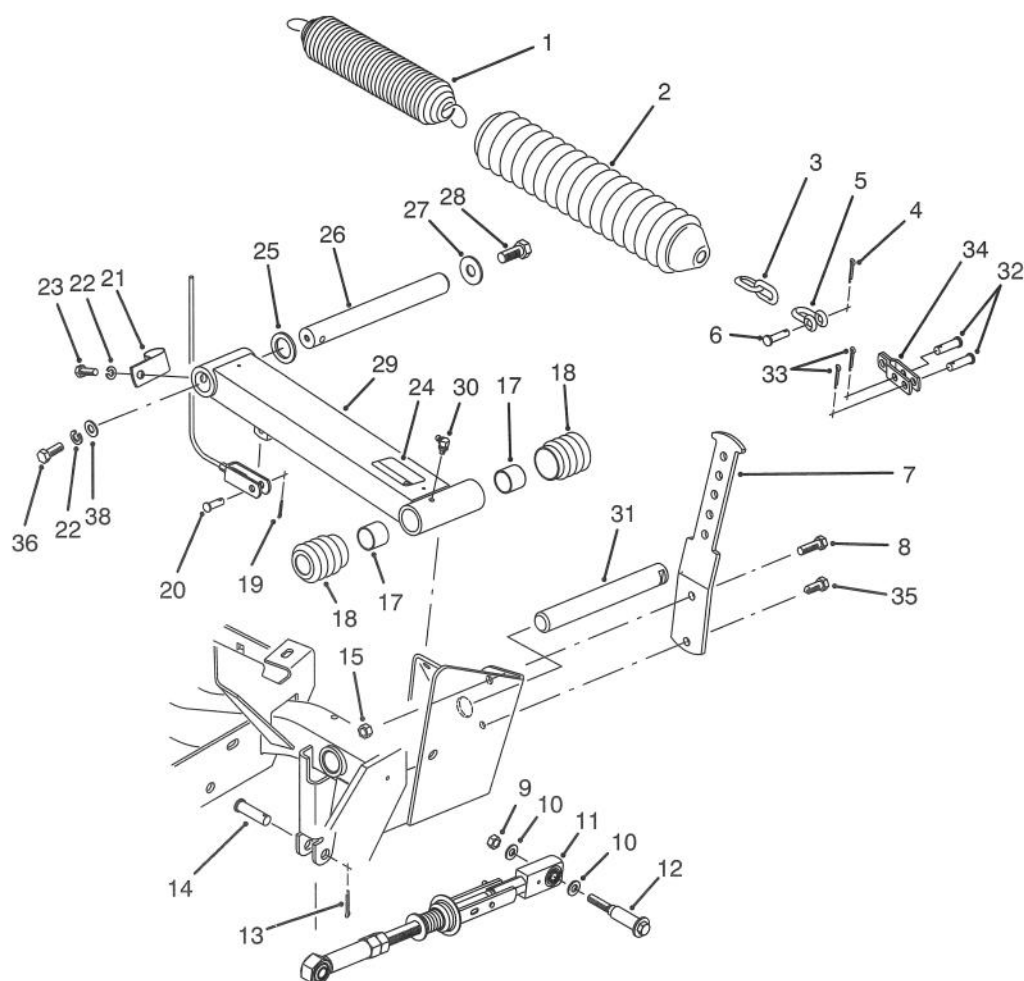


T-1366A

REAR CUTTING UNIT LIFT ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	5-0743	Spring - Extension	1
2	62-7240	Cover - Spring	1
3	62-7300	Chain	1
4	3272-11	Pin - Cotter	1
5	282-4	Clevis	1
6	283-6	Pin - Clevis	1
7	92-1818	Arm - Tension	1
8	323-7	Screw - Cap Hex. Hd.	1
9	3296-59	Nut - Lock	2
10	3256-45	Washer - Flat	4
11	83-7900	Belt Tensioner Assembly	2
12	76-0370	Bolt - Shoulder	2
13	3272-13	Pin - Cotter	2
14	283-40	Pin - Clevis	2
15	3296-39	Nut - Lock	1
17	3-0348	Bushing - Sleeve	2
18	62-7250	Boot	2
19	3272-6	Pin - Cotter	1
20	283-1	Pin - Clevis	1

Ref. No.	Part No.	Description	No. Used
21	18-2970	Clamp - R	1
22	3253-4	Washer - Lock	2
23	322-4	Screw - Cap Hex. Hd.	1
24	55-4300	Decal - Warning	1
25	256-115	Washer - Thrust	1
26	92-1815	Rod - Pivot	1
27	3256-6	Washer - Flat	1
28	3234-32	Screw - Cap Hex. Hd.	1
29	16-1089	Lift Arm Assembly (Incl. Ref. #17, 24 & 30)	1
30	302-60	Fitting - Grease	1
31	92-1812	Shaft - Lift Pivot	1
32	283-75	Pin - Clevis	2
33	3272-10	Pin - Cotter	2
34	92-1822	Shackle	1
35	32104-6	Screw - Cap Hex. Hd.	1
36	322-26	Screw - Cap Hex. Hd.	1
38	3256-57	Washer - Flat	1

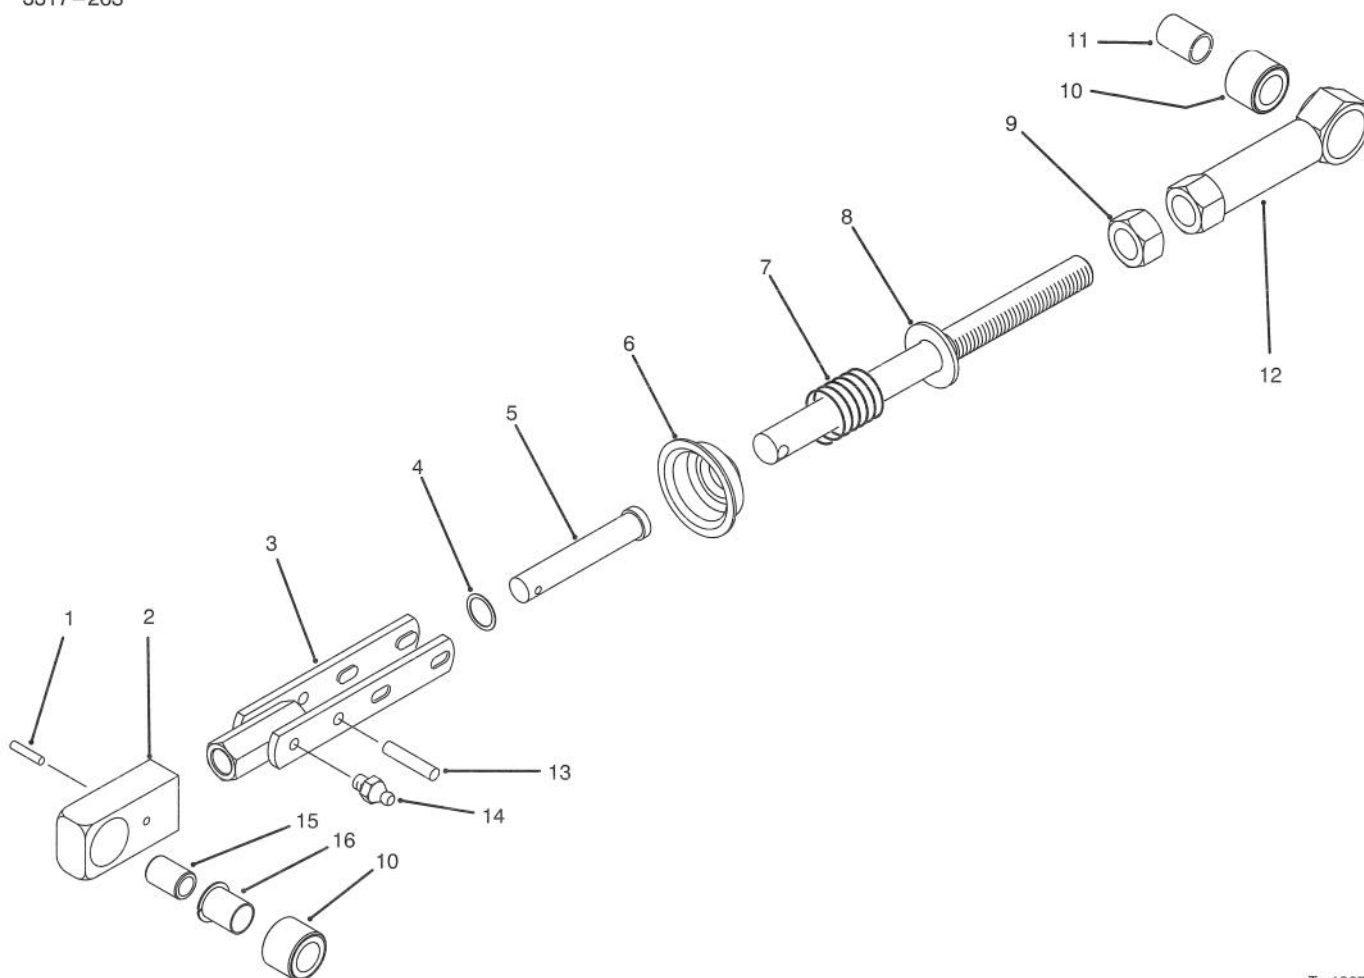 

T-1367


BELT TENSIONER ASSEMBLY NO. 83-7900

Ref. No.	Part No.	Description	No. Used
1	32121-23	Pin - Roll	1
2	76-0350	Housing - Bushing	1
3	83-7930	Yoke	1
4	3256-54	Washer - Flat	1
5	283-55	Pin - Clevis	1
6	76-0360	Cup - Retainer	1
7	76-0410	Spring - Compression	1
8	83-7910	Rod	1

Ref. No.	Part No.	Description	No. Used
9	3218-6	Nut - Jam	1
10	56-9510	Bushing Assembly	2
11	256-173	Bushing - Sleeve	1
12	76-0300	Housing - Bushing	1
13	32121-9	Pin - Roll	1
14	302-5	Fitting - Grease	1
15	76-0390	Spacer	1
16	56-9520	Bushing - Nyliner	1

SPECIAL TOOLS

 
DRIVE MOTOR SEAL INSTALLATION TOOL NO. *19-2660

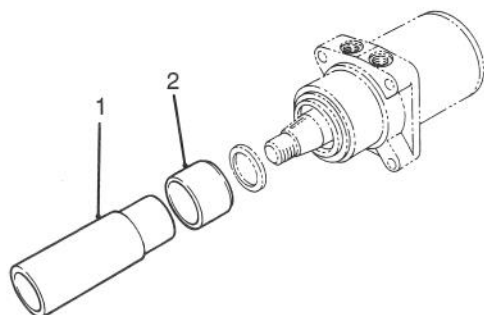

T-0728

Ref. No.	Part No.	Description	No. Used
1		Driver – Seal	1
2		Holder – Seal	1

 
BEDKNIFE SCREW TOOL NO. *TOR510880

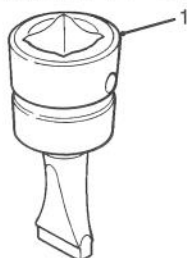

T-0729

Ref. No.	Part No.	Description	No. Used
1		Tool – Bedknife Screw	1

 
HYDRAULIC OIL RESERVOIR PLUG NO. *88-9220

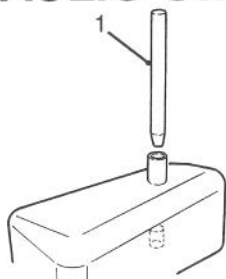

T-1213

Ref. No.	Part No.	Description	No. Used
1		Plug – Reservoir	1

 
GAUGE BAR ASSEMBLY NO. *TOR138199

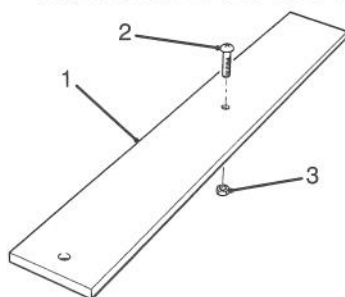

T-1151

Ref. No.	Part No.	Description	No. Used
1	65-8320	Bar – Height-Of-Cut	1
2	32122-2	Screw – Round Hd.	1
3	3219-14	Nut – Hex.	1

 BACKLAPPING BRUSH ASSEMBLY NO. *TOR299100

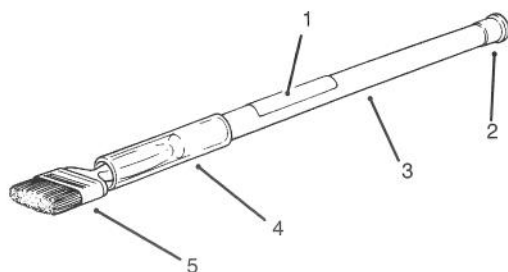


T-0731

Ref. No.	Part No.	Description	No. Used
1	12-9140	Decal	1
2	2410-18	Plug	1
3	29-9080	Handle	1
4	29-9090	Hose – Handle	1
5	36-4310	Brush	1


*Obtain these items directly from OTC 2013 4th St. Owatonna, MN. 55060 1-800-533-0492
(in Minnesota and Canada 1-507-455-7050) Fax. 507-455-7011.

ENGINE KOHLER MODEL NO. M16QS SPEC NO. 711563

 
Air Intake

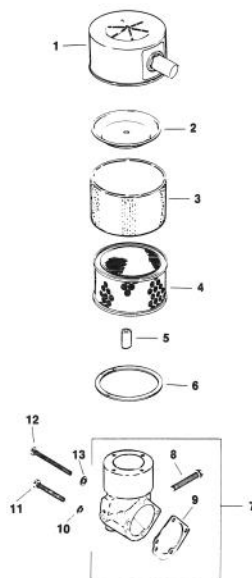


Baffles & Shroud

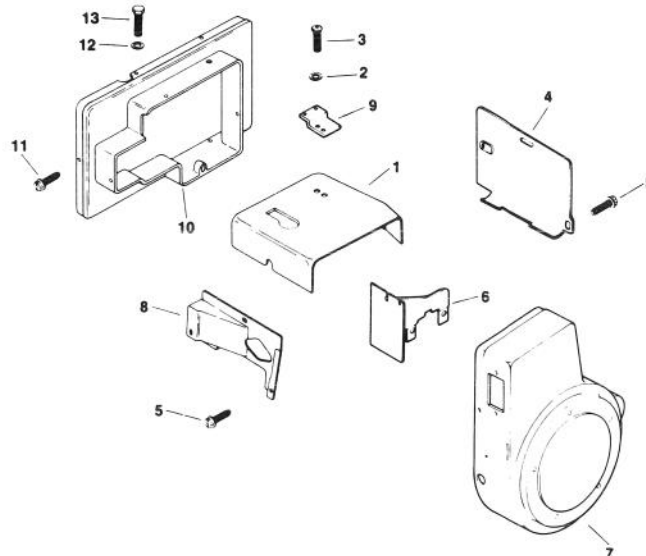 


Breather & Vent

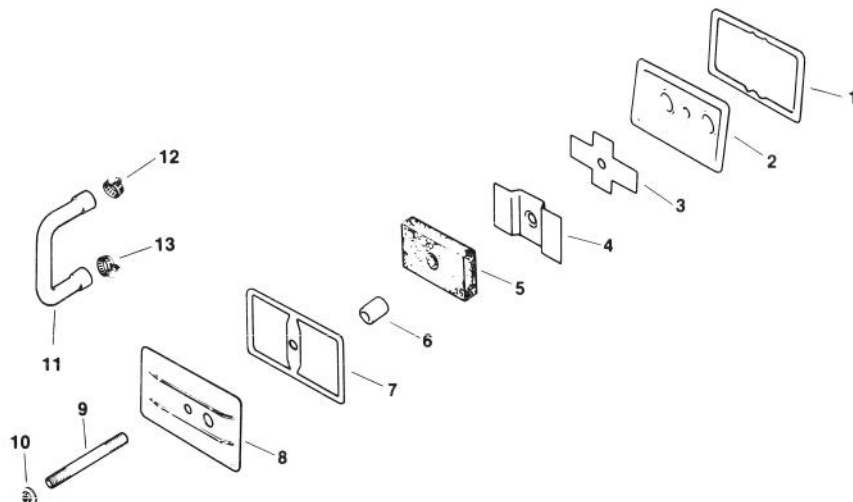 


Camshaft & Valves

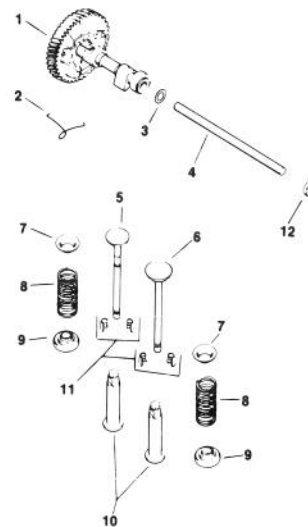 

Carburetor

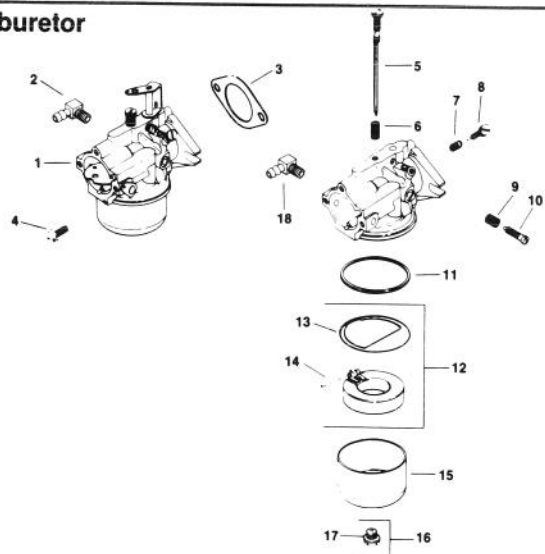 

Crankcase







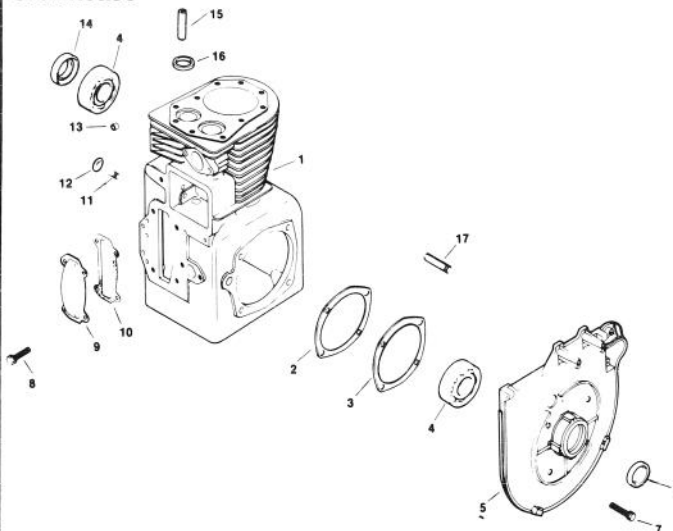 


T-1214

ENGINE KOHLER MODEL NO. M16QS SPEC NO. 711563

Ref. No.	Part No.	Description	No. Used
		Air Intake	
1	52 096 26	Cover – Air Cleaner	1
2	52 082 04	Cover – Element	1
3	45 083 01	Precleaner	1
4	45 083 02	Element – Air Cleaner	1
5	231032	Seal	1
6	47 041 11	Gasket – Base	1
7	48 754 03	Kit – Air Cleaner Elbow (Incl. Ref. #8 & 9)	1
8	52 086 11	Screw – Self Tap	1
9	25 041 06	Gasket – Air Cleaner Elbow	1
10	X-22-9	Washer – I.T.L.W.	2
11	X-50-57	Screw – Pan Hd. Mach.	2
12	X-50-37	Screw – Pan Hd. Mach.	1
13	X-25-79	Washer – Plain	1
		Baffles & Shroud	
1	45 063 08	Baffle – Head	1
2	X-25-53	Washer – Plain	1
3	47 086 08	Screw – Pozidriv T.H.	1
4	47 063 10	Baffle – Cylinder	1
5	52 086 11	Screw – Hex Wash. Hd.	6
6	47 063 07	Baffle – Inner	1
7	47 027 42	Housing – Blower	1
8	47 063 06	Baffle – Side Air	1
9	47 126 23	Bracket – Duct	1
10	47 755 33	Kit – Air Duct	1
11	X-67-64	Screw – Hex Wash. Hd.	3
12	X-25-20	Washer – Plain	1
13	X-154A	Screw – H.C.	1
		Breather & Vent	
1	235048	Gasket – Breather Plate	1
2	235631	Plate – Breather	1
3	235047	Reed – Breather	1
4	235117	Baffle – Breather	1
5	235118	Filter – Breather	1
6	231032	Seal – Breather	1
7	275144	Gasket – Valve Cover	1
8	275839	Cover – Valve	1
9	275220	Stud – Valve Cover	1
10	X-799-1	Palnut	1
11	47 326 02	Hose	1
12	X-426-3	Clamp – Hose	1
13	X-426-9	Clamp – Hose	1
		Camshaft & Valves	
1	47 010 11	Camshaft Assembly	1
2	47 089 01	Spring – Actuating	1
3	275066	Spacer .005	A/R
	275067	Spacer.010	A/R
4	47 380 09	Pin – Camshaft	1
5	237672	Valve – Exhaust	1
6	235582	Valve – Intake	1
7	235011	Retainer – Upper Spring	2
8	235168	Spring – Valve	2
9	52 413 01	Rotator – Valve	2
10	D-235327	Tappet	2
11	41 755 10	Kit – Retainer	2
12	X-702-3	Plug – Cup	1





Ref. No.	Part No.	Description	No. Used
		Carburetor	
1	45 053 76	Carburetor Assembly (Incl. Ref. #5-18)	1
2	25 155 02	Connector – Hose	1
3	47 049 01	Gasket – Carburetor	1
4	X-770-1	Screw – Std. Hd.	2
5	45 103 01	Needle – Main Fuel Adj.	1
6	200383	Spring – Main Fuel	1
7	200380	Spring – Idle Fuel	1
8	275231	Needle – Idle Fuel Adj.	1
9	232555	Spring – Idle Speed	1
10	232556	Screw – Idle Speed Adj.	1
11	200375	Gasket – Bowl	1
12	25 757 03	Kit – Float (Incl. Ref. #13)	1
13	25 041 02	Gasket – Bowl Baffle	1
14	200376	Pin – Float Hinge	1
15	235448	Bowl – Fuel	1
16	47 100 06	Screw – Bowl Retainer (Incl. Ref. #17)	1
17	200372	Gasket – Bowl Screw	1
18	X-391-10	Connector – Hose	1
	25 757 02	Kit – Carburetor Repair	1
	25 757 05	Kit – Choke/Throttle Repair	1
		Crankcase	
1		Block Cylinder Assembly (Incl. Ref. #13,15,16) (USE: Miniblock 4578233)	1
2	47 422 05	Gasket – Shim	A/R
3	47 041 09	Gasket – Bearing Plate	1
4	235376	Bearing – Ball	2
5	47 146 11	Plate – Bearing	1
6	47 032 06	Seal – Front Oil	1
7	X-159-2	Screw – H.C.	4
8	X-132-6	Screw – H.C.	4
9	235026	Cover – Camshaft	1
10	235025	Gasket – Camshaft Cover	1
11	235125-5	Shaft – Governor Gear	1
12	X-230-11	Plug – Expansion	1
13	234866	Bearing – Gov. Cross Shaft	1
14	47 032 07	Seal – Rear Oil	1
15	230265	Insert – Valve	2
16	235007-5	Guide – Valve	2
17	236559	Shaft – Balance Gear Stub	3

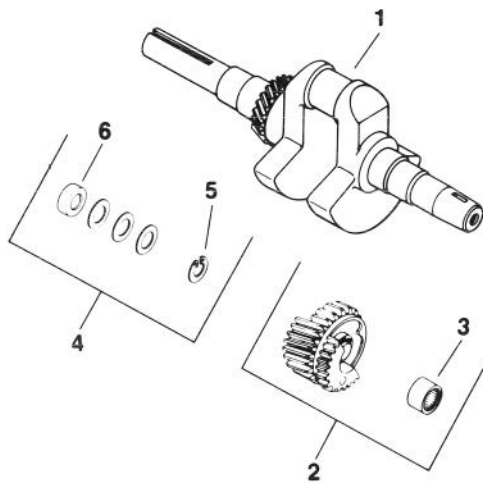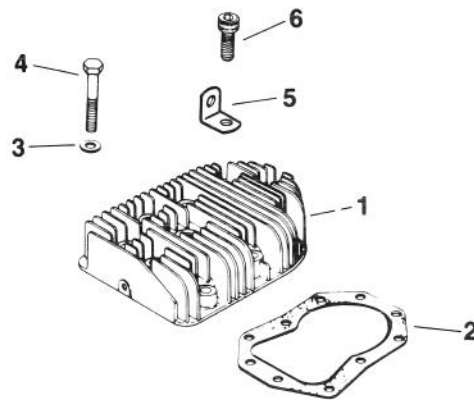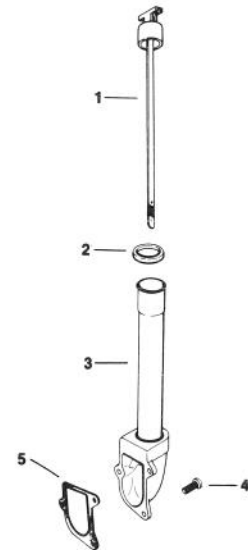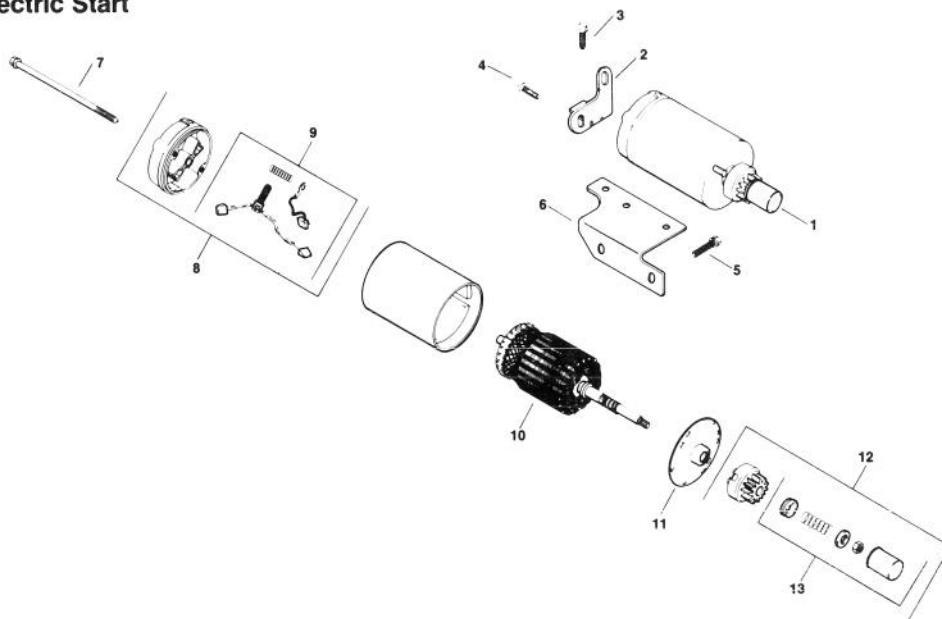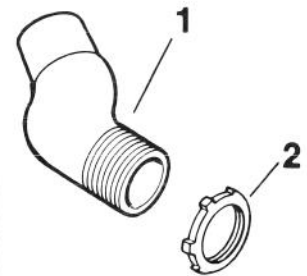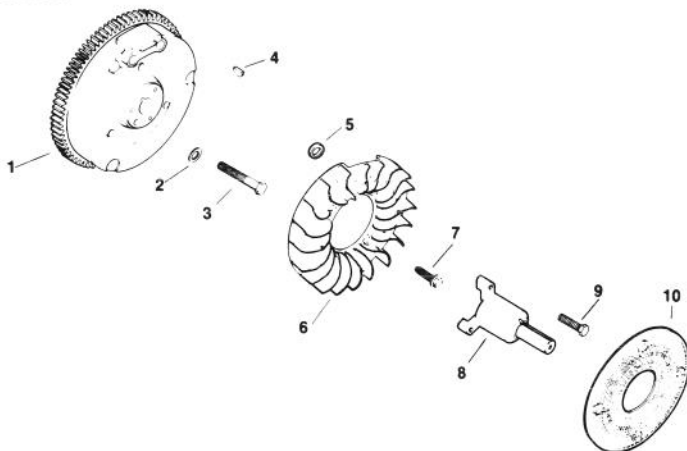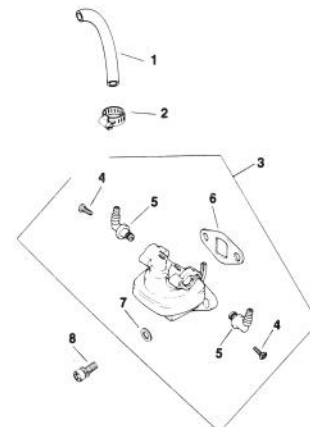       ENGINE KOHLER MODEL NO. M16QS SPEC NO. 711563**Crankshaft****Cylinder Head****Dipstick****Electric Start****Exhaust****Flywheel****Fuel Pump**

ENGINE KOHLER MODEL NO. M16QS SPEC NO. 711563

Ref. No.	Part No.	Description	No. Used
		Crankshaft	
1	45 014 86	Crankshaft	
2	45 043 03	Gear Assembly (Incl. Ref. #3)	3
3	47 030 01	Bearing – Needle	3
4	47 755 01	Kit – Spacer (Incl. Ref. #5 & 6)	1
5	X-269-34	Retainer	3
6	237769	Spacer	3
		Cylinder Head	
1	45 015 09	Head – Cylinder	1
2	45 041 17	Gasket – Head	1
3	270889	Washer – Plain	10
4	270158	Screw – H.C.	9
5	47 445 02	Strap – Lifting	1
6	47 086 17	Screw – Hex Socket Hd.	1
		Dipstick	
1	47 038 27	Dipstick	1
2	41 153 01	O-Ring	1
3	47 029 06	Adapter – Oil Fill	1
4	X-131-2	Screw – F.H.	3
5	237064	Gasket	1
		Electric Start	
1	41 098 04	Starter Assembly (Incl. Ref. #7-13)	1
2	45 126 17	Brace – Tail	1
3	X-67-83	Screw – Hex Wash. Hd.	1
4	X-67-62	Screw – Hex Wash. Hd.	1
5	X-159-2	Screw – H.C.	2
6	47 126 29	Bracket – Solenoid	1
7	41 086 19	Bolt – Thru	2
8	41 227 04	Cap – Commutator End (Incl. Ref. #9)	1
9	52 755 15	Kit – Brush	1
10	45 170 02	Armature	1
11	41 227 03	Cap – Drive End	1
12	47 755 07	Kit – Drive (Incl. Ref. #13)	1
13	47 755 13	Kit – Drive Parts	1
	25 450 03	Tag – Caution	1
	52 357 01	Lubricant – Starter	

Ref. No.	Part No.	Description	No. Used
		Exhaust	
1	45 054 04	Elbow – Exhaust	1
2	45 100 01	Nut – Lock	1
		Flywheel	
1	47 025 53	Flywheel	1
2	52 468 15	Washer – Plain	1
3	25 086 24	Screw – Hex Mach.	1
4	X-46-3	Key – Woodruff	1
5	25 112 04	Spacer	4
6	25 157 01	Fan	1
7	25 086 21	Screw – Hex Wash. Hd.	4
8	235954	Shaft – Front Drive	1
9	X-159-2	Screw – H.C.	4
10	25 162 03	Screen – Grass	1
		Fuel Pump	
1	25 353 01	Line – Fuel	1
2	X-426-9	Clamp – Hose	2
3	47 559 08	Pump – Fuel Assembly (Incl. Ref. #4-7)	1
4	25 086 35	Screw – Tapping	2
5	25 294 01	Fitting & O-Ring – 90°	2
6	25 041 05	Gasket – Fuel Pump	1
7	X-25-63	Washer – Plain	2
8	X-174-2	Screw – F.H.M.	2

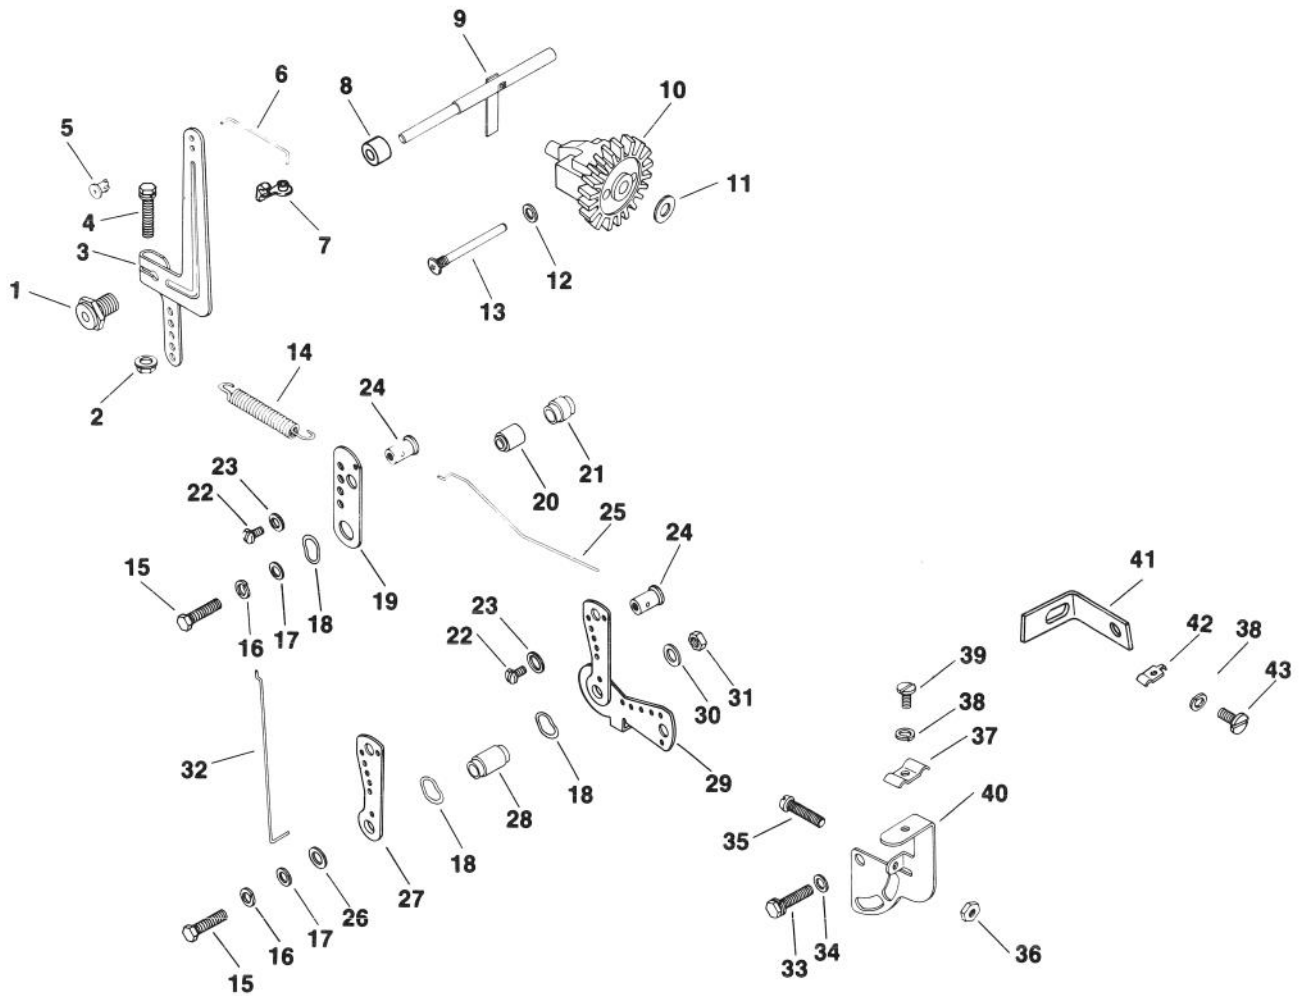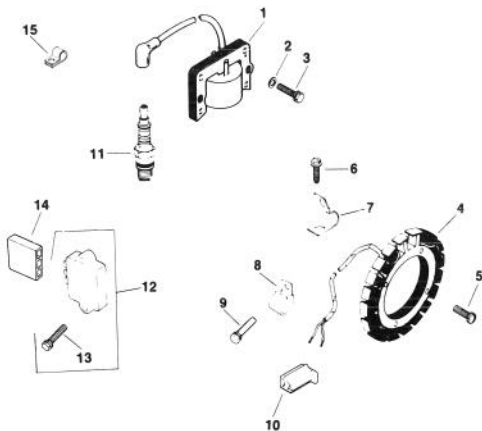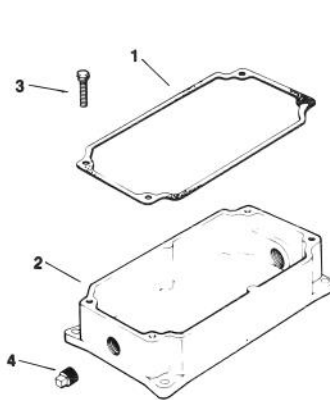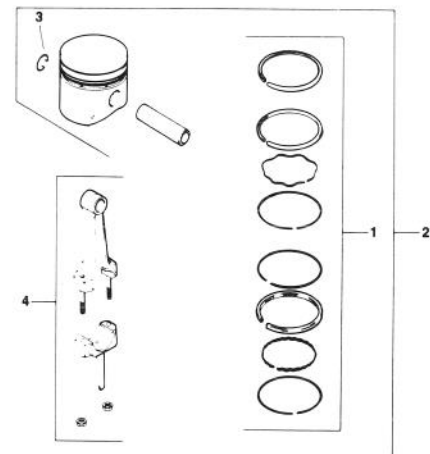    ENGINE KOHLER MODEL NO. M16QS SPEC NO. 711563**Governor****Ignition****Oil Pan****Piston & Rod**

ENGINE KOHLER MODEL NO. M16QS SPEC NO. 711563

Ref. No.	Part No.	Description	No. Used
		Governor	
1	235476	Bushing – Governor	1
2	X-799-1	Palnut	1
3	47 090 20	Lever – Governor	1
4	X-776-1	Screw – H.C.	1
5	25 158 09	Bushing – Linkage Rtng.	1
6	47 079 05	Linkage – Governor	1
7	47 158 07	Bushing – Linkage Rtng.	1
8	X-400-80	Spacer	1
9	A-235256-S	Kit – Governor Cross Shaft	1
10	A-235743-S	Kit – Governor Gear	1
11	237022	Washer–Thrust	1
12	25 468 01	Washer – Plain	1
13	231355	Pin – Governor Stop	1
14	235496	Spring – Governor	1
15	X-5-26	Screw – H.C.	2
16	X-20-1	Washer – Lock	2
17	X-25-63	Washer – Plain	2
18	275690	Washer – Wave	3
19	235086	Bracket – Speed Control	1
20	235085	Spacer	1
21	X-384-2	Spacer	1
22	X-51-8	Screw – Sltd. Pan Hd.	1
23	X-25-102	Washer – Plain	1
24	48 755 10	Kit – Clamp (Incl. Ref. #22 & 23)	1
25	47 079 08	Linkage – Throttle	1
26	X-25-82	Washer – Plain	1
27	47 090 05	Lever – Choke	1
28	47 112 19	Spacer	1
29	47 090 09	Lever – Throttle	1
30	X-25-95	Washer – Plain	1
31	X-81-1	Nut – Hex	1
32	47 079 01	Linkage – Choke	1
33	X-132-6	Screw – H.C.	1
34	X-25-72	Washer – Plain	1
35	232556	Screw	1
36	X-72-4	Nut – Hex	1
37	1223701	Clamp – Cable	1
38	X-19-1	Washer–Lock	2
39	X-67-38	Screw	1
40	47 126 13	Bracket – Choke	1
41	47 126 36	Bracket – Choke	1
†42	81-1690	Clamp – Cable	1
43	X-15-5	Screw – F.H.M.	1

Ref. No.	Part No.	Description	No. Used
		Ignition	
1	47 584 02	Module – Ignition	
2	X-25-79	Washer – Plain	2
3	X-156-1	Screw – H.C.	2
4	237878	Kit – Stator	1
5	X-67-51	Screw – Hex. Wash. Hd.	4
6	X-67-59	Screw – Hex. Wash. Hd.	1
7	X-728-1	Clip (Mounts to Bearing Plate)	1
8	235173	Clip (Mounts to Cylinder Block)	1
9	X-132-6	Screw	1
10	41 155 03	Connector – Male	1
11	235041-5	Spark Plug RH-10	1
12	25 755 03	Kit – Rectifier–Regulator (Incl. Ref. #13)	1
13	X-132-5	Screw – H.C.	2
14	236602	Connector – Female	1
15	210281	Clip – Hi-Tension Lead	1
	47 518 38	Lead – White, Module to Connector (23"–18 g. – insulated push on tab – uninsulated push on tab terminals)	1
	47 518 46	Lead – Violet, Rectifier Regulator to Connector (12.5" – 14-gauge – uninsulated push on tab terminals)	1
		Oil Pan	
1	235057	Gasket – Oil Pan	1
2	47 199 10	Pan–Oil	1
3	X-159-3	Screw – H.C.	4
4	X-75-6	Plug – Sq. Hd. Solid	2
		Piston & Rod	
1	45 108 10	Ring Set (Std. & .003)	1
	45 108 11	Ring Set(.010)	1
	45 108 12	Ring Set (.020)	1
	45 108 13	Ring Set (.030)	1
2	45 874 11	Piston w/Ring Set (Std.)	1
	45 874 12	Piston w/Ring Set (.003)	1
	45 874 13	Piston w/Ring Set (.010)	1
	45 874 14	Piston w/Ring Set (.020)	1
	45 874 15	Piston w/Ring Set (.030)	1
3	47 018 01	Retainer – Piston Pin	2
4	45 067 24	Connecting Rod (Std.)	1
	45 067 25	Connecting Rod (.010)	
	45 782 33	Miniblock	1
	47 004 02	Gasket Set w/o Seals	1
	45 755 12	Gasket Set w/Seals	1

†Available from your local TORO Distributor

TORO PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3-0348	Bushing - Sleeve	30 7 4	28-8080	Boot - Battery Terminal	15 6 1
3-0348	Bushing - Sleeve	31 17 2	29-6120	Plate - Pump	20 29 1
3-6498	Washer - Thrust	3 17 A/R	29-6150	Spring - Leaf	20 26 1
5-0743	Spring - Extension	31 1 1	29-6170	Spring - Extended Leaf	20 27 1
5-0743	Spring - Extension	30 17 2	29-9080	Handle	33 3 1
5-2653	Cable Pulley Assembly	26 8 1	29-9090	Hose - Handle	33 4 1
5-2655	Keeper - Cable	26 7 1	36-4310	Brush	33 5 1
5-2656	Keeper - Cable	26 30 1	37-9590	Spring	5 21 1
5-4723	Spring - Compression	10 31 1	38-7820	Bearing - Idler	25 3 2
5-7280	Key - Square (Short)	25 16 3	38-8000	Filter - Fuel	9 5 1
5-7290	Spring - Extension	21 6 1	42-2040	Screw - Hex. Hd. Self Tap	20 23 3
10-4850	Spring - Compression	2 44 2	43-1950	Valve - Hydraulic	28 19 1
10-6821	Brake Drum Assembly	21 18 2	43-8600	Spring - Compression	5 29 1
10-6870	Hub - Wheel	21 19 2	43-8610	Guide - Spring & Ball Seat	5 30 1
10-6870	Hub - Wheel	4 22 1	43-8620	Guide - Switch Pin	5 25 1
10-7070	Key - Square	12 5 1	43-8860	Plunger - Switch	5 26 1
10-7130	Wire - Battery/Solenoid	11 3 1	43-8870	Boot - Switch	5 20 1
10-8120	Bolt - Battery	15 8 2	44-2212	Lamp - Pilot	10 3 1
11-0590	Screw - Thread Forming	26 17 4	44-8310	Ring - Retaining	13 3 2
11-0590	Screw - Cap Hex. Hd.	15 20 2	44-8320	Spring - Compression	13 10 3
12-3270	Screw - Cap Hex. Hd.	12 30 4	44-8330	Spacer - Pulley Bearing	13 6 1
12-9140	Decal	33 1 1	44-8350	Field Assembly	13 1 1
13-1279	Idler Pulley Assembly	25 * 1	44-8360	Field Coil, Rotor & Bearing	13 4 1
16-1089	Lift Arm Assembly	31 29 1	46-8400	Bearing - Needle	18 42 1
16-1159	Lift Arm Assembly L.H.	30 8 1	46-8810	Stop - Spring	20 4 1
16-1169	Lift Arm Assembly R.H.	30 * 1	47-2980	Hose - Fuel	9 3 1
18-2970	Clamp - R	31 21 1	47-2988	Hose - Fuel	9 7 1
21-0141	Rod End Assembly	3 15 1	48-1800	Cylinder Block Kit	18 5 1
21-0151	Rod End Assembly	4 30 1	49-2040	Screw - Tapping	12 13 5
22-8330	Plug	29 1 2	49-8480	Shaft - Trunion	18 12 1
22-8340	Spring	29 3 2	49-8510	Kit - Charge Relief	19 * 1
22-8350	Ball	29 4 2	49-8520	Kit - Implement Relief	19 * 1
22-8360	Pin - Cam	29 6 2	51-3150	Shim - Spring Arm	20 28 1
22-8370	Seat - Check Valve	29 5 2	54-0110	Filter - Oil	17 28 1
22-8380	Retainer - Spring	29 10 2	55-3570	Cap - Fuel	9 11 1
22-8410	Spring	29 11 1	55-4300	Decal - Warning	30 9 2
22-8420	Spool	29 8 1	55-4300	Decal - Warning	31 24 1
22-8480	Snap Ring - Spool	29 13 1	56-2230	Hose - Fuel	9 9 1
22-8490	Snap Ring	29 14 1	56-7976	Clamp - Hose	4 6 2
22-8500	O-Ring	29 9 2	56-7976	Clamp - Tube	23 11 2
23-0660	Switch - Key	10 19 1	56-7982	Sleeve - Protective	16 * 1
23-3030	Spacer	29 12 1	56-9510	Bushing Assembly	32 10 2
23-8910	Fitting - 90 Hose Elbow	17 26 2	56-9520	Bushing - Nylon	32 16 1
25-2380	Plate - Thrust	18 39 1	57-3210	Screw - Hex. Washer Hd.	1 32 2
25-2390	Plate - Valve	18 40 1	59-9810	Module - Ignition	12 16 1
25-2400	Gasket	18 43 1	61-0020	Shroud - Muffler	12 31 1
25-2430	Pin - Straight	18 41 1	61-0030	Tank - Fuel	9 10 1
25-2450	Swash/Plate	18 37 1	61-0070	Pulley - Poly V	25 28 1
25-2460	Plug	18 14 2	61-0100	Tank - Hydraulic	15 24 1
25-2470	Kit - Shim Pack	18 16 2	61-0140	Pulley - Jackshaft	25 22 3
25-2480	Spring - Charge Relief	18 32 1	61-2070	Rod - Steering	3 13 1
25-2490	Ball - Check Valve	18 47 2	61-2070	Rod - Steering	4 28 1
25-2510	Washer	18 11 2	61-2090	Steering Column Assembly	3 8 1
25-2530	Pin - Straight	18 26 1	61-2120	Bracket - Air Cleaner	12 6 1
25-2570	Spring - Relief Valve	18 17 1	61-2220	Spacer	9 20 4
25-2630	Ring	18 3 1	61-2230	Plate - Pump Mount	17 13 1
25-2640	Spring - Check Valve	18 48 2	61-2350	Mount - Bearing	25 27 2
25-2650	Plug - Check Valve	18 49 2	61-2430	Hub - Lift	26 45 1
25-2680	Gerotor Assembly	18 25 1	61-2490	Hose - Hydraulic	26 42 1
25-3180	Kit - Check Valve	19 * 1	61-2490	Hose Assembly	14 2 1
25-3210	Seal - Lip	18 10 2	61-2500	Hose - Hydraulic	26 41 1
26-3790	Nut - Lock	4 21 1	61-2500	Hose Assembly	14 1 1
26-3790	Nut - Lock	21 23 2	61-2510	Hose Assembly	14 15 1
27-9870	Pin - Seat Spring	5 28 1	61-2510	Hydraulic Hose Assy. (Low)	28 20 1
28-0120	Bracket - Hinge L.H.	1 19 1	61-2520	Hose Assembly	14 13 1
28-0130	Bracket - Hinge R.H.	2 42 1	61-2520	Hydraulic Hose Assy. (Up)	28 12 1
28-3670	Shaft - Trunion	18 28 1	61-2540	Hose - Hydraulic	17 8 1
28-4210	Solenoid - Starter	15 14 1	61-2540	Hose Assembly	14 17 1
28-6180	Pin	5 47 1	61-2550	Hose - Hydraulic	17 27 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3317-263

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
61-2550	Hose Assembly	14 16 1	66-0120	Knob	10 2 2
61-2610	Arm - Traction	20 14 1	66-5291	Hydraulic Motor Assembly	4 24 1
61-2660	Wire - Solenoid/Starter	11 1 1	66-5291	Hydraulic Motor Assembly	21 30 2
61-2670	Wire - Ground	11 2 1	66-5340	Grille - Front	2 38 1
61-2680	Weight - Standard	9 14 1	66-6110	IGR Assembly	24 5 1
61-2710	Fitting - 90° Hose Elbow	17 6 1	66-6120	Pad-Foot	1 27 1
61-2720	Bracket - Lever	28 13 1	66-6840	Decal - Hot	15 25 1
61-2790	Screen - Filler	15 27 1	66-6840	Decal - Hot	12 47 1
61-2940	Lever-Pump	20 31 1	67-7490	Key - Square (Long)	25 18 1
61-3070	Tube - Hyd. L.H. (Rear)	17 25 1	67-7750	Pulley - Idler	25 4 1
61-3070	Tube Assembly	14 19 1	67-7870	Idler Bracket W.A.	25 11 1
61-3080	Tube - Hyd. L.H. (Front)	17 24 1	67-7890	Belt Tensioner W.A.	25 6 1
61-3080	Tube Assembly	14 20 1	67-7911	Strap - Idler Bracket	25 2 1
61-3210	Cable Pulley Assembly	26 22 3	67-8020	Shaft - Pump	18 6 1
61-3230	Spacer	26 24 3	67-8030	Plug Assembly	18 19 2
61-3240	Keeper - Cable	26 21 1	67-8040	O-Ring	18 20 2
61-3260	Cable - Lift	26 19 1	67-8050	Bearing - Needle	18 22 1
61-3270	Spring - Compression	30 6 2	67-8060	Seal - Lip	18 23 1
61-3310	Plate - Toro Logo	9 13 1	69-9760	Cover - Plate	23 10 1
61-3320	Pulley- Pump	17 17 1	69-9760	Plate - Cover	4 4 1
61-3340	Bushing - Taper	12 46 1	70-7080	Spacer - Clutch	12 18 1
61-3350	Bushing - Taper	17 19 1	70-8020	Clutch Assembly	12 21 1
61-3390	Belt - Poly-V	12 25 1	70-8030	Key	12 36 1
61-3470	Hose	12 11 1	70-8040	Washer - Flat	12 22 1
61-3550	Valve - Ball	9 8 1	70-8150	Plate - Valve	24 7 1
61-3770	Head - Filter	17 29 1	70-9840	Shoe - Brake	21 16 4
61-3830	Chain - Lift	26 33 2	70-9850	Clip - Retaining	21 35 2
61-3840	Decal - Reelmaster 216	5 16 2	70-9860	Pin - Pivot Brake	21 25 2
61-3880	Panel - Access R.H.	5 52 1	70-9870	Plate - Brake	21 27 2
61-3990	Parking Brake Assembly	21 5 1	70-9880	Spring - Extension	21 17 4
61-7250	Boot	30 5 4	71-0710	Hydraulic Tube Assembly	7 3 1
62-4290	O-Ring	18 44 2	71-0710	Tube Assembly	14 12 1
62-5140	Weight - 8 Blade	9 1 1	71-0770	Fitting	28 7 1
62-5250	Armature & Pulley Assembly	13 5 1	71-0840	Hydraulic Tube Assembly	7 6 1
62-5330	Bracket - Side Panel	5 7 1	71-0840	Tube Assembly	14 11 1
62-5400	Hood Assembly	1 5 1	71-0850	Tube Assembly	14 7 1
62-7170	Spacer	5 39 1	71-0850	Tube Assembly	23 8 1
62-7190	Spacer	1 30 1	71-0860	Tube Assembly	28 9 1
62-7240	Cover - Spring	31 2 1	71-0860	Tube Assembly	14 25 1
62-7250	Boot	31 18 2	71-0870	Tee - Tube Assembly	23 1 2
62-7300	Chain	31 3 1	71-0870	Tube Assembly	14 3 2
62-7320	Stop - Traction Pedal	1 9 1	71-0880	Tube Assembly	23 2 1
62-7350	Slide - Pedal Stop	1 11 2	71-0880	Tube Assembly	14 5 1
62-7400	Decal - Toro Logo	1 4 1	71-0910	Tube Assembly	14 4 1
63-4880	Hose Assembly	14 14 1	71-0910	Tube Assembly	23 12 1
63-4880	Hydraulic Hose Assembly	16 18 1	71-1370	Spring - Compression	26 35 1
63-4890	Hose Assembly	14 9 1	71-1380	Pin - Spring	26 34 1
63-4890	Hydraulic Hose Assembly	16 15 1	71-1500	Brake Assembly	22 * 2
63-5080	Pressure Sequence Valve	16 12 1	71-2960	Valve - Flow Control	23 6 1
63-5400	Exchanger - Heat	16 30 1	72-4150	Shield - Heat	1 24 1
63-8360	Key	10 9 1	72-4190	Pin - Cylinder Guide	26 12 1
63-8770	Fitting - 45° Orifice	16 11 1	72-4320	Switch - Neutral	5 31 1
63-8790	Cartridge Valve Assembly	16 10 1	72-4350	Panel - Access L.H.	5 19 1
63-8800	Seal Kit	16 * 1	72-4360	Footrest - L.H.	1 29 1
63-8940	Shield - Cooler	16 17 1	72-4790	Clamp - Battery	15 2 1
65-4500	Seal - Snap Ring	24 14 1	72-9540	Bracket - Heat Shield	1 23 1
65-4550	Valve - Check Ball	24 6 2	74-0720	Tube - Manual	5 45 1
65-4560	Plug - Hex (Hollow)	24 3 1	74-9100	Pad - Pedal Forward	20 7 1
65-4570	Seal - Square Ring	24 4 2	74-9110	Pad - Pedal Reverse	20 11 1
65-4580	Screw - Cap Hex Hd.	24 1 8	75-6820	Meter - Hour	10 1 1
65-4590	Ring - Snap	24 21 1	75-7730	Spacer	4 2 1
65-4600	Washer - Thrust	24 19 2	75-9260	Support - Hydraulic Tank	5 2 1
65-4610	Bearing - Thrust	24 20 1	75-9310	Latch - Hood	1 6 1
65-4620	Seal - O-Ring	24 12 1	75-9320	Bushing - Hood Latch	10 33 1
65-4640	Key - Square	21 10 2	75-9330	Pin - Hood Latch	10 30 1
65-4640	Key - Woodruff	4 15 1	76-0020	Hydraulic Cylinder Assembly	26 37 1
65-4670	Body & Bearing Assembly	24 9 1	76-0030	Repair Kit	27 * 1
65-4680	Cover & Bearing Assembly	24 2 1	76-0040	Piston	27 8 1
65-8320	Bar - Height-Of-Cut	33 1 1	76-0050	Ring - Retaining	27 12 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
76-0070	Bracket - Interlock Module	12 15 1	83-9810	Bushing - Flange	25 10 1
76-0080	Collar - Bearing	13 7 1	84-1650	Decal - Brake	1 28 1
76-0090	Head	27 3 1	84-1830	Cap - Battery Vent	15 32 1
76-0130	Hood Stop Chain Assembly	1 22 1	84-1840	Grille - Muffler	12 37
76-0190	Cap - Oil	15 31 1	84-1990	Rod - Adjusting	21 32 2
76-0200	Oil Cap Assembly	15 * 1	84-2000	Bracket - Brake	21 29 2
76-0220	Foam - Oil Filter	15 30 1	84-8440	Bushing - Flange	26 11 2
76-0240	Dipstick Assembly	15 29 1	85-5160	Lever - Valve	28 2 1
76-0300	Housing - Bushing	32 12 1	85-5230	Bracket - Seat Pivot	6 53 2
76-0350	Housing - Bushing	32 2 1	85-5330	Plate - Seat	5 14 1
76-0360	Cup - Retainer	32 6 1	85-5340	Tube - Pivot	5 48 2
76-0370	Bolt - Shoulder	31 12 2	85-6540	Stud - Drive	4 16 4
76-0370	Bolt - Shoulder	30 23 2	85-6540	Stud - Drive	21 26 8
76-0390	Spacer	32 15 1	88-8220	Valve - By-Pass	18 4 1
76-0410	Spring - Compression	32 7 1	88-9550	Decal - Service Information	5 34 1
76-0420	Rod - Pump Control	20 9 1	92-1157	Shaft	24 10 1
76-0440	Battery Support W.A.	15 10 1	92-1810	Arm - Torque	12 19 1
76-0500	Cover - Reservoir Support	5 41 1	92-1812	Shaft - Lift Pivot	30 25 2
76-1420	Wheel - Steering	3 10 1	92-1812	Shaft - Lift Pivot	31 31 1
76-2170	Pedal - Traction	20 8 1	92-1813	Spacer - Torque Arm	12 20 1
76-2200	Footrest - Traction	1 12 1	92-1814	Spacer - Torque Arm	12 51 1
76-2220	Adjustment Yoke Assembly	17 36 1	92-1815	Rod - Pivot	30 13 2
76-2260	Pad - Footrest	1 13 1	92-1815	Rod - Pivot	31 26 1
76-2320	Shaft	27 4 1	92-1818	Arm - Tension	31 7 1
76-2330	Nut - Lock	27 5 1	92-1818	Arm - Tension	30 29 2
76-2350	Seal/Retainer Assembly	24 * 1	92-1819	Pulley - Engine	12 45 1
76-2360	Body Seal Kit	24 * 1	92-1820	Frame Assembly	3 19 1
76-2430	Scraper - Pulley	30 2 2	92-1821	V-Belt - Pump	17 16 1
76-2460	Bearing Assembly	25 25 2	92-1822	Shackle	30 26 2
76-2520	Hose Assembly	14 6 2	92-1822	Shackle	31 34 1
76-2520	Hydraulic Hose	17 1 2	92-1840	Bracket - Cylinder & Cooler	26 1 1
76-2530	Hose Assembly	14 8 1	92-1841	Nut - Hood Pivot	2 41 2
76-2530	Hydraulic Hose Assembly	16 1 1	92-2406	Hose Assembly	14 24 1
76-2540	Hose Assembly	14 22 1	92-2406	Hydraulic Hose Assembly	16 32 1
76-2540	Hose Assembly - Hyd.	17 38 1	92-2407	Hose Assembly	14 18 1
76-2550	Hose Assembly	14 21 1	92-2407	Hydraulic Hose Assembly	16 28 1
76-2550	Hose Assembly	17 44 1	92-2408	Hose - Hydraulic	17 12 1
77-0480	Screw - Traction Stop	2 45 1	92-2408	Hose Assembly	14 26 1
80-3940	Clip - Rosebud	5 50 1	92-3162	Bushing - Flange	3 4 4
80-4080	Hydraulic Hose Assembly	4 36 1	92-3165	Steering Shaft & Gear	3 5 1
80-4080	Tube Assembly	14 10 1	92-3172	Gear - Steering	3 16 1
80-4090	Hose - Hydraulic	7 5 2	92-3179	Decal - Control	7 10 1
80-4090	Hose - Hydraulic	4 14 2	92-3180	Panel	5 42 1
80-4090	Hose Assembly	14 23 2	92-3191	Diode - Circuit Board	11 4 1
80-4110	Control - Throttle	10 23 1	92-3194	Switch - Clutch	10 20 1
80-4120	Control - Choke	10 22 1	92-3195	Knob	10 26 1
80-4240	Footrest R.H.	1 14 1	92-3196	2 Position Valve Assembly	7 2 1
82-4640	Battery - 12 Volt	15 7 1	92-7904	Cap - Valve	8 1 1
83-7260	Cone - Relief Valve	18 18 2	92-7905	Lift Switch Assembly	26 4 1
83-7270	Fork - Caster	4 10 1	92-7905	Neutral Switch Assembly	20 5 1
83-7820	Shaft - Drive	25 20 1	92-7906	Switch - Lift	26 49 1
83-7900	Belt Tensioner Assembly	31 11 2	92-7906	Switch - Neutral	20 34 1
83-7900	Belt Tensioner Assembly	30 24 2	92-7907	Plug Assembly	8 2 1
83-7910	Rod	32 8 1	92-7908	Washer - Valve	8 4 1
83-7930	Yoke	32 3 1	92-7909	Stop - Valve	8 13 1
83-8860	Shield - Front R.H.	2 35 1	92-7911	Boot	8 10 1
83-9130	Keeper - Cable	26 48 1	92-7912	Retainer - Boot	8 14 1
83-9250	Lever - Brake	21 36 2	92-7913	Seal Repair Kit	8 * 1
83-9270	Pivot - Brake L.H.	21 40 1	92-7940	Housing - Charge Pump	18 21 1
83-9310	Pivot - Brake R.H.	21 * 1	92-7949	Muffler	12 26 1
83-9330	Shaft - Brake	21 41 1	92-8776	Plug Assembly	19 52 2
83-9340	Shield - Grass	21 13 2	92-8777	Seal - O-Ring	18 51 2
83-9350	Rod - Parking Brake	21 1 1	92-9023	Hydraulic Pump Assembly	18 8 1
83-9460	Tube - Hydraulic	7 13 1	92-9023	Pump Assembly	17 5 1
83-9500	Tube - Hydraulic	7 12 1	93-0166	Tire	4 17 1
83-9550	Decal - Warning	5 44 1	93-4410	Fuse - 25 Amp. Slo-Blo	10 27 1
83-9690	Spring - Compression	25 9 1	93-4423	Wire Harness Assembly	11 5 1
83-9730	Step - Foot	5 18 1	93-4424	Decal - Instrument Panel	10 12 1
83-9800	Shield - Front Grass L.H.	1 33 1	93-4426	Panel W.A. - Instrument	5 10 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3317-263

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
217-60	Rim	21 21 2	2412-113	Clamp-R	28 10 1
218-461	Nut	10 10 1	2412-114	Clamp	4 34 1
218-461	Nut - Jam	5 22 2	2412-133	Clamp - R	5 46 2
218-489	Fuse Holder Assembly	10 14 1	251-8	Bearing - Ball	18 35 1
218-535	Nut	10 18 1	251-77	Collar - Locking	25 23 2
218-536	Washer - Lock	10 17 1	251-259	Bearing - Ball	20 32 1
218-562	Lens	10 5 1	251-291	Bearing - Pulley	13 8 2
219-18	Bulb- Light (GE #1893)	10 4 1	251-292	Bearing - Field	13 2 1
2112-9	Clamp - Muffler	12 27 1	251-321	Bearing - Ball	21 45 4
231-127	Tire	21 20 2	251-337	Bearing	25 29 2
232-27	Valve - Stem	21 24 2	252-82	Bearing - Needle	18 9 2
232-47	Valve - Stem	4 20 1	256-1	Bushing - Sleeve	26 23 3
233-17	Knob	10 34 1	256-2	Bushing - Sleeve	26 44 1
233-37	Knob	28 1 1	256-27	Bushing - Sleeve	3 6 2
233-46	Knob	8 11 1	256-115	Washer - Thrust	30 12 2
237-7	Seal - O-Ring	5 24 1	256-115	Washer - Thrust	31 25 1
237-21	O-Ring	28 16 2	256-173	Bushing - Sleeve	32 11 1
237-21	Seal - O-Ring	22 47 3	256-245	Bushing - Flange	3 18 2
237-22	O-Ring	18 2 1	256-247	Bushing - Flange	3 1 2
237-22	O-Ring	28 8 2	256-287	Bushing - Flange	3 2 2
237-22	Seal - O-Ring	8 3 1	256-321	Bushing - Flange	3 20 4
237-22	Seal - O-Ring	7 4 2	2710-16	Link - Chain	28 5 1
237-22	Seal - O-Ring	16 6 5	282-2	Clevis	21 34 2
237-22	Seal - O-Ring	4 13 2	282-4	Clevis	31 5 1
237-22	Seal - O-Ring	26 40 2	282-4	Clevis	26 31 4
237-30	O-Ring	17 2 12	283-1	Pin - Clevis	31 20 1
237-30	O-Ring	23 3 4	283-1	Pin - Clevis	21 37 2
237-30	O-Ring	28 11 1	283-2	Pin - Yoke	17 47 1
237-30	O-Ring	17 40 3	283-6	Pin - Clevis	31 6 1
237-30	Seal - O-Ring	16 2 8	283-6	Pin - Clevis	26 14 4
237-30	Seal - O-Ring	21 7 4	283-40	Pin - Clevis	30 3 2
237-30	Seal - O-Ring	7 7 4	283-40	Pin - Clevis	31 14 2
237-30	Seal - O-Ring	5 32 1	283-42	Pin - Clevis	26 9 1
237-37	Bumper - Rubber	5 17 2	283-55	Pin - Clevis	32 5 1
237-42	O-Ring	29 2 2	283-75	Pin - Clevis	30 20 4
237-42	O-Ring	23 5 2	283-75	Pin - Clevis	31 32 2
237-42	O-Ring	28 6 1	283-78	Pin - Clevis	26 36 1
237-42	Seal - O-Ring	26 38 2	283-79	Pin - Clevis	26 29 1
237-71	O-Ring	15 28 1	285-17	Plug - Pipe	18 1 2
237-78	O-Ring	28 14 2	302-5	Fitting - Grease	3 3 4
237-78	Seal - O-Ring	4 38 1	302-5	Fitting - Grease	4 3 1
237-78	Seal - O-Ring	22 46 2	302-5	Fitting - Grease	21 46 2
237-79	O-Ring	17 4 2	302-5	Fitting - Grease	32 14 1
237-79	O-Ring	28 22 1	302-5	Fitting - Grease	25 26 2
237-79	Seal - O-Ring	7 9 3	302-60	Fitting - Grease	30 16 2
237-80	O-Ring	17 9 1	302-60	Fitting - Grease	31 30 1
237-80	Seal - O-Ring	21 9 4	321-2	Screw	1 26 2
237-80	Seal - O-Ring	4 11 2	321-5	Screw - Cap Hex. Hd.	21 15 8
237-86	O-Ring	18 15 4	321-5	Screw - Cap Hex. Hd.	1 20 1
237-88	Grommet	5 51 1	321-6	Screw - Cap Hex. Hd.	20 30 2
237-95	O-Ring	18 27 1	321-8	Screw - Cap Hex. Hd.	4 35 1
237-117	O-Ring	17 30 2	321-11	Screw - Cap Hex. Hd.	5 11 2
237-125	Grommet	9 2 2	321-11	Screw - Cap Hex. Hd.	16 13 2
237-150	Seal - O-Ring	16 5 2	321-13	Screw - Cap Hex. Hd.	17 22 3
241-129	Rim	21 21 2	321-13	Screw - Cap Hex. Hd.	12 1 3
241-130	Spacer - Bearing	21 44 2	321-23	Screw - Cap Hex. Hd.	28 24 3
242-50	Nut - Lug	4 19 4	321-28	Screw - Cap Hex. Hd.	23 13 1
242-50	Nut - Lug	21 22 8	321-39	Screw - Cap Hex. Hd.	10 6 4
242-76	Rim	4 18 1	322-1	Screw - Cap Hex. Hd.	7 1 2
251-321	Bearing - Ball	4 40 2	322-3	Capscrew - Hex. Hd.	9 17 4
2410-18	Plug	33 2 1	322-3	Screw - Cap Hex. Hd.	15 1 2
2411-52	Bear - Rod End R.H.	20 12 1	322-3	Screw - Cap Hex. Hd.	1 25 31
2411-53	Bearing - Rod End L.H.	20 1 1	322-3	Screw - Cap Hex. Hd.	12 52 1
2412-24	Clamp - Hose	17 10 6	322-3	Screw - Hex. Hd. Cap	5 1 9
2412-36	Clamp - Hose	9 4 6	322-4	Screw - Cap Hex. Hd.	30 10 2
2412-41	Clamp - R	12 38 1	322-4	Screw - Cap Hex. Hd.	31 23 1
2412-71	Clamp - R	5 37 1	322-4	Screw - Cap Hex. Hd.	18 24 4
2412-81	Clamp - R	16 25 2	322-4	Screw - Hex. Washer Hd.	21 4 2
2412-92	Clamp - Hose	12 10 2	322-7	Capscrew - Hex. Nd.	20 10 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
322-9	Screw - Cap Hex. Hd.	4 9 1	3253-3	Washer - Lock	17 20 3
322-12	Screw - Cap Hex. Hd.	3 11 1	3253-3	Washer - Lock	1 21 3
322-17	Capscrew - Hex. Hd.	20 24 1	3253-4	Washer - Lock	21 3 2
322-17	Screw - Cap Hex. Hd.	21 2 1	3253-4	Washer - Lock	30 11 2
322-17	Screw - Cap Hex. Hd.	25 13 6	3253-4	Washer - Lock	7 14 2
322-26	Screw - Cap Hex. Hd.	31 36 1	3253-4	Washer - Lock	15 16 2
322-43	Screw - Cap Hex. Hd.	15 21 4	3253-4	Washer - Lock	9 16 4
322-43	Screw - Cap Hex. Hd.	5 23 1	3253-4	Washer - Lock	31 22 2
322-45	Screw - Hex. Hd. Cap	5 13 1	3253-4	Washer - Lock	12 28 2
322-46	Screw - Cap Hex. Hd.	12 33 2	3253-5	Washer - Lock	8 12 1
323-6	Screw - Cap Hex. Hd.	26 2 2	3253-6	Washer - Lock	12 49 1
323-7	Screw - Cap Hex. Hd.	31 8 1	3253-21	Washer - Lock	9 18 4
323-7	Screw - Cap Hex. Hd.	30 28 2	3253-21	Washer - Lock	15 19 2
323-8	Screw - Cap Hex. Hd.	12 42 4	3253-27	Washer - Lock	12 23 1
323-9	Capscrew - Hex. Hd.	9 19 4	3254-1	Washer - Lock	15 12 2
323-11	Screw - Cap Hex. Hd.	18 46 4	3254-5	Washer - Lock	10 11 1
323-13	Screw - Cap Hex. Hd.	26 46 1	3254-9	Washer - Lock	20 20 2
323-15	Screw - Cap Hex. Hd.	25 5 2	3254-9	Washer - Lock Internal	26 5 2
323-23	Screw - Cap Hex. Hd.	26 20 2	3255-2	Washer - Lock	4 31 1
324-7	Screw - Cap Hex. Hd.	12 48 1	3255-7	Washer - Lock	12 4 1
325-4	Screw - Cap Hex. Hd.	25 19 4	3255-7	Washer - Lock	20 22 3
325-6	Screw - Cap Hex. Hd.	4 1 1	3255-8	Screw - Hex. Flange Hd.	5 33 4
325-7	Screw - Cap Hex. Hd.	17 14 2	3255-8	Washer - Lock E.T.L.W.	6 58 1
325-11	Screw - Cap Hex. Hd.	4 25 4	3256-1	Washer - Flat	15 5 2
325-11	Screw - Cap Hex. Hd.	21 28 8	3256-1	Washer - Flat	10 7 4
325-18	Screw - Cap Hex. Hd.	17 23 1	3256-4	Washer - Flat	26 25 4
3210-7	Capscrew - Hex. Hd.	20 18 1	3256-6	Washer - Flat	30 15 2
3213-9	Capscrew - Hex. Hd.	12 24 1	3256-6	Washer - Flat	31 27 1
3217-6	Nut - Hex.	15 3 2	3256-16	Washer - Flat	21 12 8
3217-6	Nut - Hex.	12 29 2	3256-21	Washer - Flat	1 7 2
3217-7	Nut - Hex.	2 39 2	3256-22	Washer - Flat	1 1 8
3217-29	Nut - Lock	20 21 2	3256-22	Washer - Flat	16 9 2
3218-1	Nut - Hex.	12 44 1	3256-22	Washer - Flat	28 23 9
3218-5	Nut - Hex. Jam	10 32 1	3256-23	Washer - Flat	5 4 9
3218-6	Nut - Jam	32 9 1	3256-23	Washer - Flat	25 14 6
3218-13	Nut - Lock	15 17 2	3256-23	Washer - Flat	9 15 4
3218-19	Nut - Hex.	10 8 2	3256-23	Washer - Flat	1 16 1
3219-14	Nut - Hex.	33 3 1	3256-23	Washer - Flat	26 16 1
3219-14	Nut - Hex.	15 13 2	3256-24	Washer	28 4 1
3220-2	Nut - Jam	21 33 2	3256-24	Washer	18 50 1
3220-2	Nut - Jam R.H.	20 16 1	3256-24	Washer - Flat	25 8 1
3220-3	Nut - Jam	3 12 2	3256-24	Washer - Flat	15 18 2
3220-3	Nut - Jam	4 27 2	3256-24	Washer - Flat	26 18 4
3220-5	Nut - Jam	3 14 1	3256-25	Washer - Flat	12 50 1
3220-12	Nut - Jam	4 29 1	3256-26	Washer - Flat	3 21 2
3220-20	Nut - Jam L.H.	20 2 1	3256-26	Washer - Flat	10 35 1
3229-1	Bolt - Carriage	30 1 2	3256-45	Washer - Flat	31 10 4
3229-1	Bolt - Carriage	1 10 2	3256-45	Washer - Flat	30 19 4
3229-22	Bolt - Carriage	2 43 1	3256-53	Washer - Flat	26 3 2
3229-22	Bolt - Carriage	6 54 2	3256-53	Washer - Flat	20 33 2
3230-15	Bolt - Carriage	5 9 2	3256-54	Washer - Flat	32 4 1
3234-4	Screw - Cap Hex. Hd.	12 3 3	3256-57	Washer - Flat	31 38 1
3234-4	Screw - Cap Hex. Hd.	12 14 1	3256-70	Washer - Flat	5 12 7
3234-4	Screw - Hex Washer Hd.	17 11 2	3256-70	Washer - Flat	15 22 4
3234-4	Screw - Hex. Washer Hd.	26 10 1	3256-70	Washer - Flat	12 32 2
3234-13	Screw - Hex. Flange Hd.	5 3 6	3256-74	Washer - Flat	20 13 8
3234-14	Screw - Hex. Hd. Cap	5 5 2	3257-15	Key - Square	24 11 1
3234-17	Screw - Cap Hex. Hd.	1 15 6	3257-32	Key - Woodruff	18 7 1
3234-17	Screw - Hex. Flange Hd.	5 27 2	3257-32	Key - Woodruff	17 21 1
3234-17	Screw - Cap Hex. Hd.	1 2 10	3272-4	Pin - Cotter	26 13 1
3234-32	Screw - Cap Hex. Hd.	31 28 1	3272-4	Pin - Cotter	26 27 1
3234-32	Screw - Hex. Flange Hd.	30 14 2	3272-4	Pin - Cotter	5 36 2
3242-4	Screw - Set	25 21 8	3272-6	Pin - Cotter	31 19 1
3245-9	Screw - Set	17 18 1	3272-6	Pin - Cotter	21 31 4
3245-35	Screw - Set	25 24 4	3272-6	Pin - Cotter	26 43 1
3249-3	Screw - Rd. Hd. Machine	20 6 2	3272-6	Pin - Cotter	17 48 1
3249-5	Screw - Round Hd.	26 6 2	3272-7	Pin - Cotter	21 43 1
3250-50	Screw - Pan Hd.	2 36 2	3272-10	Pin - Cotter	30 22 4
3253-3	Washer - Lock	12 2 3	3272-10	Pin - Cotter	31 33 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3317-263

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3272-11	Pin - Cotter	31 4 1	32121-23	Pin - Roll	32 1 1
3272-11	Pin - Cotter	26 32 5	32121-24	Pin - Roll	20 3 1
3272-13	Pin - Cotter	31 13 2	32121-34	Pin - Roll	17 34 1
3272-13	Pin - Cotter	30 27 2	32121-38	Pin - Spring	8 15 1
3290-196	Nut - Retainer	5 38 3	32121-79	Pin - Roll	21 39 2
3290-199	Nut - Speed	15 11 1	32121-91	Pin - Coiled Spring	18 38 3
3290-199	Nut - Speed	5 40 3	32121-124	Pin - Roll	26 28 1
3290-224	Washer - Lock Pyramidal	2 40 2	32122-2	Screw - Round Hd.	33 2 1
3290-378	Tie - Cable	4 7 1	32122-14	Screw - Truss Hd.	5 49 2
3290-378	Tie - Cable	12 17 1	32128-14	Flange Locknut	23 9 1
3290-378	Tie - Cable	20 35 1	32128-20	Nut - Flange	2 46 3
3290-379	Cable Tie	17 42 4	32128-20	Nut - Lock	22 48 2
3290-379	Tie - Cable	9 1 2	32128-25	Nut - Flange Lock	25 15 6
3290-379	Tie - Cable	16 19 2	32128-25	Nut - Flange Lock	5 15 17
3290-410	Tie - Push Mount	12 39 1	32128-25	Nut - Flange Lock	1 17 5
3290-470	Screw - Machine	9 12 2	32128-25	Nut - Lock	12 35 2
3296-4	Nut - Lock	26 15 1	32128-25	Nut - Lock	15 23 2
3296-6	Nut - Lock	13 9 3	32128-32	Nut - Hex. Flange	16 8 2
3296-6	Nut - Lock	17 15 1	32128-33	Nut - Flange Lock	30 4 2
3296-16	Nut - Lock	1 3 5	32128-33	Nut - Flange Lock	6 55 2
3296-16	Nut - Lock	28 18 3	32128-43	Nut - Flange Lock	5 35 4
3296-16	Nut - Lock	20 25 2	32128-44	Nut - Flange	5 8 2
3296-23	Nut - Flange Lock	4 23 4	32144-18	Screw - Cap Hex. Hd.	10 24 2
3296-23	Nut - Lock	25 12 4	32144-22	Screw - Hex. Hd. Self-Tap	1 18 4
3296-23	Nut - Lock	17 35 3	32144-69	Screw - Self Tapping	16 27 2
3296-23	Nut - Lock	21 42 8	32148-8	Insert - Threaded	6 57 1
3296-28	Nut - Lock	3 22 2	32149-2	Nut - Hex.	15 15 2
3296-29	Nut - Flange Lock	3 7 1	32151-46	Ring - Retaining	18 13 2
3296-29	Nut - Lock	4 5 1	32153-3	Nut - Lock	20 15 2
3296-29	Nut - Lock	5 6 2	3333-975	Tie - Cable	12 12 1
3296-29	Nut - Lock	20 19 1	340-1	Fitting - Straight	16 14 1
3296-39	Nut - Lock	26 26 5	340-4	Fitting - Hydraulic Straight	7 15 1
3296-39	Nut - Lock	25 1 2	340-5	Fitting	23 4 1
3296-39	Nut - Lock	31 15 1	340-77	Fitting - Hydraulic 90°	26 47 1
3296-39	Nut - Lock	30 31 2	340-87	Fitting - Hydraulic 45°	26 39 1
3296-39	Nut - Lock	12 40 4	340-88	Fitting - Straight	28 15 1
3296-39	Nut Lock	28 3 1	340-89	Fitting - Hydraulic 45°	21 8 4
3296-42	Nut - Lock	21 11 8	340-92	Fitting	17 46 1
3296-42	Nut - Lock	10 21 4	340-92	Fitting - Straight	16 4 1
3296-42	Nut - Lock	4 33 1	340-96	Fitting - 45 Elbow	16 7 2
3296-42	Nut - Lock	6 56 2	340-97	Fitting - 90 Elbow	28 17 1
3296-56	Nut - Lock	12 7 2	340-98	Fitting - 90 Elbow	17 3 1
3296-59	Nut - Lock	25 7 1	340-98	Fitting - Hydraulic 90°	7 8 1
3296-59	Nut - Lock	31 9 2	340-99	Fitting	23 7 1
3296-59	Nut - Lock	30 18 2	340-99	Fitting - 90° Elbow	28 21 1
3298-8	Screw - Set	10 25 1	340-99	Fitting - Hydraulic 90°	16 16 1
32103-12	Nut - Wing	15 4 2	340-102	Fitting - Tee	17 31 2
32104-6	Screw - Cap Hex. Hd.	30 32 2	340-102	T-Fitting	17 37 1
32104-6	Screw - Cap Hex. Hd.	31 35 1	340-103	Fitting - Hydraulic 45°	22 45 1
32104-77	Screw - Hex. Hd. Self-Tap	1 8 2	340-104	Fitting - Male/Female Tee	16 21
32104-82	Screw - Hex. Hd. Self-Tap	2 34 4	340-109	Fitting - Hydraulic Tee	7 11 1
32108-101	Screw - Flathead	15 9 1	340-109	Fitting - Male Tee	16 3 1
32120-11	Ring - Retaining	18 36 1	340-140	Fitting - Hydraulic Tee	22 * 1
32120-15	Ring - Retaining	18 34 1	340-140	Fitting - Tee	17 41 1
32121-6	Pin - Roll	20 17 1	340-141	Fitting - Hydraulic Straight	4 12 2
32121-6	Pin - Roll	5 43 1	340-168	Fitting - 90° Male Elbow	16 31 2
32121-9	Pin - Roll	32 13 1	353-954	Fitting - 90° Elbow	17 33 1
32121-10	Pin - Roll	3 9 1	354-23	Ball	8 5 1

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Reelmaster 216 has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame under the seat. In any correspondence concerning the Reelmaster 216, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the Reelmaster 216.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Hood Assembly	1-2	Traction Controls Assembly	20
Frame Assembly	3	Front Wheel Assembly	21-22
Rear Wheel Assembly	4	Right Front Wheel Plumbing Assembly	23
Seat Support Assembly	5-6	Hydraulic Drive Motor No. 66-5291	24
Rear Wheel Drive Valve Assembly	7	Jackshaft Assembly	25
Two Position Valve No. 92-3196	8	Cutting Unit Lift Assembly	26
Fuel Tank Assembly	9	Hydraulic Cylinder No. 76-0020	27
Instrument Panel Assembly	10	Cutting Unit Lift Control Valve Assembly	28
Electrical Schematic	11	Control Valve No. 43-1950	29
Engine & Clutch Assembly	12	Front Cutting Unit Lift Arm Assembly	30
Electric Clutch Assembly No. 70-8020	13	Rear Cutting Unit Lift Arm Assembly	31
Hydraulic Schematic	14	Belt Tensioner Assembly No. 83-7900	32
Hydraulic Tank & Battery Assembly	15	Special Tools	33
Hydraulic Oil Cooler Assembly	16	Engine Kohler Model No. M1605	
Hydraulic Drive Assembly	17	Spec. No. 711563	34-39
Hydraulic Pump Assembly No. 92-9023	18-19	TORO Part Number Index	40-45

[illegible]

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.