



48cm Rear Bagger

Model No. 10905—Serial No. 790000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.


For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required	HLH: hex lag head	PTO: power-take-off
ASM: assembly	HOC: height-of-cut	RH: right hand
BBC: blade brake clutch	HSBH: hex socket button head	ROPS: roll-over protection system
CARR: carriage	HSFH: hex socket flat head	SFH: slotted fillister head
CCW: counter clock wise	HSH: hex socket head	SHH: slotted hex head
CW: clockwise	HWH: hex washer head	SHWH: slotted hex washer head
DEG: degrees	HWHTF: hex washer head thread forming	SPH: slotted pan head
ECM: electronic control module	HYD: hydraulic	SQH: square head
EXT: external	LH: left hand	SRH: slotted round head
FH: flat head	NI: nylon insert	STD: standard
GA: gauge	NPTF: national pipe thread fine	TAP: self tapping
HD: heavy-duty	PFH: phillips flat head	TTH: torx truss head
HF: hex flange	PPH: phillips pan head	
HH: hex head	PPHTF: phillips pan head thread forming	
HHF: hex head flange	PRH: phillips round head	
HHFTF: hex head flange thread forming	PTH: phillips truss head	
HJ: hex jam		

Contents


- Housing Assembly 4
- Engine Assembly 5
- Blade Assembly 6
- Shroud and Block Assembly..... 7
- Brake and Muffler Assembly..... 8
- Block Assembly 9
- Recoil Starter Assembly 10
- Carburetor Assembly..... 11
- Rear Axle Assembly..... 12
- Handle Assembly 13
- Bag Assembly 14

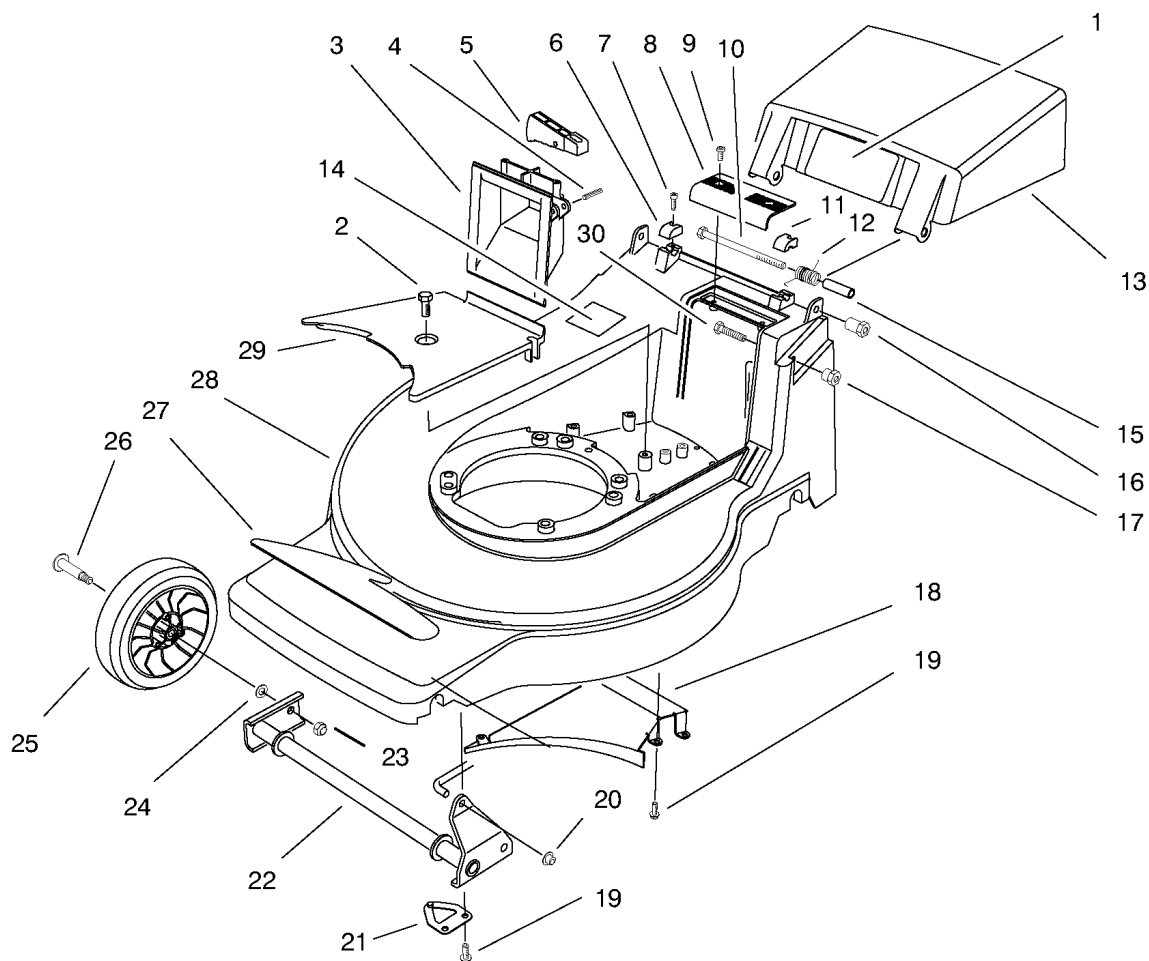

Housing Assembly


Ref.	Part Number	Qty.	Description
1	93-4105	1	Decal-Danger
2	32144-70	1	Screw-HWHTF
3	71-7870	1	Grip - Lower
4	3284-5	1	Pin-Spiral
5	71-7930	1	Trigger - HOC
6	71-7910	1	Cap-Hinge Bolt, RH
7	65-5210	2	Screw-HSH
8	71-7860	1	Grip-Upper
9	32144-97	2	Screw-PPH, Plastite
10	92-8806	2	5/16-18 X 4 Capscrew
11	71-7900	1	Cap-Hinge Bolt, LH
12	71-9840	2	Spring-Door
13	71-9800	1	Door Discharge
14	66-1700	1	Decal-Noise
15	92-9313	2	Door Spacer

Ref.	Part Number	Qty.	Description
16	93-7161	2	48Cm Handle Spacer
17	93-7162	2	48Cm Handle Spacer
18	71-7990	1	Ramp-Discharge
19	32144-4	8	Screw-HWH
20	32112-1	1	Pushnut-Cap, Washer
21	71-8830	2	Shaft Retainer ASM
22	92-9304	1	Pivot - Front Wa
23	92-8819	2	Nut-Lock
24	40-1940	2	Washer
25	92-8810	2	Whl & Tire ASM 7"
26	92-8811	2	Wheel Bolt
27	92-8836	1	Decal - Deck 450Vp
28	16-8889	1	Housing (Incl. Ref. #1)
29	71-7920	1	Belt Cover
30	92-8818	2	5/16-18X1.50 Hex Capsrw

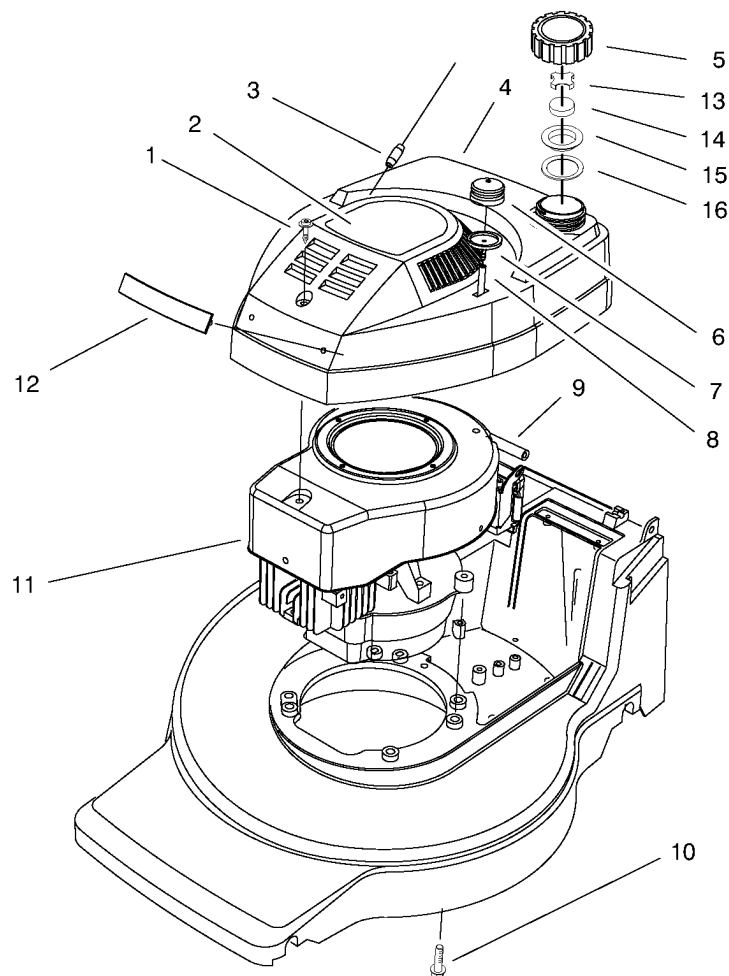


Engine Assembly

Ref.	Part Number	Qty.	Description
1	93-4302	3	Screw
2	92-8828	1	Decal - Recoil
3	92-1701	1	Stop-Rope
4	92-8898	1	Shroud & Tank ASM
5	93-3660	1	Cap-Gas (Incl. Ref. #13-16)
6	66-7460	1	Bulb-Primer
7	44-2750	1	Body-Primer
8	44-3174	1	Hose-Primer
9	612782	1	Line-Fuel
10	32144-102	3	Screw-HWH
11		1	Engine-"v" 48Cm
12	92-8615	1	Applique-Shroud
13	93-3175	1	Baffle - Gas Cap
14	609150	1	Baffle - Foam Sm
15	93-1230	1	Cover-Fuel Cap Baffle
16	613311	1	Gasket-Fuelcap Sm

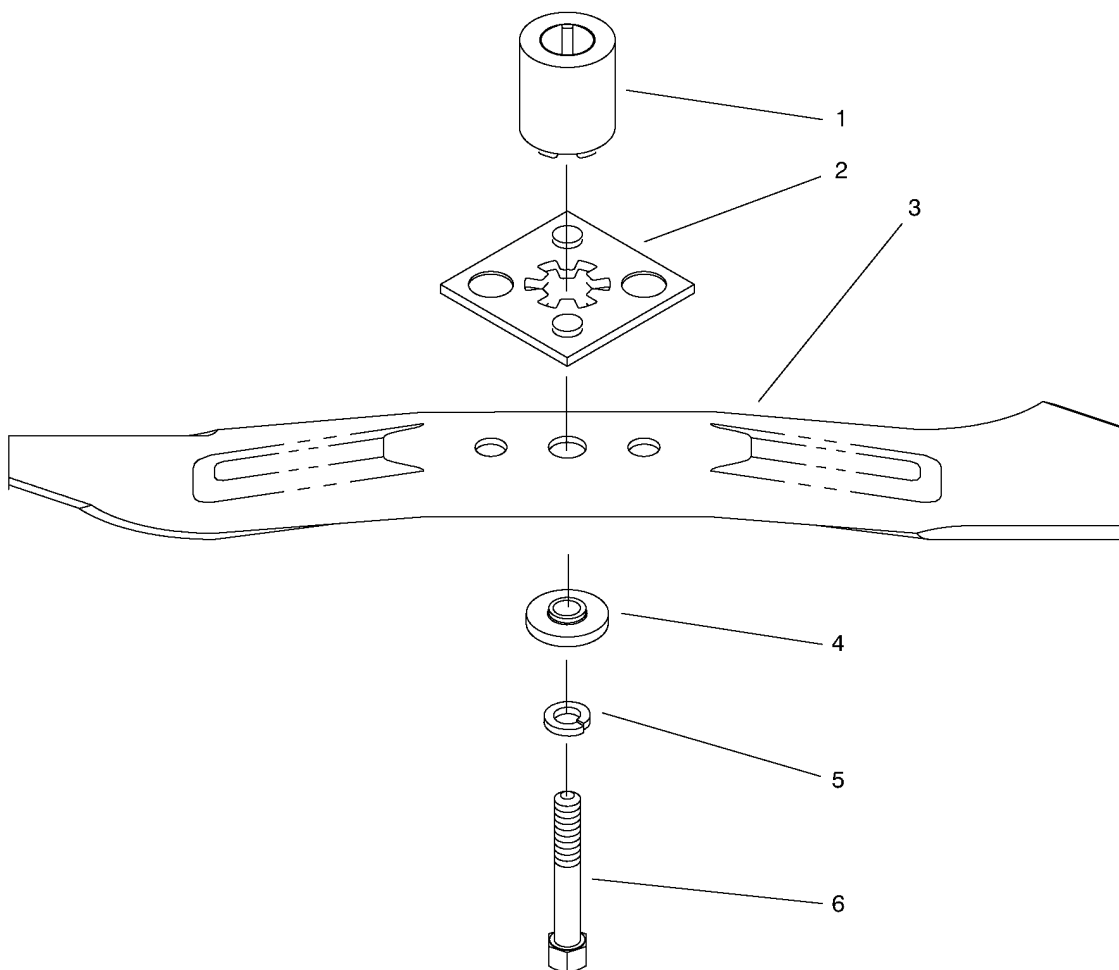


Blade Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	92-8807	1	Hub
2	146046	1	Plate Dr
3	612079	1	Blade
4	92-8626	1	Spacer-Blade
5	3253-22	1	Washer-Lock
6	26-0670	1	Screw-Blade

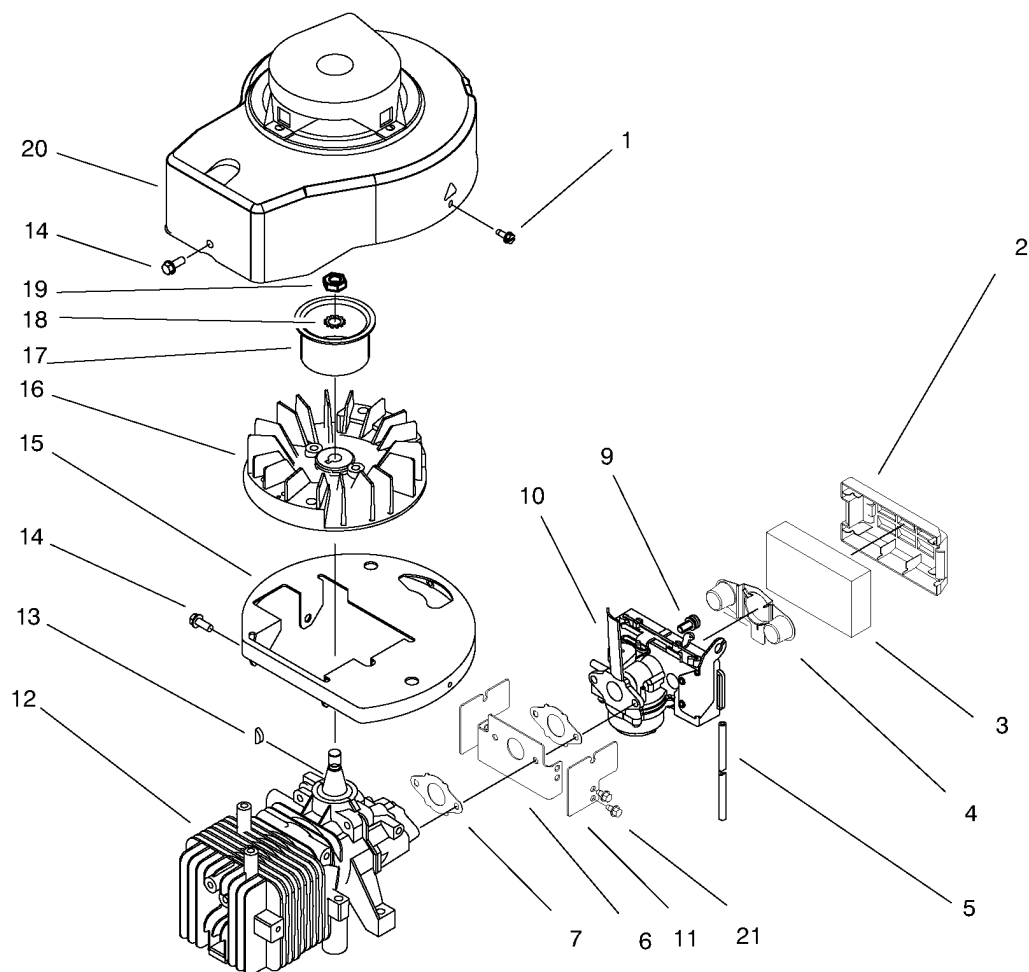


Shroud and Block Assembly

Ref.	Part Number	Qty.	Description
1	614699	3	Screw Vf
2	93-4303	1	Cover-Air Filter
3	609493	1	Element-Air Fil Vf
4	93-4320	1	Shield-Fuel V
5	44-3174	1	Hose-Primer
6	93-4315	1	Shield-Carb V Intl
7	92-4948	2	Gasket-Carb Vf
9	609482	2	Screw
10	92-9695	1	Carburetor Assembly
11	93-4316	2	Shield- Gov. V Intl
12	93-1215	1	Short Block Assembly
13	607199	1	Key
14	614702	4	Screw
15	93-1216	1	Base-Shroud
16	684743	1	Flywheel(Mach) V
17	614640	1	Hub-Starter V
18	316959	1	Washer-Lock
19	130743	1	Nut
20	93-4304	1	Shroud
21	613269	4	Screw V

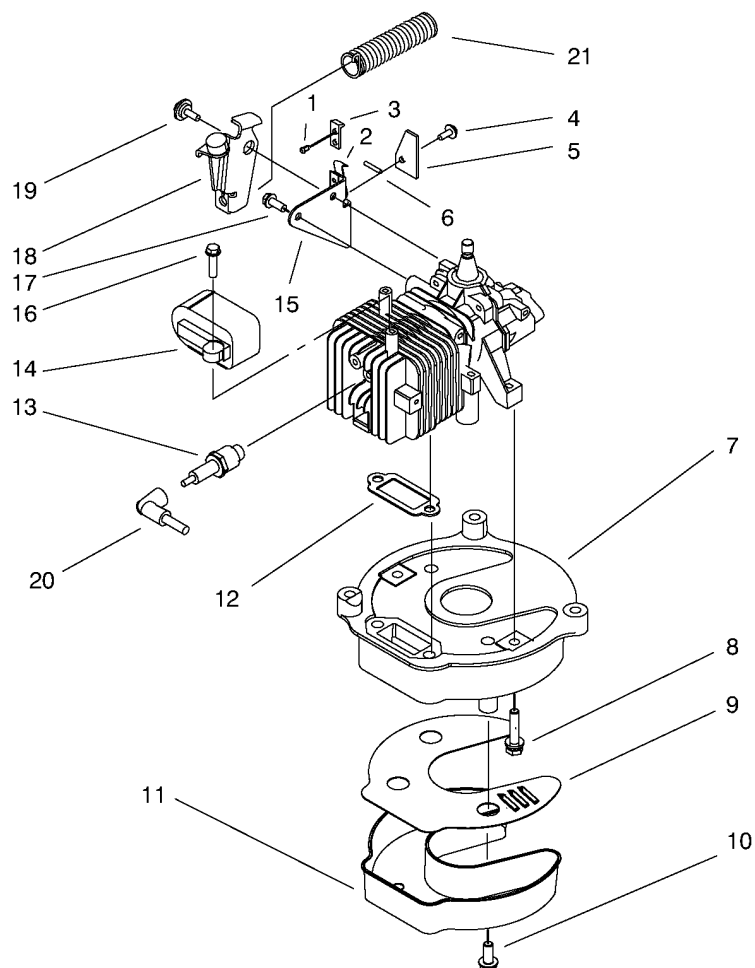

Brake and Muffler Assembly


Ref.	Part Number	Qty.	Description
1	3290-459	2	Rivet-Plastic
2	60-9010	1	Strap-Ground
3	92-2925	1	Strap-Insulation
4	12-5450	1	Screw
5	53-4690	1	Stop-Ground Strap
6	92-1156	1	Electrical Lead ASM
7	614654	1	Plate-Muffler V
8	607601	4	Screw V
9	93-1217	1	Baffle-Muffler
10	609471	3	Screw
11	93-1108	1	Cover-Muffler
12	93-1233	1	Gasket-Exh. Vf
13	614008	1	Plug-Spark
14	684049	1	Ignition Assembly (Incl. Ref. #20)
15	84-7820	1	Plate-Brake
16	613208	2	Screw
17	614702	1	Screw
18	66-5380	1	Brake Plate ASM
19	92-9698	1	Screw-Shoulder
20	684179	1	Hi-Tens. Lead Sm
21	66-5370	1	Spring-Compression

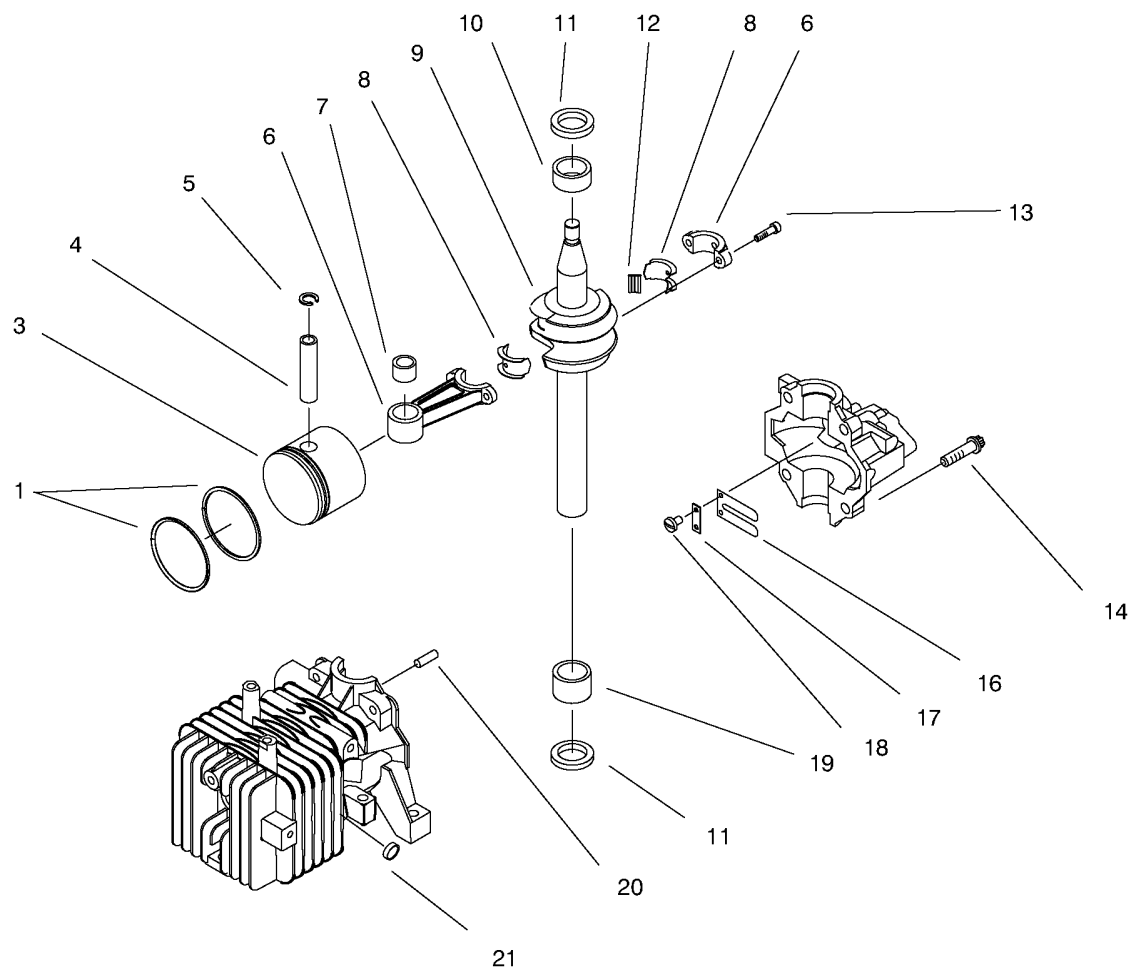

Block Assembly


Ref.	Part Number	Qty.	Description
1	681737	1	F-Ring Set
3	92-4925	1	Piston & Connecting Rod (Incl. Ref. #1, 3-7 & 13)
4	606608	1	Pin-Wrist Vf
5	303712	2	Ring-Retaining
6	92-4921	1	Connecting Rod Assembly (Incl. Ref. #8, 12 & 13)
7	92-4927	1	Bearing Xev
8	677982	1	Liner ASM
9	92-6379	1	Crankshaft
10	681830	1	Bearing V
11	611396	2	Seal-Oil
12	609754	1	Roller Strip
13	611393	2	Screw-HSH
14	614636	4	Screw-HWH V
16	602588	1	Reed-Carburetor
17	602587	1	Plate-Backup, Reed
18	612872	2	Screw-HH
19	681831	1	Bearing V
20	609629	1	Dowel Xev
21	609123	4	Plug-Core Vf
	684725	1	Cylinder & Crankcase Asm.

● Not illustrated

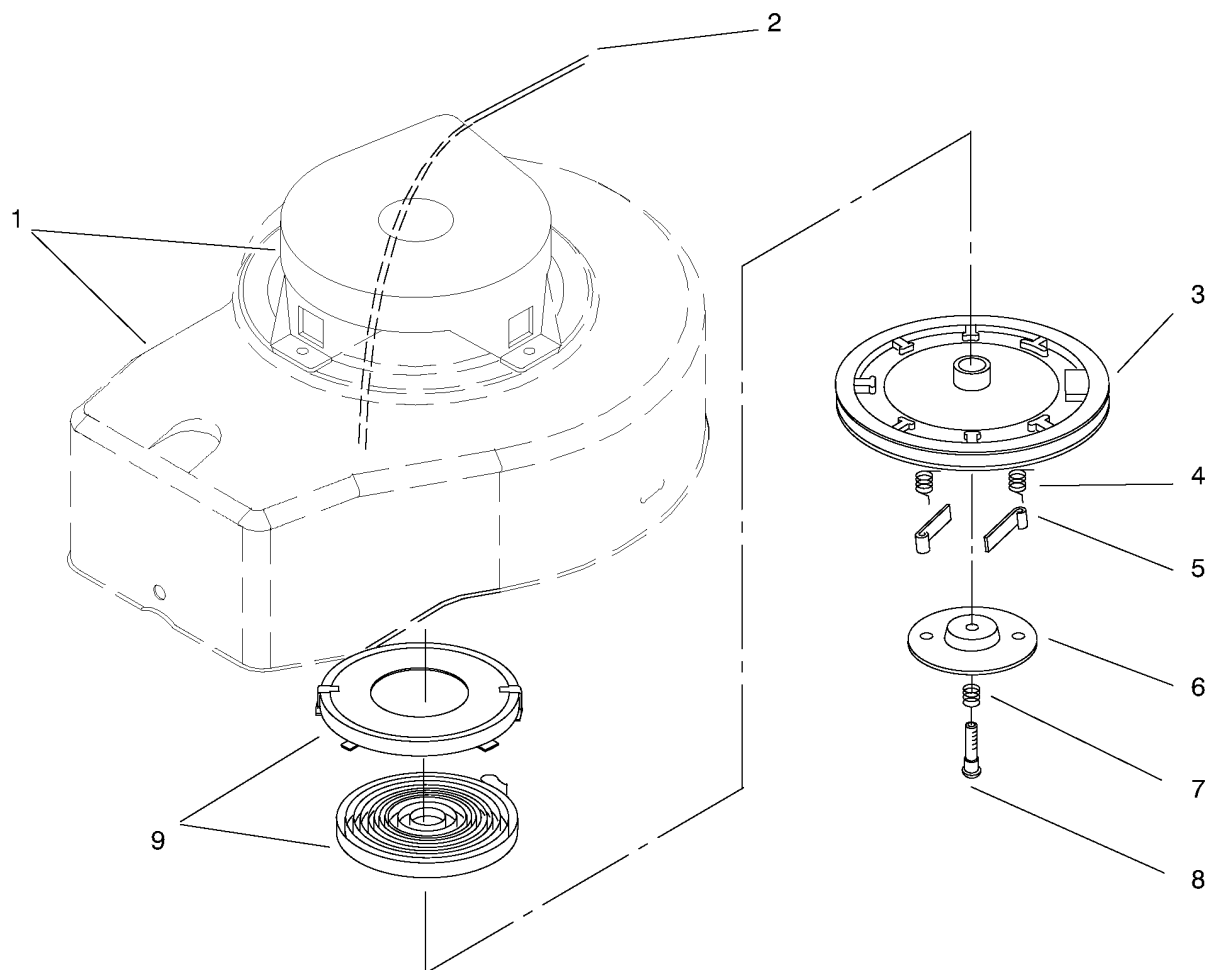

Recoil Starter Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	93-4304	1	Shroud
2	93-4305	1	Rope - Grey 88 5/8
3	92-4929	1	Pulley Assembly
4	92-4930	2	Spring - Dog
5	92-4931	2	Dog
6	92-9692	1	Retainer
7	92-4933	1	Screw - Center
8	92-4934	1	Spring - Brake
9	92-4935	1	Spring Keeper ASM

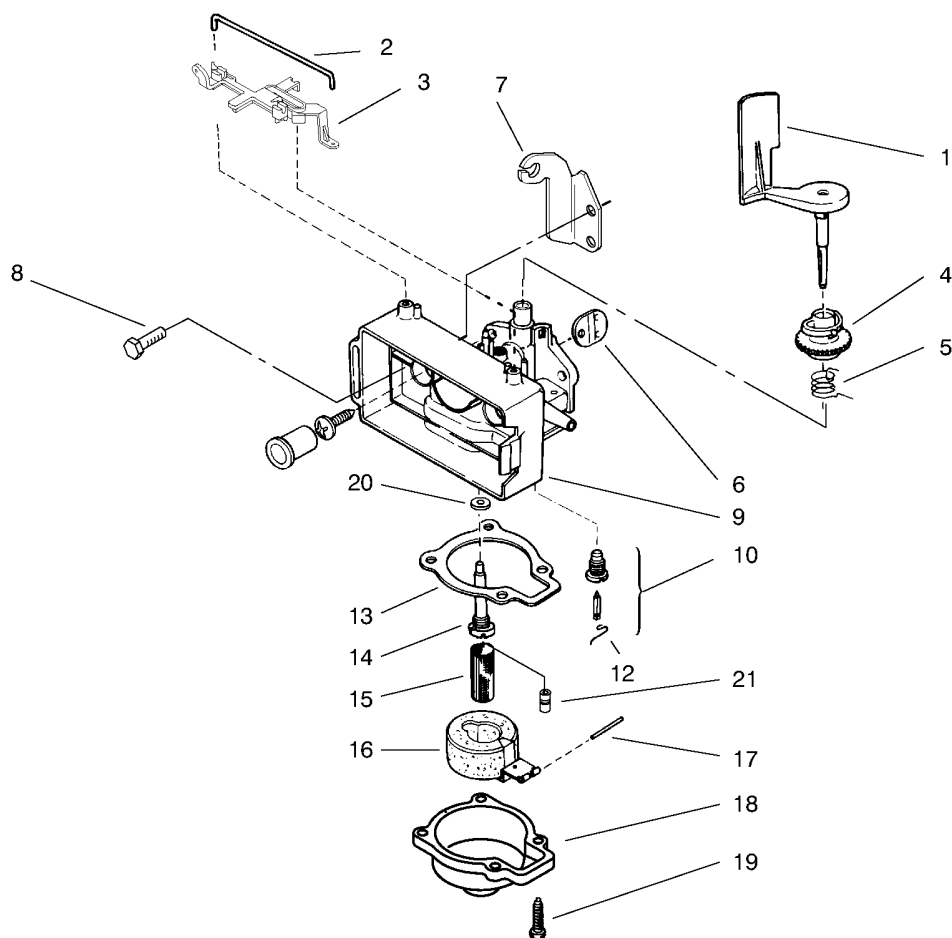

Carburetor Assembly


Ref.	Part Number	Qty.	Description
1	92-6376	1	Air Vane&shaft
2	610165	1	Retainer
3	93-1225	1	Lever-Adj. Vf
4	610834	1	Collar-Adjust, Airvane
5	92-4944	1	Spring-Gov V
6	92-6373	1	Disc-Thro. V
7	92-4949	1	Brkt-Thro.Cont V
8	613269	2	Screw V
9	93-4324	1	Carb. Body V
10	92-9697	1	Kit-Float Valve, Body & Seat (Incl. Ref. #12)
12	603145	1	
13	602850	1	
14	92-6371	1	Nozzle Vf
15	611071	1	Filter-Fuel Vs
16	678113	1	Float & Arm ASM
17	92-6389	1	Pin-Straight
18	92-9691	1	Chamber-Float
19	608850	4	Screw-HH
20	612383	1	Washer
21	92-6370	1	Jet-Main Vf
	92-6385	1	Mainjet ●
	93-4330	1	Carburetor Assembly (Incl. Ref. #7 Pg.6) ●

● Not illustrated

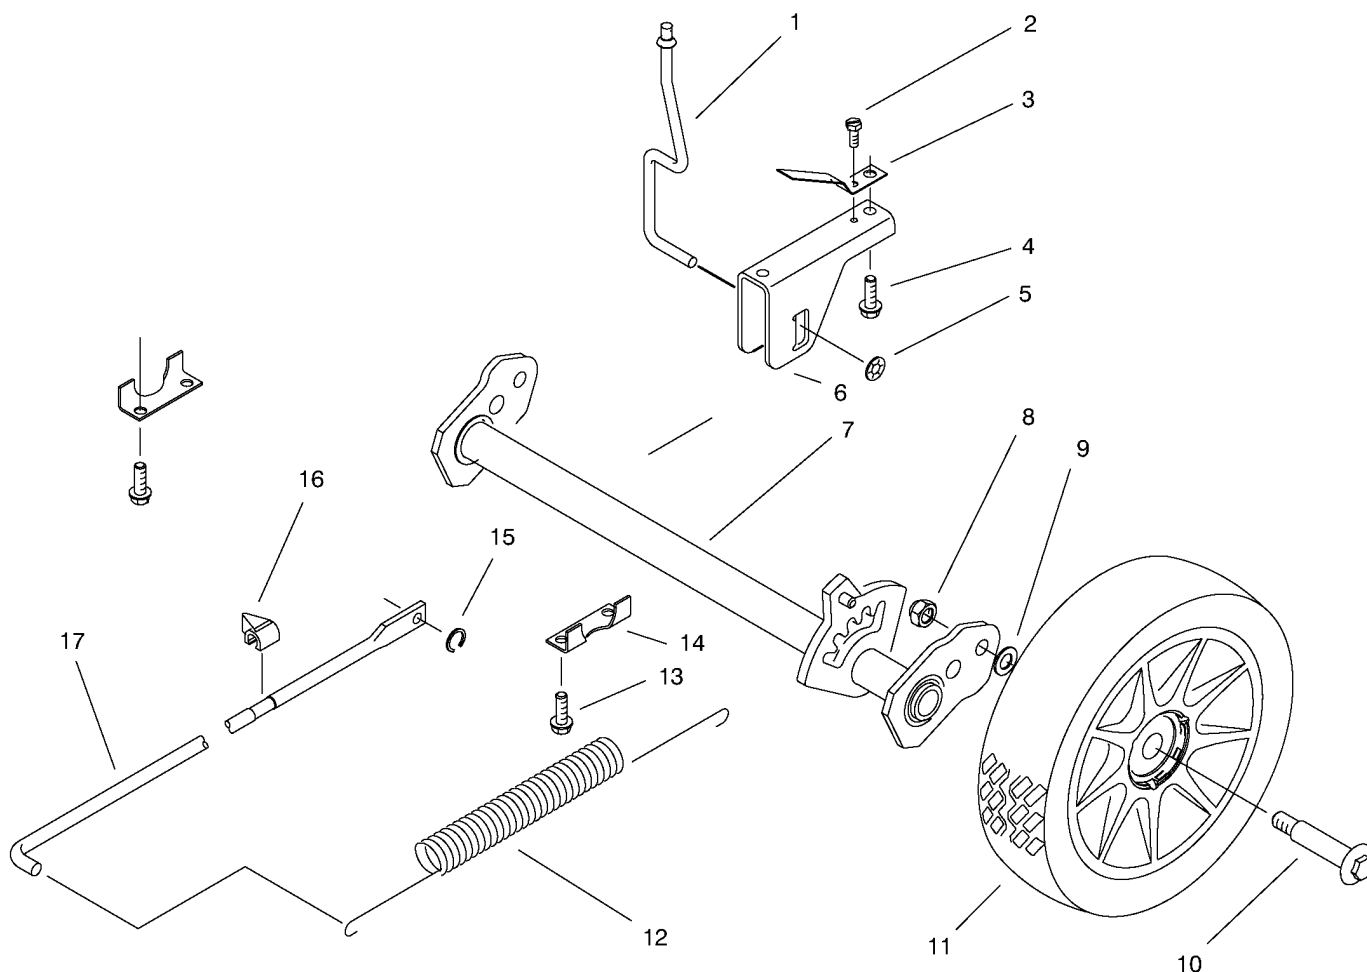


Rear Axle Assembly

Ref.	Part Number	Qty.	Description
1	71-7840	1	Trigger Rod
2	32144-31	1	Screw 8 - 32 X 250
3	71-8060	2	Spring - Trigger Ret
4	63-8590	2	Screw
5	32112-13	1	Pushnut
6	71-8080	1	Saddle - HOC
7	92-9305	1	Pivot - Rear Wa
8	3296-59	2	Nut-Lock, NI
9	40-1940	2	Washer
10	92-1057	2	Bolt-Shoulder
11	92-8887	2	8" Wheel Assembly
12	92-9300	1	Spring-Counterbalance
13	32144-4	4	Screw-HWH
14	71-7770	2	Rear Securing Plate
15	32151-93	1	Grip Ring
16	71-7980	1	Indicator-Height Of Cut
17	92-9301	1	Rod - Link

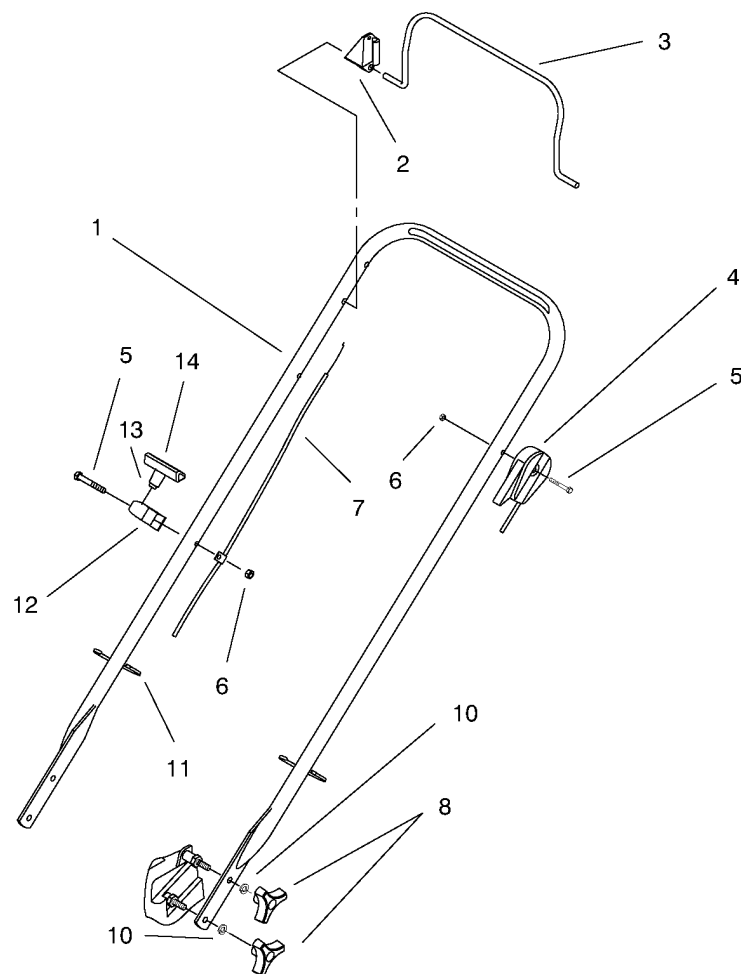

Handle Assembly

Ref.	Part Number	Qty.	Description
1	92-8800	1	Handle
2	92-5412	1	Stop-Pivot
3	92-1002	1	Bail-Brake
4	92-9327	1	Cable - Throttle
5	321-53	2	Screw-HH
6	3296-73	2	Nut-Lock, NI
7	92-9328	1	Cable - Brake
8	93-7159	4	Handle-Knob
10	3253-33	4	Washer-Lock
11	3290-378	2	Tie-Cable
12	93-7383	1	Guide-Rope
13	612825	1	Handle-Start
14	612824	1	Clip-Starter

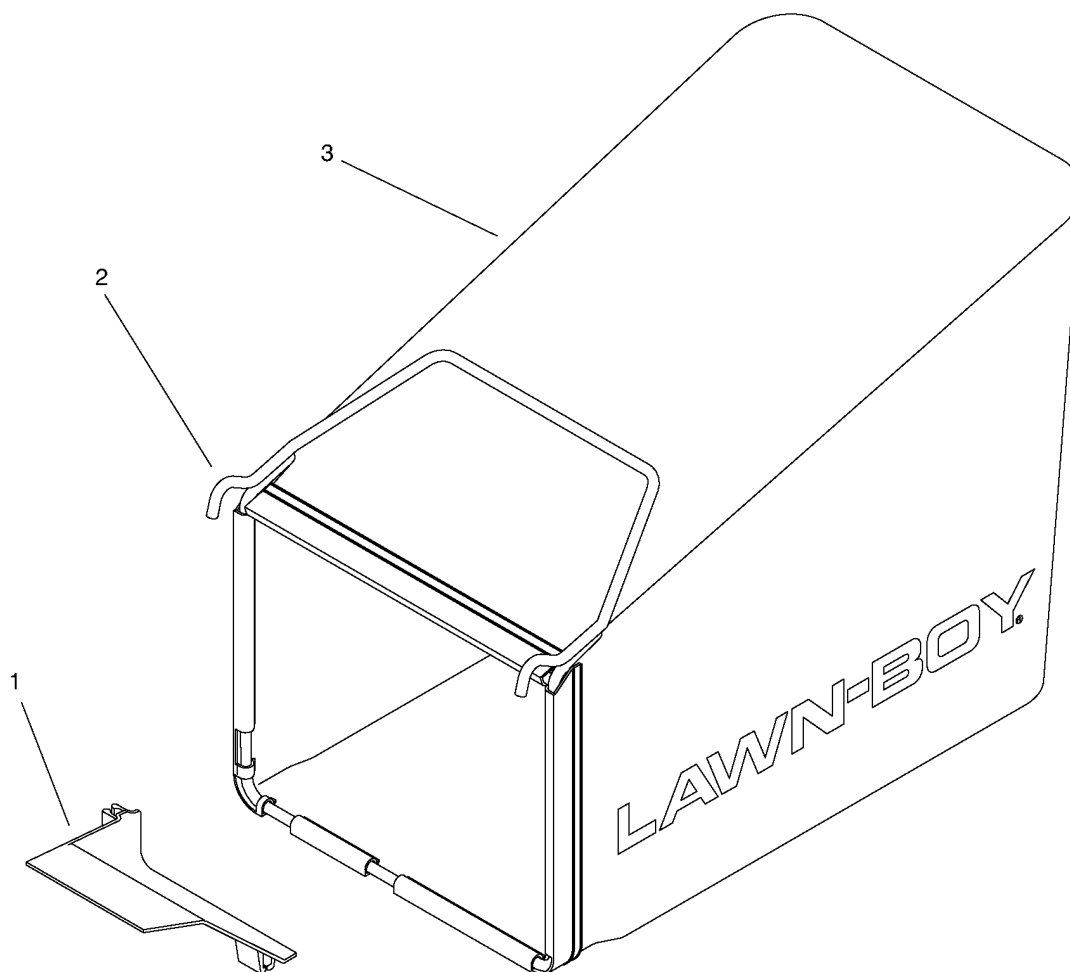

Bag Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	71-3750	1	Bag Ramp
2	71-8180	1	Frame
3	92-8890	1	Grass Bag - 48Cm Lb

Notes:

