



## **48cm Rear Bagger**

**Model No. 10905—Serial No. 790000001 and Up**

# **Parts Catalog**

# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.


For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# List of Abbreviations

|                                              |                                                |                                          |
|----------------------------------------------|------------------------------------------------|------------------------------------------|
| <b>AR:</b> as required                       | <b>HLH:</b> hex lag head                       | <b>PTO:</b> power-take-off               |
| <b>ASM:</b> assembly                         | <b>HOC:</b> height-of-cut                      | <b>RH:</b> right hand                    |
| <b>BBC:</b> blade brake clutch               | <b>HSBH:</b> hex socket button head            | <b>ROPS:</b> roll-over protection system |
| <b>CARR:</b> carriage                        | <b>HSFH:</b> hex socket flat head              | <b>SFH:</b> slotted fillister head       |
| <b>CCW:</b> counter clock wise               | <b>HSH:</b> hex socket head                    | <b>SHH:</b> slotted hex head             |
| <b>CW:</b> clockwise                         | <b>HWH:</b> hex washer head                    | <b>SHWH:</b> slotted hex washer head     |
| <b>DEG:</b> degrees                          | <b>HWHTF:</b> hex washer head thread forming   | <b>SPH:</b> slotted pan head             |
| <b>ECM:</b> electronic control module        | <b>HYD:</b> hydraulic                          | <b>SQH:</b> square head                  |
| <b>EXT:</b> external                         | <b>LH:</b> left hand                           | <b>SRH:</b> slotted round head           |
| <b>FH:</b> flat head                         | <b>NI:</b> nylon insert                        | <b>STD:</b> standard                     |
| <b>GA:</b> gauge                             | <b>NPTF:</b> national pipe thread fine         | <b>TAP:</b> self tapping                 |
| <b>HD:</b> heavy-duty                        | <b>PFH:</b> phillips flat head                 | <b>TTH:</b> torx truss head              |
| <b>HF:</b> hex flange                        | <b>PPH:</b> phillips pan head                  |                                          |
| <b>HH:</b> hex head                          | <b>PPHTF:</b> phillips pan head thread forming |                                          |
| <b>HHF:</b> hex head flange                  | <b>PRH:</b> phillips round head                |                                          |
| <b>HHFTF:</b> hex head flange thread forming | <b>PTH:</b> phillips truss head                |                                          |
| <b>HJ:</b> hex jam                           |                                                |                                          |

# Contents


- Housing Assembly ..... 4
- Engine Assembly ..... 5
- Blade Assembly ..... 6
- Shroud and Block Assembly..... 7
- Brake and Muffler Assembly..... 8
- Block Assembly ..... 9
- Recoil Starter Assembly ..... 10
- Carburetor Assembly ..... 11
- Rear Axle Assembly..... 12
- Handle Assembly ..... 13
- Bag Assembly ..... 14

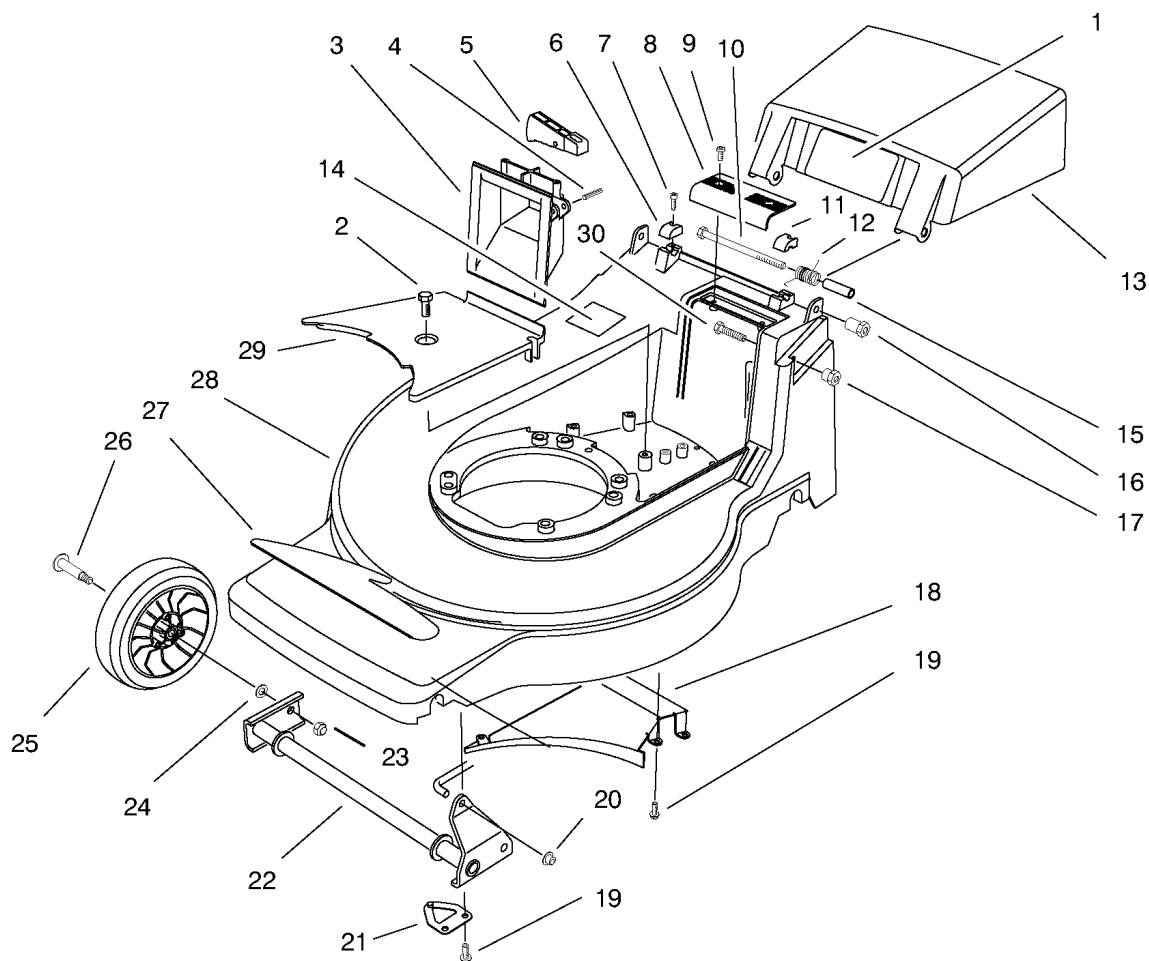

## Housing Assembly


| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 1    | 93-4105     | 1    | Decal-Danger         |
| 2    | 32144-70    | 1    | Screw-HWHTF          |
| 3    | 71-7870     | 1    | Grip - Lower         |
| 4    | 3284-5      | 1    | Pin-Spiral           |
| 5    | 71-7930     | 1    | Trigger - HOC        |
| 6    | 71-7910     | 1    | Cap-Hinge Bolt, RH   |
| 7    | 65-5210     | 2    | Screw-HSH            |
| 8    | 71-7860     | 1    | Grip-Upper           |
| 9    | 32144-97    | 2    | Screw-PPH, Plastite  |
| 10   | 92-8806     | 2    | 5/16-18 X 4 Capscrew |
| 11   | 71-7900     | 1    | Cap-Hinge Bolt, LH   |
| 12   | 71-9840     | 2    | Spring-Door          |
| 13   | 71-9800     | 1    | Door Discharge       |
| 14   | 66-1700     | 1    | Decal-Noise          |
| 15   | 92-9313     | 2    | Door Spacer          |

| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 16   | 93-7161     | 2    | 48Cm Handle Spacer      |
| 17   | 93-7162     | 2    | 48Cm Handle Spacer      |
| 18   | 71-7990     | 1    | Ramp-Discharge          |
| 19   | 32144-4     | 8    | Screw-HWH               |
| 20   | 32112-1     | 1    | Pushnut-Cap, Washer     |
| 21   | 71-8830     | 2    | Shaft Retainer ASM      |
| 22   | 92-9304     | 1    | Pivot - Front Wa        |
| 23   | 92-8819     | 2    | Nut-Lock                |
| 24   | 40-1940     | 2    | Washer                  |
| 25   | 92-8810     | 2    | Whl & Tire ASM 7"       |
| 26   | 92-8811     | 2    | Wheel Bolt              |
| 27   | 92-8836     | 1    | Decal - Deck 450Vp      |
| 28   | 16-8889     | 1    | Housing (Incl. Ref. #1) |
| 29   | 71-7920     | 1    | Belt Cover              |
| 30   | 92-8818     | 2    | 5/16-18X1.50 Hex Capsrw |

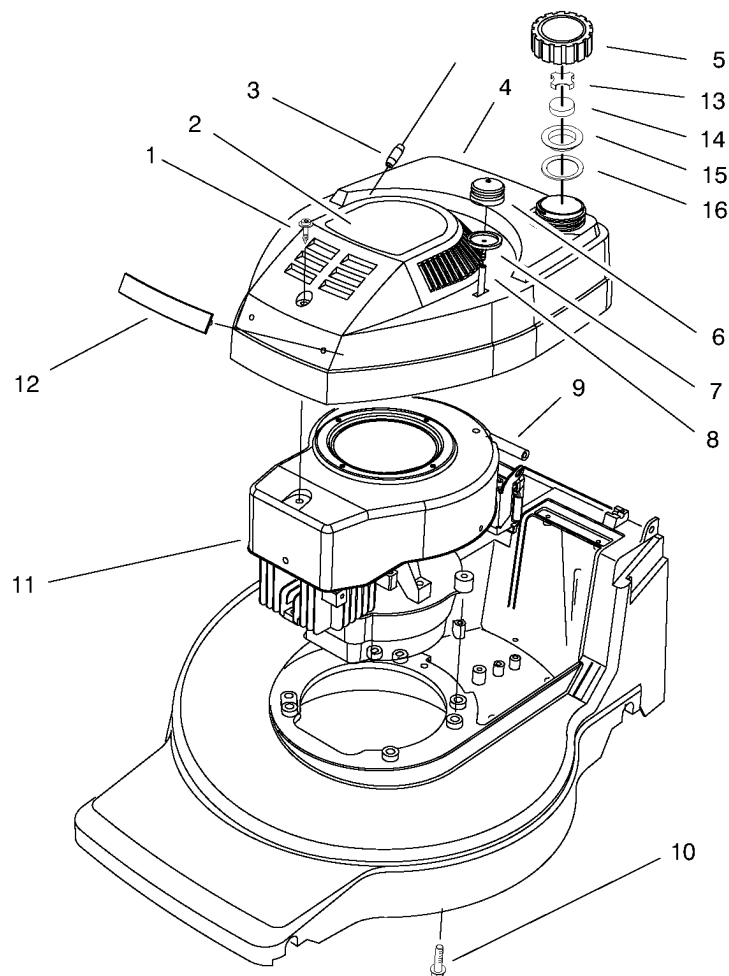


## Engine Assembly

| Ref. | Part Number | Qty. | Description                 |
|------|-------------|------|-----------------------------|
| 1    | 93-4302     | 3    | Screw                       |
| 2    | 92-8828     | 1    | Decal - Recoil              |
| 3    | 92-1701     | 1    | Stop-Rope                   |
| 4    | 92-8898     | 1    | Shroud & Tank ASM           |
| 5    | 93-3660     | 1    | Cap-Gas (Incl. Ref. #13-16) |
| 6    | 66-7460     | 1    | Bulb-Primer                 |
| 7    | 44-2750     | 1    | Body-Primer                 |
| 8    | 44-3174     | 1    | Hose-Primer                 |
| 9    | 612782      | 1    | Line-Fuel                   |
| 10   | 32144-102   | 3    | Screw-HWH                   |
| 11   |             | 1    | Engine-"v" 48Cm             |
| 12   | 92-8615     | 1    | Applique-Shroud             |
| 13   | 93-3175     | 1    | Baffle - Gas Cap            |
| 14   | 609150      | 1    | Baffle - Foam Sm            |
| 15   | 93-1230     | 1    | Cover-Fuel Cap Baffle       |
| 16   | 613311      | 1    | Gasket-Fuelcap Sm           |

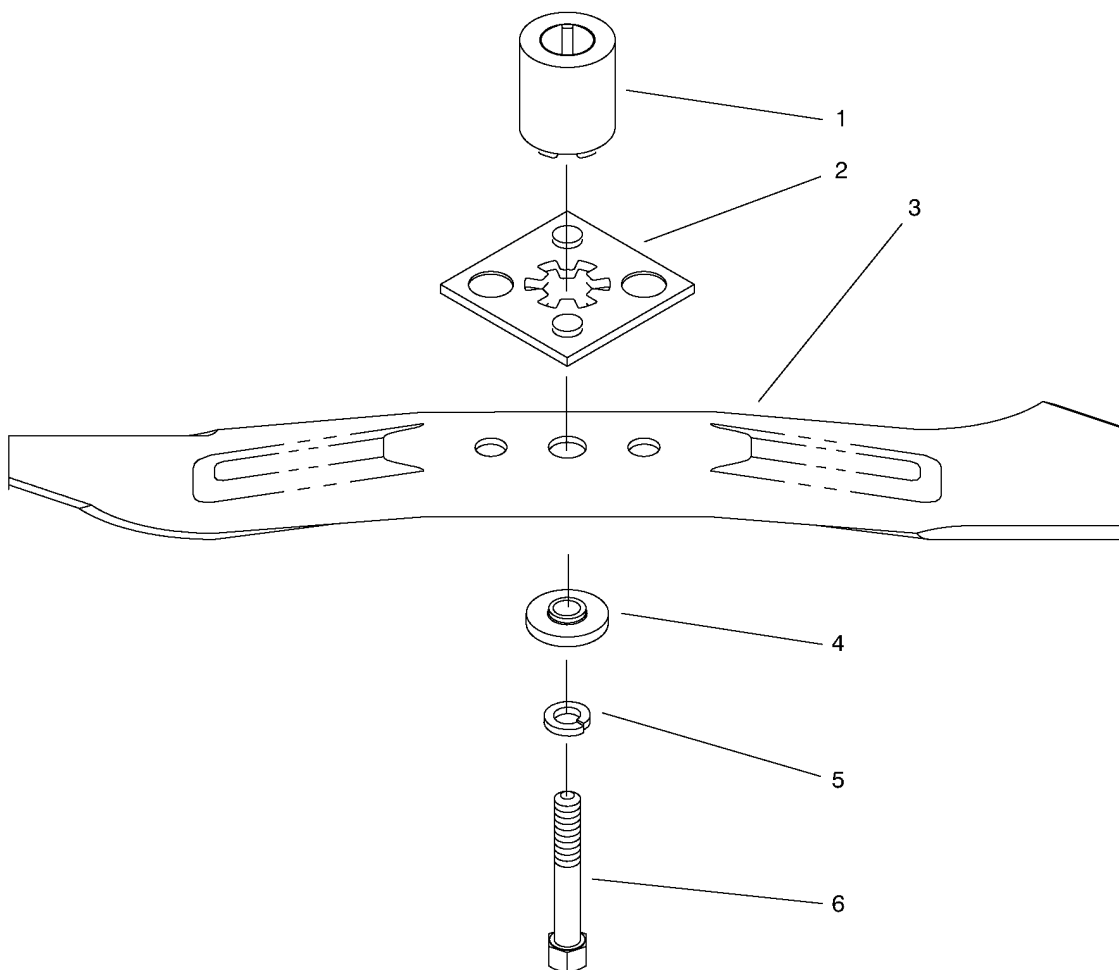


## Blade Assembly

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 92-8807            | 1           | Hub                |
| 2           | 146046             | 1           | Plate Dr           |
| 3           | 612079             | 1           | Blade              |
| 4           | 92-8626            | 1           | Spacer-Blade       |
| 5           | 3253-22            | 1           | Washer-Lock        |
| 6           | 26-0670            | 1           | Screw-Blade        |

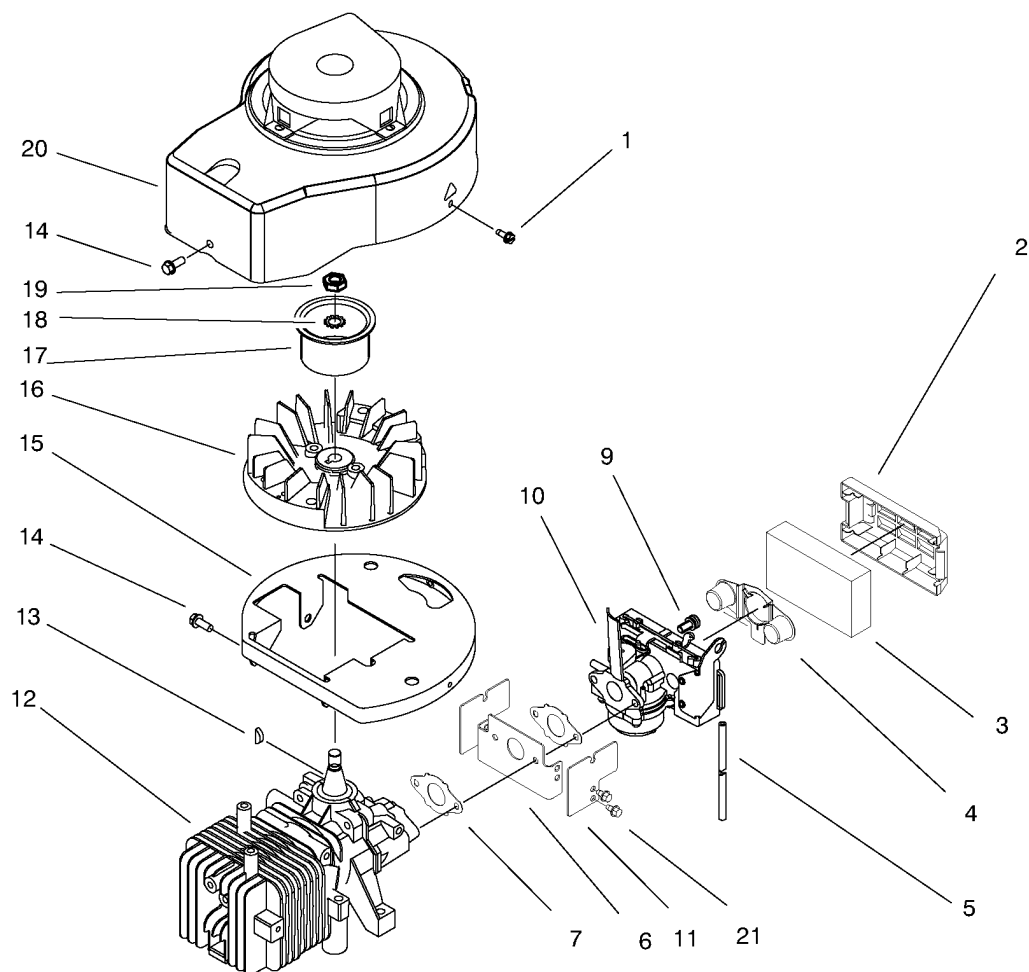


## Shroud and Block Assembly

| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 1    | 614699      | 3    | Screw Vf             |
| 2    | 93-4303     | 1    | Cover-Air Filter     |
| 3    | 609493      | 1    | Element-Air Fil Vf   |
| 4    | 93-4320     | 1    | Shield-Fuel V        |
| 5    | 44-3174     | 1    | Hose-Primer          |
| 6    | 93-4315     | 1    | Shield-Carb V Intl   |
| 7    | 92-4948     | 2    | Gasket-Carb Vf       |
| 9    | 609482      | 2    | Screw                |
| 10   | 92-9695     | 1    | Carburetor Assembly  |
| 11   | 93-4316     | 2    | Shield- Gov. V Intl  |
| 12   | 93-1215     | 1    | Short Block Assembly |
| 13   | 607199      | 1    | Key                  |
| 14   | 614702      | 4    | Screw                |
| 15   | 93-1216     | 1    | Base-Shroud          |
| 16   | 684743      | 1    | Flywheel(Mach) V     |
| 17   | 614640      | 1    | Hub-Starter V        |
| 18   | 316959      | 1    | Washer-Lock          |
| 19   | 130743      | 1    | Nut                  |
| 20   | 93-4304     | 1    | Shroud               |
| 21   | 613269      | 4    | Screw V              |

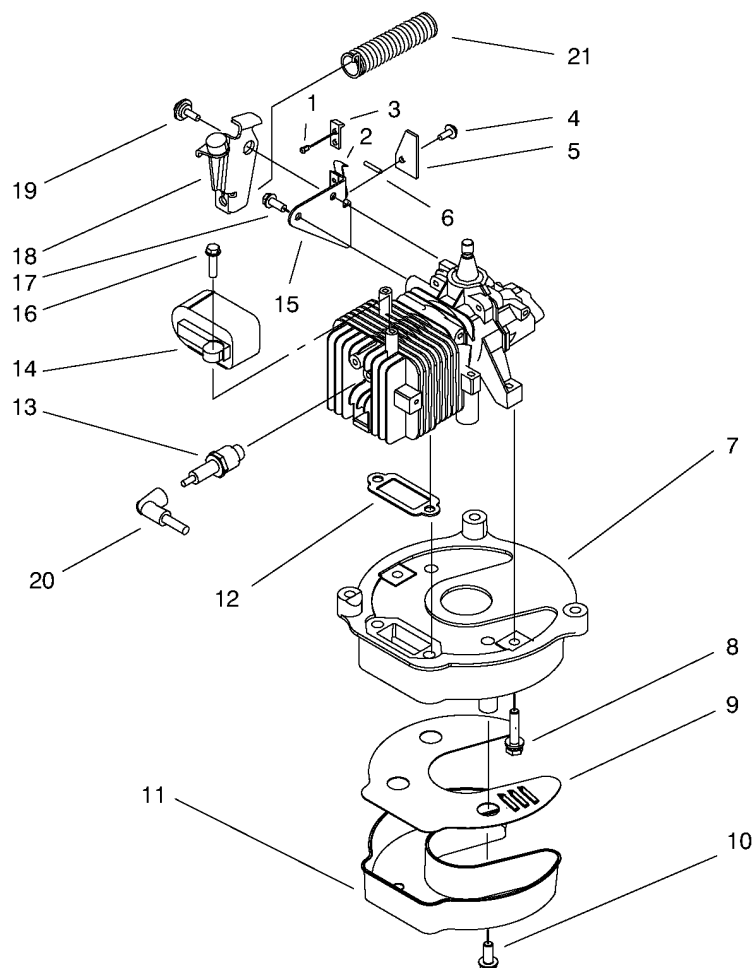

## Brake and Muffler Assembly


| Ref. | Part Number | Qty. | Description                        |
|------|-------------|------|------------------------------------|
| 1    | 3290-459    | 2    | Rivet-Plastic                      |
| 2    | 60-9010     | 1    | Strap-Ground                       |
| 3    | 92-2925     | 1    | Strap-Insulation                   |
| 4    | 12-5450     | 1    | Screw                              |
| 5    | 53-4690     | 1    | Stop-Ground Strap                  |
| 6    | 92-1156     | 1    | Electrical Lead ASM                |
| 7    | 614654      | 1    | Plate-Muffler V                    |
| 8    | 607601      | 4    | Screw V                            |
| 9    | 93-1217     | 1    | Baffle-Muffler                     |
| 10   | 609471      | 3    | Screw                              |
| 11   | 93-1108     | 1    | Cover-Muffler                      |
| 12   | 93-1233     | 1    | Gasket-Exh. Vf                     |
| 13   | 614008      | 1    | Plug-Spark                         |
| 14   | 684049      | 1    | Ignition Assembly (Incl. Ref. #20) |
| 15   | 84-7820     | 1    | Plate-Brake                        |
| 16   | 613208      | 2    | Screw                              |
| 17   | 614702      | 1    | Screw                              |
| 18   | 66-5380     | 1    | Brake Plate ASM                    |
| 19   | 92-9698     | 1    | Screw-Shoulder                     |
| 20   | 684179      | 1    | Hi-Tens. Lead Sm                   |
| 21   | 66-5370     | 1    | Spring-Compression                 |

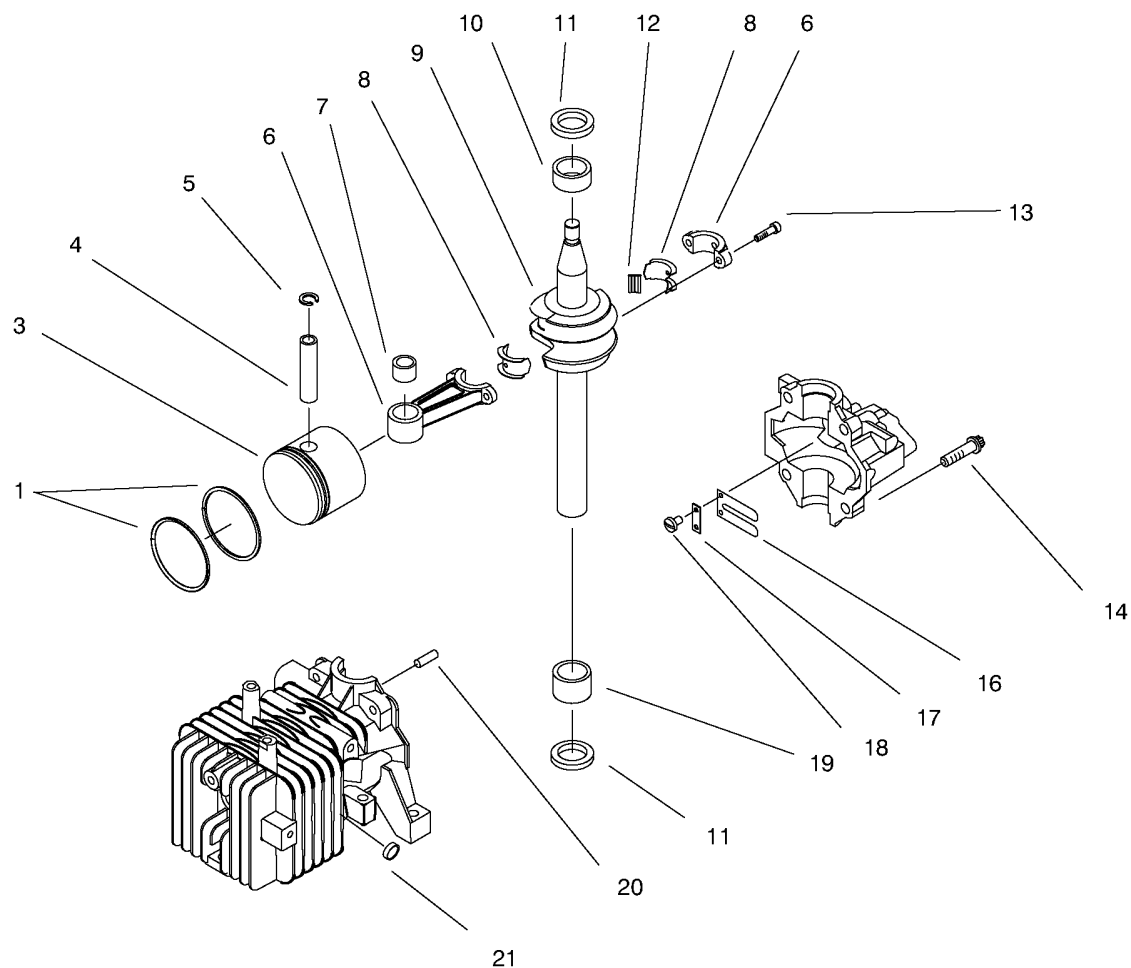

## Block Assembly


| Ref. | Part Number | Qty. | Description                                          |
|------|-------------|------|------------------------------------------------------|
| 1    | 681737      | 1    | F-Ring Set                                           |
| 3    | 92-4925     | 1    | Piston & Connecting Rod<br>(Incl. Ref. #1, 3-7 & 13) |
| 4    | 606608      | 1    | Pin-Wrist Vf                                         |
| 5    | 303712      | 2    | Ring-Retaining                                       |
| 6    | 92-4921     | 1    | Connecting Rod Assembly<br>(Incl. Ref. #8, 12 & 13)  |
| 7    | 92-4927     | 1    | Bearing Xev                                          |
| 8    | 677982      | 1    | Liner ASM                                            |
| 9    | 92-6379     | 1    | Crankshaft                                           |
| 10   | 681830      | 1    | Bearing V                                            |
| 11   | 611396      | 2    | Seal-Oil                                             |
| 12   | 609754      | 1    | Roller Strip                                         |
| 13   | 611393      | 2    | Screw-HSH                                            |
| 14   | 614636      | 4    | Screw-HWH V                                          |
| 16   | 602588      | 1    | Reed-Carburetor                                      |
| 17   | 602587      | 1    | Plate-Backup, Reed                                   |
| 18   | 612872      | 2    | Screw-HH                                             |
| 19   | 681831      | 1    | Bearing V                                            |
| 20   | 609629      | 1    | Dowel Xev                                            |
| 21   | 609123      | 4    | Plug-Core Vf                                         |
|      | 684725      | 1    | Cylinder & Crankcase Asm.                            |

● Not illustrated

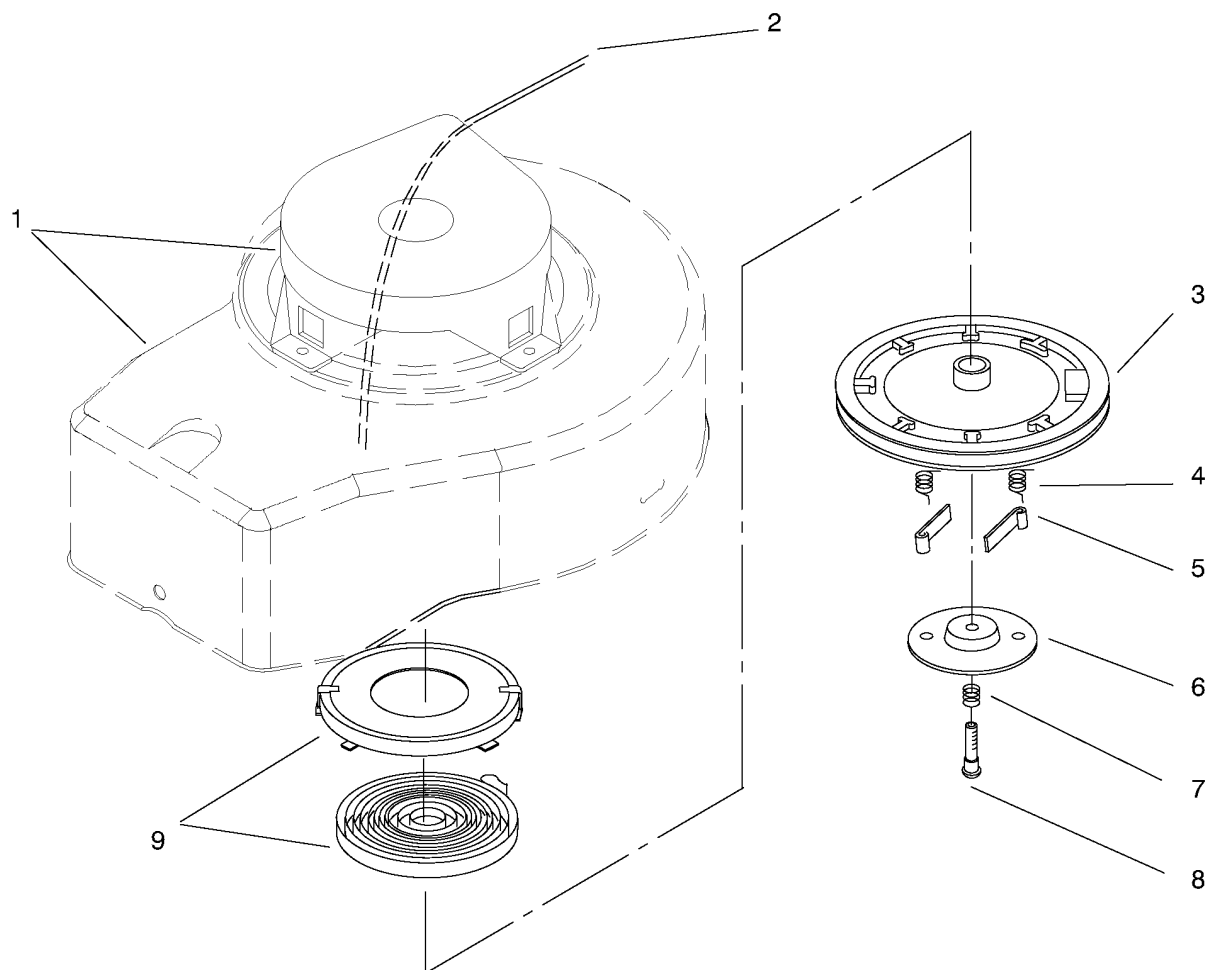

## Recoil Starter Assembly

| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 1    | 93-4304     | 1    | Shroud             |
| 2    | 93-4305     | 1    | Rope - Grey 88 5/8 |
| 3    | 92-4929     | 1    | Pulley Assembly    |
| 4    | 92-4930     | 2    | Spring - Dog       |
| 5    | 92-4931     | 2    | Dog                |
| 6    | 92-9692     | 1    | Retainer           |
| 7    | 92-4933     | 1    | Screw - Center     |
| 8    | 92-4934     | 1    | Spring - Brake     |
| 9    | 92-4935     | 1    | Spring Keeper ASM  |

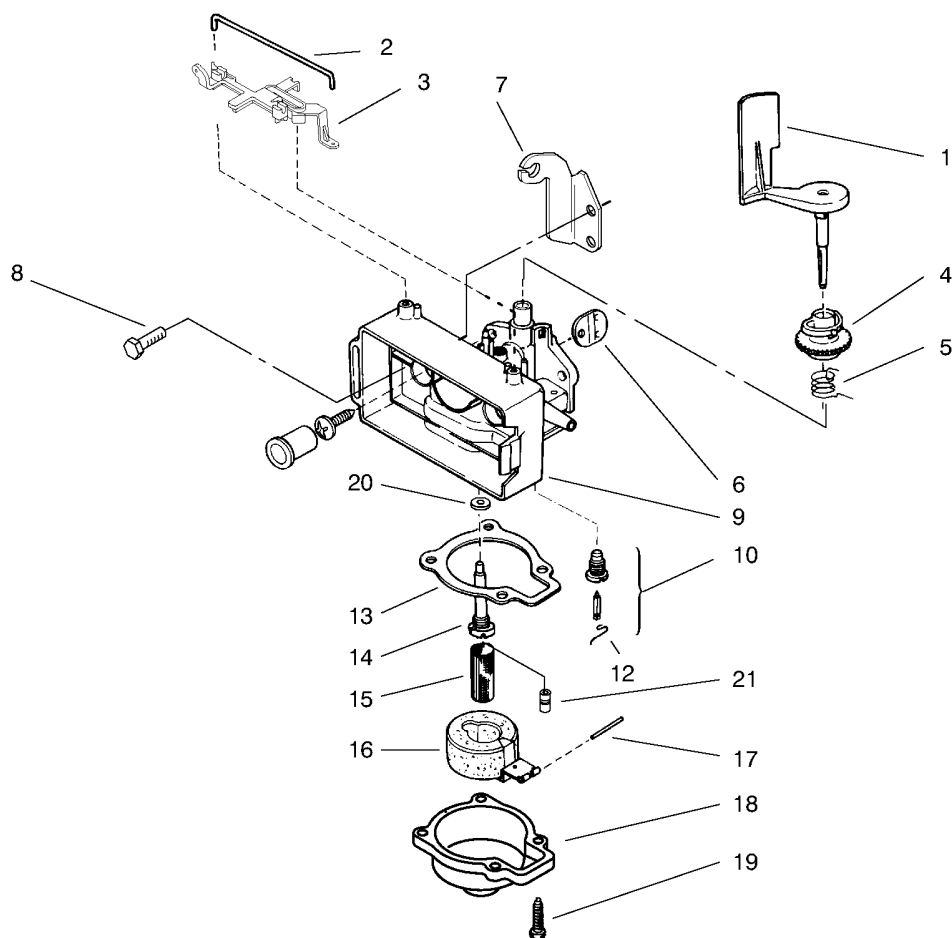


## Carburetor Assembly

| Ref. | Part Number | Qty. | Description                                      |
|------|-------------|------|--------------------------------------------------|
| 1    | 92-6376     | 1    | Air Vane&shaft                                   |
| 2    | 610165      | 1    | Retainer                                         |
| 3    | 93-1225     | 1    | Lever-Adj. Vf                                    |
| 4    | 610834      | 1    | Collar-Adjust, Airvane                           |
| 5    | 92-4944     | 1    | Spring-Gov V                                     |
| 6    | 92-6373     | 1    | Disc-Thro. V                                     |
| 7    | 92-4949     | 1    | Brkt-Thro.Cont V                                 |
| 8    | 613269      | 2    | Screw V                                          |
| 9    | 93-4324     | 1    | Carb. Body V                                     |
| 10   | 92-9697     | 1    | Kit-Float Valve, Body & Seat<br>(Incl. Ref. #12) |
| 12   | 603145      | 1    |                                                  |
| 13   | 602850      | 1    |                                                  |
| 14   | 92-6371     | 1    | Nozzle Vf                                        |
| 15   | 611071      | 1    | Filter-Fuel Vs                                   |
| 16   | 678113      | 1    | Float & Arm ASM                                  |
| 17   | 92-6389     | 1    | Pin-Straight                                     |
| 18   | 92-9691     | 1    | Chamber-Float                                    |
| 19   | 608850      | 4    | Screw-HH                                         |
| 20   | 612383      | 1    | Washer                                           |
| 21   | 92-6370     | 1    | Jet-Main Vf                                      |
|      | 92-6385     | 1    | Mainjet ●                                        |
|      | 93-4330     | 1    | Carburetor Assembly (Incl.<br>Ref. #7 Pg.6) ●    |

● Not illustrated



3319-207A

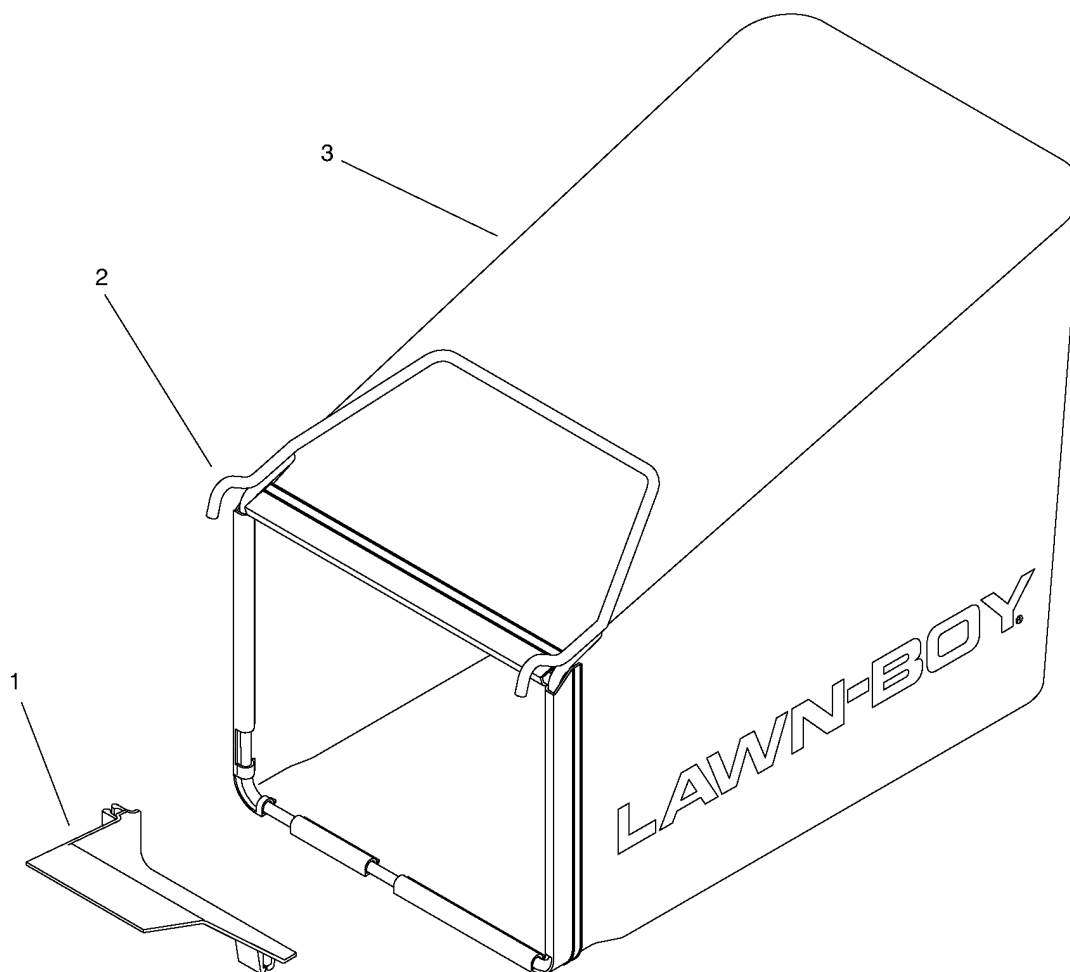

## Bag Assembly

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|---------------------|
| 1           | 71-3750            | 1           | Bag Ramp            |
| 2           | 71-8180            | 1           | Frame               |
| 3           | 92-8890            | 1           | Grass Bag - 48Cm Lb |

**Notes:**

