



Rear Bagger Mower

Model No. 10915—Serial No. 790000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake clutch

CARR: carriage

CCW: counter clock wise

CW: clockwise

DEG: degrees

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head


STD: standard

TAP: self tapping

TTH: torx truss head

Contents


- Housing Assembly 4
- Engine Assembly 5
- Blade Assembly 6
- Shroud and Block Assembly 7
- Brake and Muffler Assembly 8
- Block Assembly 9
- Recoil Starter Assembly 10
- Carburetor Assembly 11
- Rear Axle Assembly 12
- Gear Case Assembly #71-9600 13
- Handle Assembly 14
- Bag Assembly 15

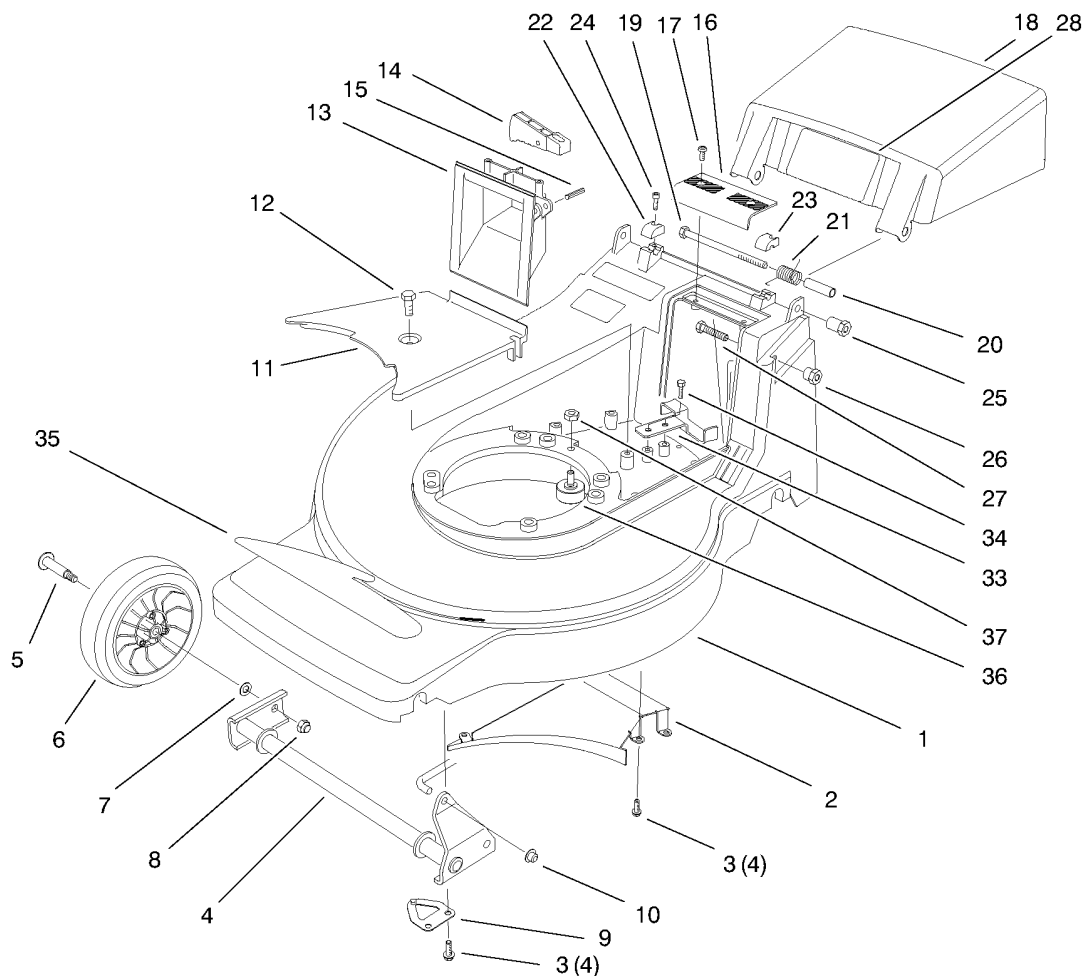

Housing Assembly


Ref.	Part Number	Qty.	Description
1	16-8889	1	Housing-Deck (Incl. Ref. # 35)
2	71-7990	1	Ramp-Discharge
3	32144-4	8	Screw-HWH
4	92-9304	1	Pivot - Front Wa
5	92-8811	2	Wheel Bolt
6	92-8810	2	Whl & Tire ASM 7"
7	40-1940	2	Washer
8	92-8819	2	Nut-Lock
9	71-8830	2	Shaft Retainer ASM
10	32112-1	1	Pushnut-Cap, Washer
11	71-7920	1	Belt Cover
12	32144-70	1	Screw-HWHTF
13	71-7870	1	Grip - Lower
14	71-7930	1	Trigger - HOC
15	3284-5	1	Pin-Spiral
16	71-7860	1	Grip-Upper
17	32144-97	2	Screw-PPH, Plastite

Ref.	Part Number	Qty.	Description
18	17-1569	1	Door-Discharge (Incl. Ref. # 28)
19	92-8806	2	5/16-18 X 4 Capscrew
20	92-9313	2	Door Spacer
21	71-9840	2	Spring-Door
22	71-7910	1	Cap-Hinge Bolt, RH
23	71-7900	1	Cap-Hinge Bolt, LH
24	65-5210	2	Screw-HSH
25	93-7161	2	48Cm Handle Spacer
26	93-7162	2	48Cm Handle Spacer
27	92-8818	2	5/16-18X1.50 Hex Capsrw
28	93-4105	1	Decal-Danger
33	71-7890	1	Rear Belt Guide *
34	32144-4	2	Screw-HWH
35	92-8837	1	*obs* Decal - Deck 450Vs
36	92-8808	1	Stud-Bearing, Ball
37	3296-29	1	Nut-Lock, NI

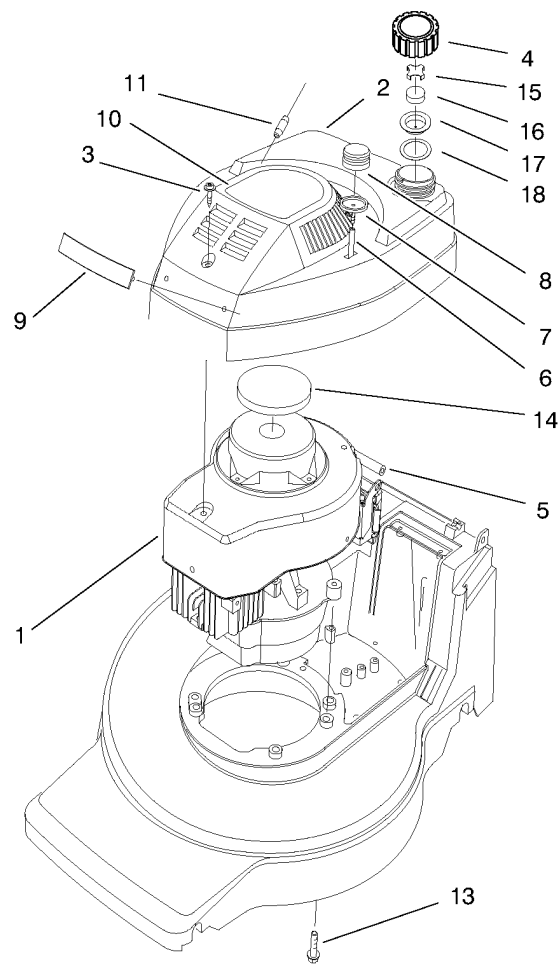


Engine Assembly

Ref.	Part Number	Qty.	Description
1		1	Engine ASM
2	92-8898	1	Shroud & Tank ASM
3	93-4302	3	Screw
4	93-3660	1	ASM-Fuel/Oil Cap
5	612782	1	Line-Fuel
6	44-3174	1	Hose-Primer
7	44-2750	1	Body-Primer
8	66-7460	1	Bulb-Primer
9	92-8615	1	Applique-Shroud
10	92-8828	1	Decal - Recoil
11	92-1701	1	Stop-Rope
13	32144-102	3	Screw-HWH
14	93-1201	1	Disc - Foam
15	93-3175	1	Baffle - Gas Cap
16	609150	1	Baffle - Foam Sm
17	93-1230	1	Cover-Fuel Cap Baffle
18	613311	1	Gasket-Fuelcap Sm

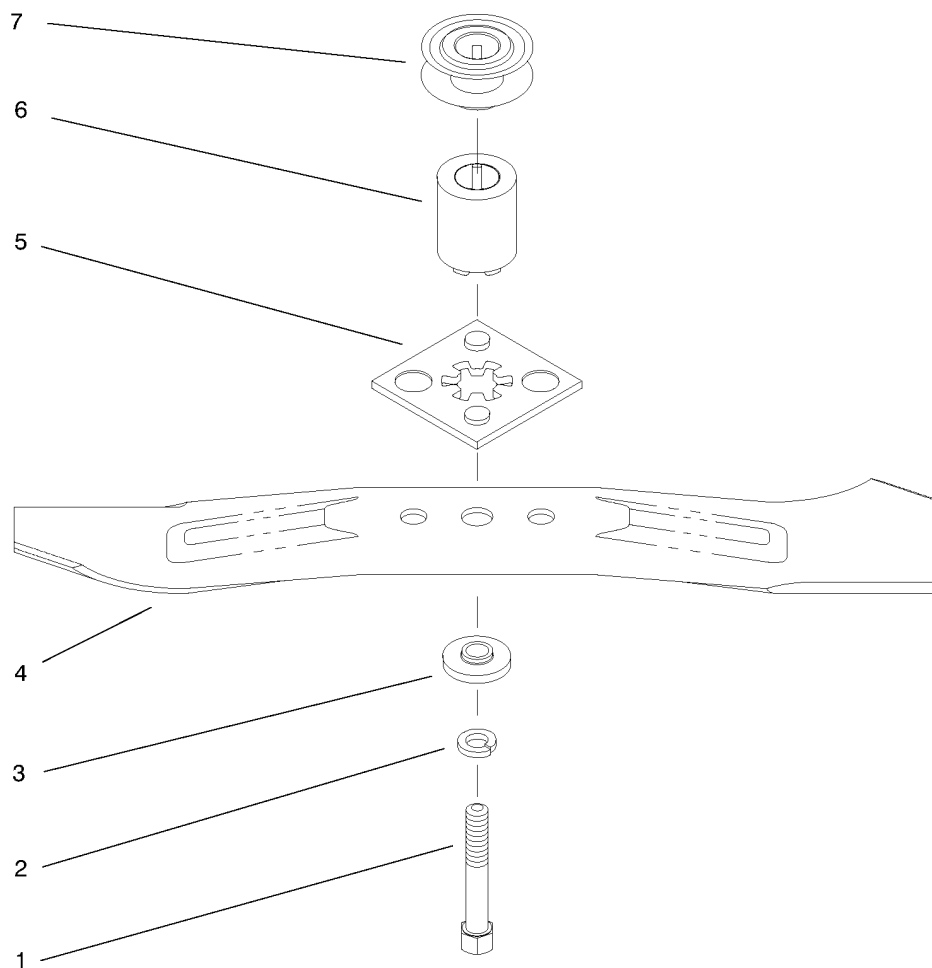


Blade Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	26-0670	1	Screw-Blade
2	3253-22	1	Washer-Lock
3	92-8626	1	Spacer-Blade
4	612079	1	Blade
5	146046	1	Plate Dr
6	92-8807	1	Hub
7	93-0278	1	Pulley - Driver

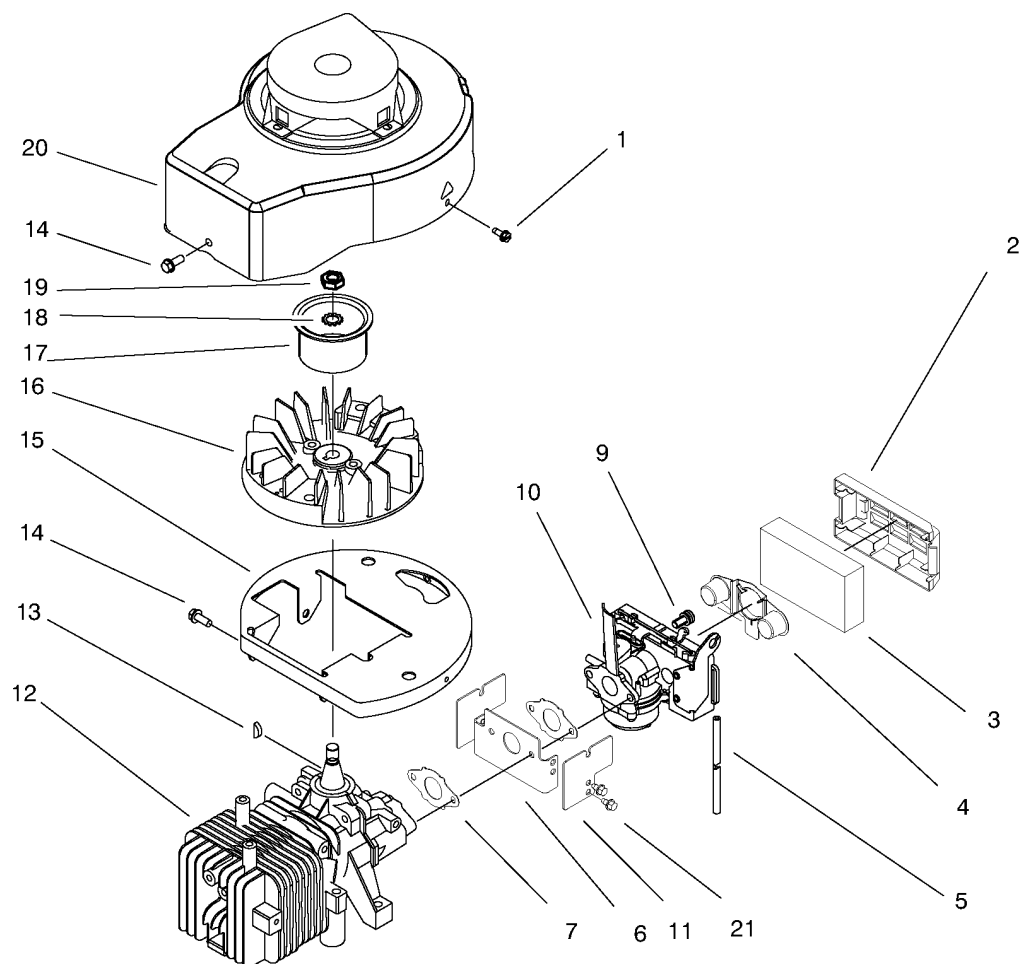


Shroud and Block Assembly

Ref.	Part Number	Qty.	Description
1	614699	3	Screw Vf
2	93-4303	1	Cover-Air Filter
3	609493	1	Element-Air Fil Vf
4	93-4320	1	Shield-Fuel V
5	44-3174	1	Hose-Primer
6	93-4315	1	Shield-Carb V Intl
7	92-4948	2	Gasket-Carb Vf
9	609482	2	Screw
10	92-9695	1	Carburetor Assembly
11	93-4316	2	Shield- Gov. V Intl
12	94-5731	1	Short Block
13	607199	1	Key
14	614702	4	Screw
15	93-1216	1	Base-Shroud
16	684743	1	Flywheel(Mach) V
17	614640	1	Hub-Starter V
18	316959	1	Washer-Lock
19	130743	1	Nut
20	93-4304	1	Shroud
21	613269	4	Screw V

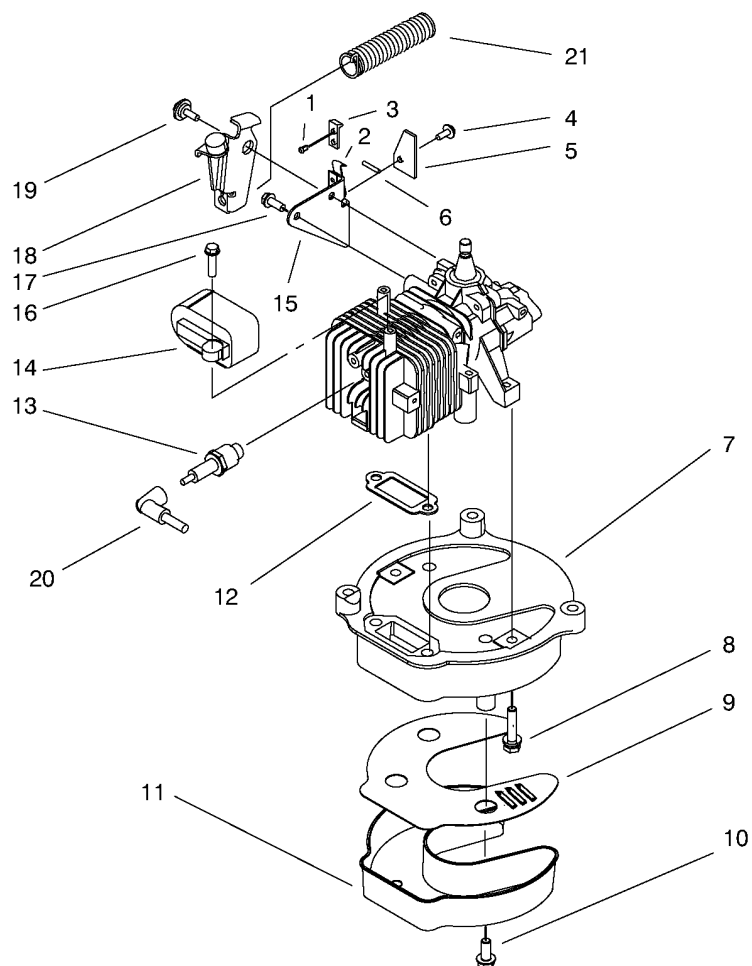

Brake and Muffler Assembly


Ref.	Part Number	Qty.	Description
1	3290-459	2	Rivet-Plastic
2	60-9010	1	Strap-Ground
3	92-2925	1	Strap-Insulation
4	12-5450	1	Screw
5	53-4690	1	Stop-Ground Strap
6	92-1156	1	Electrical Lead ASM
7	614654	1	Plate-Muffler V
8	607601	4	Screw V
9	93-1217	1	Baffle-Muffler
10	609471	3	Screw
11	93-1108	1	Cover-Muffler
12	93-1233	1	Gasket-Exh. Vf
13	614008	1	Plug-Spark
14	684049	1	Ignition Assembly (Incl. Ref. #20)
15	84-7820	1	Plate-Brake
16	613208	2	Screw
17	614702	1	Screw
18	66-5380	1	Brake Plate ASM
19	92-9698	1	Screw-Shoulder
20	684179	1	Hi-Tens. Lead Sm
21	66-5370	1	Spring-Compression

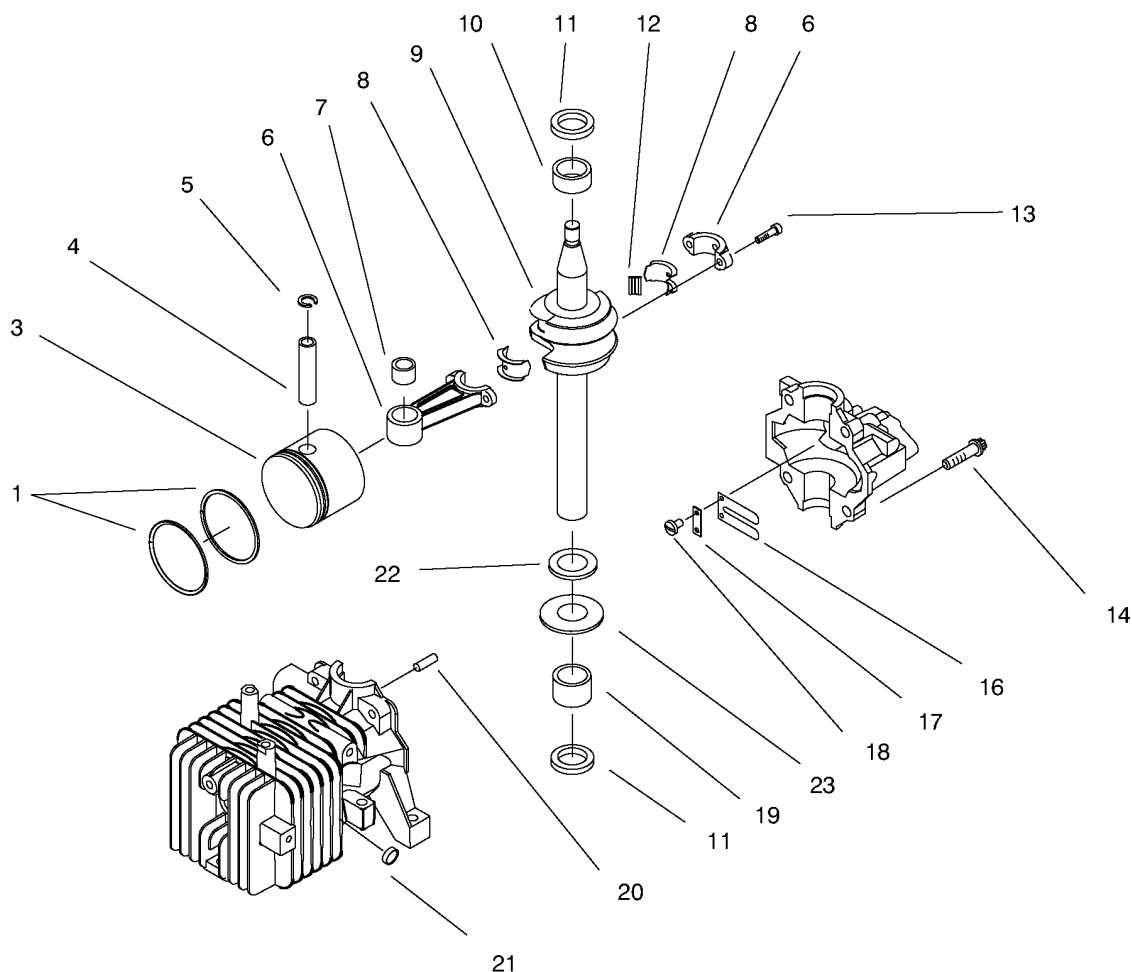

Block Assembly


Ref.	Part Number	Qty.	Description
1	681737	1	F-Ring Set
3	92-4925	1	Piston & Connecting Rod (Incl. Ref. #1, 3-7 & 13)
4	606608	1	Pin-Wrist Vf
5	303712	2	Ring-Retaining
6	92-4921	1	Connecting Rod Assembly (Incl. Ref. #8, 12 & 13)
7	92-4927	1	Bearing Xev
8	677982	1	Liner ASM
9	94-5733	1	C/Shaft 48Cm Fv
10	681830	1	Bearing V
11	611396	2	Seal-Oil
12	609754	1	Roller Strip
13	611393	2	Screw-HSH
14	614636	4	Screw-HWH V
16	602588	1	Reed-Carburetor
17	602587	1	Plate-Backup, Reed
18	612872	2	Screw-HH
19	681831	1	Bearing V
20	609629	1	Dowel Xev
21	609123	4	Plug-Core Vf
22	252-76	1	Bearing-Thrust
23	252-80	1	Washer-Thrust
	684725	1	Cylinder & Crankcase Asm.

● Not illustrated

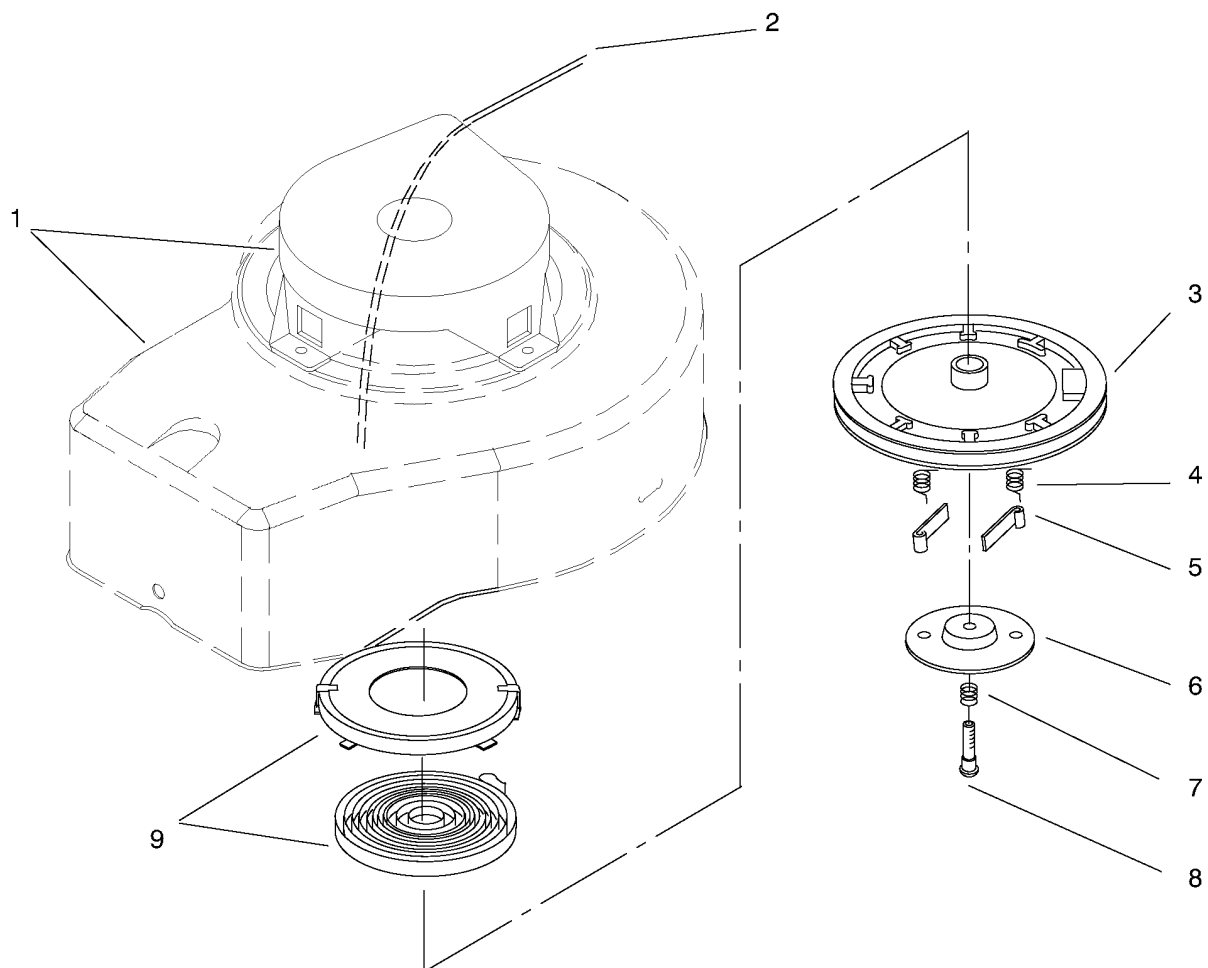

Recoil Starter Assembly


Ref.	Part Number	Qty.	Description
1	93-4304	1	Shroud
2	93-4305	1	Rope - Grey 88 5/8
3	92-4929	1	Pulley Assembly
4	92-4930	2	Spring - Dog
5	92-4931	2	Dog
6	92-9692	1	Retainer
7	92-4933	1	Screw - Center
8	92-4934	1	Spring - Brake
9	92-4935	1	Spring Keeper ASM

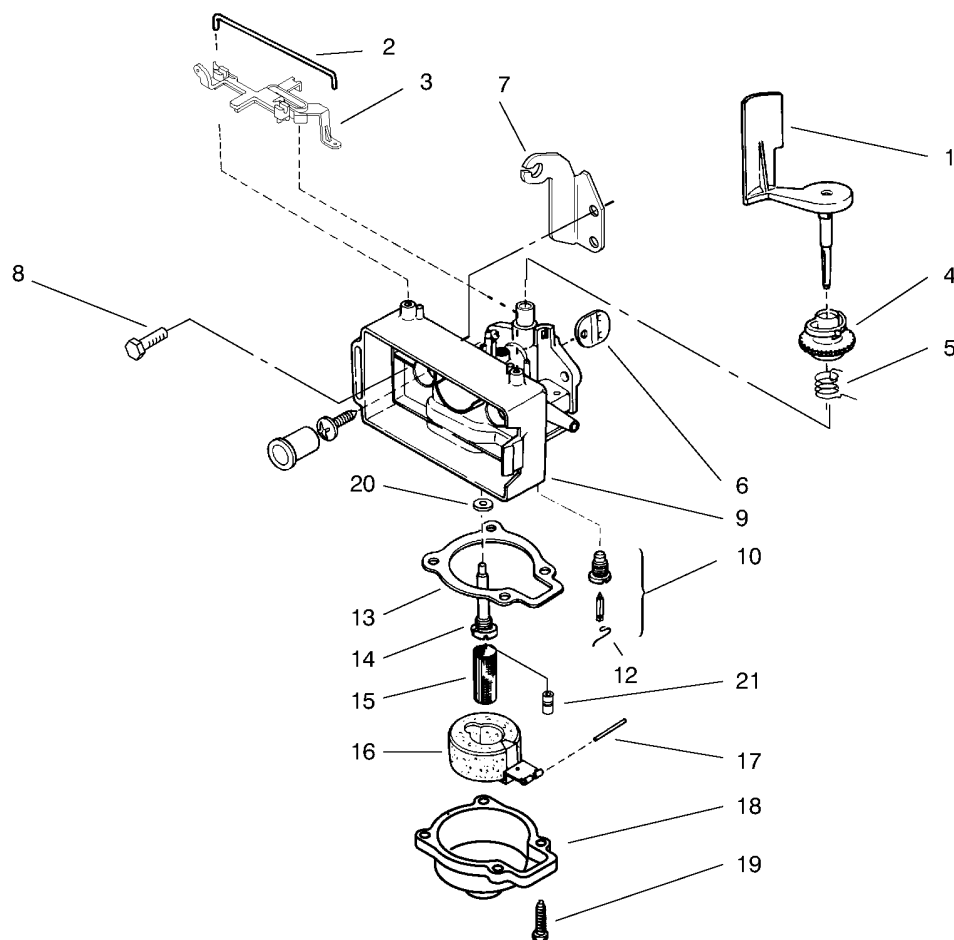

Carburetor Assembly

Ref.	Part Number	Qty.	Description
1	92-6376	1	Air Vane&shaft
2	610165	1	Retainer
3	93-1225	1	Lever-Adj. Vf
4	610834	1	Collar-Adjust, Airvane
5	92-4944	1	Spring-Gov V
6	92-6373	1	Disc-Thro. V
7	92-4949	1	Brkt-Thro.Cont V
8	613269	2	Screw V
9	93-4324	1	Carb. Body V
10	92-9697	1	Kit-Float Valve, Body & Seat (Incl. Ref. #12)
12	603145	1	
13	602850	1	
14	92-6371	1	Nozzle Vf
15	611071	1	Filter-Fuel Vs
16	678113	1	Float & Arm ASM
17	92-6389	1	Pin-Straight
18	92-9691	1	Chamber-Float
19	608850	4	Screw-HH
20	612383	1	Washer
21	92-6370	1	Jet-Main Vf
	92-6385	1	Mainjet ●
	93-4330	1	Carburetor Assembly (Incl. Ref. #7 Pg.6) ●

● Not illustrated

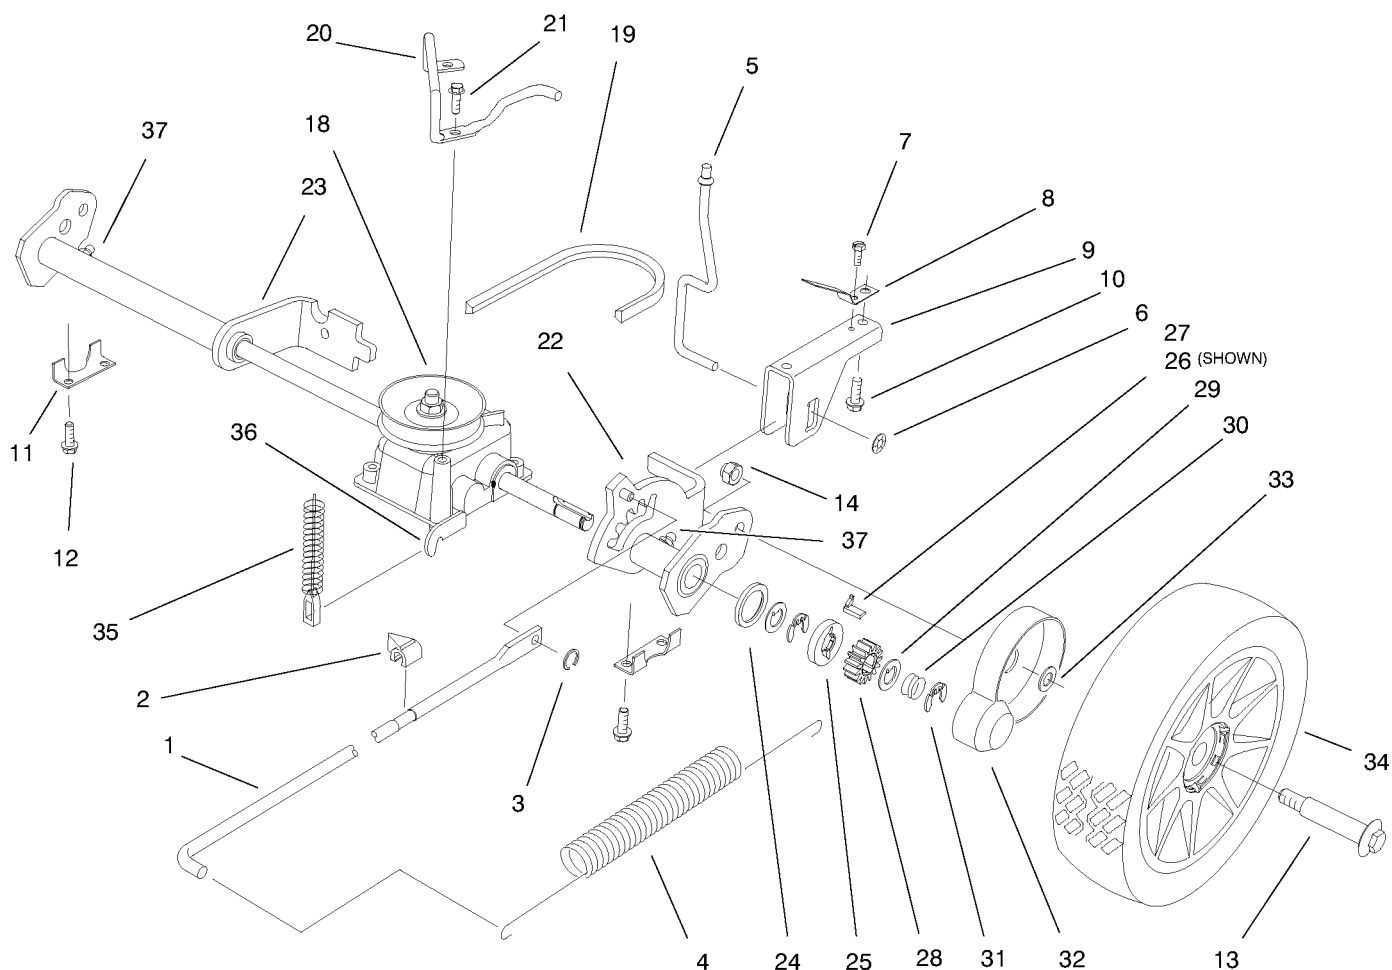


Rear Axle Assembly

Ref.	Part Number	Qty.	Description
1	92-9301	1	Rod - Link
2	71-7980	1	Indicator-Height Of Cut
3	32151-93	1	Grip Ring
4	92-9300	1	Spring-Counterbalance
5	71-7840	1	Trigger Rod
6	32112-13	1	Pushnut
7	32144-31	1	Screw 8 - 32 X 250
8	71-8060	2	Spring - Trigger Ret
9	71-8080	1	Saddle - HOC
10	63-8590	2	Screw
11	71-7770	2	Rear Securing Plate
12	32144-4	4	Screw-HWH
13	92-1057	2	Bolt-Shoulder
14	3296-59	2	Nut-Lock, NI
18	71-9600	1	Gear Case Assy
19	71-9450	1	V-Belt
20	71-9850	1	Retainer Belt
21	32144-4	2	Screw-HWH

Ref.	Part Number	Qty.	Description
22	92-9311	1	Arm-L.H. Pivot
23	92-9310	1	RH Pivot Arm Assembly
24	65-4710	2	Ring-Friction
25	65-4760	2	Washer-Clutch
26	66-6050	1	Key-Rocking, LH
27	66-6040	1	Key-Rocking, RH ●
28	65-4750	2	Gear-Pinion
29	65-4740	4	Washer-Thrust, Keyed
30	65-4720	2	Spring-Compression
31	65-2720	4	Ring-Clip, Locking
32	74-1660	2	Cover-Wheel
33	74-1670	2	Spacer-Cover, Wheel
34	92-9318	2	8" Whl ASM W/Gear
35	71-8310	1	Spring-Compression
36	71-9630	1	Bracket-Traction (Incl. With 71-9600)
37	302-26	2	Fitting-Grease


● Not illustrated

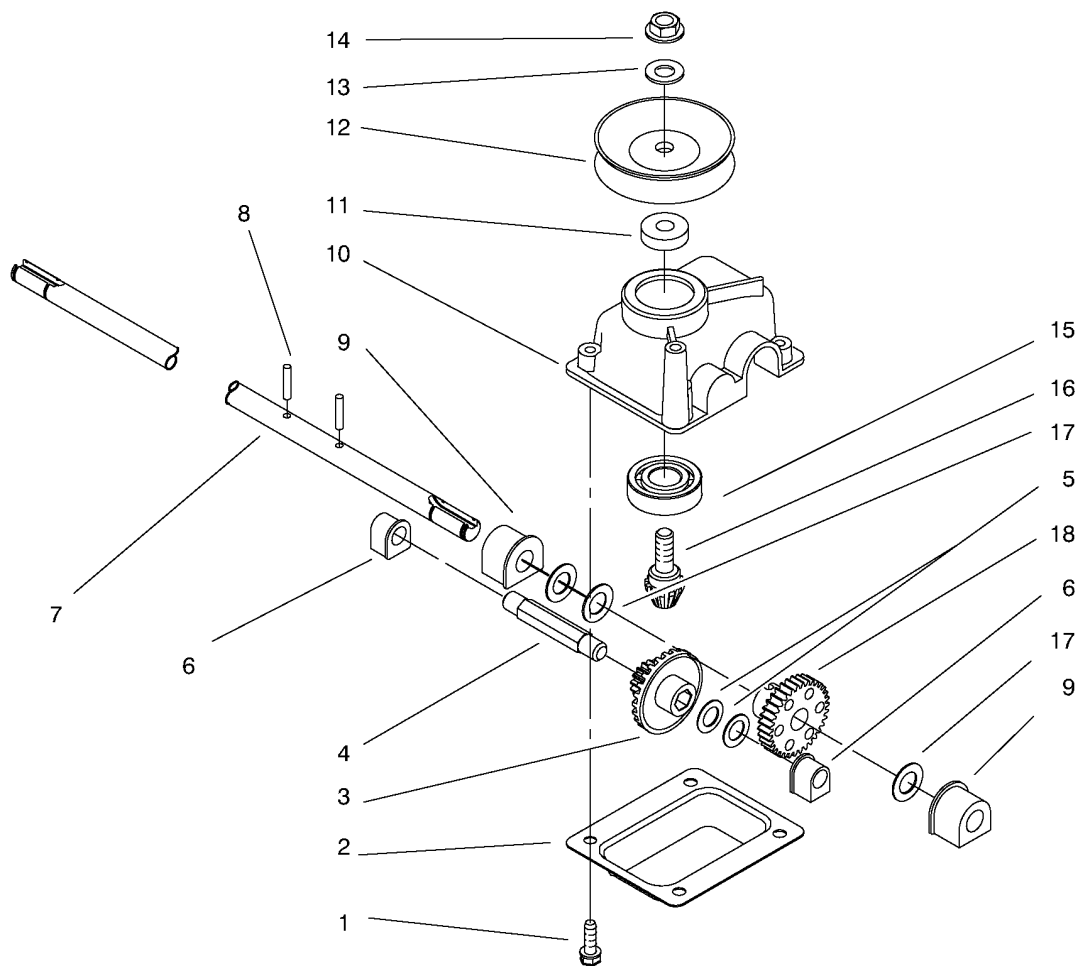

Gear Case Assembly #71-9600


Ref.	Part Number	Qty.	Description
1	49-2040	4	Screw-HWHTF
2	614668	1	Cover-Gear Case
3	55-3760	1	Gear-Bevel
4	614696	1	Shaft-Intermediate
5	36-4791	2	Washer-Thrust
6	60-8750	2	Bushing
7	71-9620	1	Output Shaft
8	32121-114	2	Spirol Pin H D
9	60-8850	2	Bushing
10	614578	1	Gearcase
11	62-6660	1	Spacer
12	71-9610	2	Pulley-Driven Half
13	3256-24	1	Washer-Flat
14	3296-5	1	Nut-Lock
15	38-7820	1	Bearing-Ball
16	60-8890	1	Gear-Pinion
17	36-4780	3	Washer-Plain
18	614596	1	Gear
	71-9600	1	Gear Case Assy ●

● Not illustrated

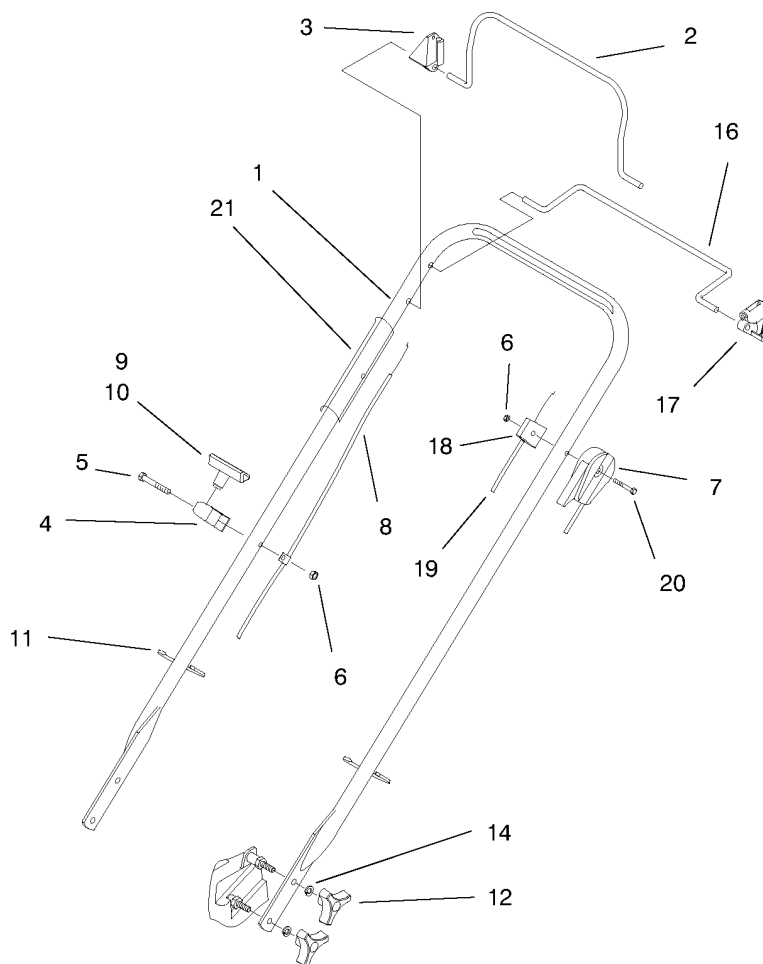

Handle Assembly

Ref.	Part Number	Qty.	Description
1	92-8800	1	Handle
2	92-1002	1	Bail-Brake
3	92-5412	1	Stop-Pivot
4	93-7383	1	Guide-Rope
5	321-53	1	Screw-HH
6	3296-73	2	Nut-Lock, NI
7	92-9327	1	Cable - Throttle
8	92-9328	1	Cable - Brake
9	612824	1	Clip-Starter
10	612825	1	Handle-Start
11	3290-378	2	Tie-Cable
12	93-7159	4	Handle-Knob
14	3253-33	4	Washer-Lock
16	92-1001	1	Bail-Control
17	92-5412	1	Stop-Pivot
18	92-7729	1	Anchor-Cable, Upper
19	92-9316	1	Cable - Traction
20	321-57	1	Screw-HH
21	93-7266	1	Decal - Operation

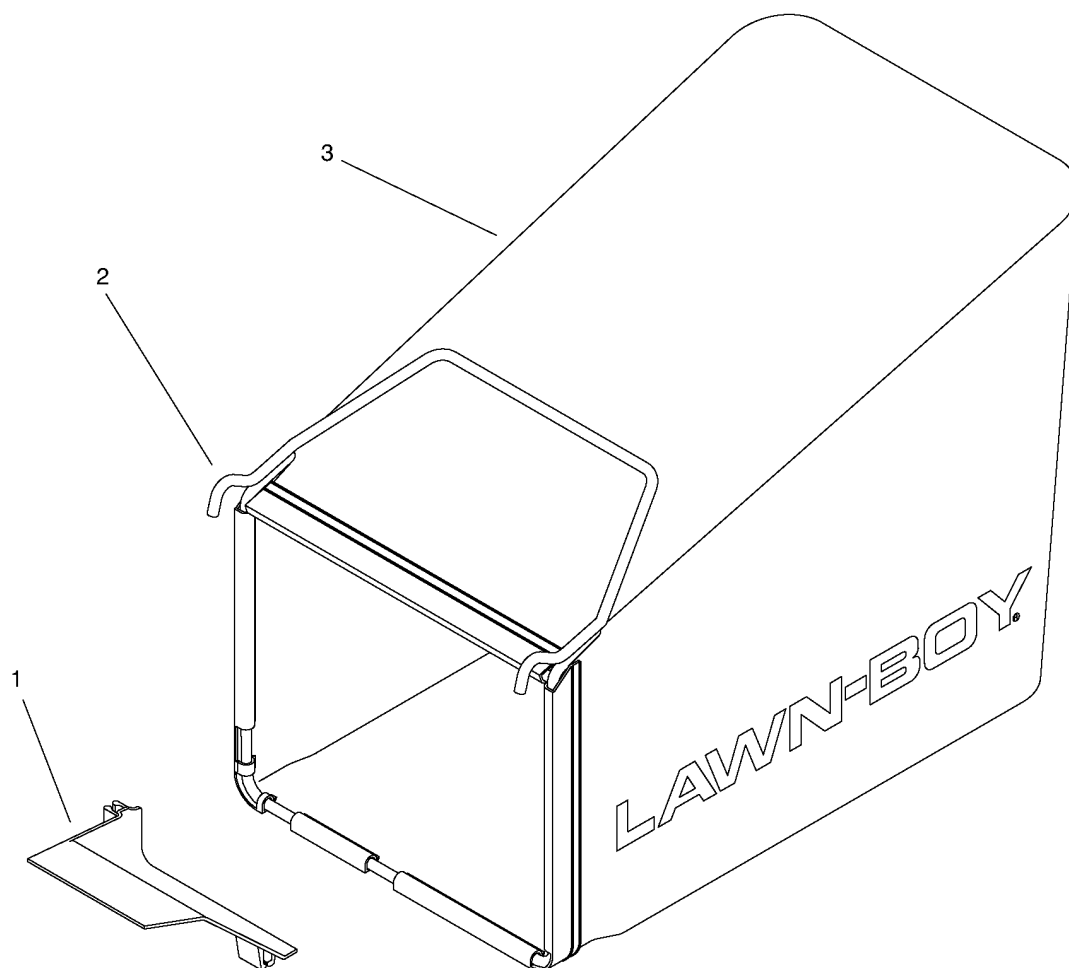

Bag Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	71-3750	1	Bag Ramp
2	71-8180	1	Frame
3	92-8890	1	Grass Bag - 48Cm Lb

