


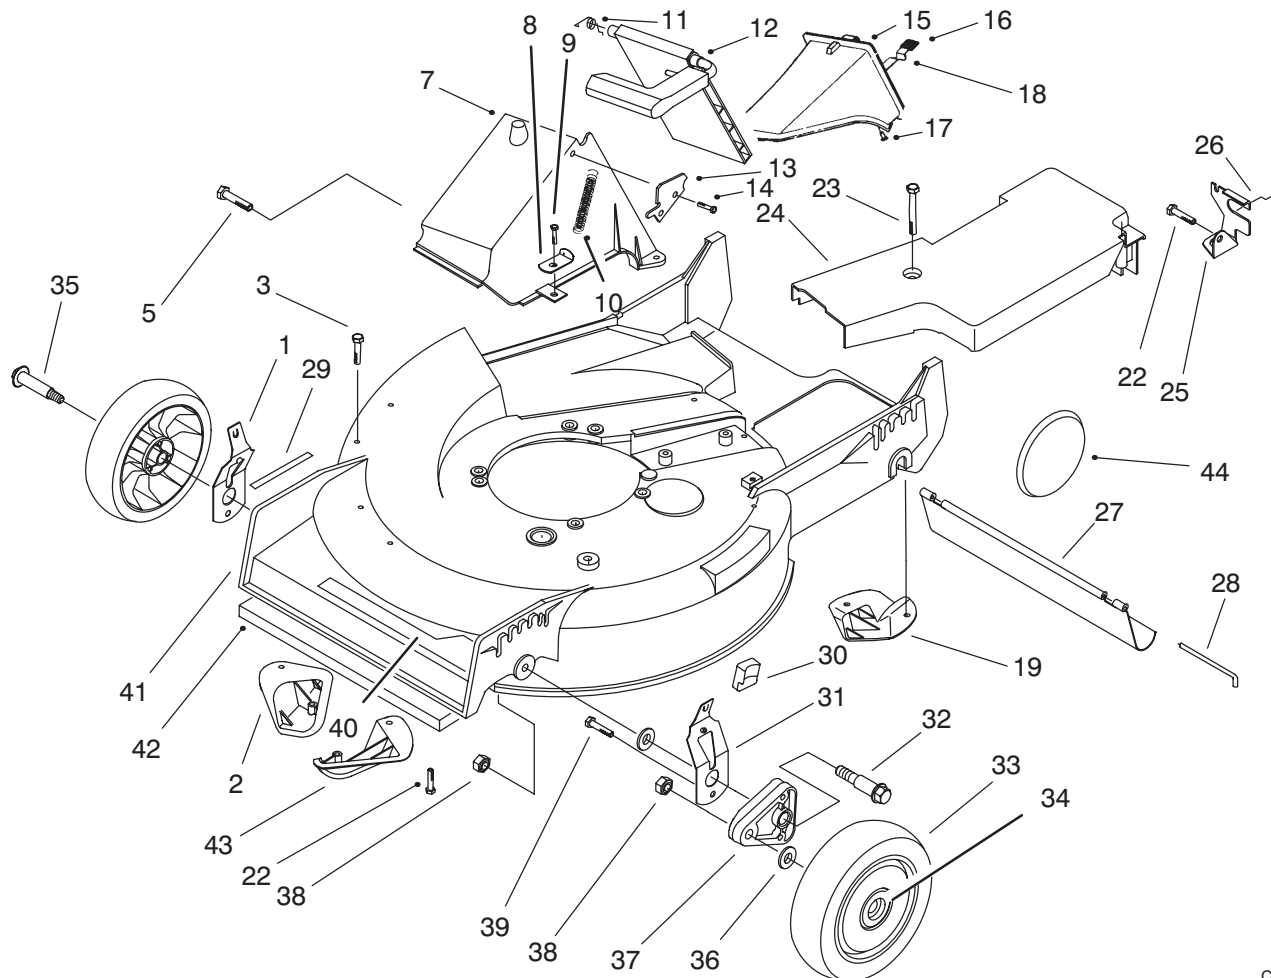


MODEL NO. 20764BC-5900001 & UP

**PARTS
CATALOG****21" RECYCLER[®]**
Mower

C-2133

HOUSING ASSEMBLY


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	71-0560	Spring Arm Ass'y - R.H.	1	16	76-4650	Grip - Latch	1
2	92-1730	Plate - Kicker Left Front	1	17	3295-35	Rivet	1
3	32144-111	Screw - Pan Hd.	6	18	76-4640	Latch - Plate	1
5	46-6810	Screw - Hex Washer Hd. Thread Forming	1	19	92-1750	Plate - Kicker Left Rear	1
7	82-9151	Tunnel - Discharge	1	22	32144-70	Screw - Hex Washer Hd. Thread Forming	5
8	71-9350	Bracket - Spring	1	23	37-7260	Screw - Special Cap	2
9	46-6811	Screw w/Washer	3	24	82-9910	Belt Cover	1
10	76-4660	Spring - Door	1	25	82-5680	Bracket - Traction Adjust.	1
11	80-3770	Retainer - Door	1	26	46-7030	Retainer - Cable	1
12	77-0200	Discharge Door Assembly	1	27	44-0580	Shield - Rear	1
13	76-4570	Plate - Latch	1	28	33-3208	Rod - Shield	1
14	46-8090	Screw - Hex Washer Hd. Self Tapping	2	29	92-7856	Decal - H.O.C.	4
15	77-0502	Plug Assembly (Incl. Ref. #16-18)	1	30	25-7740	Knob - Spring Arm	2
				31	71-0570	Spring Arm Ass'y - L.H.	1
				32	66-0560	Screw - Pivot	2

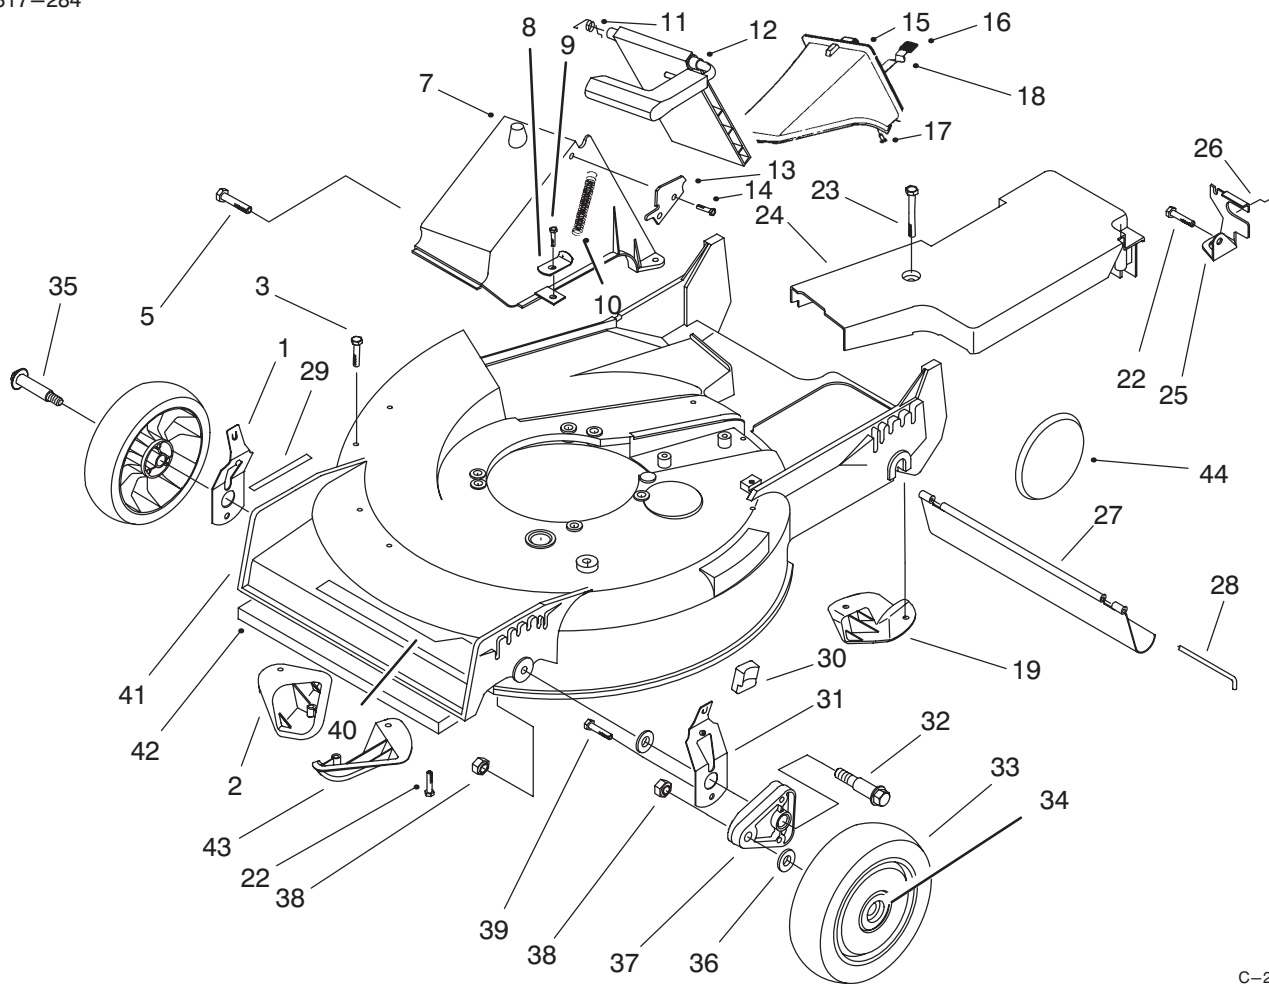

C-2133

HOUSING ASSEMBLY (Continued)


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
33	14-9949	Wheel & Tire Assembly (Incl. Ref. #34)	2	40	92-7858	Decal - Deck	1
34	27-6250	Bushing	4	41	16-8719	Housing Assembly (Incl. Ref. #2, 3, 19, 29, & 43 pg. 2) (Incl. Ref. #5 & 6 pg. 3)	1
35	27-6232	Bolt - Wheel	2	42	46-5400	Shield - Front	1
36	40-1940	Washer - Wheel	4	43	92-1720	Plate - Kicker Rt. Front	1
37	66-0580	Arm - Pivot	2	44	92-7663	Cover - Wheel	1
38	3296-6	Nut - Lock	4				
39	32144-85	Screw - Hex Hd. Cap	2				

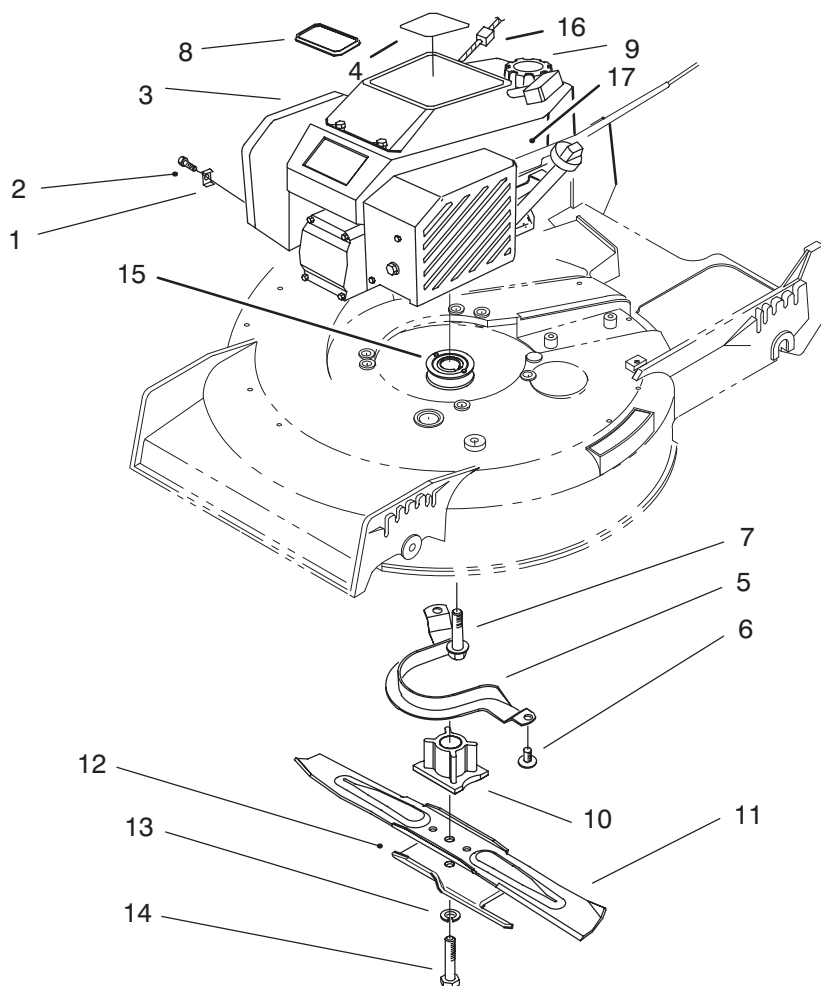

C-2087

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	2210-249	Clamp - Throttle	1	10	62-7540	Retainer - Blade	1
2	86-7990	Screw - Clamp	1	11	14-9419	Blade	1
3	93-1367	Engine	1	12	92-1599	Stiffener - Blade	1
4	93-4355	Decal - Recoil	1	13	3253-22	Washer - Lock	1
5	66-0570	Guide - Belt	1	14	26-0670	Screw - Blade	1
6	32144-70	Screw - Hex Washer Hd.	2	15	62-7550	Pulley - Driver	1
7	32144-102	Screw - Thread Forming	3	16	2210-316	Stop - Rope	1
8	92-2289	Plate - Toro	1	17	77-9550	Cover - Brake	1
9	110352	Gas Cap Assembly	1				

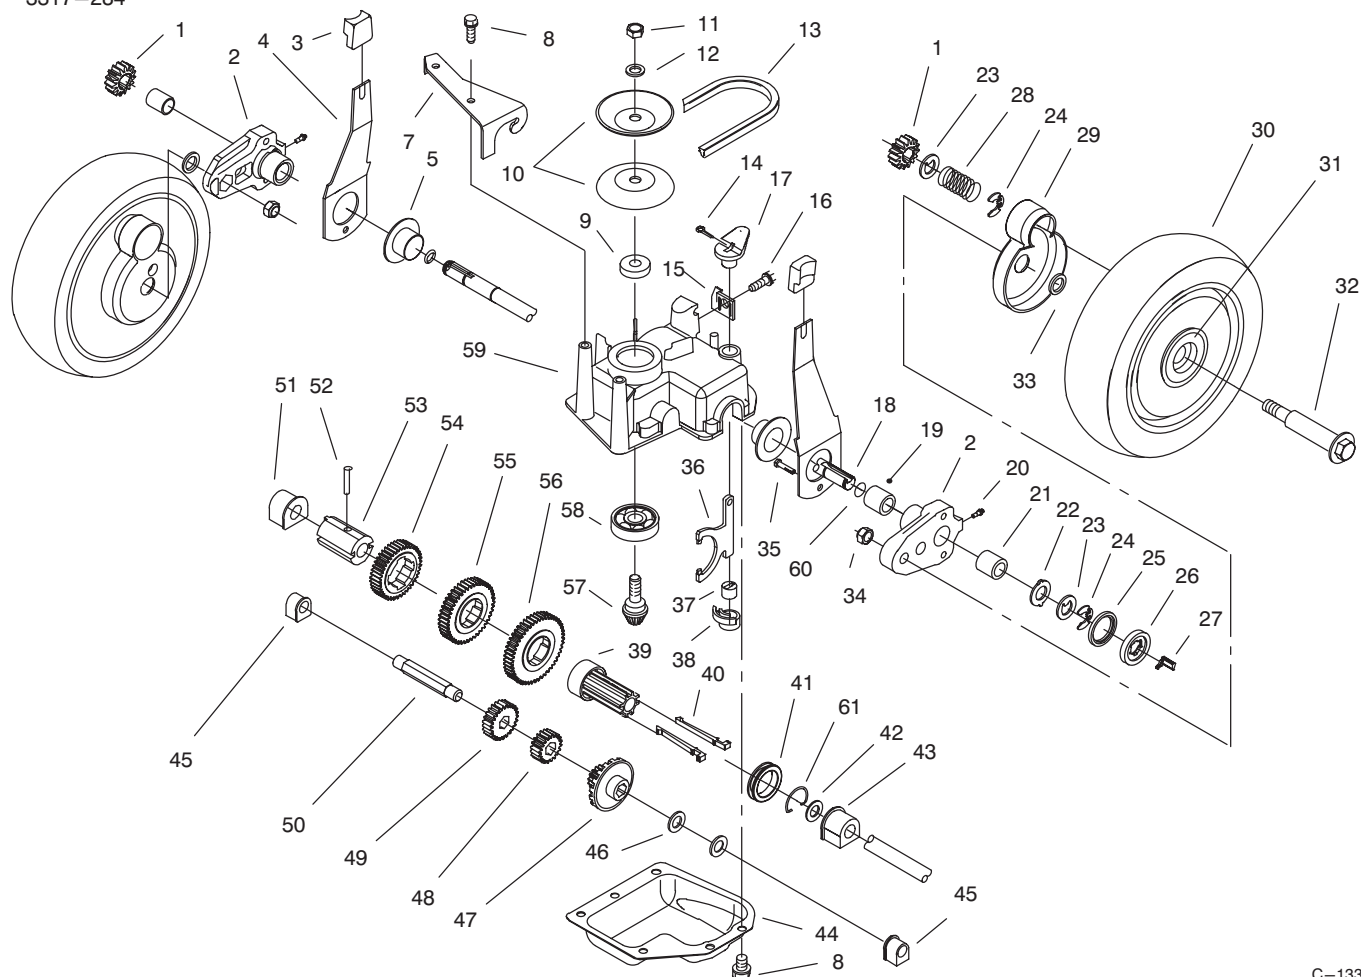


C-1333

GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	65-4750	Pinion	2	26	65-4760	Washer - Clutch	2
2	63-8701	Pivot Arm Assembly (Incl. Ref # 19, 20, & 21)	2	27	66-6050	Key - Rocker L.H.	1
3	25-7740	Knob - Arm	2	*	66-6040	Key - Rocker R.H.	1
4	63-8720	Spring Arm Assembly	2	28	65-4720	Spring	2
5	42-3520	End Cap	2	29	74-1660	Cover - Wheel	2
7	62-4320	Bracket - Belt Guide	1	30	14-9959	Wheel - Tire & Gear Ass'y (Incl. Ref. # 31)	2
8	49-2040	Screw - Self Tapping	8	31	27-6250	Bushing - Wheel	4
9	62-6660	Spacer	1	32	27-6232	Wheel Bolt	2
10	60-8840	Pulley - Half	2	33	74-1670	Spacer - Wheel Cover	2
11	3296-5	Locknut	1	34	3296-6	Locknut	2
12	3256-24	Washer - Flat	1	35	32144-85	Screw	2
13	62-3900	V-Belt	1	36	60-8870	Yoke - Shift	1
14	3272-10	Pin - Cotter	1	37	29-9570	Bushing - Yoke	1
15	82-8780	Cable - Retainer	1	38	60-8810	Retainer - Shift Fork	1
16	32144-70	Screw - Thread Forming	1	39	76-0780	Sleeve - Shift Key	1
17	60-8821	Lever - Shift	1	40	76-0760	Key - Shift	2
18	65-4770	Shaft - Output	1	41	76-0770	Collar - Shift	1
19	70-9760	Bushing	2	42	36-4780	Washer - Thrust	1
20	302-56	Fitting - Grease	2	43	60-8770	Bushing - Output Shaft	1
21	48-2060	Needle Bearing	2	44	60-8730	Cover - Gear Case	1
22	65-4730	Thrust Washer	2	45	60-8750	Bushing - Int. Shaft	2
23	65-4740	Thrust Washer	4	46	36-4791	Washer - Thrust	2
24	65-2720	Ring - Retaining	4	47	55-3760	Gear - Pinion 15 Tooth	1
25	65-4710	Ring - Friction	2	48	55-3780	Gear - Pinion 20 Tooth	1

*Not Illustrated

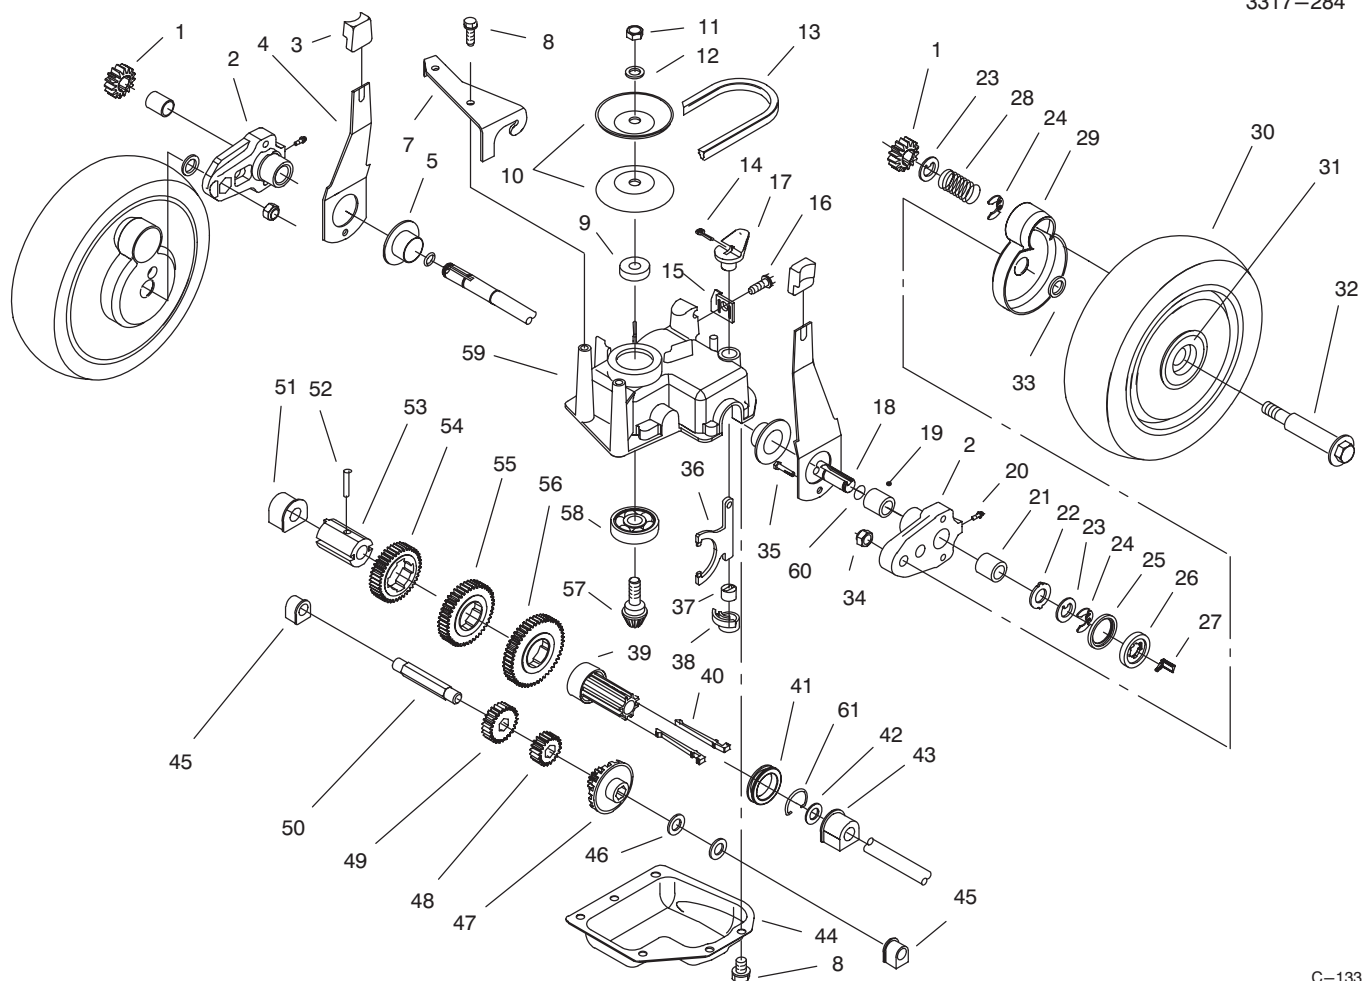


C-1333

GEAR CASE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
49	55-3800	Gear — Pinion	1	56	55-3770	Gear — 49 Tooth 1st Gear	1
50	60-8800	Shaft — Intermediate	1	57	60-8890	Pinion — Bevel	1
51	60-8850	Bushing — Output Shaft	1	58	38-7820	Bearing — Ball	1
52	32121-120	Pin — Coil	1	59	60-8710	Gear Case — Upper	1
53	60-8790	Sleeve — Gear	1	60	237-153	O-Ring	2
54	55-3810	Gear — 39 Tooth 3rd Gear	1	61	65-5250	Clip — Spring	1
55	55-3790	Gear — 44 Tooth 2nd Gear	1	*	62-6673	Gear Case Assembly	1

*Not Illustrated

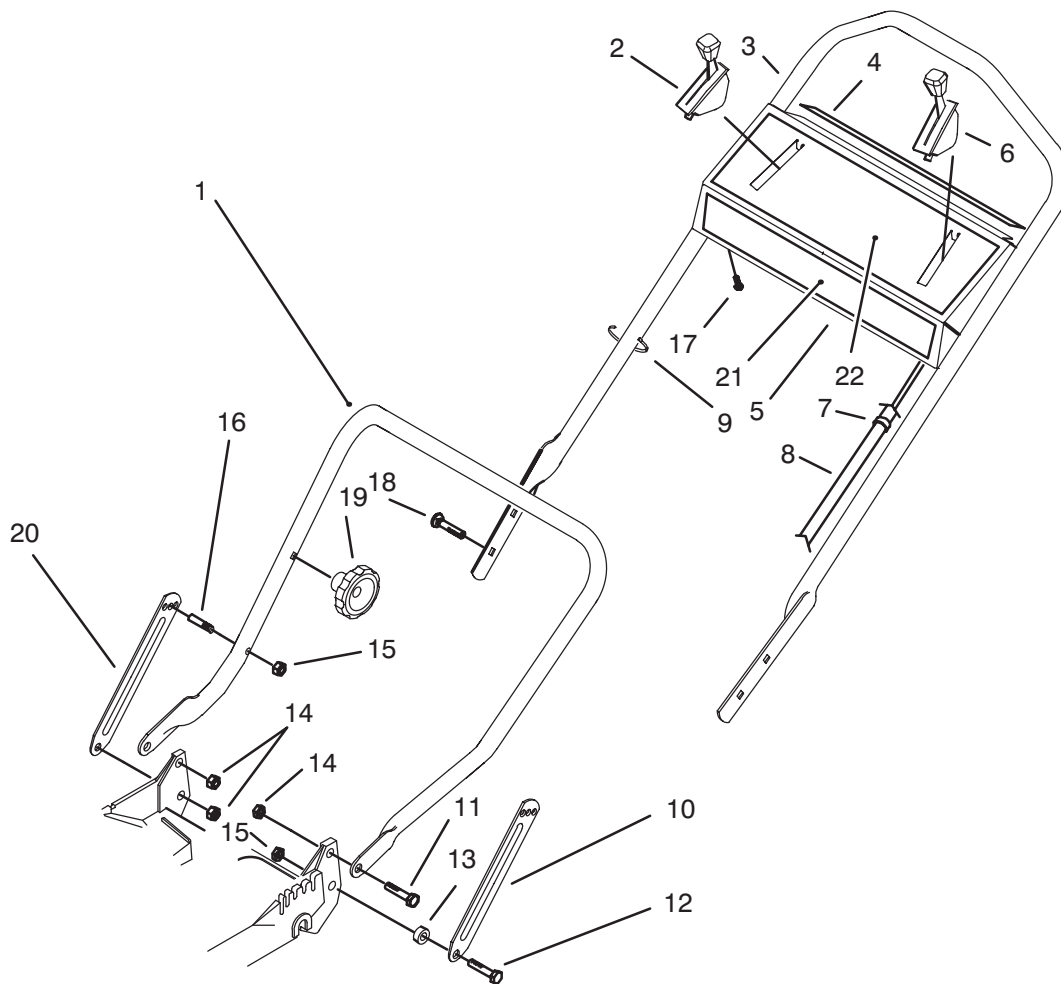

C-1542

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	82-5530	Lower Handle Ass'y	1
2	76-2712	Control - Ground Speed	1
3	84-8330	Handle - Upper	1
4	93-6655	Decal - Danger	1
5	16-8729	Panel - Control (Incl. Ref. #4 & 22)	1
6	74-3892	Control - Throttle (Bend Type # 3) (Sheath Lg. 62 3/4") (Wire Lg. 2 3/8")	1
7	2412-50	Clip Convoluted Tubing	3
8	46-6440	Cover - Control Cable	1
9	3290-378	Tie - Cable	3

Ref. No.	Part No.	Description	No. Used
10	84-8360	Latch - Handle L.H.	1
11	27-7211	Screw - Shoulder	2
12	27-7210	Screw - Shoulder	2
13	3-3287	Spacer - Handle Latch	2
14	3296-29	Nut - Lock	3
15	3296-47	Nut - Lock	3
†16	49-2750	Pin - Handle	2
17	32144-115	Screw - Tapping	5
18	17-9421	Screw - Handle	2
19	19-4050	Knob - Handle Release	2
20	84-8400	Latch - Handle R.H.	1
21	92-7859	Decal - Toro Panel,	1
22	93-6662	Decal - Instructions	1


†Service Replacement Part

C-2134

7

Ref. No.	Part No.	Description	No. Used
1	52-7430	Bar - Control	1
2	46-6434	Screw - Handle	1
3	46-5520	Lever - Traction	1
4	46-5481	Cable - Traction	1
5	3296-58	Nut - Lock	2
6	49-1630	Support - Spacer	2
7	17-9421	Screw - Handle	2
8	3296-42	Nut - Lock	3

Ref. No.	Part No.	Description	No. Used
9	3256-22	Washer - Flat	1
10	46-6980	Support - Cable	1
11	321-3	Screw - Hex Hd. Cap	1
12	66-5350	Lever - Control	1
13	92-7720	Guide - Rope	1
14	76-4331	Cable - Brake	1
15	321-52	Screw - Hex Hd. Cap	1

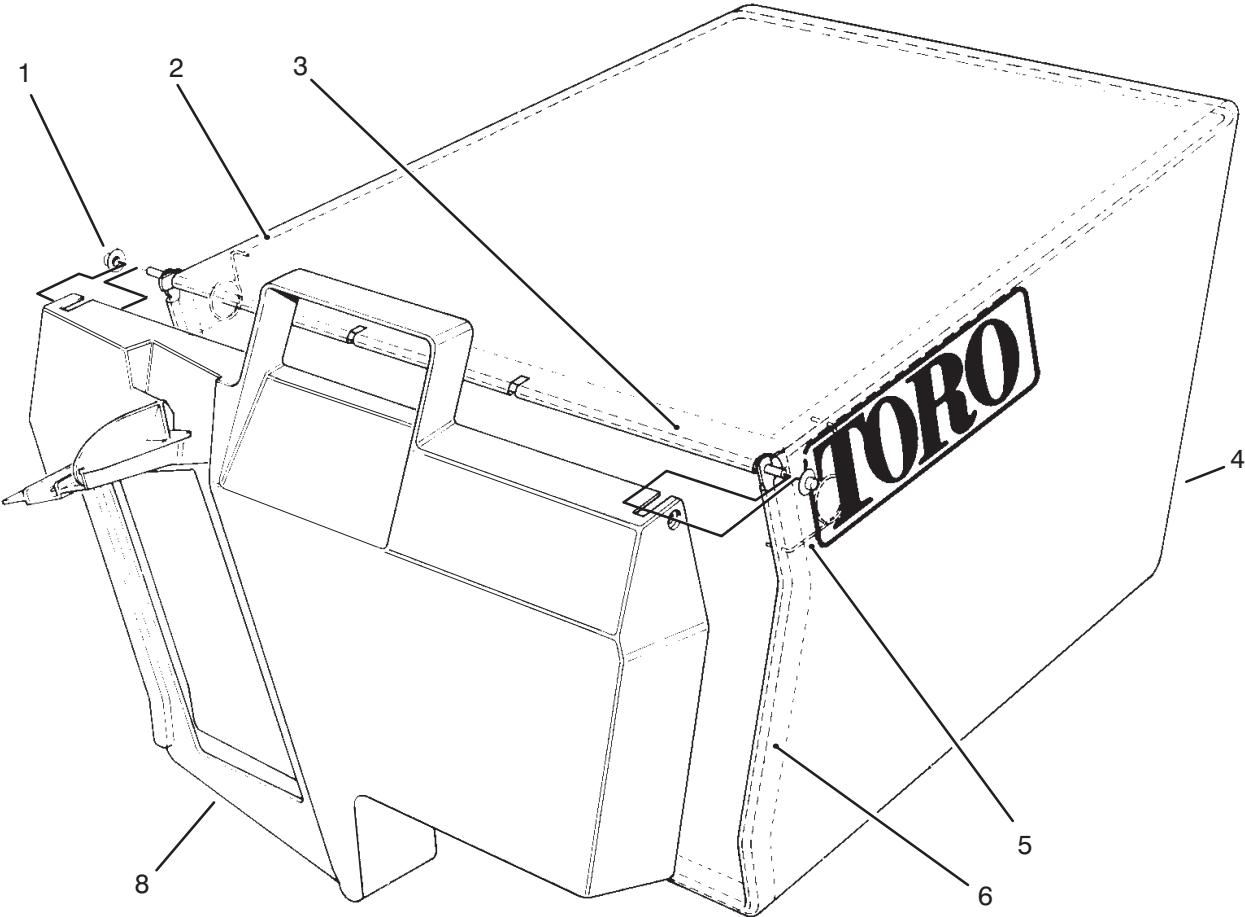


C-1839

GRASS BAG ASSEMBLY NO. 11-0189

Ref. No.	Part No.	Description	No. Used
1	3290-422	Nut - Push	2
2	42-4030	Bag Frame - Upper	1
3	33-4820	Hinge - Bag Door	1
4	8-2759	Bag - Grass	1

Ref. No.	Part No.	Description	No. Used
5	36-6910	Spring	2
6	42-4020	Frame - Bag	1
8	37-1393	Door - Grass Bag	1

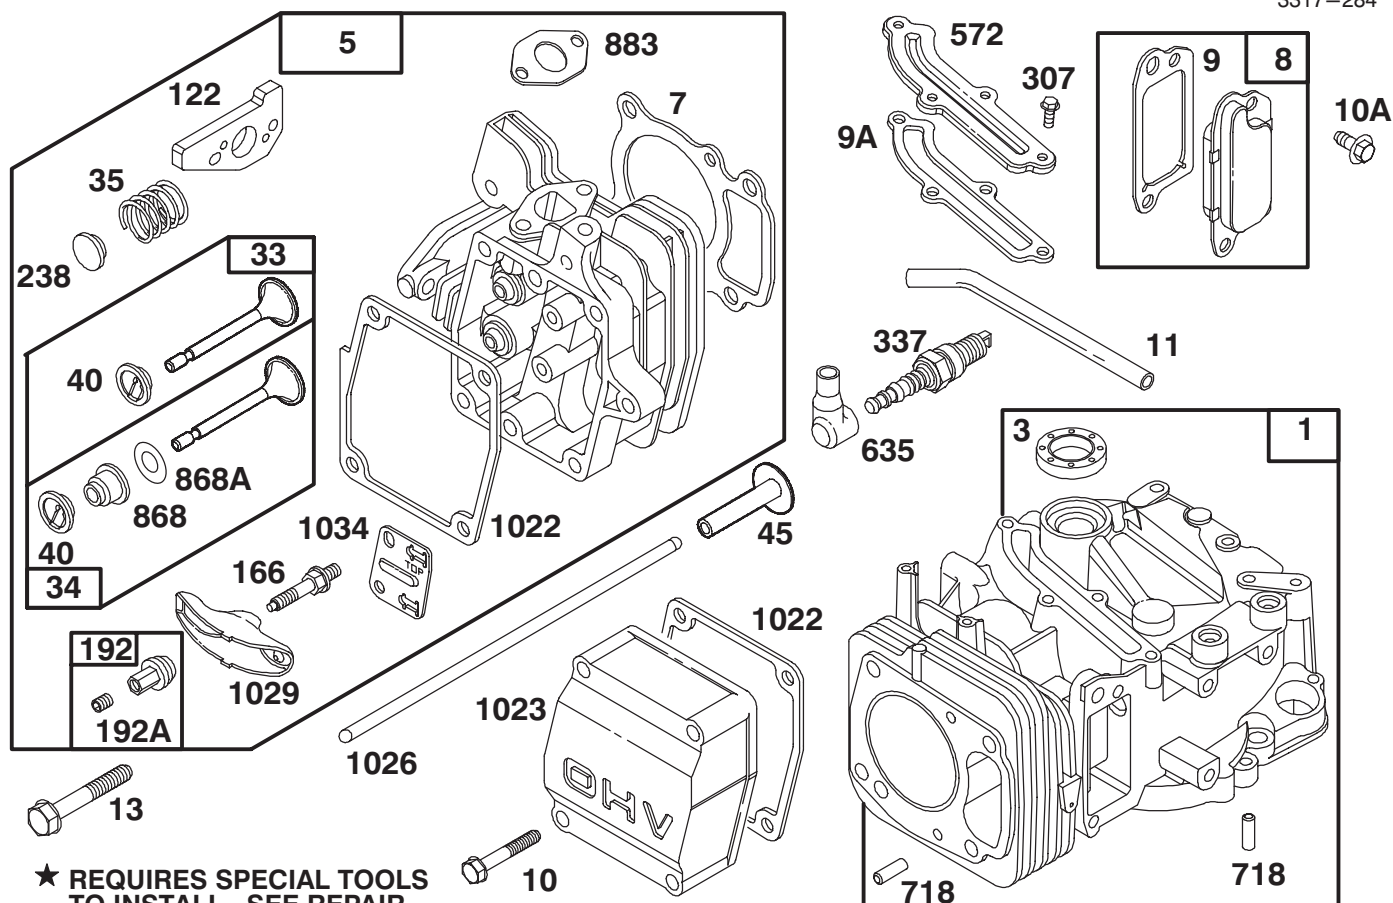


ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	77-7590	Cylinder Assy.	1	192	77-7910	Ball & Screw – Rocker Arm	1
★3	77-9060	Seal – Oil	1	192A	77-9310	Screw – Set	1
5	77-7730	Head – Cylinder	1	238	77-7800	Cap – Valve	1
★7	77-7740	Gasket – Cylinder Head	1	307	77-7420	Screw – Breather Cover Mtg.	1
8	77-9300	Breather Assy.	1	337	77-7330	Plug – Spark	1
★9	77-9250	Gasket – Breather	1	572	77-7400	Cover – Breather	1
★9A	77-7410	Gasket – Breather	1	635	77-7340	Elbow – Spark Plug	1
10	77-7360	Screw – Hex. Head (Valve Cover)	1	718	77-7600	Pin – Cylinder	1
10A	77-9200	Screw – Hex. Head	1	★868	77-7890	Seal Assy. – Valve	1
11	77-9410	Tube – Breather	1	★868A	77-7900	Gasket – Valve	1
13	77-7630	Screw – Cylinder Head	1	★883	77-7760	Gasket – Exhaust	1
33	77-7860	Valve – Exhaust	1	★1022	77-7320	Gasket – Rocker Cover	1
34	77-7880	Valve – Intake	1	1023	77-9320	Cover – Valve	1
35	77-7810	Spring – Valve	1	1026	77-7620	Rod – Push	1
40	77-7870	Retainer – Spring	1	1029	77-7790	Arm – Rocker	1
45	77-7610	Tappet – Valve	1	1034	77-7770	Guide – Push Rod	1
●122	77-7820	Adapter Assy.	1		77-9020	Short Block	1
166	77-7780	Stud – Rocker Arm	1				

★ Included in Gasket Set—Part No. 77-8900

● Included in Carburetor Overhaul Kit—Part No. 77-8920

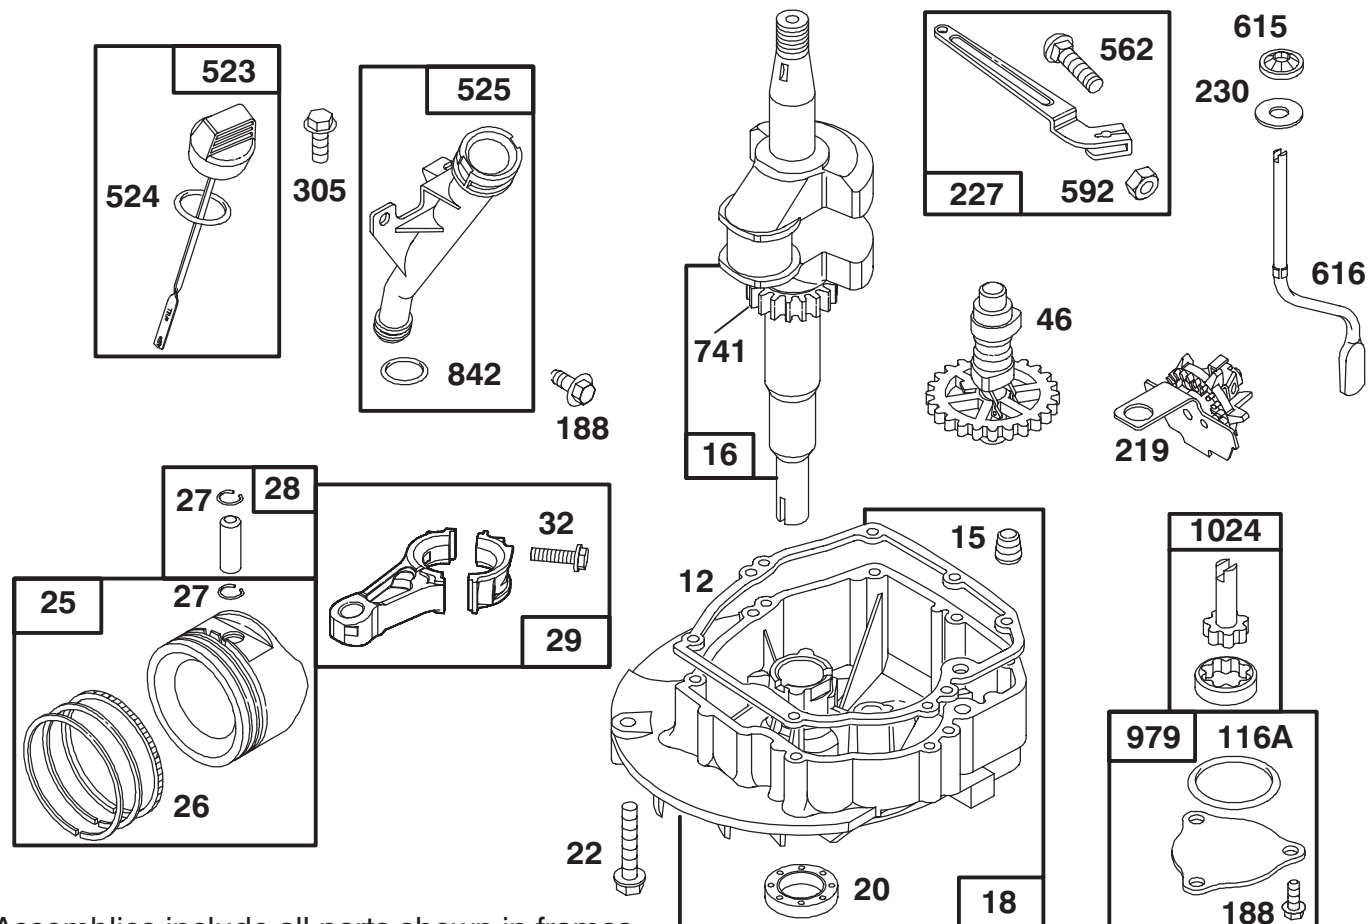


Assemblies include all parts shown in frames.

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
★12	77-7550	Gasket – Engine Base	1
15	77-9240	Plug – Pipe	1
16	77-9330	Crankshaft	1
		Note: Order Part No. 77-7540 For Timing Gear Key.	
18	77-7560	Base – Engine	1
★20	77-7570	Seal – Oil	1
22	77-9070	Screw – Engine Base	1
25	77-7690	Piston Assy. (Std.)	1
26	77-7700	Ring Set (Std.)	1
27	77-7710	Lock – Piston Pin	1
28	77-9340	Pin Assy. – Piston	1
29	77-7670	Rod – Connecting	1
32	77-9350	Screw – Connecting Rod	1
46	77-7490	Gear – Cam	1
★116A	77-7660	O-Ring	1

Ref. No.	Part No.	Description	No. Used
188	77-9360	Screw – Hex. Head	1
219	77-7500	Gear – Governor	1
227	77-7370	Lever Assy. – Governor	1
230	77-7470	Washer	1
305	77-8310	Screw – Hex. Head	1
523	77-7260	Dipstick – Oil	1
★524	77-7270	Seal – O-Ring	1
525	77-7280	Tube – Oil Filler	1
562	77-7380	Bolt – Governor Lever	1
592	77-7390	Nut – Hex.	1
615	77-7480	Pushnut	1
616	77-7460	Crank – Governor	1
741	77-7530	Gear – Timing	1
★842	77-7300	Seal – O-Ring	1
979	77-7650	Cover – Oil Pump	1
1024	77-7640	Pump – Oil	1

★ Included in Gasket Set—Part No. 77-8900

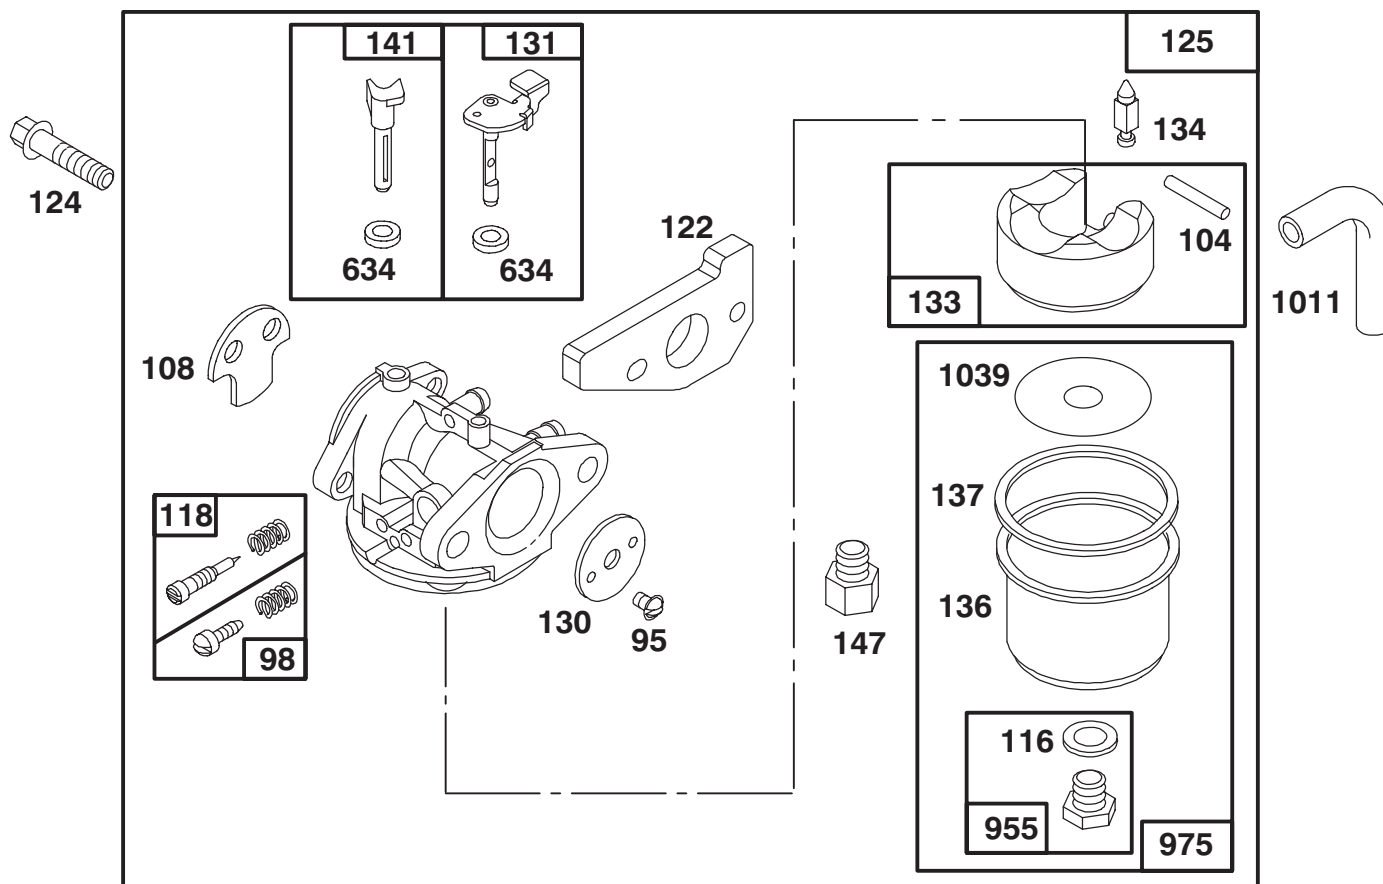


Assemblies include all parts shown in frames.

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
95	77-8090	Screw – Valve Mtg.	1	136	77-7240	Bowl – Fuel	1
98	77-8240	Screw – Idle Adj.	1	◆137	77-8200	Gasket – Float Bowl	1
●104	77-8180	Pin – Float Hinge	1	141	77-8130	Shaft – Choke	1
108	77-7080	Valve – Choke	1	147	77-8120	Adapter – Jet	1
◆116	77-8210	Sealing – Gasket	1			Note: For High Altitude Jet Order Part No.	
●118	77-8230	Valve & Spring – Needle	1			77-9000	1
●122	77-7820	Adapter Assy.	1	◆634	77-8150	Washer – Seal	1
124	77-7970	Screw – Hex. Head (carb. mtg.)	1	955	77-8220	Screw – Hex. Head	1
125	77-8050	Carburetor Assy.	1	975	77-8190	Bowl Assy. – Carburetor	1
130	77-8080	Valve – Throttle	1	1011	77-8040	Tube – Vent	1
131	77-8160	Shaft – Throttle	1	●1039	77-7250	Limiter – Float	1
133	77-8170	Float – Carburetor	1				
●134	77-8110	Valve – Inlet (Includes Seat)	1				

● Included in Carb. Overhaul Kit Part No. 77-8920

◆ Included in Carb. Gasket Set Part No. 77-8930

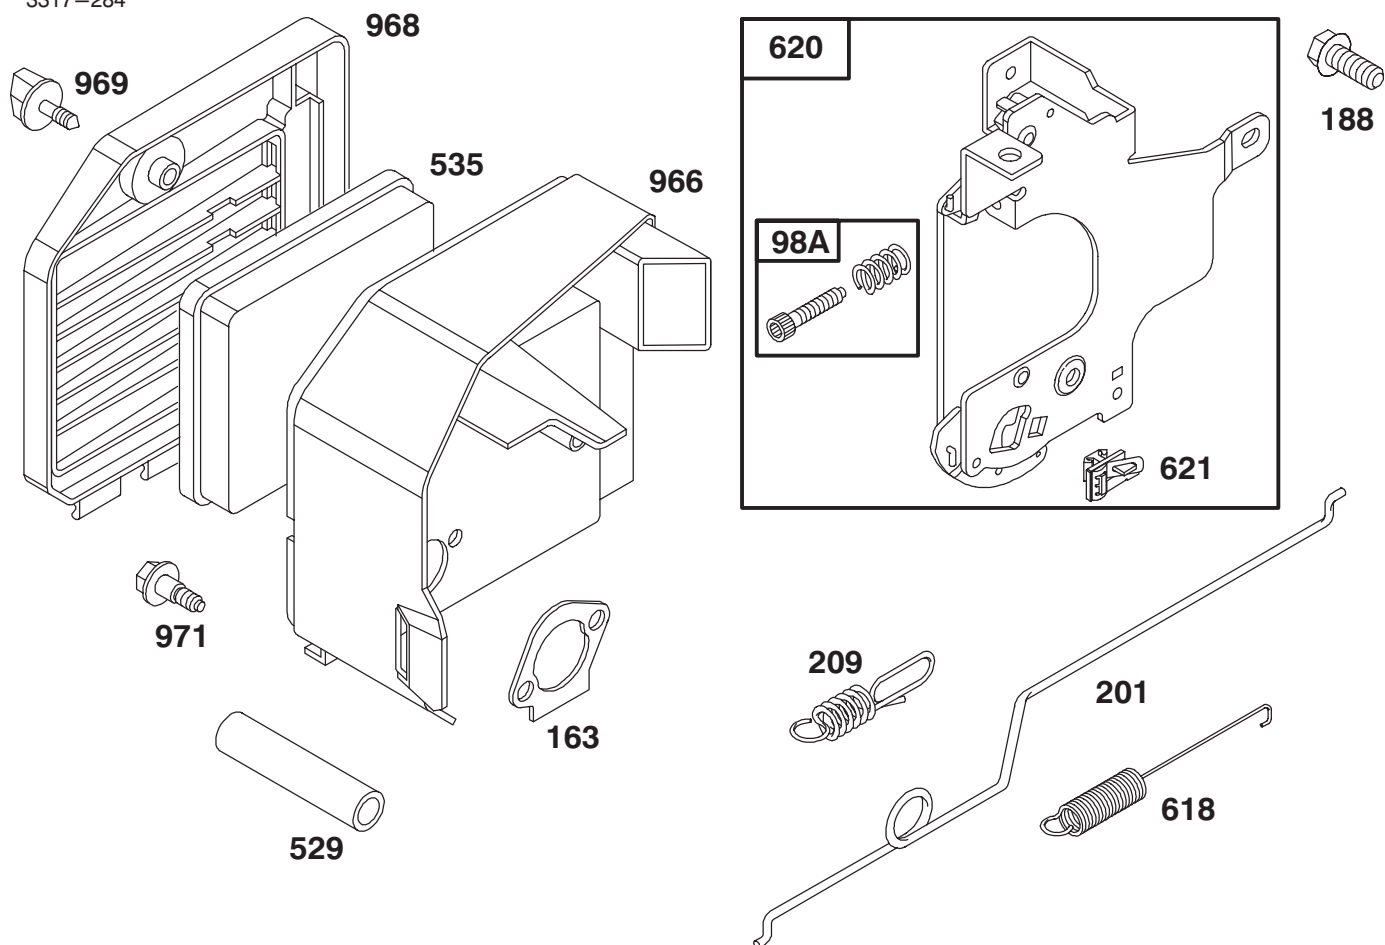


Assemblies include all parts shown in frames.

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
98A	77-8020	Screw Assy. — Speed Adj.	1
★163	77-7960	Gasket — Air Cleaner	1
188	77-9360	Screw — Hex. Head	1
201	77-7980	Link — Governor	1
209	77-7990	Spring — Governor	1
529	77-9470	Tube — Breather	1
535	77-7950	Element — Filter	1

Ref. No.	Part No.	Description	No. Used
618	77-8140	Spring — Choke	1
620	77-8000	Bracket — Carburetor	1
621	77-8010	Switch — Stop	1
966	77-7940	Base — Air Cleaner	1
968	77-7040	Cover — Air Cleaner	1
969	77-7920	Screw — Air Cleaner	1
971	77-7930	Screw — Air Cleaner	1

★ Included in Gasket Set—Part No. 77-8900

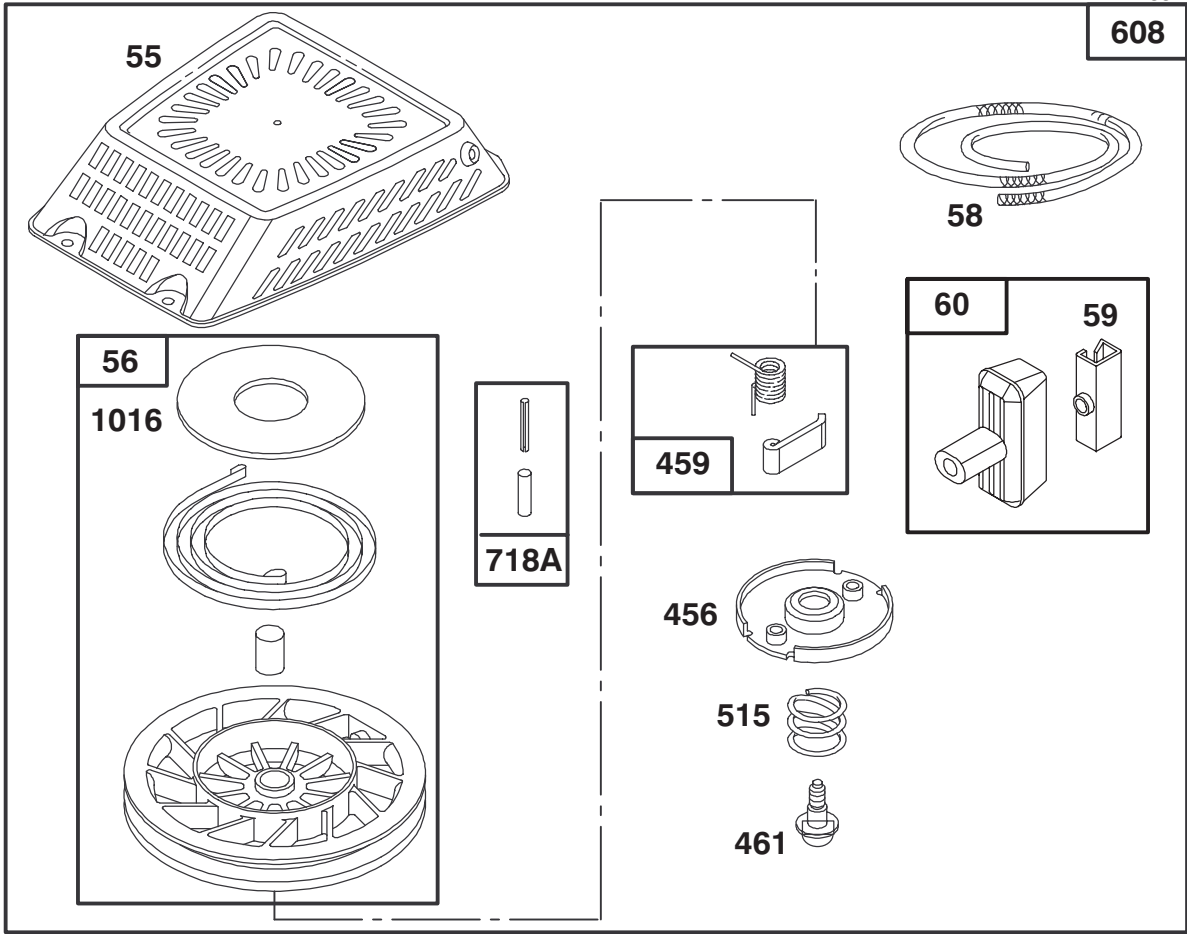


Assemblies include all parts shown in frames.

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
55	77-8890	Housing – Rewind Starter	1
56	77-9270	Pulley – Rewind Starter	1
58	77-8480	Rope – Starter (Cut To Suit)	1
59	77-9380	Insert – Rewind Handle	1
60	77-9390	Handle – Rewind Starter	1
65	77-8300	Screw – Hex. Head	1

Ref. No.	Part No.	Description	No. Used
456	77-8470	Retainer – Rewind Starter	1
459	77-8530	Pawl – Starter	1
461	77-8490	Screw – Rewind Starter	1
515	77-8500	Spring – Torsion	1
608	77-9400	Starter Assy. – Rewind	1
718A	77-8550	Pin – Spring	1
1016	77-8570	Cover – Spring	

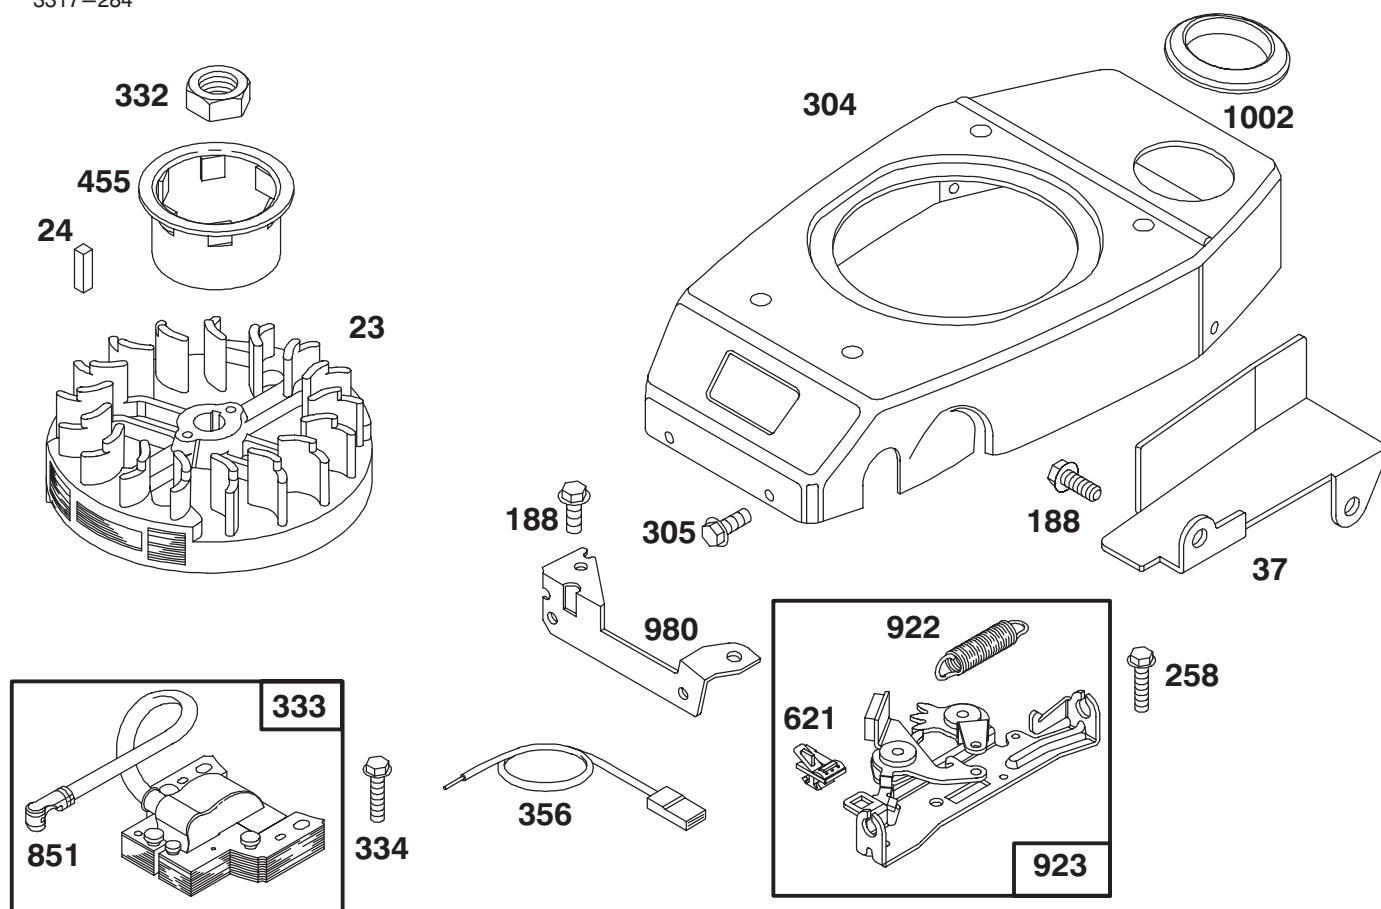


Assemblies include all parts shown in frames.

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
23	77-8330	Flywheel - Magneto	1
24	77-8340	Key - Flywheel	1
37	77-7190	Guard - Flywheel	1
188	77-9360	Screw - Hex. Head	1
258	77-8870	Screw - Hex. Head	1
304	77-8260	Housing - Blower	1
305	77-8310	Screw - Hex. Head	1
332	77-8360	Nut - Flywheel	1
333	77-8420	Armature - Magneto	1

Ref. No.	Part No.	Description	No. Used
334	77-7420	Screw - Armature Mtg.	1
356	77-8400	Wire - Ground	1
455	77-8350	Cup - Starter	1
621	77-8010	Switch - Stop	1
851	77-9450	Terminal - Spark Plug	1
922	77-8860	Spring - Brake	1
923	77-9460	Brake Assy.	1
980	77-7140	Bracket - Blower Hsg.	1
1002	77-7180	Grommet	1

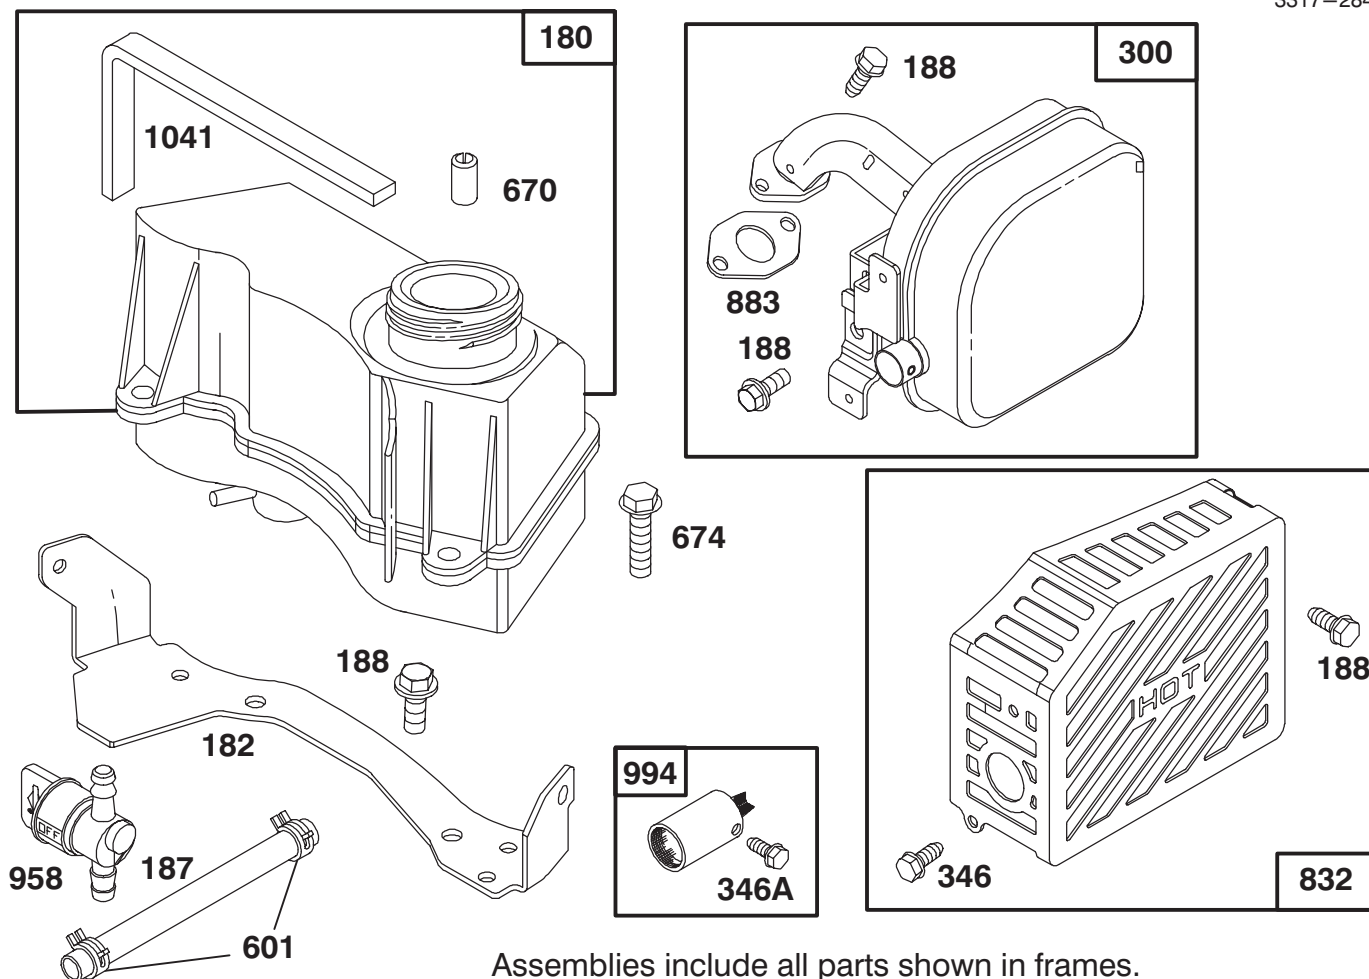




Assemblies include all parts shown in frames.

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
180	77-8580	Tank Assy. - Fuel	1
182	77-7170	Bracket - Fuel Tank	1
187	77-8620	Hose - Fuel (Cut To Suit)	1
188	77-9360	Screw - Hex. Head	1
300	77-8640	Muffler - Exhaust	1
346	77-9430	Screw - Hex.	1
346A	77-9050	Screw - Arrester Mtg.	1
601	77-8630	Clamp - Fuel Hose	1

Ref. No.	Part No.	Description	No. Used
670	77-9030	Spacer — Fuel Tank (Includes 2)	1
674	77-8600	Screw — Tank Mtg.	1
832	77-8660	Guard — Muffler	1
★883	77-7760	Gasket — Exhaust	1
★958	77-9440	Valve — Shut—Off	1
994	77-9040	Arrester — Spark	1
★1041	77-8590	Seal — Foam	1

* Included in Gasket Set—Part No. 77-8900

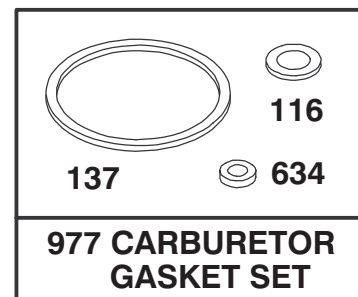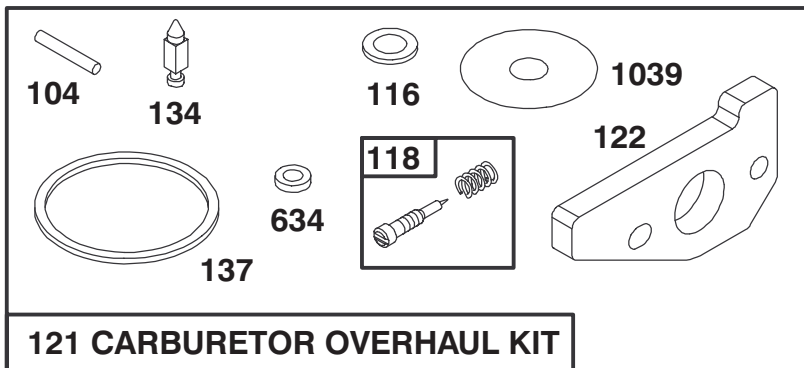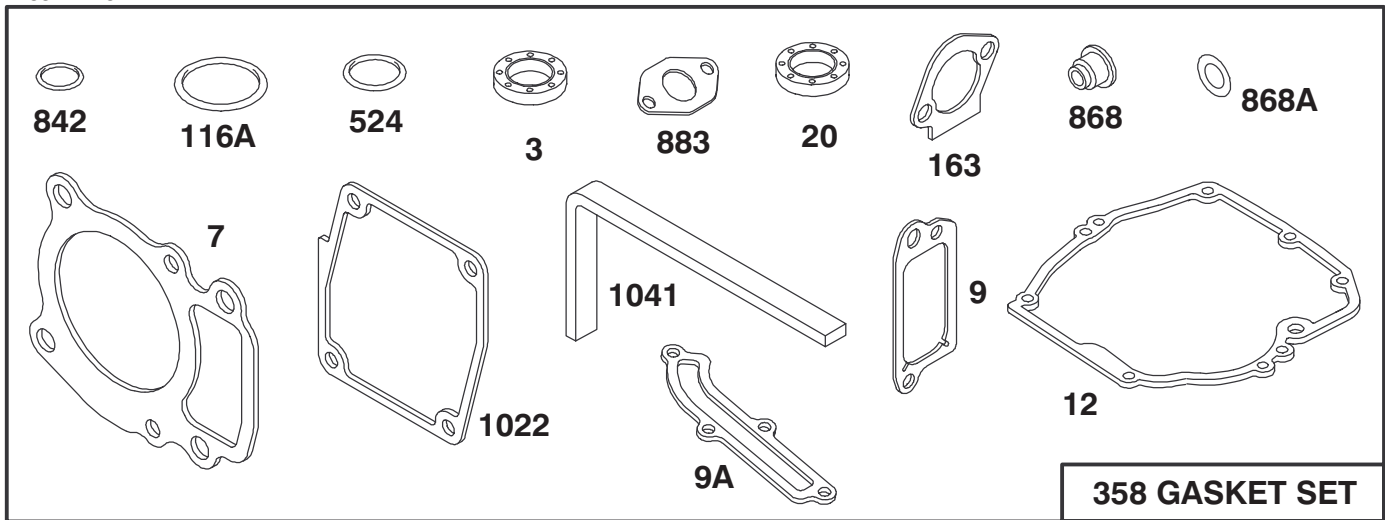

Assemblies include all parts shown in frames.

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
★3	77-9060	Seal – Oil	1
★7	77-7740	Gasket – Cylinder Head	1
★9	77-9250	Gasket – Breather	1
★9A	77-7410	Gasket – Breather	1
★12	77-7550	Gasket – Engine Base	1
★20	77-7570	Seal – Oil	1
●104	77-8180	Pin – Float Hinge	1
●◆116	77-8210	Gasket – Sealing	1
★116A	77-7660	O-Ring	1
●118	77-8230	Valve and Spring – Needle	1
121	77-8920	Carburetor Overhaul Kit	1
●122	77-7820	Adapter Assembly	1
●134	77-8110	Valve – Inlet (Includes Seat)	1

Ref. No.	Part No.	Description	No. Used
●◆137	77-8200	Gasket – Float Bowl	1
★163	77-7960	Gasket – Air Cleaner	1
358	77-8900	Gasket Set	1
★524	77-7270	Seal – O-Ring	1
◆634	77-8150	Washer – Seal	1
★842	77-7300	Seal – O-Ring	1
★868	77-7890	Seal Assy. – Valve	1
★868A	77-7900	Seal – Valve	1
★883	77-7760	Gasket – Exhaust	1
977	77-8930	Carburetor Gasket Set	1
★1022	77-7320	Gasket – Rocker Cover	1
●1039	77-8040	Limiter – Float	1
★1041	77-8590	Seal – Foam	1

● Incl. in Carburetor Overhaul Kit—Part No. 77-8920

◆ Included in Carburetor Gasket Set—Part No. 77-8930

★ Included in Gasket Set—Part No. 77-8900

TORO PART NUMBER INDEX

3317-284

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
110352	Gas Cap Assembly	3 9 1	60-8850	Bushing - Output Shaft	5 51 1
3-3287	Spacer - Handle Latch	6 13 2	60-8870	Yoke - Shift	4 36 1
8-2759	Bag - Grass	8 4 1	60-8890	Pinion - Bevel	5 57 1
14-9419	Blade	3 11 1	62-3900	V-Belt	4 13 1
14-9949	Wheel & Tire Assembly	2 33 2	62-4320	Bracket - Belt Guide	4 7 1
14-9959	Wheel - Tire & Gear Ass'y	4 30 2	62-6660	Spacer	4 9 1
16-8719	Housing Assembly	2 41 1	62-6673	Gear Case Assembly	5 * 1
16-8729	Panel - Control	6 5 1	62-7540	Retainer - Blade	3 10 1
17-9421	Screw - Handle	7 7 2	62-7550	Pulley - Driver	3 15 1
17-9421	Screw - Handle	6 18 2	63-8701	Pivot Arm Assembly	4 2 2
19-4050	Knob - Handle Release	6 19 2	63-8720	Spring Arm Assembly	4 4 2
25-7740	Knob - Arm	4 3 2	65-2720	Ring - Retaining	4 24 4
25-7740	Knob - Spring Arm	1 30 2	65-4710	Ring - Friction	4 25 2
26-0670	Screw - Blade	3 14 1	65-4720	Spring	4 28 2
27-6232	Bolt - Wheel	2 35 2	65-4730	Thrust Washer	4 22 2
27-6232	Wheel Bolt	4 32 2	65-4740	Thrust Washer	4 23 4
27-6250	Bushing	2 34 4	65-4750	Pinion	4 1 2
27-6250	Bushing - Wheel	4 31 4	65-4760	Washer - Clutch	4 26 2
27-7210	Screw - Shoulder	6 12 2	65-4770	Shaft - Output	4 18 1
27-7211	Screw - Shoulder	6 11 2	65-5250	Clip - Spring	5 61 1
29-9570	Bushing - Yoke	4 37 1	66-0560	Screw - Pivot	1 32 2
33-3208	Rod - Shield	1 28 1	66-0570	Guide - Belt	3 5 1
33-4820	Hinge - Bag Door	8 3 1	66-0580	Arm - Pivot	2 37 2
36-4780	Washer - Thrust	4 42 1	66-5350	Lever - Control	7 12 1
36-4791	Washer - Thrust	4 46 2	66-6040	Key - Rocker R.H.	4 * 1
36-6910	Spring	8 5 2	66-6050	Key - Rocker L.H.	4 27 1
37-1393	Door - Grass Bag	8 8 1	70-9760	Bushing	4 19 2
37-7260	Screw - Special Cap	1 23 2	71-0560	Spring Arm Ass'y - R.H.	1 1 1
38-7820	Bearing - Ball	5 58 1	71-0570	Spring Arm Ass'y - L.H.	1 31 1
40-1940	Washer - Wheel	2 36 4	71-9350	Bracket - Spring	1 8 1
42-3520	End Cap	4 5 2	74-1660	Cover - Wheel	4 29 2
42-4020	Frame - Bag	8 6 1	74-1670	Spacer - Wheel Cover	4 33 2
42-4030	Bag Frame - Upper	8 2 1	74-3892	Control - Throttle	6 6 1
44-0580	Shield -Rear	1 27 1	76-0760	Key - Shift	4 40 2
46-5400	Shield - Front	2 42 1	76-0770	Collar - Shift	4 41 1
46-5481	Cable - Traction	7 4 1	76-0780	Sleeve - Shift Key	4 39 1
46-5520	Lever - Traction	7 3 1	76-2712	Control - Ground Speed	6 2 1
46-6434	Screw - Handle	7 2 1	76-4331	Cable - Brake	7 14 1
46-6440	Cover - Control Cable	6 8 1	76-4570	Plate - Latch	1 13 1
46-6810	Screw - Hex Washer Hd.	1 5 1	76-4640	Latch - Plate	1 18 1
46-6811	Screw w/Washer	1 9 3	76-4650	Grip - Latch	1 16 1
46-6980	Support - Cable	7 10 1	76-4660	Spring - Door	1 10 1
46-7030	Retainer - Cable	1 26 1	77-0200	Discharge Door Assembly	1 12 1
46-8090	Screw - Hex Washer Hd.	1 14 2	77-0502	Plug Assembly	1 15 1
48-2060	Needle Bearing	4 21 2	77-9550	Cover - Brake	3 17 1
49-1630	Support - Spacer	7 6 2	80-3770	Retainer - Door	1 11 1
49-2040	Screw - Self Tapping	4 8 8	82-5530	Lower Handle Ass'y	6 1 1
49-2750	Pin - Handle	6 {16 2	82-5680	Bracket - Traction Adjust.	1 25 1
52-7430	Bar - Control	7 1 1	82-8780	Cable - Retainer	4 15 1
55-3760	Gear - Pinion 15 Tooth	4 47 1	82-9151	Tunnel - Discharge	1 7 1
55-3770	Gear - 49 Tooth 1st Gear	5 56 1	82-9910	Belt Cover	1 24 1
55-3780	Gear - Pinion 20 Tooth	4 48 1	84-8330	Handle - Upper	6 3 1
55-3790	Gear - 44 Tooth 2nd Gear	5 55 1	84-8360	Latch - Handle L.H.	6 10 1
55-3800	Gear - Pinion	5 49 1	84-8400	Latch - Handle R.H.	6 20 1
55-3810	Gear - 39 Tooth 3rd Gear	5 54 1	86-7990	Screw - Clamp	3 2 1
60-8710	Gear Case - Upper	5 59 1	92-1599	Stiffener - Blade	3 12 1
60-8730	Cover - Gear Case	4 44 1	92-1720	Plate - Kicker Rt. Front	2 43 1
60-8750	Bushing - Int. Shaft	4 45 2	92-1730	Plate - Kicker Left Front	1 2 1
60-8770	Bushing - Output Shaft	4 43 1	92-1750	Plate - Kicker Left Rear	1 19 1
60-8790	Sleeve - Gear	5 53 1	92-2289	Plate - Toro	3 8 1
60-8800	Shaft - Intermediate	5 50 1	92-7663	Cover - Wheel	2 44 1
60-8810	Retainer - Shift Fork	4 38 1	92-7720	Guide - Rope	7 13 1
60-8821	Lever - Shift	4 17 1	92-7856	Decal - H.O.C.	1 29 4
60-8840	Pulley - Half	4 10 2	92-7858	Decal - Deck	2 40 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
92-7859	Decal - Toro Panel,	6	21	1	3296-29	Nut - Lock	6	14	3
93-1367	Engine	3	3	1	3296-42	Nut - Lock	7	8	3
93-4355	Decal - Recoil	3	4	1	3296-47	Nut - Lock	6	15	3
93-6655	Decal - Danger	6	4	1	3296-58	Nut - Lock	7	5	2
93-6662	Decal - Instructions	6	22	1	32121-120	Pin - Coil	5	52	1
2210-249	Clamp - Throttle	3	1	1	32144-70	Screw - Hex Washer Hd.	3	6	2
2210-316	Stop - Rope	3	16	1	32144-70	Screw - Hex Washer Hd.	1	22	5
237-153	O-Ring	5	60	2	32144-70	Screw - Thread Forming	4	16	1
2412-50	Clip Convolutd Tubing	6	7	3	32144-85	Screw	4	35	2
302-56	Fitting - Grease	4	20	2	32144-85	Screw - Hex Hd. Cap	2	39	2
321-3	Screw - Hex Hd. Cap	7	11	1	32144-102	Screw - Thread Forming	3	7	3
321-52	Screw - Hex Hd. Cap	7	15	1	32144-111	Screw - Pan Hd.	1	3	6
3253-22	Washer - Lock	3	13	1	32144-115	Screw - Tapping	6	17	5
3256-22	Washer - Flat	7	9	1					
3256-24	Washer - Flat	4	12	1					
3272-10	Pin - Cotter	4	14	1					
3290-378	Tie - Cable	6	9	3					
3290-422	Nut - Push	8	1	2					
3295-35	Rivet	1	17	1					
3296-5	Locknut	4	11	1					
3296-6	Locknut	4	34	2					
3296-6	Nut - Lock	2	38	4					

OPTIONAL EQUIPMENT

Side Discharge Kit	Model No. 59110
Wear Plate Kit	Part No. 49-4080
Dethatcher Kit	Model No. 59131
Spark Arrestor	Part No. 77-9040

MAINTENANCE RECORD

[illegible]