



**20in Mulching/Rear Bagging  
Lawn Mower**

**Model No. 10641C—Serial No. 290000001 and Up**

**Parts Catalog**

# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.


For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# List of Abbreviations

|                                              |                                                |                                          |
|----------------------------------------------|------------------------------------------------|------------------------------------------|
| <b>AR:</b> as required                       | <b>HLH:</b> hex lag head                       | <b>PTO:</b> power-take-off               |
| <b>ASM:</b> assembly                         | <b>HOC:</b> height-of-cut                      | <b>RH:</b> right hand                    |
| <b>BBC:</b> blade brake clutch               | <b>HSBH:</b> hex socket button head            | <b>ROPS:</b> roll-over protection system |
| <b>CARR:</b> carriage                        | <b>HSFH:</b> hex socket flat head              | <b>SFH:</b> slotted fillister head       |
| <b>CCW:</b> counter clock wise               | <b>HSH:</b> hex socket head                    | <b>SHH:</b> slotted hex head             |
| <b>CW:</b> clockwise                         | <b>HWH:</b> hex washer head                    | <b>SHWH:</b> slotted hex washer head     |
| <b>DEG:</b> degrees                          | <b>HWHTF:</b> hex washer head thread forming   | <b>SPH:</b> slotted pan head             |
| <b>ECM:</b> electronic control module        | <b>HYD:</b> hydraulic                          | <b>SQH:</b> square head                  |
| <b>EXT:</b> external                         | <b>LH:</b> left hand                           | <b>SRH:</b> slotted round head           |
| <b>FH:</b> flat head                         | <b>NI:</b> nylon insert                        | <b>STD:</b> standard                     |
| <b>GA:</b> gauge                             | <b>NPTF:</b> national pipe thread fine         | <b>TAP:</b> self tapping                 |
| <b>HD:</b> heavy-duty                        | <b>PFH:</b> phillips flat head                 | <b>TTH:</b> torx truss head              |
| <b>HF:</b> hex flange                        | <b>PPH:</b> phillips pan head                  |                                          |
| <b>HH:</b> hex head                          | <b>PPHTF:</b> phillips pan head thread forming |                                          |
| <b>HHF:</b> hex head flange                  | <b>PRH:</b> phillips round head                |                                          |
| <b>HHFTF:</b> hex head flange thread forming | <b>PTH:</b> phillips truss head                |                                          |
| <b>HJ:</b> hex jam                           |                                                |                                          |


# Contents

|                                                                                               |    |
|-----------------------------------------------------------------------------------------------|----|
| Housing Assembly .....                                                                        | 4  |
| Front Axle Assembly .....                                                                     | 5  |
| Rear Axle and Transmission Assembly .....                                                     | 6  |
| Engine and Blade Assembly .....                                                               | 7  |
| Handle and Control Assembly .....                                                             | 8  |
| Rear Bag Assembly .....                                                                       | 9  |
| Cylinder and Cylinder Head Assembly Briggs and Stratton 124T02-0212-B1 .....                  | 10 |
| Crankshaft, Piston, Ring and Connecting Rod Assembly Briggs and Stratton 124T02-0212-B1 ..... | 11 |
| Crankcase Cover and Sump Assembly Briggs and Stratton 124T02-0212-B1 .....                    | 12 |
| Carburetor and Fuel Tank Assembly Briggs and Stratton 124T02-0212-B1 .....                    | 13 |
| Air Cleaner Assembly Briggs and Stratton 124T02-0212-B1 .....                                 | 14 |
| Governor and Controls Assembly Briggs and Stratton 124T02-0212-B1 .....                       | 15 |
| Muffler and Fuel Tank Assembly Briggs and Stratton 124T02-0212-B1 .....                       | 16 |
| Blower Housing, Flywheel and Ignition Assembly Briggs and Stratton 124T02-0212-B1 .....       | 17 |
| Rewind Starter Assembly Briggs and Stratton 124T02-0212-B1 .....                              | 18 |
| Engine and Valve Gaskets and Carburetor Overhaul Kit Briggs and Stratton 124T02-0212-B1 ..... | 19 |
| Attachments and Accessories .....                                                             | 20 |

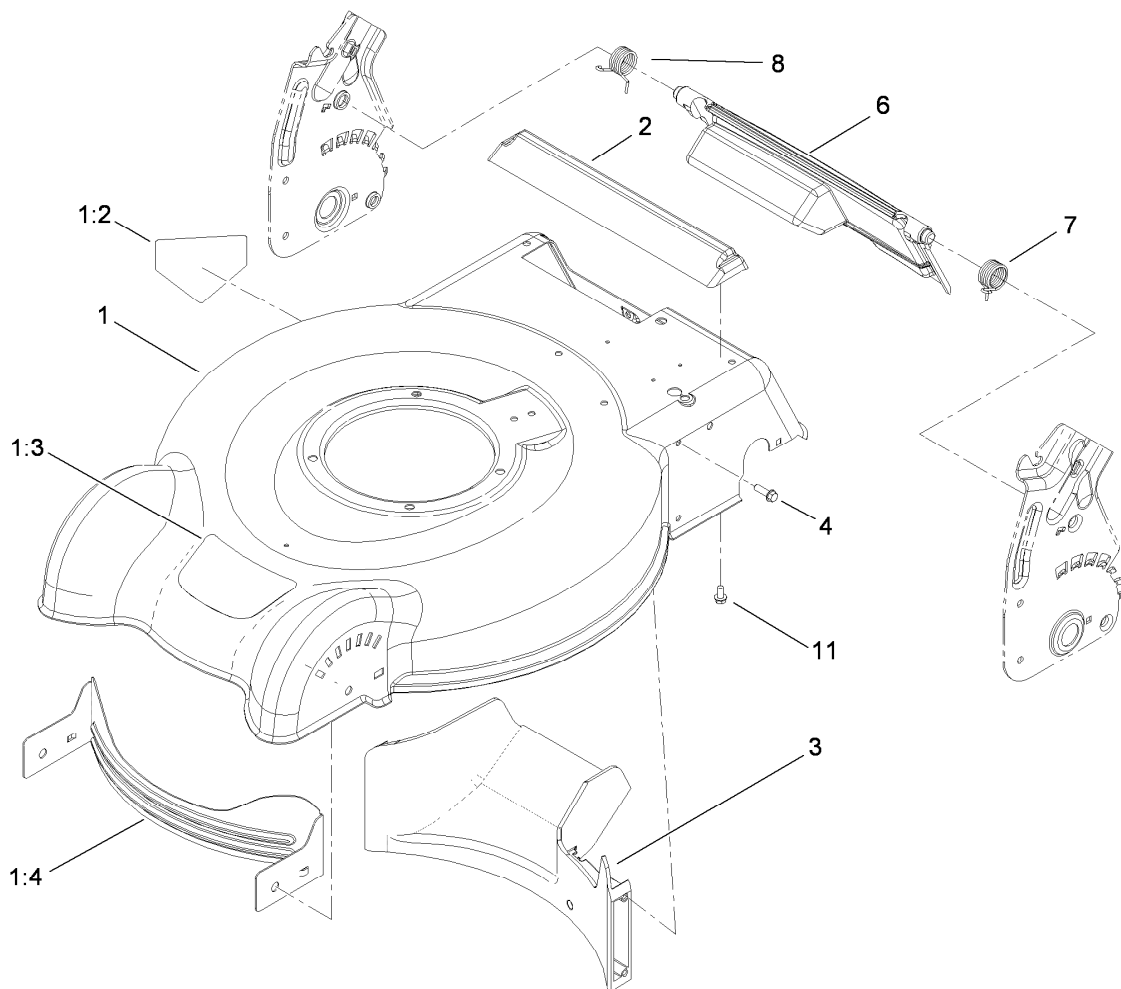


## Housing Assembly

| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 1    | 117-4153    | 1    | Housing ASM        |
| 1:2  | 94-8072     | 1    | Decal-Danger       |
| 1:3  | 117-4131    | 1    | Decal              |
| 1:4  | 112-8824-02 | 1    | Baffle-Front       |
| 2    | 112-8845    | 1    | Chute-Rear         |
| 3    | 112-8821    | 1    | Baffle-Rear        |
| 4    | 46-8091     | 5    | Screw-HWH          |
| 6    | 117-5923    | 1    | Rear Deflector ASM |
| 7    | 112-8848    | 1    | Spring-Torsion, LH |
| 8    | 112-8849    | 1    | Spring-Torsion, RH |
| 11   | 46-8093     | 3    | Screw-Plastite     |

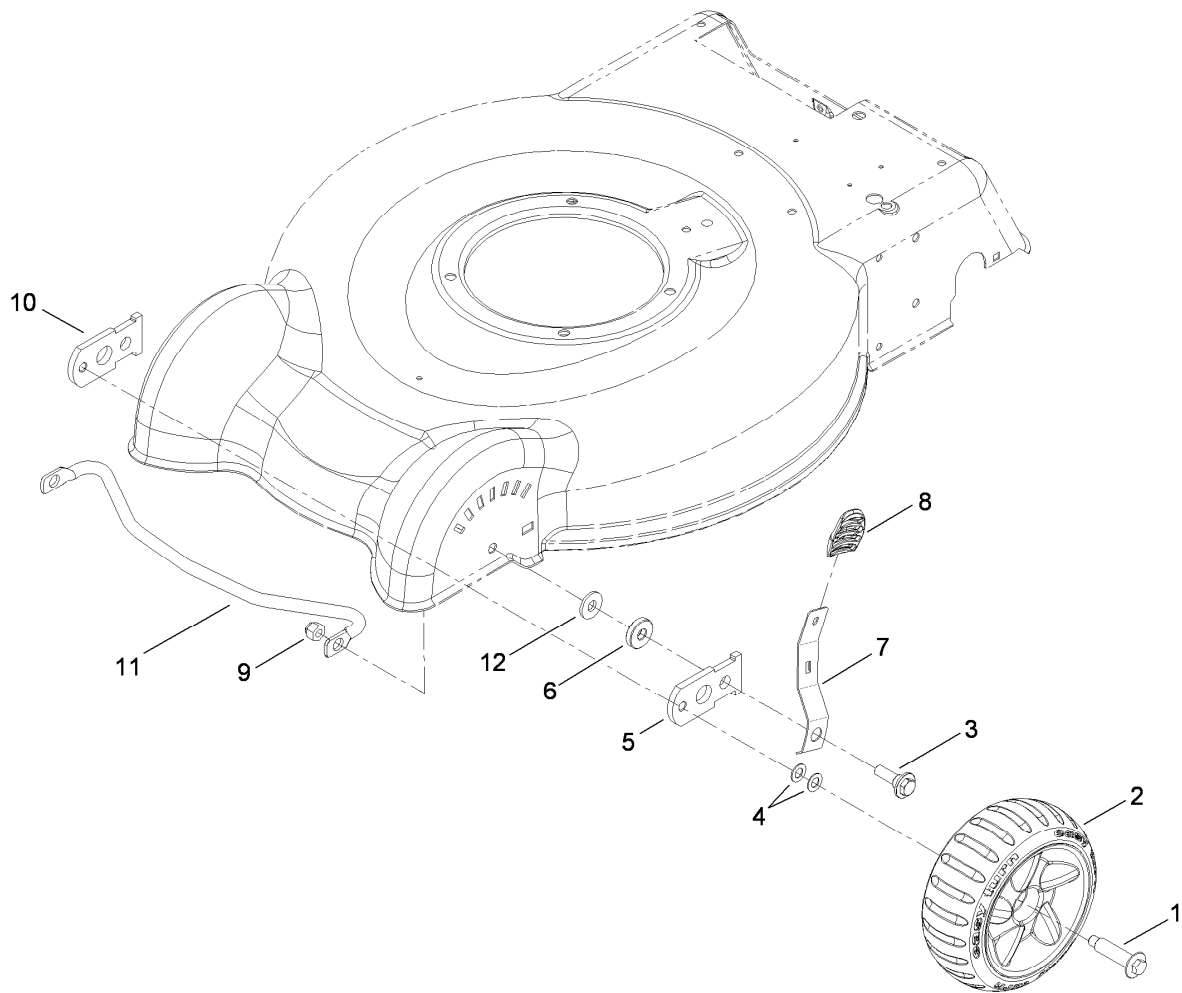

## Front Axle Assembly


| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|------------------------|
| 1           | 614650             | 2           | Bolt-Shoulder          |
| 2           | 112-1548           | 2           | 7 Inch Front Wheel ASM |
| 3           | 614672             | 2           | Bolt-Shoulder          |
| 4           | 40-1940            | 4           | Washer                 |
| 5           | 107-3877           | 1           | Arm-Pivot, RH          |
| 6           | 92-4890            | 2           | Washer                 |
| 7           | 112-8828           | 2           | Arm-Spring, Front      |
| 8           | 105-3042           | 2           | Knob-Lever, HOC        |
| 9           | 3296-39            | 2           | Nut-Lock, NI           |
| 10          | 108-1044           | 1           | Arm-Pivot, LH          |
| 11          | 117-4161           | 1           | Brace-Front            |
| 12          | 80-6990            | 2           | Washer-Hardened        |

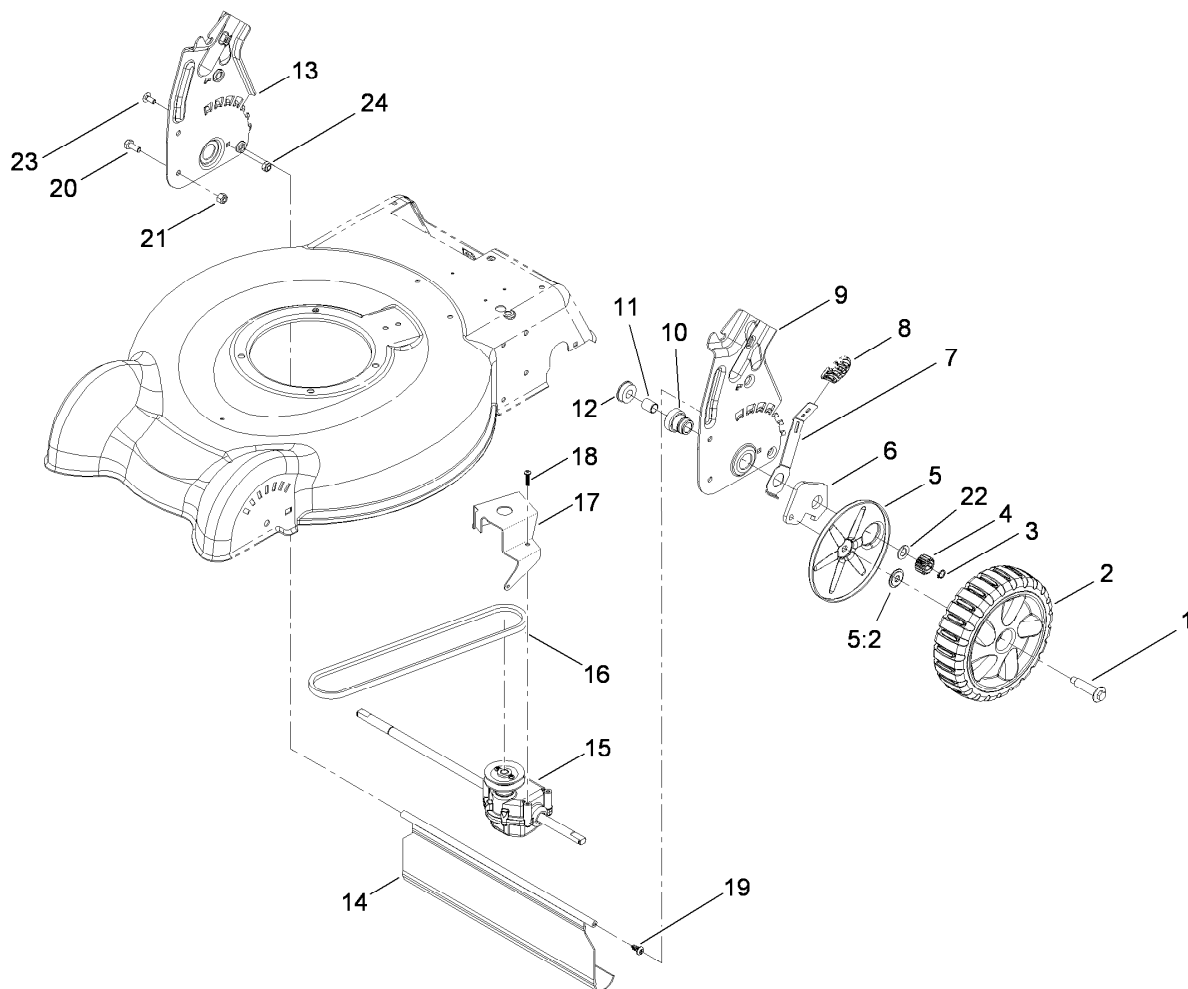

## Rear Axle and Transmission Assembly

| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 1    | 614650      | 2    | Bolt-Shoulder         |
| 2    | 107-3906    | 2    | Rear Wheel ASM        |
| 3    | 32151-61    | 2    | Ring-Retaining        |
| 4    | 110-9417    | 2    | Pinion                |
| 5    | 110-1793    | 2    | Wheel Cover ASM       |
| 5:2  | 614426      | 1    | Washer-Stepped        |
| 6    | 108-9781    | 2    | Arm-Pivot, Rear       |
| 7    | 108-9780    | 2    | Arm-Spring            |
| 8    | 105-3042    | 2    | Knob-Lever, HOC       |
| 9    | 112-8822-03 | 1    | Plate-HOC, LH         |
| 10   | 108-9779    | 2    | Retainer-Bushing, HOC |
| 11   | 108-9782    | 2    | Bushing-Sleeve        |
| 12   | 104-8699    | 2    | Bearing-Ball          |

| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 13   | 112-8823-03 | 1    | Plate-HOC, RH        |
| 14   | 112-8768    | 1    | Shield-Trailing      |
| 15   | 112-8831    | 1    | Transmission ASM     |
| 16   | 110-9429    | 1    | V-Belt               |
| 17   | 114-7977-03 | 1    | Bracket-Transmission |
| 18   | 108-7476    | 3    | Screw-Plastite       |
| 19   | 117-1092    | 2    | Screw-PTH            |
| 20   | 322-3       | 4    | Screw-HH             |
| 21   | 3296-29     | 4    | Nut-Lock, NI         |
| 22   | 110-7191    | 2    | Washer-Thrust        |
| 23   | 3229-11     | 2    | Screw-CARR           |
| 24   | 3296-16     | 2    | Nut-Lock, NI         |

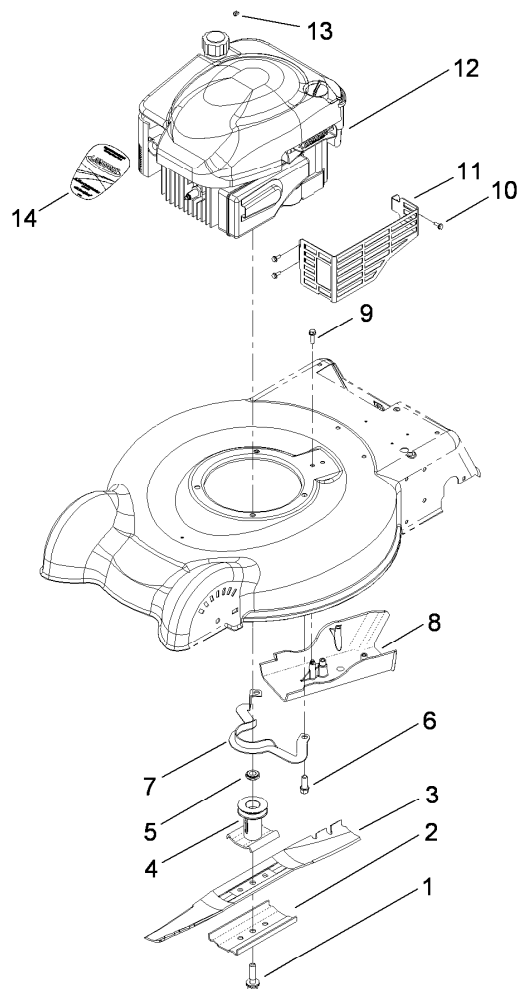


## Engine and Blade Assembly

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>                |
|-------------|--------------------|-------------|-----------------------------------|
| 1           | 105-8579           | 1           | Bolt-Blade                        |
| 2           | 108-3766-03        | 1           | Support-Blade                     |
| 3           | 112-8841-03        | 1           | Blade-20 Inch                     |
| 4           | 106-3987           | 1           | Blade Driver ASM                  |
| 5           | 106-3999           | 1           | Spacer-Driver                     |
| 6           | 95-1726            | 3           | Screw-Taptite                     |
| 7           | 105-3030-03        | 1           | Guide-Belt                        |
| 8           | 112-8829           | 1           | Cover-Belt                        |
| 9           | 46-8091            | 3           | Screw-HWH                         |
| 10          | 32144-1            | 3           | Screw-Taptite                     |
| 11          | 104-7577-03        | 1           | Shield-Muffler                    |
| 12          |                    | 1           | Engine-Briggs, 124T02-0212-B1 ● ■ |
| 13          | 2210-316           | 1           | Stop-Rope                         |
| 14          | 112-8844           | 1           | Decal                             |


● Not serviced separately

■ Obtain parts from [www.briggsandstratton.com](http://www.briggsandstratton.com)

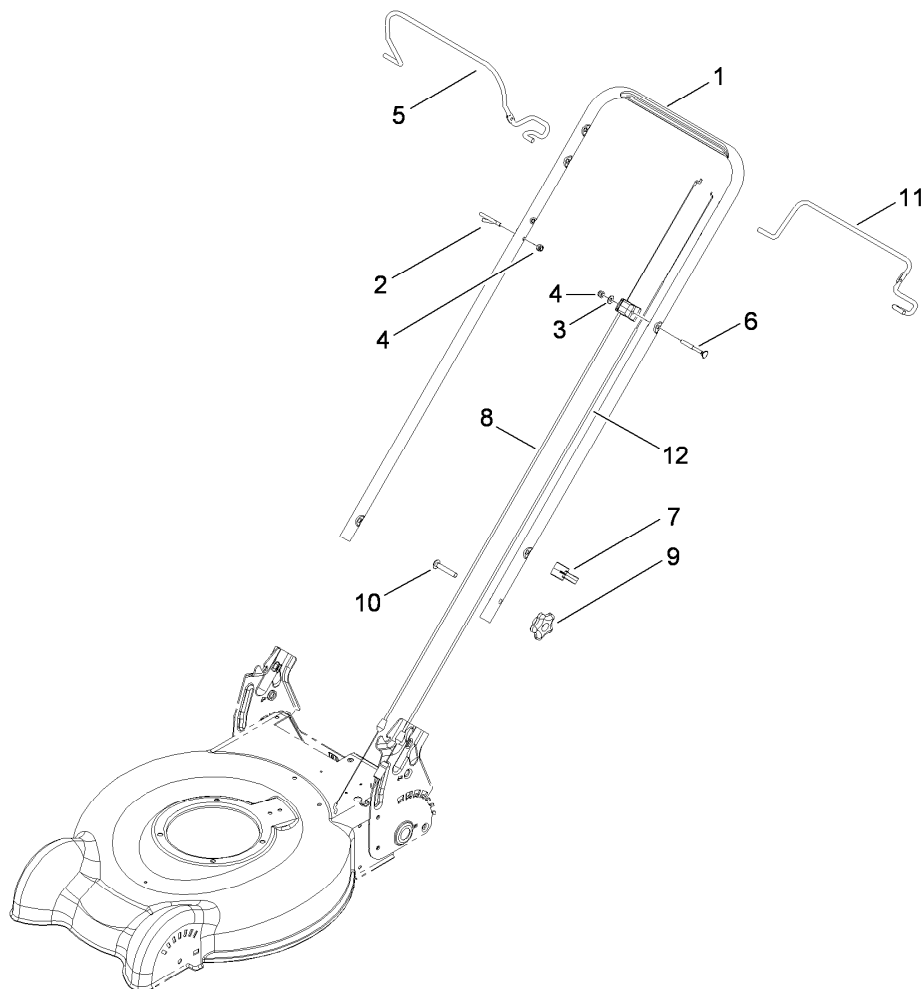


## Handle and Control Assembly

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         |
|-------------|--------------------|-------------|----------------------------|
| 1           | 112-8833-05        | 1           | Handle                     |
| 2           | 86-9671            | 1           | Guide-Rope                 |
| 3           | 3256-1             | 1           | Washer-Flat                |
| 4           | 3296-73            | 2           | Nut-Lock, NI               |
| 5           | 112-8834-03        | 1           | Bail-Brake, 2-Bail Flat    |
| 6           | 92-2270            | 1           | Screw-Handle               |
| 7           | 106-6805           | 1           | Guide-Cable                |
| 8           | 112-8818           | 1           | Cable-Brake                |
| 9           | 108-8162           | 2           | Knob-Locking               |
| 10          | 3230-6             | 2           | Screw-CARR                 |
| 11          | 112-8835-03        | 1           | Bail-Traction, 2-Bail Flat |
| 12          | 112-8817           | 1           | Cable-Traction             |

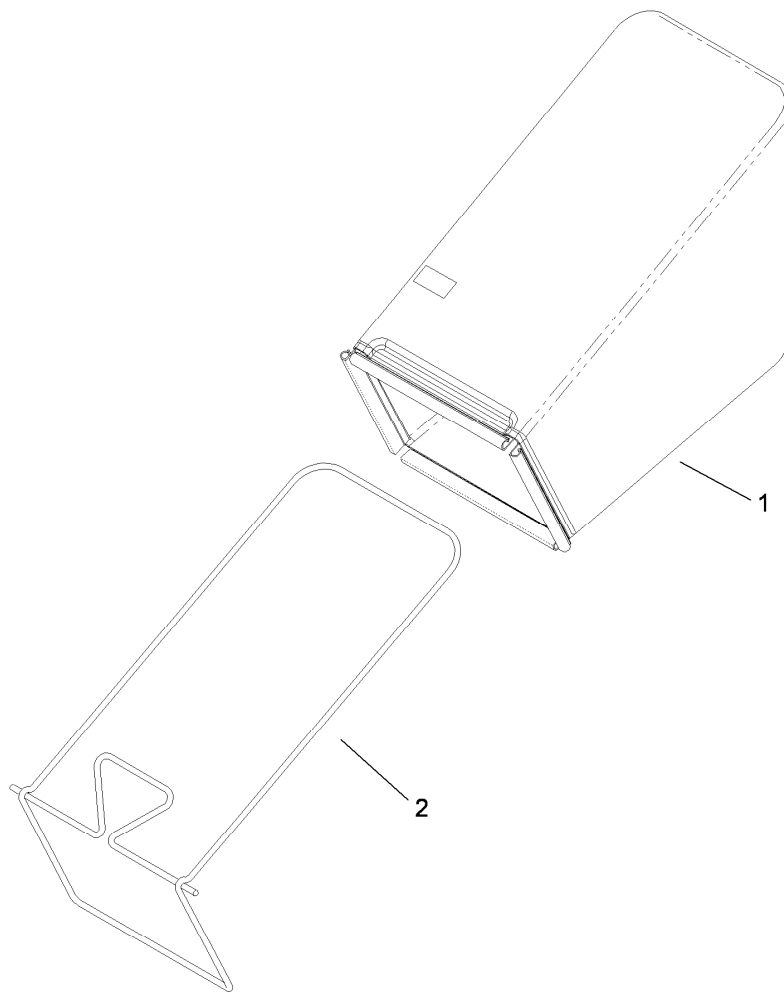

## Rear Bag Assembly

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 112-8836           | 1           | Grass Bag ASM      |
| 2           | 112-8825-03        | 1           | Frame-Bag          |

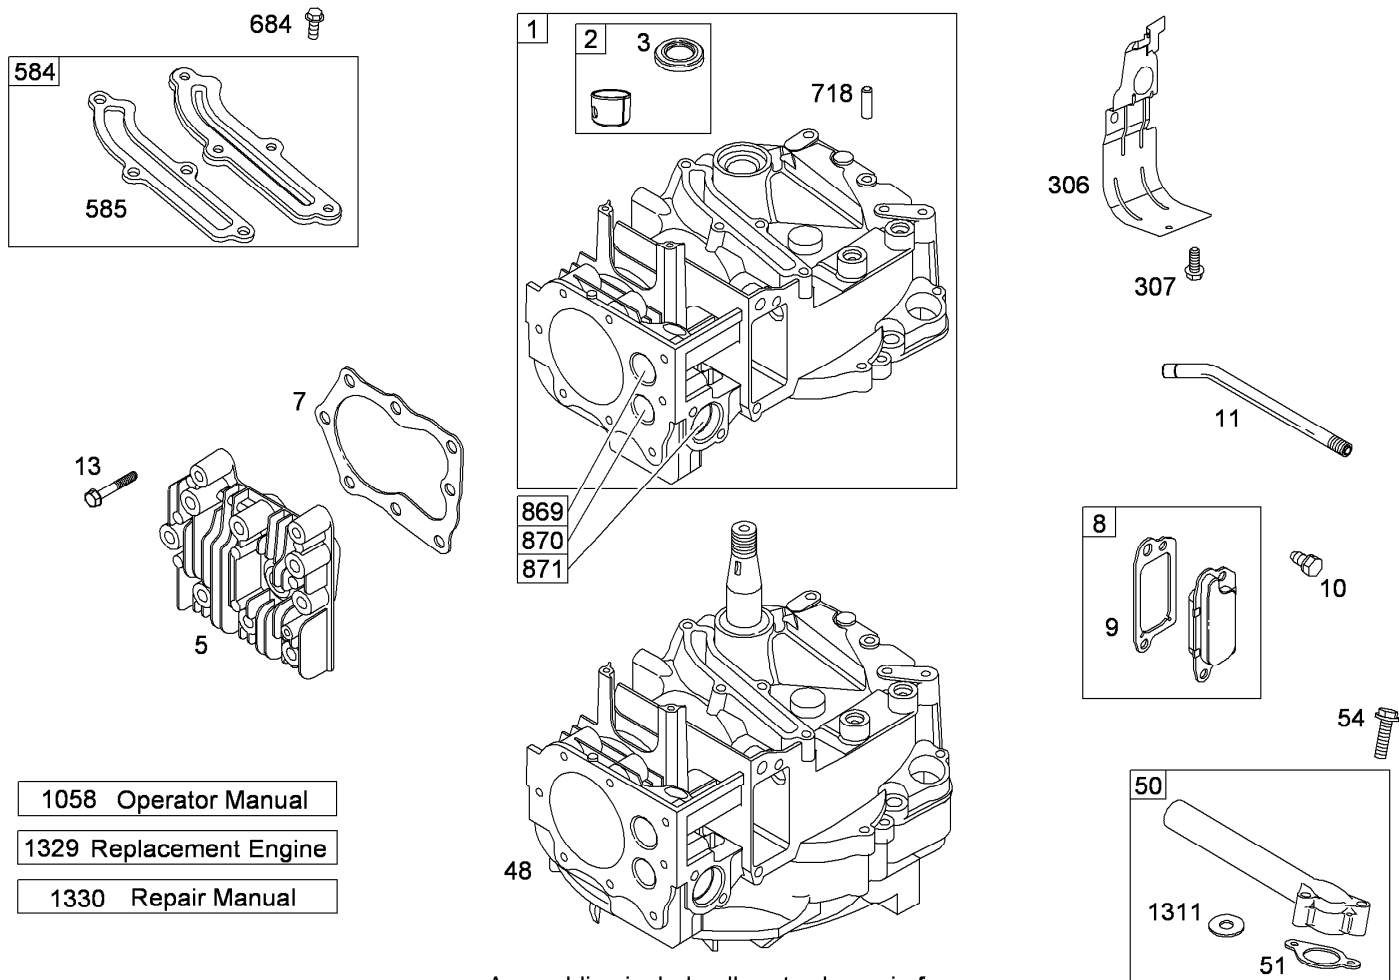

## Cylinder and Cylinder Head Assembly Briggs and Stratton 124T02-0212-B1

| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 1    | 697322      | 1    | Cylinder ASM ■             |
| 2    | 399269      | 1    | Bushing And Seal Kit ■     |
| 3    | 299819s     | 1    | Seal-Oil (Magneto Side) ■▲ |
| 5    | 691160      | 1    | Head-Cylinder ■            |
| 7    | 692249      | 1    | Gasket-Head, Cylinder ■▲◆  |
| 8    | 695250      | 1    | Breather Asm ■             |
| 9    | 699472      | 1    | Gasket-Breather ■▲◆        |
| 10   | 691125      | 1    | Screw (Breather Asm) ■     |
| 11   | 691781      | 1    | Tube-Breather ■            |
| 13   | 690912      | 1    | Screw (Cylinder Head) ■    |
| 48   | 792742      | 1    | Block-Short ■              |
| 50   | 497465      | 1    | Manifold-Intake ■          |
| 51   | 272199s     | 1    | Gasket-Intake ■▲           |
| 54   | 691650      | 1    | Screw (Intake Manifold) ■  |
| 306  | 790836      | 1    | Shield-Cylinder ■          |


| Ref. | Part Number  | Qty. | Description                      |
|------|--------------|------|----------------------------------|
| 307  | 690345       | 1    | Screw (Cylinder Shield) ■        |
| 584  | 697734       | 1    | Cover-Passage, Breather ■        |
| 585  | 691879       | 1    | Gasket-Passage, Breather ■▲      |
| 684  | 690345       | 1    | Screw (Breather Passage Cover) ■ |
| 718  | 690959       | 1    | Pin-Locating ■                   |
| 869  | 691155       | 1    | Seat-Valve (Intake) ■            |
| 870  | 690380       | 1    | Seat-Valve (Exhaust) ■           |
| 871  | 262001       | 1    | Bushing-Guide (Exhaust) ■        |
| 871  | 63709        | 1    | Bushing-Guide ■                  |
| 1058 | 277039       | 1    | Operator Manual ■                |
| 1311 | 690390       | 1    | Washer (Intake Manifold) ■       |
| 1329 | 126L021031F1 | 1    | Replacement Engine ■●            |
| 1330 | 270962       | 1    | Repair Manual ■                  |

● Not illustrated

▲ Included in Engine Gasket Set (Ref. No. 358)

■ Obtain parts from [www.briggsandstratton.com](http://www.briggsandstratton.com)

◆ Included in Valve Gasket Set (Ref. No. 1095)

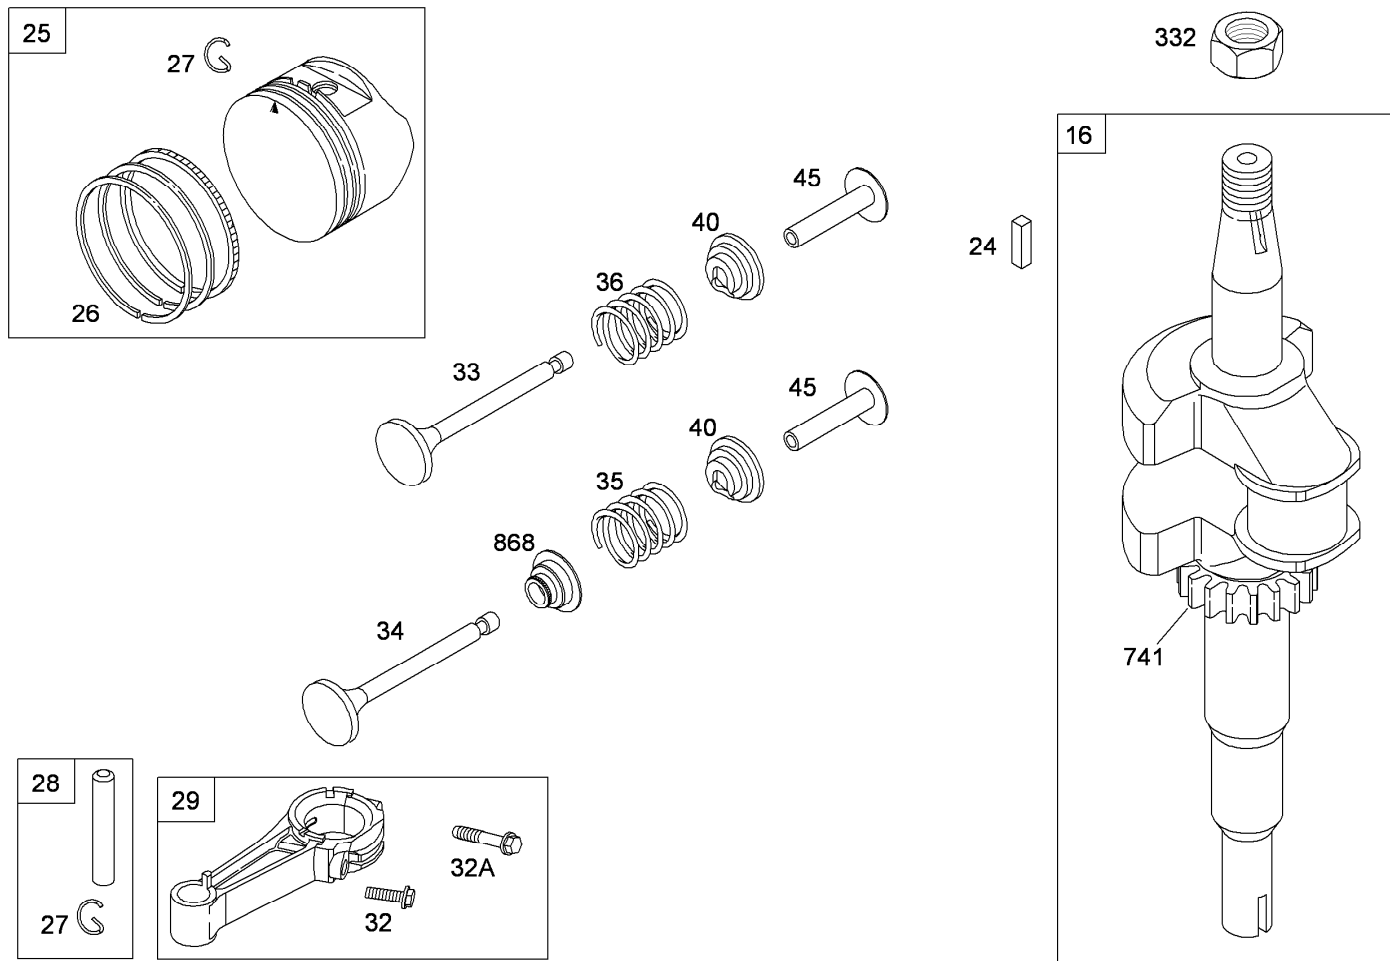


Assemblies include all parts shown in frames

## Crankshaft, Piston, Ring and Connecting Rod Assembly Briggs and Stratton 124T02-0212-B1

| Ref. | Part Number | Qty. | Description                  |
|------|-------------|------|------------------------------|
| 16   | 696009      | 1    | Crankshaft ●●                |
| 24   | 222698s     | 1    | Key-Flywheel ●●              |
| 25   | 795429      | 1    | Piston Asm (Std) ●           |
| 25   | 795430      | 1    | Piston Asm (.020 Oversize) ● |
| 26   | 795431      | 1    | Ring Set (Std) ●             |
| 26   | 795432      | 1    | Ring Set (.020 Oversize) ●   |
| 27   | 691866      | 1    | Lock-Pin, Piston ●           |
| 28   | 499423      | 1    | Pin-Piston (Std) ●           |
| 29   | 499424      | 1    | Rod-Connecting ●             |
| 32   | 691664      | 1    | Screw (Connecting Rod) ●     |

| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 32A  | 695759      | 1    | Screw (Connecting Rod) ● |
| 33   | 262651s     | 1    | Valve-Exhaust ●          |
| 34   | 262652s     | 1    | Valve-Intake ●           |
| 35   | 691270      | 1    | Spring-Valve (Intake) ●  |
| 36   | 691270      | 1    | Spring-Valve (Exhaust) ● |
| 40   | 692194      | 1    | Retainer-Valve ●         |
| 45   | 690548      | 1    | Tappet-Valve ●           |
| 332  | 690662      | 1    | Nut (Flywheel) ●         |
| 741  | 795755      | 1    | Gear-Timing ●            |
| 868  | 697338      | 1    | Seal-Valve ●             |

● Obtain parts from [www.briggsandstratton.com](http://www.briggsandstratton.com)

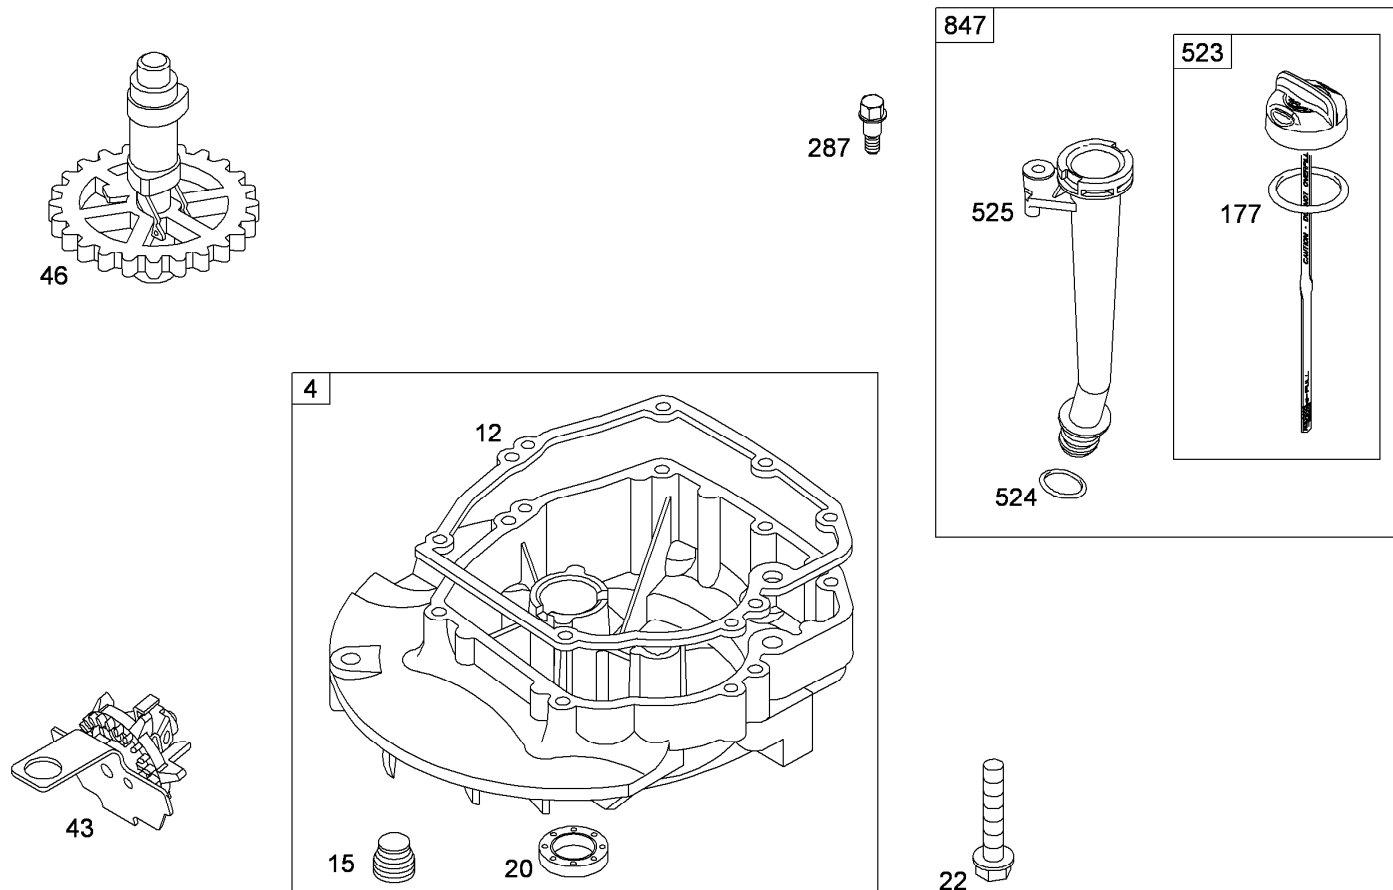


Assemblies include all parts shown in frames

## Crankcase Cover and Sump Assembly Briggs and Stratton 124T02-0212-B1

| Ref. | Part Number | Qty. | Description                       |
|------|-------------|------|-----------------------------------|
| 4    | 493279      | 1    | Sump-Engine ●                     |
| 12   | 692232      | 1    | Gasket-Crankcase (.015 STD) ●■    |
| 15   | 691680      | 1    | Plug-Drain, Oil ●                 |
| 20   | 399781s     | 1    | Seal-Oil (PTO Side) ●■            |
| 22   | 691092      | 1    | Screw (Crankcase Cover To Sump) ● |
| 43   | 691997      | 1    | Slinger-Oil, Governor ●           |
| 46   | 691449      | 1    | Camshaft ●                        |
| 177  | 691031      | 1    | Seal-O Ring (Dipstick) ●■         |
| 287  | 690940      | 1    | Screw (Dipstick Tube) ●           |
| 523  | 499621      | 1    | Dipstick ●                        |
| 524  | 692296      | 1    | Seal-O Ring (Dipstick Tube) ●■    |
| 525  | 495265      | 1    | Tube-Dipstick ●                   |
| 847  | 692047      | 1    | Dipstick Tube ASM ●               |

● Obtain parts from [www.briggsandstratton.com](http://www.briggsandstratton.com)

■ Included in Engine Gasket Set (Ref. No. 358)

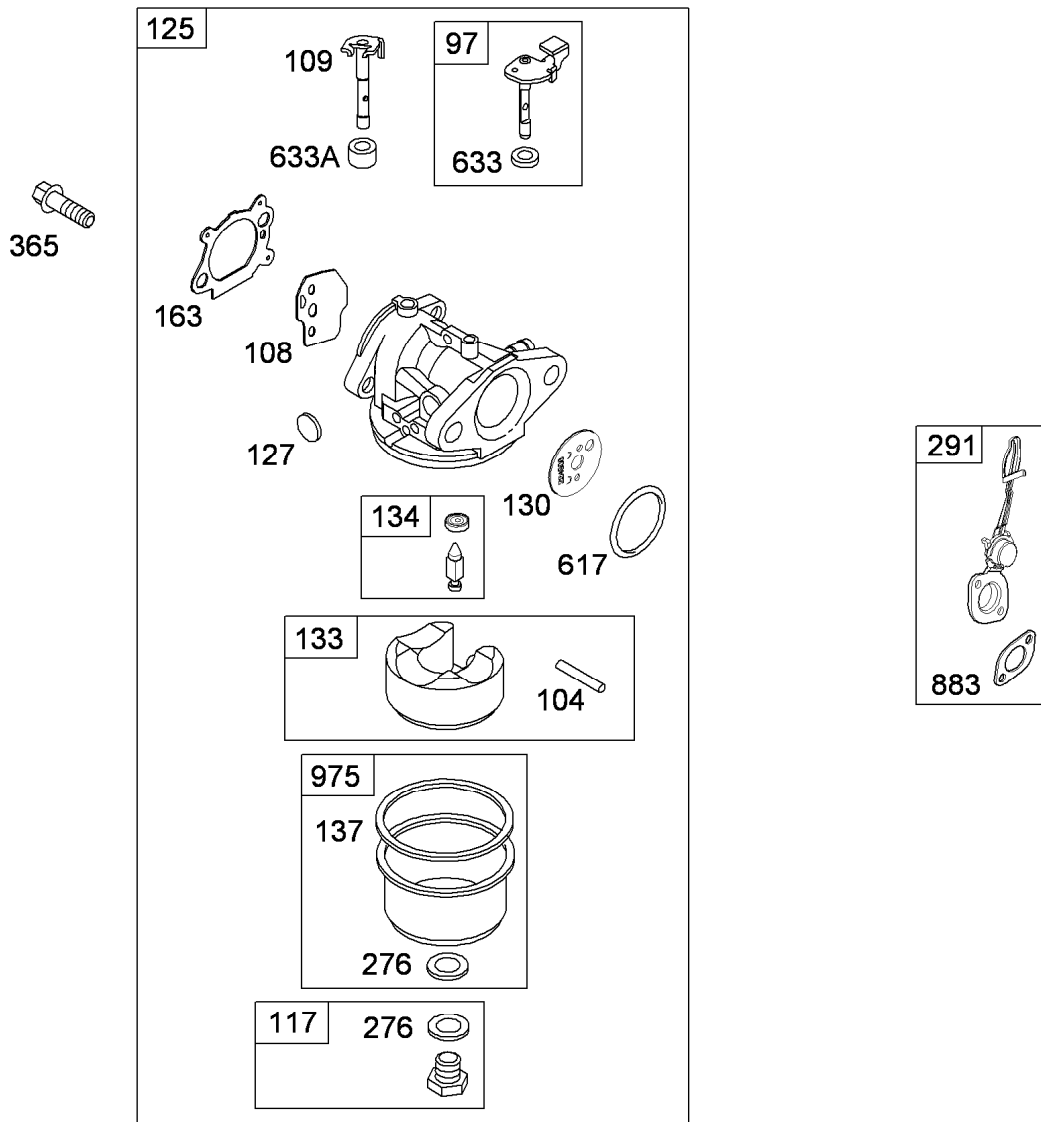

Assemblies include all parts shown in frames


## Carburetor and Fuel Tank Assembly Briggs and Stratton 124T02-0212-B1

| Ref. | Part Number | Qty. | Description                                            |
|------|-------------|------|--------------------------------------------------------|
| 97   | 696565      | 1    | Shaft-Throttle ●                                       |
| 104  | 691242      | 1    | Pin-Hinge, Float ●◆                                    |
| 108  | 795935      | 1    | Valve-Choke ●                                          |
| 109  | 795936      | 1    | Shaft-Choke ●                                          |
| 117  | 695042      | 1    | Jet-Main (STD) ●                                       |
| 125  | 794304      | 1    | Carburetor ●                                           |
| 127  | 694468      | 1    | Plug-Welch ●◆                                          |
| 130  | 696564      | 1    | Valve-Throttle ●                                       |
| 133  | 398187      | 1    | Float-Carburetor ●                                     |
| 134  | 398188      | 1    | Needle And Seat Kit ●◆                                 |
| 137  | 796610      | 1    | Gasket-Bowl, Float (Used After Date Code 08120100) ●◆  |
| 137  | 693981      | 1    | Gasket-Bowl, Float (Used Before Date Code 08120200) ●◆ |

| Ref. | Part Number | Qty. | Description                                    |
|------|-------------|------|------------------------------------------------|
| 163  | 795629      | 1    | Gasket-Cleaner, Air ●◆■                        |
| 276  | 271716      | 1    | Washer-Sealing ●◆                              |
| 291  | 790830      | 1    | Thermostat ●                                   |
| 365  | 691688      | 1    | Screw (Carburetor) ●                           |
| 617  | 270344s     | 1    | Seal-O Ring (Intake Manifold) ●◆■              |
| 633  | 691321      | 1    | Seal-Shaft, Choke Throttle (Throttle Shaft) ●◆ |
| 633A | 693867      | 1    | Seal-Shaft, Choke Throttle (Choke Shaft) ●     |
| 883  | 691881      | 1    | Gasket-Exhaust ●■▲                             |
| 975  | 493640      | 1    | Bowl-Float ●                                   |

● Obtain parts from [www.briggsandstratton.com](http://www.briggsandstratton.com)  
▲ Included in Valve Gasket Set (Ref. No. 1095)

■ Included in Engine Gasket Set (Ref. No. 358)  
◆ Included in Carburetor Overhaul Kit (Ref. No. 121)

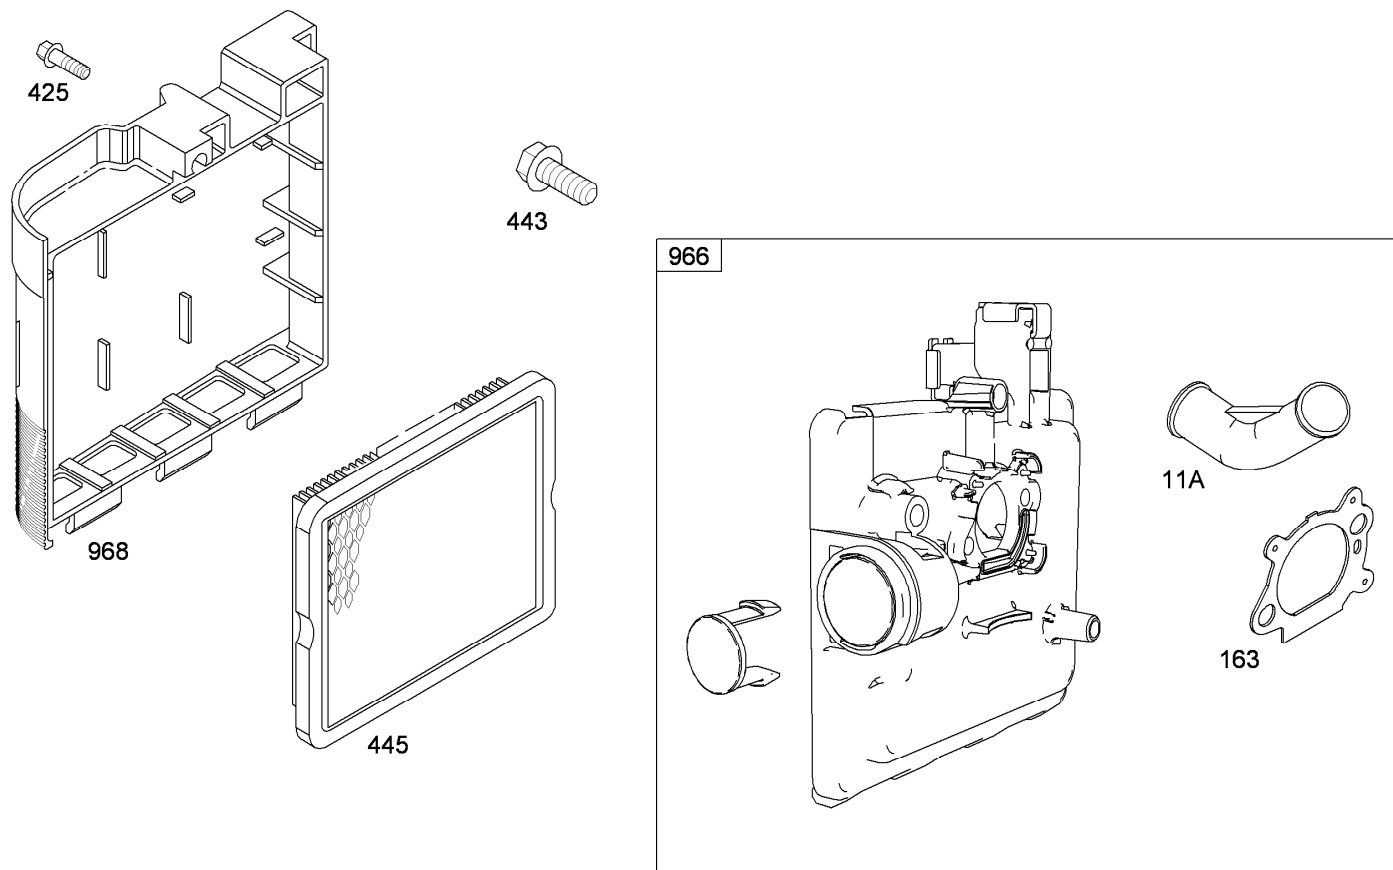







Assemblies include all parts shown in frames

## Air Cleaner Assembly Briggs and Stratton 124T02-0212-B1

| Ref. | Part Number | Qty. | Description                               |
|------|-------------|------|-------------------------------------------|
| 11A  | 691923      | 1    | Tube-Breather (Air Cleaner Primer Base) ● |
| 163  | 795629      | 1    | Gasket-Cleaner, Air ● ▲ ■                 |
| 425  | 690670      | 1    | Screw (Air Cleaner Cover) ●               |
| 443  | 692523      | 1    | Screw (Air Cleaner Primer Base) ●         |
| 445  | 491588s     | 1    | Filter-Cartridge, Air Cleaner ●           |
| 966  | 795259      | 1    | Base-Primer, Air Cleaner ●                |
| 968  | 692298      | 1    | Cover-Cleaner, Air ●                      |

● Obtain parts from [www.briggsandstratton.com](http://www.briggsandstratton.com)  
▲ Included in Carburetor Overhaul Kit (Ref. No. 121)

■ Included in Engine Gasket Set (Ref. No. 358)

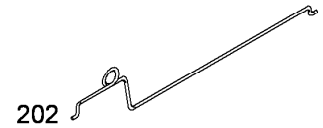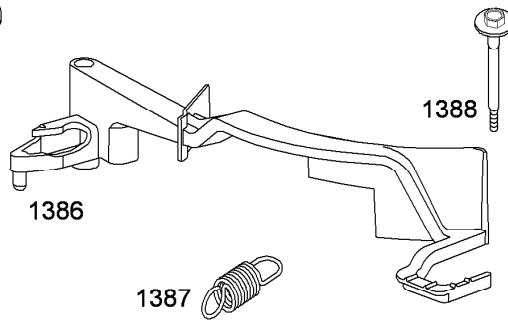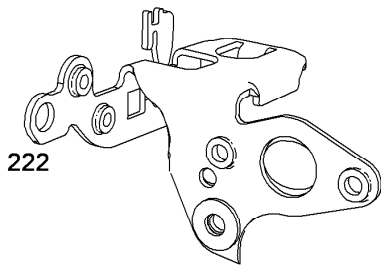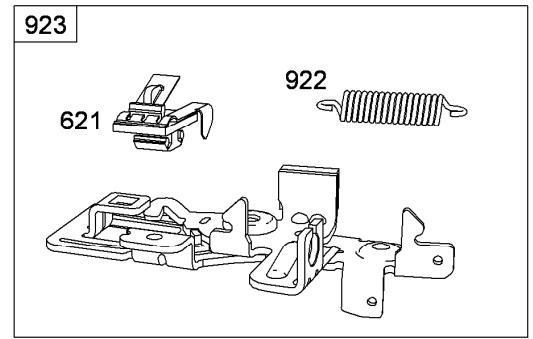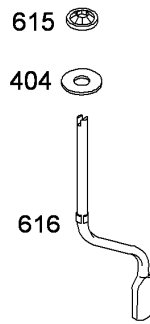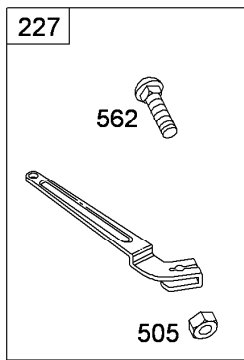






Assemblies include all parts shown in frames

## Governor and Controls Assembly Briggs and Stratton 124T02-0212-B1

| Ref. | Part Number | Qty. | Description                      |
|------|-------------|------|----------------------------------|
| 202  | 691829      | 1    | Link-Governor, Mechanical ●      |
| 209  | 699056      | 1    | Spring-Governor (No Color) ●     |
| 222  | 795937      | 1    | Bracket-Control ●                |
| 227  | 690783      | 1    | Lever-Control, Governor ●        |
| 404  | 690272      | 1    | Washer (Governor Crank) ●        |
| 505  | 691251      | 1    | Nut (Governor Control Lever) ●   |
| 562  | 691119      | 1    | Screw (Governor Control Lever) ● |

| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 615  | 690340      | 1    | Retainer-Shaft, Governor ● |
| 616  | 698801      | 1    | Crank-Governor ●           |
| 621  | 692310      | 1    | Switch-Stop ●              |
| 745  | 691648      | 1    | Screw (Brake) ●            |
| 922  | 692135      | 1    | Spring-Brake ●             |
| 923  | 796136      | 1    | Brake ●                    |
| 1386 | 790848      | 1    | Vane-Air ●                 |
| 1387 | 790849      | 1    | Spring-Vane, Air ●         |
| 1388 | 790850      | 1    | Screw (Air Vane) ●         |

● Obtain parts from [www.briggsandstratton.com](http://www.briggsandstratton.com)

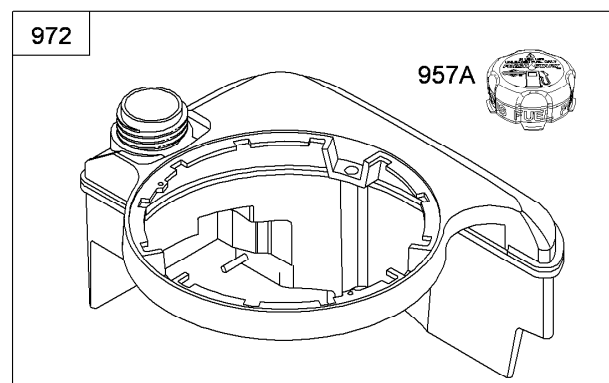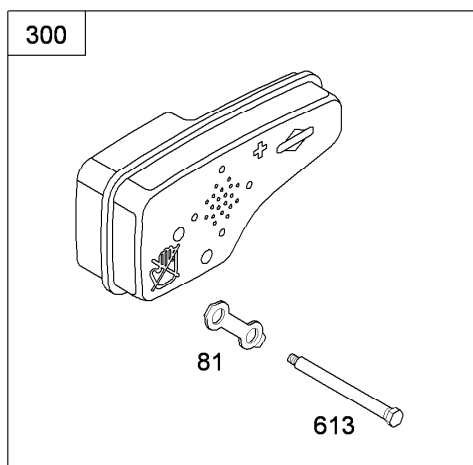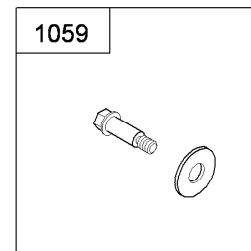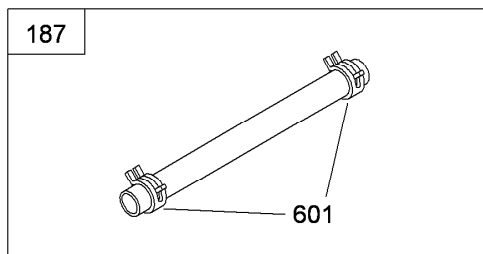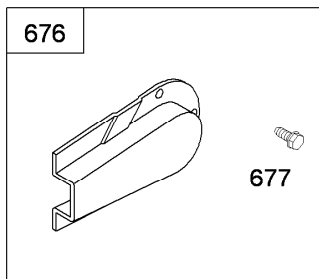


Assemblies include all parts shown in frames

## Muffler and Fuel Tank Assembly Briggs and Stratton 124T02-0212-B1

| Ref. | Part Number | Qty. | Description                          |
|------|-------------|------|--------------------------------------|
| 81   | 691740      | 1    | Lock-Screw, Muffler ●                |
| 187  | 791766      | 1    | Line fuel (Cut To Required Length) ● |
| 190  | 690940      | 1    | Screw (Fuel Tank) ●                  |
| 300  | 790828      | 1    | Muffler ●                            |
| 601  | 791850      | 1    | Clamp-Hose ●                         |
| 613  | 790833      | 1    | Screw (Muffler) ●                    |
| 676  | 493871      | 1    | Deflector-Muffler ●                  |
| 677  | 690661      | 1    | Screw (Muffler Deflector) ●          |
| 883  | 691881      | 1    | Gasket-Exhaust ● ■ ▲                 |
| 957  | 793606      | 1    | Cap-Tank, Fuel ●                     |
| 957A | 796654      | 1    | Cap-Tank, Fuel ●                     |
| 972  | 699374      | 1    | Tank-Fuel ●                          |
| 1059 | 692311      | 1    | Screw And Washer Kit ●               |

● Obtain parts from [www.briggsandstratton.com](http://www.briggsandstratton.com)  
 ▲ Included in Valve Gasket Set (Ref. No. 1095)

■ Included in Engine Gasket Set (Ref. No. 358)

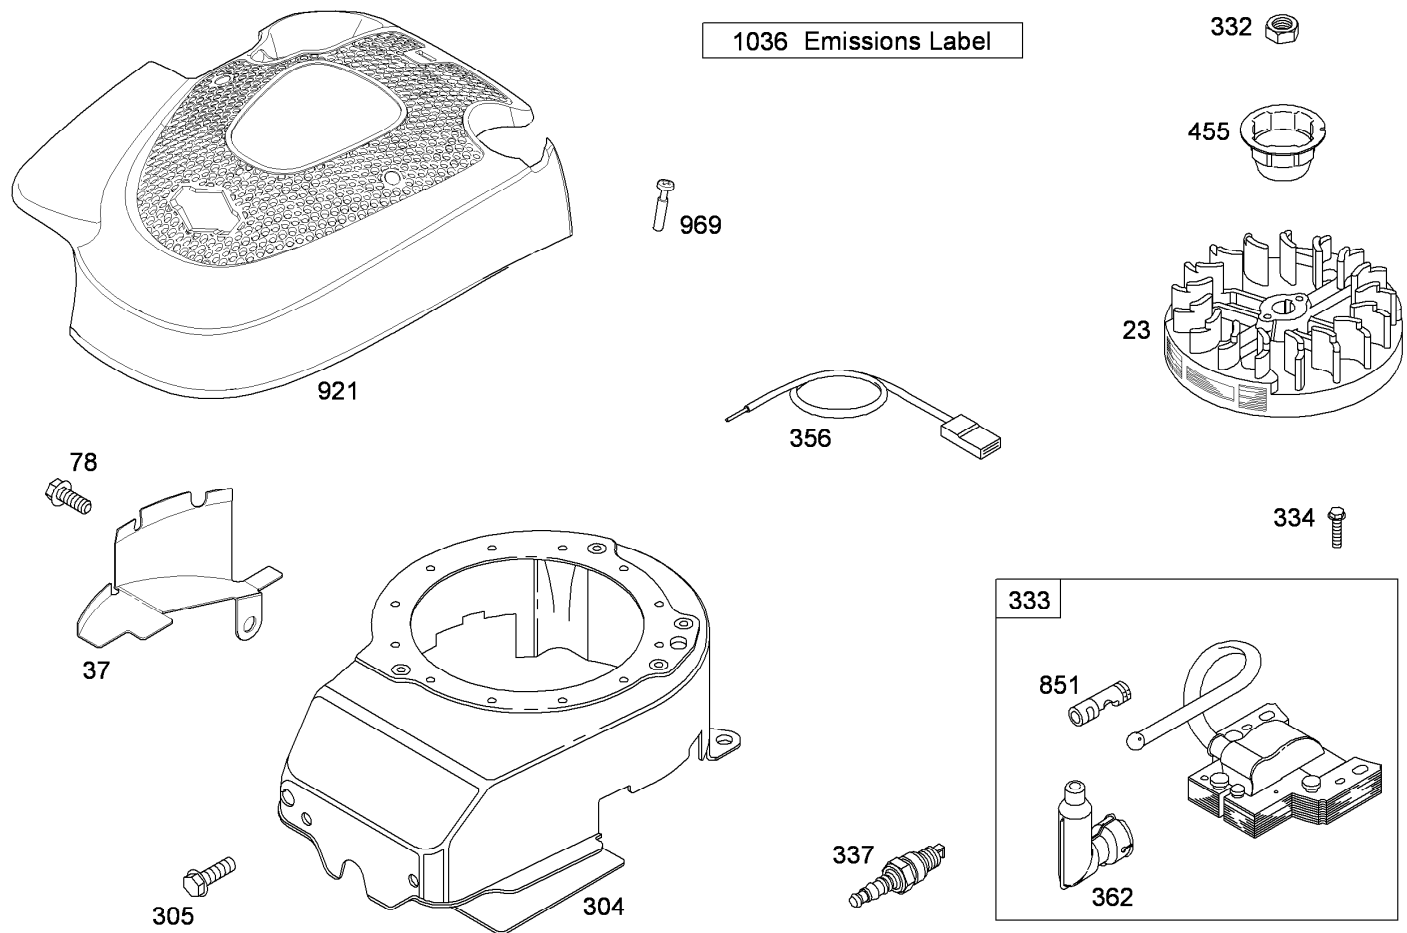

Assemblies include all parts shown in frames

## Blower Housing, Flywheel and Ignition Assembly Briggs and Stratton 124T02-0212-B1


| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 23   | 691987      | 1    | Flywheel ▲                 |
| 37   | 793756      | 1    | Guard-Flywheel ▲           |
| 78   | 691108      | 1    | Screw (Flywheel Guard) ▲   |
| 304  | 790826      | 1    | Housing-Blower ▲           |
| 305  | 691108      | 1    | Screw (Blower Housing) ▲   |
| 332  | 690662      | 1    | Nut (Flywheel) ▲           |
| 333  | 793353      | 1    | Armature-Magneto ▲         |
| 334  | 691061      | 1    | Screw (Magneto Armature) ▲ |

| Ref. | Part Number | Qty. | Description                    |
|------|-------------|------|--------------------------------|
| 337  | 802592s     | 1    | Spark Plug ▲                   |
| 356  | 692390      | 1    | Wire-Stop ▲                    |
| 362  | 793351      | 1    | Shield-Spark Plug ▲            |
| 455  | 791960      | 1    | Cup-Flywheel ▲                 |
| 851  | 692424      | 1    | Terminal spark Plug ▲          |
| 921  | 792652      | 1    | Cover-Housing, Blower ▲        |
| 969  | 691138      | 1    | Screw (Blower Housing Cover) ▲ |
| 1036 |             | 1    | Label-Emissions ▲●■            |

● Not illustrated

▲ Obtain parts from [www.briggsandstratton.com](http://www.briggsandstratton.com)

■ Not serviced separately



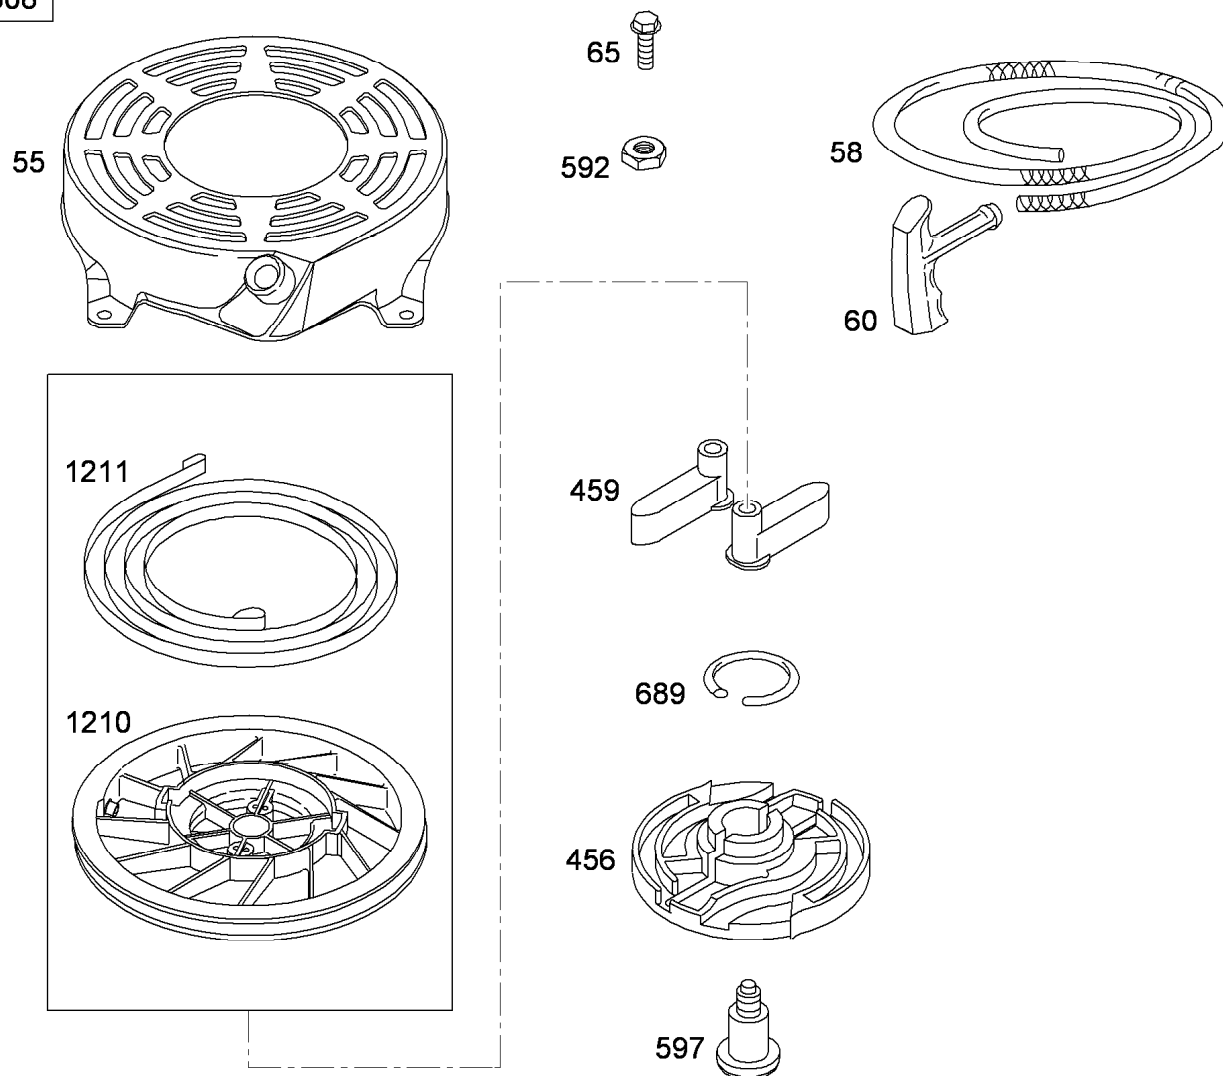


Assemblies include all parts shown in frames

## Rewind Starter Assembly Briggs and Stratton 124T02-0212-B1

| Ref. | Part Number | Qty. | Description                             |
|------|-------------|------|-----------------------------------------|
| 55   | 691421      | 1    | Housing-Starter, Rewind ●               |
| 58   | 697316      | 1    | Rope-Starter (Cut To Required Length) ● |
| 60   | 281434s     | 1    | Grip-Rope, Starter ●                    |
| 65   | 690837      | 1    | Screw (Rewind Starter) ●                |
| 456  | 692299      | 1    | Plate-Friction, Pawl ●                  |
| 459  | 281505s     | 1    | Ratchet-Pawl ●                          |
| 592  | 690800      | 1    | Nut (Rewind Starter) ●                  |
| 597  | 691696      | 1    | Screw (Pawl Friction Plate) ●           |
| 608  | 497680      | 1    | Starter-Rewind ●                        |
| 689  | 691855      | 1    | Spring-Friction ●                       |
| 1210 | 498144      | 1    | Pulley And Spring ASM (Pulley) ●        |
| 1211 | 498144      | 1    | Pulley And Spring ASM (Spring) ●        |

● Obtain parts from [www.briggsandstratton.com](http://www.briggsandstratton.com)

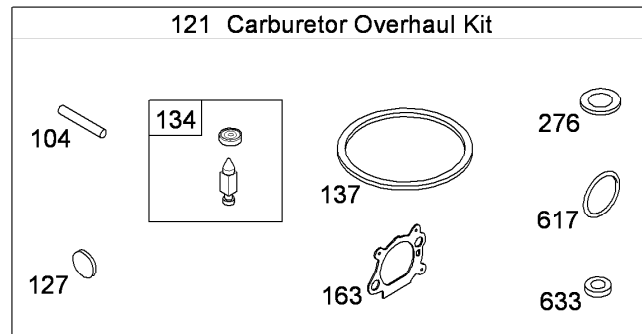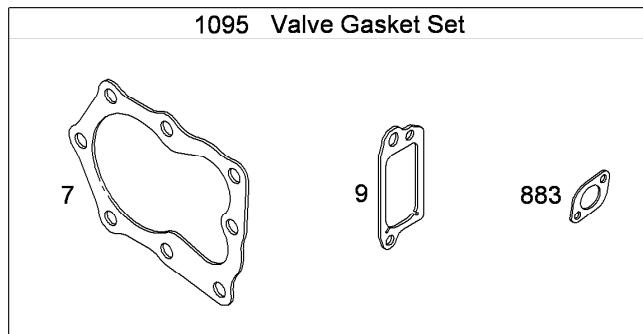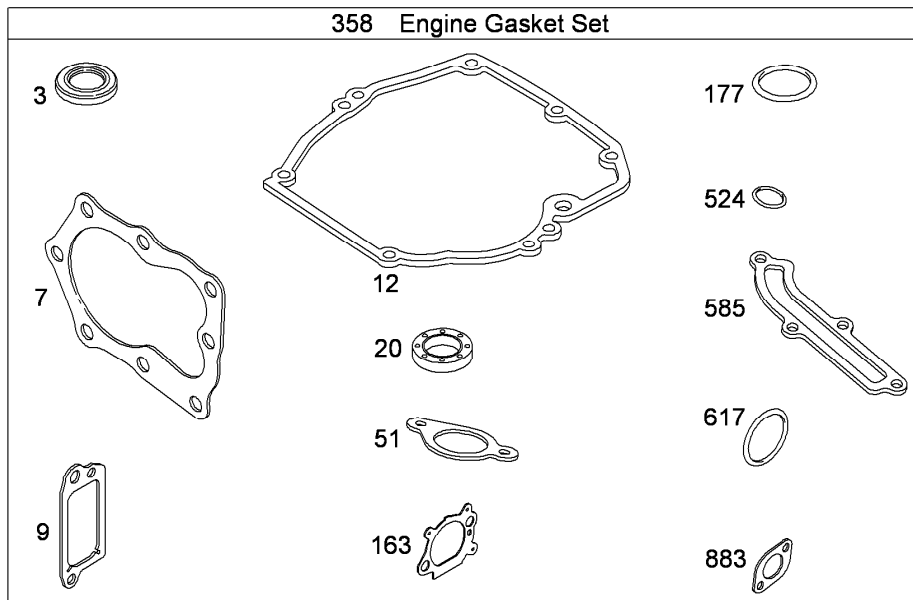

Assemblies include all parts shown in frames

## Engine and Valve Gaskets and Carburetor Overhaul Kit Briggs and Stratton 124T02-0212-B1

| Ref. | Part Number | Qty. | Description                                            |
|------|-------------|------|--------------------------------------------------------|
| 3    | 299819s     | 1    | Seal-Oil (Magneto Side) ●■                             |
| 7    | 692249      | 1    | Gasket-Head, Cylinder ●■▲                              |
| 9    | 699472      | 1    | Gasket-Breather ●■▲                                    |
| 12   | 692232      | 1    | Gasket-Crankcase ●■                                    |
| 20   | 399781s     | 1    | Seal-Oil (PTO Side) ●■                                 |
| 51   | 272199s     | 1    | Gasket-Intake ●■                                       |
| 104  | 691242      | 1    | Pin-Hinge, Float ●◆                                    |
| 121  | 498260      | 1    | Carburetor Overhaul Kit ●                              |
| 127  | 694468      | 1    | Plug-Welch ●◆                                          |
| 134  | 398188      | 1    | Needle And Seat Kit ●◆                                 |
| 137  | 796610      | 1    | Gasket-Bowl, Float (Used After Date Code 08120100) ●◆  |
| 137  | 693981      | 1    | Gasket-Bowl, Float (Used Before Date Code 08120200) ●◆ |

| Ref. | Part Number | Qty. | Description                                    |
|------|-------------|------|------------------------------------------------|
| 163  | 795629      | 1    | Gasket-Cleaner, Air ●◆■                        |
| 177  | 691031      | 1    | Seal-O Ring (Dipstick) ●■                      |
| 276  | 271716      | 1    | Washer-Sealing ●◆                              |
| 358  | 497316      | 1    | Engine Gasket Set ●                            |
| 524  | 692296      | 1    | Seal-O Ring (Dipstick Tube) ●■                 |
| 585  | 691879      | 1    | Gasket-Passage, Breather ●■                    |
| 617  | 270344s     | 1    | Seal-O Ring (Intake Manifold) ●◆■              |
| 633  | 691321      | 1    | Seal-Shaft, Choke Throttle (Throttle Shaft) ●◆ |
| 883  | 691881      | 1    | Gasket-Exhaust ●■▲                             |
| 1095 | 498528      | 1    | Valve Gasket Set ●                             |

● Obtain parts from [www.briggsandstratton.com](http://www.briggsandstratton.com)  
▲ Included in Valve Gasket Set (Ref. No. 1095)

■ Included in Engine Gasket Set (Ref. No. 358)  
◆ Included in Carburetor Overhaul Kit (Ref. No. 121)

# Attachments and Accessories

## For 10641C 20in Mulching/Rear Bagging Lawn Mower

| Product Name                                                                   | Model/Part |
|--------------------------------------------------------------------------------|------------|
| Loose Parts Kit .....                                                          | 117-5929   |
| Replacement Bag, 2009 and After 20in Steel Deck Lawnmowers.....                | 89701      |
| Replacement Bag and Frame Kit, 2009 and After 20in Steel Deck Lawnmowers ..... | 89702      |
| 20in Replacement Blade.....                                                    | 89963      |

**Notes:**

**Notes:**

**Notes:**

