



**20in Mulching/Rear Bagging  
Lawn Mower**

**Model No. 10647—Serial No. 290000001 and Up**

**Parts Catalog**

# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# List of Abbreviations

 
**AR:** as required  
**ASM:** assembly  
**BBC:** blade brake clutch  
**CARR:** carriage  
**CCW:** counter clock wise  
**CW:** clockwise  
**DEG:** degrees  
**ECM:** electronic control module  
**EXT:** external  
**FH:** flat head  
**GA:** gauge  
**HD:** heavy-duty  
**HF:** hex flange  
**HH:** hex head  
**HHF:** hex head flange  
**HHFTF:** hex head flange thread forming  
**HJ:** hex jam  
**HLH:** hex lag head  
**HOC:** height-of-cut

**HSBH:** hex socket button head  
**HSFH:** hex socket flat head  
**HSH:** hex socket head  
**HWH:** hex washer head  
**HWHTF:** hex washer head thread forming  
**HYD:** hydraulic  
**LH:** left hand  
**NI:** nylon insert  
**NPTF:** national pipe thread fine  
**PFH:** phillips flat head  
**PPH:** phillips pan head  
**PPHTF:** phillips pan head thread forming  
**PRH:** phillips round head  
**PTH:** phillips truss head  
**PTO:** power-take-off  
**RH:** right hand  
**ROPS:** roll-over protection system  
**RRB:** rear roller brush

**SFH:** slotted fillister head  
**SHH:** slotted hex head  
**SHWH:** slotted hex washer head  
**SPH:** slotted pan head  
**SQH:** square head  
**SRH:** slotted round head  
**STD:** standard  
**TAP:** self tapping  
**TTH:** torx truss head


# Contents

|                                                                                               |    |
|-----------------------------------------------------------------------------------------------|----|
| Housing Assembly .....                                                                        | 4  |
| Front Axle Assembly .....                                                                     | 5  |
| Rear Axle and Transmission Assembly .....                                                     | 6  |
| Engine and Blade Assembly .....                                                               | 7  |
| Handle Assembly .....                                                                         | 8  |
| Electrical Assembly .....                                                                     | 9  |
| Rear Bag Assembly .....                                                                       | 10 |
| Cylinder and Cylinder Head Assembly Briggs and Stratton 124L05-0128-F1 .....                  | 11 |
| Crankshaft, Piston, Ring and Connecting Rod Assembly Briggs and Stratton 124L05-0128-F1 ..... | 12 |
| Crankcase Cover and Sump Assembly Briggs and Stratton 124L05-0128-F1 .....                    | 13 |
| Carburetor and Fuel Tank Assembly Briggs and Stratton 124L05-0128-F1 .....                    | 14 |
| Air Cleaner Assembly Briggs and Stratton 124L05-0128-F1 .....                                 | 15 |
| Governor, Controls and Brake Assembly Briggs and Stratton 124L05-0128-F1 .....                | 16 |
| Muffler and Fuel Tank Assembly Briggs and Stratton 124L05-0128-F1 .....                       | 17 |
| Blower Housing, Flywheel and Ignition Assembly Briggs and Stratton 124L05-0128-F1 .....       | 18 |
| Rewind Starter Assembly Briggs and Stratton 124L05-0128-F1 .....                              | 19 |
| Electric Starter Assembly Briggs and Stratton 124L05-0128-F1 .....                            | 20 |
| Engine and Valve Gaskets and Carburetor Overhaul Kit Briggs and Stratton 124L05-0128-F1 ..... | 21 |
| Attachments and Accessories .....                                                             | 22 |

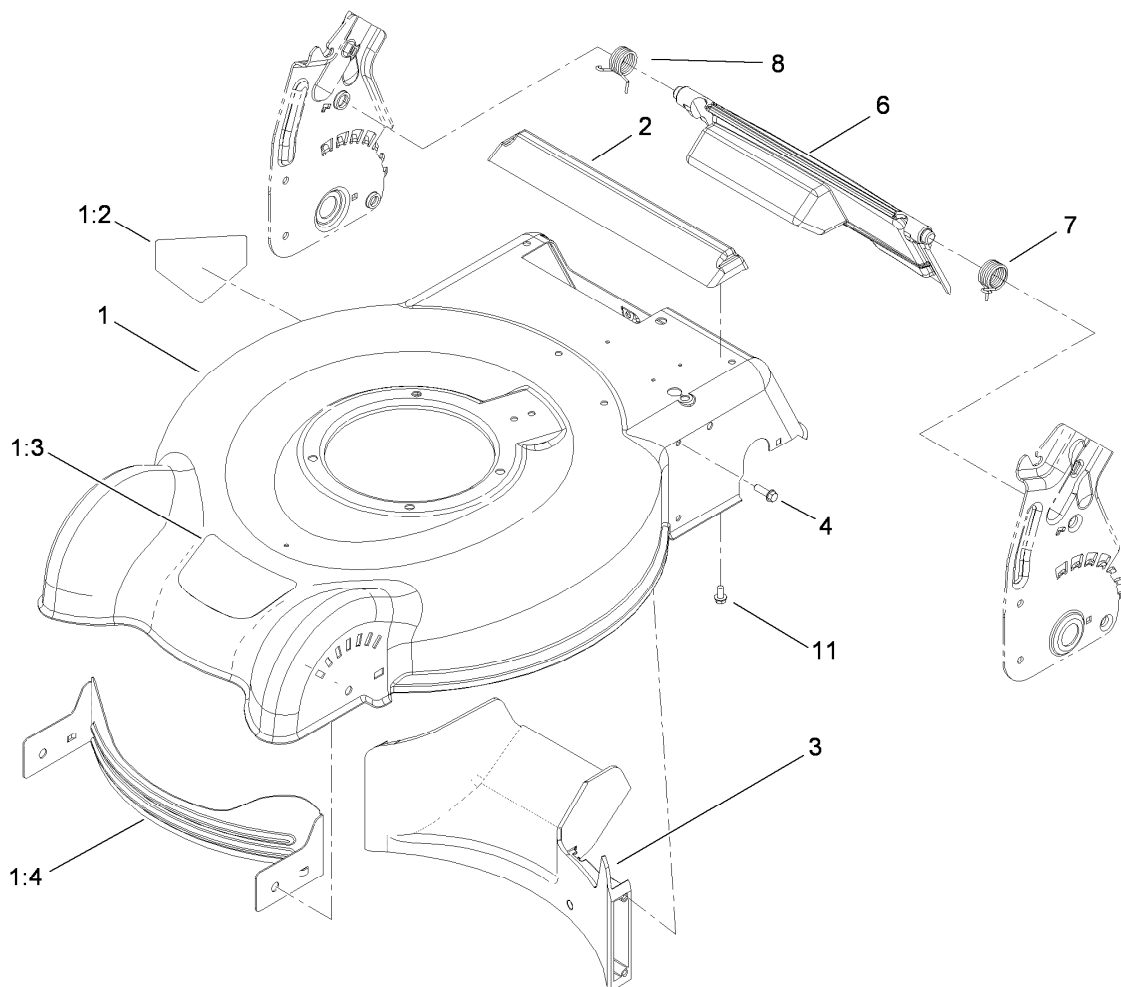


## Housing Assembly
 
| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 1    | 117-4153    | 1    | Housing ASM        |
| 1:2  | 94-8072     | 1    | Decal-Danger       |
| 1:3  | 117-4131    | 1    | Decal              |
| 1:4  | 112-8824-02 | 1    | Baffle-Front       |
| 2    | 112-8845    | 1    | Chute-Rear         |
| 3    | 112-8821    | 1    | Baffle-Rear        |
| 4    | 46-8091     | 5    | Screw-HWH          |
| 6    | 117-5923    | 1    | Rear Deflector ASM |
| 7    | 112-8848    | 1    | Spring-Torsion, LH |
| 8    | 112-8849    | 1    | Spring-Torsion, RH |
| 11   | 46-8093     | 3    | Screw-Plastite     |

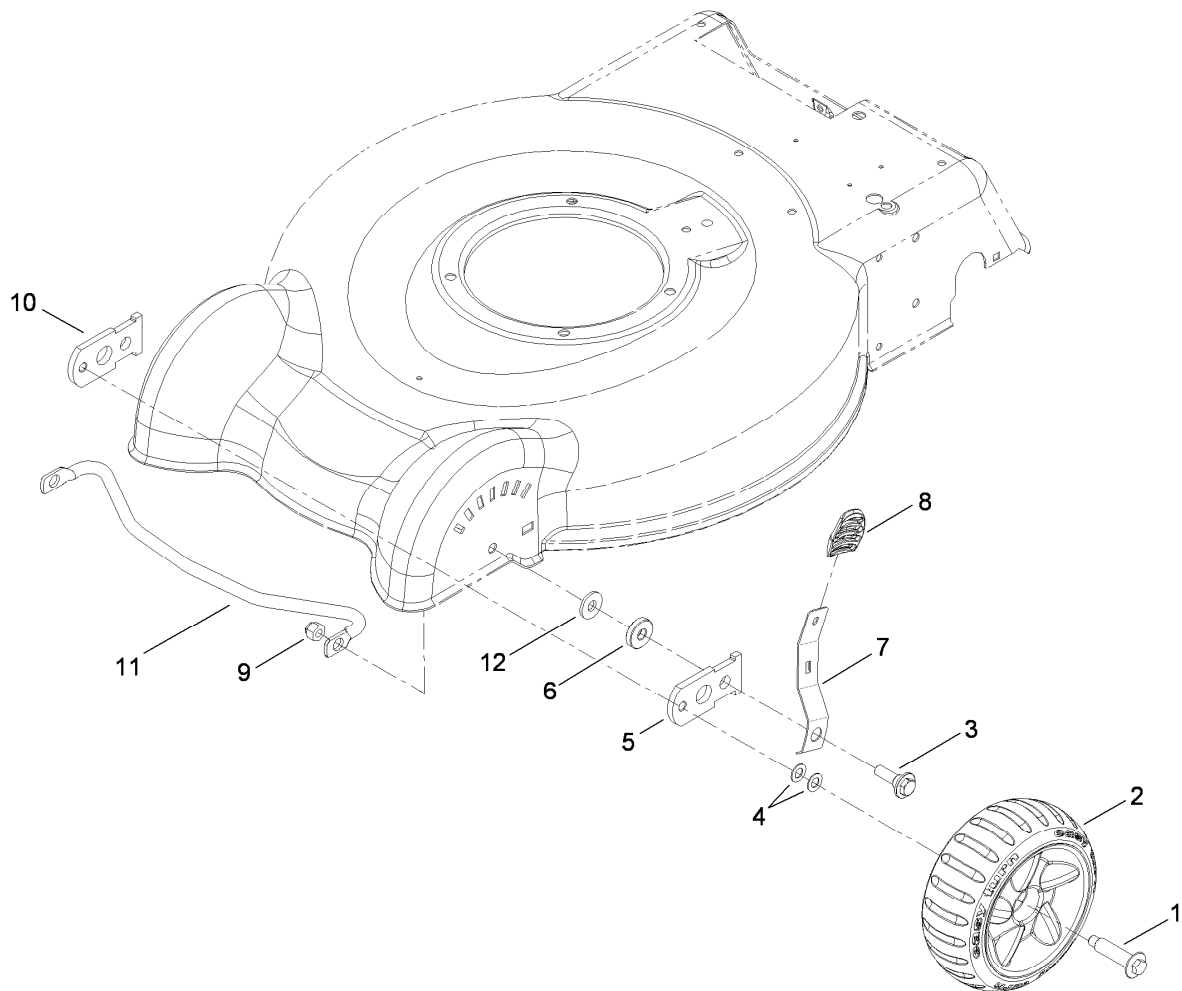

## Front Axle Assembly

 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|------------------------|
| 1           | 614650             | 2           | Bolt-Shoulder          |
| 2           | 112-1548           | 2           | 7 Inch Front Wheel ASM |
| 3           | 614672             | 2           | Bolt-Shoulder          |
| 4           | 40-1940            | 4           | Washer                 |
| 5           | 107-3877           | 1           | Arm-Pivot, RH          |
| 6           | 92-4890            | 2           | Washer                 |
| 7           | 112-8828           | 2           | Arm-Spring, Front      |
| 8           | 105-3042           | 2           | Knob-Lever, HOC        |
| 9           | 3296-39            | 2           | Nut-Lock, NI           |
| 10          | 108-1044           | 1           | Arm-Pivot, LH          |
| 11          | 117-4161           | 1           | Brace-Front            |
| 12          | 80-6990            | 2           | Washer-Hardened        |

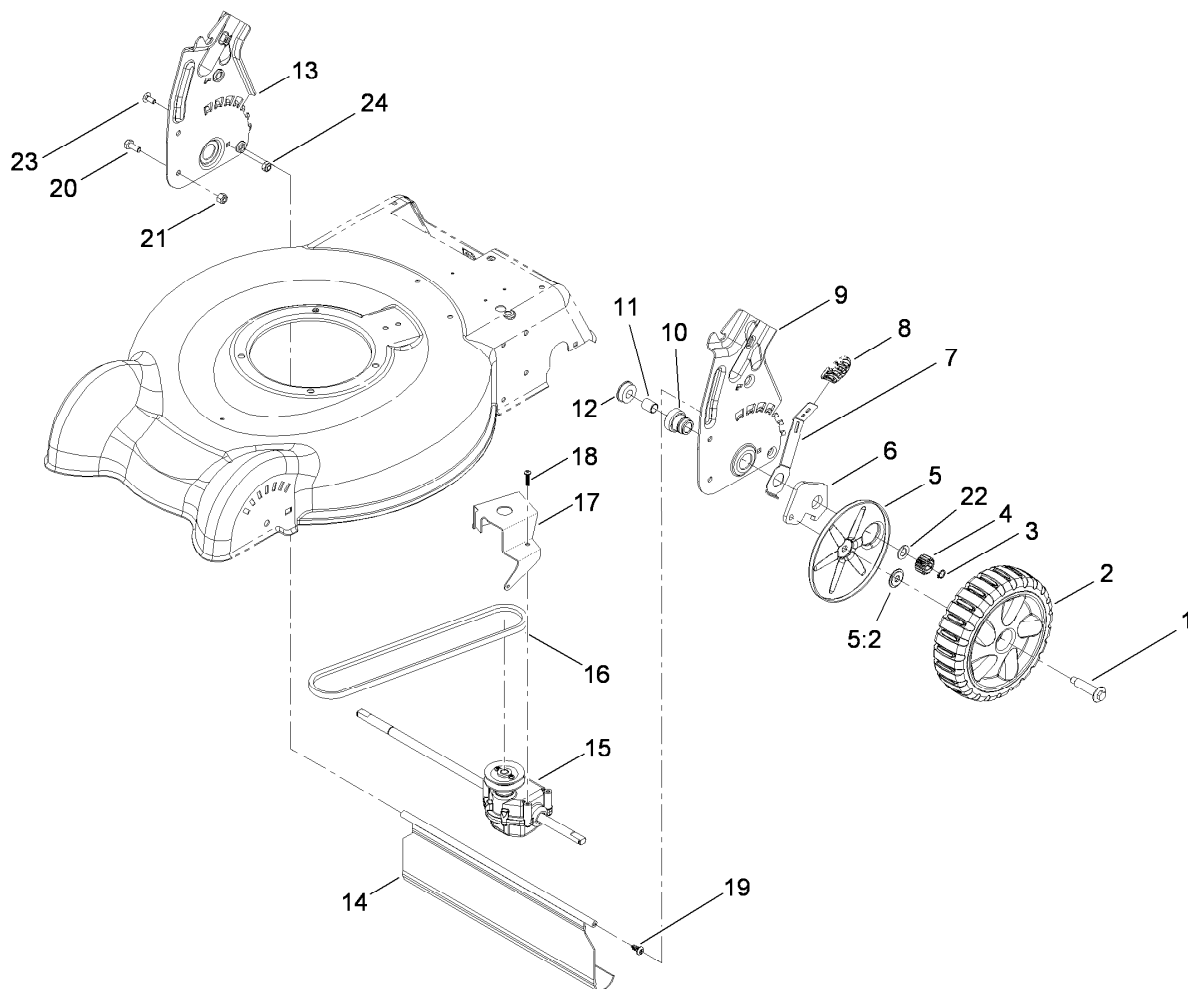

## Rear Axle and Transmission Assembly

| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 1    | 614650      | 2    | Bolt-Shoulder         |
| 2    | 107-3906    | 2    | Rear Wheel ASM        |
| 3    | 32151-61    | 2    | Ring-Retaining        |
| 4    | 110-9417    | 2    | Pinion                |
| 5    | 110-1793    | 2    | Wheel Cover ASM       |
| 5:2  | 614426      | 1    | Washer-Stepped        |
| 6    | 108-9781    | 2    | Arm-Pivot, Rear       |
| 7    | 108-9780    | 2    | Arm-Spring            |
| 8    | 105-3042    | 2    | Knob-Lever, HOC       |
| 9    | 112-8822-03 | 1    | Plate-HOC, LH         |
| 10   | 108-9779    | 2    | Retainer-Bushing, HOC |
| 11   | 108-9782    | 2    | Bushing-Sleeve        |
| 12   | 104-8699    | 2    | Bearing-Ball          |
 
| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 13   | 112-8823-03 | 1    | Plate-HOC, RH        |
| 14   | 112-8768    | 1    | Shield-Trailing      |
| 15   | 112-8831    | 1    | Transmission ASM     |
| 16   | 110-9429    | 1    | V-Belt               |
| 17   | 114-7977-03 | 1    | Bracket-Transmission |
| 18   | 108-7476    | 3    | Screw-Plastite       |
| 19   | 117-1092    | 2    | Screw-PTH            |
| 20   | 322-3       | 4    | Screw-HH             |
| 21   | 3296-29     | 4    | Nut-Lock, NI         |
| 22   | 110-7191    | 2    | Washer-Thrust        |
| 23   | 3229-11     | 2    | Screw-CARR           |
| 24   | 3296-16     | 2    | Nut-Lock, NI         |

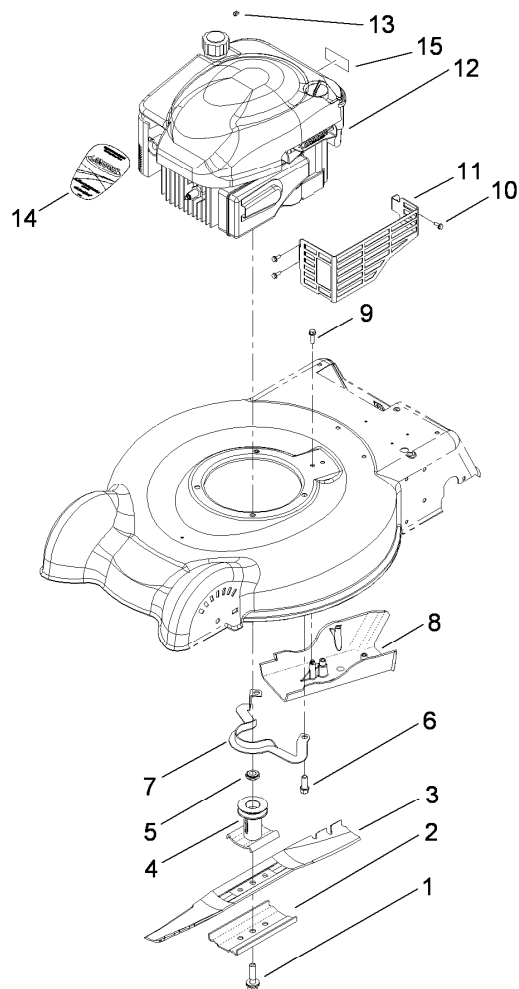


## Engine and Blade Assembly

| Ref. | Part Number | Qty. | Description                      |
|------|-------------|------|----------------------------------|
| 1    | 105-8579    | 1    | Bolt-Blade                       |
| 2    | 108-3766-03 | 1    | Support-Blade                    |
| 3    | 112-8841-03 | 1    | Blade-20 Inch                    |
| 4    | 106-3987    | 1    | Blade Driver ASM                 |
| 5    | 106-3999    | 1    | Spacer-Driver                    |
| 6    | 95-1726     | 3    | Screw-Taptite                    |
| 7    | 105-3030-03 | 1    | Guide-Belt                       |
| 8    | 112-8829    | 1    | Cover-Belt                       |
| 9    | 46-8091     | 3    | Screw-HWH                        |
| 10   | 32144-1     | 3    | Screw-Taptite                    |
| 11   | 104-7577-03 | 1    | Shield-Muffler                   |
| 12   |             | 1    | Engine-Briggs, 124L05-0128-F1 ●■ |
| 13   | 2210-316    | 1    | Stop-Rope                        |
| 14   | 112-8844    | 1    | Decal                            |
| 15   | 117-2718    | 1    | Decal-Arrester, Spark            |


● Not serviced separately

 ■ Obtain parts from [www.briggsandstratton.com](http://www.briggsandstratton.com)

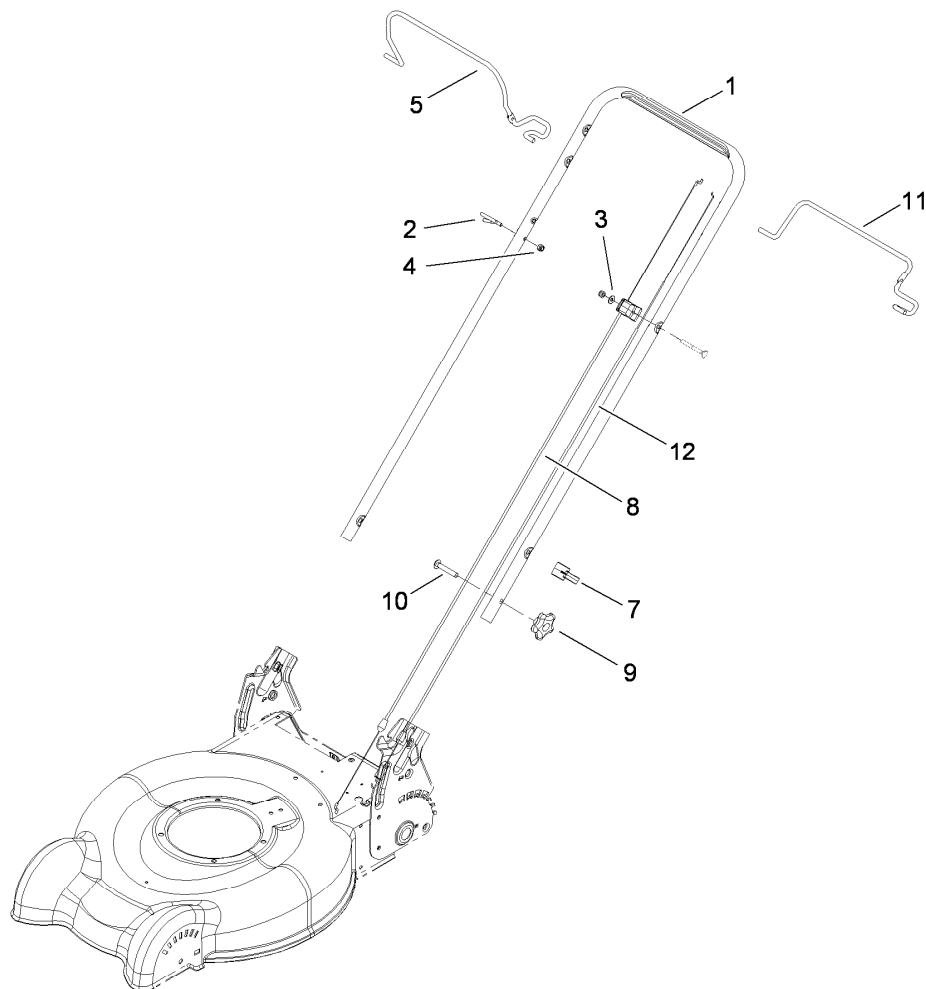


## Handle Assembly
 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         |
|-------------|--------------------|-------------|----------------------------|
| 1           | 112-8833-05        | 1           | Handle                     |
| 2           | 86-9671            | 1           | Guide-Rope                 |
| 3           | 3256-1             | 1           | Washer-Flat                |
| 4           | 3296-73            | 2           | Nut-Lock, NI               |
| 5           | 112-8834-02        | 1           | Bail-Brake, 2-Bail Flat    |
| 7           | 106-6805           | 1           | Guide-Cable                |
| 8           | 112-8818           | 1           | Cable-Brake                |
| 9           | 108-8162           | 2           | Knob-Locking               |
| 10          | 3230-6             | 2           | Screw-CARR                 |
| 11          | 112-8835-02        | 1           | Bail-Traction, 2-Bail Flat |
| 12          | 112-8817           | 1           | Cable-Traction             |

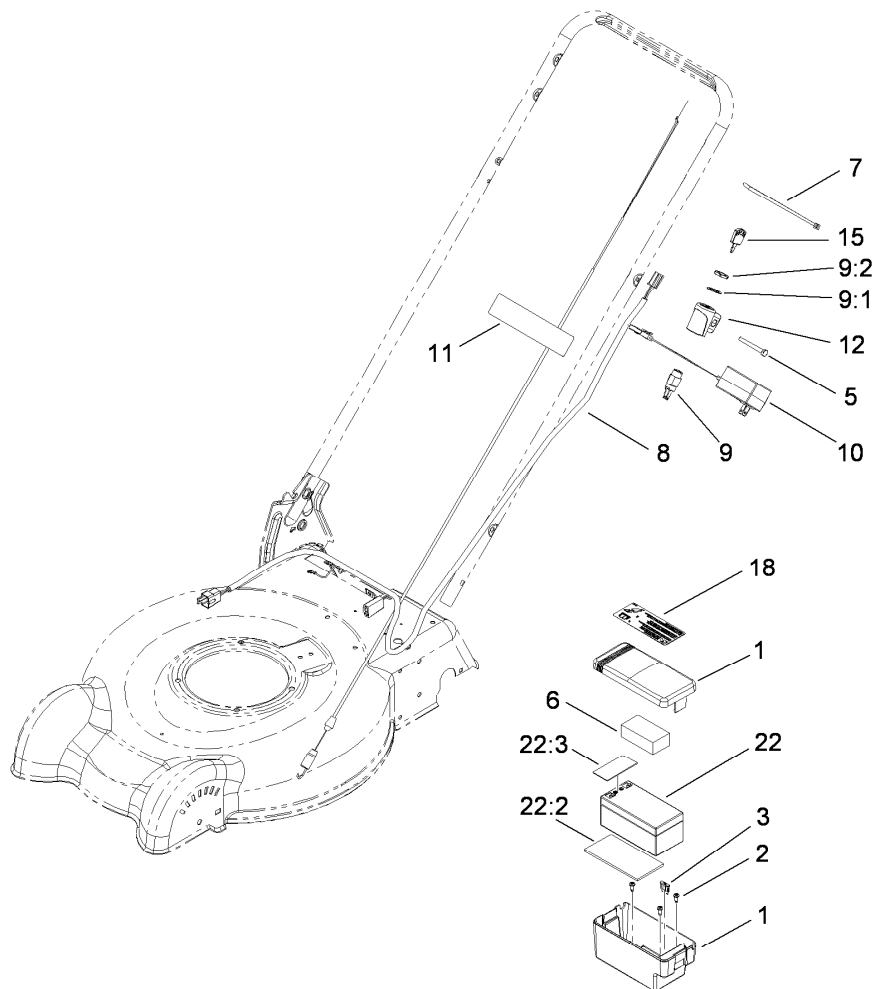

## Electrical Assembly

 
| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 1    | 108-4844    | 1    | Battery Box ASM          |
| 2    | 105-6849    | 3    | Screw-Thread Forming     |
| 3    | 99-6124     | 1    | Fuse-40 Amp              |
| 5    | 321-57      | 1    | Screw-HH                 |
| 6    | 107-3774    | 1    | Foam-Battery, Top        |
| 7    | 614249      | 1    | Strap-Tie                |
| 8    | 106-8378    | 1    | Harness-Wire             |
| 9    | 46-5780     | 1    | Starter Switch ASM       |
| 9:1  | 3254-5      | 1    | Washer-Tooth             |
| 9:2  | 218-461     | 1    | Nut-HH                   |
| 10   | 114-1588    | 1    | Charger-Battery, Fujikon |
| 11   | 104-7953    | 1    | Decal-Harness            |
| 12   | 108-9760    | 1    | Mount-Switch             |
| 15   | 700918      | 1    | Key                      |
| 18   | 108-4791    | 1    | Decal-Instructional      |
| 22   | 108-9358    | 1    | Battery                  |
| 22:2 | 108-0987    | 1    | Foam-Battery             |
| 22:3 | 112-8763    | 1    | Decal-Terminal, Battery  |

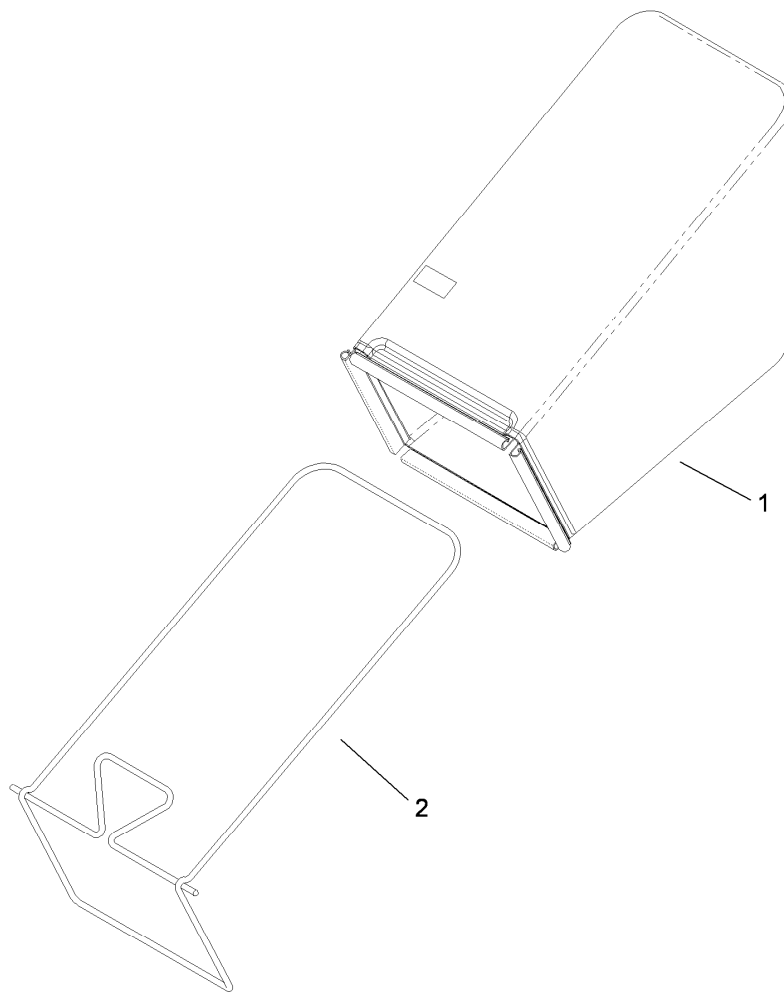

## Rear Bag Assembly
 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 112-8836           | 1           | Grass Bag ASM      |
| 2           | 112-8825-03        | 1           | Frame-Bag          |



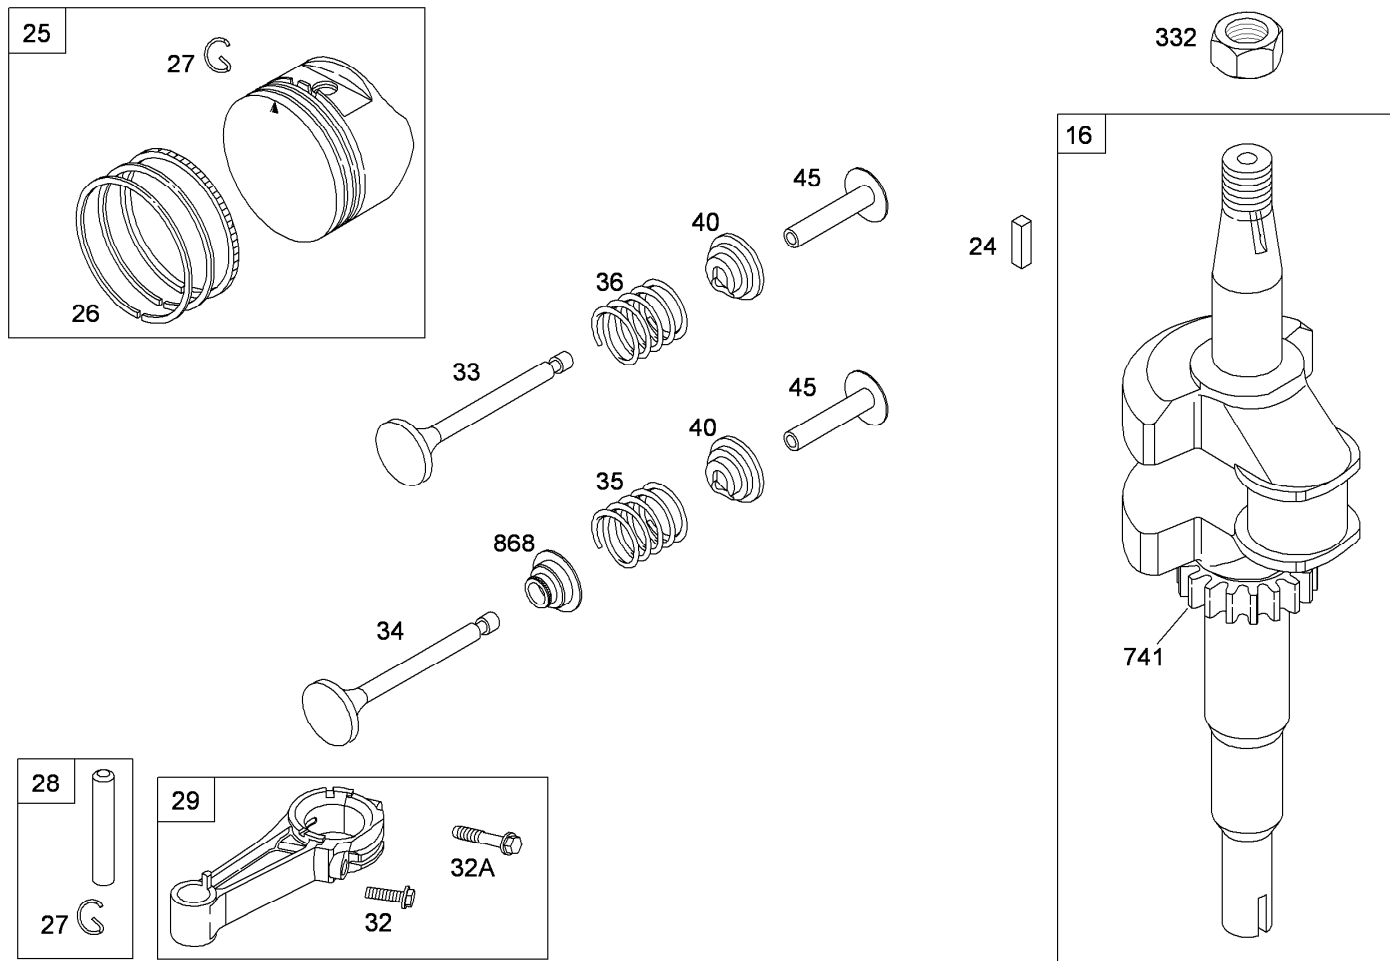


Assemblies include all parts shown in frames

## Crankshaft, Piston, Ring and Connecting Rod Assembly Briggs and Stratton 124L05-0128-F1
 
| Ref. | Part Number | Qty. | Description                      |
|------|-------------|------|----------------------------------|
| 16   | 696009      | 1    | Crankshaft ●                     |
| 24   | 222698s     | 1    | Key-Flywheel ●                   |
| 25   | 795429      | 1    | Piston Asm (Standard) ●          |
| 25   | 795430      | 1    | Piston Asm (.020 Oversize) ●     |
| 26   | 795431      | 1    | Ring Set (Standard) ●            |
| 26   | 795432      | 1    | Ring Set (.020 Oversize) ●       |
| 27   | 691866      | 1    | Lock-Pin, Piston ●               |
| 28   | 499423      | 1    | Pin-Piston ●                     |
| 29   | 499424      | 1    | Rod-Connecting ●                 |
| 32   | 691664      | 1    | Screw (Connecting Rod) (Short) ● |

| Ref. | Part Number | Qty. | Description                      |
|------|-------------|------|----------------------------------|
| 32A  | 695759      | 1    | Screw (Connecting Rod ) (Long) ● |
| 33   | 262651s     | 1    | Valve-Exhaust ●                  |
| 34   | 262652s     | 1    | Valve-Intake ●                   |
| 35   | 691270      | 1    | Spring-Valve (Intake) ●          |
| 36   | 691270      | 1    | Spring-Valve (Exhaust) ●         |
| 40   | 692194      | 1    | Retainer-Valve ●                 |
| 45   | 690548      | 1    | Tappet-Valve ●                   |
| 332  | 690662      | 1    | Nut (Flywheel) ●                 |
| 741  | 795755      | 1    | Gear-Timing ●                    |
| 868  | 697338      | 1    | Seal-Valve ●                     |

● Obtain parts from [www.briggsandstratton.com](http://www.briggsandstratton.com)

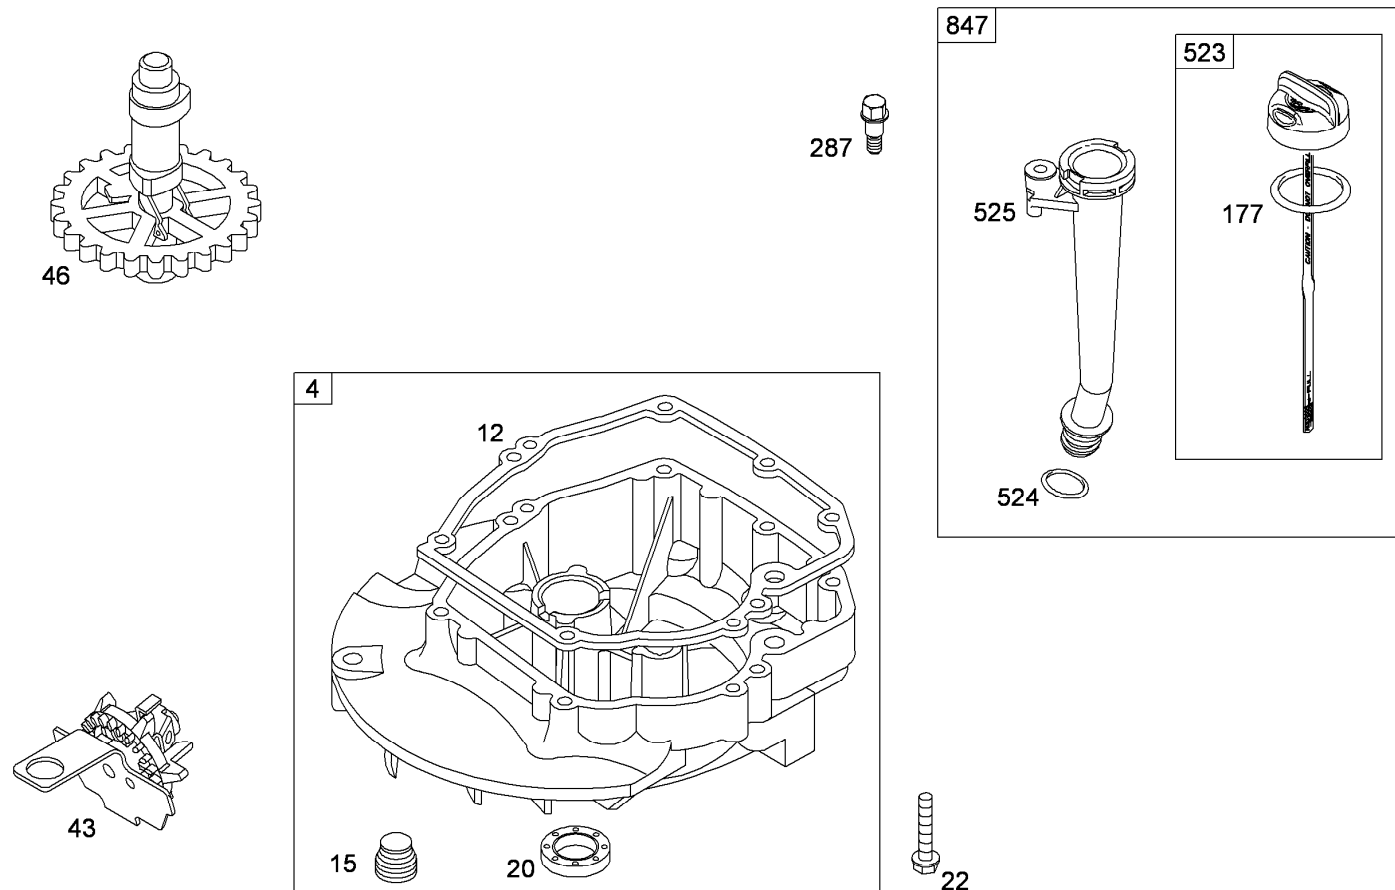


Assemblies include all parts shown in frames

## Crankcase Cover and Sump Assembly Briggs and Stratton 124L05-0128-F1
 
| Ref. | Part Number | Qty. | Description                       |
|------|-------------|------|-----------------------------------|
| 4    | 493279      | 1    | Sump-Engine ●                     |
| 12   | 692232      | 1    | Gasket-Crankcase (.015 STD) ●■    |
| 15   | 691680      | 1    | Plug-Drain, Oil ●                 |
| 20   | 399781s     | 1    | Seal-Oil (PTO Side) ●■            |
| 22   | 691092      | 1    | Screw (Crankcase Cover To Sump) ● |
| 43   | 691997      | 1    | Slinger-Oil, Governor ●           |
| 46   | 691449      | 1    | Camshaft ●                        |
| 177  | 691031      | 1    | Seal-O Ring (Dipstick) ●■         |
| 287  | 690940      | 1    | Screw (Dipstick Tube) ●           |
| 523  | 499621      | 1    | Dipstick ●                        |
| 524  | 692296      | 1    | Seal-O Ring (Dipstick Tube) ●■    |
| 525  | 495265      | 1    | Tube-Dipstick ●                   |
| 847  | 692047      | 1    | Dipstick Tube ASM ●               |

● Obtain parts from [www.briggsandstratton.com](http://www.briggsandstratton.com)

■ Included in Engine Gasket Set (Ref. No. 358)

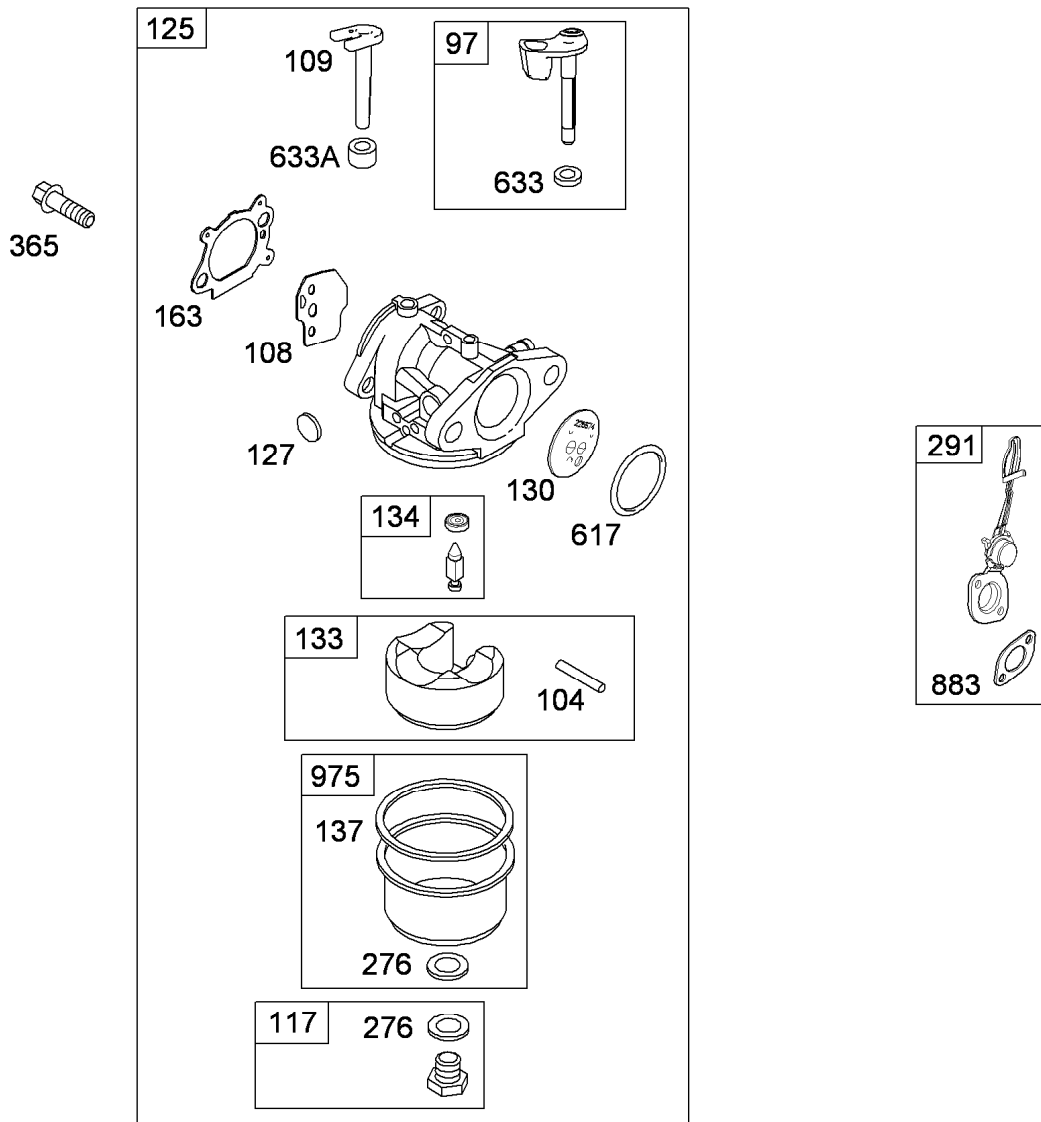


Assemblies include all parts shown in frames

## Carburetor and Fuel Tank Assembly Briggs and Stratton 124L05-0128-F1
 
| Ref. | Part Number | Qty. | Description                                            | Ref. | Part Number | Qty. | Description                                    |
|------|-------------|------|--------------------------------------------------------|------|-------------|------|------------------------------------------------|
| 97   | 696565      | 1    | Shaft-Throttle ●                                       | 163  | 795629      | 1    | Gasket-Cleaner, Air ●◆■                        |
| 104  | 691242      | 1    | Pin-Hinge, Float ●◆                                    | 276  | 271716      | 1    | Washer-Sealing ●◆                              |
| 108  | 795935      | 1    | Valve-Choke ●                                          | 291  | 790830      | 1    | Thermostat ●                                   |
| 109  | 795936      | 1    | Shaft-Choke ●                                          | 365  | 691688      | 1    | Screw (Carburetor) ●                           |
| 117  | 695042      | 1    | Jet-Main (STD) ●                                       | 617  | 270344s     | 1    | Seal-O Ring (Intake Manifold) ●◆■              |
| 125  | 794304      | 1    | Carburetor ●                                           | 633  | 691321      | 1    | Seal-Shaft, Choke Throttle (Throttle Shaft) ●◆ |
| 127  | 694468      | 1    | Plug-Welch ●◆                                          | 633A | 693867      | 1    | Seal-Shaft, Choke Throttle (Choke Shaft) ●     |
| 130  | 696564      | 1    | Valve-Throttle ●                                       | 883  | 691881      | 1    | Gasket-Exhaust ●■▲                             |
| 133  | 398187      | 1    | Float-Carburetor ●                                     | 975  | 493640      | 1    | Bowl-Float ●                                   |
| 134  | 398188      | 1    | Needle And Seat Kit ●◆                                 |      |             |      |                                                |
| 137  | 796610      | 1    | Gasket-Bowl, Float (Used After Date Code 08120100) ●◆  |      |             |      |                                                |
| 137  | 693981      | 1    | Gasket-Bowl, Float (Used Before Date Code 08120200) ●◆ |      |             |      |                                                |

● Obtain parts from [www.briggsandstratton.com](http://www.briggsandstratton.com)  
▲ Included in Valve Gasket Set (Ref. No. 1095)

■ Included in Engine Gasket Set (Ref. No. 358)  
◆ Included in Carburetor Overhaul Kit (Ref. No. 121)

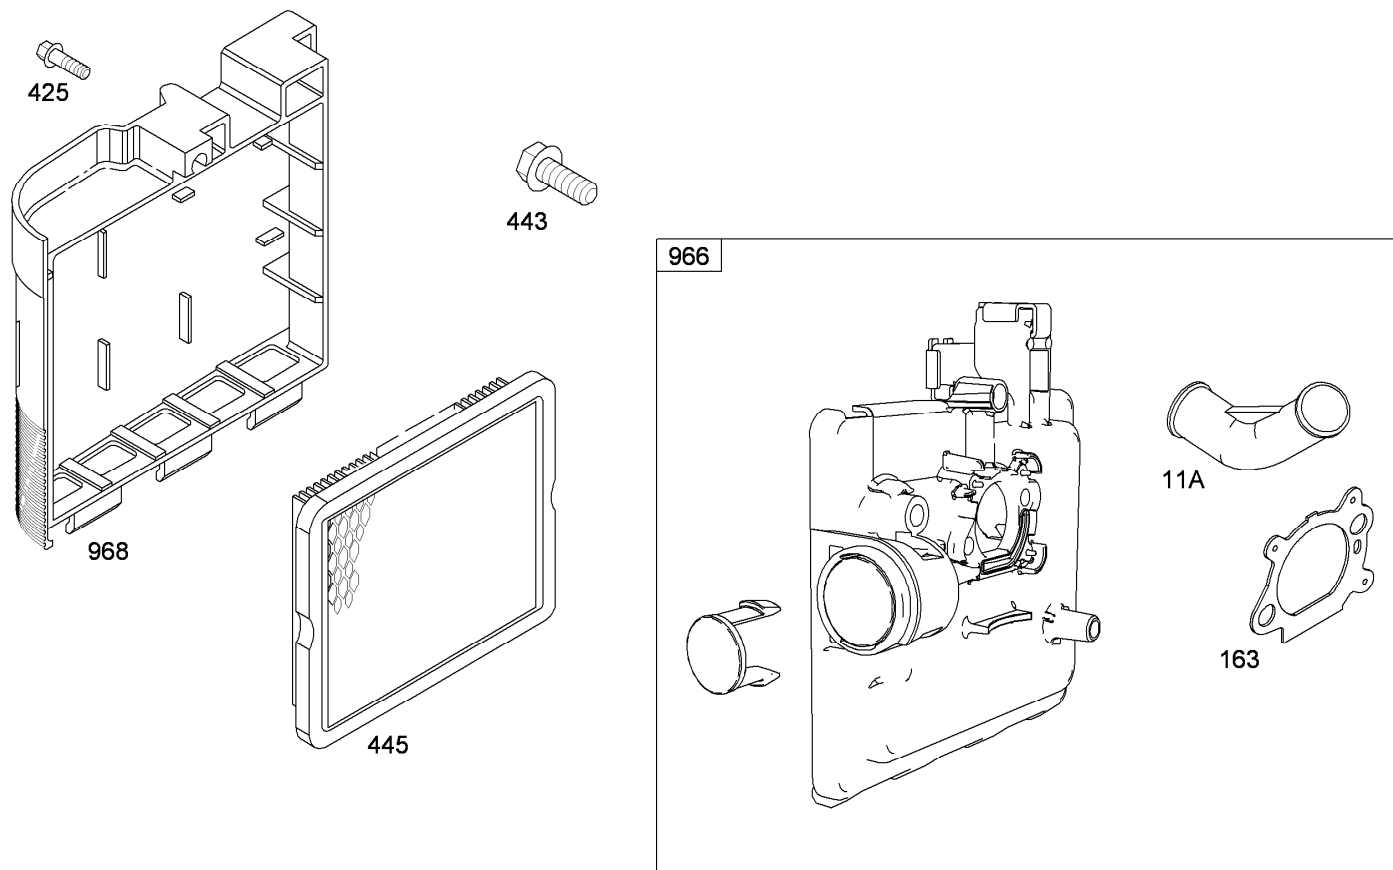


Assemblies include all parts shown in frames

## Air Cleaner Assembly Briggs and Stratton 124L05-0128-F1
 
| Ref. | Part Number | Qty. | Description                               |
|------|-------------|------|-------------------------------------------|
| 11A  | 691923      | 1    | Tube-Breather (Air Cleaner Primer Base) ● |
| 163  | 795629      | 1    | Gasket-Cleaner, Air ● ▲ ■                 |
| 425  | 690670      | 1    | Screw (Air Cleaner Cover) ●               |
| 443  | 692523      | 1    | Screw (Air Cleaner Primer Base) ●         |
| 445  | 491588s     | 1    | Filter-Cartridge, Air Cleaner ●           |
| 966  | 795259      | 1    | Base-Primer, Air Cleaner ●                |
| 968  | 692298      | 1    | Cover-Cleaner, Air ●                      |

● Obtain parts from [www.briggsandstratton.com](http://www.briggsandstratton.com)  
▲ Included in Carburetor Overhaul Kit (Ref. No. 121)

■ Included in Engine Gasket Set (Ref. No. 358)

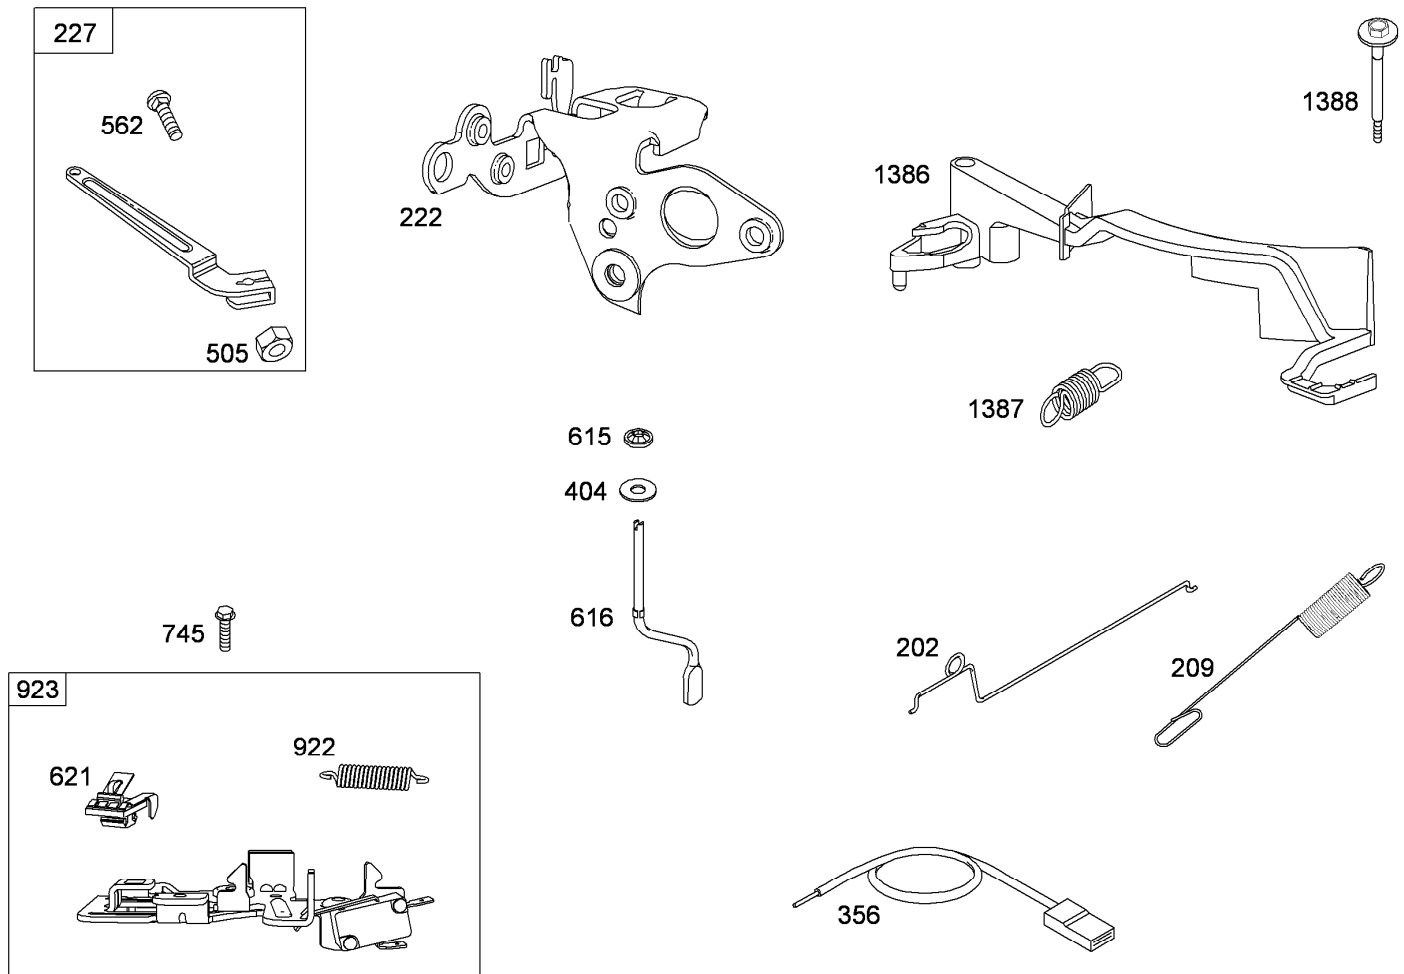






Assemblies include all parts shown in frames

## **Governor, Controls and Brake Assembly** **Briggs and Stratton 124L05-0128-F1**
     
| Ref. | Part Number | Qty. | Description                    |
|------|-------------|------|--------------------------------|
| 202  | 691829      | 1    | Link-Governor, Mechanical      |
| 209  | 699056      | 1    | Spring-Governor (No Color)     |
| 222  | 795937      | 1    | Bracket-Control                |
| 227  | 690783      | 1    | Lever-Control, Governor        |
| 356  | 692390      | 1    | Wire-Stop                      |
| 404  | 690272      | 1    | Washer (Governor Crank)        |
| 505  | 691251      | 1    | Nut (Governor Control Lever)   |
| 562  | 691119      | 1    | Screw (Governor Control Lever) |

| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 615  | 690340      | 1    | Retainer-Shaft, Governor |
| 616  | 698801      | 1    | Crank-Governor           |
| 621  | 692310      | 1    | Switch-Stop              |
| 745  | 691648      | 1    | Screw (Brake)            |
| 922  | 692135      | 1    | Spring-Brake             |
| 923  | 796387      | 1    | Brake                    |
| 1386 | 790848      | 1    | Vane-Air                 |
| 1387 | 790849      | 1    | Spring-Vane, Air         |
| 1388 | 790850      | 1    | Screw                    |

● Obtain parts from [www.briggsandstratton.com](http://www.briggsandstratton.com)

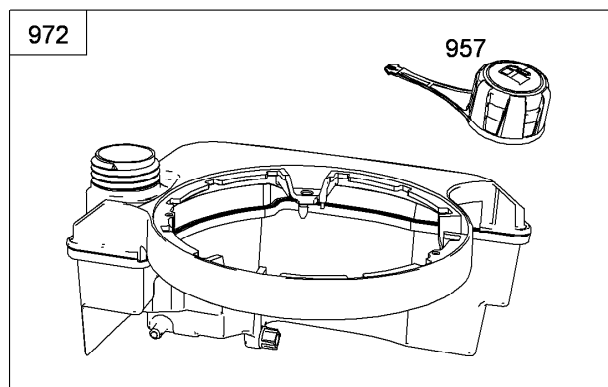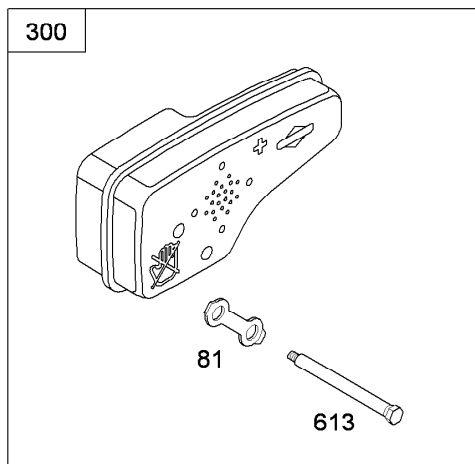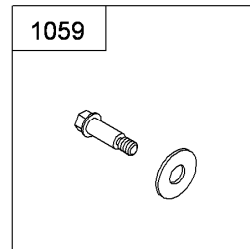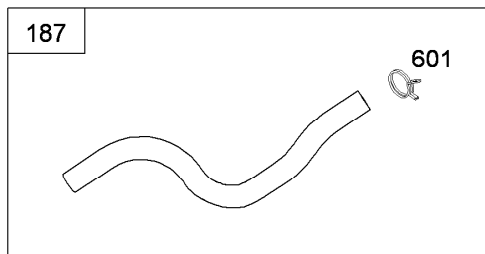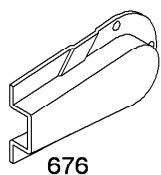


Assemblies include all parts shown in frames

## Muffler and Fuel Tank Assembly Briggs and Stratton 124L05-0128-F1
 
| Ref. | Part Number | Qty. | Description                 |
|------|-------------|------|-----------------------------|
| 81   | 691740      | 1    | Lock-Screw, Muffler ●       |
| 187  | 791873      | 1    | Line-Fuel (Molded) ●        |
| 190  | 690940      | 1    | Screw (Fuel Tank) ●         |
| 300  | 790828      | 1    | Muffler ●                   |
| 601  | 791850      | 1    | Clamp-Hose ●                |
| 613  | 790833      | 1    | Screw (Muffler) ●           |
| 676  | 493871      | 1    | Deflector-Muffler ●         |
| 677  | 690661      | 1    | Screw (Muffler Deflector) ● |
| 883  | 691881      | 1    | Gasket-Exhaust ● ■ ▲        |
| 957  | 796577      | 1    | Cap-Tank, Fuel ●            |
| 972  | 796578      | 1    | Tank-Fuel ●                 |
| 1059 | 692311      | 1    | Screw And Washer Kit ●      |

● Obtain parts from [www.briggsandstratton.com](http://www.briggsandstratton.com)  
 ▲ Included in Valve Gasket Set (Ref. No. 1095)

■ Included in Engine Gasket Set (Ref. No. 358)

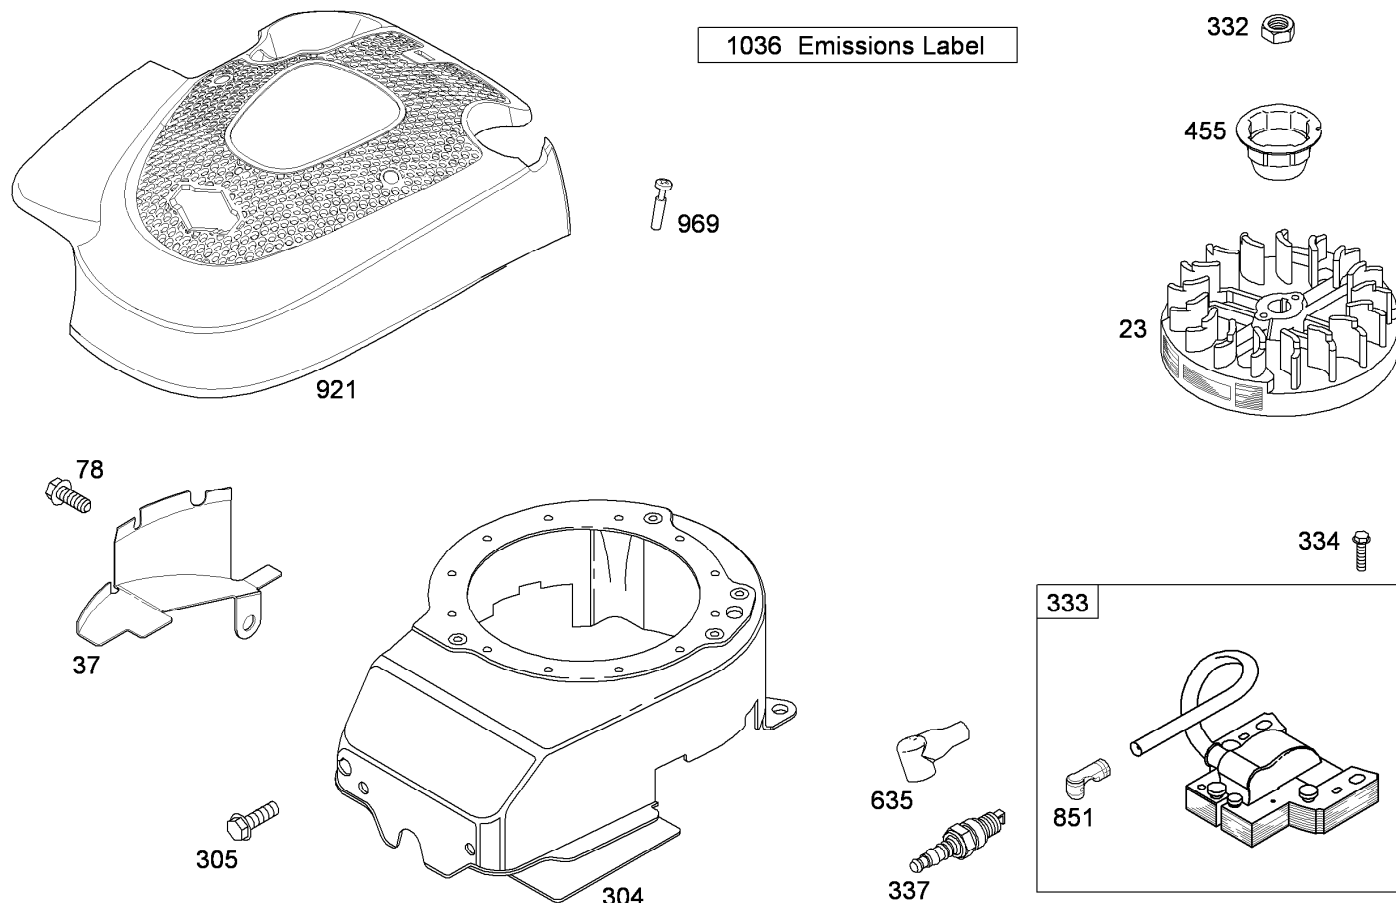


Assemblies include all parts shown in frames

## Blower Housing, Flywheel and Ignition Assembly Briggs and Stratton 124L05-0128-F1
 
| Ref. | Part Number | Qty. | Description                    |
|------|-------------|------|--------------------------------|
| 23   | 691987      | 1    | Flywheel ■                     |
| 37   | 793756      | 1    | Guard-Flywheel ■               |
| 78   | 691108      | 1    | Screw (Flywheel Guard) ■       |
| 304  | 790826      | 1    | Housing-Blower ■               |
| 305  | 691108      | 1    | Screw (Blower Housing) ■       |
| 332  | 690662      | 1    | Nut (Flywheel) ■               |
| 333  | 802574      | 1    | Armature-Magneto ■             |
| 334  | 691061      | 1    | Screw (Magneto Armature) ■     |
| 337  | 802592s     | 1    | Spark Plug ■                   |
| 455  | 791960      | 1    | Cup-Flywheel ■                 |
| 635  | 66538s      | 1    | Boot-Spark Plug ■              |
| 851  | 483880s     | 1    | Terminal-Spark Plug ■          |
| 921  | 792652      | 1    | Cover-Housing, Blower ■        |
| 969  | 691138      | 1    | Screw (Blower Housing Cover) ■ |
| 1036 |             | 1    | Label-Emissions ■●             |

● Not serviced separately

■ Obtain parts from [www.briggsandstratton.com](http://www.briggsandstratton.com)

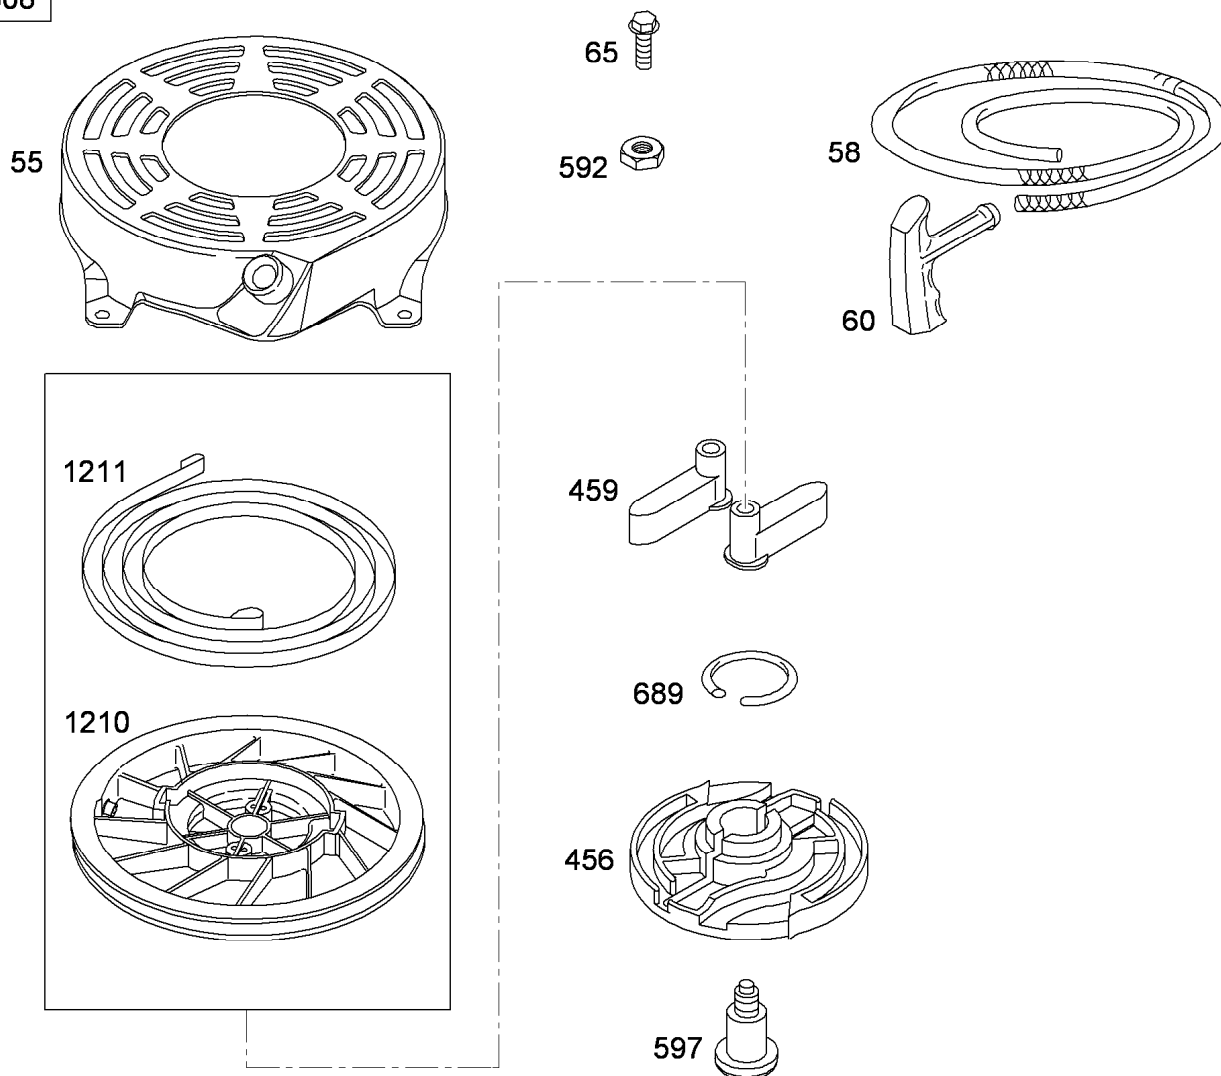


Assemblies include all parts shown in frames

## Rewind Starter Assembly Briggs and Stratton 124L05-0128-F1
 
| Ref. | Part Number | Qty. | Description                             |
|------|-------------|------|-----------------------------------------|
| 55   | 691421      | 1    | Housing-Starter, Rewind ●               |
| 58   | 697316      | 1    | Rope-Starter (Cut To Required Length) ● |
| 60   | 281434s     | 1    | Grip-Rope, Starter ●                    |
| 65   | 690837      | 1    | Screw (Rewind Starter) ●                |
| 456  | 692299      | 1    | Plate-Friction, Pawl ●                  |
| 459  | 281505s     | 1    | Ratchet-Pawl ●                          |
| 592  | 690800      | 1    | Nut (Rewind Starter) ●                  |
| 597  | 691696      | 1    | Screw (Pawl Friction Plate) ●           |
| 608  | 497680      | 1    | Starter-Rewind ●                        |
| 689  | 691855      | 1    | Spring-Friction ●                       |
| 1210 | 498144      | 1    | Pulley And Spring ASM (Pulley) ●        |
| 1211 | 498144      | 1    | Pulley And Spring ASM (Spring) ●        |

● Obtain parts from [www.briggsandstratton.com](http://www.briggsandstratton.com)



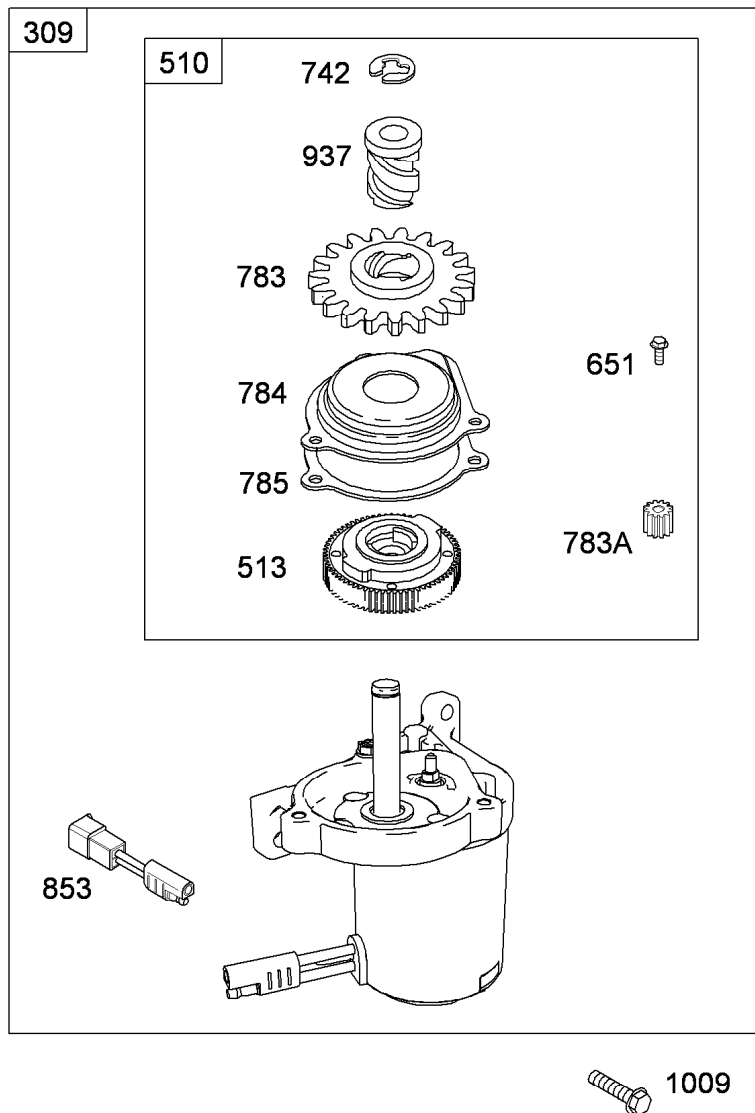


Assemblies include all parts shown in frames

## Electric Starter Assembly Briggs and Stratton 124L05-0128-F1
   
| Ref. | Part Number | Qty. | Description                  |
|------|-------------|------|------------------------------|
| 309  | 795092      | 1    | Motor-Starter ●              |
| 510  | 795093      | 1    | Drive-Starter ●              |
| 513  | 795100      | 1    | Clutch-Drive ●               |
| 651  | 690345      | 1    | Screw (Starter Gear Cover) ● |
| 742  | 795094      | 1    | Retainer-E Ring ●            |
| 783  | 795096      | 1    | Gear-Pinion (Small) ●        |
| 783A | 795099      | 1    | Gear-Pinion (Large) ●        |
| 784  | 795095      | 1    | Cover-Gear, Starter ●        |
| 785  | 795097      | 1    | Gasket-Cover, Starter ●      |
| 853  | 695268      | 1    | Adapter-Wire ●               |
| 937  | 795098      | 1    | Spline-Starter ●             |
| 1009 | 691127      | 1    | Screw (Starter Motor) ●      |

● Obtain parts from [www.briggsandstratton.com](http://www.briggsandstratton.com)

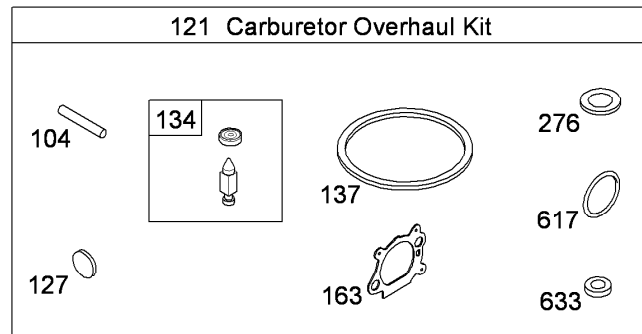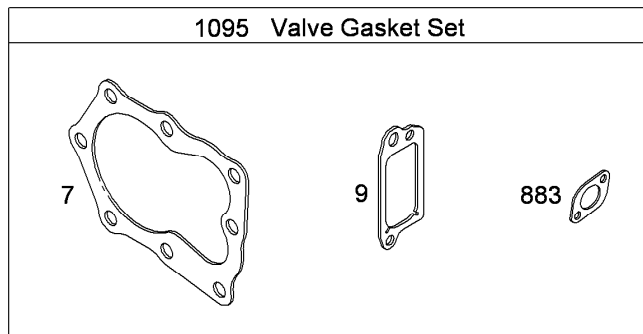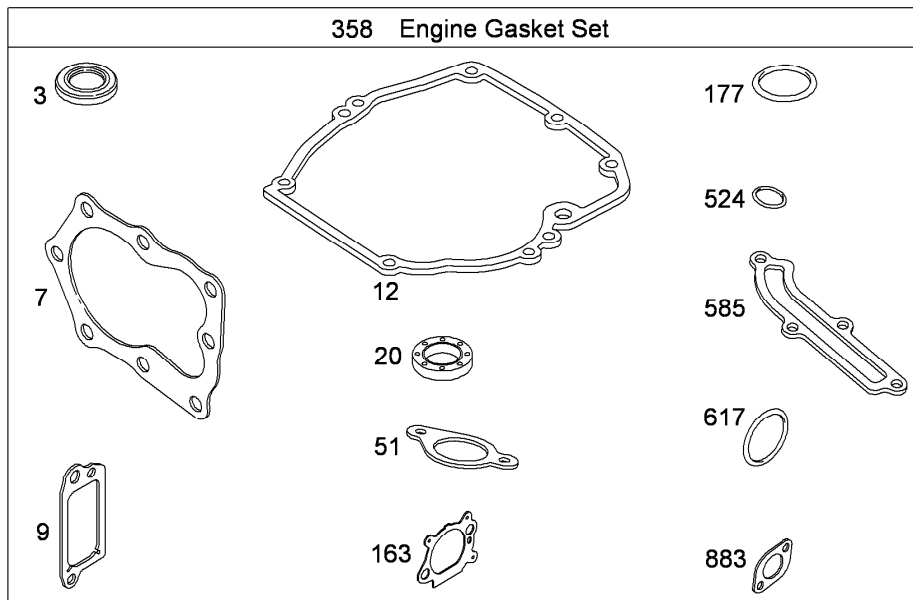

Assemblies include all parts shown in frames

## Engine and Valve Gaskets and Carburetor Overhaul Kit Briggs and Stratton 124L05-0128-F1

| Ref. | Part Number | Qty. | Description                                            |
|------|-------------|------|--------------------------------------------------------|
| 3    | 299819s     | 1    | Seal-Oil (Magneto Side) ●■                             |
| 7    | 692249      | 1    | Gasket-Head, Cylinder ●■▲                              |
| 9    | 699472      | 1    | Gasket-Breather ●■▲                                    |
| 12   | 692232      | 1    | Gasket-Crankcase ●■                                    |
| 20   | 399781s     | 1    | Seal-Oil (PTO Side) ●■                                 |
| 51   | 272199s     | 1    | Gasket-Intake ●■                                       |
| 104  | 691242      | 1    | Pin-Hinge, Float ●◆                                    |
| 121  | 498260      | 1    | Carburetor Overhaul Kit ●                              |
| 127  | 694468      | 1    | Plug-Welch ●◆                                          |
| 134  | 398188      | 1    | Needle And Seat Kit ●◆                                 |
| 137  | 796610      | 1    | Gasket-Bowl, Float (Used After Date Code 08120100) ●◆  |
| 137  | 693981      | 1    | Gasket-Bowl, Float (Used Before Date Code 08120200) ●◆ |

| Ref. | Part Number | Qty. | Description                                    |
|------|-------------|------|------------------------------------------------|
| 163  | 795629      | 1    | Gasket-Cleaner, Air ●◆■                        |
| 177  | 691031      | 1    | Seal-O Ring (Dipstick) ●■                      |
| 276  | 271716      | 1    | Washer-Sealing ●◆                              |
| 358  | 497316      | 1    | Engine Gasket Set ●                            |
| 524  | 692296      | 1    | Seal-O Ring (Dipstick Tube) ●■                 |
| 585  | 691879      | 1    | Gasket-Passage, Breather ●■                    |
| 617  | 270344s     | 1    | Seal-O Ring (Intake Manifold) ●◆■              |
| 633  | 691321      | 1    | Seal-Shaft, Choke Throttle (Throttle Shaft) ●◆ |
| 883  | 691881      | 1    | Gasket-Exhaust ●■▲                             |
| 1095 | 498528      | 1    | Valve Gasket Set ●                             |

● Obtain parts from [www.briggsandstratton.com](http://www.briggsandstratton.com)  
▲ Included in Valve Gasket Set (Ref. No. 1095)

■ Included in Engine Gasket Set (Ref. No. 358)  
◆ Included in Carburetor Overhaul Kit (Ref. No. 121)

# Attachments and Accessories

## For 10647 20in Mulching/Rear Bagging Lawn Mower

| Product Name                                                                   | Model/Part |
|--------------------------------------------------------------------------------|------------|
| Loose Parts Kit .....                                                          | 117-5930   |
| Replacement Bag, 2009 and After 20in Steel Deck Lawnmowers.....                | 89701      |
| Replacement Bag and Frame Kit, 2009 and After 20in Steel Deck Lawnmowers ..... | 89702      |
| 20in Replacement Blade.....                                                    | 89963      |

**Notes:**

