


TORO®

MODEL NO. 04052-50001 & UP

PARTS CATALOG

GREENSMASTER® 1000 Traction Unit & Cutting Unit

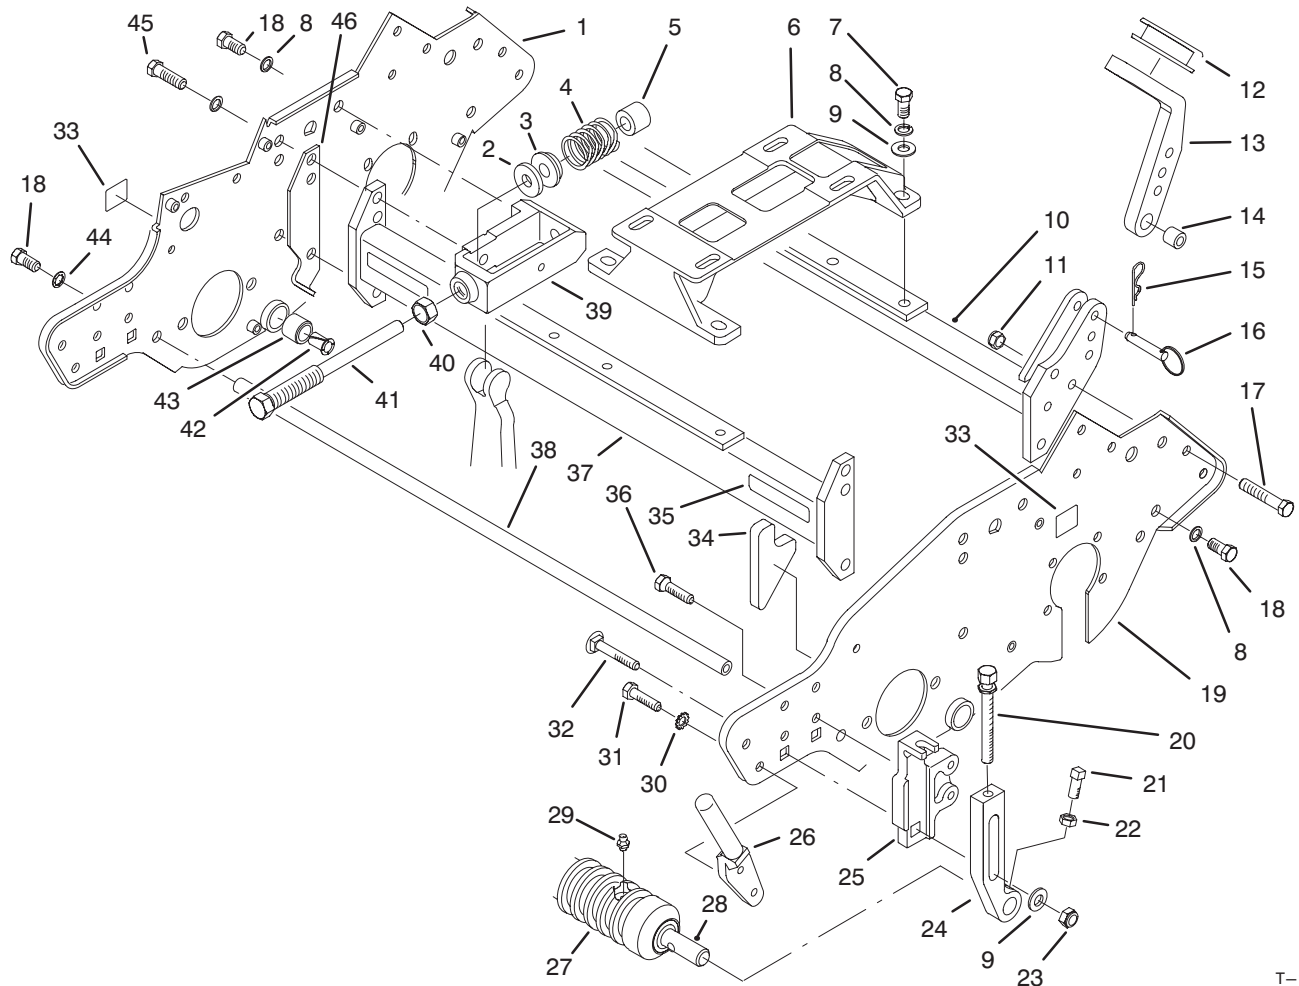

T-1995

FRAME ASSEMBLY


Ref. No.	Part No.	Description	No. Used
1	93-6093	Side Plate Assembly RH (Incl. Ref. #33)	1
2	65-8680	Washer - Thrust	2
3	65-6380	Collar - Thrust	2
4	65-6400	Spring - Compression	2
5	65-6360	Support - Spring	2
6	88-7670	Base - Engine	1
7	323-5	Screw - Cap Hex. Hd.	4
8	3253-21	Washer - Spring Lock	16
9	3256-24	Washer - Flat	6
10	93-6025	Rear Frame W.A.	1
11	3296-29	Nut - Lock	2
12	65-7510	Grommet - Handle	2
13	93-6038	Arm - Handle LH	1
*	93-6037	Arm - Handle RH	1
14	93-6024	Bushing - Handle Support	2

Ref. No.	Part No.	Description	No. Used
15	3290-467	Pin - Cotter, Hair	2
16	93-6029	Pin - Ring	2
17	322-9	Screw - Cap Hex. Hd.	2
18	323-4	Screw - Cap Hex. Hd.	12
19	93-6094	Side Plate Assembly LH (Incl. Ref. #33)	1
20	93-6051	Screw - Height of Cut	2
21	3242-4	Screw - Set	2
22	3218-2	Nut - Jam	2
23	3296-39	Nut - Lock	2
24	93-6090	Arm - Height of Cut	2
25	93-6049	Bracket - Height of Cut, LH	1
*	93-6048	Bracket - Height of Cut, RH	1
26	65-8570	Rod - Grass Catcher	2
27	88-6790	Wheeler Roller Assembly (Incl. Ref. #28 & 29)	1

*Not Illustrated

©The TORO Company - 1994, Rev. 1995
All Rights Reserved

TPS

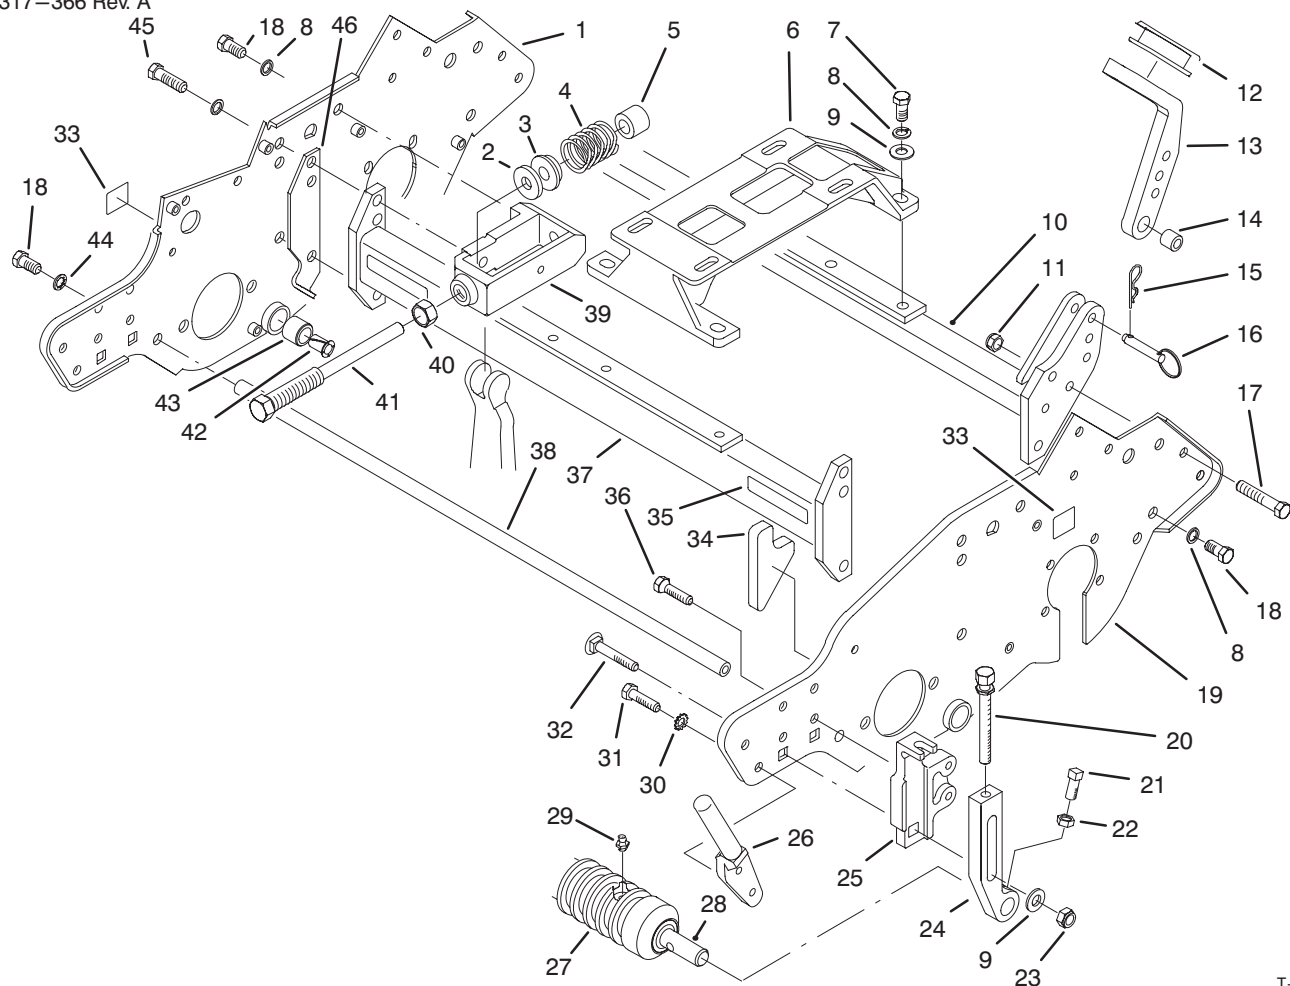


T-1995

FRAME ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
28	52-3180	Bearing	2	38	88-7110	Rod – Frame Support	1
29	302-5	Fitting – Grease	2	39	65-8670	Adjuster – Frame	2
30	3255-8	Washer – Lock	4	40	3220-6	Nut – Jam	2
31	322-2	Screw – Cap Hex. Hd.	4	41	65-8690	Screw – Adjusting	2
32	3231-5	Screw – Carriage	2	42	52-2890	Bushing	2
‡33	88-8950	Decal – Warning, Belt (English)	3	43	63-9510	Bushing Assembly	2
34	93-6064	Seal – Grass Catcher	1	44	3254-6	Washer – Int. Tooth Lock	2
‡35	55-4300	Decal – Warning (English)	2	45	323-18	Screw – Cap Hex. Hd.	2
36	92-8914	Bolt – Tapered Face	4	46	88-7100	Spacer – RH	1
37	93-6068	Front Frame Tube Assembly (Incl. Ref. #35)	1	*	88-7090	Spacer – LH	1

*Not Illustrated


‡For different language versions of this part, see International Parts Reference.

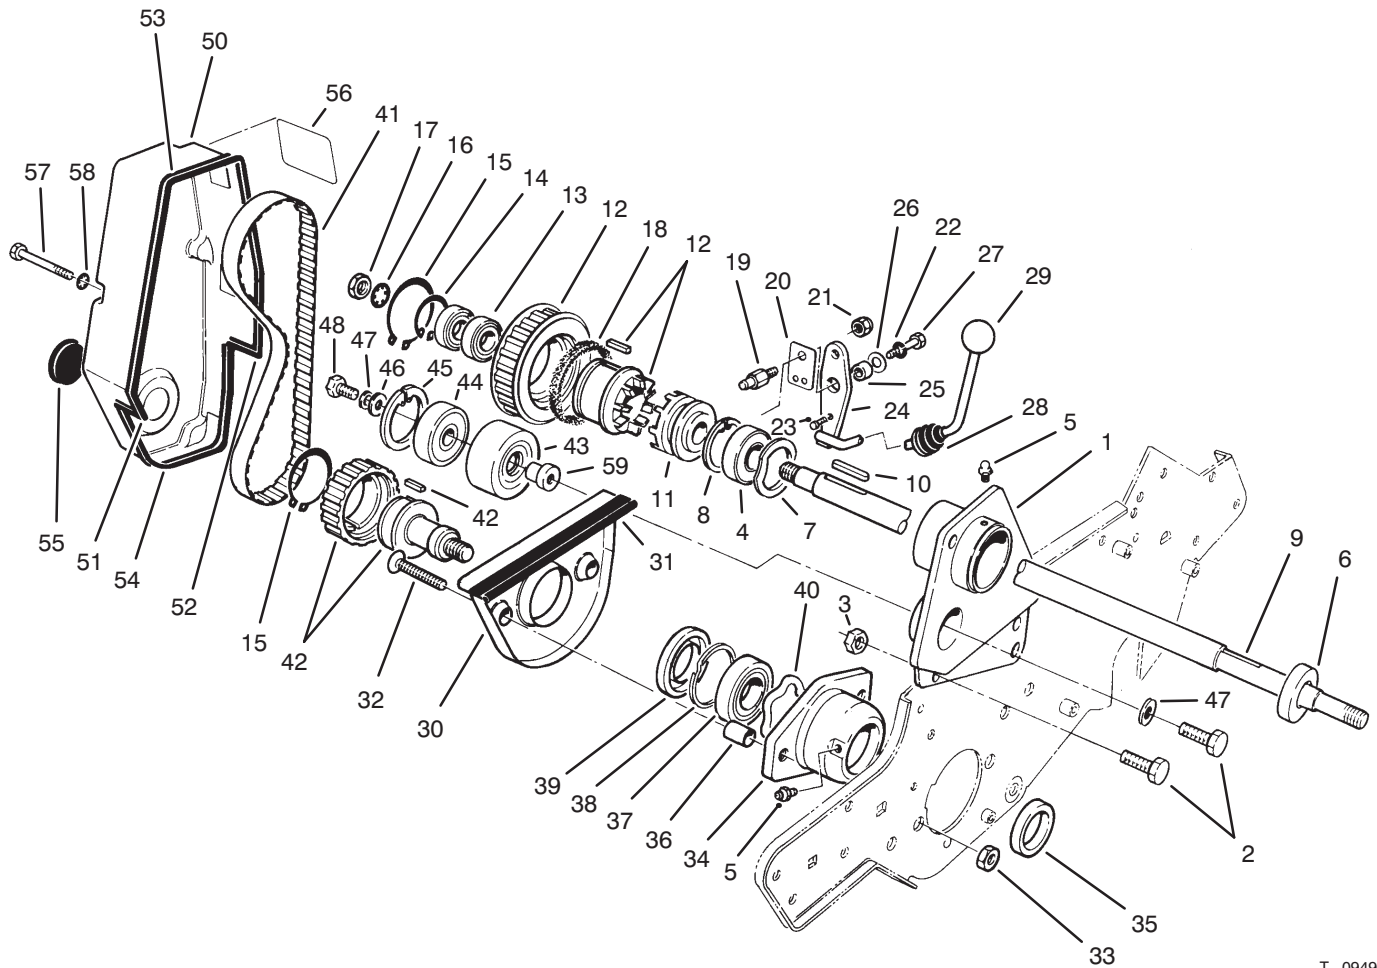

T-0949

REEL DRIVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-8013	Housing - Clutch	1	27	321-4	Screw - Cap Hex. Hd.	1
2	322-5	Screw - Cap Hex. Hd.	3	28	65-8960	Boot - Clutch	1
3	3296-29	Nut - Lock	2	29	233-69	Knob	1
4	251-318	Bearing - Ball	1	30	65-7190	Cover - Groomer Arm	1
5	302-5	Fitting - Grease	2	31	65-7131	Trim - Groomer Arm Cover	1
6	253-118	Seal - Oil	1	32	3289-23	Screw - Flat Hd.	2
7	88-7720	Washer - Wave	1	33	3296-39	Nut	2
8	32120-11	Ring - Retaining	1	34	65-8640	Housing - Bearing	1
9	93-6056	Shaft - Power	1	35	253-96	Seal	1
10	88-7150	Key - Square	2	36	65-8290	Standoff - Cover	2
11	65-6940	Clutch - Jaw Driver	1	37	251-342	Bearing - Self-Aligning	1
12	88-7830	Clutch & Pulley Assembly	1	38	32151-92	Ring - Retaining	1
13	251-336	Bearing - Ball	2	39	253-163	Seal	1
14	32151-89	Ring - Retaining	1	40	3290-485	Washer - Wave	1
15	32151-95	Ring - Retaining	2	41	65-6200	Belt - Reel Drive	1
16	3254-4	Washer - Lock I.T.L.W.	1	42	88-7840	Pulley & Drive Assembly	1
17	3220-5	Nut - Jam	1	43	88-7850	Idler Pulley Assembly (Incl. Ref. #44-48 & 59)	1
18	65-6970	Seal - Felt	1	44	38-7820	Bearing - Ball	1
19	93-9014	Pin - Actuator	1	45	32120-42	Ring - Snap	1
20	65-6290	Spring - Clutch Detent	1	46	88-7200	Washer - Flat	1
21	3296-42	Nut - Lock	1	47	3253-4	Washer - Lock	2
22	3253-3	Washer - Lock	1	48	322-3	Screw - Cap Hex. Hd.	1
23	3259-15	Screw - Drive	1	50	88-7700	Cover - Reel Drive	1
24	88-7170	Lever - Clutch	1	51	88-7770	Strip - Seal Front	1
25	88-7860	Spacer	1	52	88-7780	Strip - Seal Rear	1
26	3290-414	Washer	1				

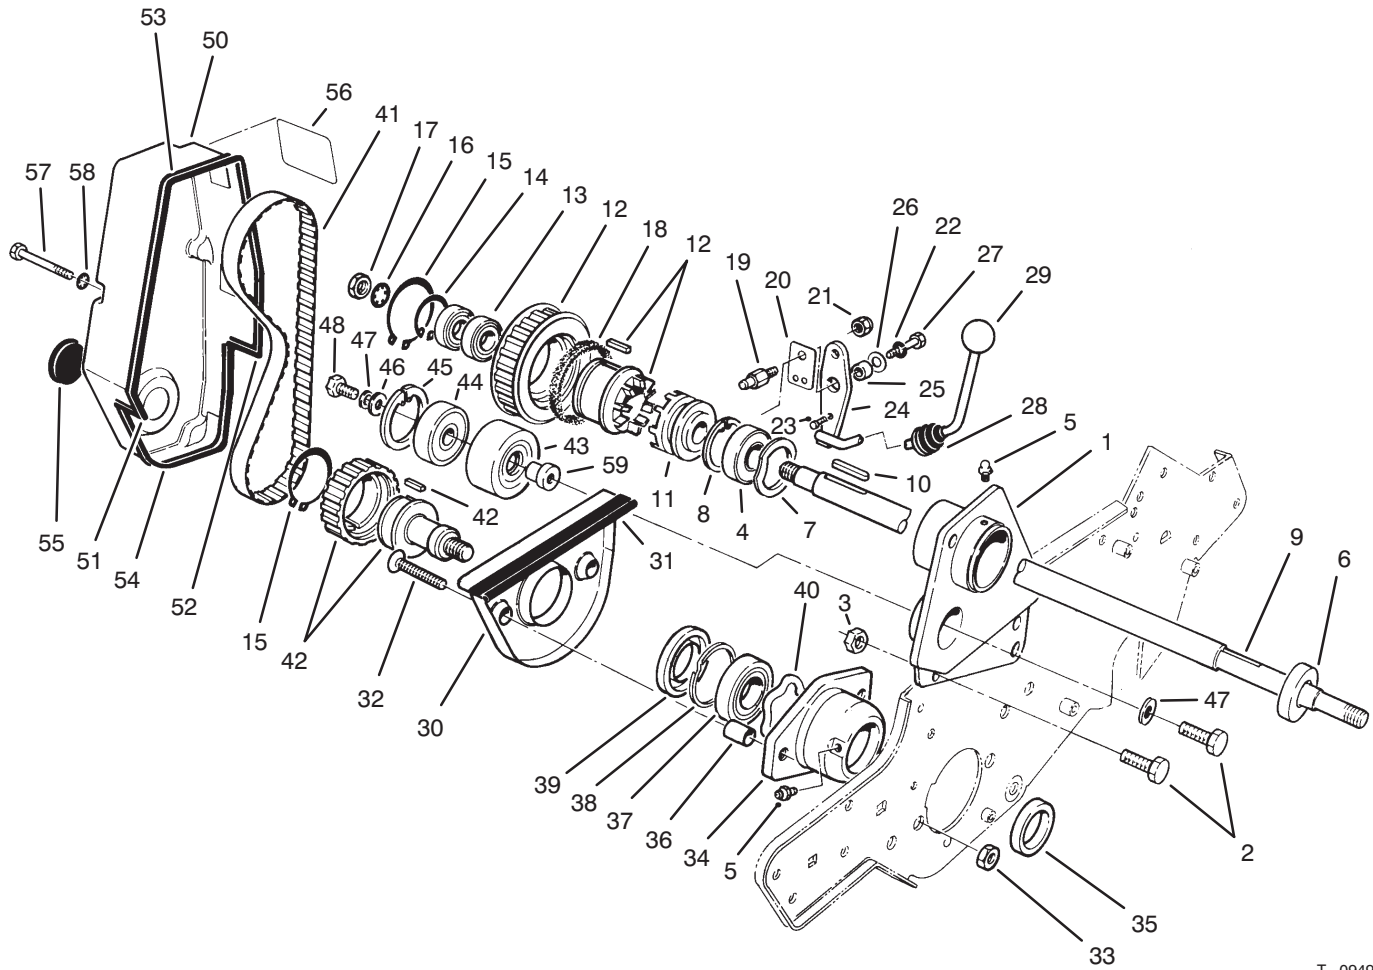


T-0949

REEL DRIVE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
53	88-7790	Strip - Seal Upper	1	57	321-20	Screw - Cap Hex. Hd.	4
54	88-7800	Strip - Seal Lower	1	58	3254-8	Washer - Lock I.T.L.W.	4
55	237-160	Plug	1	59	88-7190	Spacer - Pulley Support	1
‡56	65-7660	Decal - Reel Engagement (English)	1				

‡For different language versions of this part, see International Parts Reference.

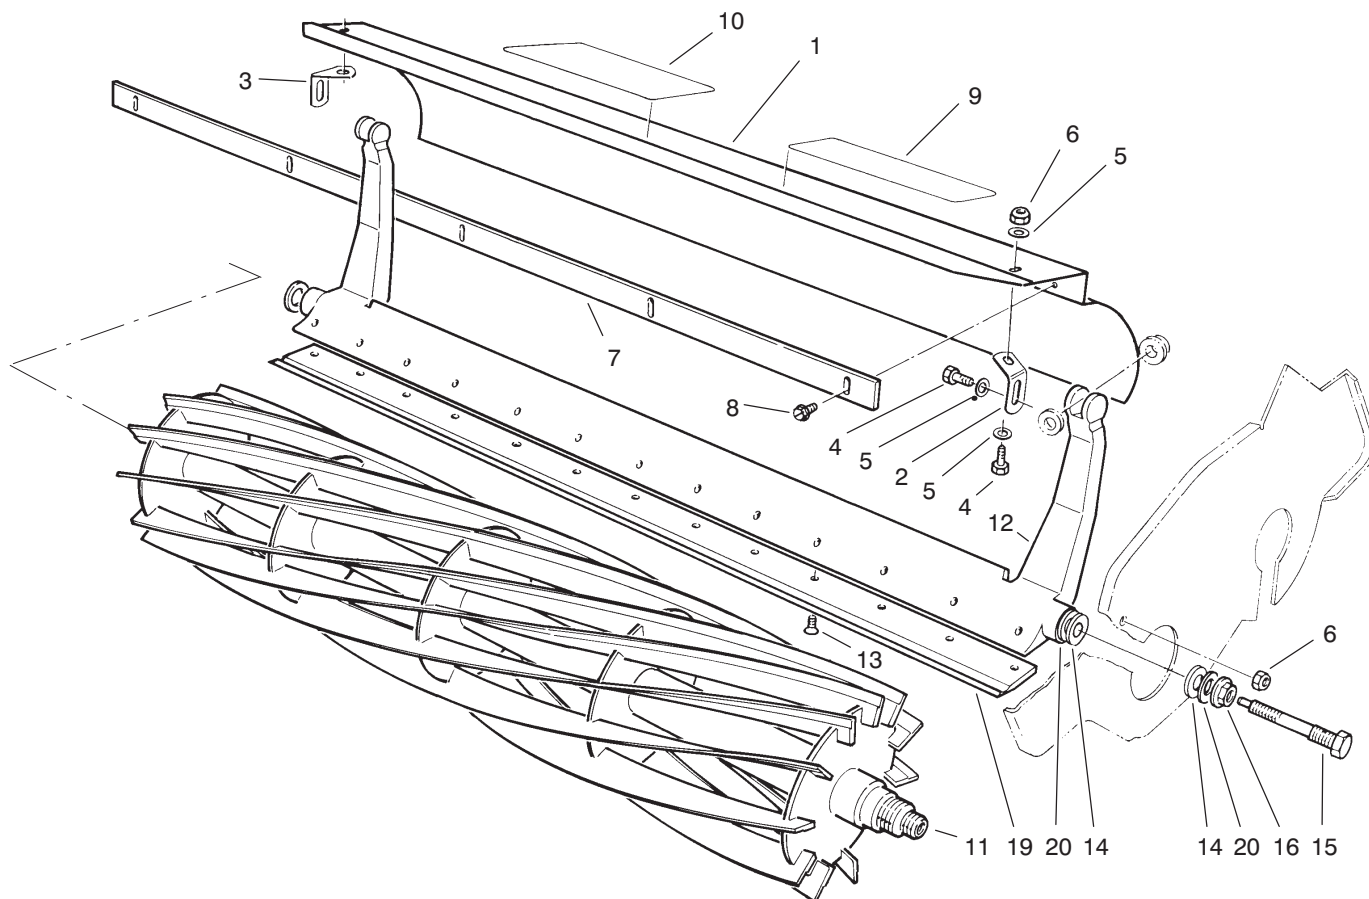


T-0947A

REEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-6069	Grass Shield Assembly (Incl. Ref. #9 & 10)	1	11	93-6097	Reel Assembly - 11 Blade	1
2	65-6450	Bracket - Shield LH	1	*	93-6087	Reel Assembly - 8 Blade	1
3	65-6460	Bracket - Shield RH	1	12	93-6053	Bedbar	1
4	321-3	Screw - Cap Hex. Hd.	4	13	57-4910	Screw - Special	13
5	3256-22	Washer - Flat	6	14	52-2900	Washer - Poly	4
6	3296-42	Nut - Lock	4	15	65-6270	Bolt - Bedbar	2
7	36-7260	Bar - Cutoff	1	16	32128-48	Nut - Flange	2
8	32144-73	Screw - Self Tapping	5	19	93-4264	Bedknife - 1/8	1
‡9	62-5070	Decal - Shield (English)	1	*	93-4263	Bedknife - Tournament	1
‡10	93-6098	Decal - Service (English)	1	*	93-4262	Bedknife - Micro	1
				20	52-2860	Washer	4

*Not Illustrated

‡For different language versions of this part, see International Parts Reference.

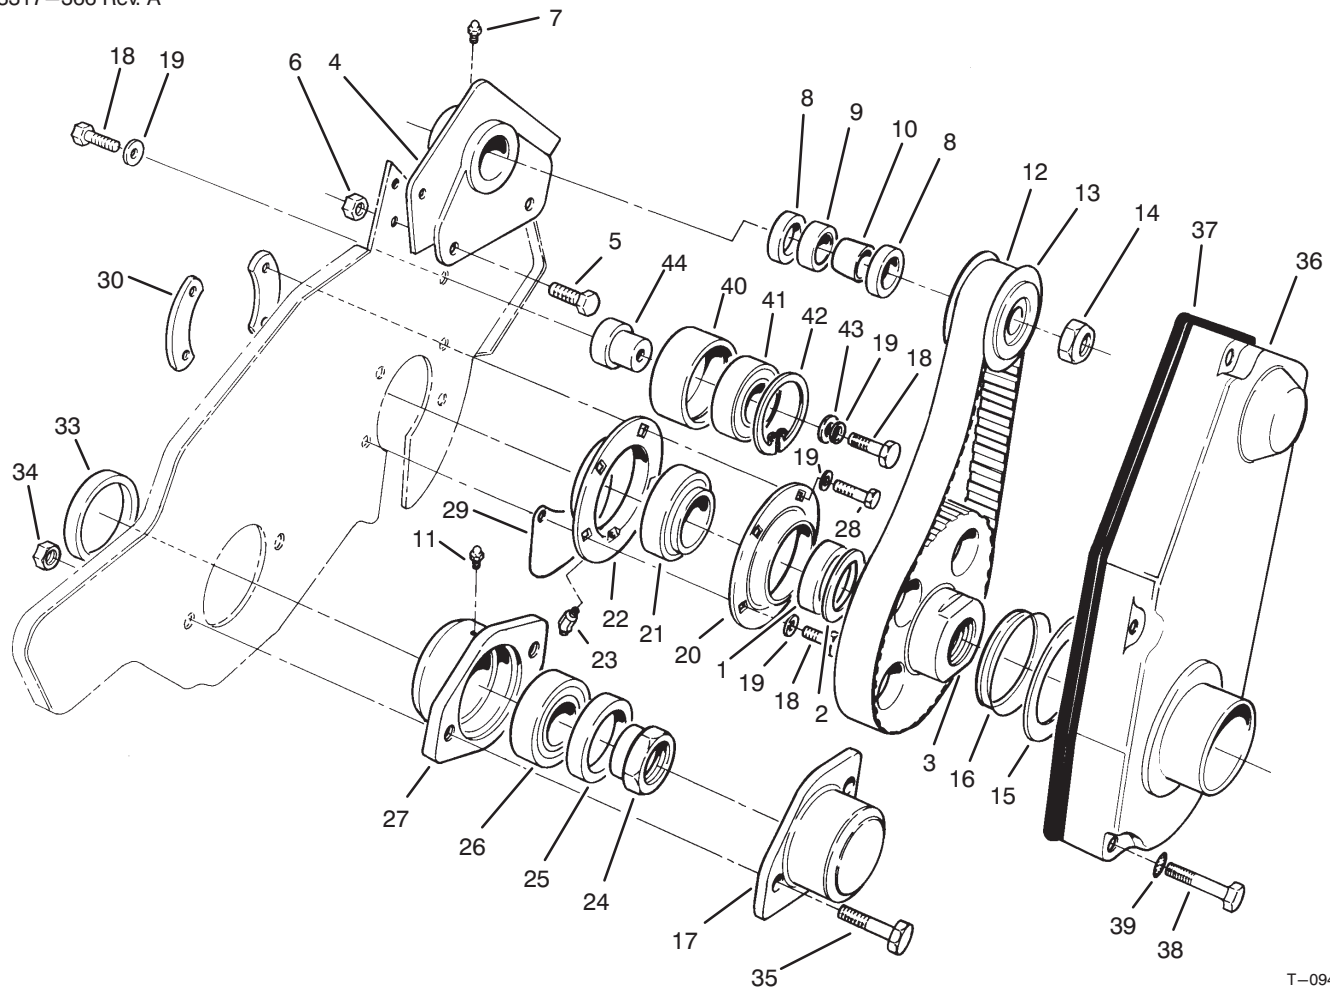


T-0945

DRUM DRIVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88-7530	Spacer	2
2	88-7540	Washer - Backup	2
3	88-7560	Pulley - LH	1
*	88-7550	Pulley - RH	1
4	88-7470	Housing - LH	1
*	88-7490	Housing - RH	1
5	322-5	Screw - Cap Hex. Hd.	4
6	3296-29	Nut - Lock	4
7	302-19	Fitting - Grease	2
8	253-160	Seal	4
9	251-338	Bearing	2
10	86-7130	Spacer	2
11	302-5	Fitting - Grease	1
12	65-6210	Belt	2
13	65-6660	Pulley	2
14	3296-57	Nut	2
15	65-6570	Washer	2
16	253-161	Seal - V-Ring	2
17	65-6220	Cover - Bearing	1
18	322-3	Screw - Cap Hex. Hd.	10
19	3253-4	Washer - Lock	10
20	65-6590	Flangette	2
21	88-7880	Bearing	2

Ref. No.	Part No.	Description	No. Used
22	65-8710	Flangette (Incl. Ref. #23)	2
23	302-11	Fitting - Grease	2
24	92-7302	Nut - Bearing Lock	1
25	253-163	Seal	1
26	251-342	Bearing	1
27	65-8640	Housing - Bearing	1
29	65-8720	Closure	2
30	65-8730	Clamp - Bearing	4
33	253-96	Seal	1
34	3296-39	Nut - Lock	2
35	323-7	Screw - Cap Hex. Hd.	2
36	88-7680	Cover - Drum Belt LH	1
*	88-7690	Cover - Drum Belt RH	1
37	88-7810	Seal Strip - Drum Cover	2
38	321-11	Screw - Cap Hex. Hd.	8
39	3254-8	Washer - Lock I.T.L.W.	8
40	88-7850	Idler Pulley Assembly (Incl. Ref. #41-45 & 47)	2
41	38-7820	Bearing - Ball	2
42	32120-42	Ring - Snap	2
43	88-7200	Washer - Flat	2
44	88-7190	Spacer - Pulley Support	2

*Not Illustrated

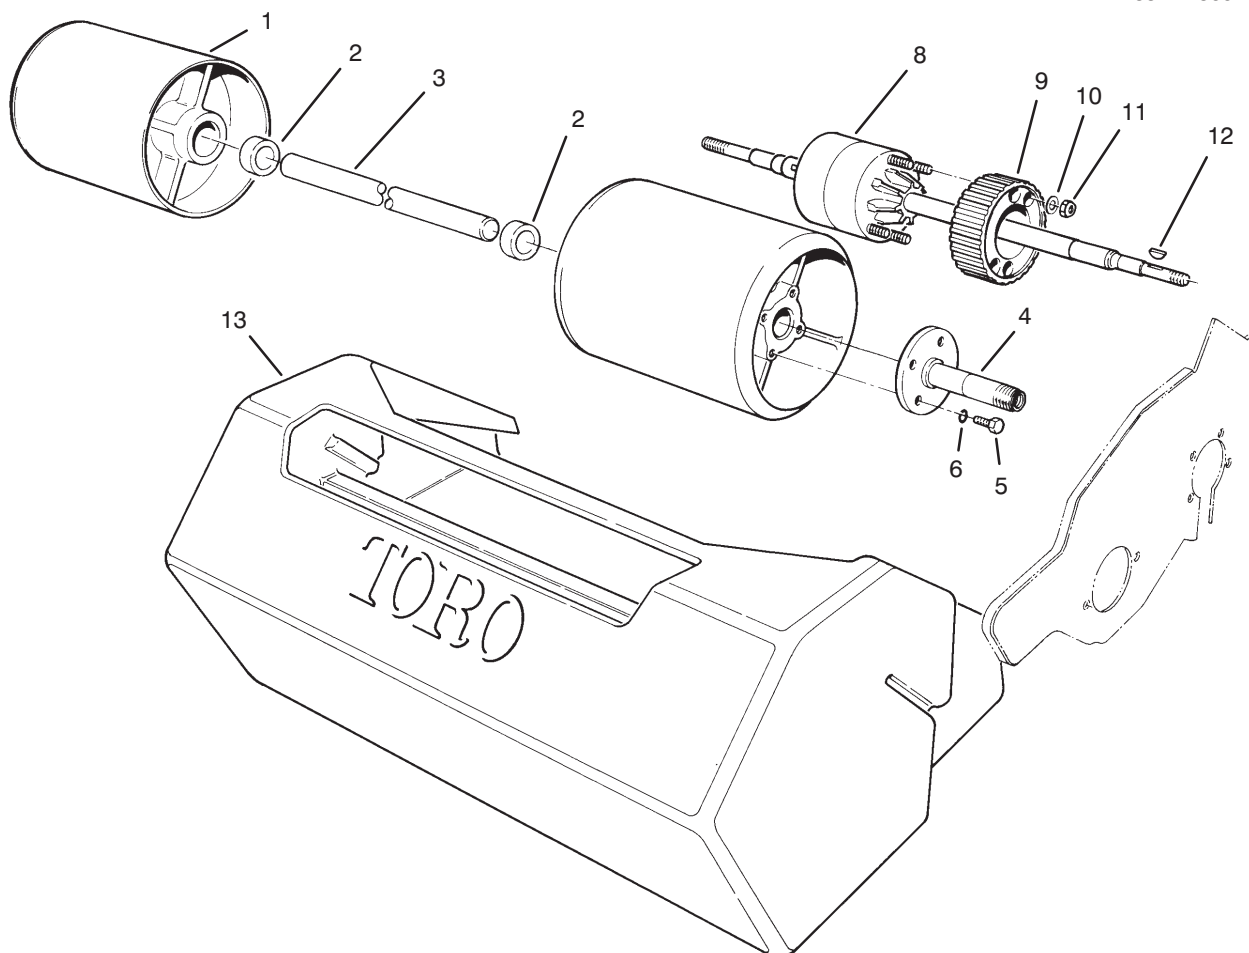


T-0944A

DRUM AND BASKET ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88-7280	Drum Assembly	2
2	253-84	Seal-Oil	2
3	88-7640	Shaft - Drum	1
4	88-7520	Shaft - Drum LH	1
*	88-7510	Shaft - Drum RH	1
5	322-5	Screw - Cap Hex. Hd.	8
6	3253-4	Washer - Lock	8

Ref. No.	Part No.	Description	No. Used
8	93-6055	Differential Assembly Peerless Model 100-111	1
9	65-9120	Pulley - Differential	1
10	3256-23	Washer - Flat	4
11	3296-29	Nut - Lock	4
12	3257-32	Key	2
13	65-7230	Basket - Grass	1

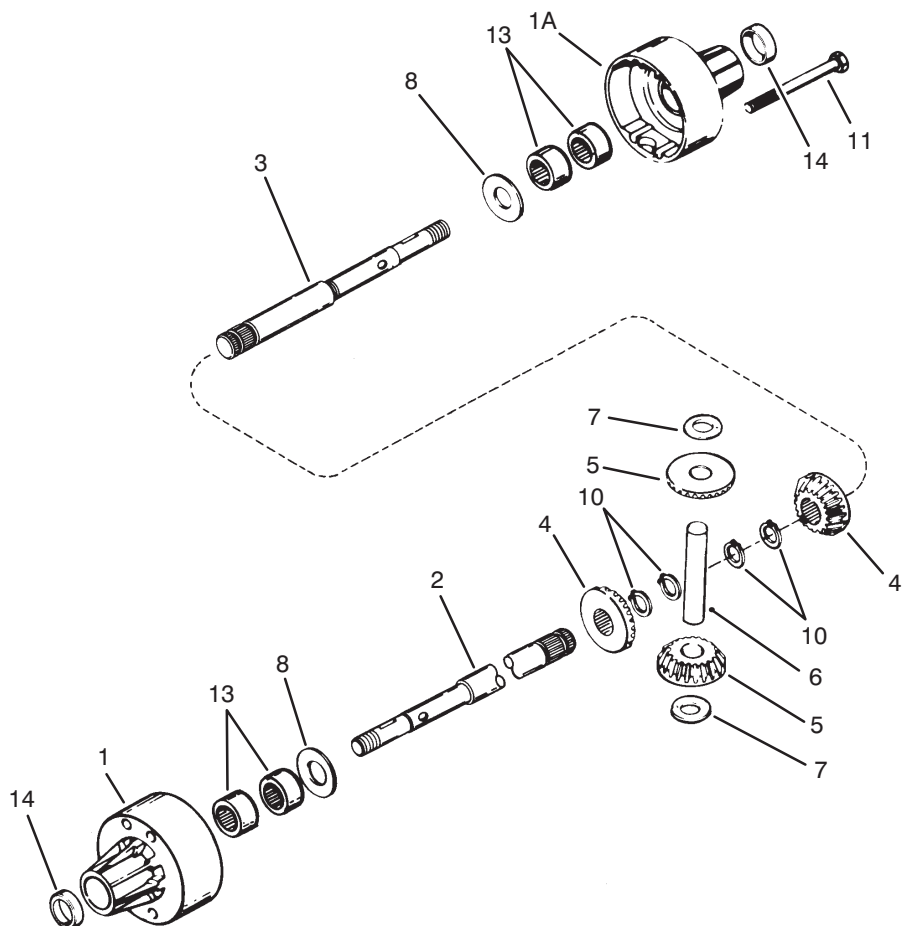


T-1571

DIFFERENTIAL ASSEMBLY PEERLESS MODEL NO. 100-111


Ref. No.	Part No.	Description	No. Used
1	774881	Housing Differential Carrier (Incl. Ref. #13 & 14)	1
1A	774882	Housing Differential Carrier (Incl. Ref. #13 & 14)	1
2	6045-P1	Axle (20-17/32" Long)	1
3	6046-P1	Axle (6-19/32" Long)	1
4	778221	Gear Bevel	2
5	778068	Gear Pinion	2

Ref. No.	Part No.	Description	No. Used
6	786040	Pin Drive	1
7	780096	Washer Thrust	2
8	780001	Washer	2
10	792125	Ring - Retaining (Pkg. of 2)	4
11	792093	Screw Flanged Hex Hd.	4
13	780140	Bearing Needle	4
14	788042	Seal Oil	2

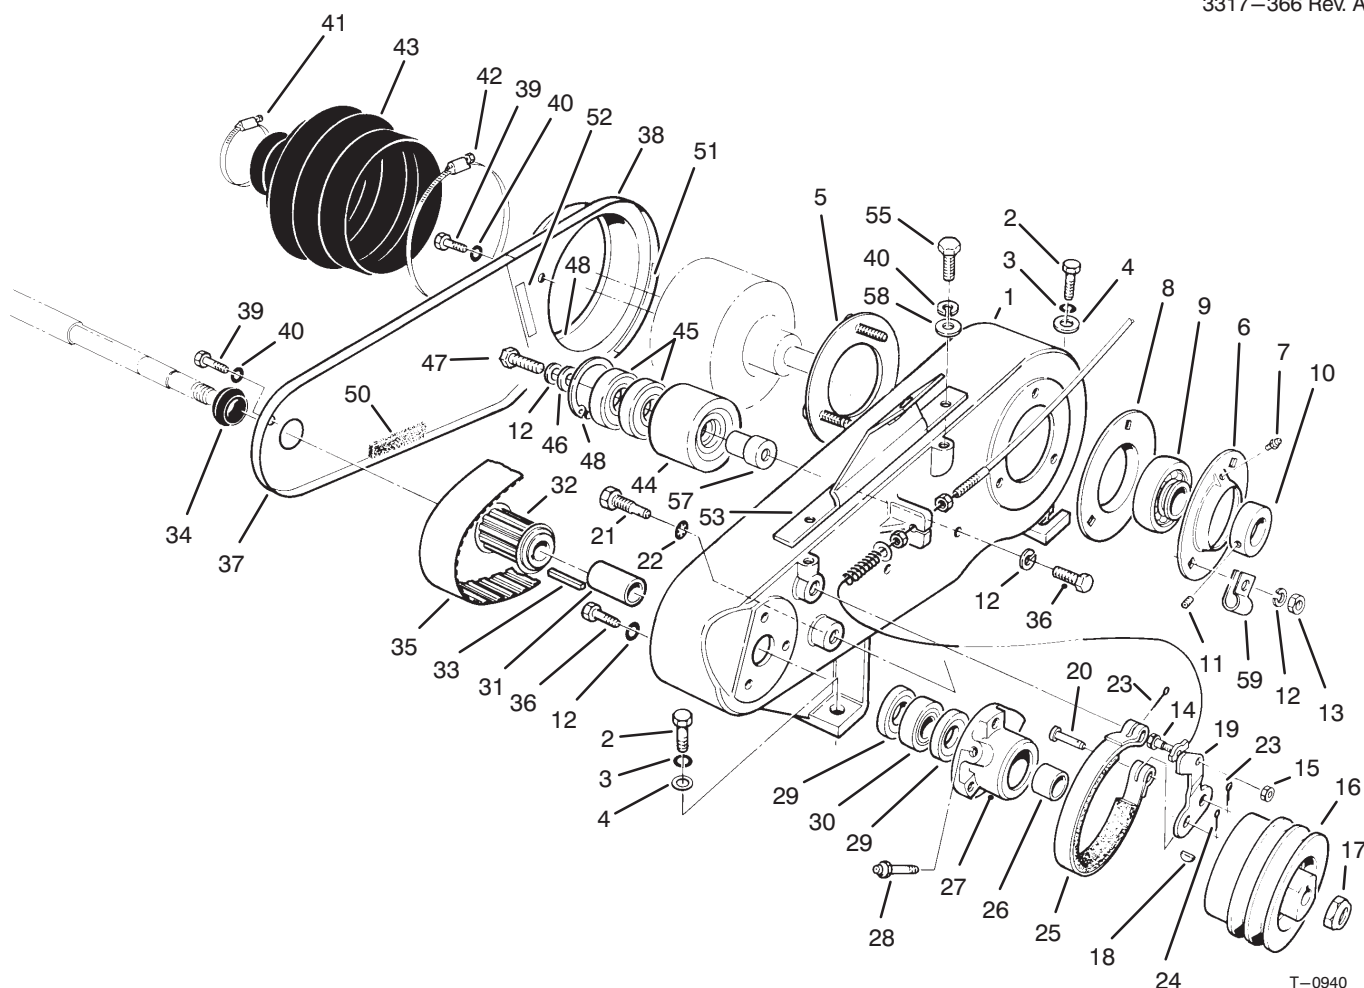

COUNTERSHAFT ASSEMBLY


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	88-7230	Housing - Countershaft	1	25	65-8700	Band - Brake	1
2	323-5	Screw - Cap Hex. Hd.	4	26	86-7130	Spacer - Short	1
3	3253-21	Washer - Lock	4	27	65-6760	Housing - Bearing	1
4	3256-24	Washer - Flat	4	28	302-64	Fitting - Grease	1
5	65-6720	Plate - Screw	1	29	253-160	Seal	2
6	65-6700	Flangette	1	30	251-338	Bearing	1
7	302-55	Fitting - Grease	1	31	86-7140	Spacer - Long	1
8	65-6710	Flangette	1	32	65-8910	Pulley - Countershaft	1
9	251-343	Bearing	1	33	65-6850	Key	1
10		Collar - Locking	1	34	88-7710	Seal - Countershaft	1
11		Screw - Set	2	35	65-9080	Belt	1
12	3253-4	Washer - Lock	8	36	322-5	Screw - Cap Hex. Hd.	4
13	3218-2	Nut - Jam	3	37	88-7240	Cover - Box Front	1
14	11-9030	Bolt - Shoulder	1	38	88-7250	Cover - Box Rear	1
15	3296-42	Nut - Lock	1	39	321-2	Screw - Cap Hex. Hd.	3
16	92-9212	Pulley - Input Shaft	1	40	3253-3	Washer - Lock	5
17	3296-57	Nut - Lock	1	41	2412-139	Clamp - Hose	1
18	3257-32	Key	1	42	2412-140	Clamp - Hose	1
19	65-8610	Lever - Brake	1	43	65-6800	Boot - Differential	1
20	283-75	Pin - Clevis	1	44	88-7870	Idler Pulley Assembly	1
21	65-6810	Support - Brake	2	45	38-7820	Bearing - Ball	2
22	3254-6	Washer - Lock I.T.L.W.	2	46	88-7200	Washer - Flat	1
23	3272-6	Pin - Cotter	2	47	322-3	Screw - Cap Hex. Hd.	1
24	3272-8	Pin - Cotter	1	48	32120-42	Ring - Retaining	1
				50	65-6901	Strip - Cover Seal	1

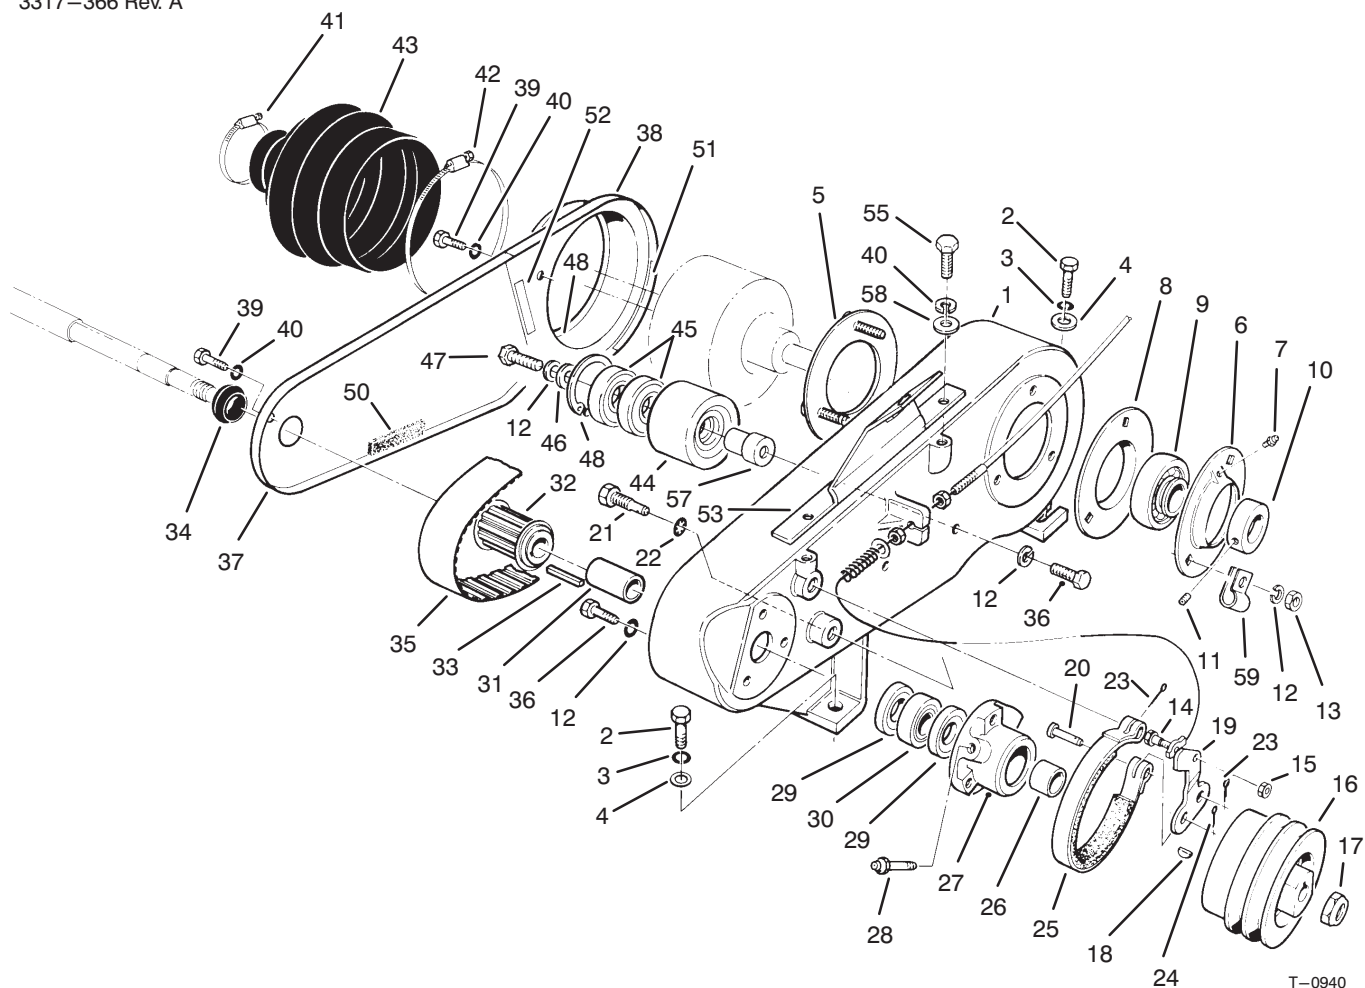

COUNTERSHAFT ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
51	65-6902	Strip - Cover Seal	1
52	65-6903	Strip - Cover Seal	1
53	93-1448	Cover Bracket	1
55	321-3	Screw - Cap Hex. Hd.	2

Ref. No.	Part No.	Description	No. Used
57	88-7380	Spacer - Pulley Support	1
58	3256-22	Washer - Flat	2
59	88-7970	Clip	1

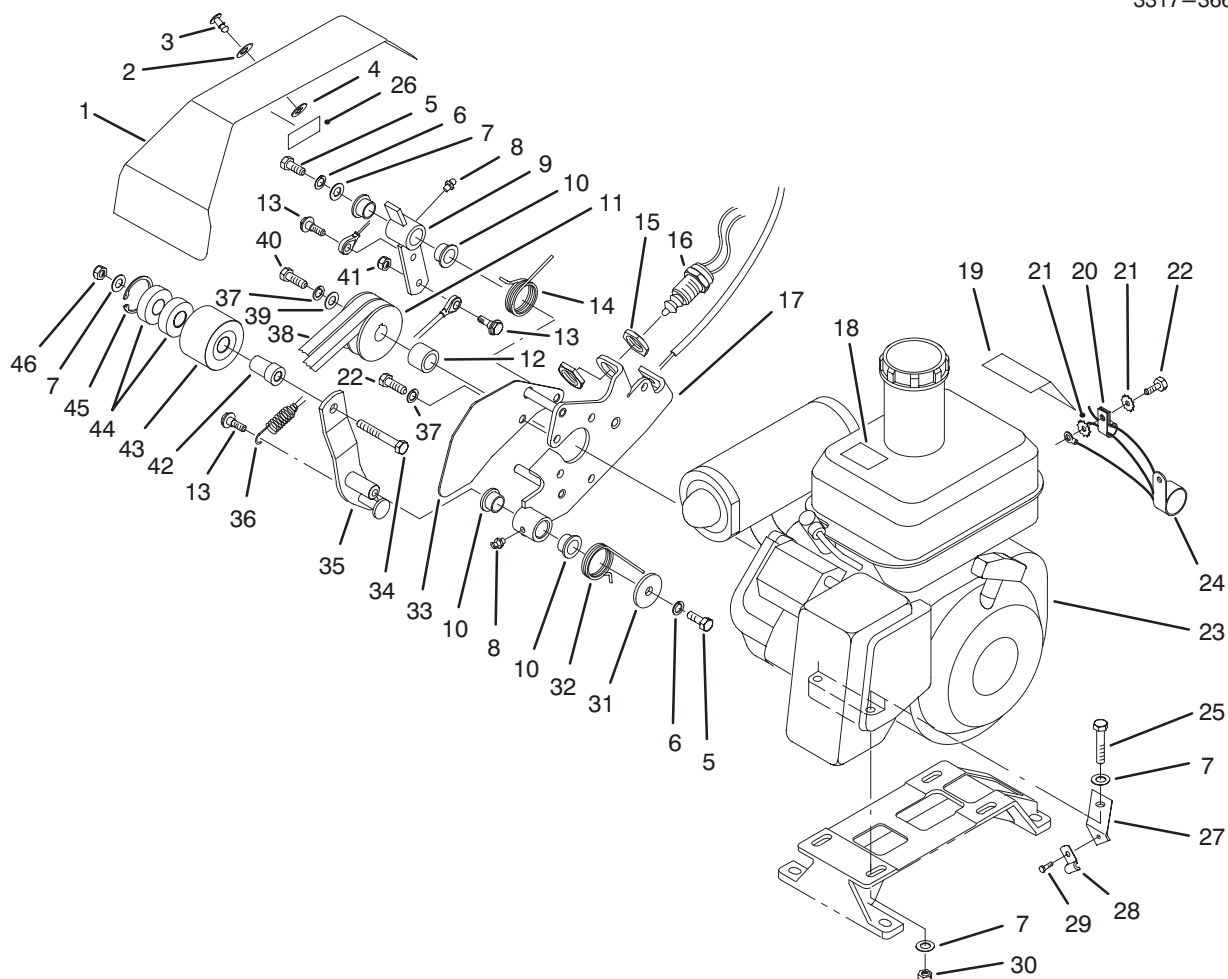


T-1996

ENGINE AND BELLCRANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-6045	Cover – Bellcrank	1	25	322-9	Screw – Cap Hex. Hd.	4
2	3256-2	Washer – Flat	1	†26	67-5360	Decal – Danger (English)	1
3	93-6074	Stud	1	27	88-7960	Bracket – Throttle Cable	1
4	93-6073	Retainer	1	28	2412-21	Clip – Cable	1
5	323-4	Screw – Cap Hex. Hd.	2	29	32144-73	Screw – Hex. Washer Hd. Thread Form	1
6	3253-21	Washer – Spring Lock	2	30	3296-29	Nut – Lock	4
7	3256-56	Washer – Flat	10	31	93-6099	Washer	1
8	302-5	Fitting – Grease	2	32	93-6012	Spring – Torsion, Clutch	1
9	93-6014	Lever	1	33	93-6013	Shield – Belt	1
10	65-8770	Bushing	4	34	323-11	Screw – Cap Hex. Hd.	1
11	92-9216	Pulley – Input Drive	1	35	93-6003	Lever – Clutch	1
12	65-8260	Spacer – Engine Shaft	1	36	93-6002	Cable Assembly – Link	1
13	11-9030	Bolt – Shoulder	3	37	3253-4	Washer – Spring Lock	6
14	93-6011	Spring – Torsion	1	38	92-9218	V-Belt, Matched Set	1
15	3218-20	Nut – Jam	2	39	65-8270	Washer	1
16	87-5490	Switch (Incl. Ref. #15)	1	40	48-9460	Screw – Cap Hex. Hd.	1
17	93-6015	Bracket – Clutch	1	41	3296-42	Nut – Lock	3
†18	63-8440	Decal – Hot (English)	1	42	88-7350	Spacer – Pulley Support	1
19	93-7348	Decal – Danger, Fuel	1	43	88-7890	Idler Pulley Assembly (Incl. Ref. #42, 44 & 45)	1
20	2412-93	Clamp – R	1	44	38-7820	Bearing – Ball	2
21	3255-9	Washer – External Lock	1	45	32120-42	Ring – Retaining	1
22	48-7700	Screw – Cap Hex. Hd.	6	46	3296-39	Nut – Lock	1
23	93-6088	Engine Assembly Kawasaki Model FE120G-AS00 (Incl. Ref. #18 & 19)	1	*	93-9001	Bellcrank Cover Assembly (Incl. Ref. #1 & 26)	1
24	93-6034	Harness – Wire, Module	1				

†For different language versions of this part, see International Parts Reference.

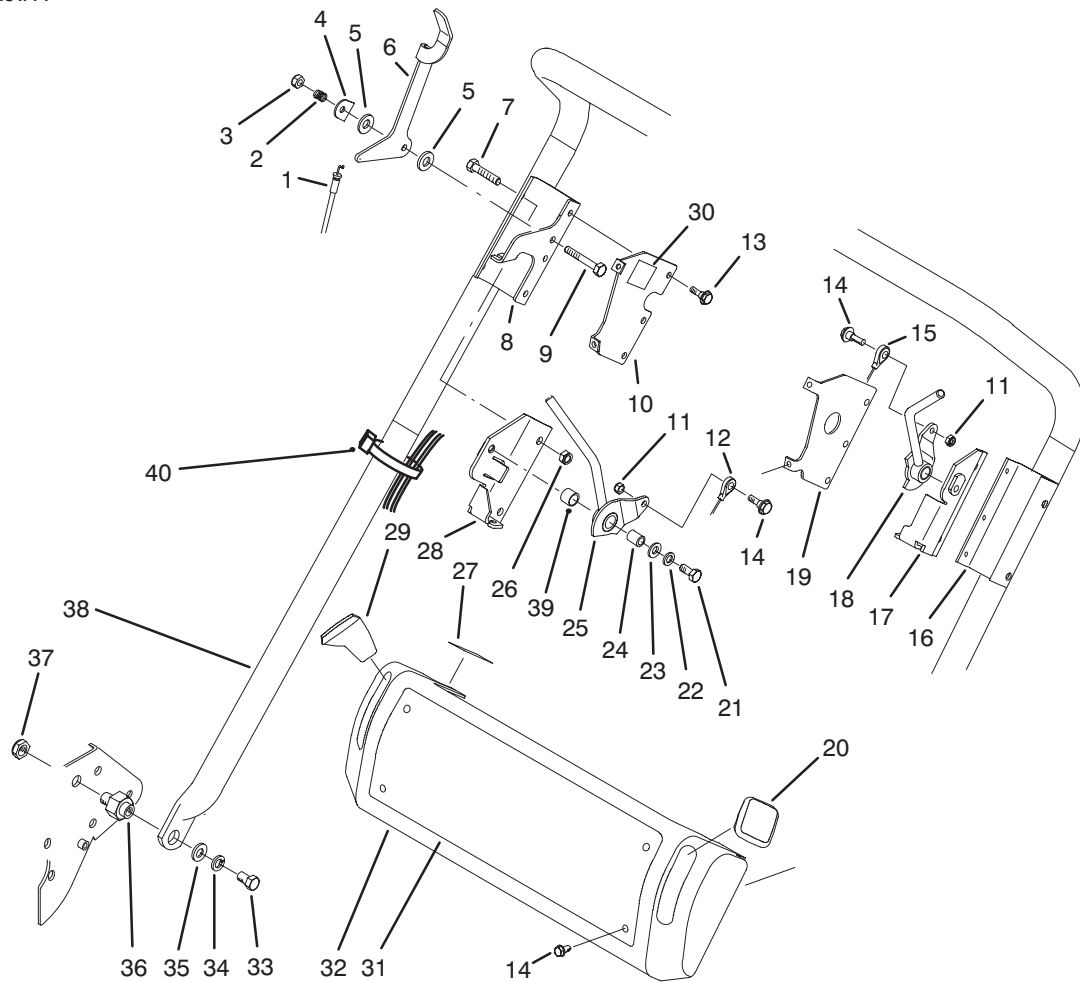


T-1997

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-9023	Cable – Throttle	1	22	3253-4	Washer – Spring Lock	2
2	3-5787	Spring	1	23	3256-23	Washer – Flat	2
3	3296-56	Nut – Lock	1	24	88-7450	Spacer	2
4	93-6016	Washer – Retaining	1	25	93-6057	Lever – Clutch	1
5	66-2921	Washer – Friction	2	26	3296-29	Nut – Lock	4
6	93-6017	Lever – Throttle	1	27	93-6085	Decal – Throttle	1
7	322-9	Screw – Cap Hex. Hd.	4	28	93-6019	Bracket – Clutch	1
8	93-6018	Bracket – Skid, Clutch	1	29	65-8970	Knob – Black	1
9	321-8	Screw – Cap Hex. Hd.	1	30	66-2000	Decal – Noise	1
10	93-6046	Bracket – Console RH	1	‡31	93-6084	Decal – Control Panel (English)	1
11	3296-42	Nut – Lock	2	32	93-6036	Console	1
12	93-6081	Cable – Clutch	1	33	323-34	Screw – Cap Hex. Hd.	2
13	93-6083	Screw	10	34	3253-21	Washer – Spring Lock	2
14	11-9030	Bolt – Shoulder	2	35	3256-24	Washer – Flat	2
15	93-6082	Cable – Brake	1	36	93-6000	Pin – Handle Pivot	2
16	93-6021	Bracket – Skid, Brake	1	37	3296-28	Nut – Lock Insert	2
17	93-6022	Bracket – Brake	1	38	93-6001	Handle	1
18	93-6058	Lever – Brake	1	39	256-206	Bushing	2
19	93-6047	Bracket – Console LH	1	40	3290-378	Tie – Cable	2
20	65-8971	Knob – Red	1				
21	3210-7	Screw – Cap Hex. Hd.	2				

‡For different language versions of this part, see International Parts Reference.

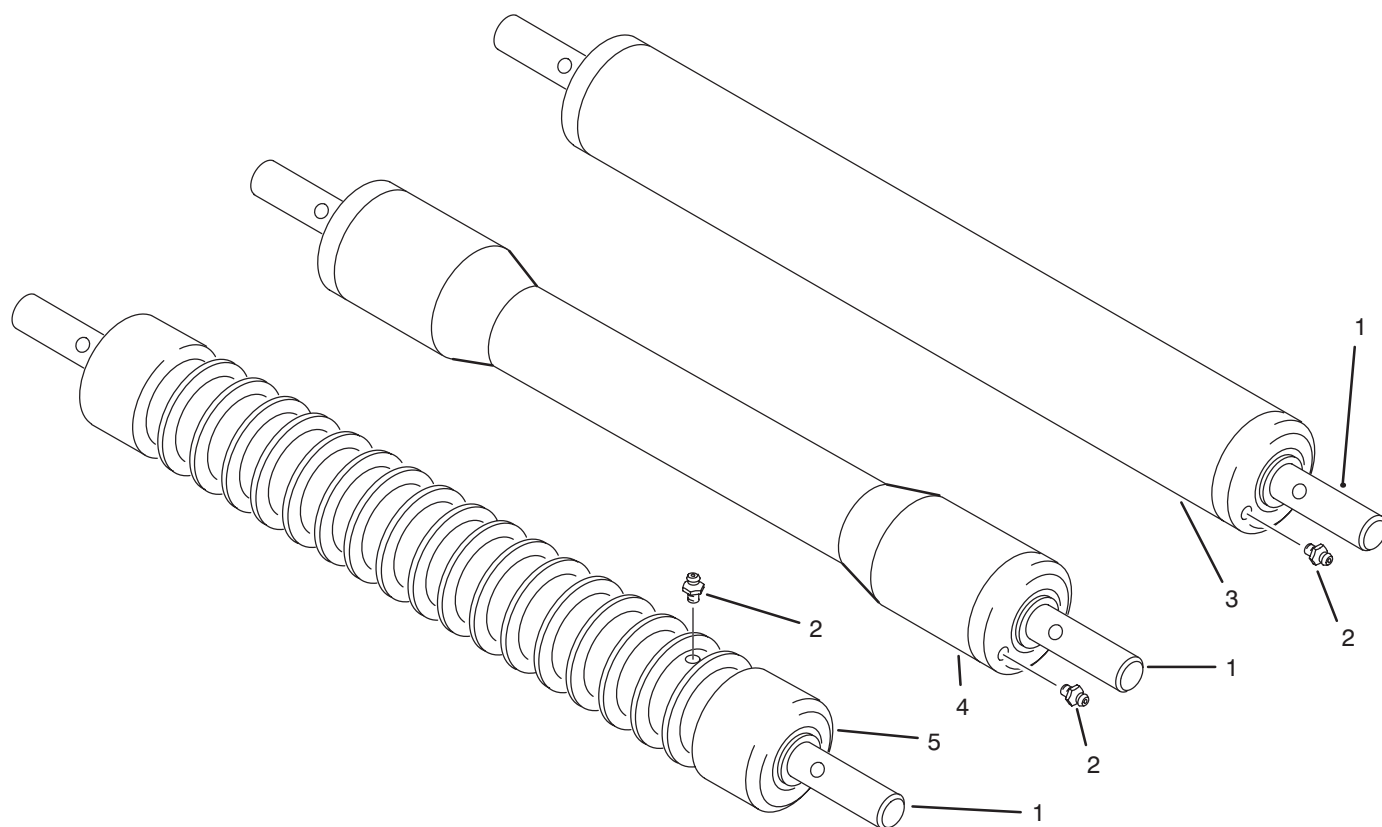


T-0956

CUTTING UNIT ROLLER OPTIONS

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	52-3180	Bearing – Roller	2	4	52-3590	Assembly – Swaged Roller (Incl. Ref. #1 & 2)	1
2	302-5	Fitting – Grease	2	5	71-1550	Assembly – Wiehle Roller Cast Iron (Incl. Ref. #1 & 2)	1
3	52-3170	Assembly – Roller (Incl. Ref. #1 & 2)	1	*	04118	Wiehle Roller (Carton of 1)	1

*Not Illustrated

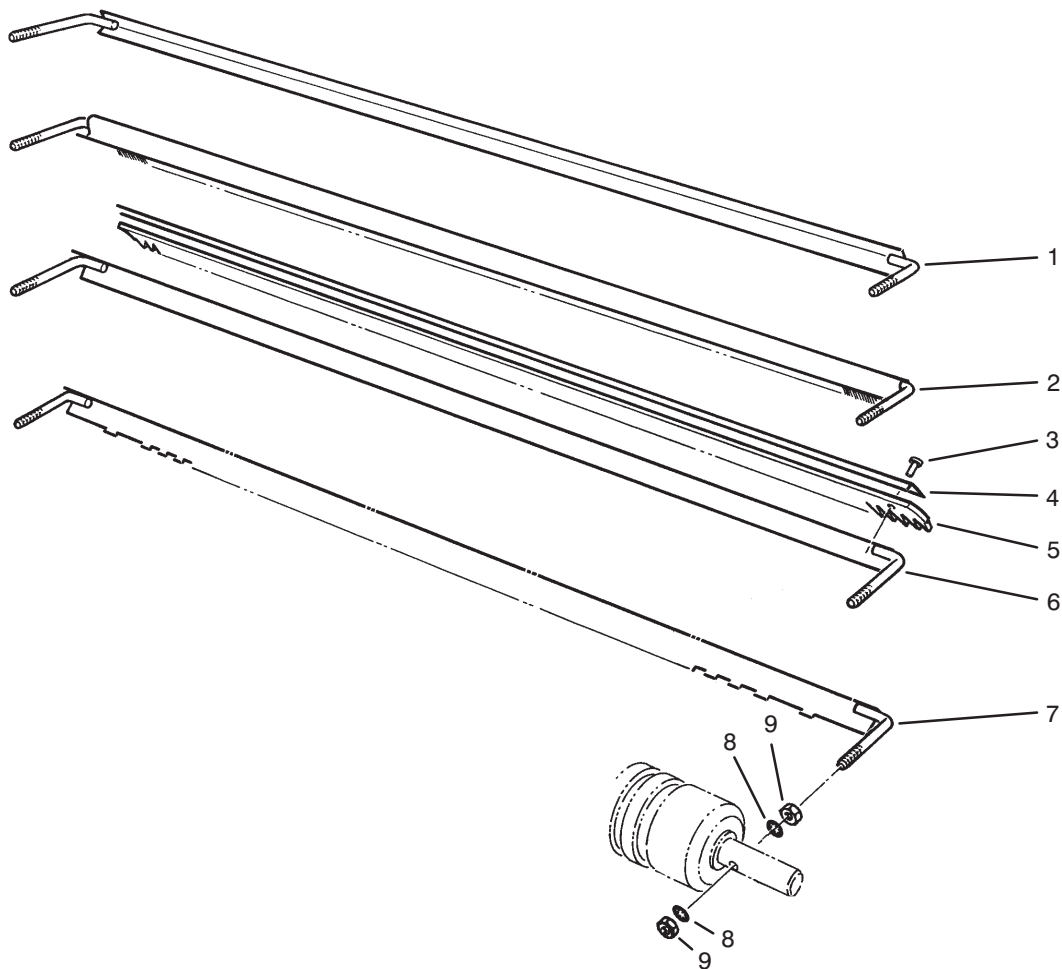

T-1998


SCRAPER OPTIONS

Ref. No.	Part No.	Description	No. Used
1	65-8360	Scraper - Smooth	1
2	33-1000	Scraper - Brush	1
3	3295-15	Rivet	11
4	8-2520	Support - Comb	1
5	8-2530	Comb - Urethane	1

Ref. No.	Part No.	Description	No. Used
6	11-0070	Assembly - Comb, Scraper (Incl. Ref. #3-5)	1
7	65-8340	Scraper - Wiehle Roller	1
8	3254-8	Washer - Lock I.T.L.W.	4
9	3219-1	Nut-Hex	4

SPECIAL TOOLS


BEDKNIFE SCREW TOOL NO. *TOR510880

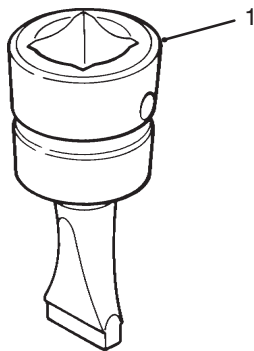

T-0729

Ref. No.	Part No.	Description	No. Used
1	51-0880	Tool – Bedknife Screw	1


BACKLAPPING BRUSH ASSEMBLY NO. *TOR299100

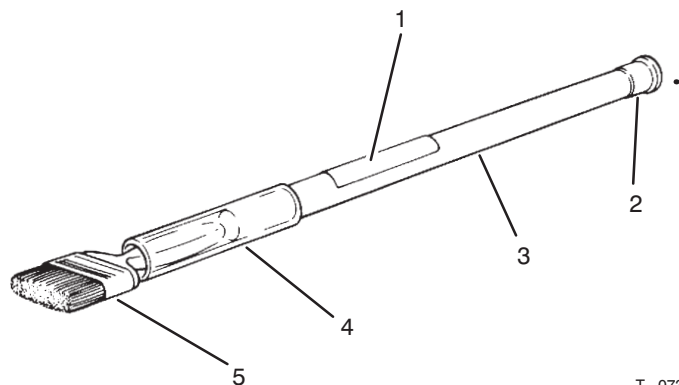

T-0731


Ref. No.	Part No.	Description	No. Used
1	12-9140	Decal	1
2	2410-18	Plug	1
3	29-9080	Handle	1
4	29-9090	Hose – Handle	1
5	36-4310	Brush	1

HEIGHT-OF-CUT BAR ASSEMBLY NO. 13-8199

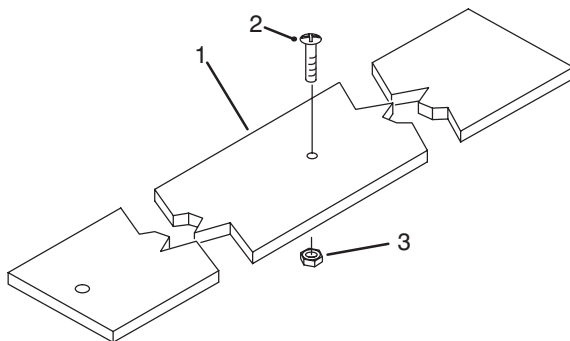

T-1763

Ref. No.	Part No.	Description	No. Used
1	65-8320	Bar	1
2	32122-22	Screw – Phill. Truss Hd.	1
3	3219-14	Nut	1

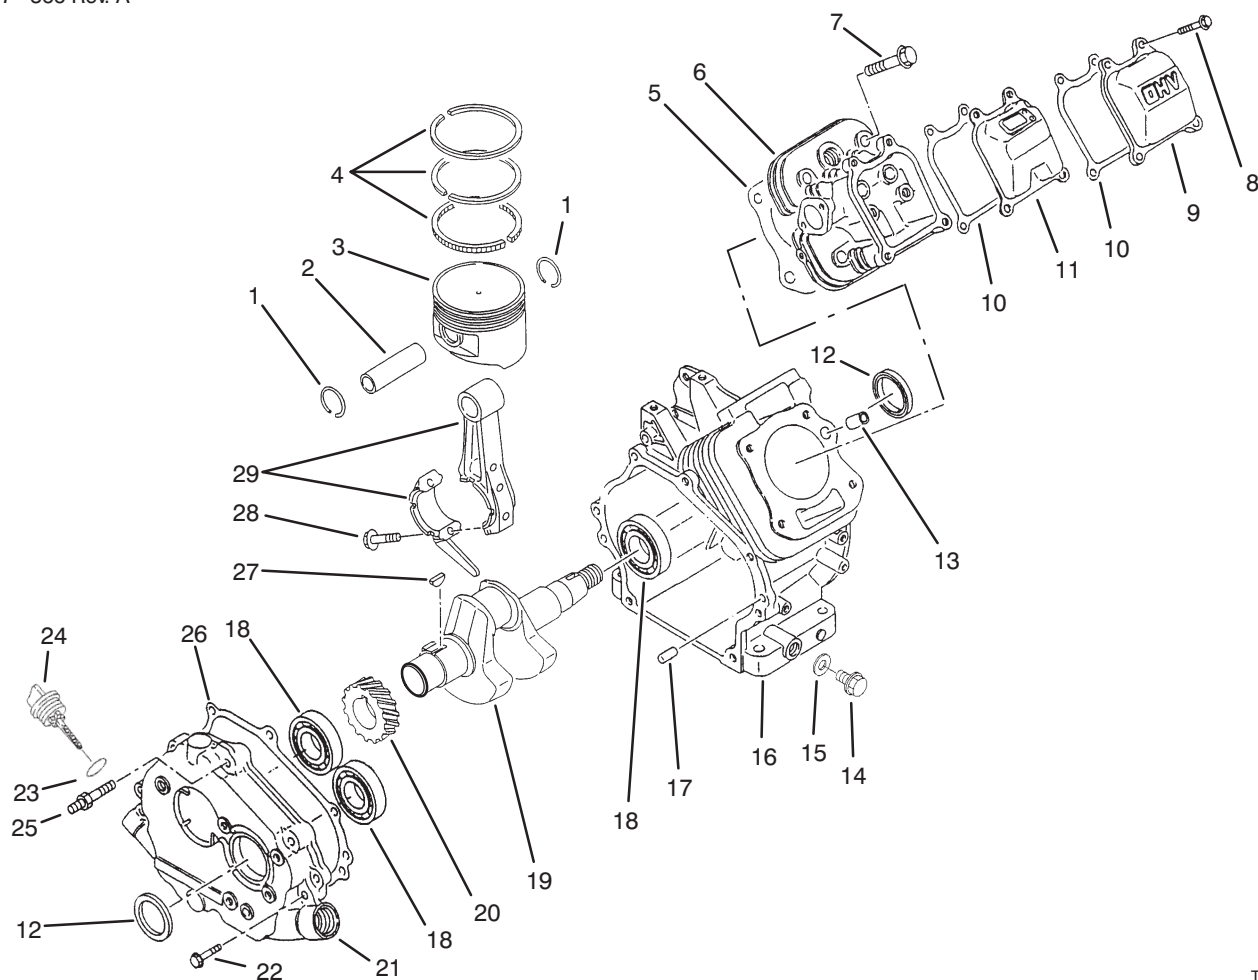


T-1623

ENGINE CRANKCASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-8500	Ring - Retaining	2
2	93-8501	Pin - Piston	1
3	93-8502	Piston	1
4	93-8503	Piston Ring Set	1
5	93-8504	Gasket - Head	1
6	93-8505	Head - Cylinder	1
7	93-8506	Bolt - Flanged	4
8	93-8507	Bolt - Flanged	4
9	93-8508	Case - Rocker	1
10	93-8509	Gasket - Rocker	2
11	93-8510	Breather	1
12	93-8511	Seal - Oil	2
13	93-8512	Pin	2
14	93-8513	Plug - Drain	2
15	93-8514	Gasket - Drain Plug	2
16	93-8515	Crankcase	1


Ref. No.	Part No.	Description	No. Used
17	93-8516	Pin	2
18	93-8517	Bearing - Ball	3
19	93-8518	Crankshaft Assembly (Incl. Ref. #20 & 27)	1
20	93-8519	Gear - Helical	1
21	93-8520	Cover - Crankcase	1
22	93-8521	Bolt - Flanged	7
23	93-8522	Seal - O-Ring	2
24	93-8523	Cap - Oil Filler	2
25	93-8524	Stud	1
26	93-8525	Gasket - Crankcase	1
27	93-8526	Key	1
28	93-8527	Bolt - Rod	2
29	93-8528	Connecting Rod Assy. (Incl. Ref. #29)	1

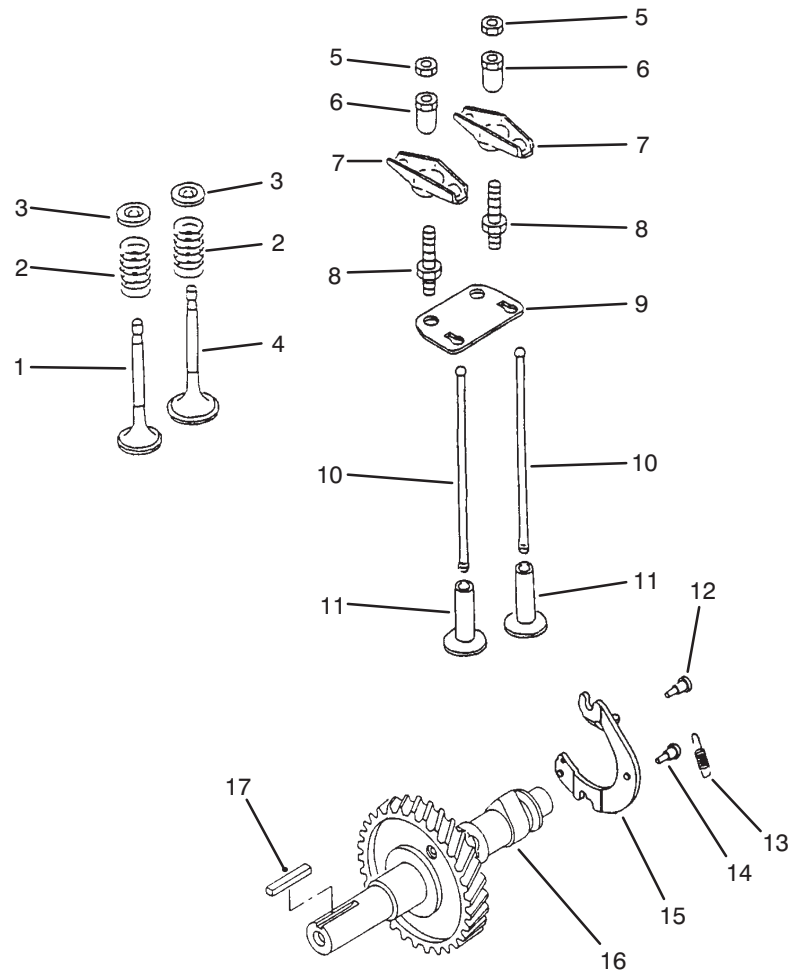

T-1624

ENGINE CAMSHAFT & VALVES ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-8529	Valve – Exhaust	1	10	93-8538	Rod – Push	2
2	93-8530	Spring – Valve	2	11	93-8539	Tappet	2
3	93-8531	Retainer – Spring	2	12	93-8540	Pin	2
4	93-8532	Valve – Intake	1	13	93-8541	Spring	1
5	93-8533	Nut	2	14	93-8542	Pin	1
6	93-8534	Nut	2	15	93-8543	Decompressor	1
7	93-8535	Arm – Rocker	2	16	93-8544	Camshaft Assembly (Incl. Ref. #12-15)	1
8	93-8536	Bolt	2	17	93-8545	Key	1
9	93-8537	Guide	1				

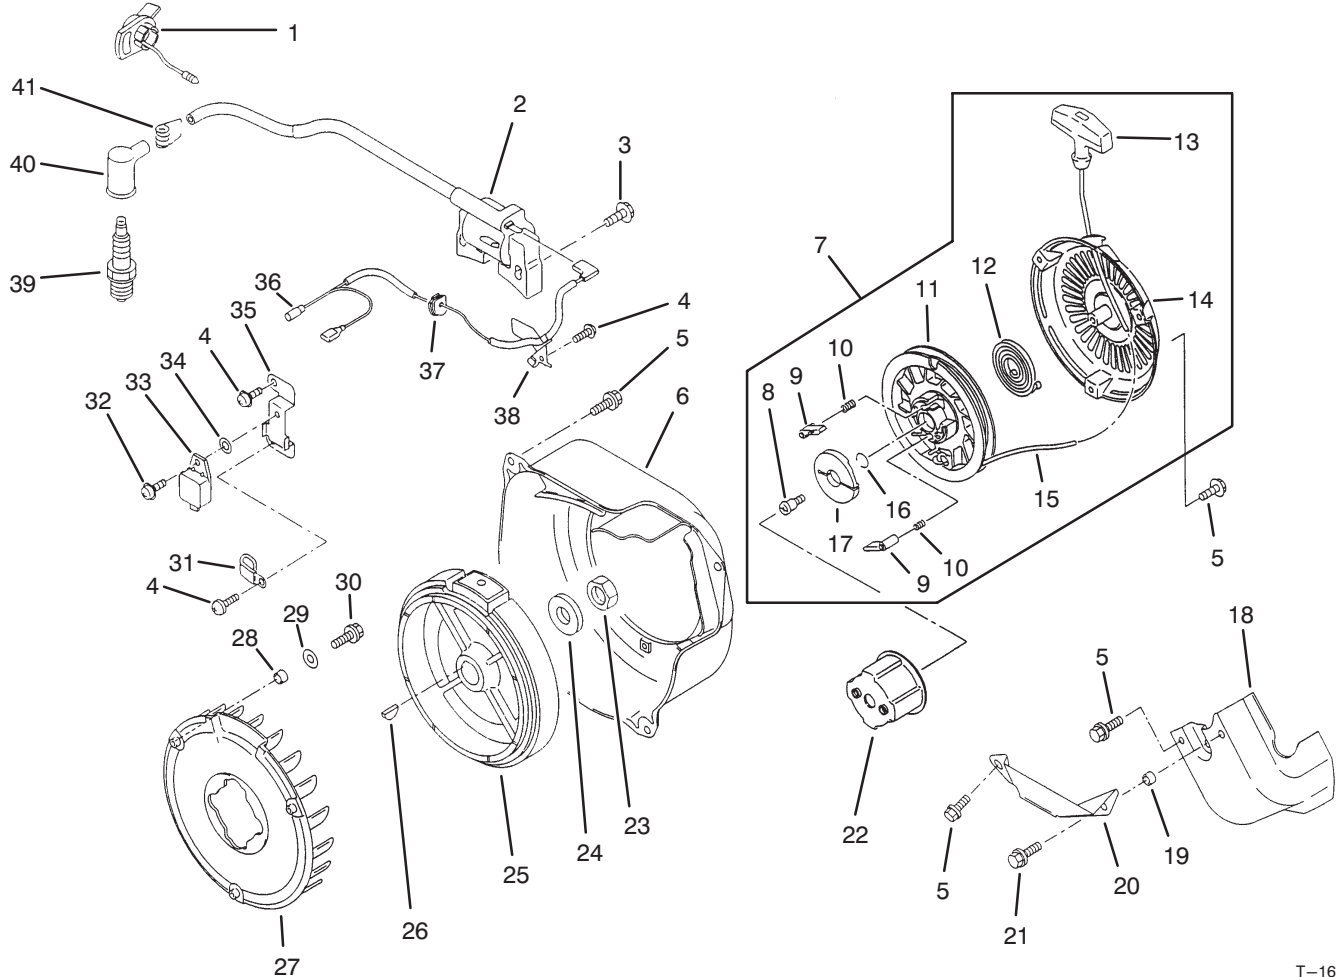


T-1617

ENGINE IGNITION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-8546	Switch	1
2	93-8547	Coil - Ignition	1
3	93-8548	Bolt - Flanged	2
4	93-8549	Screw	3
5	93-8550	Bolt - Flanged	10
6	93-8551	Housing - Fan	1
7	93-8552	Recoil Starter Assy. (Incl. Ref. #8-17)	1
8	93-8553	Screw	1
9	93-8554	Pawl - Recoil	2
10	93-8555	Spring - Return	2
11	93-8556	Reel - Recoil	1
12	93-8557	Spring	1
13	93-8558	Grip	1
14	93-8559	Case - Recoil	1
15	93-8560	Rope	1
16	93-8561	Ring - Retaining	1
17	93-8562	Guide - Pawl	1
18	93-8563	Shroud - Engine	1
19	93-8564	Collar	1
20	93-8565	Shroud - Engine	1
21	93-8566	Bolt - Flanged	1


Ref. No.	Part No.	Description	No. Used
22	93-8567	Pulley - Recoil	1
23	93-8568	Nut	1
24	93-8569	Washer	1
25	93-8570	Flywheel	1
26	93-8571	Key	1
27	93-8572	Fan	1
28	93-8573	Collar	3
29	93-8574	Washer	3
30	93-8575	Bolt - Flanged	3
31	93-8576	Clamp	1
32	93-8577	Screw - Pan Hd.	1
33	93-8578	Igniter	1
34	93-8579	Washer	1
35	93-8580	Bracket	1
36	93-8581	Lead - Wire	1
37	93-8582	Grommet	1
38	93-8583	Clamp	1
39	93-8584	Plug - Spark (NGK BP5ES)	1
40	93-8585	Cap - Spark Plug	1
41	93-8586	Terminal	1

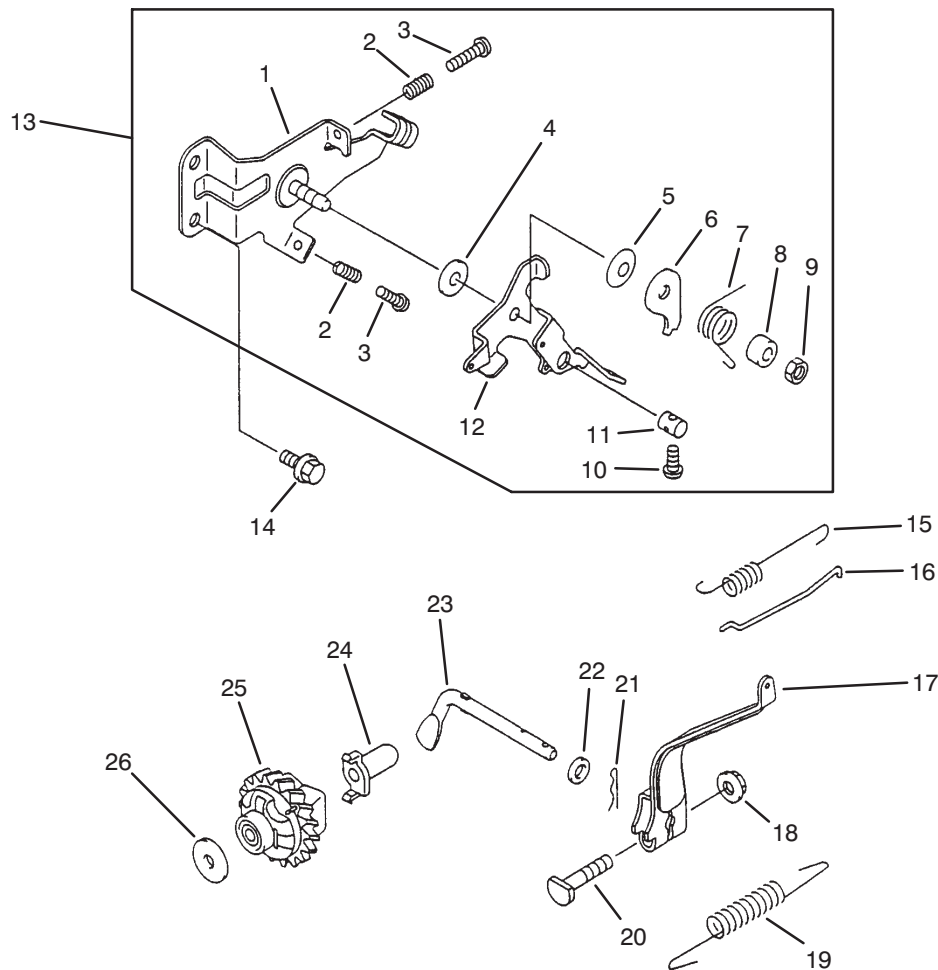

T-1618

ENGINE GOVERNOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-8587	Panel - Control	1	14	93-8600	Bolt - Flanged	2
2	93-8588	Spring	2	15	93-8601	Spring	1
3	93-8589	Bolt	2	16	93-8602	Rod - Governor	1
4	93-8590	Washer	1	17	93-8603	Arm - Governor	1
5	93-8591	Spring	1	18	93-8631	Nut	1
6	93-8592	Plate	1	19	93-8605	Spring - Governor	1
7	93-8593	Spring	1	20	93-8606	Bolt	1
8	93-8594	Spacer	1	21	93-8607	Pin - Snap	1
9	93-8595	Nut	1	22	93-8608	Washer	1
10	93-8596	Screw - Pan Hd.	1	23	93-8609	Arm - Pivot	1
11	93-8597	Nut	1	24	93-8610	Sleeve	1
12	93-8598	Lever	1	25	93-8611	Governor Assembly	1
13	93-8599	Control Panel Assy. (Incl. Ref. #1-12)	1	26	93-8612	Washer	1

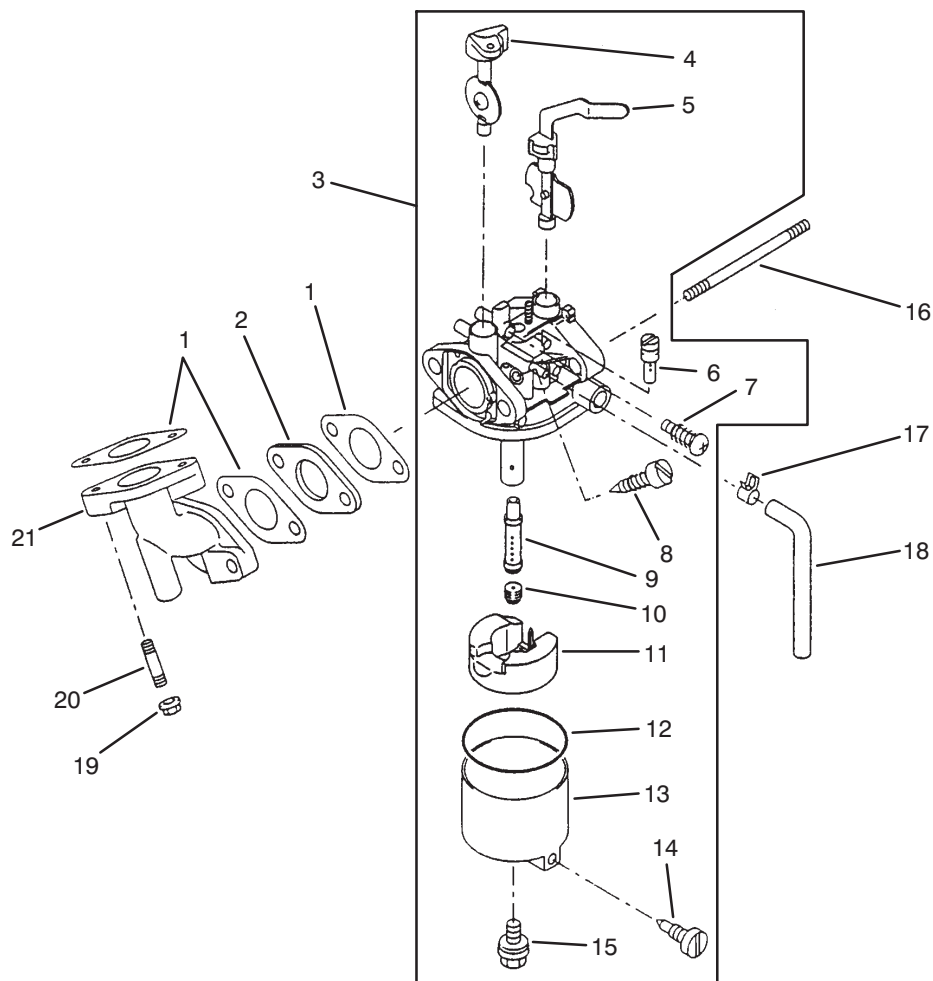


T-1619

ENGINE CARBURETOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-8613	Gasket - Carburetor	3
2	93-8614	Insulator	1
3	93-8615	Carburetor Assembly (Incl. Ref. #4-15)	1
4	93-8616	Valve - Throttle	1
5	93-8617	Valve - Choke	1
6	93-8618	Jet - Pilot #42	1
7	93-8619	Screw Assembly	1
8	93-8620	Screw - Assembly	1
9	93-8621	Nozzle - Main	1
10	93-8622	Jet - Main #70	1
11	93-8623	Float Assembly	1


Ref. No.	Part No.	Description	No. Used
12	93-8624	Gasket	1
13	93-8625	Float Chamber Assy. (Incl. Ref. #14)	1
14	93-8626	Screw Assembly	1
15	93-8627	Bolt	1
16	93-8628	Bolt - Stud	2
17	93-8629	Clamp	1
18	93-8630	Tube	1
19	93-8631	Nut	2
20	93-8632	Bolt - Stud	2
21	93-8633	Pipe - Intake	1

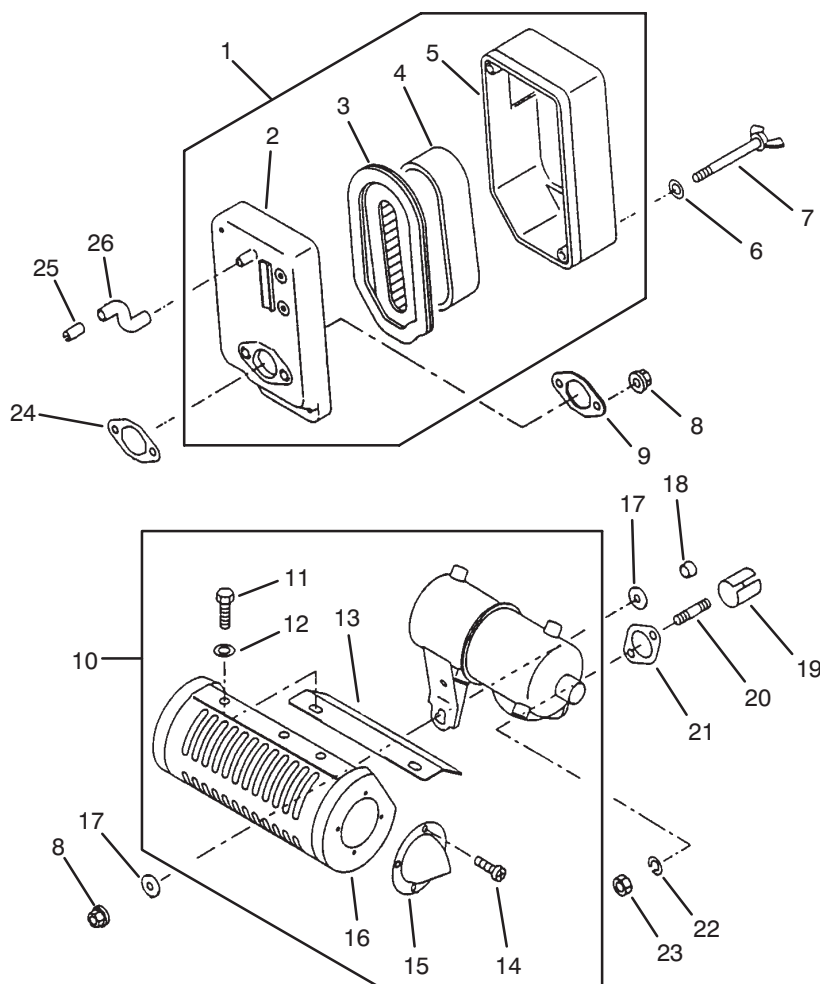

T-1620

ENGINE AIR FILTER & MUFFLER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-8634	Air Filter Assembly (Incl. Ref. #2-5)	1	13	93-8646	Cover - Muffler	1
2	93-8635	Case - Air Filter	1	14	93-8647	Screw	4
3	93-8636	Element - Air Filter	1	15	93-8648	Pipe - Tail	1
4	93-8637	Element - Air Filter	1	16	93-8649	Cover - Muffler	1
5	93-8638	Cap - Air Filter	1	17	93-8650	Washer	2
6	93-8639	Washer	22	18	93-8651	Collar	1
7	93-8640	Bolt	2	19	93-8652	Pipe - Exhaust	1
8	93-8631	Nut	3	20	93-8653	Bolt - Stud	2
9	93-8642	Plate - Air Filter	1	21	93-8654	Gasket - Muffler	1
10	93-8643	Muffler Assembly (Incl. Ref. #11-16)	1	22	93-8655	Washer - Spring	2
11	93-8644	Bolt	4	23	93-8656	Nut - Hex.	2
12	93-8645	Washer	4	24	93-8657	Gasket - Air Filter	1
				25	93-8658	Pipe	1
				26	93-8659	Tube	1

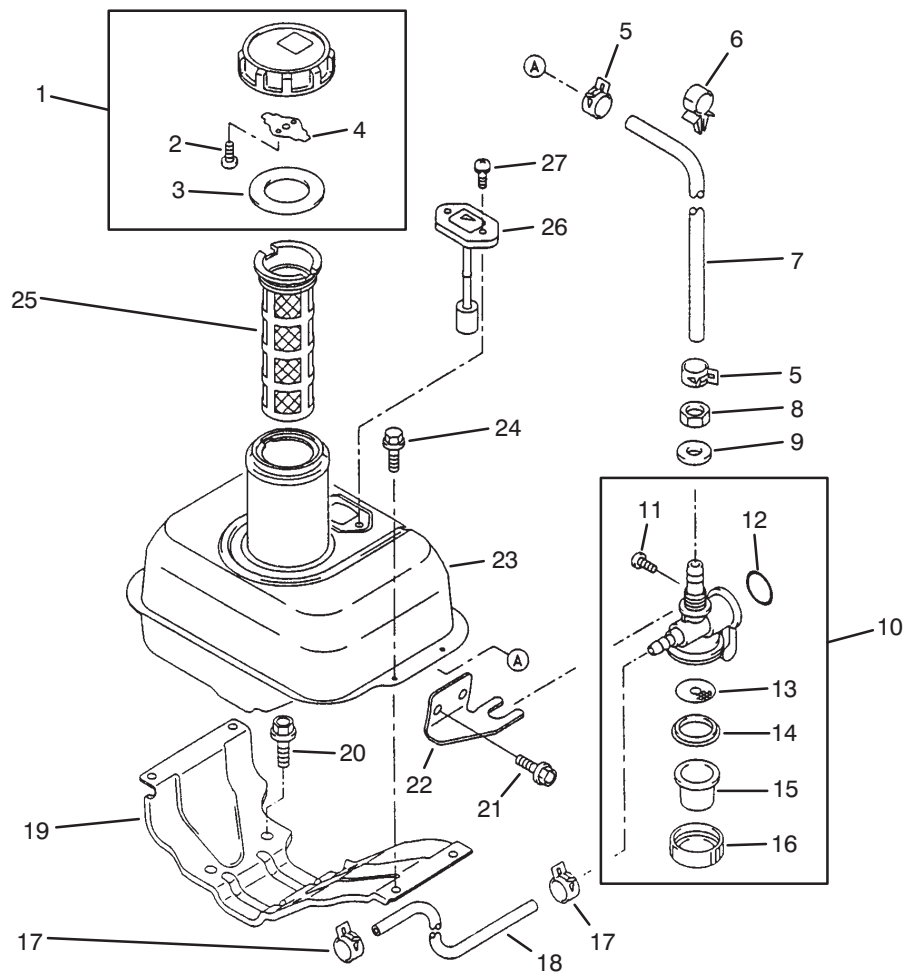


T-1621

ENGINE FUEL TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-8660	Fuel Cap Assembly (Incl. Ref. #2-4)	1
2	93-8661	Screw	2
3	93-8662	Gasket	1
4	93-8663	Spring	1
5	93-8664	Clamp	2
6	93-8665	Clamp	1
7	93-8666	Tube	1
8	93-8667	Nut	1
9	93-8668	Washer	1
10	93-8669	Tap Assembly (Incl. Ref. #11-16)	1
11	93-8670	Screw	1
12	93-8671	Seal - O-Ring	1
13	93-8672	Filter - Tap	1

Ref. No.	Part No.	Description	No. Used
14	93-8673	Gasket	1
15	93-8674	Cup - Tap	1
16	93-8675	Nut	1
17	93-8676	Clamp	2
18	93-8677	Tube	1
19	93-8678	Bracket - Tank	1
20	93-8679	Bolt - Flanged	4
21	93-8680	Bolt - Flanged	2
22	93-8681	Bracket	1
23	93-8682	Tank - Fuel	1
24	93-8683	Bolt	4
25	93-8684	Filter - Fuel	1
26	93-8685	Gauge - Fuel	1
27	93-8686	Screw	2

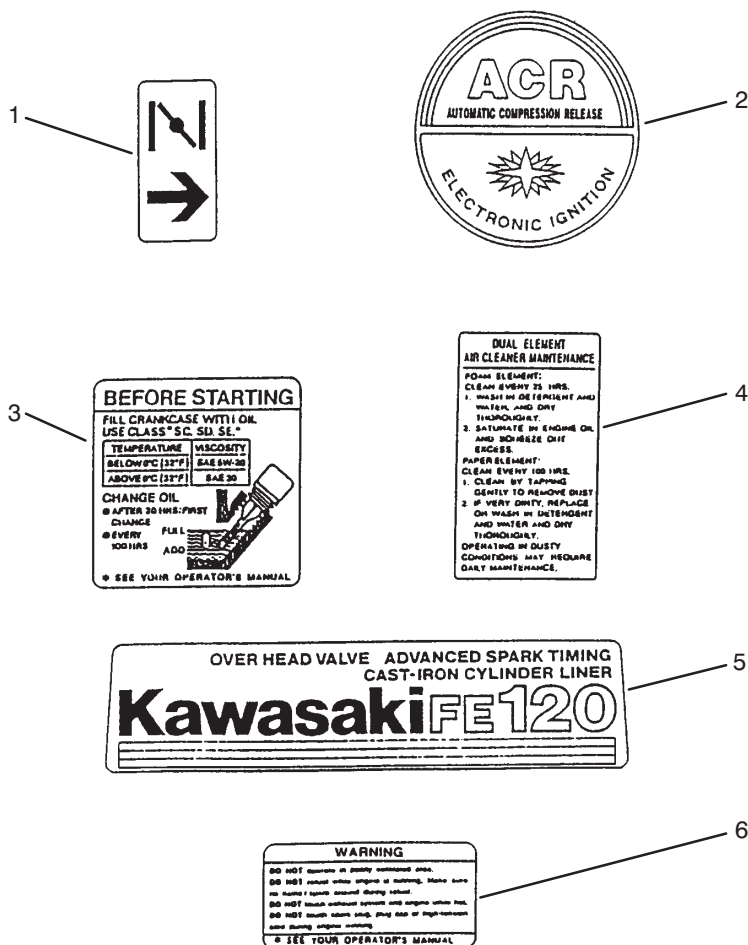

T-1622

ENGINE DECALS ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-8687	Decal - Choke	1	4	93-8690	Decal - Maintenance	1
2	93-8688	Decal - Recoil	1	5	93-8691	Decal - Model	1
3	93-8689	Decal - Instruction	1	6	93-8692	Decal - Warning	1

INTERNATIONAL PARTS REFERENCE

EUROPEAN PARTS

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	EUROPEAN
Decal Danger	Engine	88—7620	92—4810
Decal Danger	Bellcrank Cover	67—5360	93—7273
Decal Reel Engagement	Reel Drive Cover	65—7660	92—4814
Decal Control Panel	Control Panel	93—6084	93—7347
Decal Warning	Frame	55—4300	93—7347
Decal Warning	Grass Shield	62—5070	93—8064
Decal Warning	Side Plate	88—8950	93—9356
Decal Hot Surface	Engine	63—8440	93—8069
Decal Service	Grass Shield	93—6098	FRENCH 93—9391 GERMAN 93—9393 SPANISH 93—9392 FINNISH 93—7287 DANISH 93—7285 DUTCH 93—7286 ITALIAN 93—7288 SWEDISH 93—7291 PORTUGUESE 93—7290 NORWEGIAN 93—7289

JAPANESE PARTS KIT NO. 88—7980

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	JAPANESE
Decal Danger	Engine	88—7620	92—4813
Decal Danger	Bellcrank Cover	67—5360	84—7280
Decal Reel Engagement	Reel Drive Cover	65—7660	92—4817
Decal Control Panel	Control Panel	93—6084	92—4829
Decal Warning	Frame	55—4300	84—2940
Decal Warning	Grass Shield	62—5070	84—6560
Decal Warning	Side Plate	88—8950	93—9389
Decal Hot Surface	Engine	63—8440	83—2560
Decal Service	Grass Shield	93—6098	93—9394

TORO PART NUMBER INDEX

3317–366 Rev. A

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3–5787	Spring	12 2 1	65–8670	Adjuster – Frame	2 39 2
8–2520	Support – Comb	14 4 1	65–8680	Washer – Thrust	1 2 2
8–2530	Comb – Urethane	14 5 1	65–8690	Screw – Adjusting	2 41 2
11–0070	Assembly – Comb, Scraper	14 6 1	65–8700	Band – Brake	9 25 1
11–9030	Bolt – Shoulder	11 13 3	65–8710	Flangette	6 22 2
11–9030	Bolt – Shoulder	12 14 2	65–8720	Closure	6 29 2
11–9030	Bolt – Shoulder	9 14 1	65–8730	Clamp – Bearing	6 30 4
12–9140	Decal	15 1 1	65–8770	Bushing	11 10 4
29–9080	Handle	15 3 1	65–8910	Pulley – Countershaft	9 32 1
29–9090	Hose – Handle	15 4 1	65–8960	Boot – Clutch	3 28 1
33–1000	Scraper – Brush	14 2 1	65–8970	Knob – Black	12 29 1
36–4310	Brush	15 5 1	65–8971	Knob – Red	12 20 1
36–7260	Bar – Cutoff	5 7 1	65–9080	Belt	9 35 1
38–7820	Bearing – Ball	6 41 2	65–9120	Pulley – Differential	7 9 1
38–7820	Bearing – Ball	11 44 2	66–2000	Decal – Noise	12 30 1
38–7820	Bearing – Ball	3 44 1	66–2921	Washer – Friction	12 5 2
38–7820	Bearing – Ball	9 45 2	67–5360	Decal – Danger (English)	11 26 1
48–7700	Screw – Cap Hex. Hd.	11 22 6	71–1550	Assembly – Wiehle Roller	13 5 1
48–9460	Screw – Cap Hex. Hd.	11 40 1	86–7130	Spacer	6 10 2
51–0880	Tool – Bedknife Screw	15 1 1	86–7130	Spacer – Short	9 26 1
52–2860	Washer	5 20 4	86–7140	Spacer – Long	9 31 1
52–2890	Bushing	2 42 2	87–5490	Switch	11 16 1
52–2900	Washer – Poly	5 14 4	88–6790	Wiehle Roller Assembly	1 27 1
52–3170	Assembly – Roller	13 3 1	88–7090	Spacer – LH	2 * 1
52–3180	Bearing	2 28 2	88–7100	Spacer – RH	2 46 1
52–3180	Bearing – Roller	13 1 2	88–7110	Rod – Frame Support	2 38 1
52–3590	Assembly – Swaged Roller	13 4 1	88–7150	Key – Square	3 10 2
55–4300	Decal – Warning (English)	2 35 2	88–7170	Lever – Clutch	3 24 1
57–4910	Screw – Special	5 13 13	88–7190	Spacer – Pulley Support	6 44 2
62–5070	Decal – Shield	5 9 1	88–7190	Spacer – Pulley Support	4 59 1
63–8440	Decal – Hot (English)	11 18 1	88–7200	Washer – Flat	6 43 2
63–9510	Bushing Assembly	2 43 2	88–7200	Washer – Flat	3 46 1
65–6200	Belt – Reel Drive	3 41 1	88–7200	Washer – Flat	9 46 1
65–6210	Belt	6 12 2	88–7230	Housing – Countershaft	9 1 1
65–6220	Cover – Bearing	6 17 1	88–7240	Cover – Box Front	9 37 1
65–6270	Bolt – Bedbar	5 15 2	88–7250	Cover – Box Rear	9 38 1
65–6290	Spring – Clutch Detent	3 20 1	88–7280	Drum Assembly	7 1 2
65–6360	Support – Spring	1 5 2	88–7350	Spacer – Pulley Support	11 42 1
65–6380	Collar – Thrust	1 3 2	88–7380	Spacer – Pulley Support	10 57 1
65–6400	Spring – Compression	1 4 2	88–7450	Spacer	12 24 2
65–6450	Bracket – Shield LH	5 2 1	88–7470	Housing – LH	6 4 1
65–6460	Bracket – Shield RH	5 3 1	88–7490	Housing – RH	6 * 1
65–6570	Washer	6 15 2	88–7510	Shaft – Drum RH	7 * 1
65–6590	Flangette	6 20 2	88–7520	Shaft – Drum LH	7 4 1
65–6660	Pulley	6 13 2	88–7530	Spacer	6 1 2
65–6700	Flangette	9 6 1	88–7540	Washer – Backup	6 2 2
65–6710	Flangette	9 8 1	88–7550	Pulley – RH	6 * 1
65–6720	Plate – Screw	9 5 1	88–7560	Pulley – LH	6 3 1
65–6760	Housing – Bearing	9 27 1	88–7640	Shaft – Drum	7 3 1
65–6800	Boot – Differential	9 43 1	88–7670	Base – Engine	1 6 1
65–6810	Support – Brake	9 21 2	88–7680	Cover – Drum Belt LH	6 36 1
65–6850	Key	9 33 1	88–7690	Cover – Drum Belt RH	6 * 1
65–6901	Strip – Cover Seal	9 50 1	88–7700	Cover – Reel Drive	3 50 1
65–6902	Strip – Cover Seal	10 51 1	88–7710	Seal – Countershaft	9 34 1
65–6903	Strip – Cover Seal	10 52 1	88–7720	Washer – Wave	3 7 1
65–6940	Clutch – Jaw Driver	3 11 1	88–7770	Strip – Seal Front	3 51 1
65–6970	Seal – Felt	3 18 1	88–7780	Strip – Seal Rear	3 52 1
65–7131	Trim – Groomer Arm Cover	3 31 1	88–7790	Strip – Seal Upper	4 53 1
65–7190	Cover – Groomer Arm	3 30 1	88–7800	Strip – Seal Lower	4 54 1
65–7230	Basket – Grass	7 13 1	88–7810	Seal Strip – Drum Cover	6 37 2
65–7510	Grommet – Handle	1 12 2	88–7830	Clutch & Pulley Assembly	3 12 1
65–7660	Decal – Reel Engagement	4 56 1	88–7840	Pulley & Drive Assembly	3 42 1
65–8260	Spacer – Engine Shaft	11 12 1	88–7850	Idler Pulley Assembly	6 40 2
65–8270	Washer	11 39 1	88–7850	Idler Pulley Assembly	3 43 1
65–8290	Standoff – Cover	3 36 2	88–7860	Spacer	3 25 1
65–8320	Bar	15 1 1	88–7870	Idler Pulley Assembly	9 44 1
65–8340	Scraper – Wiehle Roller	14 7 1	88–7880	Bearing	6 21 2
65–8360	Scraper – Smooth	14 1 1	88–7890	Idler Pulley Assembly	11 43 1
65–8570	Rod – Grass Catcher	1 26 2	88–7960	Bracket – Throttle Cable	11 27 1
65–8610	Lever – Brake	9 19 1	88–7970	Clip	10 59 1
65–8640	Housing – Bearing	6 27 1	88–8950	Decal – Warning, Belt	2 33 3
65–8640	Housing – Bearing	3 34 1	92–7302	Nut – Bearing Lock	6 24 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
92-8013	Housing - Clutch	3 1 1	93-8511	Seal - Oil	16 12 2
92-8914	Bolt - Tapered Face	2 36 4	93-8512	Pin	16 13 2
92-9212	Pulley - Input Shaft	9 16 1	93-8513	Plug - Drain	16 14 2
92-9216	Pulley - Input Drive	11 11 1	93-8514	Gasket - Drain Plug	16 15 2
92-9218	V-Belt, Matched Set	11 38 1	93-8515	Crankcase	16 16 1
93-1448	Cover Bracket	10 53 1	93-8516	Pin	16 17 2
93-4262	Bedknife - Micro	5 * 1	93-8517	Bearing - Ball	16 18 3
93-4263	Bedknife - Tournament	5 * 1	93-8518	Crankshaft Assembly	16 19 1
93-4264	Bedknife - 1/8	5 19 1	93-8519	Gear - Helical	16 20 1
93-6000	Pin - Handle Pivot	12 36 2	93-8520	Cover - Crankcase	16 21 1
93-6001	Handle	12 38 1	93-8521	Bolt - Flanged	16 22 7
93-6002	Cable Assembly - Link	11 36 1	93-8522	Seal - O-Ring	16 23 2
93-6003	Lever - Clutch	11 35 1	93-8523	Cap - Oil Filler	16 24 2
93-6011	Spring - Torsion	11 14 1	93-8524	Stud	16 25 1
93-6012	Spring - Torsion, Clutch	11 32 1	93-8525	Gasket - Crankcase	16 26 1
93-6013	Shield - Belt	11 33 1	93-8526	Key	16 27 1
93-6014	Lever	11 9 1	93-8527	Bolt - Rod	16 28 2
93-6015	Bracket - Clutch	11 17 1	93-8528	Connecting Rod Assy.	16 29 1
93-6016	Washer - Retaining	12 4 1	93-8529	Valve - Exhaust	17 1 1
93-6017	Lever - Throttle	12 6 1	93-8530	Spring - Valve	17 2 2
93-6018	Bracket - Skid, Clutch	12 8 1	93-8531	Retainer - Spring	17 3 2
93-6019	Bracket - Clutch	12 28 1	93-8532	Valve - Intake	17 4 1
93-6021	Bracket - Skid, Brake	12 16 1	93-8533	Nut	17 5 2
93-6022	Bracket - Brake	12 17 1	93-8534	Nut	17 6 2
93-6024	Bushing - Handle Support	1 14 2	93-8535	Arm - Rocker	17 7 2
93-6025	Rear Frame W.A.	1 10 1	93-8536	Bolt	17 8 2
93-6029	Pin - Ring	1 16 2	93-8537	Guide	17 9 1
93-6034	Harness - Wire, Module	11 24 1	93-8538	Rod - Push	17 10 2
93-6036	Console	12 32 1	93-8539	Tappet	17 11 2
93-6037	Arm - Handle RH	1 * 1	93-8540	Pin	17 12 2
93-6038	Arm - Handle LH	1 13 1	93-8541	Spring	17 13 1
93-6045	Cover - Bellcrank	11 1 1	93-8542	Pin	17 14 1
93-6046	Bracket - Console RH	12 10 1	93-8543	Decompressor	17 15 1
93-6047	Bracket - Console LH	12 19 1	93-8544	Camshaft Assembly	17 16 1
93-6048	Bracket - Height of Cut, RH	1 * 1	93-8545	Key	17 17 1
93-6049	Bracket - Height of Cut, LH	1 25 1	93-8546	Switch	18 41 1
93-6051	Screw - Height of Cut	1 20 2	93-8547	Coil - Ignition	18 2 1
93-6053	Bedbar	5 12 1	93-8548	Bolt - Flanged	18 3 2
93-6055	Differential Assembly	7 8 1	93-8549	Screw	18 4 3
93-6056	Shaft - Power	3 9 1	93-8550	Bolt - Flanged	18 5 10
93-6057	Lever - Clutch	12 25 1	93-8551	Housing - Fan	18 6 1
93-6058	Lever - Brake	12 18 1	93-8552	Recoil Starter Assy.	18 7 1
93-6064	Seal - Grass Catcher	2 34 1	93-8553	Screw	18 8 1
93-6068	Front Frame Tube Assembly	2 37 1	93-8554	Pawl - Recoil	18 9 2
93-6069	Grass Shield Assembly	5 1 1	93-8555	Spring - Return	18 10 2
93-6073	Retainer	11 4 1	93-8556	Reel - Recoil	18 11 1
93-6074	Stud	11 3 1	93-8557	Spring	18 12 1
93-6081	Cable - Clutch	12 12 1	93-8558	Grip	18 13 1
93-6082	Cable - Brake	12 15 1	93-8559	Case - Recoil	18 14
93-6083	Screw	12 13 10	93-8560	Rope	18 15 1
93-6084	Decal - Control Panel	12 31 1	93-8561	Ring - Retaining	18 16 1
93-6085	Decal - Throttle	12 27 1	93-8562	Guide - Pawl	18 17 1
93-6087	Reel Assembly - 8 Blade	5 * 1	93-8563	Shroud - Engine	18 18 1
93-6088	Engine Assembly	11 23 1	93-8564	Collar	18 19 1
93-6090	Arm - Height of Cut	1 24 2	93-8565	Shroud - Engine	18 20 1
93-6093	Side Plate Assembly RH	1 1 1	93-8566	Bolt - Flanged	18 21 1
93-6094	Side Plate Assembly LH	1 19 1	93-8567	Pulley - Recoil	18 22 1
93-6097	Reel Assembly - 11 Blade	5 11 1	93-8568	Nut	18 23 1
93-6098	Decal - Service	5 10 1	93-8569	Washer	18 24 1
93-6099	Washer	11 31 1	93-8570	Flywheel	18 25 1
93-7348	Decal - Danger, Fuel	11 19 1	93-8571	Key	18 26 1
93-8500	Ring - Retaining	16 1 2	93-8572	Fan	18 27 1
93-8501	Pin - Piston	16 2 1	93-8573	Collar	18 28 3
93-8502	Piston	16 3 1	93-8574	Washer	18 29 3
93-8503	Piston Ring Set	16 4 1	93-8575	Bolt - Flanged	18 30 3
93-8504	Gasket - Head	16 5 1	93-8576	Clamp	18 31 1
93-8505	Head - Cylinder	16 6 1	93-8577	Screw - Pan Hd.	18 32 1
93-8506	Bolt - Flanged	16 7 4	93-8578	Igniter	18 33 1
93-8507	Bolt - Flanged	16 8 4	93-8579	Washer	18 34 1
93-8508	Case - Rocker	16 9 1	93-8580	Bracket	18 35 1
93-8509	Gasket - Rocker	16 10 2	93-8581	Lead - Wire	18 36 1
93-8510	Breather	16 11 1	93-8582	Grommet	18 37 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
93—8583	Clamp	18 38 1	93—8655	Washer — Spring	21 22 2
93—8584	Plug — Spark	18 39 1	93—8656	Nut — Hex.	21 23 2
93—8585	Cap — Spark Plug	18 40 1	93—8657	Gasket — Air Filter	21 24 1
93—8586	Terminal	18 41 1	93—8658	Pipe	21 25 1
93—8587	Panel — Control	19 1 1	93—8659	Tube	21 26 1
93—8588	Spring	19 2 2	93—8660	Fuel Cap Assembly	22 1 1
93—8589	Bolt	19 3 2	93—8661	Screw	22 2 2
93—8590	Washer	19 4 1	93—8662	Gasket	22 3 1
93—8591	Spring	19 5 1	93—8663	Spring	22 4 1
93—8592	Plate	19 6 1	93—8664	Clamp	22 5 2
93—8593	Spring	19 7 1	93—8665	Clamp	22 6 1
93—8594	Spacer	19 8 1	93—8666	Tube	22 7 1
93—8595	Nut	19 9 1	93—8667	Nut	22 8 1
93—8596	Screw — Pan Hd.	19 10 1	93—8668	Washer	22 9 1
93—8597	Nut	19 11 1	93—8669	Tap Assembly	22 10 1
93—8598	Lever	19 12 1	93—8670	Screw	22 11 1
93—8599	Control Panel Assy.	19 13 1	93—8671	Seal — O—Ring	22 12 1
93—8600	Bolt — Flanged	19 14 2	93—8672	Filter — Tap	22 13 1
93—8601	Spring	19 15 1	93—8673	Gasket	22 14 1
93—8602	Rod — Governor	19 16 1	93—8674	Cup — Tap	22 15 1
93—8603	Arm — Governor	19 17 1	93—8675	Nut	22 16 1
93—8605	Spring — Governor	19 19 1	93—8676	Clamp	22 17 2
93—8606	Bolt	19 20 1	93—8677	Tube	22 18 1
93—8607	Pin — Snap	19 21 1	93—8678	Bracket — Tank	22 19 1
93—8608	Washer	19 22 1	93—8679	Bolt — Flanged	22 20 4
93—8609	Arm — Pivot	19 23 1	93—8680	Bolt — Flanged	22 21 2
93—8610	Sleeve	19 24 1	93—8681	Bracket	22 22 1
93—8611	Governor Assembly	19 25 1	93—8682	Tank — Fuel	22 23 1
93—8612	Washer	19 26 1	93—8683	Bolt	22 24 4
93—8613	Gasket — Carburetor	20 1 3	93—8684	Filter — Fuel	22 25 1
93—8614	Insulator	20 2 1	93—8685	Gauge — Fuel	22 26 1
93—8615	Carburetor Assembly	20 3 1	93—8686	Screw	22 27 2
93—8616	Valve — Throttle	20 4 1	93—8687	Decal — Choke	23 1 1
93—8617	Valve — Choke	20 5 1	93—8688	Decal — Recoil	23 2 1
93—8618	Jet — Pilot #42	20 6 1	93—8689	Decal — Instruction	23 3 1
93—8619	Screw Assembly	20 7 1	93—8690	Decal — Maintenance	23 4 1
93—8620	Screw — Assembly	20 8 1	93—8691	Decal — Model	23 5 1
93—8621	Nozzle — Main	20 9 1	93—8692	Decal — Warning	23 6 1
93—8622	Jet — Main #70	20 10 1	93—9001	Bellcrank Cover Assembly	11 * 1
93—8623	Float Assembly	20 11 1	93—9014	Pin — Actuator	3 19 1
93—8624	Gasket	20 12 1	93—9023	Cable — Throttle	12 1 1
93—8625	Float Chamber Assy.	20 13 1	233—69	Knob	3 29 1
93—8626	Screw Assembly	20 14 1	237—160	Plug	4 55 1
93—8627	Bolt	20 15 1	2410—18	Plug	15 2 1
93—8628	Bolt — Stud	20 16 2	2412—21	Clip — Cable	11 28 1
93—8629	Clamp	20 17 1	2412—93	Clamp — R	11 20 1
93—8630	Tube	20 18 1	2412—139	Clamp — Hose	9 41 1
93—8631	Nut	19 18 1	2412—140	Clamp — Hose	9 42 1
93—8631	Nut	20 19 2	251—318	Bearing — Ball	3 4 1
93—8631	Nut	21 8 3	251—336	Bearing — Ball	3 13 2
93—8632	Bolt — Stud	20 20 2	251—338	Bearing	6 9 2
93—8633	Pipe — Intake	20 21 1	251—338	Bearing	9 30 1
93—8634	Air Filter Assembly	21 1 1	251—342	Bearing	6 26 1
93—8635	Case — Air Filter	21 2 1	251—342	Bearing — Self—Aligning	3 37 1
93—8636	Element — Air Filter	21 3 1	251—343	Bearing	9 9 1
93—8637	Element — Air Filter	21 4 1	253—84	Seal—Oil	7 2 2
93—8638	Cap — Air Filter	21 5 1	253—96	Seal	6 33 1
93—8639	Washer	21 6 22	253—96	Seal	3 35 1
93—8640	Bolt	21 7 2	253—118	Seal — Oil	3 6 1
93—8642	Plate — Air Filter	21 9 1	253—160	Seal	6 8 4
93—8643	Muffler Assembly	21 10 1	253—160	Seal	9 29 2
93—8644	Bolt	21 11 4	253—161	Seal — V—Ring	6 16 2
93—8645	Washer	21 12 4	253—163	Seal	6 25 1
93—8646	Cover — Muffler	21 13 1	253—163	Seal	3 39 1
93—8647	Screw	21 14 4	256—206	Bushing	12 39 2
93—8648	Pipe — Tail	21 15 1	283—75	Pin — Clevis	9 20 1
93—8649	Cover — Muffler	21 16 1	302—5	Fitting — Grease	13 2 2
93—8650	Washer	21 17 2	302—5	Fitting — Grease	3 5 2
93—8651	Collar	21 18 1	302—5	Fitting — Grease	11 8 2
93—8652	Pipe — Exhaust	21 19 1	302—5	Fitting — Grease	6 11 1
93—8653	Bolt — Stud	21 20 2	302—5	Fitting — Grease	2 29 2
93—8654	Gasket — Muffler	21 21 1	302—11	Fitting — Grease	6 23 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
302-19	Fitting - Grease	6 7 2	3254-8	Washer - Lock I.T.L.W.	4 58 4
302-55	Fitting - Grease	9 7 1	3255-8	Washer - Lock	2 30 4
302-64	Fitting - Grease	9 28 1	3255-9	Washer - External Lock	11 21 1
321-2	Screw - Cap Hex. Hd.	9 39 3	3256-2	Washer - Flat	11 2 1
321-3	Screw - Cap Hex. Hd.	5 4 4	3256-22	Washer - Flat	5 5 6
321-3	Screw - Cap Hex. Hd.	10 55 2	3256-22	Washer - Flat	10 58 2
321-4	Screw - Cap Hex. Hd.	3 27 1	3256-23	Washer - Flat	7 10 4
321-8	Screw - Cap Hex. Hd.	12 9 1	3256-23	Washer - Flat	12 23 2
321-11	Screw - Cap Hex. Hd.	6 38 8	3256-24	Washer - Flat	9 4 4
321-20	Screw - Cap Hex. Hd.	4 57 4	3256-24	Washer - Flat	1 9 6
322-2	Screw - Cap Hex. Hd.	2 31 4	3256-24	Washer - Flat	12 35 2
322-3	Screw - Cap Hex. Hd.	6 18 10	3256-56	Washer - Flat	11 7 10
322-3	Screw - Cap Hex. Hd.	9 47 1	3257-32	Key	7 12 2
322-3	Screw - Cap Hex. Hd.	3 48 1	3257-32	Key	9 18 1
322-5	Screw - Cap Hex. Hd.	3 2 3	3259-15	Screw - Drive	3 23 1
322-5	Screw - Cap Hex. Hd.	6 5 4	3272-6	Pin - Cotter	9 23 2
322-5	Screw - Cap Hex. Hd.	7 5 8	3272-8	Pin - Cotter	9 24 1
322-5	Screw - Cap Hex. Hd.	9 36 4	3289-23	Screw - Flat Hd.	3 32 2
322-9	Screw - Cap Hex. Hd.	12 7 4	3290-378	Tie - Cable	12 40 2
322-9	Screw - Cap Hex. Hd.	1 17 2	3290-414	Washer	3 26 1
322-9	Screw - Cap Hex. Hd.	11 25 4	3290-467	Pin - Cotter, Hair	1 15 2
323-4	Screw - Cap Hex. Hd.	11 5 2	3290-485	Washer - Wave	3 40 1
323-4	Screw - Cap Hex. Hd.	1 18 12	3295-15	Rivet	14 3 11
323-5	Screw - Cap Hex. Hd.	9 2 4	3296-28	Nut - Lock Insert	12 37 2
323-5	Screw - Cap Hex. Hd.	1 7 4	3296-29	Nut - Lock	3 3 2
323-7	Screw - Cap Hex. Hd.	6 35 2	3296-29	Nut - Lock	6 6 4
323-11	Screw - Cap Hex. Hd.	11 34 1	3296-29	Nut - Lock	1 11 2
323-18	Screw - Cap Hex. Hd.	2 45 2	3296-29	Nut - Lock	7 11 4
323-34	Screw - Cap Hex. Hd.	12 33 2	3296-29	Nut - Lock	12 26 4
3210-7	Screw - Cap Hex. Hd.	12 21 2	3296-29	Nut - Lock	11 30 4
3218-2	Nut - Jam	9 13 3	3296-39	Nut	3 33 2
3218-2	Nut - Jam	1 22 2	3296-39	Nut - Lock	1 23 2
3218-20	Nut - Jam	11 15 2	3296-39	Nut - Lock	6 34 2
3219-1	Nut - Hex	14 9 4	3296-39	Nut - Lock	11 46 1
3219-14	Nut	15 3 1	3296-42	Nut - Lock	5 6 4
3220-5	Nut - Jam	3 17 1	3296-42	Nut - Lock	12 11 2
3220-6	Nut - Jam	2 40 2	3296-42	Nut - Lock	9 15 1
3231-5	Screw - Carriage	2 32 2	3296-42	Nut - Lock	3 21 1
3242-4	Screw - Set	1 21 2	3296-42	Nut - Lock	11 41 3
3253-3	Washer - Lock	3 22 1	3296-56	Nut - Lock	12 3 1
3253-3	Washer - Lock	9 40 5	3296-57	Nut	6 14 2
3253-4	Washer - Lock	7 6 8	3296-57	Nut - Lock	9 17 1
3253-4	Washer - Lock	9 12 8	32120-11	Ring - Retaining	3 8 1
3253-4	Washer - Lock	6 19 10	32120-42	Ring - Retaining	11 45 1
3253-4	Washer - Lock	3 47 2	32120-42	Ring - Retaining	9 48 1
3253-4	Washer - Spring Lock	12 22 2	32120-42	Ring - Snap	6 42 2
3253-4	Washer - Spring Lock	11 37 6	32120-42	Ring - Snap	3 45 1
3253-21	Washer - Lock	9 3 4	32122-22	Screw - Phill. Truss Hd.	15 2 1
3253-21	Washer - Spring Lock	11 6 2	32128-48	Nut - Flange	5 16 2
3253-21	Washer - Spring Lock	1 8 16	32144-73	Screw - Hex. Washer Hd.	11 29 1
3253-21	Washer - Spring Lock	12 34 2	32144-73	Screw - Self Tapping	5 8 5
3254-4	Washer - Lock I.T.L.W.	3 16 1	32151-89	Ring - Retaining	3 14 1
3254-6	Washer - Int. Tooth Lock	2 44 2	32151-92	Ring - Retaining	3 38 1
3254-6	Washer - Lock I.T.L.W.	9 22 2	32151-95	Ring - Retaining	3 15 2
3254-8	Washer - Lock I.T.L.W.	14 8 4			
3254-8	Washer - Lock I.T.L.W.	6 39 8			

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Greensmaster 1000 has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame side plate. In any correspondence concerning the Greensmaster 1000, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the Greensmaster 1000.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Frame Assembly	1—2	Special Tools	15
Reel Drive Assembly	3—4	Engine Crankcase Assembly	16
Reel Assembly	5	Engine Camshaft & Valves Assembly	17
Drum Drive Assembly	6	Engine Ignition Assembly	18
Drum & Basket Assembly	7	Engine Governor Assembly	19
Differential Assembly		Engine Carburetor Assembly	20
Peerless Model No. 100—111	8	Engine Air Filter & Muffler Assembly	21
Countershaft Assembly	9—10	Engine Fuel Tank Assembly	22
Engine & Bellcrank Assembly	11	Engine Decals Assembly	23
Handle Assembly	12	International Parts Reference	24
Cutting Unit Roller Options	13	TORO Part Number Index	25—28
Scraper Options	14		

MAINTENANCE RECORD

[illegible]

[illegible]

