 




MODEL NO. 71182-5910001 & UP MODEL NO. 71200-5910001 & UP	PARTS CATALOG
1232XL LAWN TRACTOR	

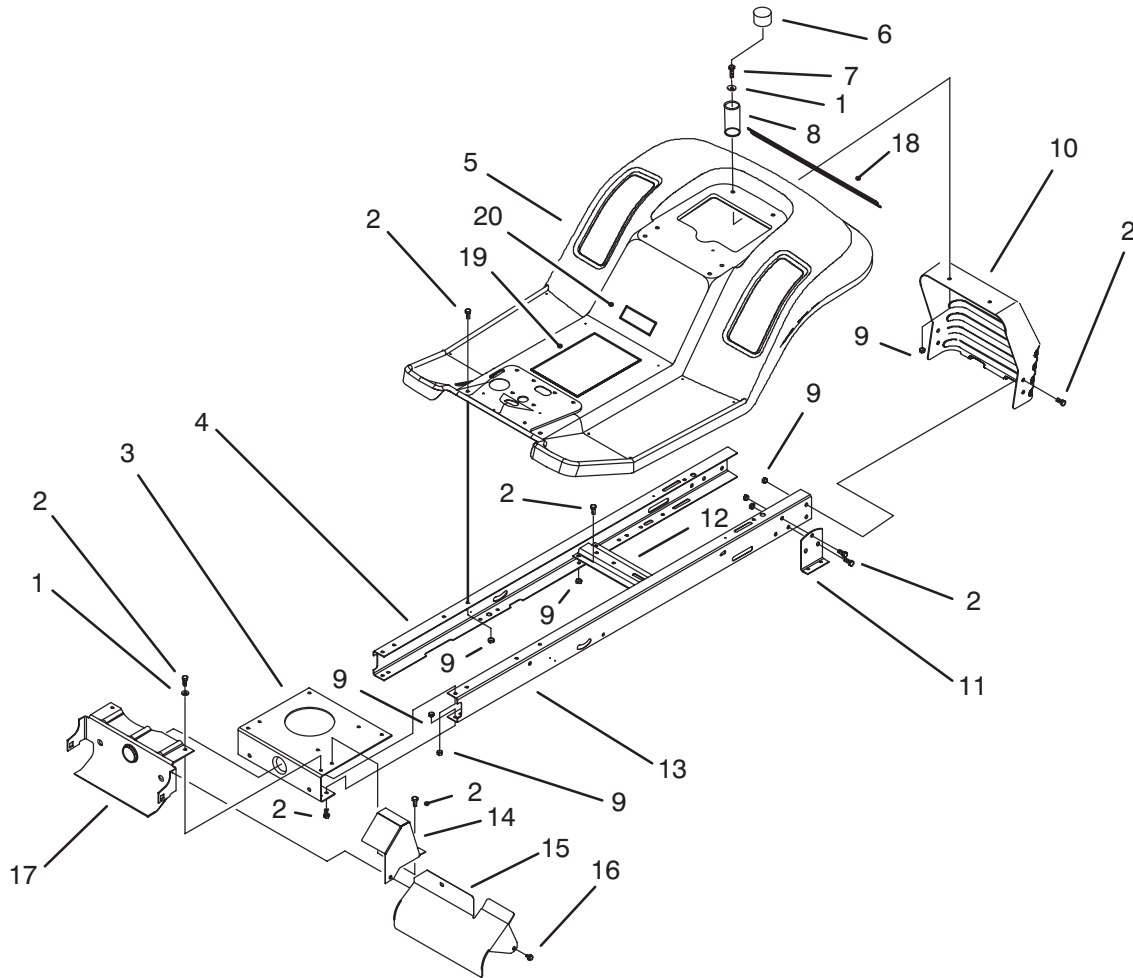


C-1307A

FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3256-23	Washer - Flat	4
2	322-3	Screw - Hex Hd. Cap	22
3	88-4630	Plate - Engine Mount	1
4	88-4650	Rail - R.H. Frame	1
5	88-3840-01	Body - Rear	1
6	701178	Cap - Protector	2
7	322-5	Screw - Hex Hd. Cap	2
8	88-6220	Spring - Compression	2
9	3296-29	Nut - Lock	24
10	88-3940	Panel - Rear Hitch	1
11	88-5260	Bracket - Transaxle Mtg.	2
12	88-4620	Bracket - Idler Pivot	1

Ref. No.	Part No.	Description	No. Used
13	88-4660	Rail - L.H. Frame	1
14	88-4960	Shield - Exhaust Pipe	1
15	88-6290	Shield - Muffler	1
16	32104-76	Screw - Thread Tapping	1
17	88-5120	Support - Front Axle	1
18	92-2489	Decal - Rear Body	1
19	92-2484	Decal - Instruction (Model No. 71182 Only)	1
*	93-6675	Decal - Instruction (Model No. 71200 Only)	1
20	117242	Decal - Made in USA (Model No. 71182 Only)	1

 *Not Illustrated

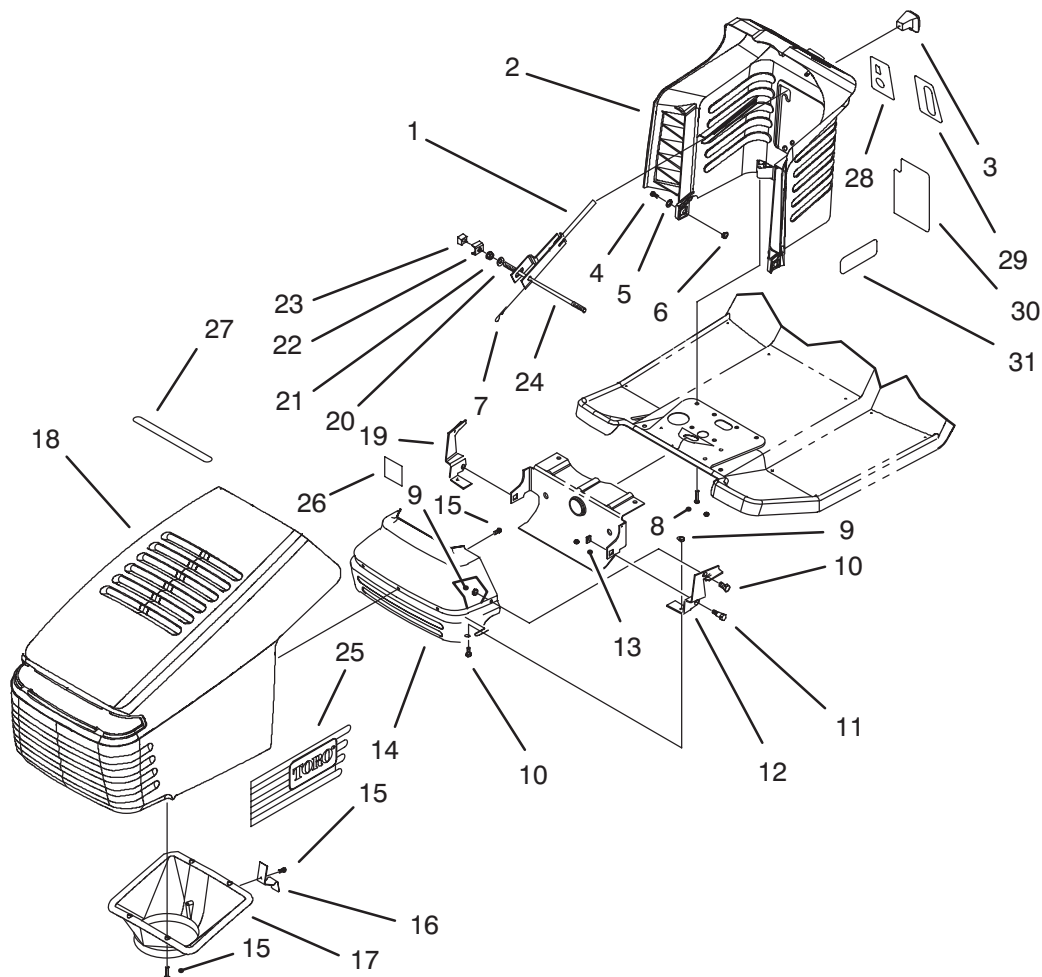


C-1308

HOOD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88-5190	Lever - Deck Engage	1
2	93-0303	Tower - Steering	1
3	62-1292	Knob - Engage Lever	1
4	322-3	Screw - Hex Hd. Cap	2
5	3256-23	Washer - Flat	2
6	3296-29	Nut - Lock	2
7	3290-307	Pin - Cotter	2
8	46-8091	Screw - Plastite	2
9	3296-42	Nut - Lock	4
10	321-2	Screw - Hex Hd. Cap	4
11	28-0540	Bolt - Shoulder	2
12	88-6050	Bracket - Hood Pivot L.H.	1
13	3290-496	Nut - Retained	2
14	88-3930	Shield - Heat	1
15	46-8090	Screw - Plastite	8
16	88-4220	Latch - Hood	1
17	88-4050	Duct - Hood Air	1
18	92-8650	Hood	1
19	88-6040	Bracket - Hood Pivot R.H.	1
20	3256-24	Washer - Flat	2
21	32128-43	Nut - Flange	2

Ref. No.	Part No.	Description	No. Used
22	88-4160	Clamp - Pivot Rod	2
23	88-4140	Nut - Wedge	2
24	88-4170	Rod - Tower Pivot	1
25	92-2468	Decal - Hood L.H.	1
*	92-2467	Decal - Hood R.H.	1
26	92-5782	Patch - Heat Tape	1
27	92-5748	Decal - Air Duct	1
28	92-2478	Decal - Ignition (Model No. 71182)	1
*	92-5732	Decal - Ignition (Model No. 71200)	1
29	92-2461	Decal - Throttle (Model No. 71182)	1
*	92-5730	Decal - Throttle (Model No. 71200)	1
30	92-2462	Decal - Deck Engage (Model No. 71182)	1
*	93-6673	Decal - Deck Engage (Model No. 71200)	1
31	92-2480	Decal - Tower 1232XL	2

 *Not Illustrated

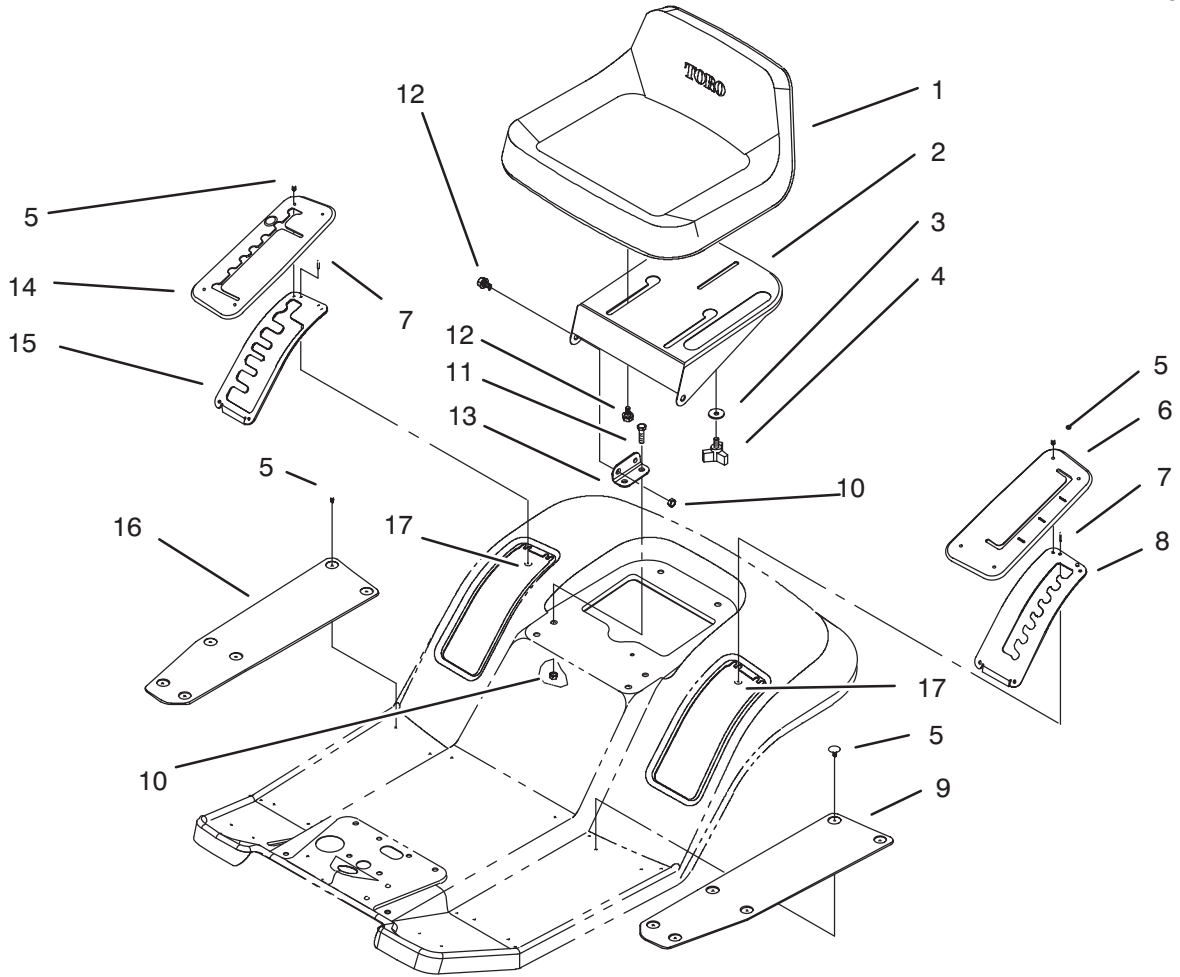


C-1830

SEAT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88-4330	Seat (Model No. 71182 Only)	1
*	88-3950	Seat (Model No. 71200 Only)	1
2	88-4910	Support - Seat	1
3	5-4460	Washer - Fender	1
4	92-9674	Knob - Studded	1
5	3290-479	Fastener - Panel	20
6	88-5170	Cover - H.O.C. (Model No. 71182 Only)	1
*	93-7657	Cover - H.O.C. (Model No. 71200 Only)	1
7	3290-282	Rivet - Pop	4

Ref. No.	Part No.	Description	No. Used
8	88-5030	Gate - H.O.C.	1
9	88-5240	Mat - L.H. Foot	1
10	3296-29	Nut - Lock	6
11	322-3	Screw - Hex Hd. Cap	4
12	37-8770	Bolt - Shoulder	4
13	88-4820	Bracket - Seat Hinge	2
14	88-5160	Cover - Shift Gate (Model No. 71182 Only)	1
*	93-7656	Cover - Shift Gate (Model No. 71200 Only)	1
15	88-5020	Gate - Shift	1
16	88-5220	Mat - R.H. Foot	1
17	3269-26	Washer - Backup	4

 *Not Illustrated

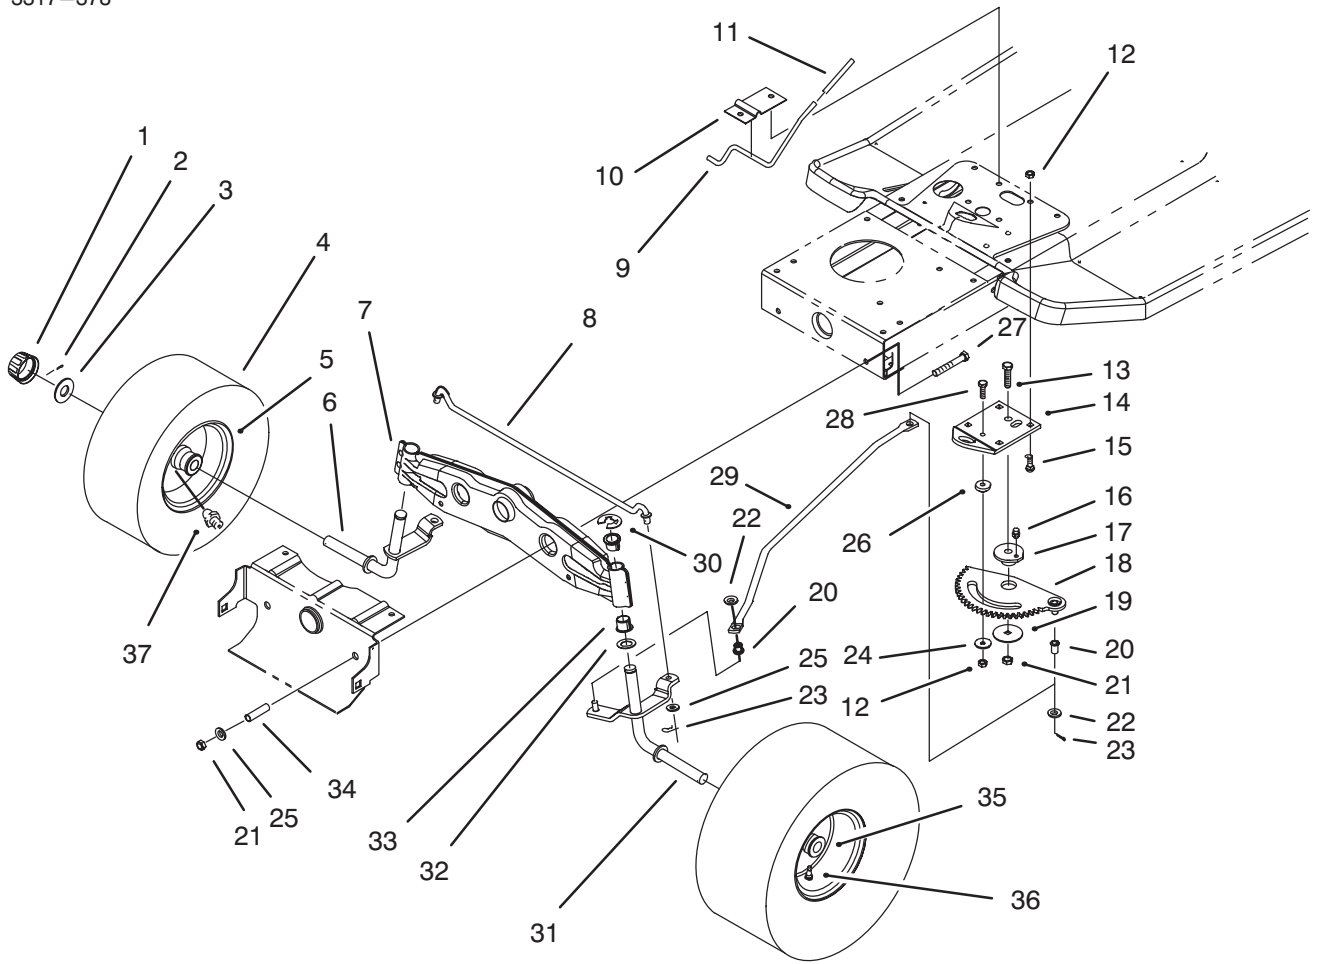


C-1302

FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	61-9780	Cap - Hub	2
2	3272-12	Pin - Cotter	2
3	28-2480	Washer	2
4	88-4060	Tire - 13"	2
5	88-4360	Rim - Front Wheel	2
6	92-7889	Spindle - R.H.	1
7	88-4460	Axle - Front	1
8	88-5380	Rod - Steering Tie	1
9	88-5510	Rod - Parking Brake	1
10	88-5520	Bracket - Parking Brake	1
11	88-0890	Grip - Brake Rod	1
12	3296-29	Nut - Lock	5
13	3231-4	Screw - Carriage	1
14	88-5130	Bracket - Steering Rack	1
15	3230-1	Bolt - Carriage	4
16	302-26	Fitting - Grease	1
17	88-4670	Bushing - Eccentric	1
18	88-5200	Rack - Steering	1
19	111419	Washer - Fender	1
20	52-2891	Bushing - Steering Link	2
21	3296-39	Nut - Lock	3

Ref. No.	Part No.	Description	No. Used
22	3256-25	Washer - Flat	2
23	3272-10	Pin - Cotter	4
24	5-4460	Washer - Fender	1
25	3256-24	Washer - Flat	4
26	88-5010	Spacer - Steering Rack	1
27	323-13	Screw - Hex Hd. Cap	2
28	3230-3	Screw - Carriage	1
29	88-4830	Link - Drag	1
30	32151-48	E-Ring	2
31	92-7890	Spindle - L.H.	1
32	3-6498	Washer - Thrust	2
33	88-5800	Bushing - Steering Spindle	4
34	88-5470	Spacer - Front Axle	2
35	88-4400	Bearing - Wheel	4
36	232-27	Valve Stem w/Cap	2
37	302-5	Fitting - Grease	2
*	232-40	Tube - Inner (Optional)	2
*	88-4270	Wheel & Tire Assembly (Incl. Ref. #4 & 5)	2

 *Not Illustrated

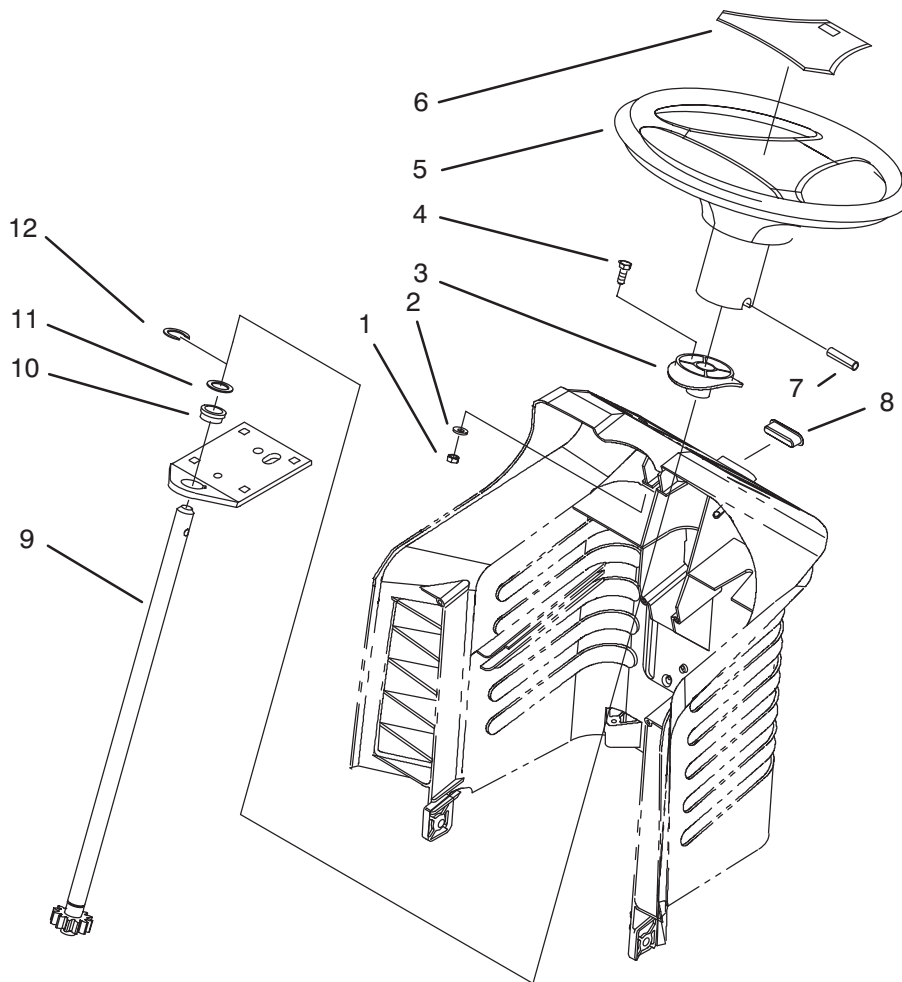


C-1341

STEERING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-42	Nut - Lock	2
2	3256-22	Washer - Flat	2
3	88-4190	Bushing - Sliding	1
4	321-4	Screw - Hex Hd. Cap	2
5	88-3850	Wheel - Steering (Incl. Ref. #6)	1
6	88-3870	Cover - Steering Wheel	1

Ref. No.	Part No.	Description	No. Used
7	32121-78	Pin - Roll	1
8	88-4150	Plug	1
9	88-6380	Shaft - Steering	1
10	88-5150	Bushing - Flange	1
11	3-6498	Washer - Thrust	1
12	32151-48	E-Ring	1

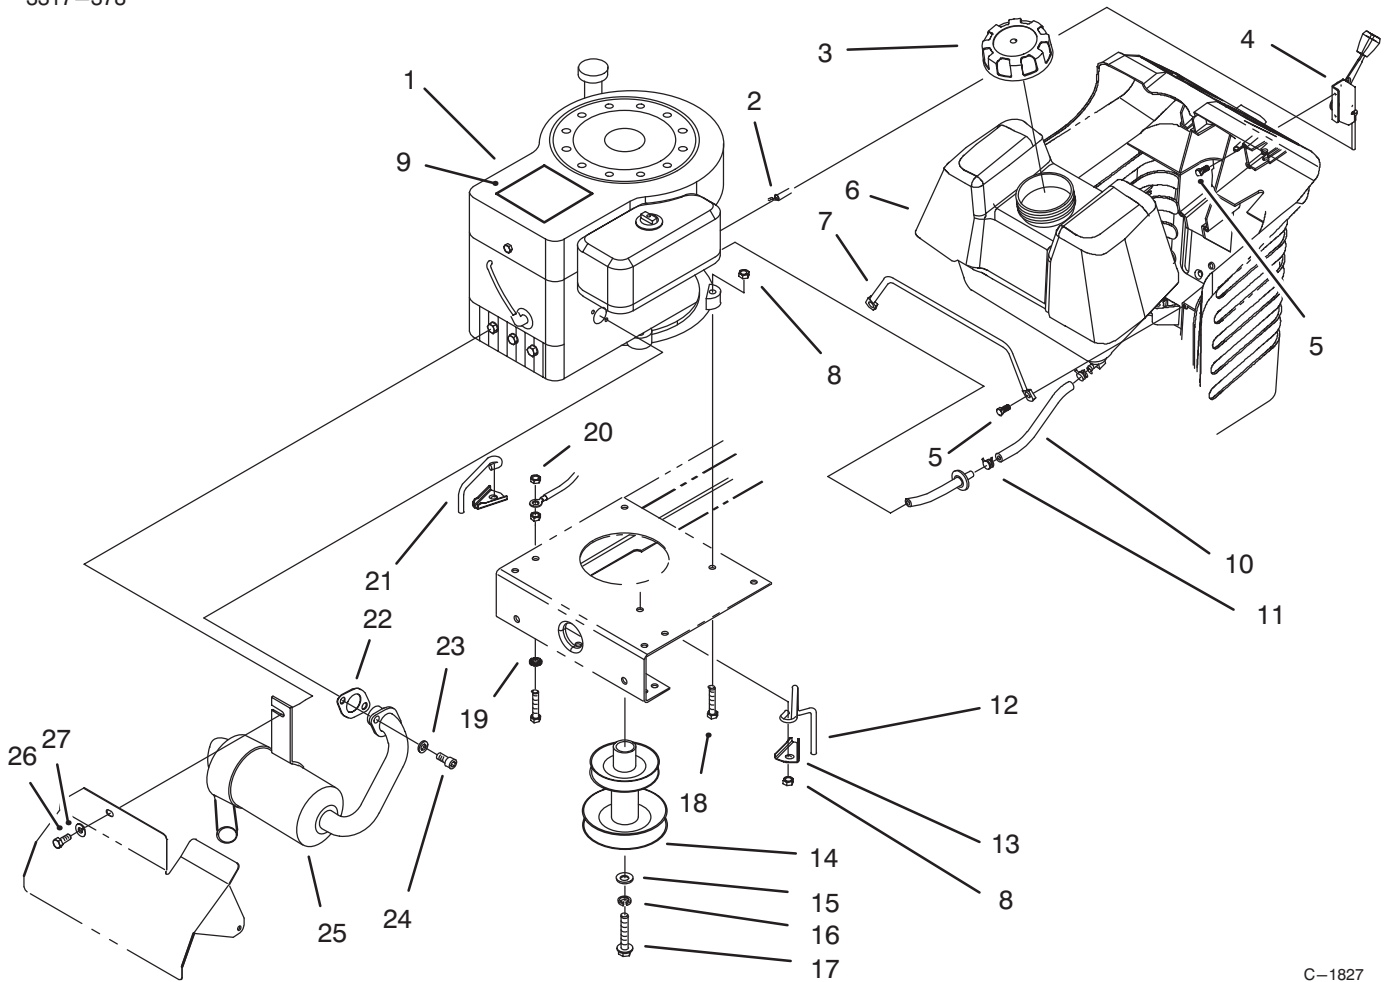 


C-1827

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1		Engine - 12 H.P. (Model No. 71182 Only)	1
*		Engine - 12 H.P. (Model No. 71200 Only)	1
2	88-4350	Cable - Throttle	1
3	88-3980	Cap - Gas	1
4	88-4340	Control - Throttle	1
5	27-0220	Screw - Plastite	4
6	88-3880	Tank - Gas	1
7	88-5920	Rod - Gas Tank	1
8	3296-29	Nut - Lock	3
9	92-2482	Decal - Engine 12 H.P. (Model No. 71200 Only)	1
10	47-2963	Line - Fuel	1
11	2412-98	Clamp - Hose	2
12	88-6060	Guide - Belt L.H.	1

Ref. No.	Part No.	Description	No. Used
13	76-3820	Anchor - Belt Guide	2
14	88-5050	Pulley - Engine	1
15	3256-25	Washer - Flat	1
16	3253-22	Washer - Lock	1
17	26-0671	Bolt - Blade	1
18	322-9	Screw - Hex Hd. Cap	4
19	3255-8	Washer - Ext. Tooth Lock	1
20	32149-1	Nut - Keps	2
21	88-5490	Guide - Belt R.H.	1
22	88-4410	Gasket - Muffler	1
23	3253-4	Washer - Lock	2
24	3274-12	Screw - Hex Soc. Hd.	2
25	88-6480	Muffler	1
26	321-4	Screw - Hex Hd. Cap	1
27	3253-3	Washer - Lock	1

 
*Not Illustrated

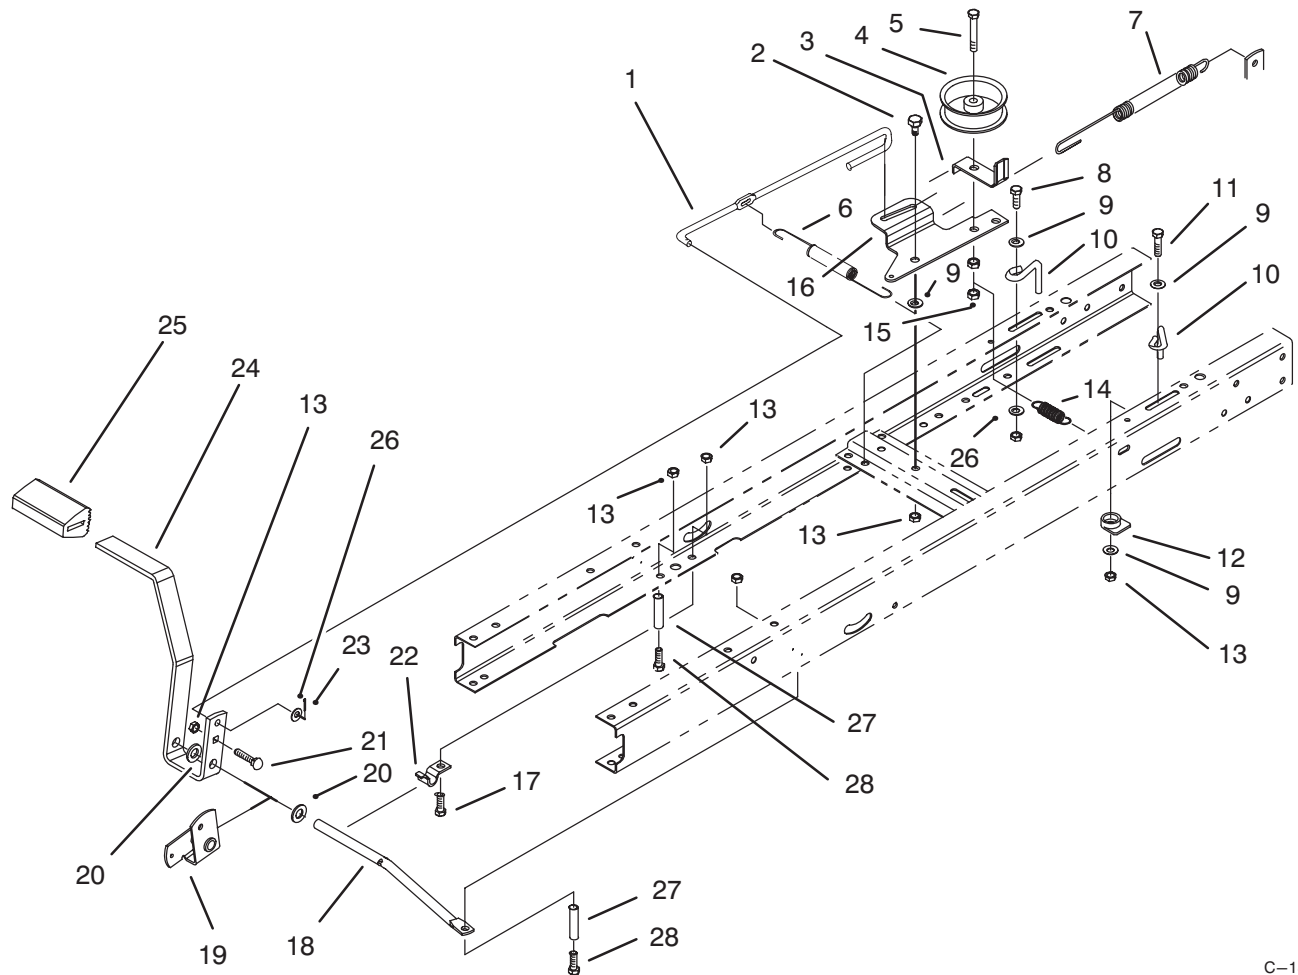

C-1828A

CLUTCH ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	88-5270	Rod - Clutch/Brake	1	15	3296-59	Nut - Lock	2
2	37-8770	Bolt - Shoulder	1	16	88-6070	Arm - Idler	1
3	88-5560	Guide - Idler Belt	1	17	322-3	Screw - Hex Hd. Cap	1
4	88-5680	Pulley - Flat Idler	1	18	88-5500	Rod - Pedal Pivot	1
5	323-11	Screw - Hex Hd. Cap	1	19	88-4800	Bellcrank	1
6	27-8890	Spring - Pedal Return	1	20	3256-26	Washer - Flat	2
7	88-6140	Spring - Brake	1	21	3230-3	Bolt - Carriage	1
8	322-5	Screw - Hex Hd. Cap	1	22	88-4810	Clamp - Shift Pivot	1
9	5-4460	Washer - Flat	4	23	3272-10	Pin - Cotter	1
10	88-5460	Guide - Trans. Belt	2	24	88-5000	Pedal - Clutch/Brake	1
11	322-7	Screw - Hex Hd. Cap	1	25	65-2920	Pad - Pedal	1
12	84-5610	Guide - Cable	1	26	3256-23	Washer - Flat	2
13	3296-29	Nut - Lock	7	27	46-5590	Spacer - Tube	2
14	88-6330	Spring - Extension	1	28	322-12	Screw - Hex Head Cap	2

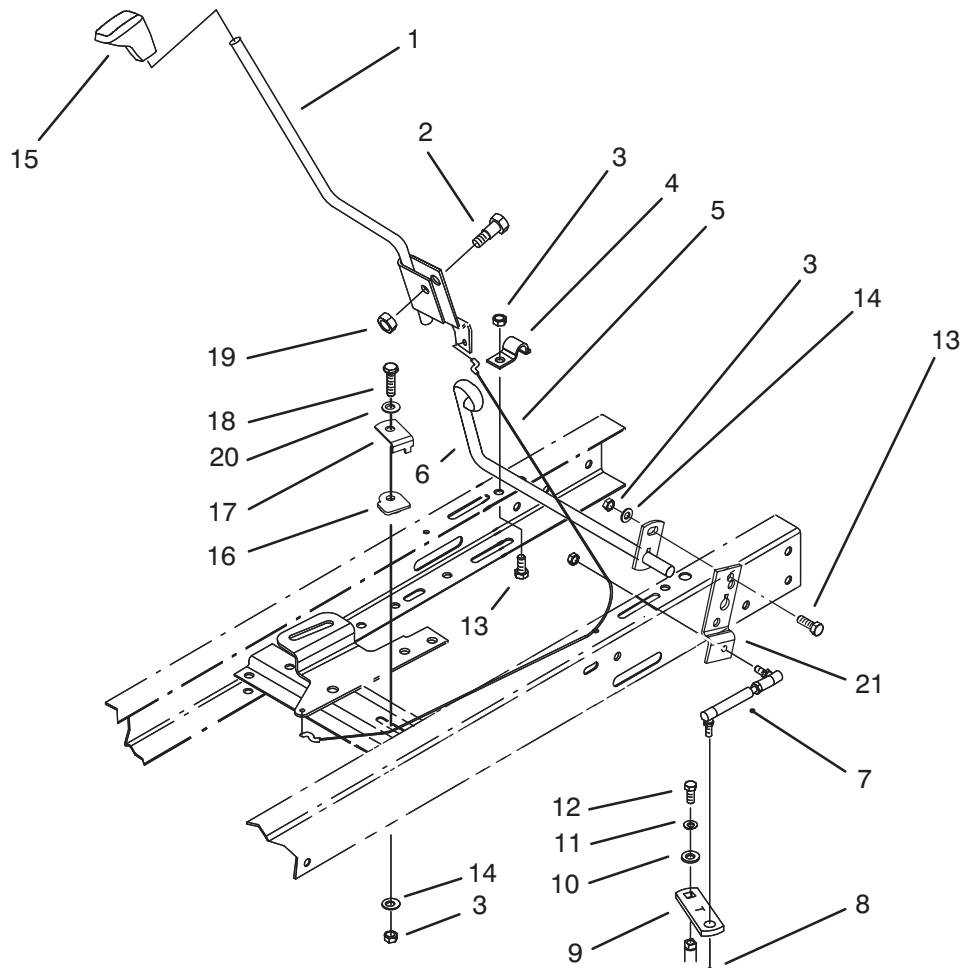 


C-1317

SHIFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88-5300	Lever - Shift	1
2	5-4015	Bolt - Shoulder	1
3	3296-29	Nut - Lock	4
4	88-4810	Clamp - Shift Pivot	2
5	55-9321	Cable - Shotgo	1
6	92-5796	Pivot - Shift	1
7	88-5530	Rod - Shift Tie	1
8	3296-3	Nut - Lock	2
9	88-5340	Lever - Trans. Shift	1
10	7-5461	Washer - Hardened	1
11	3253-3	Washer - Lock	1


Ref. No.	Part No.	Description	No. Used
12	329-23	Screw - Hex Hd. Cap	1
13	322-3	Screw - Hex Hd. Cap	3
14	3256-23	Washer - Flat	2
15	62-1292	Knob - Shift	1
16	84-5610	Guide - Cable	1
17	88-5930	Keeper - Cable	1
18	3230-3	Bolt - Carriage	1
19	3296-39	Nut - Lock	1
20	3256-25	Washer - Flat	1
21	92-5794	Lever - Shift Pivot	1

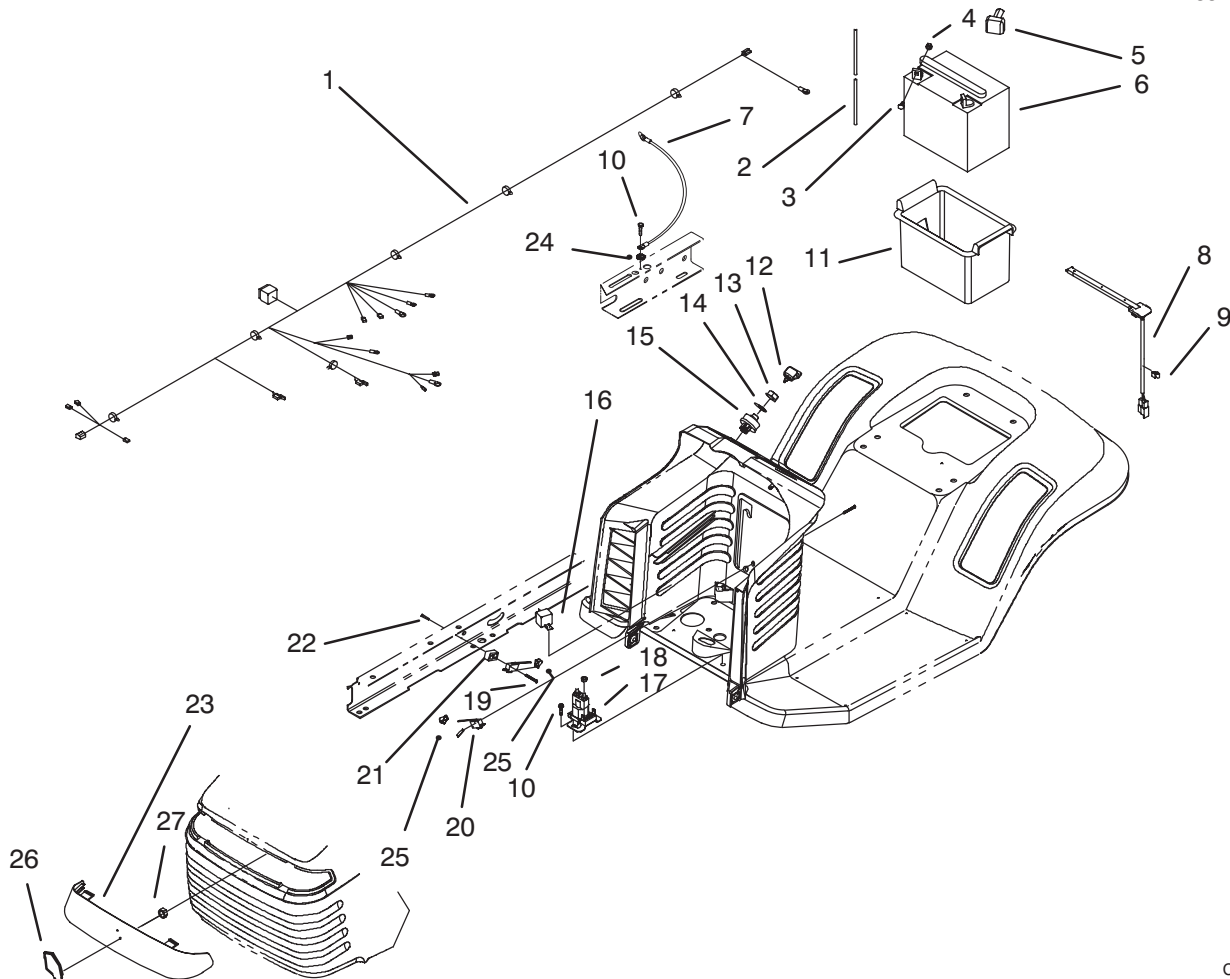 

C-2203

ELECTRICAL ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-3810	Harness - Wire	1	14	3254-5	Washer - Lock	1
2	56-2540	Vent - Tube	1	15	88-9830	Switch - Ignition	1
3	321-4	Screw - Hex Hd. Cap	2	16	116397	Relay	1
4	32103-22	Nut - Wing	2	17	92-9845	Solenoid	1
5	28-8080	Boot - Battery Terminal	1	18	32149-2	Nut - Keps	2
6	80-2600	Battery - 7 Plate	1	19	93-0539	Screw - Phillips Hd.	4
7	44-8110	Cable - Battery Negative	1	20	88-9932	Switch - Micro	2
8	38-1420	Switch - Seat	1	21	88-4880	Spacer - Microswitch	1
9	702366	Clip - Wire Retainer	1	22	3290-354	Speednut	2
10	32144-4	Screw - Hex Hd. Thr'd Form.	3	23	88-3960	Lens - Headlights	1
11	88-4040	Box - Battery	1	24	3255-7	Washer - Ext. Tooth Lock	1
12	63-8360	Key - Ignition	1	25	93-3240	Seal - Plunger	2
13	218-461	Nut - Hex	1	26	80-2240	Plate - Grille Panel	1
				27	3290-299	Nut - Tinnerman	1

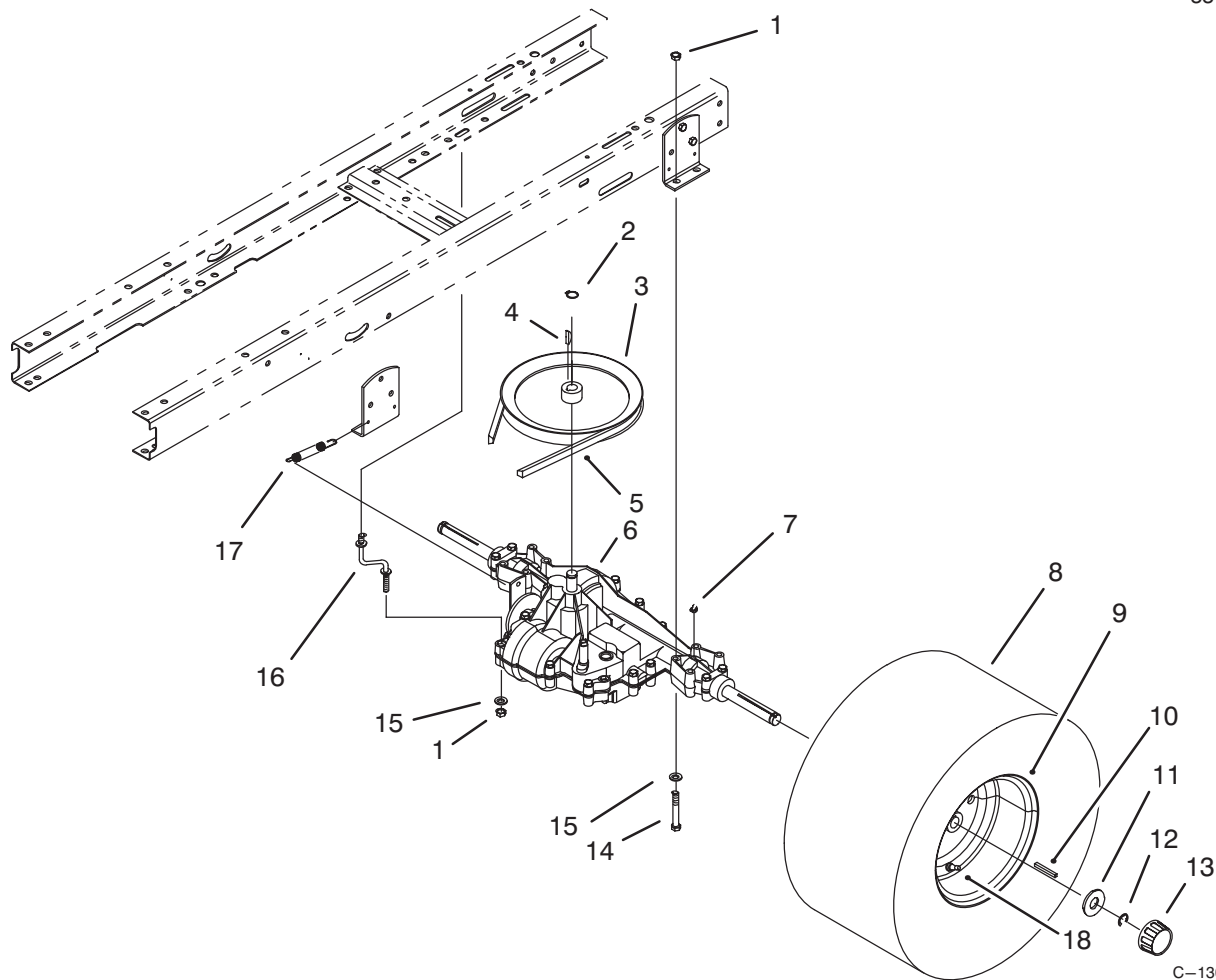 


C-1305

TRANSAXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-29	Nut - Lock	8
2	32120-64	Ring - Snap	1
3	88-4840	Pulley - Transmission	1
4	3257-23	Key - Woodruff	1
5	88-6270	V-Belt - Traction	1
6	88-6450	Transaxle	1
7	302-11	Fitting - Grease	2
8	88-4080	Tire	2
9	88-4380	Rim	2
10	7-0036	Key - Square	2
11	28-2480	Washer	2

Ref. No.	Part No.	Description	No. Used
12	32151-48	E-Ring	2
13	61-9780	Cap - Hub	2
14	322-12	Screw - Hex Hd. Cap	4
15	3256-23	Washer - Flat	8
16	88-5350	Strap - Torque	2
17	26-6700	Spring - Brake Return	1
18	232-27	Valve Stem w/Cap	2
*	231-91	Tube - Inner (Optional)	2
*	88-4290	Wheel & Tire Assembly (Incl. Ref. #8 & 9)	2

 *Not Illustrated

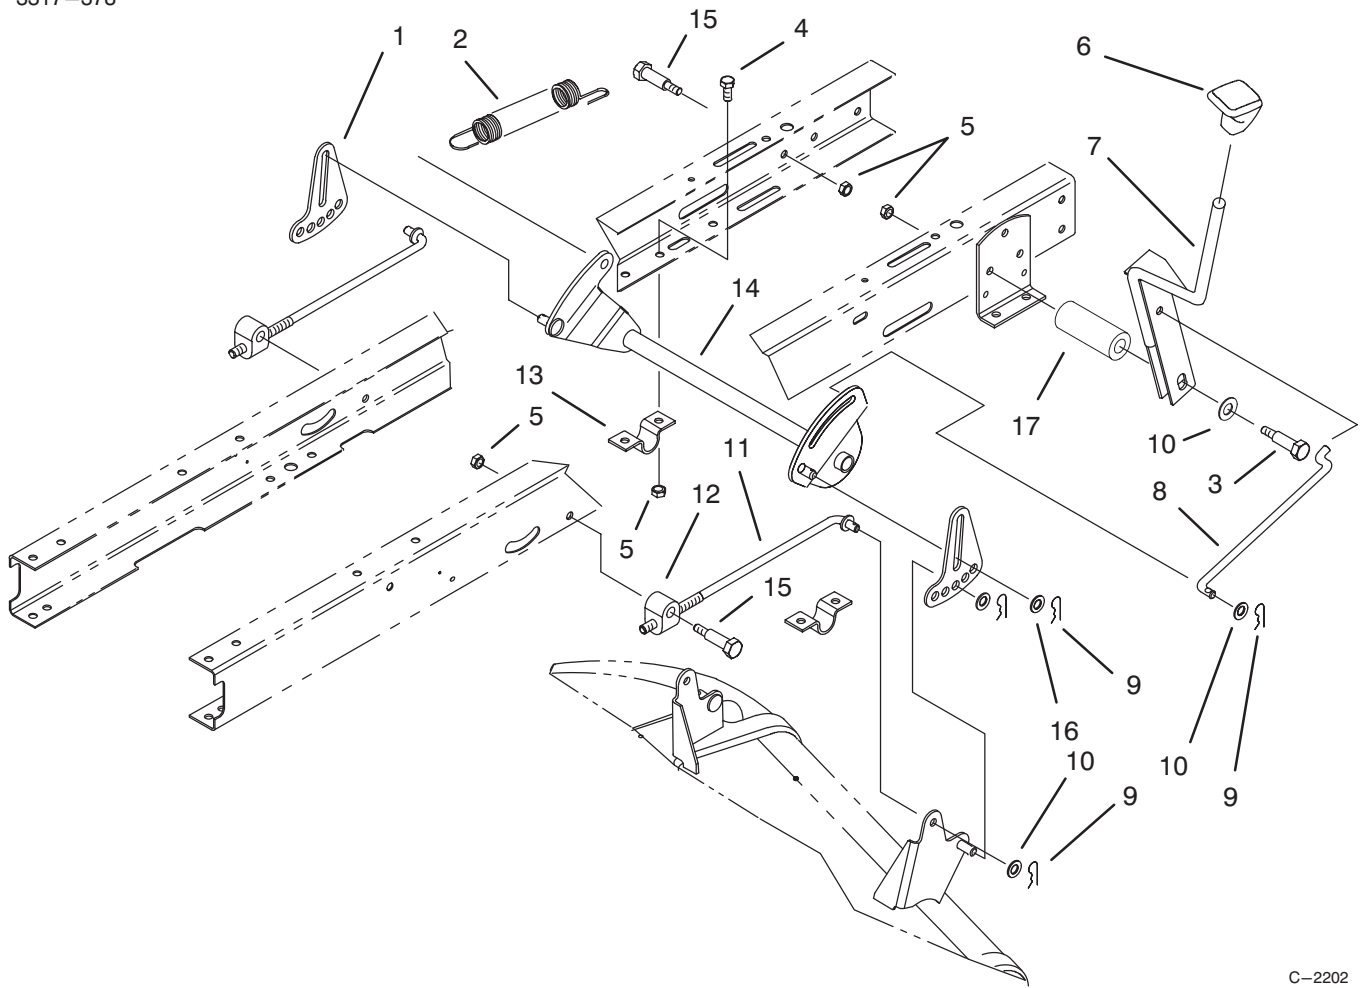


C-2202

HEIGHT OF CUT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88-5570	Link - Adjusting H.O.C.	2
2	88-6460	Spring - Extension	1
3	322-9	Bolt - Shoulder	1
4	322-3	Screw - Hex Hd. Cap	4
5	3296-29	Nut - Lock	8
6	62-1292	Knob - Shift	1
7	93-3822	Lever - H.O.C.	1
8	88-5900	Link - H.O.C.	1
9	3290-307	Pin - Hair Cotter	7
10	3256-24	Washer - Flat	4

Ref. No.	Part No.	Description	No. Used
11	88-5450	Rod - Hanger Rear	2
12	88-4230	Trunnion - H.O.C. Rear	2
13	88-4730	Clamp - H.O.C. Pivot	2
14	88-5110	Pivot - H.O.C.	1
15	7-0030	Bolt - Shoulder	3
16	80-6990	Washer - Hardened	4
17	65-7210	Spacer	1
Intpkft			

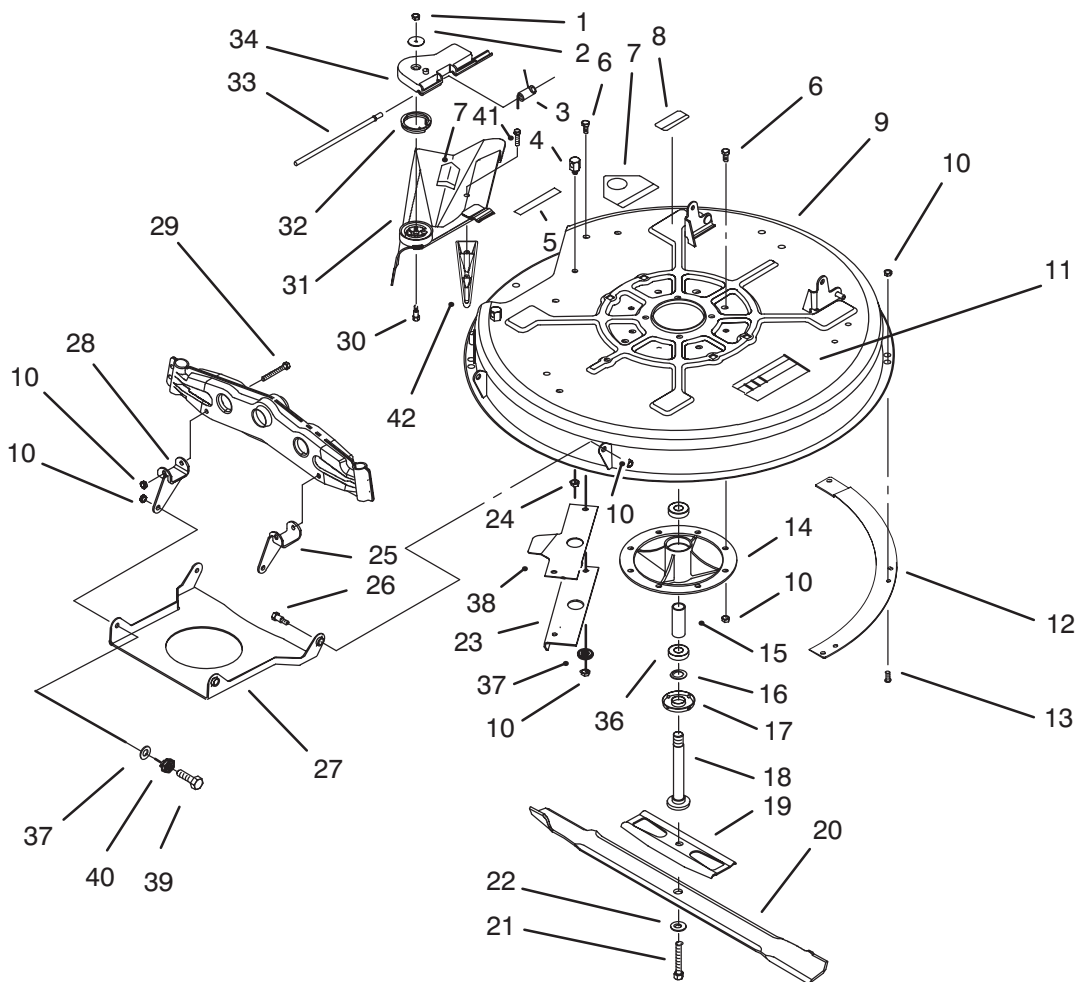 


C-1829B

DECK & SPINDLE ASSEMBLY (32" CUTTING UNIT)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3296-42	Nut - Lock	1	13	32122-14	Screw - Truss Hd. (Model No. 71200 Only)	8
2	3256-58	Washer - Fender	1	14	56-7030	Housing - Spindle	1
3	92-2493	Spring - Torsion	1	15	83-7020	Spacer - Bearing	1
4	28-7350	Post - Rear Pivot	1	16	80-4390	Spacer - Hardened	1
5	68-3650	Decal - Deflector Danger (Model No. 71182 Only)	1	17	80-4370	Shield - Bearing	1
*	93-7009	Decal - Deflector Danger (Model No. 71200 Only)	1	18	80-4350	Shaft - Spindle	1
6	322-3	Screw - Hex Hd. Cap	10	19	80-4570	Stiffener - Blade	1
7	93-1122	Decal - Danger (Model No. 71182 Only)	2	20	33-4750	Blade - 32"	1
*	93-7010	Decal - Danger (Model No. 71200 Only)	2	21	26-0671	Bolt - Blade	1
8	55-4300	Decal - Caution (Model No. 71182 Only)	2	22	3290-465	Washer - Belleville	1
*	93-6674	Decal - Warning (Model No. 71200 Only)	2	23	44-5720	Baffle - Deck	1
9	88-5790-01	Cutter Deck - 32"	1	24	3296-59	Nut - Lock	1
10	3296-29	Nut - Lock (Model No. 71182) (Model No. 71200)	16 24	25	88-5650	Bracket - L.H.	1
11	66-1340	Decal - Danger (Model No. 71182 Only)	1	26	28-0540	Bolt - Shoulder	2
*	93-7010	Decal - Danger (Model No. 71200 Only)	1	27	88-4940	Pan - Front Suspension	1
12	92-9664	Ring - Wet Grass (Model No. 71200 Only)	4	28	88-5640	Bracket - R.H.	1
				29	322-12	Screw - Hex Hd. Cap	2
				30	92-8916	Bolt - Shoulder	1
				31	93-0318	Deflector Assembly (Incl. Ref. #7)	1
				*	93-7694	Deflector Ass'y (Incl. Ref. #7) (Model No. 71200 Only)	1
				32	88-6160	Spring - Torsion	1
				33	88-6150	Rod - Deflector Hinge	1
				34	88-4540	Hinge - Deflector Danger	1

 *Not Illustrated

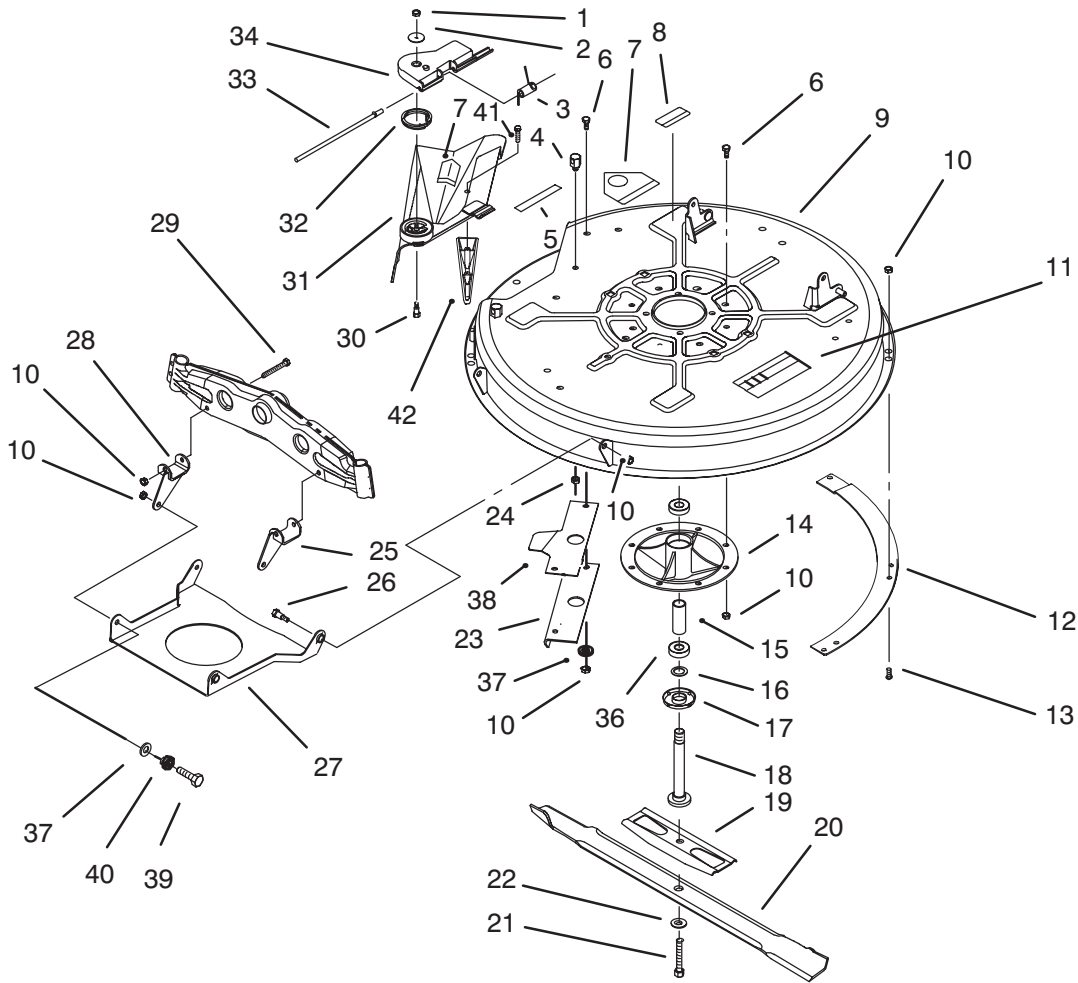


C-1829B

DECK & SPINDLE ASSEMBLY (32" CUTTING UNIT)

Ref. No.	Part No.	Description	No. Used
36	251-297	Bearing - Spindle	2
37	3256-23	Washer - Flat	4
38	92-2494	Ramp - Deflector	1
39	322-6	Screw - Hex Hd. Cap	2
40	106661	Cam	2


Ref. No.	Part No.	Description	No. Used
41	32144-111	Screw - Pan Hd. (Model No. 71200 Only)	4
42	93-7696	Kicker - C.E. (Model No. 71200 Only)	2

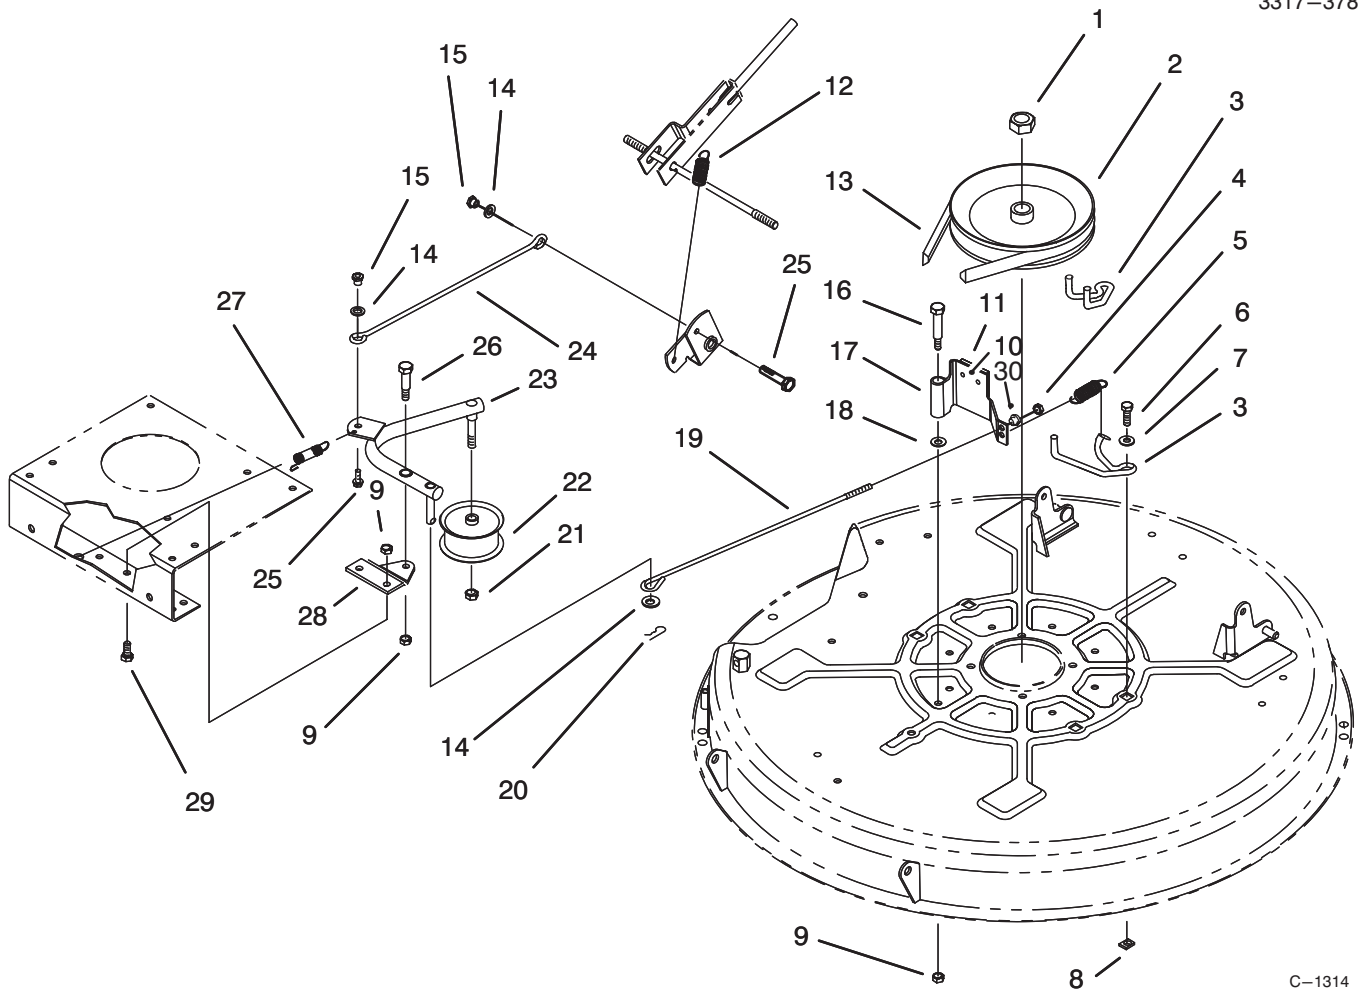 

C-1314

PULLEY & BELT ASSEMBLY (32" CUTTING UNIT)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3219-7	Nut - Lock	1	17	88-6110	Deck Brake Assembly (Incl. Ref. #10 & 11)	1
2	88-5060	Pulley - Deck	1	18	3256-23	Washer - Flat	1
3	88-5760	Guide - Belt	2	19	88-5690	Rod - Deck Brake	1
4	3296-42	Nut - Lock	1	20	3290-307	Pin - Hair Cotter	1
5	88-6330	Spring - Extension	1	21	3296-39	Nut - Lock	1
6	322-5	Screw - Hex Hd. Cap	2	22	56-9870	Pulley - Idler	1
7	5-4460	Washer - Fender	2	23	88-5850	Arm - Idler	1
8	3290-496	Nut - Retained	2	24	88-5980	Rod - Deck Engage	1
9	3296-29	Nut - Lock	4	25	3234-13	Screw - Hex Flange Hd.	2
10	3290-282	Rivet - Pop	2	26	7-0030	Bolt - Shoulder	1
11	56-9830	Pad - Brake	1	27	26-6700	Spring - Extension	1
12	88-6420	Spring/Cable Assembly	1	28	88-5370	Plate - Idler Mount	1
13	88-6260	V-Belt	1	29	322-3	Screw - Hex Hd. Cap	2
14	3256-24	Washer - Flat	3	30	67-0710	Ball - Swivel	1
15	47-4990	Post	2				
16	88-4590	Bolt - Shoulder	1				

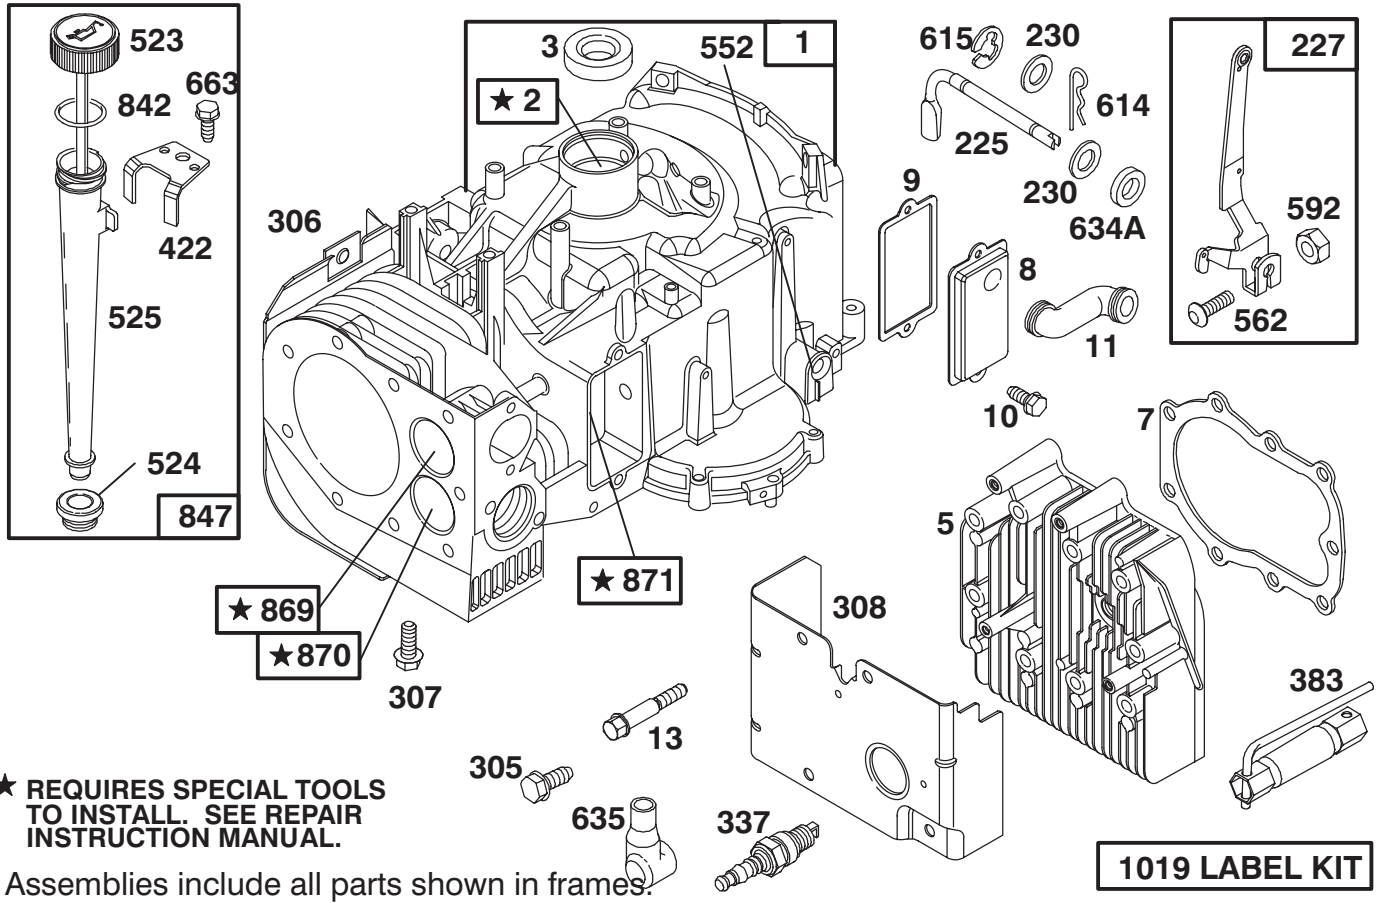 


ENGINE BRIGGS & STRATTON MODEL 283707-0156-01

Ref. No.	Part No.	Description	No. Used
1	490450	Cylinder Assembly	1
2	399265	Bearing—Cylinder	1
★3	391086	Seal—Oil	1
5	494240	Head—Cylinder	1
★7	271866	Gasket—Cylinder Head	1
8	391406	Breather Assembly	1
★9	27803	Gasket—Valve Cover	1
10	94621	Screw—Sem	1
11	280100	Tube—Breather	1
13	94622	Screw—Cylinder Head	1
225	231058	Crank—Governor	1
227	493935	Lever Assy.—Governor	1
230	94742	Washer—Gov. Crank	1
305	94619	Screw—hex. Washer Hd.	1
306	224545	Shield—Cylinder	1
307	94623	Screw—Cyl. Shield Mtg.	1
308	491490	Cover—Cylinder Head	1
337	802592	Plug—Spark	1
383	89838	Wrench—Spark Plug	1
422	223721	Clamp—Oil Filler Tube	1

Ref. No.	Part No.	Description	No. Used
523	495230	Cap and Dipstick—Oil Filler	1
★524	68838	Seal—Filler Tube	1
525	280741	Tube—Oil Filler	1
552	231597	Bushing—Gov. Crank	1
562	92613	Bolt—Governor Lever	1
592	231082	Nut—Hex.	1
614	93306	Cotter—Hair Pin	1
615	93307	Retainer—E-Ring	1
★634A	491323	Seal—Governor	1
635	66538	Elbow—Spark Plug	1
663	94620	Screw—Hex Head	1
★842	270920	Seal—Oil Filler Cap	1
847	490474	Fill Group—Oil	1
869	261463	Seat—Intake Valve (Std.)	1
870	213316	Seat—Exhaust Valve (Std.)	1
871	261961	Guide—Exhaust Valve	1
		Note: 231218 Guide—Intake Valve	1
1019	491255	Label Kit	1

 ★ Included in Gasket Set—Part No. 494241.

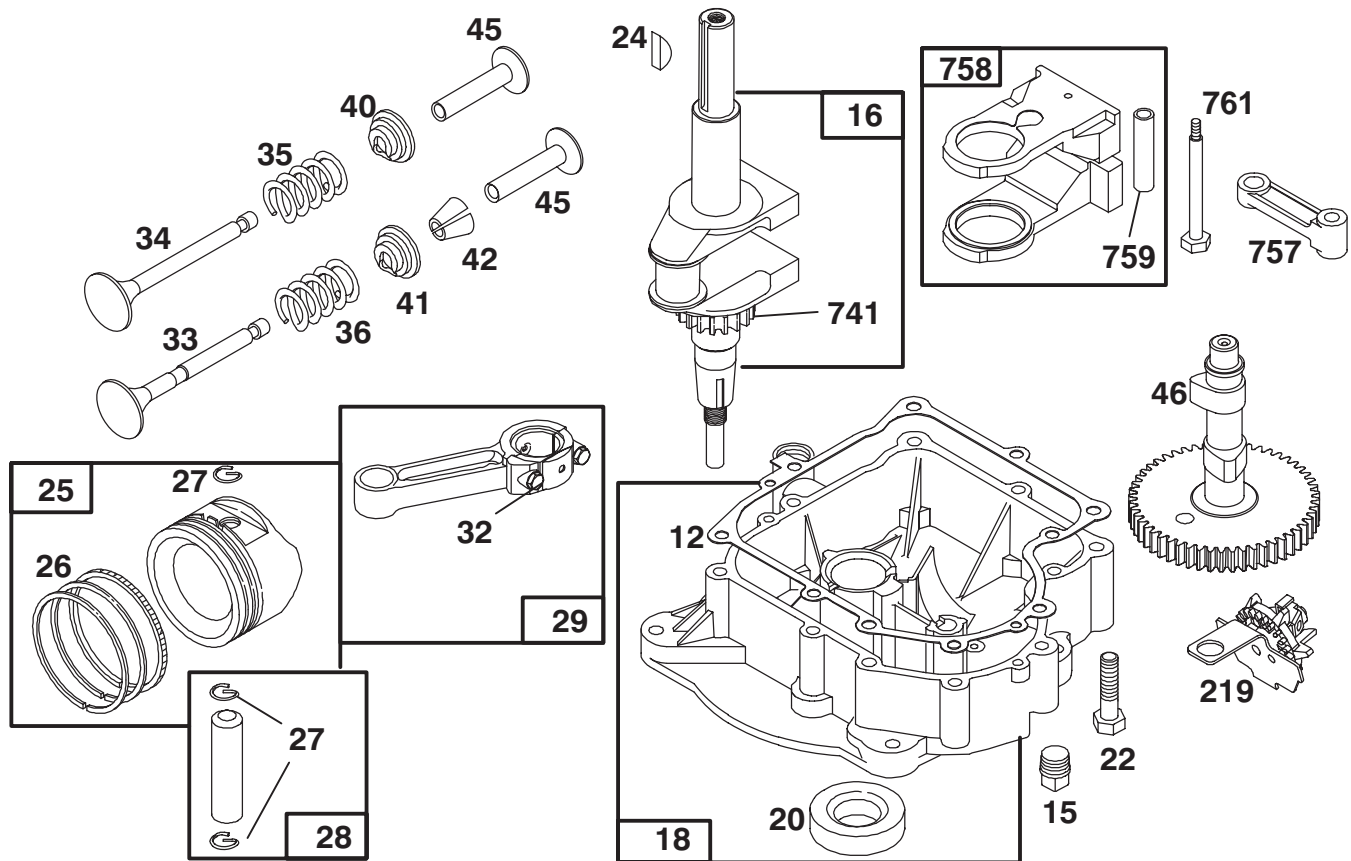


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 283707-0156-01

Ref. No.	Part No.	Description	No. Used
★12	271916	Gasket—Crkcs. (1/64")	1
★	271997	Gasket—Crkcs. (.005")	1
★	271996	Gasket—Crkcs. (.009")	1
15	94239	Plug—Oil Drain	1
16	495162	Crankshaft	1
	94196	Key—Timing Gear	1
18	494238	Base—Engine	1
★20	291675	Seal—Oil	1
22	94624	Screw—Base Mtg. Sem	1
24	222698	Key—Flywheel	1
25	394661	Piston Assy. (Std.)	1
	394662	Piston Assy. (.010" O.S.)	1
	394663	Piston Assy. (.020" O.S.)	1
	394664	Piston Assy. (.030" O.S.)	1
26	391780	Ring Set—Piston (Std.)	1
	391781	Ring Set—Piston (.010" O.S.)	1
	391782	Ring Set—Piston (.020" O.S.)	1
	391783	Ring Set—Piston (.030" O.S.)	1
27	260924	Lock—Piston Pin	1
28	299691	Pin Assy.—Piston (Standard)	1
	391286	Pin Assy.—Piston (.005" O.S.)	1

Ref. No.	Part No.	Description	No. Used
29	490348	Rod Assembly— Connecting	1
	490469	Connecting Rod (.020" U.S. Crankpin Bore)	1
32	94671	Screw—Connecting Rod	1
33	262246	Valve—Exhaust	1
34	262247	Valve—Intake	1
35	65906	Spring—Intake Valve	1
36	26828	Spring—Exhaust Valve	1
40	221596	Retainer—Intake Valve	1
41	292260	Rotocoil—Exhaust Valve	1
42	93630	Retainer—Ex. Valve Rotocoil	1
45	262248	Tappet—Valve	1
46	212897	Gear—Cam	1
219	490815	Oil Slinger, Gov. Gear Assy.	1
741	262932	Gear—Timing	1
757	212359	Link—Counterweight	1
758	399891	Counterweight Assy.	1
759	298909	Pin—Counterweight	1
761	93875	Screw—Counterweight	1

 ★ Included in Gasket Set—Part No. 494241.

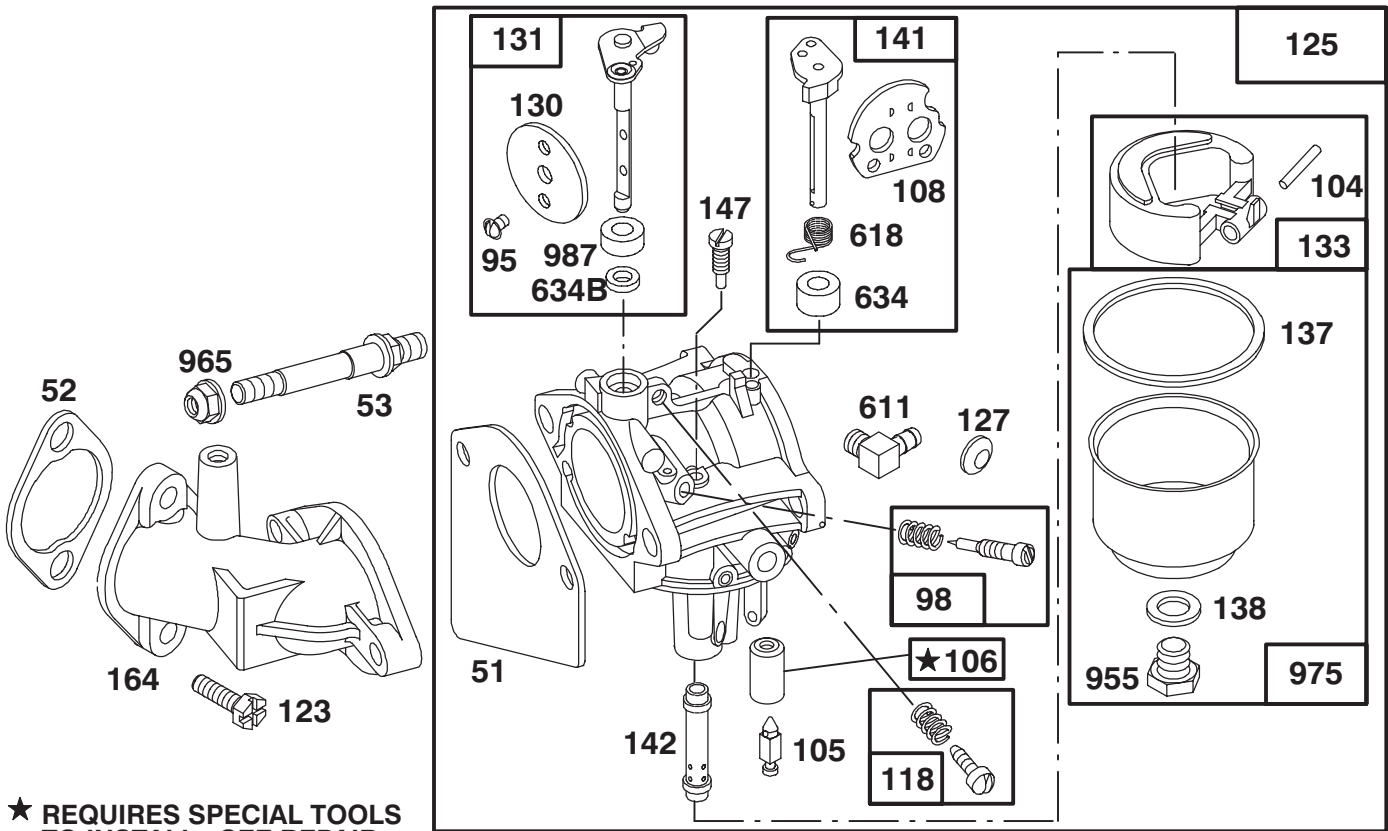

★ REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 283707-0156-01



Ref. No.	Part No.	Description	No. Used
◆5	1272465	Gasket—Carburetor (Carb. to Elbow)	1
★52	272554	Gasket—Carburetor (Elbow to Cylinder)	1
53	94637	Stud—Carb. Mtg.	1
●95	94098	Screw—Throttle	1
98	495800	Screw—Idle Speed	1
●104	231789	Pin—Float Hinge	1
●105	231855	Valve Assy.—Inlet Needle	1
●106	231854	Inlet Valve Seat	1
108	224540	Valve—Choke	1
118	494383	Valve—Needle	1
121	495799	Carburetor Overhaul Kit	1
123	94616	Screw—Elbow Mtg.	1
125	495706	Carburetor Assembly	1
●127		Plug—Welch (Sold in Kit Only).	1
130	224539	Valve—Throttle	1

Ref. No.	Part No.	Description	No. Used
131	494379	Shaft and Lever— Throttle	1
133	494381	Float—Carburetor	1
◆◆137	281165	Gasket—Float Bowl	1
◆◆138	281164	Washer—Float Bowl Screw	1
141	494380	Shaft and Lever—Choke	1
●142	494537	Nozzle—Carburetor	1
●147	231794	Pilot—Jet	1
164	213819	Carburetor—Elbow	1
611	494451	Fuel Inlet Tube	1
618	262803	Spring—Choke Return	
●634	281168	Seal—Choke Shaft	1
●634B	281167	Washer—Throttle Shaft	1
955	94642	Screw—Fuel Bowl	1
965	94108	Locknut—Air Cleaner Mtg.	1
975	494378	Bowl Assy.—Carburetor	1
977	494385	Carburetor Gasket Kit	1
●987	281166	Seal—Throttle Shaft	1

◆ Included in Carburetor Gasket Set—Part No.494385.

● Included in Carburetor Overhaul Kit—Part No. 495799.

  ★ Included in Gasket Set—Part No. 494241.

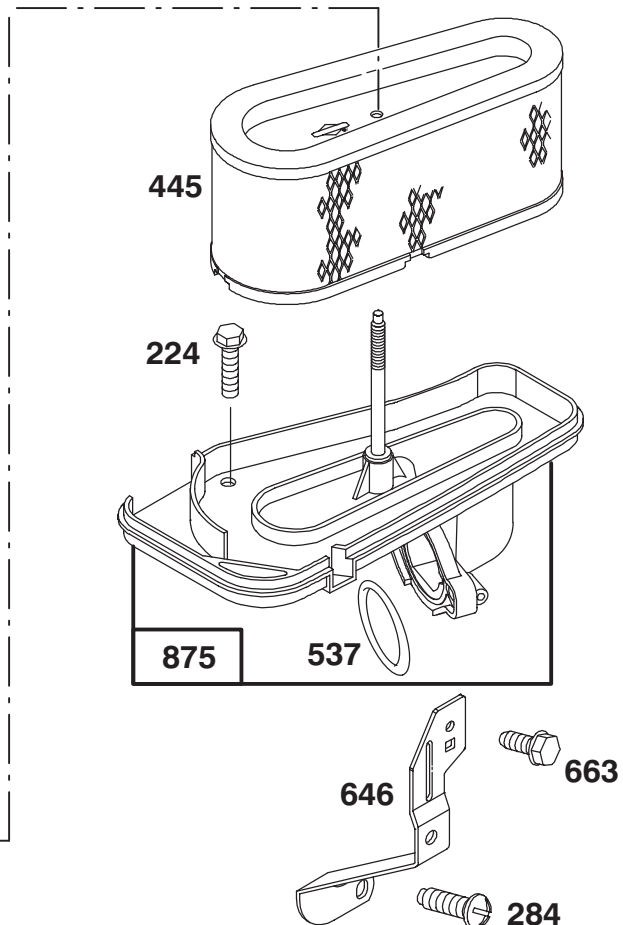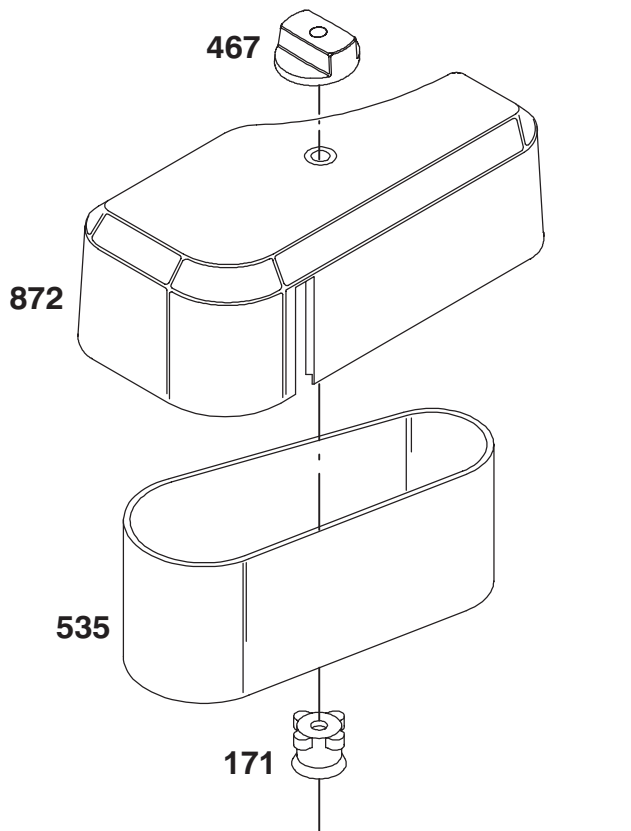


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 283707-0156-01

Ref. No.	Part No.	Description	No. Used
171	281051	Nut—Air Cleaner Mtg.	1
224	94513	Screw—Air Cleaner Sem	1
284	94326	Screw Hex. Head	1
445	493909	Cartridge—Air Cleaner	1
467	493903	Knob—Air Cleaner	1
535	272403	Element—Air Cleaner	1

Ref. No.	Part No.	Description	No. Used
★537	281106	O-Ring—Air Cleaner	1
646	224546	Brace—Air Cleaner	1
663	94620	Screw—Hex. Hd.	1
872	281104	Cover—Air Cleaner	1
875	494237	Body—Air Cleaner	1

 ★ Included in Gasket Set—Part No. 494241.

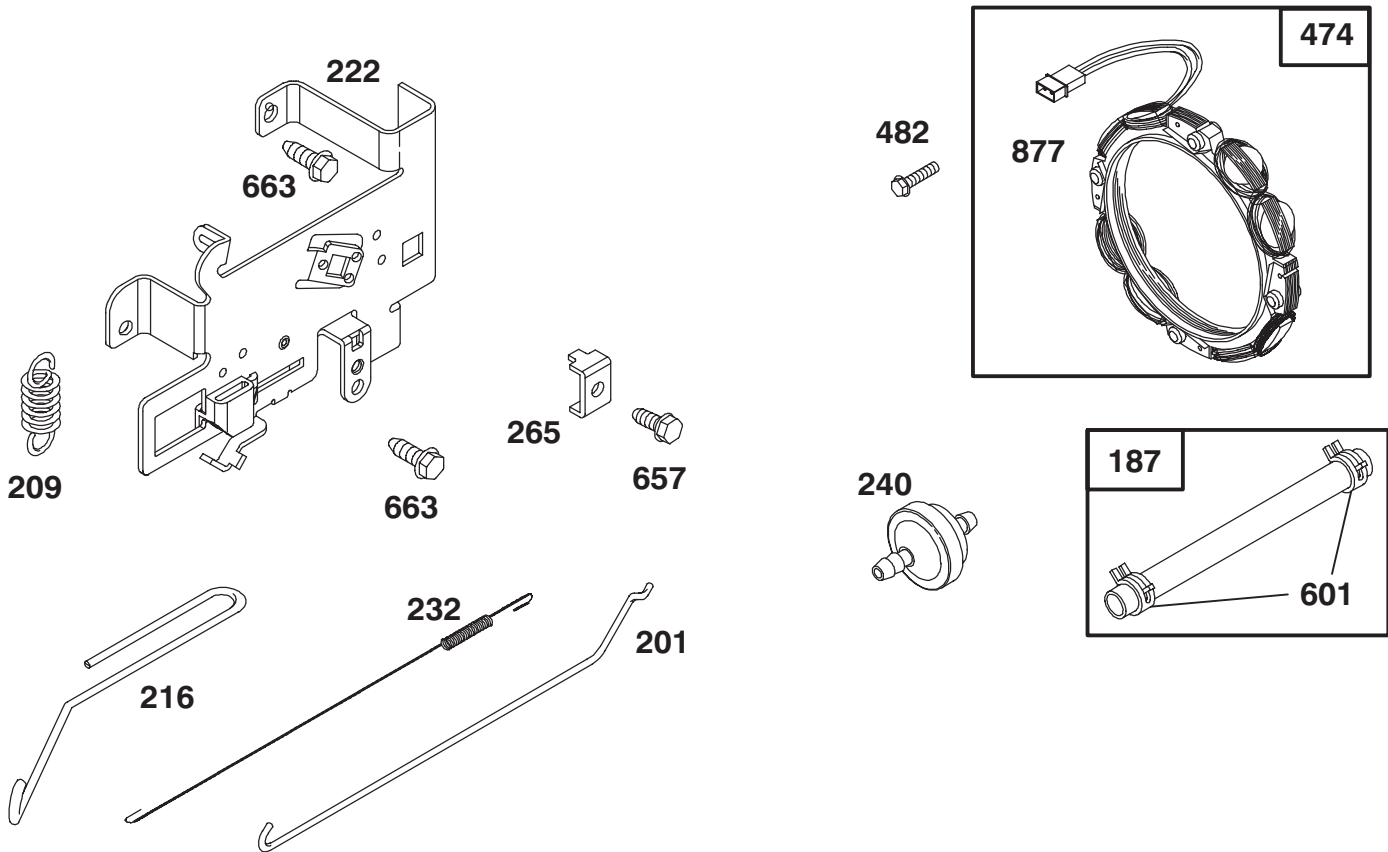


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 283707-0156-01

Ref. No.	Part No.	Description	No. Used
187	393815	Line-Fuel (11" Long, Cut to Suit)	1
201	262767	Link-Governor	1
209	260871	Spring-Governor	1
216	262766	Link-Choke	1
222	494887	Plate-Governor Control (Choke-A-Matic [®])	1
232	262785	Spring-Governor Link	1
240	394358	Filter-Fuel (In Fuel Line)	1

Ref. No.	Part No.	Description	No. Used
265	221535	Clamp-Casing	1
474	393474	Stator-Alternator (Dual Circuit)	1
482	93621	Screw-Sem	1
601	93053	Clamp-Fuel Pipe	1
657	93496	Screw-Sem	1
663	94620	Screw-Hex. Hd.	1
877	393456	Diode and Connector Assy. (Dual Circuit)	1

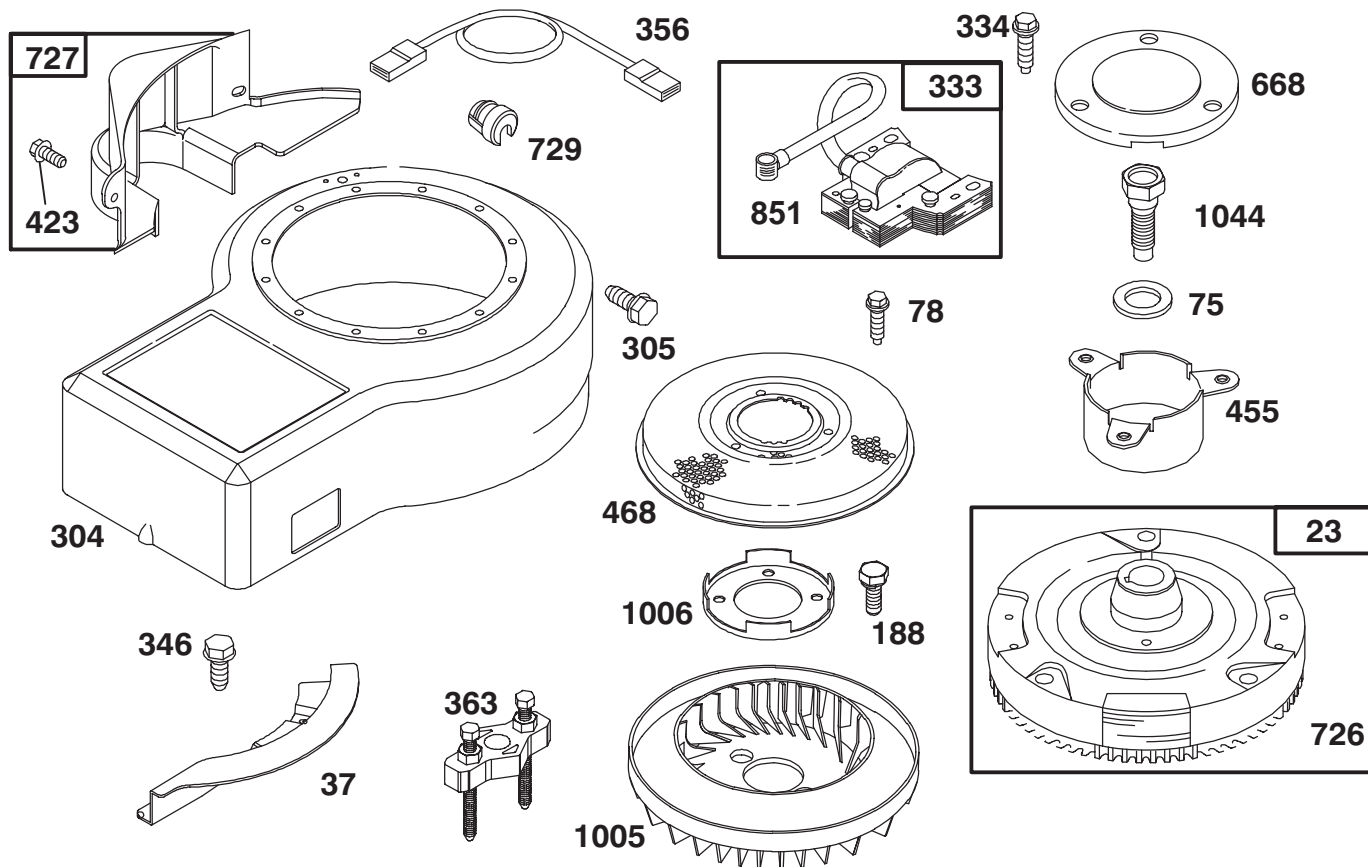 

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 283707-0156-01


Ref. No.	Part No.	Description	No. Used
23	492326	Flywheel and Ring Gear Assy.—Magneto	1
37	224502	Guard—Flywheel	1
75	224061	Washer—Spring	1
78	93805	Screw—Sem	1
188	93535	Screw—Sem (3/4" Long)	1
304	494269	Housing—Blower	1
305	94619	Screw—Blower Housing Mtg.	1
333	492341	Armature—Magneto	1
334	93381	Screw—Armature Mtg.	1
346	93705	Screw—Hex. Head	1
356	494328	Wire Assembly	1
363	19203	Puller—Flywheel	1

Ref. No.	Part No.	Description	No. Used
423	94073	Screw—Sem	1
455	222561	Cup—Screen Mounting	1
468	222562	Screen—Flush Rotating	1
668	280848	Spacer	1
726	392134	Gear—Ring (Includes Mtg Hardware)	1
727	490324	Cover—Starter	1
729	281159	Clip—Lead Wire	1
851	221798	Terminal—Ignition Cable	1
1005	280687	Fan—Flywheel	1
1006	224413	Retainer—Fan	1
1044	94673	Screw—Hex. Head	1

729A



 728

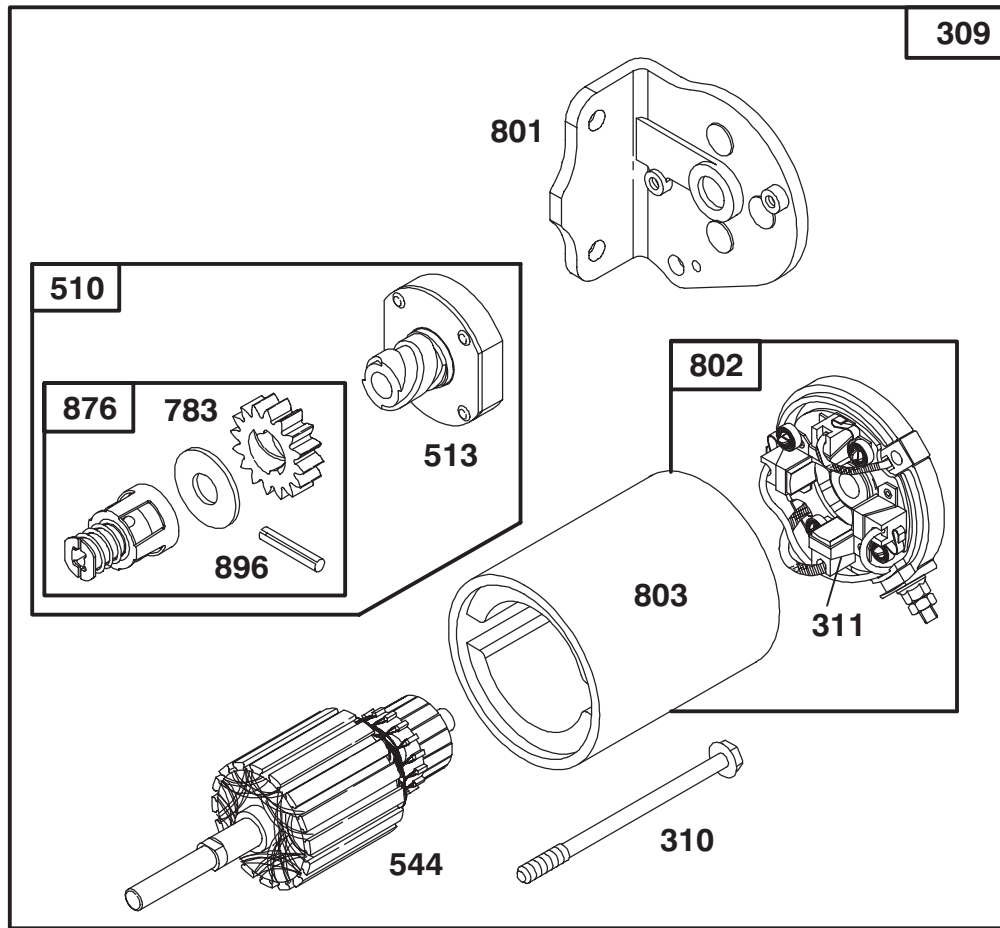


Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 283707-0156-01

Ref. No.	Part No.	Description	No. Used
309	394805	Motor and Drive Assy.	1
310	94003	Bolt Hex. Hd.	1
311	395538	Brush Assy.	1
510	490421	Starter Drive Assy.	1
513	398003	Clutch Assy.	1
544	390837	Armature Assy.	1
728	94627	Screw-Hex. Hd.	1


Ref. No.	Part No.	Description	No. Used
729A	224723	Retainer-Wire	1
783	280104	Gear	1
801	394856	Drive End Cap Assy.	1
802	395537	End Cap Assy. Commutator	1
803	398159	Housing Assy.	1
876	490467	Retainer And Pin	1
896	94288	Pin-Roll	1

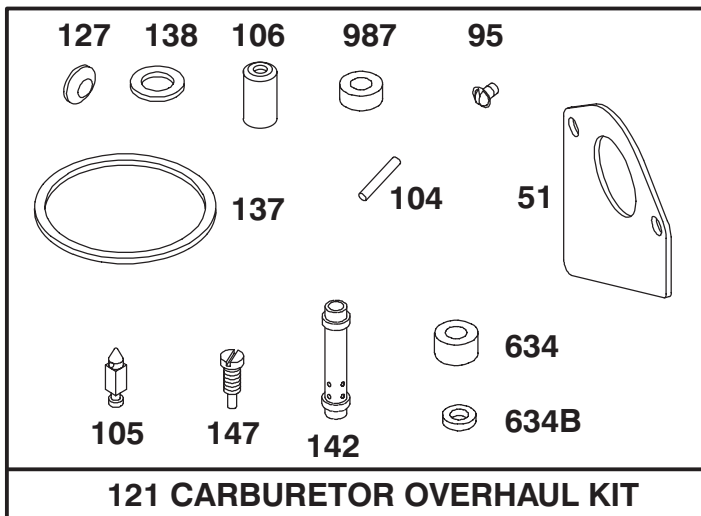 

121 CARBURETOR OVERHAUL KIT

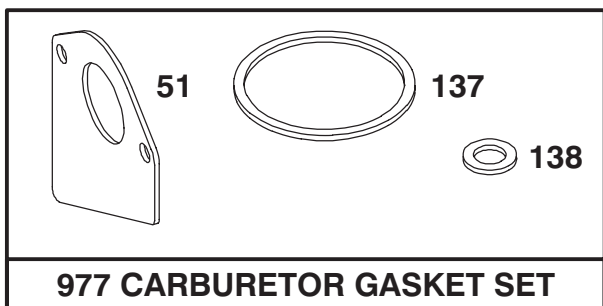 

977 CARBURETOR GASKET SET

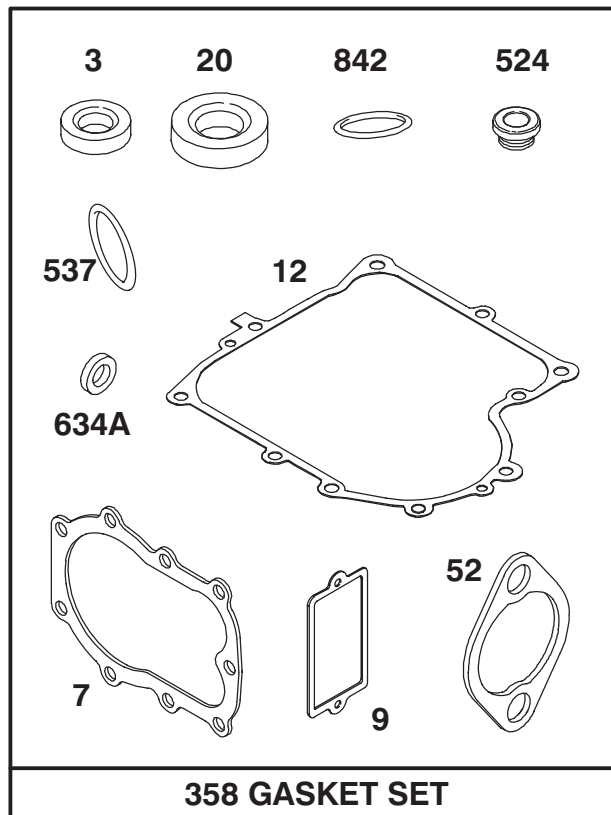 

358 GASKET SET

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 283707-0156-01

Ref. No.	Part No.	Description	No. Used
★3	391086	Seal—Oil	1
★7	271866	Gasket—Cylinder Head	1
★9	27803	Gasket—Valve Cover	1
★12	271916	Gasket—Crankcase Cover (1/64" Thick)	1
★	271997	Gasket—Crankcase Cover (.005" Thick)	1
★	271996	Gasket—Crankcase Cover (.009" Thick)	1
★20	291675	Seal—Oil	1
◆★51	272465	Gasket—Carburetor (Carb. to Elbow)	1
★52	272554	Gasket—Carburetor (Elbow to Cylinder)	1
●95	94098	Screw—Throttle	1
●104	231789	Pin—Float Hinge	1
●105	231855	Valve Assy.—Inlet Needle	1
●106	231854	Inlet Valve Seat	1

Ref. No.	Part No.	Description	No. Used
121	495799	Carburetor Overhaul Kit	1
●127		Plug—Welch (Sold in Kit Only).	1
◆★137	281165	Gasket—Float Bowl	1
◆★138	281164	Washer—Float Bowl Screw	1
●142	494537	Nozzle—Carburetor	1
●147	231794	Pilot—Jet	1
358	494241	Gasket Set	1
★524	68838	Seal—Filler Tube	1
★537	281106	O-Ring—Air Cleaner	1
●634	281168	Seal—Choke Shaft	1
★634A	491323	Seal—Governor	1
★634B	281167	Washer—Throttle Shaft	1
★842	270920	Seal—Oil Filler Cap	1
977	494358	Carburetor Gasket Set	1
●987	281166	Seal—Throttle Shaft	1

★ Included in Gasket Set—Part No. 494241.
 ● Included in Carburetor Overhaul Kit—Part No. 495799.

 ◆ Included in Carburetor Gasket Set—Part No. 494385.

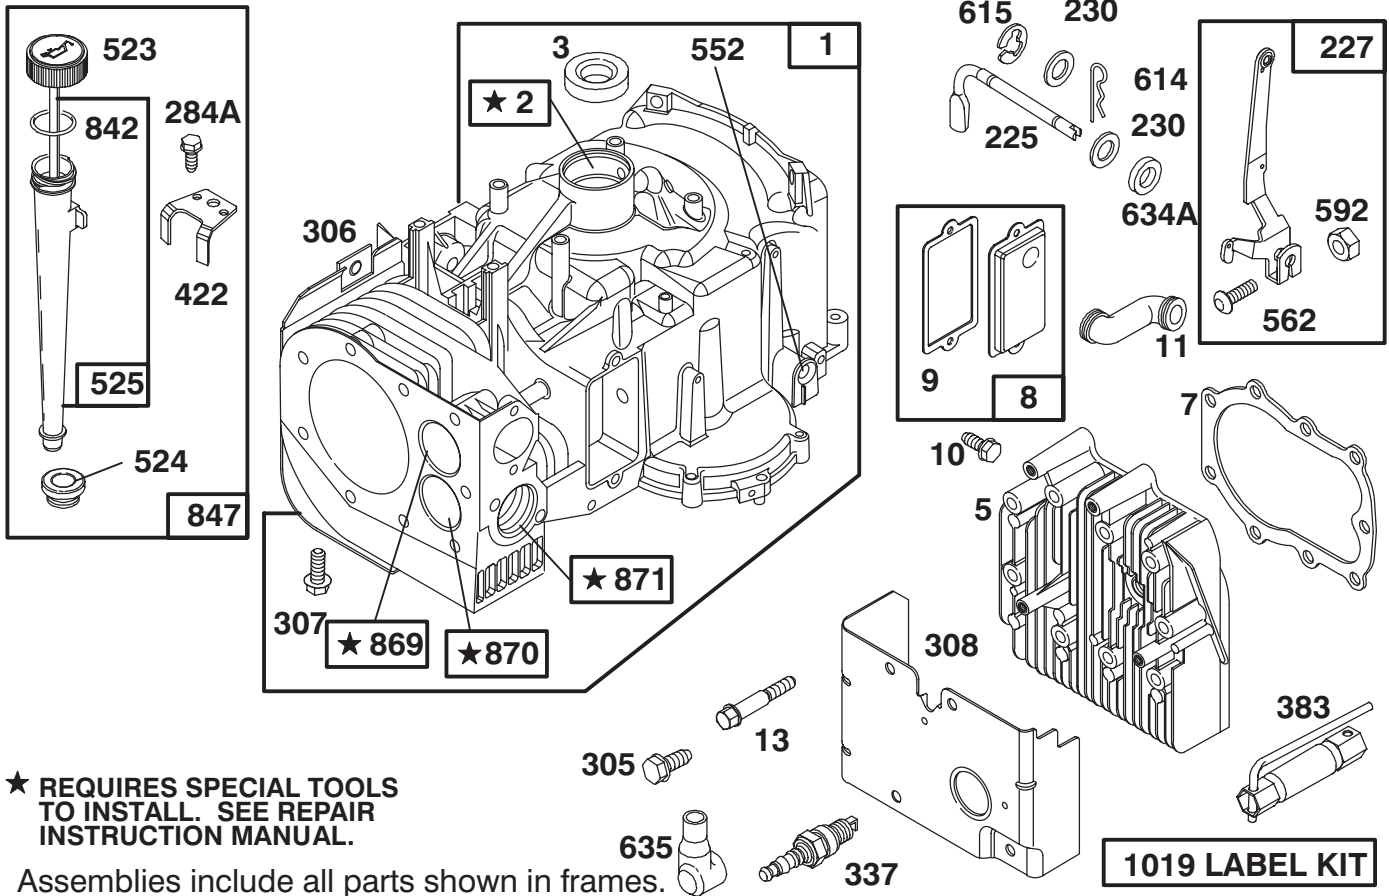


ENGINE BRIGGS & STRATTON MODEL 282707-0119-01

Ref. No.	Part No.	Description	No. Used
1	496414	Cylinder Assembly	1
2	399265	Bearing—Cylinder	1
★3	391086	Seal—Oil	1
5	494240	Head—Cylinder	1
★7	271866	Gasket—Cylinder Head	1
8	495735	Breather Assembly	1
★9	27803	Gasket—Valve Cover	1
10	94621	Screw—Sem	1
11	280100	Tube—Breather	1
13	94622	Screw—Cylinder Head	1
225	231058	Crank—Governor	1
227	493935	Lever Assy.—Governor	1
230	94742	Washer—Gov. Crank	1
284A	94602	Screw—Hex. Head	1
305	94786	Screw—Hex. Washer Hd.	1
306	224545	Shield—Cylinder	1
307	94623	Screw—Cyl. Shield Mtg.	1
308	491490	Cover—Cylinder Head	1
337	802592	Plug—Spark	1
383	89838	Wrench—Spark Plug	1

Ref. No.	Part No.	Description	No. Used
422	224390	Clamp—Oil Fill	1
523	495230	Cap—Oil Filler	1
★524	68838	Seal—Filler Tube	1
525	495768	Tube—Oil Filler	1
552	231597	Bushing—Gov. Crank	1
562	92613	Bolt—Governor Lever	1
592	231082	Nut—Hex.	1
614	93306	Cotter—Hair Pin	1
615	93307	Retainer—E-Rin	1
★634A	491323	Seal—Governor	1
635	66538	Elbow—Spark Plug	1
★842	270920	Seal—Oil Filler Cap	1
847	490474	Fill Group—Oil	1
869	261463	Seat—Intake Valve (Std.)	1
870	213316	Seat—Exhaust Valve (Std.)	1
871	261961	Guide—Exhaust Valve	1
		Note: 231218 Guide — Intake Valve	1
1019	491252	Label Kit	1

 ★ Included in Gasket Set—Part No. 494241.

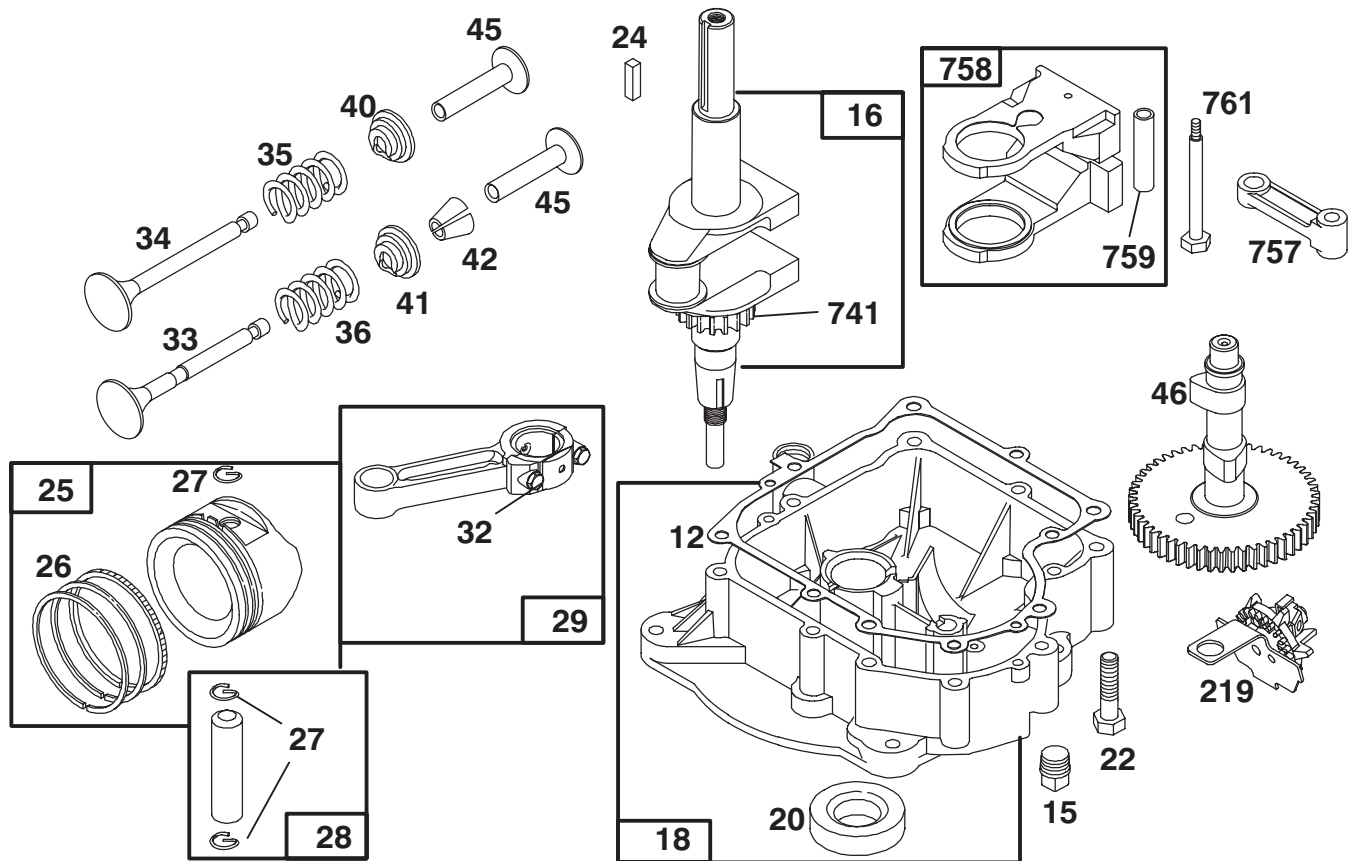


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 282707-0119-01

Ref. No.	Part No.	Description	No. Used
★12	271916	Gasket—Crkcse. (1/64" Thick)	1
★	271997	Gasket—Crkcse. (.005" Thick)	1
★	271996	Gasket—Crkcse. (.009" Thick)	1
15	94239	Plug—Oil Drain	1
16	495162	Crankshaft	1
	94196	Key—Timing Gear	1
18	494238	Base—Engine	1
★20	291675	Seal—Oil	1
22	94624	Screw—Base Mtg. Sem	1
24	222698	Key—Flywheel	1
25	391285	Piston Assy. (Std.)	1
	391287	Piston Assy. (.010" O.S.)	1
	391288	Piston Assy. (.020" O.S.)	1
	391289	Piston Assy. (.030" O.S.)	1
26	391780	Ring Set—Piston (Std.)	1
	391781	Ring Set—Piston (.010" O.S.)	1
	391782	Ring Set—Piston (.020" O.S.)	1
	391783	Ring Set—Piston (.030" O.S.)	1

Ref. No.	Part No.	Description	No. Used
27	260924	Lock—Piston Pin	1
28	299691	Pin Assy.—Piston (Std.)	1
	391286	Pin—Piston (.005" O.S.)	1
29	490348	Rod—Connecting	1
	490469	Rod—Connecting (020" U.S. Crankpin Bore)	1
32	94671	Screw—Connecting Rod	1
33	262246	Valve—Exhaust	1
34	262247	Valve—Intake	1
35	65906	Spring—Intake Valve	1
36	26828	Spring—Exhaust Valve	1
40	221596	Retainer—Intake Valve	1
41	292260	Rotocoil—Exhaust Valve	1
42	494553	Retainer—Ex. Valve Rotocoil	1
45	262248	Tappet—Valve	1
46	212897	Gear—Cam	1
219	490815	Slinger—Oil	1
741	262932	Gear—Timing	1
757	212359	Link—Counterweight	1
758	399891	Counterweight Assy.	1
759	298909	Pin—Counterweight	1
761	93875	Screw—Counterweight	1

 ★ Included in Gasket Set—Part No. 494241.

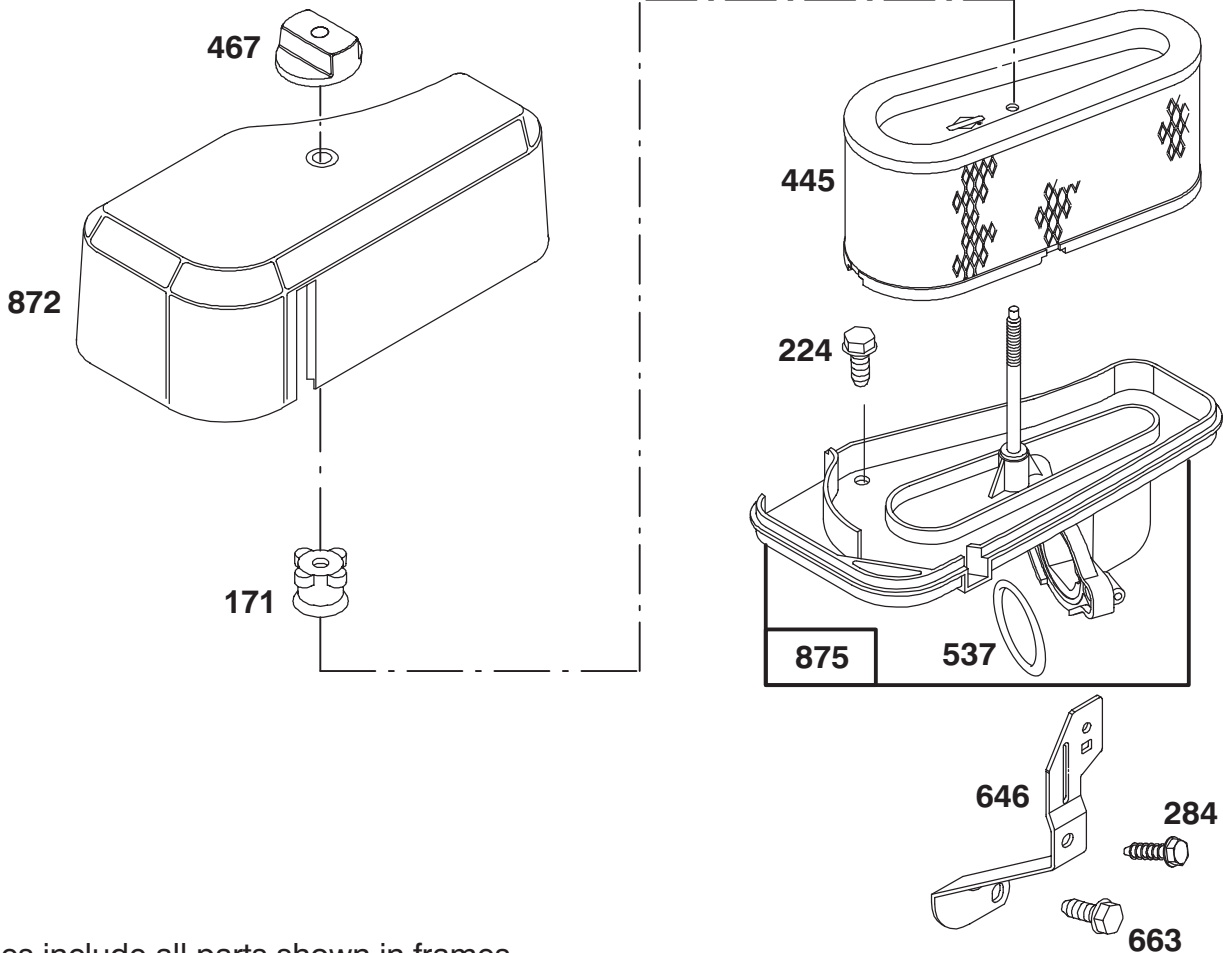


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 282707-0119-01

Ref. No.	Part No.	Description	No. Used
171	281051	Nut—Air Cleaner Mtg.	1
224	94729	Screw—Air Cleaner Sem	1
284	94704	Screw Hex. Head	1
445	493909	Cartridge—Air Cleaner	1
467	493903	Knob—Air Cleaner	1

Ref. No.	Part No.	Description	No. Used
★537	281106	O-Ring—Air Cleaner	1
646	224546	Brace—Air Cleaner	1
663	94620	Screw—Hex. Hd.	1
872	281104	Cover—Air Cleaner	1
875	494237	Body—Air Cleaner	1

 ★ Included in Gasket Set—Part No. 494241.

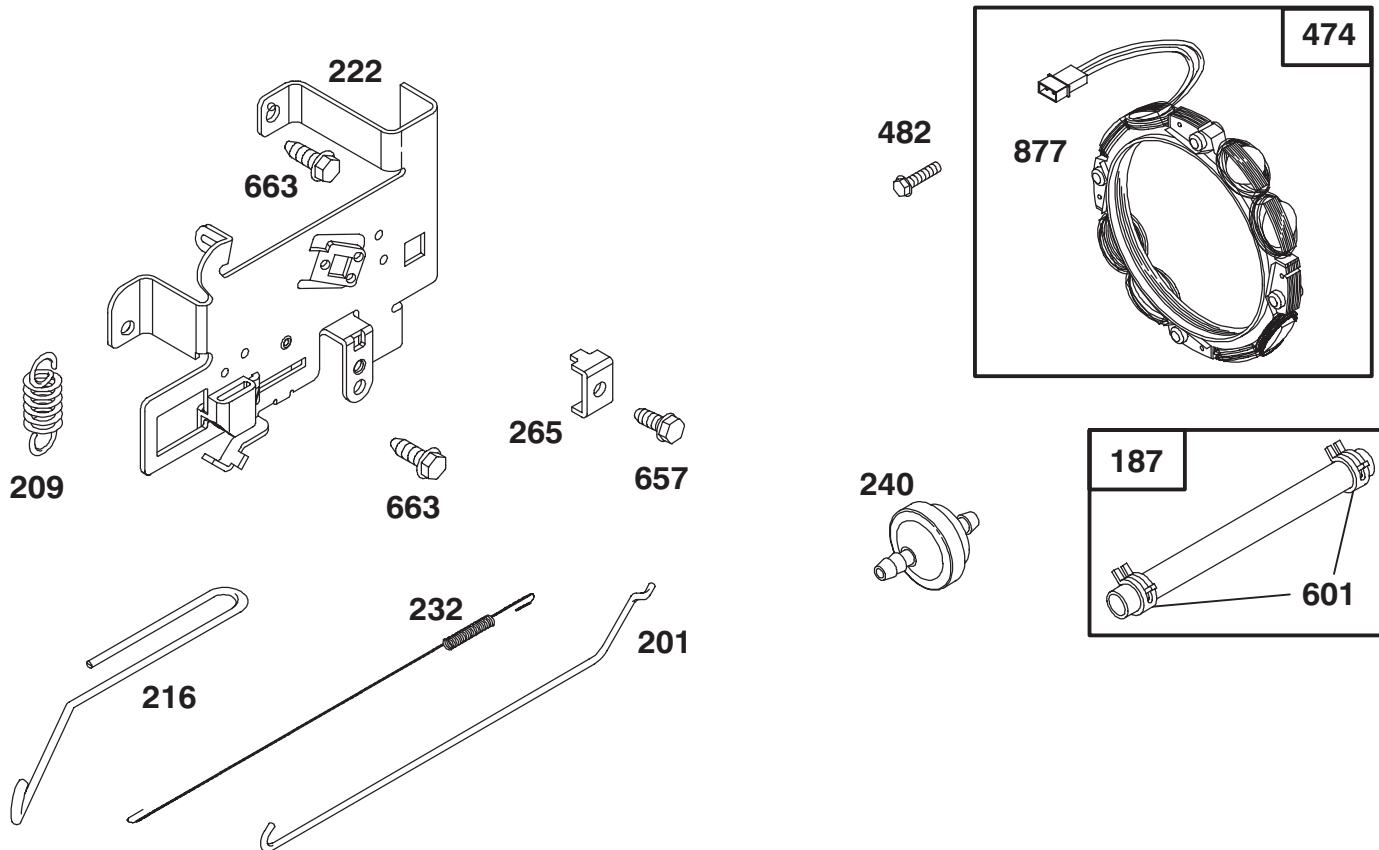

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 282707-0119-01


Ref. No.	Part No.	Description	No. Used
187	393815	Line—Fuel (11" Long, Cut to Suit)	1
201	262767	Link—Governor	1
209	260871	Spring—Governor	1
216	262766	Link—Choke	1
222	495611	Plate—Governor Control	1
232	262785	Spring—Governor Link	1
240	394358	Filter—Fuel	1
265	221535	Clamp—Casing	1

Ref. No.	Part No.	Description	No. Used
474	393474	Stator—Alternator (Dual Circuit)	1
482	93621	Screw—Sem	1
601	93053	Clamp—Fuel Pipe	1
657	93496	Screw—Sem	1
663	94620	Screw—Hex. Hd.	1
877	393456	Diode and Connector Assy. (Dual Circuit)	1

729A



 728

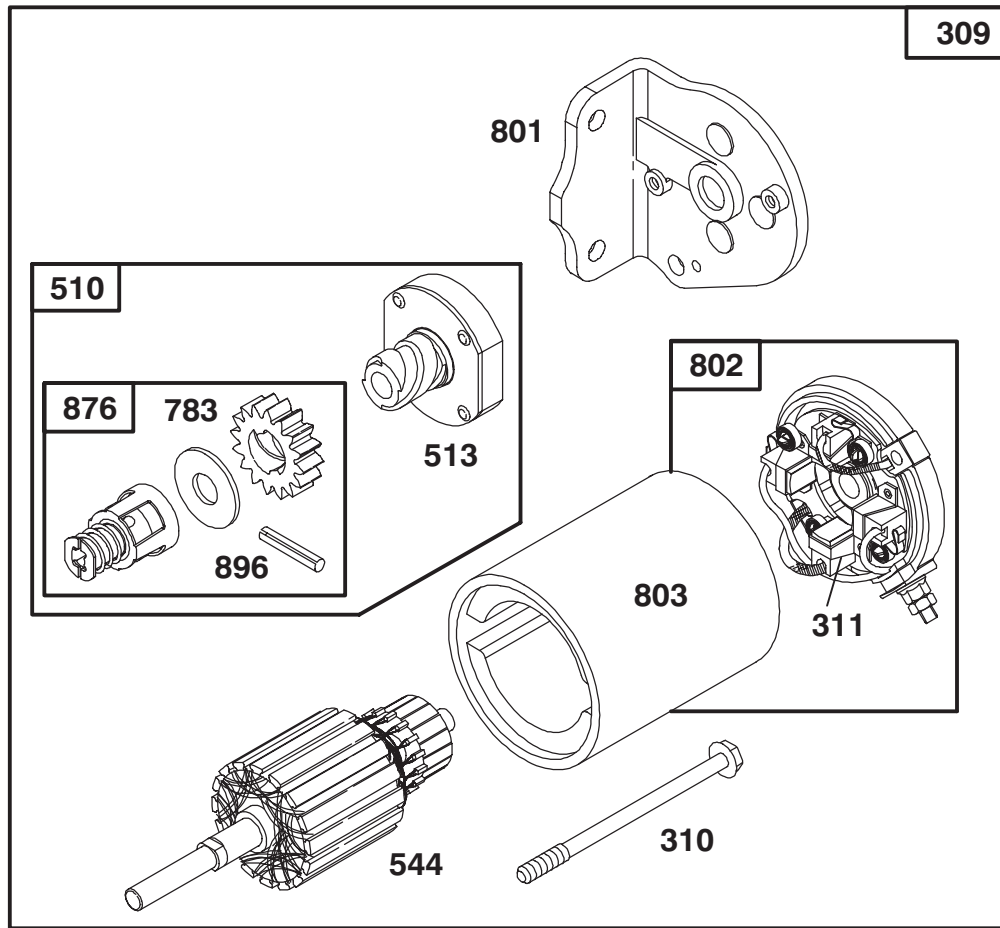


Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 282707-0119-01

Ref. No.	Part No.	Description	No. Used
309	394805	Motor and Drive Assy.	1
310	94003	Bolt Hex. Hd.	1
311	395538	Brush Assy.	1
510	495878	Starter Drive Assy.	1
513	398003	Clutch Assy.	1
544	390837	Armature Assy.	1
728	94627	Screw-Hex. Hd.	1
729A	224723	Retainer-Wire	1


Ref. No.	Part No.	Description	No. Used
783	280104	Gear	1
801	394856	Drive End Cap Assy.	1
802	395537	End Cap Assy Commutator	1
803	398159	Housing Assy.	1
876	495877	Retainer And Pin	1
896	94288	Pin-Roll	1

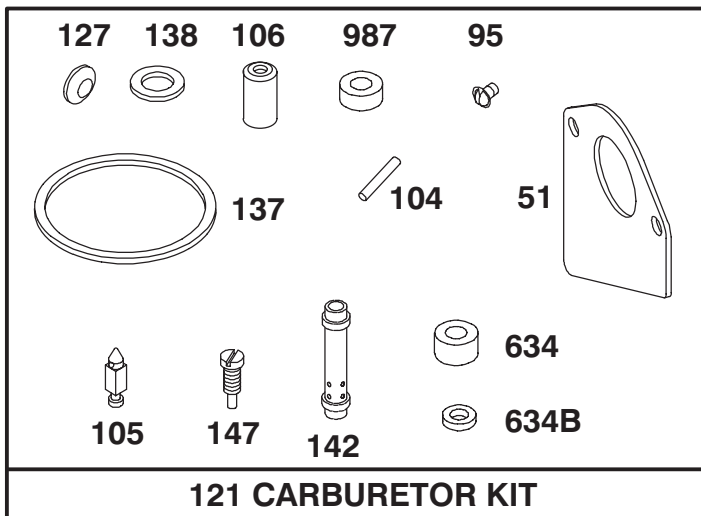 

121 CARBURETOR KIT

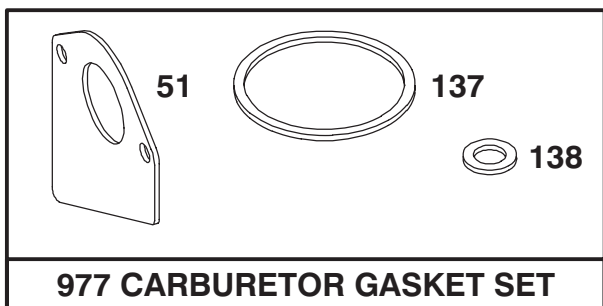 

977 CARBURETOR GASKET SET

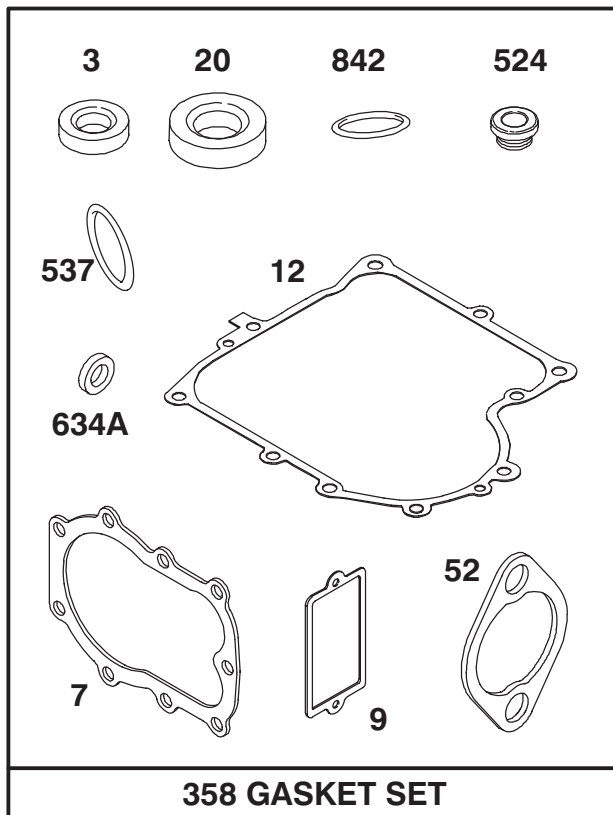 

358 GASKET SET

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 282707-0119-01

Ref. No.	Part No.	Description	No. Used
★3	391086	Seal—Oil	1
★7	271866	Gasket—Cylinder Head	1
★9	27803	Gasket—Valve Cover	1
★12	271916	Gasket—Crankcase Cover (1/64" Thick)	1
★	271997	Gasket—Crankcase Cover (.005" Thick)	1
★	271996	Gasket—Crankcase Cover (.009" Thick)	1
★20	291675	Seal—Oil	1
◆★51	272465	Gasket—Carburetor (Carb. to Elbow)	1
★52	272554	Gasket—Carburetor (Elbow to Cylinder)	1
●95	94098	Screw—Throttle	1
●104	231789	Pin—Float Hinge	1
●105	231855	Valve Assy.—Inlet Needle	1
●106	231854	Inlet Valve Seat	1

Ref. No.	Part No.	Description	No. Used
121	495799	Carburetor Kit	1
●127		Plug—Welch (Sold in Kit Only)	1
◆●137	281165	Gasket—Float Bowl	1
◆●138	281164	Washer—Float Bowl Screw	1
●142	494537	Nozzle—Carburetor	1
●147	231794	Pilot—Jet	1
358	494241	Gasket Set	1
★524	68838	Seal—Filler Tube	1
★537	281106	O-Ring—Air Cleaner	1
●634	281168	Seal—Choke Shaft	1
★634A	491323	Seal—Governor	1
●634B	394970	Washer—Throttle Shaft	1
★842	270920	Seal—Oil Filler Cap	1
977	494358	Carburetor Gasket Set	1
●987	281166	Seal—Throttle Shaft	1

★ Included in Gasket Set—Part No. 494241.
 ● Included in Carburetor Kit—Part No. 495799.

◆ Included in Carburetor Gasket Set—Part No. 494385.

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
106661	Cam	14	40	2	80-4570	Stiffener - Blade	13	19	1
111419	Washer - Fender	4	19	1	80-6990	Washer - Hardened	12	16	4
116397	Relay	9	16	1	83-7020	Spacer - Bearing	13	15	1
117242	Decal - Made in USA	1	20	1	84-5610	Guide - Cable	7	12	1
701178	Cap - Protector	1	6	2	84-5610	Guide - Cable	8	16	1
702366	Clip - Wire Retainer	9	9	1	88-0890	Grip - Brake Rod	4	11	1
3-6498	Washer - Thrust	5	11	1	88-3840-01	Body - Rear	1	5	1
3-6498	Washer - Thrust	4	32	2	88-3850	Wheel - Steering	5	5	1
5-4015	Bolt - Shoulder	8	2	1	88-3870	Cover - Steering Wheel	5	6	1
5-4460	Washer - Fender	3	3	1	88-3880	Tank - Gas	6	6	1
5-4460	Washer - Fender	15	7	2	88-3930	Shield - Heat	2	14	1
5-4460	Washer - Fender	4	24	1	88-3940	Panel - Rear Hitch	1	10	1
5-4460	Washer - Flat	7	9	4	88-3950	Seat	3	*	1
7-0030	Bolt - Shoulder	12	15	3	88-3960	Lens - Headlights	9	23	1
7-0030	Bolt - Shoulder	15	26	1	88-3980	Cap - Gas	6	3	1
7-0036	Key - Square	11	10	2	88-4040	Box - Battery	9	11	1
7-5461	Washer - Hardened	8	10	1	88-4050	Duct - Hood Air	2	17	1
26-0671	Bolt - Blade	6	17	1	88-4060	Tire - 13	4	4	2
26-0671	Bolt - Blade	13	21	1	88-4080	Tire	11	8	2
26-6700	Spring - Brake Return	11	17	1	88-4140	Nut - Wedge	2	23	2
26-6700	Spring - Extension	15	27	1	88-4150	Plug	5	8	1
27-0220	Screw - Plastite	6	5	4	88-4160	Clamp - Pivot Rod	2	22	2
27-8890	Spring - Pedal Return	7	6	1	88-4170	Rod - Tower Pivot	2	24	1
28-0540	Bolt - Shoulder	2	11	2	88-4190	Bushing - Sliding	5	3	1
28-0540	Bolt - Shoulder	13	26	2	88-4220	Latch - Hood	2	16	1
28-2480	Washer	4	3	2	88-4230	Trunnion - H.O.C. Rear	12	12	2
28-2480	Washer	11	11	2	88-4270	Wheel & Tire Assembly	4	*	2
28-7350	Post - Rear Pivot	13	4	1	88-4290	Wheel & Tire Assembly	11	*	2
28-8080	Boot - Battery Terminal	9	5	1	88-4330	Seat	3	1	1
33-4750	Blade - 32	13	20	1	88-4340	Control - Throttle	6	4	1
37-8770	Bolt - Shoulder	7	2	1	88-4350	Cable - Throttle	6	2	1
37-8770	Bolt - Shoulder	3	12	4	88-4360	Rim - Front Wheel	4	5	2
38-1420	Switch - Seat	9	8	1	88-4380	Rim	11	9	2
44-5720	Baffle - Deck	13	23	1	88-4400	Bearing - Wheel	4	35	4
44-8110	Cable - Battery Negative	9	7	1	88-4410	Gasket - Muffler	6	22	1
46-5590	Spacer - Tube	7	27	2	88-4460	Axle - Front	4	7	1
46-8090	Screw - Plastite	2	15	8	88-4540	Hinge - Deflector Danger	13	34	1
46-8091	Screw - Plastite	2	8	2	88-4590	Bolt - Shoulder	15	16	1
47-2963	Line - Fuel	6	10	1	88-4620	Bracket - Idler Pivot	1	12	1
47-4990	Post	15	15	2	88-4630	Plate - Engine Mount	1	3	1
52-2891	Bushing - Steering Link	4	20	2	88-4650	Rail - R.H. Frame	1	4	1
55-4300	Decal - Caution	13	8	2	88-4660	Rail - L.H. Frame	1	13	1
55-9321	Cable - Shotgun	8	5	1	88-4670	Bushing - Eccentric	4	17	1
56-2540	Vent - Tube	9	2	1	88-4730	Clamp - H.O.C. Pivot	12	13	2
56-7030	Housing - Spindle	13	14	1	88-4800	Bellcrank	7	19	1
56-9830	Pad - Brake	15	11	1	88-4810	Clamp - Shift Pivot	8	4	2
56-9870	Pulley - Idler	15	22	1	88-4810	Clamp - Shift Pivot	7	22	1
61-9780	Cap - Hub	4	1	2	88-4820	Bracket - Seat Hinge	3	13	2
61-9780	Cap - Hub	11	13	2	88-4830	Link - Drag	4	29	1
62-1292	Knob - Engage Lever	2	3	1	88-4840	Pulley - Transmission	11	3	1
62-1292	Knob - Shift	12	6	1	88-4880	Spacer - Microswitch	9	21	1
62-1292	Knob - Shift	8	15	1	88-4910	Support - Seat	3	2	1
63-8360	Key - Ignition	9	12	1	88-4940	Pan - Front Suspension	13	27	1
65-2920	Pad - Pedal	7	25	1	88-4960	Shield - Exhaust Pipe	1	14	1
65-7210	Spacer	12	17	1	88-5000	Pedal - Clutch/Brake	7	24	1
66-1340	Decal - Danger	13	11	1	88-5010	Spacer - Steering Rack	4	26	1
67-0710	Ball - Swivel	15	30	1	88-5020	Gate - Shift	3	15	1
68-3650	Decal - Deflector Danger	13	5	1	88-5030	Gate - H.O.C.	3	8	1
76-3820	Anchor - Belt Guide	6	13	2	88-5050	Pulley - Engine	6	14	1
80-2240	Plate - Grille Panel	9	26	1	88-5060	Pulley - Deck	15	2	1
80-2600	Battery - 7 Plate	9	6	1	88-5110	Pivot - H.O.C.	12	14	1
80-4350	Shaft - Spindle	13	18	1	88-5120	Support - Front Axle	1	17	1
80-4370	Shield - Bearing	13	17	1	88-5130	Bracket - Steering Rack	4	14	1
80-4390	Spacer - Hardened	13	16	1	88-5150	Bushing - Flange	5	10	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3317-378

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
88-5160	Cover - Shift Gate	3	14	1	92-2489	Decal - Rear Body	1	18	1
88-5170	Cover - H.O.C.	3	6	1	92-2493	Spring - Torsion	13	3	1
88-5190	Lever - Deck Engage	2	1	1	92-2494	Ramp - Deflector	14	38	1
88-5200	Rack - Steering	4	18	1	92-5730	Decal - Throttle	2	*	1
88-5220	Mat - R.H. Foot	3	16	1	92-5732	Decal - Ignition	2	*	1
88-5240	Mat - L.H. Foot	3	9	1	92-5748	Decal - Air Duct	2	27	1
88-5260	Bracket - Transaxle Mtg.	1	11	2	92-5782	Patch - Heat Tape	2	26	1
88-5270	Rod - Clutch/Brake	7	1	1	92-5794	Lever - Shift Pivot	8	21	1
88-5300	Lever - Shift	8	1	1	92-5796	Pivot - Shift	8	6	1
88-5340	Lever - Trans. Shift	8	9	1	92-7889	Spindle - R.H.	4	6	1
88-5350	Strap - Torque	11	16	2	92-7890	Spindle - L.H.	4	31	1
88-5370	Plate - Idler Mount	15	28	1	92-8650	Hood	2	18	1
88-5380	Rod - Steering Tie	4	8	1	92-8916	Bolt - Shoulder	13	30	1
88-5450	Rod - Hanger Rear	12	11	2	92-9664	Ring - Wet Grass	13	12	4
88-5460	Guide - Trans. Belt	7	10	2	92-9674	Knob - Studded	3	4	1
88-5470	Spacer - Front Axle	4	34	2	92-9845	Solenoid	9	17	1
88-5490	Guide - Belt R.H.	6	21	1	93-0303	Tower - Steering	2	2	1
88-5500	Rod - Pedal Pivot	7	18	1	93-0318	Deflector Assembly	13	31	1
88-5510	Rod - Parking Brake	4	9	1	93-0539	Screw - Phillips Hd.	9	19	4
88-5520	Bracket - Parking Brake	4	10	1	93-1122	Decal - Danger	13	7	2
88-5530	Rod - Shift Tie	8	7	1	93-3240	Seal - Plunger	9	25	2
88-5560	Guide - Idler Belt	7	3	1	93-3810	Harness - Wire	9	1	1
88-5570	Link - Adjusting H.O.C.	12	1	2	93-3822	Lever - H.O.C.	12	7	1
88-5640	Bracket - R.H.	13	28	1	93-6673	Decal - Deck Engage	2	*	1
88-5650	Bracket - L.H.	13	25	1	93-6674	Decal - Warning	13	*	2
88-5680	Pulley - Flat Idler	7	4	1	93-6675	Decal - Instruction	1	*	1
88-5690	Rod - Deck Brake	15	19	1	93-7009	Decal - Deflector Danger	13	*	1
88-5760	Guide - Belt	15	3	2	93-7010	Decal - Danger	13	*	1
88-5790-01	Cutter Deck - 32	13	9	1	93-7010	Decal - Danger	13	*	2
88-5800	Bushing - Steering	4	33	4	93-7656	Cover - Shift Gate	3	*	1
88-5850	Arm - Idler	15	23	1	93-7657	Cover - H.O.C.	3	*	1
88-5900	Link - H.O.C.	12	8	1	93-7694	Deflector Ass'y	13	*	1
88-5920	Rod - Gas Tank	6	7	1	93-7696	Kicker - C.E.	14	42	2
88-5930	Keeper - Cable	8	17	1	218-461	Nut - Hex	9	13	1
88-5980	Rod - Deck Engage	15	24	1	231-91	Tube - Inner (Optional)	11	*	2
88-6040	Bracket - Hood Pivot R.H.	2	19	1	232-27	Valve Stem w/Cap	11	18	2
88-6050	Bracket - Hood Pivot L.H.	2	12	1	232-27	Valve Stem w/Cap	4	36	2
88-6060	Guide - Belt L.H.	6	12	1	232-40	Tube - Inner (Optional)	4	*	2
88-6070	Arm - Idler	7	16	1	2412-98	Clamp - Hose	6	11	2
88-6110	Deck Brake Assembly	15	17	1	251-297	Bearing - Spindle	14	36	2
88-6140	Spring - Brake	7	7	1	302-5	Fitting - Grease	4	37	2
88-6150	Rod - Deflector Hinge	13	33	1	302-11	Fitting - Grease	11	7	2
88-6160	Spring - Torsion	13	32	1	302-26	Fitting - Grease	4	16	1
88-6220	Spring - Compression	1	8	2	321-2	Screw - Hex Hd. Cap	2	10	4
88-6260	V-Belt	15	13	1	321-4	Screw - Hex Hd. Cap	9	3	2
88-6270	V-Belt - Traction	11	5	1	321-4	Screw - Hex Hd. Cap	5	4	2
88-6290	Shield - Muffler	1	15	1	321-4	Screw - Hex Hd. Cap	6	26	1
88-6330	Spring - Extension	15	5	1	322-3	Screw - Hex Hd. Cap	1	2	22
88-6330	Spring - Extension	7	14	1	322-3	Screw - Hex Hd. Cap	12	4	4
88-6380	Shaft - Steering	5	9	1	322-3	Screw - Hex Hd. Cap	2	4	2
88-6420	Spring/Cable Assembly	15	12	1	322-3	Screw - Hex Hd. Cap	13	6	10
88-6450	Transaxle	11	6	1	322-3	Screw - Hex Hd. Cap	3	11	4
88-6460	Spring - Extension	12	2	1	322-3	Screw - Hex Hd. Cap	8	13	3
88-6480	Muffler	6	25	1	322-3	Screw - Hex Hd. Cap	7	17	1
88-9830	Switch - Ignition	9	15	1	322-3	Screw - Hex Hd. Cap	15	29	2
88-9932	Switch - Micro	9	20	2	322-5	Screw - Hex Hd. Cap	15	6	2
92-2461	Decal - Throttle	2	29	1	322-5	Screw - Hex Hd. Cap	1	7	2
92-2462	Decal - Deck Engage	2	30	1	322-5	Screw - Hex Hd. Cap	7	8	1
92-2467	Decal - Hood R.H.	2	*	1	322-6	Screw - Hex Hd. Cap	14	39	2
92-2468	Decal - Hood L.H.	2	25	1	322-7	Screw - Hex Hd. Cap	7	11	1
92-2478	Decal - Ignition	2	28	1	322-9	Bolt - Shoulder	12	3	1
92-2480	Decal - Tower 1232XL	2	31	2	322-9	Screw - Hex Hd. Cap	6	18	4
92-2482	Decal - Engine 12 H.P.	6	9	1	322-12	Screw - Hex Hd. Cap	11	14	4
92-2484	Decal - Instruction	1	19	1	322-12	Screw - Hex Hd. Cap	13	29	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
322-12	Screw - Hex Head Cap	7	28	2	3290-479	Fastener - Panel	3	5	20
323-11	Screw - Hex Hd. Cap	7	5	1	3290-496	Nut - Retained	15	8	2
323-13	Screw - Hex Hd. Cap	4	27	2	3290-496	Nut - Retained	2	13	2
329-23	Screw - Hex Hd. Cap	8	12	1	3296-3	Nut - Lock	8	8	2
3219-7	Nut - Lock	15	1	1	3296-29	Nut - Lock	11	1	8
3230-1	Bolt - Carriage	4	15	4	3296-29	Nut - Lock	8	3	4
3230-3	Bolt - Carriage	8	18	1	3296-29	Nut - Lock	12	5	8
3230-3	Bolt - Carriage	7	21	1	3296-29	Nut - Lock	2	6	2
3230-3	Screw - Carriage	4	28	1	3296-29	Nut - Lock	6	8	3
3231-4	Screw - Carriage	4	13	1	3296-29	Nut - Lock	1	9	24
3234-13	Screw - Hex Flange Hd.	15	25	2	3296-29	Nut - Lock	15	9	4
3253-3	Washer - Lock	8	11	1	3296-29	Nut - Lock	13	10	16
3253-3	Washer - Lock	6	27	1	3296-29	Nut - Lock	3	10	6
3253-4	Washer - Lock	6	23	2	3296-29	Nut - Lock	4	12	5
3253-22	Washer - Lock	6	16	1	3296-29	Nut - Lock	7	13	7
3254-5	Washer - Lock	9	14	1	3296-39	Nut - Lock	8	19	1
3255-7	Washer - Ext. Tooth Lock	9	24	1	3296-39	Nut - Lock	15	21	1
3255-8	Washer - Ext. Tooth Lock	6	19	1	3296-39	Nut - Lock	4	21	3
3256-22	Washer - Flat	5	2	2	3296-42	Nut - Lock	13	1	1
3256-23	Washer - Flat	1	1	4	3296-42	Nut - Lock	5	1	2
3256-23	Washer - Flat	2	5	2	3296-42	Nut - Lock	15	4	1
3256-23	Washer - Flat	8	14	2	3296-42	Nut - Lock	2	9	4
3256-23	Washer - Flat	11	15	8	3296-59	Nut - Lock	7	15	2
3256-23	Washer - Flat	15	18	1	3296-59	Nut - Lock	13	24	1
3256-23	Washer - Flat	7	26	2	32103-22	Nut - Wing	9	4	2
3256-23	Washer - Flat	14	37	4	32104-76	Screw - Thread Tapping	1	16	1
3256-24	Washer - Flat	12	10	4	32120-64	Ring - Snap	11	2	1
3256-24	Washer - Flat	15	14	3	32121-78	Pin - Roll	5	7	1
3256-24	Washer - Flat	2	20	2	32122-14	Screw - Truss Hd.	13	13	8
3256-24	Washer - Flat	4	25	4	32128-43	Nut - Flange	2	21	2
3256-25	Washer - Flat	6	15	1	32144-4	Screw - Hex Hd. Thr'd	9	10	3
3256-25	Washer - Flat	8	20	1	32144-111	Screw - Pan Hd.	14	41	4
3256-25	Washer - Flat	4	22	2	32149-1	Nut - Keps	6	20	2
3256-26	Washer - Flat	7	20	2	32149-2	Nut - Keps	9	18	2
3256-58	Washer - Fender	13	2	1	32151-48	E-Ring	11	12	2
3257-23	Key - Woodruff	11	4	1	32151-48	E-Ring	5	12	1
3269-26	Washer - Backup	3	17	4	32151-48	E-Ring	4	30	2
3272-10	Pin - Cotter	4	23	4					
3272-10	Pin - Cotter	7	23	1					
3272-12	Pin - Cotter	4	2	2					
3274-12	Screw - Hex Soc. Hd.	6	24	2					
3290-282	Rivet - Pop	3	7	4					
3290-282	Rivet - Pop	15	10	2					
3290-299	Nut - Tinnerman	9	27	1					
3290-307	Pin - Cotter	2	7	2					
3290-307	Pin - Hair Cotter	12	9	7					
3290-307	Pin - Hair Cotter	15	20	1					
3290-354	Speednut	9	22	2					
3290-465	Washer - Belleville	13	22	1					

OPTIONAL EQUIPMENT

Easy Empty Bagger Kit	Model No. 79095
Twin Bagger	Model No. 79085
Recycler Kit	Model No. 59167
Wheel Weight Kit	Model No. 59159
42" Snowblade Kit	Model No. 79150
Tire Chains	Part No. 47-7220
Wet Grass Bagging Kit	
(Standard for Model 71200)	Part No. 38-5730
Headlight Kit	Model No. 79180

